


 [Previous]  [Next]

Component Parts Location

Cardiagn.Com

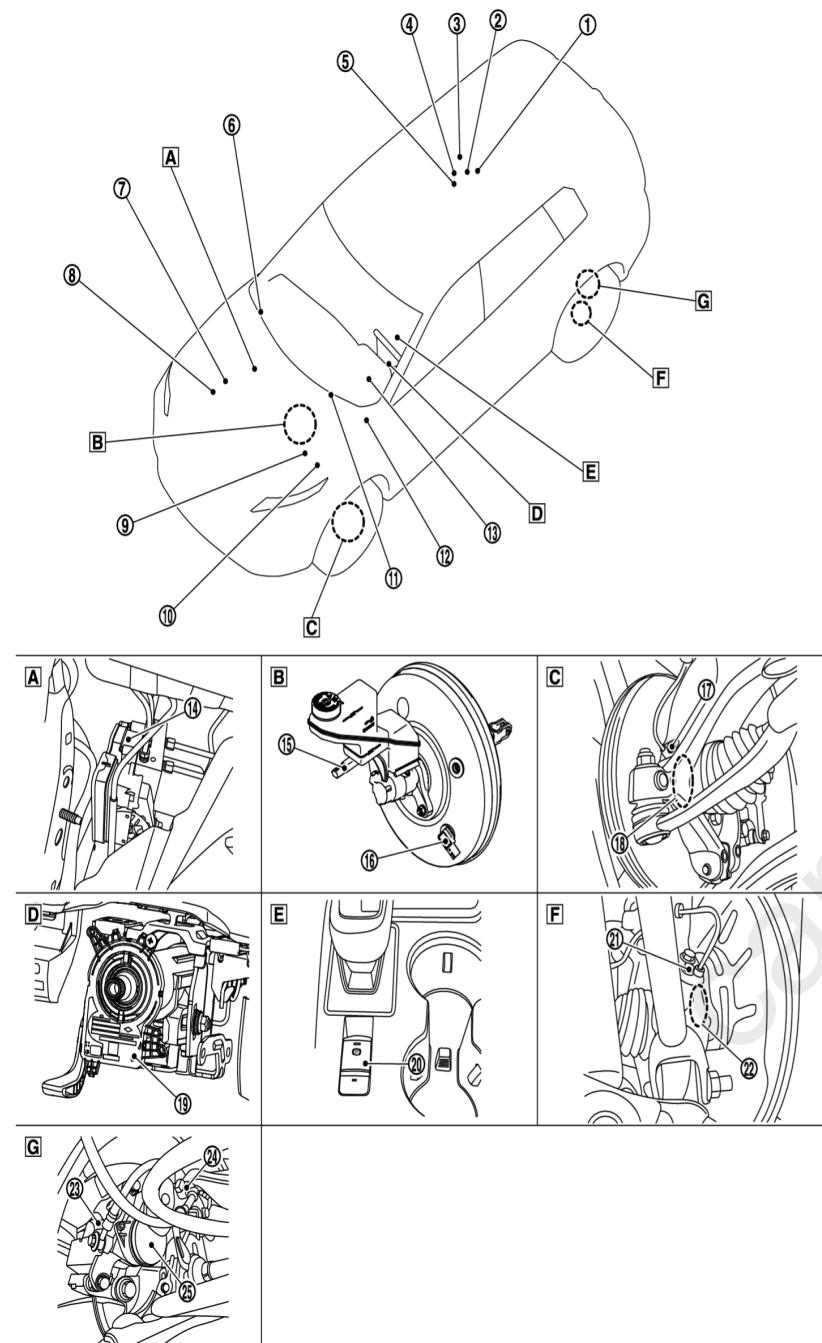

A	Engine room (RH side)	B	Engine room (LH side)	C	Steering knuckle
D	Back of spiral cable assembly	E	Center console	F	Rear axle housing
G	Rear axle housing				

① Parking brake actuator harness (RH) ② Parking brake actuator (RH) ③ Rear brake caliper assembly (RH)
 Chassis control module
 Refer to [Component](#)

④ Rear RH sensor rotor ⑤ Rear RH wheel sensor ⑥ [Parts Location](#) for detailed installation location.
 ECM
 Refer to [Component](#)

⑦ Front RH wheel sensor ⑧ Front RH sensor rotor ⑨ [Parts Location](#) for detailed installation location.
 BCM
 Refer to [Component](#)

⑩ [Parts Location](#) for detailed installation location.
 IPDM E/R
 Refer to [Component](#)

⑪ [Parts Location](#) for detailed installation location.
 TCM
 Refer to [Component](#)

⑫ [Parts Location](#) for detailed installation location.
 Combination meter
 Refer to [Component](#)

⑬ [Parts Location](#) (full TFT meter), [Component](#)
 ABS actuator and electric unit (control unit)

⑭ [Parts Location](#) (7 inch information display) for detailed installation location.

⑮ Brake fluid level switch

⑯ Brake vacuum sensor ⑰ Front LH wheel sensor ⑱ Front LH sensor rotor

⑲ Steering angle sensor ⑳ Parking brake switch ㉑ Rear LH wheel sensor

²² Rear LH sensor rotor	²³ Rear brake caliper assembly (LH)	²⁴ Parking brake actuator harness (LH)
²⁵ Parking brake actuator (LH)		