

[\[Previous\]](#) [\[Next\]](#)

DTC Index

Self Diagnostic Result

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
C1040-63	Emergency brake					DTC Description ➡
C1040-64	Emergency brake					DTC Description ➡
C1040-92	Emergency brake					DTC Description ➡
C1041-55	Configuration		○			DTC Description ➡
C1042-04	Cut valve 1	○	○	○		DTC Description ➡
C1043-04	Cut valve 2	○	○	○		DTC Description ➡
C1046-04	Suction valve 1	○	○	○		DTC Description ➡

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
C1047-04	Suction valve 2	○	○	○		DTC Description 
C1048-04	Valve relay	○	○	○		DTC Description 
C1048-11	Valve relay	○	○	○		DTC Description 
C1048-92	Valve relay	○	○	○		DTC Description 
C1049-04	FR LH ABS IN valve	○	○	○		DTC Description 
C104A-04	FR LH ABS OUT valve	○	○	○		DTC Description 
C104B-04	FR RH ABS IN valve	○	○	○		DTC Description 
C104C-04	FR RH ABS OUT valve	○	○	○		DTC Description 
C104D-04	RR LH ABS IN valve	○	○	○		DTC Description 
C104E-04	RR LH ABS OUT valve	○	○	○		DTC Description 
C104F-04	RR RH ABS IN valve	○	○	○		DTC Description 
C1050-04	RR RH ABS OUT valve	○	○	○		DTC Description

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
						
C1051-04	Pump motor	○	○	○		DTC Description 
C1051-13	Pump motor	○	○	○		DTC Description 
C1051-1C	Pump motor	○	○	○		DTC Description 
C1054-89	Control unit	○	○	○	○	DTC Description 
C1056-13	Battery power supply					DTC Description 
C1056-16	Battery power supply	○	○	○	○	DTC Description 
C1056-17	Battery power supply	○	○	○	○	DTC Description 
C1058-04	Control unit	○	○	○	○	DTC Description 
C1058-42	Control unit	○	○	○	○	DTC Description 
C1058-44	Control unit	○	○	○	○	DTC Description 
C1058-49	Control unit	○	○			DTC Description 

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
C1058-51	Control unit	○	○	○	○	DTC Description 
C1058-92	Control unit	○	○	○	○	DTC Description 
C105A-92	Control unit	○	○	○		DTC Description 
C105D-7B	Brake fluid level low	○				DTC Description 
C105F-85	Control unit					DTC Description 
C105F-92	Control unit					DTC Description 
C1061-02	FR LH wheel sensor	○	○			DTC Description 
C1061-07	FR LH wheel sensor	○	○			DTC Description 
C1061-09	FR LH wheel sensor	○	○			DTC Description 
C1061-11	FR LH wheel sensor	○	○			DTC Description 
C1061-12	FR LH wheel sensor	○	○			DTC Description 
C1061-13	FR LH wheel sensor	○	○			DTC Description

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
						
C1061-1C	FR LH wheel sensor	○	○		○	DTC Description 
C1061-38	FR LH wheel sensor	○	○			DTC Description 
C1061-4A	FR LH wheel sensor	○	○			DTC Description 
C1061-64	Wheel sensor FL	○	○			DTC Description 
C1063-02	FR RH wheel sensor	○	○			DTC Description 
C1063-07	FR RH wheel sensor	○	○			DTC Description 
C1063-09	FR RH wheel sensor	○	○			DTC Description 
C1063-11	FR RH wheel sensor	○	○			DTC Description 
C1063-12	FR RH wheel sensor	○	○			DTC Description 
C1063-13	FR RH wheel sensor	○	○			DTC Description 
C1063-1C	FR RH wheel sensor	○	○		○	DTC Description 

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
C1063-38	FR RH wheel sensor	○	○			DTC Description 
C1063-4A	FR RH wheel sensor	○	○			DTC Description 
C1063-64	Wheel sensor FR	○	○			DTC Description 
C1065-02	RR LH wheel sensor	○	○			DTC Description 
C1065-07	RR LH wheel sensor	○	○			DTC Description 
C1065-09	RR LH wheel sensor	○	○			DTC Description 
C1065-11	RR LH wheel sensor	○	○			DTC Description 
C1065-12	RR LH wheel sensor	○	○			DTC Description 
C1065-13	RR LH wheel sensor	○	○			DTC Description 
C1065-1C	RR LH wheel sensor	○	○		○	DTC Description 
C1065-38	RR LH wheel sensor	○	○			DTC Description 
C1065-4A	RR LH wheel sensor	○	○			DTC Description

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
						
C1065-64	Wheel sensor RL	○	○			DTC Description 
C1067-02	RR RH wheel sensor	○	○			DTC Description 
C1067-07	RR RH wheel sensor	○	○			DTC Description 
C1067-09	RR RH wheel sensor	○	○			DTC Description 
C1067-11	RR RH wheel sensor	○	○			DTC Description 
C1067-12	RR RH wheel sensor	○	○			DTC Description 
C1067-13	RR RH wheel sensor	○	○			DTC Description 
C1067-1C	RR RH wheel sensor	○	○		○	DTC Description 
C1067-38	RR RH wheel sensor	○	○			DTC Description 
C1067-4A	RR RH wheel sensor	○	○			DTC Description 
C1067-64	Wheel sensor RR	○	○			DTC Description 

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
C1068-95	Front wheel sensor	○	○			DTC Description 
C1069-95	Rear wheel sensor	○	○			DTC Description 
C106A-04	Wheel sensor	○	○	○	○	DTC Description 
C106A-55	Wheel sensor		○			DTC Description 
C106A-62	Wheel sensor	○	○	○	○	DTC Description 
C106A-64	Wheel sensor	○	○	○	○	DTC Description 
C106B-64	Stop light SW	○			○	DTC Description 
C106C-01	Pressure sensor	○				DTC Description 
C106C-02	Pressure sensor	○				DTC Description 
C106C-16	Pressure sensor	○				DTC Description 
C106C-17	Pressure sensor	○				DTC Description 
C106D-01	Brake booster					DTC Description

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
						
C106E-54	Steering angle sensor	○				DTC Description 
C106E-55	Steering angle sensor	○				DTC Description 
C106E-64	Steering angle sensor	○				DTC Description 
C106F-54	Steering angle sensor	○				DTC Description 
C1070-01	Side G sensor	○	○			DTC Description 
C1070-54	Side G sensor	○	○			DTC Description 
C1070-64	Side G sensor	○	○			DTC Description 
C1071-54	Decel G sensor		○			DTC Description 
C1071-61	Decel G sensor	○	○			DTC Description 
C1071-64	Decel G sensor	○	○			DTC Description 
C1072-01	Yaw rate sensor	○				DTC Description 

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
C1072-64	Yaw rate sensor	○				DTC Description 
C1072-83	Yaw rate sensor	○	○			DTC Description 
C1073-01	Vacuum sensor			○		DTC Description 
C1073-1C	Vacuum sensor		○			DTC Description 
C1073-55	Vacuum sensor		○			DTC Description 
C1073-64	Vacuum sensor					DTC Description 
C1076-55	Not configured	○	○	○		DTC Description 
C1077-55	TCM		○			DTC Description 
C1077-92	TCM					DTC Description 
C1078-55	Not configuration		○			DTC Description 
C1079-55	Not configuration		○			DTC Description 
C107A-55	Not configuration		○			DTC Description

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
						
C107B-53	ASC function					DTC Description 
C107C-53	Not configuration					DTC Description 
C1080-86	ECM	○			○	DTC Description 
C1082-86	CAN comm err (TCM)				○	DTC Description 
C1083-86	Steering angle sensor	○				DTC Description 
C1085-86	Combination meter	○				DTC Description 
C1086-86	CAN comm err (BCM)	○			○	DTC Description 
C1087-86	IPDM E/R				○	DTC Description 
C1088-86	AV system					DTC Description 
C1090-86	ADAS control unit					DTC Description 
C1092-86	4WD invalid data					DTC Description 

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
C1096-86	Chassis control module				○	DTC Description 
C1098-86	AVM control unit					DTC Description 
C10AA-63	Pump motor					DTC Description 
C10AC-54	Calibration incomplete	○				DTC Description 
C10AF-01	Pressure sensor					DTC Description 
C10B0-01	Parking brake actuator (RH)				○	DTC Description 
C10B0-09	Parking brake actuator (RH)				○	DTC Description 
C10B1-01	Parking brake actuator (LH)				○	DTC Description 
C10B1-09	Parking brake actuator (LH)				○	DTC Description 
C10B2-01	Parking brake switch				○	DTC Description 
C10B2-64	Parking brake switch				○	DTC Description 
C10B3-44	Parking brake control module				○	DTC Description

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
						
C10B3-49	Parking brake control module				○	DTC Description 
C10B3-53	Parking brake control module				○	DTC Description 
C10B3-55	Parking brake control module				○	DTC Description 
C10B3-68	Parking brake control module				○	DTC Description 
C10B4-98	Overheat				○	DTC Description 
C10B5-76	Parking brake assembly check				○	DTC Description 
C10B6-68	Parking brake system					DTC Description 
C10B7-16	Parking brake power supply				○	DTC Description 
C10B7-17	Parking brake power supply				○	DTC Description 
C10B8-77	Parking brake system				○	DTC Description 
C10B9-77	Parking brake system				○	DTC Description 

Network-DTC

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
U0073-88	Control module comm Bus D Off	○			○	DTC Description 
U0076-00	Control module comm Bus D Off	○				DTC Description 
U0076-88	Control module comm Bus D Off	○			○	DTC Description 
U2140-87	CAN comm err (ECM)					DTC Description 
U214E-87	CAN comm err (combination meter)					DTC Description 
U214F-87	CAN comm err (BCM)	○			○	DTC Description 
U2152-87	CAN comm err (ADAS control unit)					DTC Description 
U2156-87	CAN comm err (steering angel sensor)	○				DTC Description 
U2240-87	CAN comm err (ECM)	○			○	DTC Description 

DTC	Display item	ASC warning light	ABS warning light	Brake warning light	Electric parking brake warning light	Refer to
U2241-87	CAN comm err (TCM)				○	DTC Description 
U224A-87	CAN comm err (AWD/4WD)					DTC Description 
U224E-87	CAN comm err (combination meter)					DTC Description 
U2252-87	CAN comm err (ADAS control unit)					DTC Description 
U225B-87	CAN comm err (IPDM E/R)				○	DTC Description 
U2275-87	CAN comm err (AVM)					DTC Description 
U2276-87	CAN comm err (CCM)				○	DTC Description 