


Component Parts Location

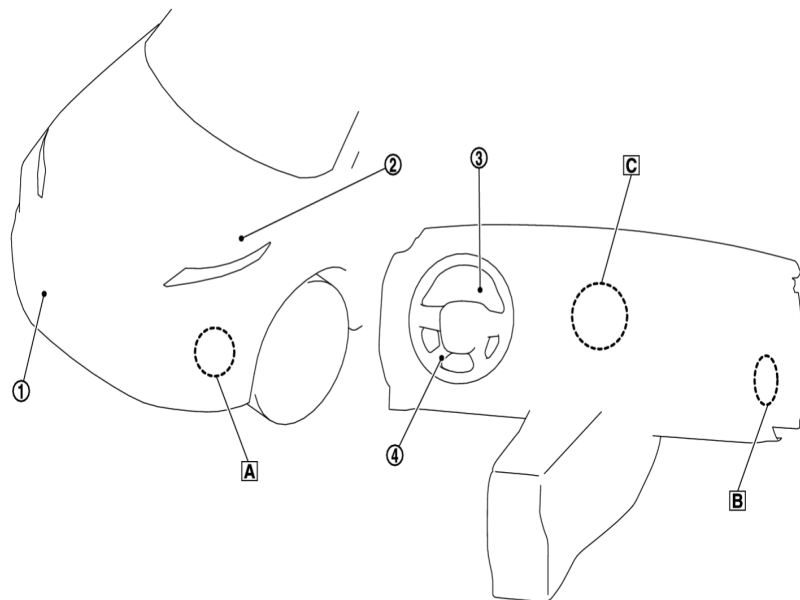

① Ambient sensor	② ECM Refer to Component Parts Location for detailed installation location.	③ Combination meter
④ BCM Refer to Component Parts Location for detailed installation location.	⑤ PTC heater relay 3	⑥ PTC heater relay 2
⑦ PTC heater relay 1	⑧ A/C amp.	⑨ PTC heater
A Relay box (behind of front bumper)	B Glove box is removed	C Left side of heater & cooling unit assembly
← : Vehicle front		

