


[!\[\]\(919a2cb85b99741a73c0c31a427236a8\_img.jpg\) \[Previous\]](#) [!\[\]\(c9cd5a1c35167a83f09a35036fe5dcbd\_img.jpg\) \[Next\]](#)

# Removal and Installation


## REMOVAL

1. Remove glove box. Refer to [Removal and Installation](#) 
2. Disconnect A/C amp. harness connectors .

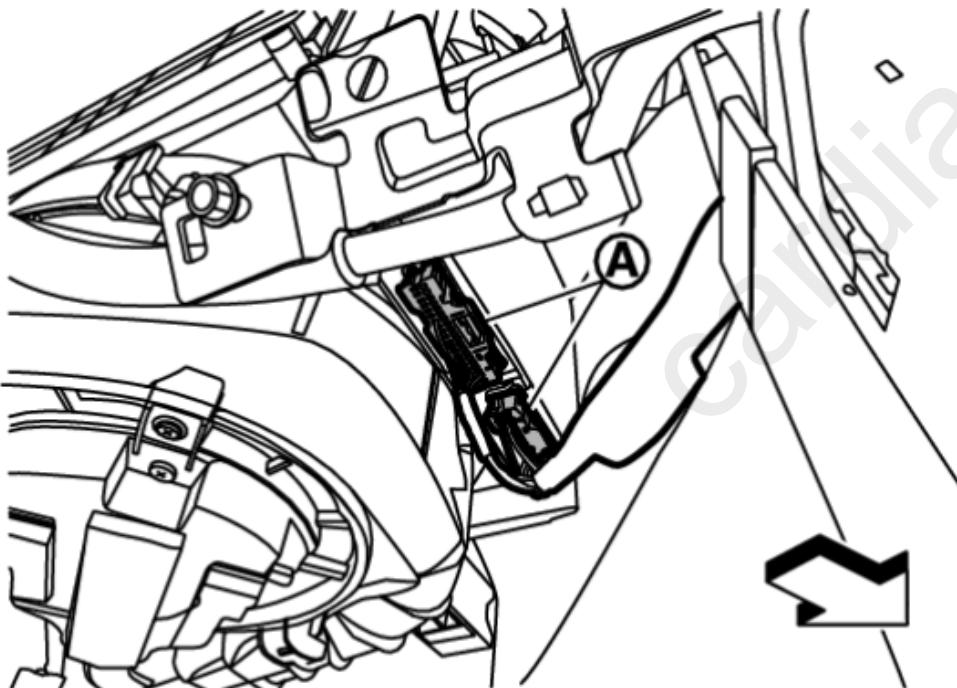

 : Vehicle front

3. Remove fixing screw **A**, and then slide A/C amp. in the direction indicated by arrow as shown in the figure and remove it.

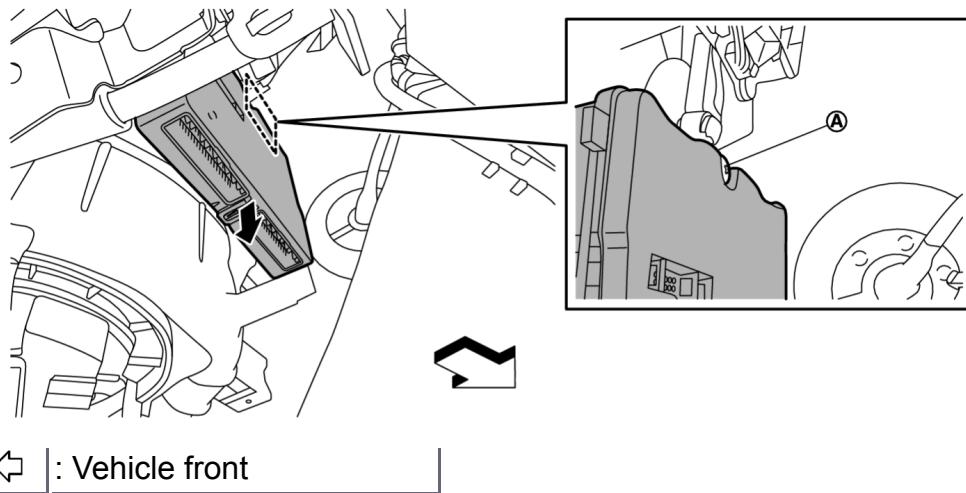

## INSTALLATION

Note the following item, and then install in the reverse order of removal.

**caution**

Be sure perform ADDITIONAL SERVICE WHEN REPLACING A/C AMP. when replacing A/C amp. Or not doing so, A/C amp. control function does not operate normally. Refer to [Description](#)