

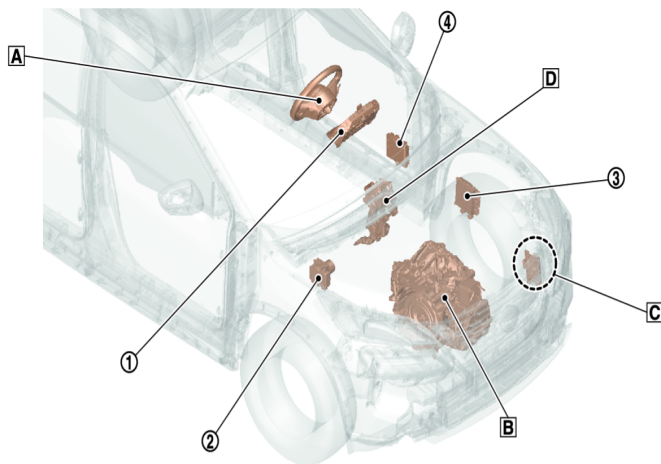
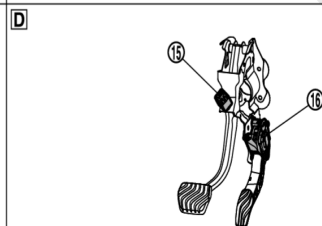
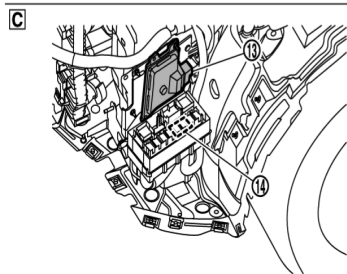


[\[Previous\]](#) [\[Next\]](#)

Component Parts Location

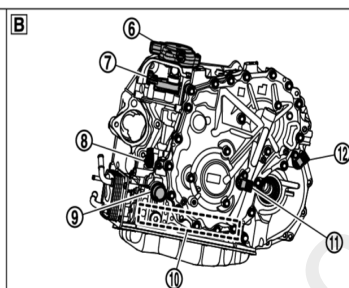

① Combination meter Refer to Removal and Installation ➡.	② ABS actuator and electronic unit (control unit) Refer to Component Parts Location ➡.	③ ECM Refer to Component Parts Location ➡.
④ BCM Refer to Component Parts Location ➡.	⑤ Paddle shifter	⑥ Electric shift actuator
⑦ Transmission range switch	⑧ Input speed sensor	⑨ CVT unit connector
⑩ Control valve	⑪ Primary speed sensor	⑫ Output speed sensor
⑬ TCM	⑭ Shift actuator relays (A and B)	⑮ Stop light switch
⑯ Accelerator pedal position switch		
A Steering wheel	B Side of transaxle assembly	C Left front of vehicle
D Brake pedal periphery		

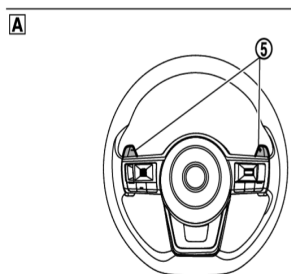

INTERIOR SIDE

①	Electric shift control module	②	Electric shift selector		
---	-------------------------------	---	-------------------------	--	--

