

[\[Previous\]](#) [\[Next\]](#)

DTC Index

note

- If multiple malfunction codes are detected at the same time, check each code according to the “DTC check priority list”. [DTC Inspection Priority Chart](#) .

Self Diagnostic Result

×:Applicable —: Not applicable

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light *4	CVT system warning *5	Electric shift warning *6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
P0571	P0571	00	BRAKE SWITCH A	1	×	—	A	—	DTC Description 
P0602	P0602	00	CONT PROGRAMMING	1	×	—	A	—	DTC Description 
P0605	P0605	00	CONTROL MODULE ROM	1	×	—	A	—	DTC Description 
—	P060B	00	CONTROL MODULE	1	—	—	—	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning *5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
P062F	P062F	00	EEPROM	1	×	—	A	—	DTC Description 
P0705	P0705	00	T/M RANGE SENSOR A	2	×	—	A	—	DTC Description 
P0706	P0706	00	T/M RANGE SENSOR A	2	×	—	A	—	DTC Description 
P0711	P0711	00	FLUID TEMP SENSOR A	2	×	—	A	—	DTC Description 
P0712	P0712	00	FLUID TEMP SENSOR A	2	×	—	A	—	DTC Description 
P0713	P0713	00	FLUID TEMP SENSOR A	2	×	—	A	—	DTC Description 
P0715	P0715	00	INPUT SPEED SENSOR A	2	×	—	A	—	DTC Description 
P0716	P0716	00	INPUT SPEED SENSOR A	2	×	—	A	—	DTC Description 
P0717	P0717	00	INPUT SPEED SENSOR A	2	×	—	A	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning *5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
P0718	P0718	00	INPUT SPEED SENSOR A	2	×	—	A	—	DTC Description 
P0740	P0740	00	TORQUE CONVERTER	2	×	—	A	—	DTC Description 
P0741	P0741	00	TORQUE CONVERTER	2	×	—	A	—	DTC Description 
P0742	P0742	00	TORQUE CONVERTER	1	×	—	A	—	DTC Description 
P0743	P0743	00	TORQUE CONVERTER	2	×	—	A	—	DTC Description 
P0746	P0746	00	PC SOLENOID A	2	×	—	A	—	DTC Description 
P0776	P0776	00	PC SOLENOID B	2	×	—	A	—	DTC Description 
P0778	P0778	00	PC SOLENOID B	2	×	—	A	—	DTC Description 
P0779	P0779	00	PC SOLENOID B	2	×	—	A	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning *5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
P0780	P0780	00	SHIFT ERROR	1	×	×	A or B [More than 7.5 km/h (4.7 MPH)]	×	DTC Description 
P0791	P0791	00	INTERMEDIATE SPEED SENSOR A	2	×	—	A	—	DTC Description 
P0792	P0792	00	INTERMEDIATE SPEED SENSOR A	2	×	—	A	—	DTC Description 
P0793	P0793	00	INTERMEDIATE SPEED SENSOR A	2	×	—	A	—	DTC Description 
P0794	P0794	00	INTERMEDIATE SPEED SENSOR A	2	×	—	A	—	DTC Description 
P0841	P0841	00	FLUID PRESS SEN/SW A	2	×	—	A	—	DTC Description 
P0847	P0847	00	FLUID PRESS SEN/SW B	2	×	—	A	—	DTC Description 
P0848	P0848	00	FLUID PRESS SEN/SW B	2	×	—	A	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light *4	CVT system warning *5	Electric shift warning *6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
P084C	P084C	00	FLUID PRESS SEN/SW H	2	×	—	A	—	DTC Description 
P084D	P084D	00	FLUID PRESS SEN/SW H	2	×	—	A	—	DTC Description 
P0863	P0863	00	CONTROL UNIT (CAN)	1	×	—	A	—	DTC Description 
P0890	P0890	00	TCM	1	×	—	A	—	DTC Description 
P0962	P0962	00	PC SOLENOID A	2	×	—	A	—	DTC Description 
P0963	P0963	00	PC SOLENOID A	2	×	—	A	—	DTC Description 
P0965	P0965	00	PC SOLENOID B	2	×	—	A	—	DTC Description 
P0966	P0966	00	PC SOLENOID B	2	×	—	A	—	DTC Description 
P0967	P0967	00	PC SOLENOID B	2	×	—	A	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light *4	CVT system warning *5	Electric shift warning *6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
—	P17F0	07	CVT JUDDER (T/M INSPECTION)	1	—	—	—	—	DTC Description 
—	P17F1	07	CVT JUDDER (C/V INSPECTION)	1	—	—	—	—	DTC Description 
—	P17F2	07	CVT JUDDER (T/C INSPECTION)	1	—	—	—	—	DTC Description 
—	P187E	00	T/M SYSTEM MULFUNCTION	1 or 2	—	—	A or B	—	DTC Description 
—	P18AB	00	IGNITION SW (ELECTRIC SHIFT)	1	—	× [Less than 5 km/h (3 MPH)]	A [More than 5 km/h (3 MPH)]	× [Less than 5 km/h (3 MPH)]	DTC Description 
P2758	P2758	00	TCC PRESSURE CONT SOLENOID	1	×	—	A	—	DTC Description 
P2765	P2765	00	INPUT SPEED SENSOR B	2	×	—	A	—	DTC Description 
P2766	P2766	00	INPUT SPEED SENSOR B	2	×	—	A	—	DTC Description 
P2767	P2767	00	INPUT SPEED SENSOR B	2	×	—	A	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning *5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
									
P2768	P2768	00	INPUT SPEED SENSOR B	2	×	—	A	—	DTC Description 
P2813	P2813	00	SELECT SOLENOID	2	×	—	A	—	DTC Description 
P2814	P2814	00	SELECT SOLENOID	2	×	—	A	—	DTC Description 
P2815	P2815	00	SELECT SOLENOID	2	×	—	A	—	DTC Description 
U0100	U0100	00	LOST COMM (ECM A)	1	×	—	—	—	DTC Description 
U0103	U0103	00	SHIFT CONT MODULE A	1	×	×	B [More than 7.5 km/h (4.7 MPH)]	×	DTC Description 
U0115	U0115	00	LOST COMM (ECM/PCM B)	1	×	—	—	—	DTC Description 
—	U0300	00	CAN COMM DATA	1	—	—	—	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light *4	CVT system warning *5	Electric shift warning *6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
—	U1112	24	DECELERATION REQUEST SIGNAL	1	—	—	—	—	DTC Description 

*1: These numbers are specified by SAE J2012/ISO 15031-6.

*2: The DTC number of the 1st trip is the same as the DTC number.

*3: Refer to Malfunction Indicator Light (MIL)[Malfunction Indicator Lamp \(MIL\)](#).

*4: Refer to Electric Shift Warning Light[Electric Shift Warning Lamp](#) (FULL TFT METER) or Electric Shift Warning Light[Electric Shift Warning Lamp](#) (7 INCH INFORMATION DISPLAY).

*5: Refer to CVT system warning[CVT System Warning](#).

*6: Refer to [Electric Shift Warning](#).

Network-DTC

×:Applicable —: Not applicable

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning*5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
U0073	U0073	00	Control module comm Bus A Off	1	×	—	—	—	DTC Description 
U007A	U007A	00	Control module comm Bus H Off	1	×	—	—	—	DTC Description 
—	U2140	87	CAN comm err (ECM)	1	—	—	—	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL*3	Electric shift warning light*4	CVT system warning*5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
—	U2148	87	CAN comm err (brake control unit)	1	—	—	—	—	DTC Description 
—	U214A	87	CAN comm err (AWD/4WD)	1	—	—	—	—	DTC Description 
—	U214F	87	CAN comm err (BCM)	1	—	× [Less than 5 km/h (3 MPH)]	A [More than 5 km/h (3 MPH)]	× [Less than 5 km/h (3 MPH)]	DTC Description 
—	U2152	87	CAN comm err (ADAS control unit)	1	—	—	—	—	DTC Description 
—	U2153	87	CAN comm err (HVAC)	1	—	—	—	—	DTC Description 
—	U215B	87	CAN comm err (IPDM E/R)	1	—	× [Less than 5 km/h (3 MPH)]	A [More than 5 km/h (3 MPH)]	× [Less than 5 km/h (3 MPH)]	DTC Description 
—	U2240	87	CAN comm err (ECM)	1	—	—	—	—	DTC Description 
—	U2247	87	CAN comm err (electric shift)	1	—	—	—	—	DTC Description 
—	U2248	87	CAN comm err (brake control unit)	1	—	—	—	—	DTC Description 
—	U2252	87	CAN comm err (ADAS control unit)	1	—	—	—	—	DTC Description 

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning*5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
—	U2276	87	CAN comm err (CCM)	1	—	—	—	—	DTC Description 

*1: These numbers are specified by SAE J2012/ISO 15031-6.

*2: The DTC number of the 1st trip is the same as the DTC number.

*3: Refer to Malfunction Indicator Light (MIL) [Malfunction Indicator Lamp \(MIL\)](#) .

*4: Refer to Electric Shift Warning Light [Electric Shift Warning Lamp](#)  (FULL TFT METER) or Electric Shift Warning Light [Electric Shift Warning Lamp](#)  (7 INCH INFORMATION DISPLAY).

*5: Refer to CVT system warning [CVT System Warning](#) .

*6: Refer to [Electric Shift Warning](#) .

MAC Diagnosis

×:Applicable —: Not applicable

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning *5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
—	U1327	52	MAC key update	1	—	—	—	—	DTC Description 
—	U1327	54	MAC key update	1	—	—	—	—	DTC Description 
—	U2140	57	CAN comm err (ECM)	1	—	—	—	—	DTC Description

DTC*1, *2			Items (M.U.T.-III SE screen terms)	Trip	MIL *3	Electric shift warning light*4	CVT system warning *5	Electric shift warning*6	Reference
GST	M.U.T.-III SE (TRANSMISSION)								
									
—	U214F	57	CAN comm err (BCM)	1	—	—	—	—	DTC Description 
—	U2152	57	CAN comm err (ADAS control unit)	1	—	—	—	—	DTC Description 
—	U2176	57	CAN comm err (CCM)	1	—	—	—	—	DTC Description 

*1: These numbers are specified by SAE J2012/ISO 15031-6.

*2: The DTC number of the 1st trip is the same as the DTC number.

*3: Refer to Malfunction Indicator Light (MIL) [Malfunction Indicator Lamp \(MIL\)](#) .

*4: Refer to Electric Shift Warning Light [Electric Shift Warning Lamp](#)  (FULL TFT METER) or Electric Shift Warning Light [Electric Shift Warning Lamp](#)  (7 INCH INFORMATION DISPLAY).

*5: Refer to CVT system warning [CVT System Warning](#) .

*6: Refer to [Electric Shift Warning](#) .