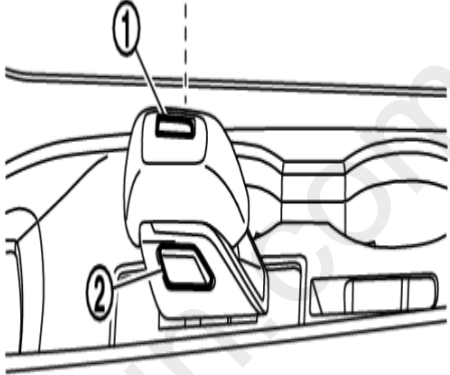


Electric Shift Selector

FUNCTIONS WITHIN THE SYSTEM

The electric shift selector sends the shift request of the driver to the electric shift control module as an electric signal.

INDIVIDUAL FUNCTION WITHIN THE SYSTEM

Shift selector position	Operation/Function	
H (Home position)	The selector lever automatically moves back to the home position after it is operated.	R ← Nr ⇄ H ⇄ Nd ⇄ D/M  ■: Press the button ② to shift ⇄: Shift without pressing the button ②

Shift selector position	Operation/Function	
P (P position switch ①)	Completely stop the vehicle and press the P position switch while depressing the brake pedal. The shift position changes to P.	
R	While depressing the brake pedal, press the selector knob button and shift the selector lever to R position. The shift position changes to R.	
Nr	When shift position is D or M, while depressing the brake pedal, shift the selector lever to the Nr position and hold it for approx. 0.5 second. The shift position changes to N.	
	note Even if selector lever is shifted to the Nr position when shift position is R, the shift position does not change to N and the shift position warning buzzer sounds.	
Nd	When shift position is R, while depressing the brake pedal, shift the selector lever to the Nd position and hold it for approx. 0.5 second. The shift position changes to N.	
	note Even if selector lever is shifted to the Nd position when shift position is D or M, the shift position does not change to N and the shift position warning buzzer sounds.	
D/M	While depressing the brake pedal, shift the selector lever	

Shift selector position	Operation/Function
	to D/M position. The shift position changes to D. - While driving in the D position, shift the selector lever to D/M position again. The shift position changes to M (manual mode) - To switch from M (manual mode) to the D driving, shift the selector lever to D/M position again.

OPERATIONAL CONDITIONS FOR SHIFT

■: Hold ●: Current shift position ○: Be able to shift here

POWER SW	Operation	Vehicle speed	Stop light switch	Shift position					Remarks
				P	R	N	D	M	
OFF/ACC	Selector lever	—	—	■			—		—
	P position SW	—	—	■			—		—

POWER SW	Operation	Vehicle speed	Stop light switch	Shift position					Remarks
				P	R	N	D	M	
ON (Engine stop)	Selector lever	—	ON	●	—	○	—	—	- Shifted to N position even when shifted to R or D position - Shift position warning buzzer: Two short beeps
		—	OFF	■	—				Shift position warning buzzer: Two short beeps
	P position SW	—	—	○	—	●	—	—	—
ON (Engine running)	Selector lever	—	ON	●	○	○	○	○*	—
		—	OFF	■	—				Shift position warning buzzer: Two short beeps
	P position SW	3 km/h (1.86 MPH) or less	—	○	●	●	●	●	—
		3 km/h (1.86 MPH) or more	—	—	■	■	■	■	Shift position warning buzzer: Two short beeps

*: Direct shifting to the M position from the P position is not possible.

INDIVIDUAL OPERATION

The electric shift selector sends a signal to the electric shift control module by shifting.

COMPONENT PARTS LOCATION

The electric shift selector is installed on the center console.

cardiagn.com