



DTC Inspection Priority Chart

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	U1327-54: MAC key update
2	U1327-52: MAC key update
3	• U0073-00: Control module comm Bus A Off • U0075-00: Control module comm Bus C Off • U20C5-87: CAN comm err (audio amp.) • U2140-57: CAN comm err (ECM) • U2140-87: CAN comm err (ECM) • U2141-87: CAN comm err (TCM) • U2148-87: CAN comm err (brake control unit) • U2152-57: CAN comm err (ADAS control unit) • U2152-87: CAN comm err (ADAS control unit) • U2154-87: CAN comm err (MIU) • U216B-87: CAN comm err (front camera) • U2175-57: CAN comm err (Multi Around Monitor) • U2175-87: CAN comm err (Multi Around Monitor) • U2176-57: CAN comm err (CCM/ST angle sensor) • U2176-87: CAN comm err (CCM/ST angle sensor) • U2218-87: CAN comm err (Keyless operation key) • U2250-87: CAN comm err (AIRBAG) • U2253-87: CAN comm err (HVAC) • U225B-87: CAN comm err (IPDM E/R) • U2314-87: CAN comm err (ANC) • U234E-87: CAN comm err (combination meter) • U2369-87: CAN comm err (PSD/MHB) • U237C-87: CAN comm err (seat) • U2A06-88: Comm Bus Off V-FD
4	• B2C40-04: Power window main switch • B2C41-04: Power window motor FL • B2C95-01: Combination switch • B2C95-64: Combination switch • B2F60-55: Seat belt buckle switch (driver side) • B2F98-04: Sunshade motor • B2F99-04: Sunroof motor • B2FAE-12: Ignition relay-1 • B2FAE-14: Ignition relay-1 • U1C01-08: LIN communication • U1C02-08: LIN communication
5	• B2C20-12: Starter control relay • B2C20-14: Starter control relay • B2C20-23: Starter control relay • B2C20-24: Starter control relay • B2FAC-12: Accessory relay

Priority	DTC
	• B2FAC-14: Accessory relay • B2FAF-12: Ignition relay-2 • B2FAF-14: Ignition relay-2 • B2FB0-12: Ignition relay-3 • B2FB0-14: Ignition relay-3
6	• B2C96-49: Light sensor • B2CB5-64: Rear wiper • B2CCF-04: Passenger door mirror control module • B2F06-11: Power liftgate/trunk opener switch • B2F06-15: Power liftgate/trunk opener switch • B2F70-01: Stop light • B2F70-02: Stop light • B2F71-23: Stop light • B2F71-24: Stop light • B2F72-23: Stop light • B2F72-24: Stop light
7	• C1700-54: Control unit • C1700-55: Control unit • C1700-86: Control unit • C1711-7B: Low tire pressure FL • C1712-7B: Low tire pressure FR • C1713-7B: Low tire pressure RR • C1714-7B: Low tire pressure RL • C1731-16: Tire pressure sensor FL • C1731-68: Tire pressure sensor FL • C1732-16: Tire pressure sensor FR • C1732-68: Tire pressure sensor FR • C1733-16: Tire pressure sensor RR • C1733-68: Tire pressure sensor RR • C1734-16: Tire pressure sensor RL • C1734-68: Tire pressure sensor RL • C1741-21: Tire pressure sensor no data FL • C1742-21: Tire pressure sensor no data FR • C1743-21: Tire pressure sensor no data RR • C1744-21: Tire pressure sensor no data RL