

 

Work Procedure

1.REPLACE BCM

Replace BCM. Refer to [Removal and Installation](#)



2.WRITING VEHICLE SPECIFICATION

Perform configuration (BCM). Refer to [Description](#)



3.PAIRING OF BCM AND INTELLIGENT KEY UNIT

caution

When before pairing of BCM and Keyless operation key unit, always writing the BCM configuration. Or not doing so, BCM control function does not operate normally.

Perform the pairing of BCM and Keyless operation key unit. Press UNLOCK button of Keyless operation key.



4.REGISTER OF VEHICLE IDENTIFICATION NUMBER

With M.U.T.-III SE

1. Select “VIN REGISTRATION” of BCM (BCM) work support item.
2. Refer to M.U.T.-III SE and follow the on-screen instructions.



5.WRITING MAC KEY

caution

When replacing BCM in relation with ECM replacement, replace ECM before writing MAC KEY. Refer to [Description](#)

[Description](#)

Perform MAC key writing. Refer to [Description](#)



6.TIRE PRESSURE SENSOR ID REGISTRATION (IF EQUIPPED)

Perform the initialization and registration of tire pressure sensor ID.

Refer to [Description](#)

: WORK END