


Component Parts Location

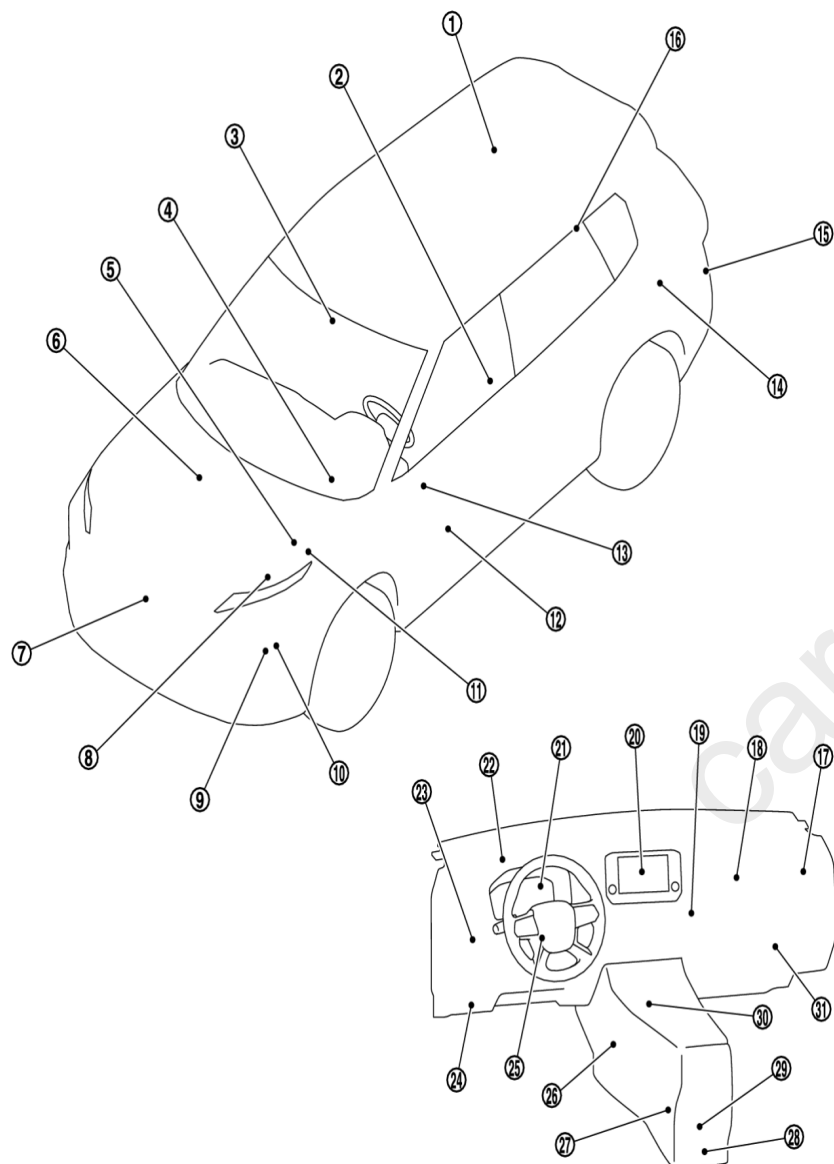

①	Side radar RH	②	AWD control unit	③	Front camera unit
④	8CH CAN gateway	⑤	ECM	⑥	ABS actuator and electric unit (control unit)
⑦	Distance sensor	⑧	Power steering control module	⑨	Electric intake valve timing control module
⑩	TCM	⑪	IPDM E/R	⑫	BOSE speaker amp.
⑬	Driver seat control unit	⑭	Automatic power liftgate control unit	⑮	Side radar LH
⑯	Sonar control unit	⑰	Chassis control module	⑱	Keyless operation key unit
⑲	TCU	⑳	AV control unit	㉑	Combination meter
㉒	Head Up Display unit	㉓	BCM	㉔	Data link connector
㉕	Steering angle sensor	㉖	Electric shift control module	㉗	Air bag diagnosis sensor unit
㉘	ADAS control unit 2	㉙	Around view monitor control unit	㉚	Wireless charger unit
㉛	A/C amp.				