

 

Component Inspection (Active Grille Shutter)

1.CHECK ACTIVE GRILLE SHUTTER

With M.U.T.-III SE

1. Start the engine.
2. Select "ACTIVE GRILLE SHUTTER" in "Special Function" of "ENGINE" using M.U.T.-III SE.
3. Touch "CALIBRTN".
4. After the calibration completes, check the operation of active grille shutter as follows.

Condition	Active grille shutter
Select "CLOSE"	Open → Close
Select "OPEN"	Close → Open

Without M.U.T.-III SE

1. Turn ignition switch OFF.
2. Operate shutter by hands to close position.
3. Check the operation of active grille shutter as follows.

Condition	Active grille shutter
Ignition switch: ON	Close → Open

Q.Is the inspection result normal?

Yes

INSPECTION END

No

Replace active grille shutter. Refer to [Removal and Installation](#) 