



 [Previous]  [Next]

Component Parts Location

ENGINE ROOM COMPARTMENT

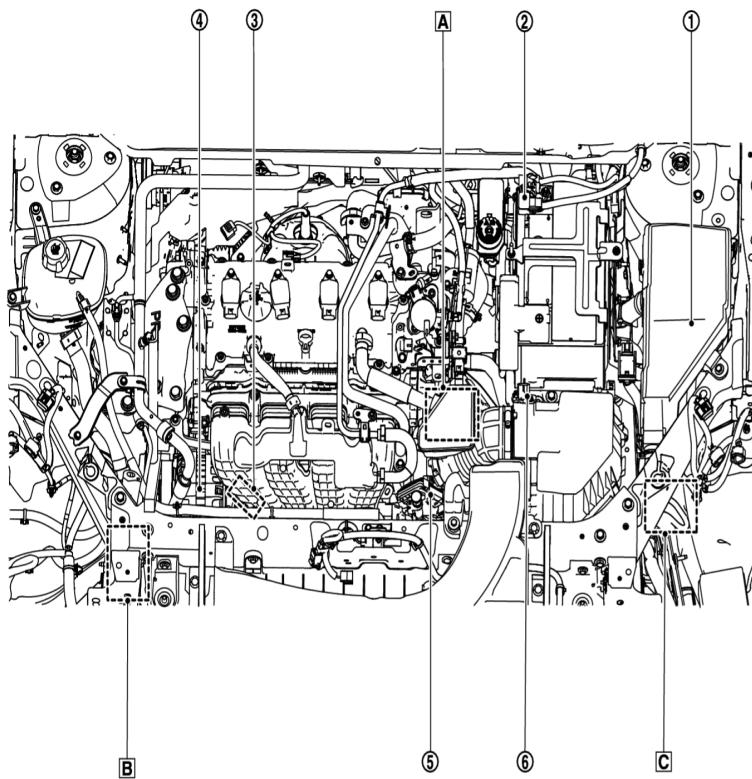


A	Left center of engine compartment	B	Right front of vehicle	C	Left front of engine compartment
①	IPDM E/R Component Parts Location ➔	②	12 V battery current sensor	③	Manifold absolute pressure (MAP) sensor
④	Generator Component Parts Location ➔	⑤	Electric throttle control actuator (with built in throttle position sensor and throttle control motor)	⑥	Mass air flow sensor (with intake air temperature sensor)
⑦	Intake manifold runner control valve actuator	⑧	EVAP canister purge volume control solenoid valve	⑨	Transmission range switch
⑩	Refrigerant pressure sensor <ul style="list-style-type: none"> AUTOMATIC AIR CONDITIONING SYSTEM: Component Parts Location ➔ MANUAL AIR CONDITIONING SYSTEM: Component Parts Location ➔ 	⑪	ECM	⑫	Electric intake valve timing control module

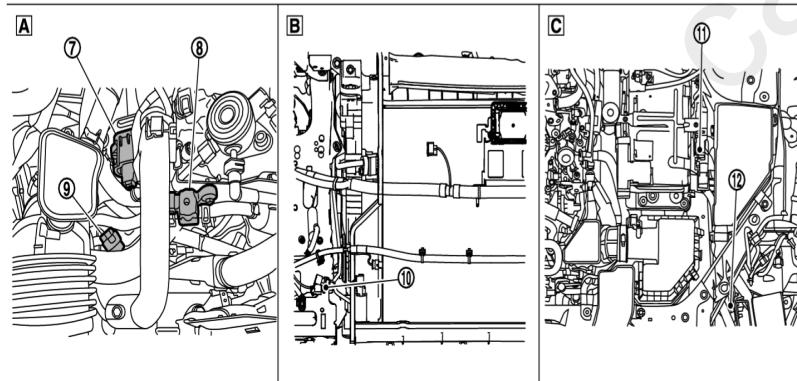

ENGINE COMPARTMENT


Cardiagn.Com

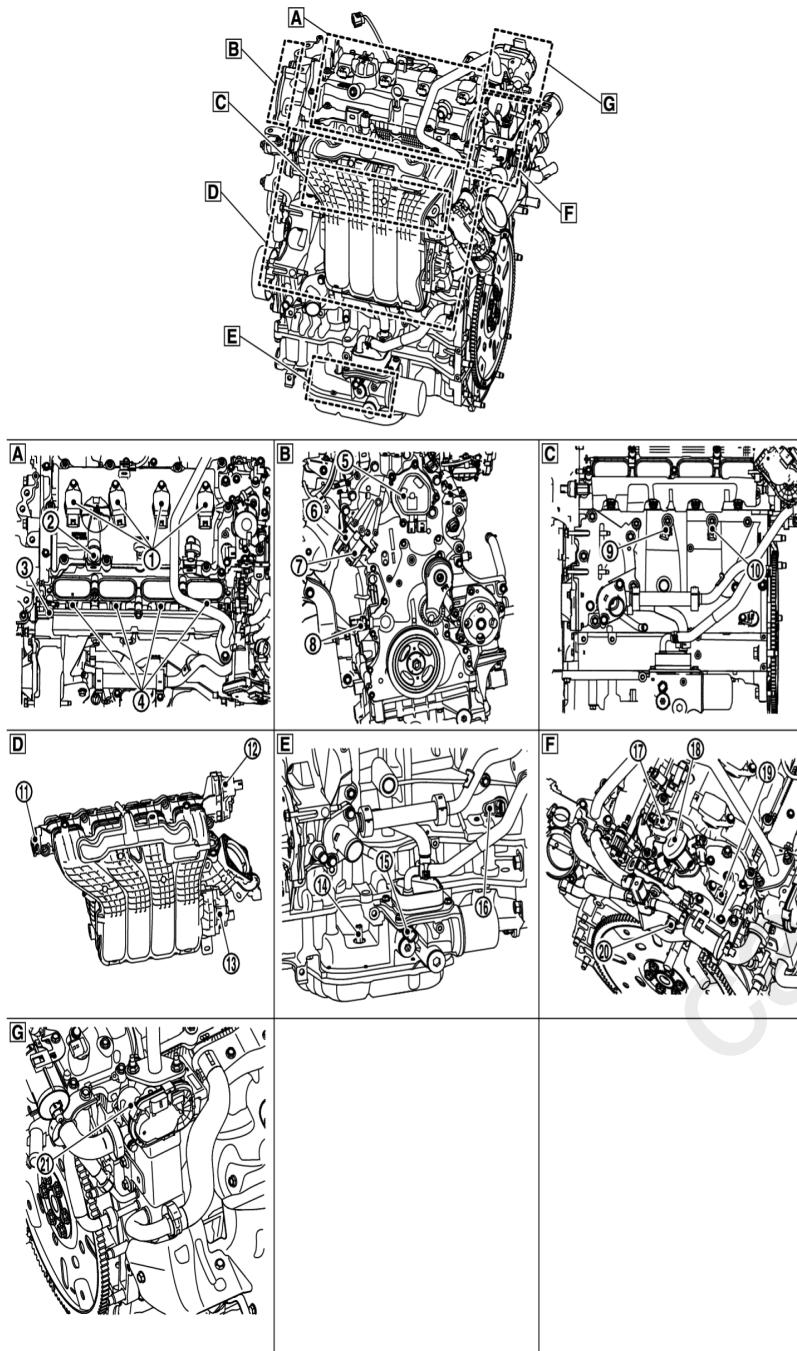


A	Top of engine	B	Top front of engine	C	Left side of engine
D	Air intake	E	Lower front of engine	F	Rear of engine
G	Rear of engine				
①	Ignition coil (with power transistor)	②	PCV valve	③	Fuel rail pressure sensor
④	Fuel injector	⑤	Electric intake valve timing control actuator	⑥	Exhaust valve timing intermediate lock control solenoid valve
⑦	Exhaust valve timing control solenoid valve	⑧	Engine oil pressure sensor	⑨	Knock sensor 1
⑩	Knock sensor 2	⑪	Intake manifold runner control valve position sensor	⑫	Intake manifold runner control valve actuator
⑬	Intake manifold tuning valve	⑭	Engine oil pressure control solenoid valve	⑮	Engine oil temperature sensor
⑯	Crankshaft position sensor	⑰	Intake camshaft position sensor	⑱	High pressure fuel pump
⑲	Exhaust camshaft position sensor	⑳	Engine coolant temperature sensor	㉑	EGR volume control valve

EXHAUST COMPARTMENT

①	Air fuel ratio (A/F) sensor 1	②	Heated oxygen sensor 2	
---	----------------------------------	---	---------------------------	--

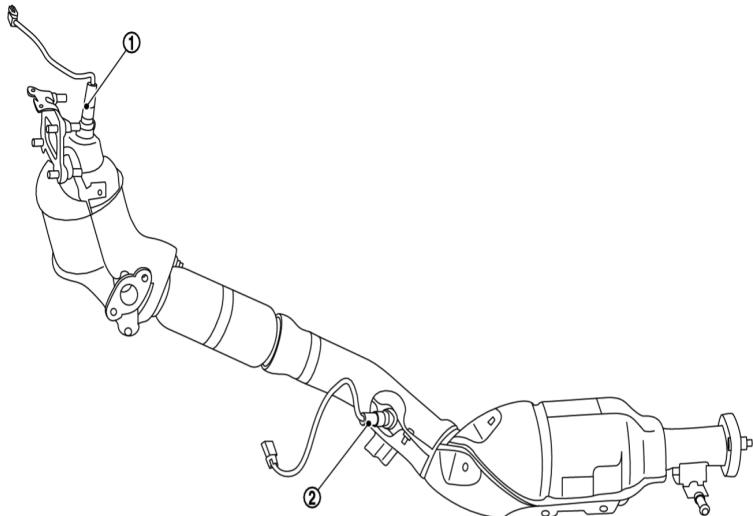

BODY COMPARTMENT

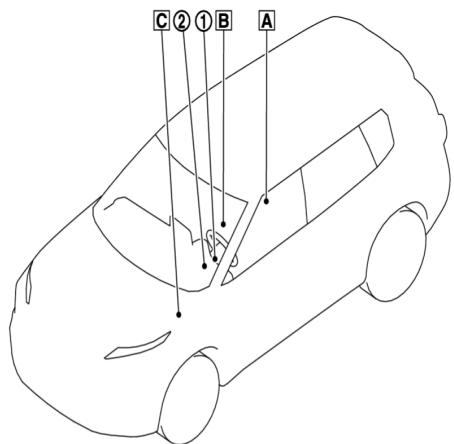

A	Inside fuel tank area	B	Front of fuel tank area	C	Pedal periphery area
①	ASCD/ACC steering switch	②	Combination meter [Malfunction indicator light (MIL), Information display]	③	EVAP canister
④	EVAP control system pressure sensor	⑤	EVAP canister vent control valve	⑥	Fuel level sensor unit and fuel pump
⑦	Fuel tank temperature sensor	⑧	Stop light switch	⑨	Accelerator pedal position sensor

