

[\[Previous\]](#) [\[Next\]](#)

DTC Index

×:Applicable —: Not applicable

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
C053C	00	C053C	Wheel speed sensor	—	2	×	A + B	DTC Description 
U0101	00	U0101	LOST COMM (TCM)	—	2	×	A + B	DTC Description 
U0122	00	U0122	ASC MDL	—	2	×	A + B	DTC Description 
U012E	00	U012E	Communication error (lost)	—	2	×	A + B	DTC Description 
U0146	00	U0146	Lost communication (GW) A	—	2	×	A + B	DTC Description 
U0155	00	U0155	LOST COMM (METER)	—	2	×	A + B	DTC Description 
U0284	00	U0284	LOST COMM (A/GRLL SHTTR MDL A)	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST *2						
U042F	00	U042F	Communication error (invalid)	—	2	×	A + B	DTC Description 
U1040	00	U1040	ENG COMM CIRCUIT	—	2	—	—	DTC Description 
U1050	00	U1050	LIN COMMUNICATION	—	2	—	—	DTC Description 
U1051	00	U1051	LIN COMMUNICATION	—	2	—	—	DTC Description 
U2148	83	U2148	CAN comm err (brake control unit)	—	2	—	—	DTC Description 
U214A	83	U214A	CAN comm err (AWD/4WD)	—	2	—	—	DTC Description 
U214F	83	U214F	CAN comm err (BCM)	—	2	—	—	DTC Description 
U2150	83	U2150	CAN comm err (AIRBAG)	—	2	—	—	DTC Description 
U2152	83	U2152	CAN comm err (ADAS control unit)	—	2	—	—	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST *2						
U215B	83	U215B	CAN comm err (IPDM E/R)	—	2	—	—	DTC Description 
U2165	83	U2165	CAN comm err (sonar)	—	2	—	—	DTC Description 
U2241	83	U2241	CAN comm err (TCM)	—	2	—	—	DTC Description 
U2248	83	U2248	CAN comm err (brake control unit)	—	2	—	—	DTC Description 
U2252	83	U2252	CAN comm err (ADAS control unit)	—	2	—	—	DTC Description 
U2276	83	U2276	CAN comm err (CCM)	—	2	—	—	DTC Description 
U2384	83	U2384	CAN comm err (eVTC)	—	2	—	—	DTC Description 
P0010	00	P0010	A camshaft position actuator B1	—	2	×	A + B	DTC Description 
P0011	00	P0011	INT/V TIM CONT- B1	×	2	×	A	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0012	00	P0012	A camshaft position B1	×	2	×	A	DTC Description 
P0014	00	P0014	EXH/V TIM CONT- B1	×	2	×	A	DTC Description 
P0015	00	P0015	B camshaft position B1	×	2	×	A	DTC Description 
P0016	00	P0016	Crankshaft position B1 sensor A	—	2	×	A + B	DTC Description 
P0017	00	P0017	Crankshaft position B1 sensor B	—	2	×	A + B	DTC Description 
P0030	00	P0030	HO2S1 HTR B1	—	2	×	A + B	DTC Description 
P0031	00	P0031	HO2S1 HTR (B1)	—	2	×	A + B	DTC Description 
P0032	00	P0032	HO2S1 HTR (B1)	—	2	×	A + B	DTC Description 
P0036	00	P0036	HO2S1 HTR (B1)	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0037	00	P0037	HO2S1 HTR (B1)	—	2	×	A + B	DTC Description 
P0038	00	P0038	HO2S2 HTR (B1)	—	2	×	A + B	DTC Description 
P0053	00	P0053	HO2S1 HTR B1	x*4	2	×	A + B	DTC Description 
P0078	00	P0078	EX V/T ACT/CIRC- B1	—	2	×	A + B	DTC Description 
P0079	00	P0079	Exhaust valve control solenoid	—	2	×	A + B	DTC Description 
P0080	00	P0080	Exhaust valve control solenoid	—	2	×	A + B	DTC Description 
P0087	00	P0087	LOW FUEL PRES	—	2	×	A + B	DTC Description 
P0088	00	P0088	HIGH FUEL PRES	—	2	×	A + B	DTC Description 
P0090	00	P0090	FUEL PUMP	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0091	00	P0091	Fuel pressure regulator 1	—	2	×	A + B	DTC Description 
P0092	00	P0092	Fuel pressure regulator 1	—	2	×	A + B	DTC Description 
P00D2	00	P00D2	Heated O2 sensor heater B1 sensor 2	×	2	×	A + B	DTC Description 
P00FE	00	P00FE	EVAP system vapor line	×	2	×	A + B	DTC Description 
P0101	00	P0101	MAF SEN/CIRCUIT-B1	—	1 or 2	×	A + B or —	DTC Description 
P0102	00	P0102	MAF SEN/CIRCUIT-B1	—	1	×	A + B	DTC Description 
P0103	00	P0103	MAF SEN/CIRCUIT-B1	—	1	×	A + B	DTC Description 
P0106	00	P0106	ABSL PRES SEN/CIRC	—	2	×	A + B	DTC Description 
P0107	00	P0107	ABSL PRES SEN/CIRC	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0108	00	P0108	ABSL PRES SEN/CIRC	—	2	×	A + B	DTC Description 
P0111	00	P0111	IAT SENSOR 1 B1	—	2	×	A + B	DTC Description 
P0112	00	P0112	IAT SEN/CIRCUIT- B1	—	2	×	A + B	DTC Description 
P0113	00	P0113	IAT SEN/CIRCUIT- B1	—	2	×	A + B	DTC Description 
P0116	00	P0116	ECT SENSOR	—	2	×	A + B	DTC Description 
P0117	00	P0117	ECT SEN/CIRC	—	1 or 2	×	A + B	DTC Description 
P0118	00	P0118	ECT SEN/CIRC	—	1 or 2	×	A + B	DTC Description 
P0122	00	P0122	TP SEN 2/CIRC- B1	—	1	×	A + B	DTC Description 
P0123	00	P0123	TP SEN/CIRCUIT	—	1	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0125	00	P0125	ECT SENSOR	—	2	×	A + B	DTC Description 
P0127	00	P0127	IAT SENSOR-B1	—	2	×	A + B	DTC Description 
P0128	00	P0128	THERMSTAT FNCTN	—	2	×	A + B	DTC Description 
P0130	00	P0130	HO2S1 (B1)	×	2	×	A + B	DTC Description 
P0131	00	P0131	HO2S1 (B1)	×	2	×	A + B	DTC Description 
P0132	00	P0132	HO2S1 (B1)	×	2	×	A + B	DTC Description 
P0136	00	P0136	HO2S2 (B1)	—	2	×	A + B	DTC Description 
P0137	00	P0137	HO2S2 (B1)	—	2	×	A + B	DTC Description 
P0138	00	P0138	HO2S2 (B1)	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST *2						
P0139	00	P0139	HO2S2 (B1)	×	2	×	A + B	DTC Description 
P014C	00	P014C	A/F SENSOR1 (B1)	×	2	×	A	DTC Description 
P014D	00	P014D	A/F SENSOR1 (B1)	×	2	×	A	DTC Description 
P015A	00	P015A	A/F SENSOR1 (B1)	×	2	×	A	DTC Description 
P015B	00	P015B	A/F SENSOR1 (B1)	×	2	×	A	DTC Description 
P0171	00	P0171	FUEL SYS-LEAN- B1	—	2	×	A + B	DTC Description 
P0172	00	P0172	FUEL SYS-RICH- B1	—	2	×	A + B	DTC Description 
P0181	00	P0181	FTT SENSOR	—	2	×	A + B	DTC Description 
P0182	00	P0182	FTT SEN/CIRCUIT	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0183	00	P0183	FTT SEN/CIRCUIT	—	2	×	A + B	DTC Description 
P0191	00	P0191	FRP SENSOR A	—	2	×	A + B	DTC Description 
P0192	00	P0192	FRP SEN/CIRC	—	1	×	A + B	DTC Description 
P0193	00	P0193	FRP SEN/CIRC	—	1	×	A + B	DTC Description 
P0196	00	P0196	EOT SENSOR	—	2	×	A + B	DTC Description 
P0197	00	P0197	EOT SEN/CIRK	—	2	×	A + B	DTC Description 
P0198	00	P0198	EOT SEN/CIRK	—	2	×	A + B	DTC Description 
P01F0	00	P01F0	Coolant temperature	—	2	×	A + B	DTC Description 
P0201	00	P0201	INJECTOR CIRC- CYL1	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0202	00	P0202	INJECTOR CIRC- CYL2	—	2	×	A + B	DTC Description 
P0203	00	P0203	INJECTOR CIRC- CYL3	—	2	×	A + B	DTC Description 
P0204	00	P0204	INJECTOR CIRC- CYL4	—	2	×	A + B	DTC Description 
P0222	00	P0222	TP SEN 1/CIRC- B1	—	1	×	A + B	DTC Description 
P0223	00	P0223	TP SEN 1/CIRC- B1	—	1	×	A + B	DTC Description 
P025A	00	P025A	FUEL PUMP MODULE A	—	2	×	A + B	DTC Description 
P025C	00	P025C	Fuel pump module A	—	2	×	A + B	DTC Description 
P025D	00	P025D	Fuel pump module A	—	2	×	A + B	DTC Description 
P0261	00	P0261	CYL1 INJECTOR	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST *2						
P0262	00	P0262	CYL1 INJECTOR	—	2	×	A + B	DTC Description 
P0264	00	P0264	CYL2 INJECTOR	—	2	×	A + B	DTC Description 
P0265	00	P0265	CYL2 INJECTOR	—	2	×	A + B	DTC Description 
P0267	00	P0267	CYL3 INJECTOR	—	2	×	A + B	DTC Description 
P0268	00	P0268	CYL3 INJECTOR	—	2	×	A + B	DTC Description 
P026B	00	P026B	Injection timing	—	2	×	A + B	DTC Description 
P0270	00	P0270	CYL4 INJECTOR	—	2	×	A + B	DTC Description 
P0271	00	P0271	CYL4 INJECTOR	—	2	×	A + B	DTC Description 
P0300	00	P0300	MULTI CYL MISFIRE	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0301	00	P0301	CYL 1 MISFIRE	—	2	×	A + B	DTC Description 
P0302	00	P0302	CYL 2 MISFIRE	—	2	×	A + B	DTC Description 
P0303	00	P0303	CYL 3 MISFIRE	—	2	×	A + B	DTC Description 
P0304	00	P0304	CYL 4 MISFIRE	—	2	×	A + B	DTC Description 
P0315	00	P0315	Crankshaft position	—	2	×	A + B	DTC Description 
P0326	00	P0326	KNOCK SENSOR 1 B1	—	2	×	A + B	DTC Description 
P0327	00	P0327	KNOCK SEN/CIRC-B1	—	2	×	A + B	DTC Description 
P0328	00	P0328	KNOCK SEN/CIRC-B1	—	2	×	A + B	DTC Description 
P032B	00	P032B	Knock/combustion vibration sen 3 B1	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P032C	00	P032C	Knock/combustion vibration sen 3 B1	—	2	×	A + B	DTC Description 
P032D	00	P032D	Knock/combustion vibration sen 3 B1	—	2	×	A + B	DTC Description 
P0335	00	P0335	CKP SEN/CIRCUIT	—	2	×	A + B	DTC Description 
P0340	00	P0340	CMP SEN/CIRC- B1	—	2	×	A + B	DTC Description 
P0365	00	P0365	CAMSHAFT POSITION SENSOR B B1	—	2	×	A + B	DTC Description 
P0401	00	P0401	EGR A FLOW INSUFFICIENT	×	2	×	A	DTC Description 
P0402	00	P0402	EGRC-BPT VALVE	×	2	×	A	DTC Description 
P0404	00	P0404	EGR A CONTROL	—	2	×	A + B	DTC Description 
P0420	00	P0420	TW CATALYST SYS-B1	×	2	×	A	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0441	00	P0441	EVAP PURG FLOW/MON	×	2	×	A + B	DTC Description 
P0443	00	P0443	PURG VOLUME CONT/V	—	2	×	A + B	DTC Description 
P0444	00	P0444	PURG VOLUME CONT/V	—	2	×	A + B	DTC Description 
P0445	00	P0445	PURG VOLUME CONT/V	—	2	×	A + B	DTC Description 
P0446	00	P0446	VENT CONTROL VALVE	—	2	×	A + B	DTC Description 
P0447	00	P0447	VENT CONTROL VALVE	—	2	×	A + B	DTC Description 
P0448	00	P0448	VENT CONTROL VALVE	—	2	×	A + B	DTC Description 
P044A	00	P044A	EGR SENSOR C	—	2	×	A + B	DTC Description 
P044B	00	P044B	EGR SENSOR C	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P044C	00	P044C	EGR SENSOR C	—	2	×	A + B	DTC Description 
P044D	00	P044D	EGR SENSOR C	—	2	×	A + B	DTC Description 
P044E	00	P044E	EGR SENSOR C	—	2	×	A + B	DTC Description 
P0450	00	P0450	EVAP O SYS PRES SEN	—	2	×	A + B	DTC Description 
P0451	00	P0451	Barometric pressure sensor A/B	—	2	×	A + B	DTC Description 
P0452	00	P0452	EVAP SYS PRES SEN	—	2	×	A + B	DTC Description 
P0453	00	P0453	EVAP SYS PRES SEN	—	2	×	A + B	DTC Description 
P0454	00	P0454	EVAP SYS PRES SEN	—	2	×	A + B	DTC Description 
P0456	00	P0456	EVAP VERY SML LEAK	x*4	2	×	A	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0460	00	P0460	FUEL LEV SEN SLOSH	—	2	×	A + B	DTC Description 
P0461	00	P0461	FUEL LEVEL SENSOR	—	2	×	A + B	DTC Description 
P0462	00	P0462	FUEL LEVL SEN/CIRC	—	2	×	A + B	DTC Description 
P0463	00	P0463	FUEL LEVL SEN/CIRC	—	2	×	A + B	DTC Description 
P0500	00	P0500	VEHICLE SPEED SEN A *5	—	2	×	A + B	DTC Description 
P0501	00	P0501	VEHICLE SPEED SEN A	—	2	×	A + B	DTC Description 
P0506	00	P0506	ISC SYSTEM	—	2	×	A + B	DTC Description 
P0507	00	P0507	ISC SYSTEM	—	2	×	A + B	DTC Description 
P050A	00	P050A	COLD START CONTROL	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST *2						
P050B	00	P050B	COLD START CONTROL	—	2	×	A + B	DTC Description 
P050E	00	P050E	COLD START CONTROL	—	2	×	A + B	DTC Description 
P0520	00	P0520	EOP SENSOR/SWITCH	—	2	×	A + B	DTC Description 
P0522	00	P0522	Engine oil pressure sensor/switch	—	2	×	A + B	DTC Description 
P0523	00	P0523	Engine oil pressure sensor/switch	—	2	×	A + B	DTC Description 
P0524	00	P0524	ENGINE OIL PRESSURE	—	2	×	A + B	DTC Description 
P052A	00	P052A	CAMSHAFT POSITION TIMING B1	×	2	×	A	DTC Description 
P052B	00	P052B	CAMSHAFT POSITION TIMING B1	×	2	×	A	DTC Description 
P0531	00	P0531	REFRIGERANT PRESS SENSOR A	—	2	×	A + B	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0532	00	P0532	REFRIGERANT PRESS SENSOR A	—	2	×	A + B	DTC Description 
P0533	00	P0533	REFRIGERANT PRESS SENSOR A	—	2	×	A + B	DTC Description 
P054A	00	P054A	Cold start B camshaft position bank 1	×	2	×	A	DTC Description 
P054B	00	P054B	Cold start B camshaft position bank 1	×	2	×	A	DTC Description 
P059F	00	P059F	ACTIVE GRILLE AIR SHUTTER A	—	2	×	A + B	DTC Description 
P05EC	00	P05EC	COLD START CONTROL	—	2	×	A + B	DTC Description 
P0604	00	P0604	ECM	—	1	×	A + B	DTC Description 
P0605	00	P0605	ECM	—	1	×	A + B	DTC Description 
P0606	00	P0606	CONTROL MODULE	—	1 or 2	×	A + B or —	DTC Description 

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P0607	00	P0607	ECM	—	1 or 2	×	A + B	DTC Description 
P060A	00	P060A	CONTROL MODULE	—	1	×	A + B	DTC Description 
P060B	00	P060B	CONTROL MODULE	—	1	×	A + B	DTC Description 
P060C	00	P060C	Control module	—	1	×	A + B	DTC Description 
P061B	00	P061B	Internal control module	—	1	×	A + B	DTC Description 
P062B	00	P062B	ECM	—	2	×	A + B	DTC Description 
P062D	00	P062D	Fuel injector driver bank 1	—	2	×	A + B	DTC Description 
P062F	00	P062F	CONTROL MODULE	—	1 or 2	×	A + B	DTC Description 
P0641	00	P0641	Sensor reference voltage A	—	2	×	A + B	DTC Description 

DTC *1		Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2						
P064D	00	P064D Internal Control Module O2 Sensor Processor Performance (bank 1)	—	2	×	A + B	DTC Description 
P0660	00	P0660 INT Manifold Tuning Valve Control B1	—	2	—	—	DTC Description 
P0661	00	P0661 INT Manifold Tuning Valve Control B1	—	2	—	—	DTC Description 
P0662	00	P0662 INT Manifold Tuning Valve Control B1	—	2	—	—	DTC Description 
P06B0	11	P06B1 Sensor Power Supply A	—	1	×	A + B	DTC Description 
	12	P06B2 Sensor Power Supply A	—	1	×	A + B	
P06B3	11	P06B4 Sensor Power Supply B	—	1	×	A + B	DTC Description 
	12	P06B5 Sensor Power Supply B	—	1	×	A + B	
P06DA	00	P06DA ENGINE OIL PRESSURE CONTROL	—	2	—	—	DTC Description 
P06DB	00	P06DB ENGINE OIL PRESSURE CONTROL	—	2	—	—	DTC Description 
P06DC	00	P06DC Engine oil pressure control	—	2	—	—	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
								
P06E6	11	P06E7	Internal control module	—	1	×	A + B	DTC Description
	12	P06E8	Internal control module	—	1	×	A + B	
P0850	00	P0850	P-N POS SW/CIRCUIT	—	2	×	A + B	DTC Description 
P10C8	00	P10C8	Cylinder1 injector A	—	2	×	A + B	DTC Description 
P10C9	00	P10C9	Cylinder2 injector A	—	2	×	A + B	DTC Description 
P10CA	00	P10CA	Cylinder3 injector A	—	2	×	A + B	DTC Description 
P10CB	00	P10CB	Cylinder4 injector A	—	2	×	A + B	DTC Description 
P1148	00	P1148	CLOSED LOOP- B1	—	1	×	A + B	DTC Description 
P1197	00	P1197	FUEL RUN OUT	—	2	—	—	DTC Description 
P119A	00	P119A	FUEL PRESSURE SENSOR	—	2	×	A + B	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
								
P119B	00	P119B	FUEL PRESSURE SENSOR	—	2	×	A + B	DTC Description 
P119C	00	P119C	FUEL PRESSURE SENSOR	—	2	×	A + B	DTC Description 
P119D	00	P119D	FRP SEN/CIRC	—	2	×	A + B	DTC Description 
P119E	00	P119E	FRP SEN/CIRC	—	2	×	A + B	DTC Description 
P1217	00	P1217	OVER HEAT	—	1	×	A + B	DTC Description 
P1225	00	P1225	CTP LEARNING- B1	—	2	—	—	DTC Description 
P1226	00	P1226	CTP LEARNING- B1	—	2	—	—	DTC Description 
P14C1	00	P14C1	CCS brake pedal SW (BCM)	—	1	—	—	DTC Description 
P1526	00	P1526	Vehicle speed sensor	—	1	—	—	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
								
P1536	00	P1536	Auto Cruise Control	—	1	—	—	DTC Description 
P1538	00	P1538	Auto Cruise Control	—	1	—	—	DTC Description 
P155B	00	P155B	Electrical energy management system	—	2	—	—	DTC Description 
P155D	00	P155D	GENERATOR	—	2	—	—	DTC Description 
P155E	00	P155E	GENERATOR VOLTAGE	—	2	—	—	DTC Description 
P155F	00	P155F	GENERATOR VOLTAGE	—	2	—	—	DTC Description 
P1564	00	P1564	ASCD SW	—	1	—	—	DTC Description  (With ASCD), DTC Description  (With ACC)

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
P1568	00	P1568	ACC COMMAND VALUE	—	1	—	—	DTC Description 
P1572	00	P1572	ASCD BRAKE SW	—	1	—	—	DTC Description 
P1574	00	P1574	ASCD VHL SPD SEN	—	1	—	—	DTC Description 
P1575	00	P1575	BRAKE SW	—	2	×	A + B	DTC Description 
P159F	00	P159F	ACTIVE GRILLE AIR SHUTTER A	—	2	—	—	DTC Description 
P1603	00	P1603	CONTROL MODULE	—	2	—	—	DTC Description 
P161D	00	P161D	IMMOBILIZER	—	2	—	—	DTC Description 
P161E	00	P161E	IMMOBILIZER	—	2	—	—	—
P161F	00	P161F	IMMOBILIZER	—	2	—	—	DTC Description 
P1800	00	P1800	VIAS S/V CIRCB1	—	2	—	—	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
								
P1805	00	P1805	BRAKE SW/CIRCUIT	—	1	—	—	DTC Description 
P1A10	00	P1A10	ECM initial learning Incomplete	—	2	—	—	DTC Description 
P2004	00	P2004	SWIRL CONT/V (B1)	—	2	×	A + B	DTC Description 
P2008	00	P2008	SWIRL CONT/V (B1)	—	2	×	A + B	DTC Description 
P2009	00	P2009	Intake manifold runner control	—	2	×	A + B	DTC Description 
P2010	00	P2010	Intake manifold runner control	—	2	×	A + B	DTC Description 
P2014	00	P2014	SWIRL CONT SEN/SW	—	2	×	A + B	DTC Description 
P2015	00	P2015	Intake manifold runner posi sen/sw B1	—	2	×	A + B	DTC Description 
P2016	00	P2016	IN/MANIFOLD RUNNER POS	—	2	×	A + B	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
			SEN B1					
P2017	00	P2017	IN/MANIFOLD RUNNER POS SEN B1	—	2	×	A + B	DTC Description 
P2018	00	P2018	IN/MANIFOLD RUNNER POS SEN B1	—	2	×	A + B	DTC Description 
P2096	00	P2096	POST CATALYST FUEL TRIM SYS B1	×	2	×	A	DTC Description 
P2097	00	P2097	POST CATALYST FUEL TRIM SYS B1	×	2	×	A	DTC Description 
P2100	00	P2100	ETC MOT PWR- B1	—	1	×	A + B	DTC Description 
P2101	00	P2101	ETC FNCTN/CIRC-B1	—	1	×	A + B	DTC Description 
P2103	00	P2103	ETC MOT PWR- B1	—	1	×	A + B	DTC Description 
P2119	00	P2119	ETC ACTR-B1	—	1	×	A + B or —	DTC Description 
P2121	00	P2121	Throttle/pedal position sen/sw D	—	1	×	A + B	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
								
P2122	00	P2122	APP SEN 1/CIRC	—	1	×	A + B	DTC Description 
P2123	00	P2123	APP SEN 1/CIRC	—	1	×	A + B	DTC Description 
P2126	00	P2126	Throttle/pedal position sen/sw E	—	1	×	A + B	DTC Description 
P2127	00	P2127	APP SEN 2/CIRC	—	1	×	A + B	DTC Description 
P2128	00	P2128	APP SEN 2/CIRC	—	1	×	A + B	DTC Description 
P2135	00	P2135	TP SENSOR-B1	—	1	×	A + B	DTC Description 
P2138	00	P2138	APP SENSOR	—	1	×	A + B	DTC Description 
P2159	00	P2159	VEHICLE SPEED SEN B	—	2	×	A + B	DTC Description 
P219A	00	P219A	AIR FUEL RATIO IMBALANCE B1	×	2	×	A	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
								
P2227	00	P2227	Barometric pressure sensor A	—	2	×	A + B	DTC Description 
P2237	00	P2237	O2 sensor bank 1 sensor 1	—	2	×	A + B	DTC Description 
P2238	00	P2238	O2 sensor bank 1 sensor 1	—	2	×	A + B	DTC Description 
P2239	00	P2239	O2 sensor bank 1 sensor 1	—	2	×	A + B	DTC Description 
P2251	00	P2251	O2 sensor bank 1 sensor 1	—	2	×	A + B	DTC Description 
P2252	00	P2252	O2 sensor bank 1 sensor 1	—	2	×	A + B	DTC Description 
P2253	00	P2253	O2 sensor bank 1 sensor 1	—	2	×	A + B	DTC Description 
P2270	00	P2270	O2 sensor signal bank 1 sensor 2	×	2	×	A + B	DTC Description 
P2271	00	P2271	O2 sensor signal bank 1 sensor 2	×	2	×	A	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2							
								
P2297	00	P2297	O2 SENSOR 1 B1	×	2	×	A	DTC Description 
P2413	00	P2413	EGR SYSTEM	—	2	×	A + B	DTC Description 
P2610	00	P2610	ECM/PCM INTERNAL ENG OFF TIMER	—	2	×	A + B	DTC Description 
P2614	00	P2614	A camshaft posi signal B1	—	2	×	A + B	DTC Description 
P2615	00	P2615	A camshaft posi signal B1	—	2	×	A + B	DTC Description 
P2616	00	P2616	A camshaft posi signal B1	—	2	×	A + B	DTC Description 
P2617	00	P2617	Crankshaft position signal	—	2	×	A + B	DTC Description 
P2618	00	P2618	Crankshaft position signal	—	2	×	A + B	DTC Description 
P2619	00	P2619	Crankshaft position signal	—	2	×	A + B	DTC Description

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST *2						
								
P2A01	00	P2A01	O2 sensor bank 1 sensor 2	×	2	×	A + B	DTC Description 
P2B95	00	P2B95	COLD START CONTROL	—	2	×	A + B	DTC Description 
P2B96	00	P2B96	Injection pulse	—	2	×	A + B	DTC Description 
P34AC	00	P34AC	A camshaft posi actuator posi sens B1	—	2	×	A + B	DTC Description 
P34AD	00	P34AD	A camshaft posi actuator posi sens B1	—	2	×	A + B	DTC Description 
P34AE	00	P34AE	A camshaft posi actuator posi sens B1	—	2	×	A + B	DTC Description 
P34AF	00	P34AF	A camshaft posi actuator posi sens B1	—	2	×	A + B	DTC Description 
P34C8	00	P34C8	Camshaft position control module	—	2	×	A + B	DTC Description 

*1: 1st trip DTC No. is the same as DTC No.

*2: This number is prescribed by SAE J1979/ ISO 15031-5.

*3: Refer to Description [Description](#) .

*4: This DTC is not displayed in “SRT STATUS” function on M.U.T.-III SE.

*5: When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

Network-DTC

×:Applicable —: Not applicable

DTC *1			Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST *2						
U2118	87	U2118	CAN comm err (Keyless operation key)	—	2	—	—	DTC Description 
U2148	87	U2148	CAN comm err (brake control unit)	—	2	—	—	DTC Description 
U214A	87	U214A	CAN comm err (AWD/4WD)	—	2	—	—	DTC Description 
U214E	87	U214E	CAN comm err (combination meter)	—	2	—	—	DTC Description 
U214F	87	U214F	CAN comm err (BCM)	—	2	—	—	DTC Description 
U2150	87	U2150	CAN comm err (AIRBAG)	—	2	—	—	DTC Description 
U2152	87	U2152	CAN comm err (ADAS control unit)	—	2	—	—	DTC Description 

DTC *1		Items (M.U.T.-III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE	GST *2						
U215B	87	U215B	CAN comm err (IPDM E/R)	—	2	—	DTC Description 
U2165	87	U2165	CAN comm err (sonar)	—	2	—	DTC Description 
U2241	87	U2241	CAN comm err (TCM)	—	2	—	DTC Description 
U2248	87	U2248	CAN comm err (brake control unit)	—	2	—	DTC Description 
U2252	87	U2252	CAN comm err (ADAS control unit)	—	2	—	DTC Description 
U2259	87	U2259	CAN comm err (steering control unit)	—	2	—	DTC Description 
U226B	87	U226B	CAN comm err (front camera)	—	2	—	DTC Description 
U2276	87	U2276	CAN comm err (CCM)	—	2	—	DTC Description 

*1: 1st trip DTC No. is the same as DTC No.

*2: This number is prescribed by SAE J1979/ ISO 15031-5.

*3: Refer to Description [Description](#) .

MAC-DTC

×:Applicable —: Not applicable

DTC *1			Items (M.U.T.- III SE screen terms)	SRT code	Trip	MIL	Permanent DTC group *3	Reference page
M.U.T.-III SE		GST*2						
U1327	52	U1327	MAC Key update	—	1	—	—	DTC Description 
U1327	54	U1327	MAC Key update	—	1	—	—	DTC Description 
U214F	57	U214F	CAN comm err (BCM)	—	2	—	—	DTC Description 
U2152	57	U2152	CAN comm err (ADAS control unit)	—	2	—	—	DTC Description 
U2165	57	U2165	CAN comm err (sonar)	—	2	—	—	DTC Description 
U2176	57	U2176	CAN comm err (CCM)	—	2	—	—	DTC Description 

*1: 1st trip DTC No. is the same as DTC No.

*2: This number is prescribed by SAE J1979/ ISO 15031-5.

*3: Refer to Description [Description](#) .