

[\[Previous\]](#) [\[Next\]](#)

# Component Inspection

## 1.CHECK INTAKE MANIFOLD TUNING VALVE ACTUATOR

1. Turn ignition switch OFF.
2. Disconnect intake manifold tuning valve actuator harness connector.
3. Check the resistance between intake manifold tuning valve actuator terminals as per the following.

Intake manifold tuning valve actuator		Resistance (Approx.)
+	-	
Terminals		
1	2	3 - 8 Ω [at 25°C (77°F)]

**Q. Is the inspection result normal?**

**Yes**

INSPECTION END

**No**

Replace intake manifold assembly. Refer to [Removal and Installation](#) .