

 

Work Procedure

1.START

1. Turn ignition switch ON.
2. Check information display of the combination meter.

Q. Is Distance to Engine Oil Change displayed?

Yes 

No 

2.SELECT OIL CONTROL SYSTEM MODE

Push the Display next switch and select oil control system mode.



3.RESET ENGINE OIL DATA

1. Press and hold the Display Next switch at least 1 second while Distance to Engine Oil Change is displayed.
2. Stop pressing the Display Next switch, and a few seconds later, check that the value of Distance to Engine Oil Change is reset.

: END