

[\[Previous\]](#) [\[Next\]](#)

DTC Index

note

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PASS: A malfunction was detected in the past.

Self Diagnostic Result

×: Applicable

DTC No.	M.U.T.-III SE display		Fail-safe	Reference
B120E-42	IPDM E/R	[MEMORY ERROR]	—	DTC Description 
B120E-55	IPDM E/R	[NOT CONFIGURED]	—	DTC Description 
B121A-11	FR FOG LIGHT LH PWR SPLY CIRC	[CIRCUIT SHORT TO GROUND]	×	DTC Description 
B1256-11	FR FOG LIGHT RH PWR SPLY CIRC	[CIRCUIT SHORT TO GROUND]	×	DTC Description 
B12A3-72	Fuel pump Off circuit	[ACTUATOR STUCK OPEN]	—	DTC Description 
B12A4-81	Battery current sensor	[INVALID SERIAL DATA RECEIVED]	×	DTC Description 
B12A4-92	Battery current sensor	[PFM/INCORRECT OPERATN]	×	DTC Description 
B12A4-94	Battery current sensor	[UNEXPECTED OPERATION]	—	DTC Description 
B20A1-16	IPDM E/R	[CIRC VOLT BELOW THRESHOLD]	—	DTC Description 
B20A1-72	IPDM E/R	[ACTUATOR STUCK OPEN]	—	DTC Description 
B20A2-87	Headlight (RH) LIN communication	[MISSING MESSAGE]	×	DTC Description 
B20A4-87	Headlight (LH) LIN communication	[MISSING MESSAGE]	×	DTC Description 
B20C7-11	A/C clutch	[CIRCUIT SHORT TO GROUND]	×	DTC Description 
B20C7-15	A/C clutch	[CIRC SHORT TO BATT OR OPEN]	×	DTC Description 
B20C8-14	Compressor (ECV)	[CIRC SHORT TO GRND OR OPEN]	×	DTC Description 
B20D4-11	TAIL LIGHT LH PWR SPLY CIRC	[CIRCUIT SHORT TO GROUND]	×	DTC Description 
B20DD-73	IGN RELAY ON CIRC	[ACTUATOR STUCK CLOSED]	—	DTC Description 
B20DE-72	IGN RELAY OFF CIRC	[ACTUATOR STUCK OPEN]	—	DTC Description 

DTC No.	M.U.T.-III SE display		Fail-safe	Reference
B20E2-96	LED HEADLIGHT RH	[CMPNENT INTERNAL MLFNCTN]	×	DTC Description 
B20E3-96	LED HEADLIGHT LH	[CMPNENT INTERNAL MLFNCTN]	×	DTC Description 

Network-DTC

×: Applicable

DTC No.	M.U.T.-III SE display		Fail-safe	Reference
U0073-00	Control module comm Bus A Off	[NO SUBTYPE INFO]	×	DTC Description 
U2140-87	CAN comm err (ECM)	[MISSING MESSAGE]	×	DTC Description 
U2141-87	CAN comm err (TCM)	[MISSING MESSAGE]	—	DTC Description 
U2148-87	CAN comm err (brake control unit)	[MISSING MESSAGE]	—	DTC Description 
U214E-87	CAN comm err (combination meter)	[MISSING MESSAGE]	—	DTC Description 
U214F-87	CAN comm err (BCM)	[MISSING MESSAGE]	×	DTC Description 
U2153-87	CAN comm err (HVAC)	[MISSING MESSAGE]	—	DTC Description 
U2159-87	CAN comm err (steering control unit)	[MISSING MESSAGE]	—	DTC Description 
U2176-87	CAN comm err (CCM/ST angle sensor)	[MISSING MESSAGE]	—	DTC Description 