



Disassembly and Assembly

DISASSEMBLY


1. Remove door mirror assembly. Refer to [Removal and Installation](#) .
2. Remove glass mirror. Refer to [Removal and Installation](#) .
3. Remove door mirror cover. Refer to [Removal and Installation](#) .
4. Remove door mirror finisher fixing screws 
 - With side turn signal light

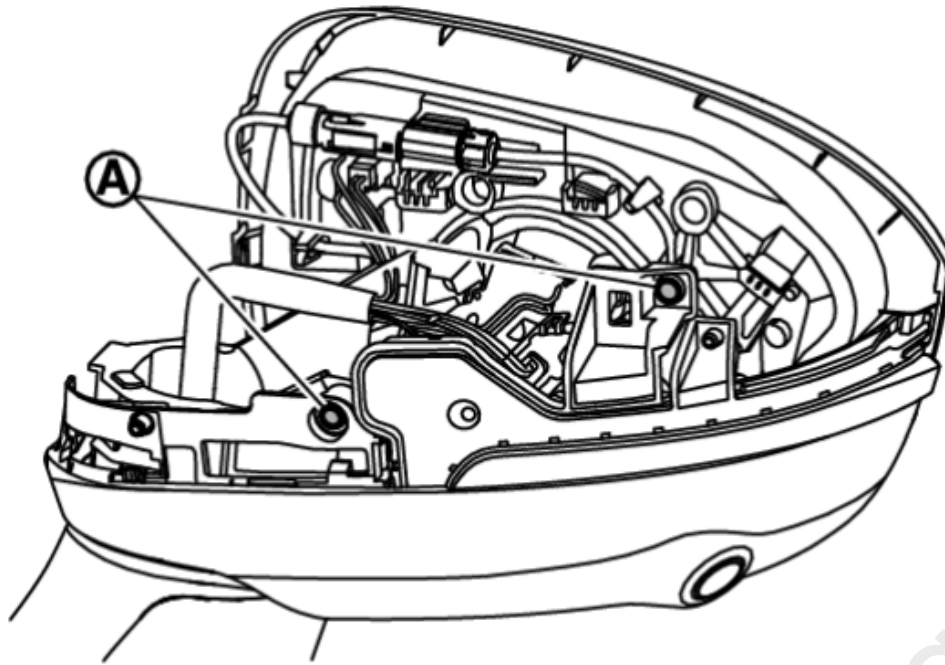


- Without side turn signal light

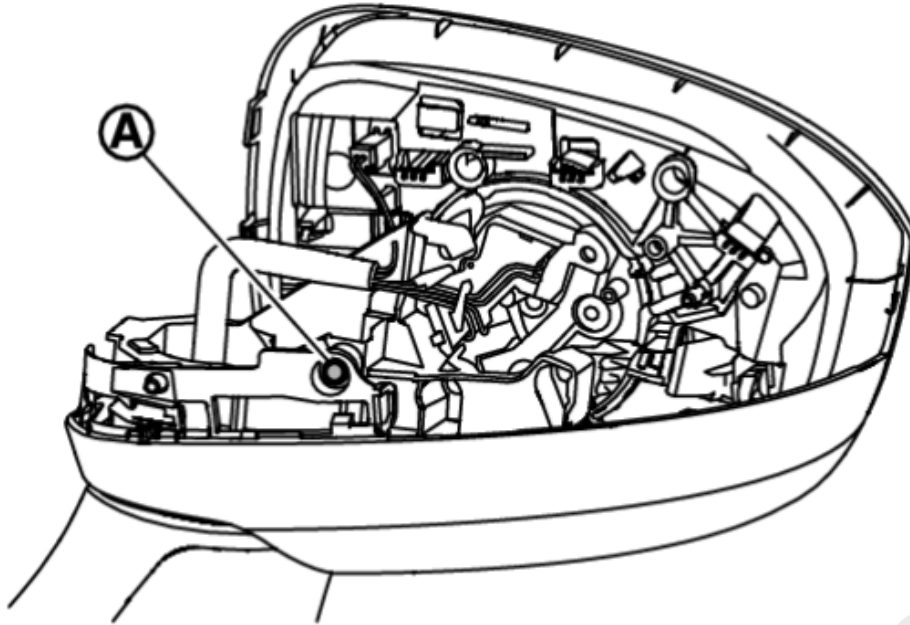


5. Disengage door mirror finisher fixing pawls, and then remove door mirror finisher.

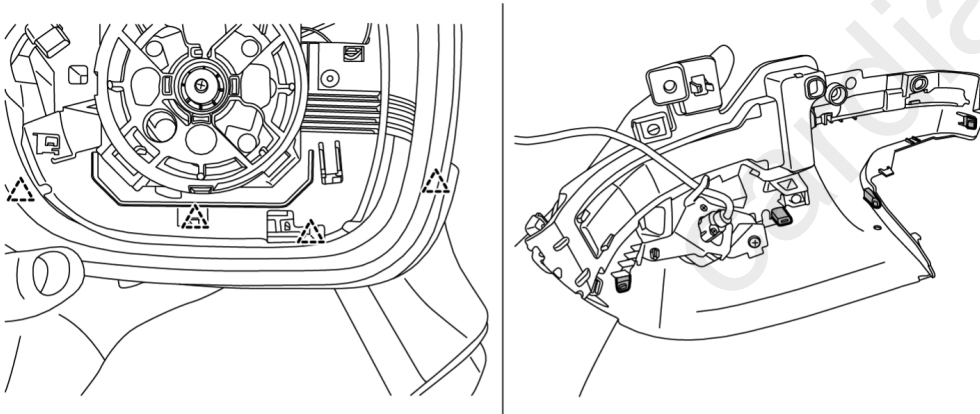


6. Disconnect side camera harness connector ① (with side camera).

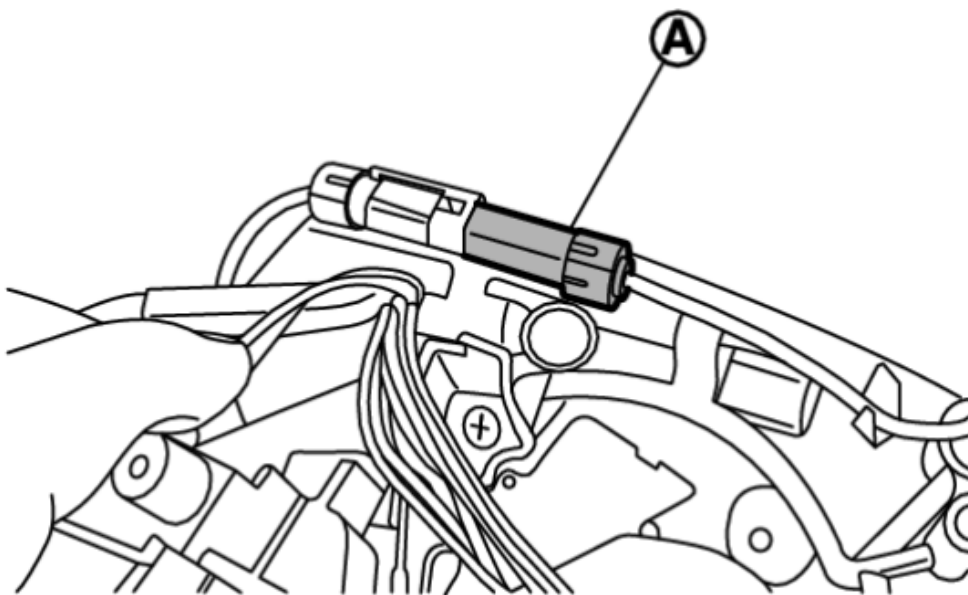

7. Remove side camera fixing screw ①, and then remove side camera (with side camera).

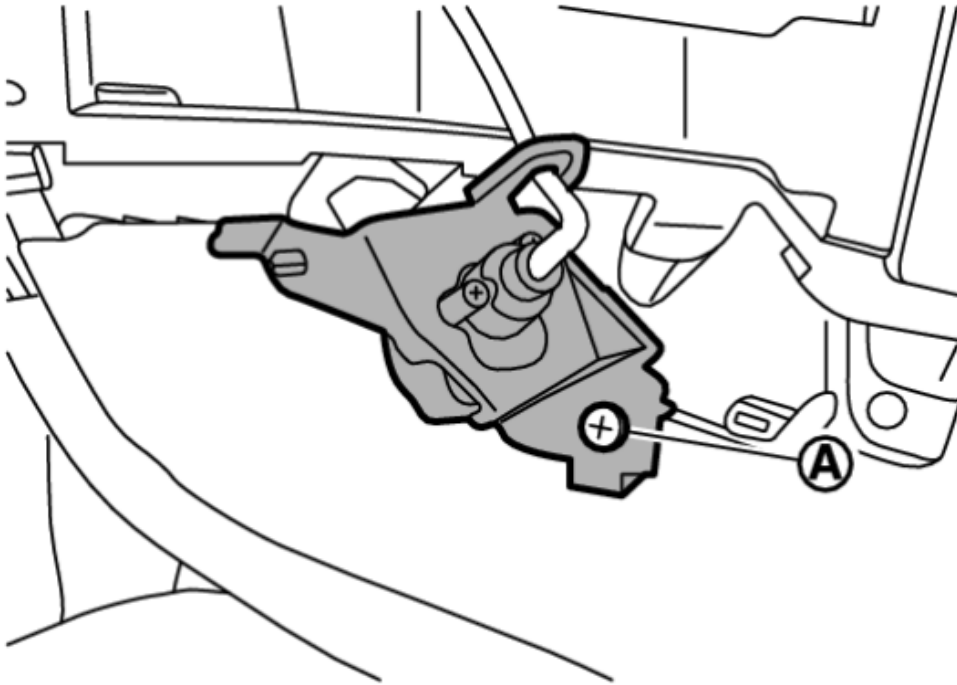

8. Remove side turn signal light (with side turn signal light). Refer to [Removal and Installation](#) ➡.
9. Remove door mirror actuator fixing screws ①.

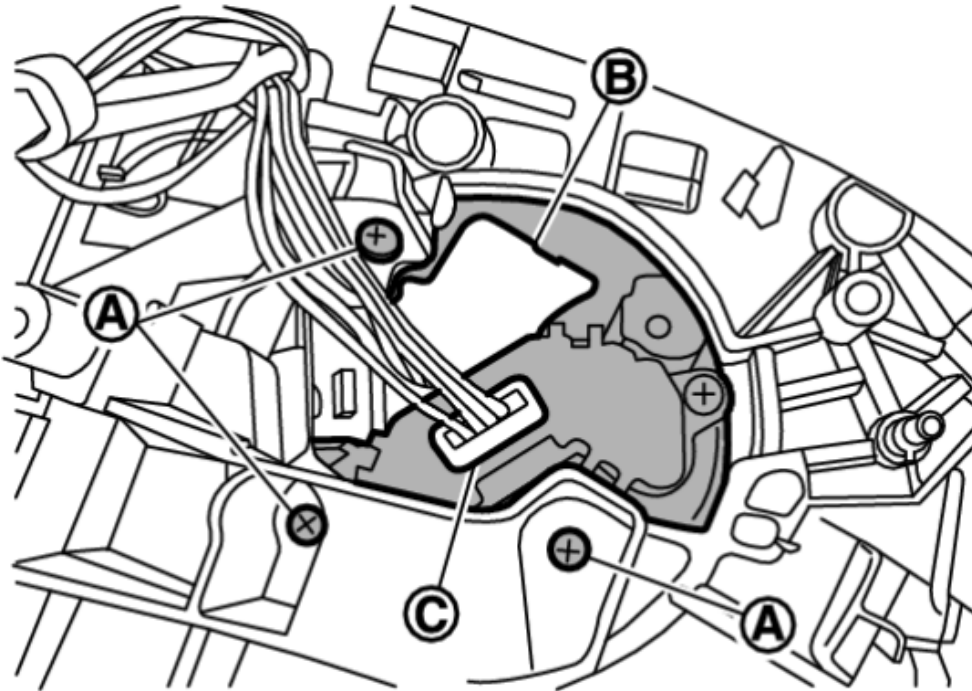

10. Disconnect harness connectors ② and ③, and then remove door mirror actuator.

ASSEMBLY


Note the following item, and then assemble in the reverse order of disassembly.

caution


Perform side camera image calibration (with side camera). Refer to [Work Procedure](#) ➡.

Exploded View

SEC. 963

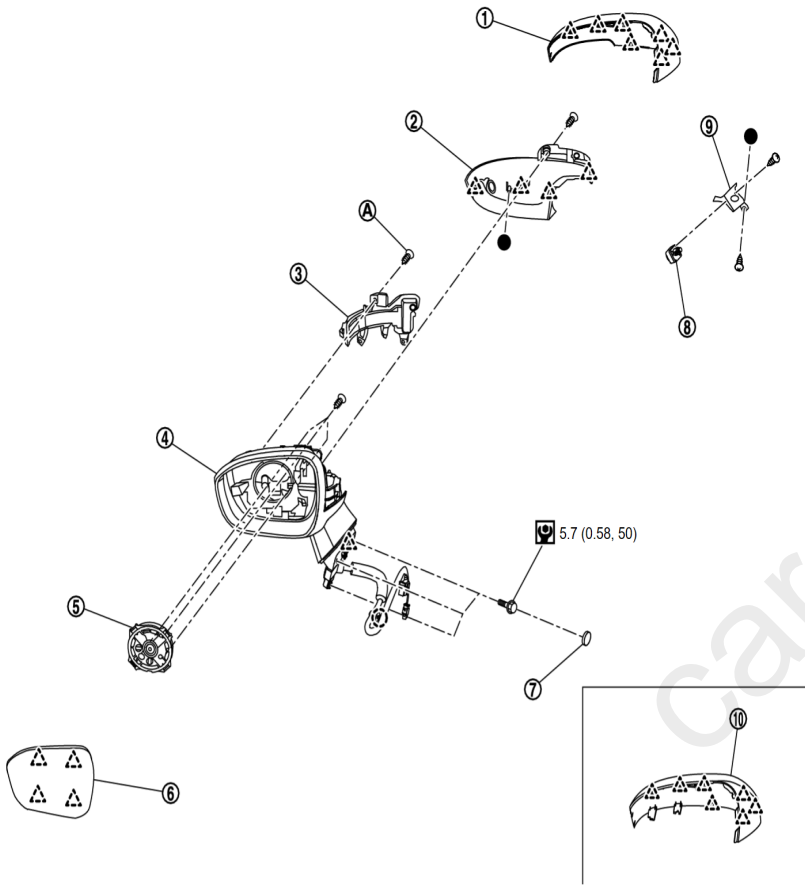

①	Door mirror cover (with side turn signal light)	②	Door mirror finisher	③	Side turn signal light (with side turn signal light)
④	Door mirror base	⑤	Door mirror actuator	⑥	Glass mirror
⑦	Blind cap	⑧	Side camera (with side camera)	⑨	Side camera bracket (with side camera)
⑩	Door mirror cover (without side turn signal light)				
A	Screw (with side turn signal light)				
○	: Clip				
△	: Pawl				
⊙	: N·m (kg·m, in-lb)				
●	: Indicated that the part is connected at points with same symbol in actual vehicle.				

 


Removal and Installation


REMOVAL

caution	Never damage the front door panel.
----------------	------------------------------------


1. Remove front door finisher. Refer to [Removal and Installation](#) .
2. Disconnect door mirror assembly harness connector ①.

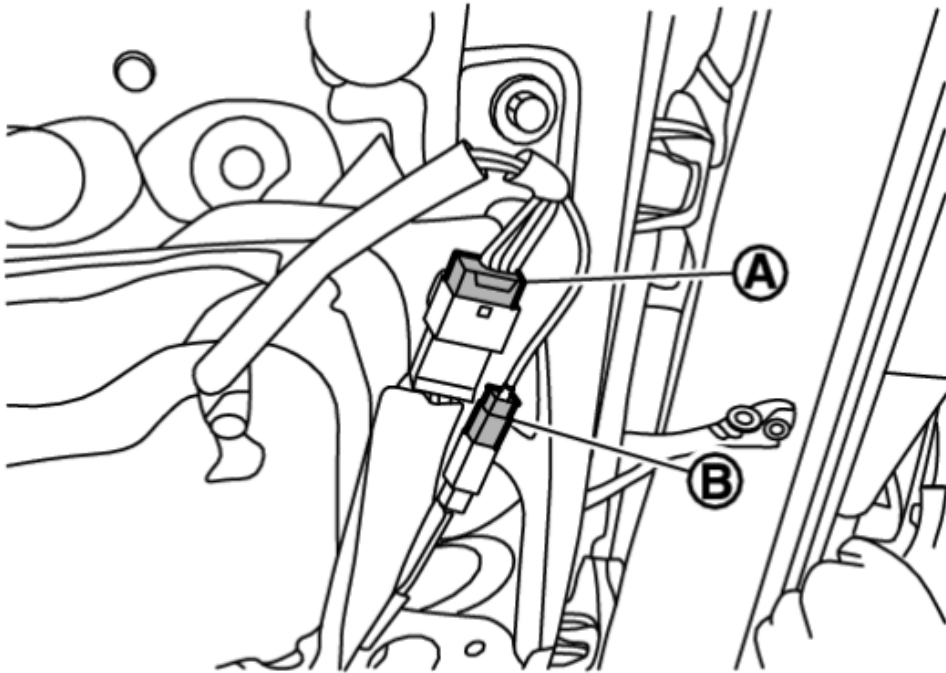


3. Disconnect side camera harness connector ② (with side camera).
4. Remove front door sealing screen ①. Refer to [Removal and Installation](#) ➡.

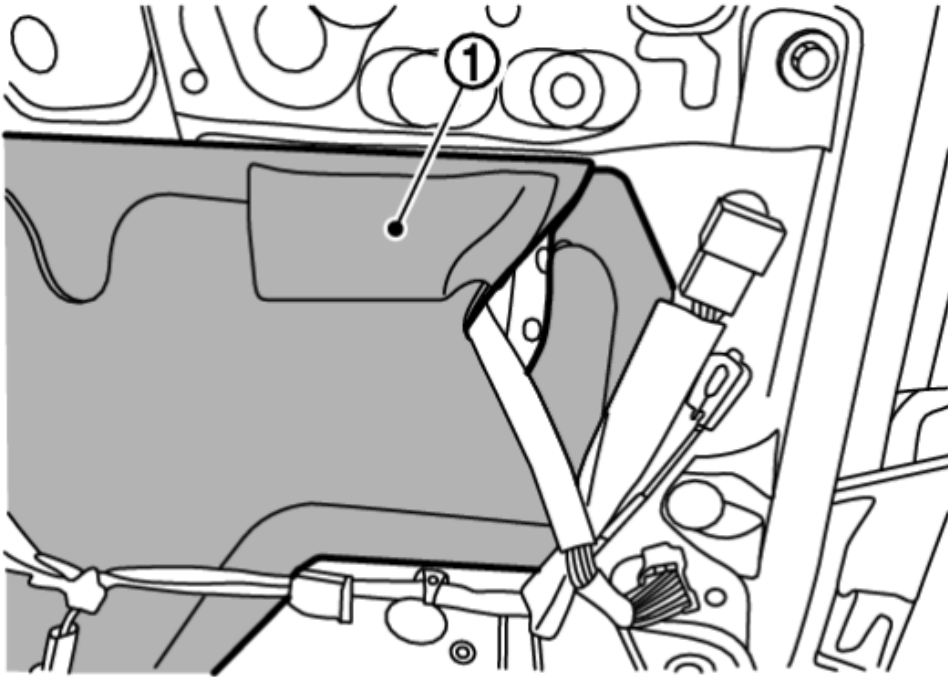


5. Remove harness clip ①.

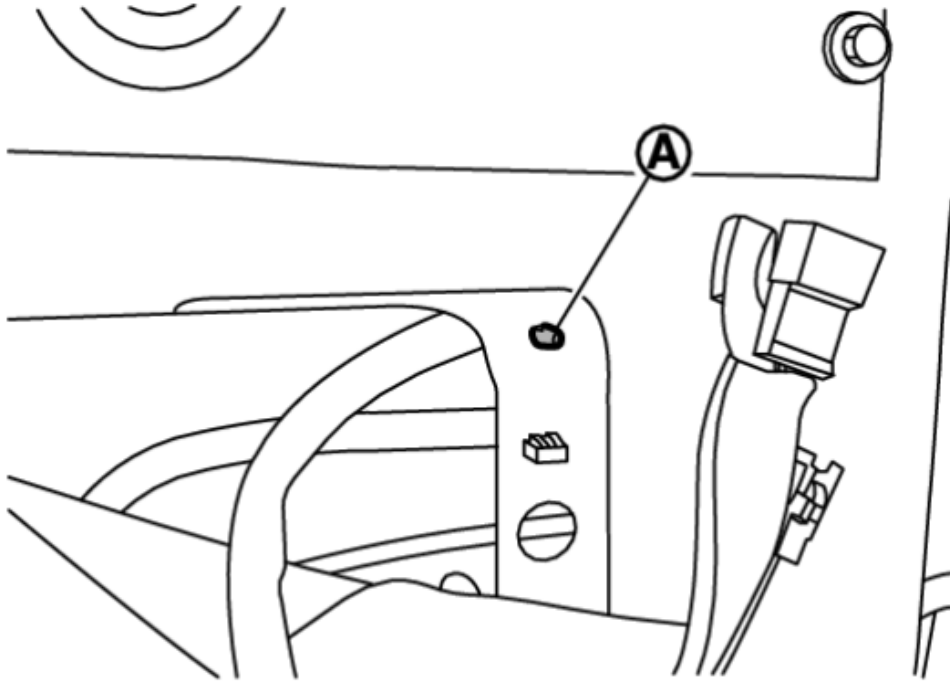


6. Remove blind cap ①.

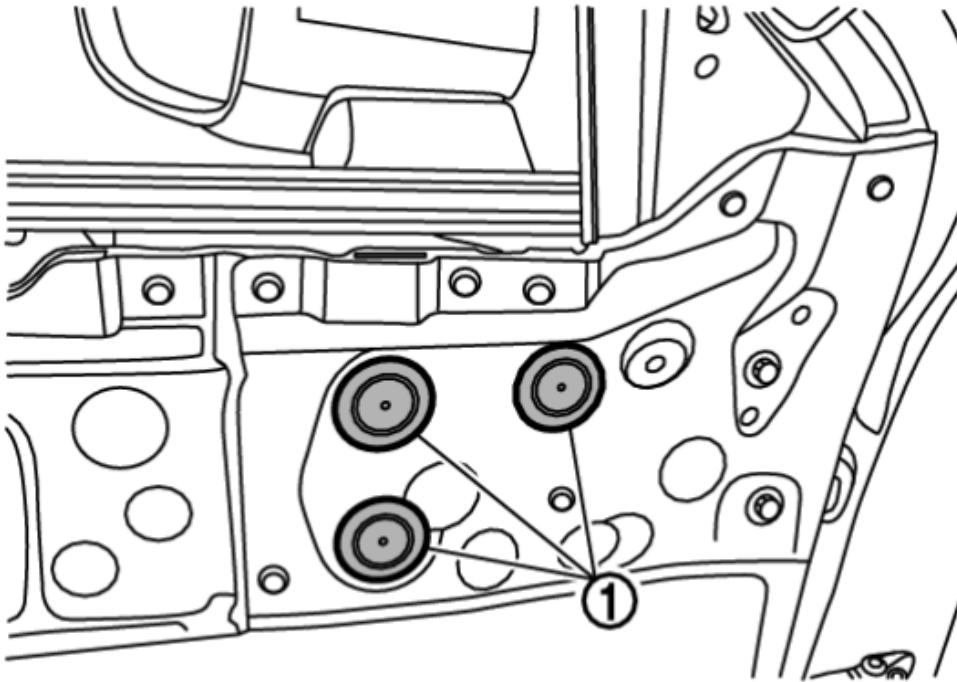

7. Remove door mirror assembly mounting bolts ①.

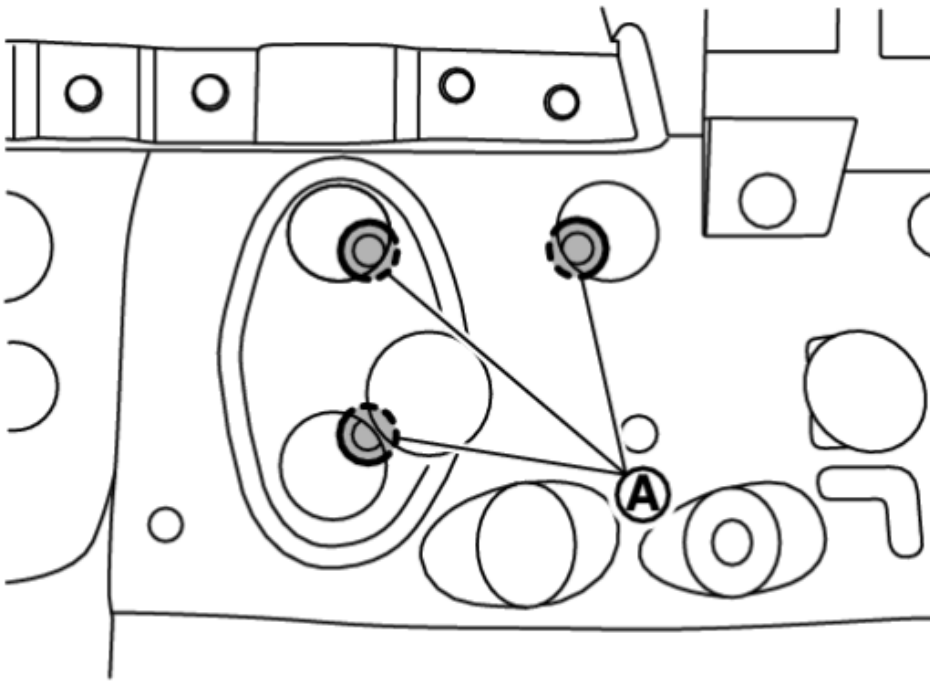

8. Disengage door mirror assembly fixing pawl, and then remove door mirror assembly.

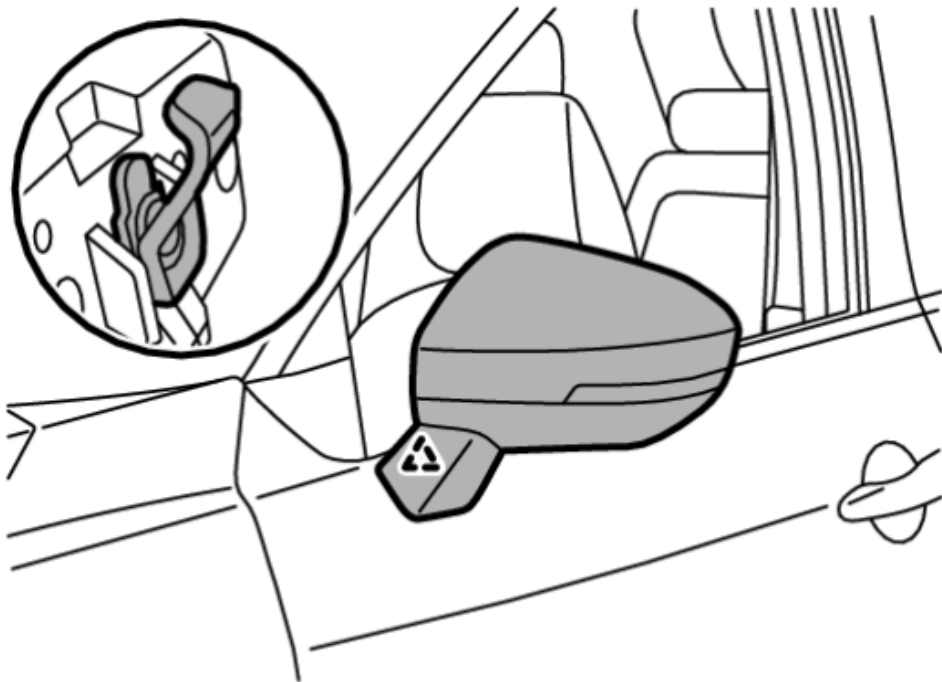

INSTALLATION

Note the following item, and then install in the reverse order of removal.


caution

Perform side camera image calibration (with side camera). Refer to [Work Procedure](#) .


Removal and Installation

REMOVAL

1. Place glass mirror inward.
2. Apply protective tapes (A) on the part to protect it from damage.

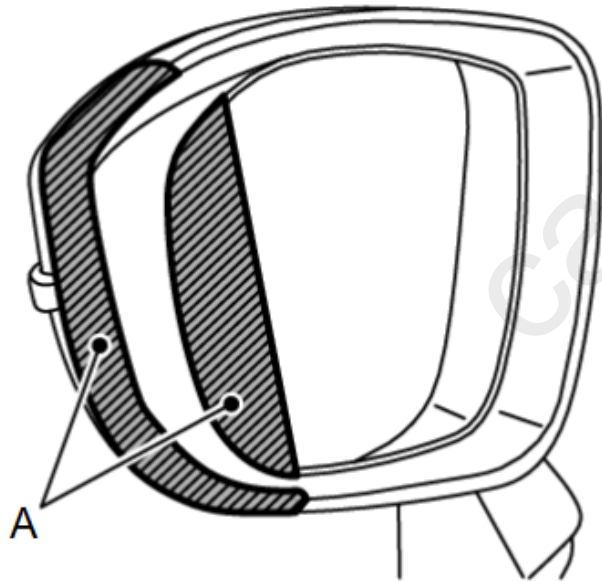


3. Insert remover tool (A) into the recess at outside between glass mirror and door mirror actuator, and then disengage glass mirror fixing pawls.

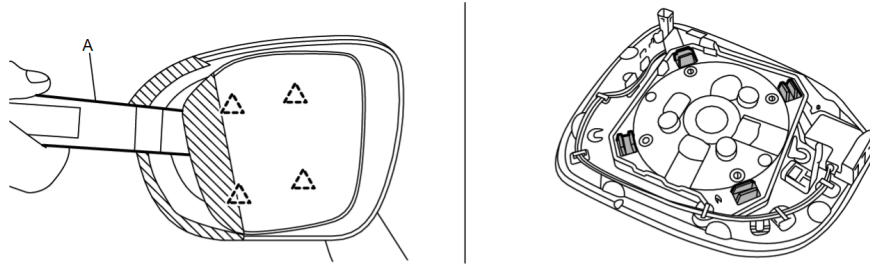

caution Remove the fixing pawls slowly so they are not damaged.

 : Pawl

4. Disconnect harness connector ① and ②.

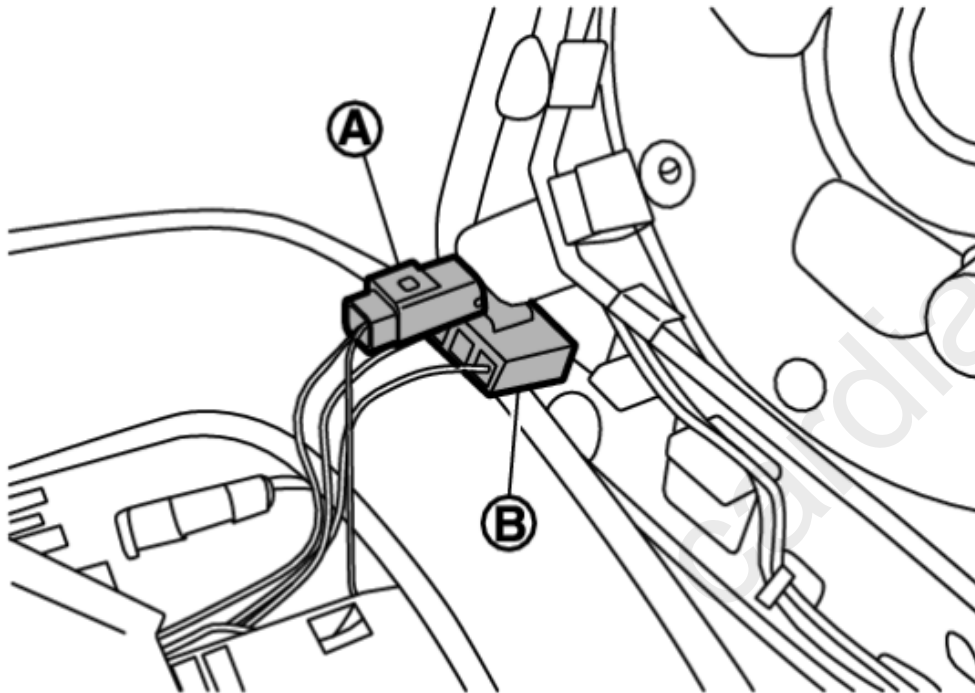

5. Remove glass mirror.

INSTALLATION

Note the following item, and then install in the reverse order of removal.

caution	After installation, visually check that fixing pawls are securely engaged.
----------------	--

cardiagn.com