


[!\[\]\(919a2cb85b99741a73c0c31a427236a8_img.jpg\) \[Previous\]](#) [!\[\]\(c9cd5a1c35167a83f09a35036fe5dcbd_img.jpg\) \[Next\]](#)


Disassembly and Assembly

DISASSEMBLY


1. Remove door mirror assembly. Refer to [Removal and Installation](#) .
2. Remove glass mirror. Refer to [Removal and Installation](#) .
3. Remove door mirror cover. Refer to [Removal and Installation](#) .
4. Remove door mirror finisher fixing screws ④.
 - With side turn signal light

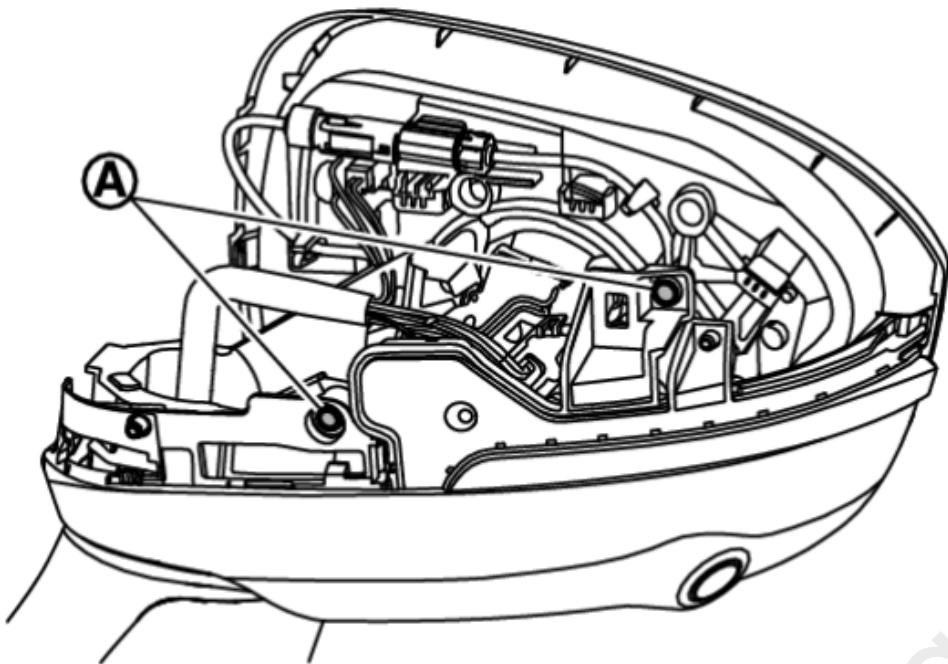


- Without side turn signal light

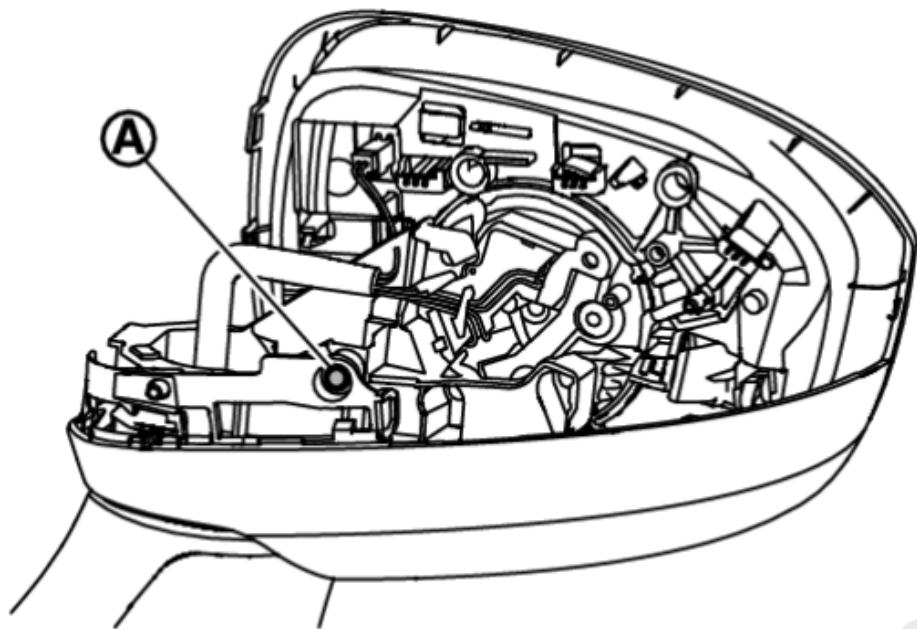


5. Disengage door mirror finisher fixing pawls, and then remove door mirror finisher.

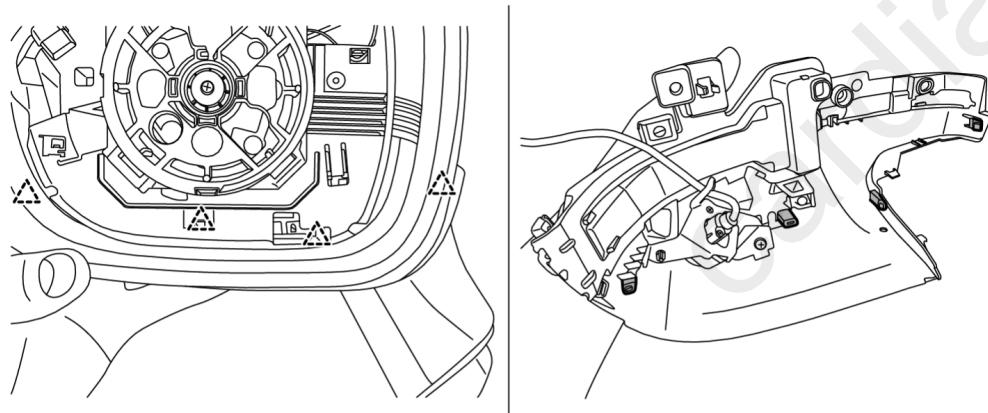


6. Disconnect side camera harness connector A (with side camera).

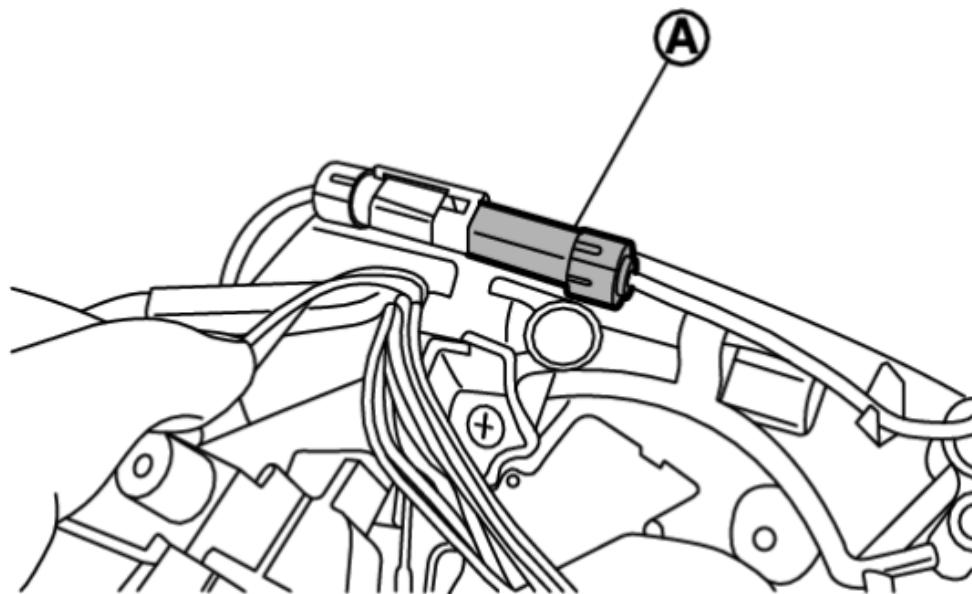

7. Remove side camera fixing screw Ⓐ, and then remove side camera (with side camera).

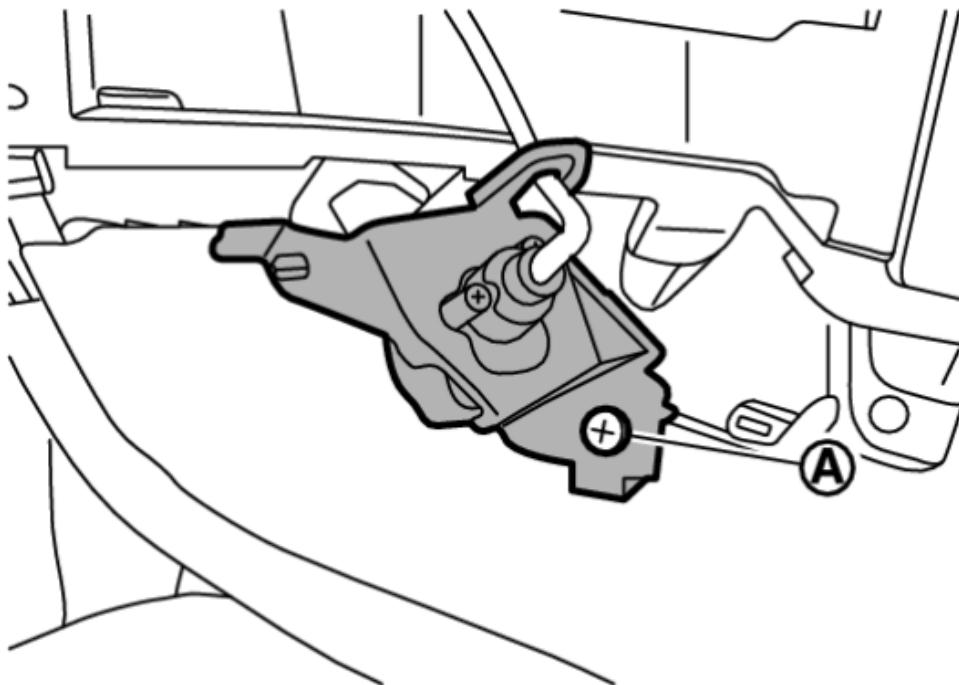

8. Remove side turn signal light (with side turn signal light). Refer to [Removal and Installation](#) .
9. Remove door mirror actuator fixing screws **(A)**.

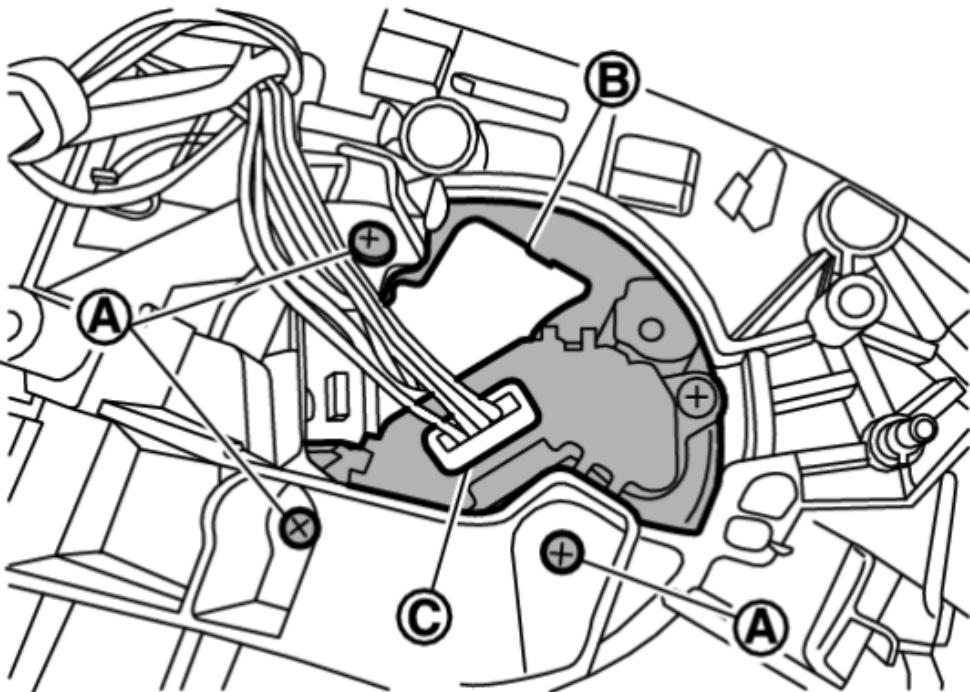

10. Disconnect harness connectors **B** and **C**, and then remove door mirror actuator.

ASSEMBLY

Note the following item, and then assemble in the reverse order of disassembly.

caution

Perform side camera image calibration (with side camera). Refer to [Work Procedure](#) ➔.