




# Removal and Installation

## REMOVAL

1. Place glass mirror inward.
2. Apply protective tapes (A) on the part to protect it from damage.

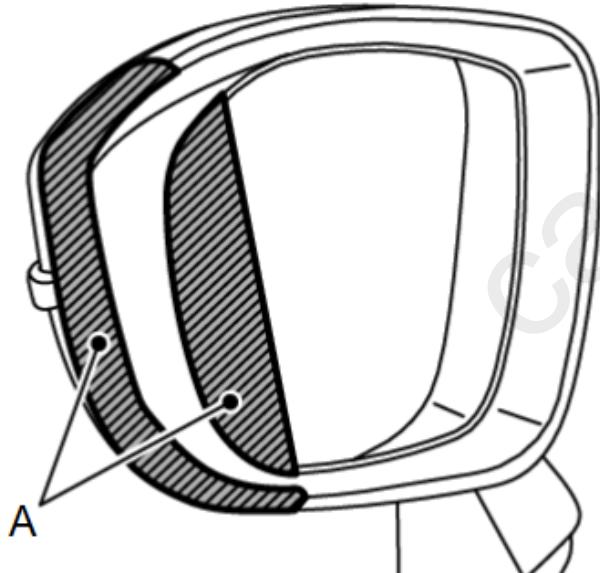


3. Insert remover tool (A) into the recess at outside between glass mirror and door mirror actuator, and then disengage glass mirror fixing pawls.

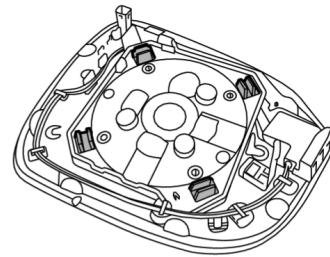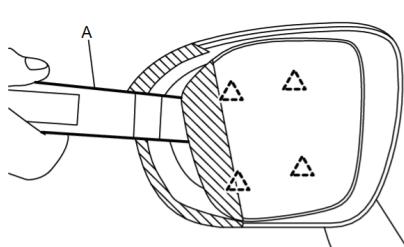

**caution** Remove the fixing pawls slowly so they are not damaged.

: Pawl

4. Disconnect harness connector **A** and **B**.

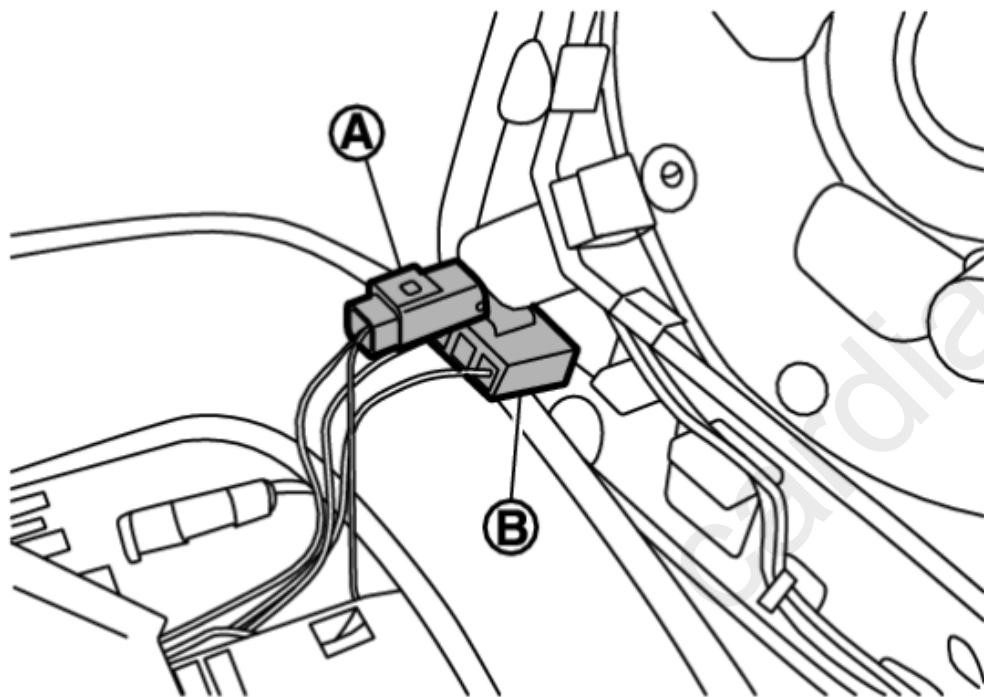

5. Remove glass mirror.

## INSTALLATION

Note the following item, and then install in the reverse order of removal.

**caution** After installation, visually check that fixing pawls are securely engaged.