


Component Parts Location

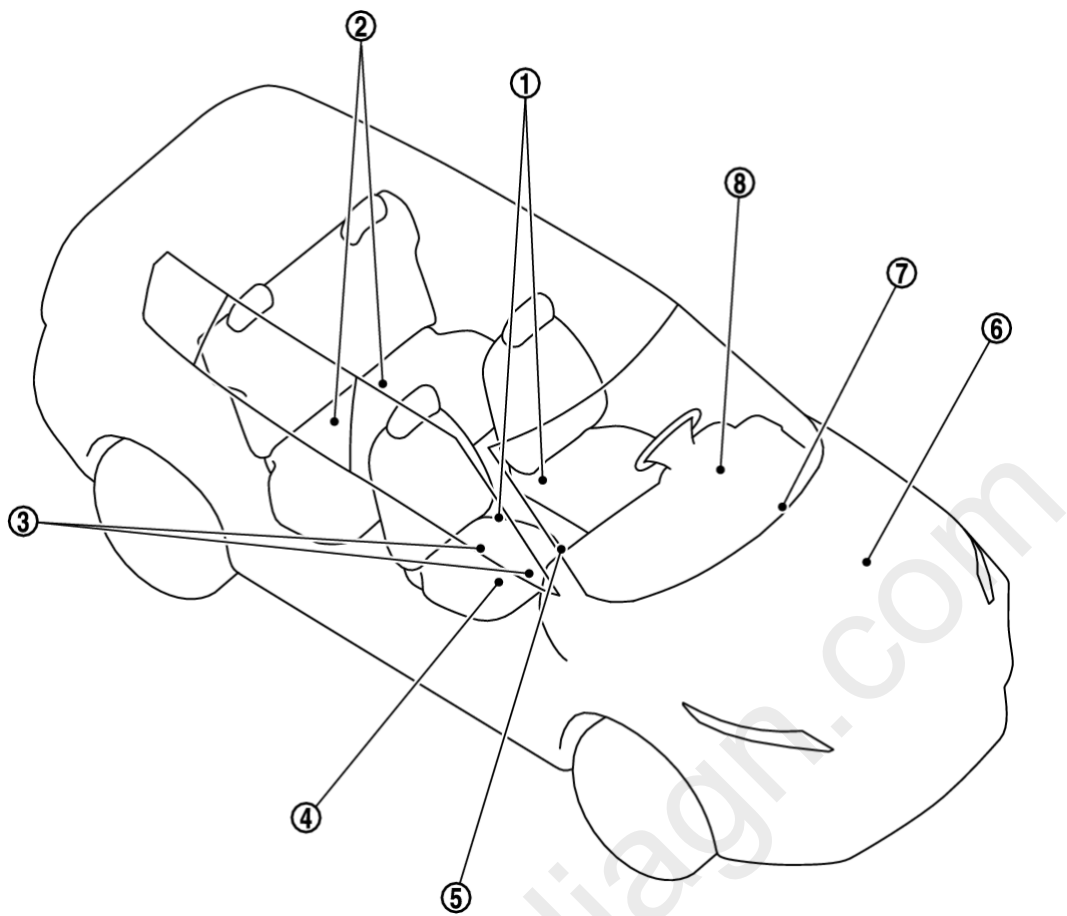

①	Front seat belt buckle switch	②	Rear seat belt buckle switch	③	Occupant detection system sensor
④	Occupant detection system control unit	⑤	Air bag diagnosis sensor unit Refer to Component Parts Location ➡	⑥	ECM Refer to Component Parts Location ➡
⑦	BCM Refer to Component Parts Location ➡	⑧	Combination meter		