


[\[Previous\]](#)
[\[Next\]](#)

Component Parts Location

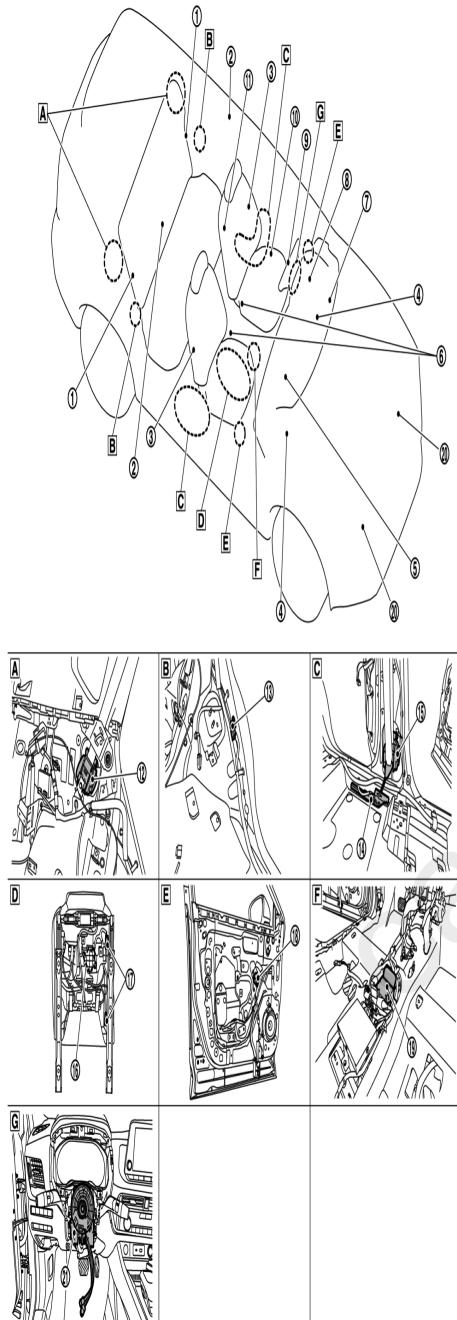

① Rear side air bag module	② Curtain air bag module	③ Front side air bag module
④ Knee air bag module	⑤ Passenger air bag module	⑥ Front seat belt buckle switch
BCM Component Parts Location	⑧ Combination meter (SRS air bag warning light)	⑨ Driver air bag module
⑦	⑩ Front passenger air bag OFF indicator	⑪ Front center air bag module
⑬ C-pillar satellite sensor	⑭ Lap pre-tensioner	⑮ Front seat belt pre-tensioner
⑯ Occupant detection system control unit	⑯ Occupant detection system sensor	⑯ Front door satellite sensor
⑯ Air bag diagnosis sensor unit	⑯ Crash zone sensor	⑯ Spiral cable
View with luggage side lower finisher removed	View with luggage side lower finisher removed	View with floor carpet removed
Backside of passenger seat cushion	View with front door finisher removed	View with center console assembly removed
G Radiator core support upper	H View with steering wheel removed	