

[\[Previous\]](#) [\[Next\]](#)

DTC Index

Self Diagnostic Result

DTC	Diagnostic item	SRS air bag warning light	Reference
B0001-09	DRIVER AIRBAG MODULE	ON	DTC Description 
B0001-11	DRIVER AIRBAG MODULE	ON	DTC Description 
B0001-12	DRIVER AIRBAG MODULE	ON	DTC Description 
B0001-13	DRIVER AIRBAG MODULE	ON	DTC Description 
B0001-1A	DRIVER AIRBAG MODULE	ON	DTC Description 
B0001-1B	DRIVER AIRBAG MODULE	ON	DTC Description 
B0001-1E	DRIVER AIRBAG MODULE	ON	DTC Description 
B0001-55	DRIVER AIRBAG MODULE	ON	DTC Description 
B0002-09	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0002-11	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0002-12	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0002-13	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0002-1A	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0002-1B	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0002-1E	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0002-55	DRIVER AIRBAG MODULE 2	ON	DTC Description 
B0010-09	ASSIST A/B MODULE	ON	DTC Description 
B0010-11	ASSIST A/B MODULE	ON	DTC Description 
B0010-12	ASSIST A/B MODULE	ON	DTC Description 
B0010-13	ASSIST A/B MODULE	ON	DTC Description 
B0010-1A	ASSIST A/B MODULE	ON	DTC Description 
B0010-1B	ASSIST A/B MODULE	ON	DTC Description 
B0010-55	ASSIST A/B MODULE	ON	DTC Description 
B0011-09	ASSIST A/B MODULE 2	ON	DTC Description 

DTC	Diagnostic item	SRS air bag warning light	Reference
B0011-11	ASSIST A/B MODULE 2	ON	DTC Description 
B0011-12	ASSIST A/B MODULE 2	ON	DTC Description 
B0011-13	ASSIST A/B MODULE 2	ON	DTC Description 
B0011-1A	ASSIST A/B MODULE 2	ON	DTC Description 
B0011-1B	ASSIST A/B MODULE 2	ON	DTC Description 
B0011-55	ASSIST A/B MODULE 2	ON	DTC Description 
B0012-55	Passenger air bag module 3	ON	DTC Description 
B0020-09	SIDE A/B MODULE LH	ON	DTC Description 
B0020-11	SIDE A/B MODULE LH	ON	DTC Description 
B0020-12	SIDE A/B MODULE LH	ON	DTC Description 
B0020-13	SIDE A/B MODULE LH	ON	DTC Description 
B0020-1A	SIDE A/B MODULE LH	ON	DTC Description 
B0020-1B	SIDE A/B MODULE LH	ON	DTC Description 
B0020-55	SIDE A/B MODULE LH	ON	DTC Description 
B0021-09	CURTAIN A/B MODULE LH	ON	DTC Description 
B0021-11	CURTAIN A/B MODULE LH	ON	DTC Description 
B0021-12	CURTAIN A/B MODULE LH	ON	DTC Description 
B0021-13	CURTAIN A/B MODULE LH	ON	DTC Description 
B0021-1A	CURTAIN A/B MODULE LH	ON	DTC Description 
B0021-1B	CURTAIN A/B MODULE LH	ON	DTC Description 
B0021-55	CURTAIN A/B MODULE LH	ON	DTC Description 
B0028-09	SIDE A/B MODULE RH	ON	DTC Description 
B0028-11	SIDE A/B MODULE RH	ON	DTC Description 
B0028-12	SIDE A/B MODULE RH	ON	DTC Description 
B0028-13	SIDE A/B MODULE RH	ON	DTC Description 
B0028-1A	SIDE A/B MODULE RH	ON	DTC Description 
B0028-1B	SIDE A/B MODULE RH	ON	DTC Description 
B0028-55	SIDE A/B MODULE RH	ON	DTC Description 
B0029-09	CURTAIN A/B MODULE RH	ON	DTC Description 

DTC	Diagnostic item	SRS air bag warning light	Reference
B0029-11	CURTAIN A/B MODULE RH	ON	DTC Description 
B0029-12	CURTAIN A/B MODULE RH	ON	DTC Description 
B0029-13	CURTAIN A/B MODULE RH	ON	DTC Description 
B0029-1A	CURTAIN A/B MODULE RH	ON	DTC Description 
B0029-1B	CURTAIN A/B MODULE RH	ON	DTC Description 
B0029-55	CURTAIN A/B MODULE RH	ON	DTC Description 
B0030-09	REAR SIDE A/B MODULE LH	ON	DTC Description 
B0030-11	REAR SIDE A/B MODULE LH	ON	DTC Description 
B0030-12	REAR SIDE A/B MODULE LH	ON	DTC Description 
B0030-13	REAR SIDE A/B MODULE LH	ON	DTC Description 
B0030-1A	REAR SIDE A/B MODULE LH	ON	DTC Description 
B0030-1B	REAR SIDE A/B MODULE LH	ON	DTC Description 
B0030-55	REAR SIDE A/B MODULE LH	ON	DTC Description 
B0038-09	REAR SIDE A/B MODULE RH	ON	DTC Description 
B0038-11	REAR SIDE A/B MODULE RH	ON	DTC Description 
B0038-12	REAR SIDE A/B MODULE RH	ON	DTC Description 
B0038-13	REAR SIDE A/B MODULE RH	ON	DTC Description 
B0038-1A	REAR SIDE A/B MODULE RH	ON	DTC Description 
B0038-1B	REAR SIDE A/B MODULE RH	ON	DTC Description 
B0038-55	REAR SIDE A/B MODULE RH	ON	DTC Description 
B0052-11	Front seat belt buckle switch RH	ON	DTC Description 
B0052-12	Front seat belt buckle switch RH	ON	DTC Description 
B0052-13	Front seat belt buckle switch RH	ON	DTC Description 
B0052-29	Front seat belt buckle switch RH	ON	DTC Description 
B0052-2B	Front seat belt buckle switch RH	ON	DTC Description 
B0073-09	PRE-TEN REAR LH	ON	DTC Description 

DTC	Diagnostic item	SRS air bag warning light	Reference
B0073-11	PRE-TEN REAR LH	ON	DTC Description 
B0073-12	PRE-TEN REAR LH	ON	DTC Description 
B0073-13	PRE-TEN REAR LH	ON	DTC Description 
B0073-1A	PRE-TEN REAR LH	ON	DTC Description 
B0073-1B	PRE-TEN REAR LH	ON	DTC Description 
B0073-55	PRE-TEN REAR LH	ON	DTC Description 
B0075-09	PRE-TEN REAR RH	ON	DTC Description 
B0075-11	PRE-TEN REAR RH	ON	DTC Description 
B0075-12	PRE-TEN REAR RH	ON	DTC Description 
B0075-13	PRE-TEN REAR RH	ON	DTC Description 
B0075-1A	PRE-TEN REAR RH	ON	DTC Description 
B0075-1B	PRE-TEN REAR RH	ON	DTC Description 
B0075-55	PRE-TEN REAR RH	ON	DTC Description 
B0091-11	DOOR SATEL SENS LH	ON	DTC Description 
B0091-12	DOOR SATEL SENS LH	ON	DTC Description 
B0091-25	DOOR SATEL SENS LH	ON	DTC Description 
B0091-28	DOOR SATEL SENS LH	ON	DTC Description 
B0091-55	DOOR SATEL SENS LH	ON	DTC Description 
B0091-81	DOOR SATEL SENS LH	ON	DTC Description 
B0091-86	DOOR SATEL SENS LH	ON	DTC Description 
B0091-88	DOOR SATEL SENS LH	ON	DTC Description 
B0091-93	DOOR SATEL SENS LH	ON	DTC Description 
B0092-55	B-PILLAR SAT SEN LH	ON	DTC Description 
B0093-11	C-PILLAR SAT SEN LH	ON	DTC Description 
B0093-12	C-PILLAR SAT SEN LH	ON	DTC Description 
B0093-25	C-PILLAR SAT SEN LH	ON	DTC Description 
B0093-28	C-PILLAR SAT SEN LH	ON	DTC Description 
B0093-55	C-PILLAR SAT SEN LH	ON	DTC Description 
B0093-81	C-PILLAR SAT SEN LH	ON	DTC Description 

DTC	Diagnostic item	SRS air bag warning light	Reference
B0093-86	C-PILLAR SAT SEN LH	ON	DTC Description 
B0093-88	C-PILLAR SAT SEN LH	ON	DTC Description 
B0093-93	C-PILLAR SAT SEN LH	ON	DTC Description 
B0094-11	CRASH ZONE SENS	ON	DTC Description 
B0094-12	CRASH ZONE SENS	ON	DTC Description 
B0094-25	CRASH ZONE SENS	ON	DTC Description 
B0094-28	CRASH ZONE SENS	ON	DTC Description 
B0094-55	CRASH ZONE SENS	ON	DTC Description 
B0094-81	CRASH ZONE SENS	ON	DTC Description 
B0094-86	CRASH ZONE SENS	ON	DTC Description 
B0094-88	CRASH ZONE SENS	ON	DTC Description 
B0094-93	CRASH ZONE SENS	ON	DTC Description 
B0096-11	DOOR SATEL SENS RH	ON	DTC Description 
B0096-12	DOOR SATEL SENS RH	ON	DTC Description 
B0096-25	DOOR SATEL SENS RH	ON	DTC Description 
B0096-28	DOOR SATEL SENS RH	ON	DTC Description 
B0096-55	DOOR SATEL SENS RH	ON	DTC Description 
B0096-81	DOOR SATEL SENS RH	ON	DTC Description 
B0096-86	DOOR SATEL SENS RH	ON	DTC Description 
B0096-88	DOOR SATEL SENS RH	ON	DTC Description 
B0096-93	DOOR SATEL SENS RH	ON	DTC Description 
B0097-55	B-PILLAR SAT SEN RH	ON	DTC Description 
B0098-11	C-PILLAR SAT SEN RH	ON	DTC Description 
B0098-12	C-PILLAR SAT SEN RH	ON	DTC Description 
B0098-25	C-PILLAR SAT SEN RH	ON	DTC Description 
B0098-28	C-PILLAR SAT SEN RH	ON	DTC Description 
B0098-55	C-PILLAR SAT SEN RH	ON	DTC Description 
B0098-81	C-PILLAR SAT SEN RH	ON	DTC Description 
B0098-86	C-PILLAR SAT SEN RH	ON	DTC Description 

DTC	Diagnostic item	SRS air bag warning light	Reference
B0098-88	C-PILLAR SAT SEN RH	ON	DTC Description 
B0098-93	C-PILLAR SAT SEN RH	ON	DTC Description 
B00A0-02	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-04	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-09	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-22	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-83	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-86	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-87	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-88	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-8F	OCCUPANT SENS UNIT	ON	DTC Description 
B00A0-93	OCCUPANT SENS UNIT	ON	DTC Description 
B00D5-11	PASS A/B INDICATOR	ON	DTC Description 
B00D5-12	PASS A/B INDICATOR	ON	DTC Description 
B00D5-13	PASS A/B INDICATOR	ON	DTC Description 
B1000-49	Air bag diagnosis sensor unit	ON	DTC Description 
B1000-55	Air bag diagnosis sensor unit	ON	DTC Description 
B1001-09	Lap pre-tensioner LH	ON	DTC Description 
B1001-11	Lap pre-tensioner LH	ON	DTC Description 
B1001-12	Lap pre-tensioner LH	ON	DTC Description 
B1001-13	Lap pre-tensioner LH	ON	DTC Description 
B1001-1A	Lap pre-tensioner LH	ON	DTC Description 
B1001-1B	Lap pre-tensioner LH	ON	DTC Description 
B1001-55	Lap pre-tensioner LH	ON	DTC Description 
B1002-09	Lap pre-tensioner RH	ON	DTC Description 
B1002-11	Lap pre-tensioner RH	ON	DTC Description 
B1002-12	Lap pre-tensioner RH	ON	DTC Description 
B1002-13	Lap pre-tensioner RH	ON	DTC Description 
B1002-1A	Lap pre-tensioner RH	ON	DTC Description 

DTC	Diagnostic item	SRS air bag warning light	Reference
B1002-1B	Lap pre-tensioner RH	ON	DTC Description ➡
B1002-55	Lap pre-tensioner RH	ON	DTC Description ➡
B1004-09	Passenger air bag module active vent	ON	DTC Description ➡
B1004-11	Passenger air bag module active vent	ON	DTC Description ➡
B1004-12	Passenger air bag module active vent	ON	DTC Description ➡
B1004-13	Passenger air bag module active vent	ON	DTC Description ➡
B1004-1A	Passenger air bag module active vent	ON	DTC Description ➡
B1004-1B	Passenger air bag module active vent	ON	DTC Description ➡
B1004-55	Passenger air bag module active vent	ON	DTC Description ➡
B100D-09	Knee air bag module LH	ON	DTC Description ➡
B100D-11	Knee air bag module LH	ON	DTC Description ➡
B100D-12	Knee air bag module LH	ON	DTC Description ➡
B100D-13	Knee air bag module LH	ON	DTC Description ➡
B100D-1A	Knee air bag module LH	ON	DTC Description ➡
B100D-1B	Knee air bag module LH	ON	DTC Description ➡
B100D-55	Knee air bag module LH	ON	DTC Description ➡
B100E-09	Knee air bag module RH	ON	DTC Description ➡
B100E-11	Knee air bag module RH	ON	DTC Description ➡
B100E-12	Knee air bag module RH	ON	DTC Description ➡
B100E-13	Knee air bag module RH	ON	DTC Description ➡
B100E-1A	Knee air bag module RH	ON	DTC Description ➡
B100E-1B	Knee air bag module RH	ON	DTC Description ➡
B100E-55	Knee air bag module RH	ON	DTC Description ➡
B101B-09	Front center air bag module LH	ON	DTC Description ➡
B101B-11	Front center air bag module LH	ON	DTC Description ➡
B101B-12	Front center air bag module LH	ON	DTC Description ➡

DTC	Diagnostic item	SRS air bag warning light	Reference
B101B-13	Front center air bag module LH	ON	DTC Description ➡
B101B-1A	Front center air bag module LH	ON	DTC Description ➡
B101B-1B	Front center air bag module LH	ON	DTC Description ➡
B101B-55	Front center air bag module LH	ON	DTC Description ➡
B101C-55	Front center air bag module RH	ON	DTC Description ➡
B1029-09	Front seat belt pre-tensioner LH	ON	DTC Description ➡
B1029-11	Front seat belt pre-tensioner LH	ON	DTC Description ➡
B1029-12	Front seat belt pre-tensioner LH	ON	DTC Description ➡
B1029-13	Front seat belt pre-tensioner LH	ON	DTC Description ➡
B1029-1A	Front seat belt pre-tensioner LH	ON	DTC Description ➡
B1029-1B	Front seat belt pre-tensioner LH	ON	DTC Description ➡
B1029-55	Front seat belt pre-tensioner LH	ON	DTC Description ➡
B102A-09	Front seat belt pre-tensioner RH	ON	DTC Description ➡
B102A-11	Front seat belt pre-tensioner RH	ON	DTC Description ➡
B102A-12	Front seat belt pre-tensioner RH	ON	DTC Description ➡
B102A-13	Front seat belt pre-tensioner RH	ON	DTC Description ➡
B102A-1A	Front seat belt pre-tensioner RH	ON	DTC Description ➡
B102A-1B	Front seat belt pre-tensioner RH	ON	DTC Description ➡
B102A-55	Front seat belt pre-tensioner RH	ON	DTC Description ➡
B1036-16	Ignition voltage	ON	DTC Description ➡
B1036-17	Ignition voltage	ON	DTC Description ➡
B1040-22	Vehicle speed	OFF	DTC Description ➡
B1041-82	Vehicle speed signal	OFF	DTC Description ➡
B107B-55	ECU setting	ON	DTC Description ➡
B12B5-97	Frontal collision	ON	DTC Description ➡

DTC	Diagnostic item	SRS air bag warning light	Reference
B12B6-97	Side collision	ON	DTC Description 
B12B7-97	Rollover detection	ON	DTC Description 
B12B9-97	Rear collision	ON	DTC Description 
B12BA-97	Air bag disposal completion	ON	DTC Description 
B1500-92	DOOR SATELLITE SENSOR	ON	DTC Description 
U2140-81	CAN comm err (ECM)	OFF	DTC Description 
U2141-81	CAN comm err (TCM)	OFF	DTC Description 
U2148-81	CAN comm err (brake control unit)	OFF	DTC Description 
U2148-83	CAN comm err (brake control unit)	OFF	DTC Description 
U214E-81	CAN comm err (combination meter)	OFF	DTC Description 
U214F-81	CAN comm err (BCM)	OFF	DTC Description 
U2152-81	CAN comm err (ADAS control unit)	OFF	DTC Description 
U215B-81	CAN comm err (IPDM E/R)	OFF	DTC Description 
U215F-81	CAN comm err (laser/radar)	OFF	DTC Description 
U2176-81	CAN comm err (CCM/ST angle sensor)	OFF	DTC Description 

Network-DTC

DTC	Diagnostic item	SRS air bag warning light	Reference
U0073-00	Control module comm Bus A Off	OFF	DTC Description DTC Logic 
U2140-87	CAN comm err (ECM)	OFF	DTC Description DTC Logic 
U2141-87	CAN comm err (TCM)	OFF	DTC Description 
U2148-87	CAN comm err (brake control unit)	OFF	DTC Description DTC Logic 
U214E-87	CAN comm err	OFF	DTC Description 

DTC	Diagnostic item	SRS air bag warning light	Reference
	(combination meter)		
U214F-87	CAN comm err (BCM)	OFF	DTC Description 
U2152-87	CAN comm err (ADAS control unit)	OFF	DTC Description DTC Logic 
U215B-87	CAN comm err (IPDM E/R)	OFF	DTC Description 
U215F-87	CAN comm err (laser/radar)	OFF	DTC Description DTC Logic 
U2176-87	CAN comm err (CCM/ST angle sensor)	OFF	DTC Description DTC Logic 