

WIRING DIAGRAMS

Fig. 1: Engine Compartment, Headlights (Grid 1-3)

1991 Mitsubishi Pickup

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Sunday, December 17, 2000 03:42PM

COMPONENT LOCATOR:

A/C COMP	D 17-18
A/C COMP RELAY	C-D 19
A/C CONDENSER FAN	D 19
A/C SYSTEM	B-D 17-19
ALTERNATOR	C 3
ASHTRAY ILLUM LT	A 18
AUTO FREE WHEELING	
CONTROL UNIT	A-B 23
AUTO TRANS CONTROL UNIT	A 12
BACK-UP LT SW	B-C 28
BATTERY	A 2
BLOWER SW	D 19
Buzzer	E 23
CARGO LT	E 21
CENTRAL LOCKING CONTROL RELAY	D 24
CIG LTR	B 16
CLOCK	C 16
COLUMN SW	A-D 16
CRUISE CONTROL	D-E 16-18
DIAG CONN (2.4L)	D 7
DIAG CONN (3.0L)	D 9
DIMMER CONTROL	A 16
DIODE RELAY	D 3
DOOR LT	E 20, E 21
DOOR SW	D 23
FLASHER UNIT	A 19
FUEL PUMP (2.4L)	C 4
FUEL PUMP (3.0L)	C 8
FUS LINKS	A 2
FUSE BLOCK	D-E 15-14
GEAR SELECT SW	A 14-16
HAZARD SW	A 17
IGNITION COIL (2.4L)	E 7
IGNITION COIL (3.0L)	E 11
IGNITION SW	E 15
INSTRUMENT CLUSTER	A-D 20-22
KEY REMINDER SW	E 23
MPI CONTROL RELAY (2.4L)	B 4
MPI CONTROL RELAY (3.0L)	B 8
MPI CONTROL UNIT (2.4L)	A 4-7
MPI CONTROL UNIT (3.0L)	A 8-11
NOISE FILTER (2.4L)	E 7
NOISE FILTER (3.0L)	E 9
O/D OFF SW	A 13
O/D SOLS	A 15-14
OVERDRIVE RELAY	B-C 12
POWER DOOR LOCKS	D-E 24
POWER WINDOWS	A-D 24
RABS SYSTEM	C-E 26
RADIO (PARTIAL)	C 23
SEAT BELT SW	E 23
SEAT BELT WARNING TIMER	E 22
SHIFT IND	A 13
STARTER	A 3
STARTER RELAY	B 3
STOP LT SW	A 26
STOP LT/BRAKE SW	E 18-19
SUB FUS LINKS	B-C 2-3
WASHER MOTOR	E 3
WIPER MOTOR	E 3

