

# ELECTRICAL WIRING SUPPLEMENT

## FOREWORD

This publication contains information on major changes which have occurred as a result of modifications for the year model PAJERO.

It contains only additions and changes to the original issue. For detailed information on inspection of the electrical system components, you should refer to the following publications as well as this manual if necessary.

Note that some wiring harness configuration diagrams and circuit diagrams are compilation diagrams containing information for different vehicle specifications, and actual diagrams may not be identical to those shown in this manual.

TECHNICAL INFORMATION MANUAL  
PYJE0002  
PYJE0002-1

WORKSHOP MANUAL  
ENGINE GROUP  
PWEE□□□□  
(Looseleaf edition)

CHASSIS GROUP  
PWJE0005  
PWJE0005-1  
PWJE0005-2

ELECTRICAL WIRING  
PHJE0005  
PHJE0005-1  
PHJE0005-2  
PHJE0005-3  
PHJE0005-4

BODY REPAIR MANUAL  
PBJE0001

PARTS CATALOGUE  
B803H203A□  
B803H403A□  
BNB3H603A□  
BFA3H603A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

## GROUP INDEX

GENERAL .....	0
WIRING HARNESS CONFIGURATION DIAGRAMS .....	1
SINGLE PART INSTALLATION POSITION .....	2
CIRCUIT DIAGRAMS .....	3

# **WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLE**

## **WARNING!**

1. Improper service or maintenance of any component of the SRS or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
2. SRS components should not be subjected to heat over 93 °C, so remove the SRS-ECU, air bag module (driver's side and front passenger's side) and clock spring before drying or baking the vehicle after painting.
3. Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
4. MITSUBISHI dealer personnel must thoroughly review the chassis Workshop Manual, and especially its GROUP 52B – Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.

## **HOW TO USE THIS MANUAL**

### **CONTENTS**

The preceding page contains GROUP INDEX that lists the group title and group number.

### **PAGE NUMBERS**

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.

### **INDICATION OF DESTINATION**

General Export and GCC are used for convenience to indicate destination.

### **NOTE**

1. "General Export" means territories other than Europe, GCC, Australia, New Zealand, the U.S.A. and Canada.
2. "GCC" indicates countries that are members of the (Persian) Gulf Cooperation Council of nations.
3. In some instances, vehicles with other specifications may be shipped to some countries.