

3 SINGLE PART INSTALLATION POSITION





RELAY	3- 2
CONTROL UNIT	3- 5
SENSOR	
MPI-SOHC	3-7-1
MPI-DOHC	3-11
DIODE	
Vehicles built up to March 1991	3-16
Vehicles built from April 1991	3-16-1
INSPECTION TERMINAL AND SPARE CONNECTOR	3-17
FUSIBLE LINK AND FUSE	3-18
EARTH CABLE	3-19
EARTH	3-20







RELAY

Name	Symbol	Name	Symbol
ABS motor relay	B	Dim-dip lamp relay 2	D
	C	Dim-dip lamp relay 3	D
ABS valve relay	B	Engine control relay	H
	C	Engine oil level relay	G
ACTIVE-ECS compressor relay	F	Front fog lamp relay	A
ACTIVE-ECS relay	A	Headlamp relay	A
ACTIVE-ECS return pump relay	F	Headlamp washer relay	G
ACTIVE-ECS solenoid valve relay	F	Horn relay <SRS>	J
A/C compressor relay	A	Power window relay	A
Alternator relay	A	Radiator fan motor relay (HI)	A
Blower motor relay	K	Radiator fan motor relay (LO-I)	A
Blower motor high relay	I	Radiator fan motor relay (LO-II)	A
Condenser fan motor relay (HI)	A	Rear fog lamp relay	A
Condenser fan motor relay (LO)	A	Rear intermittent wiper relay	N
Daytime running lamp relay 1	E	Rear power window unit	M
Daytime running lamp relay 2	D	Tail lamp relay	A
Defogger relay	K	TCL valve relay	L
Dim-dip lamp relay 1	E	Turn signal and hazard flasher unit	J




NOTE




The "Name" column is arranged in alphabetical order.

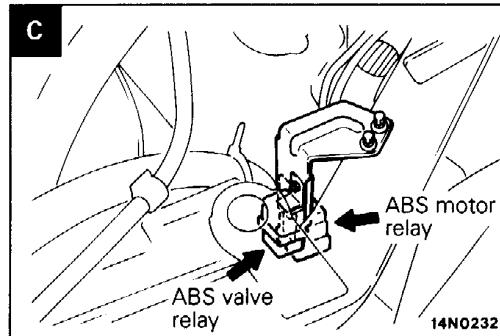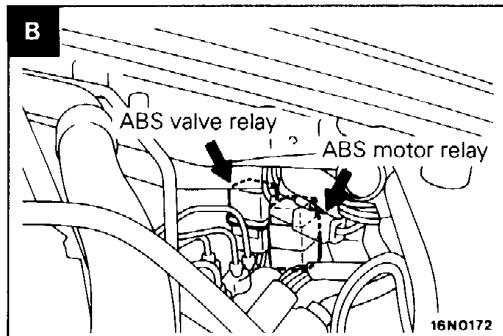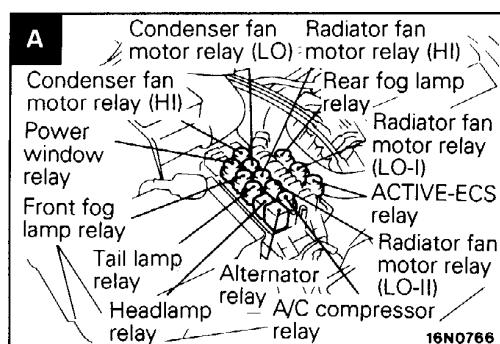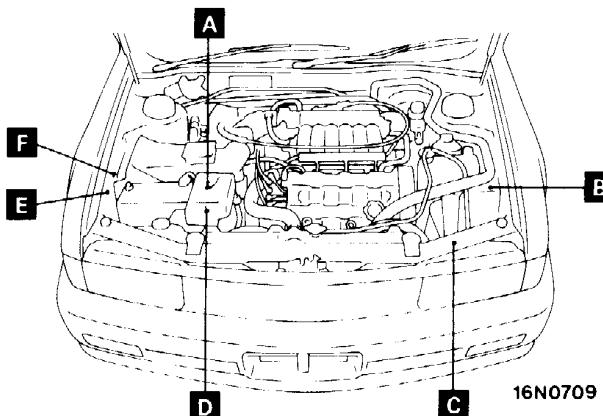Engine compartment

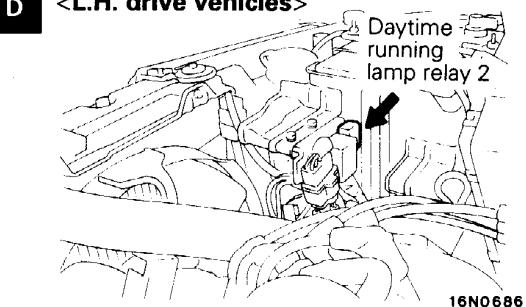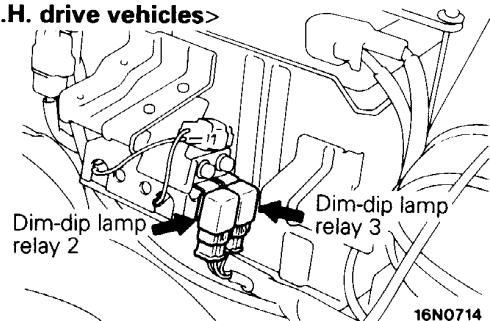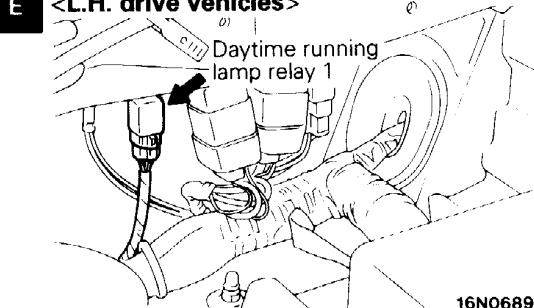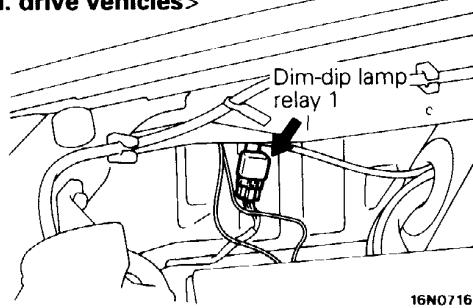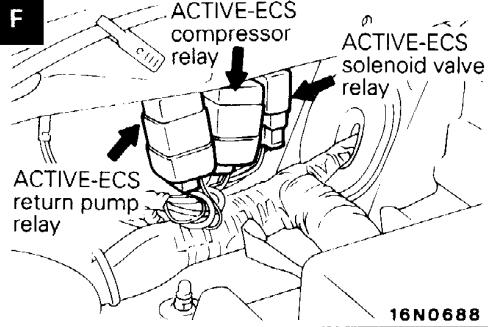
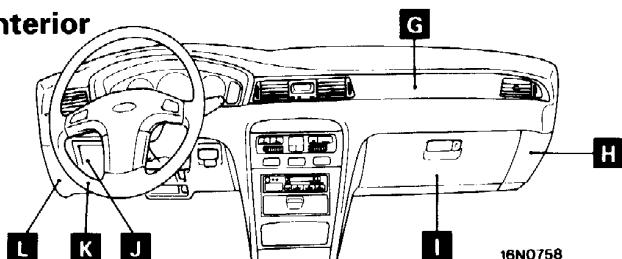
D <L.H. drive vehicles>**<R.H. drive vehicles>****E <L.H. drive vehicles>****<R.H. drive vehicles>****F ACTIVE-ECS compressor relay****Interior****NOTE**

For R.H. drive vehicles, part installation positions are symmetrical.

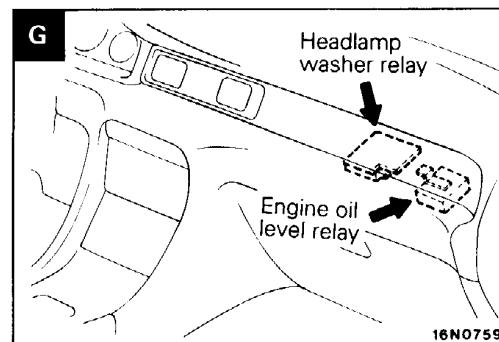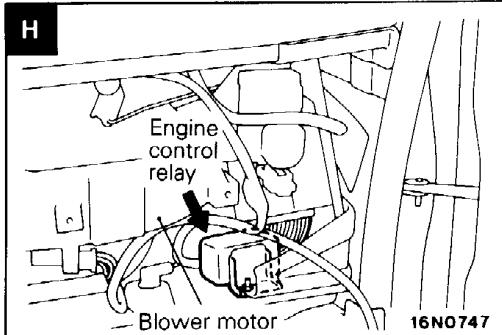
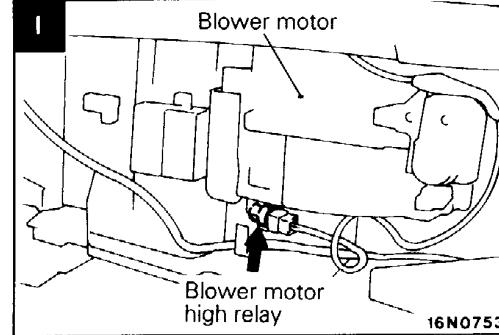
**H****I**

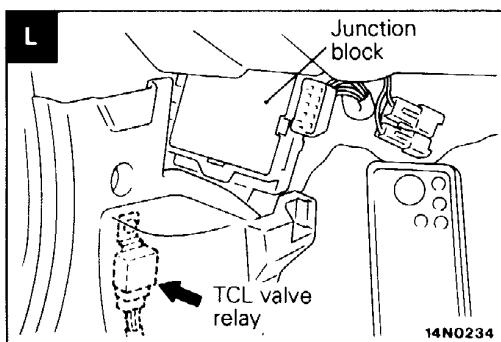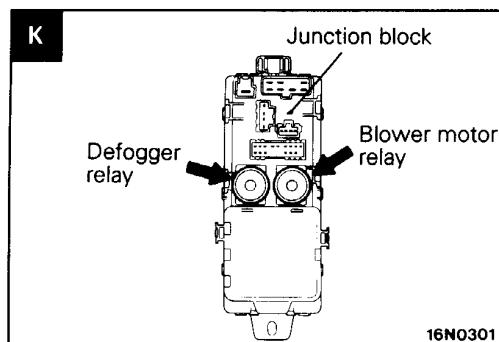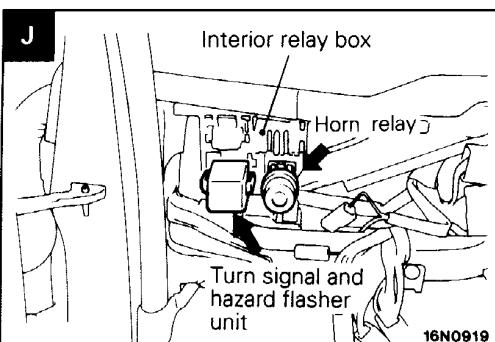

Rear door

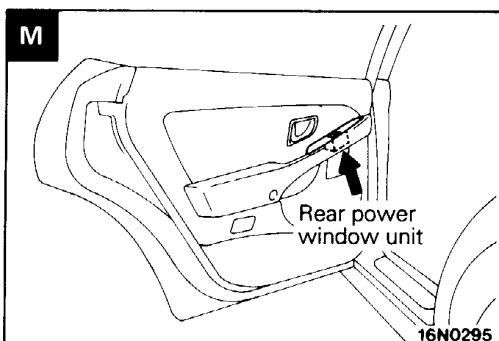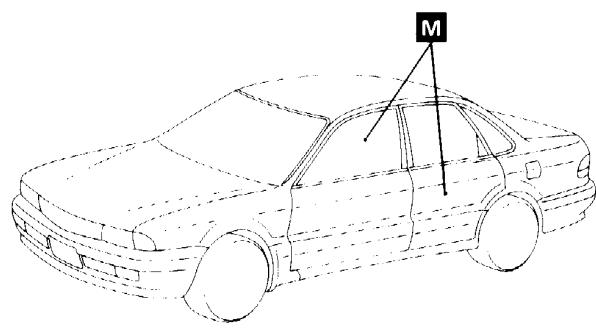

Luggage compartment

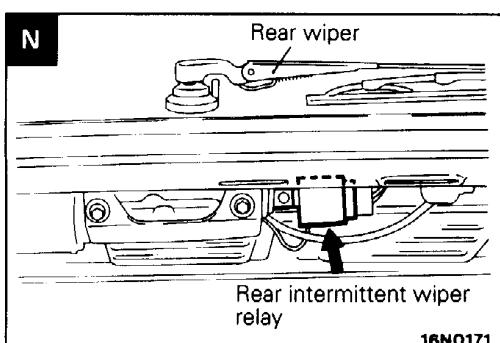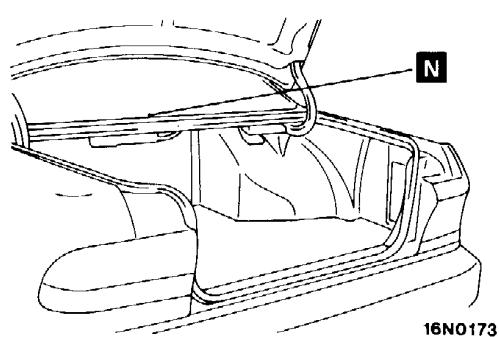

REVISED


CONTROL UNIT

Name	Symbol	Name	Symbol
ABS control unit	L	Engine control unit	C
A/C belt lock controller <DOHC>	D	EPS control unit	B
A/C control unit	F	ETACS unit	L.H. drive vehicles
ACTIVE-ECS control unit	K		R.H. drive vehicles
Auto-cruise control unit	F	Motor antenna control unit	L
Daytime running lamp control unit	A	Power seat control unit	J
Door control unit	H	SRS diagnosis unit	M
ELC-4A/T control unit	E	Sun roof control unit	I
		TCL control unit	L


NOTE

The "Name" column is arranged in alphabetical order.

Engine compartment

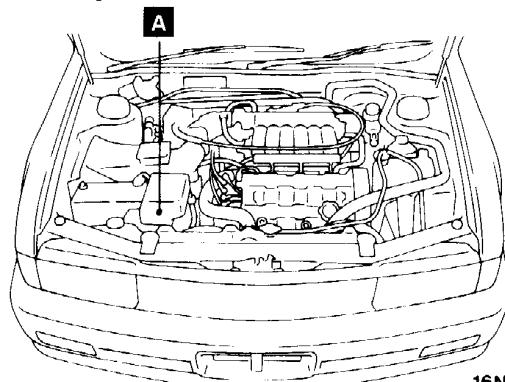


16N0709

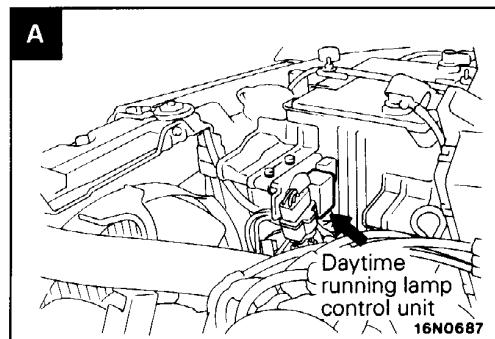


16N0687

Interior

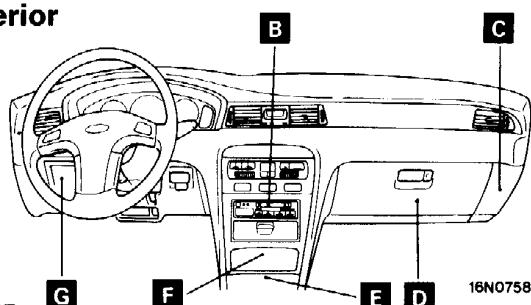


16N0758

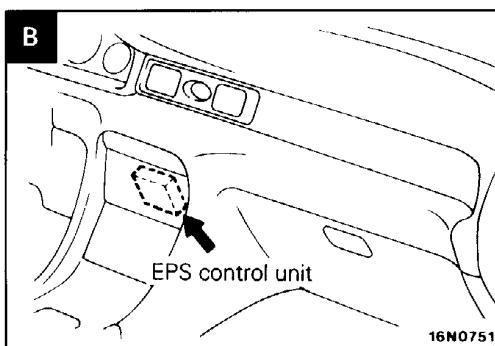


16N0751




NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

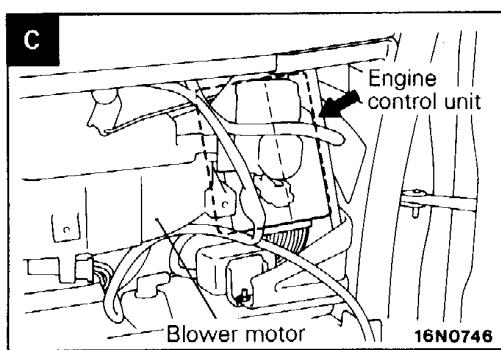


16N0746

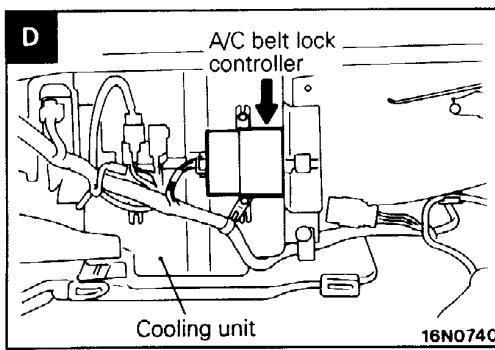

16N0740

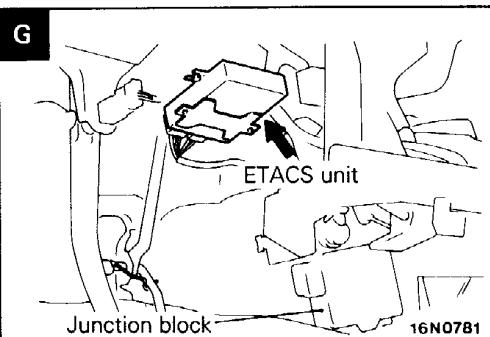
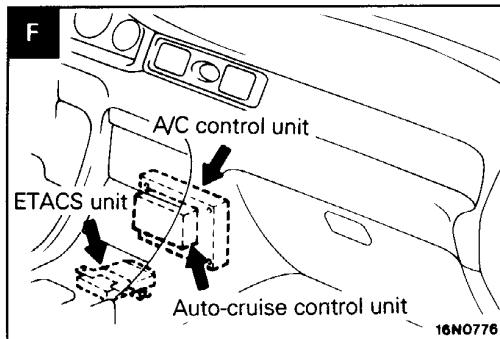
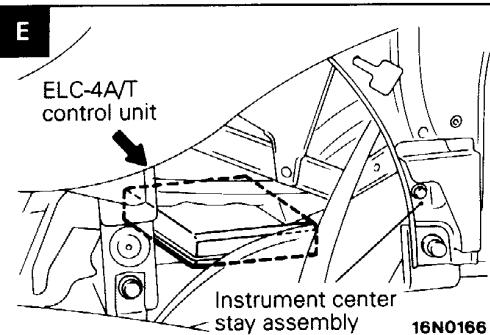



Front door and front seat

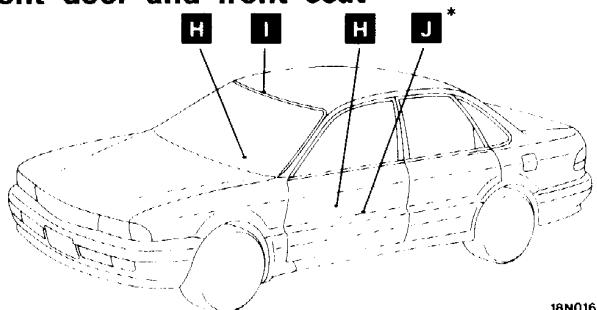


NOTE

For R.H. drive vehicles, only the positions indicated by the * is symmetrical.

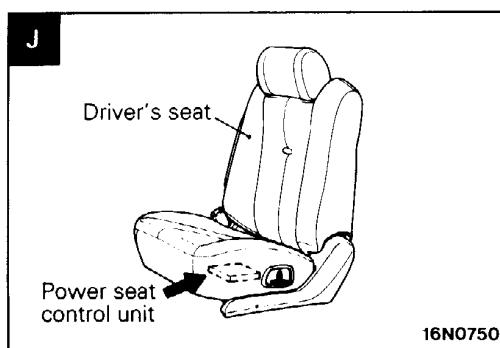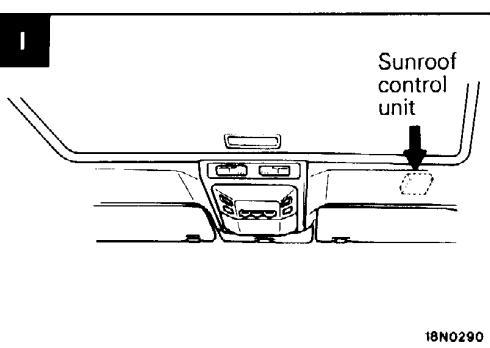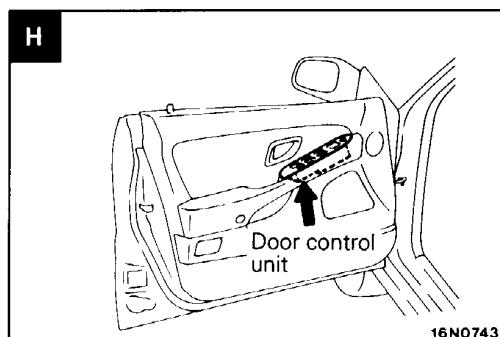


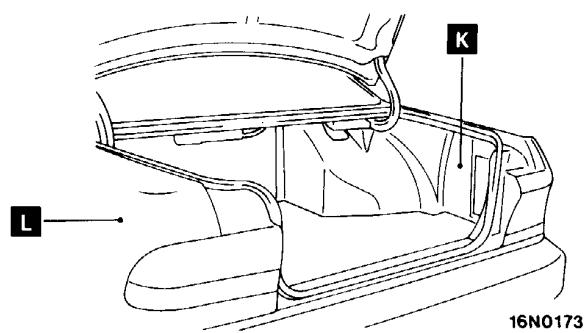Luggage compartment


16N0173

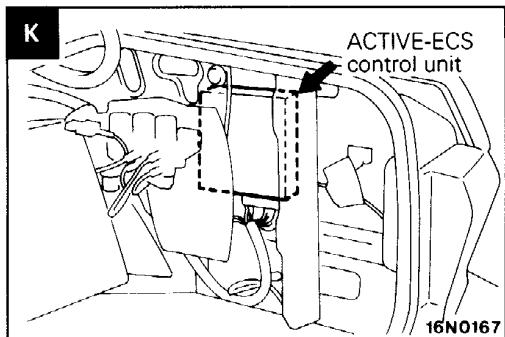


16N0167

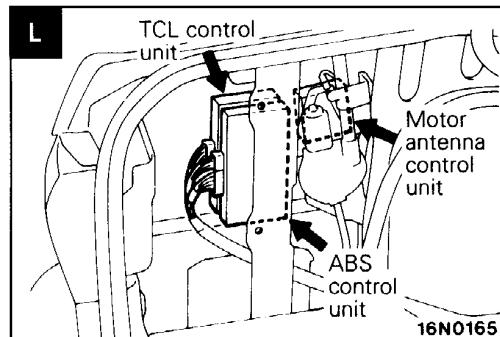

16N0165

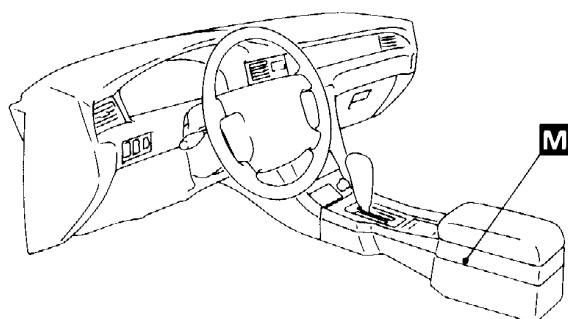Floor console

16N0915

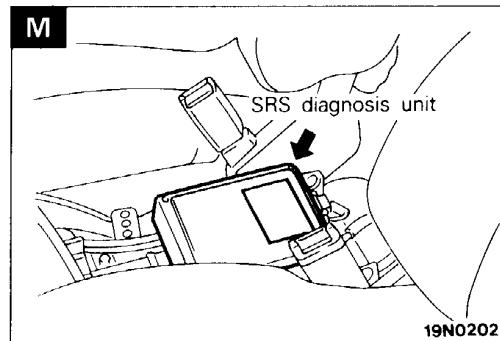


19N0202

SENSOR**MPI-SOHC**


Name	Symbol	Name	Symbol
ABS speed sensor (Front)	P	Fin thermo sensor	M
ABS speed sensor (Rear)	R	Interior temperature sensor	O
Air flow sensor (with built-in barometric pressure sensor, intake air temperature sensor)	A	Oxygen sensor	Q
Air inlet sensor	L	Photo sensor	K
A/T fluid temperature sensor <A/T>	H	Thermo sensor (for cooling fan control)	G
Crank angle sensor and top dead center sensor	C	Thermostat	E
Detonation sensor	D	Throttle position sensor	B
Engine coolant temperature sensor (for engine control)	I	Indiction control valve position sensor	C
Engine coolant temperature switch (for A/C compressor control)	I	Vehicle speed sensor (Reed switch)	J
Engine oil level sensor	F	Water temperature sensor	N
Front impact sensor	R.H.		
	L.H.		

NOTE


The "Name" column is arranged in alphabetical order.

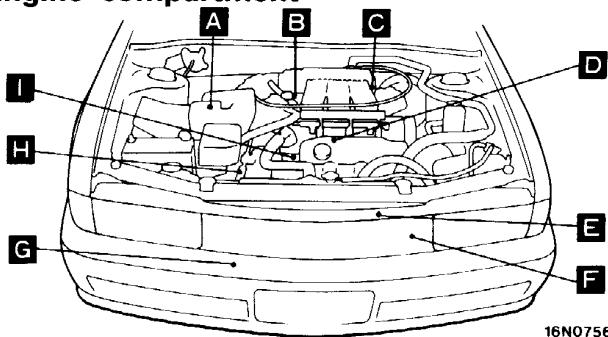Engine compartment


16N0756

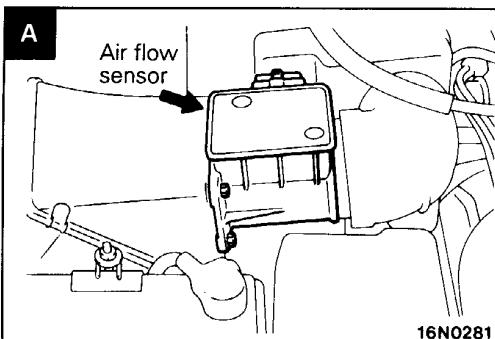


16N0281

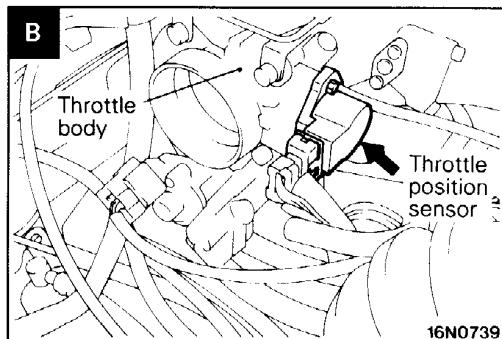


16N0739

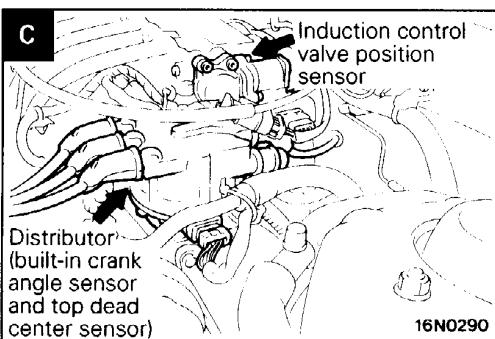


16N0290

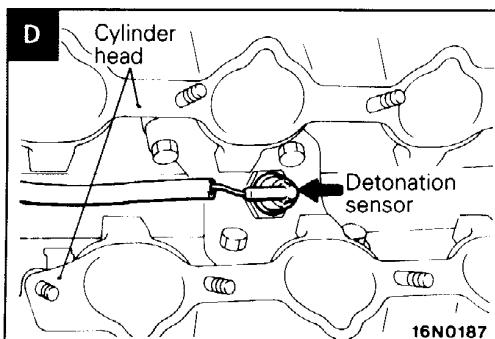


16N0187

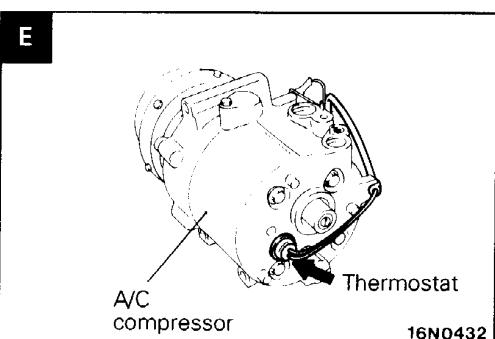


16N0432

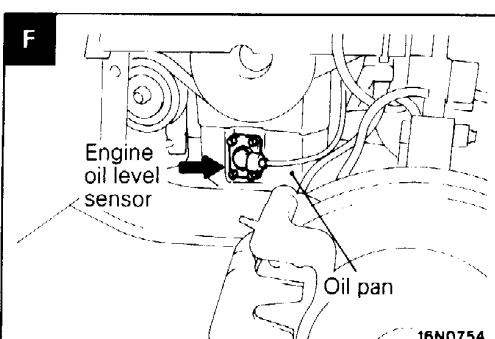


16N0754

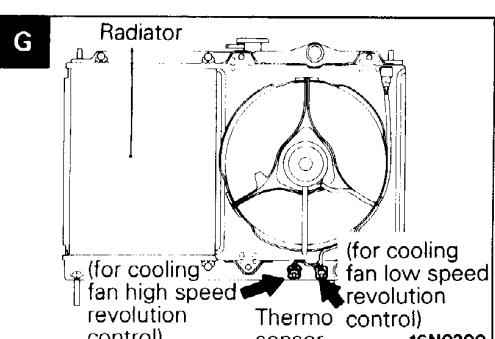


16N0300

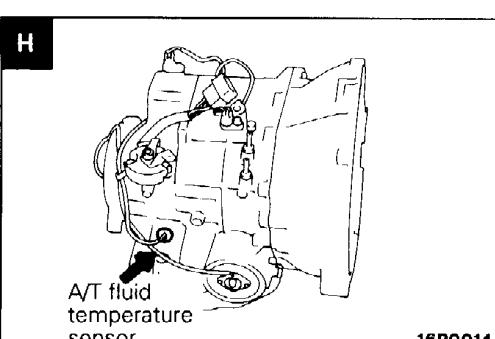








16P0014








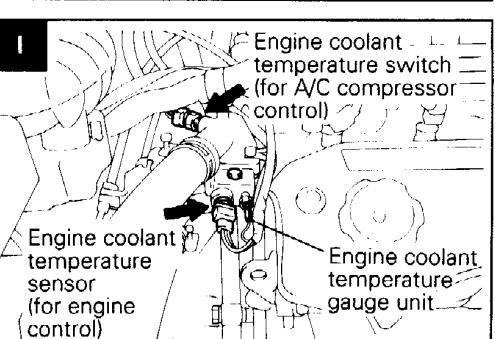


16N0755

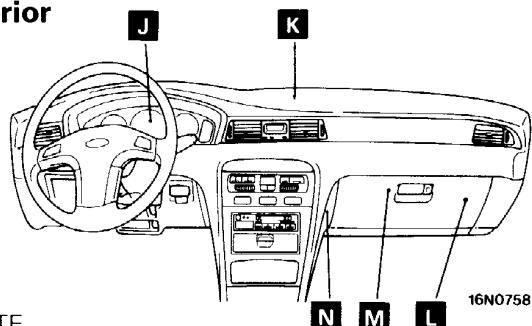Interior

NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

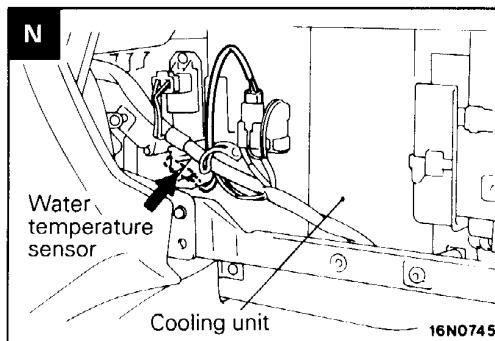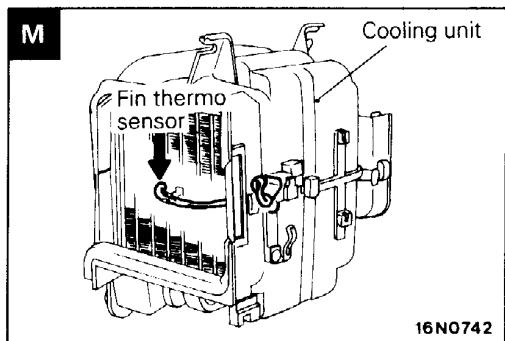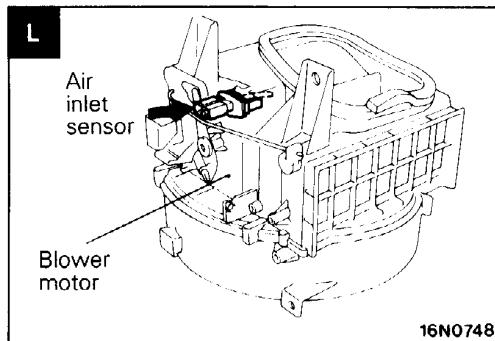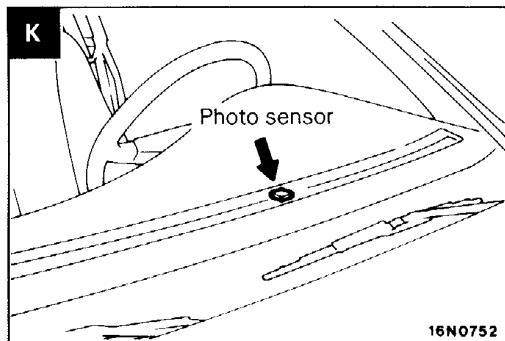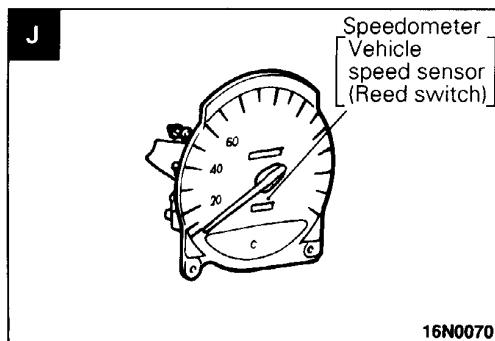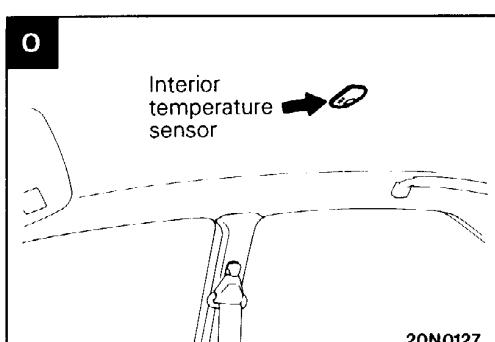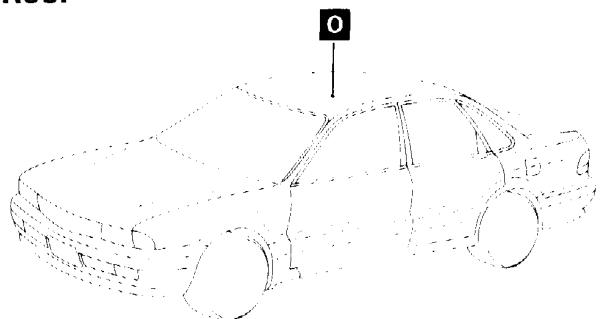**Roof**

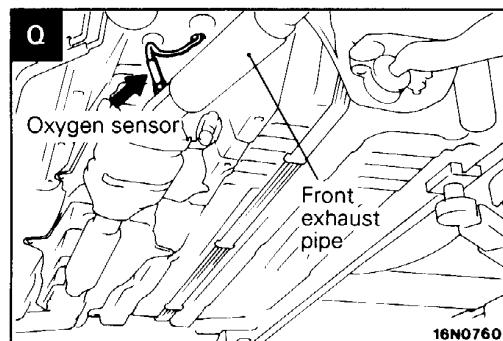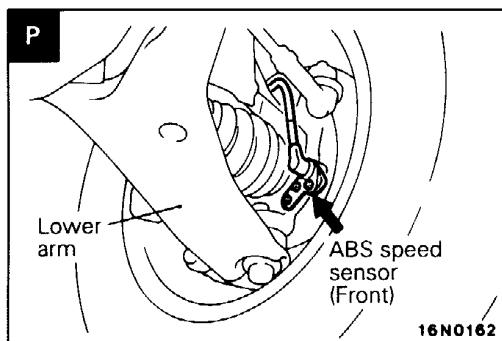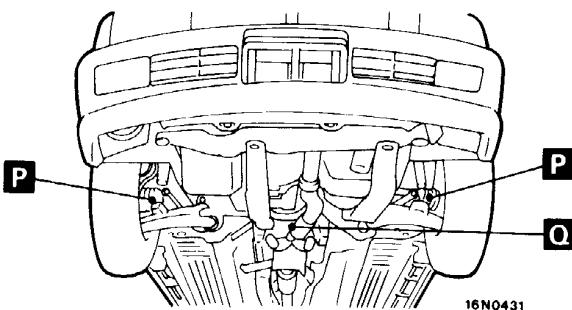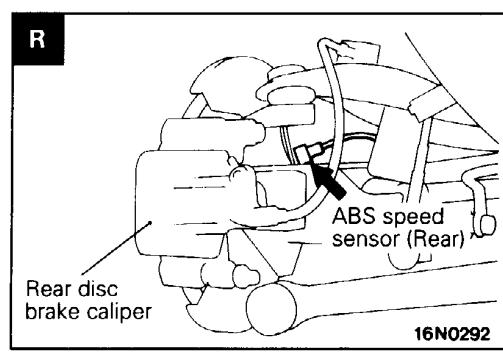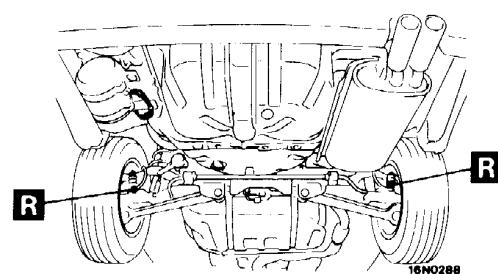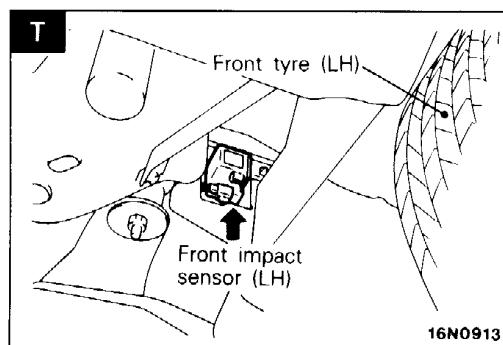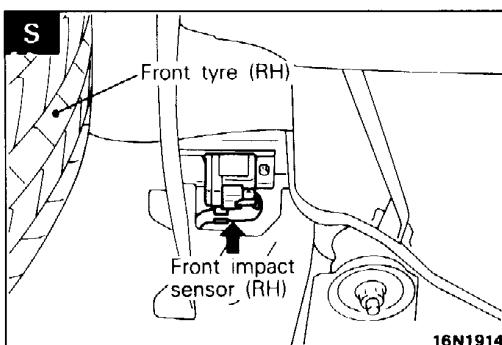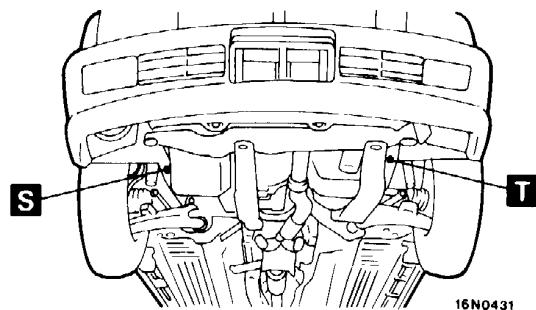
Under front floor**Under rear floor****Under front floor**









MPI-DOHC



Name	Symbol	Name	Symbol
ABS speed sensor (Front)	T	Front height position sensor	R
ABS speed sensor (Rear)	W	Front impact sensor R.H.	Y
Accelerator position sensor <Vehicles with TCL>	B	Front impact sensor L.H.	Z
ACTIVE-ECS front height sensor	V	Induction control valve position sensor	C
ACTIVE-ECS G sensor	G	Interior temperature sensor	Q
ACTIVE-ECS rear height sensor	X	Oxygen sensor	U
ACTIVE-ECS rear pressure sensor	S	Photo sensor	L
Air flow sensor (with built-in barometric pressure sensor, intake air temperature sensor)	A	Rear height position sensor	R
Air inlet sensor	M	Reclining position sensor	R
A/T fluid temperature sensor	I	Revolution pick-up sensor	F
Crank angle sensor and top dead center sensor	B	Slide position sensor	R
Detonation sensor	D	Steering wheel sensor <Active-ECS or TCL>	P
Engine coolant temperature sensor (for engine control)	J	Thermo sensor (for cooling fan control)	H
Engine coolant temperature switch (for A/C compressor control)	J	Thermostat	F
Engine oil level sensor	E	Throttle position sensor	B
Fin thermo sensor	N	Vehicle speed sensor (Reed switch)	K
		Water temperature sensor	O

NOTE




The "Name" column is arranged in alphabetical order.

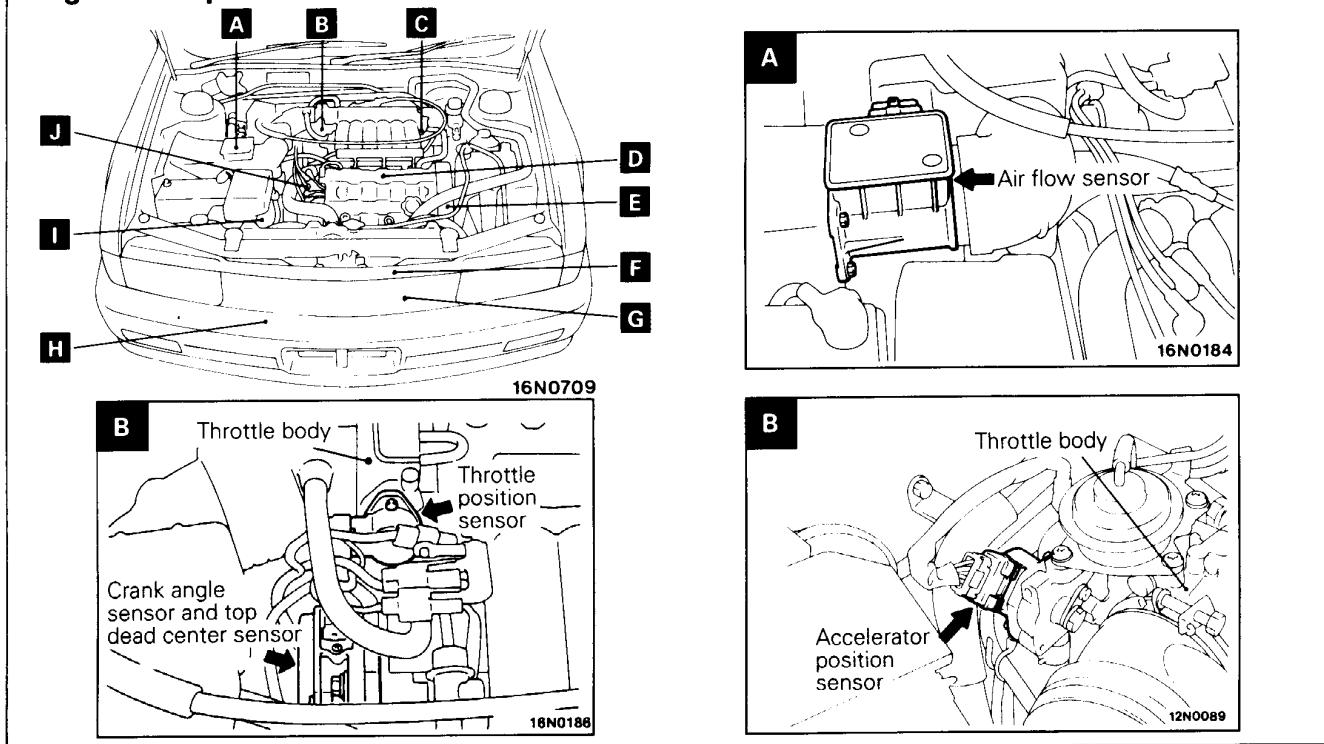Engine compartment

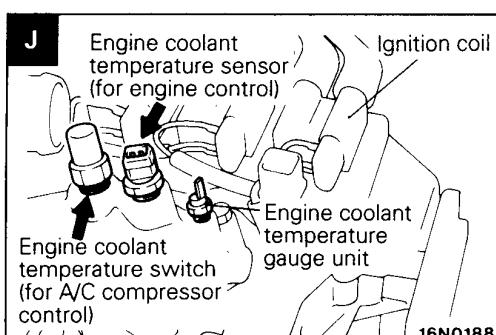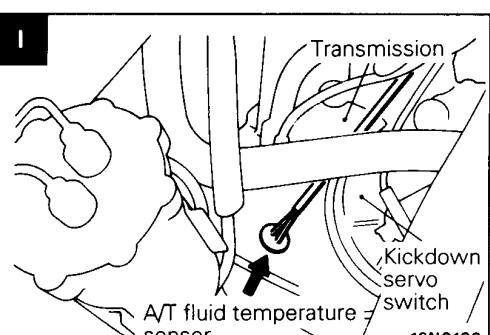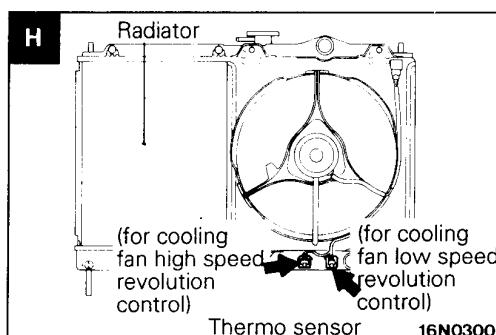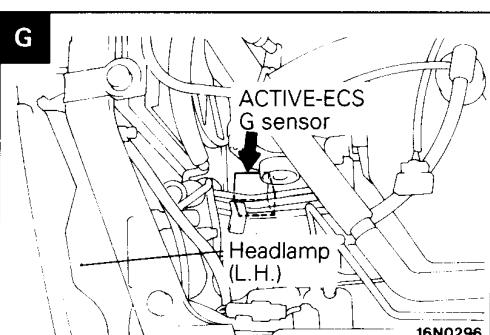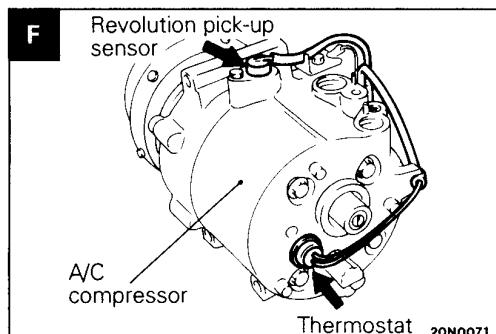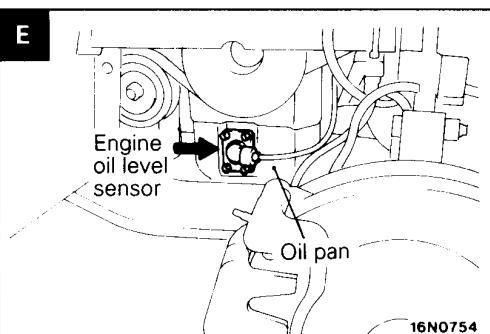
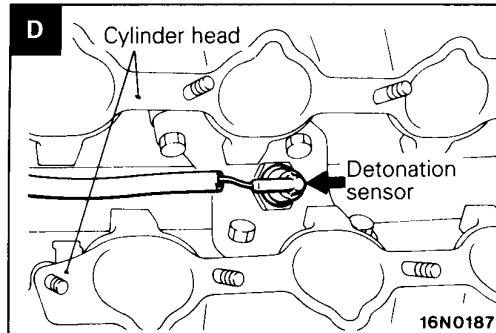
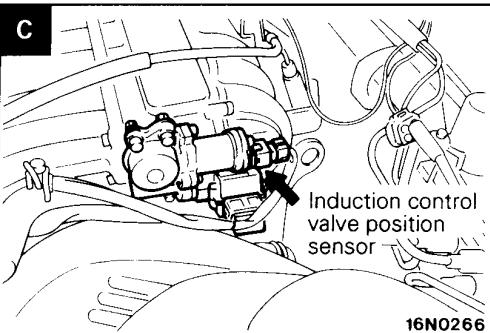


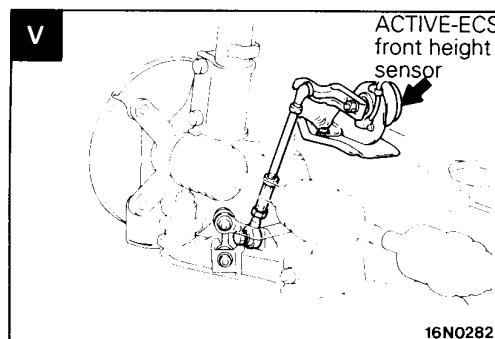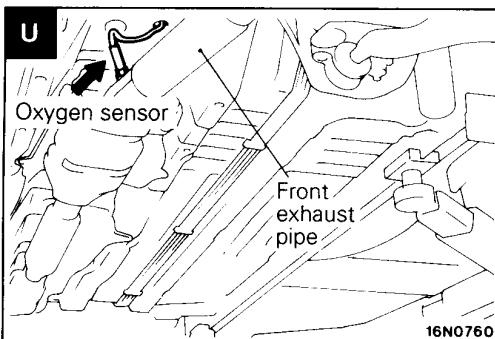

Under rear floor

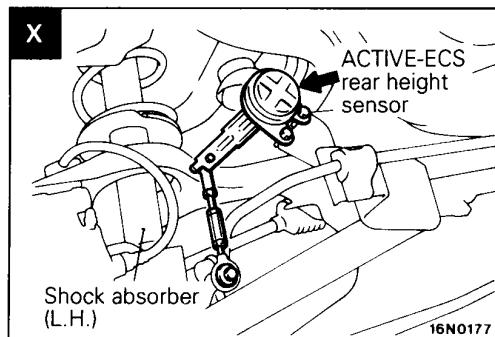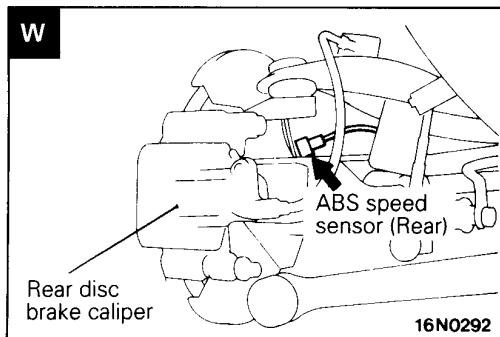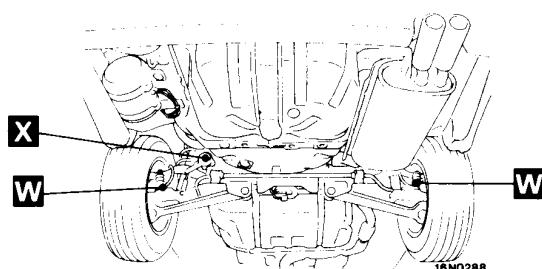

Under front floor

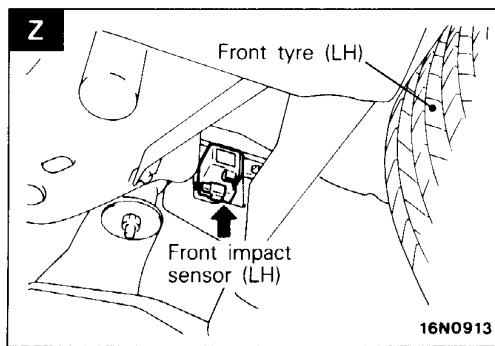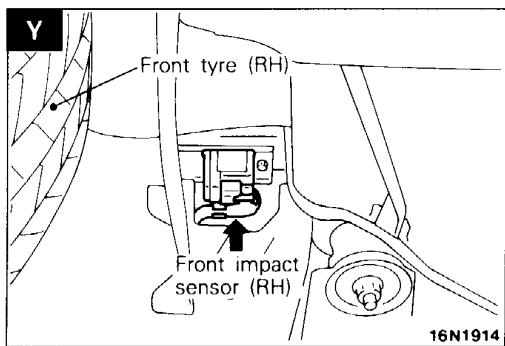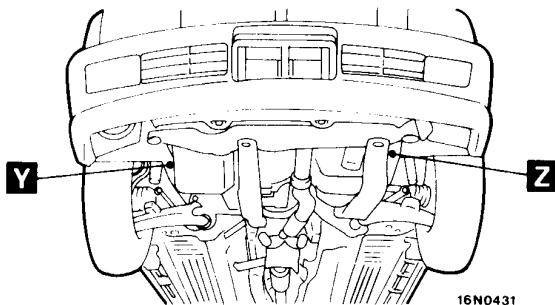


DIODE <Vehicles built up to March 1991>

Name	Symbol	Name	Symbol
Diode (for ABS circuit)* ¹	A	Diode (for dim-dip lamp circuit)* ²	D
Diode (for ABS circuit)* ²	B	Diode (for 4WS fluid level warning lamp circuit)	D
Diode (for ACTIVE-ECS circuit)	A	Diode (for headlamp circuit)* ¹	A
Diode (for ACTIVE-ECS circuit)	D	Diode (for idle-up circuit)	A
Diode (for dim-dip lamp circuit)* ²	C	Diode (for power seat circuit)	L.H. drive vehicles D R.H. drive vehicles A


NOTE

(1) *¹: L.H. drive vehicles.(2) *²: R.H. drive vehicles.

(3) The "Name" column is arranged in alphabetical order.

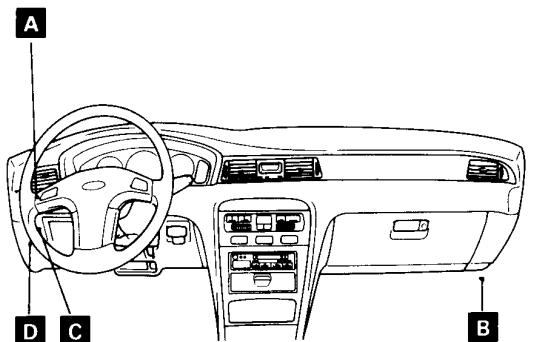Interior


16N0758

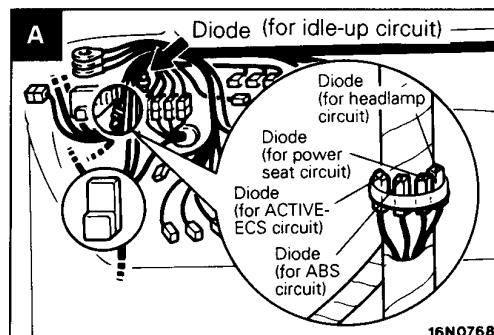


16N0768

NOTE


For R.H. drive vehicles, part installation positions are symmetrical.

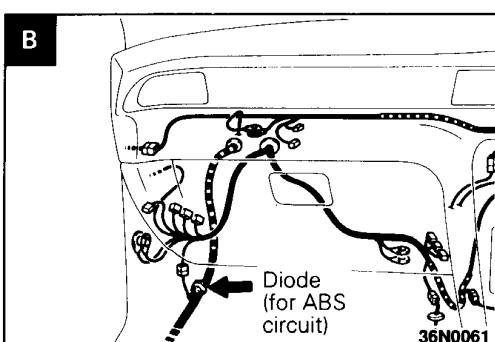


36N0061

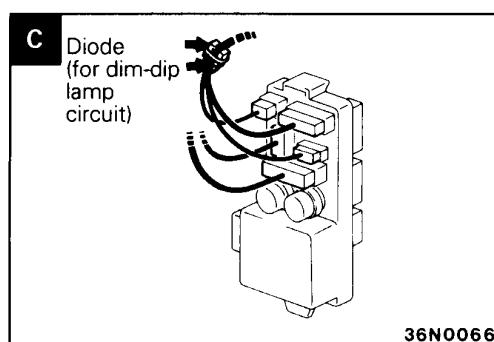

36N0066

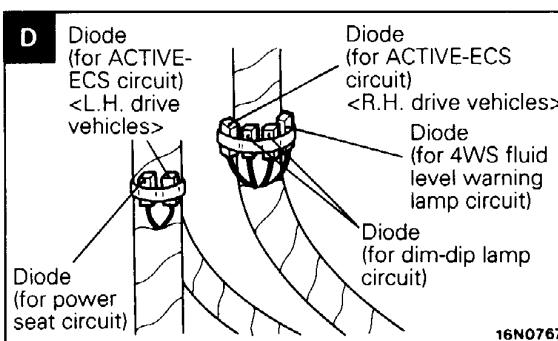

16N0767

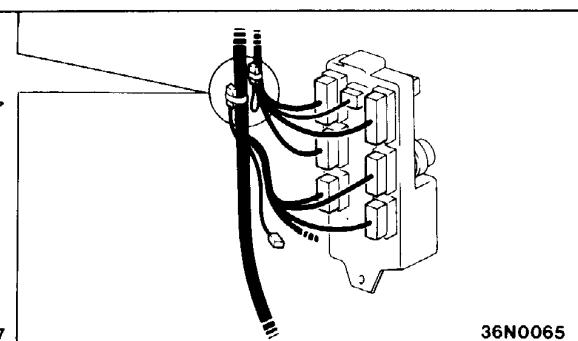


36N0065

DIODE <Vehicles built from April 1991>


Name	Symbol	Name	Symbol
Diode (for ABS circuit)* ¹	A	Diode (for dim-dip lamp circuit)* ²	D
Diode (for ABS circuit)* ²	B	Diode (for 4WS fluid level warning lamp circuit)	L.H. drive vehicles
Diode (for ACTIVE-ECS circuit)	A	R.H. drive vehicles	C
Diode (for ACTIVE-ECS circuit)	D	Diode (for headlamp circuit)* ¹	A
Diode (for dim-dip lamp circuit)* ²	C	Diode (for idle-up circuit)	D
		Diode (for power seat circuit)	L.H. drive vehicles
			R.H. drive vehicles

NOTE


- (1) *¹: L.H. drive vehicles.
 (2) *²: R.H. drive vehicles.
 (3) The "Name" column is arranged in alphabetical order.

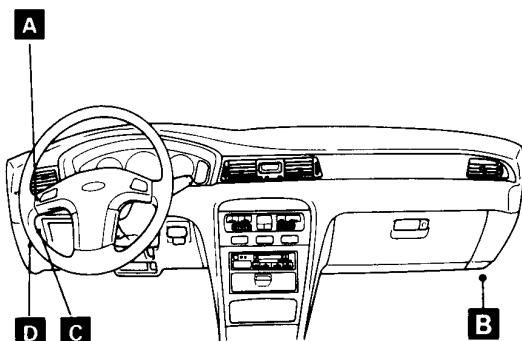Interior


16N0758

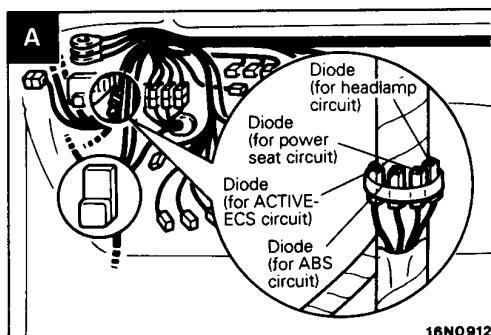


16N0912

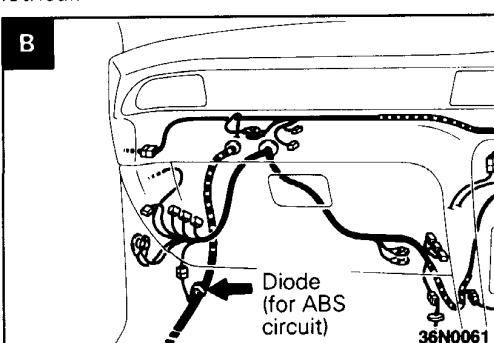


36N0061

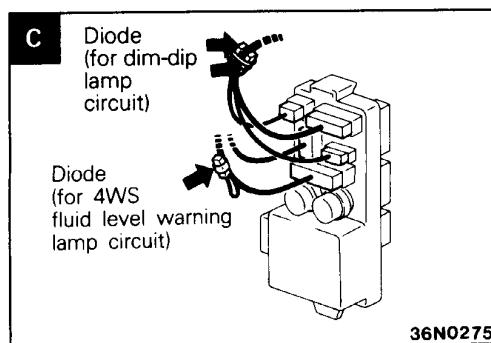

36N0275

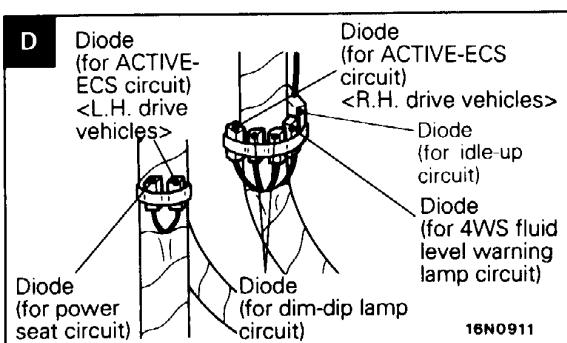

16N0911

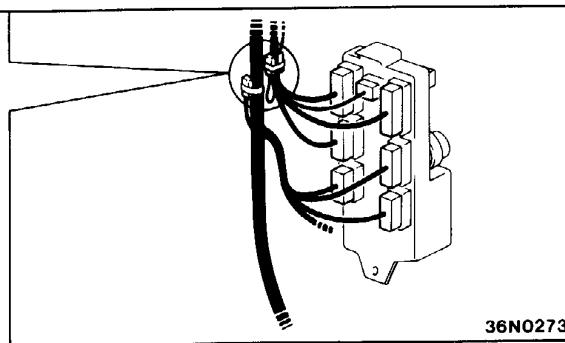

36N0273