

AUTOMATIC TRANSMISSION

CONTENTS

SERVICE SPECIFICATIONS

LUBRICANT

SPECIAL TOOLS

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS

TROUBLESHOOTING

DIAGNOSIS FUNCTION

ROAD TEST

SHIFT PATTERN

INSPECTION CHART FOR DIAGNOSIS CODES

INSPECTION PROCEDURES FOR DIAGNOSIS CODES

INSPECTION CHART FOR TROUBLE SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS

SERVICE DATA REFERENCE TABLE

ACTUATOR TEST JUDGEMENT VALUE

INVECS-II CANCEL COMMAND

CHECK AT ENGINE A/T-ECU TERMINALS

OSCILLOSCOPE INSPECTION PROCEDURE

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

ON-VEHICLE SERVICE

- AUTOMATIC TRANSMISSION FLUID CHECK
- OIL FILTER REPLACEMENT
- AUTOMATIC TRANSMISSION FLUID REPLACEMENT
- THROTTLE POSITION SENSOR ADJUSTMENT
- INHIBITOR SWITCH CONTINUITY CHECK
- INHIBITOR SWITCH AND CONTROL CABLE ADJUSTMENT
- A/T CONTROL COMPONENT LOCATION
- A/T CONTROL COMPONENT CHECK
- TORQUE CONVERTER STALL TEST
- HYDRAULIC PRESSURE TEST

HYDRAULIC CIRCUIT

- LINE PRESSURE ADJUSTMENT
- SELECTOR LEVER OPERATION CHECK

TRANSMISSION CONTROL

- REMOVAL AND INSTALLATION
- INSTALLATION SERVICE POINT
- SELECTOR LEVER ASSEMBLY <4 A/T>
- SELECTOR LEVER ASSEMBLY <SPORTS>

TRANSMISSION ASSEMBLY

- REMOVAL AND INSTALLATION
- REMOVAL SERVICE POINTS
- INSTALLATION SERVICE POINTS