

CHASSIS ELECTRICAL

CONTENTS

HOW TO READ CONFIGURATION DIAGRAMS

HOW TO READ CIRCUIT DIAGRAMS

MARKINGS FOR CONNECTOR EARTHING

WIRE COLOUR CODES

ABBREVIATION SYMBOLS

SPECIAL TOOLS

BATTERY

ON-VEHICLE SERVICE

FLUID LEVEL AND SPECIFIC GRAVITY CHECK

BATTERY INSPECTION

BATTERY CHARGING

IGNITION SWITCH

REMOVAL AND INSTALLATION

BODY ELECTRONICS MODULE (BEM)

SPECIAL TOOLS

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS

TROUBLESHOOTING

DIAGNOSIS FUNCTION

BASIC TEST MODE (BTM) PROCEDURE

FLASH CODE REFERENCE TABLE

OUTPUT TEST CHECKLIST

INPUT TEST CHECKLIST

INSPECTION CHART FOR TROUBLE
SYMPTOMS

IMMOBILISER

DIAGNOSIS FUNCTION

DIAGNOSIS CODES

INSPECTION CHART FOR IMMOBILISER
SYSTEM DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS
CODES

BEM PINOUT REFERENCE TABLE

ON-VEHICLE SERVICE

IMMOBILISER TEACHING OPTIONS

MUT-II IMMOBILISER MENU

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

RF TRANSMITTER	FOG LAMP
BATTERY TESTING	FOG LAMP AIMING
BATTERY REPLACEMENT	REMOVAL AND INSTALLATION
PROGRAMMING RF TRANSMITTERS	REAR COMBINATION LAMP AND REAR LID LAMP
SPEEDOMETER CHECK	REMOVAL AND INSTALLATION
TACHOMETER CHECK	HIGH MOUNTED STOP LAMP
FUEL GAUGE SIMPLE CHECK	REMOVAL AND INSTALLATION
FUEL GAUGE UNIT CHECK	RHEOSTAT
ENGINE COOLANT TEMPERATURE GAUGE SIMPLE CHECK	REMOVAL AND INSTALLATION
ENGINE COOLANT TEMPERATURE GAUGE UNIT CHECK	HAZARD WARNING LAMP SWITCH
COMBINATION METERS	REMOVAL AND INSTALLATION
REMOVAL AND INSTALLATION	HORN
CENTRE MESSAGE DISPLAY	CIGARETTE LIGHTER
SERVICE SPECIFICATIONS	REMOVAL AND INSTALLATION
SPECIAL TOOLS	ACCESSORY SOCKET <VERADA>
PRELIMINARY TROUBLE SYMPTOM CHECKS < MAGNA AND SPORTS >	REMOVAL AND INSTALLATION
PRELIMINARY TROUBLE SYMPTOM CHECKS <VERADA>	RADIO, TAPE PLAYER AND CD PLAYER
INSPECTION CHART FOR TROUBLE SYMPTOMS	QUICK-REFERENCE TROUBLESHOOTING CHART
CENTRE MESSAGE DISPLAY	RADIO WITH TAPE PLAYER AND CD PLAYER
REMOVAL AND INSTALLATION	REMOVAL AND INSTALLATION
CENTRE DISPLAY SETTING PROCEDURE	CD AUTO CHANGER
EXTERIOR LAMPS	REMOVAL AND INSTALLATION
HEADLAMPS	SPEAKERS
ON-VEHICLE SERVICE	REMOVAL AND INSTALLATION
HEADLAMP AIMING	ANTENNA
LUMINOUS INTENSITY MEASUREMENT	REMOVAL AND INSTALLATION
HEADLAMP, POSITION LAMP ASSEMBLY AND FRONT TURN SIGNAL LAMP ASSEMBLY	ANTENNA POLE REPLACEMENT
REMOVAL AND INSTALLATION	REAR WINDOW DEFOGGER
SIDE TURN SIGNAL LAMP	ON-VEHICLE SERVICE
REMOVAL AND INSTALLATION	PRINTED-HEATER LINE CHECK
	STEERING REMOTE CONTROL AND SLIP RING
	REMOVAL AND INSTALLATION