

54 CHASSIS ELECTRICAL FROM MARCH 2002

CONTENTS

COMBINATION METER

FUEL GAUGE TEST

LOW FUEL WARNING LAMP

ENGINE COOLANT TEMPERATURE GAUGE
TEST

TRIP COMPUTER

SERVICE SPECIFICATIONS

PRELIMINARY TROUBLE SYMPTOM CHECKS

INSPECTION CHART FOR TROUBLE
SYMPTOMS

TRIP COMPUTER SETTING PROCEDURE

ANTENNA

INSPECTION

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.