

SECTION **LAN** LAN SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

CAN FUNDAMENTAL

PRECAUTION	3
PRECAUTIONS	3
Precaution for Trouble Diagnosis	3
Precaution for Harness Repair	3
SYSTEM DESCRIPTION	4
CAN COMMUNICATION SYSTEM	4
System Description	4
System Diagram	4
CAN Communication Control Circuit	5
DIAG ON CAN	6
Description	6
System Diagram	6
TROUBLE DIAGNOSIS	7
Condition of Error Detection	7
Symptom When Error Occurs in CAN Communication System	7
Self-Diagnosis	10
CAN Diagnostic Support Monitor	10
BASIC INSPECTION	13
DIAGNOSIS AND REPAIR WORKFLOW	13
Information Needed for Trouble Diagnosis	13
How to Use CAN Communication Signal Chart	13
Trouble Diagnosis Flow Chart	14
Trouble Diagnosis Procedure	14
CAN	
HOW TO USE THIS MANUAL	36
HOW TO USE THIS SECTION	36
Caution	36
Abbreviation List	36
PRECAUTION	37

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	37
Precautions for Trouble Diagnosis	37
Precautions for Harness Repair	37

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW	39
Interview Sheet	39
Data Sheet	39
Diagnosis Sheet (CAN Type 1)	41
Diagnosis Sheet (CAN Type 2)	42
Diagnosis Sheet (CAN Type 3)	43
Diagnosis Sheet (CAN Type 4)	44
Diagnosis Sheet (CAN Type 5)	45
Diagnosis Sheet (CAN Type 6)	46
Diagnosis Sheet (CAN Type 7)	47
Diagnosis Sheet (CAN Type 8)	48
Diagnosis Sheet (CAN Type 9)	49

SYSTEM DESCRIPTION

CAN COMMUNICATION SYSTEM	50
CAN System Specification Chart	50
CAN Communication Signal Chart	51

TROUBLE DIAGNOSIS

CAN Diagnostic Support Monitor	54
DTC Index	59

WIRING DIAGRAM

CAN SYSTEM	60
Wiring Diagram	60

DTC/CIRCUIT DIAGNOSIS

CAN COMMUNICATION SYSTEM	67
Component Parts Location	67

LAN

MALFUNCTION AREA CHART	68	Diagnosis Procedure	82
Main Line	68		
Branch Line	68		
Short Circuit	68		
MAIN LINE BETWEEN TCM AND DLC CIR- CUIT	69		
Diagnosis Procedure	69		
MAIN LINE BETWEEN TCM AND DIFF CIR- CUIT	71		
Diagnosis Procedure	71		
MAIN LINE BETWEEN TCM AND ADP CIR- CUIT	73		
Diagnosis Procedure	73		
MAIN LINE BETWEEN DIFF AND DLC CIR- CUIT	75		
Diagnosis Procedure	75		
MAIN LINE BETWEEN DIFF AND ADP CIR- CUIT	76		
Diagnosis Procedure	76		
MAIN LINE BETWEEN ADP AND DLC CIR- CUIT	77		
Diagnosis Procedure	77		
MAIN LINE BETWEEN ADP AND DISP CIR- CUIT	78		
Diagnosis Procedure	78		
MAIN LINE BETWEEN DISP AND DLC CIR- CUIT	79		
Diagnosis Procedure	79		
MAIN LINE BETWEEN DLC AND M&A CIR- CUIT	80		
Diagnosis Procedure	80		
MAIN LINE BETWEEN M&A AND ABS CIR- CUIT	81		
Diagnosis Procedure	81		
MAIN LINE BETWEEN M&A AND 4WD CIR- CUIT	82		
MAIN LINE BETWEEN 4WD AND ABS CIR- CUIT	83	Diagnosis Procedure	83
ECM BRANCH LINE CIRCUIT	84	Diagnosis Procedure	84
TCM BRANCH LINE CIRCUIT	85	Diagnosis Procedure	85
DIFF BRANCH LINE CIRCUIT	86	Diagnosis Procedure	86
ADP BRANCH LINE CIRCUIT	87	Diagnosis Procedure	87
DISP BRANCH LINE CIRCUIT	88	Diagnosis Procedure	88
BCM BRANCH LINE CIRCUIT	89	Diagnosis Procedure	89
DLC BRANCH LINE CIRCUIT	90	Diagnosis Procedure	90
HVAC BRANCH LINE CIRCUIT	91	Diagnosis Procedure	91
M&A BRANCH LINE CIRCUIT	92	Diagnosis Procedure	92
STRG BRANCH LINE CIRCUIT	93	Diagnosis Procedure	93
4WD BRANCH LINE CIRCUIT	94	Diagnosis Procedure	94
ABS BRANCH LINE CIRCUIT	95	Diagnosis Procedure	95
IPDM-E BRANCH LINE CIRCUIT	96	Diagnosis Procedure	96
CAN COMMUNICATION CIRCUIT	97	Diagnosis Procedure	97

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Trouble Diagnosis

INFOID:000000006179094

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precaution for Harness Repair

INFOID:000000006179095

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

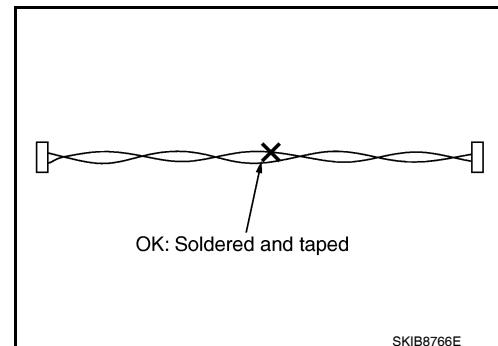

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

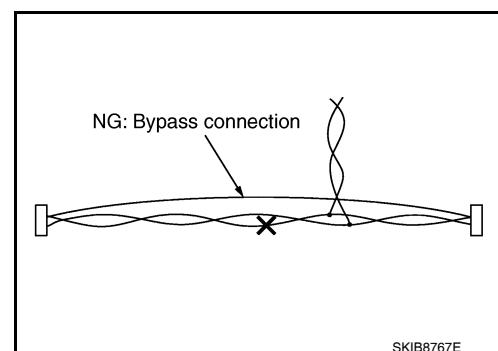

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

LAN

N

O

P

SYSTEM DESCRIPTION

CAN COMMUNICATION SYSTEM


System Description

INFOID:0000000006179096

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

System Diagram

INFOID:0000000006179097

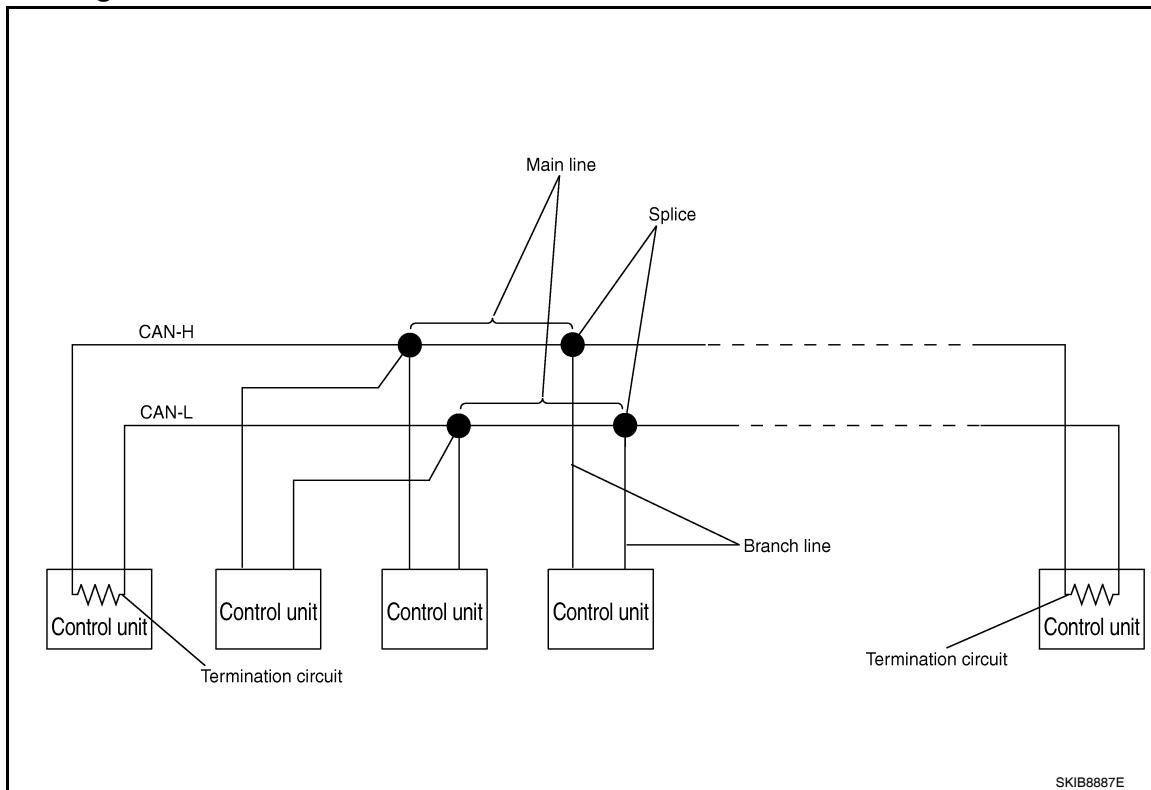

Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to LAN-5. "CAN Communication Control Circuit" .


CAN COMMUNICATION SYSTEM

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

CAN Communication Control Circuit

INFOID:000000006179098

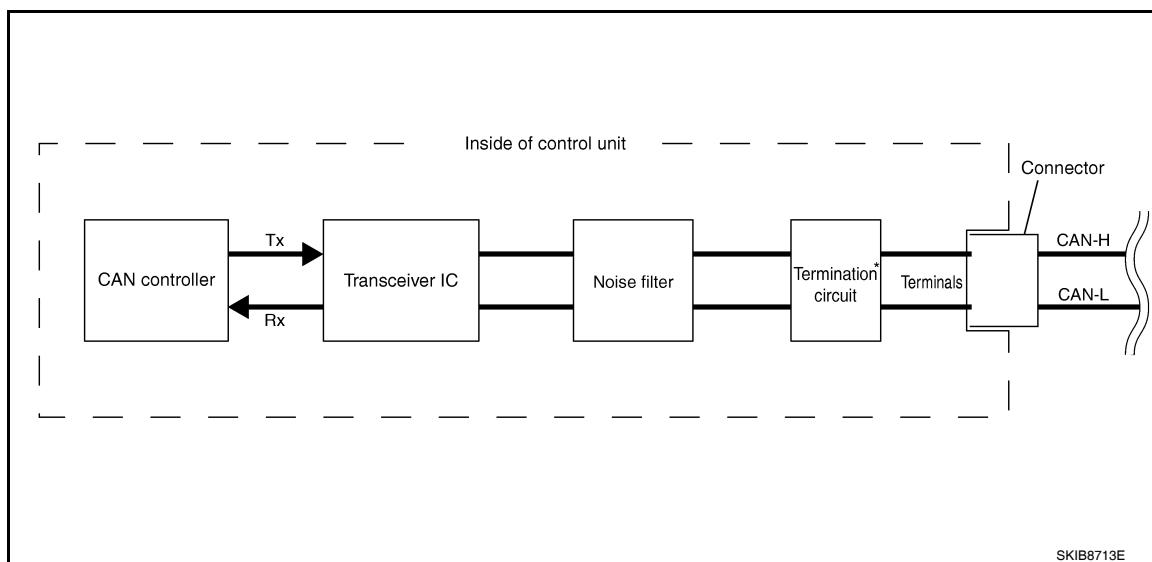

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	It produces potential difference.

*: These are the only control units wired with both ends of CAN communication system.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

DIAG ON CAN


Description

INFOID:000000006179099

“Diag on CAN” is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication lines, between control units and diagnosis unit.

System Diagram

INFOID:000000006179100

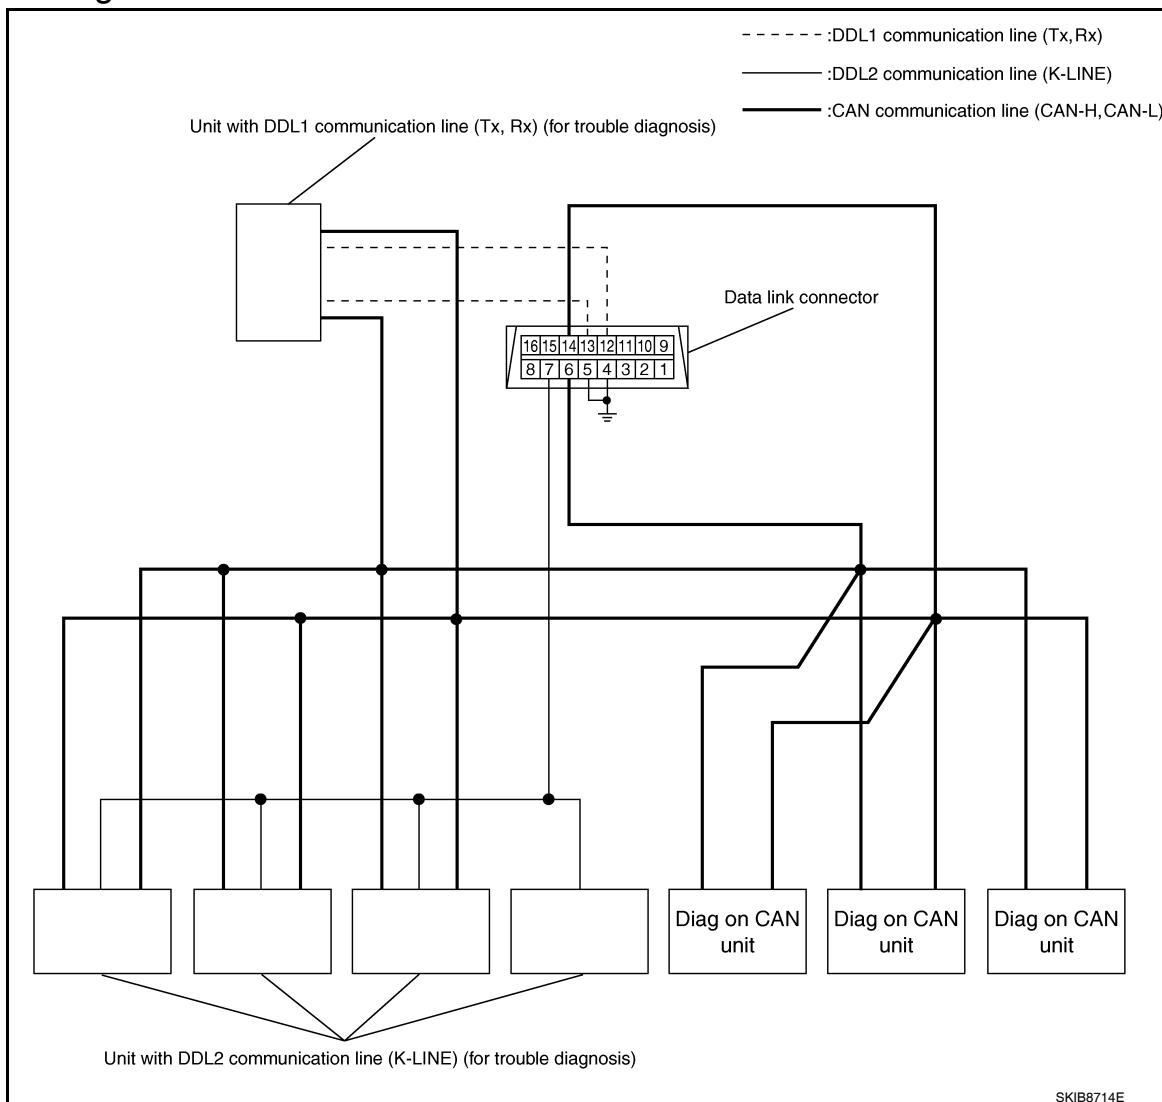

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

< SYSTEM DESCRIPTION >

TROUBLE DIAGNOSIS**Condition of Error Detection**

INFOID:000000006179101

DTC (e.g. U1000 and U1001) of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT-III if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

CAUTION:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT-III under the above conditions. Erase the memory of the self-diagnosis of each unit.

Symptom When Error Occurs in CAN Communication System


INFOID:000000006179102

In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE**NOTE:**

- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to [LAN-36, "Abbreviation List"](#) for the unit abbreviation.

Example: TCM branch line open circuit

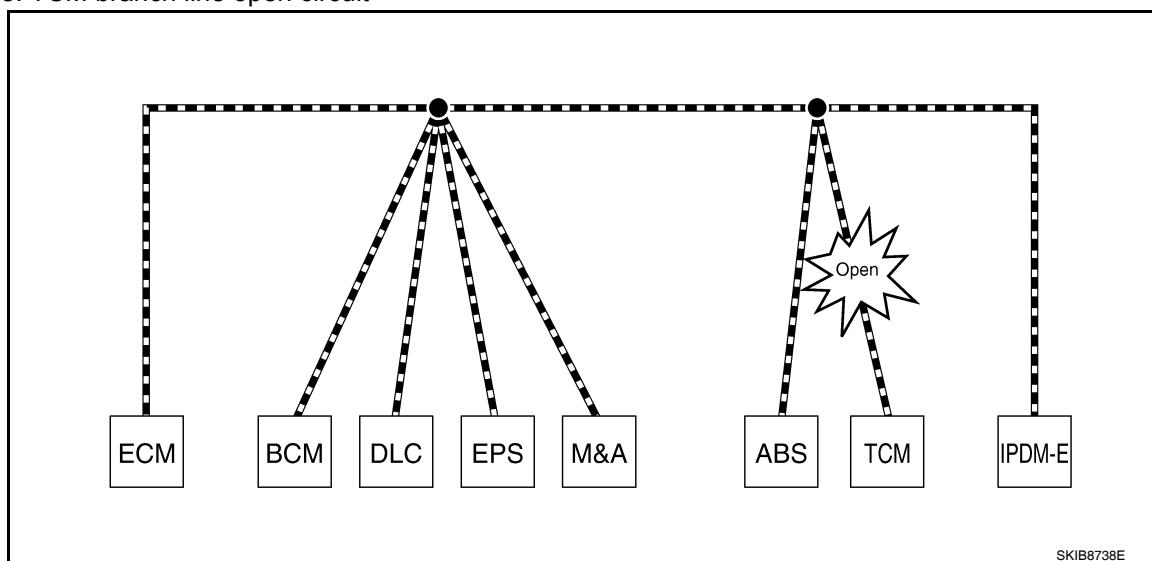

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.


TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Unit name	Symptom
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> Shift position indicator and OD OFF indicator turn OFF. Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

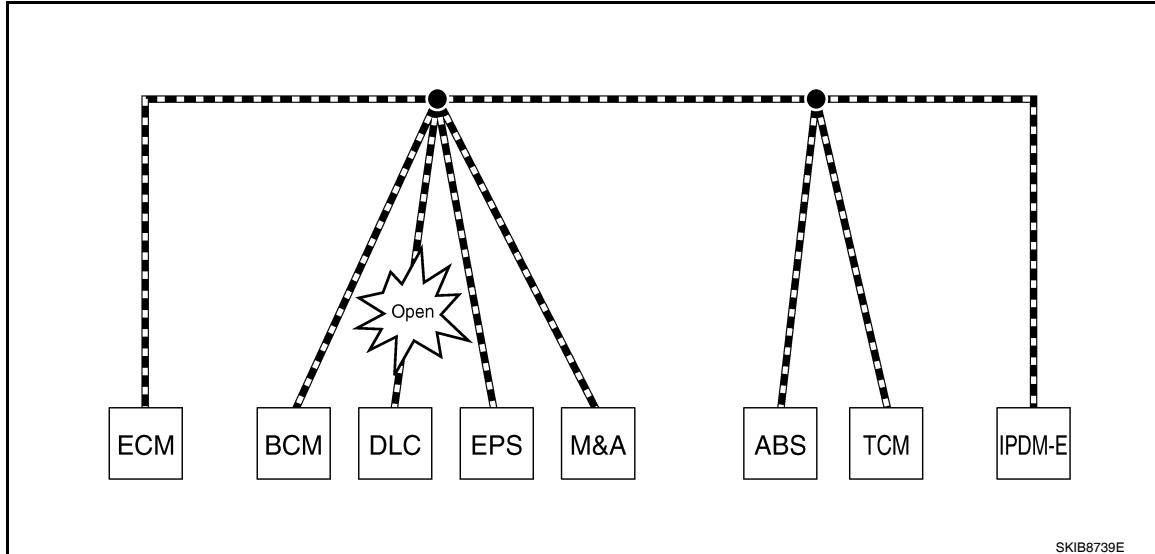

Unit name	Symptom
ECM	
BCM	
EPS control unit	
Combination meter	Normal operation.
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

- When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- When data link connector branch line is open, “ECU list” displayed on the CONSULT-III “CAN DIAG SUPPORT MNTR” may be the same as when the CAN communication line has short-circuit. However, symptoms differ depending on the case. See below chart for the differences.


	“ECU list” on the “CAN DIAG SUPPORT MNTR” (CONSULT-III)	Difference of symptom
Data link connector branch line open circuit		Normal operation.
CAN-H, CAN-L harness short-circuit	All Diag on CAN units are not indicated.	Most of the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]


< SYSTEM DESCRIPTION >

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

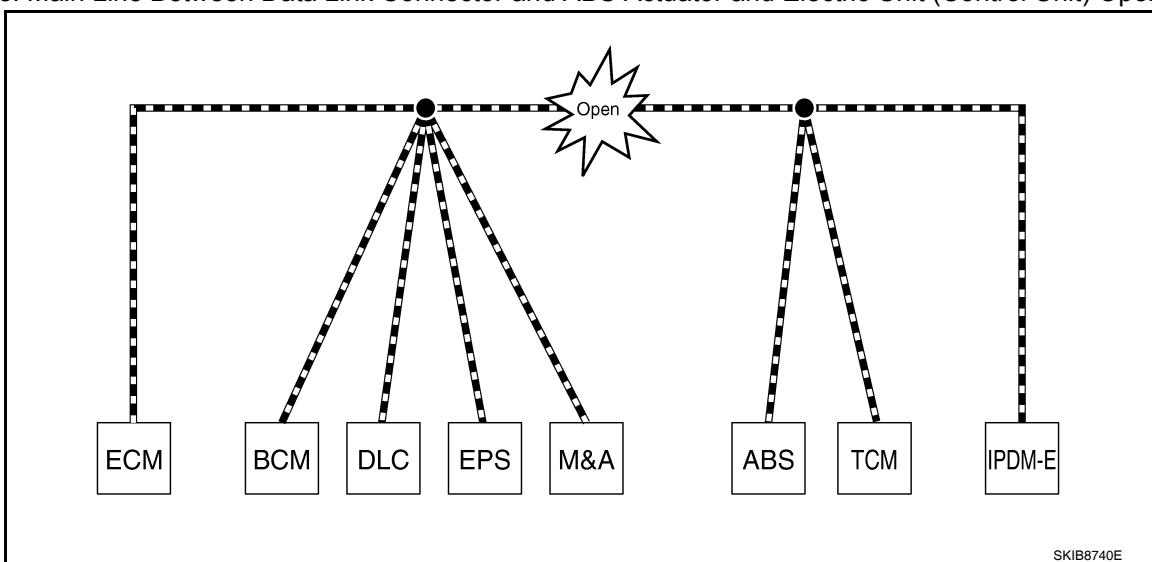

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> Reverse warning chime does not sound. The front wiper moves under continuous operation mode even though the front wiper switch is in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> The shift position indicator and OD OFF indicator turn OFF. The speedometer is inoperative. The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	<p>When the ignition switch is ON,</p> <ul style="list-style-type: none"> The headlamps (Lo) turn ON. The cooling fan continues to rotate.

Example: CAN-H, CAN-L Harness Short Circuit

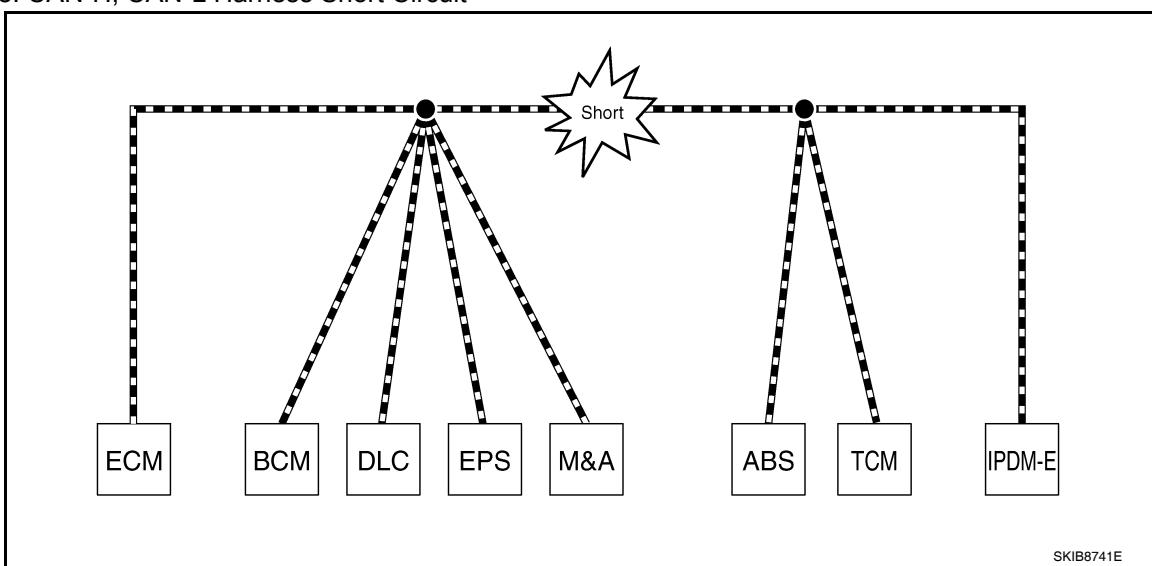

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Unit name	Symptom
ECM	<ul style="list-style-type: none"> • Engine torque limiting is affected, and shift harshness increases. • Engine speed drops.
BCM	<ul style="list-style-type: none"> • Reverse warning chime does not sound. • The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. • The room lamp does not turn ON. • The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) • The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> • The tachometer and the speedometer do not move. • Warning lamps turn ON. • Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> • The headlamps (Lo) turn ON. • The cooling fan continues to rotate.

Self-Diagnosis

INFOID:000000006179103

If communication signals cannot be transmitted or received among units communicating via CAN communication line, CAN communication-related DTC is displayed on the CONSULT-III "Self Diagnostic Result" screen.

NOTE:

The following table shows examples of CAN communication-related DTC. For other DTC, refer to the applicable sections.

DTC	Self-diagnosis item (CONSULT-III indication)	DTC detection condition		Inspection/Action	
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Start the inspection. Refer to the applicable section of the indicated control unit.	
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.		
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.			
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.			
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		Replace the control unit indicating "U1010".	

CAN Diagnostic Support Monitor

INFOID:000000006179104

CONSULT-III and CAN diagnostic support monitor (on-board diagnosis function) are used for detecting root cause.

MONITOR ITEM (CONSULT-III)

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With PAST		
ECM			ECM		
	PRSN	PAST		PRSN	PAST
INITIAL DIAG	OK		TRANSMIT DIAG	OK	OK
TRANSMIT DIAG	OK		VDC/TCS/ABS		
TCM	OK		METER/M&A	OK	OK
VDC/TCS/ABS	UNKWN		BCM/SEC	OK	OK
METER/M&A	OK		ICC		
ICC	UNKWN		HVAC		
BCM/SEC	OK		TCM	OK	OK
IPDM E/R	OK		EPS		

PKID1075E

Without PAST

Item	PRSN	Description	
Initial diagnosis	OK	Normal at present	
	NG	Control unit error (Except for some control units)	
Transmission diagnosis	OK	Normal at present	
	UNKWN	Unable to transmit signals for 2 seconds or more.	
		Diagnosis not performed	
Control unit name (Reception diagnosis)	OK	Normal at present	
	UNKWN	Unable to receive signals for 2 seconds or more.	
		Diagnosis not performed	
		No control unit for receiving signals. (No applicable optional parts)	

With PAST

Item	PRSN	PAST	Description	
Transmission diagnosis	OK	OK	Normal at present and in the past	
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)	
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.	
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past	
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)	
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.	
	–	–	Diagnosis not performed.	

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MONITOR ITEM (ON-BOARD DIAGNOSIS)

NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-III is not available.)

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Example: Vehicle Display

Item	Result indicated	Error counter	Description
CAN_COMM (Initial diagnosis)	OK	0	Normal at present
	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
CAN_CIRC_1 (Transmission diagnosis)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
CAN_CIRC_2 – 9 (Reception diagnosis of each unit)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
			Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Information Needed for Trouble Diagnosis

INFOID:000000006179105

CAN communication system performs trouble diagnosis with the following tools.

Tool	Usage
Interview sheet	For filling in vehicle information and interview with customer.
Data sheet	For copying on-board diagnosis data.
Diagnosis sheet	For detecting the root cause. (Diagnosis sheet includes system diagram for every CAN system type)
ECU list (On the "CAN DIAG SUPPORT MNTR")	
SELF-DIAG RESULTS (CONSULT-III)	For checking the condition of control units and the status of CAN communication.
CAN DIAG SUPPORT MNTR (CONSULT-III)	
CAN communication signal chart	For converting information received from a customer into CAN communication signal transmission and reception. This information can be used to judge whether a circuit between control units is normal or abnormal.
Abbreviation list	For checking abbreviations in CAN communication signal chart and diagnosis sheet.

How to Use CAN Communication Signal Chart

INFOID:000000006179106

The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal			T			R
Sleep/wake up signal			T	R		R

No communication between ECM and M&A.

It indicates that an error occurs between ECM and M&A (Shaded area).

CAN-H, CAN-L

SKIB8715E


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Trouble Diagnosis Flow Chart

INFOID:000000006179107

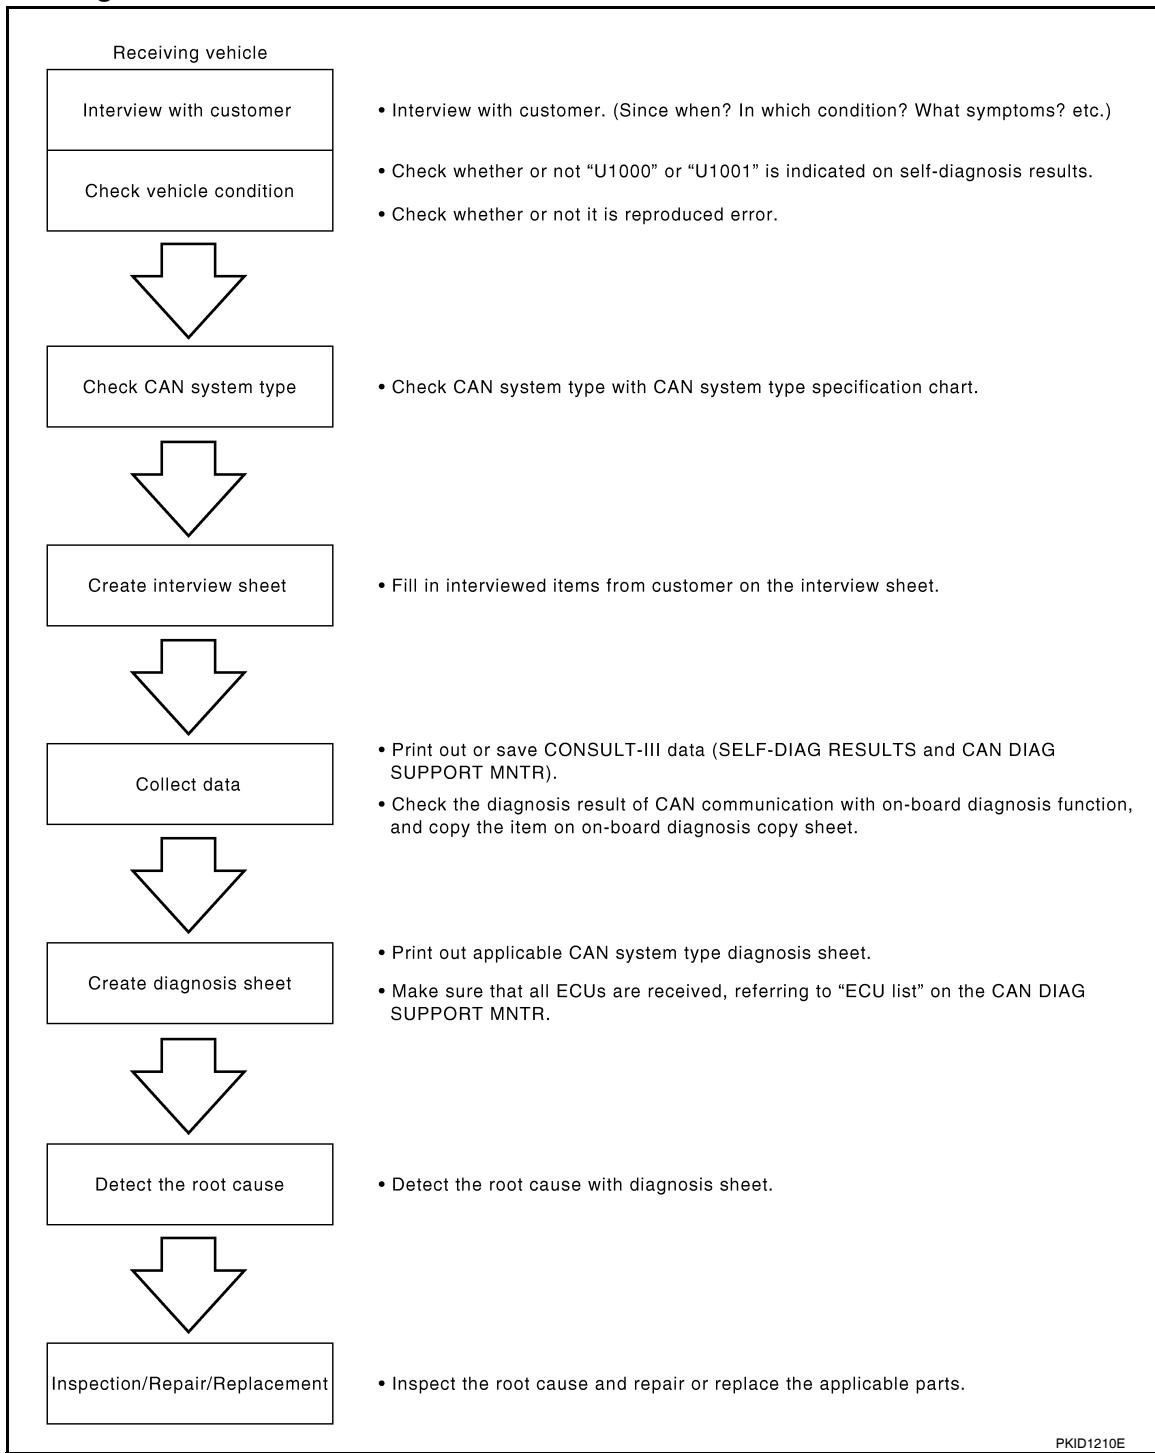

PKID1210E

Trouble Diagnosis Procedure

INFOID:000000006179108

INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview


- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment

< BASIC INSPECTION >

- Result: Symptom

NOTE:

- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.
- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

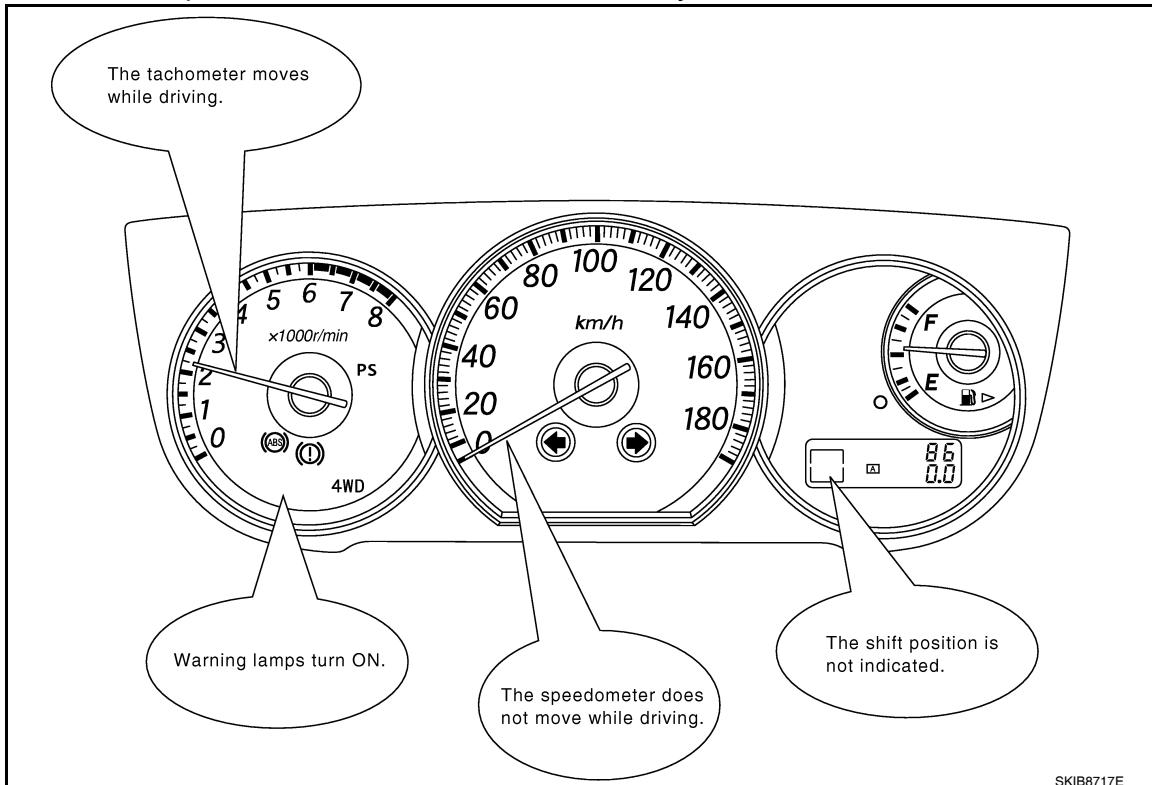

INSPECTION OF VEHICLE CONDITION

- Check whether or not "U1000" or "U1001" is indicated on "SELF-DIAG RESULTS" by CONSULT-III.

NOTE:

Root cause cannot be detected using the procedure in this section if "U1000" or "U1001" is not indicated.

- Check whether the symptom is reproduced or not.

NOTE:

- Do not turn the ignition switch OFF or disconnect the battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.
- The procedures for present errors differ from the procedures for past errors. Refer to "DETECT THE ROOT CAUSE".

K

L

LAN

CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment. Then choose the correct diagnosis sheet.

NOTE:

There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

CAN System Type Specification Chart (Style A)

NOTE:

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (shows an example of CAN system type.)

CAN System Specification Chart

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Wagon					
Axle	2WD				AWD	
Engine	QR25DE				VQ35DE	
Transmission	A/T				CVT	
Brake control	ABS				VDC	
Intelligent Key system	X		X		X	
CAN system type	1	2	3	4	5	6
Diagnosis sheet	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)
CAN communication signal chart	XX-XX. "TYPE 1/TYPE 2"	XX-XX. "TYPE 3/TYPE 4"	XX-XX. "TYPE 5/TYPE 6"			


X : Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION


NOTE:

Check CAN system type from the vehicle shape and equipment.

With VDC

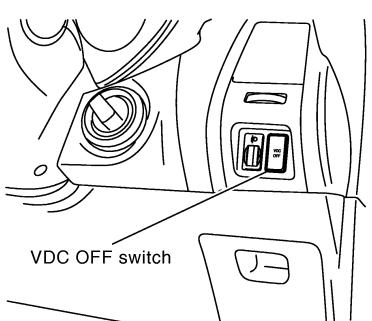

With Intelligent Key system

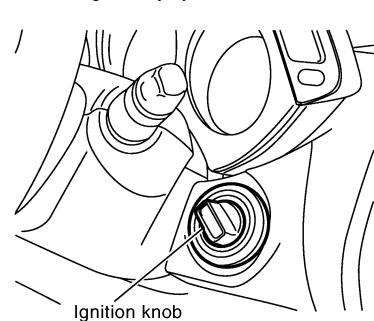

Check the vehicle equipment with the vehicle identification number plate.

Check the vehicle equipment.

The number indicates the CAN system type of the vehicle.

In the above example,

- Checking VDC OFF switch leads to judge whether or not VDC is equipped.

- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.

[For the above case, CAN system type is "6"]

SKIB8888E

CAN System Type Specification Chart (Style B)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. () shows an example of CAN system type.)

CAN System Specification Chart

Refer to the specification as shown in the chart.

Body type	Sedan		Check the vehicle equipment with the vehicle identification number plate.	
Axle	2WD			
Engine	MR20DE			
Transmission	CVT			
Brake control	ABS			
Specification chart	XXXX SPECIFICATION CHART A	XXXX SPECIFICATION CHART B	Select the applicable vehicle equipment. Refer to the specification chart.	
x: Applicable				

SPECIFICATION CHART B

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Sedan																		
Axle	2WD																		
Engine	MR20DE																		
Transmission	CVT																		
Brake control	ABS																		
Active AFS	x				x	x			x	x									
Intelligent Key system		x			x		x	x	x	x	x	x	x	x	x	x	x	x	
Navigation system			x			x	x		x		x	x	x	x	x	x	x	x	
Automatic drive positioner				x				x		x	x	x	x	x	x	x	x	x	
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20							
Diagnosis sheet	XX:XX	XX:XX	XX:XX	XX:XX	XX:XX	XX:XX	XX:XX	XX:XX	XX:XX	XX:XX	XX:XX								
CAN communication signal chart	XX:XX TYPE 9/TYPE 10/TYPE 11/TYPE 12/TYPE 13/TYPE 14/TYPE 15/TYPE 16/TYPE 17/TYPE 18/TYPE 19/TYPE 20																		

x: Applicable


Check the vehicle equipment.

The number indicates the CAN system type of the vehicle.

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

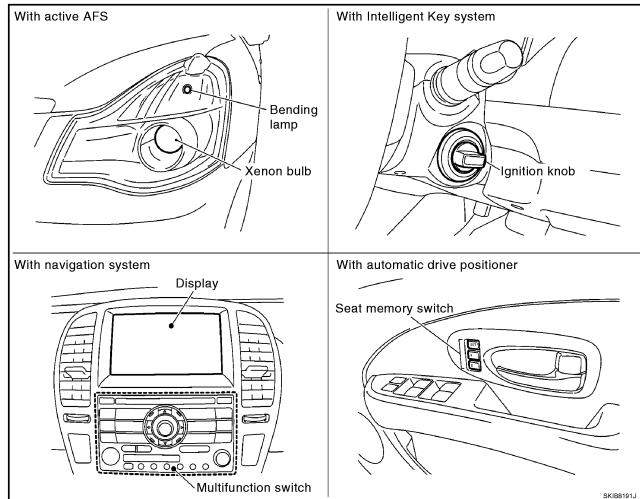

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

For the above case, CAN system type is "20".

SKIB889E

CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet

Date received:

Type:

VIN No.:

Model:

First registration:

Mileage:

CAN system type:

Symptom (Results from interview with customer)

- Headlamps suddenly turn ON while driving the vehicle.
- The engine does not restart after stopping the vehicle and turning the ignition switch OFF.
- The cooling fan continues rotating while turning the ignition switch ON.

Condition at inspection

Error Symptom: Present / Past

The engine does not start.
While turning the ignition switch ON,
• The headlamps (Lo) turn ON, and the cooling fan continues rotating.
• The interior lamp does not turn ON.
On CONSULT-III screen,
• IPDM E/R is not indicated on SELECT SYSTEM.
• ENGINE: U1001
• BCM, ADAPTIVE LIGHT: U1000

PKID1211E

COLLECT DATA

Collect CONSULT-III Data

Print out or save the following CONSULT-III data.

- SELF-DIAG RESULTS
- CAN DIAG SUPPORT MNTR ("ECU list" included)


NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

Some items may not be needed depending on CAN system type of vehicle.

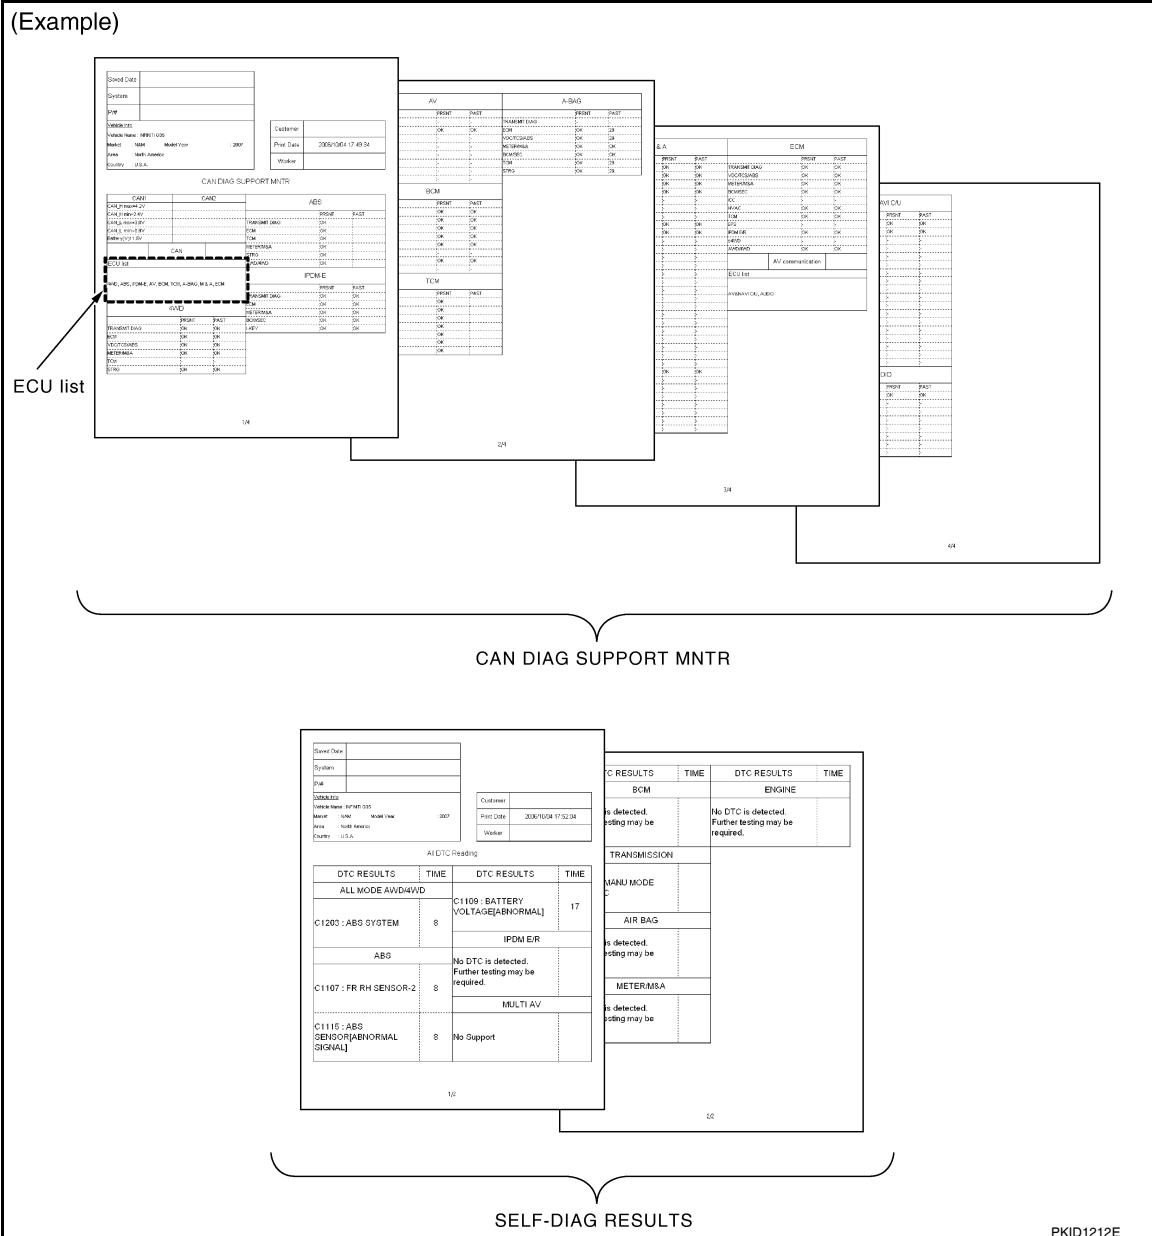

Create On-board Diagnosis Copy Sheet

Display the trouble diagnosis result of CAN communication with the on-board diagnosis function on the vehicle monitor, etc. Copy them on the on-board diagnosis copy sheet.

NOTE:

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


[CAN FUNDAMENTAL]

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-III is not available.)

Example: Copy the diagnosis result of CAN communication from the vehicle monitor.

Vehicle monitor indication

CAN DIAG SUPPORT MONITOR			
CAN_COMM	OK	0	<input type="button" value="Delete"/>
CAN_CIRC_1	OK	0	
CAN_CIRC_2	UNKWN	12	
CAN_CIRC_3	UNKWN	12	
CAN_CIRC_4	UNKWN	0	
CAN_CIRC_5	OK	0	
CAN_CIRC_6	UNKWN	0	
CAN_CIRC_7	OK	0	
CAN_CIRC_8	UNKWN	0	
CAN_CIRC_9	UNKWN	50	

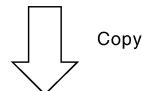

Copy

Vehicle monitor (Display control unit) CAN DIAG SUPPORT MONITOR copy sheet

Indication item (Diagnosis item)	Vehicle monitor		Indication item (Diagnosis item)	Vehicle monitor	
	Result indicated	Error counter		Result indicated	Error counter
CAN_COMM (Initial diagnosis)	OK	0	CAN_CIRC_5 (Receive diagnosis of Unified meter and A/C amp.)	OK	0
CAN_CIRC_1 (Transmit diagnosis)	OK	0	CAN_CIRC_6	Not available	
CAN_CIRC_2 (Receive diagnosis of BCM)	UNKWN	12	CAN_CIRC_7 (Receive diagnosis of IPDM E/R)	OK	0
CAN_CIRC_3 (Receive diagnosis of ECM)	UNKWN	12	CAN_CIRC_8	Not available	
CAN_CIRC_4	Not available		CAN_CIRC_9	Not available	

Result indicated: Fill in the indication (OK, NG or UNKWN).

Error counter: Fill in the indicated number.

SKIB8722E

CREATE DIAGNOSIS SHEET

NOTE:

Be sure to use the diagnosis sheet for the correct CAN system type.

Print Diagnosis Sheet

Print the diagnosis sheet for the applicable CAN system type.

Check Collected Data


Make sure that all ECUs are received, referring to "ECU list".

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

- For abbreviations, refer to [LAN-36, "Abbreviation List".](#)

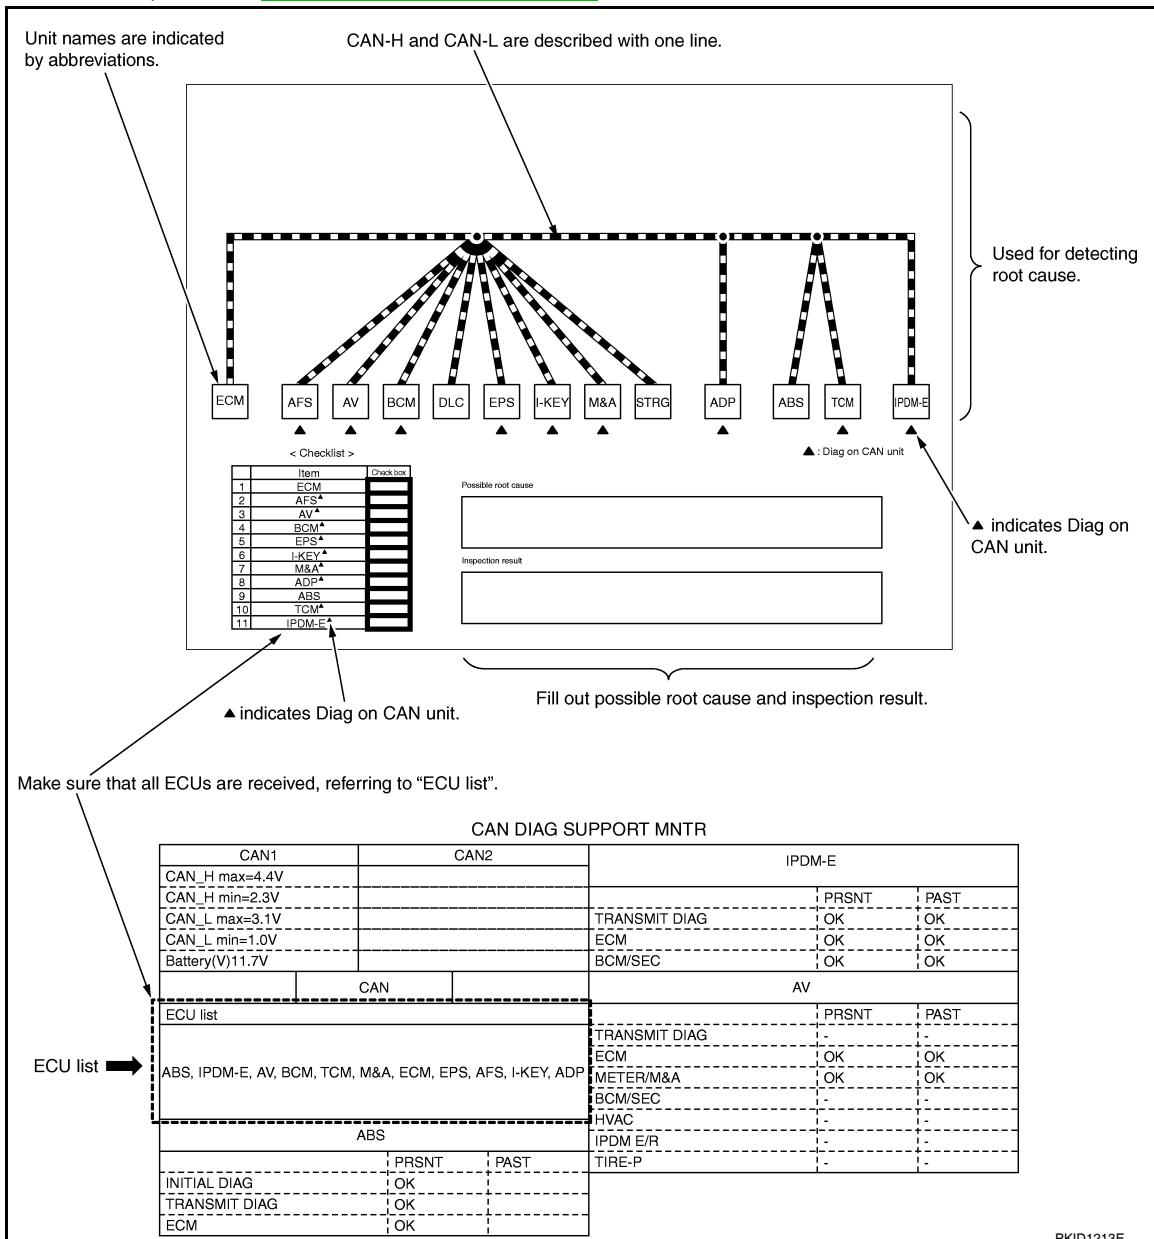

DETECT THE ROOT CAUSE

Identify the root cause using the created diagnosis sheet.

Identifying the root cause

- Draw a line on the diagnosis sheet to indicate the possible cause. Narrow the search.

NOTE:

- Color-code when drawing lines.
- Do not draw a line onto an existing line.
- Drawing a line is not necessary if the circuit is shorted. Refer to "Present Error — Short Circuit —", "Past Error — Short Circuit —".

Refer to the following for details of the trouble diagnosis procedure.

- "Present Error — Open Circuit —"
- "Present Error — Short Circuit —"
- "Past Error — Open Circuit —"
- "Past Error — Short Circuit —"

NOTE:

When the root cause appears to be a branch line or short circuit, be sure to check the control unit as well as the communication line.

Present Error — Open Circuit —

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Identify the error circuit using information from the “CAN DIAG SUPPORT MNTR” (“ECU list” included).

1. ECU list: Check the items indicated in “ECU list”. Draw a line on the diagnosis sheet to indicate the error circuit.

NOTE:

CAN communication line has no error if units other than Diag on CAN units are not indicated. An error may be on the power supply of the control unit, DDL1 line or DDL2 line.


- a. “TCM” which is Diag on CAN unit, is not indicated on “ECU list”. This indicates that DLC is not receiving a signal from TCM. Draw a line to indicate an error between DLC and TCM (line 1-a in the figure below).

NOTE:

- Diag on CAN units are not indicated on the “ECU list” when the CAN line between Diag on CAN unit and the data link connector is open.
- For a description of Diag on CAN, refer to [LAN-6, "Description"](#).

(Example)

CAN1			CAN2		IPDM-E			
CAN_H max=4.3V					PRSENT	PAST		
CAN_H min=1.0V					OK	OK		
CAN_L max=3.1V			TRANSMIT DIAG		OK	OK		
CAN_L min=0.6V			ECM		OK	OK		
Battery(V)11.7V			BCM/SEC		OK	OK		
	CAN			AV				
ECU list				PRSENT	PAST			
ABS, IPDM-E, AV, BCM, M&A, ECM, EPS, AFS, I-KEY, ADP			TRANSMIT DIAG		OK	OK		
			ECM		OK	OK		
			METER/M&A		OK	OK		
			BCM/SEC					
			HVAC					

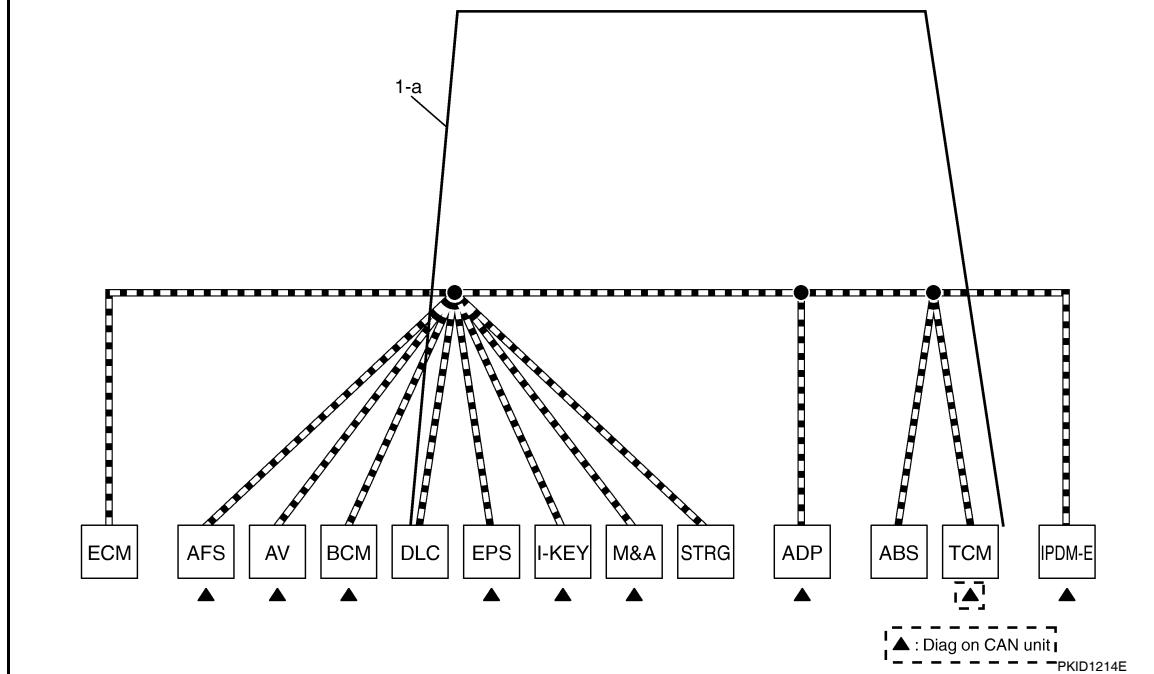

2. CAN DIAG SUPPORT MNTR: Check each item on “CAN DIAG SUPPORT MNTR”. Draw a line on the diagnosis sheet to indicate the error circuit.

- a. Reception item of “ECM”: On “TCM”, “UNKWN” is indicated. This means ECM cannot receive the signal from TCM. Draw a line to indicate an error between ECM and TCM (line 2-a in the figure below).

NOTE:

If “UNKWN” is indicated on “TRANSMIT DIAG”, then the control unit cannot transmit CAN communication signal to each unit. Draw a line between the control unit and the splice.

- b. Reception item of “AFS”: On “TCM”, “UNKWN” is indicated. This means AFS cannot receive the signal from TCM. Draw a line to indicate an error between AFS and TCM (line 2-b in the figure below).


DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

c. Reception item of "AV": "UNKWN" is not indicated. This indicates normal communication between AV and its receiving units. Do not draw any line.

(Example)

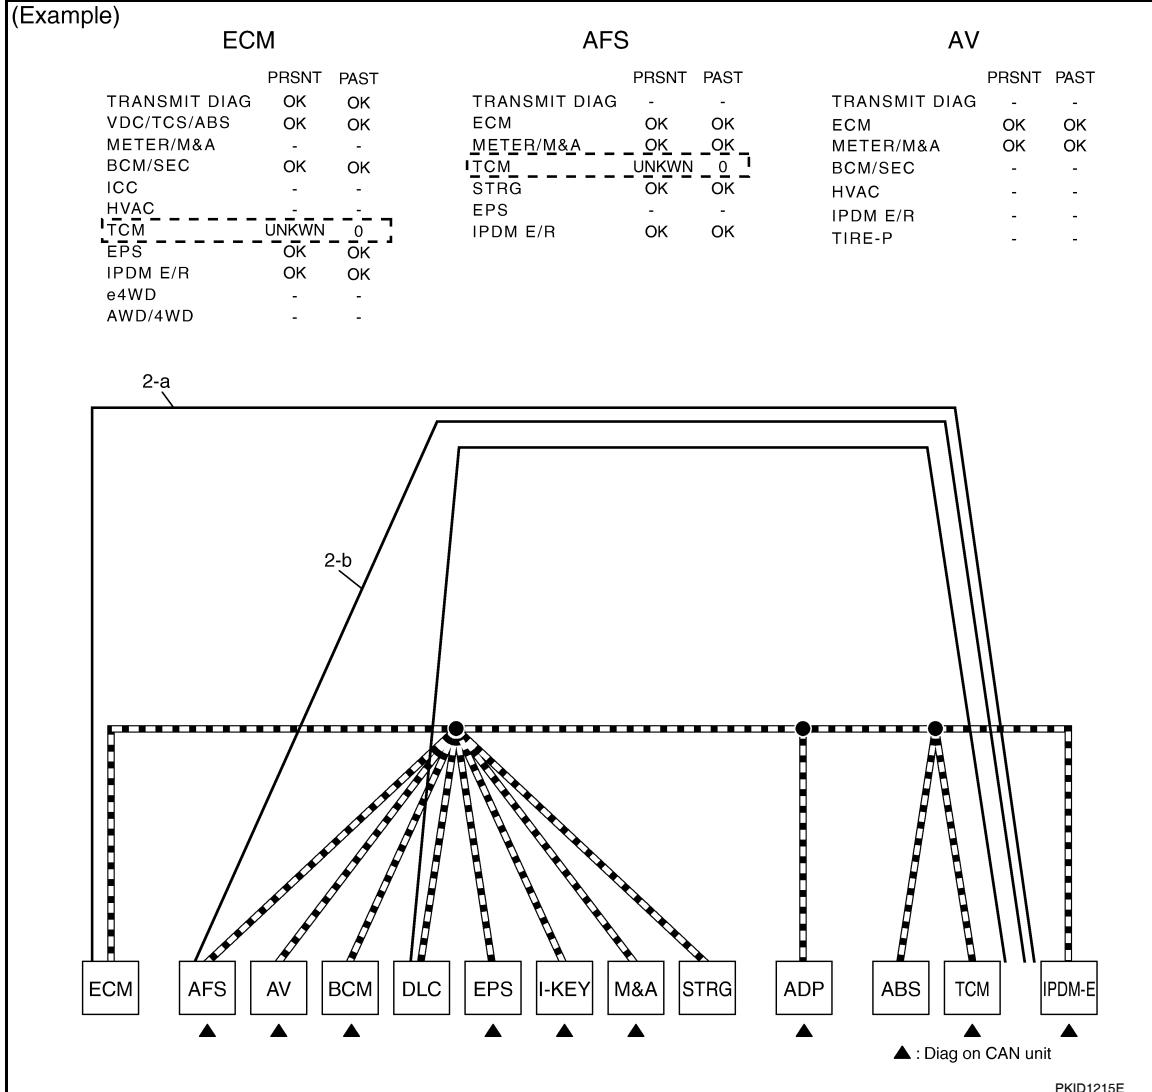

d. Reception item of "BCM": On "TCM", "UNKWN" is indicated. This means BCM cannot receive the signal from TCM. Draw a line to indicate an error between BCM and TCM (line 2-d in the figure below).

e. Reception item of "EPS" and "I-KEY": "UNKWN" is not indicated. This indicates normal communication between EPS and I-KEY and their receiving units. Do not draw any line.

NOTE:

A

B

C

D

E

F

G

H

I

J

K

LAN

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

On CAN DIAG SUPPORT MNTR (without PAST), "UNKWN" is indicated even though the item is not used in the trouble diagnosis. For the details of each item on CAN diagnostic support monitor, refer to [LAN-54, "CAN Diagnostic Support Monitor"](#).

(Example)

BCM


	PRSNT	PAST
TRANSMIT DIAG	OK	OK
ECM	OK	OK
METER/M&A	OK	OK
ITCM	UNKWN	0
MULTI AV	-	-
IPDM E/R	OK	OK
I-KEY	OK	OK

EPS

	PRSNT	PAST
TRANSMIT DIAG	OK	
ECM	OK	
VDC/TCS/ABS	OK	
METER/M&A	OK	

I-KEY

	PRSNT	PAST
TRANSMIT DIAG	OK	OK
ECM	OK	OK
METER/M&A	OK	OK
BCM/SEC	OK	OK

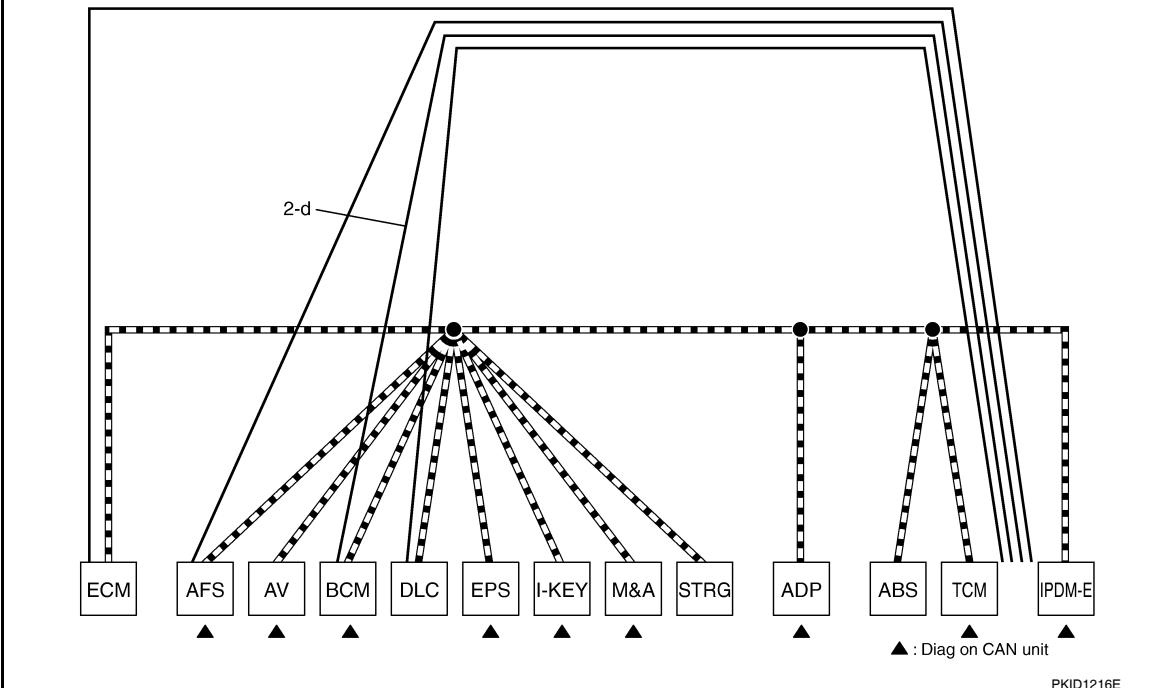

PKID1216E

- f. Reception item of "M&A": On "TCM", "UNKWN" is indicated. This means M&A cannot receive the signal from TCM. Draw a line to indicate an error between M&A and TCM (line 2-f in the figure below).
- g. Reception item of "ADP": On "TCM", "UNKWN" is indicated. This means ADP cannot receive the signal from TCM. Draw a line to indicate an error between ADP and TCM (line 2-g in the figure below).


DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

h. Reception item of "ABS": "UNKWN" is not indicated. This indicates normal communication between ABS and its receiving units. Do not draw any line.

(Example)

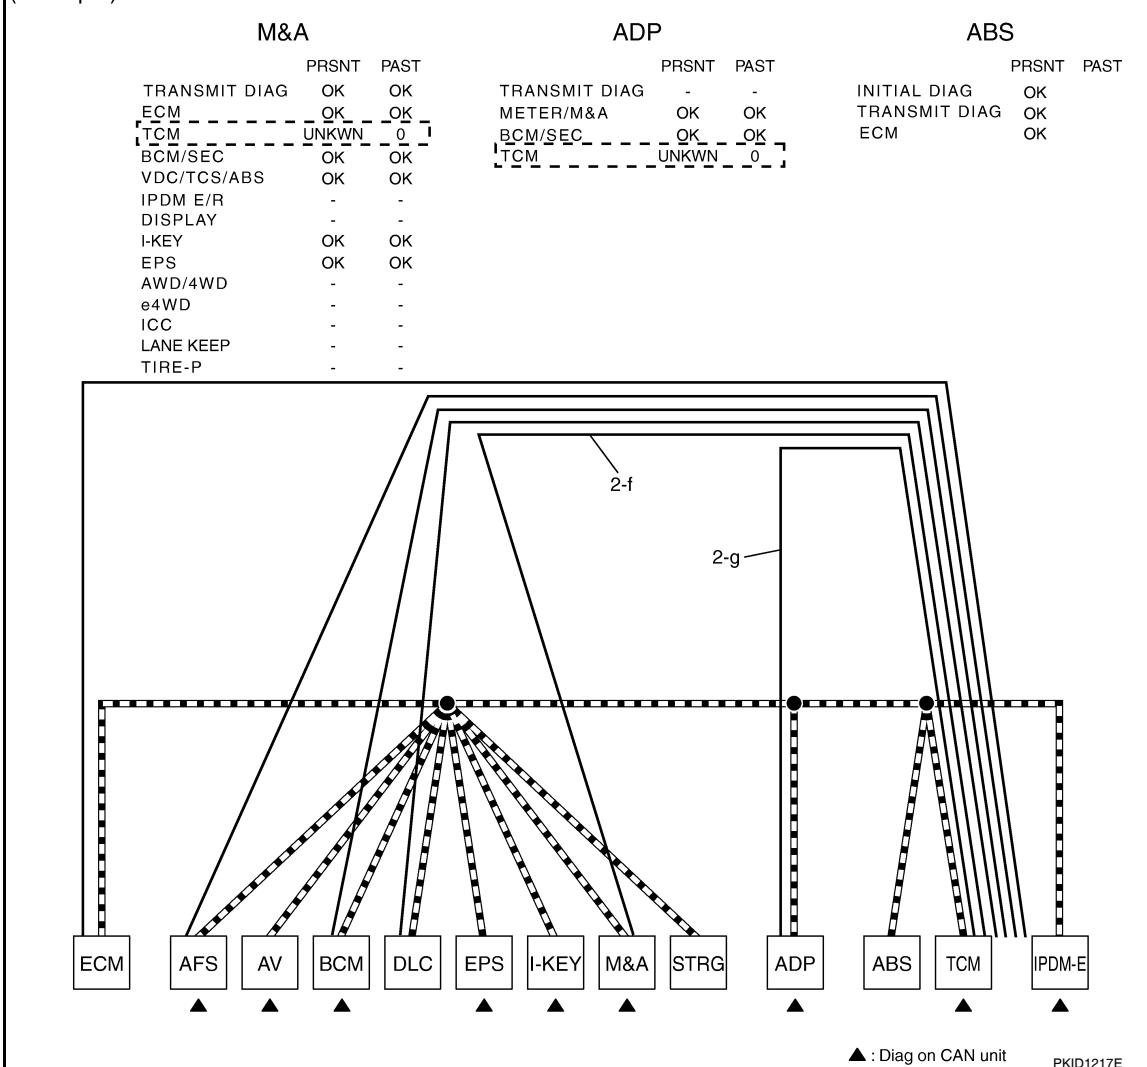

i. Reception item of "IPDM-E": "UNKWN" is not indicated. This indicates normal communication between IPDM-E and its receiving units. Do not draw any line.

3. Based on information received from "CAN DIAG SUPPORT MNTR", place a check mark on the known good CAN communication line between ECM and IPDM-E.

a. Through the previous procedure, the circuit between ADP splice and TCM has the most amount of lines (shade 3-a in the figure below).

b. Place a check mark on the known good lines to establish the error circuit.


DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

Reception item of "IPDM-E": On "ECM", "OK" is indicated. IPDM-E communicates normally with ECM. Put a check mark on the normal circuit between ECM and IPDM-E (check mark 3-b in the figure below).

(Example)

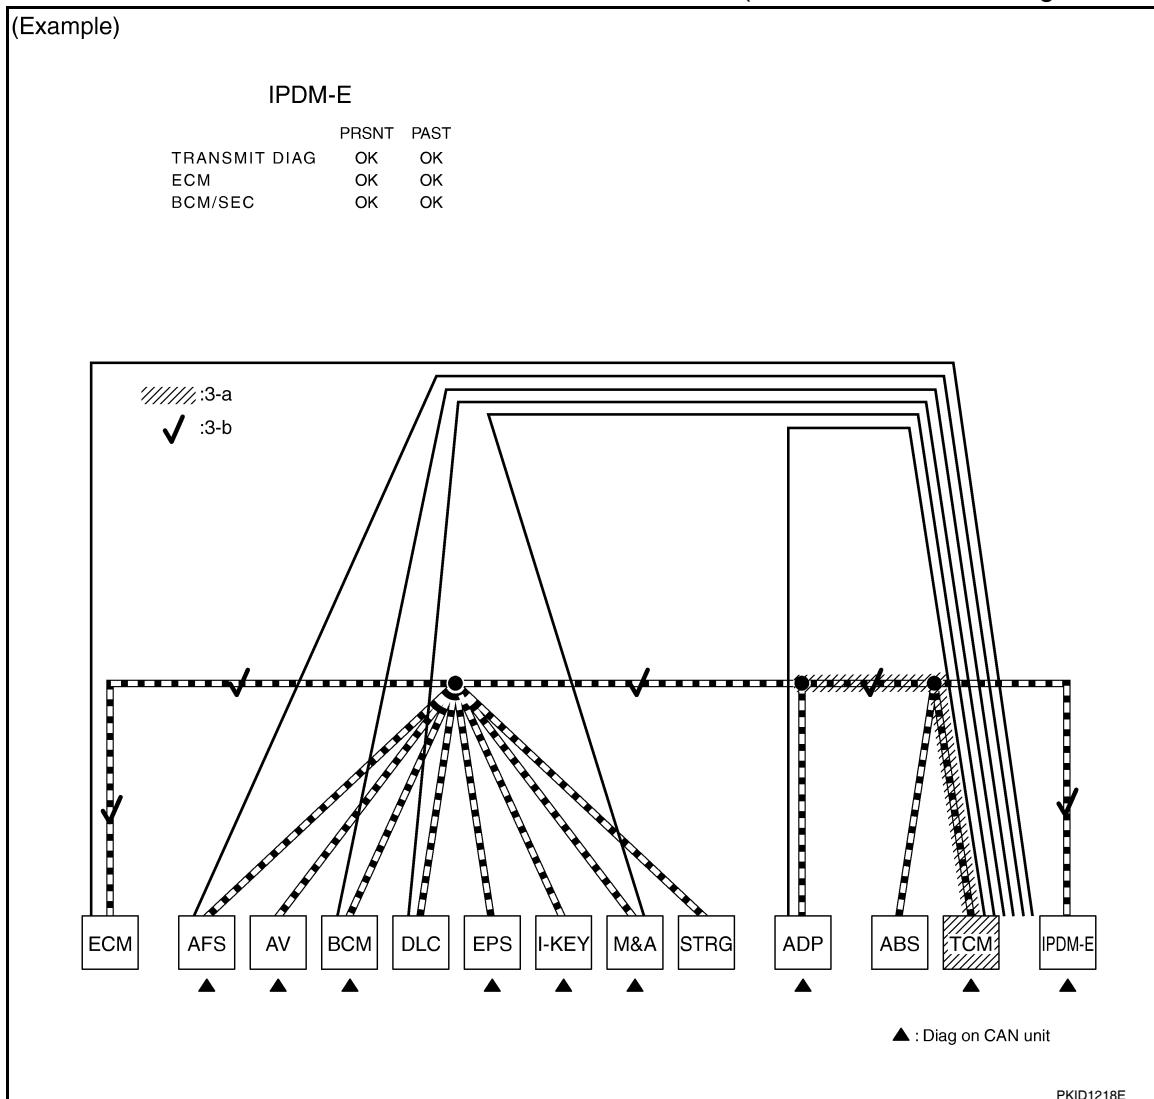

4. Through the above procedure, the error is detected in the TCM branch line (shaded in the figure below).

NOTE:

For abbreviations, refer to [LAN-36, "Abbreviation List"](#).


DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

5. Perform the inspection for the detected error circuit. For the inspection procedure, refer to "MALFUNCTION AREA CHART".

(Example)

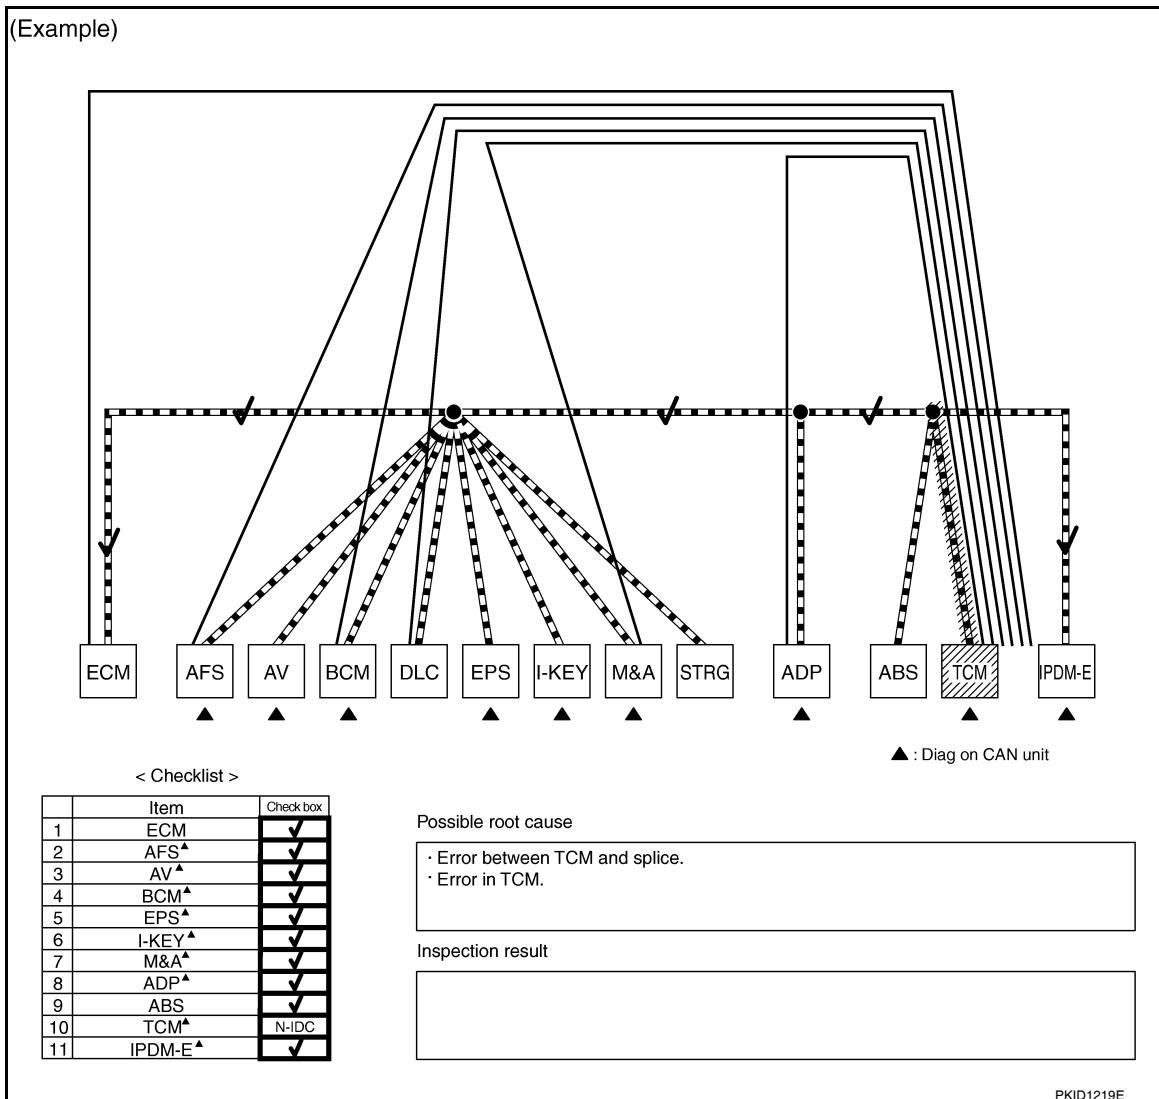

Present Error — Short Circuit —

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.

Received data

Item (CONSULT-III)	Indication
ECU list (on the CAN DIAG SUPPORT MNTR)	All Diag on CAN units are not indicated.
CAN DIAG SUPPORT MNTR	"UNKWN" is indicated under "TRANSMIT DIAG" and most reception items.

Error symptom

- Most the units connected to the CAN communication system go into fail-safe mode or are deactivated.

Inspection procedure

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- Refer to "MALFUNCTION AREA CHART".

(Example)

CAN DIAG SUPPORT MNTR

CAN1	CAN2	ECM	
CAN_H max=4.3V		PRSN	PAST
CAN_H min=1.0V		UNKNW	0
CAN_L max=3.1V		UNKNW	0
CAN_L min=0.6V		-	-
Battery(V)11.7V		TRANSMIT DIAG	UNKNW
	CAN	VDC/TCS/ABS	UNKNW
		METER/M&A	-
ECU list		BCM/SEC	UNKNW
		ICC	-
ABS, ECM		HVAC	-
		TCM	UNKNW
		EPS	UNKNW
		IPDM E/R	UNKNW
		e4WD	-
		AWD/4WD	-
ABS		PRSN	
INITIAL DIAG		PAST	
TRANSMIT DIAG		UNKNW	
ECM		UNKNW	

All Diag on CAN units are not indicated.

"UNKWN" is indicated under most reception items of CAN DIAG SUPPORT MNTR.

PKID1220E

Past Error — Open Circuit —

Review CAN communication signal chart based on information received from the interview with the customer and on past error information from SELF-DIAG RESULTS and CAN DIAG SUPPORT MNTR.

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

1. SELF-DIAG RESULTS: Inspect the control units indicating “U1000” or “U1001” on SELF-DIAG RESULTS.

ALL DTC READING			
DTC RESULTS	TIME	DTC RESULTS	TIME
ABS		BCM	
U1000 : CAN COMM CIRCUIT	3	No DTC is detected. Further testing may be required.	
IPDM E/R		TRANSMISSION	
No DTC is detected. Further testing may be required.		U1000 : CAN COMM CIRCUIT	3
MULTI AV		METER	
No DTC is detected. Further testing may be required.		U1000 : CAN COMM CIRCUIT	3
DTC RESULTS	TIME	DTC RESULTS	TIME
EPS		AUTO DRIVE POS.	
U1000 : CAN COMM CIRCUIT	PAST	No DTC is detected. Further testing may be required.	
ENGINE			
U1001 : CAN COMM CIRCUIT	1t		
ADAPTIVE LIGHT			
No DTC is detected. Further testing may be required.			
INTELLIGENT KEY			
No DTC is detected. Further testing may be required.			

PKID1221E

2. CAN DIAG SUPPORT MNTR (with PAST): Check the CAN DIAG SUPPORT MNTR (with PAST) of units indicating “U1000” or “U1001” on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.

NOTE:

For the details of each indication on CAN DIAG SUPPORT MNTR, refer to [LAN-54, "CAN Diagnostic Support Monitor"](#).

- a. Reception item of “ECM”: “VDC/TCS/ABS”, “3” is indicated in the “PAST”. This means ECM could not receive the signal from ABS in the past. Draw a line between ECM and ABS (line 2-a in the figure below).
- b. Reception item of “M&A”: “VDC/TCS/ABS”, “3” is indicated in the “PAST”. This means M&A could not receive the signal from ABS in the past. Draw a line between M&A and ABS (line 2-b in the figure below).


DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

c. Reception item of "TCM": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means TCM could not receive the signal from ABS in the past. Draw a line between TCM and ABS (line 2-c in the figure below).

(Example)

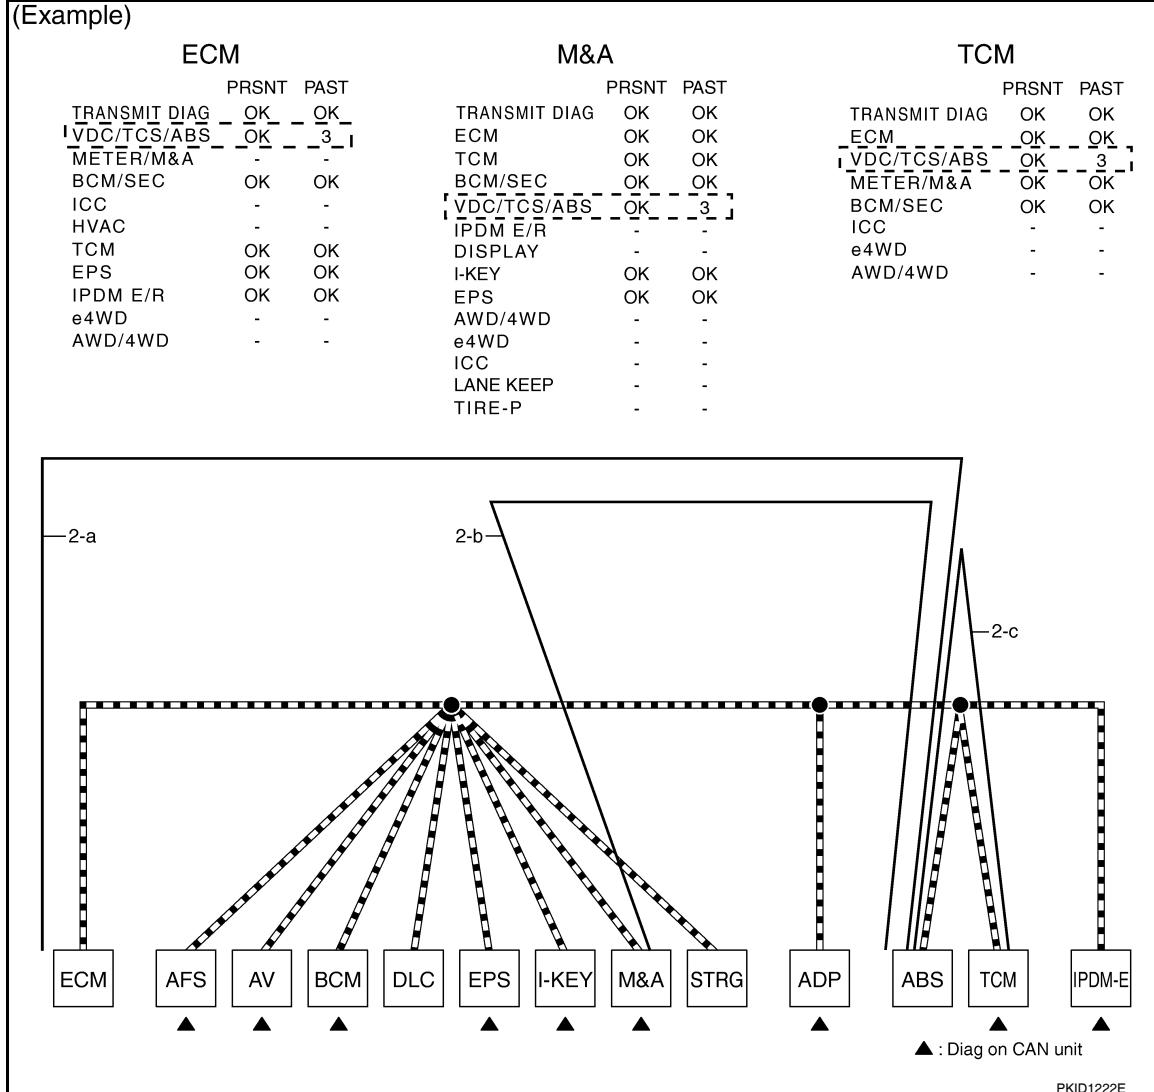

3. CAN DIAG SUPPORT MNTR (without PAST): Check the CAN DIAG SUPPORT MNTR (without PAST) of units indicating "U1000" or "U1001" on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.

NOTE:

- While an error occurred in the past according to SELF-DIAG RESULTS, it is unclear which signal is not received. Assume that errors were detected from all reception items.
- Draw a single line among the unit and all reception items. (Work flow differs from CAN DIAG SUPPORT MNTR (with PAST).)

a. Reception item of "EPS": Assume that the unit could not receive the signals from ECM, ABS, and M&A. Draw a line among EPS, ECM, ABS, and M&A (line 3-a in the figure below).


DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

b. Reception item of "ABS": Assume that the unit could not receive the signal from ECM. Draw a line between ABS and ECM (line 3-b in the figure below).

(Example)

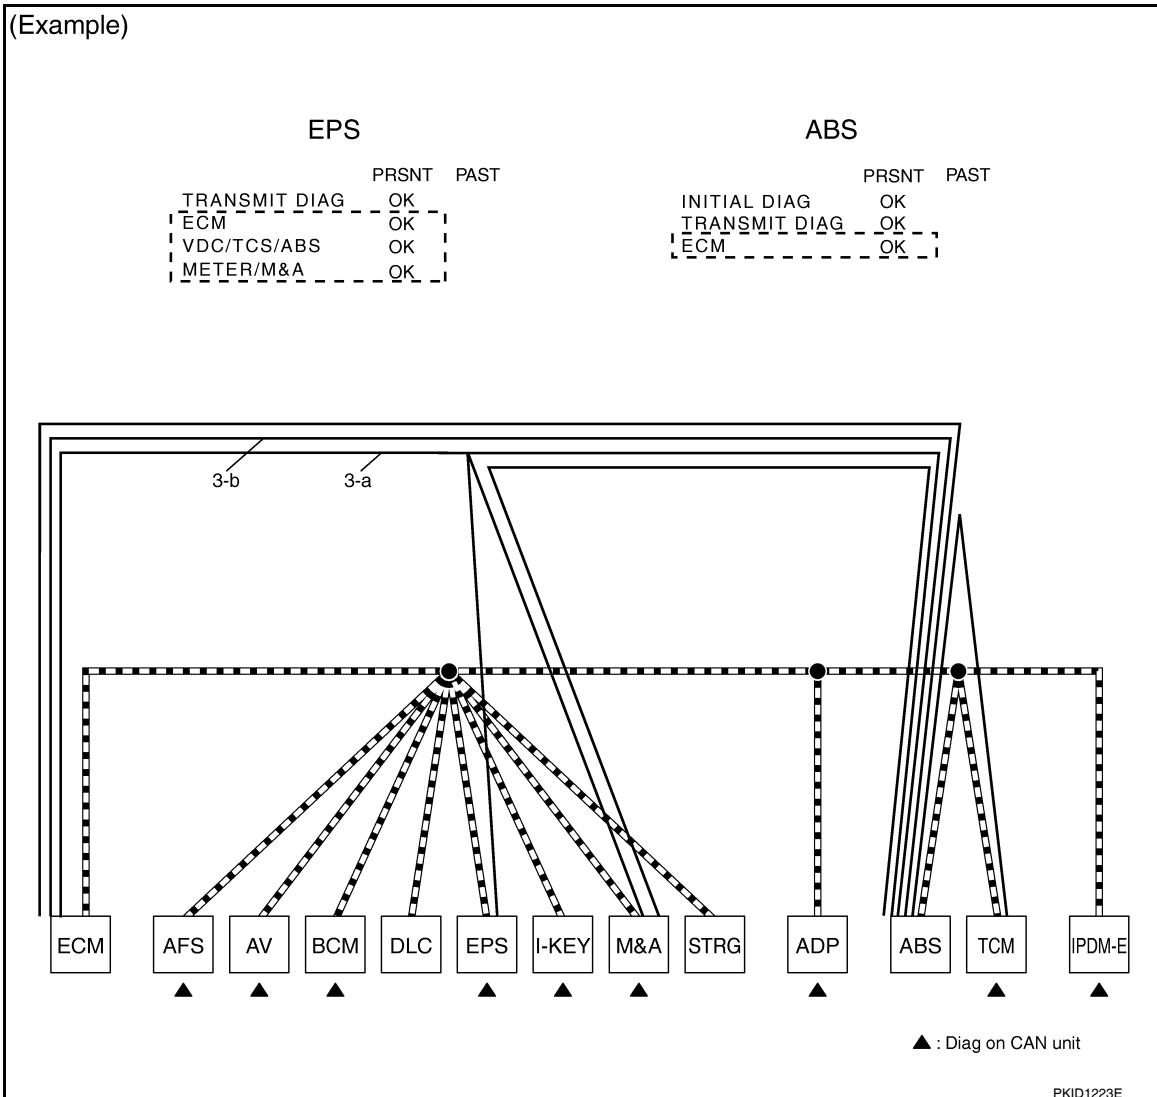

4. Search for the possible cause using CAN communication signal chart using information from the interview with the customer.

NOTE:

For the details of CAN communication signal, refer to [LAN-51, "CAN Communication Signal Chart"](#).

a. ABS warning lamp turned ON and speedometer did not move: This means that "ABS warning lamp signal" and "Vehicle speed signal" could not communicate between M&A and ABS (4-a in the figure below).


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

b. The tachometer moved normally: This means that “Engine speed signal” could communicate normally between ECM and M&A (4-b in the figure below).

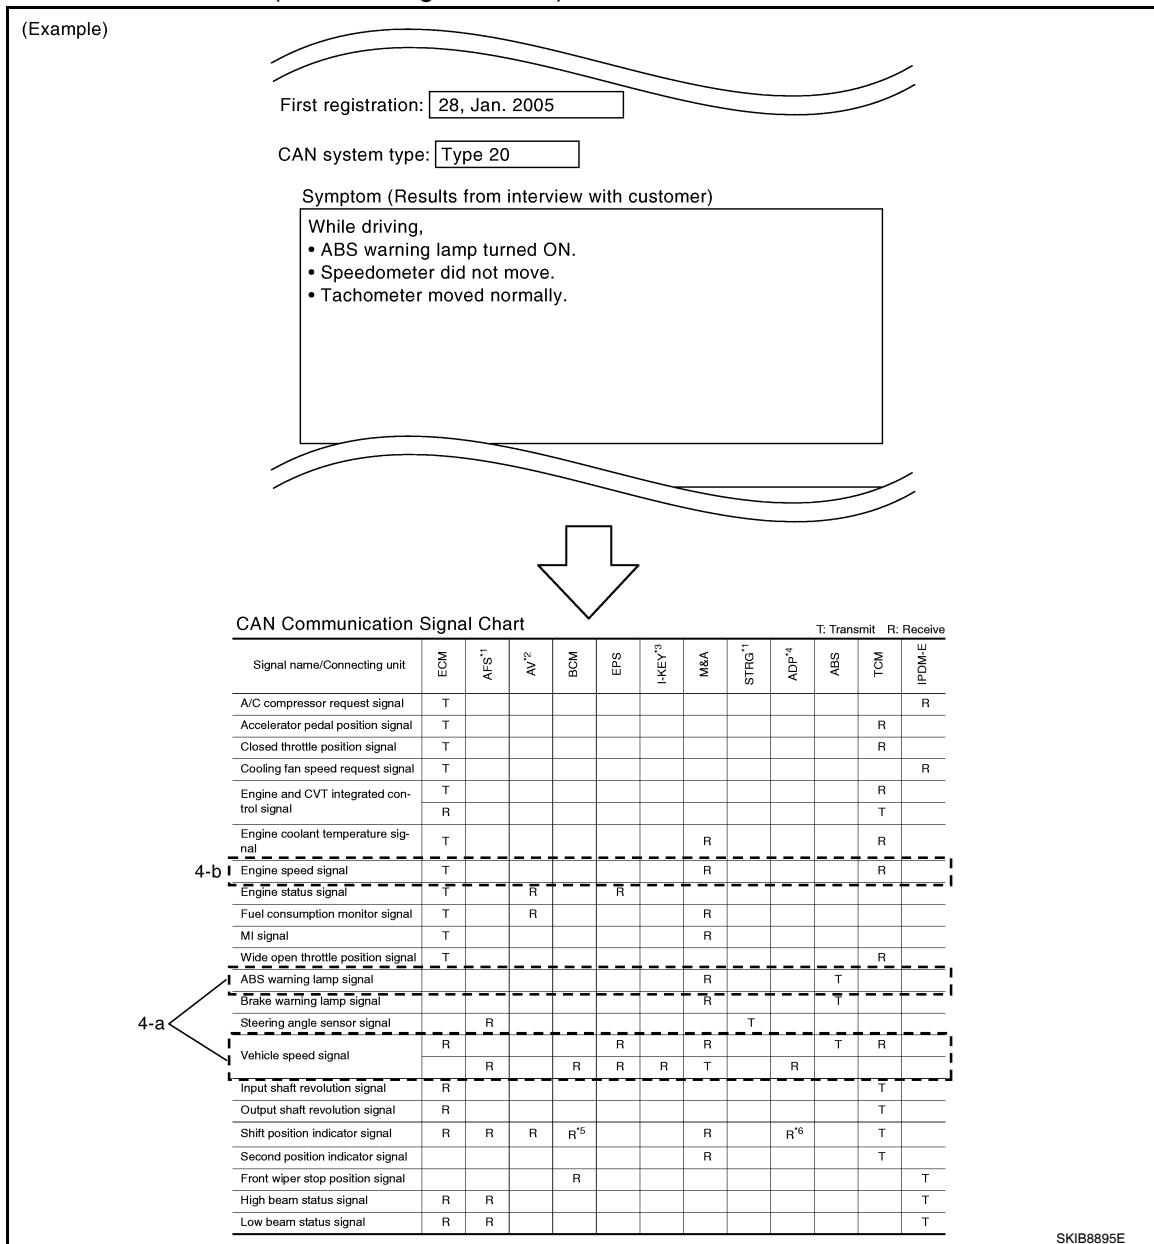

5. Fill out the diagnosis sheet based on information from step 4.

a. The ABS warning lamp turned ON and speedometer did not move: Assume that a possible cause is no communication between M&A and ABS. Draw a line between M&A and ABS. (Line 5-a in the figure below).


DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

b. The tachometer moved normally: Put check marks between ECM and M&A. The circuit between ECM and M&A is functioning properly (check marks 5-b in the figure below).

(Example)

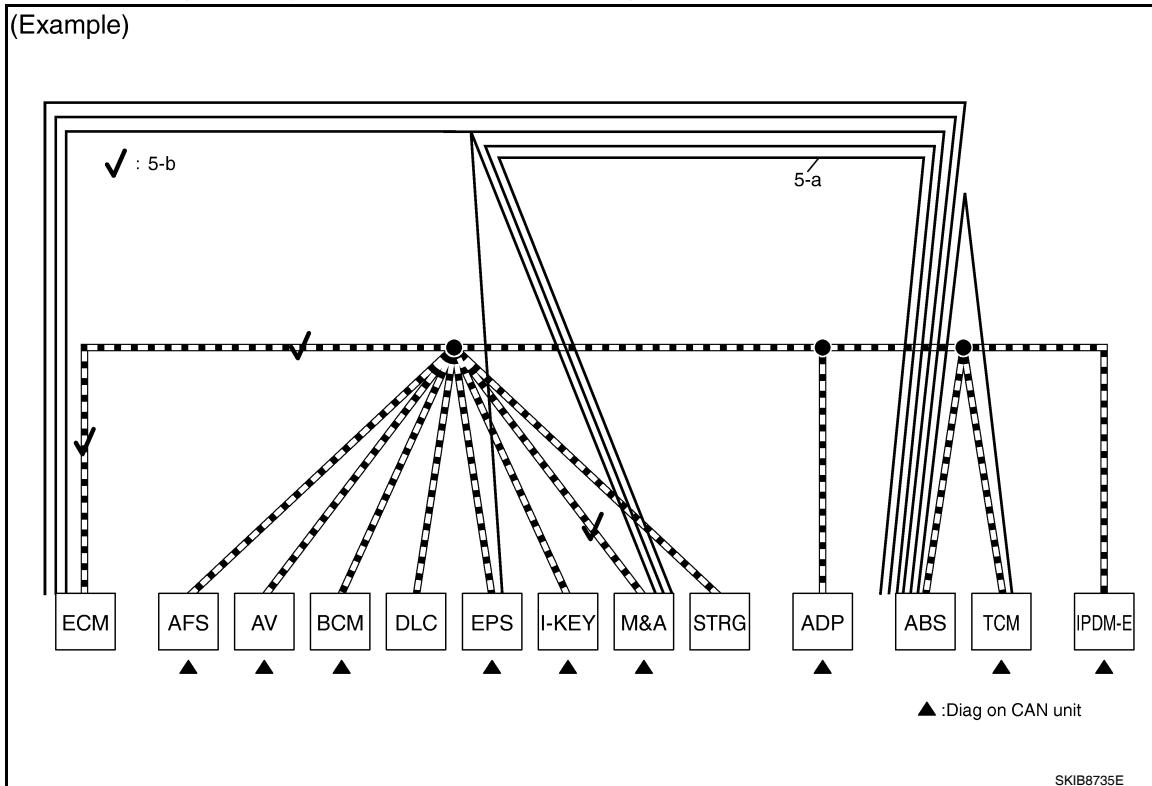

SKIB8735E

6. The circuit which has the most amount of lines are the possible cause. Error is detected from ABS actuator and electric unit (control unit) branch line (shaded in the figure below).

NOTE:

For abbreviations, refer to [LAN-36, "Abbreviation List"](#).

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

7. Perform the inspection procedure for the possible cause. Refer to "MALFUNCTION AREA CHART".

(Example)

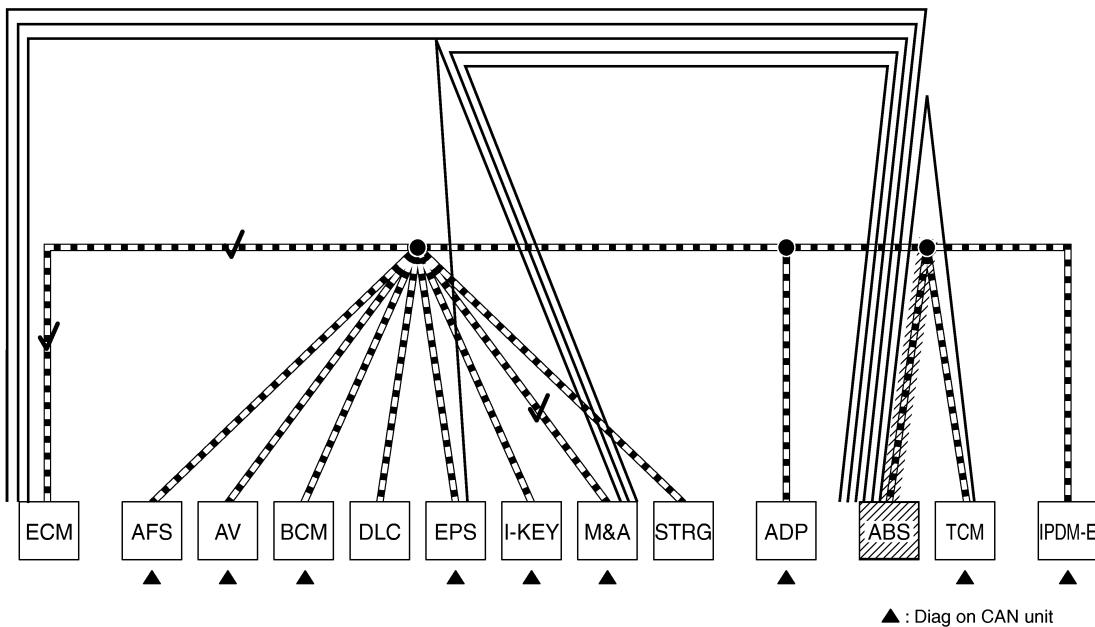

< Checklist >

	Item	Check box
1	ECM	✓
2	AFS▲	✓
3	AV▲	✓
4	BCM▲	✓
5	DLC	
6	EPS▲	✓
7	I-KEY▲	✓
8	M&A▲	✓
9	STRG	
10	ADP▲	✓
11	ABS	
12	TCM▲	✓
13	IPDM-E▲	✓

Possible root cause

- Error between ABS actuator and electric unit (control unit) and splice.
- Error in ABS actuator and electric unit (control unit).

Inspection result

PKID1224E

Past Error — Short Circuit —

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.


Item (CONSULT-III)	Indication	Inspection procedure
SELF-DIAG RESULTS	"U1000" and "U1001" is indicated in the past for most units.	Refer to "MALFUNCTION AREA CHART".
CAN DIAG SUPPORT MNTR	Only on CAN DIAG SUPPORT MNTR (with PAST), "1 - 39" is indicated on "PAST" of "TRANSMIT DIAG" and the reception item.	

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

(Example)

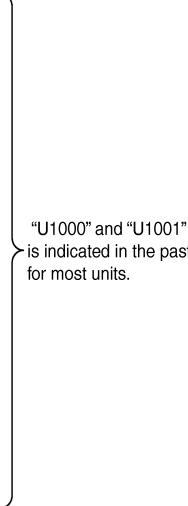

ECM

DTC RESULTS	TIME						
ENGINE		ADAPTIVE LIGHT		MULTI AV		BCM	
U1000 : CAN COMM CIRCUIT	1t	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5
U1001 : CAN COMM CIRCUIT	1t						

EPS

DTC RESULTS	TIME						
EPS		INTELLIGENT KEY		METER		AUTO DRIVE POS.	
U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	PAST

AFS

DTC RESULTS	TIME						
AFS		AFS		AFS		AFS	
U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	PAST

AV

DTC RESULTS	TIME						
AV		AV		AV		AV	
U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	PAST

BCM

DTC RESULTS	TIME						
BCM		BCM		BCM		BCM	
U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	PAST

EPS

DTC RESULTS	TIME						
EPS		I-KEY		M&A		ADP	
U1000 : CAN COMM CIRCUIT	5						

I-KEY


DTC RESULTS	TIME						
I-KEY		I-KEY		I-KEY		I-KEY	
U1000 : CAN COMM CIRCUIT	5						

M&A

DTC RESULTS	TIME						
M&A		M&A		M&A		M&A	
U1000 : CAN COMM CIRCUIT	5						

ADP

DTC RESULTS	TIME						
ADP		ADP		ADP		ADP	
U1000 : CAN COMM CIRCUIT	5						

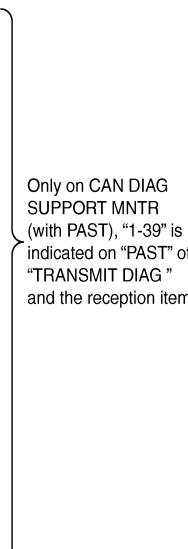

PKID1225E

LAN

N

O

P

A

B

C

D

E

F

G

H

I

J

K

L

DIAGNOSIS AND REPAIR WORKFLOW

BASIC INSPECTION

CAN FUNDAMENTAL

ECU

FUNCTION

WORKFLOW

DIAGNOSIS

REPAIR

INSPECTION

TEST

MONITOR

RESET

RELEASER

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Caution

INFOID:000000006179109

- This section describes information peculiar to a vehicle, sheets for trouble diagnosis, and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-14, "Trouble Diagnosis Procedure".](#)

Abbreviation List

INFOID:000000006179110

Abbreviations in CAN communication signal chart, and the diagnosis sheet are as per the following list.

Abbreviation	Unit name	SELECT SYSTEM (CONSULT-III)	CAN DIAG SUPPORT MNTR (CONSULT-III)
4WD	Transfer control unit	ALL MODE AWD/4WD	AWD/4WD
A-BAG	Air bag diagnosis sensor unit	AIR BAG	—
ABS	ABS actuator and electric unit (control unit)	ABS	VDC/TCS/ABS
ADP	Driver seat control unit	AUTO DRIVE POS.	—
BCM	BCM	BCM	BCM/SEC
DIFF	Differential lock control unit	DIFF LOCK	—
DISP	Display control unit	—	DISPLAY
DLC	Data link connector	—	—
ECM	ECM	ENGINE	ECM
HVAC	Front air control	HVAC	—
IPDM-E	IPDM E/R	IPDM E/R	IPDM E/R
M&A	Combination meter	METER/M&A	METER/M&A
STRG	Steering angle sensor	—	STRG
TCM	TCM	TRANSMISSION	TCM

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000006179111

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Trouble Diagnosis

INFOID:0000000006179112

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:0000000006179113

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

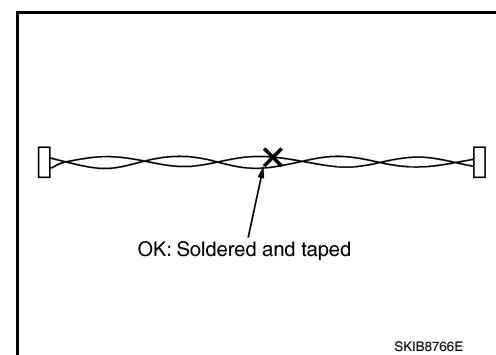

PRECAUTIONS


[CAN]

< PRECAUTION >

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

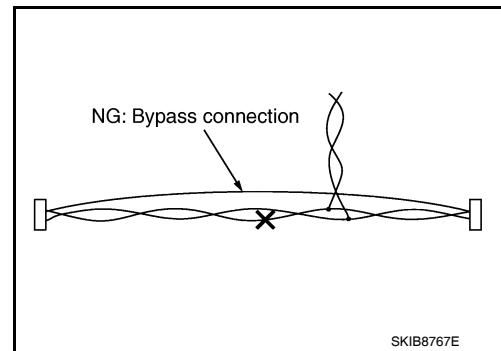

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

< BASIC INSPECTION >

BASIC INSPECTION**DIAGNOSIS AND REPAIR WORKFLOW****Interview Sheet**

INFOID:000000006179114

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

CAN Communication System Diagnosis Interview SheetDate received: Type: VIN No.: Model: First registration: Mileage: CAN system type:

Symptom (Results from interview with customer)

Condition at inspection

Error symptom : Present / Past

LAN

SKIB8898E

Data Sheet

INFOID:000000006179115

ON-BOARD DIAGNOSIS COPY SHEET

DIAGNOSIS AND REPAIR WORKFLOW

[CAN]

< BASIC INSPECTION >

NOTE:

CAN diagnostic support monitor of the display control unit is indicated on the vehicle display. Refer to [AV-208, "AUDIO UNIT : Diagnosis Description"](#).

Vehicle monitor (Display control unit) CAN DIAG SUPPORT MONITOR copy sheet

Indication item (Diagnosis item)	Vehicle monitor		Indication item (Diagnosis item)	Vehicle monitor	
	Result indicated	Error counter		Result indicated	Error counter
CAN_COMM (Initial diagnosis)			CAN_CIRC_5 (Receive diagnosis of Combination meter)		
CAN_CIRC_1 (Transmit diagnosis)			CAN_CIRC_6	Not available	
CAN_CIRC_2 (Receive diagnosis of BCM)			CAN_CIRC_7 (Receive diagnosis of IPDM E/R)		
CAN_CIRC_3 (Receive diagnosis of ECM)			CAN_CIRC_8	Not available	
CAN_CIRC_4 (Receive diagnosis of Front air control)			CAN_CIRC_9	Not available	

SKIB8771E


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 1)

INFOID:000000006179116

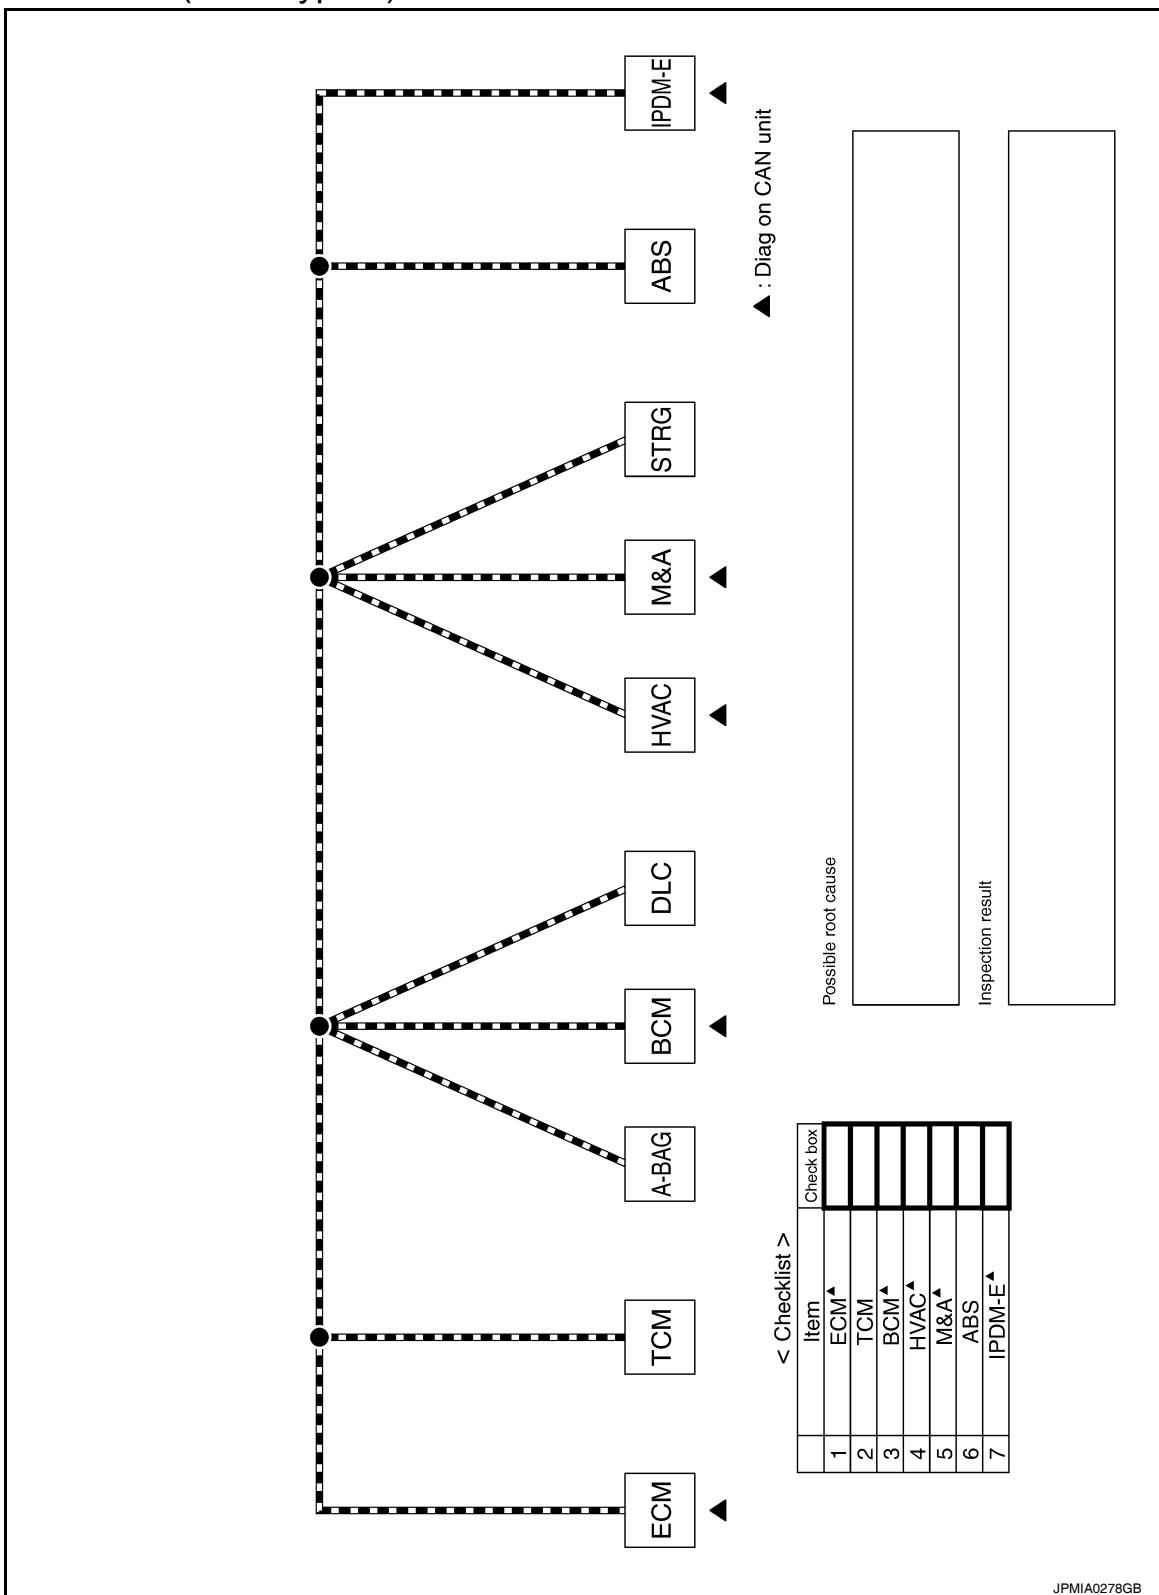

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
LAN


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 2)

INFOID:000000006179117

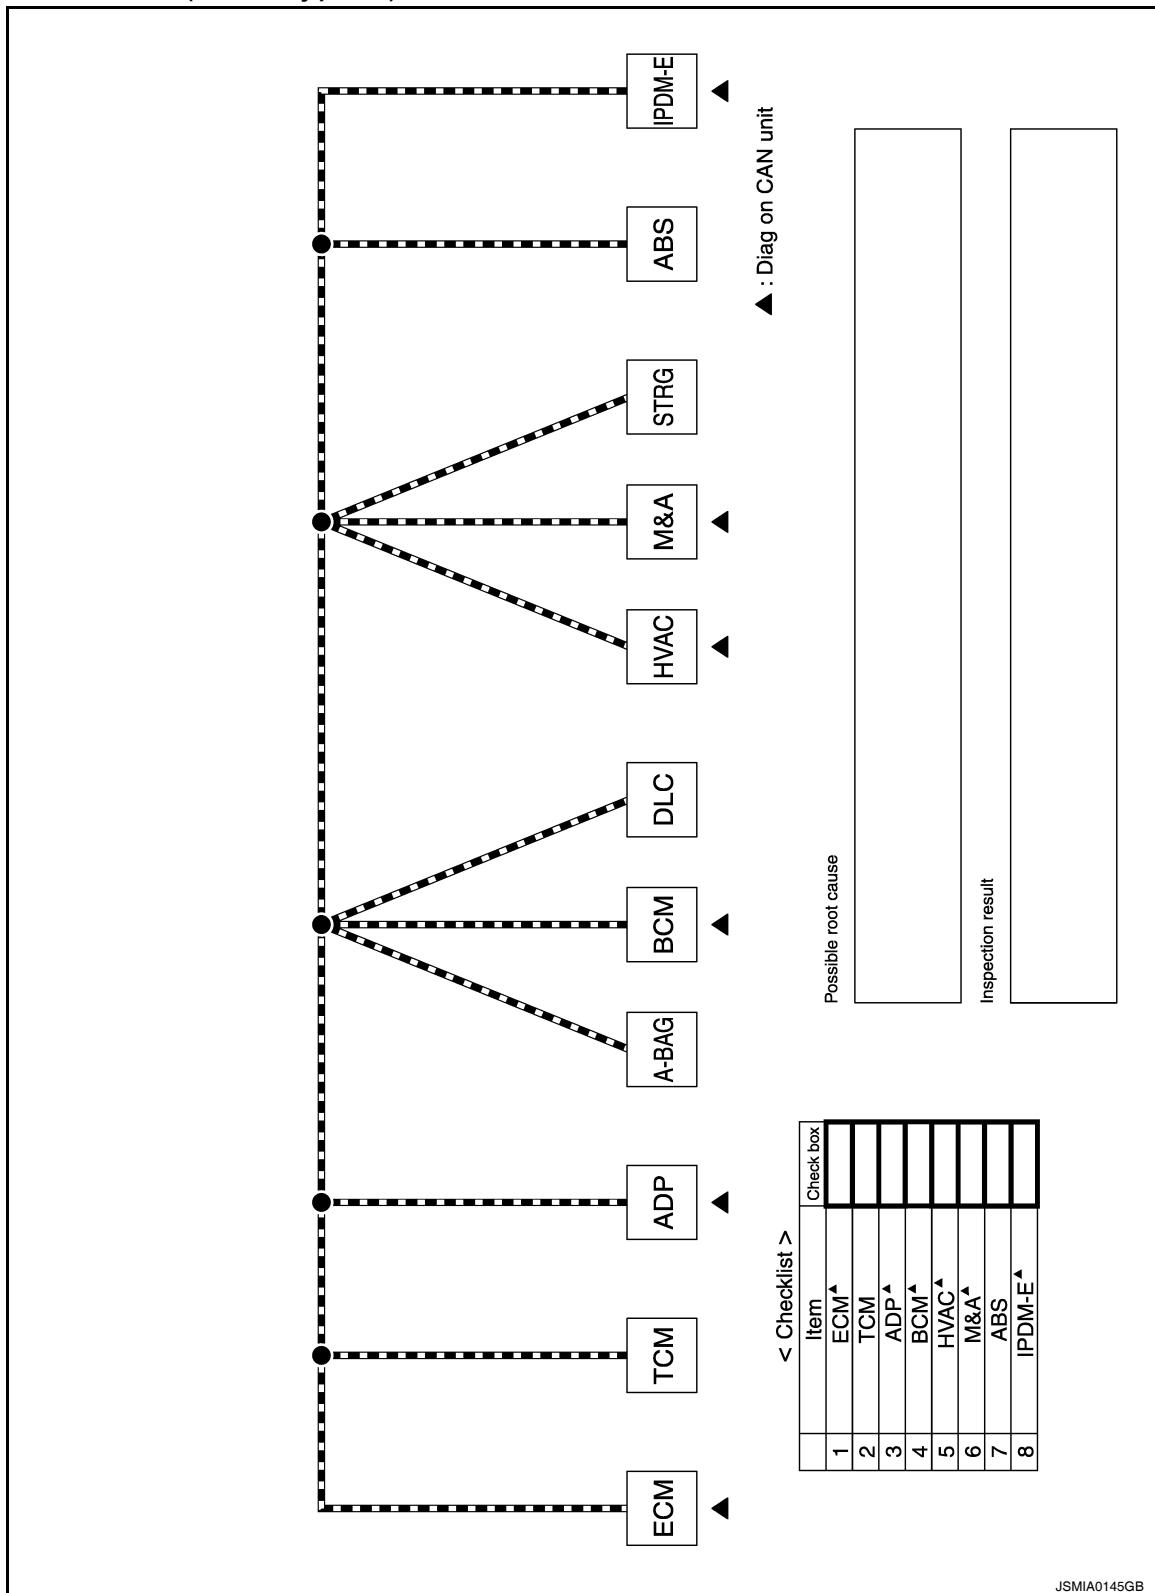

JSMIA0145GB


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 3)

INFOID:000000006179118

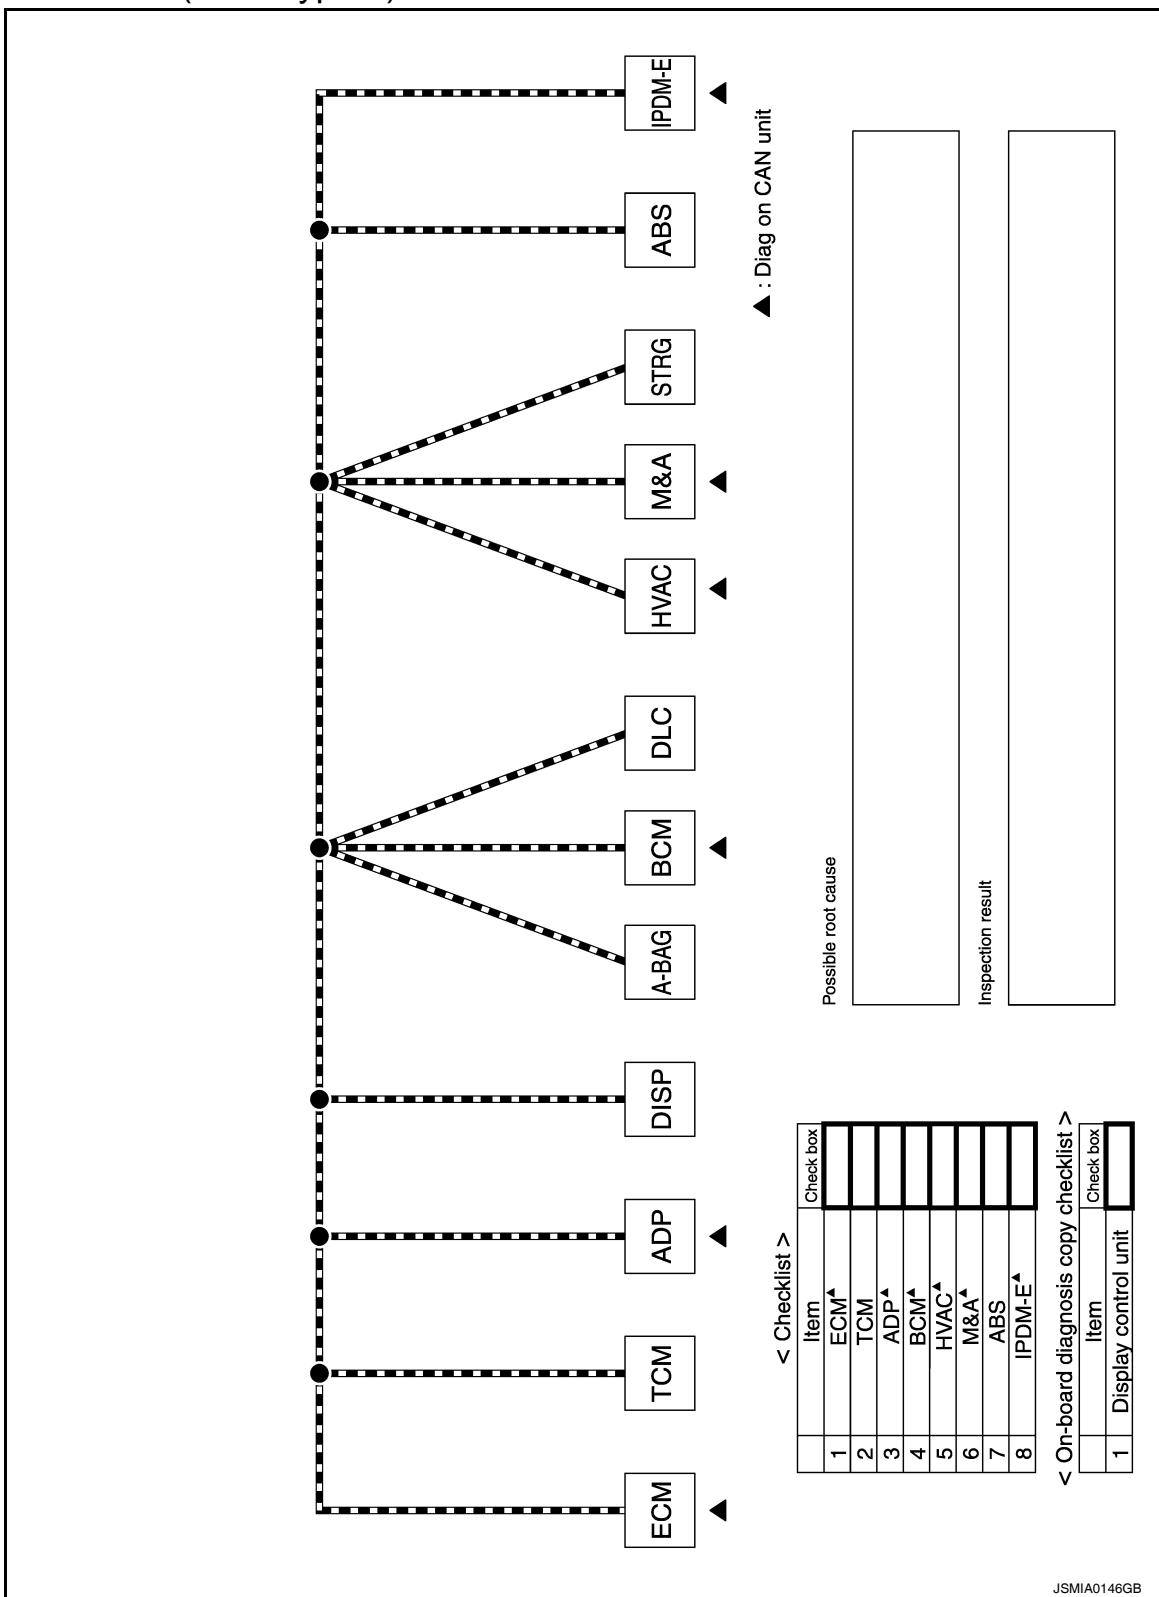

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
LAN


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 4)

INFOID:000000006179119

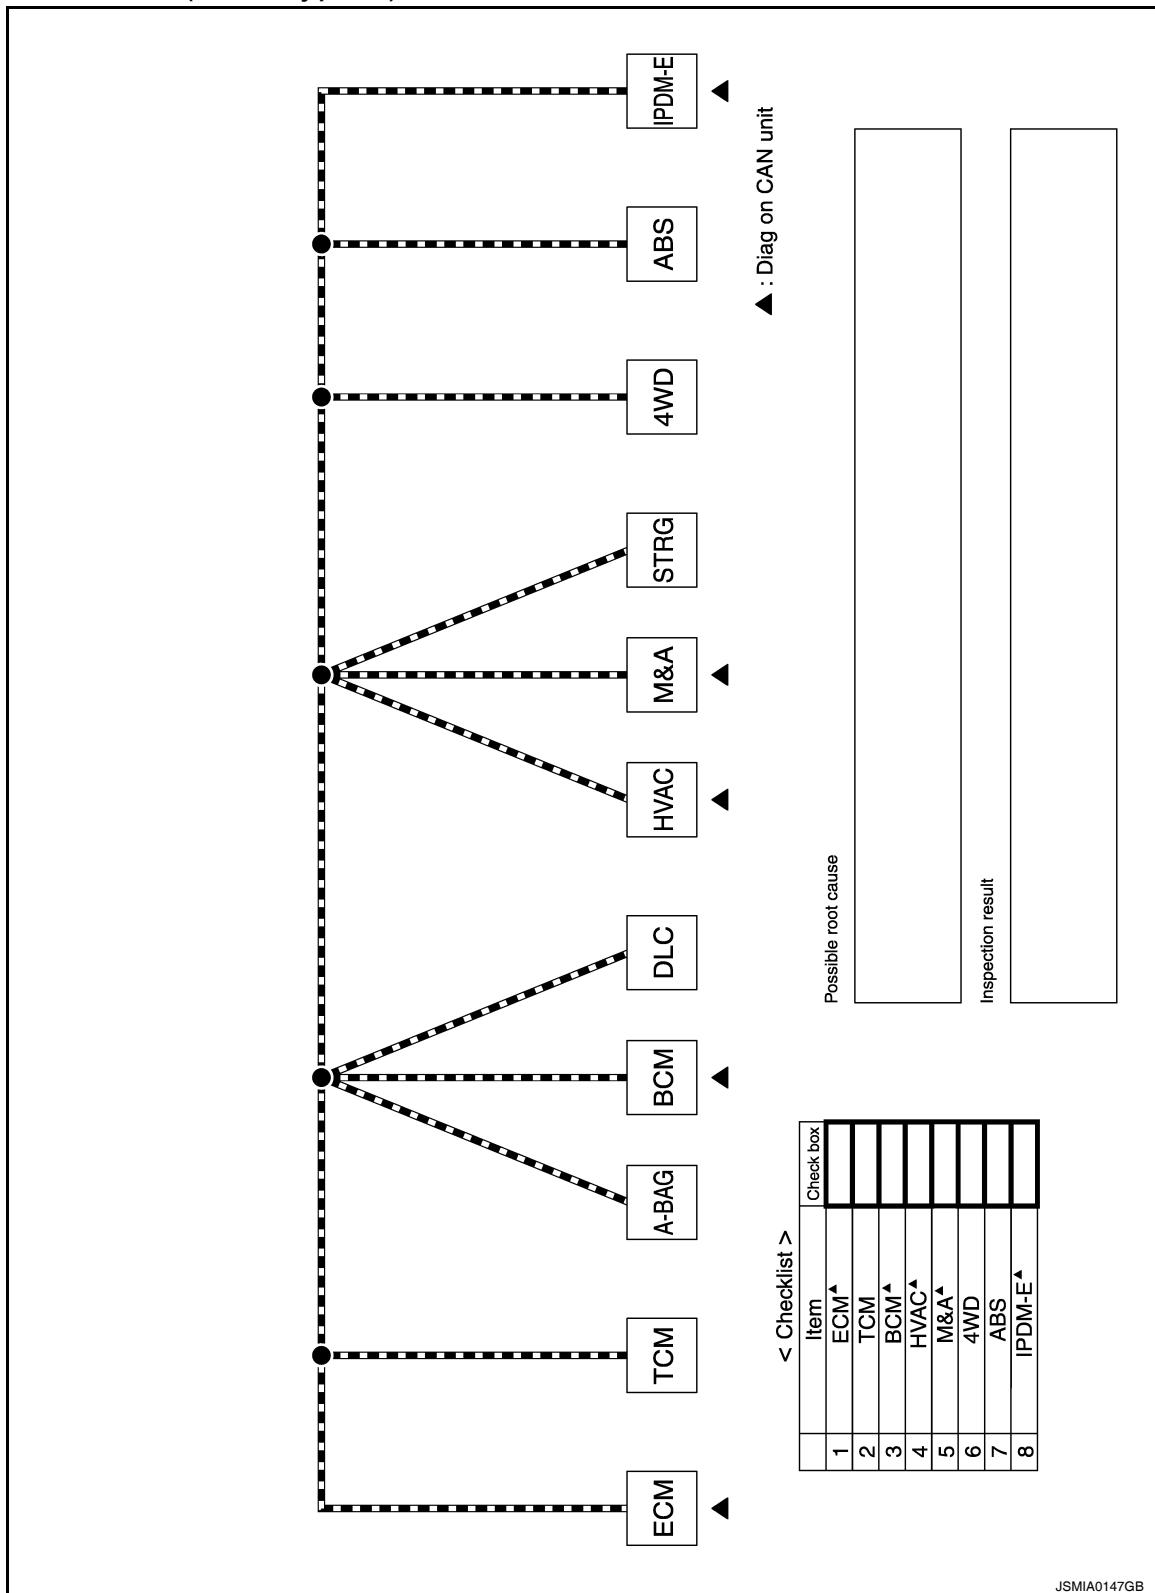

JSMIA0147GB


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 5)

INFOID:0000000006179120

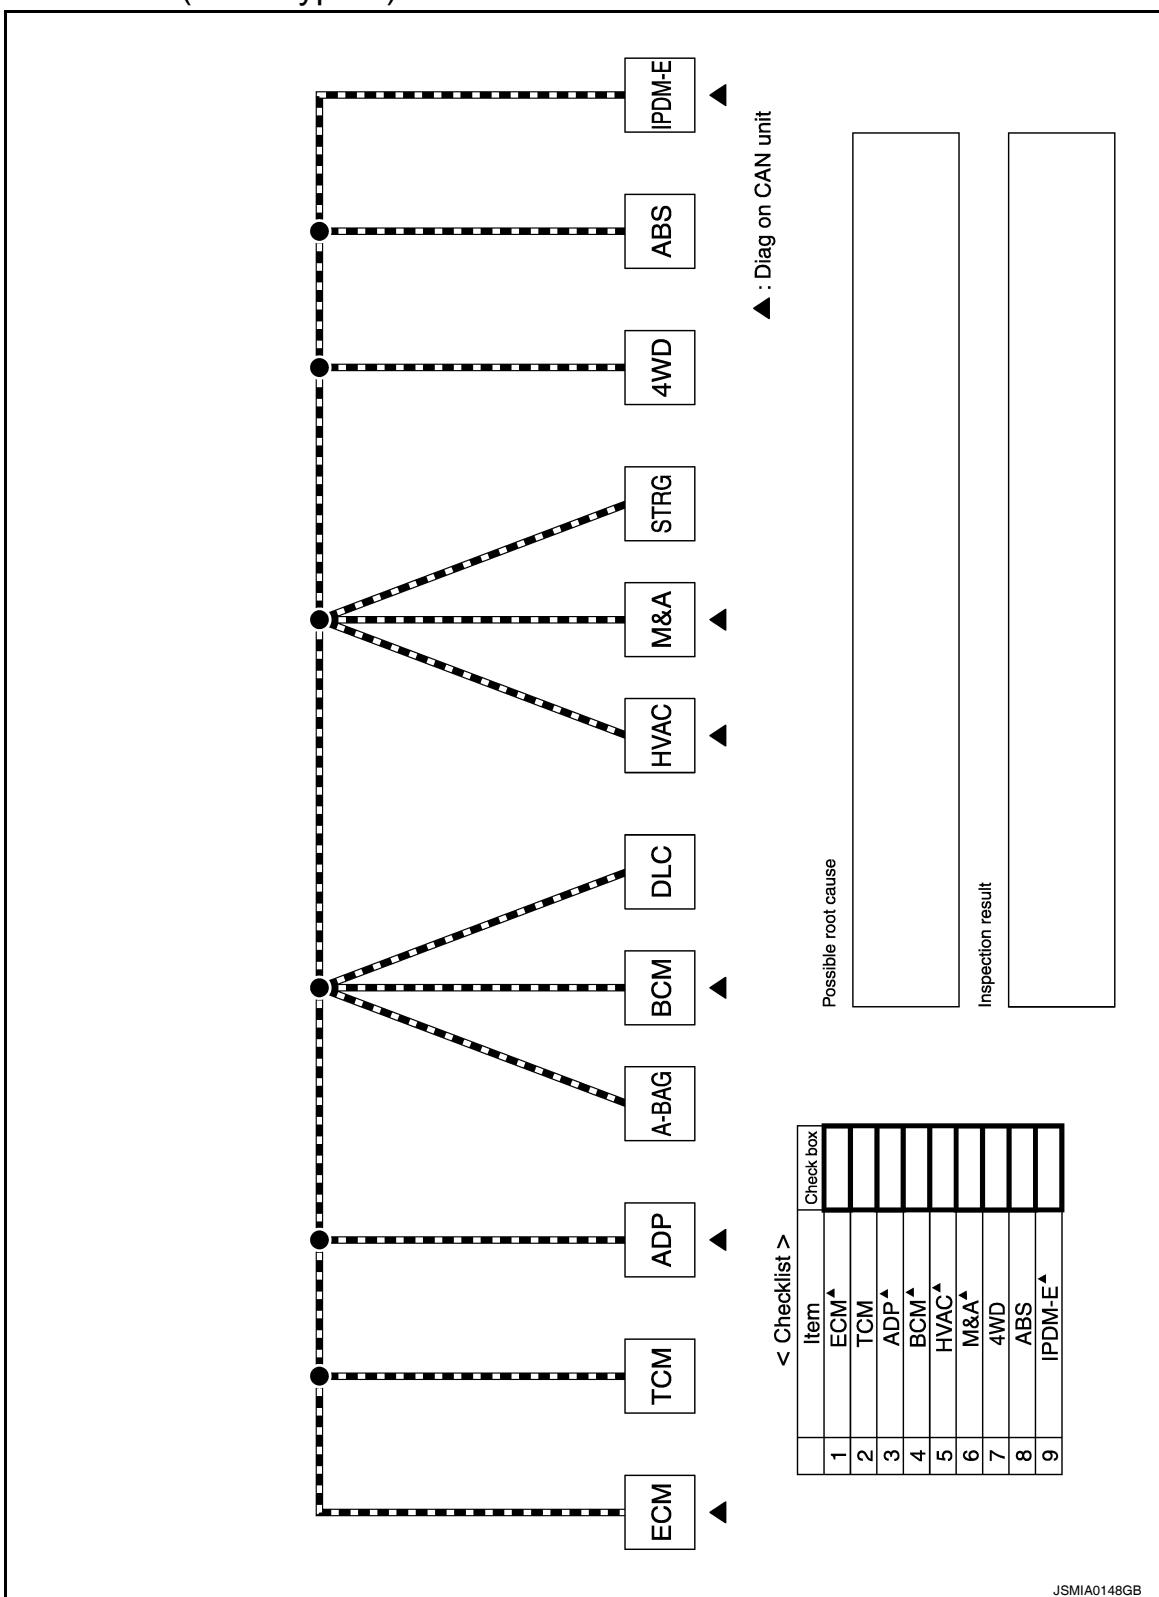

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 6)

INFOID:000000006179121

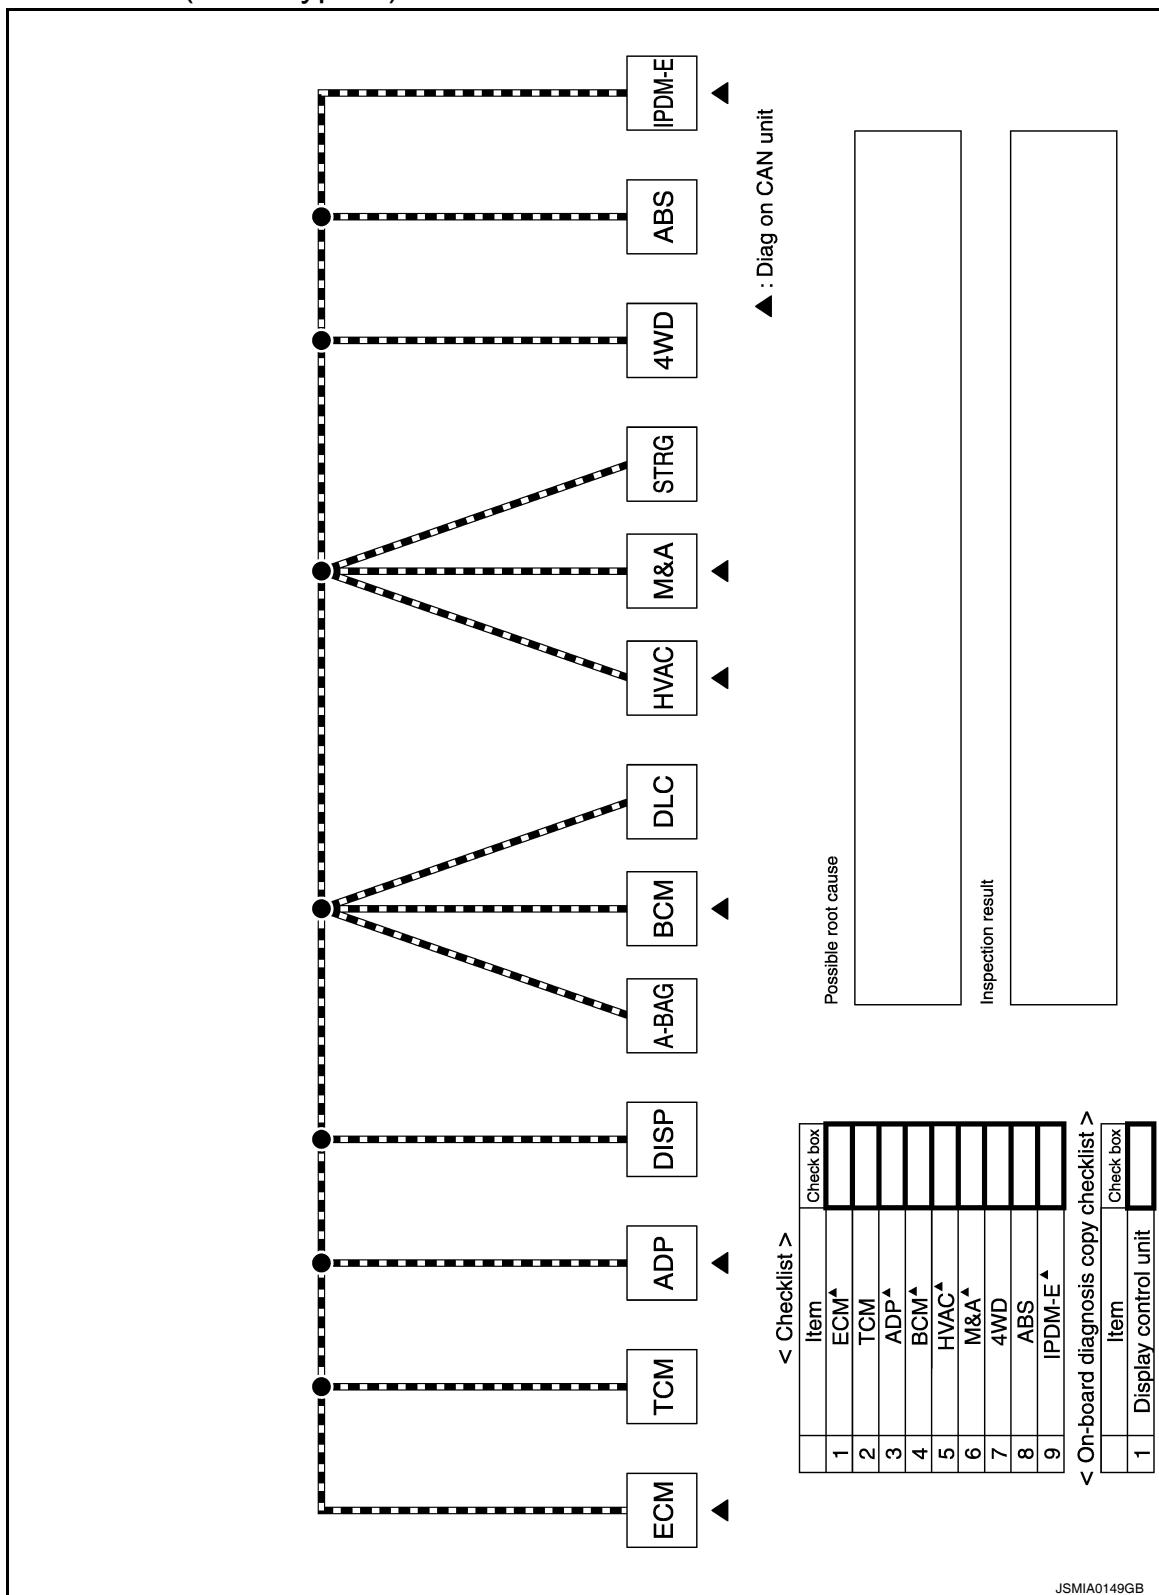


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 7)

INFOID:0000000006179122

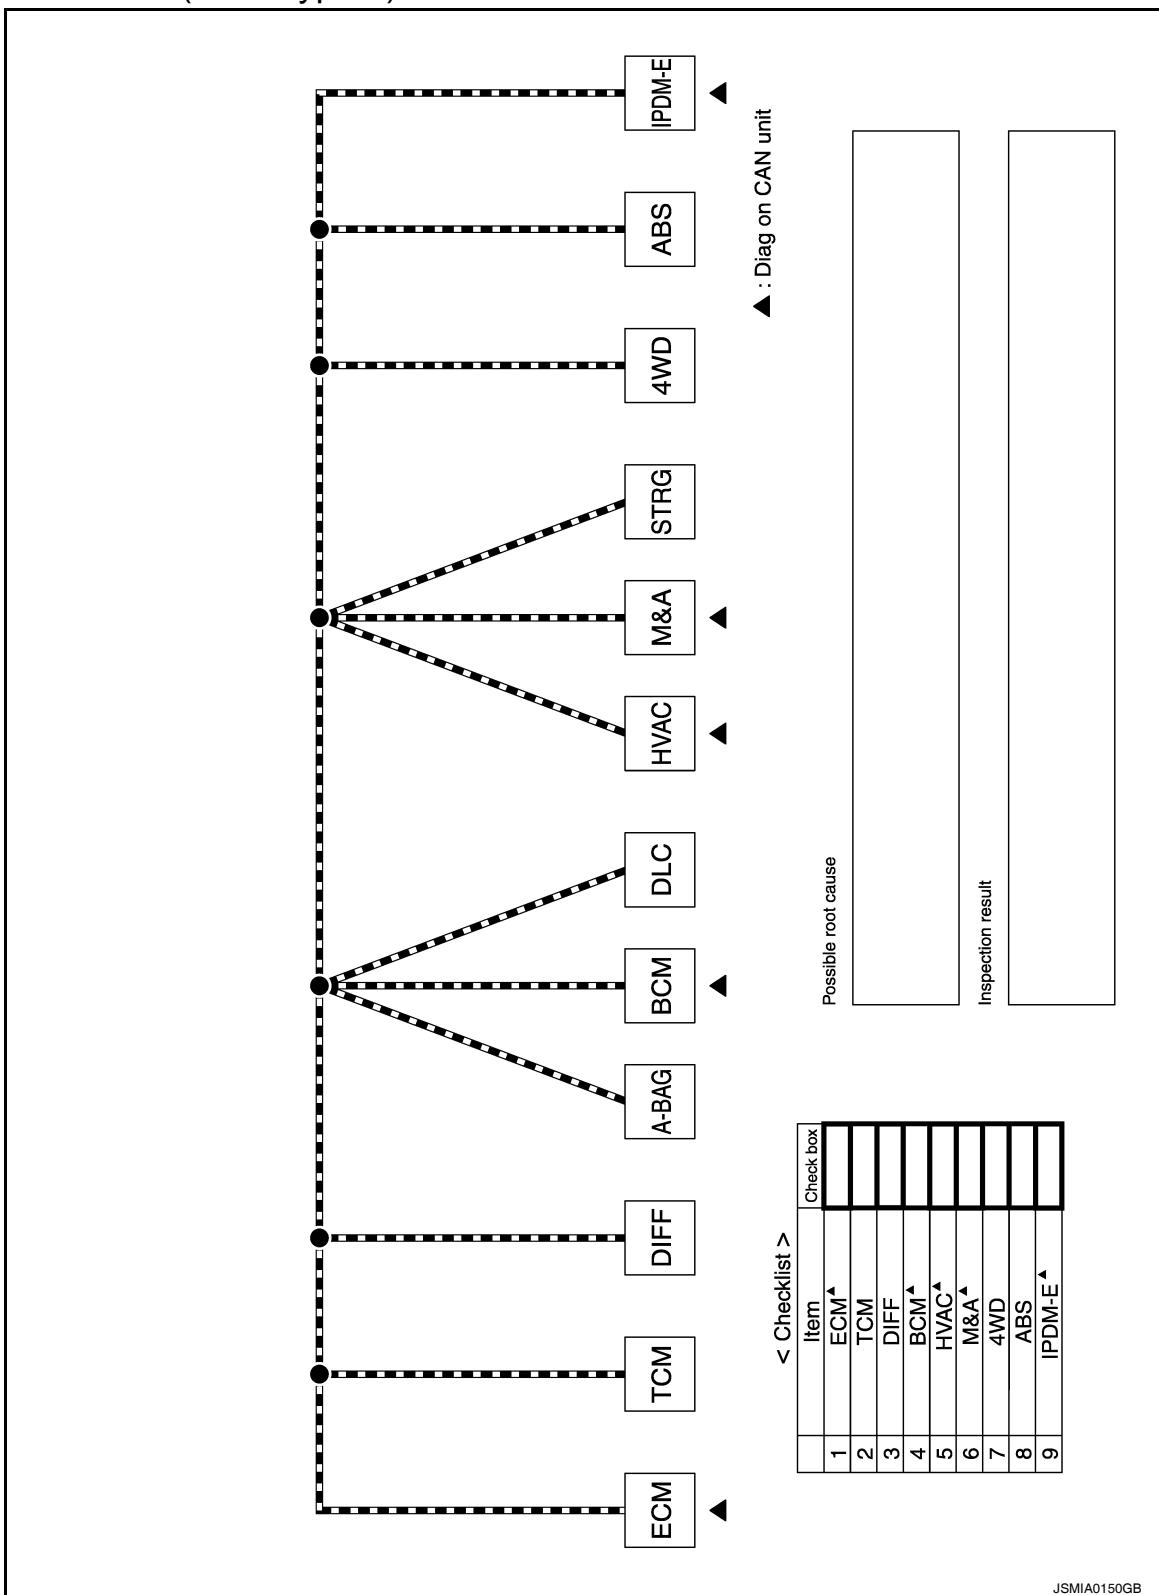

A
B
C
D
E
F
G
H
I
J
K
L
LAND
N
O
P


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 8)

INFOID:000000006179123

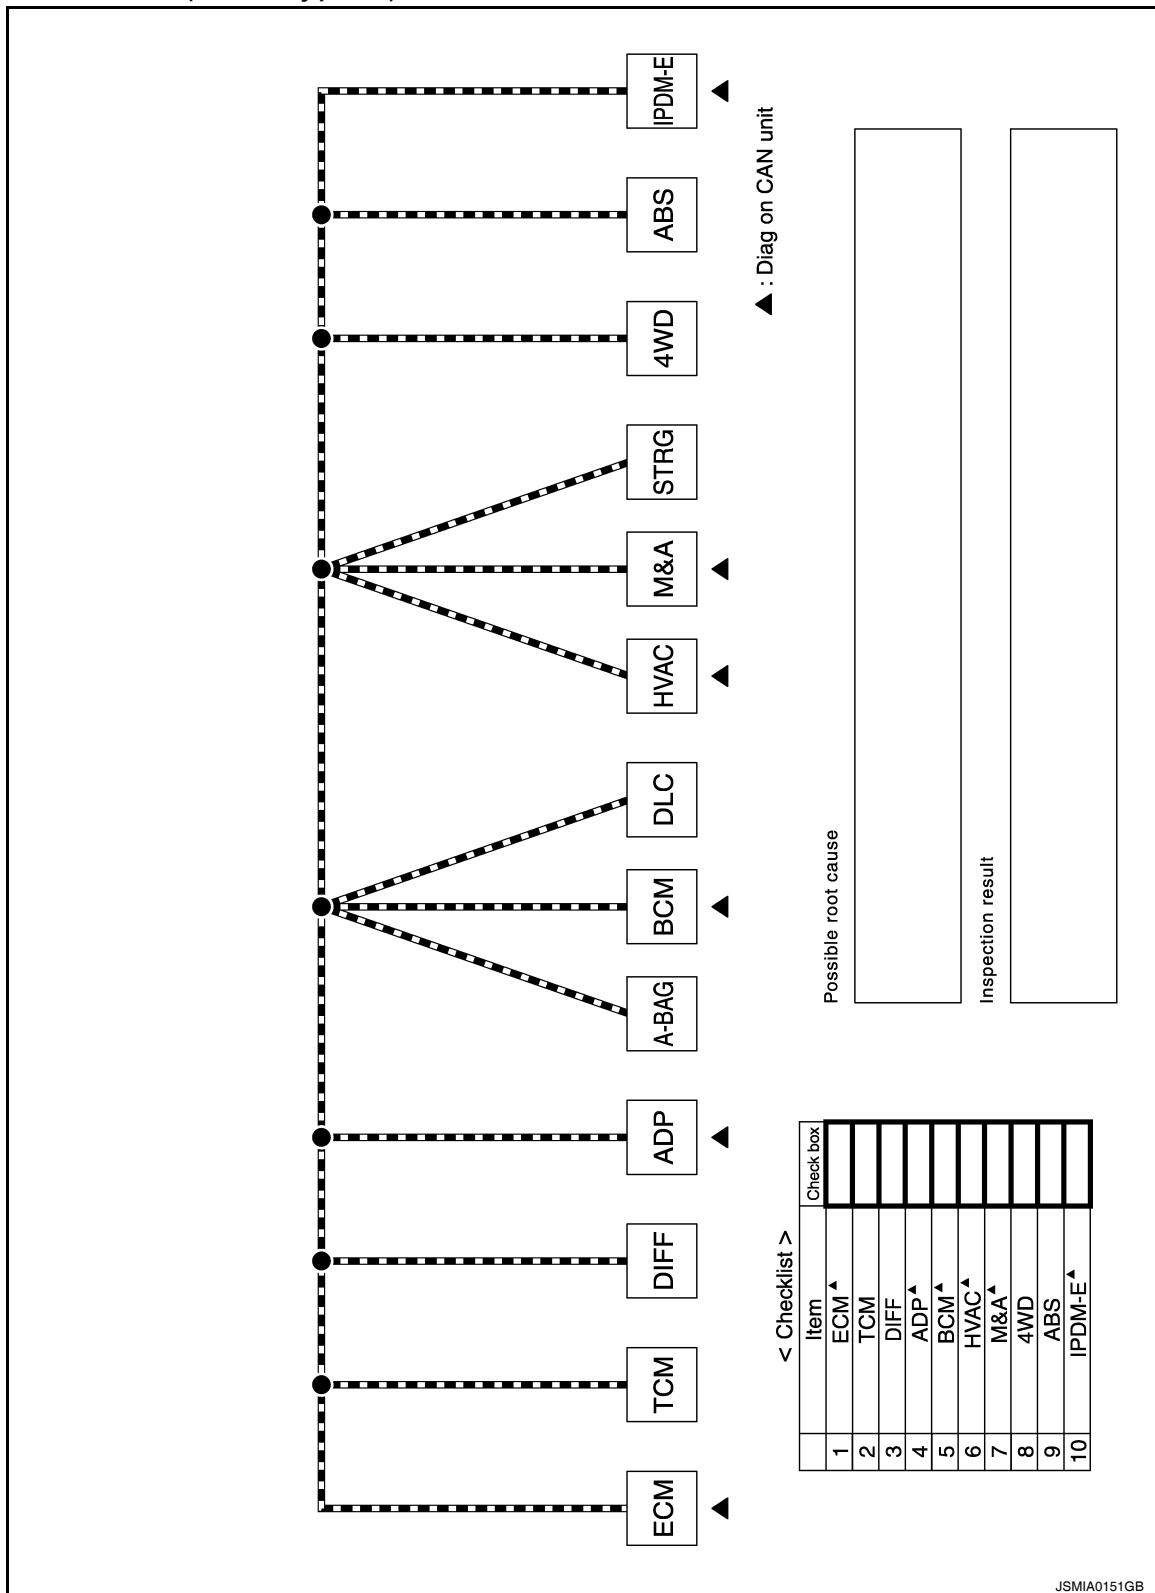

JSMIA0151GB


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

Diagnosis Sheet (CAN Type 9)

INFOID:000000006179124

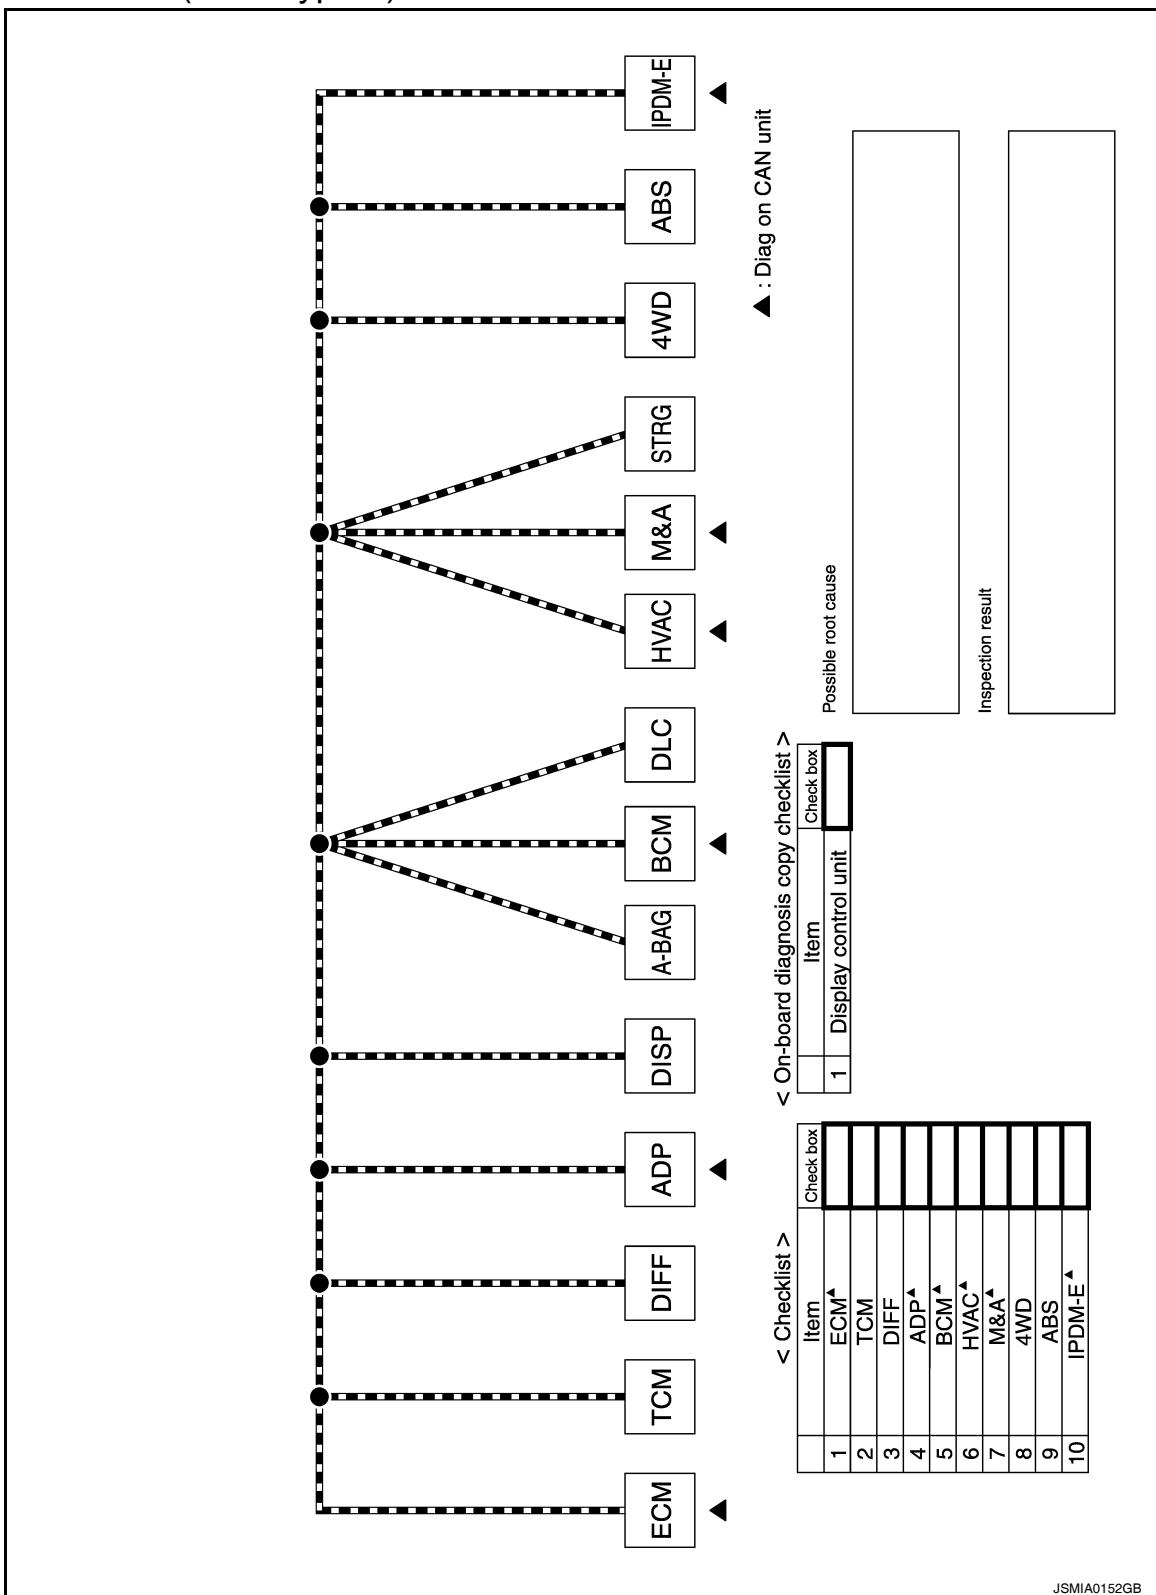

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

CAN COMMUNICATION SYSTEM

CAN System Specification Chart

INFOID:000000006179125

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

NOTE:

Refer to [LAN-14, "Trouble Diagnosis Procedure"](#) for how to use CAN system specification chart.

Body type	Truck									
Axle	2WD			4WD						
Engine	VK56DE									
Transmission	A/T									
Brake control	VDC									
Electronic locking rear differential							×	×	×	
Automatic drive positioner		×	×		×	×		×	×	
Navigation system			×			×			×	
CAN system type	1	2	3	4	5	6	7	8	9	
Diagnosis sheet	LAN-41	LAN-42	LAN-43	LAN-44	LAN-45	LAN-46	LAN-47	LAN-48	LAN-49	

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION


NOTE:

Check CAN system type from the vehicle shape and equipment.

CAN COMMUNICATION SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

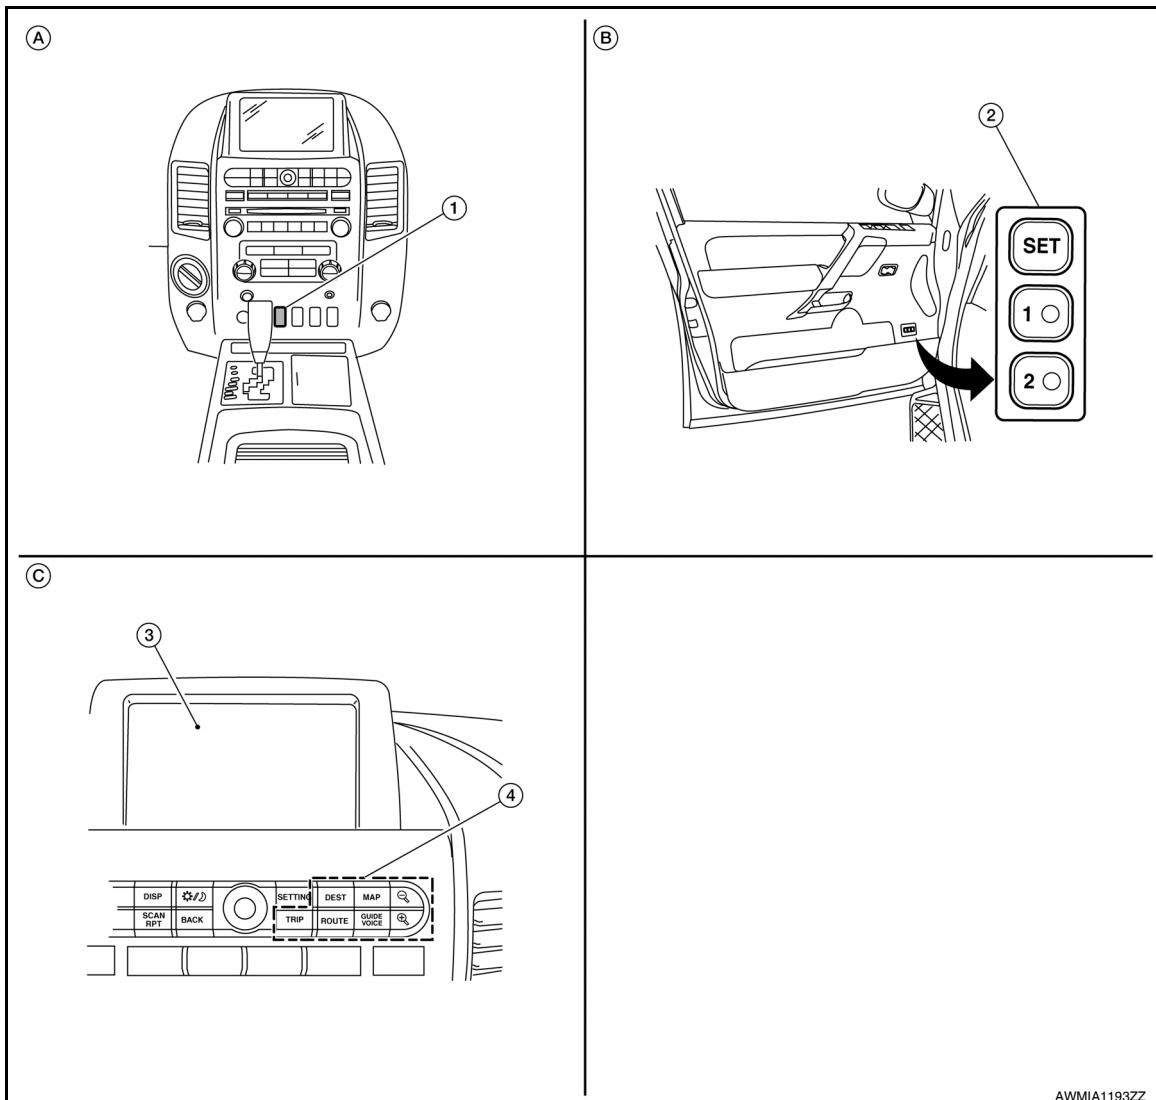

AWMIA1193ZZ

1. Differential lock mode switch	2. Seat memory switch	3. Display unit
4. NAVI switches (built into AV switch)		
A. With electronic locking rear differential	B. With automatic drive positioner	C. With navigation system

CAN Communication Signal Chart

INFOID:000000006179126

Refer to [LAN-13, "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

NOTE:

Refer to [LAN-36, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	TCM	DIFF	ADP	BCM	DISP	HVAC	M&A	STRG	4WD	ABS	IPDM-E
A/C compressor request signal	T											R
Accelerator pedal position signal	T	R									R	
ASCD CRUISE lamp signal	T								R			
ASCD OD cancel request signal	T	R										
ASCD operation signal	T	R										

CAN COMMUNICATION SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name/Connecting unit	ECM	TCM	DIFF	ADP	BCM	DISP	HVAC	M&A	STRG	4WD	ABS	IPDM-E
ASCD SET lamp signal	T							R				
Battery voltage signal	T	R										
Closed throttle position signal	T	R										
Cooling fan speed request signal	T											R
Engine coolant temperature signal	T						R	R				
Engine speed signal	T	R				R	R	R		R	R	
Engine status signal	T				R							
Fuel consumption monitor signal	T					R		T				
Fuel filler cap warning display signal	T						R					
Malfunction indicator lamp signal	T						R					
Wide open throttle position signal	T	R										
A/T CHECK indicator lamp signal		T						R				
A/T fluid temperature sensor signal		T					R					
A/T position indicator lamp signal		T		R				R		R	R	
A/T self-diagnosis signal	R	T										
Current gear position signal		T									R	
Input speed signal	R	T										
Output shaft revolution signal	R	T								R		
P range signal		T		R				R			R	
Differential lock indicator signal			T									R
Differential lock switch signal			T									R
System setting signal				T	T	R						
				R	R	T						
A/C switch signal	R				T		R ^{*1}					
Blower fan motor switch signal	R				T							
Buzzer output signal					T			R				
Day time running light request signal					T			R				R
Door switch signal				R	T	R		R				R
Front fog light request signal					T							R
Front wiper request signal					T							R
High beam request signal					T			R				R
Horn chirp signal					T							R
Ignition switch signal				R	T							R
Key fob door unlock signal				R	T							
Key fob ID signal				R	T							
Key switch signal				R	T							
Low beam request signal					T							R
Position light request signal					T			R				R
Rear window defogger switch signal					T							R
Sleep wake up signal				R	T			R				R
Theft warning horn request signal					T							R
Tire pressure data signal					T	R						

CAN COMMUNICATION SYSTEM

[CAN]

< SYSTEM DESCRIPTION >

Signal name/Connecting unit	ECM	TCM	DIFF	ADP	BCM	DISP	HVAC	M&A	STRG	4WD	ABS	IPDM-E
Tire pressure signal					T	R		R				
Turn indicator signal					T			R				
A/C switch/indicator signal ^{*2}						T	R					
						R	T					
1st position switch signal ^{*3}		R						T				
4th position switch signal ^{*3}		R						T				
Distance to empty signal						R		T				
Fuel filler cap warning reset signal	R							T				
Fuel level low warning signal						R		T				
Fuel level sensor signal	R							T				
Manual mode shift down signal ^{*4}		R						T				
Manual mode shift up signal ^{*4}		R						T				
Manual mode switch signal ^{*4}		R						T				
Non-manual mode switch signal ^{*4}		R						T				
Parking brake switch signal					R			T				
Seat belt buckle switch signal					R			T				
Stop lamp switch signal		R			R			T				
Tow mode switch signal		R								R	T	
Vehicle speed signal	R	R	R	R	R		T					
Steering angle sensor signal			R			R	R		R	R	T	
4WD shift switch signal	R		R							T		
ABS warning lamp signal							R				T	
Brake warning lamp signal							R				T	
SLIP indicator lamp signal							R				T	
VDC OFF indicator lamp signal							R				T	
Front wiper stop position signal					R							T
High beam status signal	R											T
Low beam status signal	R											T
Rear window defogger control signal	R				R							T

*1: Models with manual A/C

*2: Models with auto A/C

*3: Models with floor shift

*4: Models with column shift

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

TROUBLE DIAGNOSIS

[CAN]

< SYSTEM DESCRIPTION >

TROUBLE DIAGNOSIS

CAN Diagnostic Support Monitor

INFOID:0000000006179127

Use “CAN DIAG SUPPORT MNTR” for detecting the root cause.

MONITOR ITEM LIST (CONSULT-III)

ECM

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error					
			PRSNT	PAST	PRSNT	PAST				
ECM	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0				
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)								
	METER/M&A	Signal receiving status from the combination meter								
	BCM/SEC	Signal receiving status from the BCM								
	ICC/ADAS	Not used even though indicated								
	HVAC	Not used even though indicated								
	TCM	Signal receiving status from the TCM	OK	OK or 1 – 39*	UNKWN	0				
	MULTI AV	Not used even though indicated								
	EPS	Not used even though indicated								
	IPDM E/R	Signal receiving status from the IPDM E/R	OK	OK or 1 – 39*	UNKWN	0				
	e4WD	Not used even though indicated								
	AWD/4WD	Signal receiving status from the transfer control unit	OK	OK or 1 – 39*	UNKWN	0				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

TCM

NOTE:

Replace the unit when “NG” is indicated on the “INITIAL DIAG”.

ITEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error		
			PRSNT	PRSNT		
TCM	INITIAL DIAG	Status of CAN controller	OK	NG		
	TRANSMIT DIAG	Signal transmission status		UNKWN		
	ECM	Signal receiving status from the ECM				
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	METER/M&A	Signal receiving status from the combination meter	OK	UNKWN		
	ICC/e4WD	Not used even though indicated				
	AWD/4WD	Signal receiving status from the transfer control unit				

Differential Lock Control Unit

NOTE:

Replace the unit when “NG” is indicated on the “INITIAL DIAG”.

TROUBLE DIAGNOSIS

[CAN]

< SYSTEM DESCRIPTION >

ITEM	CAN DIAG SUP- PORT MNTR	Description	Normal	Error
			PRSNT	PRSNT
DIFF	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		
	ECM	Signal receiving status from the ECM		
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)		UNKWN
	AWD/4WD	Signal receiving status from the transfer control unit		

Driver Seat Control Unit

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP- PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
ADP	TRANSMIT DIAG	Not used even though indicated		OK or 1 – 39*	OK or 1 – 39* UNKWN 0	
	METER/M&A	Signal receiving status from the combination meter				
	BCM/SEC	Signal receiving status from the BCM				
	TCM	Signal receiving status from the TCM				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

BCM

NOTE:

Replace the unit when “NG” is indicated on the “INITIAL DIAG”.

ITEM	CAN DIAG SUP- PORT MNTR	Description	Normal	Error
			PRSNT	PRSNT
BCM	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		
	ECM	Signal receiving status from the ECM		
	IPDM E/R	Signal receiving status from the IPDM E/R		
	METER/M&A	Signal receiving status from the combination meter		
	I-KEY	Not used even though indicated		

Front Air Control

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

TROUBLE DIAGNOSIS

[CAN]

< SYSTEM DESCRIPTION >

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
HVAC	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	TCM	Not used even though indicated				
	BCM/SEC	Signal receiving status from the BCM	OK	OK or 1 – 39*	UNKWN	0
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	IPDM E/R	Not used even though indicated				
	DISPLAY	With navigation system: Signal receiving status from the display control unit	OK	OK or 1 – 39*	UNKWN	0
		Without navigation system: Not used even though indicated				
	I-KEY	Not used even though indicated				
	EPS					
	AWD/4WD					
	e4WD					
	ICC/ADAS					
	LANE CAMERA					
	TIRE-P					

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

Combination Meter

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error					
			PRSNT	PAST	PRSNT	PAST				
M&A	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0				
	ECM	Signal receiving status from the ECM								
	TCM	Signal receiving status from the TCM	OK	OK or 1 – 39*	UNKWN	0				
	BCM/SEC	Signal receiving status from the BCM								
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)	OK	OK or 1 – 39*	UNKWN	0				
	IPDM E/R	Signal receiving status from the IPDM E/R								
	DISPLAY	Not used even though indicated								
	I-KEY									
	EPS									
	AWD/4WD									
	e4WD									
	ICC/ADAS									
	LANE CAMERA									
	TIRE-P									

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

Transfer Control Unit

NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

TROUBLE DIAGNOSIS

[CAN]

< SYSTEM DESCRIPTION >

ITEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	NG
4WD	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		
	ECM	Signal receiving status from the ECM		
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)		UNKWN
	TCM	Signal receiving status from the TCM		
	METER/M&A	Signal receiving status from the combination meter		

ABS Actuator and Electric Unit (Control Unit)

ITEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	NG ^{Caution}
ABS	INITIAL DIAG	Status of CAN controller	OK	NG ^{Caution}
	TRANSMIT DIAG	Signal transmission status		
	ECM	Signal receiving status from the ECM		UNKWN
	TCM	Signal receiving status from the TCM		
	METER/M&A	Not used even though indicated		
	STRG	Signal receiving status from the steering angle sensor	OK	UNKWN
	ICC/ADAS	Not used even though indicated		
	AWD/4WD	Signal receiving status from the transfer control unit	OK	UNKWN
	DIFF LOCK	Signal receiving status from the differential lock control unit		

CAUTION:

Never replace the unit even when "NG" is indicated on the "INITIAL DIAG" at this stage. Follow the trouble diagnosis procedures.

IPDM E/R

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
IPDM-E	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	BCM/SEC	Signal receiving status from the BCM				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

MONITOR ITEM LIST (ON-BOARD DIAGNOSIS)

Display Control Unit

NOTE:

CAN diagnostic support monitor of the display control unit is indicated on the vehicle display. Refer to [AV-209, "Work Flow".](#)

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN]

(Example)

CAN DIAG SUPPORT MONITOR		
CAN_COMM	OK	0
CAN_CIRC_1	OK	0
CAN_CIRC_2	OK	0
CAN_CIRC_3	OK	0
CAN_CIRC_4	OK	0
CAN_CIRC_5	OK	0
CAN_CIRC_6	OK	0
CAN_CIRC_7	OK	0
CAN_CIRC_8	OK	0
CAN_CIRC_9	UNKN	0

PKIB6080E

Unit name	Diagnosis item	Description	Indicated items on CAN DIAG SUPPORT MONITOR					
			Normal		Error			
			Result indicated	Error counter (Reference)	Result indicated	Error counter (Reference)		
Display control unit	CAN_COMM	Status of CAN controller	OK	0 or 1 – 50*	NG	1 – 50*		
	CAN_CIRC_1	Signal transmission status			UNKWN			
	CAN_CIRC_2	Signal receiving status from the BCM						
	CAN_CIRC_3	Signal receiving status from the ECM						
	CAN_CIRC_4	Signal receiving status from the front air control						
	CAN_CIRC_5	Signal receiving status from the combination meter						
	CAN_CIRC_6	Not used even though indicated						
	CAN_CIRC_7	Signal receiving status from the IPDM E/R	OK	0 or 1 – 50*	UNKWN	1 – 50*		
	CAN_CIRC_8	Not used even though indicated						
	CAN_CIRC_9							

*: The error counter stops counting when it reaches "50" and holds "50" until it is deleted.

TROUBLE DIAGNOSIS

[CAN]

< SYSTEM DESCRIPTION >

DTC Index

INFOID:000000006179128

DTC	Self-diagnosis item (CONSULT-III indication)	DTC detection condition		Inspection/Action	
U0101	LOST COMM (TCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from TCM for 2 seconds or more.		Refer to LAN-36 .	
U0140	LOST COMM (BCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from BCM for 2 seconds or more.			
U0164	LOST COMM (HVAC)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from A/C auto amp. or unified meter and A/C amp. for 2 seconds or more.			
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Refer to LAN-36 .	
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.		
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.			
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		Start the inspection. Refer to the applicable section of the indicated control unit.	
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		Replace the control unit indicating "U1010" or "P0607".	
P0607	ECM				

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

WIRING DIAGRAM


CAN SYSTEM

Wiring Diagram

INFOID:000000006179130

16

- ◆ **AD** : WITH AUTOMATIC DRIVE POSITIONER
- ◆ **CS** : COLUMN SHIFT
- ◆ **DL** : WITH ELECTRONIC LOCKING REAR DOOR
- ◆ **FS** : FLOOR SHIFT
- ◆ **NV** : WITH NAVI

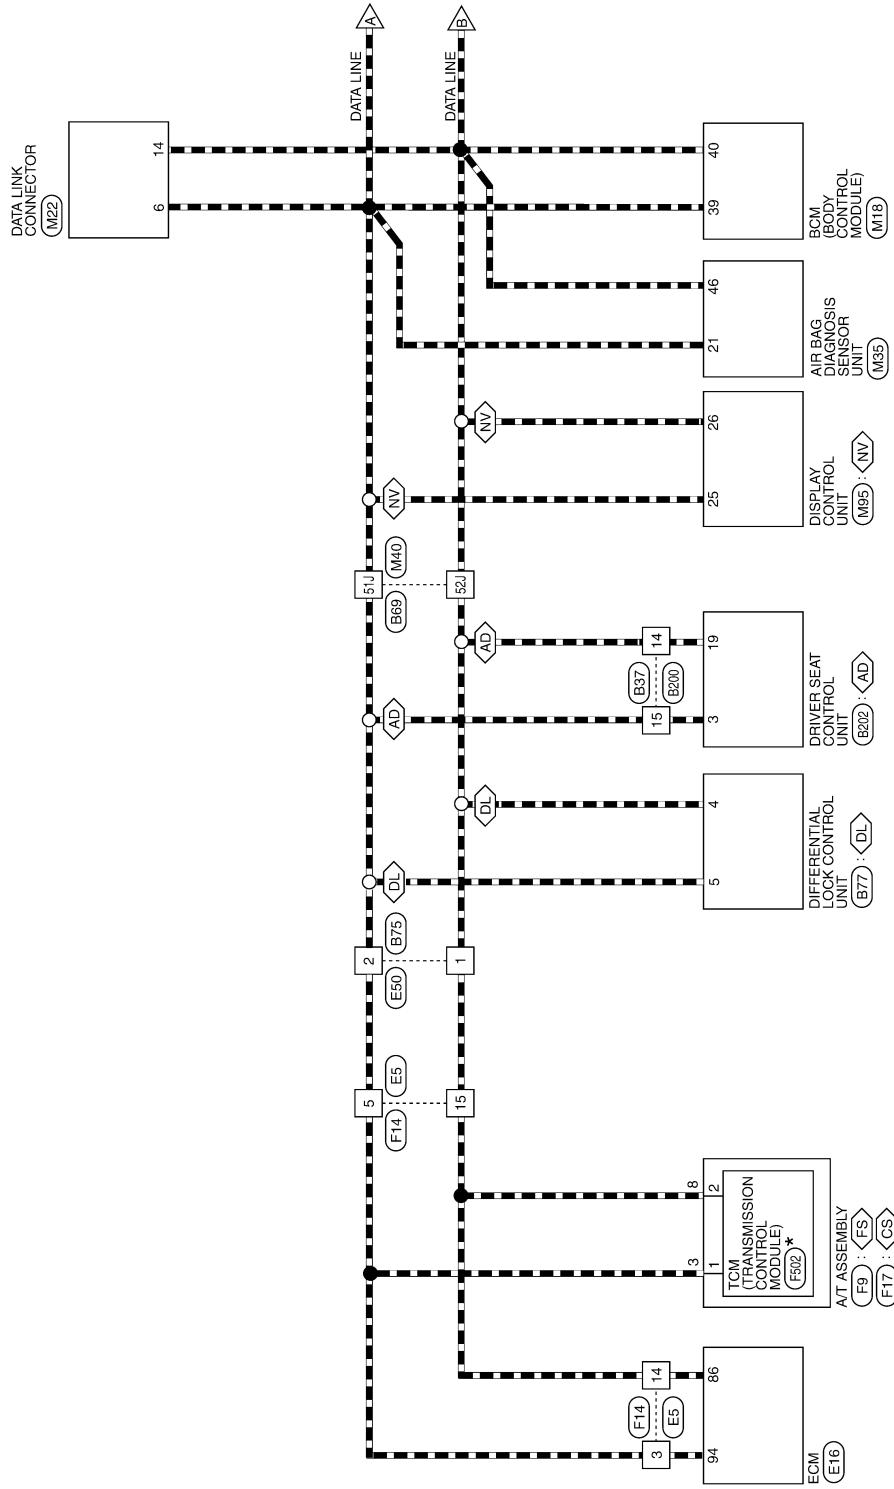


* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

AAMWA0127GB

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

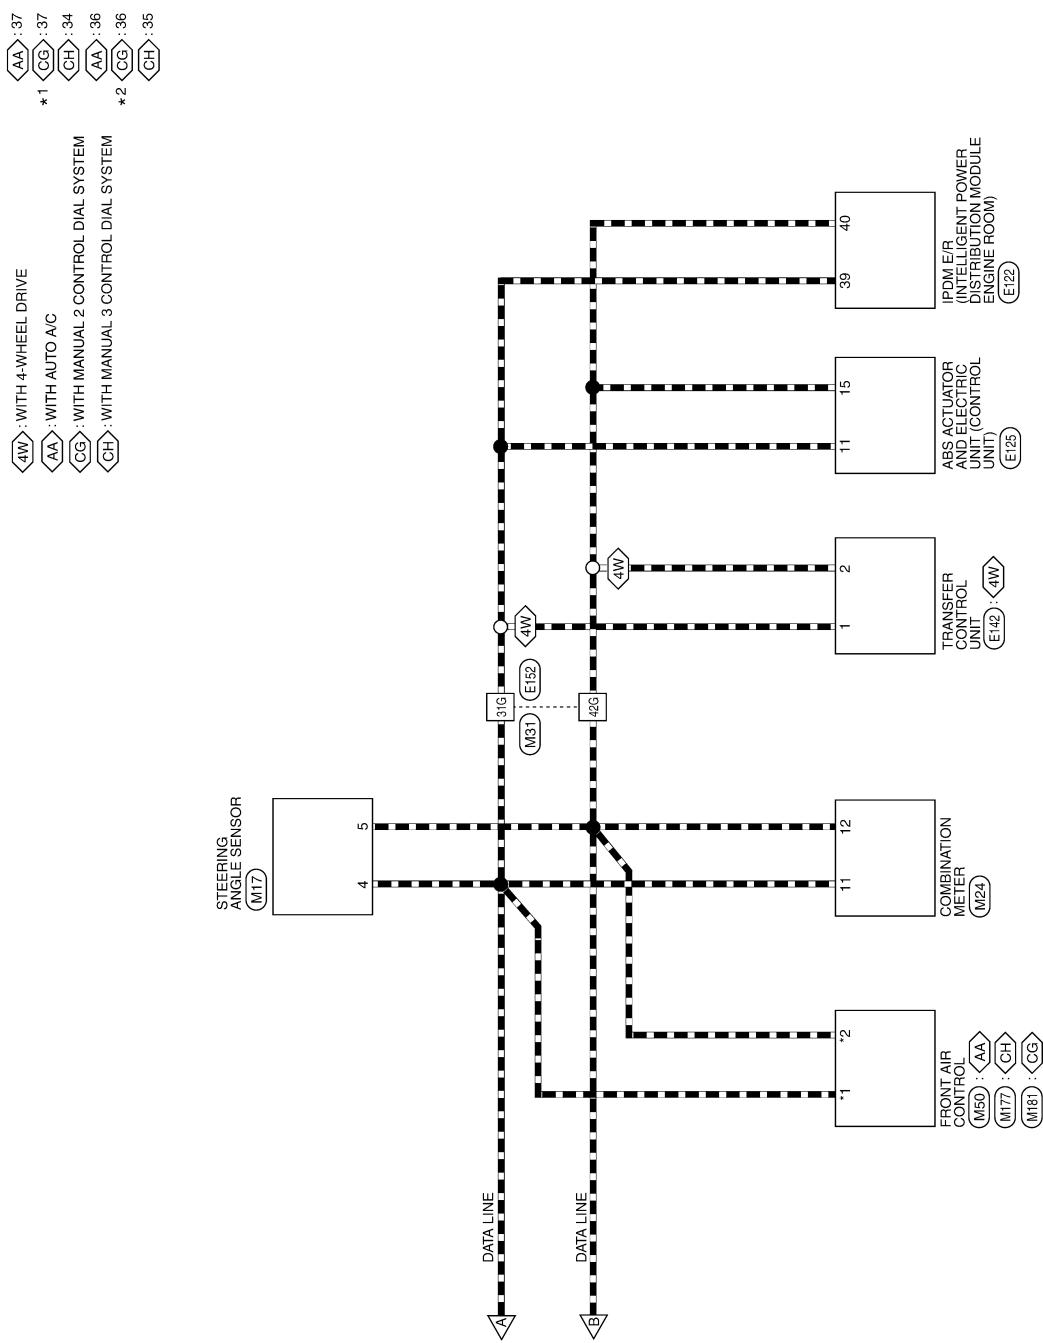

AAMWA0271GB


CAN SYSTEM

< WIRING DIAGRAM >

[CAN]


CAN SYSTEM CONNECTORS


Connector No.	M17	
Connector Name	STEERING ANGLE SENSOR	
Connector Color	WHITE	
		
Terminal No.	Color of Wire	Signal Name
4	L	CAN-H
5	P	CAN-L

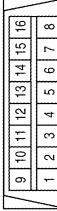Connector No.	M18																		
Connector Name	BCM (BODY CONTROL MODULE)																		
Connector Color	WHITE																		
																			
Terminal No.	Color of Wire	Signal Name																	
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Connector No.	M24	
Connector Name	COMBINATION METER	
Connector Color	WHITE	
		
Terminal No.	Color of Wire	Signal Name
11	L	CAN-H
12	P	CAN-L

Connector No.	M31	
Connector Name	WIRE TO WIRE	
Connector Color	WHITE	
		
Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

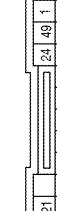Connector No.	M35	
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT	
Connector Color	YELLOW	
		
Terminal No.	Color of Wire	Signal Name
6	L	CAN-H
14	P	CAN-L

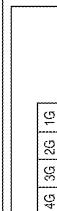
Connector No.	M36			
Connector Name	WIRE TO WIRE			
Connector Color	WHITE			
				
Terminal No.	Color of Wire	Signal Name		
59	45	38	26	16
109	96	88	76	66
219	206	196	186	186
309	296	286	276	276
419	406	396	386	376
509	496	486	476	466
619	606	596	586	576
709	696	686	676	666
819	806	796	786	776
919	906	896	886	876
1019	1006	996	986	976
1119	1106	1096	1086	1076
1219	1206	1196	1186	1176
1319	1296	1196	1186	1176
1419	1396	1296	1196	1176
1519	1496	1396	1296	1196
1619	1596	1496	1396	1296
1719	1696	1596	1496	1396
1819	1796	1696	1596	1496
1919	1896	1796	1696	1596
2019	1996	1896	1796	1696
2119	2096	1996	1896	1796
2219	2196	2096	1996	1896

CAN SYSTEM

[CAN]

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

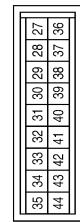


Connector No.	M50
Connector Name	FRONT AIR CONTROL (WITH AUTO A/C)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
36	P	CAN-L
37	L	CAN-H

Signal Name

Signal Name

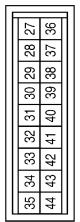


Connector No.	M181
Connector Name	FRONT AIR CONTROL (2 CONTROL DIAL SYSTEM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
36	P	CAN-L
37	L	CAN-H


Signal Name

Signal Name

Connector No.	M177
Connector Name	FRONT AIR CONTROL (WITH MANUAL 3 CONTROL DIAL SYSTEM)
Connector Color	WHITE

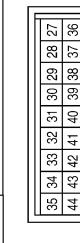

Connector No.	M95
Connector Name	DISPLAY CONTROL UNIT
Connector Color	WHITE

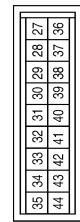

Terminal No.	Color of Wire	Signal Name
34	L	CAN-H
35	P	CAN-L

Terminal No.	Color of Wire	Signal Name
36	P	CAN-L
37	L	CAN-H

Signal Name

Signal Name

A B C D E F G H I J K L M N O P LAN

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	E16
Connector Name	ECM
Connector Color	BLACK




Connector No.	E16
Connector Name	ECM
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
86	P	CAN-L
94	L	CAN-H

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

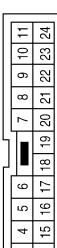

Terminal No.	Color of Wire	Signal Name
3	L	—
5	L	—
14	P	—
15	P	—

Connector No.	E50
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK




Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK



Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

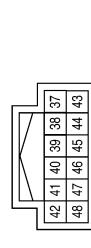

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—
3	—	—
4	—	—
5	—	—
6	—	—
7	—	—
8	—	—
9	—	—
10	—	—
11	—	—
12	—	—
13	—	—
14	—	—
15	—	—
16	—	—
17	—	—
18	—	—
19	—	—
20	—	—
21	—	—
22	—	—
23	—	—
24	—	—
25	—	—
26	—	—
27	—	—
28	—	—
29	—	—
30	—	—
31	—	—
32	—	—
33	—	—
34	—	—
35	—	—
36	—	—
37	—	—
38	—	—
39	—	—
40	—	—
41	—	—
42	—	—
43	—	—
44	—	—
45	—	—
46	—	—
47	—	—
Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—
3	—	—
4	—	—
5	—	—
6	—	—
7	—	—
8	—	—
9	—	—
10	—	—
11	—	—
12	—	—
13	—	—
14	—	—
15	—	—
16	—	—
17	—	—
18	—	—
19	—	—
20	—	—
21	—	—
22	—	—
23	—	—
24	—	—
25	—	—
26	—	—
27	—	—
28	—	—
29	—	—
30	—	—
31	—	—
32	—	—
33	—	—
34	—	—
35	—	—
36	—	—
37	—	—
38	—	—
39	—	—
40	—	—
41	—	—
42	—	—
43	—	—
44	—	—
45	—	—
46	—	—
47	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name
1	—	—
2	—	—

Terminal No.	Color of Wire	Signal Name


<tbl_r cells="

CAN SYSTEM


< WIRING DIAGRAM >

[CAN]


Connector No.	E142
Connector Name	TRANSFER CONTROL UNIT
Connector Color	WHITE

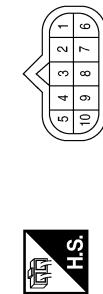

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

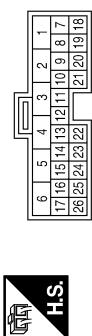


Connector No.	F9
Connector Name	A/T ASSEMBLY (FLOOR SHIFT)
Connector Color	GREEN

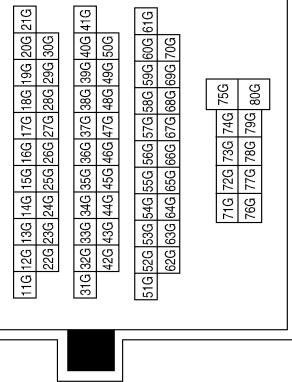

Terminal No.	Color of Wire	Signal Name
31G	L	CAN-H
42G	P	CAN-L

Terminal No.	Color of Wire	Signal Name
1	L	CAN-H
2	P	CAN-L


Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY

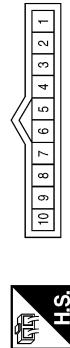

Terminal No.	Color of Wire	Signal Name
3	L	-
8	P	-

Terminal No.	Color of Wire	Signal Name
1	BR	CAN-H
2	L/Y	CAN-L

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

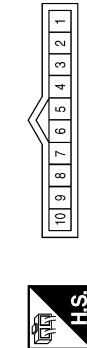

Terminal No.	Color of Wire	Signal Name
11	9	8
20	19	18
21	22	23
22	23	24
23	24	25
24	25	26
25	26	27
26	27	28
27	28	29
28	29	30
29	30	31
30	31	32
31	32	33
32	33	34
33	34	35
34	35	36
35	36	37
36	37	38
37	38	39
38	39	40
39	40	41
40	41	42
41	42	43
42	43	44
43	44	45
44	45	46
45	46	47
46	47	48
47	48	49
48	49	50
49	50	51
50	51	52
51	52	53
52	53	54
53	54	55
54	55	56
55	56	57
56	57	58
57	58	59
58	59	60
59	60	61
60	61	62
61	62	63
62	63	64
63	64	65
64	65	66
65	66	67
66	67	68
67	68	69
68	69	70
69	70	71
70	71	72
71	72	73
72	73	74
73	74	75
74	75	76
75	76	77
76	77	78
77	78	79
78	79	80
79	80	81
80	81	82
81	82	83
82	83	84
83	84	85
84	85	86
85	86	87
86	87	88
87	88	89
88	89	90
89	90	91
90	91	92
91	92	93
92	93	94
93	94	95
94	95	96
95	96	97
96	97	98
97	98	99
98	99	100
99	100	101
100	101	102
101	102	103
102	103	104
103	104	105
104	105	106
105	106	107
106	107	108
107	108	109
108	109	110
109	110	111
110	111	112
111	112	113
112	113	114
113	114	115
114	115	116
115	116	117
116	117	118
117	118	119
118	119	120
119	120	121
120	121	122
121	122	123
122	123	124
123	124	125
124	125	126
125	126	127
126	127	128
127	128	129
128	129	130
129	130	131
130	131	132
131	132	133
132	133	134
133	134	135
134	135	136
135	136	137
136	137	138
137	138	139
138	139	140
139	140	141
140	141	142
141	142	143
142	143	144
143	144	145
144	145	146
145	146	147
146	147	148
147	148	149
148	149	150
149	150	151
150	151	152
151	152	153
152	153	154
153	154	155
154	155	156
155	156	157
156	157	158
157	158	159
158	159	160
159	160	161
160	161	162
161	162	163
162	163	164
163	164	165
164	165	166
165	166	167
166	167	168
167	168	169
168	169	170
169	170	171
170	171	172
171	172	173
172	173	174
173	174	175
174	175	176
175	176	177
176	177	178
177	178	179
178	179	180
179	180	181
180	181	182
181	182	183
182	183	184
183	184	185
184	185	186
185	186	187
186	187	188
187	188	189
188	189	190
189	190	191
190	191	192
191	192	193
192	193	194
193	194	195
194	195	196
195	196	197
196	197	198
197	198	199
198	199	200
199	200	201
200	201	202
201	202	203
202	203	204
203	204	205
204	205	206
205	206	207
206	207	208
207	208	209
208	209	210
209	210	211
210	211	212
211	212	213
212	213	214
213	214	215
214	215	216
215	216	217
216	217	218
217	218	219
218	219	220
219	220	221
220	221	222
221	222	223
222	223	224
223	224	225
224	225	226
225	226	227
226	227	228
227	228	229
228	229	230
229	230	231
230	231	232
231	232	233
232	233	234
233	234	235
234	235	236
235	236	237
236	237	238
237	238	239
238	239	240
239	240	241
240	241	242
241	242	243
242	243	244
243	244	245
244	245	246
245	246	247
246	247	248
247	248	249
248	249	250
249	250	251
250	251	252
251	252	253
252	253	254
253	254	255
254	255	256
255	256	257
256	257	258
257	258	259
258	259	260
259	260	261
260	261	262
261	262	263
262	263	264
263	264	265
264	265	266
265	266	267
266	267	268
267	268	269
268	269	270
269	270	271
270	271	272
271	272	273
272	273	274
273	274	275
274	275	276
275	276	277
276	277	278
277	278	279
278	279	280
279	280	281
280	281	282
281	282	283
282	283	284
283	284	285
284	285	286
285	286	287
286	287	288
287	288	289
288	289	290
289	290	291
290	291	292
291	292	293
292	293	294
293	294	295
294	295	296
295	296	297
296	297	298
297	298	299
298	299	300
299	300	301
300	301	302
301	302	303
302	303	304
303	304	305
304	305	306
305	306	307
306	307	308
307	308	309
308	309	310
309	310	311
310	311	312
311	312	313
312	313	314
313	314	315
314	315	316
315	316	317
316	317	318
317	318	319
318	319	320
319	320	321
320	321	

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

Connector No.	B37
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	P	—
15	L	—

11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29

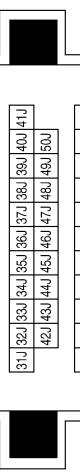


Terminal No.	Color of Wire	Signal Name
51J	L	—
52J	P	—

Terminal No.	Color of Wire	Signal Name
1	P	—
2	L	—

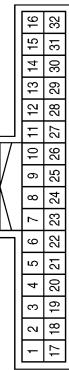


Terminal No.	Color of Wire	Signal Name
3	L	CAN-H
19	P	CAN-L

Connector No.	B77
Connector Name	DIFFERENTIAL-LOCK CONTROL UNIT
Connector Color	WHITE

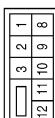

Terminal No.	Color of Wire	Signal Name
14	P	—
15	L	—

Connector No.	B200
Connector Name	WIRE TO WIRE
Connector Color	WHITE

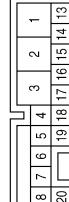

Terminal No.	Color of Wire	Signal Name
4	P	CAN-L
5	L	CAN-H


< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

CAN COMMUNICATION SYSTEM

Component Parts Location

INFOID:000000006179129

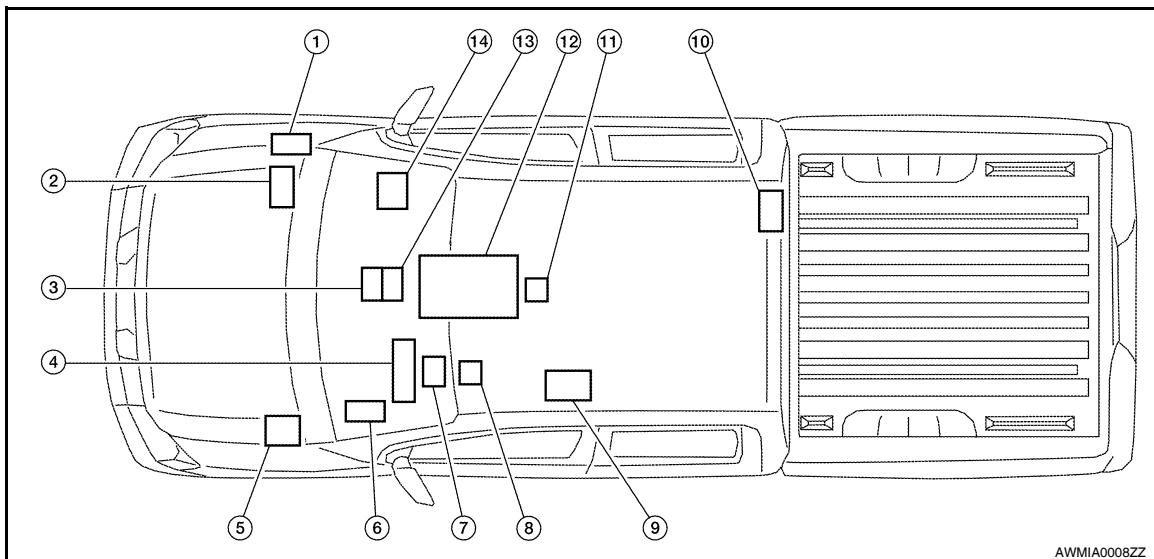

1. ECM E16	2. IPDM E/R E122	3. Display control unit M95
4. Combination meter M24	5. ABS actuator and electric unit (control unit) E125	6. BCM M18
7. Data link connector M22	8. Steering angle sensor M17	9. Driver seat control unit B202
10. Differential lock control unit B77	11. Air bag diagnosis sensor unit M35	12. A/T assembly F9: With floor shift F17: With column shift
13. Front air control M50: With auto A/C M177: With manual 3 control dial system M181: With manual 2 control dial system	14. Transfer control unit E142	

MALFUNCTION AREA CHART

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

MALFUNCTION AREA CHART

Main Line

INFOID:0000000006179131

Malfunction area	Reference
Main line between TCM and data link connector	LAN-69, "Diagnosis Procedure"
Main line between TCM and differential lock control unit	LAN-71, "Diagnosis Procedure"
Main line between TCM and driver seat control unit	LAN-73, "Diagnosis Procedure"
Main line between differential lock control unit and data link connector	LAN-75, "Diagnosis Procedure"
Main line between differential lock control unit and driver seat control unit	LAN-76, "Diagnosis Procedure"
Main line between driver seat control unit and data link connector	LAN-78, "Diagnosis Procedure"
Main line between driver seat control unit and display control unit	LAN-77, "Diagnosis Procedure"
Main line between display control unit and data link connector	LAN-79, "Diagnosis Procedure"
Main line between data link connector and combination meter	LAN-80, "Diagnosis Procedure"
Main line between combination meter and ABS actuator and electric unit (control unit)	LAN-81, "Diagnosis Procedure"
Main line between combination meter and transfer control unit	LAN-82, "Diagnosis Procedure"
Main line between transfer control unit and ABS actuator and electric unit (control unit)	LAN-83, "Diagnosis Procedure"

Branch Line

INFOID:0000000006179132

Malfunction area	Reference
ECM branch line circuit	LAN-84, "Diagnosis Procedure"
TCM branch line circuit	LAN-85, "Diagnosis Procedure"
Differential lock control unit branch line circuit	LAN-86, "Diagnosis Procedure"
Driver seat control unit branch line circuit	LAN-87, "Diagnosis Procedure"
Display control unit branch line circuit	LAN-88, "Diagnosis Procedure"
BCM branch line circuit	LAN-89, "Diagnosis Procedure"
Data link connector branch line circuit	LAN-90, "Diagnosis Procedure"
Front air control branch line circuit	LAN-91, "Diagnosis Procedure"
Combination meter branch line circuit	LAN-92, "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-93, "Diagnosis Procedure"
Transfer control unit branch line circuit	LAN-94, "Diagnosis Procedure"
ABS actuator and electric unit (control unit) branch line circuit	LAN-95, "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-96, "Diagnosis Procedure"

Short Circuit

INFOID:0000000006179133

Malfunction area	Reference
CAN communication circuit	LAN-97, "Diagnosis Procedure"

MAIN LINE BETWEEN TCM AND DLC CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN TCM AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000006179134

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F14
 - Harness connector E5
 - Harness connector E50
 - Harness connector B75
 - Harness connector B69
 - Harness connector M40

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - A/T assembly
 - Harness connectors F14 and E5
2. Check the continuity between the A/T assembly harness connector and the harness connector.
 - Models with floor shift

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F9	3	F14	5	Existed
	8		15	Existed

- Models with column shift

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F17	3	F14	5	Existed
	8		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the A/T assembly and the harness connector F14.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors E50 and B75.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E5	5	E50	2	Existed
	15		1	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors E5 and E50.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B69 and M40.

MAIN LINE BETWEEN TCM AND DLC CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B75	2	B69	51J	Existed
	1		52J	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors B75 and B69.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M40	51J	M22	6	Existed
	52J		14	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the data link connector.

NO >> Repair the main line between the harness connector M40 and the data link connector.

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN TCM AND DIFF CIRCUIT

Diagnosis Procedure

INFOID:0000000006179135

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F14
 - Harness connector E5
 - Harness connector E50
 - Harness connector B75

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - A/T assembly
 - Harness connectors F14 and E5
2. Check the continuity between the A/T assembly harness connector and the harness connector.
 - Models with floor shift

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F9	3	F14	5	Existed
	8		15	Existed

- Models with column shift

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F17	3	F14	5	Existed
	8		15	Existed

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair the main line between the A/T assembly and the harness connector F14.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors E50 and B75.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E5	5	E50	2	Existed
	15		1	Existed

Is the inspection result normal?

YES >> GO TO 4.
NO >> Repair the main line between the harness connectors E5 and E50.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of differential lock control unit.
2. Check the continuity between the harness connector and the differential lock control unit harness connector.

MAIN LINE BETWEEN TCM AND DIFF CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Harness connector		Differential lock control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B75	2	B77	5	Existed
	1		4	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the TCM and the differential lock control unit.

NO >> Repair the main line between the harness connector B75 and the differential lock control unit.

MAIN LINE BETWEEN TCM AND ADP CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN TCM AND ADP CIRCUIT

Diagnosis Procedure

INFOID:0000000006179136

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F14
 - Harness connector E5
 - Harness connector E50
 - Harness connector B75

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - A/T assembly
 - Harness connectors F14 and E5
2. Check the continuity between the A/T assembly harness connector and the harness connector.
 - Models with floor shift

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F9	3	F14	5	Existed
	8		15	Existed

- Models with column shift

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F17	3	F14	5	Existed
	8		15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the A/T assembly and the harness connector F14.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors E50 and B75.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E5	5	E50	2	Existed
	15		1	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors E5 and E50.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B37 and B200.
2. Check the continuity between the harness connectors.

MAIN LINE BETWEEN TCM AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B75	2	B37	15	Existed
	1		14	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the TCM and the driver seat control unit.

NO >> Repair the main line between the harness connectors B75 and B37.

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN DIFF AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000006179137

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Differential lock control unit
 - Harness connectors B69 and M40
2. Check the continuity between the differential lock control unit harness connector and the harness connector.

Differential lock control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B77	5	B69	51J	Existed
	4		52J	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the differential lock control unit and the harness connector B69.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M40	51J	M22	6	Existed
	52J		14	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the differential lock control unit and the data link connector.

NO >> Repair the main line between the harness connector M40 and the data link connector.

MAIN LINE BETWEEN DIFF AND ADP CIRCUIT

Diagnosis Procedure

INFOID:0000000006179138

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Differential lock control unit
 - Harness connectors B37 and B200
4. Check the continuity between the differential lock control unit harness connector and the harness connector.

Differential lock control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B77	5	B37	15	Existed
	4		14	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the differential lock control unit and the driver seat control unit.

NO >> Repair the main line between the differential lock control unit and the harness connector B37.

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN ADP AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000006179139

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.

- Harness connectors B200 and B37
- Harness connectors B69 and M40

2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B37	15	B69	51J	Existed
	14		52J	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connectors B37 and B69.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M40	51J	M22	6	Existed
	52J		14	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the data link connector.

NO >> Repair the main line between the harness connector M40 and the data link connector.

MAIN LINE BETWEEN ADP AND DISP CIRCUIT

Diagnosis Procedure

INFOID:000000006179140

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B69
 - Harness connector M40

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Harness connectors B200 and B37
 - Harness connectors B69 and M40
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B37	15	B69	51J	Existed
	14		52J	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connectors B37 and B69.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of display control unit.
2. Check the continuity between the harness connector and the display control unit harness connector.

Harness connector		Display control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M40	51J	M95	25	Existed
	52J		26	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the display control unit.

NO >> Repair the main line between the harness connector M40 and the display control unit.

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN DISP AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000006179141

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Display control unit
4. Check the continuity between the display control unit harness connector and the data link connector.

Display control unit harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M95	25	M22	6	Existed
	26		14	Existed

Is the inspection result normal?

YES (Present error) >> Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error) >> Error was detected in the main line between the display control unit and the data link connector.

NO >> Repair the main line between the display control unit and the data link connector.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000006179142

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	11	Existed
	14		12	Existed

Is the inspection result normal?

YES (Present error) >> Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error) >> Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN M&A AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000006179143

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Combination meter
 - Harness connectors M31 and E152
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M24	11	M31	31G	Existed
	12		42G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the combination meter and the harness connector M31.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E152	31G	E125	11	Existed
	42G		15	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the combination meter and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E152 and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN M&A AND 4WD CIRCUIT

Diagnosis Procedure

INFOID:0000000006179144

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M31
 - Harness connector E152

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Combination meter
 - Harness connectors M31 and E152
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M24	11	M31	31G	Existed
	12		42G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the combination meter and the harness connector M31.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of transfer control unit.
2. Check the continuity between the harness connector and the transfer control unit harness connector.

Harness connector		Transfer control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E152	31G	E142	1	Existed
	42G		2	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the combination meter and the transfer control unit.

NO >> Repair the main line between the harness connector E152 and the transfer control unit.

< DTC/CIRCUIT DIAGNOSIS >

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000006179145

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Transfer control unit
 - ABS actuator and electric unit (control unit)
4. Check the continuity between the transfer control unit harness connector and the ABS actuator and electric unit (control unit) harness connector.

Transfer control unit harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E142	1	E125	11	Existed
	2		15	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the transfer control unit and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the transfer control unit and the ABS actuator and electric unit (control unit).

< DTC/CIRCUIT DIAGNOSIS >

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179146

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector E5
 - Harness connector F14

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
E16	94	86	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-136, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-118, "Procedure After Replacing ECM"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

< DTC/CIRCUIT DIAGNOSIS >

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000006179147

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/T assembly for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

- Models with floor shift

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F9	3	8

- Models with column shift

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F17	3	8

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the control valve with TCM. Refer to [TM-197, "Control Valve with TCM"](#).
2. Disconnect the connector of TCM.
3. Check the continuity between the A/T assembly connector and the TCM harness connector.

A/T assembly connector	TCM harness connector		Continuity
Terminal No.	Connector No.	Terminal No.	
3	F502	1	Existed
8		2	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harness between the A/T assembly connector and the TCM harness connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-101, "Diagnosis Procedure"](#).Is the inspection result normal?YES (Present error)>>Replace the control valve with TCM. Refer to [TM-197, "Control Valve with TCM"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

< DTC/CIRCUIT DIAGNOSIS >

DIFF BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179148

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the differential lock control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of differential lock control unit.
2. Check the resistance between the differential lock control unit harness connector terminals.

Differential lock control unit harness connector		Resistance (Ω)
Connector No.	Terminal No.	
B77	5	4

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the differential lock control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the differential lock control unit. Refer to [DLN-219, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the differential lock control unit. Refer to [DLN-253, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the differential lock control unit branch line.

NO >> Repair the power supply and the ground circuit.

< DTC/CIRCUIT DIAGNOSIS >

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179149

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B200
 - Harness connector B37

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver seat control unit.
2. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B202	3	19	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the driver seat control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-48, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-148, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

DISP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179150

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the display control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of display control unit.
2. Check the resistance between the display control unit harness connector terminals.

Display control unit harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
M95	25	26	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the display control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the display control unit. Refer to [AV-224, "DISPLAY CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the display control unit. Refer to [AV-327, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the display control unit branch line.

NO >> Repair the power supply and the ground circuit.

< DTC/CIRCUIT DIAGNOSIS >

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179151

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
M18	39	40	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-28, "Diagnosis Procedure"](#).Is the inspection result normal?YES (Present error)>>Replace the BCM. Refer to [BCS-53, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

A

B

C

D

E

F

G

H

K

L

LAN

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179152

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector		Resistance (Ω)	
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Not copied from on-board diagnosis.
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

< DTC/CIRCUIT DIAGNOSIS >

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000006179153

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the front air control for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of front air control.
2. Check the resistance between the front air control harness connector terminals.

- Models with auto A/C

Front air control harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	37	36	Approx. 54 – 66

- Models with manual 3 control dial system

Front air control harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M177	34	35	Approx. 54 – 66

- Models with manual 2 control dial system

Front air control harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M181	37	36	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the front air control branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the front air control. Refer to the following.

- Models with automatic air conditioner: [HAC-67, "Front Air Control Power and Ground Diagnosis Procedure"](#)
- Models with manual air conditioner - type 1: [HAC-150, "Front Air Control Power and Ground Diagnosis Procedure"](#)
- Models with manual air conditioner - type 2: [HAC-227, "Front Air Control Power and Ground Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the front air control. Refer to [VTL-8, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the front air control branch line.

NO >> Repair the power supply and the ground circuit.

< DTC/CIRCUIT DIAGNOSIS >

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179154

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
M24	11	12	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-33, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-93, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

< DTC/CIRCUIT DIAGNOSIS >

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179155

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
M17	4	5	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-92, "Wiring Diagram"](#).

Is the inspection result normal?YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-118, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179156

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the transfer control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of transfer control unit.
2. Check the resistance between the transfer control unit harness connector terminals.

Transfer control unit harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
E142	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the transfer control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the transfer control unit. Refer to [DLN-20, "Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the transfer control unit. Refer to [DLN-93, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the transfer control unit branch line.

NO >> Repair the power supply and the ground circuit.

< DTC/CIRCUIT DIAGNOSIS >

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179157

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
E125	11	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-35, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006179158

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector		Resistance (Ω)
Connector No.	Terminal No.	
E122	39	40

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUITCheck the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-16, "Diagnosis Procedure"](#).Is the inspection result normal?YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000006179159

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M22	6	14

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
94	86	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

< DTC/CIRCUIT DIAGNOSIS >

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.