

SECTION G

GENERAL INFORMATION

GI
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

HOW TO USE THIS MANUAL	3	Precautions For Removing Battery Terminal	24
HOW TO USE THIS MANUAL	3	General Precautions	24
Description	3	Three Way Catalyst	25
Terms	3	Multiport Fuel Injection System or Engine Control	
Units	3	System	26
Contents	3	Hoses	26
Relation between Illustrations and Descriptions	4	Engine Oils	27
Components	4	Air Conditioning	27
		Fuel	27
HOW TO FOLLOW TROUBLE DIAGNOSES.....	6	LIFTING POINT	29
Description	6	XD MODELS	29
How to Follow Test Groups in Trouble Diagnosis.....	6	XD MODELS : Garage Jack and Safety Stand	29
Key to Symbols Signifying Measurements or Pro-		XD MODELS : 2-Pole Lift	29
cedures	7		
HOW TO READ WIRING DIAGRAMS	9	NON-XD MODELS	30
Connector symbols	9	NON-XD MODELS : Garage Jack and Safety	
Sample/wiring diagram -example-	10	Stand	30
Connector Information	12	NON-XD MODELS : 2-Pole Lift	31
ABBREVIATIONS	14	TOW TRUCK TOWING	32
Abbreviation List	14	Tow Truck Towing	32
TIGHTENING TORQUE OF STANDARD		Vehicle Recovery (Freeing a stuck vehicle)	33
BOLTS	19		
Description	19	VEHICLE INFORMATION	34
Tightening Torque Table (New Standard Includ-		IDENTIFICATION INFORMATION	34
ed)	19	Model Variation	34
RECOMMENDED CHEMICAL PRODUCTS		Identification Number	36
AND SEALANTS	22	Identification Plate	38
Recommended Chemical Products and Sealants...	22	Engine Serial Number	39
PRECAUTION	23	Transfer Serial Number	40
PRECAUTIONS	23	Automatic Transmission Number	40
Description	23	Dimensions	40
Precaution for Supplemental Restraint System		Wheels & Tires	41
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-			
SIONER"	23		
Precaution for Procedure without Cowl Top Cover...	23		

Control Units and Electrical Parts	43	Wiring Diagram - With Cummins 5.0L Without Navigation	62
How to Check Terminal	44	Wiring Diagram - With VK56VD With Driver Assistance System	63
Intermittent Incident	47	Wiring Diagram - With VK56VD Without Driver Assistance System	65
Circuit Inspection	49		
CONSULT CHECKING SYSTEM	55	INSPECTION AND ADJUSTMENT	66
Description	55	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL	66
Function and System Application	55	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement	66
CONSULT Data Link Connector (DLC) Circuit	56		
Wiring Diagram - With Cummins 5.0L With Navigation With Blind Spot Warning	58		
Wiring Diagram - With Cummins 5.0L With Navigation Without Blind Spot Warning	60		

HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

HOW TO USE THIS MANUAL

HOW TO USE THIS MANUAL

Description

INFOID:000000014418298

This volume explains "Removal, Disassembly, Installation, Inspection and Adjustment" and "Trouble Diagnoses".

Terms

INFOID:000000014418299

- The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.

WARNING indicates the possibility of personal injury if instructions are not followed.

CAUTION indicates the possibility of component damage if instructions are not followed.

BOLD TYPED STATEMENTS except **WARNING** and **CAUTION** give you helpful information.

Standard value: Tolerance at inspection and adjustment.

Limit value: The maximum or minimum limit value that should not be exceeded at inspection and adjustment.

Units

INFOID:000000014418300

- The **UNITS** given in this manual are primarily expressed as the SI UNIT (International System of Unit), and alternatively expressed in the metric system and in the yard/pound system.

Also with regard to tightening torque of bolts and nuts, there are descriptions both about range and about the standard tightening torque.

"Example"

Range

Outer Socket Lock Nut : 59 - 78 N·m (6.0 - 8.0 kg·m, 43 - 58 ft-lb)

Standard

Drive Shaft Installation Bolt : 44.3 N·m (4.5 kg·m, 33 ft-lb)

Contents

INFOID:000000014418301

- **A QUICK REFERENCE INDEX**, a black tab (e.g. **BR**) is provided on the first page. You can quickly find the first page of each section by matching it to the section's black tab.
- **THE CONTENTS** are listed on the first page of each section.
- **THE TITLE** is indicated on the upper portion of each page and shows the part or system.
- **THE PAGE NUMBER** of each section consists of two or three letters which designate the particular section and a number (e.g. "BR-5").
- **THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations. Assembly, inspection and adjustment procedures for the complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.

HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

Relation between Illustrations and Descriptions


INFOID:0000000014418302

The following sample explains the relationship between the part description in an illustration, the part name in the text and the service procedures.

< Example 1 >

1. Remove return spring (1) from parking pawl (2).

The identifier number of the part name in the text is consistent with the identifier part number in the illustration.

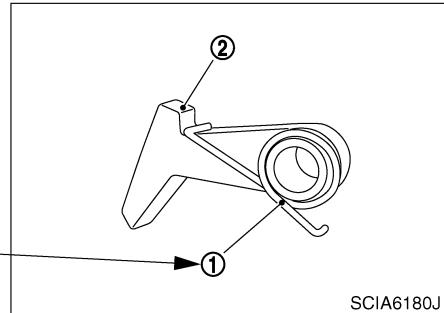


< Example 2 >

- : Vehicle front
- Tighten rear member mounting bolts following the numerical order shown in the illustration.
- Note : View upward

The numbers in the illustration are consistent with the service operation instructions.

Direction mark

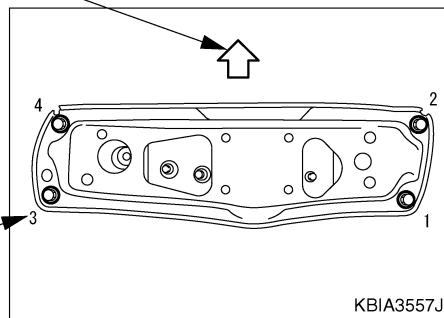

Components

INFOID:0000000014418303

- **THE LARGE ILLUSTRATIONS** are exploded views (see the following) and contain tightening torques, lubrication points, section number of the **PARTS CATALOG** (e.g. SEC. 440) and other information necessary to perform repairs.


The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG**.

Always check with the **PARTS DEPARTMENT** for the latest parts information.

Components shown in an illustration may be identified by a circled number. When this style of illustration is used, the text description of the components will follow the illustration.

HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

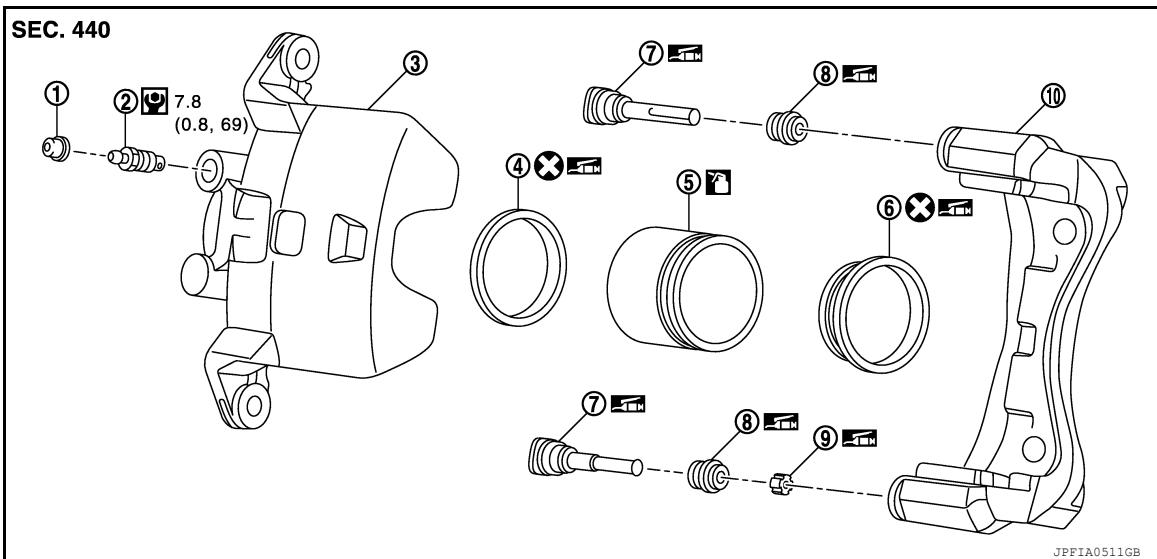

1. Cap	2. Bleeder valve	3. Cylinder body
4. Piston seal	5. Piston	6. Piston boot
7. Sliding pin	8. Sliding pin boot	9. Bushing

: Apply rubber grease

 : Apply brake fluid.

• N·m (kg·m, in-lb)

 Always replace a

W y y y y

SYMBOLS

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Tightening torque The tightening torque specifications of bolts and nuts may be presented as either a range or a standard tightening torque.		: N·m (kg·m, ft-lb)
			Always replace after every disassembly.
	Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.		Apply petroleum jelly.
	Should be lubricated with oil.		Apply molybdenum added petroleum jelly.
	Sealing point		Apply ATF.
	Sealing point with locking sealant.		Select with proper thickness.
	Checking point		Adjustment is required.

HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

HOW TO FOLLOW TROUBLE DIAGNOSES

Description

INFOID:0000000014418304

NOTICE:

Trouble diagnoses indicate work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.


- Before performing trouble diagnoses, read the “Work Flow” in each section.
- After repairs, re-check that the problem has been completely eliminated.
- Refer to Component Parts and Harness Connector Location for the Systems described in each section for identification/location of components and harness connectors.
- When checking circuit continuity, ignition switch should be OFF.
- Refer to the Circuit Diagram for quick pinpoint check.

If you need to check circuit continuity between harness connectors in more detail, such as when a sub-harness is used, refer to Wiring Diagram in each individual section and Harness Layout in PG section for identification of harness connectors.

- Before checking voltage at connectors, check battery voltage.
- After accomplishing the Diagnosis Procedures and Electrical Components Inspection, make sure that all harness connectors are reconnected as they were.

How to Follow Test Groups in Trouble Diagnosis

INFOID:0000000014418305

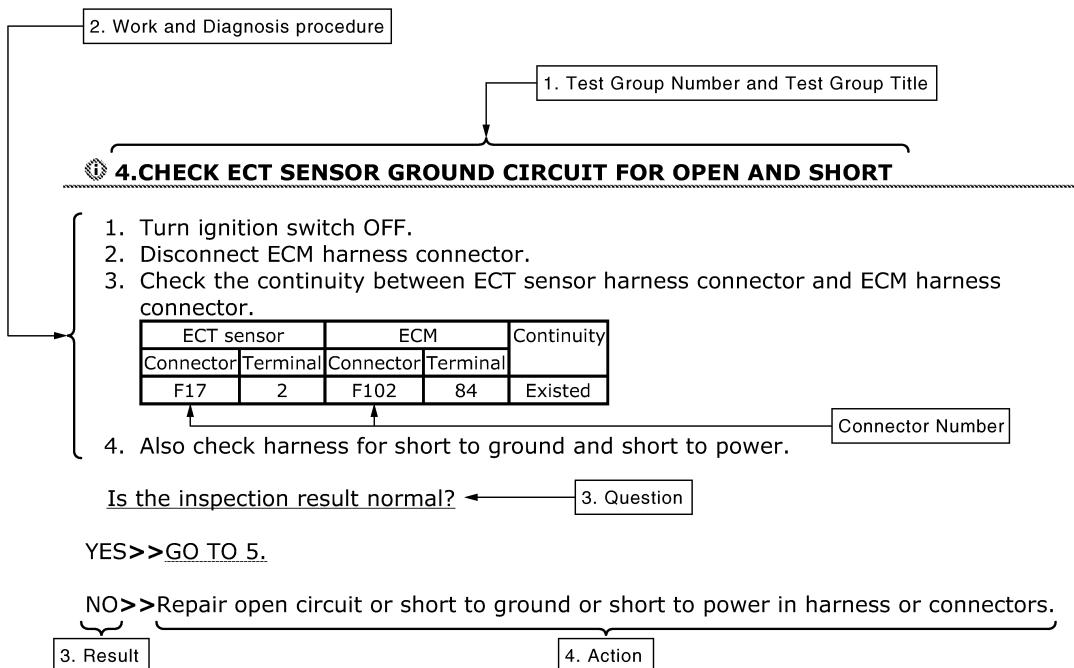

JPAIA0021GB


1. Test group number and test group title
 - Test group number and test group title are shown in the upper portion of each test group.
2. Work and diagnosis procedure
 - Start to diagnose a problem using procedures indicated in enclosed test groups.
3. Questions and results
 - Questions and required results are indicated in test group.
4. Action
 - Next action for each test group is indicated based on result of each question.

HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

Key to Symbols Signifying Measurements or Procedures

INFOID:000000014418306

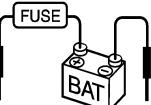SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Check after disconnecting the connector to be measured.		Procedure with Generic Scan Tool. (GST, OBD-II scan tool)
	Check after connecting the connector to be measured.		Procedure without CONSULT or GST
	Insert key into ignition switch.		A/C switch is "OFF".
	Remove key from ignition switch.		A/C switch is "ON".
	Insert and remove key repeatedly.		REC switch is "ON".
	Turn ignition switch to "OFF" position.		REC switch is "OFF".
	Turn ignition switch to "ACC" position.		Fan switch is "ON". (At any position except for "OFF" position)
	Turn ignition switch to "ON" position.		Fan switch is "OFF".
	Turn ignition switch to "START" position.		Apply fuse.
	Turn ignition switch from "OFF" to "ACC" position.		Apply positive voltage from battery with fuse directly to components.
	Turn ignition switch from "ACC" to "ON" position.		
	Turn ignition switch from "ACC" to "OFF" position.		

JPAIA0982GB

HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Turn ignition switch from "OFF" to "ON" position.		Drive vehicle.
	Turn ignition switch from "ON" to "OFF" position.		Disconnect battery negative cable.
	Do not start engine, or check with engine stopped.		Depress brake pedal.
	Start engine, or check with engine running.		Release brake pedal.
	Apply parking brake.		Depress accelerator pedal.
	Release parking brake.		Release accelerator pedal.
	Check after engine is warmed up sufficiently.		Pin terminal check for SMJ type ECM or TCM connectors.
	Voltage should be measured with a voltmeter.		Circuit resistance should be measured with an ohmmeter.
	Current should be measured with an ammeter.		Pulse signal should be checked with an oscilloscope.
	Procedure with CONSULT		
	Procedure without CONSULT		
	Place selector lever in "P" position.		
	Place selector lever in "N" position.		
	Jack up front portion.		
	Jack up rear portion.		
	Inspect under engine room.		
	Inspect under floor.		
	Inspect rear under floor.		

JSAIA1461GB

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >


HOW TO READ WIRING DIAGRAMS

Connector symbols

Most of the connector symbols in wiring diagrams are shown from the terminal side.

- Connector symbols shown from the terminal side are enclosed by a single line and followed by the direction mark.
- Connector symbols shown from the harness side are enclosed by a double line and followed by the direction mark.
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG section, "Description", "HARNESS CONNECTOR".


INFOID:000000014418307

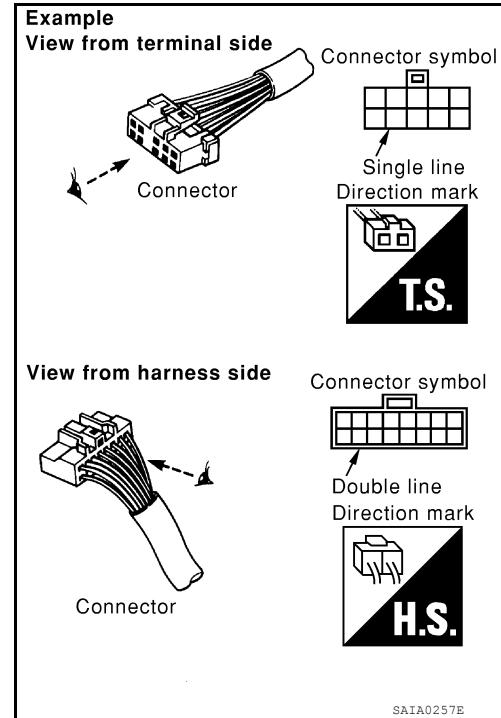

SAIA0257E

- Male and female terminals

Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

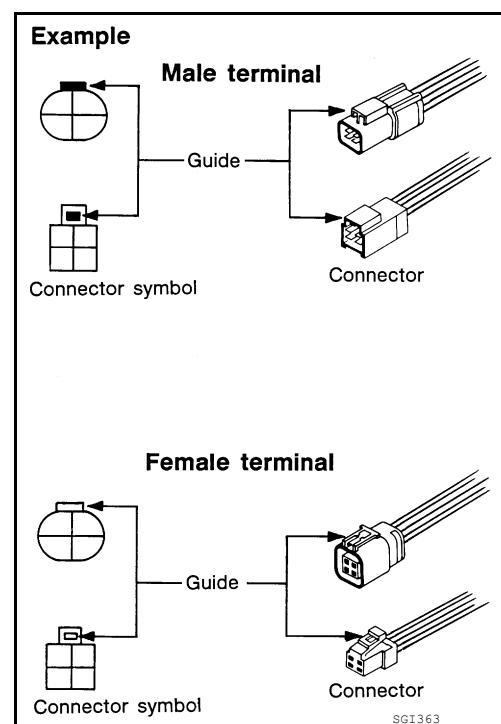

SGI363

HOW TO READ WIRING DIAGRAMS


< HOW TO USE THIS MANUAL >

Sample/wiring diagram -example-


INFOID:0000000014418308

Each section includes wiring diagrams.

EXAMPLE

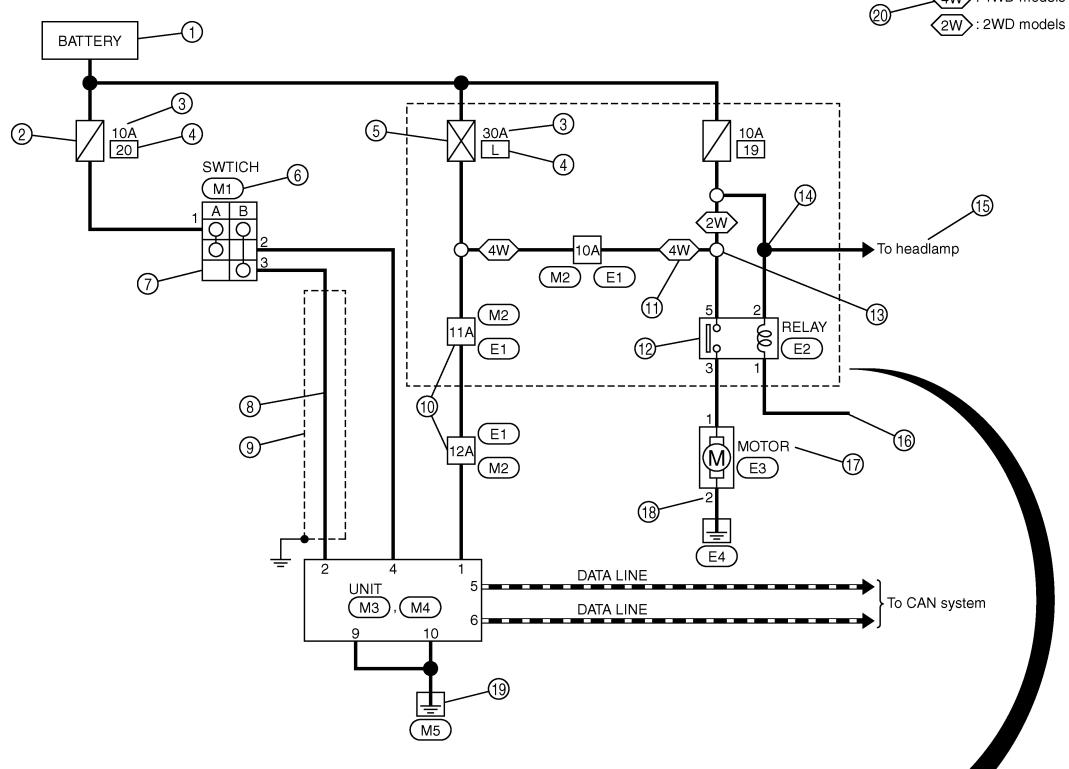

Optional splice

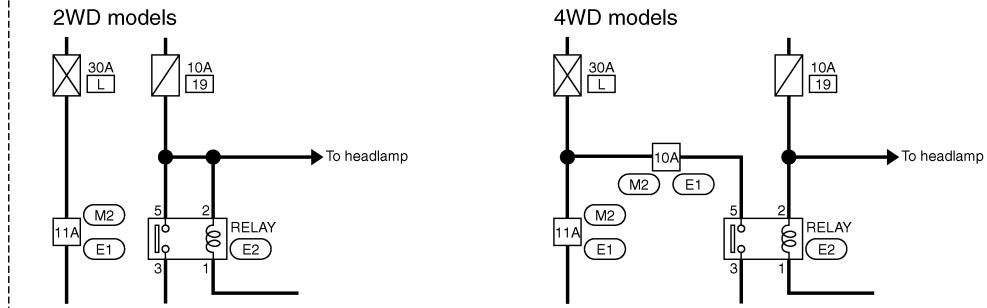

JCAWA0150GB

Description

No.	Item	Description
1	Power supply	<ul style="list-style-type: none">• This means the power supply of fusible link or fuse.
2	Fuse	<ul style="list-style-type: none">• “/” means the fuse.
3	Current rating of fusible link/fuse	<ul style="list-style-type: none">• This means the current rating of the fusible link or fuse.
4	Number of fusible link/fuse	<ul style="list-style-type: none">• This means the number of fusible link or fuse location.
5	Fusible link	<ul style="list-style-type: none">• “X” means the fusible link.
6	Connector number	<ul style="list-style-type: none">• Alphabetic characters show to which harness the connector is placed.• Numeric characters show the identification number of connectors.
7	Switch	<ul style="list-style-type: none">• This shows that continuity exists between terminals 1 and 2 when the switch is in the A position. Continuity exists between terminals 1 and 3 when the switch is in the B position.
8	Circuit (Wiring)	<ul style="list-style-type: none">• This means the wiring.

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >


No.	Item	Description	
9	Shielded line	• The line enclosed by broken line circle shows shield wire.	GI
10	Connectors	• This means that a transmission line bypasses two connectors or more.	B
11	Option abbreviation	• This means the vehicle specifications which lays out the circuit between "O".	C
12	Relay	• This shows an internal representation of the relay.	D
13	Optional splice	• The open circle shows that the splice is optional depending on vehicle application.	E
14	Splice	• The shaded circle "●" means the splice.	F
15	System branch	• This shows that the circuit is branched to other systems.	G
16	Page crossing	• This circuit continues to an adjacent page.	H
17	Component name	• This shows the name of a component.	I
18	Terminal number	• This means the terminal number of a connector.	J
19	Ground (GND)	• This shows the ground connection.	K
20	Explanation of option description	• This shows an explanation of the option abbreviation used on the same page.	M

SWITCH POSITIONS

Switches are shown in wiring diagrams as if the vehicle is in the "normal" condition.

A vehicle is in the "normal" condition when:

- ignition switch is "OFF"
- doors, hood and trunk lid/back door are closed
- pedals are not depressed
- parking brake is released

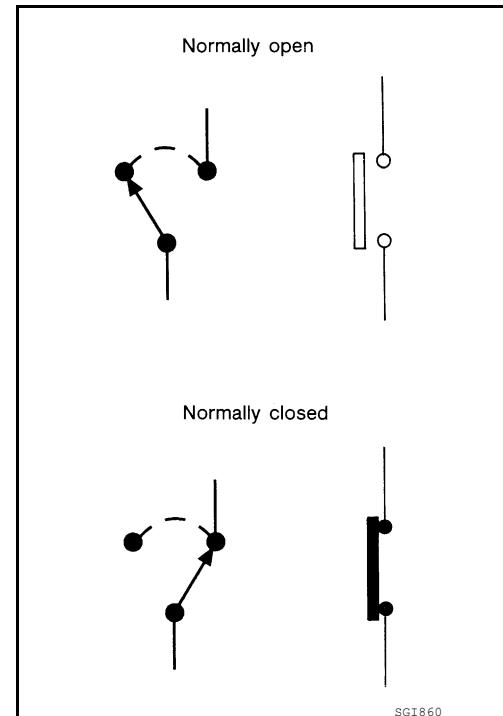

MULTIPLE SWITCH

The continuity of multiple switch is described in two ways as shown below.

- The switch chart is used in schematic diagrams.

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >


- The switch diagram is used in wiring diagrams.

Example

(SWITCH CHART)

	OFF	INT	LO	HI	WASH
1					
2					
3	○	○	○		
4	○	○			
5		○			
6	○	○	○	○	

(SWITCH DIAGRAM)

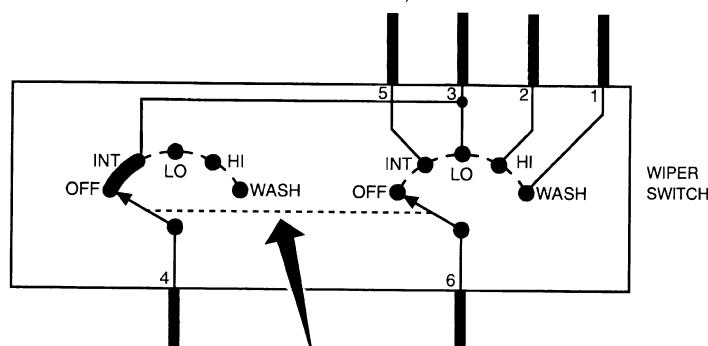

Both switches are turned in combination.

Continuity circuit of wiper switch

SWITCH POSITION	CONTINUITY CIRCUIT
OFF	3-4
INT	3-4, 5-6
LO	3-6
HI	2-6
WASH	1-6

JSAIA0017GB

Connector Information

INFOID:0000000014418309

①	Connector No.	M3	Connector No.	M4		
②	Connector Name	UNIT	Connector Name	UNIT		
③	Connector Type	NS06FW-M2	Connector Type	NS10FW-CS		
③	Connector Color	WHITE	Connector Color	WHITE		
④	H.S.	⑤	H.S.	⑥		
④	Terminal No.	Color of Wire	Signal Name	Terminal No.		
1	W		BAT	9	B	GND
2	G		SWITCH B	10	B	GND
4	V		SWITCH A			
5	L		CAN-H			
6	P		CAN-L			

ANAWA0024GB

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

Description

No.	Item	Description	GI																		
1	Connector number	<ul style="list-style-type: none"> Alphabetic characters show to which harness the connector is placed. Numeric characters show the identification number of connectors. 	B C D E																		
2	Connector type	<p>①: Connector model ②: Cavity ③: Male (M) and female (F) terminals ④: Connector color ⑤: Special type</p>	<p>Example:</p> <p>JPMIA0113GB</p>																		
3	Connector color	<ul style="list-style-type: none"> This means the color of a connector. 	F																		
4	Terminal number	<ul style="list-style-type: none"> This means the terminal number of a connector. 	G																		
5	Wire color	<p>• This shows a code for the color of the wire.</p> <table> <tbody> <tr> <td>B = Black</td> <td>LA = Lavender</td> </tr> <tr> <td>W = White</td> <td>OR or O = Orange</td> </tr> <tr> <td>R = Red</td> <td>P = Pink</td> </tr> <tr> <td>G = Green</td> <td>PU or V (Violet) = Purple</td> </tr> <tr> <td>L = Blue</td> <td>GY or GR = Gray</td> </tr> <tr> <td>Y = Yellow</td> <td>SB = Sky Blue</td> </tr> <tr> <td>LG = Light Green</td> <td>CH = Dark Brown</td> </tr> <tr> <td>BG or BE = Beige</td> <td>DG = Dark Green</td> </tr> <tr> <td>BR = Brown</td> <td></td> </tr> </tbody> </table> <p>• When the wire color is striped, the base color is given first followed by the stripe color as shown below: Example: L/W = Blue with White Stripe</p>	B = Black	LA = Lavender	W = White	OR or O = Orange	R = Red	P = Pink	G = Green	PU or V (Violet) = Purple	L = Blue	GY or GR = Gray	Y = Yellow	SB = Sky Blue	LG = Light Green	CH = Dark Brown	BG or BE = Beige	DG = Dark Green	BR = Brown		H I J K L M N O P
B = Black	LA = Lavender																				
W = White	OR or O = Orange																				
R = Red	P = Pink																				
G = Green	PU or V (Violet) = Purple																				
L = Blue	GY or GR = Gray																				
Y = Yellow	SB = Sky Blue																				
LG = Light Green	CH = Dark Brown																				
BG or BE = Beige	DG = Dark Green																				
BR = Brown																					
6	Connector	<ul style="list-style-type: none"> This means the connector information. This unit-side is described by the connector symbols. 																			

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATIONS

Abbreviation List

INFOID:0000000014418310

The following **ABBREVIATIONS** are used:

A

ABBREVIATION	DESCRIPTION
A/C	Air conditioner
A/C	Air conditioning
A/F sensor	Air fuel ratio sensor
A/T	Automatic transaxle/transmission
ABS	Anti-lock braking system
ACCS	Advance climate control system
ACL	Air cleaner
AP	Accelerator pedal
APP	Accelerator pedal position
ATF	Automatic transmission fluid
AV	Audio visual
AVM	Around view monitor
AWD	All wheel drive

B

ABBREVIATION	DESCRIPTION
BARO	Barometric pressure
BCI	Backup collision intervention
BCM	Body control module
BLSD	Brake limited slip differential
BPP	Brake pedal position
BSI	Blind spot intervention
BSW	Blind spot warning

C

ABBREVIATION	DESCRIPTION
CKP	Crankshaft position
CL	Closed loop
CMP	Camshaft position
CPP	Clutch pedal position
CTP	Closed throttle position
CVT	Continuously variable transaxle/transmission

D

ABBREVIATION	DESCRIPTION
D1	Drive range first gear
D2	Drive range second gear
D3	Drive range third gear
D4	Drive range fourth gear
DCA	Distance control assist
DDS	Downhill drive support
DFI	Direct fuel injection system

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATION	DESCRIPTION	
DLC	Data link connector	GI
DTC	Diagnostic trouble code	
E		B
ABBREVIATION	DESCRIPTION	
E/T	Exhaust temperature	C
EBD	Electric brake force distribution	
EC	Engine control	D
ECL	Engine coolant level	
ECM	Engine control module	E
ECT	Engine coolant temperature	
ECV	Electrical control valve	F
EEPROM	Electrically erasable programmable read only memory	
EFT	Engine fuel temperature	G
EGR	Exhaust gas recirculation	
EGRT	Exhaust gas recirculation temperature	H
EGT	Exhaust gas temperature	
EOP	Engine oil pressure	I
EP	Exhaust pressure	
EPR	Exhaust pressure regulator	J
EPS	Electronically controlled power steering	
ESP	Electronic stability program system	K
EVAP canister	Evaporative emission canister	
EVSE	Electric vehicle supply equipment	L
EXC	Exhaust control	
F		M
ABBREVIATION	DESCRIPTION	
FC	Fan control	
FCW	Forward collision warning	N
FIC	Fuel injector control	
FP	Fuel pump	O
FR	Front	
FRP	Fuel rail pressure	P
FRT	Fuel rail temperature	
FTP	Fuel tank pressure	
FTT	Fuel tank temperature	
G		
ABBREVIATION	DESCRIPTION	
GND	Ground	
GPS	Global positioning system	
GST	Generic scan tool	
H		
ABBREVIATION	DESCRIPTION	
HBMC	Hydraulic body-motion control system	
HDD	Hard disk drive	
HO2S	Heated oxygen sensor	

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATION	DESCRIPTION
HOC	Heated oxidation catalyst
HPCM	Hybrid powertrain control module

ABBREVIATION	DESCRIPTION
I/M	Inspection and maintenance
IA	Intake air
IAC	Idle air control
IAT	Intake air temperature
IBA	Intelligent brake assist
IC	Ignition control
ICC	Intelligent cruise control
ICM	Ignition control module
IPDM E/R	Intelligent power distribution module engine room
ISC	Idle speed control
ISS	Input shaft speed
ITS	Information technology suite

ABBREVIATION	DESCRIPTION
KS	Knock sensor

ABBREVIATION	DESCRIPTION
LBC	Li-ion battery controller
LCD	Liquid crystal display
LCU	Local control unit
LDP	Lane departure prevention
LDW	Lane departure warning
LED	Light emitting diode
LH	Left-hand
LHD	Left-hand drive
LIN	Local interconnect network

ABBREVIATION	DESCRIPTION
M/T	Manual transaxle/transmission
MAF	Mass airflow
MAP	Manifold absolute pressure
MDU	Multi display unit
MI	Malfunction indicator
MIL	Malfunction indicator lamp
MOD	Moving object detection

ABBREVIATION	DESCRIPTION
NOX	Nitrogen oxides

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

O	ABBREVIATION	DESCRIPTION	GI
	O2	Oxygen	
	O2S	Oxygen sensor	
	OBD	On board diagnostic	B
	OC	Oxidation catalytic converter	
	OD	Overdrive	C
	OL	Open loop	
	OSS	Output shaft speed	
P	ABBREVIATION	DESCRIPTION	D
	P/S	Power steering	
	PBR	Potentio balance resistor	E
	PCV	Positive crankcase ventilation	
	PFCW	Predictive forward collision warning	F
	PNP	Park/Neutral position	
	PSP	Power steering pressure	G
	PTC	Positive temperature coefficient	
	PTO	Power takeoff	
	PWM	Pulse width modulation	H
R	ABBREVIATION	DESCRIPTION	
	RAM	Random access memory	I
	RAS	Rear active steer	
	RH	Right-hand	J
	RHD	Right-hand drive	
	ROM	Read only memory	K
	RPM	Engine speed	
	RR	Rear	L
S	ABBREVIATION	DESCRIPTION	
	SAE	Society of Automotive Engineers, Inc.	M
	SCK	Serial clock	
	SDS	Service Data and Specifications	N
	SRT	System readiness test	
	SST	Special Service Tools	O
T	ABBREVIATION	DESCRIPTION	
	TC	Turbocharger	
	TCM	Transmission control module	P
	TCS	Traction control system	
	TCU	Telematics communication unit	
	TP	Throttle position	
	TPMS	Tire pressure monitoring system	
	TSS	Turbine shaft speed	
	TWC	Three way catalytic converter	

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATION		DESCRIPTION
USS		Uphill start support
V		
ABBREVIATION		DESCRIPTION
VCM		Vehicle control module
VDC		Vehicle dynamics control system
VIN		Vehicle identification number
VSS		Vehicle speed sensor
W		
ABBREVIATION		DESCRIPTION
WOT		Wide open throttle
1	ABBREVIATION	
11	1st range first gear	
12	1st range second gear	
1GR	First gear	
2	ABBREVIATION	
21	2nd range first gear	
22	2nd range second gear	
2GR	Second gear	
2WD	Two wheel drive	
3	ABBREVIATION	
3GR	Third gear	
4	ABBREVIATION	
4GR	Fourth gear	
4WAS	Four wheel active steer	
4WD	Four wheel drive	
5	ABBREVIATION	
5GR	Fifth gear	
6	ABBREVIATION	
6GR	Sixth gear	
7	ABBREVIATION	
7GR	Seventh gear	

TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

TIGHTENING TORQUE OF STANDARD BOLTS

Description

INFOID:0000000014418311

This vehicle has both new standard based on ISO* and previous standard bolts/nuts. There are some differences between these two types of bolts/ nuts; shape of the head, grade of strength, hexagonal width across flats and the standard tightening torque.

- For guidance in discriminating, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)".](#)
- If the tightening torque is not described in the description or figure, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)".](#)

*ISO: International Organization for Standardization

Tightening Torque Table (New Standard Included)

INFOID:0000000014418312

CAUTION:

- The special parts are excluded.
- The bolts/nuts in these tables have a strength (discrimination) number/symbol assigned to the head or the like. As to the relation between the strength grade in these tables and the strength (discrimination) number/symbol, refer to "DISCRIMINATION OF BOLTS AND NUTS".

PREVIOUS STANDARD

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque (Without lubricant)								
					Hexagon head bolt				Hexagon flange bolt				
					N·m	kg-m	ft-lb	in-lb	N·m	kg-m	ft-lb	in-lb	
4T	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62	
	M8	8.0	12	1.25	13.5	1.4	10	—	17	1.7	13	—	
				1.0	13.5	1.4	10	—	17	1.7	13	—	
	M10	10.0	14	1.5	28	2.9	21	—	35	3.6	26	—	
				1.25	28	2.9	21	—	35	3.6	26	—	
	M12	12.0	17	1.75	45	4.6	33	—	55	5.6	41	—	
				1.25	45	4.6	33	—	65	6.6	48	—	
	M14	14.0	19	1.5	80	8.2	59	—	100	10	74	—	
	7T	M6	6.0	10	1.0	9	0.92	7	80	11	1.1	8	97
		M8	8.0	12	1.25	22	2.2	16	—	28	2.9	21	—
					1.0	22	2.2	16	—	28	2.9	21	—
		M10	10.0	14	1.5	45	4.6	33	—	55	5.6	41	—
					1.25	45	4.6	33	—	55	5.6	41	—
		M12	12.0	17	1.75	80	8.2	59	—	100	10	74	—
					1.25	80	8.2	59	—	100	10	74	—
		M14	14.0	19	1.5	130	13	96	—	170	17	125	—
		9T	M6	6.0	10	1.0	11	1.1	8	—	13.5	1.4	10
			M8	8.0	12	1.25	28	2.9	21	—	35	3.6	26
						1.0	28	2.9	21	—	35	3.6	26
			M10	10.0	14	1.5	55	5.6	41	—	80	8.2	59
						1.25	55	5.6	41	—	80	8.2	59
			M12	12.0	17	1.75	100	10	74	—	130	13	96
						1.25	100	10	74	—	130	13	96
			M14	14.0	19	1.5	170	17	125	—	210	21	155

CAUTION:

The parts with aluminum or the cast iron washer surface/thread surface are excluded.

TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

NEW STANDARD BASED ON ISO

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque							
					Hexagon head bolt				Hexagon flange bolt			
					N·m	kg-m	ft-lb	in-lb	N·m	kg-m	ft-lb	in-lb
4.8 (Without lubricant)	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62
	M8	8.0	13	1.25	13.5	1.4	10	—	17	1.7	13	—
				1.0	13.5	1.4	10	—	17	1.7	13	—
	M10	10.0	16	1.5	28	2.9	21	—	35	3.6	26	—
				1.25	28	2.9	21	—	35	3.6	26	—
4.8 (With lu- bricant)	M12	12.0	18	1.75	45	4.6	33	—	55	5.6	41	—
				1.25	45	4.6	33	—	65	6.6	48	—
	M14	14.0	21	1.5	80	8.2	59	—	100	10	74	—
	M6	6.0	10	1.0	4	0.41	3	35	5.5	0.56	4	49
				1.25	11	1.1	8	—	13.5	1.4	10	—
8.8 (With lu- bricant)	M8	8.0	13	1.0	11	1.1	8	—	13.5	1.4	10	—
				1.5	22	2.2	16	—	28	2.9	21	—
	M10	10.0	16	1.25	22	2.2	16	—	28	2.9	21	—
				1.75	35	3.6	26	—	45	4.6	33	—
	M12	12.0	18	1.25	35	3.6	26	—	45	4.6	33	—
				1.5	65	6.6	48	—	80	8.2	59	—
10.9 (With lu- bricant)	M6	6.0	10	1.0	8	0.82	6	71	10	1.0	7	89
				1.25	21	2.1	15	—	25	2.6	18	—
	M8	8.0	13	1.0	21	2.1	15	—	25	2.6	18	—
				1.5	40	4.1	30	—	50	5.1	37	—
	M10	10.0	16	1.25	40	4.1	30	—	50	5.1	37	—
				1.75	70	7.1	52	—	85	8.7	63	—
	M12	12.0	18	1.25	70	7.1	52	—	85	8.7	63	—
				1.5	120	12	89	—	140	14	103	—
	M14	14.0	21	1.5	120	12	89	—	140	14	103	—

CAUTION:

1. Use tightening torque with lubricant for the new standard bolts/nuts in principle. Friction coefficient stabilizer is applied to the new standard bolts/nuts.
2. However, use tightening torque without lubricant for the following cases. Friction coefficient stabilizer is not applied to the following bolts/nuts.
 - Grade 4.8, M6 size bolt, Conical spring washer installed
 - Paint removing nut (Size M6 and M8) for fixing with weld bolt

TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

DISCRIMINATION OF BOLTS AND NUTS

GI

BOLTS


	Grade (Strength)	Discrimination	
Previous standard	4T (392N/mm ²)		
	7T (686N/mm ²)		
	9T (883N/mm ²)		
New Standard	4.8 (420N/mm ²)		
	8.8 (800N/mm ²)		
	10.9 (1040N/mm ²)		

NUTS

	Grade (Proof load stress)	Discrimination		
Previous standard	7N (686N/mm ²)			
	9N (883N/mm ²)			
New Standard	8 (800N/mm ²)			
	10 (1040N/mm ²)			

NOTICE:

- A number is assigned on the side of the nuts in some cases.
- A number or symbol is assigned on the upper surface of the flange for the nut with flange.

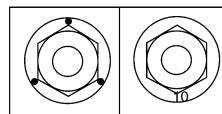

MACHINE SCREWS AND TAPPING SCREWS

Shape of the head :

Cross recess for the previous standard

Torx recess for the new standard

Screw size	Screw diameter	Torx size
M4	4.0	T20
M5	5.0	T20
M6	6.0	T30

NOTICE:

Use torx size T20 (united with M4 screw) for M5 screw although ISO standard specifies T25.

SAIA0453E

RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

< HOW TO USE THIS MANUAL >

RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

Recommended Chemical Products and Sealants

INFOID:000000014418313

Refer to the following chart for help in selecting the appropriate chemical product or sealant.

	Product Description	Purpose	Nissan North America Part No. (USA)	Nissan Canada Part No. (Canada)	Aftermarket Cross-reference Part Nos.
1	Rear View Mirror Adhesive	Used to permanently re-mount rear view mirrors to windows.	999MP-AM000P	99998-50505	Permatex 81844
2	Anaerobic Liquid Gasket	For metal-to-metal flange sealing. Can fill a 0.38 mm (0.015 inch) gap and provide instant sealing for most powertrain applications.	999MP-AM001P	99998-50503	Permatex 51813 and 51817
3	High Performance Thread Sealant	Provides instant sealing on any threaded straight or parallel threaded fitting. (Thread sealant only, no locking ability.) • Do not use on plastic.	999MP-AM002P	999MP-AM002P	Permatex 56521
4	Silicone RTV	Gasket Maker	999MP-AM003P (Ultra Grey)	99998-50506 (Ultra Grey)	Permatex Ultra Grey 82194; Three Bond 1207, 1215, 1216, 1217F, 1217G and 1217H Nissan RTV Part No. 999MP-A7007
5	High Temperature, High Strength Thread Locking Sealant (Red)	Threadlocker	999MP-AM004P	999MP-AM004P	Permatex 27200; Three Bond 1360, 1360N, 1305 N&P, 1307N, 1335, 1335B, 1363B, 1377C, 1386B, D&E and 1388 Loctite 648
6	Medium Strength Thread Locking Sealant (Blue)	Threadlocker (service tool removable)	999MP-AM005P	999MP-AM005P	Permatex 24200, 24206, 24240, 24283 and 09178; Three Bond 1322, 1322N, 1324 D&N, 1333D, 1361C, 1364D, 1370C and 1374

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Description

INFOID:000000014418314

Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000014724428

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000014418316

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

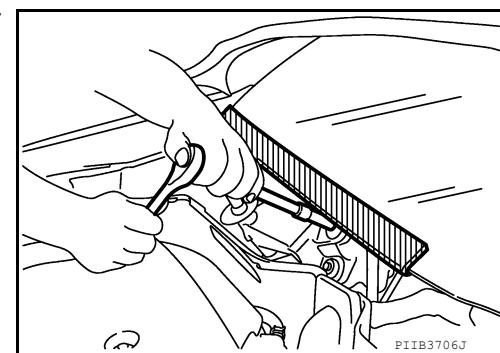

PRECAUTIONS

< PRECAUTION >

Precautions For Removing Battery Terminal

INFOID:000000014418317

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 2 minutes.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the two batteries, be sure to connect both batteries before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of the two batteries disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

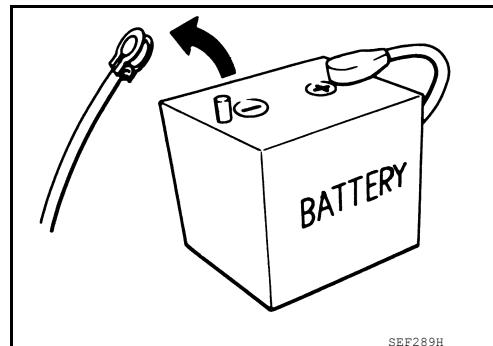


General Precautions

INFOID:000000014418318

- Do not operate the engine for an extended period of time without proper exhaust ventilation.

Keep the work area well ventilated and free of any inflammable materials. Special care should be taken when handling any inflammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials.


Do not smoke while working on the vehicle.

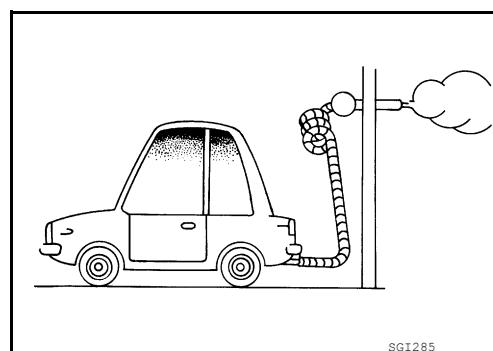


- Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting before working on the vehicle.

These operations should be done on a level surface.

- When removing a heavy component such as the engine or transaxle/transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

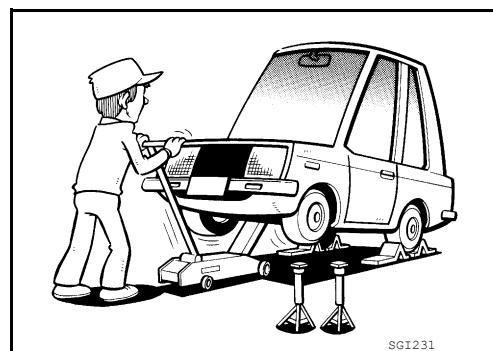

- Before starting repairs which do not require battery power:
Turn off ignition switch.
Disconnect the negative battery terminal.
- If the battery terminals are disconnected, recorded memory of radio and each control unit is erased.
- For vehicles with two batteries, be sure to remove both batteries when instructed to remove 12V battery in the service manual. If specified as main battery or sub battery, then do as instructed.

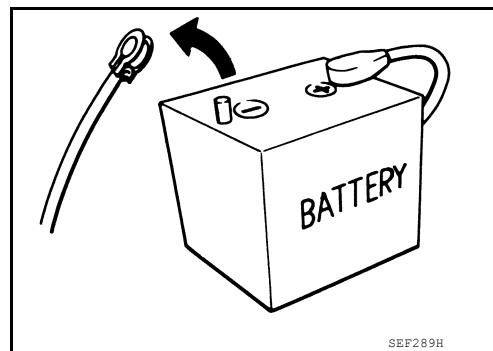

PRECAUTIONS

< PRECAUTION >

- To prevent serious burns:
Avoid contact with hot metal parts.
Do not remove the radiator cap when the engine is hot.
- Dispose of drained oil or the solvent used for cleaning parts in an appropriate manner.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically.
Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.
- Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
- Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
- Replace inner and outer races of tapered roller bearings and needle bearings as a set.
- Arrange the disassembled parts in accordance with their assembled locations and sequence.
- Do not touch the terminals of electrical components which use microcomputers (such as ECM). Static electricity may damage internal electronic components.
- After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
- Use only the fluids and lubricants specified in this manual.
- Use approved bonding agent, sealants or their equivalents when required.
- Use hand tools, power tools (disassembly only) and recommended special tools where specified for safe and efficient service repairs.
- When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leaks.



SGI233

GI

B

C

D

E

F

G

H

I

J


K

L

M


N

O

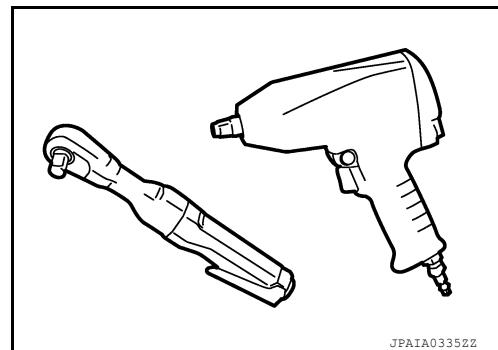

JPAIA0335ZZ

- Before servicing the vehicle:
Protect fenders, upholstery and carpeting with appropriate covers.
Take caution that keys, buckles or buttons do not scratch paint.

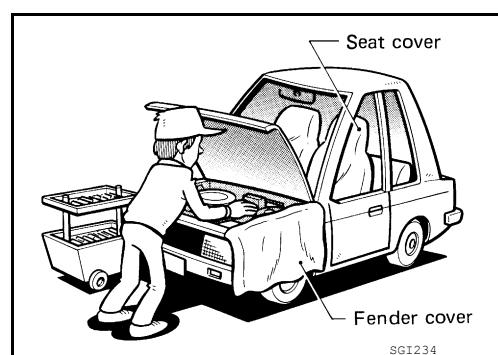

SGI234

WARNING:

To prevent ECM from storing the diagnostic trouble codes, do not carelessly disconnect the harness connectors which are related to the engine control system and TCM (transmission control module) system. The connectors should be disconnected only when working according to the WORK FLOW of TROUBLE DIAGNOSES in EC and TM sections.

Three Way Catalyst

INFOID:0000000014418319

If a large amount of unburned fuel flows into the catalyst, the catalyst temperature will be excessively high. To prevent this, follow the instructions.

- Use unleaded gasoline only. Leaded gasoline will seriously damage the three way catalyst.
- When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
- Do not run engine when the fuel tank level is low, otherwise the engine may misfire, causing damage to the catalyst.

PRECAUTIONS

< PRECAUTION >

Do not place the vehicle on flammable material. Keep flammable material off the exhaust pipe and the three way catalyst.

Multiport Fuel Injection System or Engine Control System

INFOID:0000000014418320

- Before connecting or disconnecting any harness connector for the multiport fuel injection system or ECM:
Turn ignition switch to "OFF" position.
Disconnect negative battery terminal.
Otherwise, there may be damage to ECM.
- Before disconnecting pressurized fuel line from fuel pump to injectors, wait 10 minutes before opening fuel system.
- Be careful not to jar components such as ECM and mass air flow sensor.




SGI787

Hoses

INFOID:0000000014418321


HOSE REMOVAL AND INSTALLATION

- To prevent damage to rubber hose, do not pry off rubber hose with tapered tool or screwdriver.

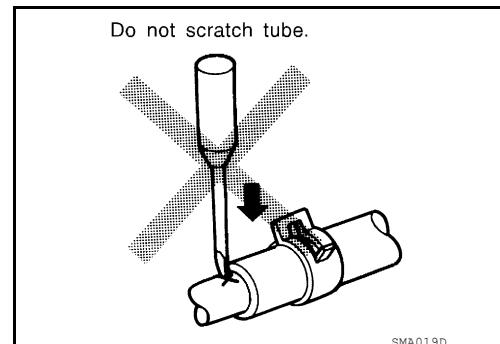

SMA019D


- To reinstall the rubber hose securely, make sure that hose insertion length and orientation is correct. (If tube is equipped with hose stopper, insert rubber hose into tube until it butts up against hose stopper.)

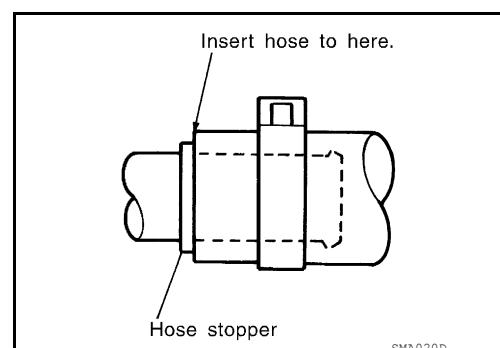

SMA020D

HOSE CLAMPING

- If old rubber hose is re-used, install hose clamp in its original position (at the indentation where the old clamp was). If there is a trace of tube bulging left on the old rubber hose, align rubber hose at that position.
- Discard old clamps; replace with new ones.

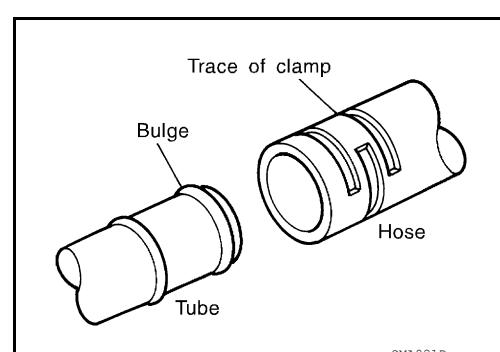


SMA021D

PRECAUTIONS

< PRECAUTION >

- After installing plate clamps, apply force to them in the direction of the arrow, tightening rubber hose equally all around.

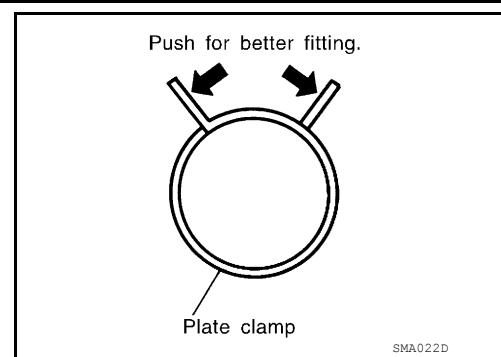

SMA022D

Engine Oils

INFOID:000000014418322

Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used oil.

If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

HEALTH PROTECTION PRECAUTIONS

- Avoid prolonged and repeated contact with oils, particularly used engine oils.
- Wear protective clothing, including impervious gloves where practicable.
- Do not put oily rags in pockets.
- Avoid contaminating clothes, particularly underpants, with oil.
- Heavily soiled clothing and oil-impregnated footwear should not be worn. Overalls must be cleaned regularly.
- First aid treatment should be obtained immediately for open cuts and wounds.
- Use barrier creams, applying them before each work period, to help the removal of oil from the skin.
- Wash with soap and water to ensure all oil is removed (skin cleansers and nail brushes will help). Preparations containing lanolin replace the natural skin oils which have been removed.
- Do not use gasoline, kerosene, diesel fuel, gas oil, thinners or solvents for cleaning skin.
- If skin disorders develop, obtain medical advice without delay.
- Where practical, degrease components prior to handling.
- Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.

ENVIRONMENTAL PROTECTION PRECAUTIONS

Dispose of used oil and used oil filters through authorized waste disposal contractors to licensed waste disposal sites, or to the waste oil reclamation trade. If in doubt, contact the local authority for advice on disposal facilities.

It is illegal to pour used oil on to the ground, down sewers or drains, or into water sources.

The regulations concerning pollution vary between regions.

Air Conditioning

INFOID:000000014418323

Use an approved refrigerant recovery unit any time the air conditioning system must be discharged. Refer to [HA-19, "Recycle Refrigerant"](#).

Fuel

INFOID:000000014418324

DIESEL ENGINE

Commercially available diesel fuel is adjusted seasonally for cold temperatures. Nissan recommends the use of diesel fuel that has been seasonally adjusted for temperatures below 32°F (0°C).

Diesel fuel of above 42 cetane minimum above 32°F (0°C); 45 cetane minimum below 32°F (0°C) and with less than 15 ppm of sulfur must be used.

A cetane number below 42 can cause poor starting, excessive white smoke, and poor idling. A cetane number above 55 can increase smoke at peak torque conditions.

If two types of diesel fuel are available, use summer or winter fuel properly according to the following temperature conditions.

- Above 32°F (0°C) . . . Summer type diesel fuel.
- Below 32°F (0°C) . . . Winter type diesel fuel.

If you are in any doubt, it is recommended that you consult a NISSAN dealer.

CAUTION:

PRECAUTIONS

< PRECAUTION >

- Do not use home heating oil, petroleum, biodiesel (more than 10%) or other alternate fuels in your diesel engine. The use of those can cause engine damage.
- Do not use summer fuel at temperatures below 20°F (- 7°C). The cold temperatures will cause wax to form in the fuel. As a result, it may prevent the engine from running smoothly.

B10 Fuel

B10 fuel is a mixture of approximately 10% biodiesel and 90% petroleum diesel. Your vehicle was designed to run on blends of biodiesel up to B10 (B1-B10). Operating your vehicle on higher blends is not recommended. Your vehicle's engine, exhaust catalyst filter and particulate filter, and fuel system components may be damaged if any of these blends are used.

U.S. government regulations require that biodiesel blends between B6 and B10 are identified at fuel dispensing pumps by a label with the common abbreviation or the appropriate percentage for that region. B6 --B10 blends must meet prescribed quality standards specified by ASTM D7467.

GASOLINE ENGINE

Use unleaded regular gasoline with an octane rating of at least 87 AKI (Anti-Knock Index) number (Research octane number 91).

CAUTION:

- Using a fuel other than that specified could adversely affect the emission control system, and may also affect the warranty coverage.
- Under no circumstances should a leaded gasoline be used, because this will damage the three-way catalyst.
- Do not use E-15 or E-85 fuel in your vehicle. Your vehicle is not designed to run on E-15 or E-85 fuel. Using E-15 or E-85 fuel in a vehicle not specifically designed for E-15 or E-85 fuel can adversely affect the emission control devices and systems of the vehicle. Damage caused by such fuel is not covered by the NISSAN new vehicle limited warranty.
- Do not use fuel that contains the octane booster methylcyclopentadienyl manganese tricarbonyl (MMT). Using fuel containing MMT may adversely affect vehicle performance and vehicle emissions. Not all fuel dispensers are labeled to indicate MMT content, so you may have to consult your gasoline retailer for more details. Note that Federal and California laws prohibit the use of MMT in reformulated gasoline.
- U.S. government regulations require ethanol dispensing pumps to be identified by a small, square, orange and black label with the common abbreviation or the appropriate percentage for that region.

LIFTING POINT


< PRECAUTION >

LIFTING POINT XD MODELS

XD MODELS : Garage Jack and Safety Stand

INFOID:0000000014418325

GI

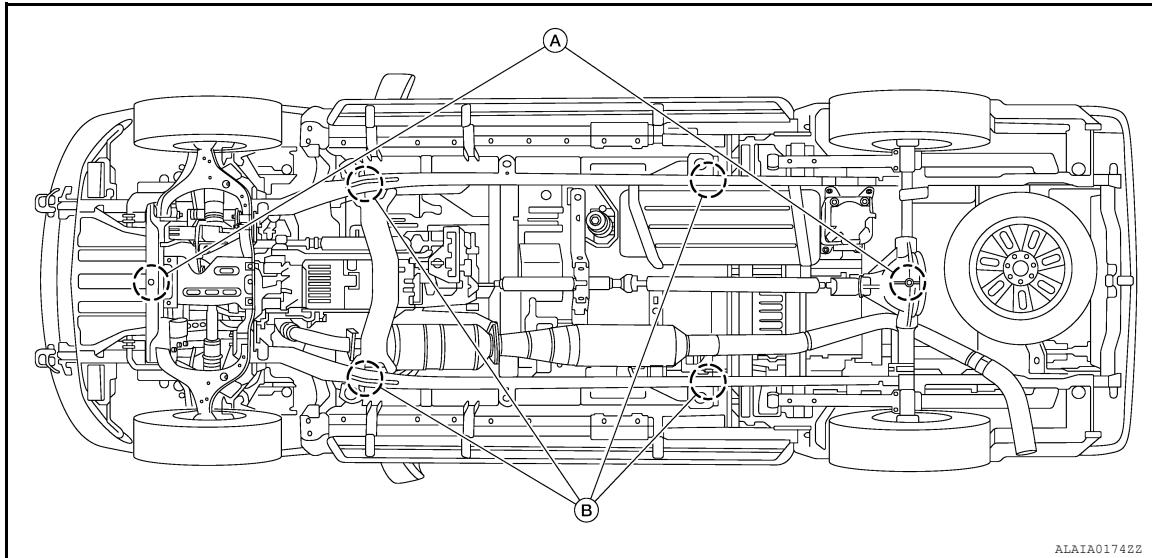

A : Garage jack point

B : Safety stand point

XD MODELS : 2-Pole Lift

INFOID:0000000014418326

J

WARNING:

- When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.

K

L

M

N


O

P

LIFTING POINT

< PRECAUTION >

- When setting the lift arm, do not allow the arm to contact the brake tubes, brake cable, or fuel lines.

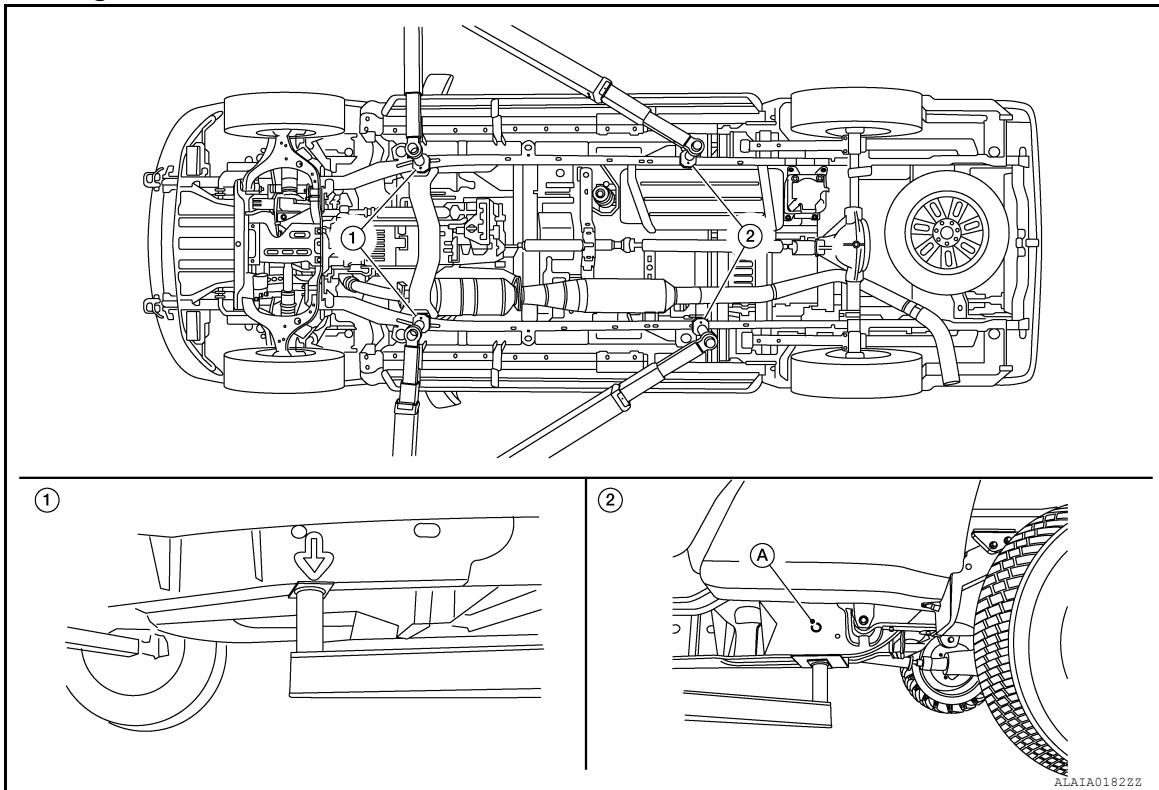

NOTE:

The rear lifting point location is indicated on frame by the hole forward of the front leaf spring mounting point.

1. Front lifting point

2. Rear lifting point

A. Rear lifting point indicator

NON-XD MODELS

NON-XD MODELS : Garage Jack and Safety Stand


INFOID:000000014723994

CAUTION:

Place a wooden or rubber block between safety stand and vehicle body when the supporting body is flat.

LIFTING POINT

< PRECAUTION >

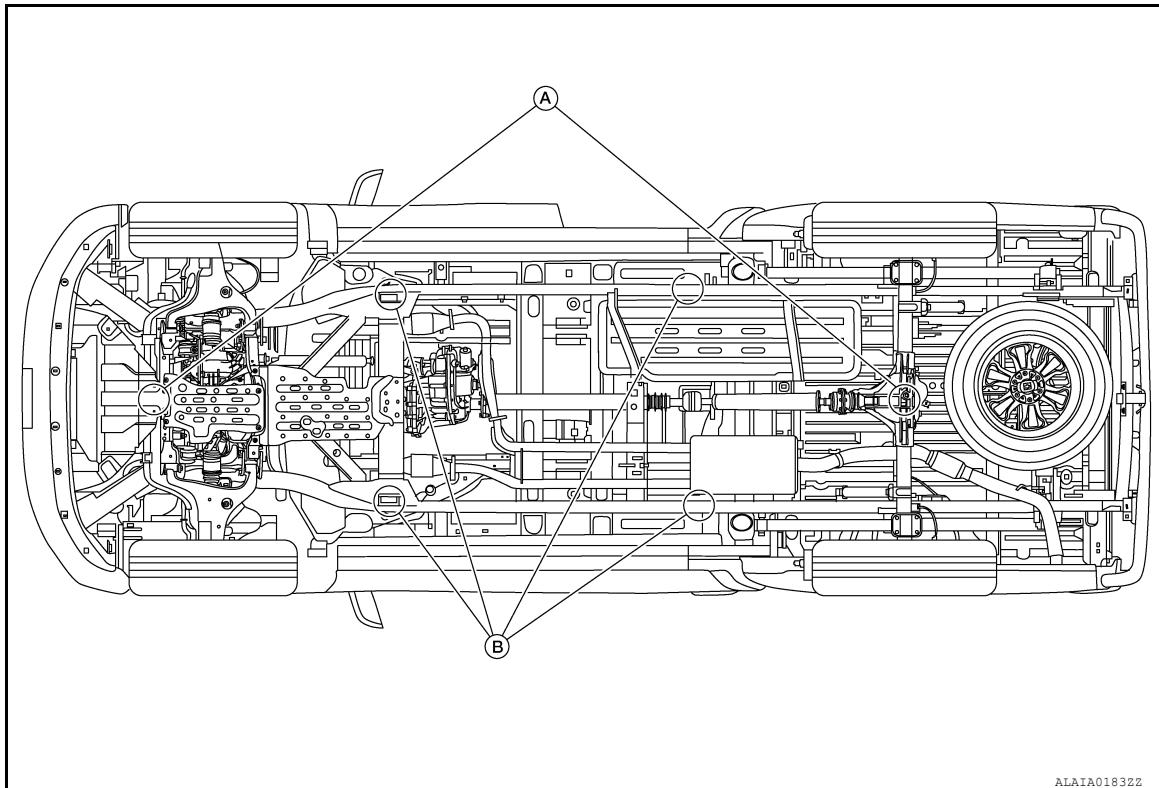

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

A : Garage jack point


B : Safety stand point

NON-XD MODELS : 2-Pole Lift

INFOID:000000014723995

WARNING:

- When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.
- When setting the lift arm, do not allow the arm to contact the brake tubes, brake cable, or fuel lines.

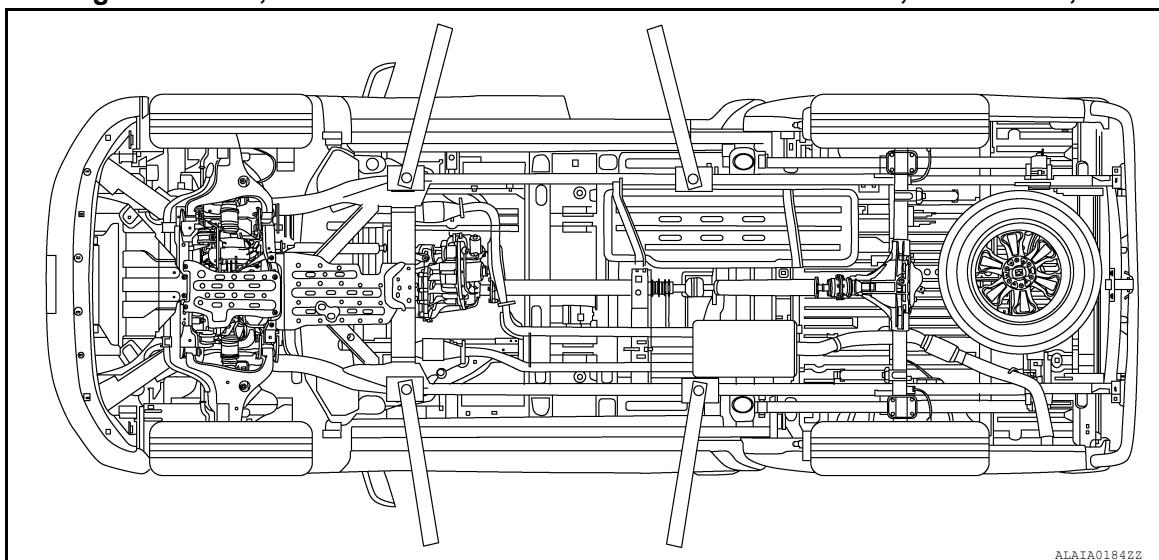

TOW TRUCK TOWING

< PRECAUTION >

TOW TRUCK TOWING

Tow Truck Towing

INFOID:0000000014418327

When towing your vehicle, all jurisdictional and local regulations for towing must be followed. Incorrect towing equipment could damage your vehicle. Towing instructions are available from a NISSAN dealer. Local service operators are generally familiar with the applicable laws and procedures for towing. To assure proper towing and to prevent accidental damage to your vehicle, NISSAN recommends having a service operator tow your vehicle. It is advisable to have the service operator carefully read the following precautions:

WARNING:

- **Never ride in a vehicle that is being towed.**
- **Never get under your vehicle after it has been lifted by a tow truck.**
- **If your vehicle has front recovery hooks as original factory equipment, do not remove or modify them. If it was not equipped with front recovery hooks, do not install them. Either action could affect proper operation of the front airbag system resulting in injury or death.**

CAUTION:

- **When towing, make sure that the transmission, axles, steering system and powertrain are in working condition. If any of these conditions apply, dollies or a flatbed tow truck must be used.**
- **Always attach safety chains before towing.**

NISSAN recommends towing your vehicle based upon the type of drivetrain. Please refer to the diagrams in this section to ensure that your vehicle is properly towed.


When towing long distances or speeds in excess of 60 mph, remove the propeller shaft before towing to prevent damage to the transmission. It is recommended you visit a NISSAN dealer for more information.

2WD MODEL

NISSAN recommends that your vehicle be towed with the driving (rear) wheels off the ground or place the vehicle on a flat bed truck as illustrated.

CAUTION:

- **Never tow automatic transmission models with the rear wheels on the ground or four wheels on the ground (forward or backward), as this may cause serious and expensive damage to the transmission. If it is necessary to tow the vehicle with the front wheels raised always use towing dollies under the rear wheels.**
- **When towing automatic transmission models with the front wheels on the ground or on towing dollies:**
 - **Place the ignition switch in the OFF position and secure the steering wheel in a straight-ahead position with a rope or similar device. Never secure the steering wheel by placing the ignition switch in the LOCK position. This may cause damage to the lock mechanism (if so equipped).**

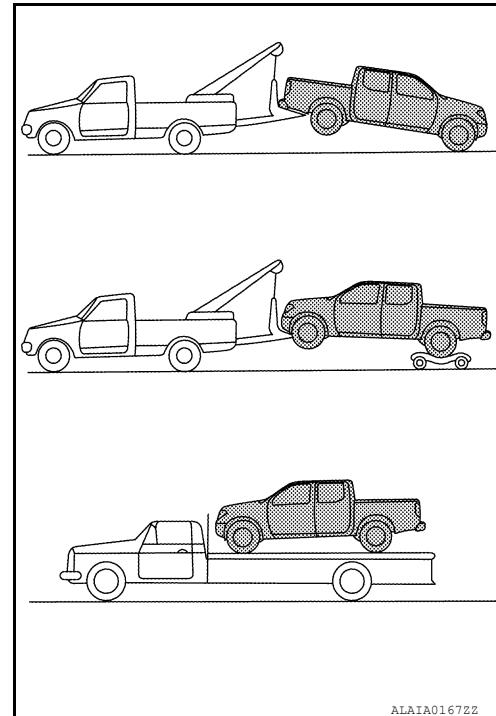


ALAIA016722

TOW TRUCK TOWING

< PRECAUTION >

4WD MODEL

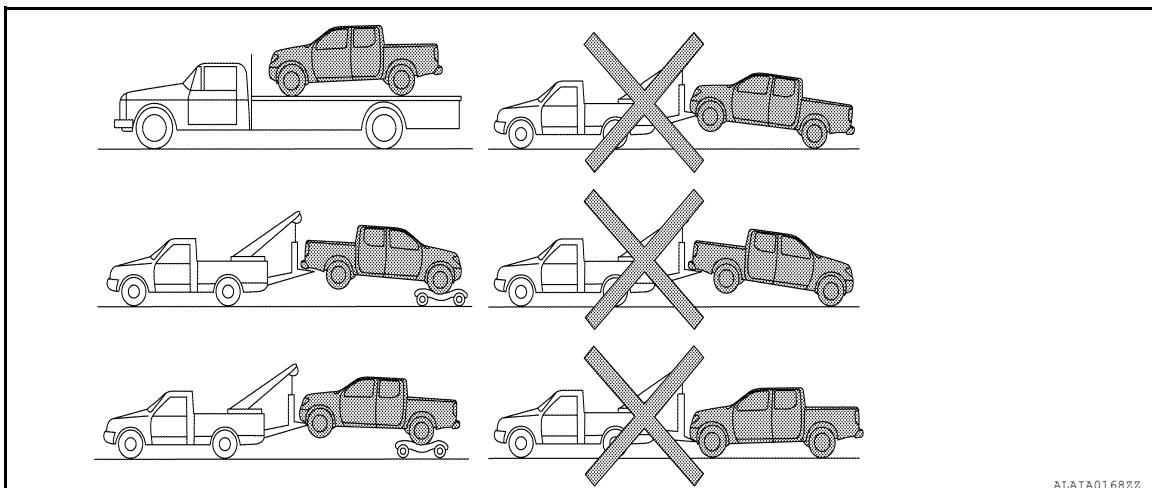

NISSAN recommends that towing dollies be used when towing your vehicle or place the vehicle on a flat bed truck as illustrated.

CAUTION:

- **Never tow 4WD models with any of the wheels on the ground as this may cause serious and expensive damage to the transfer case and transmission.**

Vehicle Recovery (Freeing a stuck vehicle)

INFOID:000000014418328

There are two options to recover a stuck vehicle pulling and rocking. For additional information regarding these options, please refer to the following sections

PULLING A STUCK VEHICLE

WARNING:

To avoid vehicle damage, serious personal injury or death when recovering a stuck vehicle:

- Contact a professional towing service to recover the vehicle if you have any questions regarding the recovery procedure.
- Attach recovery devices only to main structural members of the vehicle or the recovery hooks.
- Do not use the vehicle tie-downs to tow of free a stuck vehicle.
- Only use devices specifically designed for vehicle recovery and follow the manufacturer's instructions.
- Always pull the recovery device straight out from the front of the vehicle. Never pull at an angle.
- Route recovery devices so they do not touch any part of the vehicle except the attachment point.

If your vehicle is stuck in sand, snow, mud, etc., use a tow strap or other device designed specifically for vehicle recovery. Always follow the manufacturer's instructions for the recovery device.

ROCKING A STUCK VEHICLE

WARNING:

- Stand clear of a stuck vehicle.
- Do not spin your tires at high speed. This could cause them to explode and result in serious injury. Parts of your vehicle could also overheat and be damaged.

If your vehicle is stuck in sand, snow, mud, etc., use the following procedure:

1. Turn off the Vehicle Dynamic Control (VDC) system.
2. Activate the Electronic Locking Rear Differential (E-Lock) System (if so equipped).
3. Make sure the area in front and behind the vehicle is clear of obstructions
4. Turn the steering wheel right and left to clear an area around the front tires.
5. Slowly rock the vehicle forward and backward.
 - Shift back and forth between R (Reverse) and D (Drive).
 - Apply the accelerator as little as possible to maintain the rocking motion.
 - Release the accelerator pedal before shifting between R (Reverse) and D (Drive).
 - Do not spin the tires above 34 mph (55 km/h) or above 12 mph (20 km/h) if the E-Lock System (if so equipped) is engaged.
6. If the vehicle cannot be freed after a few tries, contact a professional towing service to remove the vehicle.

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

VEHICLE INFORMATION

IDENTIFICATION INFORMATION

Model Variation

INFOID:000000014418329

Prefix and suffix designations:

XD MODELS

2WD Model

Body	Engine	Transmission	Destination	Grade	Model
Crew Cab (LWB)	Cummins Diesel	6A/T	50-State	S	CWF4LRH-KUD
				SV (base)	CWF4LTH-KUD
				SV (comfort)	CWF4LSH-KUE
				SL	CWF4LVH-KUC
				Platinum Reserve	CWF4LYH-KUC
	VK56VD	7A/T	50-State	S	CPK4LRS-DUD
				SV (base)	CPK4LTS-DUD
				SV (comfort)	CPK4LSS-DUC
				SL	CPK4LVS-DUC
				Platinum Reserve	CPK4LYS-DUC

4WD Model

Body	Engine	Transmission	Destination	Grade	Model			
Crew Cab (LWB)	Cummins Diesel	6A/T	50-State	S	CWF8LRH-KUD			
				SV (base)	CWF8LTH-KUD			
				SV (comfort)	CWF8LSH-KUE			
				PRO-4X	CWF8LUH-KUC			
				SL	CWF8LVH-KUC			
				Platinum Reserve	CWF8LYH-KUC			
	VK56VD	7A/T	Canada	S	CWF8LRH-KND			
				SV (base)	CWF8LTH-KND			
				SV (comfort)	CWF8LSH-KNE			
				PRO-4X	CWF8LUH-KNC			
				SL	CWF8LVH-KNC			
				Platinum Reserve	CWF8LYH-KNC			
Cummins Diesel	50-State		S	CPK8LRS-DUD				
			SV (base)	CPK8LTS-DUD				
			SV (comfort)	CPK8LSS-DUC				
			PRO-4X	CPK8LUS-DUC				
			SL	CPK8LVS-DUC				
			Platinum Reserve	CPK8LYS-DUC				
	VK56VD	Canada		S	CPK8LRS-DND			
				SV (base)	CPK8LTS-DND			
				SV (comfort)	CPK8LSS-DNC			
				PRO-4X	CPK8LUS-DNC			
				SL	CPK8LVS-DNC			
				Platinum Reserve	CPK8LYS-DNC			

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

NON-XD MODELS

2WD Model

Body	Engine	Transmission	Destination	Grade	Model
Crew Cab (MWB)	VK56VD	7A/T	50-State	S	CPK3LRS-DU6
				SV (base)	CPK3LTS-DU6
				SV (comfort)	CPK3LSS-DU5
				SL	CPK3LVS-DU5
				Platinum Reserve	CPK3LYS-DU5

GI

4WD Model

Body	Engine	Transmission	Destination	Grade	Model
Crew Cab (MWB)	VK56VD	7A/T	50-State	S	CPK7LRS-DU6
				SV (base)	CPK7LTS-DU6
				SV (comfort)	CPK7LSS-DU5
				PRO-4X	CPK7LUS-DU5
				SL	CPK7LVS-DU5
				Platinum Reserve	CPK7LYS-DU5
			Canada	S	CPK7LRS-DN6
				SV (base)	CPK7LTS-DN6
				SV (comfort)	CPK7LSS-DN5
				PRO-4X	CPK7LUS-DN5
				SL	CPK7LVS-DN5
				Platinum Reserve	CPK7LYS-DN5

B

C

D

E

F

G

H

I

Prefix and suffix designations

Position	Character	Qualifier	Definition
1	C	Body type	C: Crew Cab
2	WF	Engine	PK: VK56VD
3			WF: Cummins (5.0L V8 diesel)
4	4	Axe	3: 2WD MWB (medium wheel base)
			4: 2WD LWB (long wheel base)
			7: 4WD MWB (medium wheel base)
			8: 4WD LWB (long wheel base)
5	L	Drive	L: LH
6	T	Grade	R: S
			S: SV (comfort)
			T: SV (base)
			U: PRO-4X
			V: SL
			Y: Platinum Reserve
7	H	Transmission	H: 6A/T
			S: 7A/T
8	A61	Model	A61: Titan
9			
10			
11	K	Intake	D: Direct
			K: Diesel

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P


IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

Position	Character	Qualifier	Definition
12	U	Zone	N: Canada
			U: USA
13	D	Equipment	C: XD-5 passenger
			D: XD-6 passenger
			E: XD-5 passenger
			5: NON-XD-5 passenger
			6: NON-XD-6 passenger
14	XXXXX	Option Codes	
15			
16			
17			
18			

Identification Number

INFOID:0000000014418330

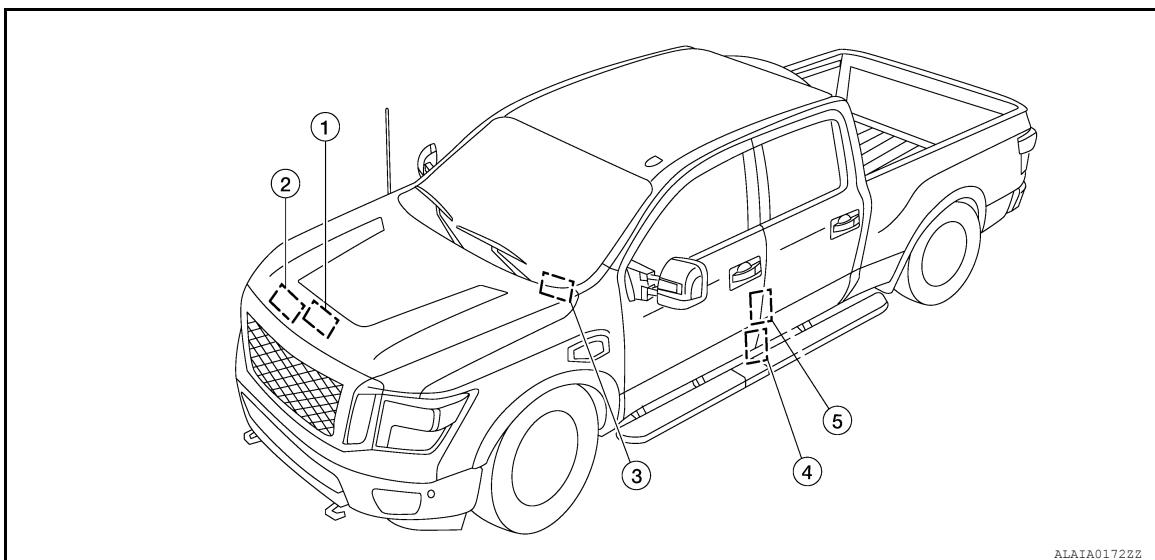

- 1. Emission control information label
- 2. Air conditioner specification label
- 3. Vehicle identification number (VIN) plate
- 4. F.M.V.S.S./C.M.V.S.S. certification label
- 5. Tire and loading information label

VEHICLE IDENTIFICATION NUMBER ARRANGEMENT

Position	Character	Qualifier	Definition
1	1N6	Manufacturer	1N6: Nissan Truck [NNA, Inc.]
2			
3			
4	B	Engine type	A: VK56VD
			B: Cummins Diesel
5	A1	Model code	A1: A61 (Titan)
6			
7	F	Body type	E: Crew Cab (MWB)
			F: Crew Cab (LWB)

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

Position	Character	Qualifier	Definition	
8	1	Restraint System	1: 2WD, 4-wheel ABS, Class G • 6 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (1st Row Center): 2-Point Manual Lap Belt - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	GI
			2: 2WD, 4-wheel ABS, Class G • 5 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	B
			3: 4WD, 4-wheel ABS, Class G • 6 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (1st Row Center): 2-Point Manual Lap Belt - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	C
			4: 4WD, 4-wheel ABS, Class G • 5 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	D
			K: 2WD, 4-wheel ABS, Class F • 6 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (1st Row Center): 2-Point Manual Lap Belt - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	E
			6: 2WD, 4-wheel ABS, Class F • 5 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	F
			J: 4WD, 4-wheel ABS, Class F • 6 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (1st Row Center): 2-Point Manual Lap Belt - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	G
			5: 4WD, 4-wheel ABS, Class F • 5 seating capacity - (Driver and Passenger): 3-Point Manual Belts, Frontal Air Bags, Side Air Bags and Curtain Side Air Bags - (2nd Row Outboard): 3-Point Manual Belts and Curtain Side Air Bags - (2nd Row Center): 3-Point Manual Belt	H
			(0 to 9 or X) The code for the check digit is determined by a mathematical computation.	I
9	*	Check digit	(0 to 9 or X) The code for the check digit is determined by a mathematical computation.	J
10	H	Model year	H: 2017	K
11	N	Manufacturing plant	N: Canton, Mississippi	L

IDENTIFICATION INFORMATION


< VEHICLE INFORMATION >

Position	Character	Qualifier	Definition
12			
13			
14			
15			
16			
17			

Identification Plate

INFOID:000000014418331

USA

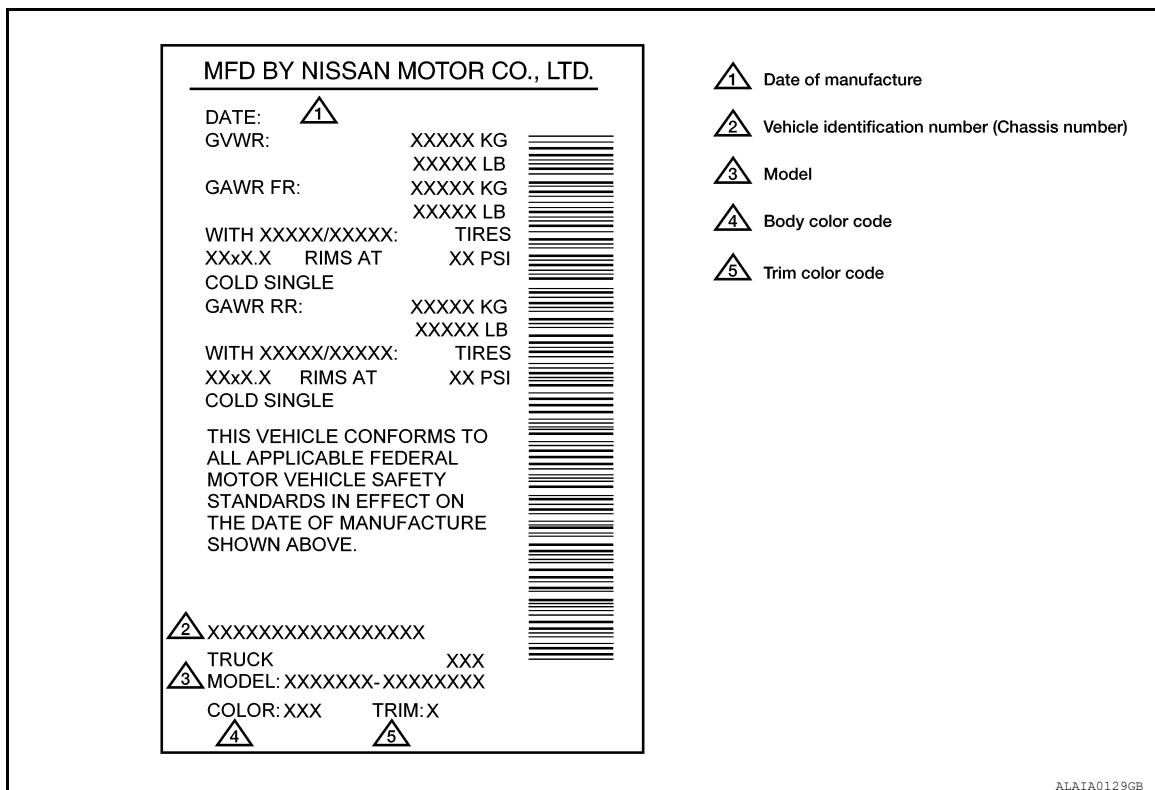

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

CANADA

GI

B

C

D

E

F

G

H

I

J

K


L

M

N

O

P

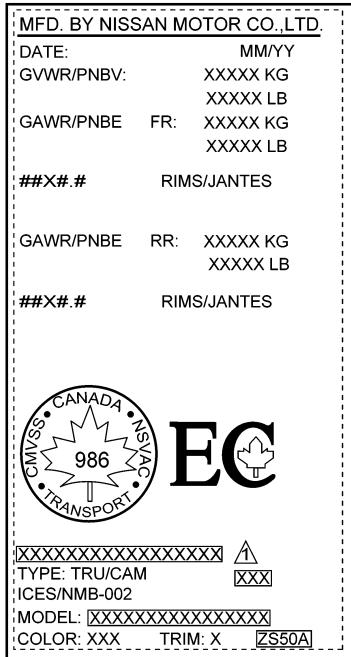


⚠ Vehicle Identification Number (chassis number)

ALAIA0125GB

INFOID:000000014418332


Engine Serial Number

CUMMINS DIESEL

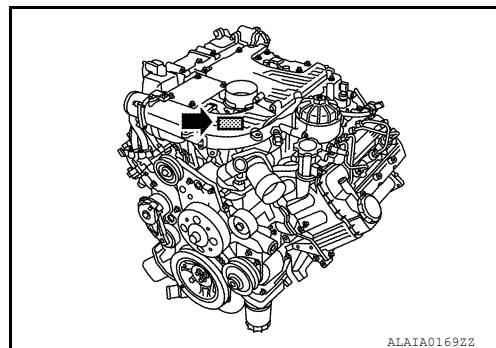

ALAIA0169ZZ

VK56VD

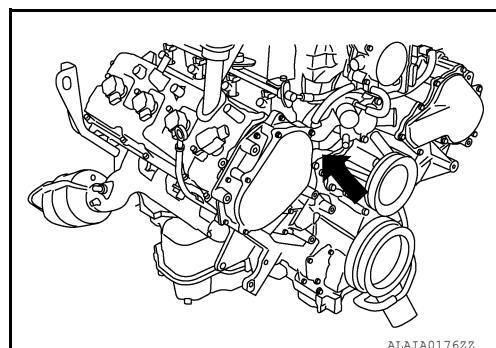


ALAIA0176ZZ

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

Transfer Serial Number


INFOID:0000000014418333

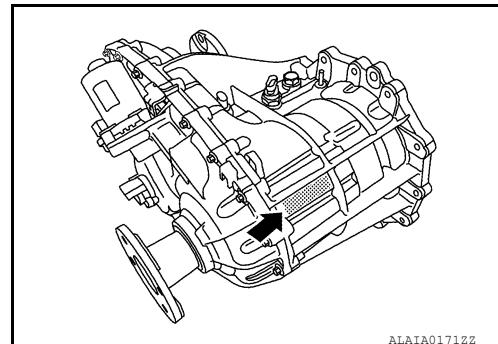


Automatic Transmission Number

INFOID:0000000014418334

6 A/T

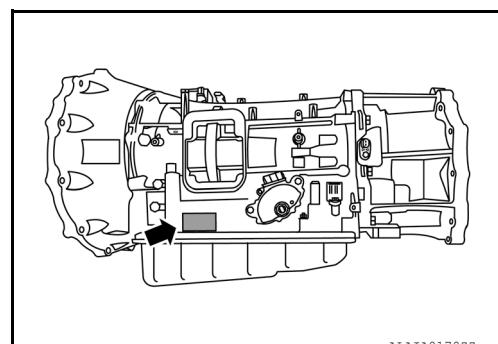

7 A/T

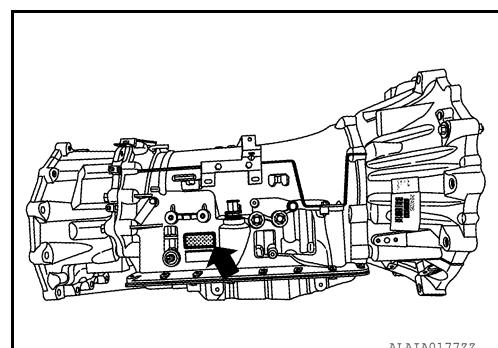

Dimensions

INFOID:0000000014418335

XD MODELS

Unit: mm (in)

Overall length	Without front license plate bracket	Except Pro-4X	6,165.7 (242.7)
		Pro-4X	6,187.1 (243.6)
	With front license plate bracket	Except Pro-4X	6,172.6 (243.0)
		Pro-4X	6,194.6 (243.9)
Overall width	Except Pro-4X and Platinum		2,019.9 (79.5)
	Pro-4X and Platinum		2,048.9 (80.7)

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

Overall height	S and SV (Cummins 5.0L)	2WD	1,981.2 (78.0)	GI
		4WD	1,980.4 (78.0)	B
	S and SV (VK56VD)	2WD	1,982.4 (78.0)	C
		4WD	1,981.6 (78.0)	D
	SL and Platinum (Cummins 5.0L)	2WD	2002.4 (78.8)	E
		4WD	2002 (78.8)	F
	SL and Platinum (VK56VD)	2WD	2003.7 (78.9)	G
		4WD	2002.8 (78.9)	H
	Pro-4X	Cummins 5.0L	1,991.4 (78.4)	I
		VK56VD	1,992.3 (78.4)	J
Front tread width	S		1,738 (68.4)	K
	Except S		1,743 (68.6)	L
Rear tread width	S		1,737 (68.3)	M
	Except S		1,742 (68.6)	N
Wheelbase			3,850 (151.6)	O

NON-XD MODELS

Unit: mm (in)			
Overall length	Without front license plate bracket	Except Pro-4X	5,794.2 (228.1)
		Pro-4X	5,804.1 (228.5)
Overall width	Except Pro-4X and Platinum		2,020.0 (79.5)
	Pro-4X and Platinum		2,049.6 (80.7)
Overall height	S	2WD	1,914.1 (75.4)
		4WD	1,929.3 (76.0)
	SV	2WD	1,915.1 (75.4)
		4WD	1,929.7 (76.0)
	SL and Platinum	2WD	1,920.4 (75.6)
		4WD	1,959.7 (77.2)
	Pro-4X		1,960.3 (77.2)
Front tread width	S and SV		1,725 (67.9)
	Except S and SV		1,729 (68.1)
Rear tread width	S and SV		1,725 (67.9)
	Except S and SV		1,729 (68.1)
Wheelbase			3,550 (139.8)

Wheels & Tires

INFOID:0000000014418336

XD MODELS

Road wheel / Offset mm (in)	Tire	Spare tire size
17X7.5J Steel / 44 (1.73)	LT245/75R17	LT245/75R17
18X7.5J Alloy / 41.5 (1.63)	LT275/65R18	LT275/65R18
20X7.5J Alloy / 41.5 (1.63)	LT265/60R20	LT265/60R20

NON-XD MODELS

Road wheel / Offset mm (in)	Tire	Spare tire size
18X8.0J Steel / 25 (0.98)	P265/75R18	P265/75R18

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

18X8.0J Alloy / 25 (0.98)	P265/70R18	P265/70R18
18X8.0J Alloy / 23 (0.91)	P275/70R18	P275/70R18
20X8.0J Alloy / 23 (0.91)	P275/60R20	P275/60R20

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

BASIC INSPECTION

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

GI

Work Flow

INFOID:000000014418337

B

WORK FLOW

C


D

E

F

G

H

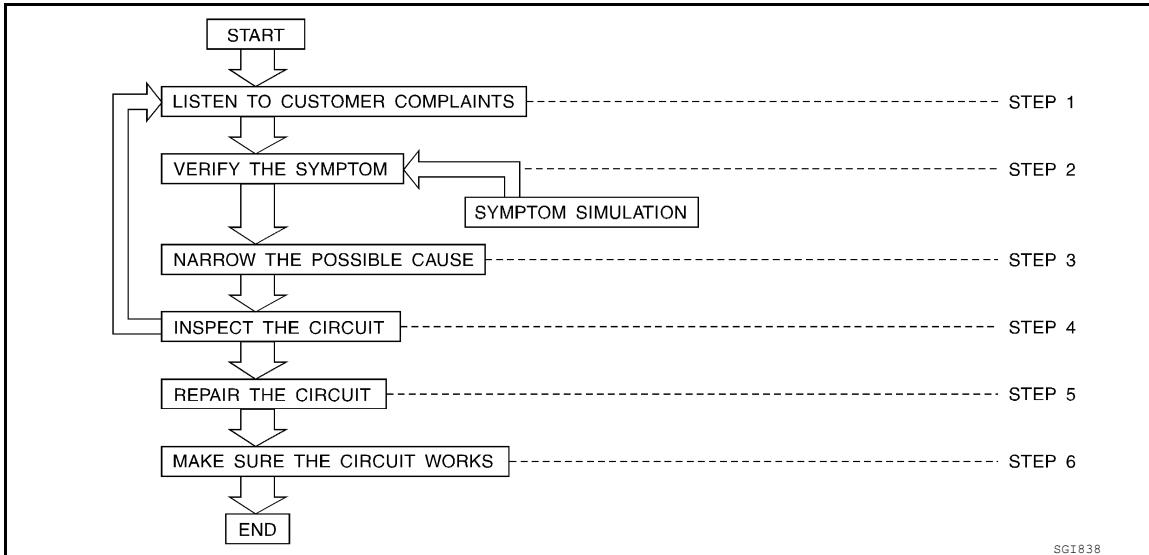

I

J

K

L

M

N

O

P

STEP	DESCRIPTION		
STEP 1		Get detailed information about the conditions and the environment when the incident occurred. The following are key pieces of information required to make a good analysis: WHAT Vehicle Model, Engine, Transmission/Transaxle and the System (i.e. Radio). WHEN Date, Time of Day, Weather Conditions, Frequency. WHERE Road Conditions, Altitude and Traffic Situation. HOW System Symptoms, Operating Conditions (Other Components Interaction). Service History and if any After Market Accessories have been installed.	I
STEP 2	Operate the system, road test if necessary. Verify the parameter of the incident. If the problem cannot be duplicated, refer to "Incident Simulation Tests".		J
STEP 3	Get the proper diagnosis materials together including: <ul style="list-style-type: none">• Power Supply Routing• System Operation Descriptions• Applicable Service Manual Sections• Check for any Service Bulletins Identify where to begin diagnosis based upon your knowledge of the system operation and the customer comments.		K
STEP 4	Inspect the system for mechanical binding, loose connectors or wiring damage. Determine which circuits and components are involved and diagnose using the Power Supply Routing and Harness Layouts.		L
STEP 5	Repair or replace the incident circuit or component.		M
STEP 6	Operate the system in all modes. Verify the system works properly under all conditions. Make sure you have not inadvertently created a new incident during your diagnosis or repair steps.		N

Control Units and Electrical Parts

INFOID:000000014418338

O

P

PRECAUTIONS

- Never reverse polarity of battery terminals.
- Install only parts specified for a vehicle.
- Before replacing the control unit, check the input and output and functions of the component parts.
- Do not apply excessive force when disconnecting a connector.


SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- Do not apply excessive shock to the control unit by dropping or hitting it.
- Be careful to prevent condensation in the control unit due to rapid temperature changes and do not let water or rain get on it. If water is found in the control unit, dry it fully and then install it in the vehicle.
- Be careful not to let oil to get on the control unit connector.
- Avoid cleaning the control unit with volatile oil.
- Do not disassemble the control unit, and do not remove the upper and lower covers.



- When using a DMM, be careful not to let test probes get close to each other to prevent the power transistor in the control unit from damaging battery voltage because of short circuiting.
- When checking input and output signals of the control unit, use the specified check adapter.

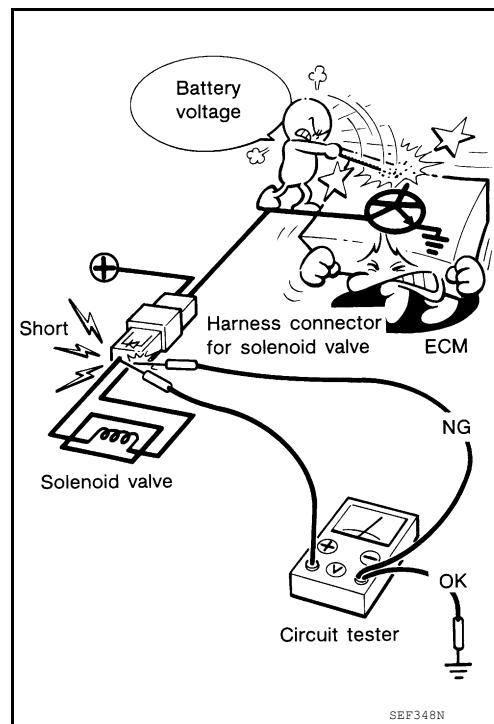

How to Check Terminal

INFOID:000000014418339

HARNESS REPAIR KIT

- Use the harness repair kit J-48817 shown below when replacing connectors or terminals.
- The harness repair kit contains some of the most commonly used NISSAN/INFINITI connectors and terminals. For detailed connector and terminal pin replacement procedures, refer to the J-48817 User Guide.

Tool number (TechMate No.) Tool name	Description
— (J-48817) Harness repair kit	

HOW TO PROBE CONNECTORS

SERVICE INFORMATION FOR ELECTRICAL INCIDENT


< BASIC INSPECTION >

- Connector damage and an intermittent connection can result from improperly probing of the connector during circuit checks.
- The probe of a digital multimeter (DMM) may not correctly fit the connector cavity. To correctly probe the connector, follow the procedures below using a "T" pin. For the best contact grasp the "T" pin using an alligator clip.

Probing from Harness Side

Standard type (not waterproof type) connector should be probed from harness side with "T" pin.


- If the connector has a rear cover such as a ECM connector, remove the rear cover before probing the terminal.
- Do not probe waterproof connector from harness side. Damage to the seal between wire and connector may result.

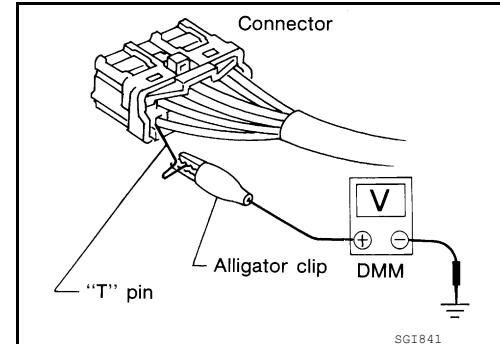


Probing from Terminal Side

FEMALE TERMINAL

- There is a small notch above each female terminal. Probe each terminal with the "T" pin through the notch.
Do not insert any object other than the same type male terminal into female terminal.

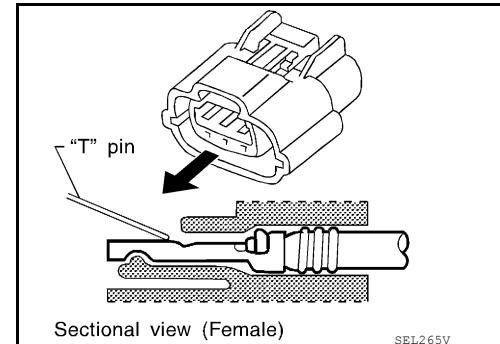

- Some connectors do not have a notch above each terminal. To probe each terminal, remove the connector retainer to make contact space for probing.

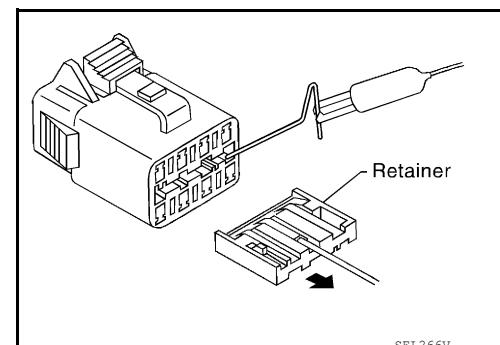


MALE TERMINAL

- Carefully probe the contact surface of each terminal using a "T" pin.

CAUTION:

Dot not bend terminal.

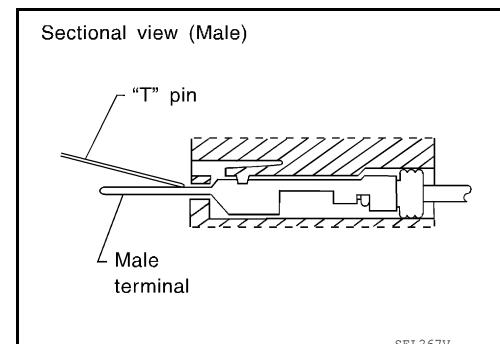

How to Check Enlarged Contact Spring of Terminal

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >


- An enlarged contact spring of a terminal may create intermittent signals in the circuit.
- If the intermittent open circuit occurs, follow the procedure below to inspect for open wires and enlarged contact spring of female terminal.

1. Assemble a male terminal and approx. 10 cm (3.9 in) of wire.

NOTE:

Use a male terminal which matches the female terminal.


2. Disconnect the suspected faulty connector and hold it terminal side up.

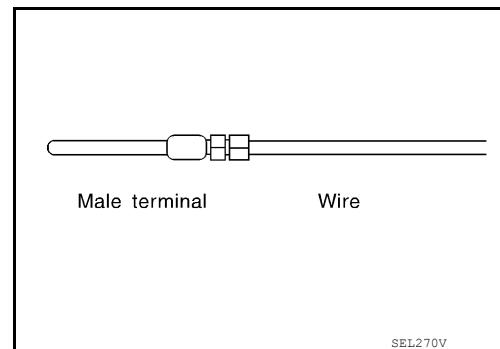


3. While holding the wire of the male terminal, try to insert the male terminal into the female terminal.

CAUTION:


Do not force the male terminal into the female terminal with your hands.

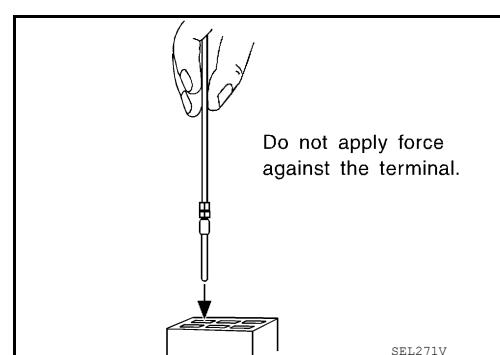

4. While moving the connector, check whether the male terminal can be easily inserted or not.

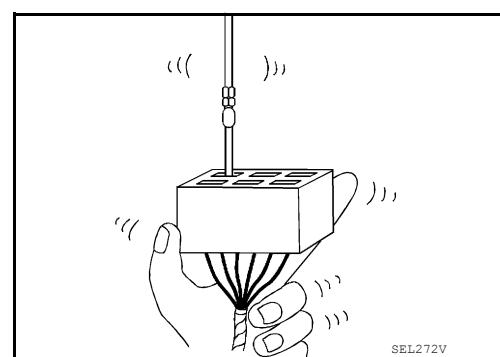

- If the male terminal can be easily inserted into the female terminal, replace the female terminal.

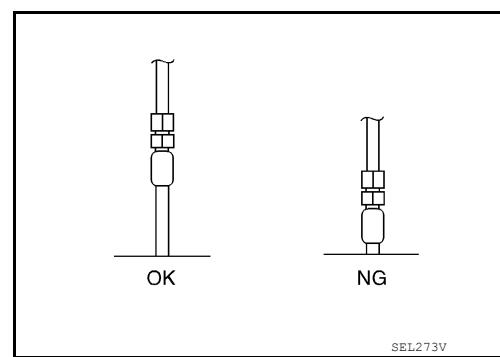

Waterproof Connector Inspection

If water enters the connector, it can short interior circuits. This may lead to intermittent problems. Check the following items to maintain the original waterproof characteristics.

RUBBER SEAL INSPECTION


SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- Most waterproof connectors are provided with a rubber seal between the male and female connectors. If the seal is missing, the waterproof performance may not meet specifications.
- The rubber seal may come off when connectors are disconnected. Whenever connectors are reconnected, make sure the rubber seal is properly installed on either side of male or female connector.


WIRE SEAL INSPECTION

- The wire seal must be installed on the wire insertion area of a waterproof connector. Be sure that the seal is installed properly.

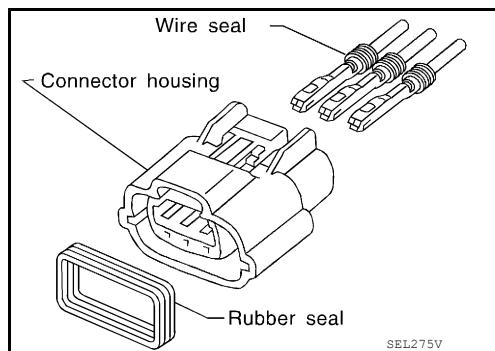

Terminal Lock Inspection

Check for unlocked terminals by pulling wire at the end of connector. An unlocked terminal may create intermittent signals in the circuit.

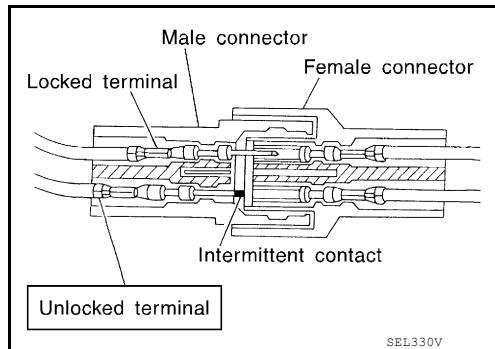

Intermittent Incident

INFOID:000000014418340

DESCRIPTION

Sometimes the symptom is not present when the vehicle is brought in for service. If possible, re-create the conditions present at the time of the incident. Doing so may help avoid a No Trouble Found Diagnosis. The following section illustrates ways to simulate the conditions/environment under which the owner experiences an electrical incident.

The section is broken into the six following topics:

- Vehicle vibration
- Heat sensitive
- Freezing
- Water intrusion
- Electrical load
- Cold or hot start up

Get a thorough description of the incident from the customer. It is important for simulating the conditions of the problem.

VEHICLE VIBRATION

The problem may occur or become worse while driving on a rough road or when engine is vibrating (idle with A/C on). In such a case, you will want to check for a vibration related condition. Refer to the following illustration.

Connector & Harness

Determine which connectors and wiring harness would affect the electrical system you are inspecting. Gently shake each connector and harness while monitoring the system for the incident you are trying to duplicate. This test may indicate a loose or poor electrical connection.

Hint

Connectors can be exposed to moisture. It is possible to get a thin film of corrosion on the connector terminals. A visual inspection may not reveal this without disconnecting the connector. If the problem occurs intermittently, perhaps the problem is caused by corrosion. It is a good idea to disconnect, inspect and clean the terminals on related connectors in the system.


Sensor & Relay

Gently apply a slight vibration to sensors and relays in the system you are inspecting.

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

This test may indicate a loose or poorly mounted sensor or relay.

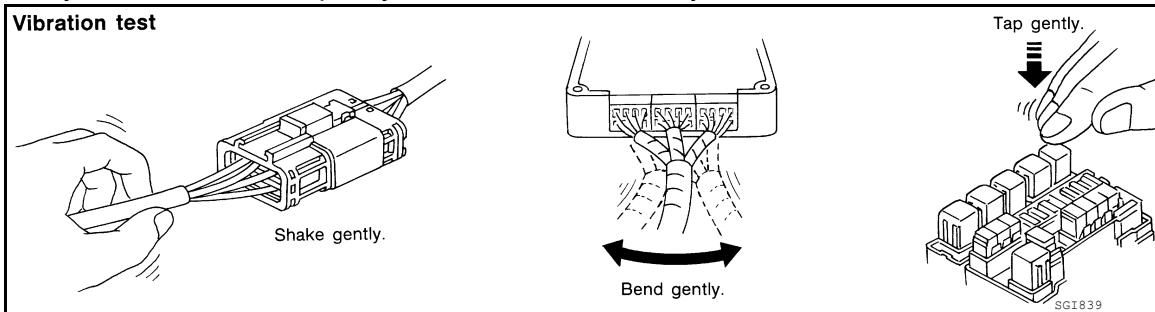

Engine Compartment

There are several reasons a vehicle or engine vibration could cause an electrical complaint. Some of the things to check for are:

- Connectors not fully seated.
- Wiring harness not long enough and is being stressed due to engine vibrations or rocking.
- Wires laying across brackets or moving components.
- Loose, dirty or corroded ground wires.
- Wires routed too close to hot components.

To inspect components under the hood, start by verifying the integrity of ground connections. (Refer to Ground Inspection described later.) First check that the system is properly grounded. Then check for loose connection by gently shaking the wiring or components as previously explained. Using the wiring diagrams inspect the wiring for continuity.

Behind the Instrument Panel

An improperly routed or improperly clamped harness can become pinched during accessory installation. Vehicle vibration can aggravate a harness which is routed along a bracket or near a screw.

Under Seating Areas

An unclamped or loose harness can cause wiring to be pinched by seat components (such as slide guides) during vehicle vibration. If the wiring runs under seating areas, inspect wire routing for possible damage or pinching.


HEAT SENSITIVE

- The customer's concern may occur during hot weather or after car has sat for a short time. In such cases you will want to check for a heat sensitive condition.
- To determine if an electrical component is heat sensitive, heat the component with a heat gun or equivalent.

CAUTION:


Do not heat components above 60°C (140°F).

- If incident occurs while heating the unit, either replace or properly insulate the component.

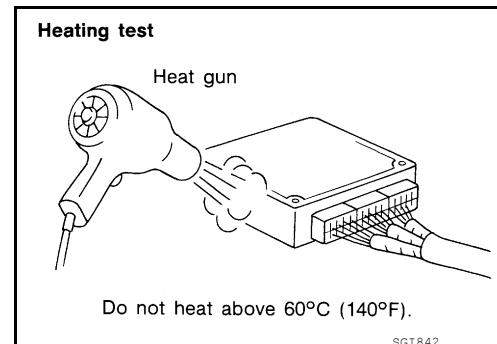

FREEZING

- The customer may indicate the incident goes away after the car warms up (winter time). The cause could be related to water freezing somewhere in the wiring/electrical system.
- There are two methods to check for this. The first is to arrange for the owner to leave his car overnight. Make sure it will get cold enough to demonstrate his complaint. Leave the car parked outside overnight. In the morning, do a quick and thorough diagnosis of those electrical components which could be affected.
- The second method is to put the suspect component into a freezer long enough for any water to freeze. Reinstall the part into the car and check for the reoccurrence of the incident. If it occurs, repair or replace the component.

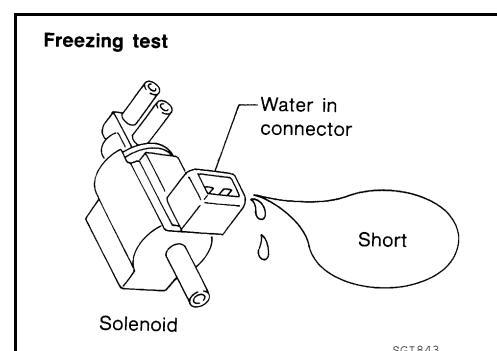

WATER INTRUSION

SERVICE INFORMATION FOR ELECTRICAL INCIDENT


< BASIC INSPECTION >

The incident may occur only during high humidity or in rainy/snowy weather. In such cases the incident could be caused by water intrusion on an electrical part. This can be simulated by soaking the car or running it through a car wash.

CAUTION:

Do not spray water directly on any electrical components.

Water intrusion test

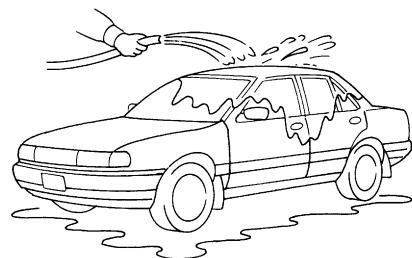

SGI844

GI

B

C

D

E

F

G

H

I

J

K

L

M

N


O

P

ELECTRICAL LOAD

The incident may be electrical load sensitive. Perform diagnosis with all accessories (including A/C, rear window defogger, radio, fog lamps) turned on.

Electrical load test

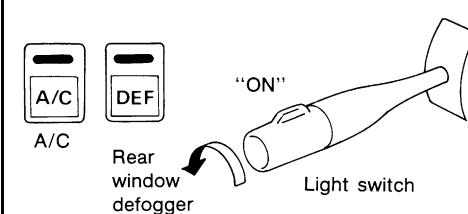

SGI845

H

COLD OR HOT START UP

On some occasions an electrical incident may occur only when the car is started cold, or it may occur when the car is restarted hot shortly after being turned off. In these cases you may have to keep the car overnight to make a proper diagnosis.

Circuit Inspection

INFOID:000000014418341

DESCRIPTION

- In general, testing electrical circuits is an easy task if it is approached in a logical and organized method. Before beginning it is important to have all available information on the system to be tested. Also, get a thorough understanding of system operation. Then you will be able to use the appropriate equipment and follow the correct test procedure.
- You may have to simulate vehicle vibrations while testing electrical components. Gently shake the wiring harness or electrical component to do this.

OPEN	A circuit is open when there is no continuity through a section of the circuit.
SHORT	There are two types of shorts. <ul style="list-style-type: none">• SHORT CIRCUIT When a circuit contacts another circuit and causes the normal resistance to change.• SHORT TO GROUND When a circuit contacts a ground source and grounds the circuit.

NOTE:


Refer to [GI-44, "How to Check Terminal"](#) to probe or check terminal.

TESTING FOR "OPENS" IN THE CIRCUIT

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

Before you begin to diagnose and test the system, you should rough sketch a schematic of the system. This will help you to logically walk through the diagnosis process. Drawing the sketch will also reinforce your working knowledge of the system.

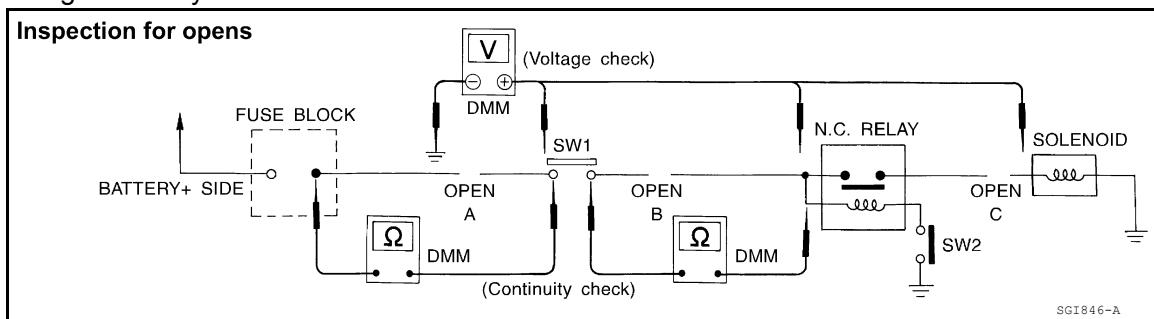

Continuity Check Method

The continuity check is used to find an open in the circuit. The digital multimeter (DMM) set on the resistance function will indicate an open circuit as over limit (no beep tone or no ohms symbol). Make sure to always start with the DMM at the highest resistance level.

To help in understanding the diagnosis of open circuits, please refer to the previous schematic.

- Disconnect the battery negative cable.
- Start at one end of the circuit and work your way to the other end. (At the fuse block in this example)
- Connect one probe of the DMM to the fuse block terminal on the load side.
- Connect the other probe to the fuse block (power) side of SW1. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point A)
- Connect the probes between SW1 and the relay. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point B)
- Connect the probes between the relay and the solenoid. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point C)

Any circuit can be diagnosed using the approach in the previous example.

Voltage Check Method

To help in understanding the diagnosis of open circuits please refer to the previous schematic.


In any powered circuit, an open can be found by methodically checking the system for the presence of voltage. This is done by switching the DMM to the voltage function.

- Connect one probe of the DMM to a known good ground.
- Begin probing at one end of the circuit and work your way to the other end.
- With SW1 open, probe at SW1 to check for voltage.
voltage; open is further down the circuit than SW1.
no voltage; open is between fuse block and SW1 (point A).
- Close SW1 and probe at relay.
voltage; open is further down the circuit than the relay.
no voltage; open is between SW1 and relay (point B).
- Close the relay and probe at the solenoid.
voltage; open is further down the circuit than the solenoid.
no voltage; open is between relay and solenoid (point C).

Any powered circuit can be diagnosed using the approach in the previous example.

TESTING FOR "SHORTS" IN THE CIRCUIT

To simplify the discussion of shorts in the system, please refer to the following schematic.

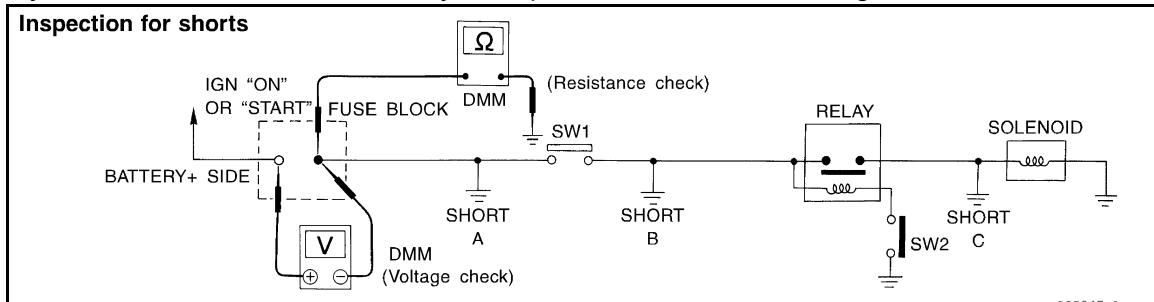

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

Resistance Check Method

- Disconnect the battery negative cable and remove the blown fuse.
- Disconnect all loads (SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Connect one probe of the DMM to the load side of the fuse terminal. Connect the other probe to a known good ground.
- With SW1 open, check for continuity.
continuity; short is between fuse terminal and SW1 (point A).
no continuity; short is further down the circuit than SW1.
- Close SW1 and disconnect the relay. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.
continuity; short is between SW1 and the relay (point B).
no continuity; short is further down the circuit than the relay.
- Close SW1 and jump the relay contacts with jumper wire. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.
continuity; short is between relay and solenoid (point C).
no continuity; check solenoid, retrace steps.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

Voltage Check Method

- Remove the blown fuse and disconnect all loads (i.e. SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Turn the ignition key to the ON or START position. Verify battery voltage at the battery + side of the fuse terminal (one lead on the battery + terminal side of the fuse block and one lead on a known good ground).
- With SW1 open and the DMM leads across both fuse terminals, check for voltage.
voltage; short is between fuse block and SW1 (point A).
no voltage; short is further down the circuit than SW1.
- With SW1 closed, relay and solenoid disconnected and the DMM leads across both fuse terminals, check for voltage.
voltage; short is between SW1 and the relay (point B).
no voltage; short is further down the circuit than the relay.
- With SW1 closed, relay contacts jumped with fused jumper wire check for voltage.
voltage; short is down the circuit of the relay or between the relay and the disconnected solenoid (point C).
no voltage; retrace steps and check power to fuse block.

F

G

H

I

J

K

GROUND INSPECTION

- Ground connections are very important to the proper operation of electrical and electronic circuits. Ground connections are often exposed to moisture, dirt and other corrosive elements. The corrosion (rust) can become an unwanted resistance. This unwanted resistance can change the way a circuit works.
- Electronically controlled circuits are very sensitive to proper grounding. A loose or corroded ground can drastically affect an electronically controlled circuit. A poor or corroded ground can easily affect the circuit. Even when the ground connection looks clean, there can be a thin film of rust on the surface.
- When inspecting a ground connection follow these rules:
 - Remove the ground bolt or screw.
 - Inspect all mating surfaces for tarnish, dirt, rust, etc.
 - Clean as required to assure good contact.
 - Reinstall bolt or screw securely.
 - Inspect for "add-on" accessories which may be interfering with the ground circuit.
 - If several wires are crimped into one ground eyelet terminal, check for proper crimps. Make sure all of the wires are clean, securely fastened and providing a good ground path. If multiple wires are cased in one eyelet make sure no ground wires have excess wire insulation.

L

M

N


O

P

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- For detailed ground distribution information, refer to "Ground Distribution" in PG section.

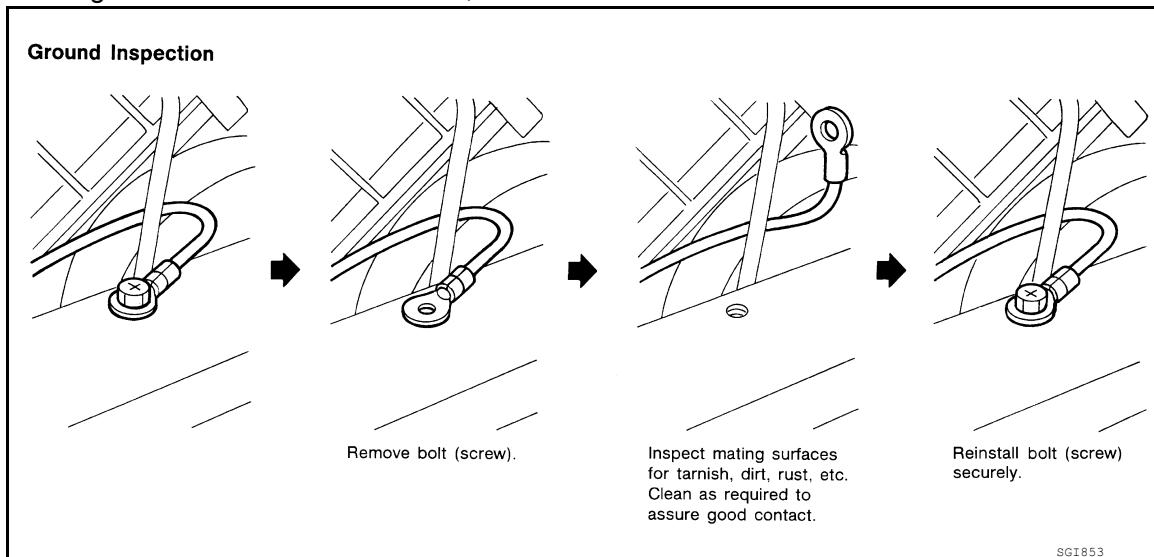


VOLTAGE DROP TESTS

- Voltage drop tests are often used to find components or circuits which have excessive resistance. A voltage drop in a circuit is caused by a resistance when the circuit is in operation.
- Check the wire in the illustration. When measuring resistance with DMM, contact by a single strand of wire will give reading of 0 ohms. This would indicate a good circuit. When the circuit operates, this single strand of wire is not able to carry the current. The single strand will have a high resistance to the current. This will be picked up as a slight voltage drop.
- Unwanted resistance can be caused by many situations as follows:
 - Undersized wiring (single strand example)
 - Corrosion on switch contacts
 - Loose wire connections or splices.
- If repairs are needed always use wire that is of the same or larger gauge.

Measuring Voltage Drop — Accumulated Method

- Connect the DMM across the connector or part of the circuit you want to check. The positive lead of the DMM should be closer to power and the negative lead closer to ground.
- Operate the circuit.
- The DMM will indicate how many volts are being used to "push" current through that part of the circuit.

Note in the illustration that there is an excessive 4.1 volt drop between the battery and the bulb.

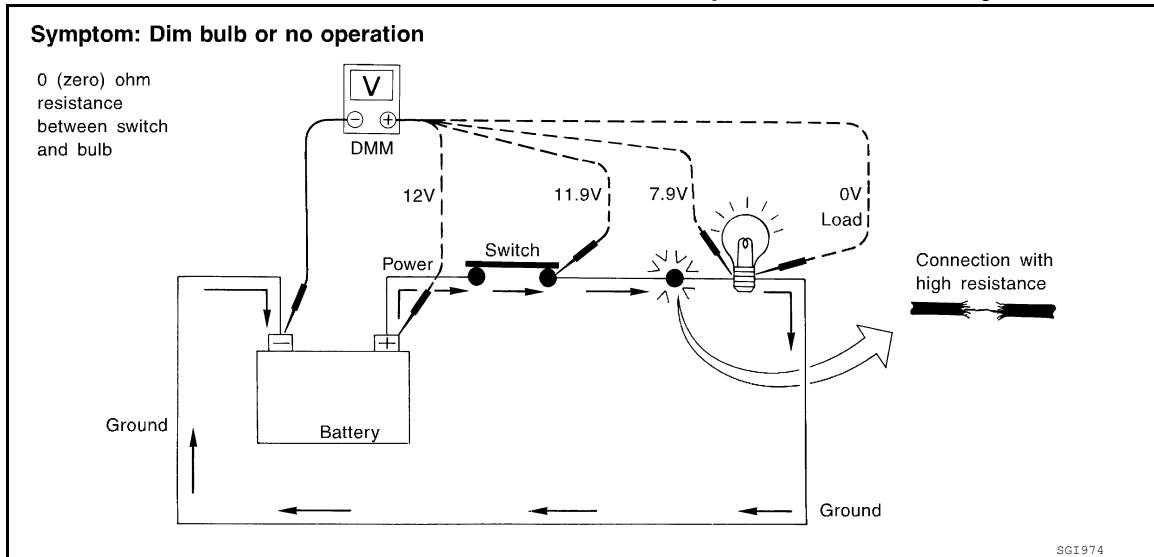


Measuring Voltage Drop — Step-by-Step

- The step-by-step method is most useful for isolating excessive drops in low voltage systems (such as those in "Computer Controlled Systems").
- Circuits in the "Computer Controlled System" operate on very low amperage.

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- The (Computer Controlled) system operations can be adversely affected by any variation in resistance in the system. Such resistance variation may be caused by poor connection, improper installation, improper wire gauge or corrosion.
- The step by step voltage drop test can identify a component or wire with too much resistance.

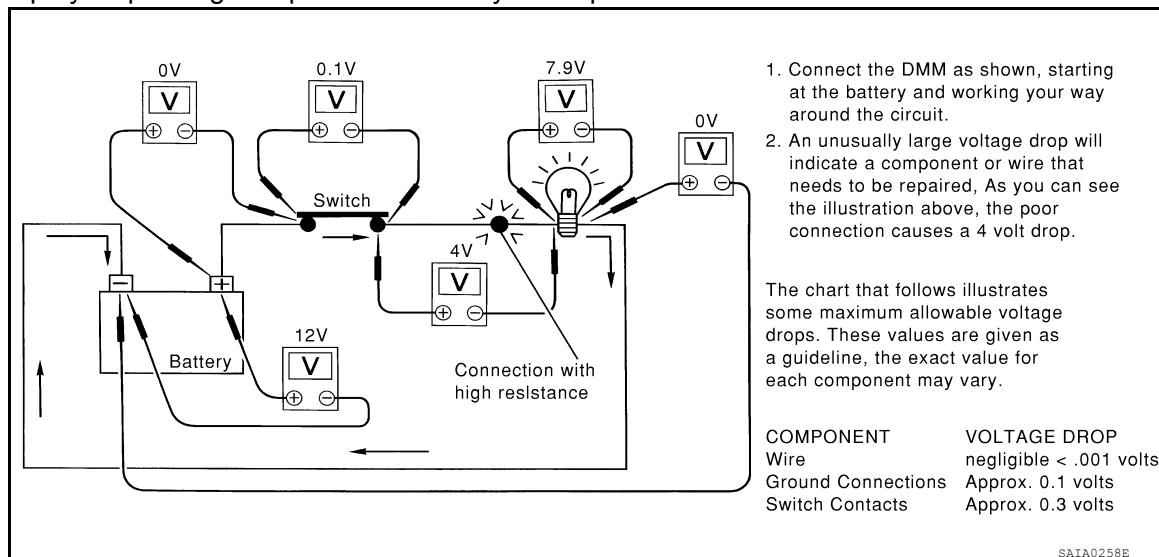


CONTROL UNIT CIRCUIT TEST

System Description

- When the switch is ON, the control unit lights up the lamp.

CASE 1

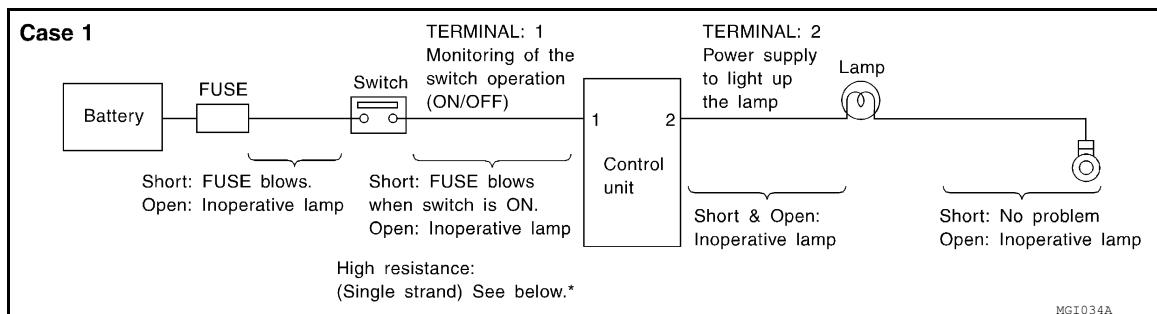

INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Switch	Input	Switch ON	Battery voltage	Lower than battery voltage Approx. 8 (Example)
				Switch OFF	0 V	Approx. 0
2	Body ground	Lamp	Output	Switch ON	Battery voltage	Approx. 0 (Inoperative lamp)
				Switch OFF	0 V	Approx. 0


- The voltage value is based on the body ground.
- *: If high resistance exists in the switch side circuit (caused by a single strand), terminal 1 does not detect battery voltage. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not supply power to light up the lamp.

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
GI

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

CASE 2

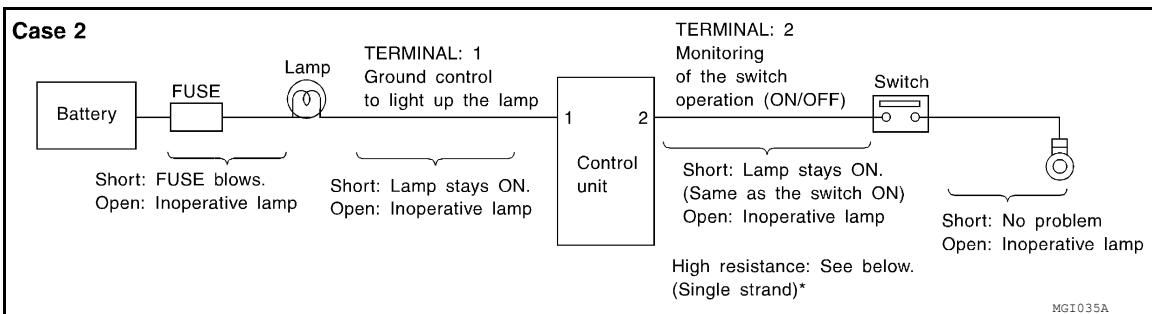

INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Lamp	Output	Switch ON	0V	Battery voltage (Inoperative lamp)
				Switch OFF	Battery voltage	Battery voltage
2	Body ground	Switch	Input	Switch ON	0 V	Higher than 0 Approx. 4 (Example)
				Switch OFF	5 V	Approx. 5

- The voltage value is based on the body ground.
- *: If high resistance exists in the switch side circuit (caused by a single strand), terminal 2 does not detect approx. 0V. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not control ground to light up the lamp.

CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

CONSULT CHECKING SYSTEM

Description


INFOID:000000014418342

GI

NOTE:

This vehicle is diagnosed using CONSULT-III plus.

- When CONSULT is connected with a data link connector (A) equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests.
- Refer to CONSULT-III plus Operation Manual for more information.

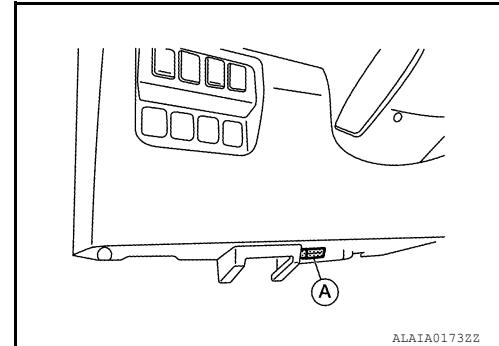

ALAIA017322

Function and System Application

INFOID:000000014418343

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

FUNCTION

Mode	Function
All DTC Reading	Display all DTCs or diagnostic items that all ECUs are recording and judging.
Work support	This mode enables a technician to adjust some devices faster and more accurately.
Self Diagnostic Results	Retrieve DTC from ECU and display diagnostic items.
Data Monitor	Monitor the input/output signal of the control unit in real time.
CAN Diagnosis	This mode displays a network diagnosis result about CAN by diagram.
CAN Diagnosis Support Monitor	It monitors the status of CAN communication.
Active Test	Send the drive signal from CONSULT to the actuator. The operation check can be performed.
ECU Identification	Display the ECU identification number (part number etc.) of the selected system.
Configuration	Function to READ/WRITE vehicle configuration.
SRT&P-DTC Confirmation	The state of System Readiness Test (SRT) items, the presence or absence of permanent DTC*, and driving conditions can be checked.
DTC Work Support	DTC reproduction procedure can be performed speedily and precisely.
Others	Other results or histories, etc. that are recorded in ECU are displayed.

*: Permanent DTC is not applied for regions where it is not mandated.

SYSTEM APPLICATION^{*1}

System	All DTC Reading	Work support	Self Diagnostic Results	Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor	Active Test	ECU Identification	Configuration	SRT&P-DTC Confirmation	DTC Work Support	Others
ENGINE	x	x	x	x	x	x	x	x	-	x ^{*2}	x	-
TRANSMISSION	x	x	x	x	x	x	-	x	-	-	-	• CALIB DATA
AIR BAG	x	-	x	x	x	x	-	x	-	-	-	• TROUBLE DIAG RECORD

CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

System	All DTC Reading	Work support	Self Diagnostic Results	Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor	Active Test	ECU Identification	Configuration	SRT&P-DTC Confirmation	DTC Work Support	Others
METER / M&A	x	x	x	x	x	x	-	x	x	-	-	• Warning history
BCM	x	x	x	x	x	x	x	x	x	-	-	-
CAN GATEWAY	x	-	x	-	x	x	-	x	x	-	-	-
AUTO DRIVE POS.* ³	x	x	x	x	x	x	x	x	-	-	-	-
ABS	x	x	x	x	x	x	x	x	-	-	-	-
IPDM E/R	x	-	x	x	x	x	x	x	-	-	-	-
ICC / ADAS* ³	x	-	x	x	x	x	x	x	x	-	-	-
AIR PRESSURE MONITOR	x	x	x	x	x	x	x	x	x	-	-	-
ALL MODE AWD/4WD* ³	x	x	x	x	x	x	-	x	-	-	-	-
DIFF LOCK* ³	x	x	x	x	x	x	-	x	-	-	-	-
MULTI AV	x	-	x	x	x	x	-	x	-	-	-	-
TELEMATICS* ³	x	x	x	x	x	x	-	x	x	-	-	-
SONAR* ³	x	x	x	x	x	x	x	x	x	-	-	-
AVM* ³	x	x	x	x	x	x	-	x	x	-	-	-
OCCUPANT DETECTION	-	x	-	-	-	-	-	-	-	-	-	-
HVAC	x	x	x	x	x	x	x	x	-	-	-	-
SIDE RADAR LEFT* ³	x	-	x	x	x	x	x	x	-	-	-	-
SIDE RADAR RIGHT* ³	x	-	x	x	x	x	x	x	-	-	-	-

x: Applicable

*1: If GST application is equipped, functions in accordance with SAE J1979 and ISO 15031-5 can be used.

*2: Permanent DTC is not applied for regions where it is not mandated.

*3: If equipped.

CONSULT Data Link Connector (DLC) Circuit

INFOID:0000000014418344

INSPECTION PROCEDURE

If the CONSULT cannot diagnose the system properly, check the following items.

Symptom	Check item
CONSULT cannot access any system.	<ul style="list-style-type: none"> CONSULT DLC power supply circuit (Terminal 8 and 16) and ground circuit (Terminal 4 and 5)
CONSULT cannot access individual system. (Other systems can be accessed.)	<ul style="list-style-type: none"> Power supply and ground circuit for the control unit of the system (For detailed circuit, refer to wiring diagram for each system.) Open or short circuit between the system and CONSULT DLC (For detailed circuit, refer to wiring diagram for each system.) Open or short circuit CAN communication line. Refer to LAN-53, "Trouble Diagnosis Flow Chart".

NOTE:

The DDL1 and DDL2 CAN communication lines from DLC pins 6, 7, 12, 13 and 14 may be connected to more than one system. A short in a DDL circuit or CAN lines connected to a control unit in one system may affect CONSULT access to other systems. For a complete DDL circuit layout, refer to one of the following:

CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

- [GI-58, "Wiring Diagram - With Cummins 5.0L With Navigation With Blind Spot Warning"](#)
- [GI-60, "Wiring Diagram - With Cummins 5.0L With Navigation Without Blind Spot Warning"](#)
- [GI-62, "Wiring Diagram - With Cummins 5.0L Without Navigation"](#)
- [GI-63, "Wiring Diagram - With VK56VD With Driver Assistance System"](#)
- [GI-65, "Wiring Diagram - With VK56VD Without Driver Assistance System"](#)

For a complete CAN lines layout, refer to one of the following::

- [LAN-79, "Wiring Diagram"](#)
- [LAN-87, "Wiring Diagram"](#)
- [LAN-98, "Wiring Diagram"](#)
- [LAN-111, "Wiring Diagram"](#)
- [LAN-118, "Wiring Diagram"](#)

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P


CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

Wiring Diagram - With Cummins 5.0L With Navigation With Blind Spot Warning

INFOID:0000000014418345

CONSULT CHECKING SYSTEM - WITH Cummins 5.0L AND WITH NAVIGATION WITH BLIND SPOT WARNING SYSTEMS

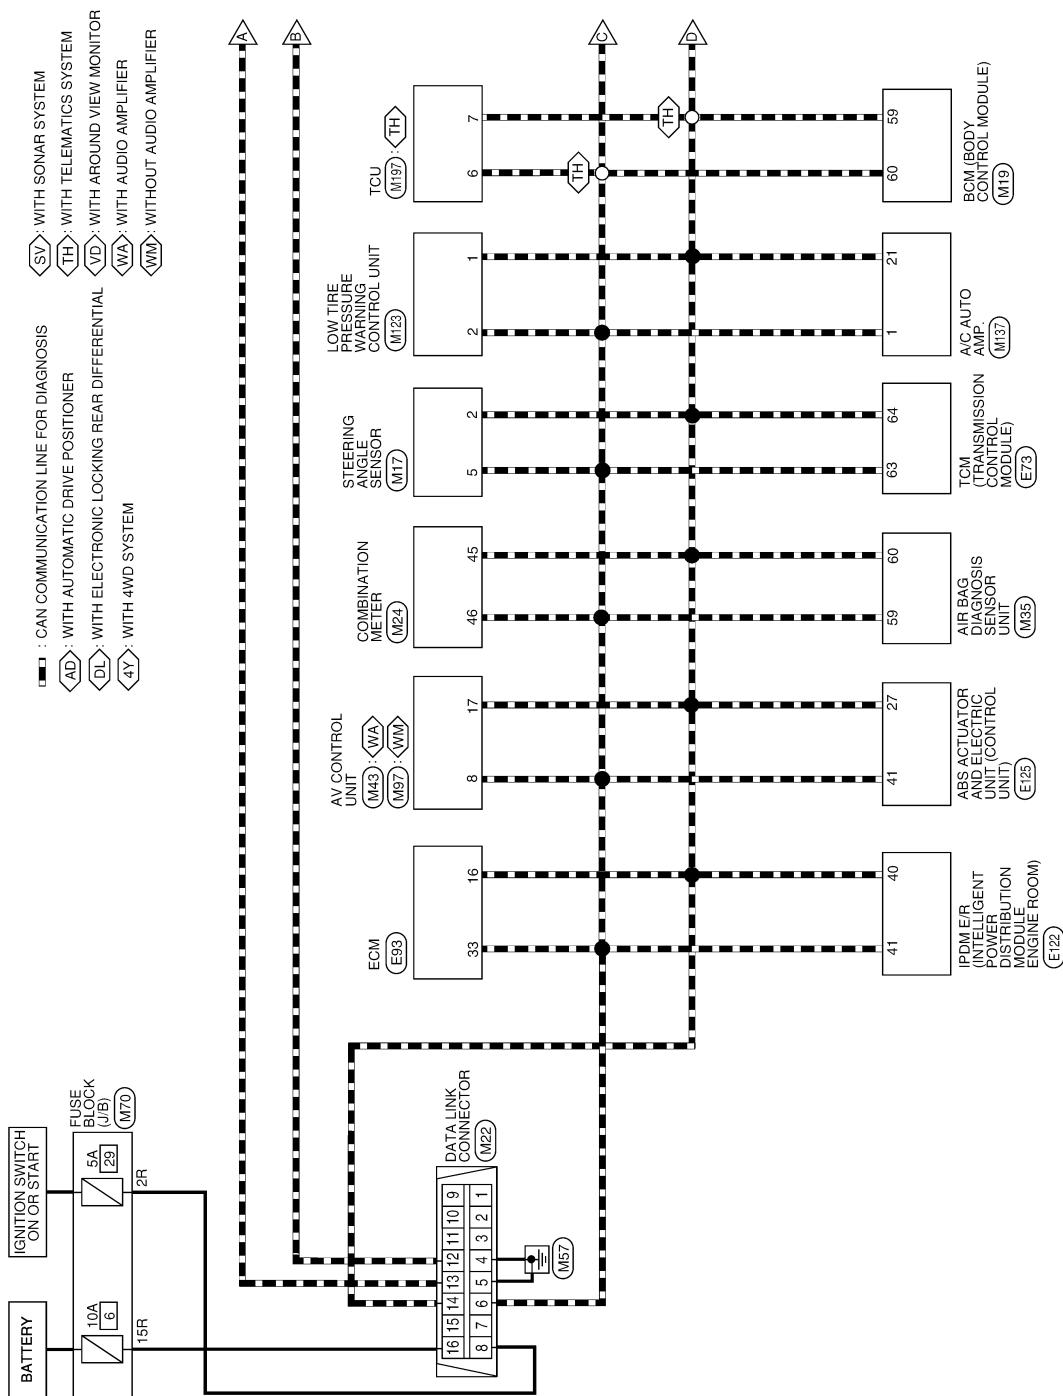

AAAAWA0164GB

CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

GI

B

C

D

E

F

G

H

I

J

K


L

M

N

O

P

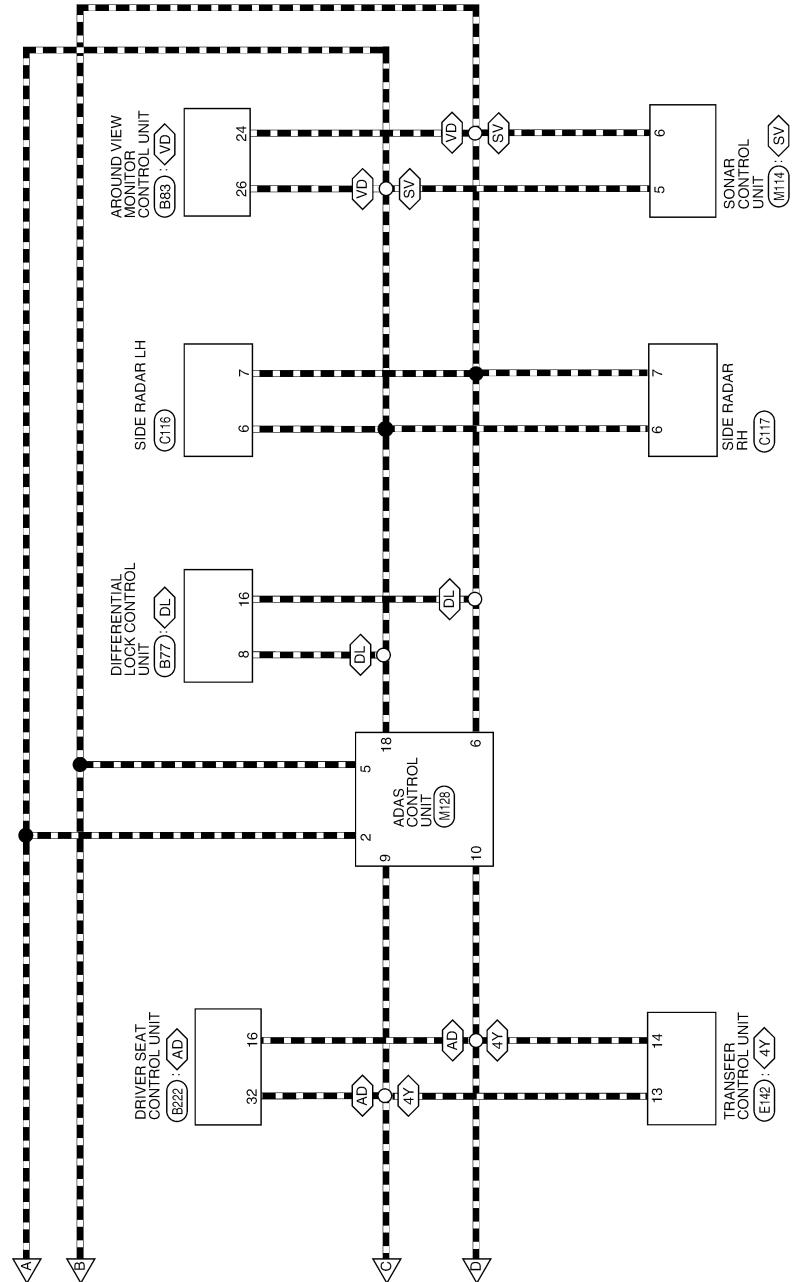

AAAAWA0145GB

CONSULT CHECKING SYSTEM


< BASIC INSPECTION >

Wiring Diagram - With Cummins 5.0L With Navigation Without Blind Spot Warning

INFOID:0000000014418346

CONSULT CHECKING SYSTEM - WITH Cummins 5.0L AND NAVIGATION WITHOUT BLIND SPOT WARNING SYSTEMS

- : CAN COMMUNICATION LINE FOR DIAGNOSIS
- : WITH AUTOMATIC DRIVE POSITIONER
- : WITH ELECTRONIC LOCKING REAR DIFFERENTIAL
- : WITH 4WD SYSTEM
- SV : WITH SONAR SYSTEM
- TH : WITH TELEMATICS SYSTEM
- VD : WITH AROUND VIEW MONITOR
- WA : WITH AUDIO AMPLIFIER

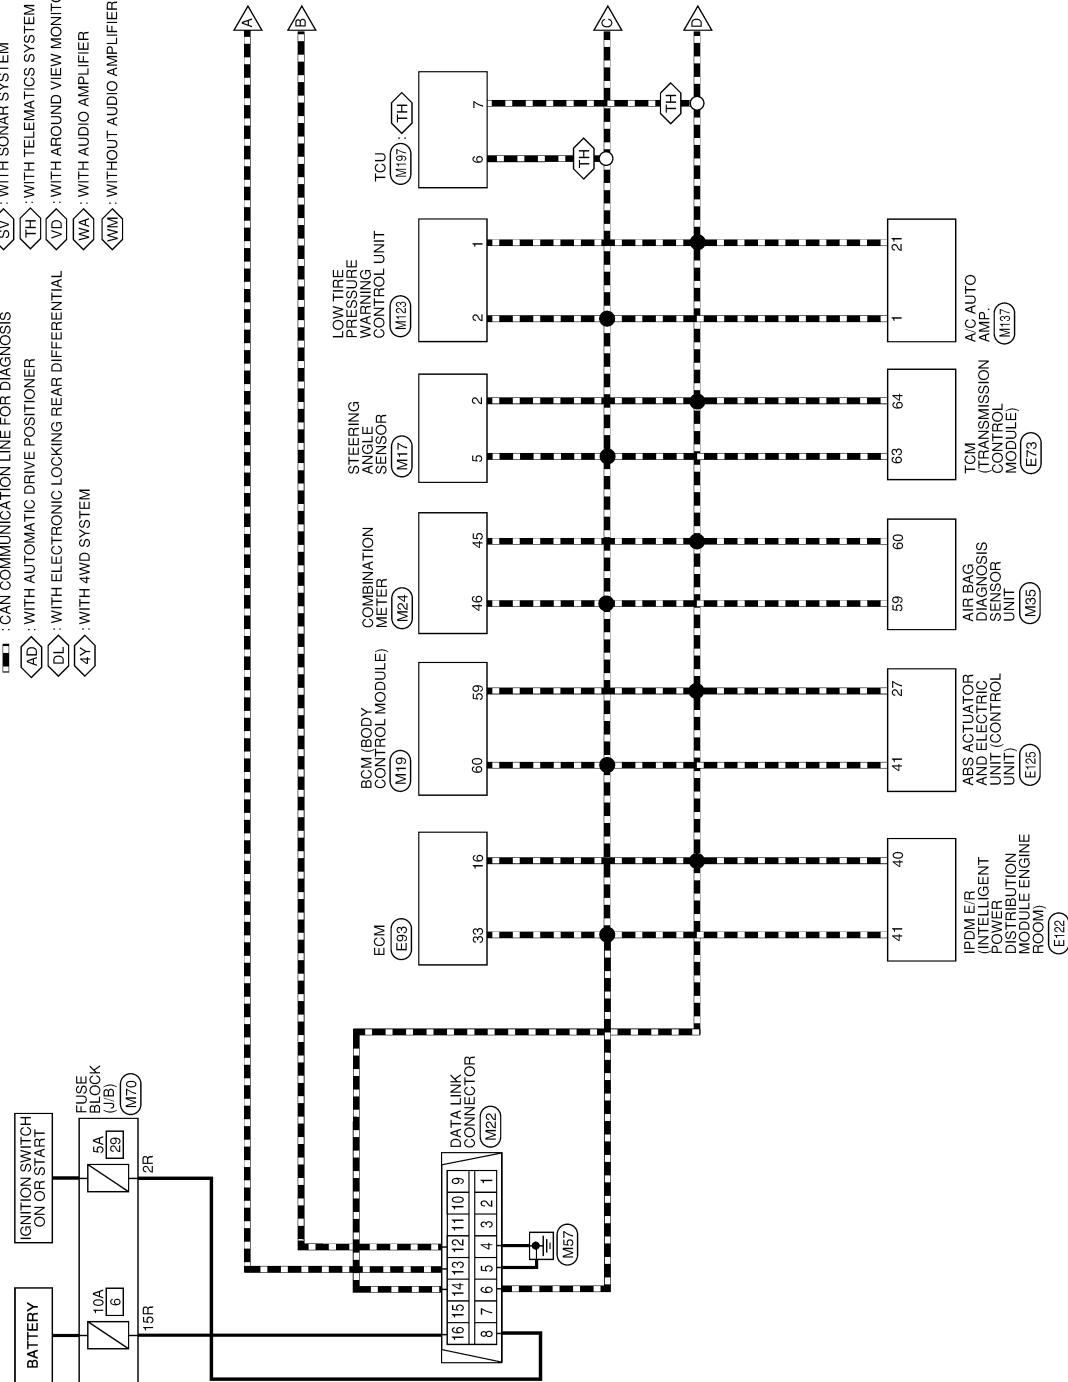

AAA WA01 66GB

CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

GI

B

C

D

E

F

G

H

I

J

K


L

M

N

O

P

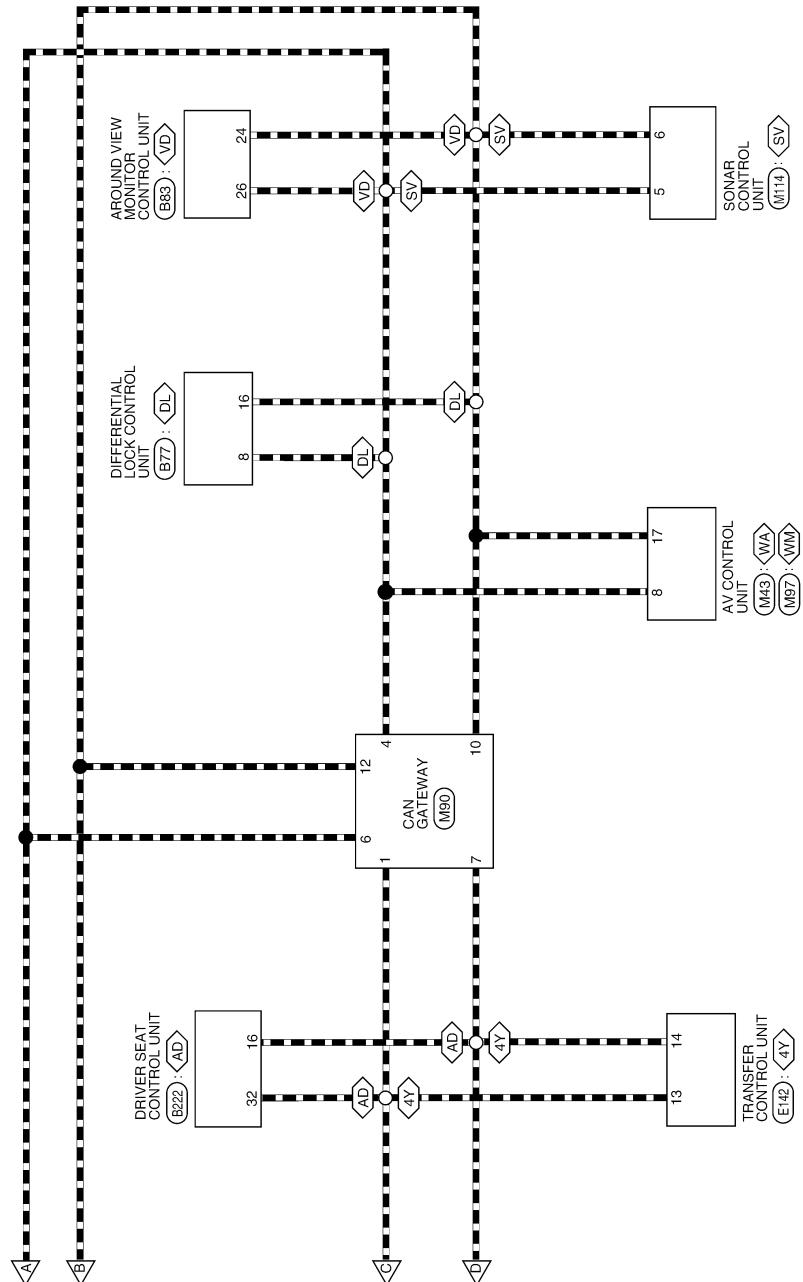

AAAAWA0143GB


CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

Wiring Diagram - With Cummins 5.0L Without Navigation

INFOID:0000000014418347

CONSULT CHECKING SYSTEM - WITH Cummins 5.0L AND WITHOUT NAVIGATION SYSTEM

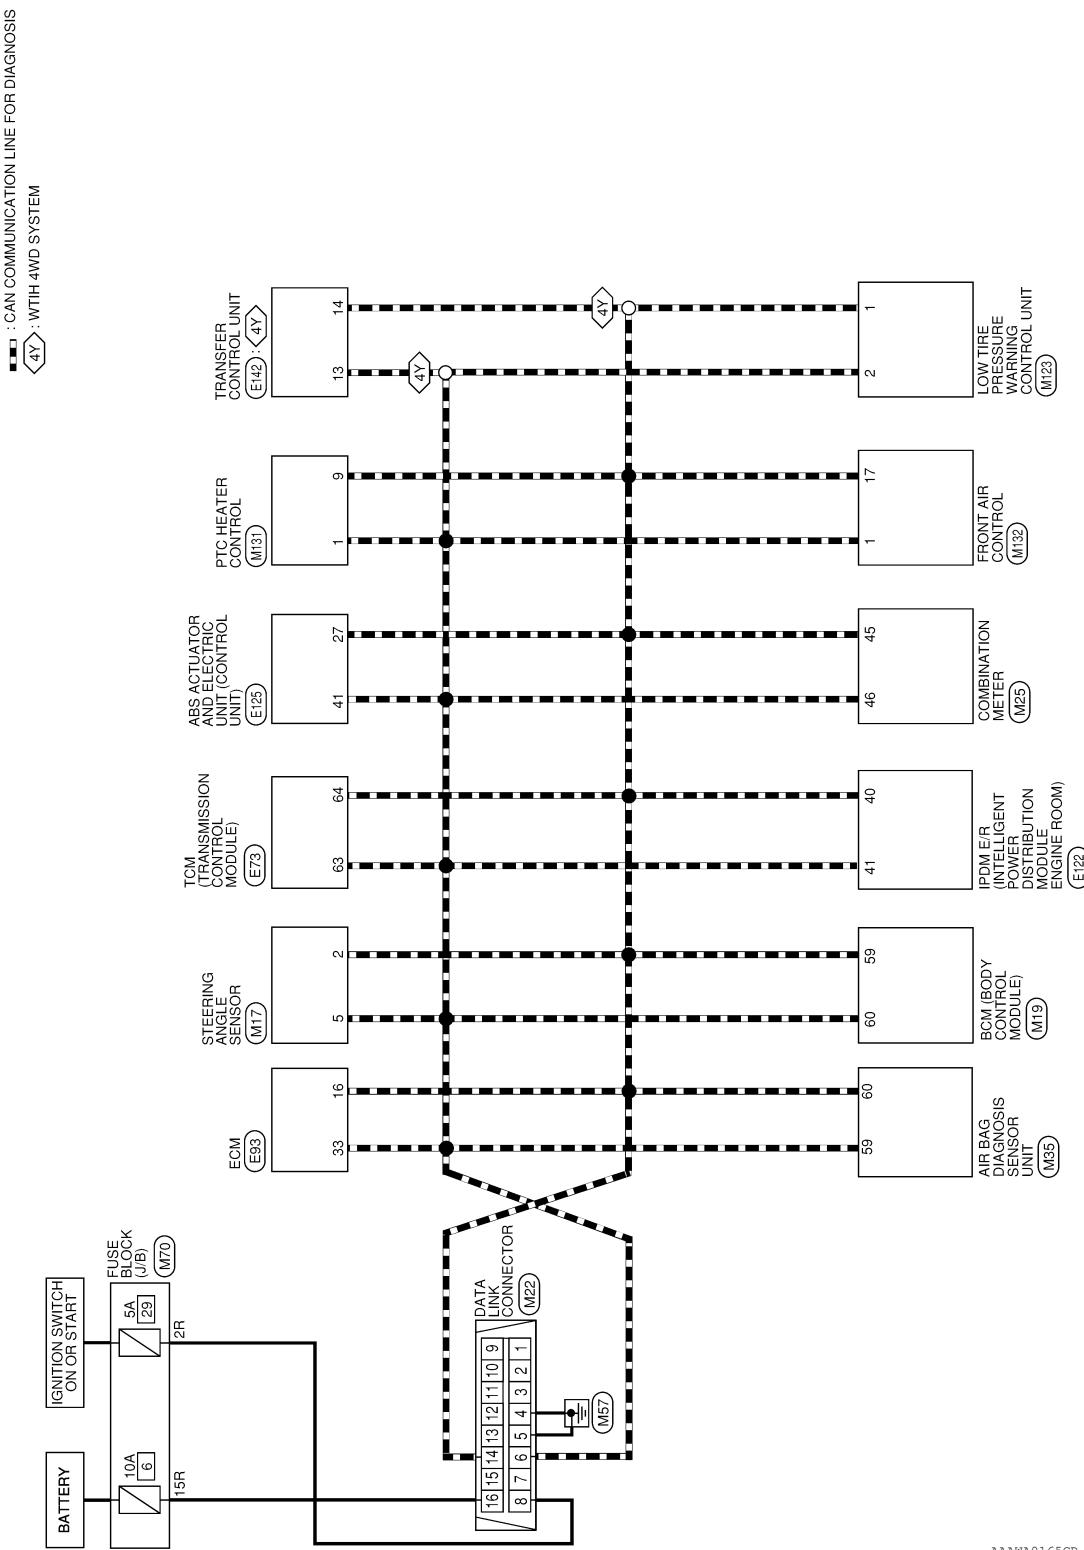

AAAAWA0165GB

CONSULT CHECKING SYSTEM


< BASIC INSPECTION >

Wiring Diagram - With VK56VD With Driver Assistance System

INFOID:000000014418348

GI


CONSULT CHECKING SYSTEM - WITH VK56VD AND WITH DRIVER ASSISTANCE SYSTEM

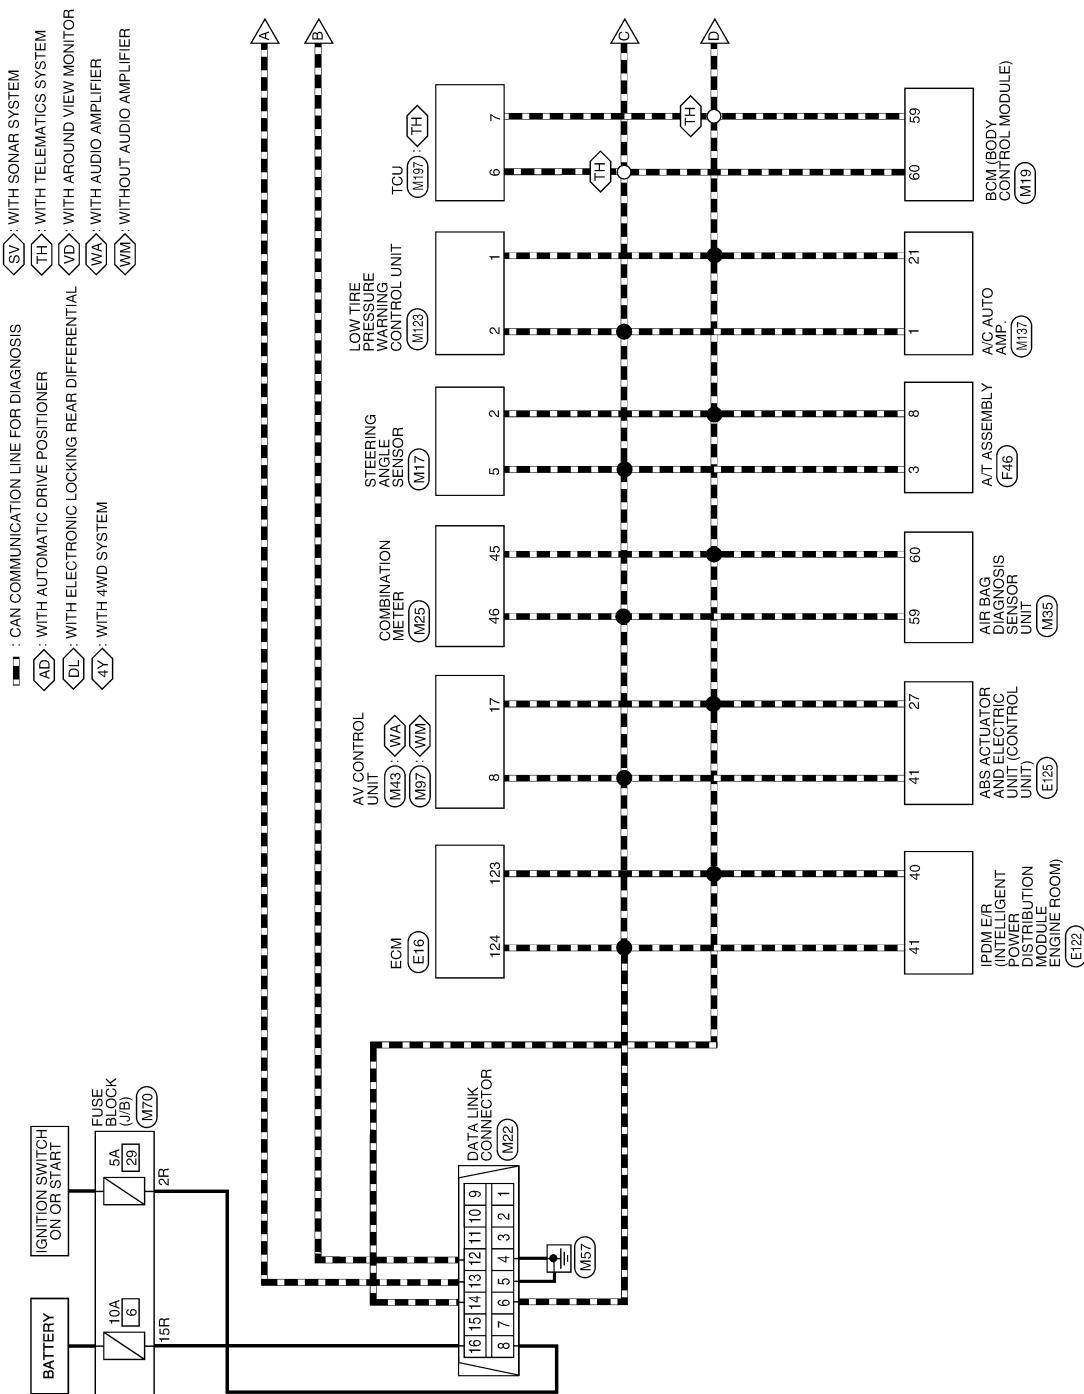

AAAAWA0180GB

CONSULT CHECKING SYSTEM

< BASIC INSPECTION >

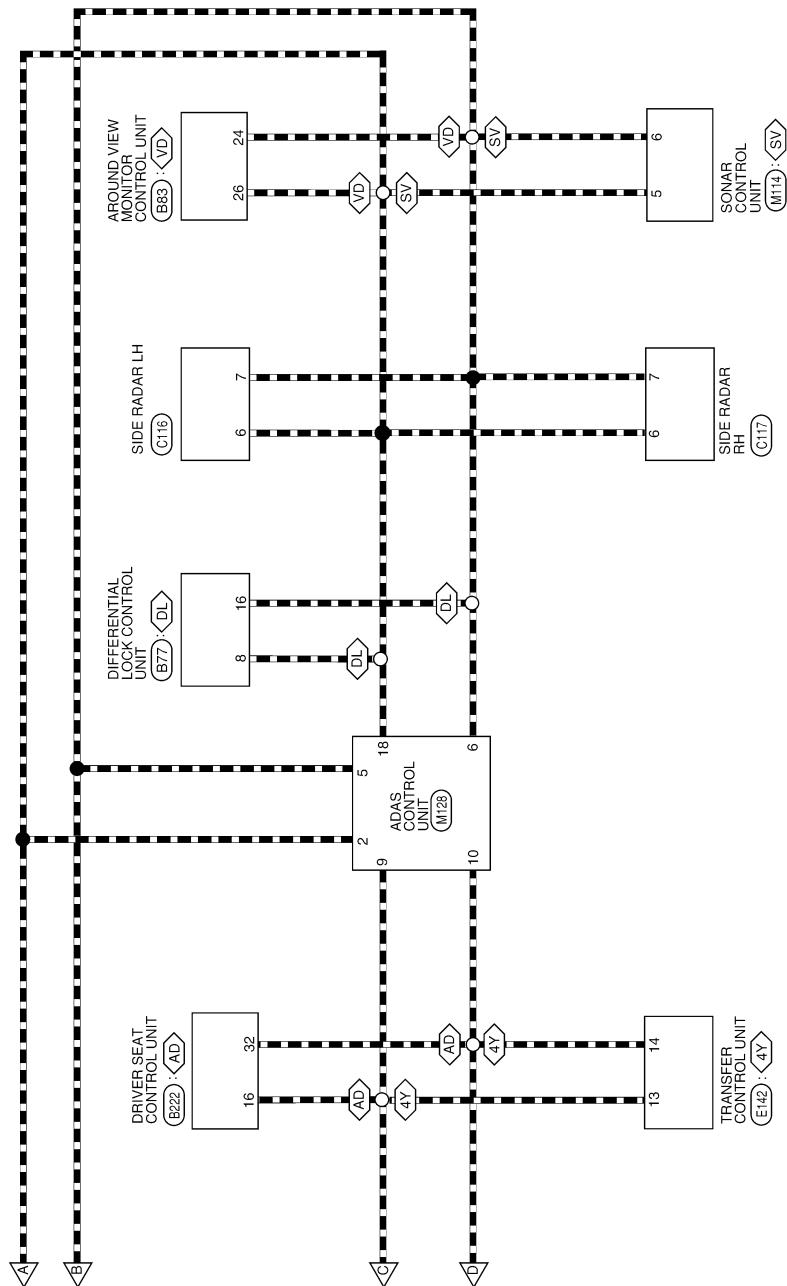

AAAWA0168GB

CONSULT CHECKING SYSTEM


< BASIC INSPECTION >

Wiring Diagram - With VK56VD Without Driver Assistance System

INFOID:000000014418349

GI

CONSULT CHECKING SYSTEM - WITH VK56VD AND WITHOUT DRIVER ASSISTANCE SYSTEM

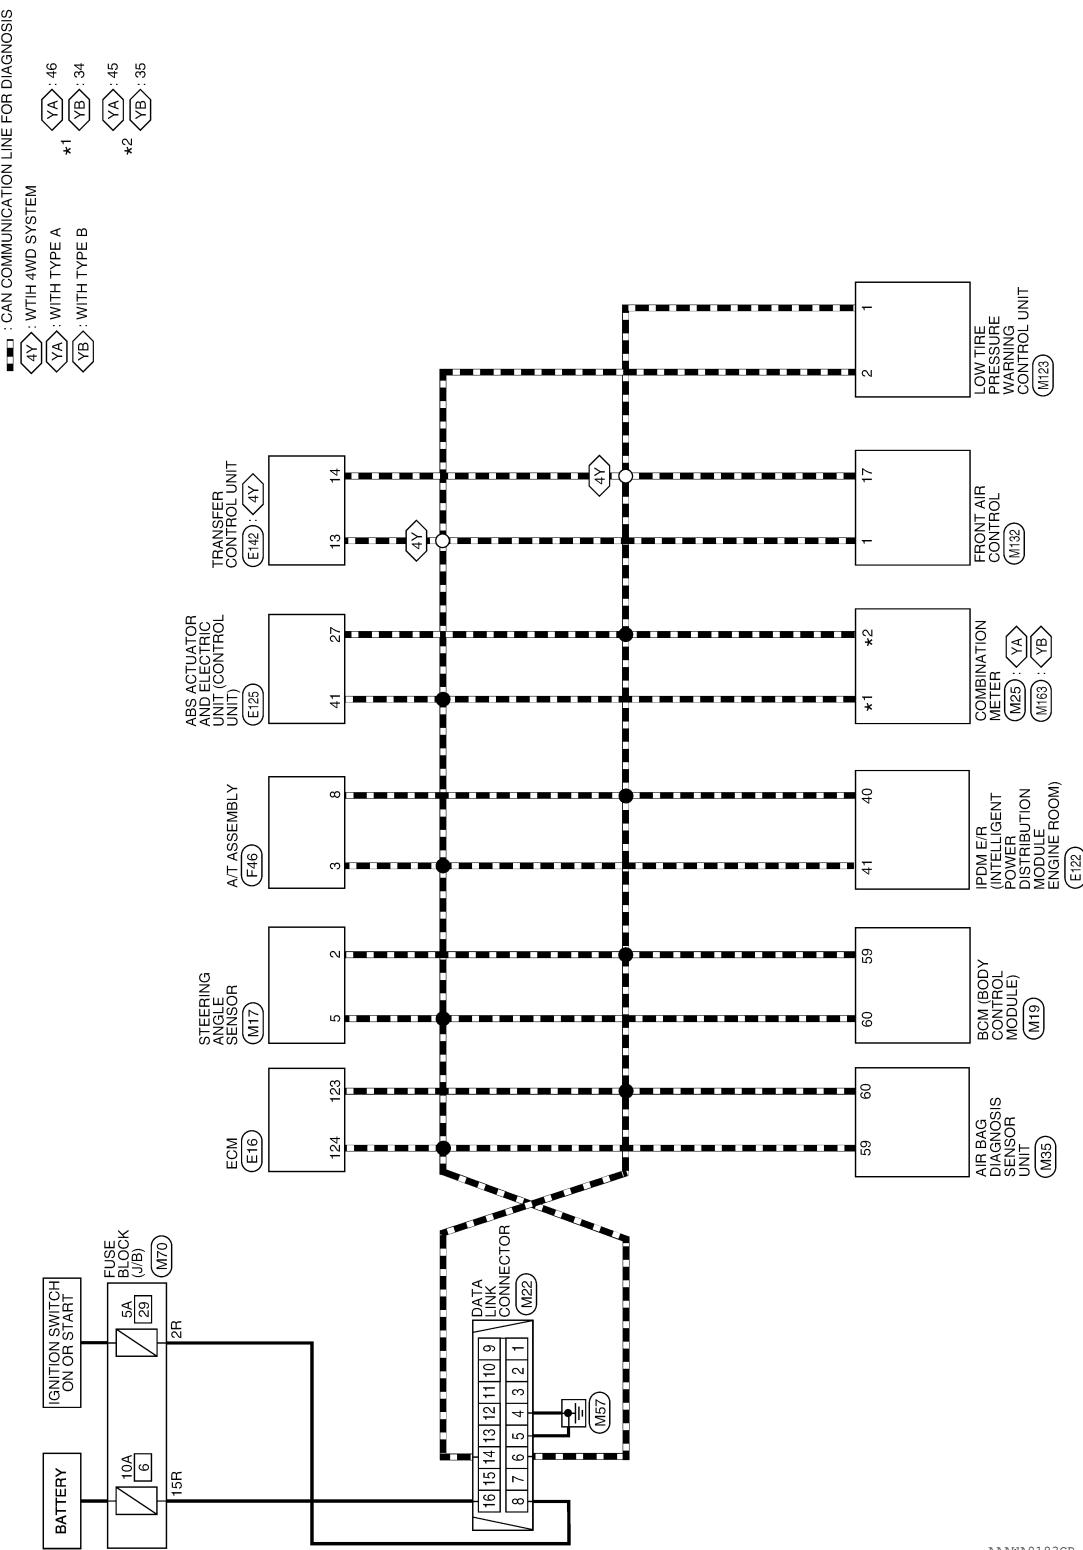

AAAWA0183GB

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement

INFOID:000000014724429

Required Procedure After Battery Disconnection

System	Item	Reference
Engine Control System	Idle Air Volume Learning	EC-200 (VK56VD)
Power Window Control System	Power Window System Initialization	PWC-34
Automatic Drive Positioner	Automatic Drive Positioner System Initialization	Refer to Owner's Manual.
Heater & Air Conditioning Control System	Temperature Setting Trimmer	HAC-67
	Foot Position Setting Trimmer	HAC-67
	Inlet Port Memory Function (FRE)	HAC-67
	Inlet Port Memory Function (REC)	HAC-68
Audio, Visual & Navigation System	Audio (Radio Preset)	Refer to Owner's Manual.
	Navigation System	Refer to Owner's Manual.