
ALPHABETICAL INDEX

Numerics

4WD BRANCH LINE CIRCUIT [LAN-182](#), [LAN-512](#),
[LAN-540](#), [LAN-575](#), [LAN-612](#), [LAN-653](#),
[LAN-691](#), [LAN-732](#), [LAN-775](#), [LAN-817](#),
[LAN-861](#), [LAN-903](#), [LAN-949](#), [LAN-997](#),
[LAN-1042](#), [LAN-1091](#), [LAN-1238](#), [LAN-1270](#),
[LAN-1312](#), [LAN-1355](#), [LAN-1400](#), [LAN-1446](#),
[LAN-1494](#), [LAN-1543](#)
4WD INDICATOR [DLN-111](#)
4WD INDICATOR CONTINUES BLINKING [DLN-114](#)
4WD MODE DOES NOT CHANGE [DLN-113](#)
4WD SHIFT SWITCH [DLN-121](#)
4WD SYSTEM [DLN-39](#)
4WD WARNING LAMP [DLN-110](#)
4WD WARNING LAMP BLINKS SLOWLY [DLN-115](#)

A

A-BAG BRANCH LINE CIRCUIT [LAN-194](#), [LAN-255](#),
[LAN-282](#), [LAN-318](#), [LAN-356](#), [LAN-398](#),
[LAN-438](#), [LAN-482](#), [LAN-519](#), [LAN-548](#),
[LAN-583](#), [LAN-621](#), [LAN-661](#), [LAN-699](#),
[LAN-740](#), [LAN-784](#), [LAN-826](#), [LAN-869](#),
[LAN-912](#), [LAN-958](#), [LAN-1006](#), [LAN-1051](#),
[LAN-1100](#), [LAN-1137](#), [LAN-1168](#), [LAN-1210](#),
[LAN-1245](#), [LAN-1278](#), [LAN-1320](#), [LAN-1364](#),
[LAN-1408](#), [LAN-1455](#), [LAN-1503](#), [LAN-1552](#),
[LAN-1600](#)
A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMIT [SRC-145](#)
A/C AUTO AMP. [HAC-35](#), [HAC-122](#), [ST-9](#)
A/C SWITCH ASSEMBLY [HAC-121](#)
A/T ASSEMBLY CONNECTORS [TM-238](#)
A/T CONTROL SYSTEM [TM-71](#), [TM-336](#)
A/T FLUID [TM-216](#), [TM-455](#)
A/T FLUID COOLER [TM-97](#), [TM-359](#)
A/T FLUID TEMPERATURE SENSOR 1 [TM-235](#)
A/T FLUID TEMPERATURE SENSOR 2 [TM-237](#)
A/T POSITION [TM-101](#), [TM-363](#)
A/T SHIFT LOCK SYSTEM [TM-83](#), [TM-348](#)
A/T SHIFT SELECTOR [TM-219](#), [TM-458](#)
ABBREVIATIONS [GI-14](#)
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) [BRC-48](#), [BRC-165](#)
ABS BRANCH LINE CIRCUIT . [LAN-183](#), [LAN-249](#),
[LAN-275](#), [LAN-310](#), [LAN-349](#), [LAN-390](#),
[LAN-430](#), [LAN-474](#), [LAN-513](#), [LAN-541](#),
[LAN-576](#), [LAN-613](#), [LAN-654](#), [LAN-692](#),
[LAN-733](#), [LAN-776](#), [LAN-818](#), [LAN-862](#),
[LAN-904](#), [LAN-950](#), [LAN-998](#), [LAN-1043](#),
[LAN-1092](#), [LAN-1131](#), [LAN-1161](#), [LAN-1202](#),
[LAN-1239](#), [LAN-1271](#), [LAN-1313](#), [LAN-1356](#),
[LAN-1401](#), [LAN-1447](#), [LAN-1495](#), [LAN-1544](#),
[LAN-1592](#)

ABS FUNCTION DOES NOT OPERATE . [BRC-155](#)
ABS WARNING LAMP [BRC-147](#)
AC 120 V OUTLET [PWO-50](#)
AC 120 V OUTLET MAIN SWITCH INDICATOR
CIRCUIT [PWO-42](#)
AC 120 V OUTLET MAIN SWITCH INDICATOR
DOES NOT TURN ON [PWO-45](#)
AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL
CIRCUIT [PWO-37](#)
AC 120 V OUTLET MAIN SWITCH POWER
SUPPLY CIRCUIT [PWO-36](#)
AC 120 V POWER OUTPUT CIRCUIT [PWO-39](#)
AC 120V OUTLET MAIN SW [PWO-49](#)
ACCELERATOR CONTROL SYSTEM [ACC-3](#)
ACCELERATOR PEDAL RELEASED POSITION
LEARNING [EC-198](#)
ACTION TEST [DAS-92](#)
ACTIVE GRILLE SHUTTER [EXT-14](#), [EXT-34](#)
ADAS CONTROL UNIT. [DAS-10](#), [DAS-49](#), [DAS-74](#)
ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) [BRC-69](#)
ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNIT [DAS-21](#)
ADDITIONAL SERVICE WHEN REPLACING
AROUND VIEW MONITOR CONTROL UNIT ..
[AV-330](#)
ADDITIONAL SERVICE WHEN REPLACING BCM
[DLK-74](#)
ADDITIONAL SERVICE WHEN REPLACING CAN
GATEWAY [LAN-231](#)
ADDITIONAL SERVICE WHEN REPLACING
COMBINATION METER [MWI-80](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT [SEC-67](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE & TCM [TM-357](#)
ADDITIONAL SERVICE WHEN REPLACING ECM
[EC-194](#), [EC-886](#)
ADDITIONAL SERVICE WHEN REPLACING LOW
TIRE PRESSURE WARNING CONTROL UNIT
[WT-24](#)
ADDITIONAL SERVICE WHEN REPLACING TCM
[TM-91](#)
ADDITIONAL SERVICE WHEN REPLACING TCU
[AV-414](#)
ADDITIONAL SERVICE WHEN REPLACING
TRANSMISSION ASSEMBLY .. [TM-92](#), [TM-356](#)
ADDITIONAL SERVICE WHEN REPLACING VVEL
CONTROL MODULE [EC-196](#)
ADJUSTMENT AND INSPECTION [EXL-129](#),
[EXL-287](#)
ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION [BRC-70](#)

ADP BRANCH LINE CIRCUIT [LAN-187](#), [LAN-314](#),
[LAN-394](#), [LAN-434](#), [LAN-478](#), [LAN-617](#),
[LAN-780](#), [LAN-822](#), [LAN-908](#), [LAN-954](#),
[LAN-1002](#), [LAN-1047](#), [LAN-1096](#), [LAN-1206](#),
[LAN-1360](#), [LAN-1451](#), [LAN-1499](#), [LAN-1548](#),
[LAN-1596](#)
ADP STEERING SWITCH..... [ADP-144](#)
ADP SYSTEM SYMPTOMS..... [ADP-138](#)
AIR BREATHER[DLN-135](#), [DLN-186](#), [DLN-217](#)
AIR BREATHER HOSE [TM-242](#), [TM-496](#)
AIR CLEANER AND AIR DUCT[EM-31](#), [EM-220](#)
AIR CLEANER FILTER.....[EM-26](#), [EM-201](#)
AIR FILTER..... [EM-209](#)
AIR INLET CONNECTION [EM-227](#)
AIR INTAKE CONNECTION..... [EM-229](#)
AIR LEAKS, AIR INTAKE AND EXHAUST
SYSTEMS [EM-206](#)
ALL DOORS DO NOT LOCK/UNLOCK OR TRUNK/
BACK DOOR DO NOT OPEN WITH REQUEST
SWITCH[DLK-127](#)
AMBIENT SENSOR [HAC-123](#), [HAC-231](#), [MWI-111](#),
[MWI-190](#)
AMBIENT SENSOR SIGNAL CIRCUIT [MWI-98](#),
[MWI-177](#)
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (DRIVER SIDE)..... [PWC-68](#)
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (PASSENGER SIDE)..... [PWC-69](#)
APPLICATION NOTICE.. [MWI-5](#), [MWI-113](#), [WCS-3](#)
AROUND VIEW MONITOR CONTROL UNIT
[AV-309](#), [AV-360](#)
AROUND VIEW MONITOR SYSTEM [AV-314](#),
[AV-358](#)
ASCD INDICATOR[EC-676](#)
ATP WARNING LAMP DOES NOT TURN ON.....
[DLN-116](#)
AUDIO AMP [AV-286](#)
AUDIO AMP..... [AV-188](#)
AUDIO SYSTEM [AV-61](#)
AUDIO UNIT [AV-24](#), [AV-66](#)
AUTO LIGHT SYSTEM[EXL-34](#), [EXL-190](#)
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY (DRIVER
SIDE)..... [PWC-70](#)
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY
(PASSENGER SIDE)..... [PWC-71](#)
AUTOMATIC AIR CONDITIONING SYSTEM
[HAC-42](#)
AUTOMATIC DRIVE POSITIONER..... [ADP-41](#)
AUTOMATIC DRIVE POSITIONER CONTROL UNIT
[ADP-37](#), [ADP-141](#)
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
[CCS-3](#)
AUXILIARY INPUT JACK...[AV-60](#), [AV-143](#), [AV-263](#)

AV BRANCH LINE CIRCUIT ... [LAN-200](#), [LAN-286](#),
[LAN-322](#), [LAN-360](#), [LAN-402](#), [LAN-442](#),
[LAN-486](#), [LAN-552](#), [LAN-587](#), [LAN-625](#),
[LAN-665](#), [LAN-703](#), [LAN-744](#), [LAN-788](#),
[LAN-830](#), [LAN-873](#), [LAN-916](#), [LAN-962](#),
[LAN-1010](#), [LAN-1055](#), [LAN-1104](#), [LAN-1172](#),
[LAN-1214](#), [LAN-1282](#), [LAN-1324](#), [LAN-1368](#),
[LAN-1412](#), [LAN-1459](#), [LAN-1507](#), [LAN-1556](#),
[LAN-1604](#)
AV CONTROL UNIT [AV-90](#), [AV-157](#), [AV-183](#),
[AV-277](#), [AV-359](#), [AV-373](#), [AV-390](#), [AV-438](#),
[AV-461](#)
AVM BRANCH LINE CIRCUIT [LAN-208](#), [LAN-447](#),
[LAN-493](#), [LAN-835](#), [LAN-969](#), [LAN-1060](#),
[LAN-1111](#), [LAN-1466](#), [LAN-1563](#), [LAN-1611](#)
AXLE SHAFT [RAX-5](#), [RAX-6](#)

B

B TERMINAL CIRCUIT [CHG-39](#), [STR-30](#)
B0001 DRIVER AIRBAG MODULE [SRC-60](#)
B0010, B0011 PASSENGER AIRBAG MODULE
[SRC-64](#)
B0020 SIDE AIRBAG MODULE LH [SRC-68](#)
B0021 SIDE CURTAIN AIR BAG MODULE LH.....
[SRC-71](#)
B0028 SIDE AIRBAG MODULE RH [SRC-74](#)
B0029 SIDE CURTAIN AIR BAG MODULE RH
[SRC-77](#)
B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH [SRC-80](#)
B0092 REAR SIDE AIR BAG SATELLITE SENSOR
LH [SRC-84](#)
B0093 FRONT DOOR SATELLITE SENSOR LH....
[SRC-88](#)
B0094 CRASH ZONE SENSOR..... [SRC-92](#)
B0096 FRONT SIDE AIR BAG SATELLITE
SENSOR RH [SRC-96](#)
B0097 REAR SIDE AIR BAG SATELLITE SENSOR
RH [SRC-100](#)
B0098 FRONT DOOR SATELLITE SENSOR RH ...
[SRC-105](#)
B00A0 OCCUPANT CLASSIFICATION SYSTEM
CONTROL UNIT [SRC-110](#)
B00D5 PASSENGER AIR BAG OFF INDICATOR ..
[SRC-117](#)
B130C TCU [AV-417](#)
B1400, B1401, B1402, B1403, B1404, B1405 AIR
BAG DIAGNOSIS SENSOR UNIT [SRC-120](#)
B1406, B1407, B1408, B1409, B1410 AIR BAG
DIAGNOSIS SENSOR UNIT [SRC-122](#)
B1411, B1412, B1413, B1414, B1415 AIR BAG
DIAGNOSIS SENSOR UNIT [SRC-124](#)
B1416, B1417, B1418, B1419, B1420 AIR BAG
DIAGNOSIS SENSOR UNIT [SRC-126](#)
B142A IGNITION VOLTAGE..... [SRC-128](#)
B142X COLLISION DETECTION [SRC-131](#)

B1430 SEAT BELT PRE-TENSIONER	SRC-133	B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR	HAC-88, HAC-201
B1431 SEAT BELT PRE-TENSIONER	SRC-136	B263D, B263E, B263F INTAKE DOOR MOTOR	HAC-90, HAC-203
B1500 DOOR SATELLITE SENSOR	SRC-139	B26F1 IGNITION RELAY	PCS-84
B2098 IGNITION RELAY ON STUCK	PCS-38	B26F2 IGNITION RELAY	PCS-86
B2099 IGNITION RELAY OFF STUCK	PCS-40	B26F3 STARTER CONTROL RELAY	SEC-123
B210B STARTER CONTROL RELAY	SEC-127	B26F4 STARTER CONTROL RELAY	SEC-124
B210C STARTER CONTROL RELAY	SEC-128	B26F6 BCM	PCS-88
B210D STARTER RELAY	SEC-129	B26F7 BCM	SEC-126
B210E STARTER RELAY	SEC-131	B26FC KEY REGISTRATION	SEC-125
B210F TRANSMISSION RANGE SWITCH	SEC-133	B26FD SHIFT LOCK SOLENOID	DLK-83
B2110 TRANSMISSION RANGE SWITCH	SEC-136	B26FE HOOD SWITCH	DLK-85
B2112 SLIDING MOTOR	ADP-67	B26FF REMOTE KEYLESS ENTRY RECEIVER ...	DLK-88
B2113 RECLINING MOTOR	ADP-69	B2720 CORNER SENSOR [RL]	SN-36
B2116 TILT MOTOR	ADP-71	B2721 CENTER SENSOR [RL]	SN-38
B2128 UART COMMUNICATION LINE	ADP-73	B2722 CENTER SENSOR [RR]	SN-40
B2130 EEPROM	ADP-75	B2723 CORNER SENSOR [RR]	SN-42
B2192 ID DISCORD, IMMU-ECM	SEC-78	B2724 SONAR CONTROL UNIT	SN-44
B2193 CHAIN OF ECM-IMMU	SEC-80	B2728 LED	SN-45
B2195 ANTI-SCANNING	SEC-82	B2729 CORNER SENSOR [FL]	SN-47
B2196 DONGLE UNIT	SEC-84	B272A CENTER SENSOR [FL]	SN-49
B2198 NATS ANTENNA AMP	SEC-86	B272B CENTER SENSOR [FR]	SN-51
B2205 VEHICLE SPEED	MWI-84, MWI-165	B272C CORNER SENSOR [FR]	SN-53
B2267 ENGINE SPEED	MWI-85, MWI-166	B272D FRONT BUZZER	SN-55
B2268 WATER TEMP	MWI-86, MWI-167	B2796 CONTROL COMMUNICATION	HAC-92
B2555 STOP LAMP	SEC-88	BACK-UP LAMP	EXL-82, EXL-238
B2556 PUSH-BUTTON IGNITION SWITCH	SEC-93	BASIC INSPECTION	EC-190, EC-904
B2557 VEHICLE SPEED	SEC-96	BATTERY	PG-175, PG-184
B2560 STARTER CONTROL RELAY	SEC-98	BATTERY CURRENT SENSOR	PG-194
B2562 LOW VOLTAGE	BCS-69	BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT	INL-55
B2578, B2579 IN-VEHICLE SENSOR	HAC-72	BATTERY TERMINAL WITH FUSIBLE LINK	PG-193
B257B, B257C AMBIENT SENSOR	HAC-75, HAC-193	BCM	BCS-32, BCS-54, DLK-38
B2581, B2582 INTAKE SENSOR	HAC-78, HAC-196	BCM (BODY CONTROL MODULE)	ADP-40, BCS-79, INL-13, MWI-37, MWI-140, PCS-97, PWC-15, SEC-154
B259A ROOM LAMP FUSE	BCS-70	BCM BRANCH LINE CIRCUIT	LAN-205, LAN-260, LAN-289, LAN-326, LAN-363, LAN-406, LAN-446, LAN-490, LAN-524, LAN-555, LAN-590, LAN-629, LAN-668, LAN-706, LAN-747, LAN-792, LAN-834, LAN-876, LAN-920, LAN-966, LAN-1014, LAN-1059, LAN-1108, LAN-1141, LAN-1175, LAN-1218, LAN-1249, LAN-1285, LAN-1327, LAN-1372, LAN-1415, LAN-1463, LAN-1511, LAN-1560, LAN-1608
B2600 CONFIG ERROR	LAN-235	BCM, COMBINATION METER	WCS-24
B2601 SHIFT POSITION	SEC-100	BCM, IPDM E/RDEF-14, EXL-26, EXL-176, PCS-56, WT-18, WW-22	
B2602 SHIFT POSITION	SEC-103	BED LAMP	INL-75
B2603 SHIFT POSITION	SEC-106	BED RAILS AND TRIM	EXT-51
B2604 SHIFT POSITION	SEC-110	BLIND SPOT WARNING INDICATOR	DAS-122
B2605 SHIFT POSITION	SEC-113	BLOCK STIFFENING PLATE	EM-310
B2608 STARTER RELAY	SEC-116	BLOWER UNIT	VTL-16
B260A IGNITION RELAY	PCS-79		
B260F ENGINE STATUS	SEC-118		
B261A PUSH-BUTTON IGNITION SWITCH	PCS-81		
B261B REMOTE ENGINE START	SEC-120		
B261E VEHICLE TYPE	SEC-121		
B2621 INSIDE ANTENNA	DLK-77		
B2622 INSIDE ANTENNA	DLK-80		
B2626 OUTSIDE ANTENNA	DLK-92		
B2627 OUTSIDE ANTENNA	DLK-95		
B2630, B2631 SUNLOAD SENSOR	HAC-81		
B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE)	HAC-84, HAC-199		
B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE)	HAC-86		

BODY ALIGNMENT [BRM-174](#), [BRM-250](#)
 BODY COMPONENT PARTS [BRM-126](#), [BRM-200](#)
 BODY CONSTRUCTION [BRM-139](#), [BRM-213](#)
 BODY EXTERIOR PAINT COLOR [BRM-114](#),
[BRM-189](#)
 BODY MAINTENANCE [MA-49](#), [MA-95](#)
 BODY SEALING [BRM-135](#), [BRM-209](#)
 BODY SIDE TRIM [INT-20](#)
 BODY WELDING AND PRECAUTIONS [BRM-36](#)
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON [EXL-128](#), [EXL-286](#)
 BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
 ON [EXL-125](#), [EXL-283](#)
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON [EXL-126](#), [EXL-284](#)
 BRAKE CONTROL SYSTEM [BRC-56](#)
 BRAKE FLUID [BR-12](#)
 BRAKE PEDAL [BR-10](#), [BR-21](#)
 BRAKE PEDAL POSITION SWITCH [EC-677](#)
 BRAKE PIPING [BR-23](#)
 BRAKE WARNING LAMP [BRC-148](#)
 BULB CHECK RELAY [TTS-21](#)
 BULB SPECIFICATIONS [INL-78](#)
 BUZZER [SN-67](#)

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
[BRC-74](#)
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
[BRC-79](#)
 C1109 POWER AND GROUND SYSTEM . [BRC-86](#)
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....
[BRC-88](#)
 C1115 WHEEL SENSOR..... [BRC-91](#)
 C1116 STOP LAMP SWITCH..... [BRC-98](#)
 C1118 TRANSFER CONTROL UNIT [BRC-104](#)
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM..... [BRC-105](#)
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM..... [BRC-107](#)
 C1130 ENGINE SIGNAL [BRC-109](#)
 C1140 ACTUATOR RELAY SYSTEM..... [BRC-111](#)
 C1142 PRESS SENSOR..... [BRC-113](#)
 C1143 STEERING ANGLE SENSOR..... [BRC-116](#)
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT [BRC-120](#)
 C1145, C1146 YAW RATE/SIDE G SENSOR
[BRC-122](#)
 C1155 BRAKE FLUID LEVEL SWITCH ... [BRC-126](#)
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION..... [BRC-130](#)
 C1164, C1165 CV SYSTEM [BRC-132](#)
 C1166, C1167 SV SYSTEM [BRC-134](#)
 C1170 VARIANT CODING..... [BRC-136](#)
 C1187 DIFFERENTIAL LOCK CONTROL UNIT
[BRC-137](#)

C118E ACCUMULATOR..... [BRC-138](#)
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSURE [WT-30](#)
 C1708, C1709, C1710, C1711 TIRE PRESSURE
 SENSOR [WT-32](#)
 C1716, C1717, C1718, C1719 TIRE PRESSURE
 SENSOR [WT-35](#)
 C1729 VEHICLE SPEED SIGNAL [WT-37](#)
 C1730, C1731, C1732, C1733 FLAT TIRE... [WT-38](#)
 C1734 CONTROL UNIT [WT-40](#)
 C1761, C1762, C1763, C1764 TIRE PRESSURE
 SENSOR [WT-42](#)
 C1765, C1766, C1767, C1768 TIRE PRESSURE
 SENSOR [WT-44](#)
 C1769 CONFIGURATION SETTING..... [WT-46](#)
 C1770, C1771, C1772, C1773 G SENSOR . [WT-48](#)
 C1A00 CONTROL UNIT [DAS-24](#)
 C1A01 POWER SUPPLY CIRCUIT 1, C1A02
 POWER SUPPLY CIRCUIT 2..... [DAS-25](#)
 C1A03 VEHICLE SPEED SENSOR [DAS-26](#)
 C1B50 SIDE RADAR MALFUNCTION..... [DAS-94](#)
 C1B51 BLIND SPOT WARNING INDICATOR
 SHORT CIRCUIT..... [DAS-95](#)
 C1B52 BLIND SPOT WARNING INDICATOR OPEN
 CIRCUIT [DAS-97](#)
 C1B53 SIDE RADAR RIGHT MALFUNCTION.....
[DAS-28](#)
 C1B54 SIDE RADAR LEFT MALFUNCTION [DAS-29](#)
 C1B55 RADAR BLOCKAGE [DAS-99](#)
 CALIBRATION OF DECEL G SENSOR [BRC-72](#),
[TM-358](#)
 CAMSHAFT [EM-93](#), [EM-350](#)
 CAMSHAFT DRIVE CHAIN [EM-373](#)
 CAMSHAFT POSITION SENSOR..... [EM-323](#)
 CAMSHAFT VALVE CLEARANCE [EM-16](#)
 CAN COMMUNICATION CIRCUIT [LAN-214](#),
[LAN-261](#), [LAN-368](#), [LAN-411](#), [LAN-497](#),
[LAN-525](#), [LAN-673](#), [LAN-752](#), [LAN-797](#),
[LAN-883](#), [LAN-973](#), [LAN-1021](#), [LAN-1117](#),
[LAN-1142](#), [LAN-1180](#), [LAN-1223](#), [LAN-1250](#),
[LAN-1290](#), [LAN-1332](#), [LAN-1377](#), [LAN-1422](#),
[LAN-1470](#), [LAN-1518](#), [LAN-1569](#), [LAN-1615](#)
 CAN COMMUNICATION CIRCUIT 1..... [LAN-216](#),
[LAN-292](#), [LAN-329](#), [LAN-451](#), [LAN-558](#),
[LAN-593](#), [LAN-632](#), [LAN-711](#), [LAN-839](#),
[LAN-925](#), [LAN-1066](#)
 CAN COMMUNICATION CIRCUIT 2..... [LAN-218](#),
[LAN-294](#), [LAN-331](#), [LAN-453](#), [LAN-560](#),
[LAN-595](#), [LAN-634](#), [LAN-713](#), [LAN-841](#),
[LAN-927](#), [LAN-1068](#)
 CAN GATEWAY [LAN-227](#), [LAN-238](#)
 CAN GATEWAY SYSTEM [LAN-229](#)
 CAN SYSTEM (WITH CUMMINS 5.0L AND WITH
 NAVIGATION WITH BLIND SPOT WARNING
 SYSTEMS) [LAN-98](#)

DIAGNOSIS SYSTEM (AIR BAG).....	SRC-15	DIFFERENTIAL LOCK POSITION SWITCH	DLN-351, DLN-486
DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)	AV-306	DIFFERENTIAL LOCK SYSTEM.....	DLN-277, DLN-414
DIAGNOSIS SYSTEM (AUDIO UNIT).....	AV-19	DIRECT CLUTCH	TM-600
DIAGNOSIS SYSTEM (AV CONTROL UNIT).....	AV-87, AV-180, AV-370	DISPLAY AUDIO	AV-27
DIAGNOSIS SYSTEM (BCM)	BCS-19, DEF-9, DLK-32, EXL-17, EXL-167, HAC-30, HAC-156, INL-9, PCS-51, PWC-12, SEC-18, WCS-21, WW-15	DLC BRANCH LINE CIRCUIT .	LAN-188, LAN-253, LAN-517, LAN-1135, LAN-1243
DIAGNOSIS SYSTEM (CAN GATEWAY).....	LAN-225	DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	LAN-189, LAN-279, LAN-315, LAN-435, LAN-545, LAN-580, LAN-618, LAN-696, LAN-823, LAN-909, LAN-1048
DIAGNOSIS SYSTEM (COMBINATION METER)...	MWI-25, MWI-129, WCS-11	DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	LAN-190, LAN-280, LAN-316, LAN-436, LAN-546, LAN-581, LAN-619, LAN-697, LAN-824, LAN-910, LAN-1049
DIAGNOSIS SYSTEM (DIFFERENTIAL LOCK CONTROL UNIT)	DLN-283, DLN-419	DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	LAN-191, LAN-353, LAN-395, LAN-479, LAN-658, LAN-737, LAN-781, LAN-866, LAN-955, LAN-1003, LAN-1097, LAN-1165, LAN-1207, LAN-1275, LAN-1317, LAN-1361, LAN-1405, LAN-1452, LAN-1500, LAN-1549, LAN-1597
DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)	ADP-27	DLC BRANCH LINE CIRCUIT (ITS COMMUNICATION CIRCUIT)	LAN-192, LAN-354, LAN-396, LAN-480, LAN-659, LAN-738, LAN-782, LAN-867, LAN-956, LAN-1004, LAN-1098, LAN-1166, LAN-1208, LAN-1276, LAN-1318, LAN-1362, LAN-1406, LAN-1453, LAN-1501, LAN-1550, LAN-1598
DIAGNOSIS SYSTEM (ECM)	EC-84, EC-801	DOC AND DPF ASSEMBLY	EX-41
DIAGNOSIS SYSTEM (HVAC).....	HAC-155	DOES NOT OPERATE BY KEY CYLINDER SWITCH	PWC-73
DIAGNOSIS SYSTEM (IPDM E/R).....	DEF-12, EXL-22, EXL-172, HAC-33, HAC-159, PCS-10, SEC-24, WW-18	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ALL I-KEY/REQ SW/PUSH SW).....	DLK-131
DIAGNOSIS SYSTEM (SIDE RADAR LH) .	DAS-72	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ONE I-KEY/REQ SW/ PUSH SW).....	DLK-139
DIAGNOSIS SYSTEM (SIDE RADAR RH) .	DAS-73	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ALL KEYS).....	DLK-129
DIAGNOSIS SYSTEM (SONAR CONTROL UNIT) .	SN-11	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ONE KEY)	SEC-149
DIAGNOSIS SYSTEM (TCM).....	TM-42, TM-317	DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH AND INTELLIGENT KEY .	DLK-135
DIAGNOSIS SYSTEM (TCU).....	AV-400	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY	DLK-134
DIAGNOSIS SYSTEM (TIRE PRESSURE MONITORING SYSTEM)	WT-12	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY (ONE KEY).....	DLK-138
DIAGNOSIS SYSTEM (TRAILER BRAKE CONTROL UNIT)	TTS-9	DOOR KEY CYLINDER SWITCH.....	DLK-110, PWC-52
DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)	DLN-31	DOOR LOCK ACTUATOR.....	DLK-102
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] ...	BRC-43	DOOR LOCK AND UNLOCK SWITCH	DLK-100
DIESEL PARTICLE FILTER REGENERATION	EC-888		
DIESEL PARTICULATE FILTER DATA CLEAR	EC-893		
DIFF BRANCH LINE CIRCUIT	LAN-210, LAN-591, LAN-707, LAN-750, LAN-879, LAN-921, LAN-1017, LAN-1062, LAN-1113, LAN-1330, LAN-1418, LAN-1514, LAN-1565		
DIFF LOCK INDICATOR LAMP DOES NOT TURN ON WITH DIFFERENTIAL LOCK SWITCHED ON	DLN-345, DLN-480		
DIFF LOCK INDICATOR LAMP FLASHES WHILE DRIVING	DLN-346, DLN-481		
DIFFERENTIAL LOCK CONTROL UNIT	DLN-286, DLN-349, DLN-421, DLN-484		
DIFFERENTIAL LOCK INDICATOR LAMP	DLN-344, DLN-479		
DIFFERENTIAL LOCK MODE SWITCH .	DLN-350, DLN-485		

DOOR MIRROR.....MIR-7, MIR-30
DOOR MIRROR ACTUATOR MIR-36
DOOR MIRROR DEFOGGERDEF-46
DOOR MIRROR DEFOGGER DOES NOT
OPERATEDEF-55
DOOR MIRROR DEFOGGER DOES NOT
OPERATE BUT REAR WINDOW DEFOGGER
OPERATES.....DEF-56
DOOR MIRROR DEFOGGER LH.....DEF-47
DOOR MIRROR DEFOGGER RHDEF-49
DOOR MIRROR GLASS.....MIR-33
DOOR MIRROR MOTORADP-133
DOOR MIRROR REAR FINISHER.....MIR-37
DOOR MIRROR REMOTE CONTROL SWITCH....
ADP-94, MIR-27, MIR-38
DOOR MIRROR TURN SIGNAL LAMP ... EXL-143,
EXL-302
DOOR MOTORHAC-100, HAC-128, HAC-210,
HAC-234
DOOR MOTOR COMMUNICATION CIRCUIT.....
HAC-102, HAC-212
DOOR OUTSIDE MOLDING.....EXT-48
DOOR REQUEST SWITCH.....DLK-114, DLK-195
DOOR SWITCHDLK-98, DLK-191, PWC-50
DPF DIFFERENTIAL PRESSURE SENSOR EX-58
DPF DIFFERENTIAL PRESSURE SENSOR TUBES
EX-61
DPF TEMPERATURE SENSOR MODULE...EX-51
DRIVE BELTEM-197
DRIVE BELT AUTO TENSIONER AND IDLER
PULLEYEM-25
DRIVE BELTSEM-23
DRIVE PLATEEM-117
DRIVER AIR BAG MODULE.....SR-12
DRIVER ASSISTANCE SYSTEM SYMPTOMS.....
DAS-115
DRIVER ASSISTANCE SYSTEMSDAS-14, DAS-82
DRIVER SEAT CONTROL UNIT ADP-30, ADP-140
DRIVER SIDE POWER WINDOW ALONE DOES
NOT OPERATE.....PWC-64
DUCTS AND GRILLESVTL-9

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE...
WT-62
ECM BRANCH LINE CIRCUIT LAN-181, LAN-248,
LAN-274, LAN-309, LAN-348, LAN-389,
LAN-429, LAN-473, LAN-511, LAN-539,
LAN-574, LAN-611, LAN-652, LAN-690,
LAN-731, LAN-774, LAN-816, LAN-860,
LAN-902, LAN-948, LAN-996, LAN-1041,
LAN-1090, LAN-1130, LAN-1160, LAN-1201,
LAN-1237, LAN-1269, LAN-1311, LAN-1354,
LAN-1399, LAN-1445, LAN-1493, LAN-1542,
LAN-1591
ECM, IPDM E/R, BCM HAC-41, HAC-166, SEC-26

EGR BYPASS TUBEEM-293
EGR BYPASS VALVEEM-289
EGR COOLEREM-275
EGR COOLER COOLANT LINES.....EM-282
EGR COOLER MOUNTING BRACKET.....EM-298
EGR TEMPERATURE SENSOREM-236
EGR VALVEEM-286
ELECTRICAL LOAD SIGNALEC-683
ELECTRICAL UNITS LOCATIONPG-5
ENCODERPWC-45
ENGINE ASSEMBLYEM-120, EM-174, EM-493
ENGINE CAN NOT STARTSEC-145
ENGINE CHARGE-AIR COOLER OUTLET OUTLET
PRESSURE/TEMPERATURE SENSOREM-233
ENGINE CONTROL SYSTEMEC-155, EC-856
ENGINE CONTROL SYSTEM SYMPTOMSEC-716,
EC-1986
ENGINE COOLANTCO-9, CO-45
ENGINE COOLANT TEMPERATURE SENSOR....
EM-347
ENGINE COOLING FAN ASSEMBLYCO-53
ENGINE COOLING SYSTEMCO-38
ENGINE COVER.....EM-30
ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLESEC-146
ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE (ONE KEY).....
SEC-148
ENGINE MAINTENANCEMA-16, MA-65
ENGINE OILLU-9, LU-33
ENGINE OIL DIPSTICK TUBE.....LU-42
ENGINE STAND SETTINGEM-126, EM-500
ENGINE UNITEM-502
EVAP CANISTER.....FL-14
EVAP CANISTER FILTER.....FL-16
EVAP CANISTER VENT CONTROL VALVE..FL-17
EVAP CONTROL SYSTEM PRESSURE SENSOR
FL-19
EVAP LEAK CHECKEC-724
EXCESSIVE ABS FUNCTION OPERATION
FREQUENCYBRC-152
EXHAUST DOWNPIPE.....EX-28
EXHAUST GAS PRESSURE SENSOR.....EM-304
EXHAUST MANIFOLD.....EM-265
EXHAUST MANIFOLD AND THREE WAY
CATALYSTEM-45
EXHAUST PRESSURE SENSOR TUBE...EM-301
EXHAUST SYSTEM.EC-1990, EX-5, EX-6, EX-10,
EX-19, EX-24
EXHAUST TRANSFER TUBEEM-271
EXTERIOR LIGHTING SYSTEM SYMPTOMS.....
EXL-121, EXL-279

F

FAN OVERRIDE TESTEC-903
FAN SPACER AND PULLEYCO-55

FENDER PROTECTOR	EXT-41	FRONT SPEAKER	AV-282
FLEXPLATE	EM-388	FRONT SUSPENSION ASSEMBLY	FSU-6
FLOOR TRIM	INT-30	FRONT TWEETER	AV-47, AV-67, AV-132, AV-159, AV-236, AV-279
FLUID COOLER SYSTEM	TM-243, TM-498	FRONT WASHER MOTOR	WW-55
FLYWHEEL HOUSING	EM-382	FRONT WIPER	WW-47
FOOT LAMP	INL-74	FRONT WIPER AND WASHER SYSTEM	WW-23
FOOT LAMP CIRCUIT	INL-63	FRONT WIPER DOES NOT OPERATE	WW-45
FRAME REPAIR	BRM-97	FRONT WIPER MOTOR GROUND CIRCUIT	WW-37
FRONT AIR CONTROL	HAC-161, HAC-230	FRONT WIPER MOTOR HI CIRCUIT	WW-34
FRONT BLOWER MOTOR	HAC-104, HAC-131, HAC-213, HAC-237	FRONT WIPER MOTOR LO CIRCUIT	WW-32
FRONT BRAKE CALIPER	BR-56	FRONT WIPER STOP POSITION SIGNAL CIRCUIT	WW-36
FRONT BUMPER	EXT-24	FUEL DRAIN LINES	EM-475
FRONT CAMERA	AV-361	FUEL FILLER LID	DLK-186
FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR	TM-588	FUEL FILTER (STAGE 1)	FL-39
FRONT COMBINATION LAMP	EXL-133, EXL-148, EXL-291, EXL-307	FUEL FILTER (STAGE 2)	FL-41
FRONT COVER	EM-337	FUEL FILTER HOUSING (STAGE 1)	FL-43
FRONT DIFFERENTIAL GEAR OIL	DLN-182, DLN-212	FUEL FILTER HOUSING (STAGE 2)	FL-46
FRONT DISC BRAKE	BR-8, BR-17, BR-37	FUEL INJECTOR	EC-685, EM-435
FRONT DOOR	DLK-156	FUEL INJECTOR AND FUEL TUBE	EM-57
FRONT DOOR FINISHER	INT-14	FUEL LEVEL SENSOR SIGNAL CIRCUIT	MWI-91, MWI-172
FRONT DOOR GLASS	GW-14	FUEL LEVEL SENSOR UNIT	FL-36
FRONT DOOR GLASS REGULATOR	GW-16	FUEL LEVEL SENSOR UNIT AND FUEL PUMP ASSEMBLY	FL-6
FRONT DOOR LOCK	DLK-172	FUEL LINE	FL-30
FRONT DOOR SPEAKER	AV-49, AV-68, AV-134, AV-160, AV-244, AV-281	FUEL PRESSURE	EC-205
FRONT DRIVE SHAFT	FAX-18, FAX-21	FUEL PRESSURE SENSOR	FL-56
FRONT DRIVE SHAFT BOOT	FAX-11	FUEL PUMP	EM-429
FRONT FENDER	DLK-154	FUEL PUMP ACTUATOR	EM-484
FRONT FINAL DRIVEN	DLN-191, DLN-193, DLN-220, DLN-224	FUEL PUMP CONTROL MODULE (FPCM)	EC-729
FRONT FOG LAMP	EXL-53, EXL-137, EXL-209, EXL-295	FUEL RAIL	EM-450
FRONT FOG LAMP CIRCUIT ...	EXL-111, EXL-269	FUEL RAIL PRESSURE RELIEF VALVE ...	EM-481
FRONT FOG LAMP SWITCH ...	EXL-147, EXL-306	FUEL RAIL PRESSURE SENSOR	EM-457
FRONT GRILLE	EXT-32	FUEL RAIL SUPPLY LINE (HIGH PRESSURE)	EM-467
FRONT OIL SEAL ...	DLN-122, DLN-184, DLN-215, DLN-250, DLN-354, DLN-386, DLN-489	FUEL RAIL TO FUEL RAIL SUPPLY LINE (HIGH PRESSURE)	EM-471
FRONT PASSENGER AIR BAG MODULE ...	SR-17	FUEL SUPPLY PIPE	EM-460
FRONT PASSENGER AIR BAG OFF INDICATOR	SR-40	FUEL SYSTEM	EM-213, FL-5, FL-24
FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE	PWC-65	FUEL TANK	FL-9, FL-32
FRONT PILLAR SPEAKER	AV-241	FUEL TANK INLET VALVE	FL-29
FRONT POWER WINDOW MOTOR	GW-19	FUEL TEMPERATURE SENSOR	FL-54
FRONT PROPELLER SHAFT	DLN-147, DLN-149, DLN-156, DLN-158	FUEL-WATER SEPERATOR	FL-31, FL-50
FRONT ROOM/MAP LAMP ASSEMBLY	INL-68	FUSE BLOCK - JUNCTION BOX (J/B)	PG-164
FRONT SEAT	SE-95, SE-118	FUSE INSPECTION	PG-179
FRONT SEAT BELT	SB-8	FUSE, FUSIBLE LINK AND RELAY BOX ..	PG-165
FRONT SEAT BELT BUCKLE SWITCH	SR-39	FUSIBLE LINK INSPECTION	PG-183
FRONT SIDE MARKER LAMP CIRCUIT	EXL-105, EXL-263		

G

GENERAL MAINTENANCE	MA-7, MA-56
GENERATOR	CHG-46, CHG-50
GLOVE BOX ASSEMBLY AND HOUSING	IP-21
GLOVE BOX LAMP	INL-71

GLOW CONTROL UNIT	EC-1996
GLOW PLUG	EM-211, EM-259
GOOSENECK HITCH	TTS-23
GPS ANTENNA	AV-163, AV-288
GROUND	PG-110

H

HANDLING PRECAUTION	DAS-68
HANDLING PRECAUTIONS FOR PLASTICS	BRM-117, BRM-192
HARNESS	PG-127
HAZARD FUNCTION	DLK-121
HAZARD SWITCH ...	EXL-119, EXL-140, EXL-277, EXL-298
HEADLAMP	EXL-27, EXL-177
HEADLAMP (HI) CIRCUIT	EXL-97, EXL-254
HEADLAMP (LO) CIRCUIT	EXL-99, EXL-256
HEADLAMP AIMING SWITCH	EXL-300
HEADLAMP AIMING SYSTEM	EXL-184
HEADLINING	INT-32
HEADREST DISPLAY UNIT	AV-463
HEAT SHIELD	EM-262, EX-32
HEATED SEAT	SE-42
HEATED SEAT SWITCH	SE-107
HEATED STEERING WHEEL	ST-10
HEATED STEERING WHEEL SWITCH	ST-76
HEATED STEERING WHEEL SWITCH INDICATOR LAMP	ST-30
HEATED STEERING WHEEL SYSTEM	ST-26
HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS ...	HAC-113, HAC-222
HEATING AND COOLING UNIT ASSEMBLY	HA-48
HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS	DLN-112
HIGH AND LOW REVERSE CLUTCH	TM-598
HIGH PRESSURE FUEL PUMP	EC-691
HIGH PRESSURE FUEL PUMP AND FUEL HOSE	EM-52
HIGH-MOUNTED STOP LAMP	EXL-144, EXL-303
HILL DESCENT CONTROL SWITCH	BRC-171
HOLE COVER	ST-52
HOLE COVER SEAL	ST-50
HOMELINK UNIVERSAL TRANSCEIVER	DLK-54
HOOD	DLK-144
HOOD LOCK	DLK-170
HOOD SWITCH	DLK-122
HORN	HRN-3, HRN-7
HORN FUNCTION	SEC-143
HOW TO ERASE PERMANENT DTC	EC-214, EC-912, TM-93
HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS	GI-9
HOW TO SELECT PISTON AND BEARING	EM-147
HOW TO SET SRT CODE	EC-208, EC-906
HOW TO USE THIS MANUAL	GI-3
HOW TO USE THIS SECTION	LAN-43, LAN-58

HVAC BRANCH LINE CIRCUIT	LAN-203, LAN-258, LAN-288, LAN-325, LAN-362, LAN-405, LAN-445, LAN-489, LAN-522, LAN-554, LAN-589, LAN-628, LAN-667, LAN-705, LAN-746, LAN-791, LAN-833, LAN-875, LAN-919, LAN-965, LAN-1013, LAN-1058, LAN-1107, LAN-1140, LAN-1174, LAN-1217, LAN-1248, LAN-1284, LAN-1326, LAN-1371, LAN-1414, LAN-1462, LAN-1510, LAN-1559, LAN-1607
--------------------------	--

HYDRAULIC BOOSTER ASSEMBLY	BR-16, BR-32, BR-51
----------------------------	---------------------

HYDRAULIC LASH ADJUSTER	EM-330
HYDRAULIC LINE	ST-69

I

ICC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	LAN-197, LAN-357, LAN-399, LAN-483, LAN-662, LAN-741, LAN-785, LAN-870, LAN-959, LAN-1007, LAN-1101, LAN-1169, LAN-1211, LAN-1279, LAN-1321, LAN-1365, LAN-1409, LAN-1456, LAN-1504, LAN-1553, LAN-1601
---	---

ICC BRANCH LINE CIRCUIT (ITS COMMUNICATION CIRCUIT)	LAN-198, LAN-358, LAN-400, LAN-484, LAN-663, LAN-742, LAN-786, LAN-871, LAN-960, LAN-1008, LAN-1102, LAN-1170, LAN-1212, LAN-1280, LAN-1322, LAN-1366, LAN-1410, LAN-1457, LAN-1505, LAN-1554, LAN-1602
---	---

ID REGISTRATION CANNOT BE COMPLETED....	WT-61
---	-------

ID REGISTRATION PROCEDURE	WT-25
---------------------------------	-------

IDENTIFICATION INFORMATION	GI-34
----------------------------------	-------

IDLE AIR VOLUME LEARNING	EC-200
--------------------------------	--------

IDLE SPEED	EC-722, EC-1989
------------------	-----------------

IGNITION COIL	EM-34
---------------------	-------

IGNITION SIGNAL	EC-695
-----------------------	--------

IGNITION TIMING	EC-723
-----------------------	--------

ILLUMINATION	INL-33
--------------------	--------

IN-CABIN MICROFILTER	VTL-7
----------------------------	-------

IN-VEHICLE SENSOR	HAC-124
-------------------------	---------

INFORMATION DISPLAY (ASCD)	EC-700
----------------------------------	--------

INJECTOR ADJUSTMENT VALUE REGISTRATION	EC-894
--	--------

INJECTOR SUPPLY LINES (HIGH PRESSURE)...	EM-462
--	--------

INLET NOx SENSOR	EX-45
------------------------	-------

INPUT SPEED SENSOR	TM-227
--------------------------	--------

INSIDE KEY ANTENNA	DLK-192
--------------------------	---------

INSIDE MIRROR	MIR-21, MIR-28
---------------------	----------------

INSTRUMENT LOWER PANEL LH	IP-22
---------------------------------	-------

INSTRUMENT PANEL ASSEMBLY	IP-14
---------------------------------	-------

INSUFFICIENT COOLING	HAC-115, HAC-224
----------------------------	------------------

INSUFFICIENT HEATING	HAC-117, HAC-226
----------------------------	------------------

INTAKE MANIFOLD	EM-35, EM-239
-----------------------	---------------

INTAKE MANIFOLD AIR TEMPERATURE SENSOR EM-250	
INTAKE SENSOR.....	HAC-126, HAC-232
INTEGRATED HOMELINK TRANSMITTER.....	DLK-124
INTELLIGENT KEY	DLK-118
INTELLIGENT KEY BATTERY	DLK-198
INTELLIGENT KEY BUTTON OPERATION HAS POOR RANGE (ALL KEYS).....	DLK-136
INTELLIGENT KEY BUTTON OPERATION HAS POOR RANGE (ONE KEY).....	DLK-143
INTELLIGENT KEY SYSTEM	DLK-39
INTELLIGENT KEY SYSTEM ALL FUNCTIONS CANNOT OPERATE (ALL KEYS).....	DLK-132
INTELLIGENT KEY SYSTEM ALL FUNCTIONS CANNOT OPERATE (ONE KEY).....	DLK-141
INTELLIGENT KEY SYSTEM SYMPTOMS	DLK-126, SEC-144
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION.....	SEC-27
INTELLIGENT KEY WARNING BUZZER.....	DLK-116, DLK-196
INTERIOR LIGHTING SYSTEM SYMPTOMS.....	INL-67
INTERIOR ROOM LAMP	INL-14
INTERIOR ROOM LAMP CONTROL CIRCUIT	INL-57
INTERMEDIATE SHAFT	ST-43
INTERMITTENT INCIDENT	SRC-57
INVERTER UNIT	PWO-20, PWO-22, PWO-47
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).....	PCS-14, PCS-25, PCS-43, PG-174
IPDM-E BRANCH LINE CIRCUIT	LAN-184, LAN-250, LAN-276, LAN-311, LAN-350, LAN-391, LAN-431, LAN-475, LAN-514, LAN-542, LAN-577, LAN-614, LAN-655, LAN-693, LAN-734, LAN-777, LAN-819, LAN-863, LAN-905, LAN-951, LAN-999, LAN-1044, LAN-1093, LAN-1132, LAN-1162, LAN-1203, LAN-1240, LAN-1272, LAN-1314, LAN-1357, LAN-1402, LAN-1448, LAN-1496, LAN-1545, LAN-1593
ITS COMMUNICATION CIRCUIT.....	LAN-220, LAN-370, LAN-413, LAN-499, LAN-675, LAN-754, LAN-799, LAN-885, LAN-975, LAN-1023, LAN-1119, LAN-1182, LAN-1225, LAN-1292, LAN-1334, LAN-1379, LAN-1424, LAN-1472, LAN-1520, LAN-1571, LAN-1617

K

KEY CYLINDER	DLK-190
KEY WARNING LAMP	DLK-120
KEYLESS POWER WINDOW DOWN DOES NOT OPERATE.....	PWC-74

L

L TERMINAL CIRCUIT (OPEN)	CHG-40
L TERMINAL CIRCUIT (SHORT)	CHG-43
LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM	SB-17
LEAF SPRING	RSU-6
LED HEADLAMP	EXL-260
LED HEADLAMP OPERATION INSPECTION	EXL-253
LICENSE PLATE LAMP	EXL-142, EXL-301
LICENSE PLATE LAMP CIRCUIT	EXL-109, EXL-267
LIFTING MOTOR (FRONT)	ADP-125
LIFTING MOTOR (REAR)	ADP-127
LIFTING POINT	GI-29
LIFTING SENSOR (FRONT)	ADP-107
LIFTING SENSOR (REAR)	ADP-110
LIFTING SWITCH (FRONT)	ADP-83
LIFTING SWITCH (REAR)	ADP-85
LIGHTING SWITCH.....	EXL-141, EXL-299
LOW PRESSURE FUEL PUMP	EC-701
LOW PRESSURE TURBOCHARGER BOOST PRESSURE SENSOR.....	EM-253
LOW TIRE PRESSURE LOCATION INDICATOR CONTINUES DISPLAYING	WT-60
LOW TIRE PRESSURE LOCATION INDICATOR DOES NOT DISPLAY	WT-59
LOW TIRE PRESSURE WARNING CONTROL UNIT	WT-75
LOW TIRE PRESSURE WARNING LAMP... ..	WT-52
LOW TIRE PRESSURE WARNING LAMP BLINKS	WT-58
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON.....	WT-56
LOW TIRE PRESSURE WARNING LAMP STAYS ON	WT-57
LOWER JOINT	ST-47
LOWER LINK.....	FSU-15
LUBRICATION SYSTEM	LU-7, LU-24
LUMBAR SUPPORT SWITCH	SE-111
LUMBAR SUPPORT SYSTEM.....	SE-36

M

M&A BRANCH LINE CIRCUIT	LAN-199, LAN-256, LAN-285, LAN-321, LAN-359, LAN-401, LAN-441, LAN-485, LAN-520, LAN-551, LAN-586, LAN-624, LAN-664, LAN-702, LAN-743, LAN-787, LAN-829, LAN-872, LAN-915, LAN-961, LAN-1009, LAN-1054, LAN-1103, LAN-1138, LAN-1171, LAN-1213, LAN-1246, LAN-1281, LAN-1323, LAN-1367, LAN-1411, LAN-1458, LAN-1506, LAN-1555, LAN-1603
MAGNET CLUTCH.....	HA-33, HAC-108, HAC-217

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT ..

LAN-135, LAN-501, LAN-527, LAN-562,
LAN-597, LAN-636, LAN-677, LAN-715,
LAN-756, LAN-801, LAN-843, LAN-887,
LAN-929, LAN-977, LAN-1025, LAN-1070

MAIN LINE BETWEEN 4WD AND IPDM-E CIRCUIT

LAN-172, LAN-1228, LAN-1253, LAN-1295,
LAN-1337, LAN-1382, LAN-1427, LAN-1475,
LAN-1523

MAIN LINE BETWEEN A-BAG AND CGW CIRCUIT

LAN-143, LAN-268, LAN-302, LAN-421,
LAN-533, LAN-568, LAN-604, LAN-683,
LAN-808, LAN-894, LAN-1032

MAIN LINE BETWEEN A-BAG AND ICC CIRCUIT

LAN-144, LAN-338, LAN-378, LAN-461,
LAN-642, LAN-721, LAN-763, LAN-849,
LAN-936, LAN-984, LAN-1077, LAN-1150,
LAN-1190, LAN-1259, LAN-1301, LAN-1343,
LAN-1388, LAN-1433, LAN-1481, LAN-1529,
LAN-1579

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

LAN-147, LAN-244, LAN-507, LAN-1127,
LAN-1234

MAIN LINE BETWEEN ABS AND ADP CIRCUIT...

LAN-174, LAN-1186, LAN-1339, LAN-1429,
LAN-1477, LAN-1525, LAN-1575

MAIN LINE BETWEEN ABS AND DLC CIRCUIT ...

LAN-175, LAN-1123, LAN-1146, LAN-1230,
LAN-1255, LAN-1297, LAN-1384

MAIN LINE BETWEEN ABS AND IPDM-E CIRCUIT

LAN-136, LAN-239, LAN-263, LAN-296,
LAN-333, LAN-372, LAN-415, LAN-455,
LAN-502, LAN-528, LAN-563, LAN-598,
LAN-637, LAN-678, LAN-716, LAN-757,
LAN-802, LAN-844, LAN-888, LAN-930,
LAN-978, LAN-1026, LAN-1071

MAIN LINE BETWEEN ADP AND DLC CIRCUIT...

LAN-140, LAN-299, LAN-375, LAN-418,
LAN-458, LAN-601, LAN-760, LAN-805,
LAN-891, LAN-933, LAN-981, LAN-1029,
LAN-1074, LAN-1187, LAN-1340, LAN-1430,
LAN-1478, LAN-1526, LAN-1576

MAIN LINE BETWEEN AV AND HVAC CIRCUIT ...

LAN-179, LAN-1153, LAN-1262, LAN-1304,
LAN-1391

MAIN LINE BETWEEN AV AND TCU CIRCUIT

LAN-149, LAN-305, LAN-381, LAN-424,
LAN-464, LAN-607, LAN-766, LAN-811,
LAN-897, LAN-939, LAN-987, LAN-1035,
LAN-1080, LAN-1193, LAN-1346, LAN-1436,
LAN-1484, LAN-1532, LAN-1582

MAIN LINE BETWEEN AV AND TPMS CIRCUIT...

LAN-150, LAN-271, LAN-341, LAN-536,
LAN-571, LAN-645, LAN-686, LAN-724,
LAN-852

MAIN LINE BETWEEN AVM AND DIFF CIRCUIT ..

LAN-159, LAN-1039, LAN-1088, LAN-1540

MAIN LINE BETWEEN AVM AND SONAR CIRCUIT

LAN-158, LAN-428, LAN-472, LAN-815,
LAN-947, LAN-1444, LAN-1590

MAIN LINE BETWEEN CGW AND M&A CIRCUIT.

LAN-145, LAN-269, LAN-303, LAN-422,
LAN-534, LAN-569, LAN-605, LAN-684,
LAN-809, LAN-895, LAN-1033

MAIN LINE BETWEEN DIFF AND SONAR CIRCUIT

LAN-160, LAN-689, LAN-859, LAN-901,
LAN-995, LAN-1040, LAN-1089, LAN-1398,
LAN-1492, LAN-1541

MAIN LINE BETWEEN DLC AND AVM CIRCUIT...

LAN-155, LAN-427, LAN-814, LAN-1038

MAIN LINE BETWEEN DLC AND DIFF CIRCUIT ..

LAN-156, LAN-573, LAN-688, LAN-900

MAIN LINE BETWEEN DLC AND RDR-R CIRCUIT

LAN-161, LAN-343, LAN-384, LAN-467,
LAN-647, LAN-726, LAN-769, LAN-854,
LAN-942, LAN-990, LAN-1083, LAN-1155,
LAN-1196, LAN-1264, LAN-1306, LAN-1349,
LAN-1393, LAN-1439, LAN-1487, LAN-1535,
LAN-1585

MAIN LINE BETWEEN DLC AND SONAR CIRCUIT

LAN-157, LAN-273, LAN-308, LAN-538,
LAN-610

MAIN LINE BETWEEN DLC AND STRG CIRCUIT

LAN-141, LAN-242, LAN-266, LAN-300,
LAN-336, LAN-376, LAN-419, LAN-459,
LAN-505, LAN-531, LAN-566, LAN-602,
LAN-640, LAN-681, LAN-719, LAN-761,
LAN-806, LAN-847, LAN-892, LAN-934,
LAN-982, LAN-1030, LAN-1075, LAN-1125,
LAN-1148, LAN-1188, LAN-1232, LAN-1257,
LAN-1299, LAN-1341, LAN-1386, LAN-1431,
LAN-1479, LAN-1527, LAN-1577

MAIN LINE BETWEEN HVAC AND PTC CIRCUIT.

LAN-154, LAN-247, LAN-510

MAIN LINE BETWEEN HVAC AND TPMS CIRCUIT

LAN-180, LAN-1129, LAN-1154, LAN-1195,
LAN-1236, LAN-1263, LAN-1305, LAN-1348,
LAN-1392, LAN-1438, LAN-1486, LAN-1534,
LAN-1584

MAIN LINE BETWEEN ICC AND M&A CIRCUIT ...

LAN-146, LAN-339, LAN-379, LAN-462,
LAN-643, LAN-722, LAN-764, LAN-850,
LAN-937, LAN-985, LAN-1078, LAN-1151,
LAN-1191, LAN-1260, LAN-1302, LAN-1344,
LAN-1389, LAN-1434, LAN-1482, LAN-1530,
LAN-1580

MAIN LINE BETWEEN IPDM-E AND ABS CIRCUIT

LAN-173, LAN-1122, LAN-1145, LAN-1185,
LAN-1229, LAN-1254, LAN-1296, LAN-1338,
LAN-1383, LAN-1428, LAN-1476, LAN-1524,
LAN-1574

MAIN LINE BETWEEN IPDM-E AND TCM CIRCUIT

LAN-137, LAN-240, LAN-264, LAN-297,
LAN-334, LAN-373, LAN-416, LAN-456,
LAN-503, LAN-529, LAN-564, LAN-599,
LAN-638, LAN-679, LAN-717, LAN-758,
LAN-803, LAN-845, LAN-889, LAN-931,
LAN-979, LAN-1027, LAN-1072

MAIN LINE BETWEEN M&A AND AV CIRCUIT

LAN-148, LAN-270, LAN-304, LAN-340,
LAN-380, LAN-423, LAN-463, LAN-535,
LAN-570, LAN-606, LAN-644, LAN-685,
LAN-723, LAN-765, LAN-810, LAN-851,
LAN-896, LAN-938, LAN-986, LAN-1034,
LAN-1079, LAN-1152, LAN-1192, LAN-1261,
LAN-1303, LAN-1345, LAN-1390, LAN-1435,
LAN-1483, LAN-1531, LAN-1581

MAIN LINE BETWEEN M&A AND HVAC CIRCUIT

LAN-177, LAN-1128, LAN-1235

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

LAN-152, LAN-245, LAN-508

MAIN LINE BETWEEN RDR-L AND AVM CIRCUIT

LAN-164, LAN-470, LAN-945, LAN-1086,
LAN-1442, LAN-1538, LAN-1588

MAIN LINE BETWEEN RDR-L AND DIFF CIRCUIT

LAN-166, LAN-729, LAN-857, LAN-993,
LAN-1309, LAN-1396, LAN-1490

MAIN LINE BETWEEN RDR-L AND SONAR

CIRCUIT LAN-168, LAN-346, LAN-387,
LAN-650, LAN-772, LAN-1158, LAN-1199,
LAN-1267, LAN-1352

MAIN LINE BETWEEN RDR-R AND RDR-L

CIRCUIT LAN-163, LAN-345, LAN-386,
LAN-469, LAN-649, LAN-728, LAN-771,
LAN-856, LAN-944, LAN-992, LAN-1085,
LAN-1157, LAN-1198, LAN-1266, LAN-1308,
LAN-1351, LAN-1395, LAN-1441, LAN-1489,
LAN-1537, LAN-1587

MAIN LINE BETWEEN STRG AND A-BAG CIRCUIT

LAN-142, LAN-243, LAN-267, LAN-301,
LAN-337, LAN-377, LAN-420, LAN-460,
LAN-506, LAN-532, LAN-567, LAN-603,
LAN-641, LAN-682, LAN-720, LAN-762,
LAN-807, LAN-848, LAN-893, LAN-935,
LAN-983, LAN-1031, LAN-1076, LAN-1126,
LAN-1149, LAN-1189, LAN-1233, LAN-1258,
LAN-1300, LAN-1342, LAN-1387, LAN-1432,
LAN-1480, LAN-1528, LAN-1578

MAIN LINE BETWEEN TCM AND 4WD CIRCUIT ..

LAN-170, LAN-1227, LAN-1252, LAN-1294,
LAN-1336, LAN-1381, LAN-1426, LAN-1474,
LAN-1522

MAIN LINE BETWEEN TCM AND ADP CIRCUIT ..

LAN-138, LAN-298, LAN-374, LAN-417,
LAN-457, LAN-600, LAN-759, LAN-804,
LAN-890, LAN-932, LAN-980, LAN-1028,
LAN-1073

MAIN LINE BETWEEN TCM AND DLC CIRCUIT ...

LAN-139, LAN-241, LAN-265, LAN-335,
LAN-504, LAN-530, LAN-565, LAN-639,
LAN-680, LAN-718, LAN-846

MAIN LINE BETWEEN TCM AND IPDM-E CIRCUIT

LAN-171, LAN-1121, LAN-1144, LAN-1184,
LAN-1573

MAIN LINE BETWEEN TCU AND HVAC CIRCUIT .

LAN-178, LAN-1194, LAN-1347, LAN-1437,
LAN-1485, LAN-1533, LAN-1583

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

LAN-151, LAN-306, LAN-382, LAN-425,
LAN-465, LAN-608, LAN-767, LAN-812,
LAN-898, LAN-940, LAN-988, LAN-1036,
LAN-1081

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

LAN-153, LAN-246, LAN-272, LAN-307,
LAN-342, LAN-383, LAN-426, LAN-466,
LAN-509, LAN-537, LAN-572, LAN-609,
LAN-646, LAN-687, LAN-725, LAN-768,
LAN-813, LAN-853, LAN-899, LAN-941,
LAN-989, LAN-1037, LAN-1082

MAIN POWER SUPPLY AND GROUND CIRCUIT .

TM-209, TM-437

MAIN POWER WINDOW AND DOOR LOCK/

UNLOCK SWITCH PWC-16, PWC-77

MALFUNCTION AREA CHART

LAN-132

MALFUNCTION INDICATOR LAMP

EC-705

MANUAL AIR CONDITIONING SYSTEM

HAC-167

MASS AIR FLOW SENSOR

EM-224

METER BUZZER CIRCUIT

DLK-119, WCS-46

METER CONTROL SWITCH

INL-73, MWI-110,

MWI-189

METER CONTROL SWITCH SIGNAL CIRCUIT

MWI-89, MWI-170

METER SYSTEM

MWI-38, MWI-141

MICROPHONE

AV-73, AV-166, AV-291, AV-442

MICROPHONE SIGNAL CIRCUIT .

AV-53, AV-138,

AV-256

MID SUN GEAR, REAR SUN GEAR, HIGH AND

LOW REVERSE CLUTCH HUB

TM-593

MIRROR SENSOR

ADP-117

MIXTURE RATIO SELF-LEARNING VALUE CLEAR

EC-204

MODE SENSOR

DLN-131

MOTOR/ACCUMULATOR

BRC-166

MUDGUARD

EXT-45

MULTI AV SYSTEM

AV-144, AV-264

MULTI-WAY CONTROL VALVE

CO-27

N

NATS ANTENNA AMP

SEC-151

NAVIGATION WITH AMPLIFIER

AV-191

NAVIGATION WITHOUT AMPLIFIER

AV-94

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

SEC-41

NO OUTPUT FROM AC 120 V OUTLET.. [PWO-44](#)
 NOISE [HA-30](#)
 NOISE VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTING..... [RSU-4](#)
 NOISE, VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTING.....[BR-7](#), [DLN-117](#),
[DLN-181](#), [DLN-211](#), [DLN-246](#), [DLN-285](#),
[DLN-382](#), [DLN-413](#), [EM-21](#)
 NONE OF THE POWER WINDOWS CAN BE
 OPERATED USING ANY SWITCH.....[PWC-63](#)
 NORMAL OPERATING CONDITION.....[ADP-139](#),
[AV-64](#), [AV-148](#), [AV-268](#), [AV-437](#), [BCS-78](#),
[BRC-158](#), [DAS-118](#), [EC-721](#), [EXL-124](#),
[EXL-282](#), [PWO-46](#), [WW-44](#)

O

OCCUPANT CLASSIFICATION SYSTEM [SR-30](#)
 OIL [HA-21](#)
 OIL CHECK VALVE..... [LU-57](#)
 OIL COOLER [LU-12](#), [LU-38](#)
 OIL FILTER [LU-11](#), [LU-36](#)
 OIL FILTER BYPASS VALVE [LU-44](#)
 OIL FILTER HEAD ADAPTER [LU-46](#)
 OIL PAN [EM-307](#), [TM-224](#)
 OIL PAN (LOWER) AND OIL STRAINER[EM-64](#)
 OIL PAN (UPPER)[EM-70](#)
 OIL PRESSURE REGULATOR (MAIN RIFLE)[LU-48](#)
 OIL PRESSURE SWITCH [LU-59](#)
 OIL PUMP[LU-17](#), [LU-51](#)
 OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON
[TM-576](#)
 OIL SEAL [EM-115](#), [EM-391](#)
 OIL THERMOSTAT [LU-55](#)
 ON BOARD DIAGNOSTIC (OBD) SYSTEM [EC-83](#),
[EC-800](#), [TM-41](#), [TM-316](#)
 ON BOARD REFUELING VAPOR RECOVERY
 (ORVR) [EC-706](#)
 OPERATION [DAS-65](#), [EC-81](#), [EC-798](#), [HAC-25](#),
[HAC-153](#), [MWI-24](#), [MWI-128](#)
 OPERATION INSPECTION[HAC-64](#), [HAC-187](#)
 OPTICAL SENSOR.. [EXL-116](#), [EXL-136](#), [EXL-274](#),
[EXL-294](#)
 OUTLET NOx SENSOR..... [EX-48](#)
 OUTPUT SPEED SENSOR [TM-232](#), [TM-486](#)
 OUTSIDE KEY ANTENNA.....[DLK-194](#)
 OVER FENDER [EXT-43](#)
 OVERHEATING CAUSE ANALYSIS.....[CO-5](#)

P

P0011, P0021 IVT CONTROL [EC-244](#)
 P0012 INTAKE VALVE TIMING CONTROL [EC-248](#)
 P0014, P0024 EVT CONTROL..... [EC-252](#)
 P0015 EXHAUST VALVE TIMING CONTROL.....
[EC-256](#)
 P0016 INTAKE VALVE TIMING CONTROL [EC-260](#)

P0017 EXHAUST VALVE TIMING CONTROL.....
[EC-264](#)
 P0018 INTAKE VALVE TIMING CONTROL [EC-268](#)
 P0019 EXHAUST VALVE TIMING CONTROL.....
[EC-272](#)
 P0022 INTAKE VALVE TIMING CONTROL [EC-276](#)
 P0025 EXHAUST VALVE TIMING CONTROL.....
[EC-280](#)
 P0030, P0031, P0032, P0036, P0051, P0052 A/F
 SENSOR 1 HEATER..... [EC-284](#)
 P0037, P0038, P0057, P0058 HO2S2 HEATER.....
[EC-287](#)
 P0046 TC BOOST CONTROL CIRCUIT RANGE/
 PERFORMANCE [EC-977](#)
 P0047 TC BOOST CONTROL CIRCUIT LOW
[EC-980](#)
 P0049 TC TURBINE OVERSPEED [EC-983](#)
 P004E TC BOOST CONTROL CIRCUIT
 INTERMITTENT..... [EC-986](#)
 P0075, P0081 IVT CONTROL SOLENOID VALVE.
[EC-290](#)
 P0078, P0084 EVT CONTROL SOLENOID VALVE
[EC-293](#)
 P007B CHARGE AIR COOLER TEMPERATURE
 SENSOR [EC-988](#)
 P007C CHARGE AIR COOLER TEMPERATURE
 SENSOR [EC-992](#)
 P007D CHARGE AIR COOLER TEMPERATURE
 SENSOR [EC-995](#)
 P0087 FRP CONTROL SYSTEM [EC-296](#)
 P0087 FUEL RAIL PRESSURE TOO LOW [EC-998](#)
 P0088 FRP CONTROL SYSTEM [EC-300](#)
 P0088 FUEL RAIL PRESSURE TOO HIGH [EC-1000](#)
 P008A LOW FUEL PRESSURE CONTROL
 SYSTEM [EC-1002](#)
 P0090 HIGH PRESSURE FUEL PUMP..... [EC-303](#)
 P009C FUEL PRESSURE RELIEF CONTROL
 CIRCUIT LOW [EC-1005](#)
 P009D FUEL PRESSURE RELIEF CONTROL
 CIRCUIT HIGH..... [EC-1008](#)
 P009E FUEL PRESSURE RELIEF CONTROL
 PERFORMANCE [EC-1011](#)
 P00AF BOOST PRESSURE CONTROL ..[EC-1015](#)
 P00B3, P00B4 ENGINE COOLANT
 TEMPERATURE SENSOR 2 [EC-306](#)
 P00B7 COOLING SYSTEM [EC-1017](#)
 P00C6 FUEL RAIL PRESSURE [EC-1018](#)
 P0101 MAF SENSOR [EC-309](#), [EC-1020](#)
 P0102 MASS AIR FLOW SENSOR [EC-1024](#)
 P0102, P0103 MAF SENSOR..... [EC-314](#)
 P0103 MASS AIR FLOW SENSOR [EC-1028](#)
 P0106 MANIFOLD ABSOLUTE PRESSURE
 SENSOR..... [EC-1031](#)
 P0107 MAP SENSOR CIRCUIT LOW [EC-1036](#)
 P0108 MAP SENSOR CIRCUIT HIGH [EC-1040](#)
 P0111 IAT SENSOR.....[EC-319](#), [EC-1044](#)

P0112 INTAKE AIR TEMPERATURE SENSOR..... EC-1047	P0204 FUEL INJECTOR (CYLINDER 4)... EC-1109
P0112, P0113 IAT SENSOR..... EC-321	P0205 FUEL INJECTOR (CYLINDER 5)... EC-1112
P0113 INTAKE AIR TEMPERATURE SENSOR..... EC-1050	P0206 FUEL INJECTOR (CYLINDER 6)... EC-1115
P0116 ECT SENSOR EC-1053	P0207 FUEL INJECTOR (CYLINDER 7)... EC-1118
P0116 ENGINE COOLANT TEMPERATURE SENSOR 1 EC-323	P0208 FUEL INJECTOR (CYLINDER 8)... EC-1121
P0117 COOLANT TEMPERATURE SENSOR EC-1057	P020A FUEL INJECTOR CYLINDER 1 TIMING EC-1124
P0117, P0118 ENGINE COOLANT TEMPERATURE SENSOR 1 EC-326	P020B FUEL INJECTOR CYLINDER 2 TIMING EC-1126
P0118 COOLANT TEMPERATURE SENSOR EC-1060	P020C FUEL INJECTOR CYLINDER 3 TIMING EC-1128
P0122, P0123 TP SENSOR EC-329	P020D FUEL INJECTOR CYLINDER 4 TIMING EC-1130
P0125 ECT SENSOR EC-332	P020E FUEL INJECTOR CYLINDER 5 TIMING EC-1132
P0127 IAT SENSOR..... EC-334 , EC-1063	P020F FUEL INJECTOR CYLINDER 6 TIMING EC-1134
P0128 THERMOSTAT FUNCTION EC-1064	P0217 ENGINE OVER TEMPERATURE .. EC-1136
P012B TC BOOST SENSOR EC-1066	P0219 ENGINE OVER SPEED EC-1137
P012C TC COMPRESSOR INLET PRESSURE SENSOR CIRCUIT LOW EC-1069	P021A FUEL INJECTOR CYLINDER 7 TIMING EC-1139
P012D TC COMPRESSOR INLET PRESSURE SENSOR CIRCUIT HIGH..... EC-1073	P021B FUEL INJECTOR CYLINDER 8 TIMING EC-1141
P0130, P0150 A/F SENSOR 1 EC-336	P0222, P0223 TP SENSOR EC-404
P0131, P0151 A/F SENSOR 1 EC-340	P0237 BOOST PRESSURE SENSOR..... EC-1143
P0132, P0152 A/F SENSOR 1 EC-343	P0238 BOOST PRESSURE SENSOR..... EC-1147
P0137, P0157 HO2S2 EC-346	P0252 FUEL PUMP METERING CONTROL RANGE/PERFORMANCE EC-1151
P0138, P0158 HO2S2 EC-352	P0253 FUEL PUMP METERING CONTROL LOW . EC-1154
P0139, P0159 HO2S2 EC-360	P0254 FUEL PUMP METERING CONTROL HIGH EC-1157
P014C, P014D, P014E, P014F, P015A, P015B, P015C, P015D A/F SENSOR 1 EC-367	P0257 FUEL PUMP METERING CONTROL RANGE/PERFORMANCE EC-1160
P0168 FUEL TEMPERATURE SENSOR.. EC-1077	P0261 FUEL INJECTOR (CYLINDER 1)... EC-1163
P0169 INCORRECT FUEL COMPOSITION EC-1078	P0262 FUEL INJECTOR (CYLINDER 1)... EC-1166
P0171, P0174 FUEL INJECTION SYSTEM FUNCTION EC-373	P0263 CYLINDER 1 COMBUSTION DISORDER... EC-1169
P0172, P0175 FUEL INJECTION SYSTEM FUNCTION EC-377	P0264 FUEL INJECTOR (CYLINDER 2)... EC-1171
P0181 FTT SENSOR EC-381	P0265 FUEL INJECTOR (CYLINDER 2)... EC-1174
P0181 FUEL TEMPERATURE SENSOR.. EC-1079	P0266 CYLINDER 2 COMBUSTION DISORDER... EC-1177
P0182 FUEL TEMPERATURE SENSOR.. EC-1082	P0267 FUEL INJECTOR (CYLINDER 3)... EC-1179
P0182, P0183 FTT SENSOR EC-385	P0268 FUEL INJECTOR (CYLINDER 3)... EC-1182
P0183 FUEL TEMPERATURE SENSOR.. EC-1085	P0269 CYLINDER 3 COMBUSTION DISORDER... EC-1185
P0184 FUEL TEMPERATURE SENSOR.. EC-1088	P026A CHARGE AIR COOLER EFFICIENCY BELOW NORMAL EC-1187
P0190, P0192, P0193 FRP SENSOR EC-388	P026B INJECTION TIMING PERFORMANCE EC-1189
P0191 FRP SENSOR EC-392	P0270 FUEL INJECTOR (CYLINDER 4)... EC-1190
P0191 FUEL RAIL PRESSURE SENSOR EC-1089	P0271 FUEL INJECTOR (CYLINDER 4)... EC-1193
P0192 FUEL RAIL PRESSURE SENSOR EC-1092	P0272 CYLINDER 4 COMBUSTION DISORDER... EC-1196
P0193 FUEL RAIL PRESSURE SENSOR EC-1096	P0273 FUEL INJECTOR (CYLINDER 5)... EC-1198
P0196 EOT SENSOR..... EC-395	P0274 FUEL INJECTOR (CYLINDER 5).. EC-1201
P0197, P0198 EOT SENSOR EC-399	
P0201 FUEL INJECTOR (CYLINDER 1)... EC-1100	
P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208 INJECTOR..... EC-401	
P0202 FUEL INJECTOR (CYLINDER 2)... EC-1103	
P0203 FUEL INJECTOR (CYLINDER 3)... EC-1106	

P0275 CYLINDER 5 COMBUSTION DISORDER .. EC-1204	P0420 EFFICIENCY OF THE CATALYTIC CONVERTER..... EC-1314
P0276 FUEL INJECTOR (CYLINDER 6) .. EC-1206	P0420, P0430 THREE WAY CATALYST FUNCTION EC-425
P0277 FUEL INJECTOR (CYLINDER 6) .. EC-1209	P0421 CATALYST EFFICIENCY BELOW THRESHOLD EC-1316
P0278 CYLINDER 6 COMBUSTION DISORDER .. EC-1212	P0441 EVAP CONTROL SYSTEM EC-431
P0279 FUEL INJECTOR (CYLINDER 7) .. EC-1214	P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE EC-437
P0280 FUEL INJECTOR (CYLINDER 7) .. EC-1217	P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE EC-441
P0281 CYLINDER 7 COMBUSTION DISORDER .. EC-1220	P0447 EVAP CANISTER VENT CONTROL VALVE EC-444
P0282 FUEL INJECTOR (CYLINDER 8) .. EC-1222	P0448 EVAP CANISTER VENT CONTROL VALVE EC-448
P0283 FUEL INJECTOR (CYLINDER 8) .. EC-1225	P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR EC-452
P0284 CYLINDER 8 COMBUSTION DISORDER .. EC-1228	P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR EC-455
P0299 BOOST PRESSURE EC-1230	P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR EC-459
P02EE FUEL INJECTOR (CYLINDER 1) .. EC-1233	P0456 EVAP CONTROL SYSTEM EC-464
P02EF FUEL INJECTOR (CYLINDER 2) .. EC-1236	P0460 FUEL LEVEL SENSOR EC-470
P02F0 FUEL INJECTOR (CYLINDER 3) .. EC-1239	P0461 FUEL LEVEL SENSOR ... EC-472 , EC-1318
P02F1 FUEL INJECTOR (CYLINDER 4) .. EC-1242	P0462 FUEL LEVEL SENSOR CIRCUIT LOW..... EC-1320
P02F2 FUEL INJECTOR (CYLINDER 5) .. EC-1245	P0462, P0463 FUEL LEVEL SENSOR EC-474
P02F3 FUEL INJECTOR (CYLINDER 6) .. EC-1248	P0463 FUEL LEVEL SENSOR CIRCUIT HIGH..... EC-1321
P02F4 FUEL INJECTOR (CYLINDER 7) .. EC-1251	P046C EGR VOLUME CONTROL VALVE POSITION SENSOR..... EC-1322
P02F5 FUEL INJECTOR (CYLINDER 8) .. EC-1254	P0471 EXHAUST PRESSURE SENSOR.. EC-1326
P0300 MISFIRE EC-1257	P0472 EXHAUST PRESSURE SENSOR.. EC-1330
P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308 MISFIRE EC-407	P0473 EXHAUST PRESSURE SENSOR.. EC-1334
P0301 CYLINDER 1 MISFIRE EC-1259	P0489 EGR CONTROL CIRCUIT LOW EC-1338
P0302 CYLINDER 2 MISFIRE EC-1261	P0490 EGR CONTROL CIRCUIT HIGH ... EC-1341
P0303 CYLINDER 3 MISFIRE EC-1263	P04DB CRANKCASE VENTILATION SYSTEM EC-1344
P0304 CYLINDER 4 MISFIRE EC-1265	P0500 VSS EC-476
P0305 CYLINDER 5 MISFIRE EC-1267	P0501 VEHICLE SPEED SIGNAL EC-1347
P0306 CYLINDER 6 MISFIRE EC-1269	P0506 ISC SYSTEM EC-478 , EC-1349
P0307 CYLINDER 7 MISFIRE EC-1271	P0507 ISC SYSTEM EC-480 , EC-1351
P0308 CYLINDER 8 MISFIRE EC-1273	P050A, P050B, P050E COLD START CONTROL.. EC-482
P0327, P0328, P0332, P0333 KS EC-414	P0513 INCORRECT IMMOBILIZER KEY.. EC-1353
P0335 CKP SENSOR EC-417	P051B CRANKCASE PRESSURE SENSOR RANGE/PERFORMANCE EC-1354
P0335 CKP SENSOR (POS) EC-1275	P051C CRANKCASE PRESSURE SENSOR CIRCUIT LOW EC-1357
P0340 CMP SENSOR (PHASE) EC-1280	P051D CRANKCASE PRESSURE SENSOR CIRCUIT HIGH..... EC-1361
P0340, P0345 CMP SENSOR EC-420	P0520 EOP SENSOR EC-485
P0344 CKP - CMP CORRELATION EC-1284	P0521 ENGINE OIL PRESSURE..... EC-1365
P0383 GLOW PLUG CONTROL MODULE CONTROL CIRCUIT LOW EC-1287	P0524 ENGINE OIL PRESSURE.. EC-488 , EC-1368
P0384 GLOW PLUG CONTROL MODULE CONTROL CIRCUIT HIGH..... EC-1290	P0527 COOLING FAN SPEED SENSOR... EC-491
P0401 FLOW IN THE EXHAUST GAS RECIRCULATION EC-1292	
P0402 FLOW IN THE EXHAUST GAS RECIRCULATION EC-1295	
P0405 EGR SENSOR CIRCUIT LOW EC-1297	
P0406 EGR SENSOR CIRCUIT HIGH EC-1301	
P040B EXHAUST GAS RECIRCULATION TEMPERATURE SENSOR..... EC-1305	
P040C EXHAUST GAS RECIRCULATION TEMPERATURE SENSOR..... EC-1308	
P040D EXHAUST GAS RECIRCULATION TEMPERATURE SENSOR..... EC-1311	

P0532 A/C REFRIGERANT PRESSURE SENSOR CIRCUIT LOW	EC-1369	P062C ECM	EC-1432
P0533 A/C REFRIGERANT PRESSURE SENSOR CIRCUIT HIGH	EC-1372	P062F CONTROL MODULE	EC-529
P053E CRANKCASE PRESSURE TOO HIGH	EC-1376	P0630 VIN NOT PROGRAMMED OR INCOMPATIBLE - ECM	EC-1433
P0544 EXHAUST GAS TEMPERATURE SENSOR EC-1378		P0643 SENSOR POWER SUPPLY	EC-530
P0544, P0545 EXHAUST GAS TEMPERATURE SENSOR	EC-494	P064C GLOW OUTPUT STAGE	EC-1434
P0545 EXHAUST GAS TEMPERATURE SENSOR EC-1380		P0652 SENSOR REFERENCE VOLTAGE B CIRCUIT LOW	EC-1437
P0546 EXHAUST GAS TEMPERATURE SENSOR EC-1381		P0653 SENSOR REFERENCE VOLTAGE B CIRCUIT HIGH	EC-1445
P0546, P2081 EXHAUST GAS TEMPERATURE SENSOR	EC-497	P0667 CONTROL MODULE INTERNAL TEMPERATURE SENSOR	EC-1447
P0547, P0548 EXHAUST GAS TEMPERATURE SENSOR	EC-500	P066A CYLINDER 1 GLOW PLUG CONTROL CIRCUIT LOW	EC-1448
P0549, P2083 EXHAUST GAS TEMPERATURE SENSOR	EC-503	P066B CYLINDER 1 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1450
P054E IDLE FUEL QUANTITY LOWER THAN EXPECTED	EC-1382	P066C CYLINDER 2 GLOW PLUG CONTROL CIRCUIT LOW	EC-1452
P054F IDLE FUEL QUANTITY HIGHER THAN EXPECTED	EC-1384	P066D CYLINDER 2 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1454
P0550 PSP SENSOR	EC-506	P066E CYLINDER 3 GLOW PLUG CONTROL CIRCUIT LOW	EC-1456
P0562 SYSTEM VOLTAGE LOW	EC-1386	P066F CYLINDER 3 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1458
P0563 SYSTEM VOLTAGE HIGH	EC-1389	P0671 GLOW PLUG (CYLINDER 1)	EC-1460
P0579 CRUISE CONTROL CIRCUIT RANGE/ PERFORMANCE	EC-1391	P0672 GLOW PLUG (CYLINDER 2)	EC-1463
P057E BRAKE PEDAL POSITION SENSOR	EC-1393	P0673 GLOW PLUG (CYLINDER 3)	EC-1466
P0581 CRUISE CONTROL SIGNAL CIRCUIT HIGH EC-1397		P0674 GLOW PLUG (CYLINDER 4)	EC-1469
P0591 CRUISE CONTROL SYSTEM RANGE/ PERFORMANCE	EC-1399	P0675 GLOW PLUG (CYLINDER 5)	EC-1472
P059F ACTIVE GRILLE SHUTTER	EC-509	P0676 GLOW PLUG (CYLINDER 6)	EC-1475
P0601 ECM	EC-1401	P0677 GLOW PLUG (CYLINDER 7)	EC-1478
P0603 ECM	EC-513	P0678 GLOW PLUG (CYLINDER 8)	EC-1481
P0604 ECM	EC-515, EC-1402	P067A CYLINDER 4 GLOW PLUG CONTROL CIRCUIT LOW	EC-1484
P0605 ECM	EC-517, EC-1404	P067B CYLINDER 4 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1486
P0606 ECM	EC-519, EC-1405	P067C CYLINDER 5 GLOW PLUG CONTROL CIRCUIT LOW	EC-1488
P0607 ECM	EC-521, EC-1406	P067D CYLINDER 5 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1490
P060A ECM	EC-522, EC-1409	P067E CYLINDER 6 GLOW PLUG CONTROL CIRCUIT LOW	EC-1492
P060B ECM	EC-524, EC-1410	P067F CYLINDER 6 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1494
P060C ECM	EC-1411	P0687 ECM POWER RELAY CONTROL CIRCUIT HIGH	EC-1496
P0611 ECM	EC-1414	P068C CYLINDER 7 GLOW PLUG CONTROL CIRCUIT LOW	EC-1499
P0611 ECM PROTECTION	EC-526	P068D CYLINDER 7 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1501
P0613 TCM	TM-102	P068E CYLINDER 8 GLOW PLUG CONTROL CIRCUIT LOW	EC-1503
P0615 STARTER RELAY	TM-370	P068F CYLINDER 8 GLOW PLUG CONTROL CIRCUIT HIGH	EC-1505
P061A ECM	EC-1416	P0691 COOLING FAN	EC-1507
P061B ECM	EC-1418	P0692 COOLING FAN	EC-1510
P061C ECM	EC-1420		
P061E ECM	EC-1422		
P0628 FUEL PUMP CONTROL	EC-1424		
P0629 FUEL PUMP CONTROL	EC-1427		
P062B ECM	EC-527, EC-1430		

P0698 SENSOR REFERENCE VOLTAGE C CIRCUIT LOW EC-1513	P0729 6GR INCORRECT RATIO TM-130 , TM-383	A
P0699 SENSOR REFERENCE VOLTAGE C CIRCUIT HIGH EC-1515	P0730 INCORRECT GEAR RATIO TM-132 , TM-386	
P06A4 SENSOR REFERENCE VOLTAGE D CIRCUIT LOW EC-1517	P0731 1GR INCORRECT RATIO TM-133 , TM-388	B
P06A5 SENSOR REFERENCE VOLTAGE D CIRCUIT HIGH EC-1520	P0732 2GR INCORRECT RATIO TM-135 , TM-391	
P06B8 ECM EC-1522	P0733 3GR INCORRECT RATIO TM-137 , TM-394	C
P06B9 CYLINDER 1 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1523	P0734 4GR INCORRECT RATIO TM-139 , TM-397	
P06BA CYLINDER 2 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1525	P0735 5GR INCORRECT RATIO TM-141 , TM-400	D
P06BB CYLINDER 3 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1527	P0736 REVERSE INCORRECT RATIO TM-143	
P06BC CYLINDER 4 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1530	P0740 TORQUE CONVERTER TM-403	E
P06BD CYLINDER 5 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1533	P0743 TORQUE CONVERTER TM-145	
P06BE CYLINDER 6 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1535	P0744 TORQUE CONVERTER TM-405	F
P06BF CYLINDER 7 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1537	P0745 PRESSURE CONTROL SOLENOID A TM-407	
P06C0 CYLINDER 8 GLOW PLUG CIRCUIT RANGE/PERFORMANCE EC-1539	P0748 PRESSURE CONTROL SOLENOID A TM-147	G
P06D3 SENSOR REFERENCE VOLTAGE E CIRCUIT LOW EC-1541	P0750 SHIFT SOLENOID A TM-408	
P06D4 SENSOR REFERENCE VOLTAGE E CIRCUIT HIGH EC-1544	P0752 SHIFT SOLENOID A TM-149	H
P06D7 SENSOR REFERENCE VOLTAGE F CIRCUIT LOW EC-1546	P0753 SHIFT SOLENOID A TM-151	
P06D8 SENSOR REFERENCE VOLTAGE F CIRCUIT HIGH EC-1549	P0758 SHIFT SOLENOID B TM-154	J
P06E5 GLOW PLUG CONTROL MODULE PERFORMANCE EC-1551	P0763 SHIFT SOLENOID C TM-157	
P0700 TRANSMISSION CONTROL SYSTEM (MIL REQUEST) EC-1554	P0768 SHIFT SOLENOID D TM-160	K
P0705 TRANSMISSION RANGE SENSOR A TM-103 , TM-372	P0770 SHIFT SOLENOID E TM-163	
P0708 TRANSMISSION RANGE SENSOR A TM-106	P0773 SHIFT SOLENOID E TM-165	L
P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-374	P0775 PRESSURE CONTROL SOLENOID B TM-410	
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-109	P0780 SHIFT TM-412	M
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-111	P0795 PRESSURE CONTROL SOLENOID C TM-414	
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A TM-113	P0826 UP AND DOWN SHIFT SW TM-168	N
P0715 INPUT SPEED SENSOR A TM-115	P0850 PNP SWITCH EC-533	
P0716 INPUT SPEED SENSOR A TM-118	P0863 TCM COMMUNICATION .. TM-170 , TM-416	O
P0717 INPUT SPEED SENSOR A TM-120 , TM-377	P0882 TCM POWER INPUT SIGNAL TM-171	
P0720 OUTPUT SPEED SENSOR TM-122 , TM-379	P0998 SHIFT SOLENOID F TM-173	P
P0721 OUTPUT SPEED SENSOR TM-125	P0999 SHIFT SOLENOID F TM-175	
P0722 OUTPUT SPEED SENSOR TM-127	P0A0F THE ENGINE DOES NOT START EC-1555	
P0725 ENGINE SPEED TM-129 , TM-381	P100A, P100B VVEL SYSTEM EC-536	
	P1078, P1084 EVT CONTROL POSITION SENSOR EC-540	
	P1087, P1088 VVEL SYSTEM EC-543	
	P1089, P1092 VVEL CONTROL SHAFT POSITION SENSOR EC-544	
	P1090, P1093 VVEL ACTUATOR MOTOR EC-547	
	P1091 VVEL ACTUATOR MOTOR RELAY EC-551	
	P1148, P1168 CLOSED LOOP CONTROL EC-554	
	P1191 TC INLET AIR TEMPERATURE SENSOR PERFORMANCE EC-1559 , EC-1905	
	P1192 TC INLET AIR TEMPERATURE SENSOR LOW EC-1562	
	P1193 TC INLET AIR TEMPERATURE SENSOR HIGH EC-1565	
	P1197 OUT OF GAS EC-555	
	P119A, P119B FUEL RAIL PRESSURE SENSOR . EC-557	
	P119C FUEL RAIL PRESSURE SENSOR . EC-562	
	P1212 TCS COMMUNICATION LINE EC-566	
	P1217 ENGINE OVER TEMPERATURE EC-568	

P1220 FUEL PUMP CONTROL MODULE (FPCM) EC-571	P1809 TRANSFER CONTROL UNIT DLN-57
P1225 TP SENSOR EC-575	P180C SENSOR POWER SUPPLY (5V) ... DLN-58
P1226 TP SENSOR EC-576	P180D TRANSFER ROTARY POSITION SENSOR DLN-61
P1423, P1424 COLD START CONTROL... EC-577	P180F MOTOR SYSTEM DLN-64
P1451 DIESEL PARTICULATE FILTER SYSTEM PERFORMANCE EC-1568	P1811 BATTERY VOLTAGE DLN-66
P1484 CATALYST OVERHEAT DETECTION EC-1570	P1813 4WD MODE SWITCH DLN-69
P1550 BATTERY CURRENT SENSOR EC-579	P1814 4WD DETECT SWITCH DLN-72
P1551, P1552 BATTERY CURRENT SENSOR..... EC-582	P1815 M-MODE SWITCH TM-426
P1553 BATTERY CURRENT SENSOR EC-585	P1816 TRANSMISSION RANGE SWITCH DLN-75
P1554 BATTERY CURRENT SENSOR EC-588	P1817 TRANSFER MOTOR..... DLN-76
P1556, P1557 BATTERY TEMPERATURE SENSOR EC-591	P1818 ACTUATOR POSITION SWITCH.... DLN-78
P1564 ASCD STEERING SWITCH..... EC-594	P1819 ACTUATOR CIRCUIT DLN-81
P1572 BRAKE PEDAL POSITION SWITCH EC-598	P181B INCOMPLETE SELF SHUT DLN-83
P1574 ASCD VEHICLE SPEED SENSOR . EC-604	P181C TRANSFER MOTOR POWER SUPPLY..... DLN-86
P159F ACTIVE GRILLE SHUTTER EC-606	P1820 ENGINE SPEED SIGNAL DLN-88
P1606 VVEL CONTROL MODULE EC-608	P182A TRANSFER HI-LO POSITION SENSOR..... DLN-89
P1607 VVEL CONTROL MODULE EC-609	P1836 DIFFERENTIAL LOCK CONTROL UNIT DLN-310 , DLN-445
P1608 VVEL SENSOR POWER SUPPLY .. EC-610	P1838 DIFFERENTIAL LOCK MODE SWITCH DLN-311 , DLN-446
P1610 LOCK MODE SEC-71	P1839 DIFFERENTIAL LOCK POSITION SWITCH DLN-314 , DLN-449
P1611 ID DISCORD, IMMU-ECM..... SEC-73	P1844 RELAY DLN-317 , DLN-452
P1612 CHAIN OF ECM-IMMU SEC-75	P1848 DIFFERENTIAL LOCK SOLENOID DLN-318 , DLN-453
P1612 DATA COMMUNICATION EC-1572	P1849 DIFFERENTIAL LOCK SOLENOID DLN-322 , DLN-457
P1613 DPF TEMPERATURE SENSOR MODULE PERFORMANCE EC-1573	P1850 DIFFERENTIAL LOCK CONTROL UNIT DLN-326 , DLN-461
P1614 DPF TEMPERATURE SENSOR MODULE SHORTED HIGH EC-1575	P1855 VEHICLE SPEED SENSOR (RR) ... DLN-92
P1615 DIFFERENCE OF KEY SEC-77	P1856 VDC SYSTEM DLN-328 , DLN-463
P1615 DPF TEMPERATURE SENSOR MODULE SHORTED LOW EC-1578	P1867 INCOMPLETE SHIFT DLN-93
P1616 DPF TEMPERATURE SENSOR MODULE OVER TEMPERATURE EC-1581	P1868 AXLE DISCONNECT DEVICE FUNCTION . DLN-95
P1623 DPF TEMPERATURE SENSOR MODULE CIRCUIT EC-1583	P1869 AXLE DISCONNECT DEVICE RELAY DLN-97
P1624 SCR TEMPERATURE SENSOR MODULE PERFORMANCE EC-1586	P186A AXLE DISCONNECT DEVICE FUNCTION . DLN-100
P1625 SCR TEMPERATURE SENSOR MODULE SHORTED HIGH EC-1588	P186B AXLE DISCONNECT DEVICE ACTUATOR DLN-102
P1626 SCR TEMPERATURE SENSOR MODULE SHORTED LOW EC-1591	P186C INCOMP RPS OFFSET LEARNING DLN-105
P1627 SCR TEMPERATURE SENSOR MODULE OVER TEMPERATURE EC-1594	P18CB DIFFERENTIAL LOCK SOLENOID POWER SUPPLY DLN-329 , DLN-464
P1628 SCR TEMPERATURE SENSOR MODULE CIRCUIT EC-1596	P18CC WHEEL SPEED SIGNAL DLN-332 , DLN-467
P1679 INCOMPLETED LEARNING TM-177	P18CD SELF SHUTDOWN DLN-333 , DLN-468
P1705 TP SENSOR TM-179 , TM-417	P18CE DIFFERENTIAL LOCK POSITION SWITCH DLN-335 , DLN-470
P1721 VEHICLE SPEED SIGNAL TM-180 , TM-419	P18D0 ABS SYSTEM DLN-338 , DLN-473
P1730 INTERLOCK..... TM-421	P1A11 ENGINE OVER TEMPERATURE . EC-1599
P1734 7GR INCORRECT RATIO..... TM-423	P1A12 CATALYST OVERHEAT DETECTION EC-1600
P1804 TRANSFER CONTROL UNIT DLN-55	P1A62 TC ACTUATOR POSITION..... EC-1602
P1805 BRAKE SWITCH EC-612	
P1808 VEHICLE SPEED SENSOR (ABS). DLN-56	

P1A77 AFTERTREATMENT OVER TEMPERATURE	EC-1604	
P1A78 FUEL SHUTOFF - FORCED ENGINE SHUTDOWN	EC-1605	A
P1A7A ENGINE COOLANT LEVEL LOW	EC-1606	
P1C54 SCR NOX CATALYST MISSING	EC-1607	
P1C55 NOX SENSOR 1/1 INTERMITTENT	EC-1610	
P1C56 NOX SENSOR 1/2 INTERMITTENT	EC-1612	
P1C70 SCR ERROR DETECTED - ENGINE DR-RATED	EC-1614	
P200C DIESEL PARTICULATE FILTER	EC-1615	
P200E CATALYST SYSTEM OVER TEMPERATURE BANK 1	EC-1618	
P202B REDUCTANT TANK HEATER CONTROL CIRCUIT LOW	EC-1620	
P202C REDUCTANT TANK HEATER CONTROL CIRCUIT HIGH	EC-1623	
P202E REDUCTANT INJECTION VALVE CIRCUIT 1/1	EC-1626	
P2031 UPSTREAM DPF TEMPERATURE SENSOR	EC-1628	
P2032 TEMPERATURE SENSOR UPSTREAM DPF	EC-1630	
P2033 TEMPERATURE SENSOR UPSTREAM DPF	EC-1632	
P203B REDUCTANT LEVEL SENSOR CIRCUIT RANGE/PERFORMANCE	EC-1634	
P203C REDUCTANT LEVEL SENSOR CIRCUIT LOW	EC-1637	
P203D REDUCTANT LEVEL SENSOR CIRCUIT HIGH	EC-1641	
P203F REDUCTANT LEVEL TOO LOW	EC-1644	
P2044 REDUCTANT TEMPERATURE SENSOR CIRCUIT HIGH	EC-1646	
P2045 REDUCTANT TEMPERATURE SENSOR CIRCUIT LOW	EC-1648	
P2048 REDUCTANT INJECTION VALVE CIRCUIT LOW 1/1	EC-1650	
P204A REDUCTANT PRESSURE SENSOR CIRCUIT	EC-1653	
P204C REDUCTANT PRESSURE SENSOR CIRCUIT LOW	EC-1656	
P204D REDUCTANT PRESSURE SENSOR CIRCUIT HIGH	EC-1660	
P205C REDUCTANT TANK TEMPERATURE SENSOR CIRCUIT LOW	EC-1663	
P205D REDUCTANT TANK TEMPERATURE SENSOR CIRCUIT HIGH	EC-1666	
P205E REDUCTANT TANK TEMPERATURE SENSOR CIRCUIT INTERMITTENT	EC-1669	
P206B REDUCTANT QUALITY SENSOR CIRCUIT	EC-1672	
P206D REDUCTANT QUALITY SENSOR CIRCUIT HIGH	EC-1674	
P207F REDUCTANT QUALITY PERFORMANCE	EC-1676	
P2080 EXHAUST GAS TEMPERATURE SENSOR	EC-615	
P2080 EXHAUST GAS TEMPERATURE SENSOR 1	EC-1678	
P2082 EXHAUST GAS TEMPERATURE SENSOR	EC-618	B
P208A REDUCTANT PUMP CONTROL CIRCUIT OPEN	EC-1680	C
P208C REDUCTANT PUMP CONTROL CIRCUIT LOW	EC-1683	
P208D REDUCTANT PUMP CONTROL CIRCUIT HIGH	EC-1686	D
P2096, P2097, P2098, P2099 A/F SENSOR 1	EC-621	
P209F REDUCTANT TANK HEATER CONTROL CIRCUIT PERFORMANCE	EC-1689	E
P20B7 REDUCTANT METERING UNIT HEATER CONTROL CIRCUIT LOW	EC-1692	F
P20B8 REDUCTANT METERING UNIT HEATER CONTROL CIRCUIT HIGH	EC-1695	
P20B9 REDUCTANT HEATER CONTROL CIRCUIT OPEN	EC-1698	G
P20BB REDUCTANT HEATER CONTROL CIRCUIT LOW	EC-1701	H
P20BC REDUCTANT HEATER CONTROL CIRCUIT HIGH	EC-1704	
P20E8 REDUCTANT PRESSURE TOO LOW	EC-1706	
P20E9 REDUCTANT PRESSURE TOO HIGH	EC-1709	
P20EE SCR NOX CATALYST EFFICIENCY	EC-1711	J
P20FF REDUCTANT CONTROL MODULE PERFORMANCE	EC-1714	
P2100, P2103 THROTTLE CONTROL MOTOR RELAY	EC-626	K
P2101 ELECTRIC THROTTLE CONTROL FUNCTION	EC-628	L
P2118 THROTTLE CONTROL MOTOR	EC-632	
P2119 ELECTRIC THROTTLE CONTROL ACTUATOR	EC-634	M
P2121 ACCELERATOR PEDAL POSITION SENSOR 1	EC-1716	
P2122 ACCELERATOR PEDAL POSITION SENSOR 1	EC-1720	N
P2122, P2123 APP SENSOR	EC-636	
P2123 ACCELERATOR PEDAL POSITION SENSOR 1	EC-1724	O
P2127 ACCELERATOR PEDAL POSITION SENSOR 2	EC-1728	
P2127, P2128 APP SENSOR	EC-639	P
P2128 ACCELERATOR PEDAL POSITION SENSOR 2	EC-1732	
P2135 TP SENSOR	EC-642	
P2138 APP SENSOR	EC-645	
P2146 FUEL INJECTOR GROUP 1 POWER CIRCUIT	EC-1736	

P2149 FUEL INJECTOR GROUP 2 POWER CIRCUIT	EC-1740	P229F NOX SENSOR 2	EC-1813
P214A SCR NOX CATALYST INLET TEMPERATURE TOO HIGH	EC-1744	P22A2 AFTERTREATMENT 1 INTAKE NOX OUT OF CALIBRATION	EC-1815
P214B SCR NOX CATALYST INLET TEMPERATURE TOO HIGH DURING REGEN	EC-1746	P22A7 NOX SENSOR HEATER SENSE CIRCUIT 1/2	EC-1817
P214C SCR NOX CATALYST OUTLET TEMPERATURE TOO HIGH	EC-1748	P22CB TC OUTLET SWITCHING VALVE CONTROL CIRCUIT LOW	EC-1820
P214D SCR NOX CATALYST OUTLET TEMPERATURE TOO HIGH DURING REGEN	EC-1750	P22CC TC OUTLET SWITCHING VALVE CONTROL CIRCUIT HIGH	EC-1823
P215C OUTPUT SHAFT SPEED - WHEEL SPEED	TM-181	P22CD TC OUTLET SWITCHING VALVE STUCK OPEN	EC-1826
P218F REDUCTANT NO FLOW DETECTED	EC-1752	P22CE TC OUTLET SWITCHING VALVE STUCK CLOSED	EC-1829
P219A, P219B AIR FUEL RATIO	EC-649	P2413 EGR SYSTEM	EC-1835
P219C, P219D, P219E, P219F, P21A0, P21A1, P21A2, P21A3 AIR FUEL RATIO	EC-654	P242B EGT SENSOR 3	EC-1838
P21C4 REDUCTANT HEATER RELAY CONTROL CIRCUIT HIGH	EC-1754	P242C EXHAUST GAS TEMPERATURE SENSOR CIRCUIT LOW 1/3	EC-1840
P21CA REDUCTANT SUPPLY VOLTAGE INTERMITTENT	EC-1756	P242D EXHAUST GAS TEMPERATURE SENSOR CIRCUIT HIGH 1/3	EC-1842
P21CB REDUCTANT SUPPLY VOLTAGE LOW	EC-1759	P242F DIESEL PARTICULATE FILTER ...	EC-1844
P21CC REDUCTANT SUPPLY VOLTAGE HIGH	EC-1762	P244A DIESEL PARTICULATE FILTER DIFFERENTIAL PRESSURE	EC-1846
P2201 NOX SENSOR 1	EC-1764	P244D EXHAUST TEMPERATURE TOO HIGH FOR PF REGENERATION	EC-1848
P2202 NOX SENSOR 1	EC-1766	P2453 PARTICULATE FILTER PRESSURE SENSOR A RANGE/PERFORMANCE	EC-1850
P2204 NOX SENSOR 1	EC-1768	P2454 DIESEL PARTICULATE FILTER DIFFERENTIAL PRESSURE SENSOR	EC-1854
P2209 NOX SENSOR HEATER SENSE CIRCUIT 1/1	EC-1770	P2455 DIESEL PARTICULATE FILTER DIFFERENTIAL PRESSURE SENSOR	EC-1858
P220A NOX SENSOR 1	EC-1773	P2456 PARTICULATE FILTER PRESSURE SENSOR A INTERMITTENT	EC-1862
P220B NOX SENSOR 2	EC-1776	P2457 EGR COOLER	EC-1867
P221A NOX SENSOR 1/2 CORRELATION BANK 1	EC-1779	P2459 REGENERATION FREQUENCY OF DIESEL PARTICULATE FILTER	EC-1871
P225C AFTERTREATMENT INTAKE OXYGEN SENSOR HIGH	EC-1782	P245C EGR COOLER BYPASS CONTROL CIRCUIT LOW	EC-1876
P225D AFTERTREATMENT INTAKE OXYGEN SENSOR LOW	EC-1784	P245D EGR COOLER BYPASS CONTROL CIRCUIT HIGH	EC-1879
P225E AFTERTREATMENT OUTLET OXYGEN SENSOR HIGH	EC-1786	P245F PARTICULATE FILTER PRESSURE SENSOR B RANGE/PERFORMANCE	EC-1881
P225F AFTERTREATMENT OUTLET OXYGEN SENSOR LOW	EC-1788	P2460 PARTICULATE FILTER PRESSURE SENSOR CIRCUIT LOW	EC-1885
P2262 TC BOOST PRESSURE NOT DETECTED	EC-1790	P2461 PARTICULATE FILTER PRESSURE SENSOR CIRCUIT HIGH	EC-1889
P2263 TC BOOST CONTROL SYSTEM	EC-1793	P2462 PARTICULATE FILTER PRESSURE SENSOR CIRCUIT INTERMITTENT	EC-1893
P2267 WATER IN FUEL SENSOR CIRCUIT HIGH	EC-1797	P2463 DIESEL PARTICULATE FILTER ...	EC-1897
P2269 WATER IN FUEL CONDITION	EC-1800	P2470 EXHAUST GAS TEMPERATURE SENSOR 4	EC-1899
P226C TC BOOST CONTROL SLOW RESPONSE	EC-1804	P2471 EXHAUST GAS TEMPERATURE SENSOR 4	EC-1901
P2280 INTAKE AIR SYSTEM	EC-1807	P2472 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT INTERMITTENT 1/4	EC-1903
P2299 ACCELERATOR/BRAKE PEDAL POSITION INCONSISTENCY	EC-1809	P2481 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT LOW 1/5	EC-1908
P229E NOX SENSOR 2	EC-1811		

P2482 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT HIGH 1/5 EC-1910	P2693 INJECTOR SOLENOID DRIVER CYLINDER 8 EC-1979	A
P2483 EXHAUST GAS TEMPERATURE SENSOR CIRCUIT INTERMITTENT 1/5 EC-1912	P26A3 MULTI-WAY CONTROL VALVE MOTOR EC-663	
P2493 EGR COOLER BYPASS POSITION SENSOR INTERMITTENT EC-1914	P26A5 MULTI-WAY CONTROL VALVE POSITION SENSOR EC-666	B
P2494 EGR COOLER BYPASS POSITION SENSOR CIRCUIT LOW EC-1918	P26A6 P26A7 MULTI-WAY CONTROL VALVE POSITION SENSOR EC-670	C
P2495 EGR COOLER BYPASS POSITION SENSOR CIRCUIT HIGH EC-1922	P26AB MULTI-WAY CONTROL VALVE EC-673	
P249E CLOSED LOOP REDUCTANT INJECTION FLOW TOO HIGH EC-1926	P2713 PRESSURE CONTROL SOLENOID D TM-429	D
P24A0 DPF REGENERATION TEMPERATURE TOO LOW EC-1929	P2722 PRESSURE CONTROL SOLENOID E TM-431	
P24A2 PARTICULATE FILTER REGENERATION INCOMPLETE EC-1931	P2731 PRESSURE CONTROL SOLENOID F TM-433	E
P2509 ECM POWER INPUT SIGNAL INTERMITTENT EC-1935	P2741 TRANSMISSION FLUID TEMPERATURE SENSOR B TM-184	
P2540 LOW FUEL PRESSURE SENSOR EC-1939	P2742 TRANSMISSION FLUID TEMPERATURE SENSOR B TM-186	F
P2541 FUEL PRESSURE SENSOR EC-1943	P2743 TRANSMISSION FLUID TEMPERATURE SENSOR B TM-188	G
P2542 FUEL PRESSURE SENSOR EC-1947	P2757 TORQUE CONVERTER CLUTCH PRESSURE CONTROL SOLENOID TM-190	
P2558 ENGINE COOLANT LEVEL SENSOR CIRCUIT LOW EC-1951	P279D 4WD RANGE SIGNAL TM-192	H
P2559 ENGINE COOLANT LEVEL SENSOR CIRCUIT HIGH EC-1954	P2803 TRANSMISSION RANGE SENSOR B TM-194	
P2560 ENGINE COOLANT LEVEL LOW EC-1957	P2807 PRESSURE CONTROL SOLENOID G TM-435	
P2579 TC SPEED SENSOR CIRCUIT RANGE/ PERFORMANCE EC-1958	P2BA7 UREA TANK LEVEL EC-1980	
P2580 TC SPEED SENSOR CIRCUIT LOW EC-1961	P2BAC NOX CONCENTRATION EC-1981	
P2581 TURBOCHARGER SPEED SENSOR CIRCUIT HIGH EC-1964	P2BAD NOX CONCENTRATION EXCEEDED EC-1982	J
P2610 ECM INTERNAL TIMER EC-661	P2BAF NOX SYSTEM DRIVER INDUCEMENT ACTIVE EC-1984	K
P262A FUEL INJECTOR - PILOT INJECTION NOT LEARNED EC-1967	PARKING BRAKE CONTROL PB-7	
P262D SENSOR REFERENCE VOLTAGE CIRCUIT LOW EC-1968	PARKING BRAKE FRONT CABLE PB-10	L
P2637 TORQUE MANAGEMENT FEEDBACK SIGNAL A TM-183	PARKING BRAKE REAR CABLE PB-11	
P263E GLOW PLUG CONTROL MODULE OVER TEMPERATURE EC-1970	PARKING BRAKE SHOE PB-4 , PB-13	
P268C FUEL INJECTOR 1 INJECTION QUANTITY ADJUSTMENT VALUE EC-1972	PARKING BRAKE SWITCH BRC-143 , PB-12	M
P268D FUEL INJECTOR 2 INJECTION QUANTITY ADJUSTMENT VALUE EC-1973	PARKING BRAKE SWITCH SIGNAL CIRCUIT WCS-49	
P268E FUEL INJECTOR 3 INJECTION QUANTITY ADJUSTMENT VALUE EC-1974	PARKING BRAKE SYSTEM PB-5	
P268F FUEL INJECTOR 4 INJECTION QUANTITY ADJUSTMENT VALUE EC-1975	PARKING COMPONENTS TM-470	N
P2690 INJECTOR SOLENOID DRIVER CYLINDER 5 EC-1976	PARKING LAMP CIRCUIT EXL-103 , EXL-261	
P2691 INJECTOR SOLENOID DRIVER CYLINDER 6 EC-1977	PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM EXL-68 , EXL-224	O
P2692 INJECTOR SOLENOID DRIVER CYLINDER 7 EC-1978	PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON EXL-127 , EXL-285	
	PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS BRC-156	P
	PERFORMANCE TEST HA-24	
	PERIODIC MAINTENANCE MA-9 , MA-58	
	PERSONAL LAMP INL-72	
	POSITIVE CRANKCASE VENTILATION EC-726	
	POWER DISTRIBUTION SYSTEM PCS-57	

POWER DOOR LOCK SYSTEM.....DLK-56
 POWER GENERATION VOLTAGE VARIABLE
 CONTROL SYSTEM OPERATION
 INSPECTIONCHG-37
 POWER SEAT FOR DRIVER SIDE WITHOUT
 AUTOMATIC DRIVE POSITIONERSE-24
 POWER SEAT FOR PASSENGER SIDE.....SE-30
 POWER SEAT SWITCH.....ADP-143, SE-109
 POWER SEAT SWITCH GROUND CIRCUIT
 ADP-99
 POWER SOCKETPWO-3, PWO-6, PWO-11
 POWER STEERING FLUIDST-16, ST-34
 POWER STEERING OIL COOLER.....ST-75
 POWER STEERING OIL PUMPST-21, ST-66
 POWER SUPPLY ROUTING CIRCUITPG-13
 POWER WINDOW AND DOOR LOCK/UNLOCK
 SWITCH RHPWC-18, PWC-79
 POWER WINDOW LOCK SWITCH DOES NOT
 FUNCTION.....PWC-75
 POWER WINDOW MOTOR.....PWC-40
 POWER WINDOW RETAINED POWER
 OPERATION DOES NOT OPERATE
 PROPERLYPWC-72
 POWER WINDOW SERIAL LINKPWC-54
 POWER WINDOW SYSTEMPWC-20
 PRE-INSPECTION FOR DIAGNOSTICADP-63
 PRECAUTIONHRN-2, SN-3
 PRECAUTIONS.....ACC-2, ADP-4, AV-10, AV-75,
 AV-167, AV-292, AV-364, AV-392, AV-443,
 BCS-3, BR-3, BRC-4, BRM-116, BRM-191,
 CCS-2, CHG-3, CO-3, CO-34, DAS-4, DAS-50,
 DEF-3, DLK-6, DLN-11, DLN-143, DLN-152,
 DLN-161, DLN-177, DLN-208, DLN-241,
 DLN-271, DLN-377, DLN-407, EC-29, EC-731,
 EM-7, EM-165, EX-3, EX-8, EXL-6, EXL-153,
 EXT-3, FAX-2, FL-3, FL-21, FSU-2, GI-23,
 GW-2, HA-3, HAC-6, HAC-136, INL-3, INT-2,
 IP-2, LAN-40, LAN-59, LAN-222, LU-3, LU-20,
 MA-4, MA-53, MIR-2, MWI-6, MWI-114, PB-2,
 PCS-3, PCS-44, PG-3, PWC-4, PWO-13,
 RAX-2, RSU-2, SB-2, SE-4, SEC-4, SR-2,
 SRC-4, ST-3, STR-2, TM-10, TM-261, TTS-2,
 VTL-2, WCS-4, WT-3, WW-3
 PROCEDURE FOR TEMPORARILY DISABLING
 THE IGNITION BATTERY SAVER SYSTEM
 PCS-76
 PROPELLER SHAFT ASSEMBLYDLN-146,
 DLN-155, DLN-164
 PTC BRANCH LINE CIRCUIT. LAN-204, LAN-259,
 LAN-523
 PTC HEATERHAC-111, HAC-133, HAC-220,
 HAC-239
 PTC HEATER CONTROL UNIT HAC-39, HAC-164
 PTC HEATER RELAY.....HAC-109, HAC-218
 PUDDLE LAMPINL-77
 PULLEY, FAN IDLER.....CO-76

PUSH BUTTON IGNITION SWITCHSEC-153
 PUSH-BUTTON IGNITION SWITCH.....PCS-90,
 PCS-98
 PUSH-BUTTON IGNITION SWITCH DOES NOT
 OPERATE.....PCS-95
 PUSH-BUTTON IGNITION SWITCH
 ILLUMINATION CIRCUITINL-65
 PUSH-BUTTON IGNITION SWITCH POSITION
 INDICATOR DOES NOT ILLUMINATE PCS-96

R

RADIATOR.....CO-13, CO-49
 RADIATOR CORE SUPPORTDLK-150
 RAIN SENSOR.....WW-39, WW-60
 RANGE SENSOR.....DLN-133
 RDR-L BRANCH LINE CIRCUITLAN-207, LAN-365,
 LAN-408, LAN-492, LAN-670, LAN-749,
 LAN-794, LAN-878, LAN-968, LAN-1016,
 LAN-1110, LAN-1177, LAN-1220, LAN-1287,
 LAN-1329, LAN-1374, LAN-1417, LAN-1465,
 LAN-1513, LAN-1562, LAN-1610
 RDR-R BRANCH LINE CIRCUITLAN-206, LAN-364,
 LAN-407, LAN-491, LAN-669, LAN-748,
 LAN-793, LAN-877, LAN-967, LAN-1015,
 LAN-1109, LAN-1176, LAN-1219, LAN-1286,
 LAN-1328, LAN-1373, LAN-1416, LAN-1464,
 LAN-1512, LAN-1561, LAN-1609
 REAR BRAKE CALIPERBR-61
 REAR BUMPEREXT-28
 REAR CAMERAAV-363
 REAR COMBINATION LAMP ...EXL-145, EXL-150,
 EXL-304, EXL-309
 REAR DIFFERENTIAL GEAR OILDLN-248,
 DLN-347, DLN-384, DLN-482
 REAR DISC BRAKEBR-9, BR-19, BR-44
 REAR DOOR.....DLK-161
 REAR DOOR FINISHERINT-17
 REAR DOOR GLASSGW-20
 REAR DOOR GLASS REGULATOR.....GW-22
 REAR DOOR LOCKDLK-177
 REAR DOOR SPEAKERAV-51, AV-69, AV-136,
 AV-161, AV-250, AV-283
 REAR DOOR TWEETERAV-247, AV-284
 REAR FINAL DRIVEDLN-254, DLN-289, DLN-360,
 DLN-390, DLN-424, DLN-493
 REAR FINAL DRIVE ASSEMBLYDLN-256,
 DLN-358, DLN-392, DLN-495
 REAR HEATED SEATSE-51
 REAR LH SIDE POWER WINDOW ALONE DOES
 NOT OPERATEPWC-66
 REAR OIL SEAL.....DLN-124, TM-229, TM-483
 REAR POWER SLIDE GLASS CIRCUIT CHECK...
 PWC-58
 REAR POWER SLIDE GLASS CLOSE RELAY
 CHECKPWC-61

REAR POWER SLIDE GLASS DOES NOT OPERATEPWC-76
 REAR POWER SLIDE GLASS OPEN RELAY CHECKPWC-59
 REAR POWER SLIDE GLASS SWITCH...PWC-81
 REAR POWER WINDOW MOTORGW-25
 REAR POWER WINDOW SWITCH.....PWC-80
 REAR PROPELLER SHAFT DLN-165, DLN-172
 REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE.....PWC-67
 REAR ROOF SPOILEREXT-57
 REAR SEAT SE-114, SE-143
 REAR SEAT BELT SB-14
 REAR SEAT ENTERTAINMENT CONTROL UNIT. AV-464
 REAR SEAT ENTERTAINMENT SYSTEM AV-447, AV-449, AV-460
 REAR STABILIZER RSU-12
 REAR SUSPENSION ASSEMBLY RSU-5
 REAR VIEW CAMERA..... AV-391
 REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT . AV-386
 REAR VIEW MONITOR SYSTEM .AV-374, AV-389
 REAR WHEEL HOUSE WIND DEFLECTOR.....EXT-46
 REAR WINDOW DEFOGGER..... DEF-44, DEF-58
 REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGERS DO NOT OPERATE... DEF-53
 REAR WINDOW DEFOGGER DOES NOT OPERATE DEF-52
 REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE DEF-54
 REAR WINDOW DEFOGGER RELAY DEF-40
 REAR WINDOW DEFOGGER SWITCH..... DEF-33
 REAR WINDOW DEFOGGER SWITCH DOES NOT LIGHT, BUT REAR WINDOW DEFOGGER OPERATES..... DEF-57
 REAR WINDOW DEFOGGER SYSTEM DEF-15
 REAR WINDOW DEFOGGER SYSTEM SYMPTOMS..... DEF-51
 REAR WINDOW GLASS AND MOLDING ... GW-26
 RECLINING MOTORADP-123
 RECLINING SENSORADP-104
 RECLINING SWITCHADP-81
 RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS GI-22
 RECOMMENDED FLUIDS AND LUBRICANTS MA-13, MA-62
 REFRIGERANT HA-17
 REFRIGERANT PRESSURE SENSOR EC-710, HAC-127, HAC-233
 REFRIGERATION SYSTEM SYMPTOMS.... HA-26
 REMOTE KEYLESS ENTRY RECEIVER DLK-112, DLK-197, SEC-152

REPAIRING HIGH STRENGTH STEEL ..BRM-121, BRM-195
 REPAIRING MATERIALBRM-125, BRM-199
 REPAIRING PROCEDURES AND PRECAUTIONS BRM-55
 REPLACEMENT OPERATIONSBRM-142, BRM-215
 RESERVOIR TANK CO-52
 RIGHT/LEFT SWITCHING SIGNAL CIRCUIT DAS-108
 ROCKER ARM EM-326
 ROCKER COVER EM-38, EM-317
 ROD ANTENNA AV-74, AV-165, AV-290
 ROOF SIDE MOLDINGEXT-50
 ROTARY TURBINE CONTROL VALVE LINKAGE. EM-419
 ROTARY TURBINE CONTROL VALVE ACTUATOR EM-417
 ROTARY TURBINE CONTROL VALVE ACTUATOR CALIBRATION EC-902
 ROTARY TURBINE CONTROL VALVE ACTUATOR TEST EC-901

S

S CONNECTOR CIRCUITSTR-32
 S TERMINAL CIRCUIT CHG-44
 SAFETY AND HEALTH.....BRM-50
 SATELLITE RADIO ANTENNAAV-72, AV-162, AV-287
 SCR CONTROL UNIT EC-1999
 SCR TEMPERATURE SENSOR MODULE .. EX-55
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT . WCS-47
 SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG INDCTR IS ON OR OFF SRC-146
 SEAT BELT PRE-TENSIONER SR-29
 SEAT BELT WARNING SYSTEM SRC-144
 SEAT CUSHION THERMAL ELECTRIC DEVICE .. SE-78
 SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR SE-80
 SEAT HEATER SE-113
 SEAT MEMORY INDICATOR..... ADP-136
 SEAT MEMORY SWITCHADP-91, ADP-142
 SEATBACK THERMAL ELECTRIC DEVICESE-74, SE-103
 SEATBACK THERMAL ELECTRIC DEVICE SENSOR SE-76
 SECURITY INDICATOR LAMP SEC-141
 SENSOR POWER SUPPLY 2 CIRCUIT EC-712
 SENSOR POWER SUPPLY 3 CIRCUIT EC-714
 SENSOR ROTOR BRC-164
 SERVICE AFTER REPLACING OR REMOVING ENGINE PARTS..... EC-885

SERVICE DATA AND SPECIFICATIONS (SDS).....
 ACC-5, BR-67, CO-33, CO-81, DLN-142,
 DLN-151, DLN-160, DLN-175, DLN-206,
 DLN-238, DLN-269, DLN-375, DLN-405,
 DLN-509, EC-730, EC-2001, EM-154, EM-529,
 EXL-152, EXL-311, FAX-28, FL-20, FL-58,
 FSU-36, HA-51, LU-19, LU-62, PB-15, PG-195,
 PWO-51, RSU-14, ST-84, TM-257, TM-602,
 WT-76, WW-63

SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT GI-43
 SHEET METAL WORK..... BRM-6
 SHIFT LOCK SYSTEM..... TM-210, TM-442
 SHIFT POSITION INDICATOR CIRCUIT ... TM-441
 SHIPPING MODE CANCEL OPERATION . BCS-65
 SHOCK ABSORBER..... RSU-11
 SIDE AIR BAG (SATELLITE) SENSOR SR-24
 SIDE AIR BAG MODULE SR-21
 SIDE CAMERA..... AV-362
 SIDE CURTAIN AIR BAG MODULE..... SR-19
 SIDE OIL SEAL DLN-183, DLN-214
 SIDE PROTECTIVE STRIP..... EXT-58
 SIDE RADAR..... DAS-120
 SIDE RADAR LH DAS-78
 SIDE RADAR RH DAS-80
 SIDE STEP..... EXT-47
 SLIDING MOTOR..... ADP-121
 SLIDING SENSOR ADP-101
 SLIDING SWITCH ADP-79
 SLIP INDICATOR LAMP..... BRC-150
 SNAP ACCELERATION TEST..... EC-896
 SONAR BRANCH LINE CIRCUIT LAN-212,
 LAN-290, LAN-327, LAN-366, LAN-409,
 LAN-449, LAN-495, LAN-556, LAN-630,
 LAN-671, LAN-709, LAN-795, LAN-837,
 LAN-881, LAN-923, LAN-971, LAN-1019,
 LAN-1064, LAN-1115, LAN-1178, LAN-1221,
 LAN-1288, LAN-1375, LAN-1420, LAN-1468,
 LAN-1516, LAN-1567, LAN-1613
 SONAR CONTROL UNIT..... SN-14, SN-66
 SONAR SENSOR..... SN-63
 SONAR SYSTEM SN-19, SN-62
 SONAR SYSTEM OFF SWITCH..... SN-68
 SONAR SYSTEM OFF SWITCH CIRCUIT ... SN-58
 SONAR SYSTEM OFF SWITCH INDICATOR LAMP
 CIRCUIT SN-60
 SPARK PLUG..... EM-28
 SPIRAL CABLE SR-14
 SPOTTER MIRROR GLASS MIR-34
 SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
 EXT-18, GW-5, INT-8, IP-8, SE-89
 SRS AIR BAG CONTROL SYSTEM SRC-24
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 OFF SRC-143
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 ON SRC-142

STABILIZER BAR FSU-23
 STALL TEST TM-100, TM-362
 STARTER MOTOR STR-35, STR-41
 STARTING SYSTEM STR-6, STR-8, STR-34
 STEERING ANGLE SENSOR BRC-168
 STEERING BOX..... ST-53
 STEERING COLUMN..... ST-19, ST-32, ST-38
 STEERING COLUMN COVERS..... IP-18
 STEERING GEAR AND LINKAGE ... ST-23, ST-62,
 ST-77, ST-82
 STEERING KNUCKLE FSU-28
 STEERING LINKAGE..... ST-56
 STEERING SWITCH AV-55, AV-140, AV-258,
 AV-289, MWI-96, MWI-175
 STEERING SWITCHES AV-70, AV-164
 STEERING WHEEL..... ST-17, ST-36
 STOP LAMP EXL-77, EXL-233
 STRG BRANCH LINE CIRCUIT LAN-193, LAN-254,
 LAN-281, LAN-317, LAN-355, LAN-397,
 LAN-437, LAN-481, LAN-518, LAN-547,
 LAN-582, LAN-620, LAN-660, LAN-698,
 LAN-739, LAN-783, LAN-825, LAN-868,
 LAN-911, LAN-957, LAN-1005, LAN-1050,
 LAN-1099, LAN-1136, LAN-1167, LAN-1209,
 LAN-1244, LAN-1277, LAN-1319, LAN-1363,
 LAN-1407, LAN-1454, LAN-1502, LAN-1551,
 LAN-1599
 STRUCTURE AND OPERATION DLN-21, DLN-180,
 EC-54, EC-754, TM-23, TM-272
 SUB BATTERY TRAY PG-189
 SUBWOOFER AV-253, AV-285
 SUNLOAD SENSOR HAC-125
 SYSTEM (INTEGRATED HOMELINK
 TRANSMITTER)..... DLK-31
 SYSTEM (INTELLIGENT KEY SYSTEM) .. DLK-19
 SYSTEM SETTING HAC-67
 SYSTEM SETTINGS CANNOT BE TURNED ON/
 OFF ON THE INTEGRAL SWITCH.... DAS-117
 SYSTEM SYMPTOM TM-213, TM-445

T

TAIL LAMP CIRCUIT EXL-107, EXL-265
 TAILGATE DLK-166
 TAILGATE FINISHER EXT-56
 TAILGATE LOCK DLK-182
 TAILGATE TRIM EXT-55
 TCM TM-51, TM-223, TM-324

TCM BRANCH LINE CIRCUIT [LAN-185](#), [LAN-251](#),
[LAN-277](#), [LAN-312](#), [LAN-351](#), [LAN-392](#),
[LAN-432](#), [LAN-476](#), [LAN-515](#), [LAN-543](#),
[LAN-578](#), [LAN-615](#), [LAN-656](#), [LAN-694](#),
[LAN-735](#), [LAN-778](#), [LAN-820](#), [LAN-864](#),
[LAN-906](#), [LAN-952](#), [LAN-1000](#), [LAN-1045](#),
[LAN-1094](#), [LAN-1133](#), [LAN-1163](#), [LAN-1204](#),
[LAN-1241](#), [LAN-1273](#), [LAN-1315](#), [LAN-1358](#),
[LAN-1403](#), [LAN-1449](#), [LAN-1497](#), [LAN-1546](#),
[LAN-1594](#)

TCU [AV-402](#), [AV-439](#)

TCU BRANCH LINE CIRCUIT [LAN-201](#), [LAN-323](#),
[LAN-403](#), [LAN-443](#), [LAN-487](#), [LAN-626](#),
[LAN-789](#), [LAN-831](#), [LAN-917](#), [LAN-963](#),
[LAN-1011](#), [LAN-1056](#), [LAN-1105](#), [LAN-1215](#),
[LAN-1369](#), [LAN-1460](#), [LAN-1508](#), [LAN-1557](#),
[LAN-1605](#)

TEL ANTENNA [AV-441](#)

TELEMATICS SWITCH [AV-440](#)

TELEMATICS SYSTEM [AV-406](#), [AV-436](#)

TELESCOPIC MOTOR [ADP-131](#)

TELESCOPIC SENSOR [ADP-115](#)

TELESCOPIC SWITCH [ADP-89](#)

THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT [MWI-107](#), [MWI-186](#)

THE BRAKING DISTANCE IS LONG [BRC-154](#)

THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY
[MWI-105](#), [MWI-184](#)

THE FUEL GAUGE INDICATOR DOES NOT
OPERATE [MWI-100](#), [MWI-179](#)

THE LIGHT REMINDER WARNING DOES NOT
SOUND [WCS-52](#)

THE LOW WASHER FLUID WARNING
CONTINUES DISPLAYING, or DOES NOT
DISPLAY [MWI-104](#), [MWI-183](#)

THE METER CONTROL SWITCH IS INOPERATIVE
[MWI-101](#), [MWI-180](#)

THE OIL PRESSURE WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY
[MWI-102](#), [MWI-181](#)

THE PARKING BRAKE RELEASE WARNING
CONTINUES DISPLAYING, OR DOES NOT
DISPLAY [MWI-103](#), [MWI-182](#)

THE PARKING BRAKE RELEASE WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND [WCS-54](#)

THE SEAT BELT WARNING CONTINUES
SOUNDING, OR DOES NOT SOUND [WCS-53](#)

THE STEERING SWITCHES ARE INOPERATIVE
[MWI-106](#), [MWI-185](#)

THROTTLE VALVE CLOSED POSITION
LEARNING [EC-199](#)

TIE DOWN CLEAT [EXT-54](#)

TIGHTENING TORQUE OF STANDARD BOLTS...
[GI-19](#)

TILT & TELESCOPIC SWITCH GROUND CIRCUIT
[ADP-100](#)

TILT MOTOR [ADP-129](#)

TILT SENSOR [ADP-113](#)

TILT SWITCH [ADP-87](#)

TIMING CHAIN [EM-74](#)

TIRE PRESSURE MONITORING SYSTEM [WT-14](#),
[WT-19](#)

TIRE PRESSURE SENSOR [WT-71](#)

TOP TETHER STRAP CHILD RESTRAINT [SB-18](#)

TORQUE CONVERTER [TM-256](#)

TOW MODE SWITCH [TM-207](#), [TM-463](#)

TOW MODE SYSTEM [TM-439](#)

TOW TRUCK TOWING [GI-32](#)

TPMS [WT-54](#)

TPMS BRANCH LINE CIRCUIT [LAN-202](#), [LAN-257](#),
[LAN-287](#), [LAN-324](#), [LAN-361](#), [LAN-404](#),
[LAN-444](#), [LAN-488](#), [LAN-521](#), [LAN-553](#),
[LAN-588](#), [LAN-627](#), [LAN-666](#), [LAN-704](#),
[LAN-745](#), [LAN-790](#), [LAN-832](#), [LAN-874](#),
[LAN-918](#), [LAN-964](#), [LAN-1012](#), [LAN-1057](#),
[LAN-1106](#), [LAN-1139](#), [LAN-1173](#), [LAN-1216](#),
[LAN-1247](#), [LAN-1283](#), [LAN-1325](#), [LAN-1370](#),
[LAN-1413](#), [LAN-1461](#), [LAN-1509](#), [LAN-1558](#),
[LAN-1606](#)

TRAILER BRAKE CONTROL UNIT [TTS-26](#)

TRAILER HITCH [TTS-24](#)

TRAILER TOWING SYSTEM [TTS-10](#)

TRANSFER ASSEMBLY [DLN-139](#)

TRANSFER CONTROL UNIT [DLN-33](#), [DLN-120](#)

TRANSFER FLUID [DLN-118](#)

TRANSFER MOTOR [DLN-129](#)

TRANSFER ROTARY POSITION SENSOR
[DLN-127](#)

TRANSFER ROTARY POSITION SENSOR
LEARNING VALUE INITIALIZATION [DLN-54](#)

TRANSMISSION ASSEMBLY [TM-248](#), [TM-506](#),
[TM-516](#)

TRANSMISSION RANGE SWITCH [TM-233](#)

TROUBLE DIAGNOSIS [LAN-46](#)

TROUBLE DIAGNOSIS - SPECIFICATION VALUE
[EC-220](#)

TURBOCHARGER [EM-210](#), [EM-398](#)

TURBOCHARGER COMPRESSOR BYPASS
ACTUATOR [EM-424](#)

TURBOCHARGER COMPRESSOR BYPASS
SOLENOID [EM-426](#)

TURBOCHARGER COMPRESSOR BYPASS
VALVE [EM-422](#)

TURBOCHARGER COMPRESSOR INTAKE
PRESSURE/TEMPERATURE SENSOR [EM-222](#)

TURBOCHARGER COMPRESSOR OUTLET
CONNECTION [EM-415](#)

TURBOCHARGER OIL DRAIN LINE [EM-409](#)

TURBOCHARGER OIL SUPPLY LINE [EM-412](#)

TURBOCHARGER SPEED SENSOR [EM-407](#)

A
B
C
D
E
F
G
H

J
K
L
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMP
SYSTEM.....EXL-58, EXL-214
TURN SIGNAL LAMP CIRCUIT EXL-113, EXL-271

U

U0002 DRIVETRAIN CAN COMMUNICATION.....
EC-914
U0073 COMMUNICATION BUS A OFF TM-197
U0100 LOST COMMUNICATION (ECM A)TM-198,
TM-364
U0101 CAN COMM CIRCUIT EC-231, EC-916
U0102 LOST COMMUNICATION (TRANSFER).....
TM-199
U0106 LOST COMMUNICATION (GLOW OUTPUT
STAGE)EC-918
U010C CAN COMMUNICATIONEC-922
U010E CAN COMMUNICATIONEC-927
U0113, U1003 CAN COMM CIRCUITEC-232
U0121 VDC CAN 2 DAS-30
U0140 LOST COMMUNICATION (BCM) ... TM-200
U0155 LOST COMMUNICATION (IPC) TM-201
U0284 ACTIVE GRILLE SHUTTEREC-235
U029D COMMUNICATION WITH NOX SENSOR 1
EC-931
U029E COMMUNICATION WITH NOX SENSOR 2
EC-935
U02A2 CAN COMMUNICATIONEC-939
U0300 CAN COMMUNICATION DATA TM-366
U0307 CAN COMMUNICATION.....EC-943
U0401 COMMUNICATION ERROR (INVALID).....
TM-202
U0401 ECM CAN 1 DAS-31
U0402 DRIVETRAIN CAN COMMUNICATION
(TCM)EC-944
U0402 TCM CAN 1 DAS-32
U0403 COMMUNICATION ERROR (INVALID).....
TM-203
U0405 ADAS CAN 2 DAS-101
U0407 CAN COMMUNICATION.....EC-945
U040D CAN COMMUNICATIONEC-946
U040F CAN COMMUNICATIONEC-948
U0415 CAN COMMUNICATION.....EC-951
U0415 VDC CAN 1 DAS-33
U0415 VEHICLE SPEED SIG BCS-66
U0416 COMMUNICATION ERROR (INVALID).....
TM-204
U0426 CAN COMMUNICATION (IMMOBILIZER)....
EC-953
U0428 STEERING ANGLE SENSOR AV-338
U059E CAN COMMUNICATIONEC-955
U059F CAN COMMUNICATIONEC-957

U1000 CAN COMM CIRCUITADP-65, AV-115,
AV-216, AV-340, AV-418, BCS-67, BRC-139,
DAS-34, DAS-103, DLK-75, DLN-106, DLN-339,
DLN-474, HAC-69, HAC-190, LAN-233, MWI-81,
MWI-163, PCS-35, PCS-77, SEC-69, SN-34,
SRC-58, TM-205, TM-368, WT-50
U1000 CAN COMMUNICATION CIRCUIT . EC-959
U1001 CAN COMM CIRCUIT EC-238, EC-962
U1010 CONTROL UNIT (CAN)ADP-66, AV-116,
AV-217, AV-341, AV-419, BCS-68, DLK-76,
DLN-107, DLN-340, DLN-475, HAC-70,
HAC-191, LAN-234, MWI-82, MWI-164, PCS-37,
PCS-78, SEC-70, SN-35, SRC-59, WT-51
U1024 CAN COMM CIRCUIT EC-239
U1040 ENG COMM CIRCUIT EC-241
U1044 ENG COMM CIRCUIT EC-243
U1117 LOST COMMUNICATION (ABS)..... TM-206
U111A REAR CAMERA IMAGE SIGNAL CIRCUIT.
AV-342
U111B SIDE CAMERA RH IMAGE SIGNAL
CIRCUITAV-344
U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT
AV-346
U111D SIDE CAMERA LH IMAGE SIGNAL
CIRCUITAV-348
U11C1 CAN COMMUNICATION EC-964
U1217 AV CONTROL UNIT AV-117, AV-218
U1229 AV CONTROL UNIT AV-118, AV-219
U1232 STEERING ANGLE SENSORAV-350
U1244 GPS ANTENNA AV-119, AV-220
U1258 SATELLITE RADIO ANTENNAAV-120,
AV-221
U1263 USB AV-122, AV-223
U1265 AUDIO AMP.AV-224
U12AA CONFIGURATION ERRORAV-123, AV-226
U12AB ANTENNA AV-124, AV-227
U12AC AV CONTROL UNIT AV-125, AV-228
U12AD AV CONTROL UNIT AV-126, AV-229
U12AE AV CONTROL UNIT AV-127, AV-230
U12AF AV CONTROL UNIT AV-128, AV-231
U12B0 POWER SUPPLY VOLTAGEAV-129, AV-232
U12B1 POWER SUPPLY VOLTAGEAV-130, AV-233
U1302 CAMERA POWER VOLTAV-351
U1304 CAMERA IMAGE CALIBRATIONAV-355
U1305 CONFIG UNFINISHAV-356
U1321 CONFIGURATION DAS-36, HAC-71
U1325 CALIBRATION MWI-83
U1503 SIDE RDR L CAN 2 DAS-37
U1504 SIDE RDR L CAN 1 DAS-39
U1505 SIDE RDR R CAN 2 DAS-41
U1506 SIDE RDR R CAN 1 DAS-43
U1507 LOST COMM(SIDE RDR R) DAS-45
U1508 LOST COMM(SIDE RDR L)..... DAS-46
U1611 CAN COMMUNICATION EC-967
U1612 CAN COMMUNICATION EC-971
U1A00 TCUAV-420

U1A05 TCU	AV-421
U1A06 TEL ANTENNA	AV-423
U1A0A TCU	AV-425
U1A0B MICROPHONE	AV-426
U1A0C MICROPHONE	AV-428
U1A0E TELEMATICS SWITCH	AV-430
U1A10 TCU	AV-432
U1A11 TCU	AV-433
U3017 CAN COMMUNICATION	EC-975
UNDER COVER	EXT-37
UNDER DRIVE CARRIER, FRONT BRAKE HUB ..	
TM-585	
UNEXPECTED PEDAL REACTION	BRC-153
UNLOCK SENSOR	DLK-108
UPPER LINK	FSU-20
USB CONNECTOR	AV-59, AV-142, AV-262
USB INTERFACE AND AUX IN JACK	AV-71,
AV-158, AV-278, AV-462	

V

VACUUM PUMP	EM-486
VALVE GUIDE SEAL	EM-370
VANITY MIRROR LAMP	INL-70
VARIABLE BLOWER CONTROL	HAC-134,
HAC-240	
VDC OFF INDICATOR LAMP	BRC-149
VDC OFF SWITCH	BRC-145, BRC-170
VDC/TCS/ABS	BRC-151
VEHICLE JERKS DURING VDC/TCS/ABS	
CONTROL	BRC-157
VEHICLE SECURITY SYSTEM	SEC-50
VENTILATION SYSTEM	VTL-6
VIBRATION DAMPER	EM-489
VIN REGISTRATION	EC-197, EC-895
VVEL ACTUATOR ASSEMBLY	EM-41
VVEL CONTROL MODULE	EC-151, EC-728
VVEL CONTROL SHAFT POSITION SENSOR	
ADJUSTMENT	EC-202

W

WARNING BUZZER	DAS-119
WARNING BUZZER CIRCUIT	DAS-109
WARNING CHIME SYSTEM	WCS-25
WARNING CHIME SYSTEM SYMPTOMS	WCS-51
WARNING SYSTEM SWITCH	DAS-123
WARNING SYSTEM SWITCH CIRCUIT ..	DAS-111
WARNING SYSTEMS ON INDICATOR CIRCUIT ..	
DAS-113	
WASHER FLUID LEVEL SWITCH	WW-53
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-95,
MWI-174	
WASHER MOTOR CIRCUIT	WW-38
WASHER NOZZLE AND TUBE	WW-57
WASHER SWITCH	WW-41
WASHER TANK	WW-51

WATER INLET CONNECTION	CO-71
WATER OUTLET CONNECTION	CO-80
WATER PUMP	CO-25, CO-57
WATER TRANSFER CONNECTION	CO-78
WATER-IN-FUEL FILTER SENSOR	FL-52
WHEEL	WT-65
WHEEL ALIGNMENT	FSU-7
WHEEL AND TIRE	WT-66, WT-69
WHEEL HUB	FAX-6, FAX-7
WHEEL SENSOR	BRC-159
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-31
WIPER AND WASHER SWITCH	WW-62
WIPER AND WASHER SYSTEM SYMPTOMS	
WW-42	

Y

YAW RATE/SIDE/DECEL G SENSOR	BRC-169
------------------------------------	---------