



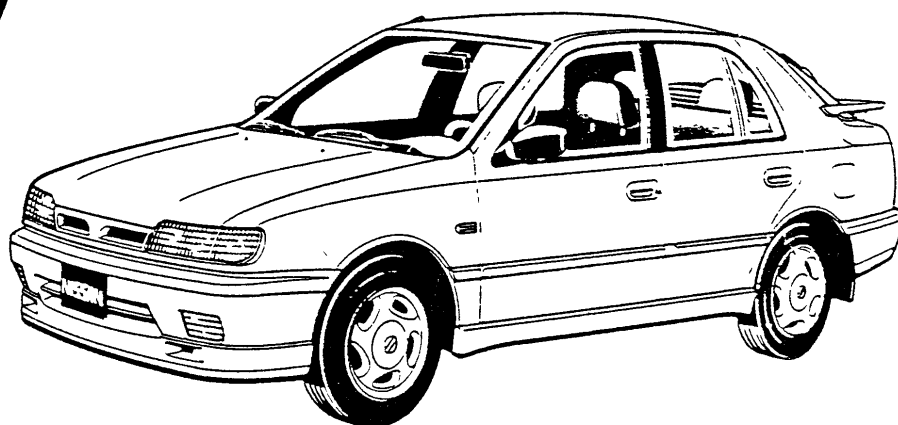

NISSAN

MODEL B13 AND N14 SERIES

Volume 2

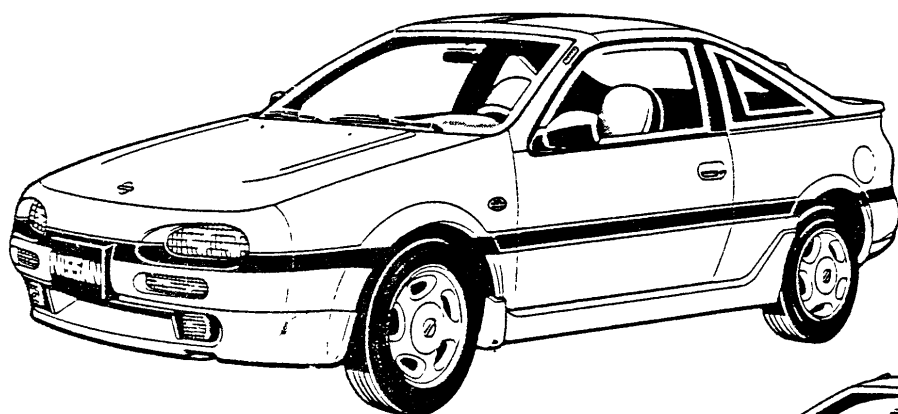

SERVICE MANUAL

QUICK REFERENCE INDEX

NISSAN

MODEL B13 AND N14 SERIES

Volume 1

GENERAL INFORMATION		GI
Volume 1	MAINTENANCE	MA
	ENGINE MECHANICAL	EM
	ENGINE LUBRICATION & COOLING SYSTEMS	LC
	ENGINE FUEL & EMISSION CONTROL SYSTEM	EF
	ACCELERATOR CONTROL, FUEL & EXHAUST SYSTEMS	FE
Volume 2	CLUTCH	CL
	MANUAL TRANSAXLE	MT
	AUTOMATIC TRANSAXLE	AT
	TRANSFER	TR
	PROPELLER SHAFT & DIFFERENTIAL CARRIER	PD
	FRONT AXLE & FRONT SUSPENSION	FA
	REAR AXLE & REAR SUSPENSION	RA
	BRAKE SYSTEM	BR
	STEERING SYSTEM	ST
	BODY	BR
HEATER & AIR CONDITIONER	HA	
ELECTRICAL SYSTEM	EL	

GI (General Information) section is contained in
Volume 1 and Volume 2.

© 1990 NISSAN MOTOR CO., LTD. Printed in Japan

Not to be reproduced in whole or in part without the prior written permission of Nissan Motor Company Ltd., Tokyo, Japan.

FOREWORD

This manual (Volume 2) contains repair procedures for the following components of the model B13 and N14 series.

- | | |
|---|----------------------------------|
| 1. Chassis | 2. Body |
| • Clutch | 3. Heater & air conditioner unit |
| • Transaxle unit | 4. Electrical system |
| • Axle & suspension unit | |
| • Transfer unit | |
| • Propeller shaft &
Differential carrier | |
| • Brake system | |
| • Steering system | |

For maintenance and repair procedures for the engine, refer to Volume 1 (Pub. No. SM1E-1N4BG0).

In order to assure your safety and the efficient functioning of the vehicle, this manual should be read thoroughly. It is especially important that the PRECAUTIONS in the GI section be completely understood before starting any repair task.

All information in this manual is based on the latest product information at the time of publication. The right is reserved to make changes in specifications and methods at any time without notice.

IMPORTANT SAFETY NOTICE

The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle.

The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately.

Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by NISSAN must first completely satisfy himself that neither his safety nor the vehicle's safety will be jeopardized by the service method selected.



NISSAN MOTOR CO., LTD.

Overseas Service Department

Tokyo, Japan

GENERAL INFORMATION


SECTION **GI**

GI


CONTENTS

PRECAUTIONS	GI- 2
HOW TO USE THIS MANUAL	GI- 8
HOW TO READ WIRING DIAGRAMS	GI-10
HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES	GI-13
CONSULT CHECKING SYSTEM	GI-16
IDENTIFICATION INFORMATION	GI-18
LIFTING POINTS AND TOW TRUCK TOWING	GI-30
ON-THE-CAR WHEEL BALANCING	GI-37
TIGHTENING TORQUE OF STANDARD BOLTS	GI-39


Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.

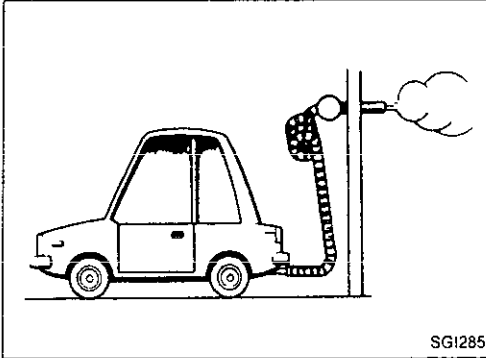


1. Do not operate the engine for an extended period of time without proper exhaust ventilation. Keep the work area well ventilated and free of any inflammable materials. Special care should be taken when handling any inflammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials. Do not smoke while working on the vehicle.

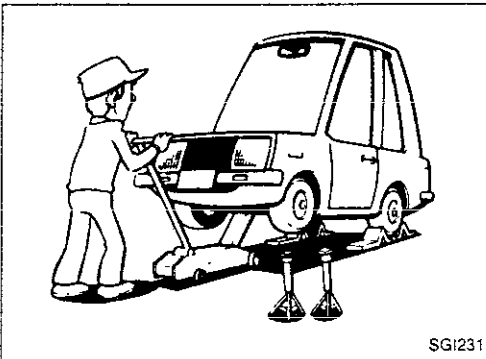

2. Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting and towing before working on the vehicle. These operations should be done on a level surface.
3. When removing a heavy component such as the engine or transaxle/transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

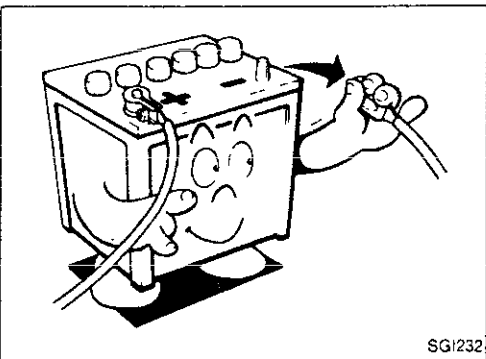


4. Before starting repairs which do not require battery power, always turn off the ignition switch, then disconnect the ground cable from the battery to prevent accidental short circuit.

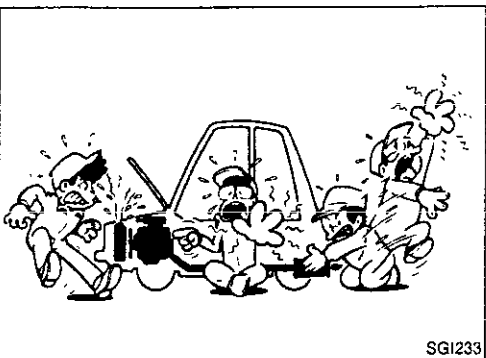


5. To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe and muffler. Do not remove the radiator cap when the engine is hot.

PRECAUTIONS

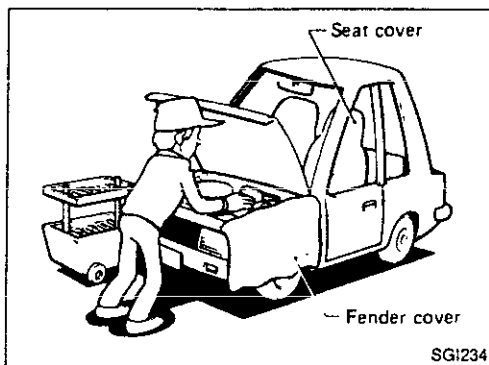


6. Before servicing the vehicle, protect fenders, upholstery and carpeting with appropriate covers. Take caution that keys, buckles or buttons on your person do not scratch the paint.

7. Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
8. Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
9. Replace inner and outer races of tapered roller bearings and needle bearings as a set.
10. Arrange the disassembled parts in accordance with their assembled locations and sequence.
11. Do not touch the terminals of electrical components which use microcomputers (such as electronic control units). Static electricity may damage internal electronic components.
12. After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
13. Use only the lubricants specified in MA section.
14. Use approved bonding agent, sealants or their equivalents when required.
15. Use tools and recommended special tools where specified for safe and efficient service repairs.
16. When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leaks.
17. Dispose of drained oil or the solvent used for cleaning parts in an appropriate manner.

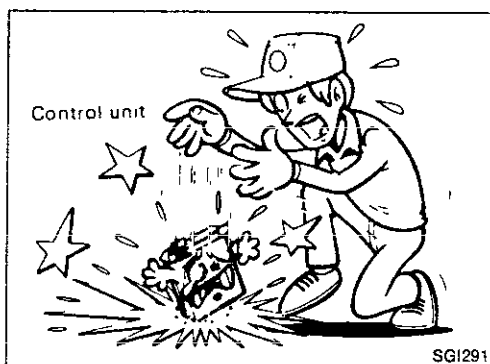

Precautions for E.F.I. or E.C.C.S. Engine


1. Before connecting or disconnecting E.F.I. or E.C.C.S. harness connector to or from any E.F.I. or E.C.C.S. control unit, be sure to turn the ignition switch to the "OFF" position and disconnect the negative battery terminal. Otherwise, there may be damage to control unit.
2. Before disconnecting pressurized fuel line from fuel pump to injectors, be sure to release fuel pressure to eliminate danger.
3. Be careful not to jar components such as control unit and air flow meter.

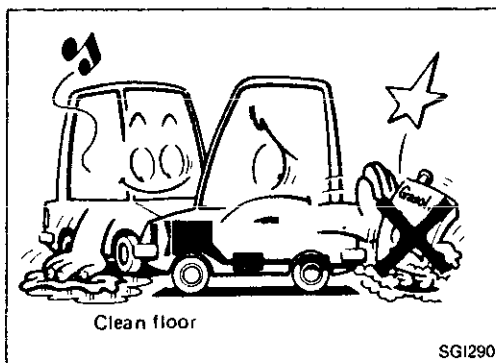

Precautions for Catalyst

If a large amount of unburned fuel flows into the converter, the converter temperature will be excessively high. To prevent this, follow the procedure below:

1. Use unleaded gasoline only. Leaded gasoline will seriously damage the catalytic converter.
2. When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
3. Do not run engine when the fuel tank level is low, otherwise the engine may misfire causing damage to the converter.
4. Do not place the vehicle on inflammable material. Keep inflammable material off the exhaust pipe.

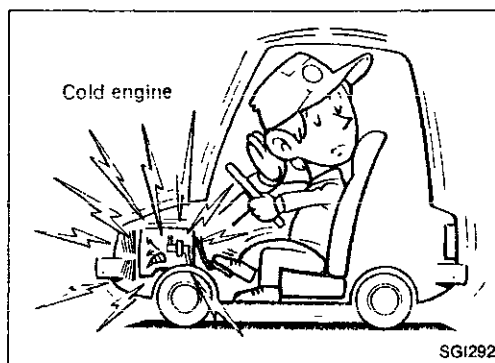

Precautions for Turbocharger

The turbocharger turbine revolves at extremely high speeds and becomes very hot. Therefore, it is essential to maintain a clean supply of oil flowing through the turbocharger and to follow all required maintenance instructions and operating procedures.

For proper operation of the system, follow the procedure below.

1. Always use the recommended oil. Follow the instructions for proper time to change the oil and proper oil level.
2. Avoid accelerating engine to a high rpm immediately after starting.
3. If engine had been operating at high rpm for an extended period of time, let it idle for a few minutes prior to shutting it off.

Asbestos Safety Instructions (Based on United Kingdom and Republic of Ireland regulations)

This vehicle uses parts containing asbestos. Most are not hazardous but Brake and Clutch linings can be. Consult the manufacturer or his agent for further details. When working with these please observe the "Garage Workers' Asbestos Code" available through your Nissan Dealer, Local Authority or Health and Safety Executive. In particular, work in a well-ventilated place using, where possible, appropriate dust extraction equipment, and avoid creating dust. Dampen all asbestos/dust where possible prior to machining, cutting, cleaning, etc. Use only hand or low speed tools.

Dispose of all asbestos waste, wet rags, etc., in a closed container as directed by your local waste disposal authority.

PRECAUTIONS

Engine Oils

Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer. Adequate means of skin protection and washing facilities must be provided.

HEALTH PROTECTION PRECAUTIONS

1. Avoid prolonged and repeated contact with oils, particularly used engine oils.
2. Wear protective clothing, including impervious gloves where practicable.
3. Do not put oily rags in pockets.
4. Avoid contaminating clothes, particularly underpants, with oil.
5. Heavily soiled clothing and oil-impregnated footwear should not be worn. Overalls must be cleaned regularly.
6. First Aid treatment should be obtained immediately for open cuts and wounds.
7. Use barrier creams, applying them before each work period, to help the removal of oil from the skin.
8. Wash with soap and water to ensure all oil is removed (skin cleansers and nail brushes will help). Preparations containing lanolin replace the natural skin oils which have been removed.
9. Do not use petrol, kerosine, diesel fuel, gas oil, thinners or solvents for cleaning skin.
10. If skin disorders develop, obtain medical advice without delay.
11. Where practicable, degrease components prior to handling.
12. Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.

(For the United Kingdom, see also HSE Cautionary Notice SHW 397 "Effects of Mineral Oil on the Skin".)

ENVIRONMENTAL PROTECTION PRECAUTIONS

Burning used engine oil in small space heaters or boilers can be recommended only for units of approved design. The heating system must meet the requirements of HM Inspectorate of Pollution for small burners of less than 0.4 MW. If in doubt check with the appropriate local authority and/or manufacturer of the approved appliance.

Dispose of used oil and used oil filters through authorized waste disposal contractors to licensed waste disposal sites, or to the waste oil reclamation trade. If in doubt, contact the local authority for advice on disposal facilities.

It is illegal to pour used oil on to the ground, down sewers or drains, or into water courses.

The regulations concerning the pollution of the environment will vary from country to country.

Precautions for Fuel

GASOLINE ENGINE:

For Europe

Catalytic converter equipped engines:

- GA14DS engine models except for Switzerland ...
Unleaded gasoline of at least 91 octane (RON)
- GA14DS engine models for Switzerland ...
Unleaded gasoline of at least 95 octane (RON)
- Except GA14DS engine models ...
Unleaded gasoline of at least 95 octane (RON)

CAUTION:

Do not use leaded gasoline. Using leaded gasoline will damage the catalytic converter.

Except catalytic converter equipped engines:

For the United Kingdom and France only

- GA14DS engine models ...
Unleaded gasoline of at least 91 octane (RON)
- Except GA14DS engine models ...
Unleaded gasoline of at least 95 octane (RON)

Except the United Kingdom and France

- GA14DS engine models ...
Unleaded or leaded gasoline of at least 91 octane (RON)
- Except GA14DS engine models ...
Unleaded or leaded gasoline of at least 95 octane (RON)

Except Europe

- Leaded gasoline of at least 88 octane (RON)
- GA16DS engine models for Middle East ...
Leaded gasoline of at least 95 octane (RON)

DIESEL ENGINE*:

CD17 engine models ... Diesel fuel of at least 45 cetane

CD20 engine models ... Diesel fuel of at least 50 cetane

* If two types of diesel fuel are available, use summer or winter fuel properly according to the following temperature conditions.

- Above -7°C (20°F) ... Summer type diesel fuel.
- Below -7°C (20°F) ... Winter type diesel fuel.

CAUTION:

- Do not use home heating oil, gasoline, or other alternate fuels in your diesel engine. The use of those can cause engine damage.
- Do not use summer fuel at temperature below -7°C (20°F). The cold temperatures will cause wax to form in the fuel. As a result, it may prevent the engine from running smoothly.
- Do not add gasoline or other alternate fuels to diesel fuel. Only under the following conditions may you use diesel fuel by mixing kerosene or regular gasoline (not premium gasoline) to prevent the fuel from thickening due to wax separation:


If the summer type diesel fuel is used at an ambient temperature below 0°C (32°F), add kerosene or regular gasoline but not more than 30% by volume. However, keep in mind that there may be less engine output performance due to the proportion of added fuel. The use of kerosene for motor vehicles is not permitted in some countries, e.g. U.K.

PRECAUTIONS

Precautions for Fuel (Cont'd)

Therefore, consult the relevant authorities before such mixtures are used.

1. **A QUICK REFERENCE INDEX**, a black tab (e.g. **BR**) is provided on the first page. You can quickly find the first page of each section by mating it to the section's black tab.
2. **THE CONTENTS** are listed on the first page of each section.
3. **THE TITLE** is indicated on the upper portion of each page and shows the part or system.
4. **THE PAGE NUMBER** of each section consists of two letters which designate the particular section and a number (e.g. "BR-5").
5. **THE LARGE ILLUSTRATIONS** are exploded views (See below) and contain tightening torques, lubrication points and other information necessary to perform repairs.
The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG**.

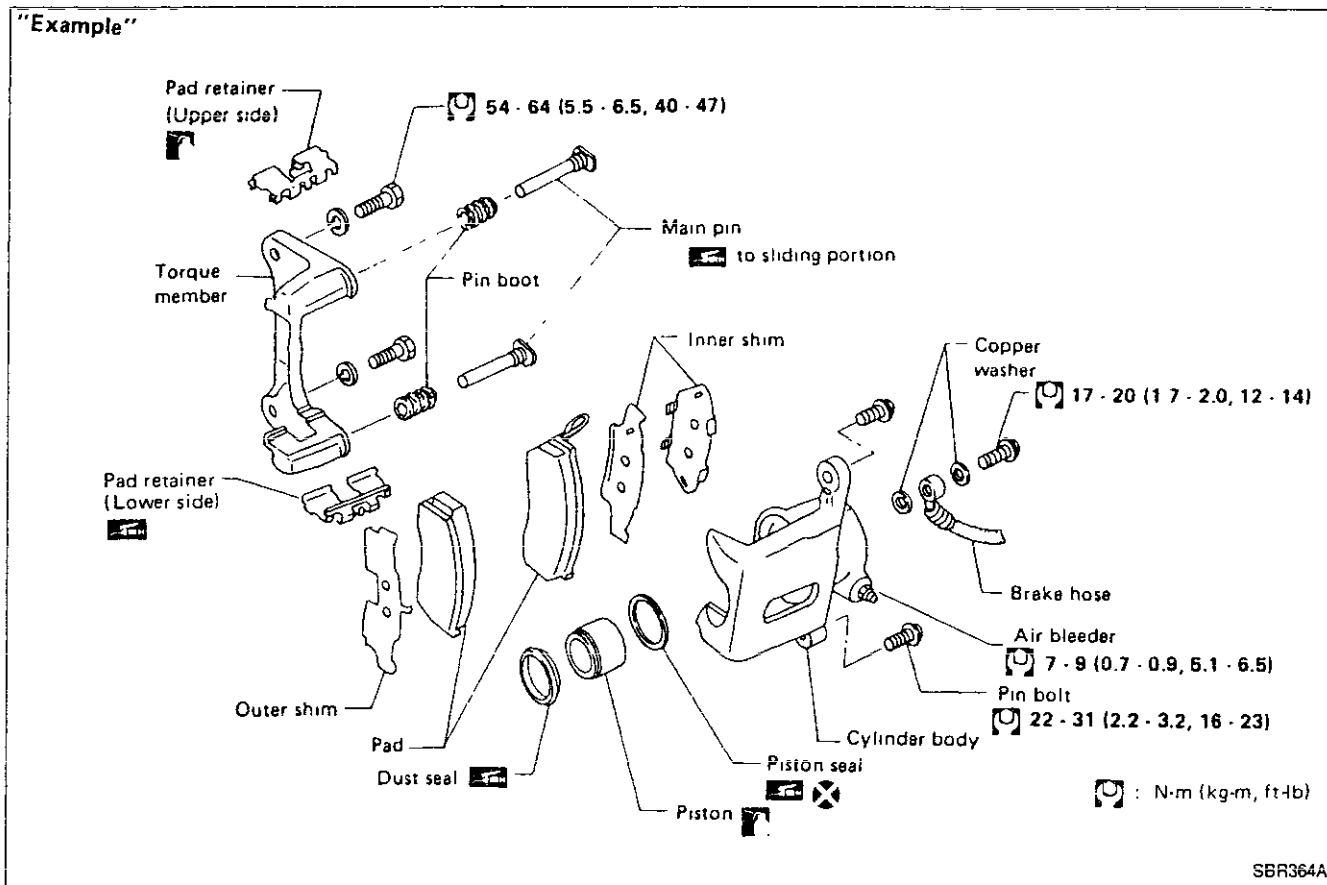

6. **THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations. Assembly, inspection and adjustment procedures for the complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.
7. The following **SYMBOLS AND ABBREVIATIONS** are used:

	: Tightening torque	2WD	: 2-Wheel Drive
	: Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.	4WD	: 4-Wheel Drive
	: Should be lubricated with oil.	M/T	: Manual Transaxle/Transmission
	: Sealing point	A/T	: Automatic Transaxle/Transmission
	: Checking point	A/C	: Air Conditioner
	: Always replace after every disassembly.	P/S	: Power Steering
L.H., R.H.	: Left-Hand, Right-Hand	S.S.T.	: Special Service Tools
FR, RR	: Front, Rear	S.D.S.	: Service Data and Specifications
		SAE	: Society of Automotive Engineers, Inc.
		G.C.C.	: Gulf Cooperation Council
		L.H.D.	: Left-Hand Drive
		R.H.D.	: Right-Hand Drive

HOW TO USE THIS MANUAL

8. The **UNITS** given in this manual are primarily expressed as the SI UNIT (International System of Unit), and alternatively expressed in the metric system and in the yard/pound system.

"Example"



Tightening torque:

59 - 78 N·m (6.0 - 8.0 kg-m, 43 - 58 ft-lb)

9. **TROUBLE DIAGNOSES** are included in sections dealing with complicated components.
10. **SERVICE DATA AND SPECIFICATIONS** are contained at the end of each section for quick reference of data.
11. The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.
- **WARNING** indicates the possibility of personal injury if instructions are not followed.
 - **CAUTION** indicates the possibility of component damage if instructions are not followed.
 - **BOLD TYPED STATEMENTS** except **WARNING** and **CAUTION** give you helpful information.

WIRING DIAGRAM

Symbols used in WIRING DIAGRAM are shown below:

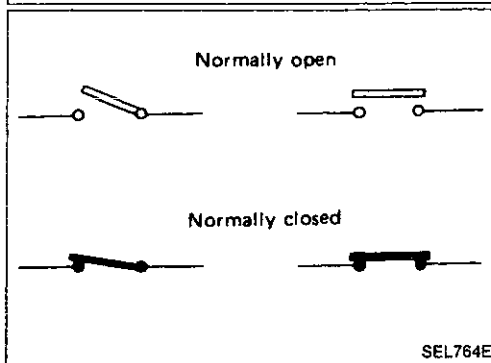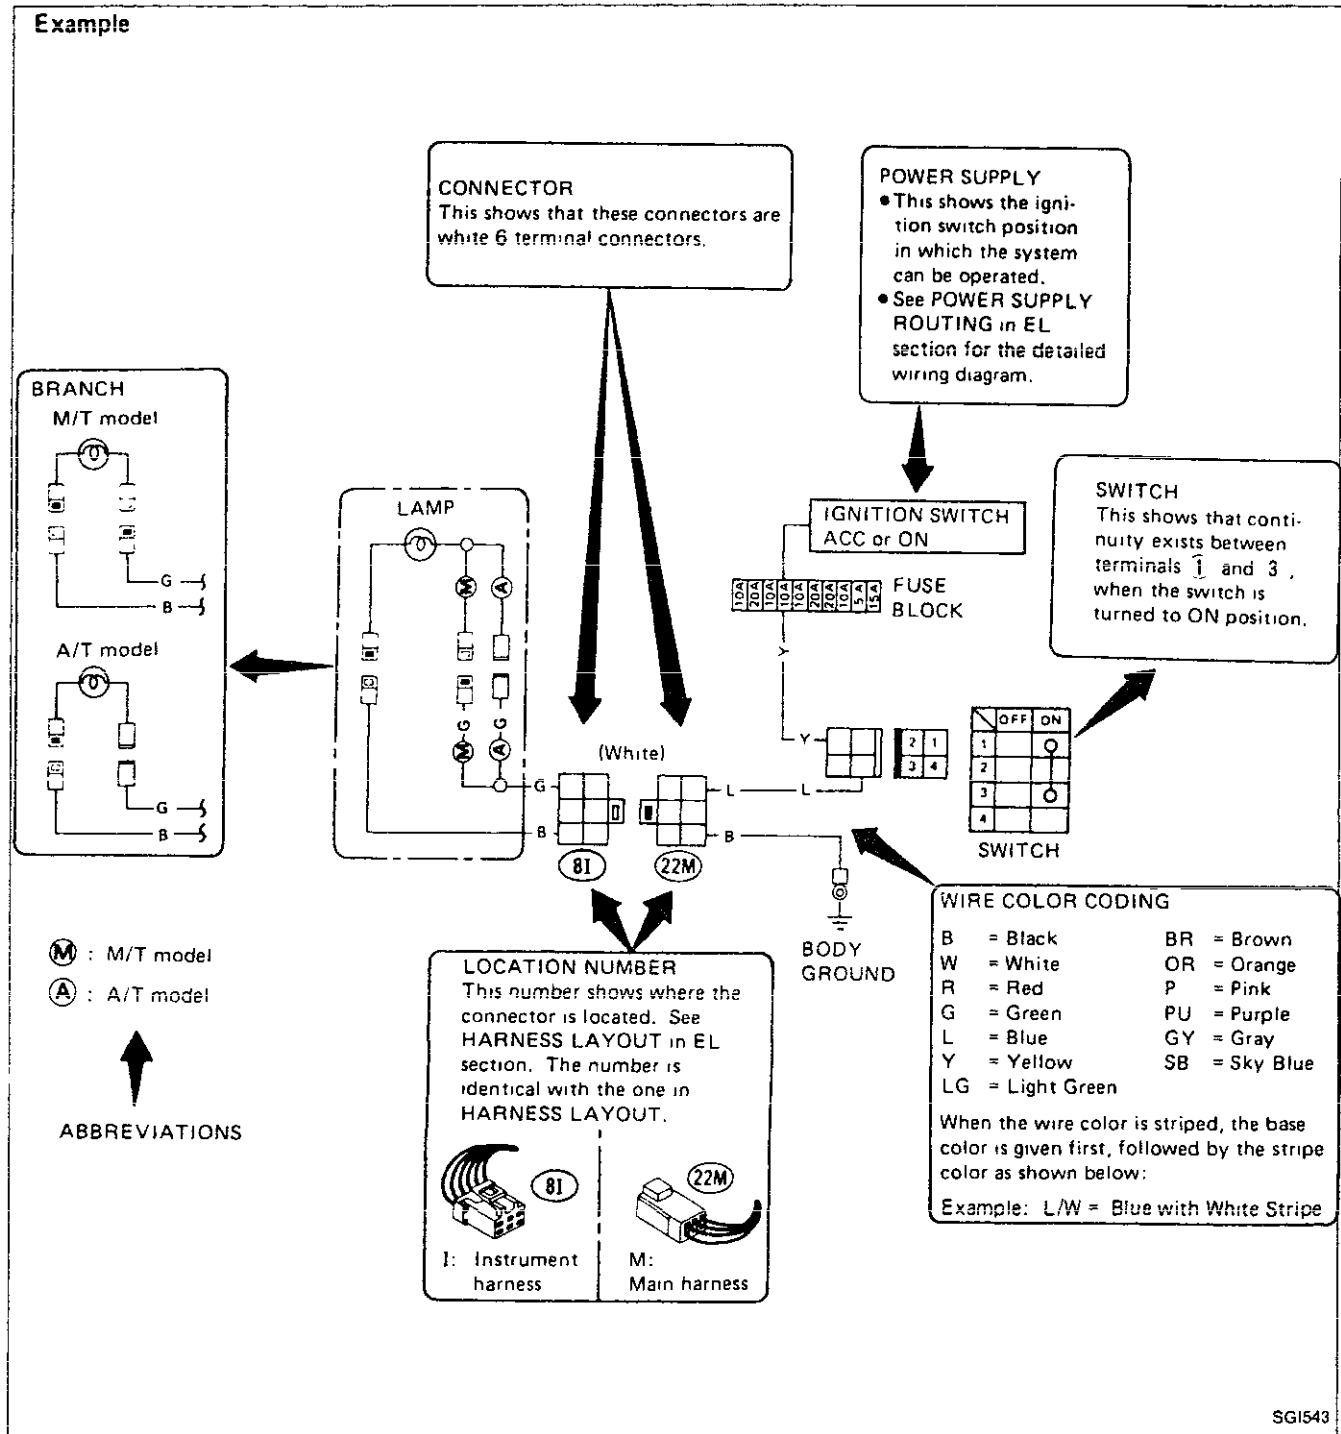


SWITCH POSITIONS

Wiring diagram switches are shown with the vehicle in the following condition.

- Ignition switch "OFF".
- Doors, hood and trunk lid/back door closed.
- Pedals are not depressed and parking brake is released.


Example

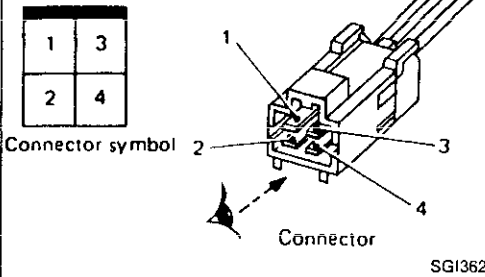

CONNECTOR SYMBOLS

- All connector symbols in wiring diagrams are shown from the terminal side.

Example

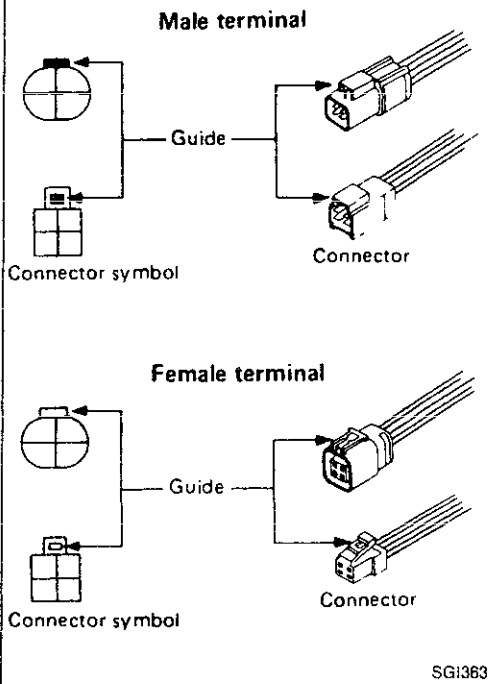


- Male and female terminals
Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

MULTIPLE SWITCH

The continuity of the multiple switch is identified in the switch chart in wiring diagrams.

Example

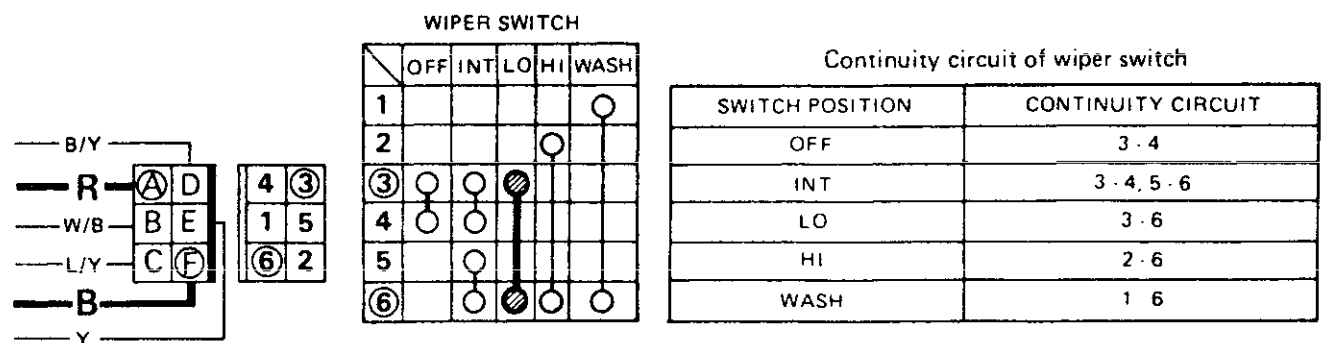


SGI365


SUPER MULTIPLE JUNCTION (S.M.J.)

- The "S.M.J." indicated in wiring diagrams is shown in a simplified form. The terminal arrangement should therefore be referred to in the foldout at the end of the Service Manual.
- The foldout should be spread to read the entire wiring diagram.


Example

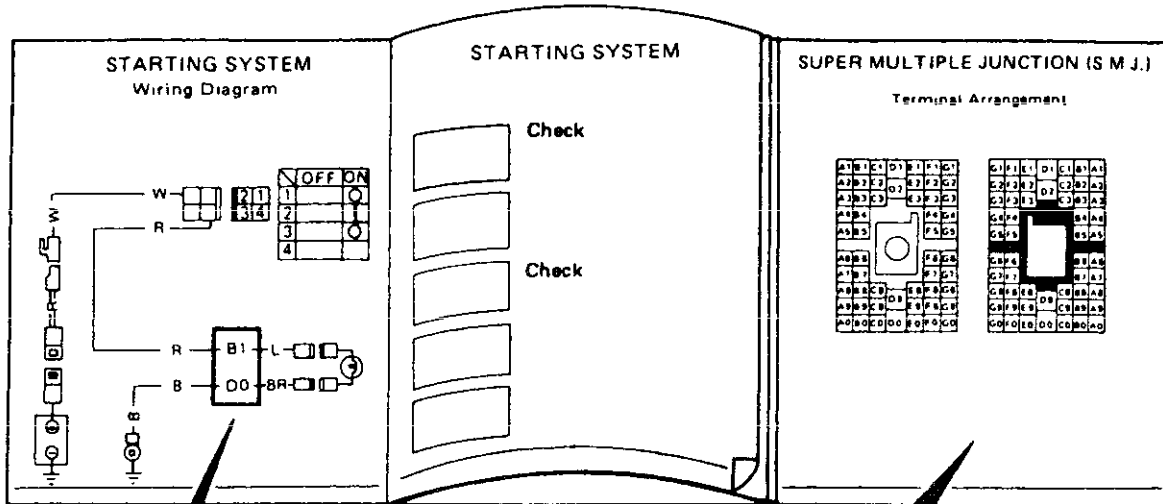

Super Multiple Junction (S.M.J.)

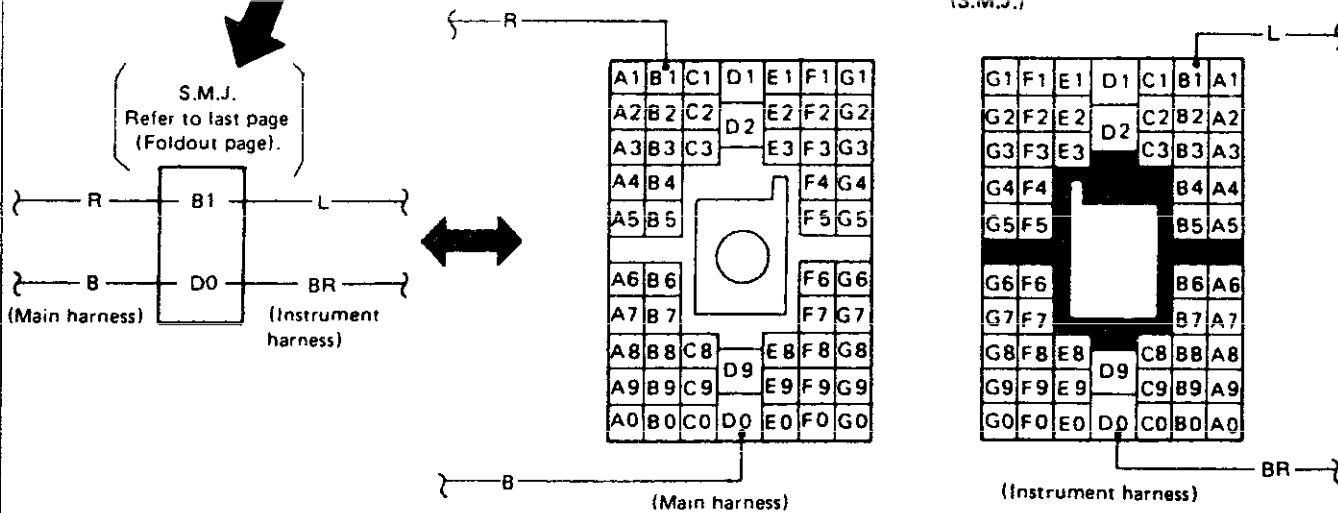

SEL653F

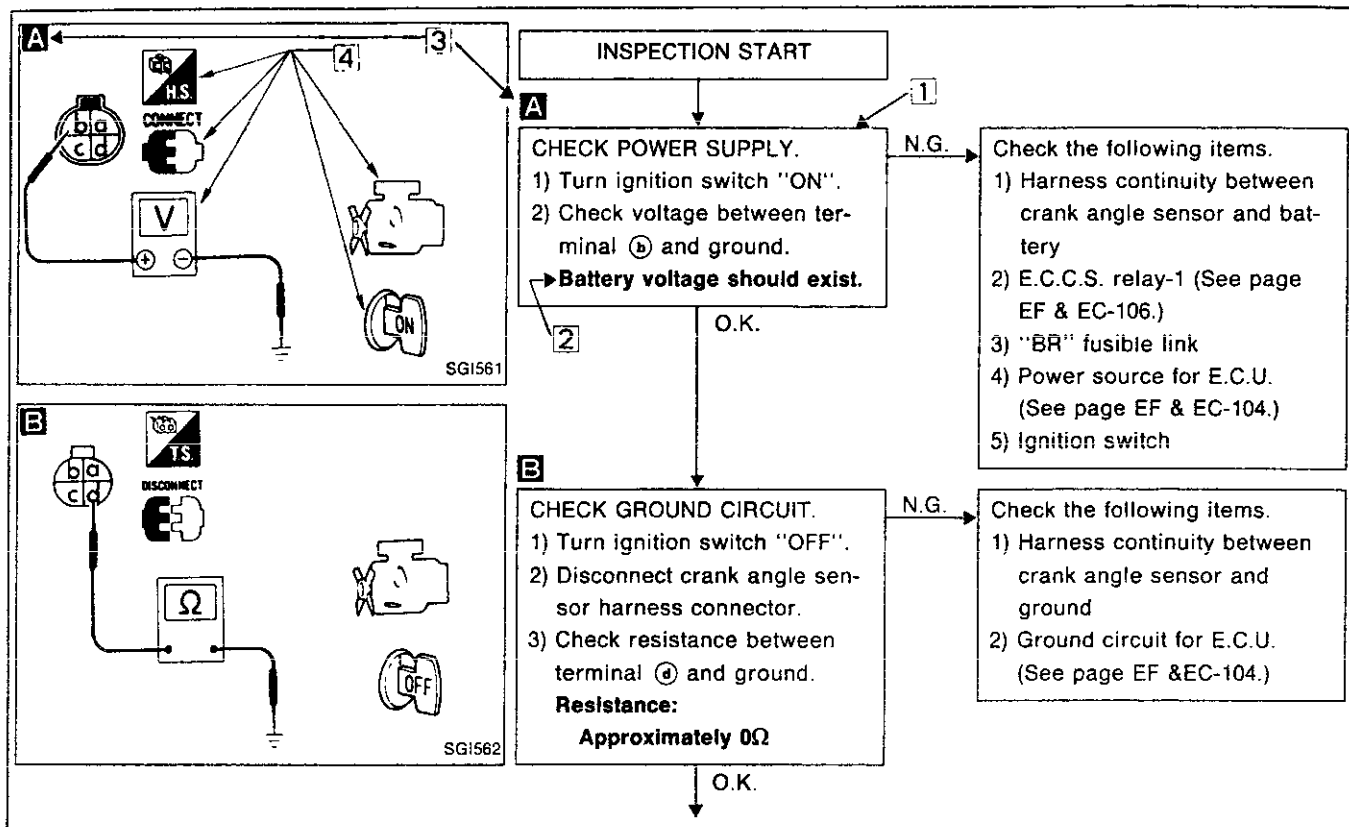

NOTICE


The flow chart indicates work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.

- 1) Use the flow chart after locating probable causes of a problem following the "Preliminary Check" or the "Symptom Chart".
- 2) After repairs, recheck that the problem has been completely eliminated.
- 3) Refer to Component Parts Location and Harness Layout for the Systems described in each section for identification/location of components and harness connectors.
- 4) Refer to the Circuit Diagram for Quick Pinpoint Check.
 If you must perform circuit continuity between harness connectors more detail, such as in case of sub-harness is used, refer to Wiring Diagram and Harness Layout in EL section for identification of harness connectors.
- 5) When checking circuit continuity, ignition switch should be "OFF".
- 6) Before checking voltage at connectors, check battery voltage.
- 7) After accomplishing the Diagnostic Procedures and Electrical Components Inspection, make sure that all harness connectors are reconnected as they were.

HOW TO FOLLOW THIS FLOW CHART

1 Work and diagnostic procedure

Start to diagnose a problem using procedures indicated in enclosed blocks, as shown in the following example.

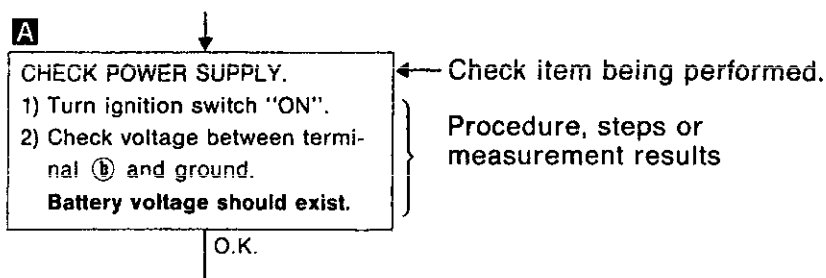

2 Measurement results

Required results are indicated in bold type in the corresponding block, as shown below:

These have the following meanings:

Battery voltage → 11 - 14V or approximately 12V


Voltage: Approximately 0V → Less than 1V

3 Cross reference of work symbols in the text and illustrations

Illustrations are provided as visual aids for work procedures. For example, symbol **A** indicated in the left upper portion of each illustration corresponds with the symbol in the flowchart for easy identification. More precisely, the procedure under the "CHECK POWER SUPPLY." outlined previously is indicated by an illustration **A**.

4 Symbols used in illustrations

Symbols included in illustrations refer to measurements or procedures. Before diagnosing a problem, familiarize yourself with each symbol.

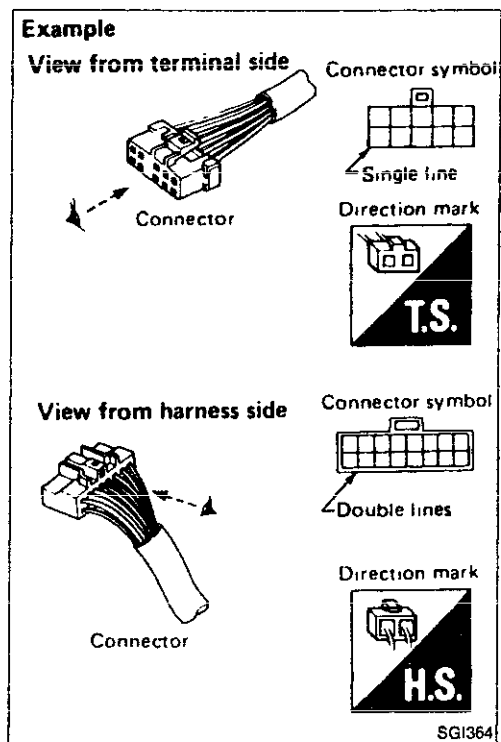

Direction mark

A direction mark is shown to clarify the side of connector (terminal side or harness side).

Direction marks are mainly used in the illustrations indicating terminal inspection.



: View from terminal side ... T.S.

- All connector symbols shown from the terminal side are enclosed by a single line.




: View from harness side ... H.S.

- All connector symbols shown from the harness side are enclosed by a double line.

Key to symbols signifying measurements or procedures

Symbol	Symbol explanation	Symbol	Symbol explanation
	Check after disconnecting the connector to be measured.		Procedure with Consult
	Check after connecting the connector to be measured.		Procedure with CONSULT
	Insert key into ignition switch.		A/C switch is "OFF".
	Remove key from ignition switch.		A/C switch is "ON".
	Turn ignition switch to "OFF" position.		REC switch is "ON".
	Turn ignition switch to "ON" position.		REC switch is "OFF".
	Turn ignition switch to "START" position.		DEF switch is "ON".
	Turn ignition switch from "OFF" to "ACC" position.		VENT switch is "ON".
	Turn ignition switch from "ACC" to "OFF" position.		Fan switch is "ON". (At any position except for "OFF" position)
	Turn ignition switch from "OFF" to "ON" position.		Fan switch is "OFF".
	Turn ignition switch from "ON" to "OFF" position.		Apply battery voltage directly to components.
	Do not start engine, or check with engine stopped.		Drive vehicle.
	Start engine, or check with engine running		Disconnect battery negative cable.
	Apply parking brake.		Depress brake pedal.
	Release parking brake.		Depress accelerator pedal.
	Check after engine is warmed up sufficiently.		Release accelerator pedal.
	Voltage should be measured with a voltmeter.	Pin terminal check for S.M.J. type E.C.U. and A/T control unit connectors. For details regarding the terminal arrangement, refer to the foldout page.	
	Circuit resistance should be measured with an ohmmeter.		
	Current should be measured with an ammeter.		

Outside View

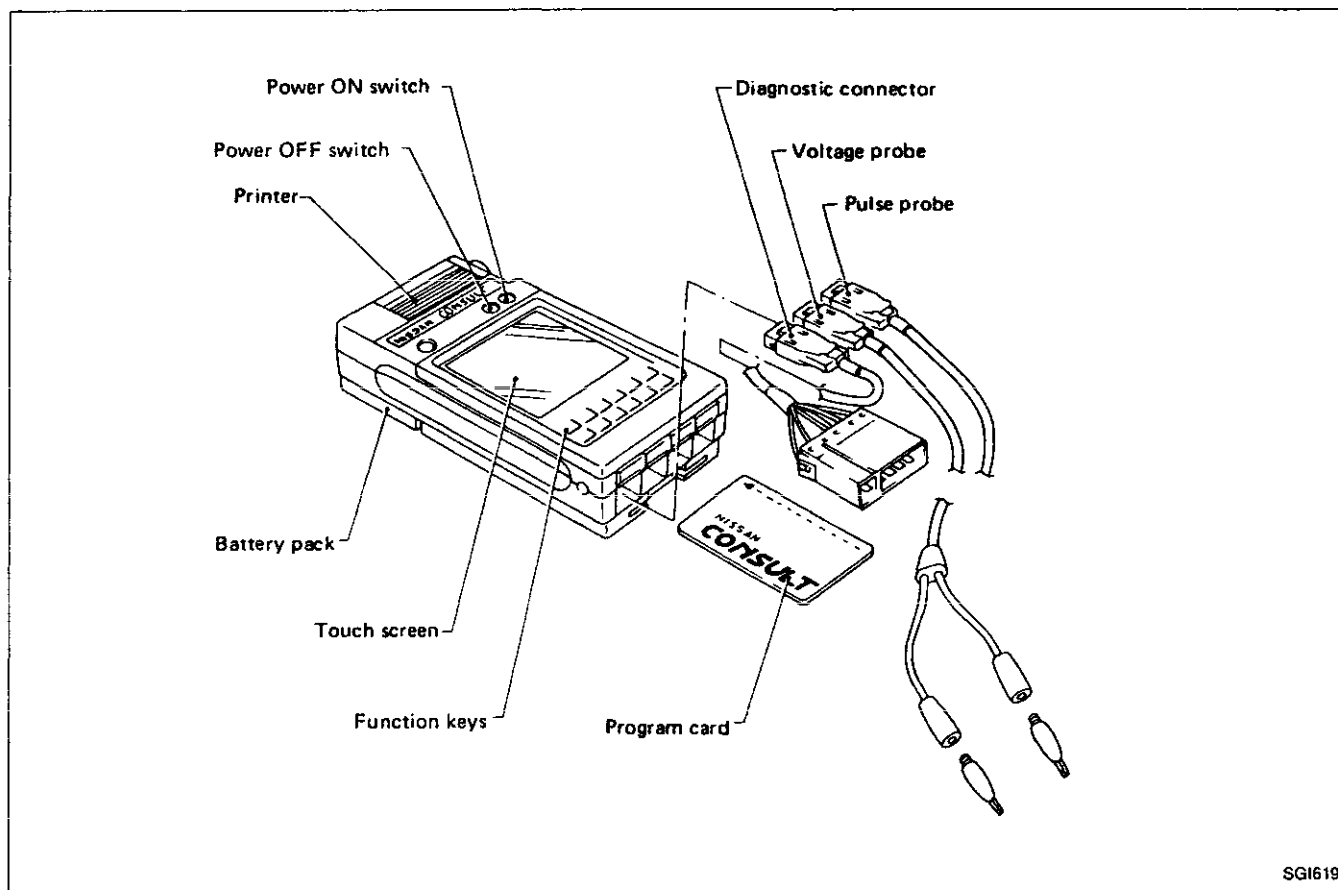

System Application

System	E.C.C.S. (GA16DE and SR20DE engines)
Diagnostic mode	
Work support	X
Self-diagnostic results	X
Data monitor	X
Active test	X
E.C.U. part number	X


X: Applicable

Function

Diagnostic mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT.
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the control unit can be read.
Active test	Mode in which CONSULT drives some actuators apart from the control units and also shifts some parameters in a specified range.
E.C.U. part number	E.C.U. part number can be read

Checking Equipment

When ordering this equipment, contact your NISSAN distributor.

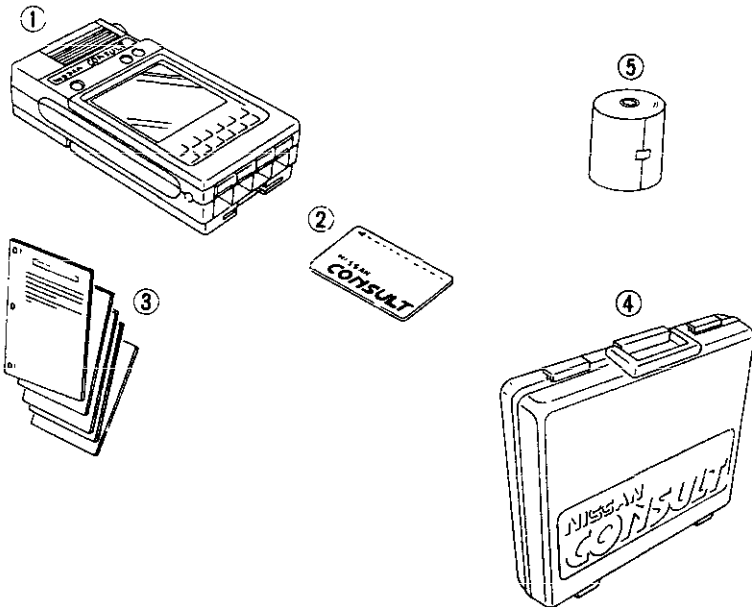Tool name	Description
NISSAN CONSULT kit ① CONSULT unit and accessories ② Program card ③ Operation manuals ④ Carrying case ⑤ Thermal paper (Rolls)	

Model Variation

MODEL B13 SERIES

Destination	Body	Engine Transaxle Grade	E10S		GA13DS		GA14DS		GA16DS		GA16DE		CD17
			RS5F30A	RS5F30A	RS5F30A	RS5F30A	RS5F30A	RS5F31A	RS5F31A	RS5F31A	RS5F31A	RS5F30A	
Except Europe and Middle East	R.H. drive	LE	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BAUARB-SWA	BVAARB-NWA
		JX	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	BAJARDT-SWA	---
		EX Saloon	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	BAJAFRT-SWA	---
		Super Saloon	---	---	---	---	---	---	---	---	---	---	---
		LE	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BAUALBF-SWA	BVAALBF-NWA
		JX	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	BAUALDF-SWA	---
	L.H. drive	Ex Saloon	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	BAUALFF-SWA	---
		Super Saloon	---	---	---	---	---	---	---	---	---	---	---
		Coupe	---	---	---	---	---	---	---	---	---	---	---
		T-bar roof	---	---	---	---	---	---	---	---	---	---	---
		Coupe	---	---	---	---	---	---	---	---	---	---	---
		T-bar roof	---	---	---	---	---	---	---	---	---	---	---
Middle East	L.H. drive	LE	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	---
		JX	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	---
		EX Saloon	---	---	---	---	---	---	---	---	---	---	---
		Super Saloon	---	---	---	---	---	---	---	---	---	---	---
		Coupe	---	---	---	---	---	---	---	---	---	---	---
		T-bar roof	---	---	---	---	---	---	---	---	---	---	---
	L.H. drive	LE	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	BAUALBF-SKA	---
		JX	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	BAUALDF-SKA	---
		EX Saloon	---	---	---	---	---	---	---	---	---	---	---
		Super Saloon	---	---	---	---	---	---	---	---	---	---	---
		Coupe	---	---	---	---	---	---	---	---	---	---	---
		T-bar roof	---	---	---	---	---	---	---	---	---	---	---

IDENTIFICATION INFORMATION

Model Variation (Cont'd)


MODEL B13 SERIES

				Engine	GA16DS		SR20DE
				Transaxle	RS5F31A	RL4F03A	RS5F32A
Destination	Body	Grade					
Europe	R.H. drive models	Coupe	Type A		GAYARUF-SEA	GAYARUA-SEA	—
			SE		—	—	GBYARWF-EEA
		T-bar roof	Type A		HAYARUF-SEA	HAYARUA-SEA	—
			SE		—	—	HBYARWF-EEA
	For South Europe	Coupe	Type A		GAYALUF-SFA	GAYALUA-SFA	—
			SE		—	—	GBYALWF-EFA
		T-bar roof	Type A		HAYALUF-SFA	HAYALUA-SFA	—
			SE		—	—	HBYALWF-EFA
	For Central Europe	Coupe	Type A		GAYALUF-SGA	GAYALUA-SGA	—
			SE		—	—	GBYALWF-EGA
		T-bar roof	Type A		HAYALUF-SGA	HAYALUA-SGA	—
			SE		—	—	HBYALWF-EGA
	For North Europe	Coupe	Type A		GAYALUF-SSA	GAYALUA-SSA	—
			SE		—	—	GBYALWF-ESA
		T-bar roof	Type A		HAYALUF-SSA	HAYALUA-SSA	—
			SE		—	—	HBYALWF-ESA

IDENTIFICATION INFORMATION

Model Variation (Cont'd)

Prefix and suffix designations:

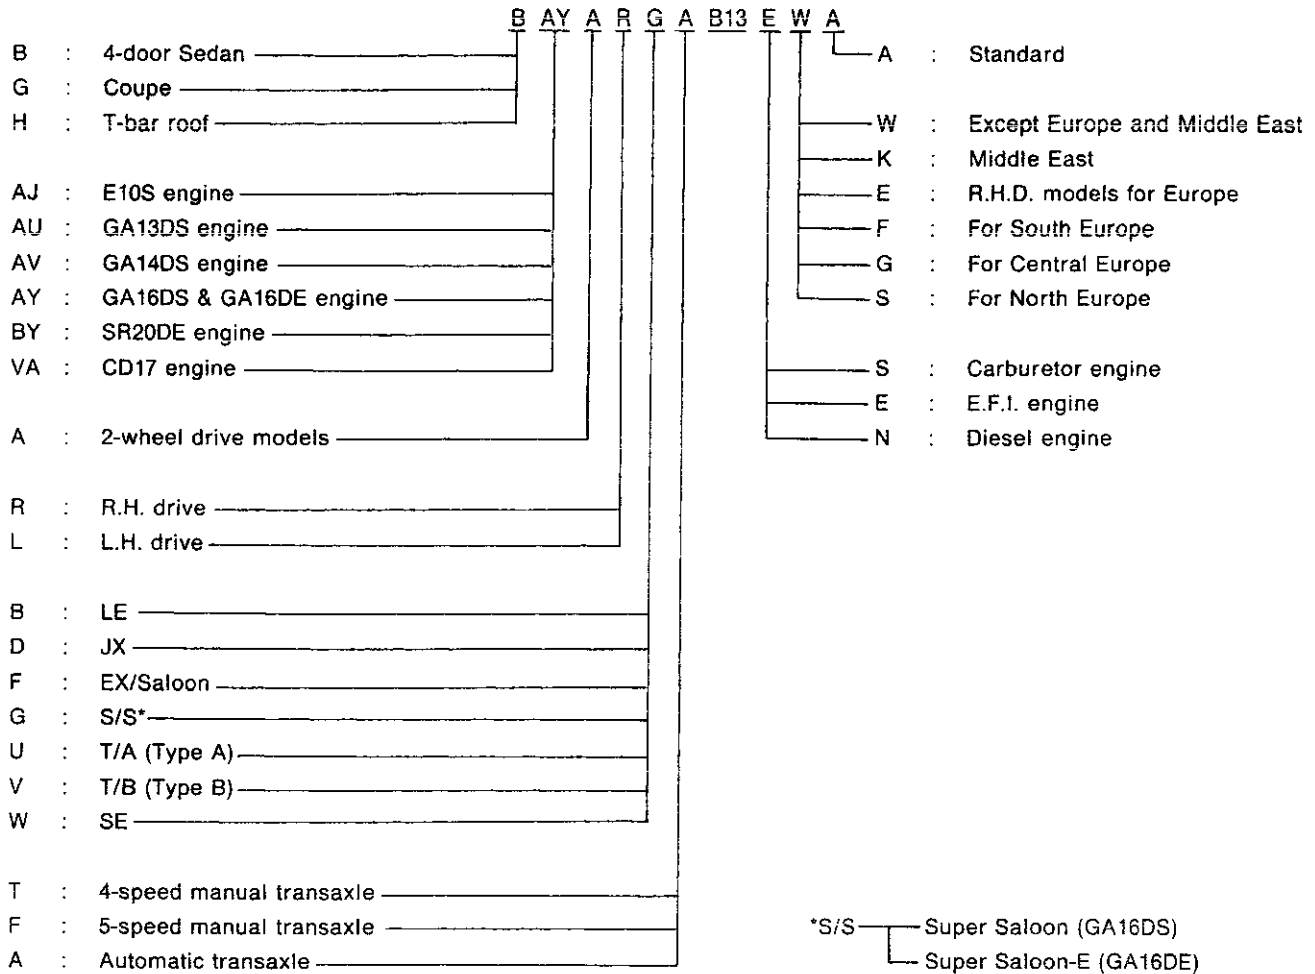

IDENTIFICATION INFORMATION

Model Variation (Cont'd)

MODEL N14 SERIES


Destination	Apob	Engine Transaxle Grade	GA14DS		GA16DS		SR20DE	SR20DET	CD20
			5-speed M/T	4-speed A/T	5-speed M/T	4-speed A/T	5-speed M/T	5-speed M/T	5-speed M/T
			RS5F30A	RL4F03A	RS5F31A	RL4F03A	RS5F32A	RS5F50A	RS5F31A
Europe	R.H. drive models	Sedan	L	BAVARBF-SEA	BAVARBA-SEA	—	—	—	BVCARBF-NEA
			LX	BAVARDF-SEA	BAVARDA-SEA	BAYARDF-SEA	BAYARDA-SEA	—	BVCARDF-NEA
			SLX	—	—	BAYARFF-SEA	BAYARFA-SEA	—	—
		3-door Hatchback	L	EAVARBF-SEA	—	—	—	—	—
			LX	EAVARDF-SEA	—	—	—	—	—
			SLX	—	—	EAYARFF-SEA	EAYARFA-SEA	—	—
		5-door Hatchback	GTI	—	—	—	—	EBYARUF-EEA	—
			GTI-R	—	—	—	—	EBYNRRF-TEA	—
			L	FAVARBF-SEA	FAVARBA-SEA	—	—	—	FVCARBF-NEA
		5-door Hatchback	LX	FAVARDF-SEA	—	FAYARDF-SEA	FAYARDA-SEA	—	FVCARDF-NEA
			SLX	—	—	FAYARFF-SEA	FAYARFA-SEA	—	—
			GTI	—	—	—	—	FBYARUF-EEA	—
	For South Europe	Sedan	LX	BAVALDF-SFA	BAVALDA-SFA	—	—	—	BVCALDF-NFA
			SLX	BAVALFF-SFA	BAVALFA-SFA	BAYALFF-SFA	BAYALFA-SFA	—	BVCALFF-NFA
			SLX 4WD	—	—	BAYNLFF-SFA	—	—	—
		3-door Hatchback	L	EAVALBF-SFA	—	—	—	—	—
			LX	EAVALDF-SFA	EAVALDA-SFA	—	—	—	EVCALDF-NFA
			SLX	EAVALFF-SFA	—	EAYALFF-SFA	EAYALFA-SFA	—	EVCALFF-NFA
		5-door Hatchback	GTI	—	—	—	—	EBYALUF-EFA	—
			GTI-R	—	—	—	—	EBYNLRF-TFA	—
		5-door Hatchback	LX	FAVALDF-SFA	—	—	—	—	FVCALDF-NFA
			SLX	FAVALFF-SFA	FAVALFA-SFA	FAYALFF-SFA	FAYALFA-SFA	—	FVCALFF-NFA
			GTI	—	—	—	—	FBYALUF-EFA	—
	For Central Europe	Sedan	LX	BAVALDF-SGA	—	—	—	—	BVCALDF-NGA
			SLX	BAVALFF-SGA	—	BAYALFF-SGA	BAYALFA-SGA	—	BVCALFF-NGA
			SLX 4WD	—	—	BAYNLFF-SGA	—	—	—
		3-door Hatchback	L	EAVALBF-SGA	—	—	—	—	—
			LX	EAVALDF-SGA	EAVALDA-SGA	—	—	—	EVCALDF-NGA
			SLX	EAVALFF-SGA	—	EAYALFF-SGA	EAYALFA-SGA	—	EVCALFF-NGA
		5-door Hatchback	GTI	—	—	—	—	EBYALUF-EGA	—
			GTI-R	—	—	—	—	EBYNLRF-TGA	—
		5-door Hatchback	LX	FAVALDF-SGA	—	FAYALDF-SGA	—	—	FVCALDF-NGA
			SLX	FAVALFF-SGA	—	FAYALFF-SGA	FAYALFA-SGA	—	FVCALFF-NGA
			GTI	—	—	—	—	FBYALUF-EGA	—
	For North Europe	Sedan	L	BAVALBF-SSA	—	—	—	—	—
			LX	BAVALDF-SSA	—	BAYALDF-SSA	—	—	BVCALDF-NSA
			SLX	—	—	BAYALFF-SSA	BAYALFA-SSA	—	—
		3-door Hatchback	SLX 4WD	—	—	BAYNLFF-SSA	—	—	—
			L	EAVALBF-SSA	—	—	—	—	—
			LX	EAVALDF-SSA	EAVALDA-SSA	EAYALDF-SSA	—	—	—
		5-door Hatchback	SLX	—	—	EAYALFF-SSA	EAYALFA-SSA	—	—
			GTI	—	—	—	—	EBYALUF-ESA	—
			GTI-R	—	—	—	—	EBYNLRF-TSA	—
		5-door Hatchback	LX	FAVALDF-SSA	—	FAYALDF-SSA	—	—	—
			SLX	—	—	FAYALFF-SSA	—	—	—
			GTI	—	—	—	—	FBYALUF-ESA	—

IDENTIFICATION INFORMATION


Model Variation (Cont'd)

Destination		Engine	Transaxle	GA14DS		GA16DE	
				5-speed M/T	4-speed A/T	5-speed M/T	4-speed A/T
		Body	Grade	RS5F30A	RL4F03A	RS5F31A	RL4F03A
Except Europe	R.H. drive	5-door Hatchback	K1	FAVAREF-SHA	FAVAREA-SHA	—	—
			J1J	—	—	FAYARGF-EHA	FAYARGA-EHA

Prefix and suffix designations:

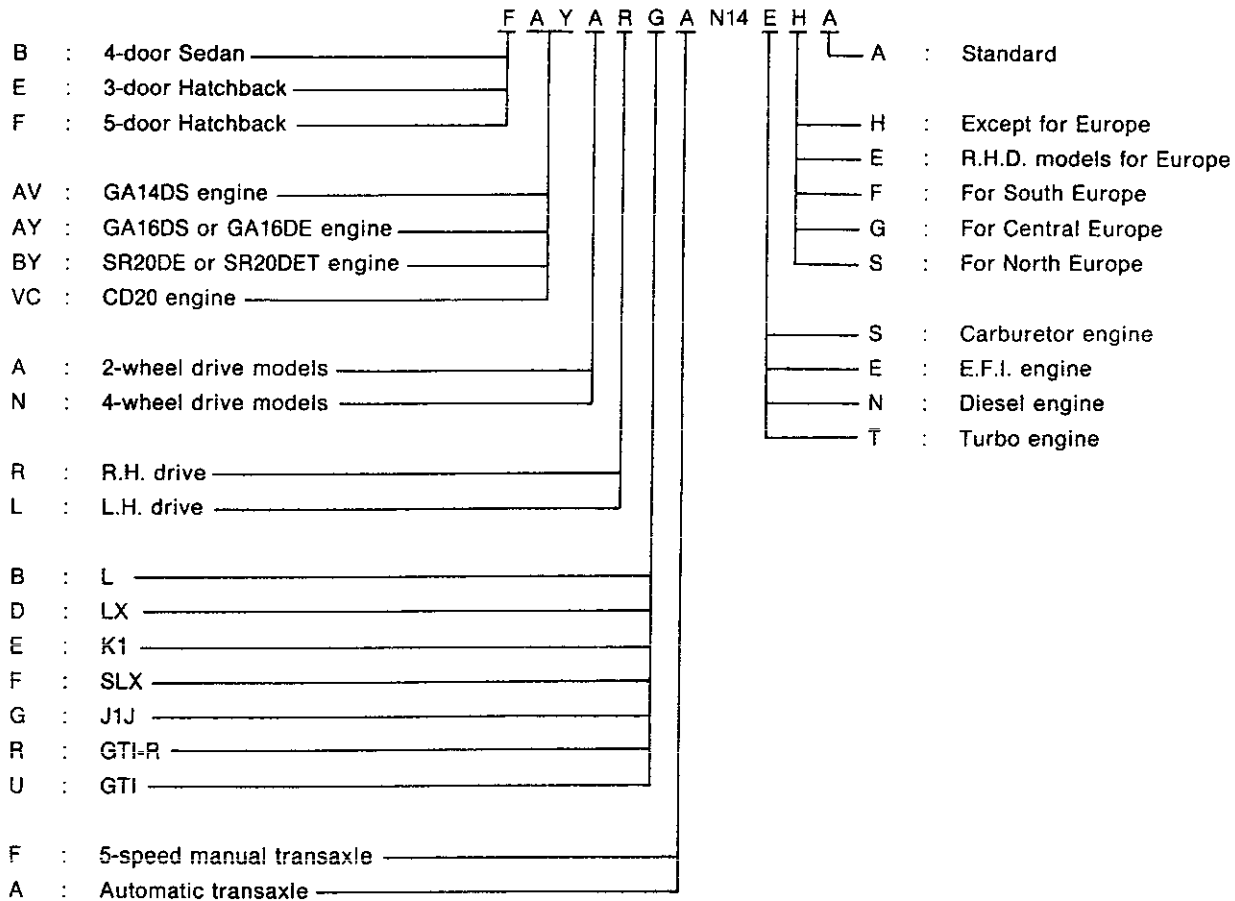


Identification Number

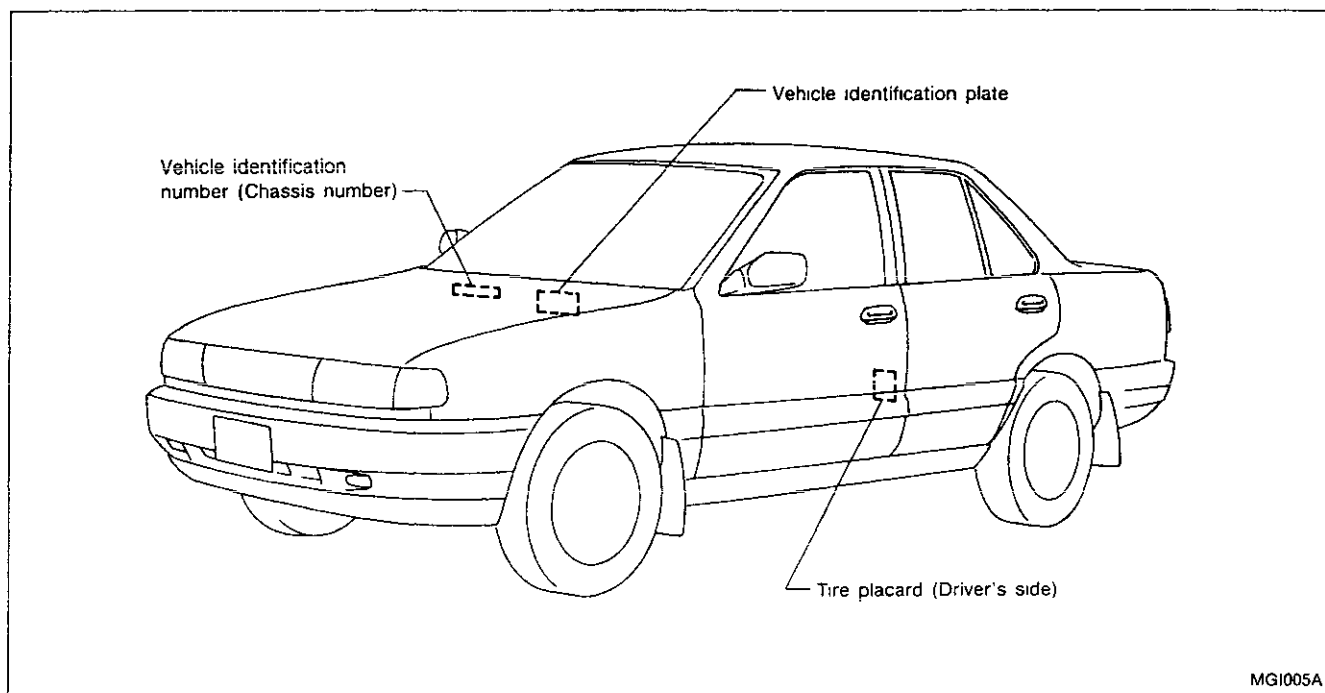

VEHICLE IDENTIFICATION NUMBER (Chassis number)


Prefix and suffix designations:

Model B13 series
(Except Europe)

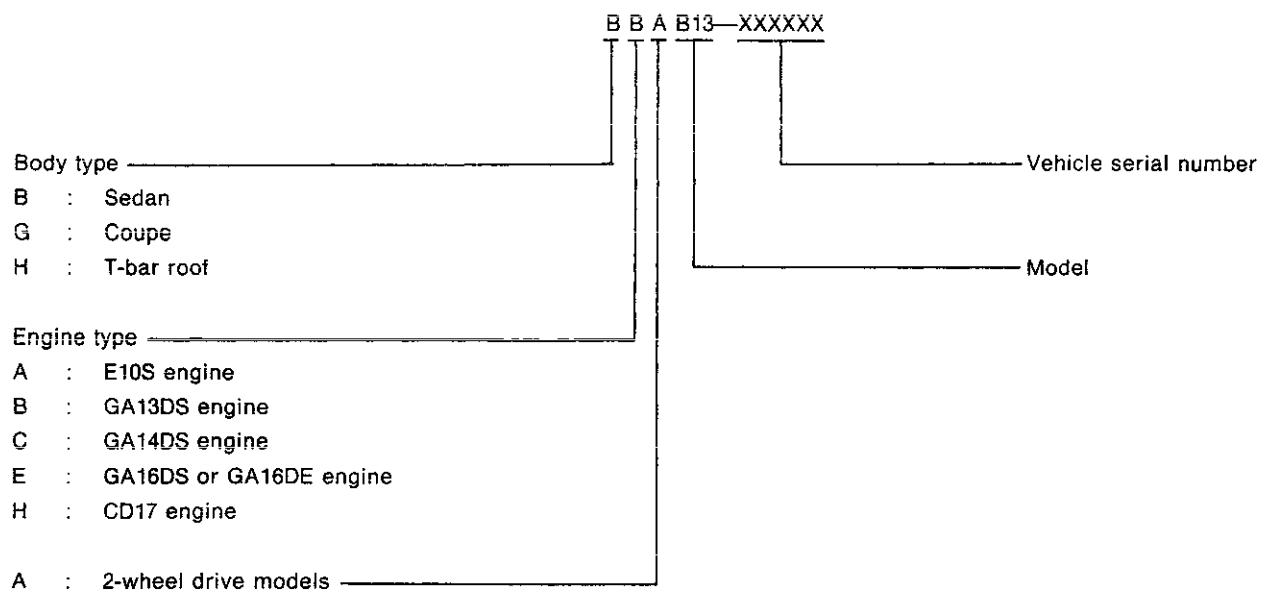


Identification Number (Cont'd)


(For Europe)

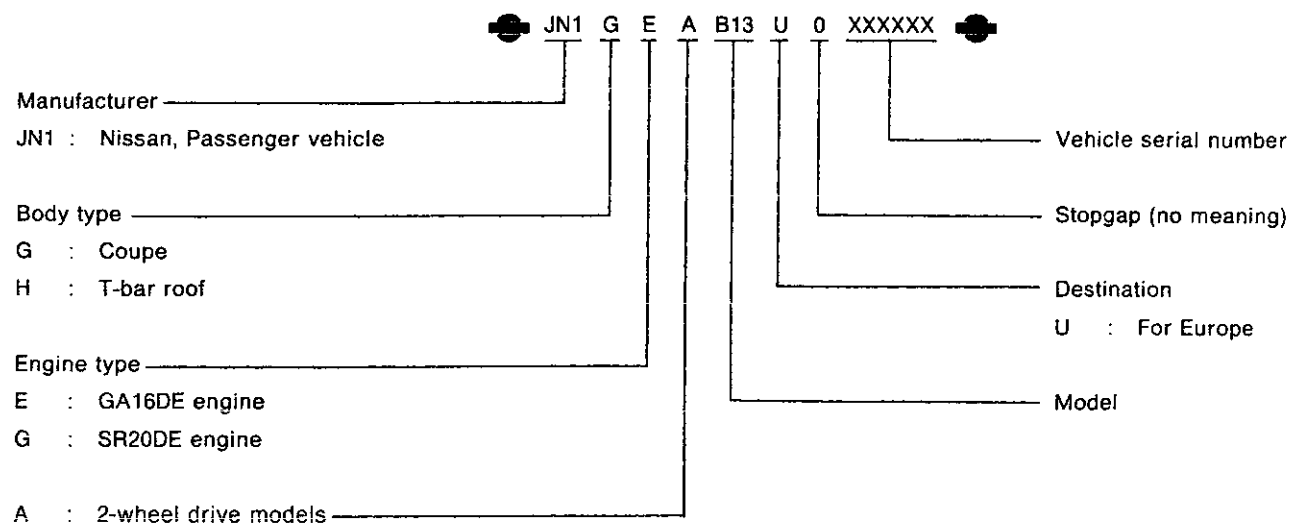

**Model N14 series
(Except Europe)**

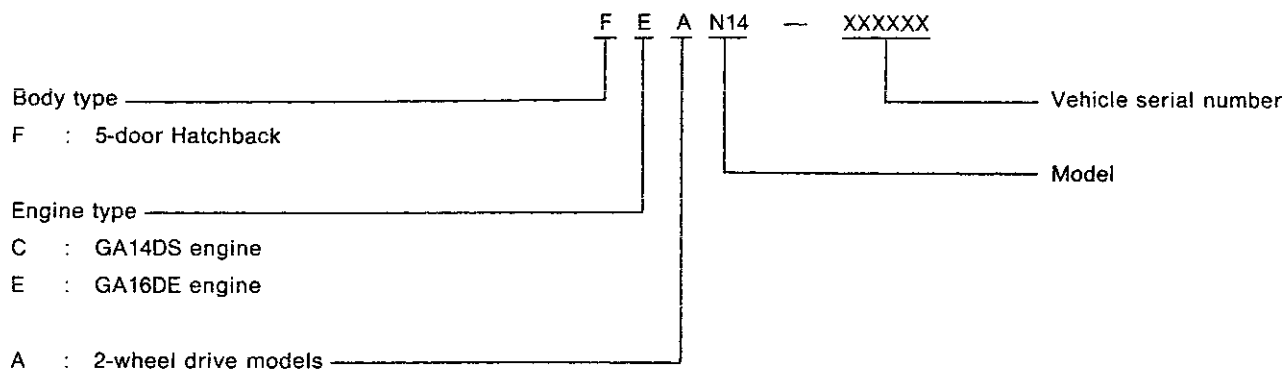


(For Europe)

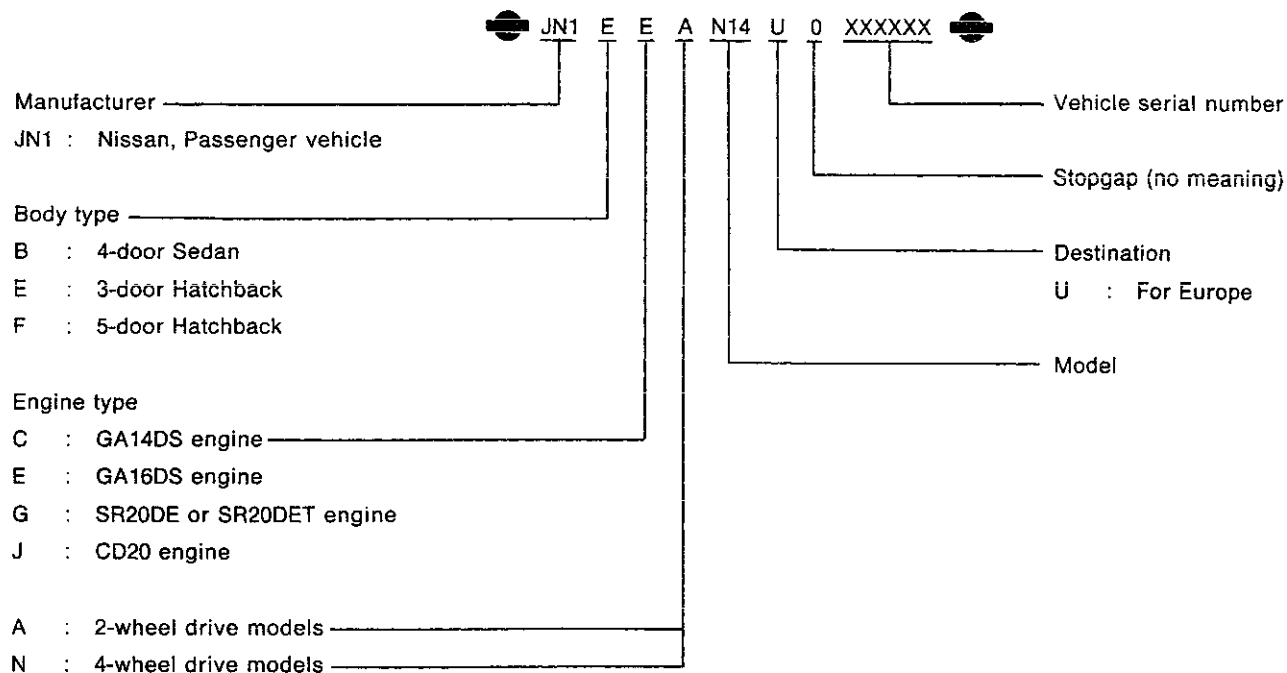

Identification Number (Cont'd)

Europe

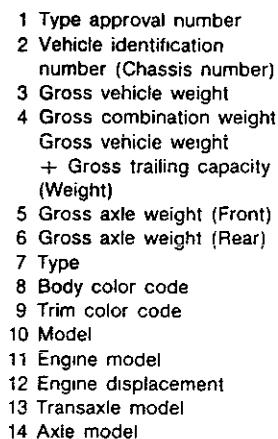

SG1704

E10S engine

**GA13DS, 14DS,
16DS engine**

GA16DE engine

**SR20DE engine****SR20DET engine**

CD17 engine




CD20 engine




SGI705

Identification Number (Cont'd)

MANUAL TRANSAXLE NUMBER

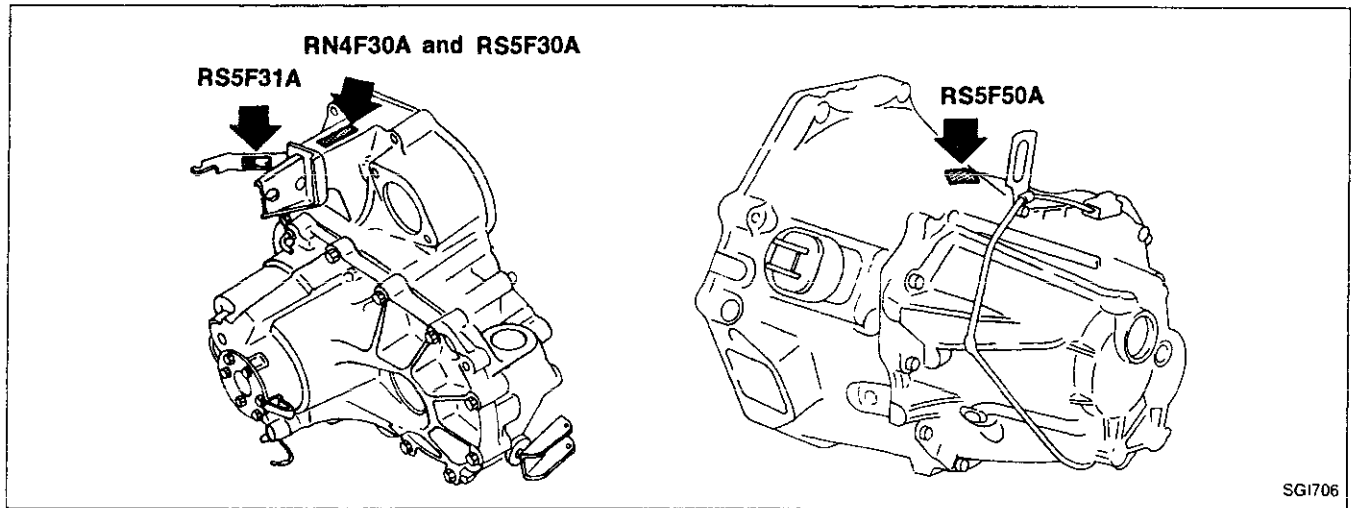

AUTOMATIC TRANSAXLE NUMBER

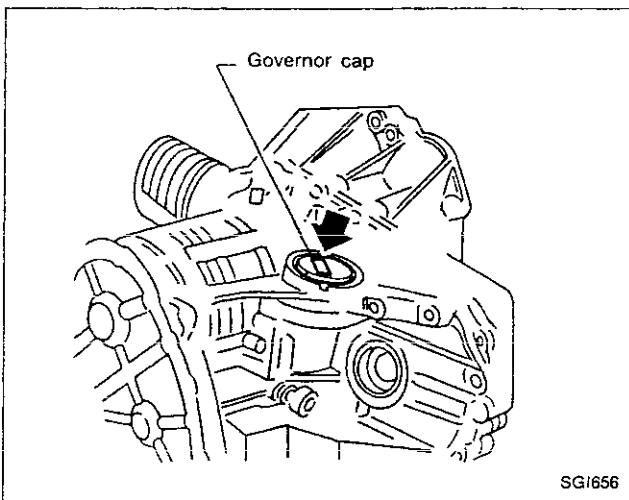

Dimensions

MODEL B13 SERIES

Unit: mm (in)

	Sedan	Coupe
Overall length	4,210 (165.7)	4,140 (163.0) 4,135 (162.8)*4
Overall width	1,660 (65.4)*1 1,670 (65.7)	1,680 (66.1)
Overall height	1,375 (54.1)	1,310 (51.6) 1,315 (51.8)*2
Front tread	1,435 (56.5)*3 1,445 (56.9)	1,435 (56.5)*3 1,445 (56.9)
Rear tread	1,415 (55.7)*3 1,435 (56.5)	1,415 (55.7)*3 1,435 (56.5)
Wheelbase	2,430 (95.7)	2,430 (95.7)

*1: LE grade

*2: T-bar roof models

*3: 185/60R14 tire (Except Europe)/175/65R14 tire (For Europe)

*4: For Europe

MODEL N14 SERIES

Unit: mm (in)

	Sedan	3-door Hatchback	5-door Hatchback (For Europe)	5-door Hatchback (Except for Europe)
Overall length	4,230 (166.5)	3,975 (156.5)	4,145 (163.2)	4,145 (163.2)
Overall width	1,670 (65.7)	1,670 (65.7) 1,690 (66.5)*1	1,670 (65.7) 1,690 (66.5)*1	1,670 (65.7)
Overall height	1,395 (54.9) 1,410 (55.5)*2	1,395 (54.9) 1,410 (55.5)*2	1,395 (54.9)	1,385 (54.5)
Front tread	1,446 (56.9)*3 1,436 (56.5)*4	1,446 (56.9)*3 1,436 (56.5)*4	1,446 (56.9)*3 1,436 (56.5)*4	1,445 (56.9)
Rear tread	1,431 (56.3)*5 1,421 (55.9)*6	1,431 (56.3)*5 1,421 (55.9)*6	1,431 (56.3)*5 1,421 (55.9)*6	1,435 (56.5)
Wheelbase	2,430 (95.7)	2,430 (95.7)	2,430 (95.7)	2,430 (95.7)

*1: SR series engine models

*2: 4WD models

*3: Tire offset 40 mm (1.57 in)

*4: Tire offset 45 mm (1.77 in)

*5: 155SR13, 175/70R13 tire

*6: 175/65R14, 195/55R14 tire

Wheels and Tires

MODEL B13 SERIES

Except Europe

Body Wheels & tires			Coupe & T-bar roof model		4-door sedan	
				Offset mm (in)		Offset mm (in)
Wheel size	Steel	Standard	14 × 5-1/2JJ*8	45 (1.77)	13 × 5J	40 (1.57)
			13 × 5J*6	40 (1.57)		
	Alu- minum	Option	—	—	14 x 5-1/2JJ*1	45 (1.77)
		Option	13 × 5J*6	40 (1.57)	13 × 5J*7	40 (1.57)
			14 × 5-1/2JJ*8	45 (1.77)	14 × 5-1/2JJ*2	45 (1.77)
Tire size		Standard	185/60R14 82H*8 155/80R13 78S*6		155SR13*3 175/70R13 82S*4 6.15-13-4PR*5 155/80R13 78S*6	
		Option	175/70R13 82S*6		155SR13*5 175/70R13 82S*3,*6 185/60R14 82H*1 175/65R14 82H*1	

*1: GA16DS & GA16DE engine models

*2: Super saloon for GA16DS and GA16DE engine models

*3: Except E10S and GA16DE engine models

*4: GA16DE engine model

*5: E10S engine model

*6: For Middle East

*7: Except GA14DS engine for Middle East

*8: For General areas

For Europe

Wheels & tires			GA16DS engine		SR20DE engine	
				Offset mm (in)		Offset mm (in)
Wheel size	Steel	Standard	14 × 5-1/2JJ	45 (1.77)	—	—
	Alu- minum	Standard	—	—	14 × 6JJ	40 (1.57)
		Option	14 × 5-1/2JJ	45 (1.77)	—	—
	T-type	Standard	14 × 4T	40 (1.57)	15 × 4T	40 (1.57)
Tire size	Con- ven- tional	Standard	175/65R14 82H		195/55R14 82V	
	T-type	Standard	T115/70D14		T135/70D15	

IDENTIFICATION INFORMATION

Wheels and Tires (Cont'd)

MODEL N14 SERIES

Except Europe

Wheel & Tire			Engine	GA14DS		GA16DE	
					Offset mm (in)		Offset mm (in)
Wheel size	Steel	Standard	13 x 5J	40 (1.57)	14 x 5-1/2JJ	45 (1.77)	
	Aluminum	Option	—	—	14 x 5-1/2JJ	45 (1.77)	
Tire size			175/70R13 82S			175/65R14 82H	

For Europe

Engine			GA14DS		GA16DS		SR20DE		SR20DET		CD20	
				Offset mm (in)		Offset mm (in)		Offset mm (in)		Offset mm (in)		Offset mm (in)
Wheel & Tire												
Wheel size	Steel	Standard	13 × 5J	40 (1.57)	13 × 5J	40 (1.57)	—	—	—	—	13 × 5J	40 (1.57)
	Aluminum		—	—	—	—	14 × 6JJ	40 (1.57)	14 × 6JJ	40 (1.57)	—	—
	Steel	Option	—	—	14 × 5-1/2JJ *3	45 (1.77)	14 × 6JJ	40 (1.57)	14 × 6JJ	40 (1.57)	—	—
	Aluminum		13 × 5J *5	40 (1.57)	13 × 5J *5	40 (1.57)	—	—	—	—	13 × 5J *5	40 (1.57)
	T-type	Standard	—	—	—	—	—	—	15 × 4T	40 (1.57)	—	—
		Option	14 × 4T	40 (1.57)	14 × 4T*1 15 × 4T*2	40 (1.57) 40 (1.57)	15 × 4T	40 (1.57)	—	—	14 × 4T	40 (1.57)
Tire size	Conventional	Standard	155SR13		175/70R13 82H		195/55R14 82V		195/55R14 82V		175/70R13 82S	
		Option	175/70R13 82S*4		175/65R14 82H*3		—		—		—	
	T-type	Standard	—		—		—		T135/70D15		—	
		Option	T115/70D14		T115/70D14*1 T135/70D15*2		T135/70D15		—		T115/70D14	

*1: Except SLX 4WD

*2: SLX 4WD



*3: Except North Europe


*4: Except R.H.D. models for Europe

*5: Except Central Europe

Preparation

SPECIAL SERVICE TOOLS

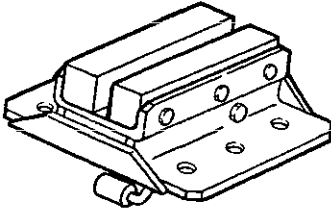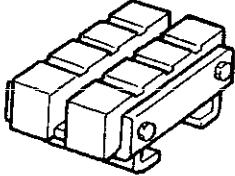Tool number Tool name	Description
LM4086-0200 Board-on lift attachment	
LM4519-0000 Safety stand attachment	

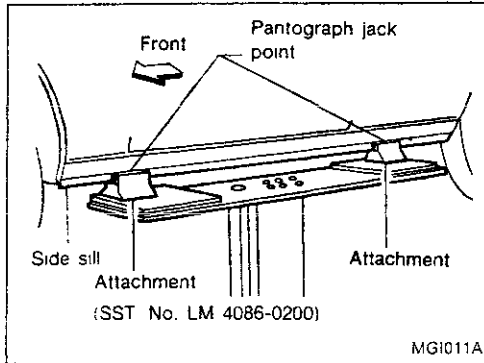

Board-on Lift


CAUTION:

Make sure vehicle is empty when lifting.

- The board-on lift attachment (LM4086-0200) set at front end of vehicle should be set on the front of the sill under the front door opening.
- Position attachments at front and rear ends of board-on lift.

Models with sill spoiler

Fix board-on lift attachments to inner side of sill when the side sill flange is covered by sill spoiler.

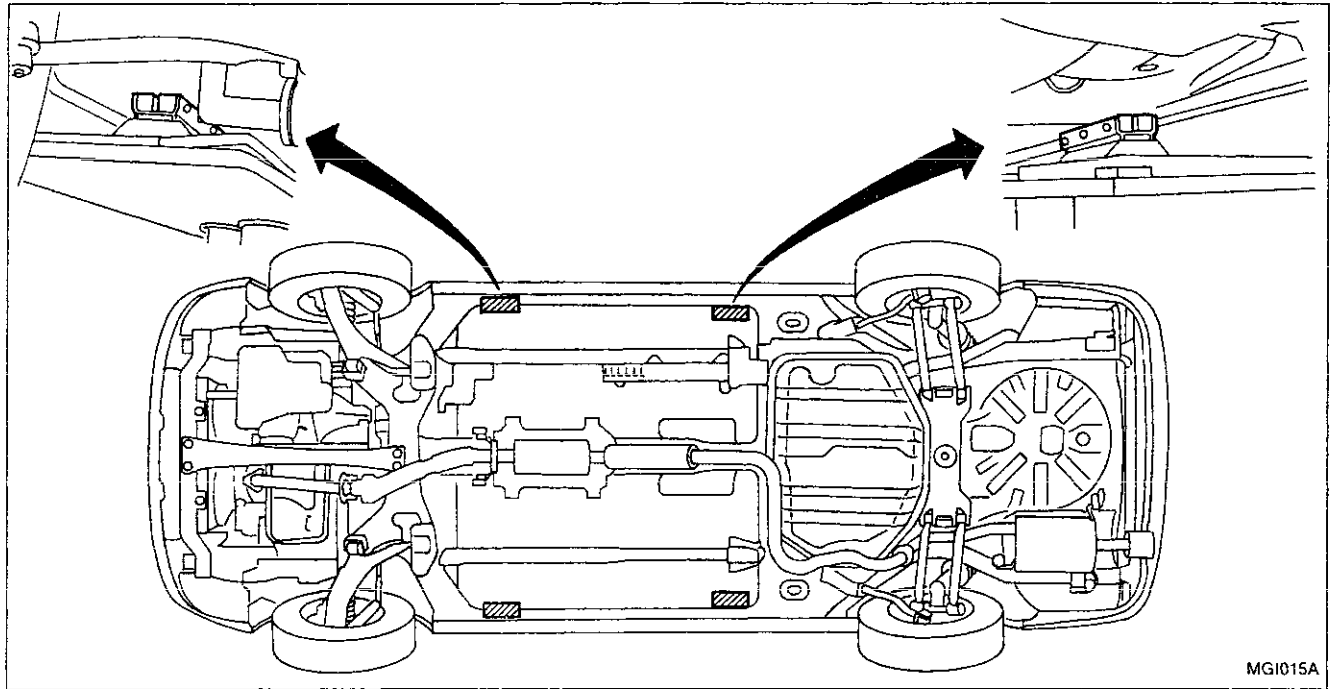


Garage Jack and Safety Stand

WARNING:


- Never get under the vehicle while it is supported only by the jack. Always use safety stands when you have to get under the vehicle.
- Place wheel chocks at the front wheels when the rear wheels are raised and place wheel chocks at the rear wheels when the front wheels are raised.

2-wheel drive models

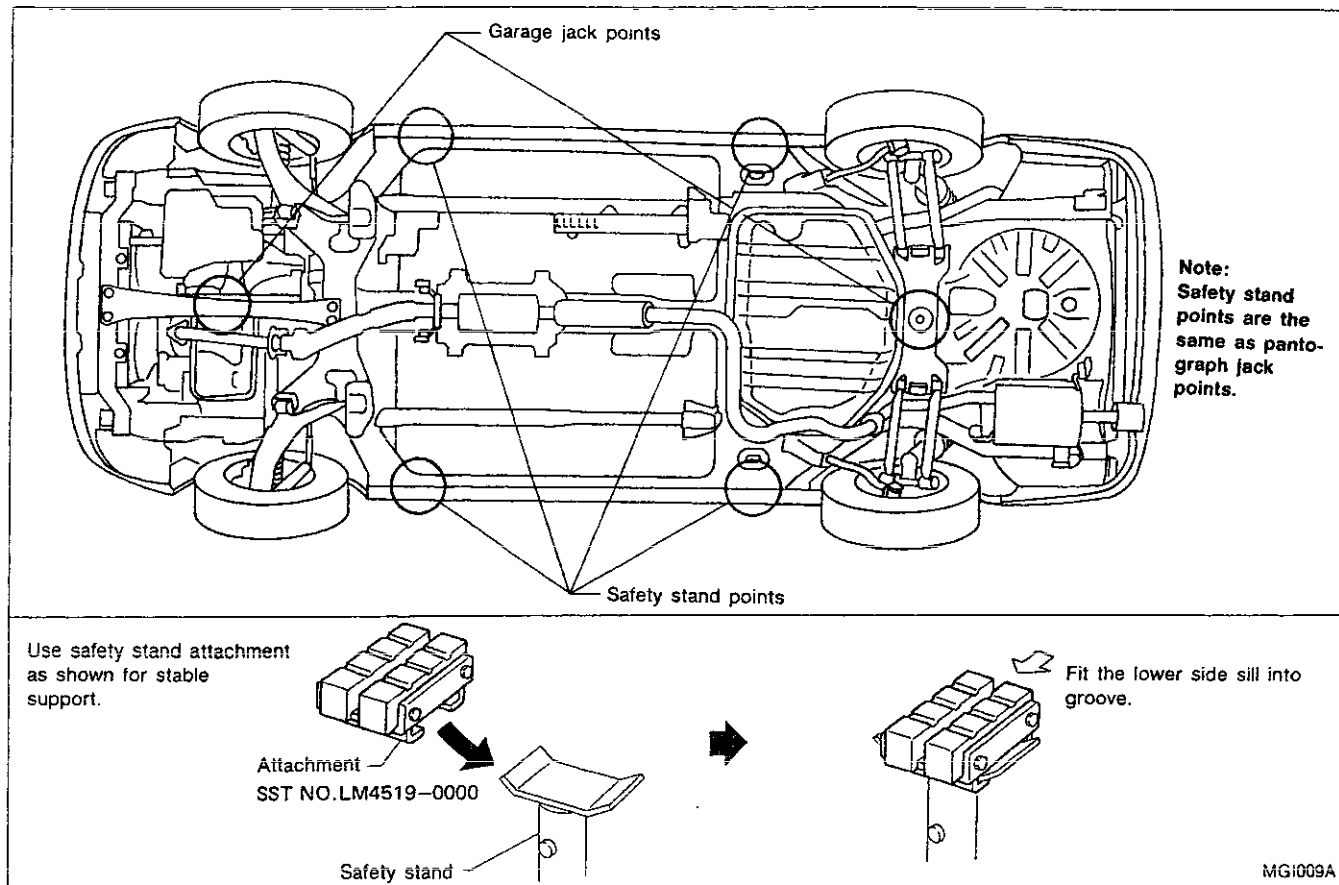

Garage Jack and Safety Stand (Cont'd)

4-wheel drive models

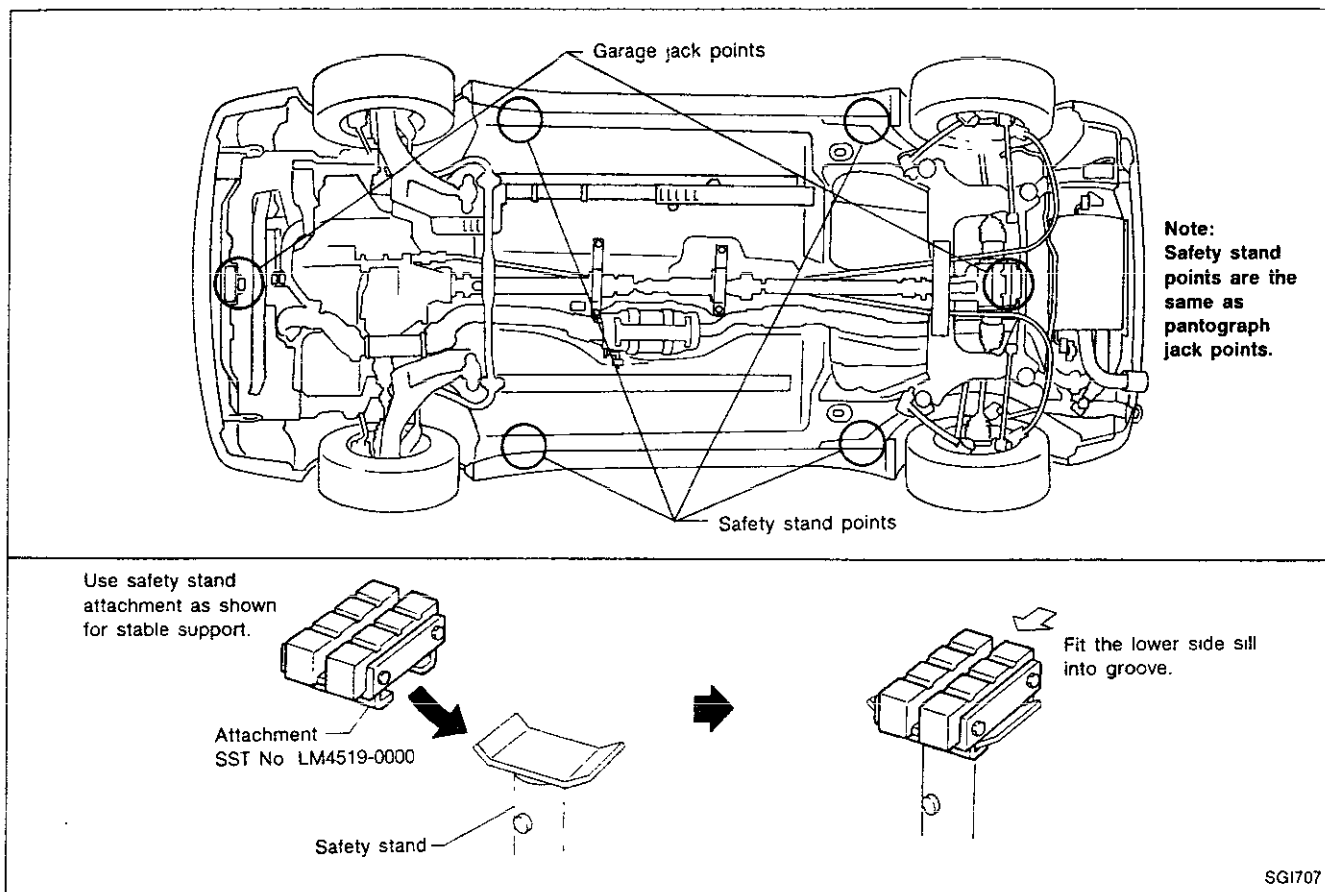


2-pole Lift

WARNING:

When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.


When setting the lift arm, do not allow the arm to contact the brake tubes and fuel lines.

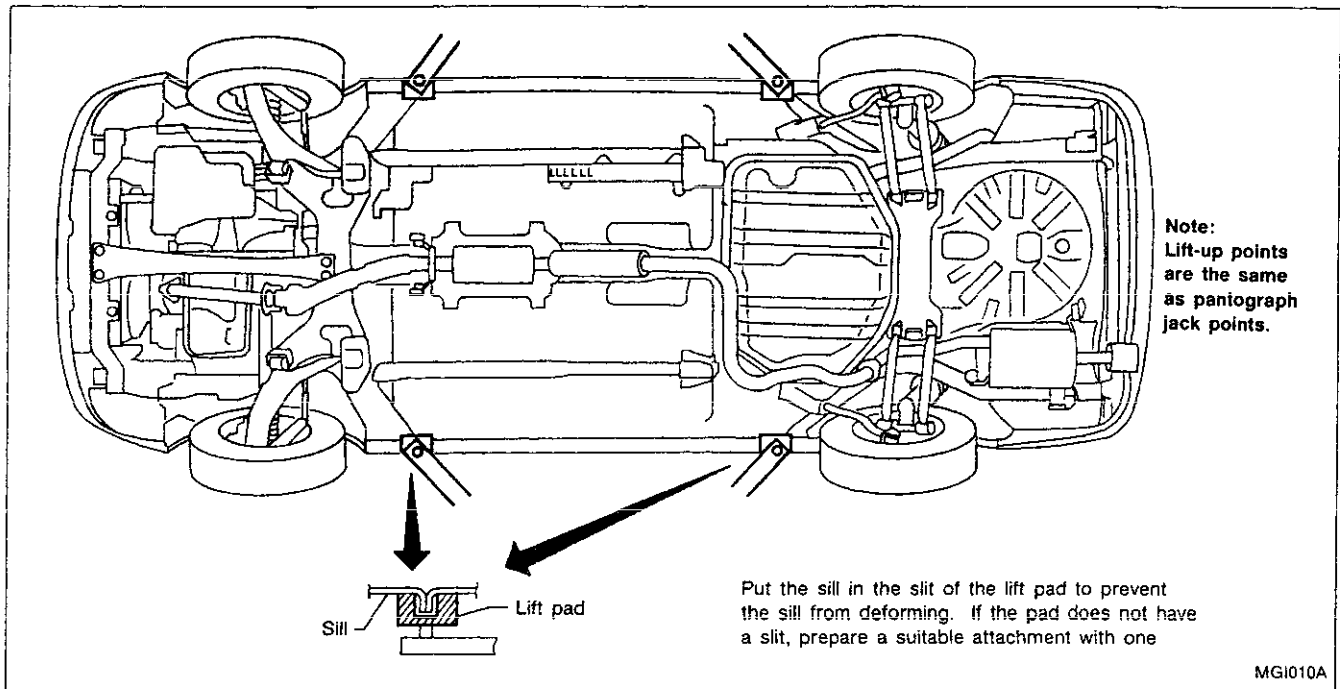

Tow Truck Towing

CAUTION:

- All applicable local laws regarding the towing operation must be obeyed.
- It is necessary to use proper towing equipment to avoid possible damage to the vehicle during a towing operation.
- When towing with the rear wheels on the ground, release the parking brake and move the gearshift lever to neutral ("N" position).

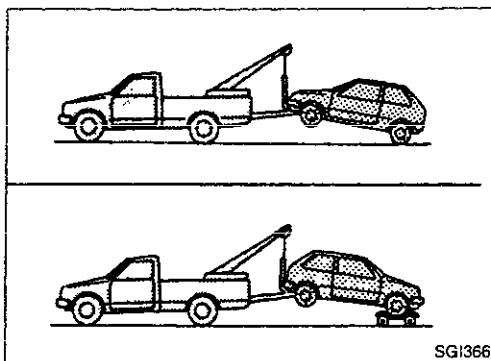

2-WHEEL DRIVE MODELS

NISSAN recommends that vehicle be towed with the driving (front) wheels off the ground as illustrated.

LIFTING POINTS AND TOW TRUCK TOWING

Tow Truck Towing (Cont'd)

Towing an automatic transaxle model with four wheels on ground


Observe the following restricted towing speeds and distances.

Speed: Below 50 km/h (30 MPH)

Distance: Less than 65 km (40 miles)


CAUTION:

Never tow an automatic transaxle model from the rear (i.e., backward) with four wheels on the ground as this may cause serious and expensive damage to the transaxle.

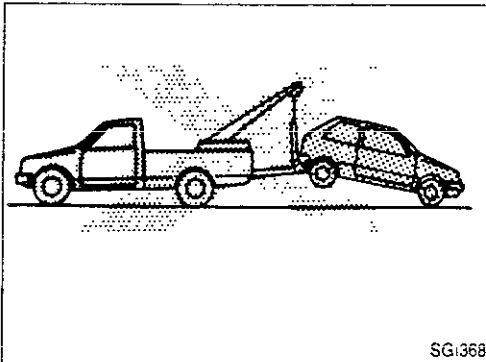

Towing an automatic transaxle model with rear wheels raised (With front wheels on ground)

Never tow an automatic transaxle model with rear wheels raised (with front wheels on ground) as this may cause serious and expensive damage to the transaxle. If it is necessary to tow it with rear wheels raised, always use a towing dolly under the front wheels.

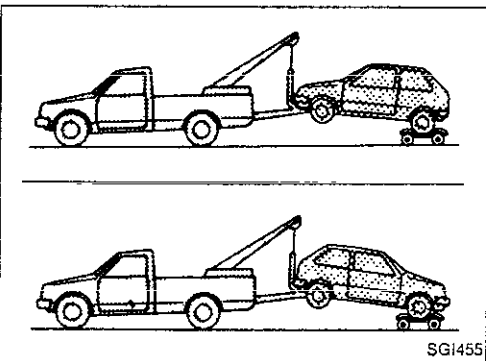

4-WHEEL DRIVE MODELS

NISSAN recommends that the 4-wheel drive vehicle be towed with all wheels off the ground as follows:

1. Using a flat-bed truck.
2. Using a combination of a tow truck and a dolly as illustrated.

Towing with four wheels on ground


Observe the following restricted towing speeds and distances.

Speed: Below 50 km/h (30 MPH)

Distance: Less than 65 km (40 miles)


Towing a 4-wheel drive model with front or rear wheels raised (With rear or front wheels on the ground)

Never tow a 4-wheel drive model with front or rear wheels raised and rear or front wheels on the ground as this may cause serious and expensive damage to the transaxle. If it is necessary to tow the vehicle with the front or rear wheels raised, always use a towing dolly under the rear or front wheels.

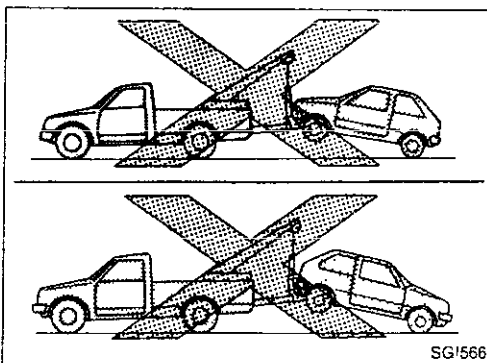


Tow Truck Towing (Cont'd)

Model B13 series

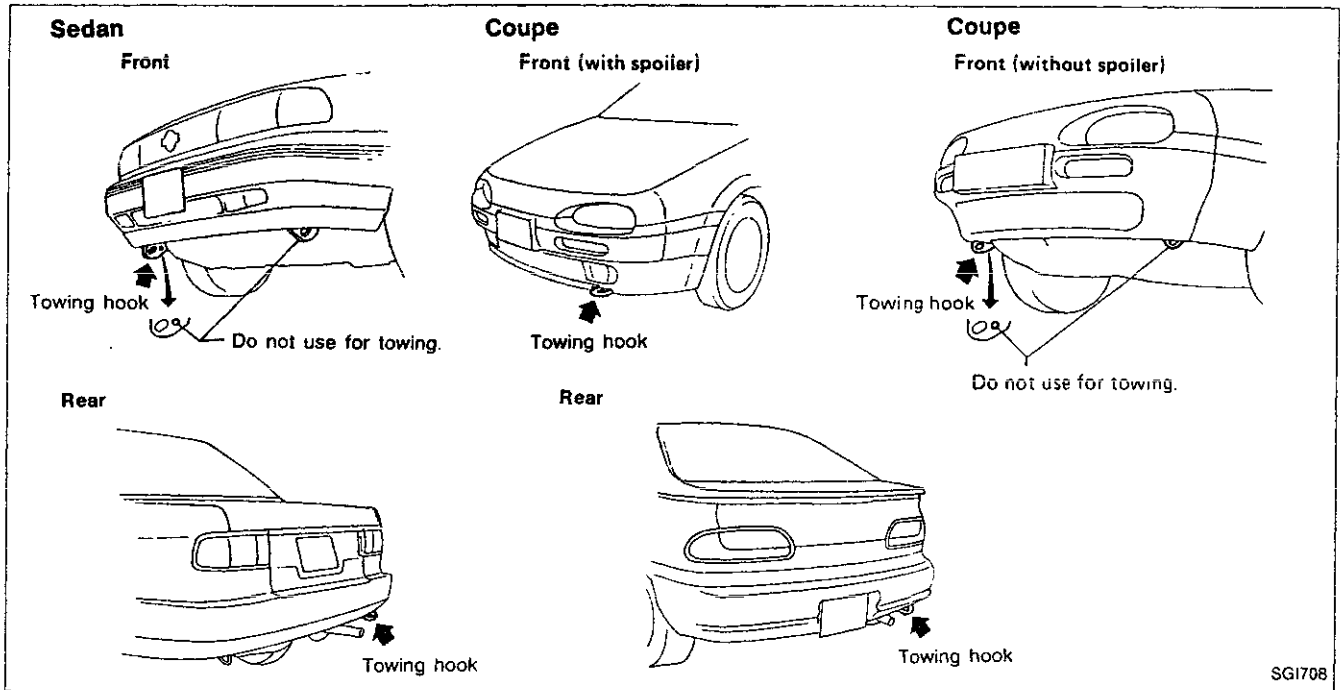

Model N14 series

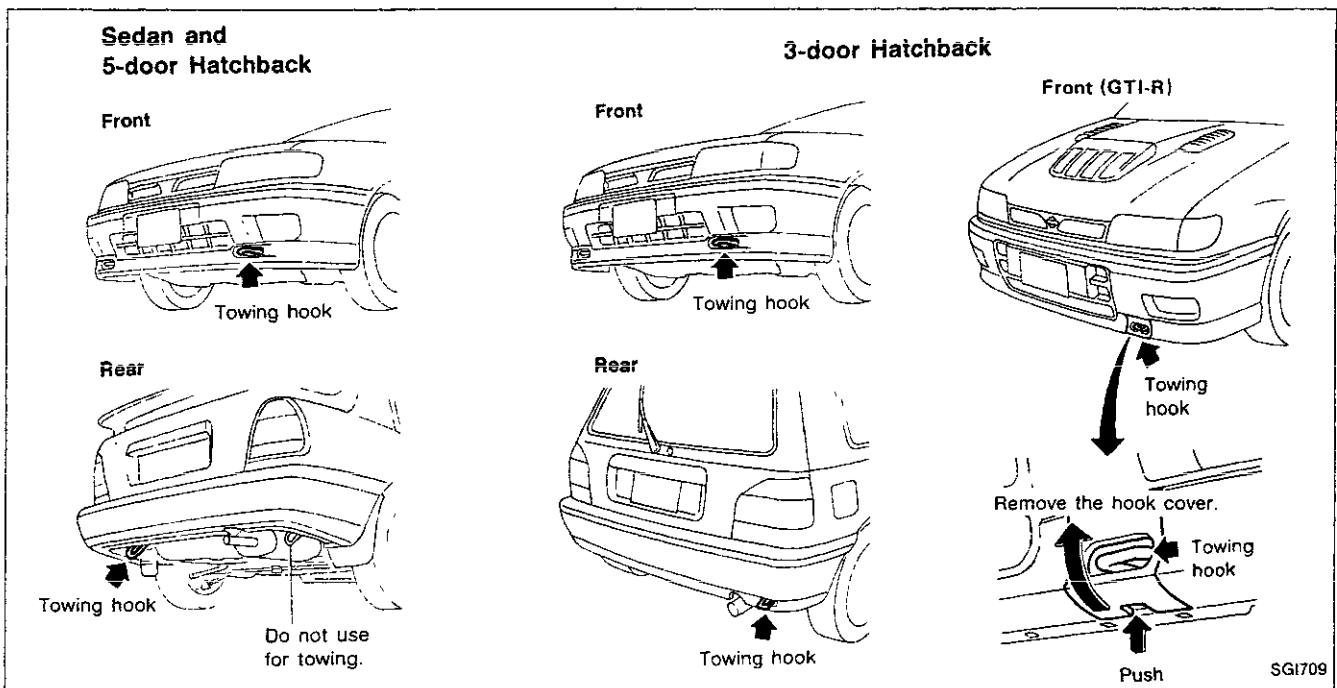


TOWING POINTS


Always pull the cable straight out from the vehicle. Never pull on the hook at a sideways angle.

CAUTION:


- a. When doing on-the-car wheel balancing with a full-time 4WD vehicle, to prevent the wheels from rotating at different speeds or in different directions from each other (which could lead to damage to transaxle gear), always be sure to observe the following precautions:
 - 1) All four wheels should be jacked up, clearing the ground completely.
 - 2) The wheels should be rotated with both the engine and the wheel balancer engaged.
 - 3) The parking brake lever should be fully released.
 - 4) None of the brakes should be allowed to drag.
- b. Avoid sudden acceleration, deceleration and braking.

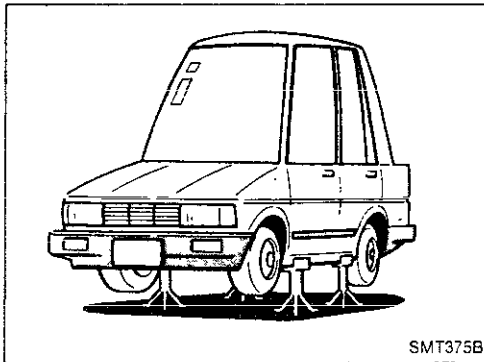

1. Jack up vehicle so that all four wheels can rotate.
Make sure the vehicle is firmly supported on stands.

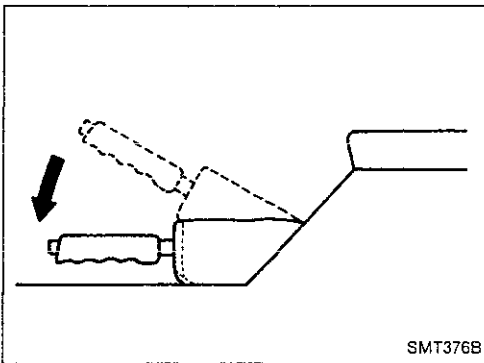


2. Release parking brake fully.

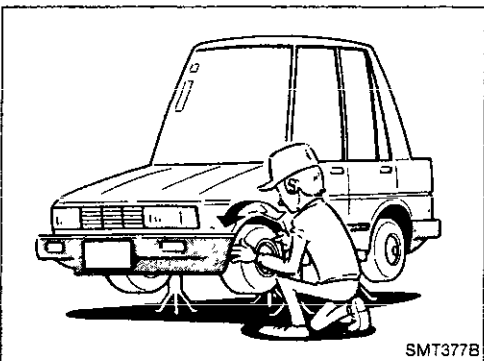

3. Make sure that brakes are not dragging on any of four wheels.

ON-THE-CAR WHEEL BALANCING

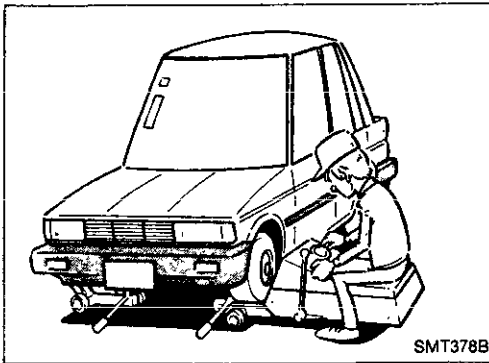

4. Place wheel to be balanced on wheel balancer.
Follow the procedure specified by the wheel balancer manufacturer.

5. Start engine


6.

— **M/T MODEL** —

Put shift lever in 3rd or 4th gear and engage clutch slowly, then gradually increase speed to test speed.

— **A/T MODEL** —

Put shift lever into "D" position, then gradually increase speed to test speed.

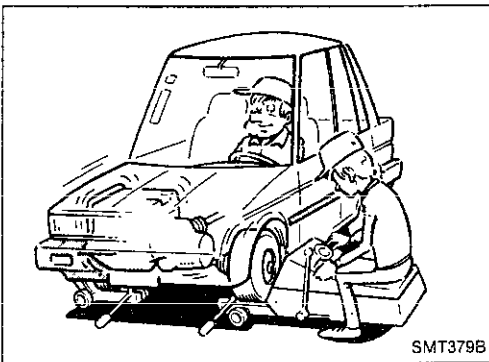

7. Rotate wheels using both engine's driving force and wheel balancer driving force and check wheel balance.

Assure that the other wheels will rotate at the same time.

TIGHTENING TORQUE OF STANDARD BOLTS


Grade	Bolt size	Bolt diameter* mm	Pitch mm	Tightening torque (Without lubricant)					
				Hexagon head bolt			Hexagon flange bolt		
				N·m	kg-m	ft-lb	N·m	kg-m	ft-lb
4T	M6	6.0	1.0	5.1	0.52	3.8	6.1	0.62	4.5
	M8	8.0	1.25	13	1.3	9	15	1.5	11
			1.0	13	1.3	9	16	1.6	12
	M10	10.0	1.5	25	2.5	18	29	3.0	22
			1.25	25	2.6	19	30	3.1	22
	M12	12.0	1.75	42	4.3	31	51	5.2	38
			1.25	46	4.7	34	56	5.7	41
	M14	14.0	1.5	74	7.5	54	88	9.0	65
7T	M6	6.0	1.0	8.4	0.86	6.2	10	1.0	7
	M8	8.0	1.25	21	2.1	15	25	2.5	18
			1.0	22	2.2	16	26	2.7	20
	M10	10.0	1.5	41	4.2	30	48	4.9	35
			1.25	43	4.4	32	51	5.2	38
	M12	12.0	1.75	71	7.2	52	84	8.6	62
			1.25	77	7.9	57	92	9.4	68
	M14	14.0	1.5	127	13.0	94	147	15.0	108
9T	M6	6.0	1.0	12	1.2	9	15	1.5	11
	M8	8.0	1.25	29	3.0	22	35	3.6	26
			1.0	31	3.2	23	37	3.8	27
	M10	10.0	1.5	59	6.0	43	70	7.1	51
			1.25	62	6.3	46	74	7.5	54
	M12	12.0	1.75	98	10.0	72	118	12.0	87
			1.25	108	11.0	80	137	14.0	101
	M14	14.0	1.5	177	18.0	130	206	21.0	152

1. Special parts are excluded.

2. This standard is applicable to bolts having the following marks embossed on the bolt head.

Grade	Mark
4T	4
7T	7
9T	9

 *: Nominal diameter




CLUTCH

SECTION **CL**

CONTENTS

PRECAUTIONS AND PREPARATION	CL- 2
CLUTCH SYSTEM — Hydraulic Type (SR20DET engine models)	CL- 3
CLUTCH SYSTEM — Mechanical Type	CL- 4
INSPECTION AND ADJUSTMENT	CL- 5
HYDRAULIC CLUTCH CONTROL — Hydraulic Type (SR20DET engine models)	CL- 7
CLUTCH RELEASE MECHANISM	CL- 9
CLUTCH DISC AND CLUTCH COVER	CL-11
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	CL-14



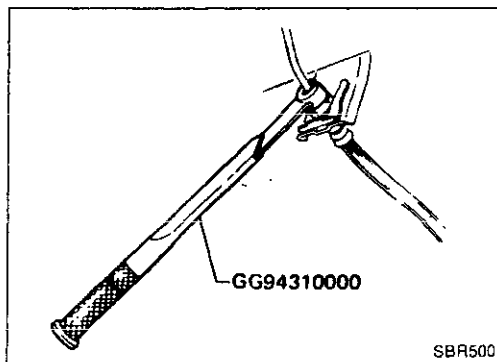

Precautions

- Recommended fluid is brake fluid "DOT 3".
- Do not reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas.
- When removing and installing clutch piping, use Tool.
- Use new brake fluid to clean or wash all parts of master cylinder, operating cylinder and clutch damper.
- Never use mineral oils such as gasoline or kerosene. It will ruin the rubber parts of the hydraulic system.





 
WARNING:


After cleaning clutch disc, wipe it with a dust collector. Do not use compressed air.

Preparation

SPECIAL SERVICE TOOLS

*: Special tool or commercial equivalent

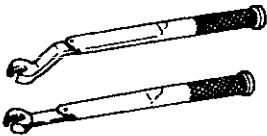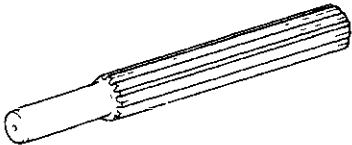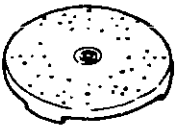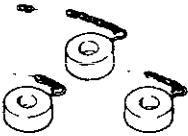Tool number Tool name	Description
GG94310000* Flare nut torque wrench	 Removing and installing clutch piping
KV30101000* Clutch aligning bar	 Installing clutch cover and clutch disc
ST20050010 Base plate	 Inspecting diaphragm spring of clutch cover
ST20050100 Distance piece	 Inspecting diaphragm spring of clutch cover
ST20050240* Diaphragm spring adjusting wrench	 Adjusting unevenness of diaphragm spring of clutch cover

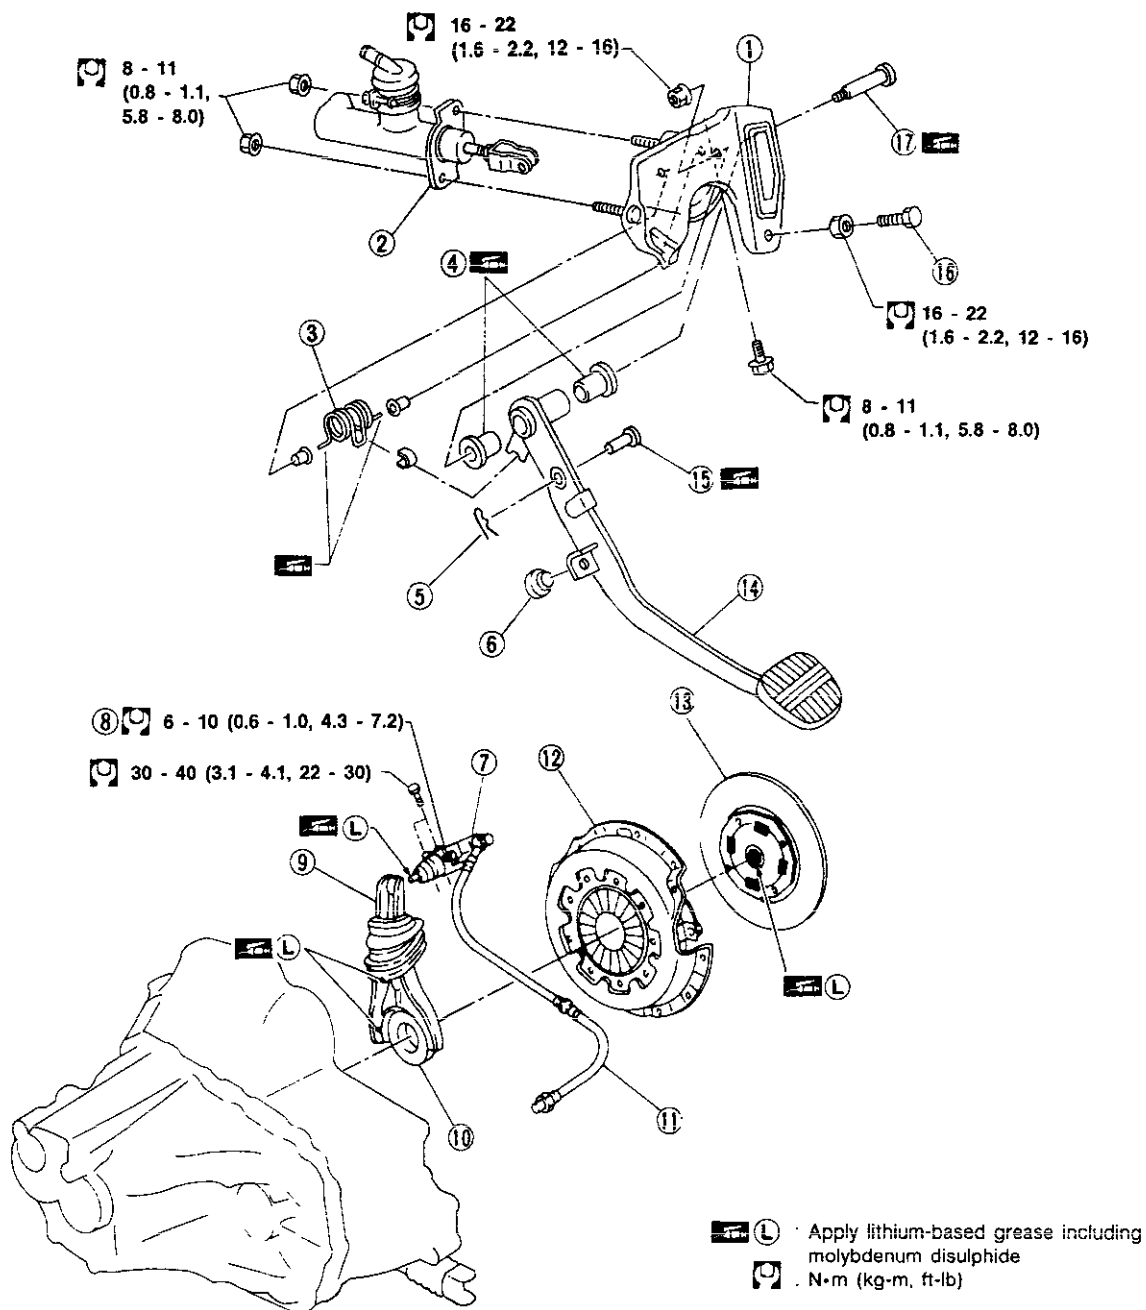

SCL458

- | | | |
|--------------------------|----------------------|-----------------|
| ① Clutch pedal bracket | ⑦ Operating cylinder | ⑬ Clutch disc |
| ② Clutch master cylinder | ⑧ Air bleeder screw | ⑭ Clutch pedal |
| ③ Assist spring | ⑨ Withdrawal lever | ⑮ Clevis pin |
| ④ Bushing | ⑩ Release bearing | ⑯ Pedal stopper |
| ⑤ Pin | ⑪ Clutch hose | ⑰ Fulcrum pin |
| ⑥ Stopper rubber | ⑫ Clutch cover | |

8 - 11
(0.8 - 1.1, 5.8 - 8.0)

CD20 and CD17 engine models

16 - 22
(1.6 - 2.2, 12 - 16)

● Pedal stopper
16 - 22 (1.6 - 2.2, 12 - 16)
● Clutch switch
12 - 15 (1.2 - 1.5, 9 - 11)

8 - 11
(0.8 - 1.1, 5.8 - 8.0)

E10 and CD17 engine models

Other engine models

To bracket


22 - 29
(2.2 - 3.0, 16 - 22)

8 - 11
(0.8 - 1.1, 5.8 - 8.0)

Ⓕ : Apply lithium-based grease including molybdenum disulphide.
Ⓖ : N·m (kg-m, ft-lb)


SCL459

- CL-4**

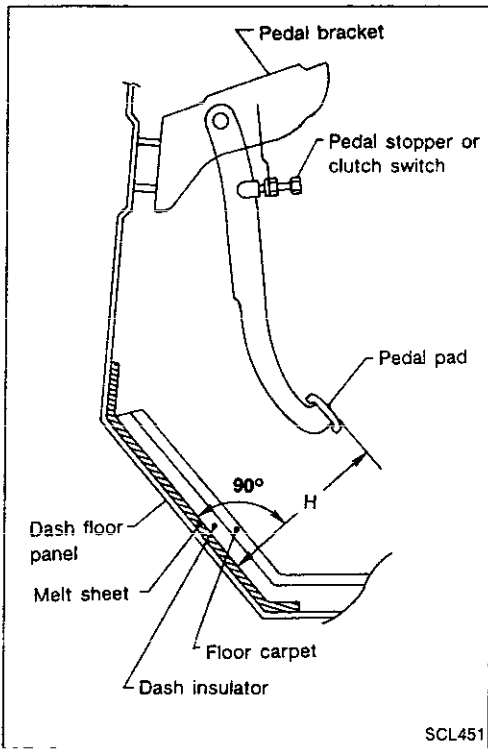

Adjusting Clutch Pedal

1. Adjust pedal height with pedal stopper or clutch switch.
Pedal height "H":
Refer to S.D.S.

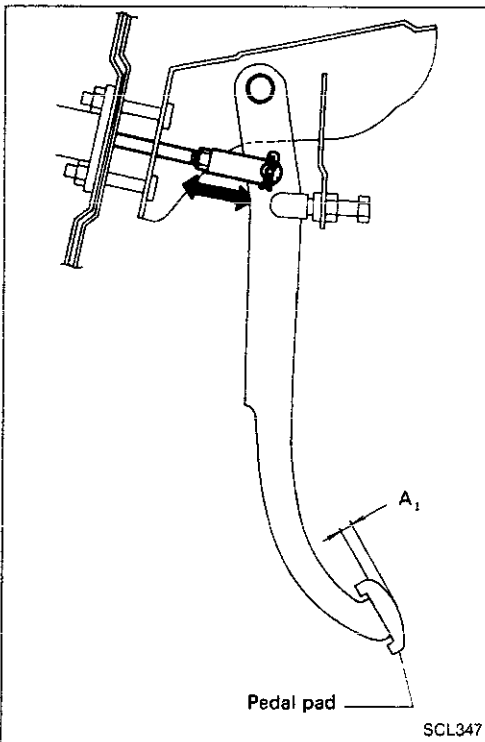

— For hydraulic type —


2. Adjust pedal free play with master cylinder push rod. Then tighten lock nut.

Pedal free play "A₁":

1.0 - 3.0 mm (0.039 - 0.118 in)

Pedal free play means the following total, measured at position of pedal pad:

- Play due to clevis pin and clevis pin hole in clutch pedal.

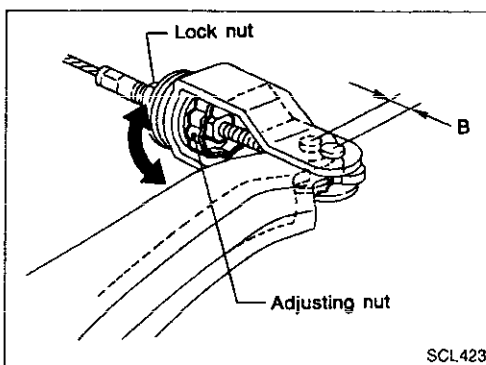

— For mechanical type —

2. Adjust withdrawal lever play "B" according to the following procedure.
 - (1) Push withdrawal lever by hand until resistance is felt, and then tighten adjusting nut.
 - (2) Turn back adjusting nut 2.5 to 3.5 turns, and then tighten lock nut.


Withdrawal lever play "B":

2.5 - 3.5 mm (0.098 - 0.138 in)

Lock nut:

☐: 3 - 4 N·m (0.3 - 0.4 kg-m, 2.2 - 2.9 ft-lb)


Adjusting Clutch Pedal (Cont'd)

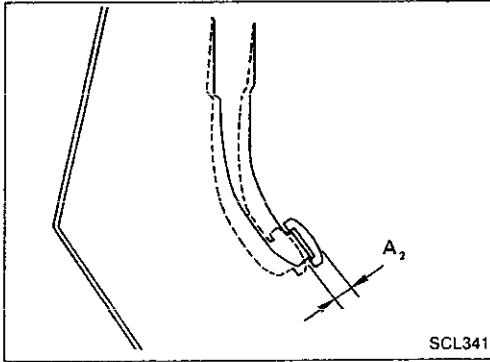

- (3) As a final check, measure pedal free travel "A₂" at center of pedal pad.

Pedal free travel "A₂":

10.8 - 15.1 mm (0.425 - 0.594 in)

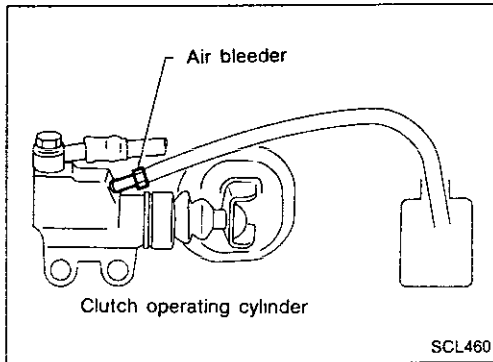


Bleeding Procedure — Hydraulic type

Bleed air according to the following procedure.

- **Carefully monitor fluid level at master cylinder during bleeding operation.**
1. Top up reservoir with recommended brake fluid.
 2. Connect a transparent vinyl tube to air bleeder valve.
 3. Fully depress clutch pedal several times.
 4. With clutch pedal depressed, open bleeder valve to release air.
 5. Close bleeder valve.
 6. Repeat steps 3 through 5 above until clear brake fluid comes out of air bleeder valve.

Clutch Master Cylinder

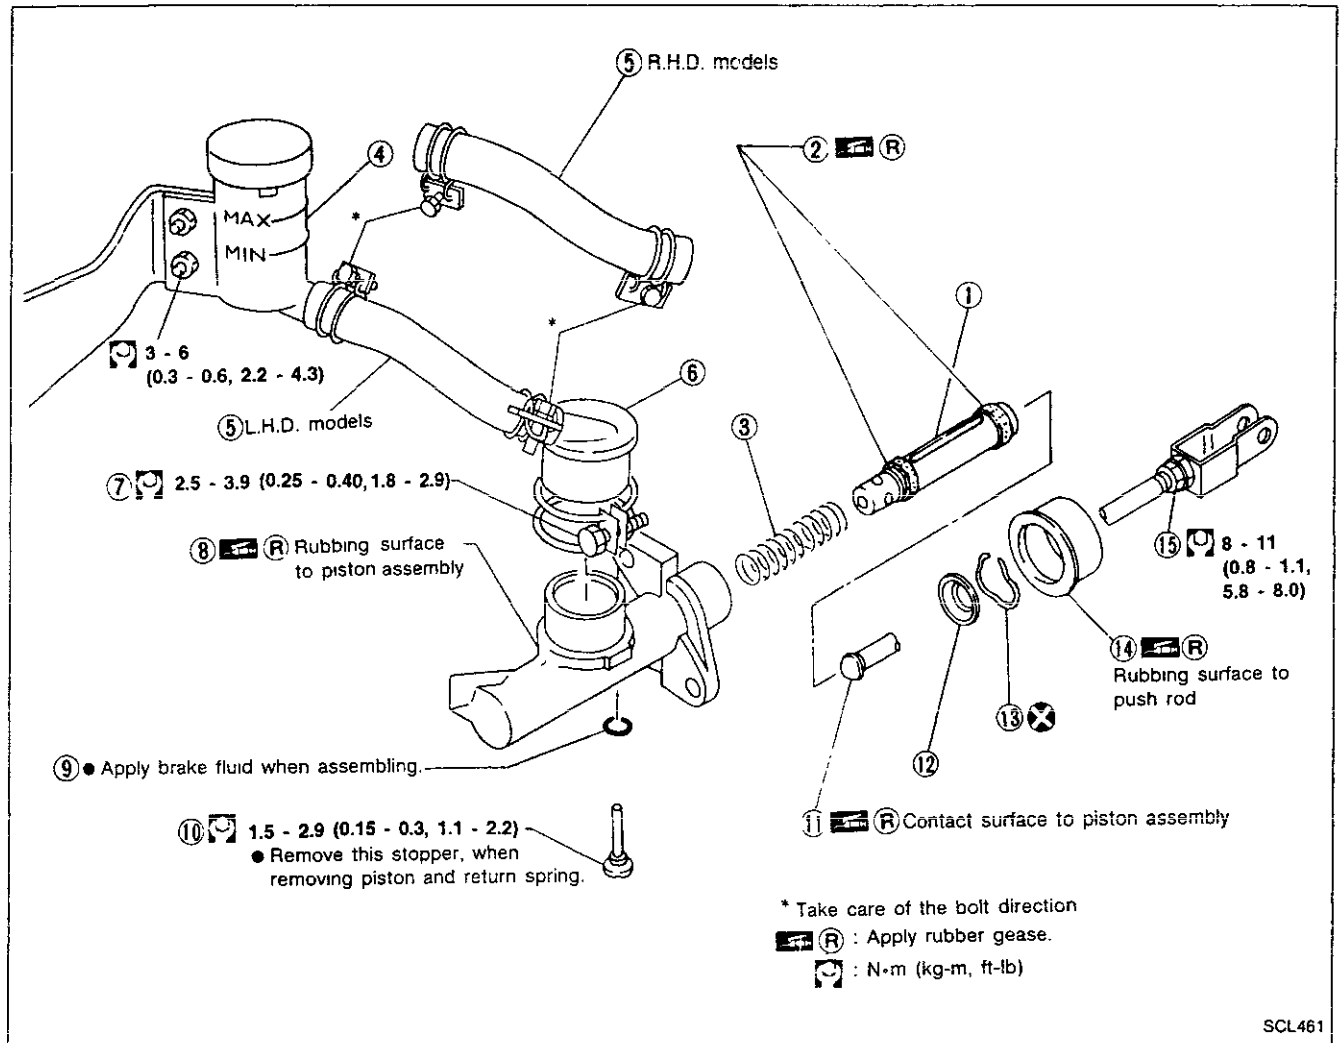


- ① Piston assembly
- ② Piston cup
- ③ Return spring
- ④ Reservoir tank
- ⑤ Reservoir hose

- ⑥ Reservoir cap
- ⑦ Reservoir band
- ⑧ Cylinder body
- ⑨ Packing
- ⑩ Valve stopper

- ⑪ Push rod
- ⑫ Stopper
- ⑬ Stopper ring
- ⑭ Dust cover
- ⑮ Lock nut

DISASSEMBLY AND ASSEMBLY

- Push piston into cylinder body with screwdriver when removing and installing valve stopper.

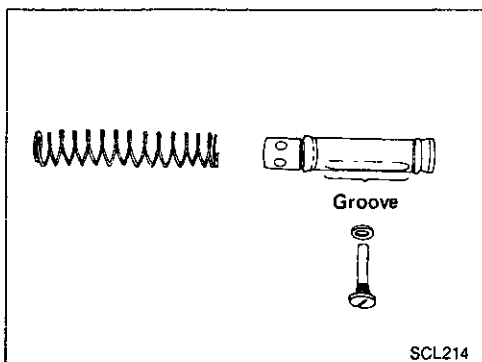

- Align groove of piston assembly and valve stopper when installing valve stopper.
- Check direction of piston cups.


Clutch Master Cylinder (Cont'd)

INSPECTION

Check the following items, and replace if necessary.

- Rubbing surface of cylinder and piston, for uneven wear, rust or damage
- Piston with piston cup, for wear or damage
- Return spring, for wear or damage
- Dust cover, for cracks, deformation or damage
- Reservoir, for deformation or damage

Operating Cylinder

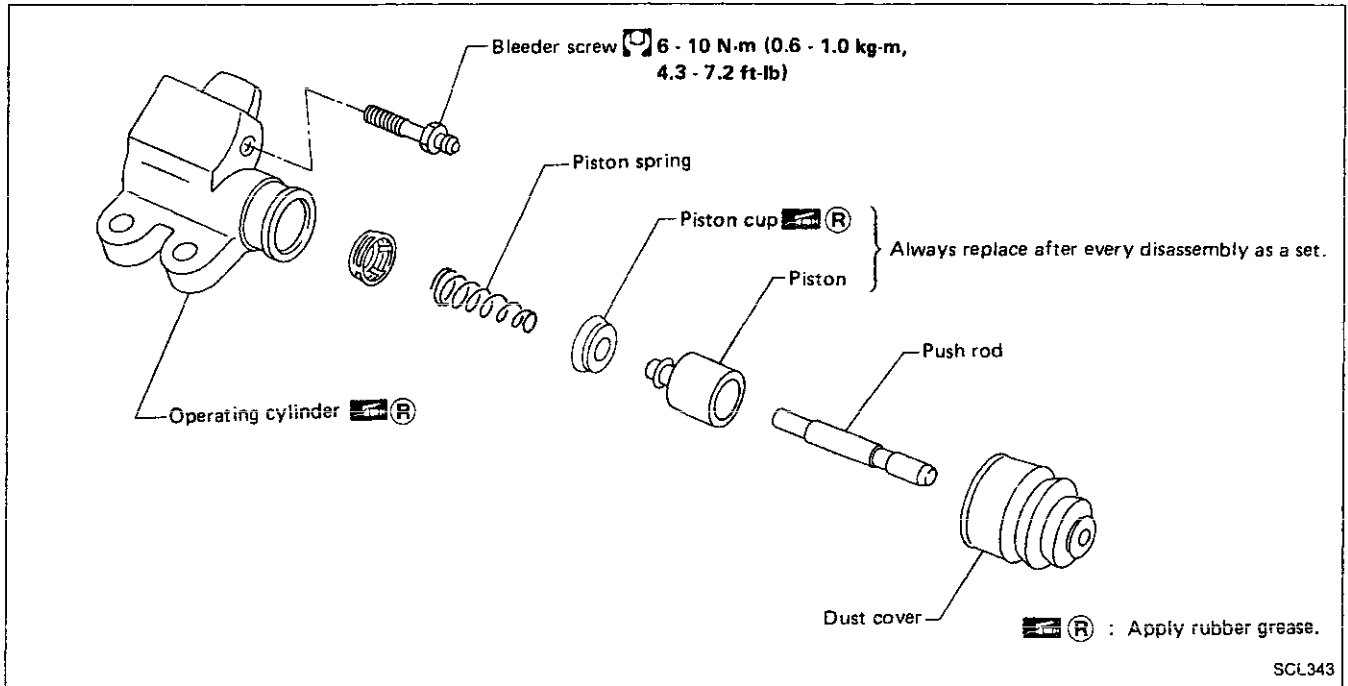


INSPECTION


Check the following items, and replace if necessary.


- Rubbing surface of cylinder and piston, for uneven wear, rust or damage
- Piston with piston cup, for wear or damage
- Piston spring, for wear or damage
- Dust cover, for cracks, deformation or damage

HYDRAULIC TYPE

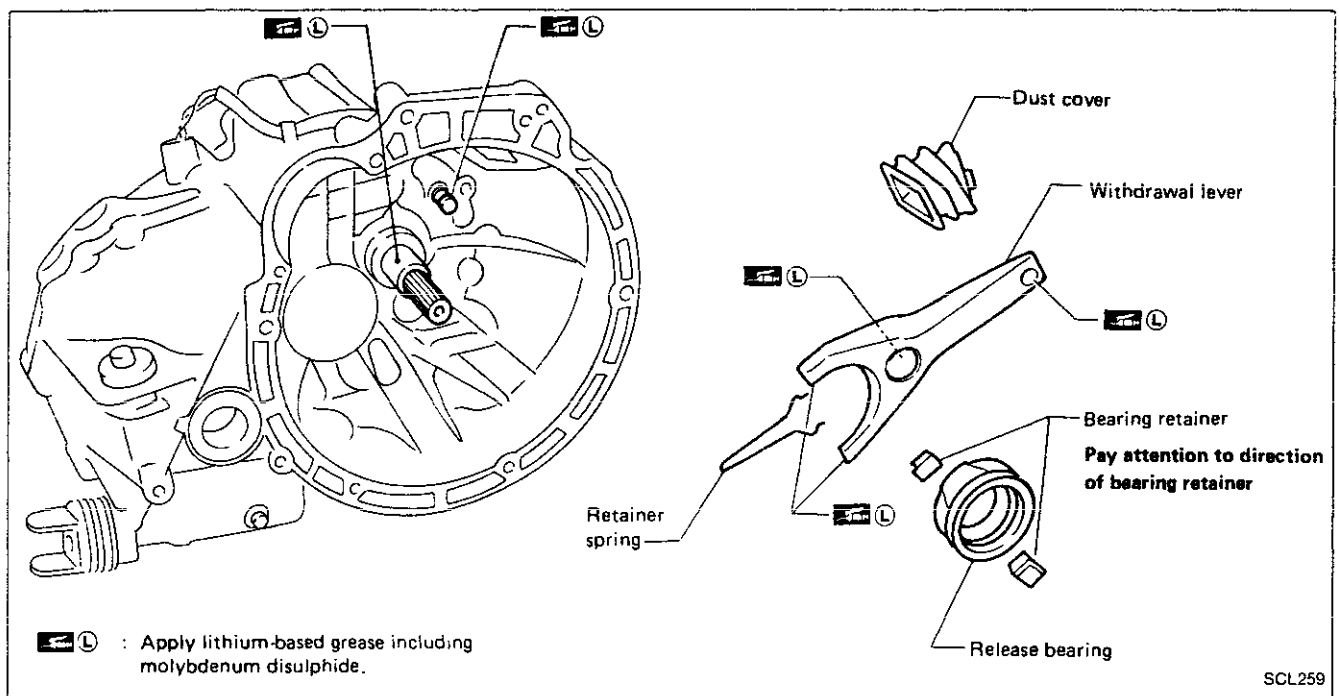


MECHANICAL TYPE

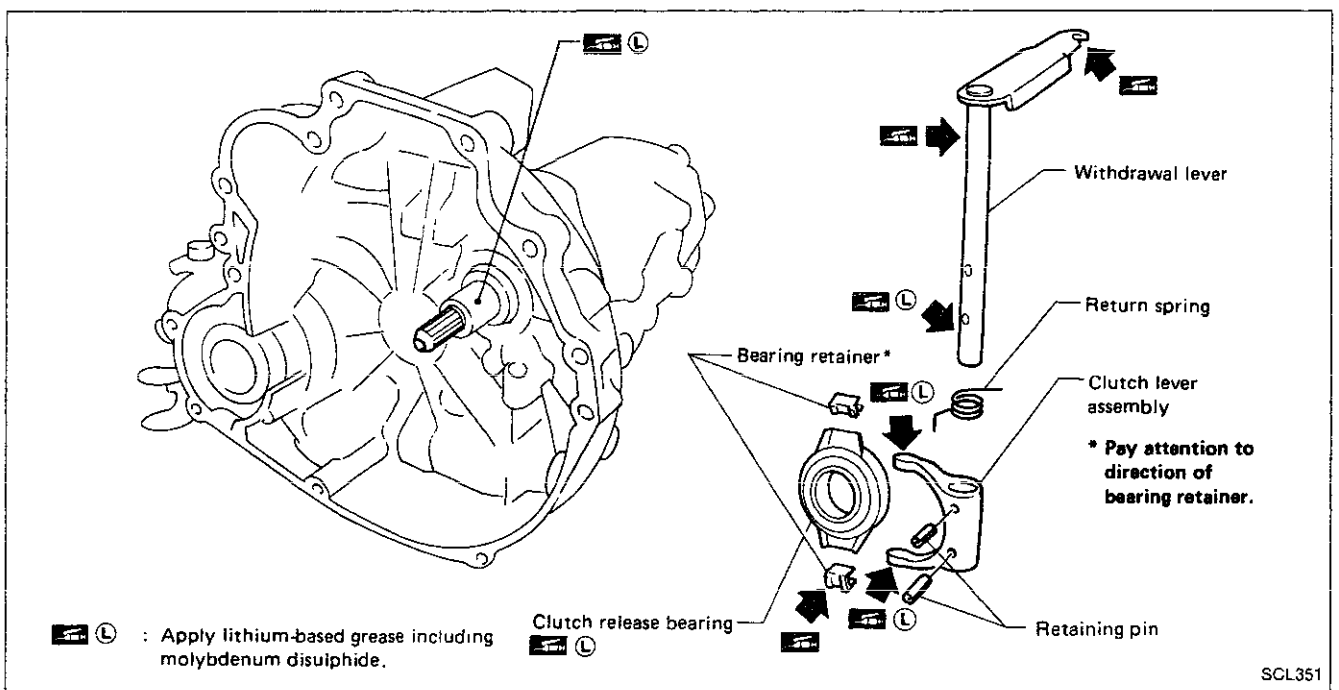

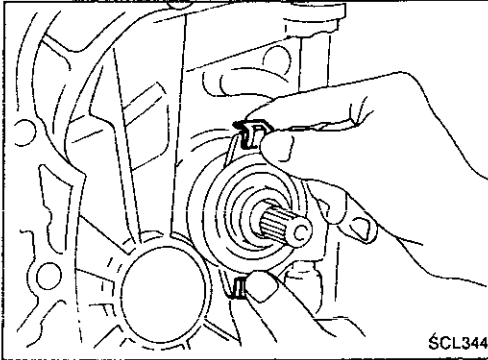

REMOVAL AND INSTALLATION


- Remove release bearing by pulling bearing retainers outward.
- Align retaining pin with cavity of clutch housing and tap out retaining pin.

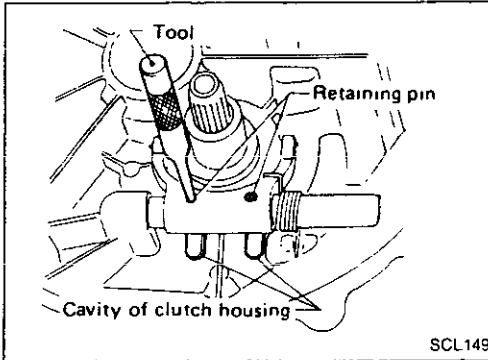

INSPECTION

Check the following items, and replace if necessary.



- Release bearing, to see that it rolls freely and is free from noise, cracks, pitting or wear
- Release sleeve and withdrawal lever rubbing surface, for wear, rust or damage

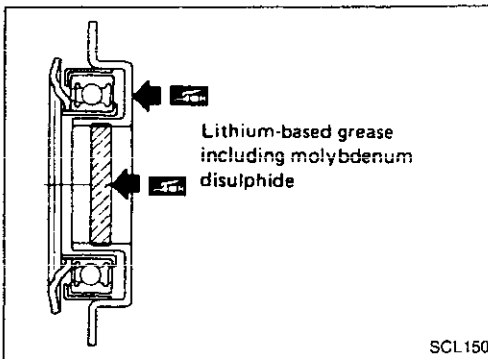

LUBRICATION

- Apply recommended grease to contact surface and rubbing surface.
- Too much lubricant might damage clutch disc facing.

CLUTCH DISC AND CLUTCH COVER

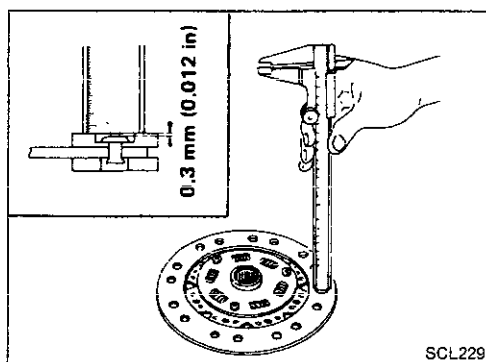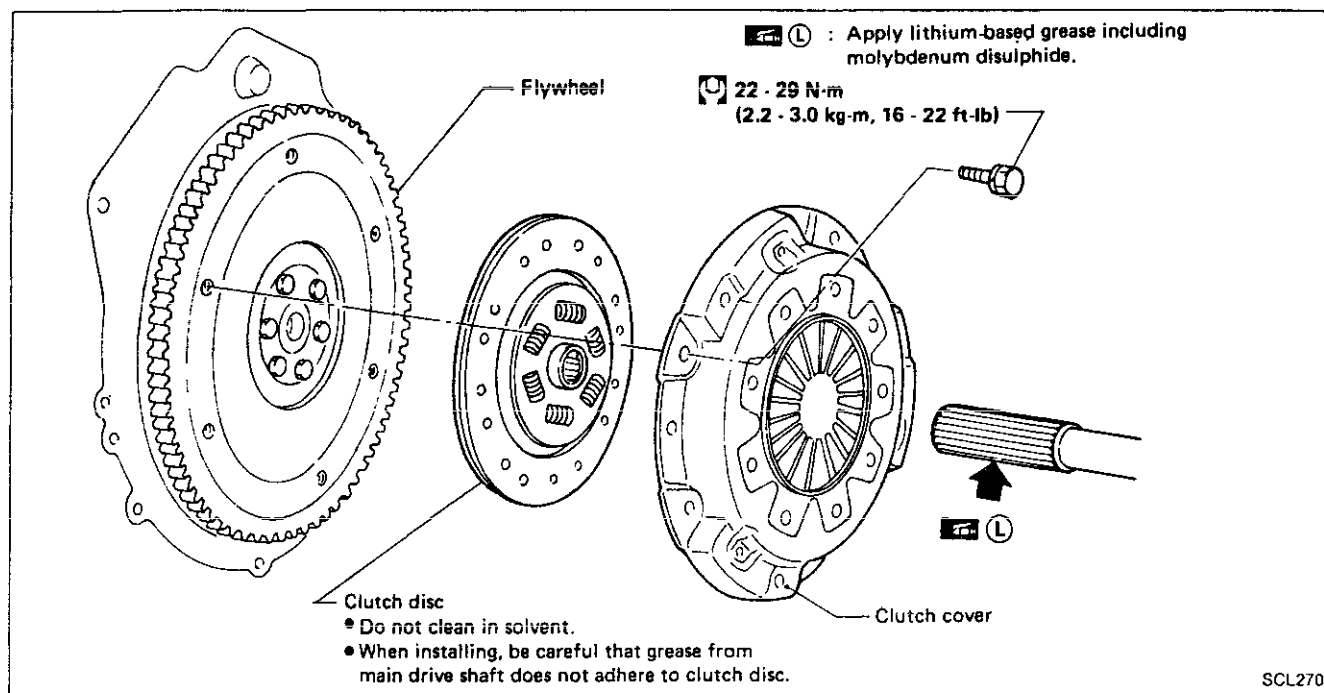


Clutch Disc

INSPECTION

Check clutch disc for wear of facing.

Wear limit of facing surface to rivet head:
0.3 mm (0.012 in)

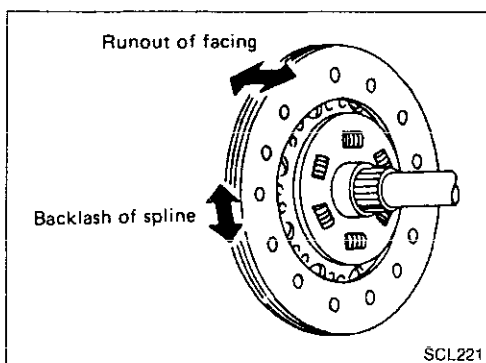

- Check clutch disc for backlash of spline and runout of facing.

Maximum backlash of spline (at outer edge of disc):

180CBL	0.7 mm (0.028 in)
190TBL, 200TBL	0.8 mm (0.031 in)
215TBL	0.9 mm (0.035 in)
240LTD	1.0 mm (0.039 in)


Runout limit:

1.0 mm (0.039 in)

Distance of runout check point (from hub center):

180CBL	85 mm (3.35 in)
190TBL	90 mm (3.54 in)
200TBL	95 mm (3.74 in)
215TBL	102.5 mm (4.04 in)
240LTD	115 mm (4.53 in)

- Check clutch disc for burns, discoloration or oil or grease leakage. Replace if necessary.

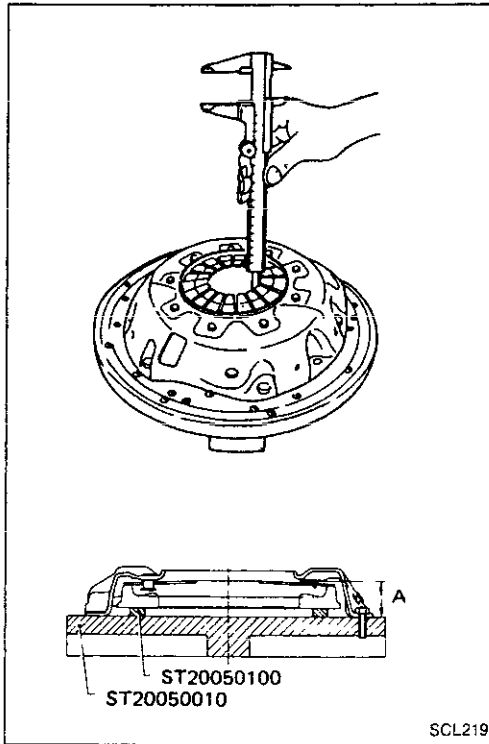

Clutch Cover and Flywheel

INSPECTION AND ADJUSTMENT

- Set Tools and check height and unevenness of diaphragm spring.

Set specified feeler gauges on distance pieces (ST20050100) to obtain the same thickness as clutch disc.

Thickness of feeler gauges:

C180S, C190S and C200S (CD20 engine models)

0.4 mm (0.016 in)

C200S (4WD models with GA16DS engine)

0.1 mm (0.004 in)

C215S Not required

C240S 0.3 mm (0.012 in)

Diaphragm spring height "A":

C180S 29 - 31 mm (1.14 - 1.22 in)

C190S

Except for models with CD17 engine

29 - 31 mm (1.14 - 1.22 in)

For models with CD17 engine

31 - 33 mm (1.22 - 1.30 in)

C200S 31 - 33 mm (1.22 - 1.30 in)

C215S 30.5 - 32.5 mm (1.201 - 1.280 in)

C240S 37.5 - 39.5 mm (1.476 - 1.555 in)

- Check thrust rings for wear or damage by shaking cover assembly and listening for chattering noise, or lightly hammering on rivets for a slightly cracked noise. Replace clutch cover assembly if necessary.
- Check pressure plate and clutch disc contact surface for slight burns or discoloration. Repair pressure plate with emery paper.
- Check pressure plate and clutch disc contact surface for deformation or damage. Replace if necessary.



- Adjust unevenness of diaphragm spring with Tool.

Uneven limit:

C180S 1.0 mm (0.039 in)

C190S, C200S and C215S 0.7 mm (0.028 in)

C240S 0.5 mm (0.020 in)

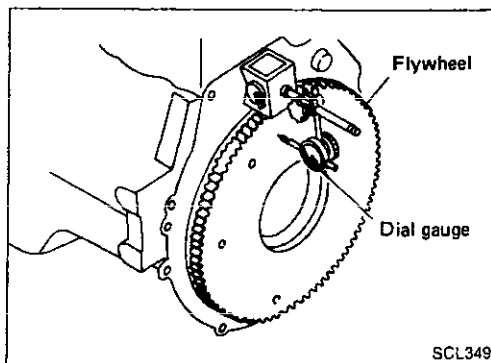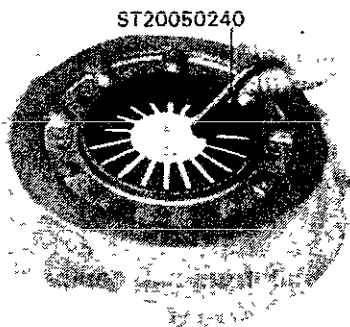

FLYWHEEL INSPECTION

- Check contact surface of flywheel for slight burns or discoloration. Repair flywheel with emery paper.
- Check flywheel runout.

Runout (Total indicator reading):

Flywheel


Less than 0.15 mm (0.0059 in)

CLUTCH DISC AND CLUTCH COVER

Clutch Cover and Flywheel (Cont'd)

INSTALLATION

- Insert Tool into clutch disc hub when installing clutch cover and disc.
- Tighten bolts in numerical order.
- **Be careful not to allow grease to contaminate clutch facing.**

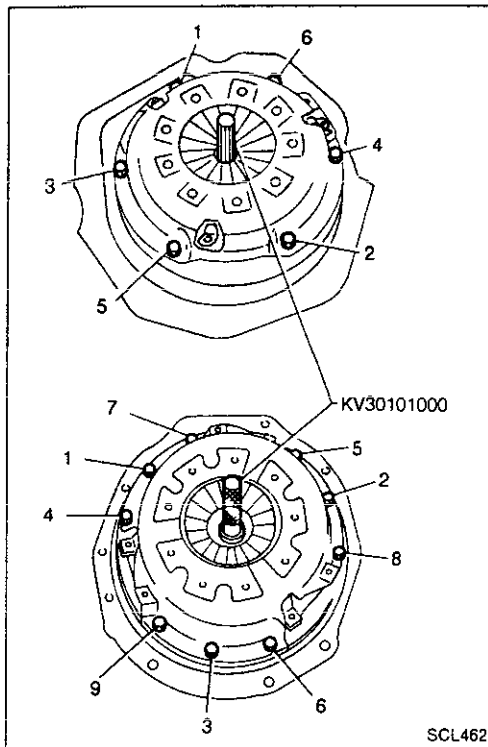

General Specifications

CLUTCH CONTROL SYSTEM

Engine	Except for SR20DET	SR20DET
Type of clutch control	Mechanical	Hydraulic

CLUTCH MASTER CYLINDER

Inner diameter	mm (in)	15.87 (5/8)
----------------	---------	-------------

CLUTCH OPERATING CYLINDER

Inner diameter	mm (in)	19.05 (3/4)
----------------	---------	-------------

CLUTCH DISC

Unit: mm (in)

Engine	E10S, GA13DS, GA14DS	GA16DS (2WD), GA16DE, CD17	CD20	GA16DS (4WD)	SR20DE	SR20DET
Model	180CBL	190TBL	200TBL		215TBL	240LTD
Facing size (Outer dia. x inner dia. x thickness)	180 x 125 x 3.5 (7.09 x 4.92 x 0.138)	190 x 132 x 3.5 (7.48 x 5.20 x 0.138)	200 x 130 x 3.5 (7.87 x 5.12 x 0.138)		215 x 140 x 3.5 (8.46 x 5.51 x 0.138)	240 x 160 x 3.5 (9.45 x 6.30 x 0.138)
Thickness of disc assembly with load	8.0 - 8.4 (0.315 - 0.331) with 3,923 N (400 kg, 882 lb)			7.7 - 8.1 (0.303 - 0.319) with 3,923 N (400 kg, 882 lb)	7.6 - 8.0 (0.299 - 0.315) with 3,923 N (400 kg, 882 lb)	7.9 - 8.3 (0.311 - 0.327) with 4,904 N (500 kg, 1,103 lb)

CLUTCH COVER

Engine	E10S	GA13DS, GA14DS	GA16DS (2WD)	GA16DE	CD17	CD20, GA16DS (4WD)	SR20DE	SR20DET
Model	C180S		C190S			C200S	C215S	C240S
Full-load N (kg, lb)	2,746 (280, 617)	3,236 (330, 728)	3,432 (350, 772)	3,825 (390, 860)	2,844 (290, 639)	3,481 (355, 783)	4,413 (450, 992)	5,688 (580, 1,279)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment

CLUTCH PEDAL

Unit: mm (in)

Applied model	2WD		4WD	
	R.H.D.	L.H.D.	GA16DS engine models	SR20DET engine models
Pedal height*	159 - 169 (6.26 - 6.65)	150 - 160 (5.91 - 6.30)	162 - 172 (6.38 - 6.77)	159 - 169 (6.26 - 6.65)
Pedal free play "A ₁ " (Backlash at clevis)	—			1 - 3 (0.04 - 0.12)
Pedal free travel "A ₂ "	10.8 - 15.1 (0.425 - 0.594)			—
Withdrawal lever play "B"	2.5 - 3.5 (0.098 - 0.138)			—

*: Measured from surface of melt sheet to surface of pedal pad.

CLUTCH DISC

Unit: mm (in)

Disc model	180CBL	190TBL	200TBL	215TBL	240LTD
Wear limit of facing surface to rivet head	0.3 (0.012)				
Runout limit of facing	1.0 (0.039)				
Distance of runout check point (from hub center)	85 (3.35)	90 (3.54)	95 (3.74)	102.5 (4.04)	115 (4.53)
Maximum backlash of spline (at outer edge of disc)	0.7 (0.028)	0.8 (0.031)	0.8 (0.031)	0.9 (0.035)	1.0 (0.039)

CLUTCH COVER

Unit: mm (in)

Cover model	C180S	C190S		C200S	C215S	C240S
Diaphragm spring height	29 - 31 (1.14 - 1.22)	29 - 31 (1.14 - 1.22)	31 - 33 (1.22 - 1.30)*	31 - 33 (1.22 - 1.30)	30.5 - 32.5 (1.201 - 1.280)	37.5 - 39.5 (1.476 - 1.555)
Uneven limit of diaphragm spring toe height "A"	1.0 (0.039)	0.7 (0.028)				0.5 (0.020)

*: For models with CD17 engine

MANUAL TRANSAXLE

SECTION **MT**

CONTENTS

PREPARATION	MT- 2
ON-VEHICLE SERVICE	MT- 6
REMOVAL AND INSTALLATION	MT- 8
TRANSAXLE GEAR CONTROL	MT-12

RN4F30A, RS5F30A, RS5F31A

MAJOR OVERHAUL	MT-13
DISASSEMBLY	MT-16
REPAIR FOR COMPONENT PARTS	MT-19
ADJUSTMENT	MT-32
ASSEMBLY	MT-34

RS5F32A

MAJOR OVERHAUL	MT-38
DISASSEMBLY	MT-41
REPAIR FOR COMPONENT PARTS	MT-44
ADJUSTMENT	MT-64
ASSEMBLY	MT-66

RS5F50A

MAJOR OVERHAUL	MT-70
DISASSEMBLY	MT-73
REPAIR FOR COMPONENT PARTS	MT-77
ADJUSTMENT	MT-92
ASSEMBLY	MT-95






SERVICE DATA AND SPECIFICATIONS (S.D.S.)	MT-100
--	--------

MT

PREPARATION








SPECIAL SERVICE TOOLS

 *: Special tool or commercial equivalent

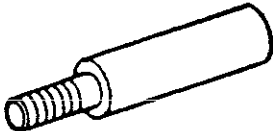

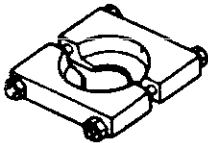
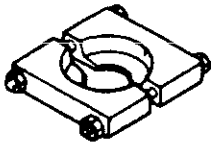
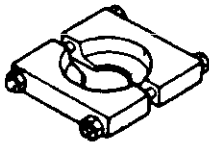
Tool number Tool name	Description	
KV38105900 For F30A, F31A KV38106500-For F50A KV38107700-For F32A Preload adapter		Measuring turning torque of final drive assembly Measuring total turning torque (Except for F32A) Measuring clearance between Side gear and differential case with washer Selecting differential side bearing adjusting shim (Use with KV38106000.)
KV38106000 Height gauge adapter (differential side bearing)		Selecting differential side bearing adjusting shim (Use with KV38105900, KV38106500 or KV38107700.)
KV32101000* Pin punch		Removing and installing retaining pin
ST22730000* Puller		Removing mainshaft front and rear bearing inner race (Except for F32A) Removing 5th main gear (Except for F50A)
ST30031000* Puller		Removing differential side bearing inner race (F30A, F31A) Removing 3rd and 4th synchronizer Measuring wear of 2nd & 3rd baulk ring (F32A) Removing input shaft front and rear bearing (F50)
ST30021000* Puller		Removing 5th synchronizer Removing 3rd & 4th synchronizer (F50A) Removing 2nd & 3rd main gear (F50A)
ST33290001* Puller		Removing differential oil seal Removing mainshaft front bearing outer race (F30A, F31A) Removing differential side bearing outer race Removing mainshaft rear bearing outer race (F50A)

PREPARATION

*: Special tool or commercial equivalent

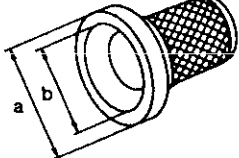
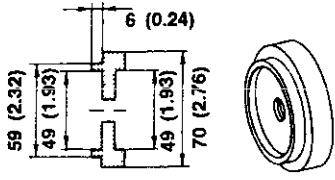
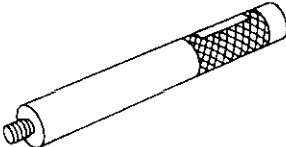
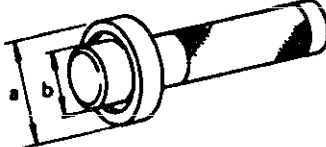
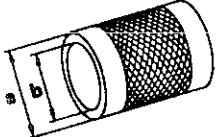
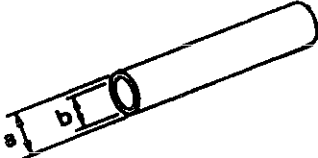
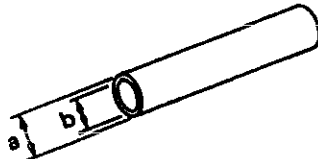
Tool number Tool name	Description
ST33400001* Drift	 Installing differential oil seal (F30A, F31A) a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia. (Except for right side of 4WD models)
KV31103000* Drift	 Installing differential oil seal (F32A) Right and left sides (Use with ST35325000.)
ST35325000* Drift handle	 Installing differential oil seal (F32A) (Use with KV31103000.)
KV38102100* Drift	 Installing input shaft rear bearing (Except for F50A) a: 44 mm (1.73 in) dia. b: 24.5 mm (0.965 in) dia.
ST33200000* Drift	 Installing mainshaft front bearing outer race (F30A, F31A) Installing mainshaft front bearing (F32A) a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.
ST22350000* Drift	 Installing input shaft front bearing (Except for F50A) a: 34 mm (1.34 in) dia. b: 28 mm (1.10 in) dia.
ST22452000* Drift	 Installing 1st & 2nd synchronizer (Except for F50A) Installing 3rd & 4th synchronizer (F32A) Installing 3rd, 4th and 5th main gear (F50A) a: 45 mm (1.77 in) dia. b: 36 mm (1.42 in) dia.

 
*: Special tool or commercial equivalent

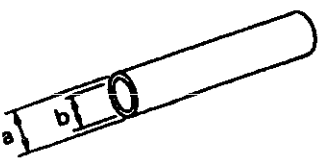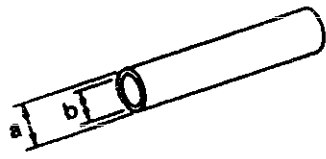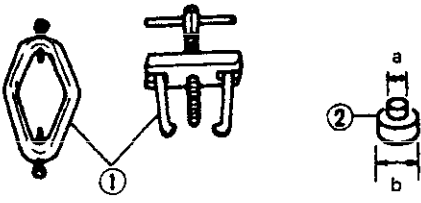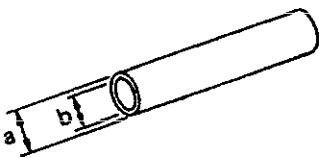Tool number Tool name	Description
ST37750000* Drift	 Installing 5th main gear (Except for F50A) Installing 3rd & 4th synchronizer (F30A, F31A) Installing input shaft oil seal (Except for F50A) Installing 5th synchronizer (Except for F50A) Installing mainshaft rear bearing (F32A) a: 40 mm (1.57 in) dia. b: 31 mm (1.22 in) dia.
ST22360002* Drift	 Installing mainshaft rear bearing inner race (F30A, F31A) a: 29 mm (1.14 in) dia. b: 23 mm (0.91 in) dia.
ST30621000* Drift	 Installing differential side bearing outer race (Except for F50A) Installing mainshaft rear bearing outer race (F50A) (Use with ST30611000.) a: 79 mm (3.11 in) dia. b: 59 mm (2.32 in) dia.
ST30611000* Drift handle	 (Use with ST30621000.)
ST3306S001 Differential side bearing puller set ① ST33051001 Puller ② ST33061000 Adapter	 Removing differential side bearing inner race (F50A) a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.
ST30600000 Drift	 Installing input shaft front bearing (F50A) a: 36 mm (1.42 in) dia. b: 31 mm (1.22 in) dia.

PREPARATION

COMMERCIAL SERVICE TOOLS

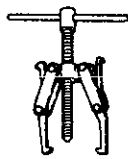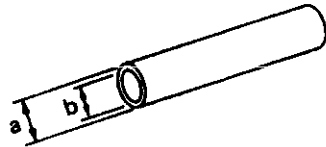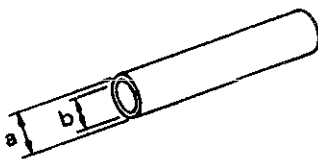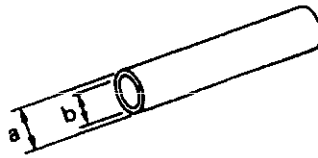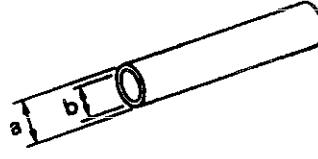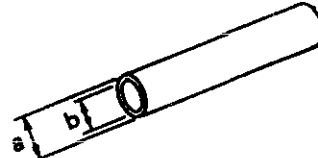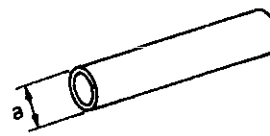
Tool name	Description
Puller	 Removing input shaft front bearing (Except for F50A) Removing mainshaft rear bearing (F32A)
Drift	 Installing mainshaft front bearing inner race (F30A, F31A) F30A a: 26 mm (1.02 in) dia. b: 21 mm (0.83 in) dia. F31A a: 31 mm (1.22 in) dia. b: 26 mm (1.02 in) dia.
Drift	 Installing differential side bearing inner race (Except for F50A) a: 56 mm (2.20 in) dia. b: 50.5 mm (1.988 in) dia.
Drift	 Installing striking rod oil seal a: 38 mm (1.50 in) dia. b: 32 mm (1.26 in) dia.
Drift	 Installing differential oil seal (Left side of F50A) a: 88 mm (3.46 in) dia. b: 72 mm (2.83 in) dia.
Drift	 Installing differential side bearing inner race (F50A) a: 45 mm (1.77 in) dia. b: 41 mm (1.61 in) dia.
Drift	 Installing differential side bearing outer race (F50A) a: 69 mm (2.72 in) dia.

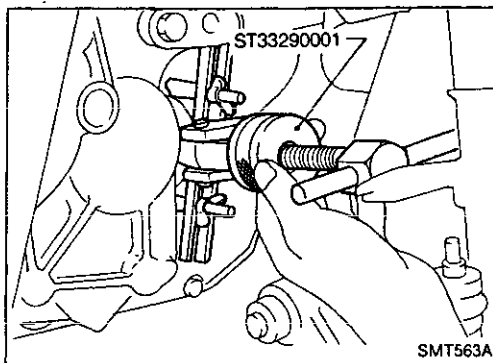

Replacing Oil Seal

DIFFERENTIAL OIL SEAL


1. Drain gear oil from transaxle.
2. Remove drive shafts — Refer to section FA.
3. Remove differential oil seal.

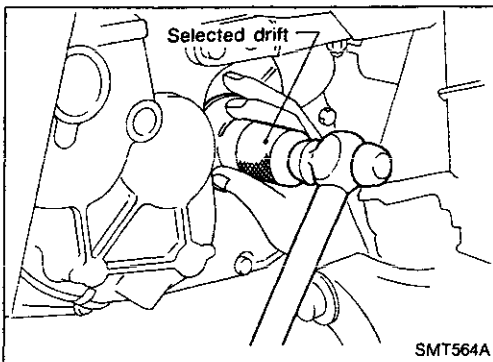

4. Install differential oil seal.
- **Apply multi-purpose grease to seal lip of oil seal before installing.**
5. Install drive shafts — Refer to section FA.

Differential oil seals and drifts for installation

2WD			4WD		
F30 F31+GA16DS	F31+GA16DE F31+CD20	F32A	F31A	F50A	
L.H. and R.H. sides	L.H. and R.H. sides	Left side	Left side	Left side	
Drift ST33400001		Drift KV31103000 Use with drift handle ST35325000	Drift ST33400001	Drift Suitable drift	
				SMT922B	

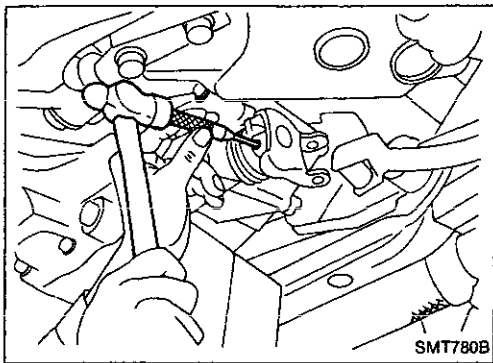


STRIKING ROD OIL SEAL

1. Remove transaxle control rod from yoke.
2. Remove yoke retaining pin.

ON-VEHICLE SERVICE



Replacing Oil Seal (Cont'd)

3. Remove striking rod oil seal.

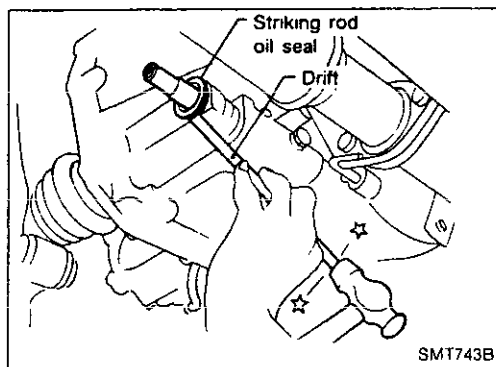

4. Install striking rod oil seal.

- Apply multi-purpose grease to seal lip of oil seal before installing.

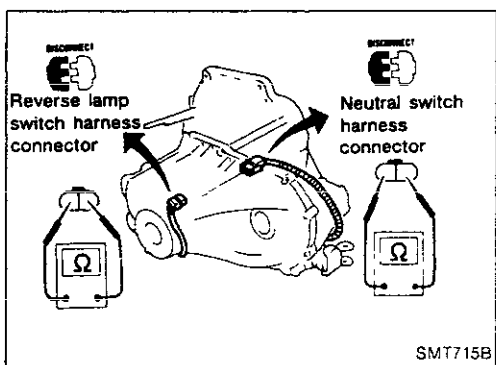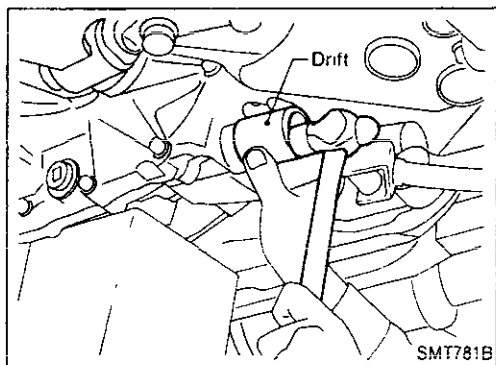

Check of Position Switch

— Except for RS5F50A —

BACK-UP LAMP SWITCH


- Check continuity.

Gear position	Continuity
Reverse	Yes
Except reverse	No

NEUTRAL SWITCH

- Check continuity.

Gear position	Continuity
Neutral	Yes
Except neutral	No

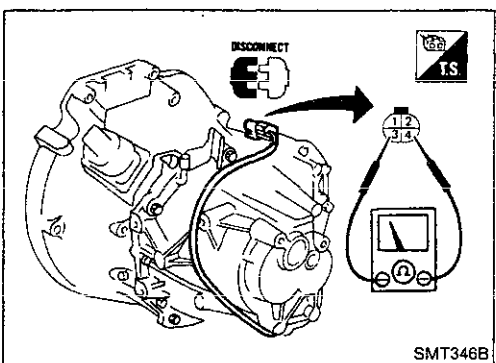


— RS5F50A —

BACK-UP LAMP SWITCH AND NEUTRAL SWITCH


- Check continuity.

Gear position	Continuity
Reverse	② — ④
Neutral	① — ③
Except reverse and neutral	No

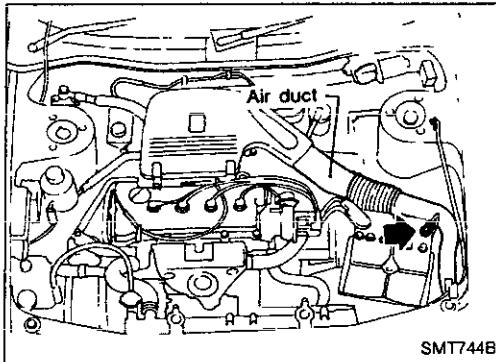


Removal


1. Remove battery negative terminal.
2. Remove air duct.

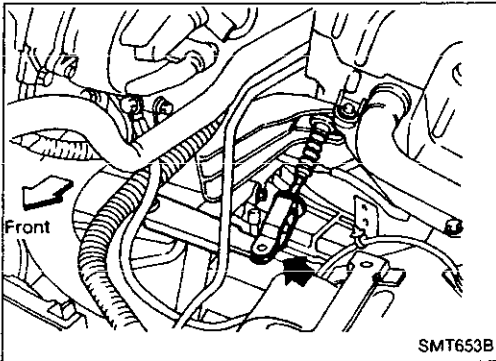

3. Disconnect clutch control cable. (Except for SR20DET engine models)
Remove clutch operating cylinder from transaxle. (SR20DET engine models)
4. Disconnect speedometer cable from transaxle.
5. Disconnect back-up lamp switch, neutral switch and ground harness connectors.
6. Remove starter motor from transaxle.

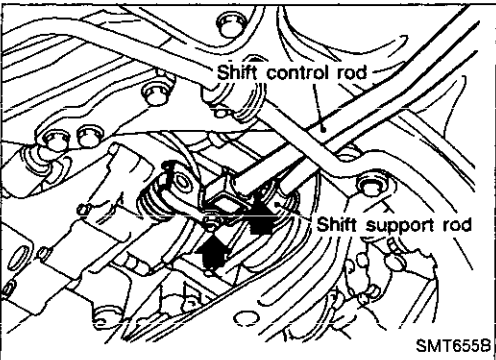


7. Remove shift control rod and support rod from transaxle.
8. Drain gear oil from transaxle and transfer.
9. Draw out drive shafts — Refer to section FA.
10. Support engine with hoist. (SR20DET engine models)
11. Remove transfer — Refer to section TF. (4WD models)

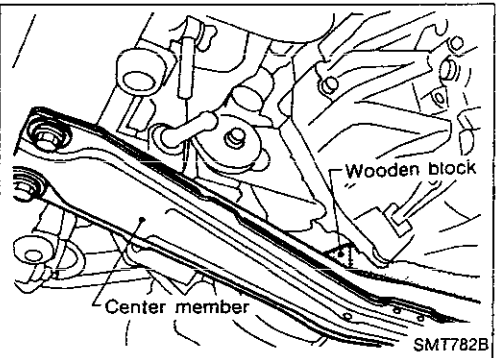


12. Jack up transaxle together with engine slightly and insert wooden block between center member and engine oil pan. (2WD models)

CAUTION:

Do not place jack under oil pan drain plug.

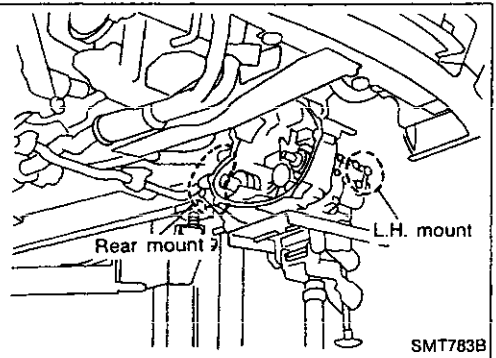

13. Remove rear and L.H. mounts supporting transaxle with jack.
14. Remove bolts securing transaxle.
15. Lower transaxle.

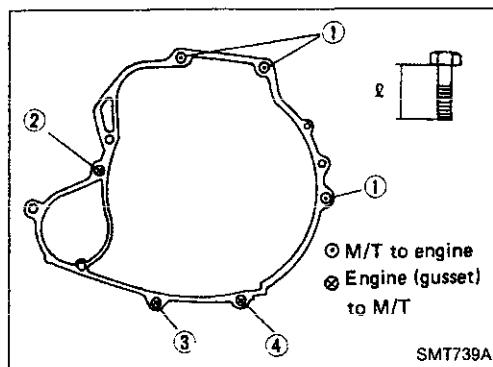


Installation

Tighten bolts securing transaxle and install any part removed.

● E10S engine models

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	ℓ mm (in)
1	16 - 21 (1.6 - 2.1, 12 - 15)	70 (2.76)
2	20 - 29 (2.0 - 3.0, 14 - 22)	70 (2.76)
3	16 - 21 (1.6 - 2.1, 12 - 15)	25 (0.98)
4	16 - 21 (1.6 - 2.1, 12 - 15)	25 (0.98)
Front gusset to engine	16 - 21 (1.6 - 2.1, 12 - 15)	20 (0.79)
Rear gusset to engine	16 - 21 (1.6 - 2.1, 12 - 15)	20 (0.79)

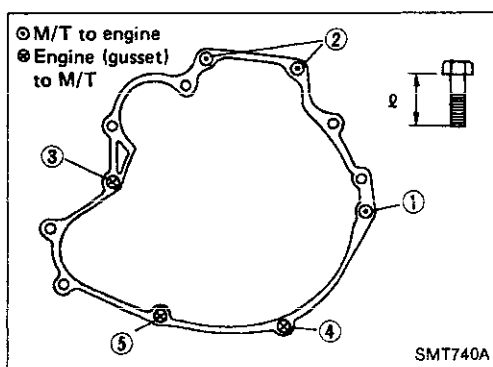


● CD17 engine models

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	ℓ mm (in)
1	30 - 40 (3.1 - 4.1, 22 - 30)	110 (4.33)
2	30 - 40 (3.1 - 4.1, 22 - 30)	70 (2.76)
3	44 - 54 (4.5 - 5.5, 33 - 40)	75 (2.95)
4	16 - 21 (1.6 - 2.1, 12 - 15)	30 (1.18)
5	16 - 21 (1.6 - 2.1, 12 - 15)	25 (0.98)
Front gusset to engine	30 - 40 (3.1 - 4.1, 22 - 30)	35 (1.38)
Rear gusset to engine	30 - 40 (3.1 - 4.1, 22 - 30)	25 (0.98)


REMOVAL AND INSTALLATION

Installation (Cont'd)

● GA engine models (2WD)

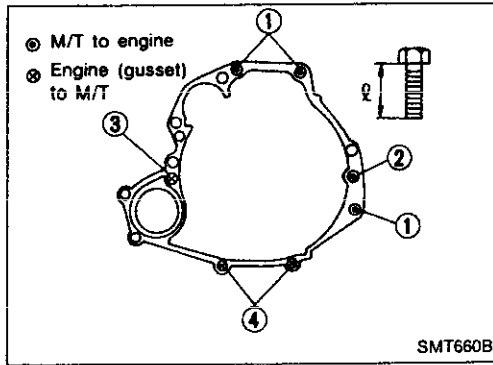


Bolt No.	Tightening torque N·m (kg-m, ft-lb)	"L" mm (in)
1	30 - 40 (3.1 - 4.1, 22 - 30)	70 (2.76)
2	30 - 40 (3.1 - 4.1, 22 - 30)	85 (3.35)
3	30 - 40 (3.1 - 4.1, 22 - 30)	30 (1.18)
4	16 - 21 (1.6 - 2.1, 12 - 15)	25 (0.98)
Front gusset to engine	30 - 40 (3.1 - 4.1, 22 - 30)	20 (0.79)
Rear gusset to engine	16 - 21 (1.6 - 2.1, 12 - 15)	16 (0.63)

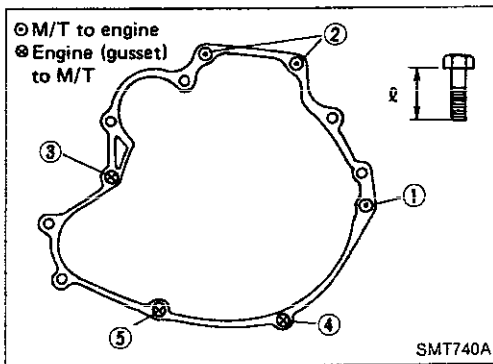

● CD20 engine models

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	"L" mm (in)
1	30 - 40 (3.1 - 4.1, 22 - 30)	120 (4.72)
2	30 - 40 (3.1 - 4.1, 22 - 30)	85 (3.35)
3	44 - 54 (4.5 - 5.5, 33 - 40)	75 (2.95)
4	16 - 21 (1.6 - 2.1, 12 - 15)	30 (1.18)
5	16 - 21 (1.6 - 2.1, 12 - 15)	25 (0.98)
Front gusset to engine	30 - 40 (3.1 - 4.1, 22 - 30)	35 (1.38)
Rear gusset to engine	30 - 40 (3.1 - 4.1, 22 - 30)	40 (1.57)

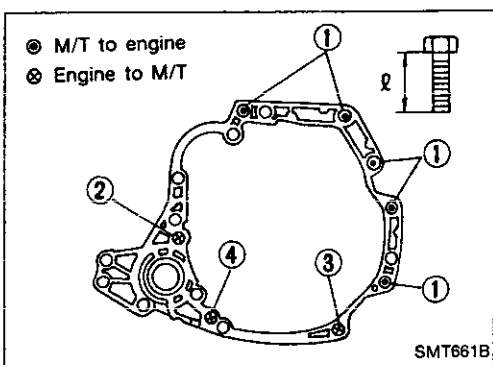


● SR engine models (2WD)

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	"L" mm (in)
1	70 - 79 (7.1 - 8.1, 51 - 59)	55 (2.17)
2	70 - 79 (7.1 - 8.1, 51 - 59)	65 (2.56)
3	30 - 40 (3.1 - 4.1, 22 - 30)	35 (1.38)
4	30 - 40 (3.1 - 4.1, 22 - 30)	45 (1.77)


REMOVAL AND INSTALLATION

Installation (Cont'd)

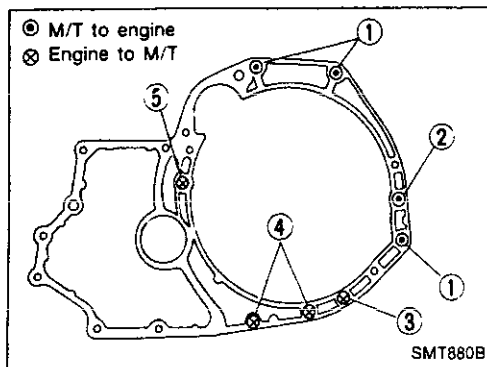


GA engine models (4WD)

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	"ℓ" mm (in)
1	30 - 40 (3.1 - 4.1, 22 - 30)	70 (2.76)
2	30 - 40 (3.1 - 4.1, 22 - 30)	85 (3.35)
3	30 - 40 (3.1 - 4.1, 22 - 30)	55 (2.17)
4	30 - 40 (3.1 - 4.1, 22 - 30)	20 (0.79)
5	30 - 40 (3.1 - 4.1, 22 - 30)	40 (1.57)
Front gusset to engine	30 - 40 (3.1 - 4.1, 22 - 30)	35 (1.38)

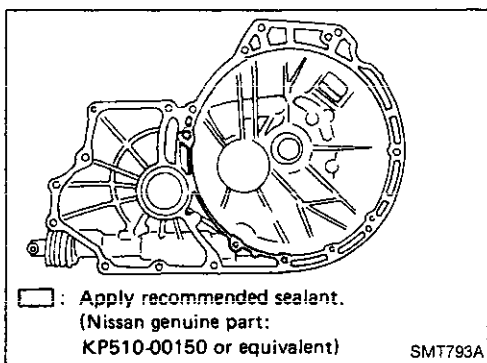


Apply sealant when installing transaxle as in illustration at left.

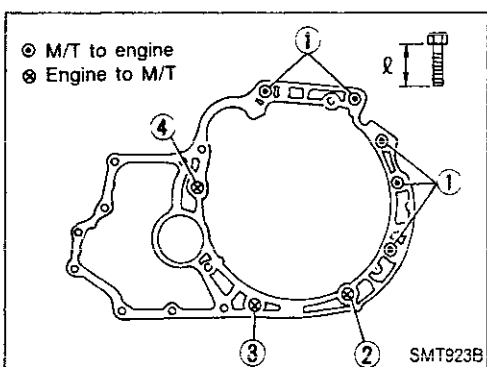


SR engine models (4WD)

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	ℓ mm (in)
1	70 - 79 (7.1 - 8.1, 51 - 59)	80 (3.15)
2	30 - 40 (3.1 - 4.1, 22 - 30)	25 (0.98)
3	30 - 40 (3.1 - 4.1, 22 - 30)	40 (1.57)
4	70 - 79 (7.1 - 8.1, 51 - 59)	65 (2.56)

Apply sealant when installing transaxle as in illustration at left.

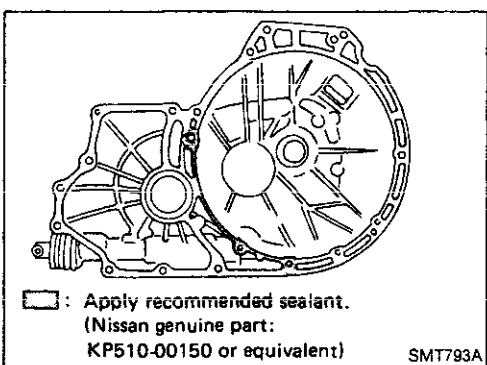

TRANSAXLE GEAR CONTROL

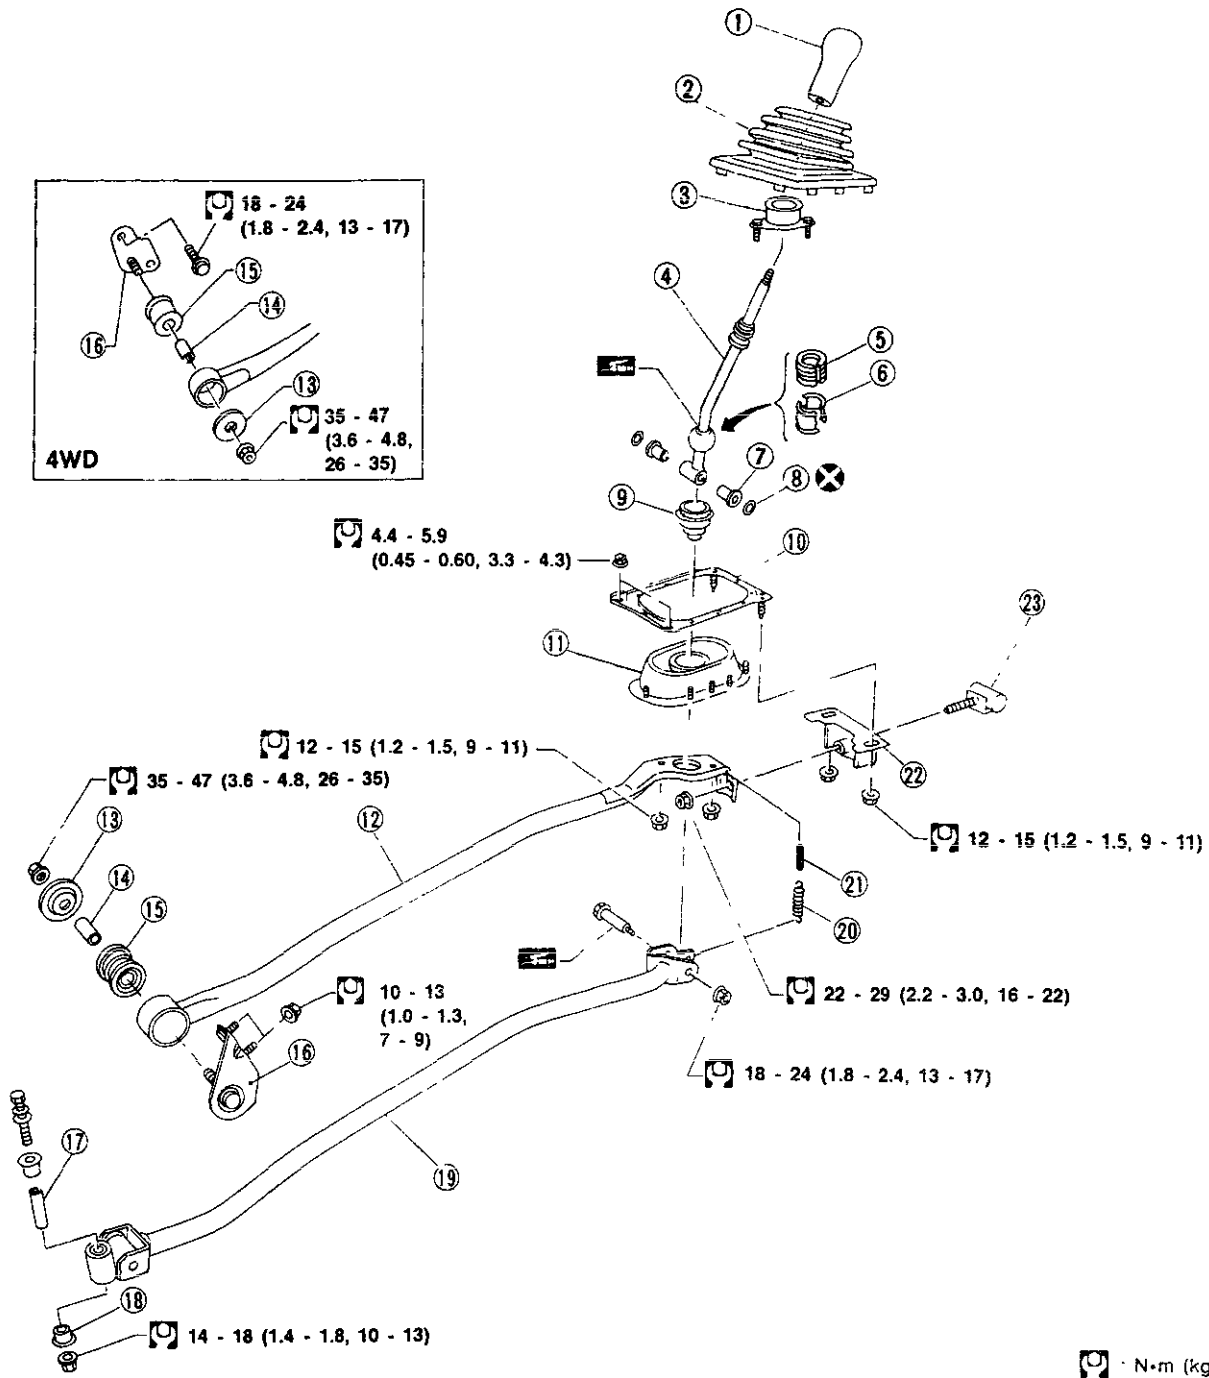


SMT882B

- | | | |
|------------------------|------------------------|------------------------|
| ① Control lever knob | ⑨ Dust boot | ⑰ Collar |
| ② Boot | ⑩ Plate bolt | ⑱ Bushing |
| ③ Control lever socket | ⑪ Transaxle hole cover | ⑲ Control rod |
| ④ Control lever | ⑫ Support rod | ⑳ Return spring |
| ⑤ Insulator | ⑬ Plate | ㉑ Return spring rubber |
| ⑥ Seat | ⑭ Collar | ㉒ Holder bracket |
| ⑦ Bushing | ⑮ Bushing | ㉓ Mass damper |
| ⑧ O-ring | ⑯ Support rod bracket | |

MT-12


Case Components

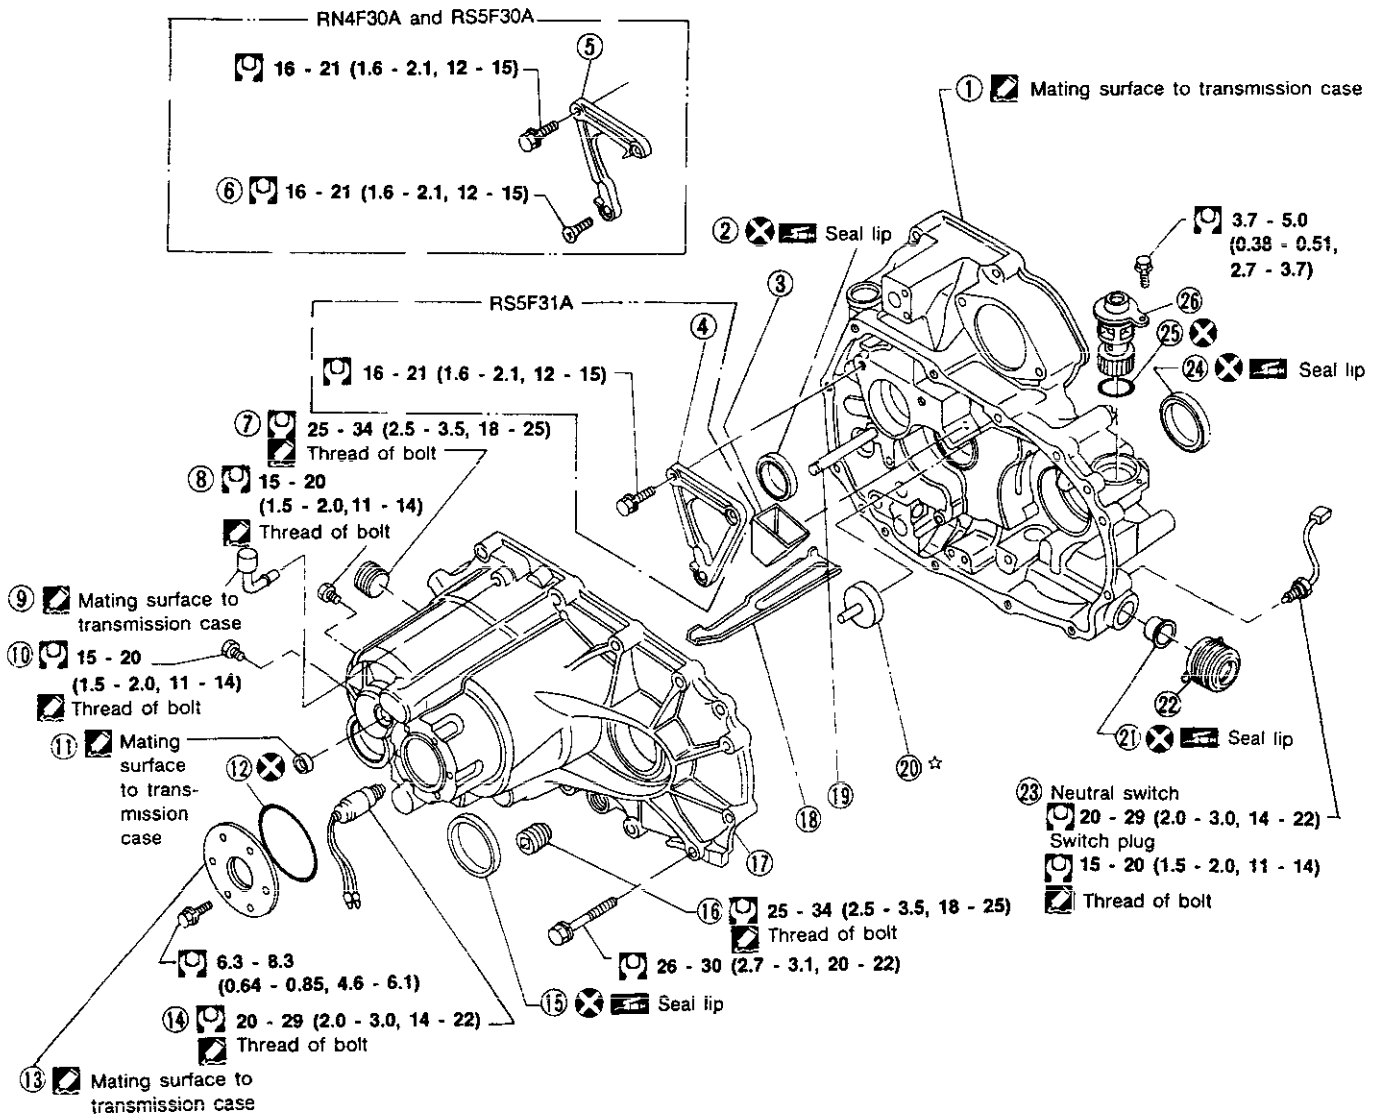

SMT746B

- | | | |
|------------------------|-------------------------|---------------------------------|
| ① Clutch housing | ⑩ Switch plug | ⑲ Reverse idler shaft |
| ② Input shaft oil seal | ⑪ Welch plug | ⑳ Oil channel |
| ③ Oil pocket | ⑫ O-ring | ㉑ Striking rod oil seal |
| ④ Bearing retainer | ⑬ Case cover | ㉒ Boot |
| ⑤ Bearing retainer | ⑭ Reverse lamp switch | ㉓ Neutral switch or switch plug |
| ⑥ Torx screw | ⑮ Differential oil seal | ㉔ Differential oil seal |
| ⑦ Filler plug | ⑯ Drain plug | ㉕ O-ring |
| ⑧ Switch plug | ⑰ Transmission case | ㉖ Speedometer pinion assembly |
| ⑨ Air breather | ⑱ Oil gutter | |

Gear Components

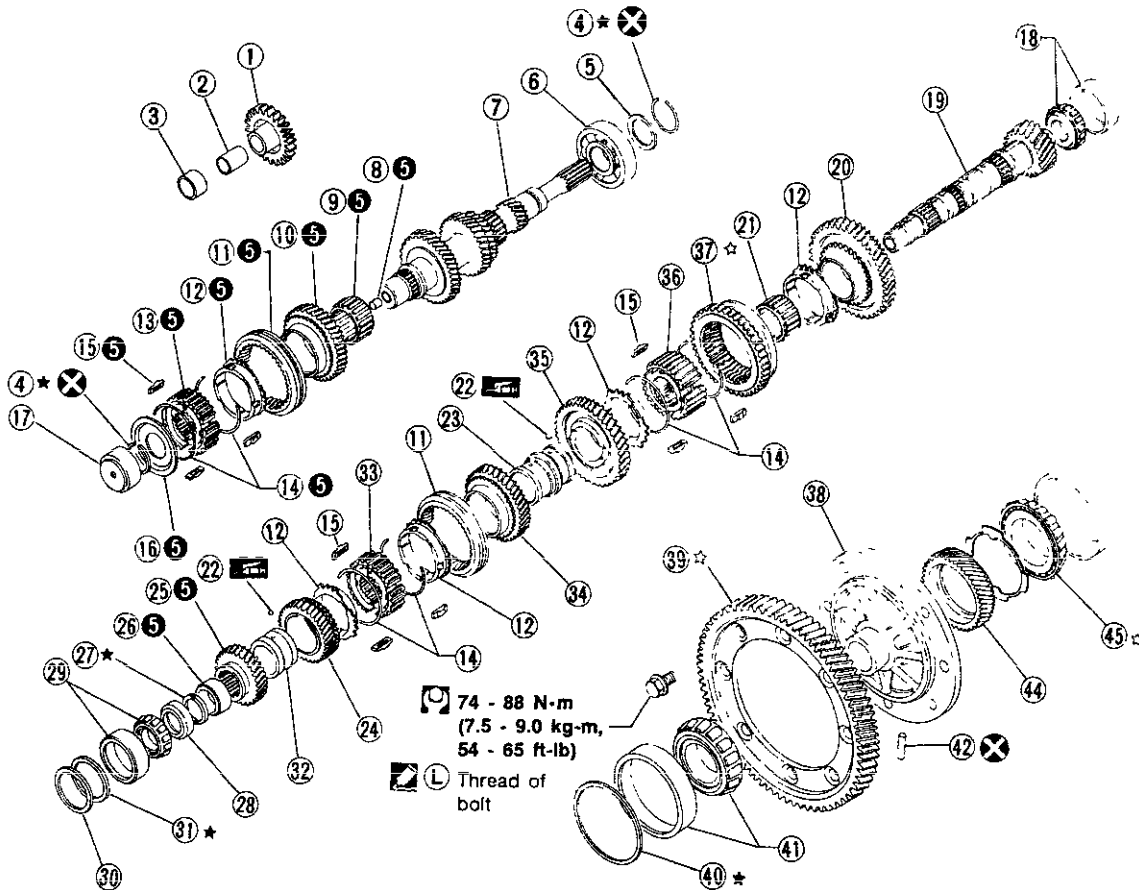

Apply gear oil to gears, shifts, synchronizers and bearings when assembling.


L : Apply locking sealant.

★ : Select proper thickness.


☆ : Pay attention to its direction

Ⓢ : 5-speed models only

For 2WD models

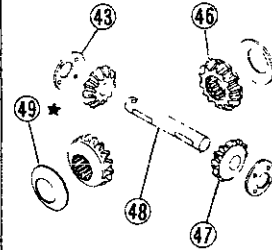


For 4WD models

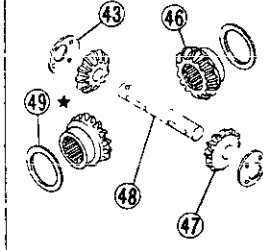

SMT953B


- | | | | |
|-----------------------------|----------------------------|--|---|
| ① Reverse idler gear | ⑮ Shifting insert | ⑳ Mainshaft rear bearing | ④① Differential side bearing adjusting shim |
| ② Reverse idler bushing | ⑯ 5th stopper | ㉑ Spacer | ④② Differential side bearing |
| ③ Reverse idler spacer | ⑰ Input shaft rear bearing | ㉒ Mainshaft bearing adjusting shim | ④③ Retaining pin |
| ④ Snap ring | ⑱ Mainshaft front bearing | ④④ 4th bushing | ④④ Pinion mate thrust washer |
| ⑤ Input gear spacer | ⑲ Mainshaft | ④⑤ 3rd & 4th synchronizer hub | ④⑤ Speedometer drive gear |
| ⑥ Input shaft front bearing | ㉒ 1st main gear | ④⑥ 3rd main gear | ④⑥ Speedometer stopper |
| ⑦ Input shaft | ㉓ 1st gear needle bearing | ④⑦ 1st & 2nd synchronizer hub | ④⑦ Side gear |
| ⑧ Oil plug | ㉔ Steel ball | ④⑧ Reverse main gear (Coupling sleeve) | ④⑧ Pinion mate gear |
| ⑨ 5th gear needle bearing | ㉕ 2nd & 3rd bushing | ④⑨ Differential case | ④⑨ Side gear thrust washer |
| ⑩ 5th input gear | ㉖ 4th main gear | ④⑩ Final gear | |
| ⑪ Coupling sleeve | ㉗ 5th main gear | | |
| ⑫ Baulk ring | ㉘ Thrust washer | | |
| ⑬ 5th synchronizer hub | ㉙ Mainshaft C-ring | | |
| ⑭ Spread spring | ㉚ C-ring holder | | |

Shift Control Components

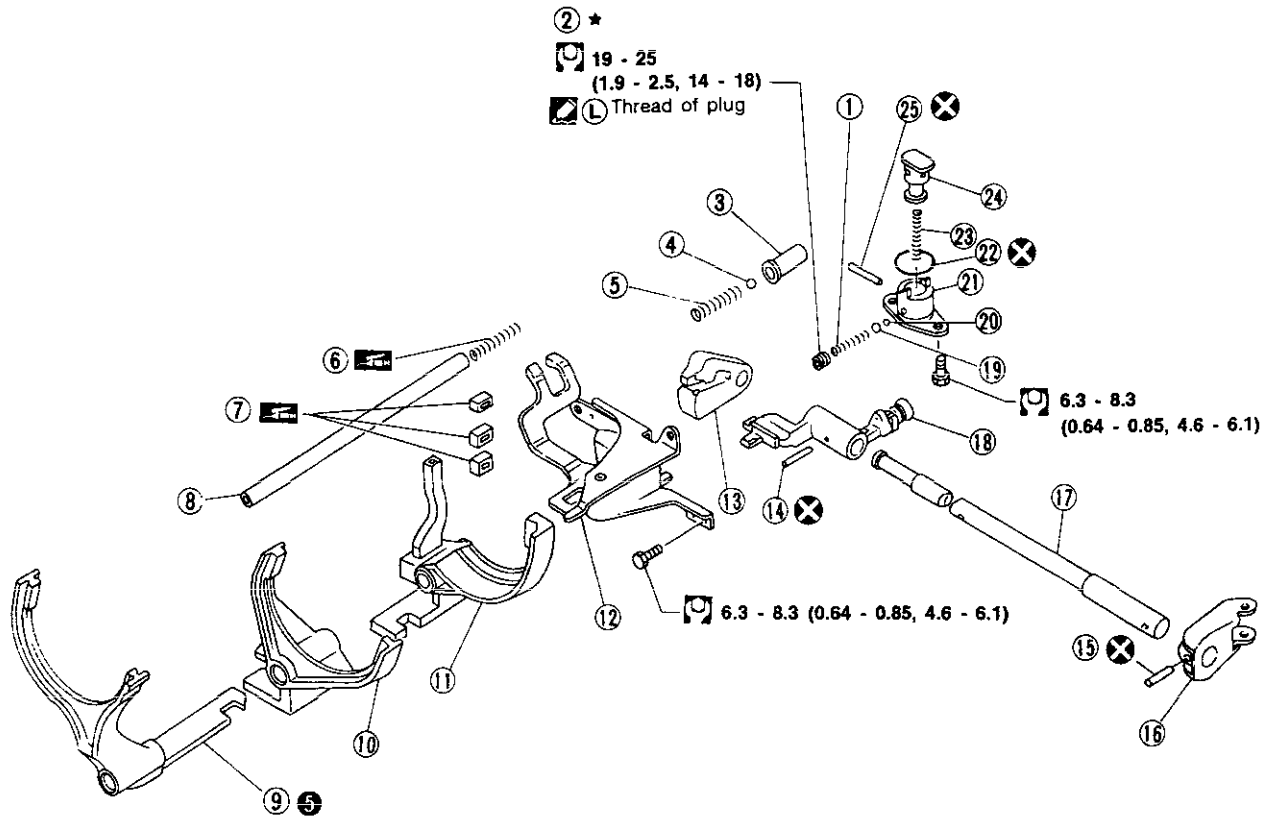


SMT789B

- | | | |
|-----------------------------|------------------------|------------------------|
| ① Reverse check spring | ⑩ 3rd & 4th shift fork | ⑱ Striking lever |
| ② Reverse check plug | ⑪ 1st & 2nd shift fork | ⑲ Check ball (Large) |
| ③ Check ball plug | ⑫ Control bracket | ⑳ Check ball (Small) |
| ④ Shift check ball | ⑬ Striking interlock | ㉑ Check sleeve |
| ⑤ Check spring | ⑭ Retaining pin | ㉒ O-ring |
| ⑥ Fork shaft support spring | ⑮ Retaining pin | ㉓ Select return spring |
| ⑦ Shifter cap | ⑯ Yoke | ㉔ Check plunger |
| ⑧ Fork shaft | ⑰ Striking rod | ㉕ Stopper pin |
| ⑨ 5th shift fork | | |

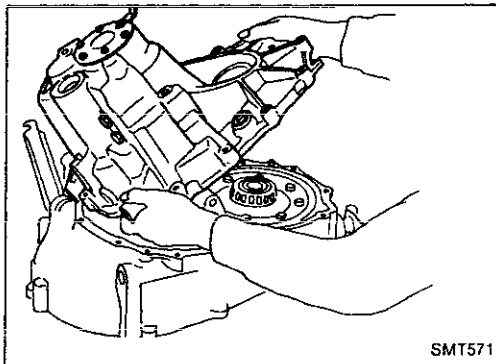


1. Remove transmission case while slightly tilting it to prevent 5th shift fork from interfering with case.

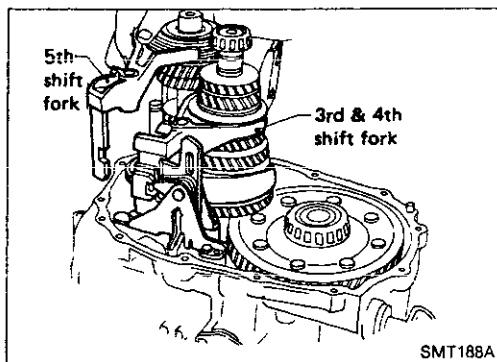


2. Draw out reverse idler spacer and fork shaft, then remove 5th and 3rd & 4th shift forks.

Be careful not to lose shifter cap.

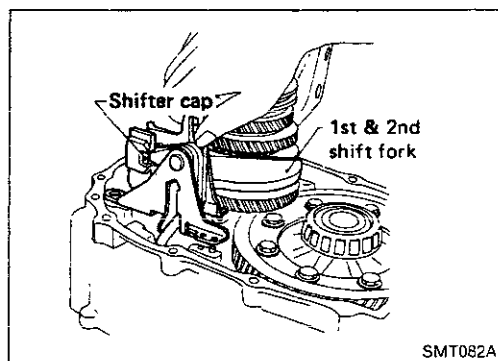

3. Remove control bracket with 1st & 2nd shift fork.

Be careful not to lose shifter cap.

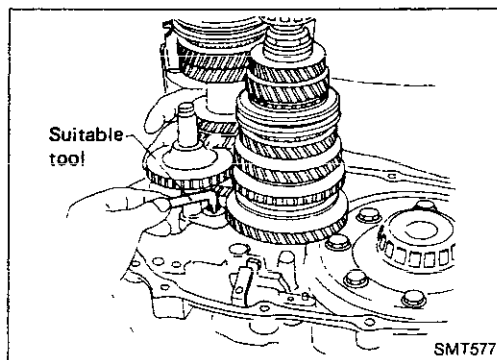


4. Remove gear components from clutch housing.

— RN4F30A and RS5F30A —

- a. Remove three screws and detach bearing retainer.

One of these three screws is torx type and should be removed with a suitable tool, as shown.

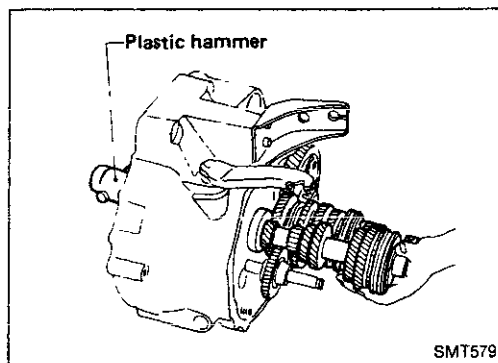


- b. Remove input shaft together with mainshaft by tapping lightly.


Always withdraw mainshaft straight out. Failure to do so can damage resin oil channel on clutch housing side.

Do not draw out reverse idler shaft from clutch housing because these fittings will be loose.

When removing input shaft, be careful not to scratch oil seal lip with shaft spline.

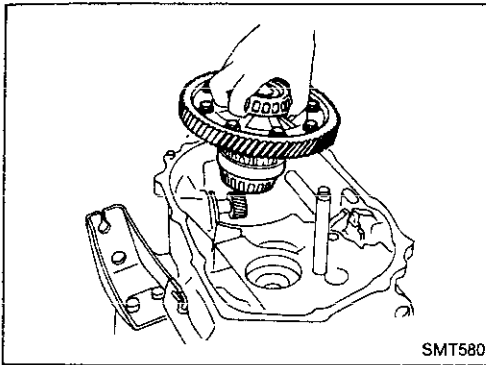



- c. Remove reverse idler gear and final drive assembly.

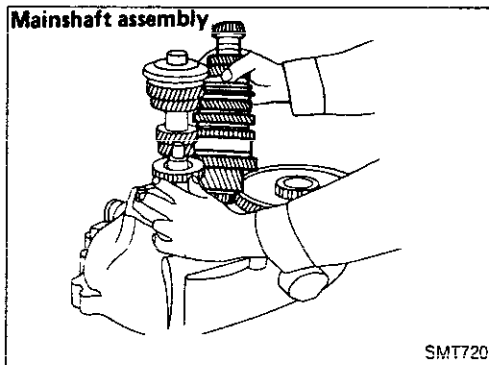


— RS5F31A —

- a. Remove mainshaft and final drive assembly.

Always withdraw mainshaft straight out. Failure to do so can damage resin oil channel on clutch housing side.

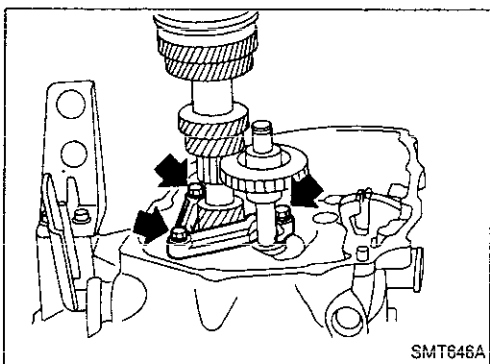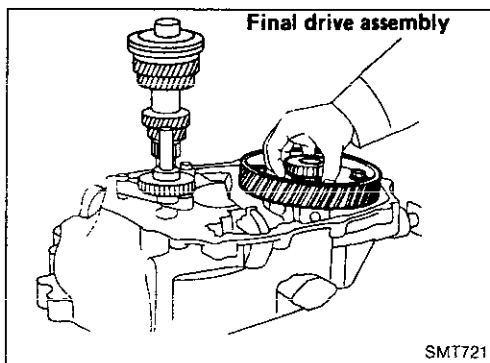


- b. Remove bearing retainer securing bolts.

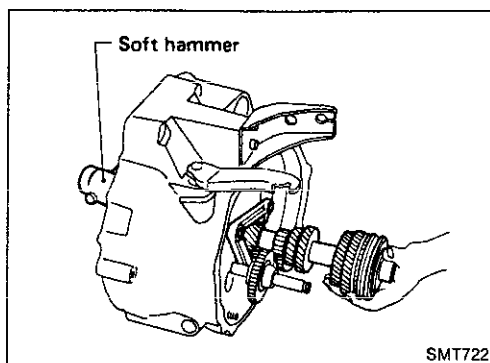


- c. Remove input shaft together with bearing retainer and reverse idler gear by tapping lightly.

Do not draw out reverse idler shaft from clutch housing because these fittings will be loose.

When removing input shaft, be careful not to scratch oil seal lip with shaft spline.

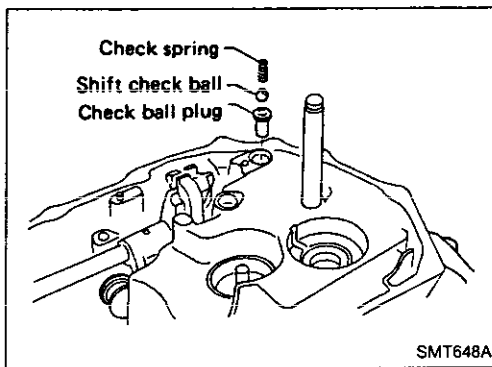


5. Remove oil pocket, shift check ball, check spring and check ball plug.

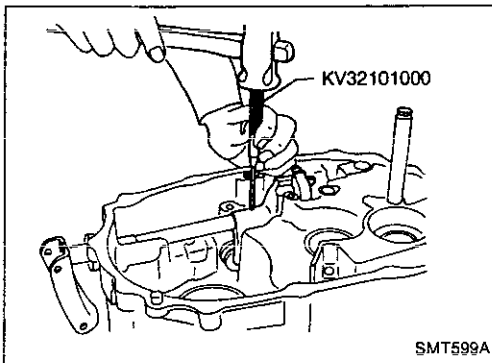


6. Drive retaining pin out of striking lever, then remove striking rod, striking lever and striking interlock.


- Select a position where retaining pin does not interfere with clutch housing when removing retaining pin.

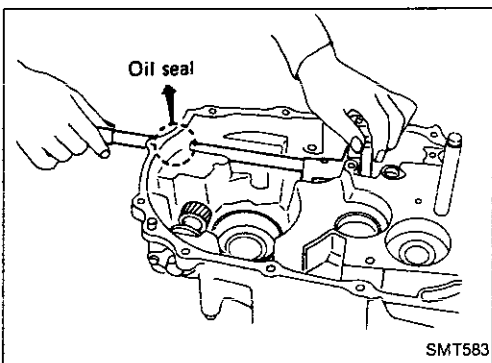


- Be careful not to damage oil seal lip, when removing striking rod. If necessary, tape edges of striking rod.

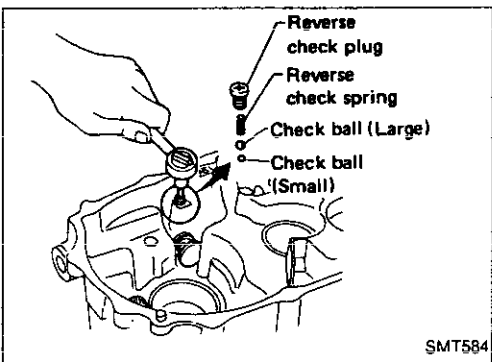

7. Remove reverse check plug, then detach reverse check spring and check balls.

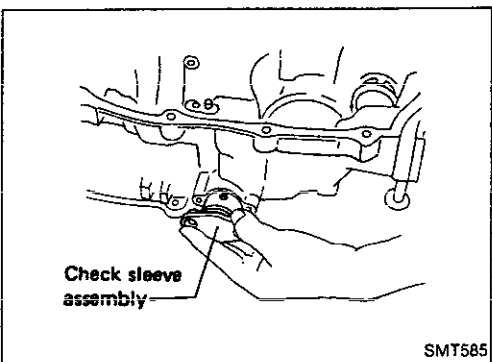

8. Remove check sleeve assembly.

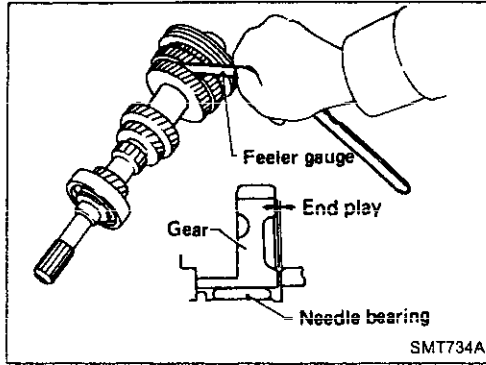

Input Shaft and Gears


DISASSEMBLY

1. Before disassembly, check 5th input gear end play.


Gear end play

Gears	End play mm (in)
5th input gear	0.18 - 0.31 (0.0071 - 0.0122)

- If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of snap ring groove -- Refer to "Assembly".

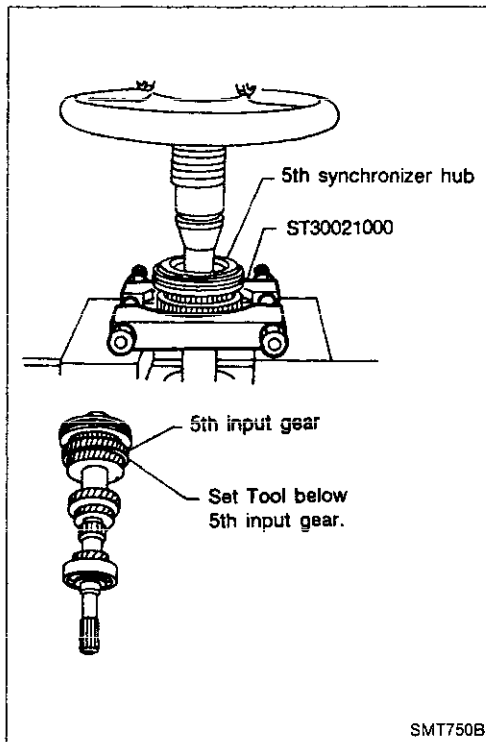


2. Remove snap ring and 5th stopper.
3. Remove 5th synchronizer, 5th input gear and 5th gear needle bearing.

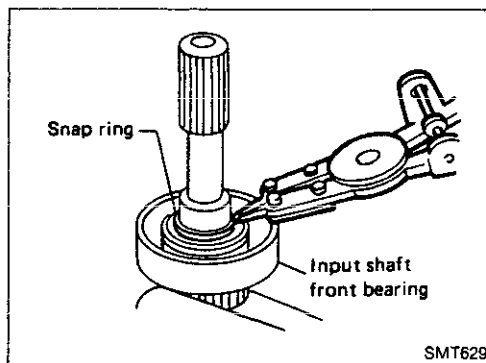

4. Remove snap ring of input shaft front bearing and input gear spacer.

Input Shaft and Gears (Cont'd)

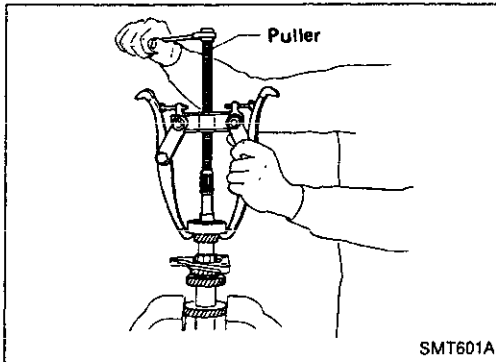


5. Pull out input shaft front bearing.
6. Remove bearing retainer.

INSPECTION


Gear and shaft

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

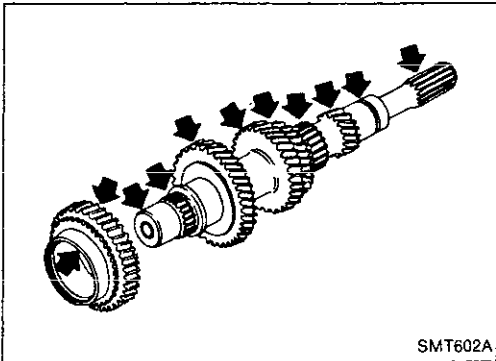

Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check shifting inserts for wear or deformation.

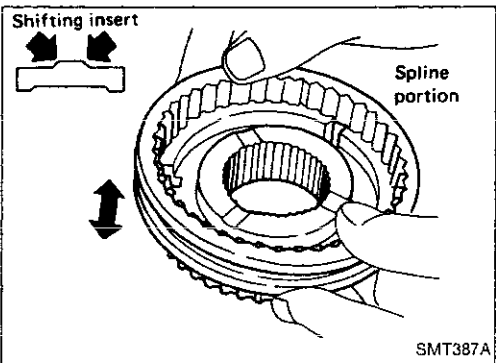

- Measure clearance between baulk ring and gear.


Clearance between baulk ring and gear:

Standard

1.0 - 1.35 mm (0.0394 - 0.0531 in)


Wear limit

0.7 mm (0.028 in)

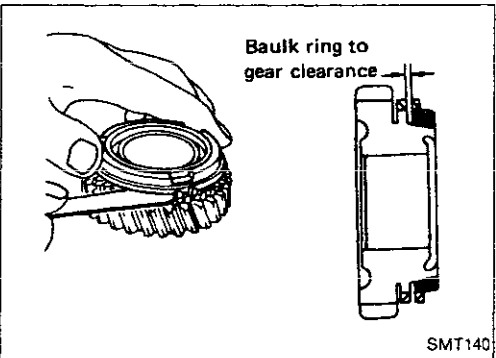

Bearing



- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

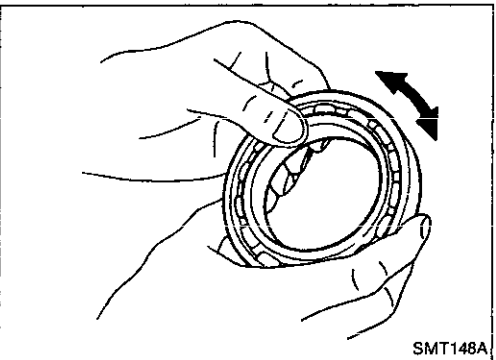


Input Shaft and Gears (Cont'd)

ASSEMBLY


1. Assemble 5th synchronizer.

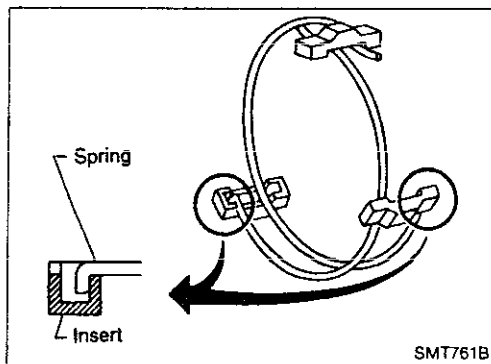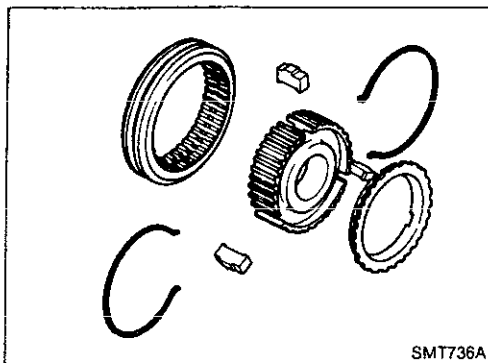

- Be careful not to hook front and rear ends of spread spring to the same insert.

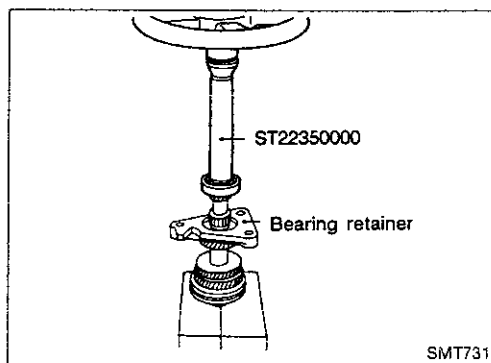

2. Install bearing retainer.
3. Press on input shaft front bearing.
4. Install input gear spacer.

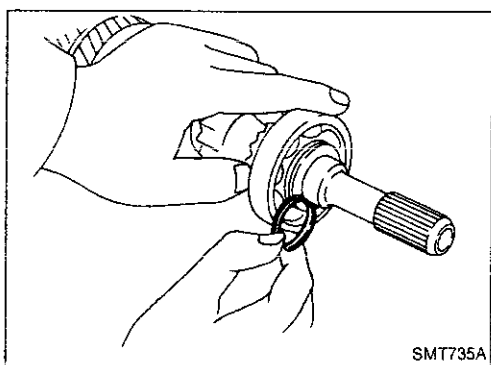


5. Select proper snap ring of input shaft front bearing to minimize clearance of groove in input shaft and then install it.

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)


Snap ring of input shaft front bearing:

Refer to S.D.S.

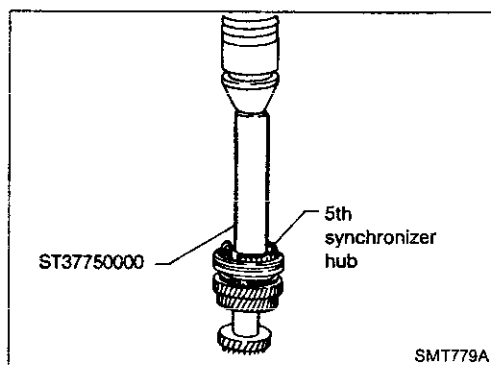

6. Install 5th gear needle bearing, 5th input gear, 5th synchronizer and 5th stopper.
7. Measure gear end play as the final check — Refer to "Disassembly."

Input Shaft and Gears (Cont'd)

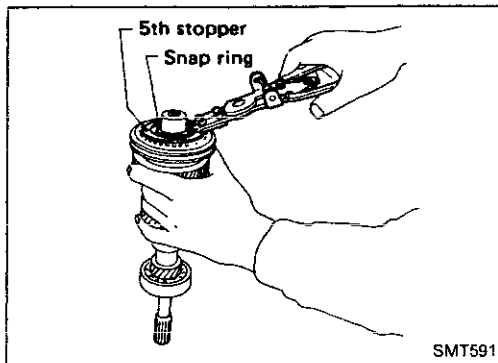

8. Select proper snap ring of 5th synchronizer hub to minimize clearance of groove in input shaft and install it.

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Snap ring of 5th synchronizer:

Refer to S.D.S.

Mainshaft and Gears


DISASSEMBLY

1. Before disassembly, check 1st, 2nd, 3rd and 4th main gear end plays.


Gear end play

Refer to S.D.S.


- If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of C-ring groove — Refer to "Assembly".

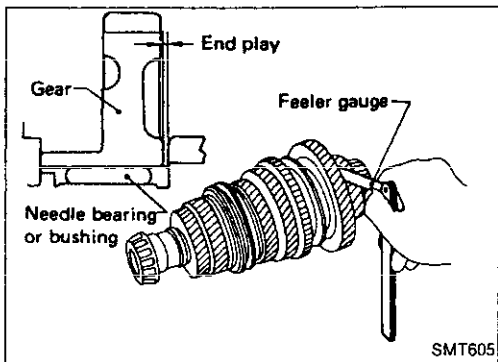


2. Press out mainshaft front bearing.

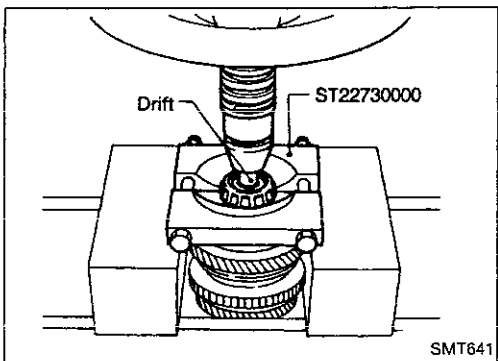

3. Press out mainshaft rear bearing.

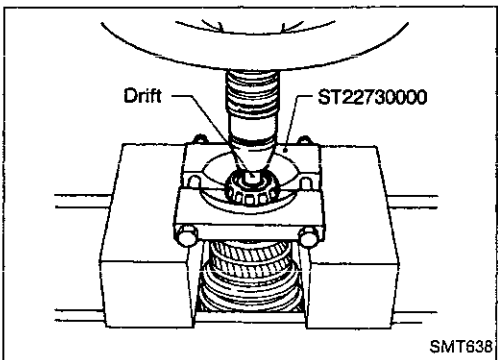


4. Remove C-rings, C-ring holder and thrust washer.

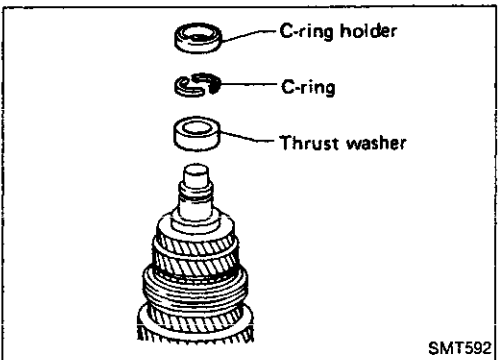


Mainshaft and Gears (Cont'd)


5. Press out 5th main gear.

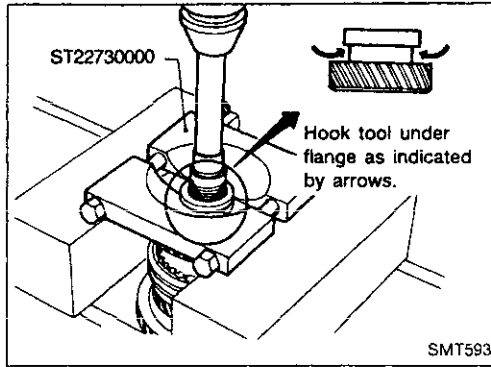

6. Remove 4th main gear, 4th bushing and steel ball.
- Be careful not to lose steel ball.

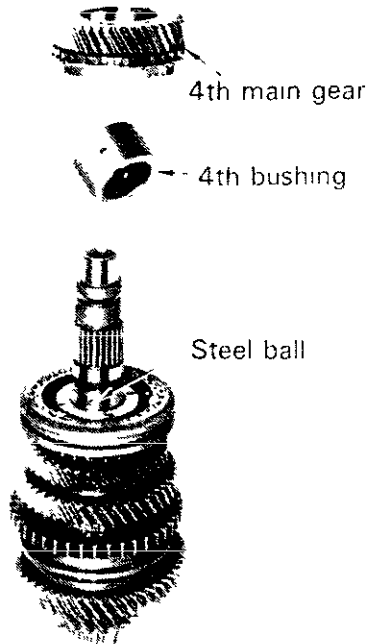


7. Remove 3rd & 4th synchronizer, 3rd main gear, 2nd & 3rd bushing, steel ball and 2nd main gear.
- Be careful not to lose steel ball.

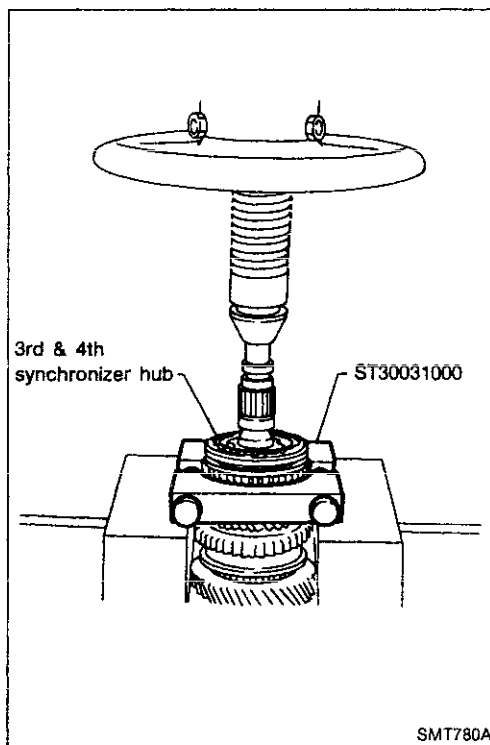

Mainshaft and Gears (Cont'd)


8. Remove 1st & 2nd synchronizer and 1st main gear, then remove 1st gear needle bearing.

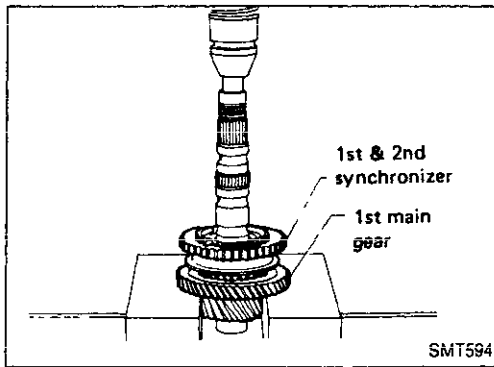

INSPECTION


Gear and shaft

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

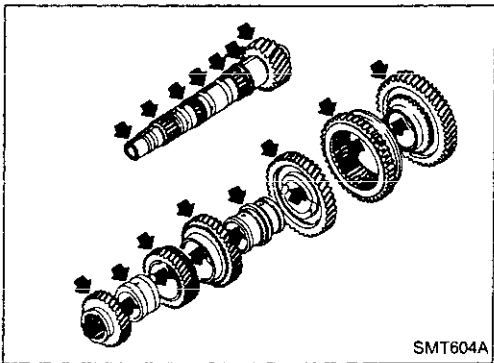


Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check shifting inserts for wear or deformation.

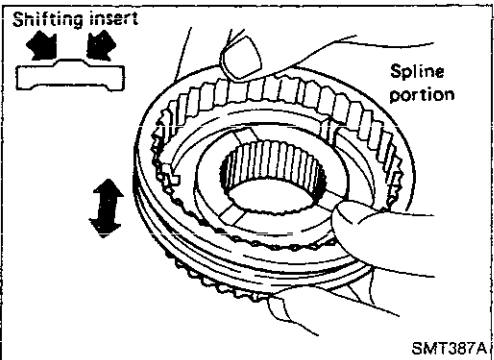


- Measure clearance between baulk ring and gear.
Clearance between baulk rings and 1st-4th main gears:
Standard
1.0 - 1.35 mm (0.0394 - 0.0531 in)
Wear limit
0.7 mm (0.028 in)

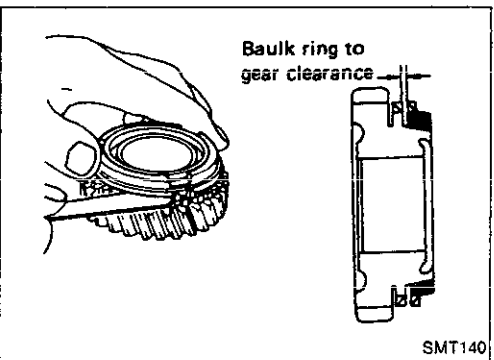

Bearing



- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

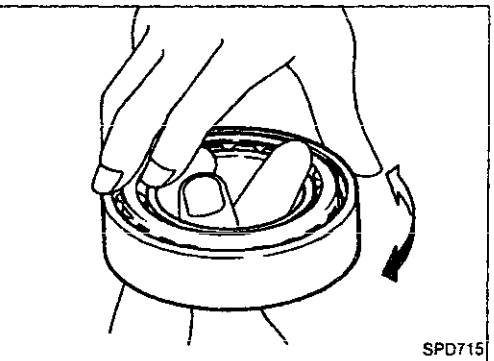


Mainshaft and Gears (Cont'd)

ASSEMBLY


1. Assemble 1st & 2nd and 3rd & 4th synchronizers.

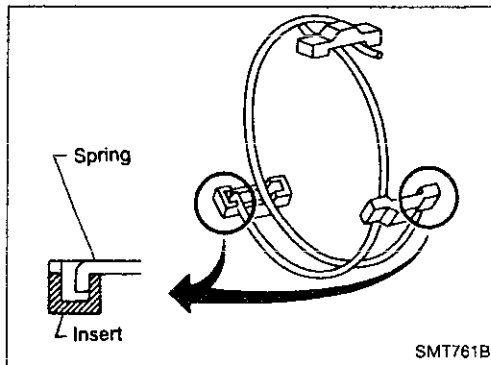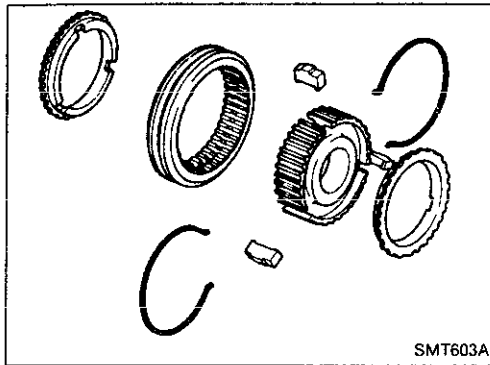

- Be careful not to hook front and rear ends of spread spring to the same insert.

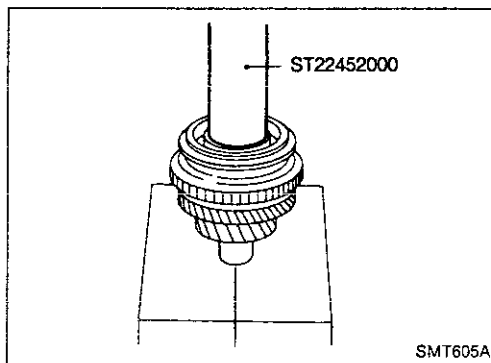

2. Install 1st gear needle bearing and 1st main gear.
3. Press on 1st & 2nd synchronizer.


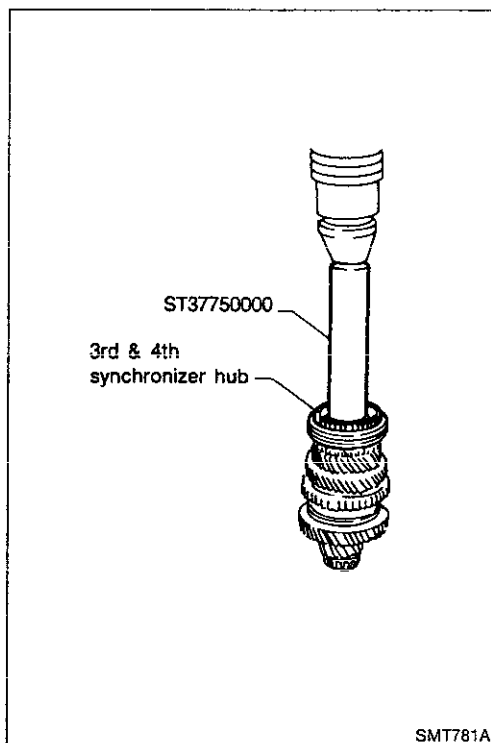


4. Install steel ball, 2nd main gear, 2nd & 3rd bushing, 3rd main gear and 3rd & 4th synchronizer.
- Apply multi-purpose grease to steel ball before installing it.
 - 2nd & 3rd bushing has a groove in which steel ball fits.


Mainshaft and Gears (Cont'd)

5. Install steel ball, 4th bushing and 4th main gear.

- Apply multi-purpose grease to steel ball before installing it.
- 4th bushing has a groove in which steel ball fits.

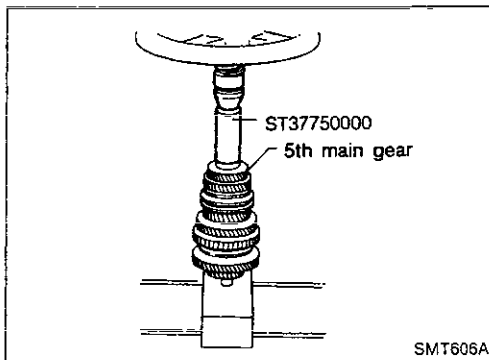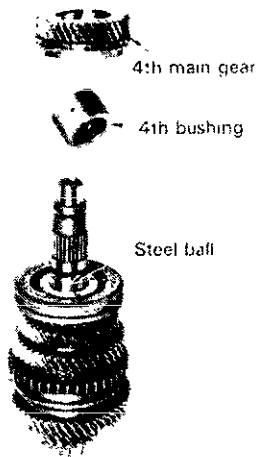

6. Press on 5th main gear.

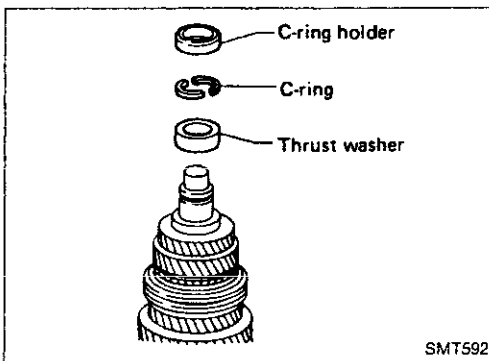


7. Install thrust washer.

8. Select proper C-ring to minimize clearance of groove in mainshaft and install it.


Allowable clearance of groove:
0 - 0.1 mm (0 - 0.004 in)

Mainshaft C-ring:
Refer to S.D.S.

9. Install C-ring holder.

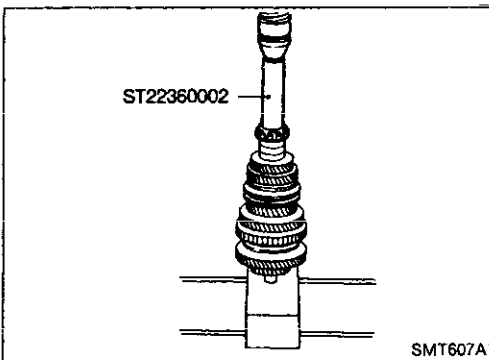


10. Press on mainshaft rear bearing.

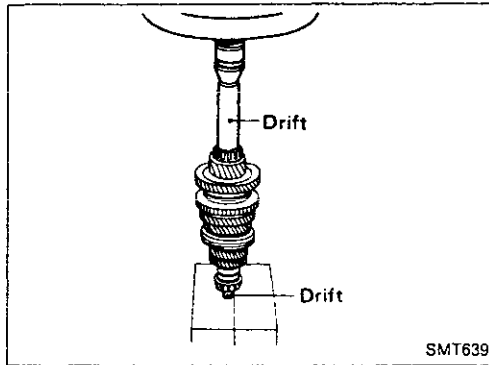
Mainshaft and Gears (Cont'd)

11. Press on mainshaft front bearing.


12. Measure gear end play as the final check — Refer to "Disassembly".

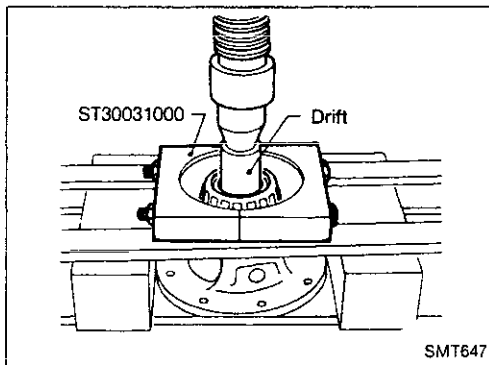**Final Drive****DISASSEMBLY**


1. Remove final gear.
2. Remove speedometer drive gear by cutting it.
3. Press out differential side bearings.
- **Be careful not to mix up the right and left bearings.**

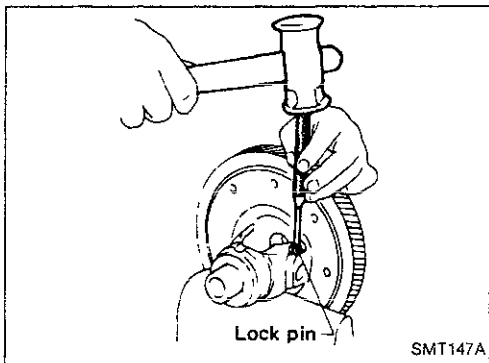

4. Drive out retaining pin and draw out pinion mate shaft.
5. Remove pinion mate gears and side gears.

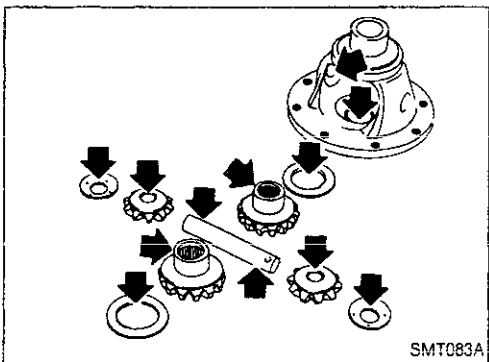**INSPECTION****Gear, washer, shaft and case**

- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.


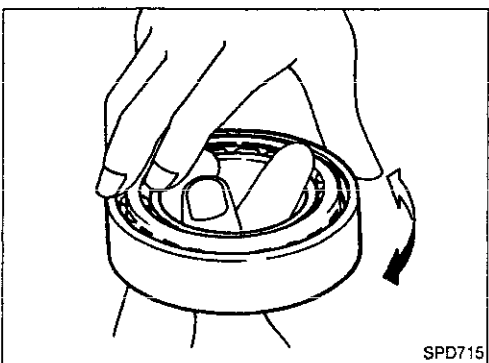
**Bearing**

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**


Final Drive (Cont'd)

ASSEMBLY


1. Attach side gear thrust washers to side gears, then install pinion mate washers and pinion mate gears in place.

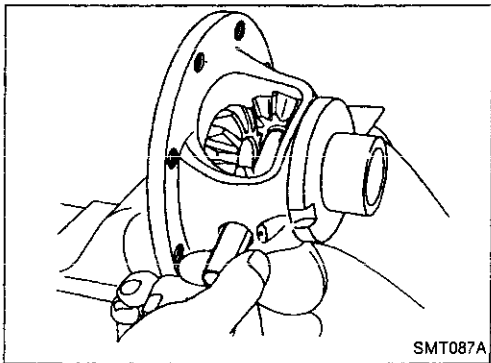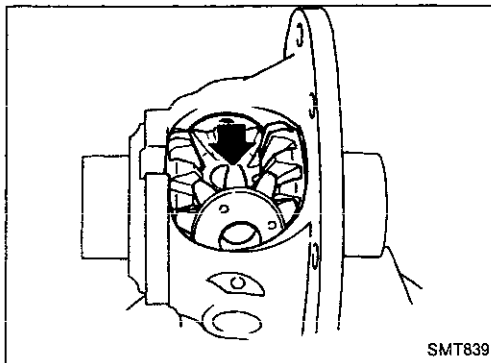

2. Insert pinion mate shaft.
 - When inserting, be careful not to damage pinion mate thrust washers.

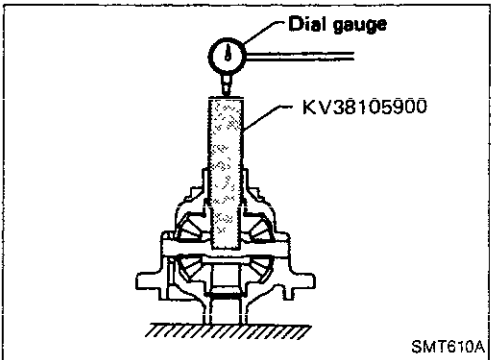

3. Measure clearance between side gear and differential case with washers following the procedure below:
 - a. Set Tool and dial indicator on side gear.

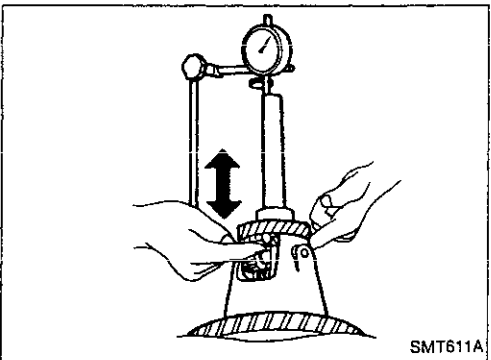

- b. Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.


Clearance between side gear and differential case with washers:

0.1 - 0.2 mm (0.004 - 0.008 in)


- c. If not within specification, adjust clearance by changing thickness of side gear thrust washers.

Side gear thrust washer:

Refer to S.D.S.

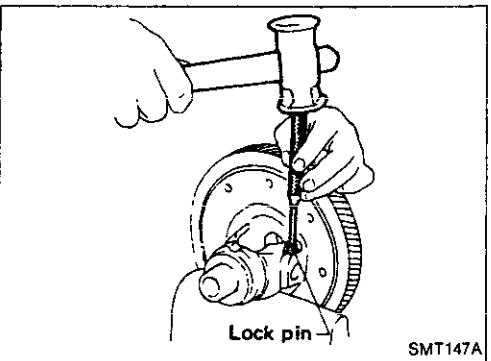


4. Install retaining pin.
 - Make sure that retaining pin is flush with case.

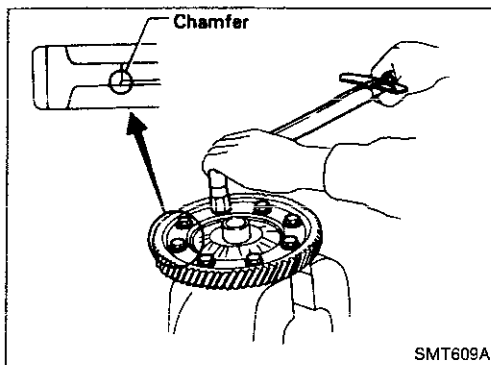Final Drive (Cont'd)

5. Install final gear.

- Apply locking sealant to final gear fixing bolts before installing them.



6. Install speedometer drive gear and stopper.

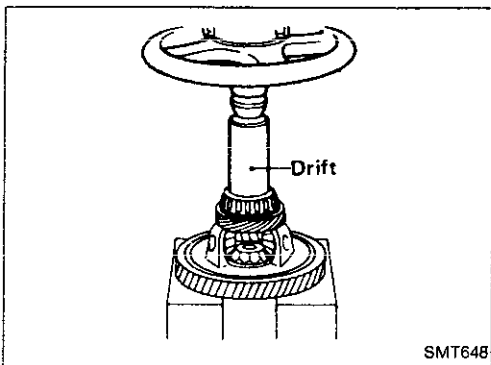

7. Press on differential side bearings.

Shift Control Components**INSPECTION**

- Check contact surface and sliding surface for wear, scratches, projections or other damage.

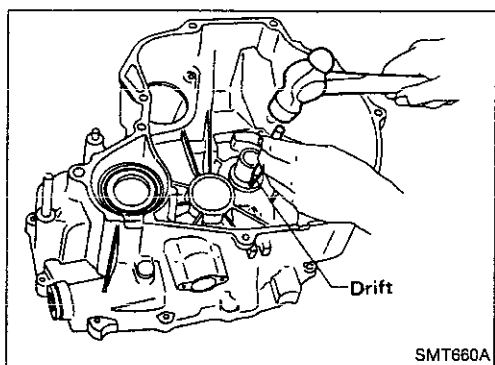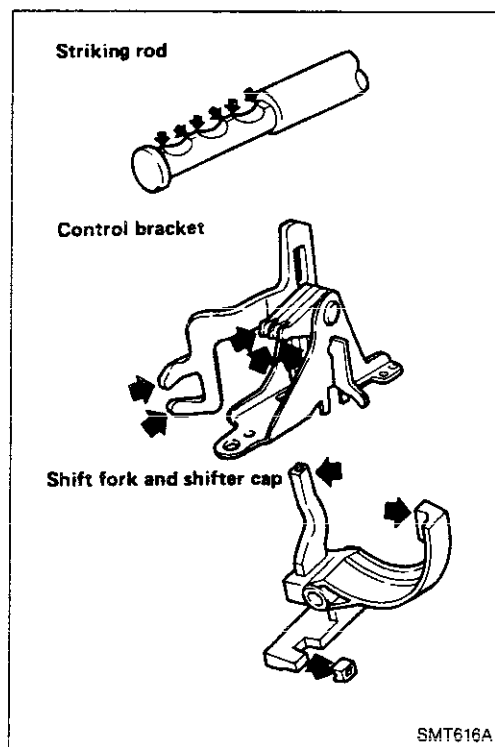
**Case Components****Input shaft oil seal**

1. Drive out input shaft oil seal.

Case Components (Cont'd)


2. Install input shaft oil seal.

- **Apply multi-purpose grease to seal lip of oil seal before installing.**

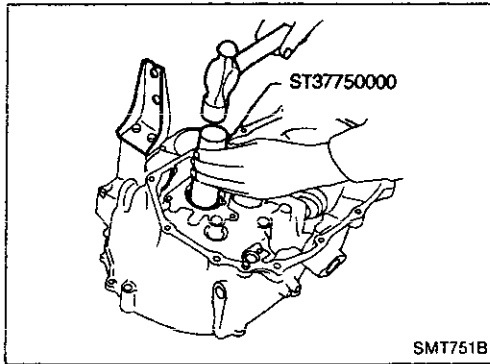


Input shaft rear bearing

1. Remove welch plug from transmission case.

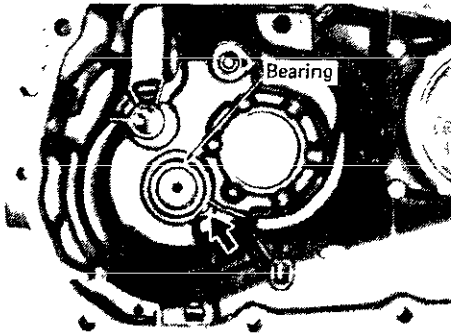


2. Remove input shaft rear bearing by tapping it from welch plug hole.

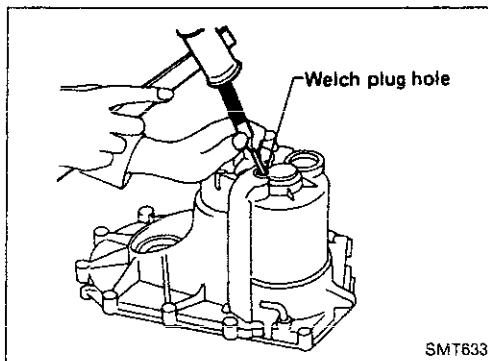


3. Install welch plug.

- **Apply recommended sealant to mating surface of transmission case.**


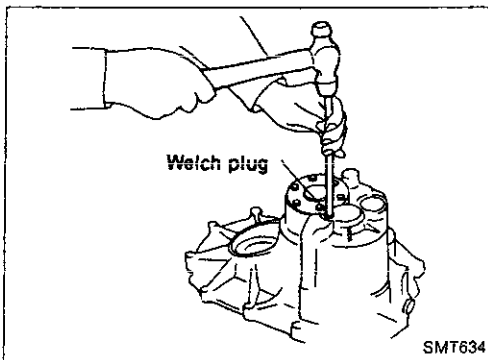


4. Install input shaft rear bearing.

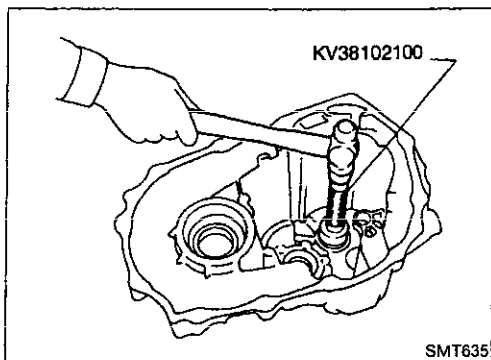


Case Components (Cont'd)**Mainshaft front bearing outer race and oil channel**

1. Remove mainshaft front bearing outer race.
2. Remove oil channel.

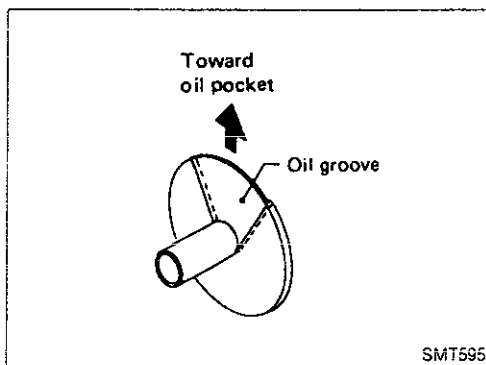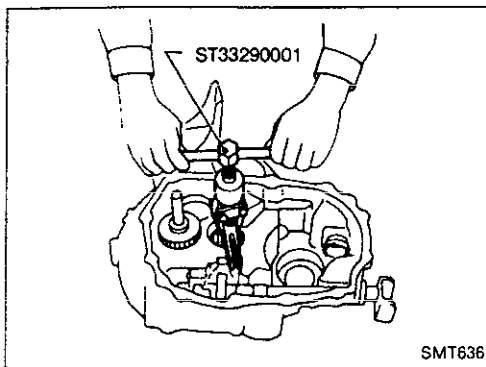

3. Install oil channel.

- Ensure that oil groove in oil channel always faces toward oil pocket when installing it on clutch housing.

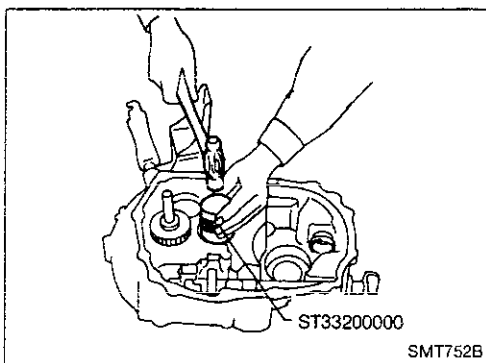

4. Install mainshaft front bearing outer race.

Mainshaft rear bearing outer race

- Refer to "ADJUSTMENT".


Differential side bearing outer race

- Refer to "ADJUSTMENT".


Differential Side Bearing Preload

If any of the following parts are replaced, adjust differential side bearing preload.


- Differential case
- Differential side bearing
- Clutch housing
- Transmission case

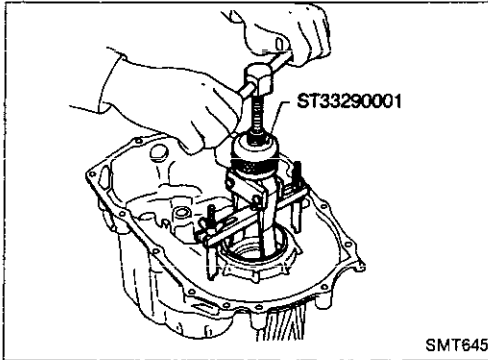

1. Remove differential side bearing outer race (transmission case side) and shim.

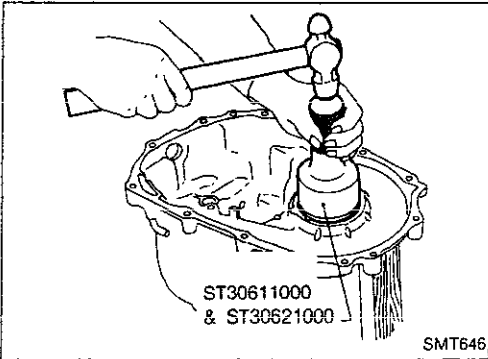


2. Reinstall differential side bearing outer race without shim.
3. Install final drive assembly on clutch housing.
4. Install transmission case on clutch housing.
- Tighten transmission case fixing bolts to the specified torque.

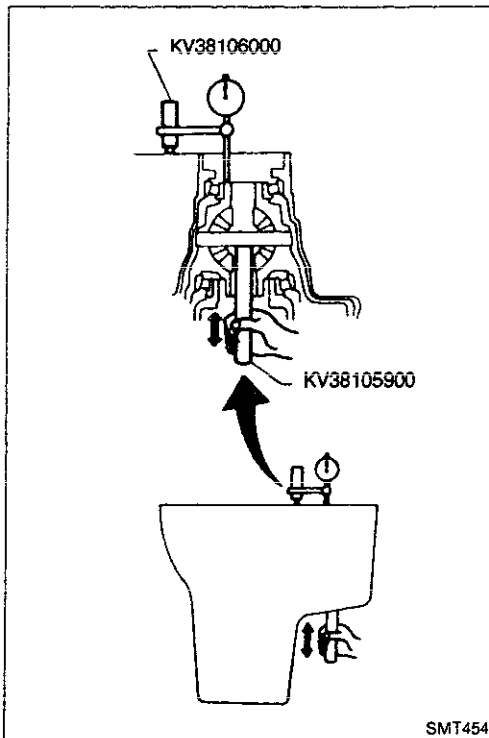

5. Set dial indicator on front end of differential case.
6. Insert Tool all the way into differential side gear.
7. Move Tool up and down and measure dial indicator deflection.
8. Select shim considering bearing preload.

Suitable shim thickness =
Dial indicator deflection
+ specified bearing preload

Differential side bearing adjusting shims and preload:
Refer to S.D.S.
9. Install selected shim and differential side bearing outer race.
10. Check differential side bearing turning torque.
 - a. Install final drive assembly on clutch housing.
 - b. Install transmission case on clutch housing.
 - Tighten transmission case fixing bolts to the specified torque.

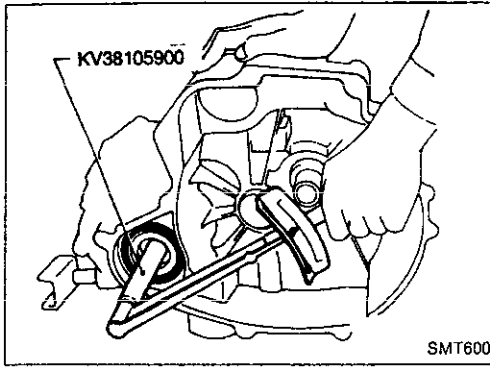

Differential Side Bearing Preload (Cont'd)

- c. Measure turning torque of final drive assembly.

**Turning torque of final drive assembly
(New bearing):**


Refer to S.D.S.

- When old bearing is used again, turning torque will be slightly less than the above.
- Make sure torque is close to the specified range.
- Changes in turning torque of final drive assembly per revolution should be within 1.0 N·m (10 kg-cm, 8.7 in-lb) without binding.

Mainshaft Bearing Preload

If any of the following parts are replaced, adjust mainshaft bearing preload.

- Mainshaft
- Mainshaft bearings
- Clutch housing
- Transmission case

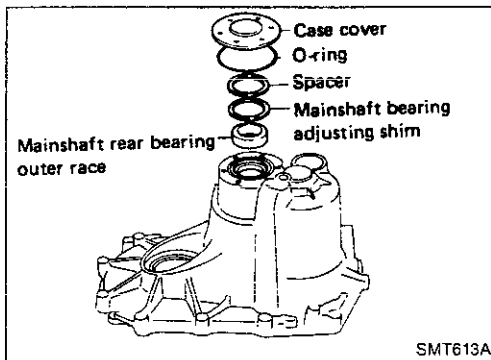


1. Remove case cover, O-ring, spacer, mainshaft bearing adjusting shim and mainshaft rear bearing outer race from transmission case.


2. Install mainshaft assembly on clutch housing.

3. Install transmission case on clutch housing.

- **Tighten transmission case fixing bolts to the specified torque.**

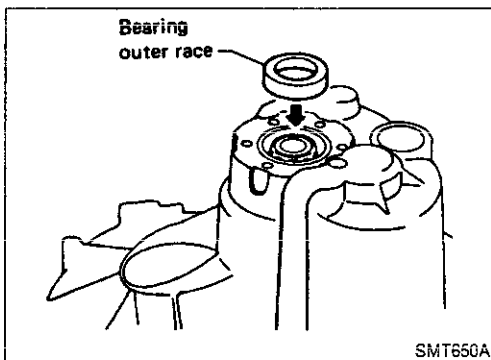

4. Reinstall mainshaft rear bearing outer race on inner race.

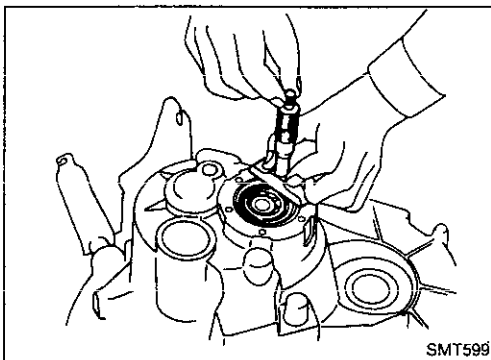


5. Measure distance from transmission case to bearing outer race.


- **Make sure that bearing is properly seated.**

6. Select shim with S.D.S. table as a guide.


7. Check total turning torque after assembling — Refer to "ASSEMBLY".

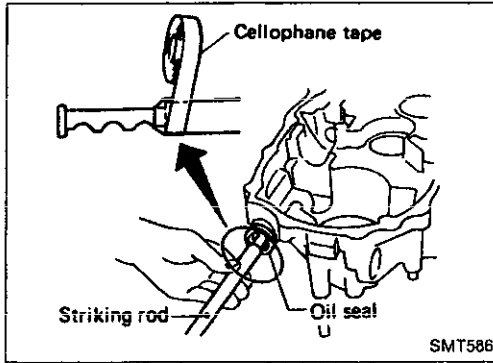

1. Install striking rod, lever and interlock.
 - **When inserting striking rod into clutch housing, tape edges of striking rod to avoid damaging oil seal lip.**

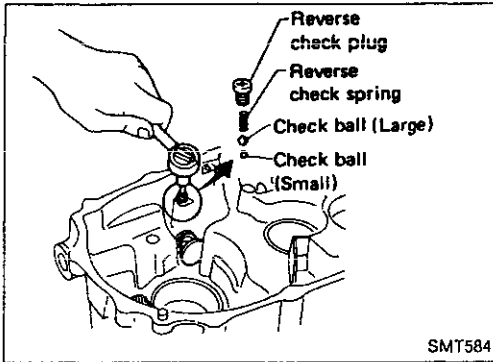

2. Install reverse check sleeve assembly.
3. Install check balls, reverse check spring and check plug.

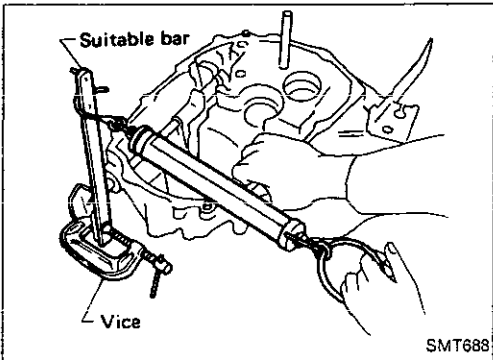

4. Check reverse check force.

Reverse check force:

Refer to S.D.S.


- If not within specification, select another check plug having a different length and reinstall it.

Reverse check plug:


Refer to S.D.S.

5. Install selected reverse check plug.

Apply locking sealant to thread of plug before installing it.

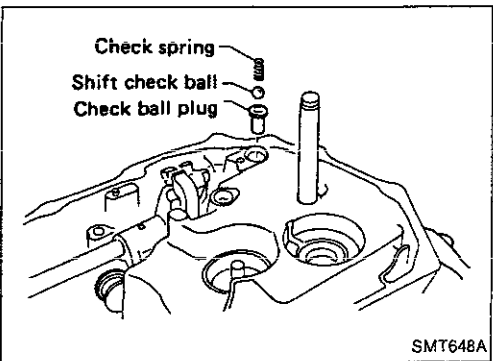


6. Install check ball plug, shift check ball and check spring.
7. Install oil pocket.

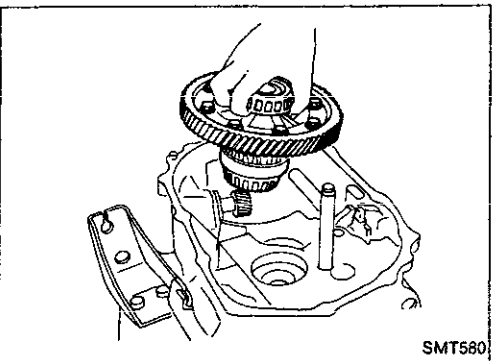

8. Install gear components onto clutch housing.


— RN4F30A and RS5F30A —

- a. Install final drive assembly and reverse idler gear.

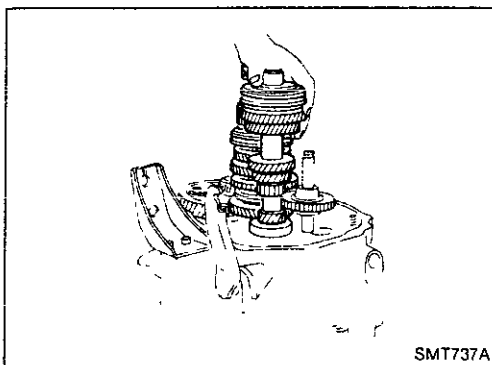


b. Install mainshaft and input gear as a set.

- Take care not to damage oil seal lip with splines of input shaft while shaft is being inserted into clutch housing.
- Take care not to damage oil channel when inserting mainshaft into clutch housing.

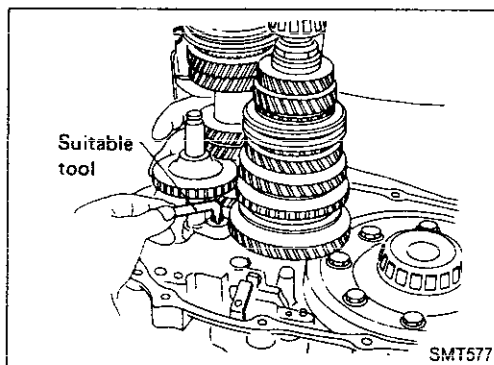


c. Install bearing retainer.

One of these three screws is torx type and should be installed with suitable tool, as shown.

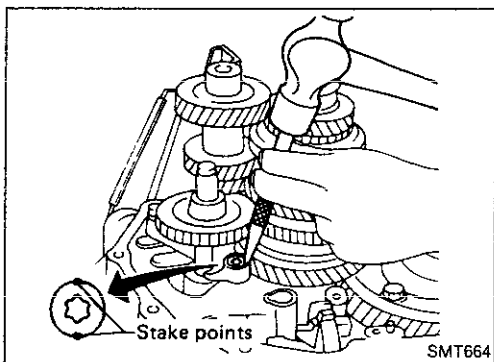


d. After installing torx screw, stake it at two points.

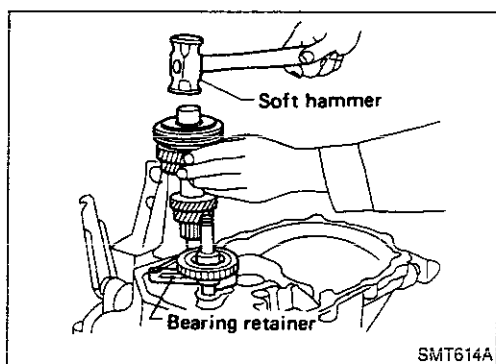

— RS5F31A —


a. Install input shaft assembly and reverse idler gear.

- Take care not to damage oil seal lip with splines of input shaft while shaft is being inserted into clutch housing.

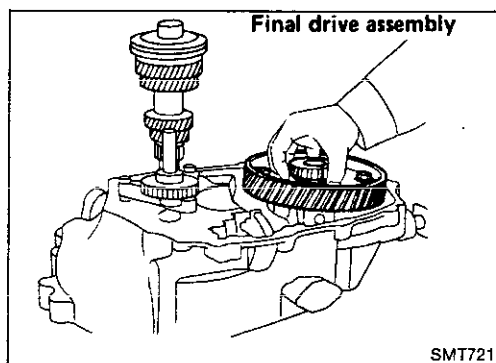


b. Install final drive assembly.

Mainshaft assembly

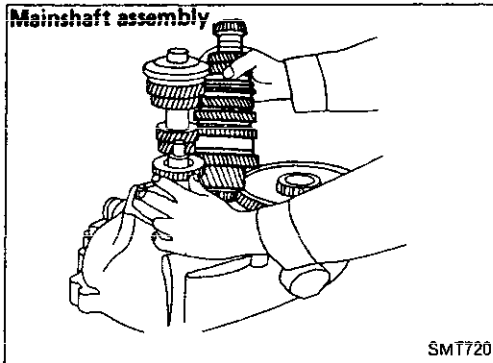


c. Install mainshaft assembly.

- Take care not to damage oil channel when inserting mainshaft into clutch housing.

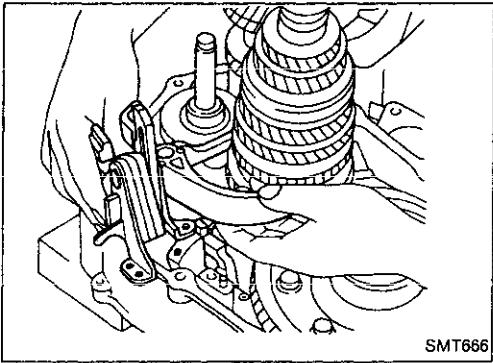

9. Apply grease to shifter caps, then install it to control bracket. Install control bracket with 1st & 2nd shift fork.


10. Install 3rd & 4th and 5th shift forks.

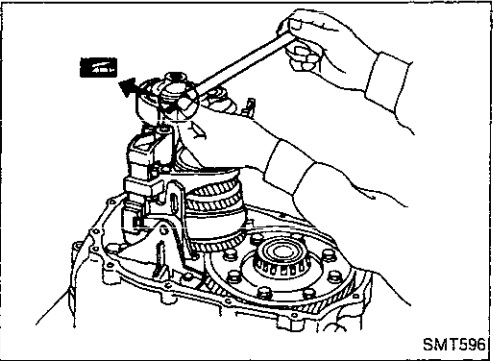


11. Insert fork shaft.

- Apply multi-purpose grease to support spring before installing.


12. Install reverse idler spacer.

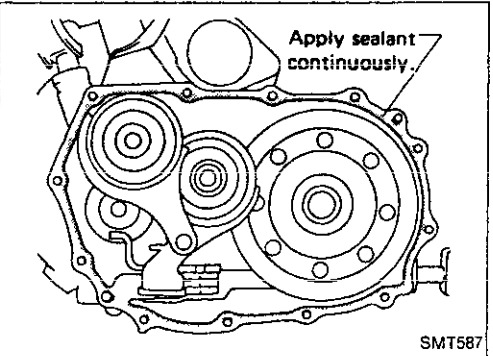

13. Apply recommended sealant to mating surface of clutch housing.

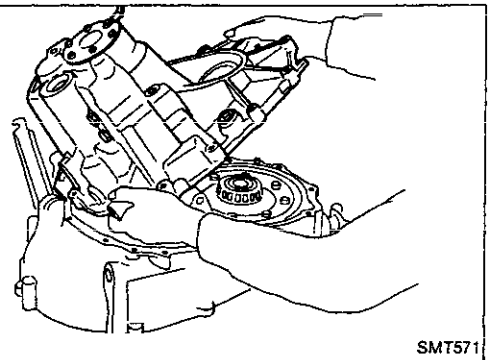

14. Install transmission case on clutch housing.

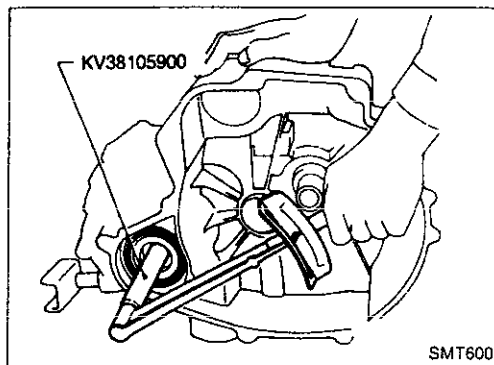


15. Measure total turning torque.

Total turning torque (New bearing):

Refer to S.D.S.

- When old bearing is used again, turning torque will be slightly less than the above.
- Make sure torque is close to the specified range.


Case Components

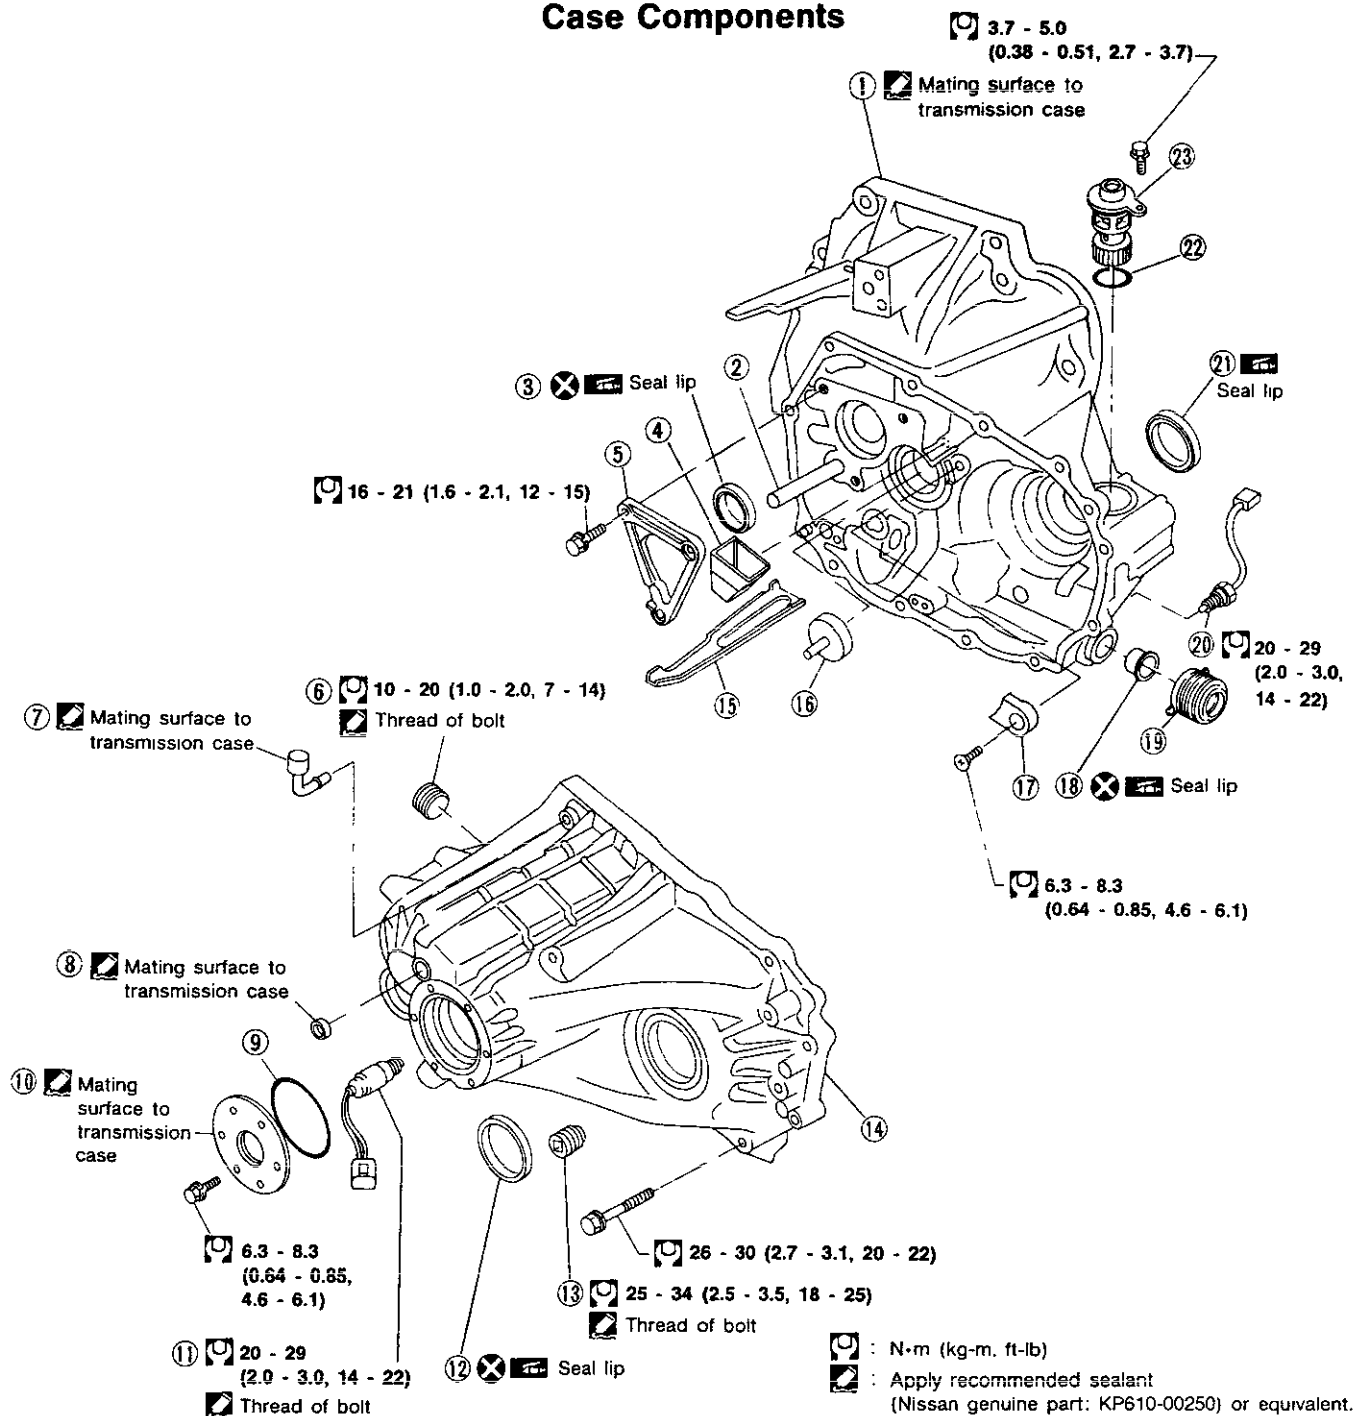

SMT764B

- | | | |
|------------------------|-------------------------|-------------------------------|
| ① Clutch housing | ⑨ O-ring | ⑰ Bearing retainer |
| ② Reverse idler shaft | ⑩ Case cover | ⑱ Striking rod oil seal |
| ③ Input shaft oil seal | ⑪ Reverse lamp switch | ⑲ Boot |
| ④ Oil pocket | ⑫ Differential oil seal | ⑳ Neutral switch |
| ⑤ Bearing retainer | ⑬ Drain plug | ㉑ Differential oil seal |
| ⑥ Filler plug | ⑭ Transmission case | ㉒ O-ring |
| ⑦ Air breather | ⑮ Oil gutter | ㉓ Speedometer pinion assembly |
| ⑧ Welch plug | ⑯ Oil channel | |


Gear Components

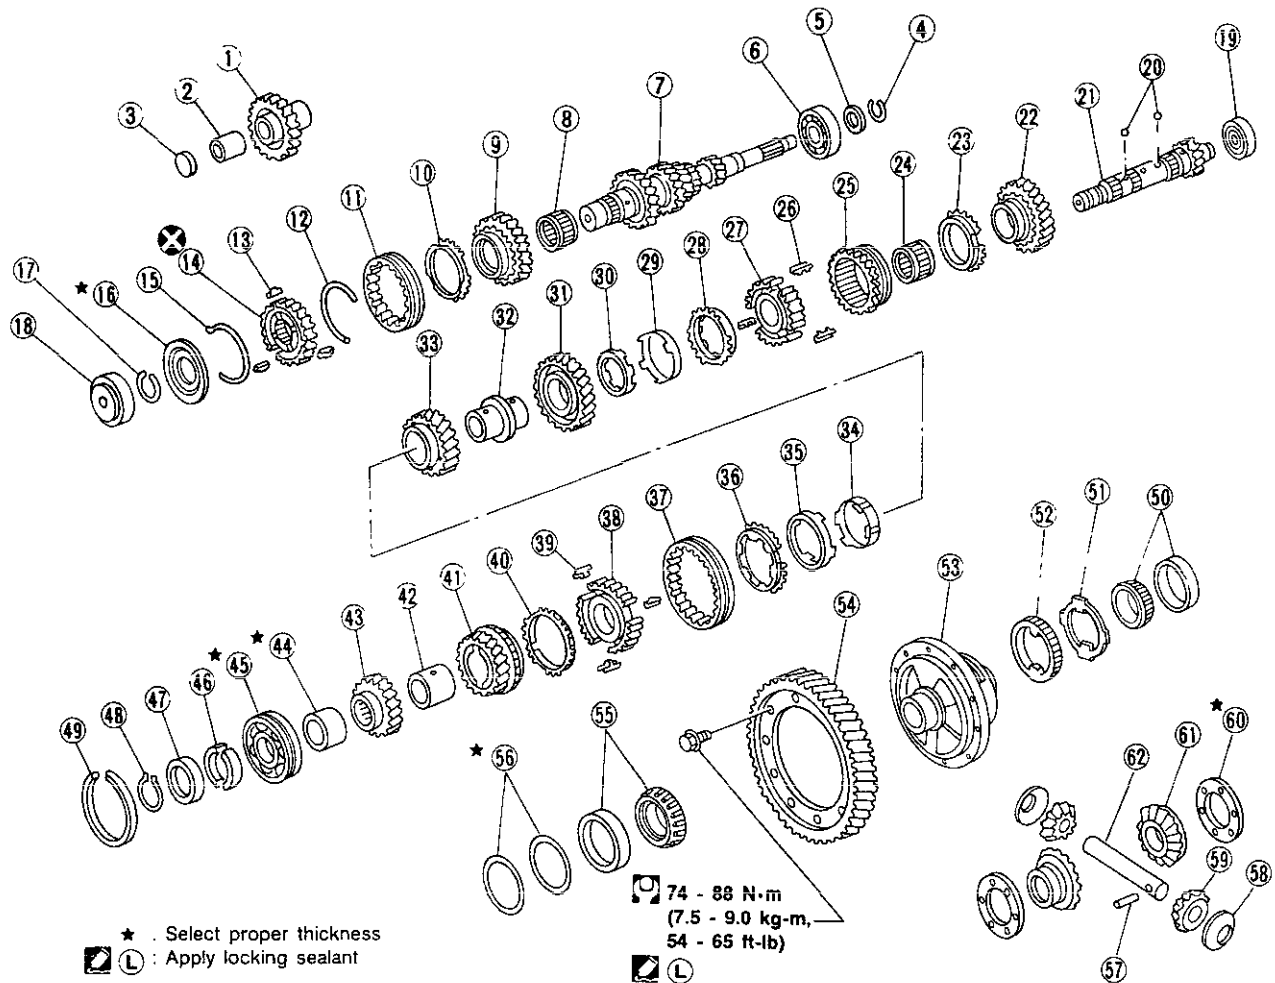

SMT462C

- | | | |
|-----------------------------|--|---|
| ① Reverse idler gear | ②② 1st main gear | ④③ 5th main gear |
| ② Reverse idler bushing | ②③ Baulk ring | ④④ Spacer |
| ③ Reverse idler spacer | ②④ 1st gear needle bearing | ④⑤ Mainshaft rear bearing |
| ④ Snap ring | ②⑤ Reverse main gear (Coupling sleeve) | ④⑥ C-ring |
| ⑤ Spacer | ②⑥ Insert spring | ④⑦ C-ring holder |
| ⑥ Input shaft front bearing | ②⑦ 1st & 2nd synchronizer hub | ④⑧ Snap ring |
| ⑦ Input shaft | ②⑧ 2nd outer baulk ring | ④⑨ Snap ring |
| ⑧ 5th gear needle bearing | ②⑨ 2nd gear synchronizer cone | ⑤① Differential side bearing |
| ⑨ 5th input gear | ③① 2nd inner baulk ring | ⑤② Speedometer stopper |
| ⑩ Baulk ring | ③② 2nd main gear | ⑤③ Speedometer drive gear |
| ⑪ Coupling sleeve | ③③ 2nd & 3rd bushing | ⑤④ Differential case |
| ⑫ Spread ring | ③④ 3rd main gear | ⑤⑤ Final gear |
| ⑬ Insert spring | ③⑤ 3rd inner baulk ring | ⑤⑥ Differential side bearing |
| ⑭ 5th gear synchronizer hub | ③⑥ 3rd gear synchronizer cone | ⑤⑦ Differential side bearing adjusting shim |
| ⑮ Spread ring | ③⑦ 3rd outer baulk ring | ⑤⑧ Retaining pin |
| ⑯ 5th stopper | ③⑧ Coupling sleeve | ⑤⑨ Thrust washer |
| ⑰ Snap ring | ③⑨ 3rd & 4th synchronizer hub | ⑤⑩ Pinion mate gear |
| ⑱ Input shaft bearing | ③⑩ Insert spring | ⑤⑪ Thrust washer |
| ⑲ Mainshaft front bearing | ④① Baulk ring | ⑤⑫ Side gear |
| ⑳ Steel ball | ④② 4th main gear | ⑤⑬ Pinion mate shaft |
| ㉑ Mainshaft | ④③ 4th gear bushing | |

Shift Control Components

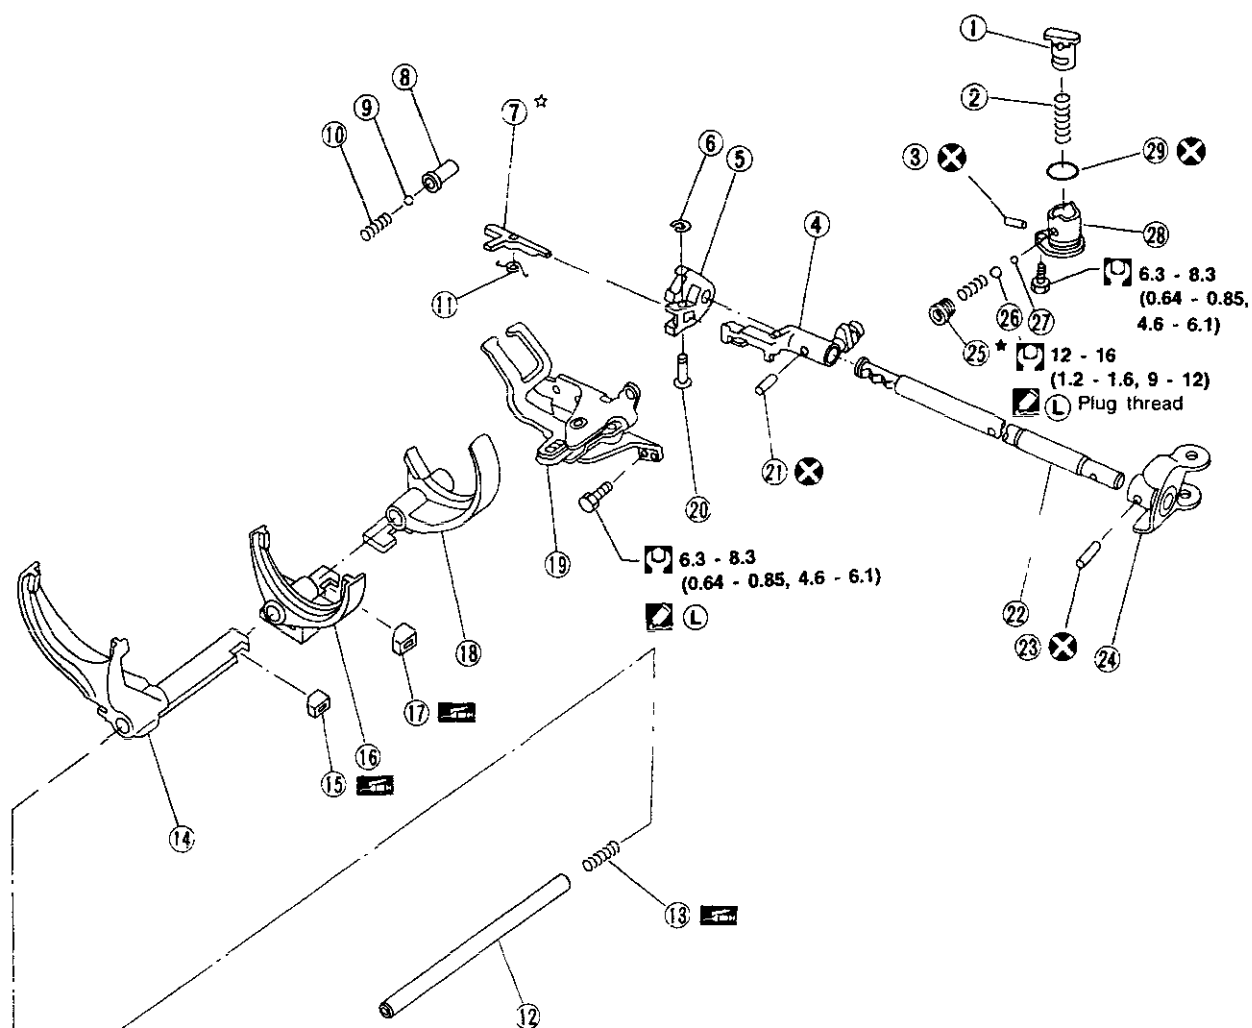


- [Torque symbol] : N·m (kg-m, ft-lb)
 [Sealant symbol] : Apply locking sealant.
 ★ : Select proper length.
 ☆ : Select proper part. Adjustment is required.


SMT787B

- | | | |
|----------------------------|--------------------------------|----------------------|
| ① Check plunger | ⑬ Fork shaft supporting spring | ⑳ Reverse check plug |
| ② Select return spring | ⑭ 5th shift fork | ㉑ Check ball (Large) |
| ③ Stopper pin | ⑮ Shift cap | ㉒ Check ball (Small) |
| ④ Striking lever | ⑯ 3rd & 4th shift fork | ㉓ Check sleeve |
| ⑤ Striking interlock | ⑰ Shift cap | ㉔ O-ring |
| ⑥ Snap ring | ⑱ 1st & 2nd shift fork | |
| ⑦ Reverse brake cam | ⑲ Control bracket | |
| ⑧ Check ball plug | ㉀ Control bracket pin | |
| ⑨ Shift check ball | ㉁ Retaining pin | |
| ⑩ Check spring | ㉂ Striking rod | |
| ⑪ Reverse brake cam spring | ㉃ Retaining pin | |
| ⑫ Fork shaft | ㉄ Yoke | |


MT-40

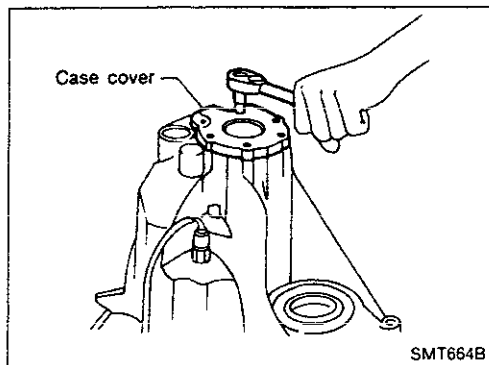


1. Remove case cover.

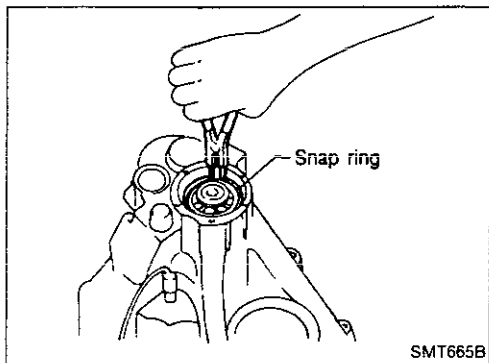


2. Remove mainshaft bearing snap ring.

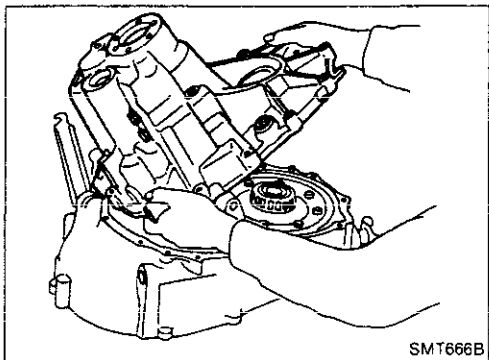

3. Remove transmission case while slightly tilting it to prevent 5th shift fork from interfering with case.

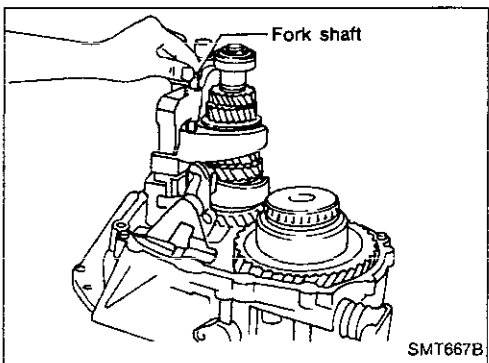


4. Draw out reverse idler spacer and fork shaft.

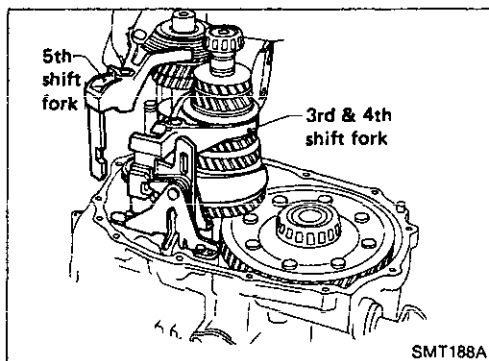


5. Remove 5th and 3rd & 4th shift forks.

● Be careful not to lose shifter cap.

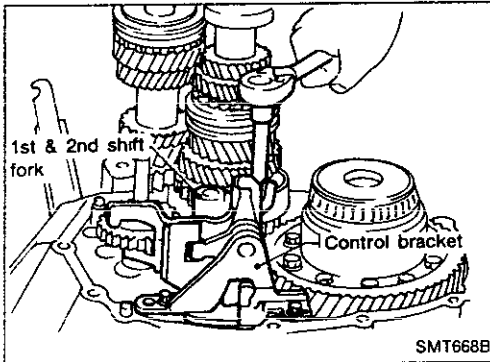


6. Remove control bracket with 1st & 2nd shift fork.

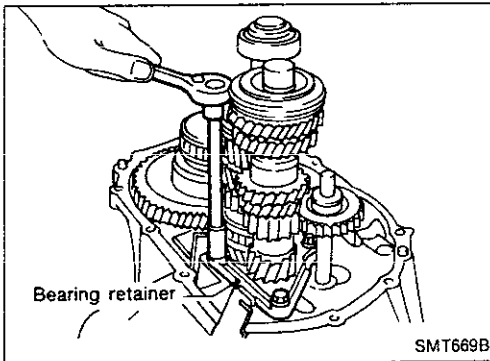

7. Remove gear components from clutch housing.

a. Remove input shaft front bearing retainer securing bolts.

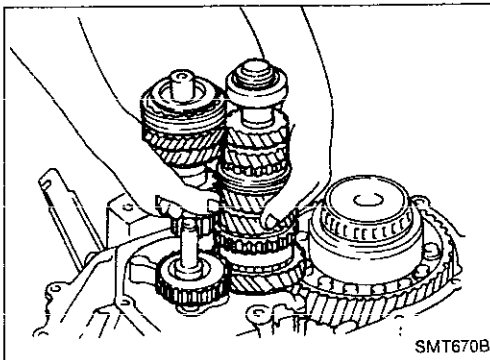


b. Remove input shaft with bearing retainer, mainshaft assembly and reverse idler gear.


- **Always withdraw mainshaft straight out. Failure to do so can damage resin oil channel on clutch housing side.**

- **Do not draw out reverse idler shaft from clutch housing because these fittings will be loose.**


When removing input shaft, be careful not to scratch oil seal lip with shaft spline.

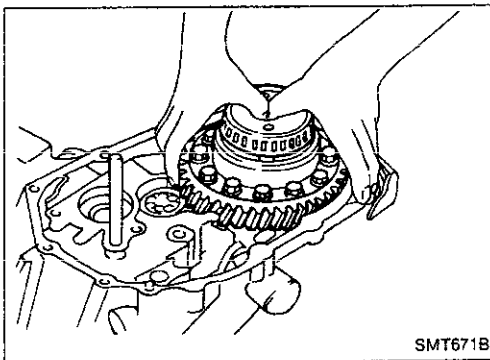


c. Remove final drive assembly.

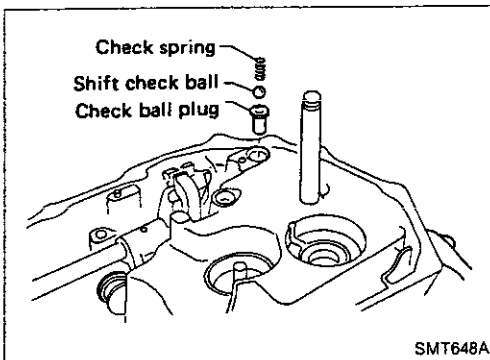


8. Remove oil pocket, shift check ball, check spring and check ball plug.

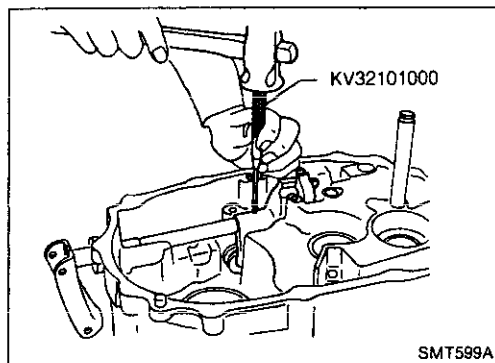


9. Drive retaining pin out of striking lever, then remove striking rod, striking lever and striking interlock.
- Select a position where retaining pin does not interfere with clutch housing when removing retaining pin.

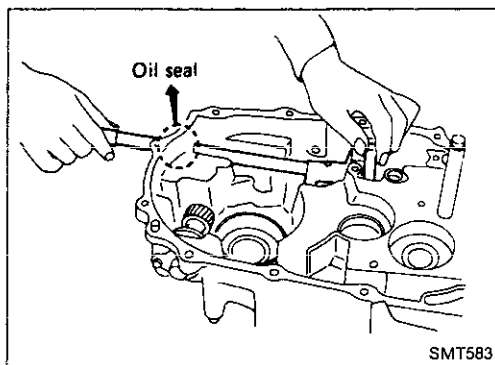


- Be careful not to damage oil seal lip, when removing striking rod. If necessary, tape edges of striking rod.

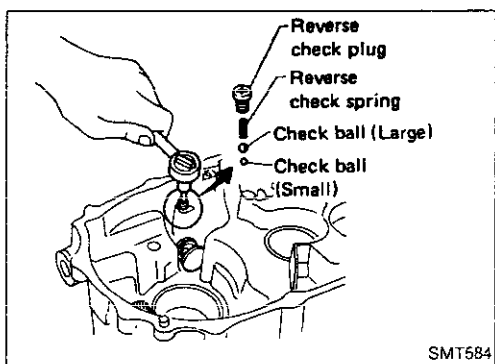

10. Remove reverse check plug, then detach reverse check spring and check balls.
- If the smaller ball does not come out, remove it together with check sleeve assembly.

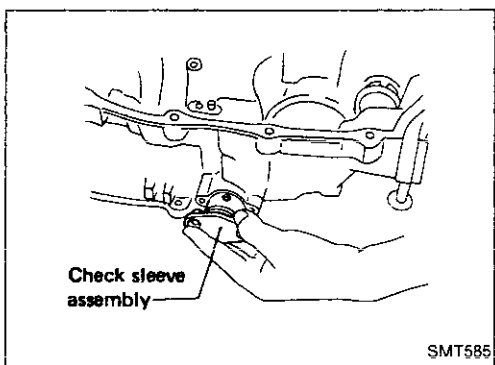

11. Remove check sleeve assembly.

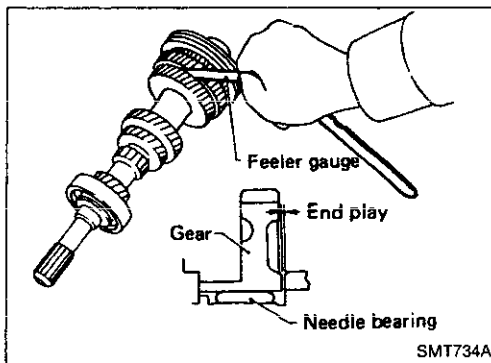


Input Shaft and Gears

DISASSEMBLY


1. Before disassembly, check 5th input gear end play.

Gears	End play mm (in)
5th input gear	0.18 - 0.31 (0.0071 - 0.0122)

- If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of snap ring groove -- Refer to "Assembly — Input Shaft and Gears".

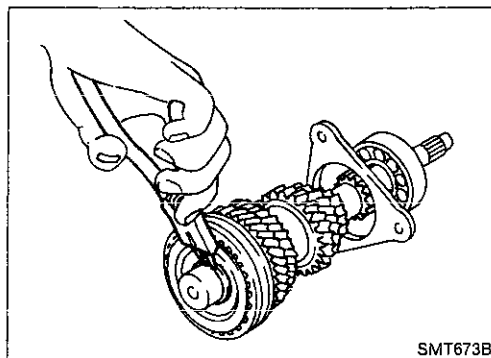


2. Remove snap ring and 5th stopper.

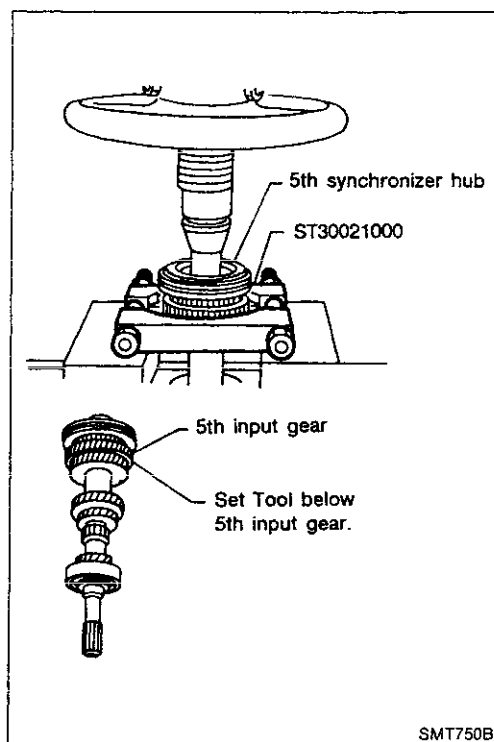


3. Remove 5th synchronizer, 5th input gear and 5th gear needle bearing.


Input Shaft and Gears (Cont'd)

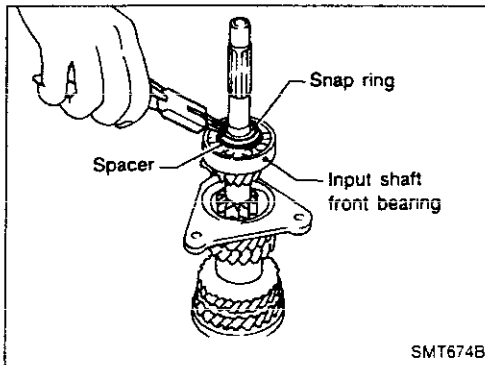

4. Remove snap ring of input shaft front bearing and input gear spacer.

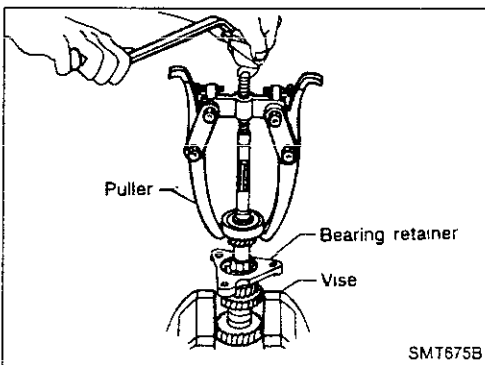


5. Pull out input shaft front bearing.
6. Remove bearing retainer.

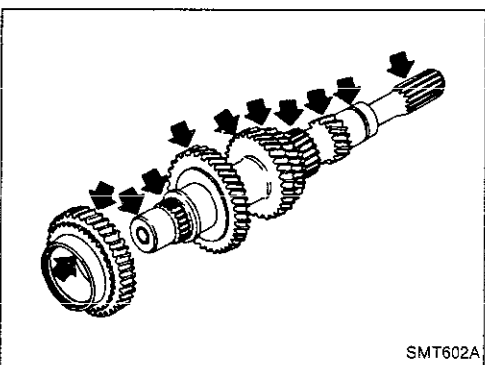

INSPECTION


Gear and shaft

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

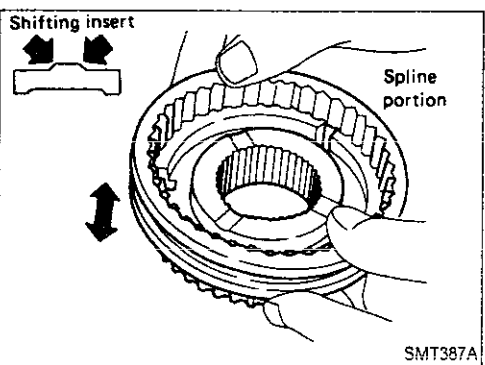

Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for wear or deformation.

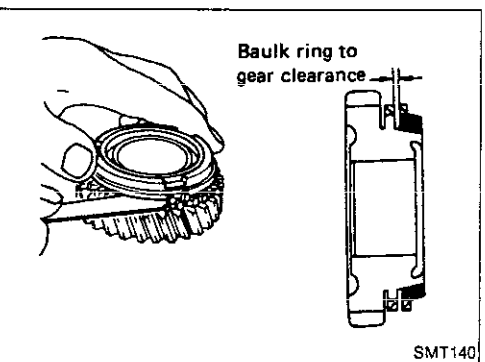


- Measure clearance between baulk ring and gear.
Clearance between baulk ring and gear:
Standard
1.0 - 1.35 mm (0.0394 - 0.0531 in)
Wear limit
0.7 mm (0.028 in)

Input Shaft and Gears (Cont'd)


Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

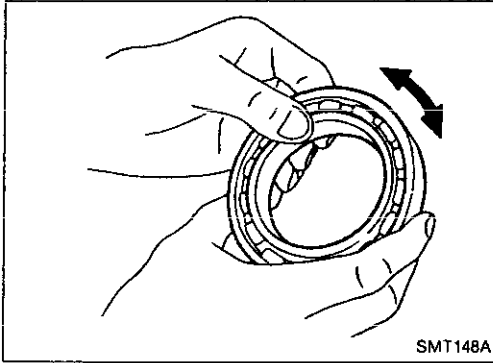


ASSEMBLY


1. Assemble 5th synchronizer.

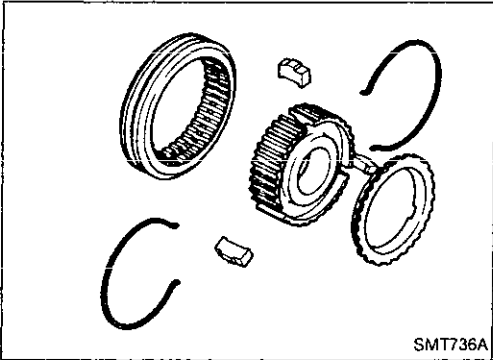


- Be careful not to hook front and rear ends of spread spring to the same insert.

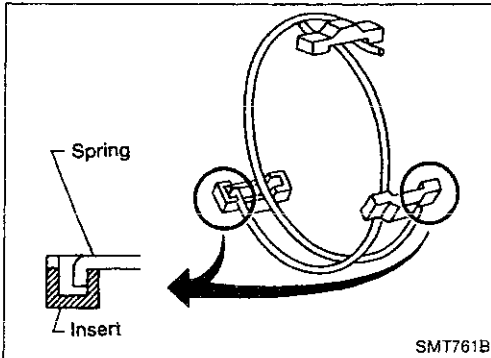

2. Install bearing retainer.
3. Press on input shaft front bearing.
4. Install input gear spacer.

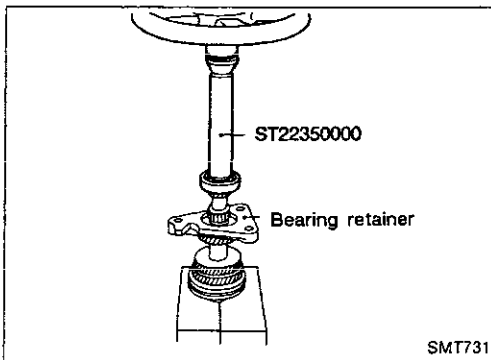

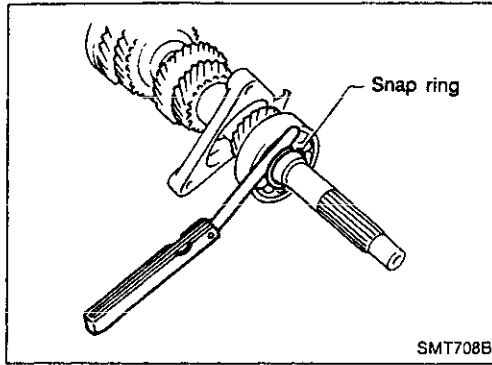

Input Shaft and Gears (Cont'd)

5. Select proper snap ring of input shaft front bearing to minimize clearance of groove in input shaft and then install it.



Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Snap rings of input shaft front bearing:

Thickness mm (in)	Part number
1.27 (0.0500)	32204-M8004
1.33 (0.0524)	32204-M8005
1.39 (0.0547)	32204-M8006
1.45 (0.0571)	32204-M8007

- **Be sure to replace 5th gear synchronizer hub with new one when it is removed.**
6. Install 5th gear needle bearing, 5th input gear, 5th synchronizer and 5th stopper.
- **Be sure to press input shaft in position vertically in relation to synchronizer hub.**
7. Measure gear end play as a final check — Refer to "Disassembly — Input Shaft and Gears".

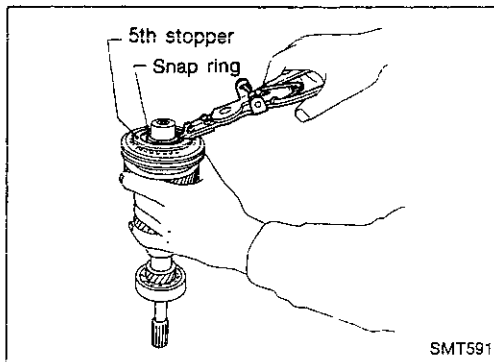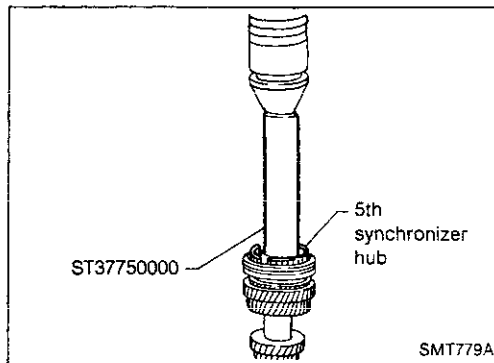


8. Select proper snap ring of 5th synchronizer hub to minimize clearance of groove in input shaft and install it.

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Snap ring of 5th synchronizer:

Thickness mm (in)	Part number
2.00 (0.0787)	32311-M8812
2.05 (0.0807)	32311-M8813
2.10 (0.0827)	32311-M8814
2.15 (0.0846)	32311-M8815
2.20 (0.0866)	32311-M8816
2.25 (0.0886)	32311-M8817
2.30 (0.0906)	32311-M8818

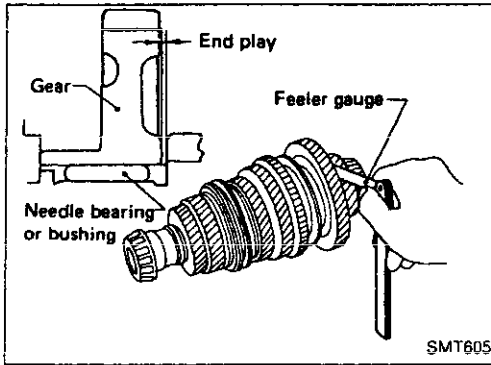

Mainshaft and Gears


DISASSEMBLY

1. Before disassembly, measure gear end play.


Gear end play:

Gears	End play mm (in)
1st main gear	0.18 - 0.31 (0.0071 - 0.0122)
2nd-4th main gear	0.20 - 0.30 (0.0079 - 0.0118)


- If end play is not within the specified limit, disassemble and check the parts.

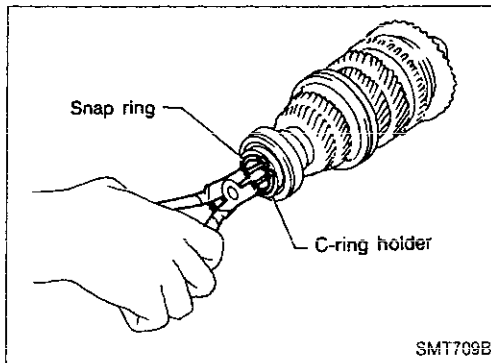

2. Remove mainshaft rear bearing snap ring, C-ring holder and C-rings.

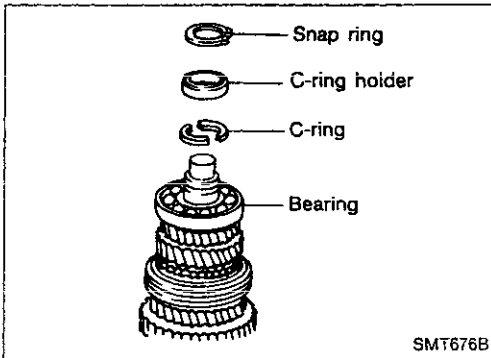


3. Remove mainshaft bearing and spacer.

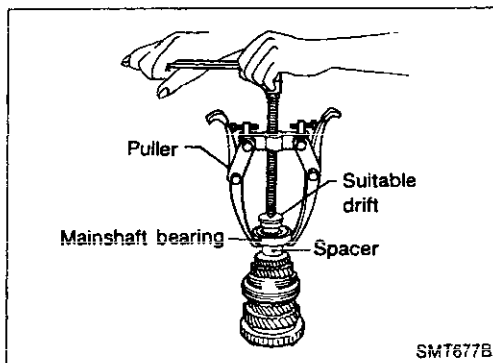


Mainshaft and Gears (Cont'd)

4. Remove 5th main gear.

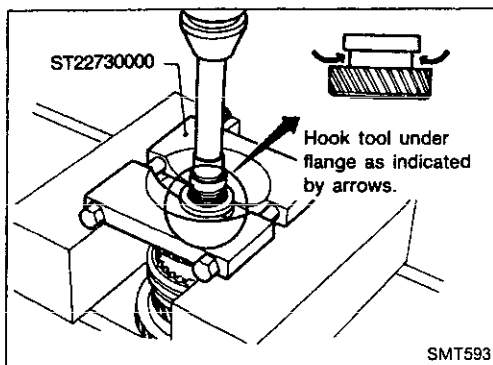


5. Remove 4th main gear, 4th gear bushing and steel ball.

- Take care not to lose steel ball.

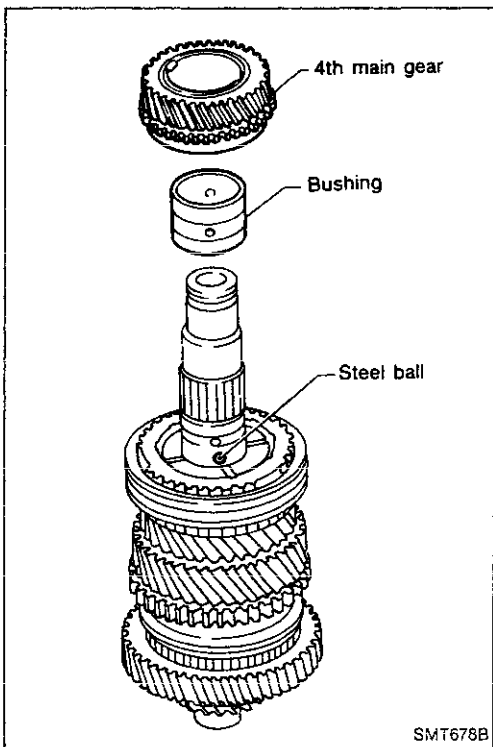


6. Remove 3rd & 4th synchronizer and 3rd main gear.

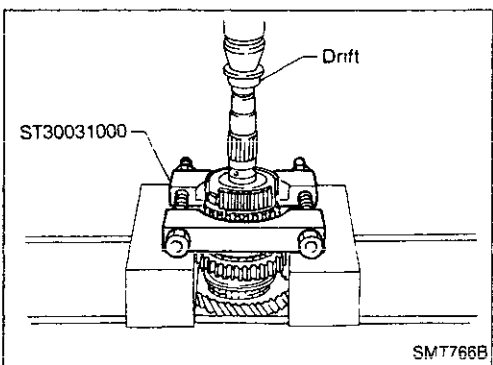


Mainshaft and Gears (Cont'd)

7. Remove 2nd & 3rd gear bushing and 2nd main gear.


- Take care not to lose the steel ball.

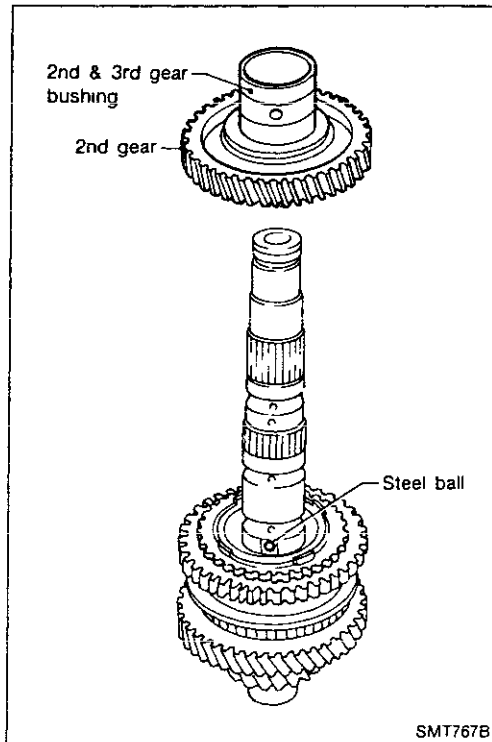

8. Remove 1st & 2nd synchronizer hub and 1st main gear.

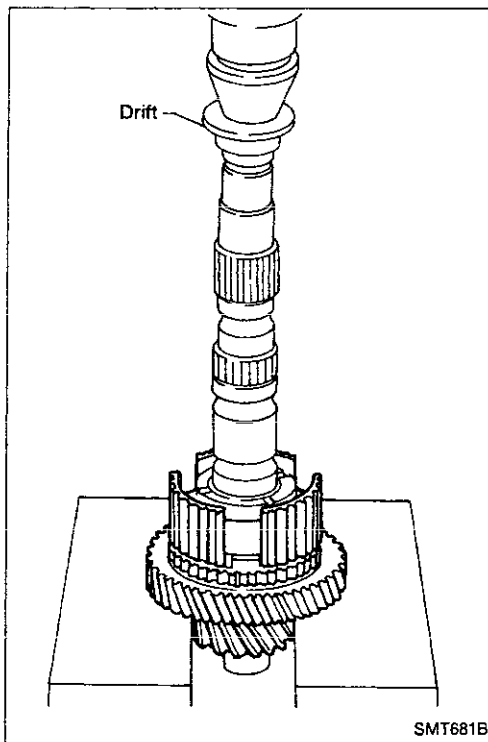**INSPECTION****Gear and shaft**



- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

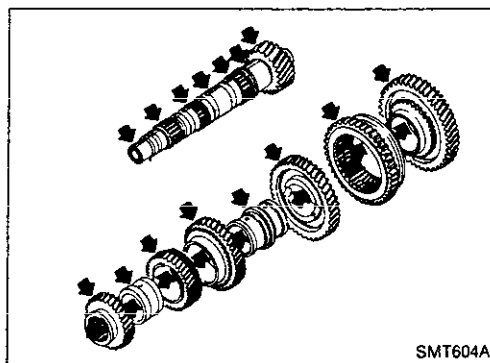

Mainshaft and Gears (Cont'd)

Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for deformation.

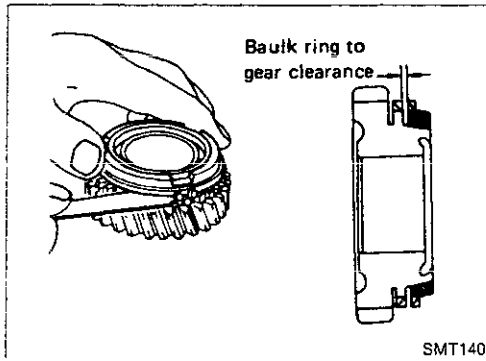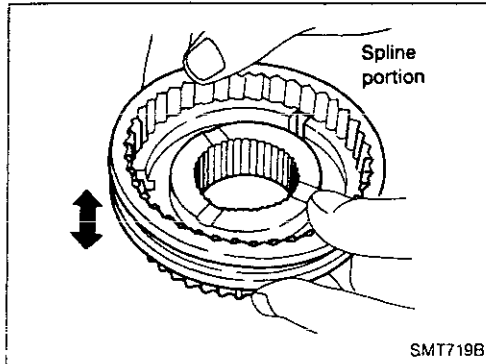

- Measure clearance between baulk ring and gear.

Clearance between baulk rings and gears, for 1st and 4th gear only:


Standard

1.0 - 1.35 mm (0.0394 - 0.0531 in)

Wear limit

0.7 mm (0.028 in)

- 2nd and 3rd gears have inner and outer baulk rings and so have different measurements.

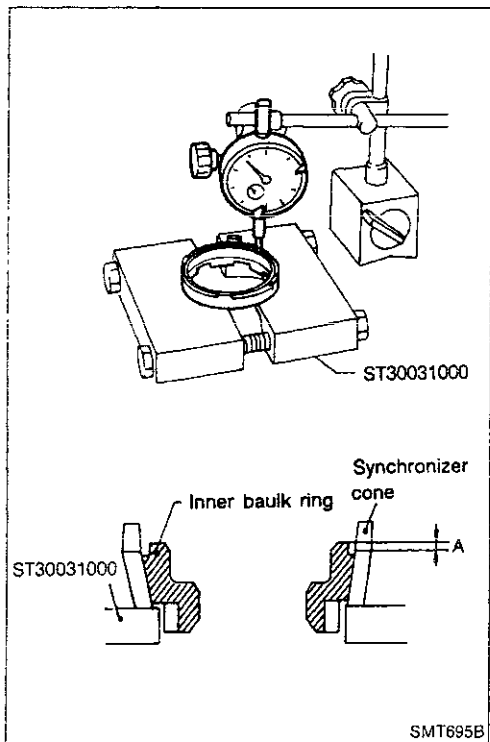

- Measure wear of 2nd and 3rd baulk ring.
 - a. Place baulk rings in position on synchronizer cone.
 - b. While holding baulk ring against synchronizer cone as far as it will go, measure dimensions "A" and "B".

Standard:

A 0.7 - 0.9 mm (0.028 - 0.035 in)



B 0.6 - 1.1 mm (0.024 - 0.043 in)

Wear limit:

0.2 mm (0.008 in)

- c. If dimension "A" or "B" is smaller than the wear limit, replace baulk ring.

Mainshaft and Gears (Cont'd)

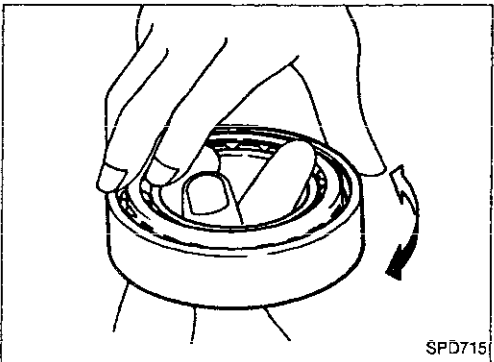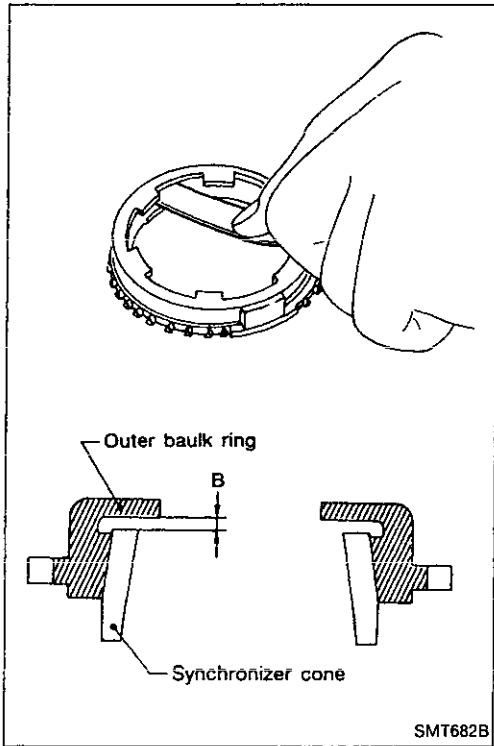


Bearing


- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **The mainshaft front bearing cannot be re-used. It must be replaced once removed.**

ASSEMBLY


1. Install 1st gear needle bearing, 1st main gear and baulk ring.
2. Press on 1st & 2nd synchronizer hub.

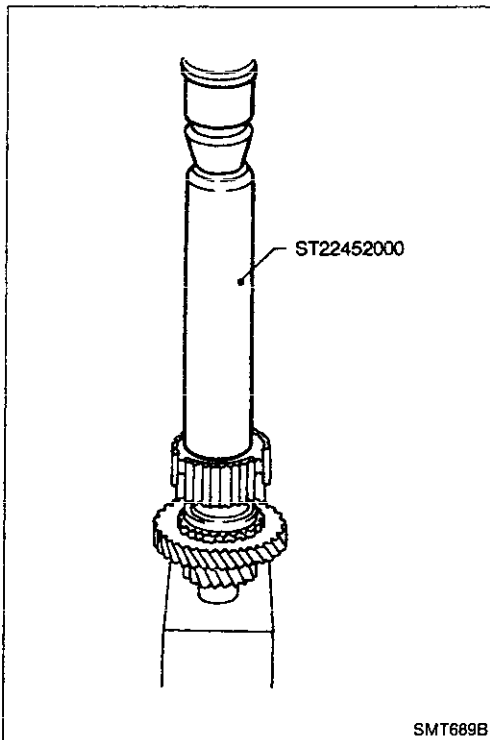


Mainshaft and Gears (Cont'd)

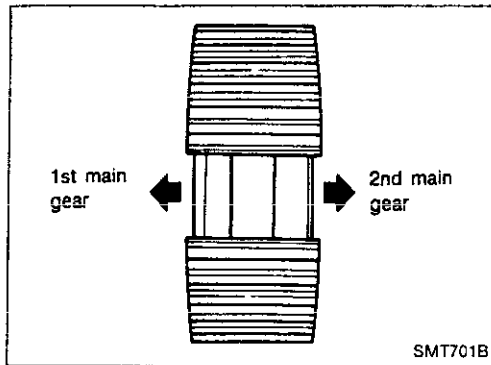

- Ensure correct fitting of 1st & 2nd synchronizer hub.

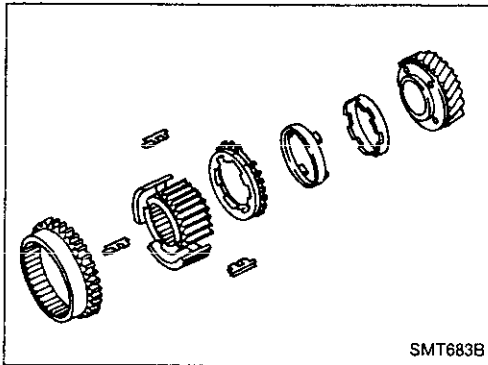


3. Install 2nd synchronizer cone, outer & inner baulk ring and 1st & 2nd coupling sleeve.

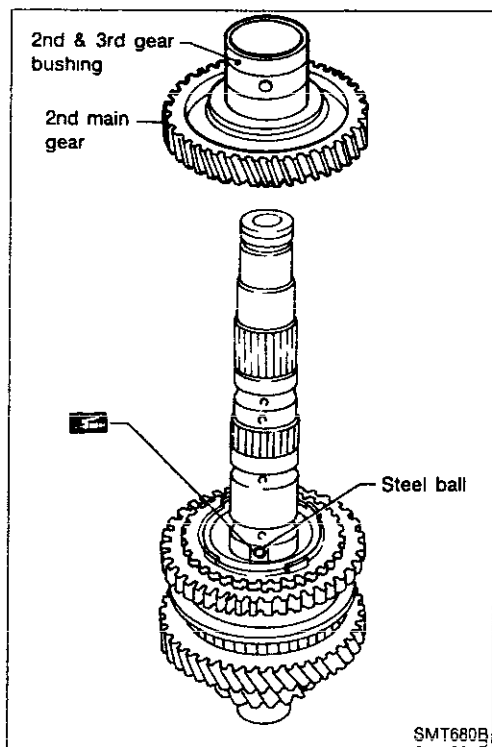


4. Install steel ball, 2nd main gear, 2nd & 3rd bushing.
 - Apply gear oil to 2nd & 3rd bushing before installing it.
 - Apply multi-purpose grease to steel ball before installing it.
 - 2nd & 3rd bushing has a groove in which steel ball fits.


Mainshaft and Gears (Cont'd)

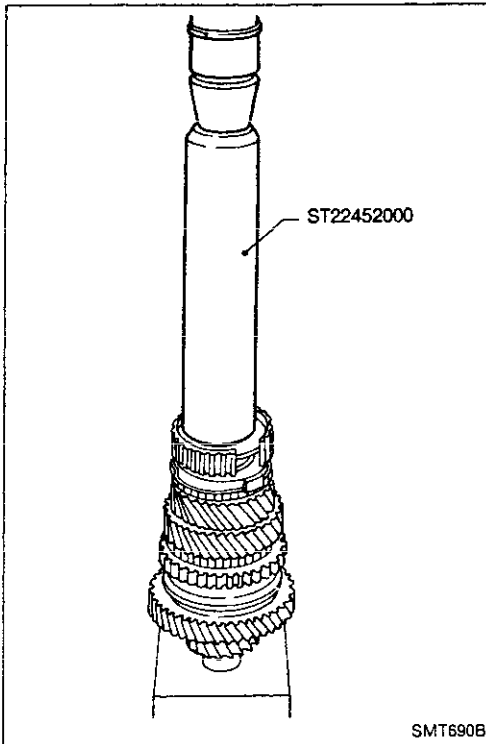

5. Install 3rd main gear, synchronizer cone, outer & inner baulk ring.
6. Press on 3rd & 4th synchronizer hub.

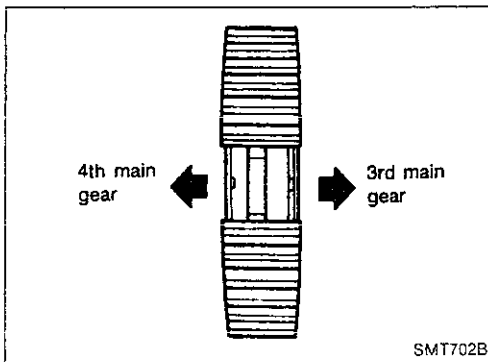




- Ensure correct fitting of 3rd & 4th synchronizer hub.
7. Install 3rd & 4th coupling sleeve and 4th baulk ring.

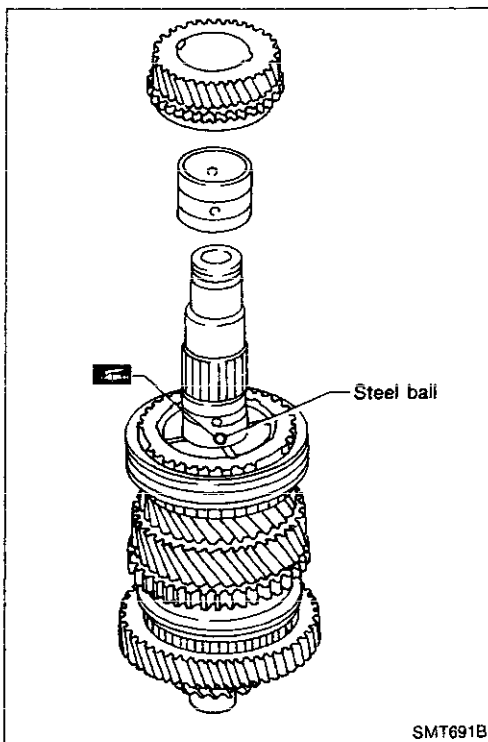

8. Install steel ball, 4th bushing and 4th main gear.
- Apply multi-purpose grease to steel ball before installing it.
 - 4th bushing has a groove in which steel ball fits.

Mainshaft and Gears (Cont'd)

9. Press on 5th main gear.

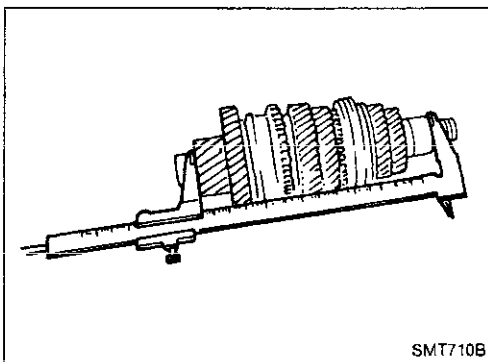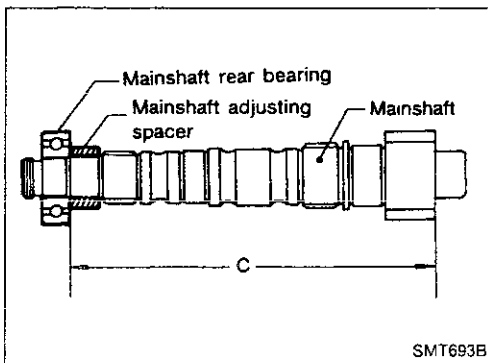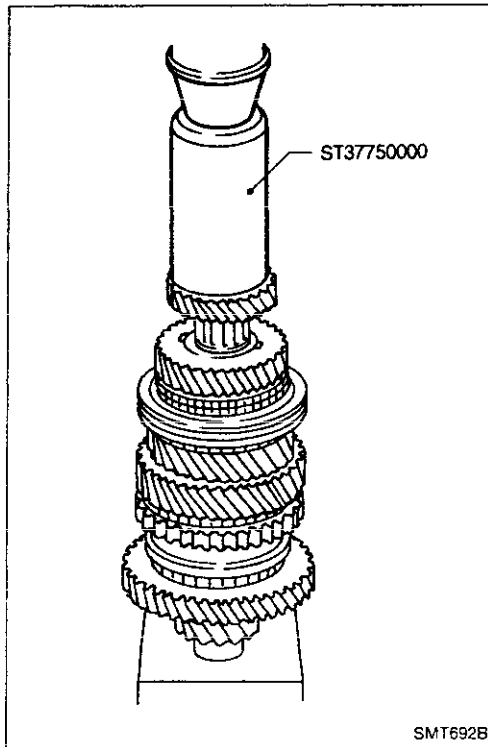

10. Select proper mainshaft bearing spacer to give correct bearing distance.

Bearing distance "C":



230.15 - 230.25 mm (9.0610 - 9.0649 in)

Spacers available:

Thickness mm (in)	Part number
18.91 (0.7445)	32347-50J00
18.98 (0.7472)	32347-50J01
19.05 (0.7500)	32347-50J02
19.12 (0.7528)	32347-50J03
19.19 (0.7555)	32347-50J04
19.26 (0.7583)	32347-50J05
19.33 (0.7610)	32347-50J06
19.40 (0.7638)	32347-50J07
19.47 (0.7665)	32347-50J08

Mainshaft and Gears (Cont'd)

11. Press on mainshaft rear bearing.

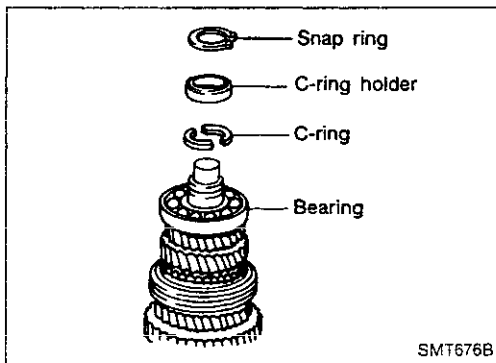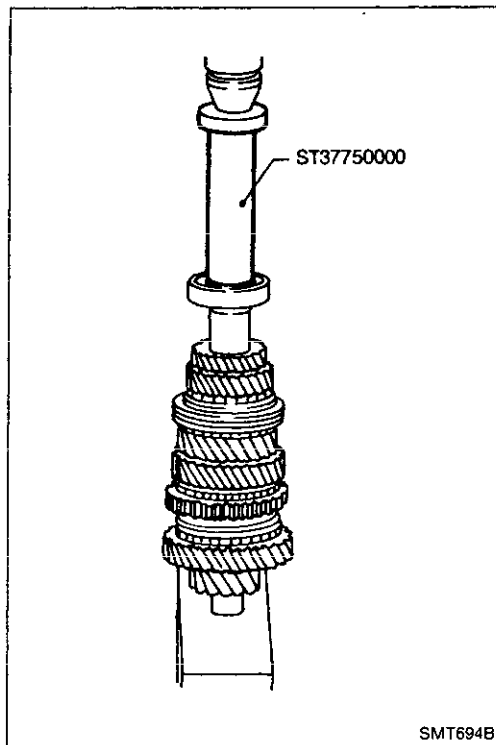

12. Select proper C-ring to minimize clearance of groove in mainshaft and install it.

Allowable clearance of groove:


0 - 0.1 mm (0 - 0.004 in)


Mainshaft C-rings:

Thickness mm (in)	Part number
4.45 (0.1752)	32348-50J00
4.52 (0.1780)	32348-50J01
4.59 (0.1807)	32348-50J02
4.66 (0.1835)	32348-50J03
4.73 (0.1862)	32348-50J04
4.80 (0.1890)	32348-50J05
4.87 (0.1917)	32348-50J06
4.94 (0.1945)	32348-50J07

13. Install C-ring holder and snap ring.

14. Measure gear end play as the final check — Refer to "Disassembly".

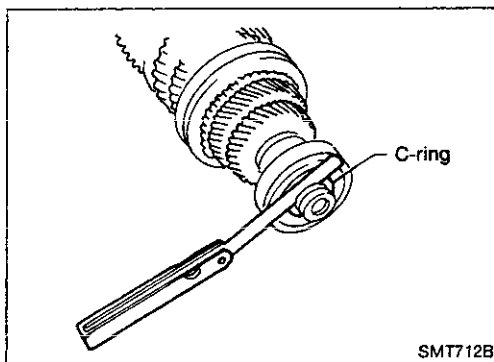


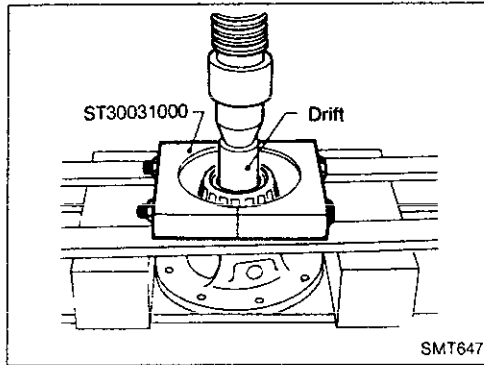


Final Drive

DISASSEMBLY

1. Remove final gear.
2. Remove speedometer drive gear by cutting it.
3. Press out differential side bearings.
- **Be careful not to mix up the right and left bearings.**

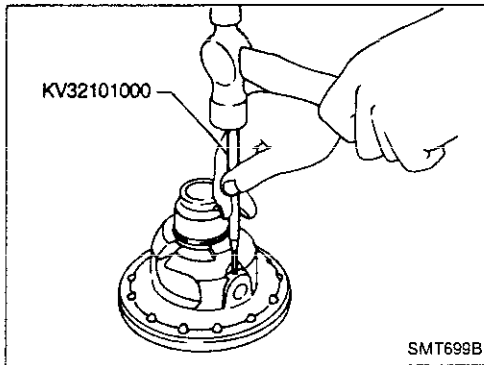


4. Drive out retaining pin and draw out pinion mate shaft.
5. Remove pinion mate gears and side gears.

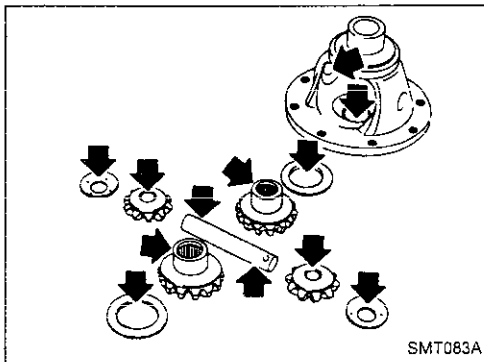

INSPECTION


Gear, washer, shaft and case

- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.

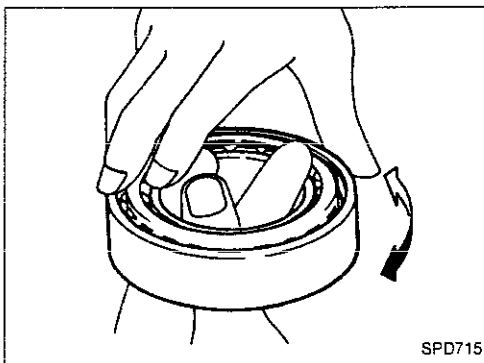

Bearing


- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

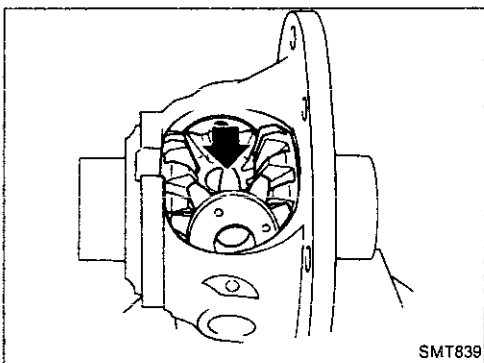


ASSEMBLY

1. Attach side gear thrust washers to side gears, then install pinion mate washers and pinion mate gears in place.


Final Drive (Cont'd)

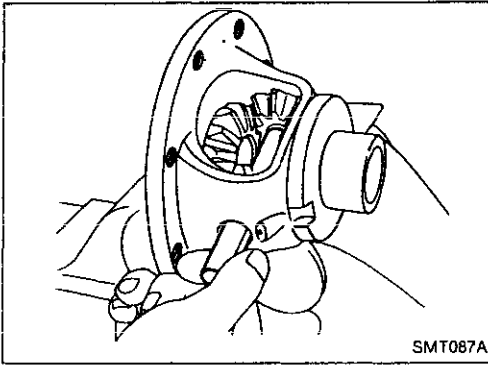

2. Insert pinion mate shaft.
 - **When inserting, be careful not to damage pinion mate thrust washers.**

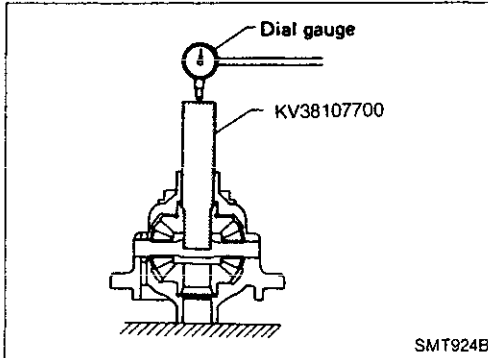

3. Measure clearance between side gear and differential case with washers following the procedure below:
 - a. Set Tool and dial indicator on side gear.

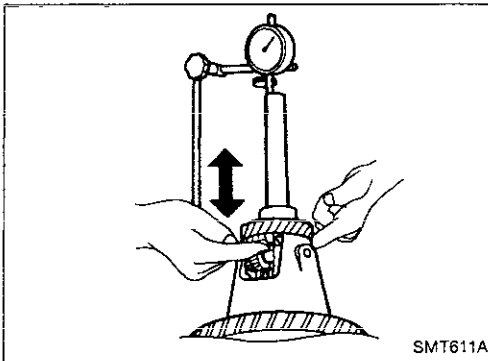

- b. Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.


Clearance between side gear and differential case with washers:

0.1 - 0.2 mm (0.004 - 0.008 in)

- c. If not within specification, adjust clearance by changing thickness of side gear thrust washers.


Side gear thrust washer:

Refer to S.D.S.

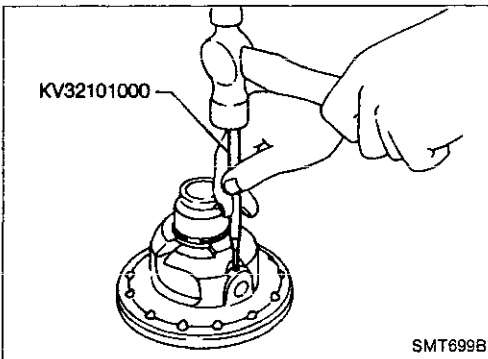


4. Install retaining pin.
 - **Make sure that retaining pin is flush with case.**


Final Drive (Cont'd)

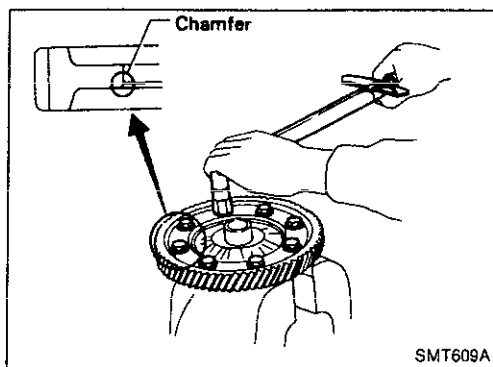

5. Install final gear.
 - Apply locking sealant to final gear fixing bolts before installing them.
6. Install speedometer drive gear.

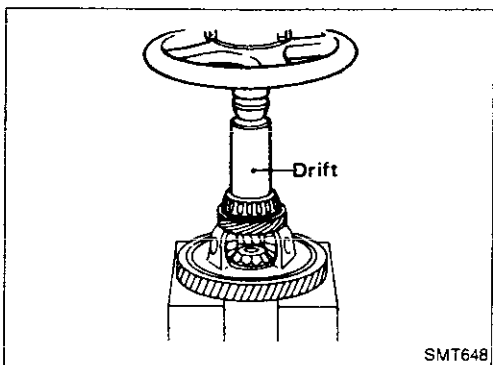

7. Press on differential side bearings.

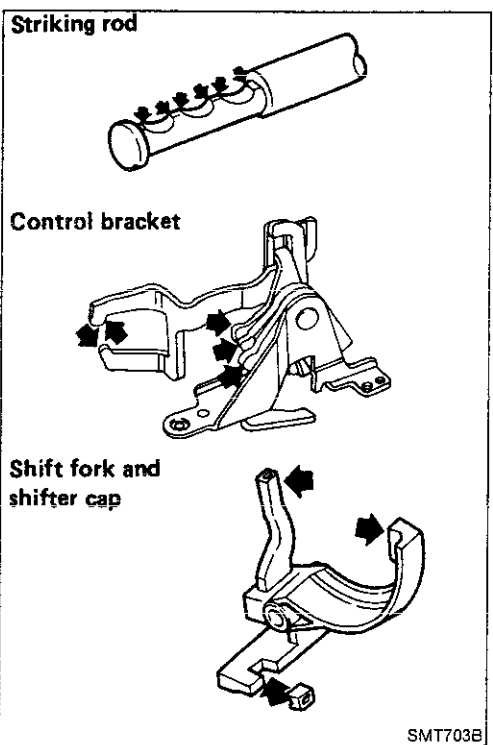


Shift Control Components

INSPECTION


- Check contact surface and sliding surface for wear, scratches, projections or other damage.

Shift Control Components (Cont'd)

Reverse brake cam

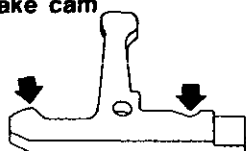


Striking lever

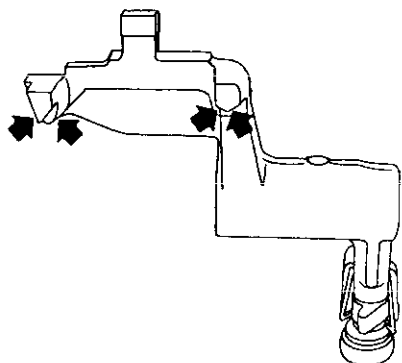

SMT773B

Control bracket

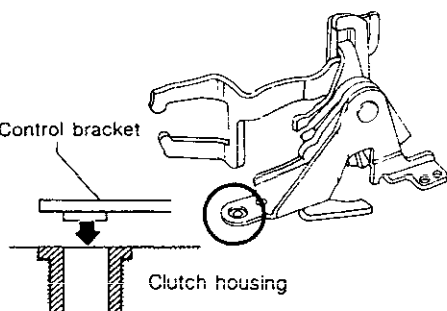

Clutch housing

SMT774B

ADJUSTMENT OF INPUT SHAFT BRAKING MECHANISM


1. Install striking lever & rod, striking interlock assembly and control bracket on clutch housing exactly.

- When installing control bracket on clutch housing, assure protrusion beneath bracket is correctly seated.

2. Measure maximum height "H" while shifting from neutral to reverse position.


Maximum height "H":

67.38 - 67.86 mm (2.6528 - 2.6716 in)

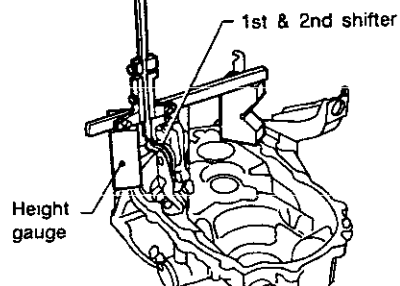

Height gauge

1st & 2nd shifter

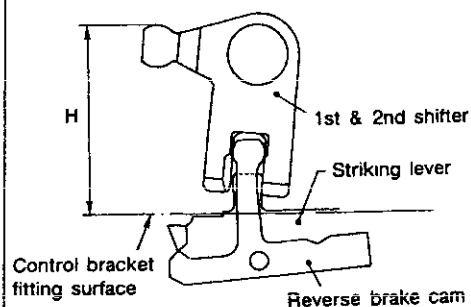


1st & 2nd shifter

Striking lever

Control bracket fitting surface

Reverse brake cam

SMT728B

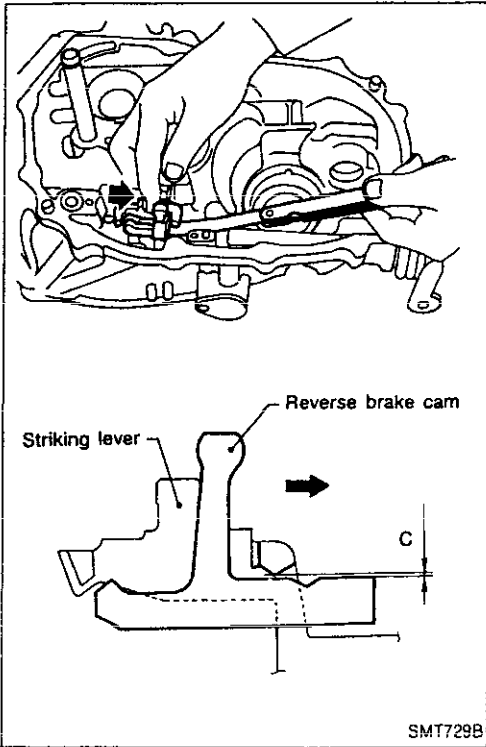Shift Control Components (Cont'd)

3. Measure clearance "C" between reverse brake cam and striking lever while shifting to reverse position.

Clearance "C":


0.05 - 0.20 mm (0.0020 - 0.0079 in)

If "H" or "C" is not within specification, replace the following parts as a set.

- Striking lever assembly
- Striking interlock assembly (This includes reverse brake cam.)
- Control bracket assembly


Case Components**Input shaft oil seal**

1. Drive out input shaft oil seal.

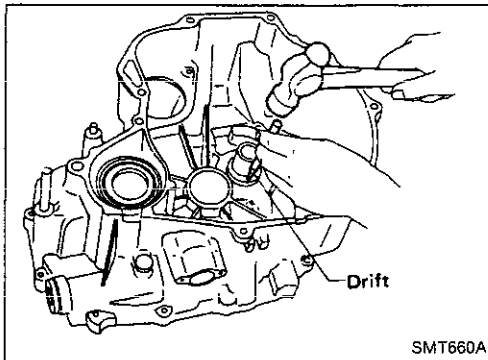


2. Install input shaft oil seal.


- Apply multi-purpose grease to seal lip of oil seal before installing.

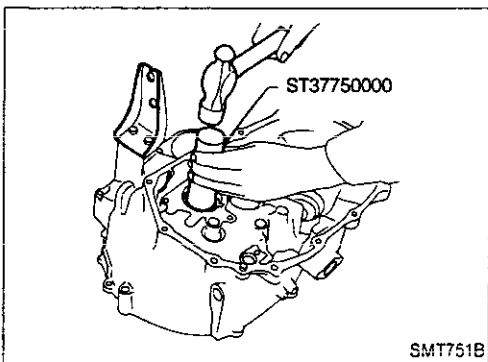**Input shaft rear bearing**


1. Remove weld plug from transmission case.

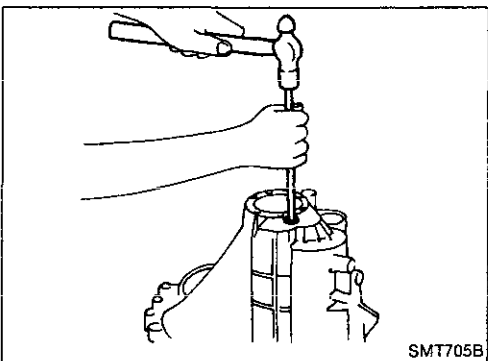


Case Components (Cont'd)

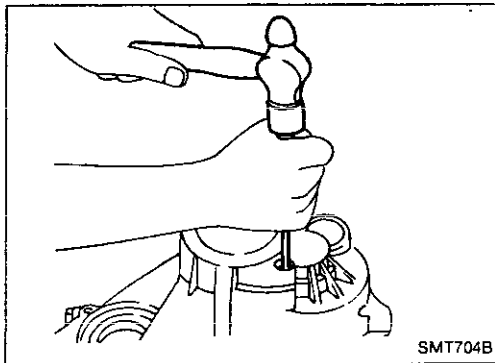


2. Remove input shaft rear bearing by tapping it from wench plug hole.

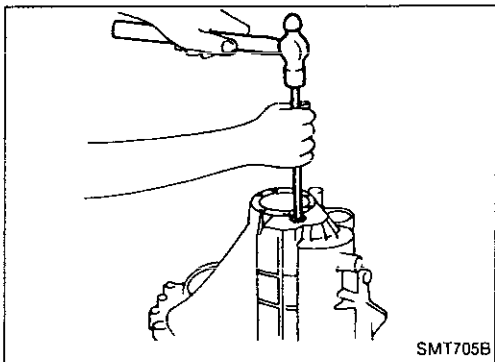

3. Install wench plug.
 - Apply recommended sealant to mating surface of transmission case.

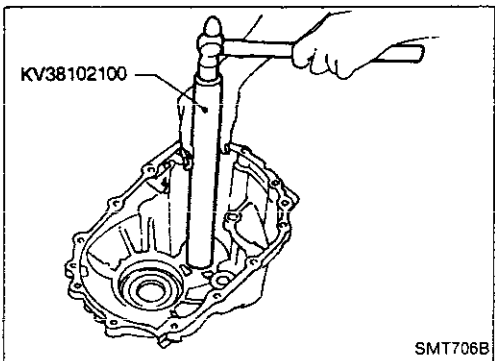


4. Install input shaft rear bearing.

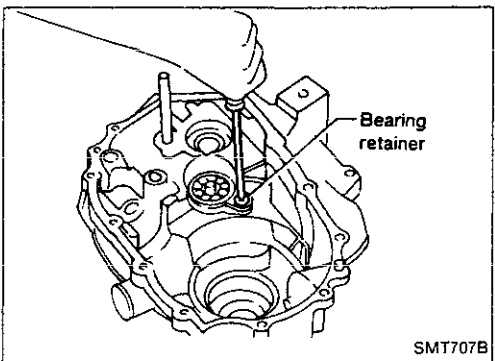


Mainshaft front bearing and oil channel

1. Remove mainshaft front bearing retainer.

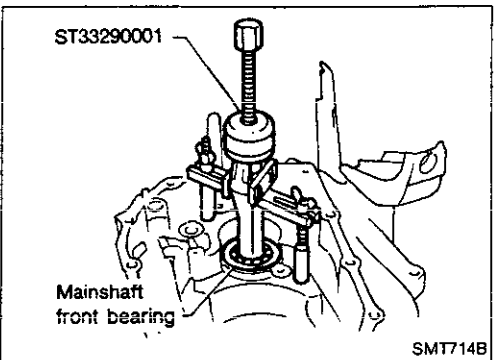


2. Remove mainshaft front bearing.
3. Remove oil channel.

Case Components (Cont'd)

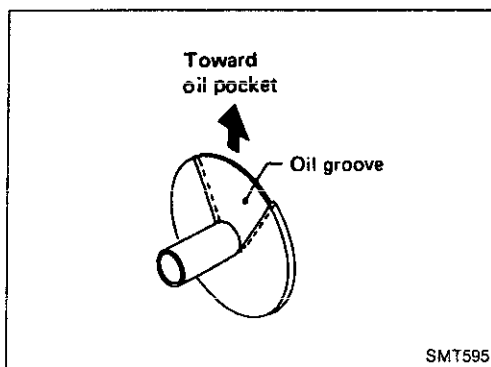

4. Install oil channel.

- Ensure that oil groove in oil channel always faces toward oil pocket when installing it on clutch housing.

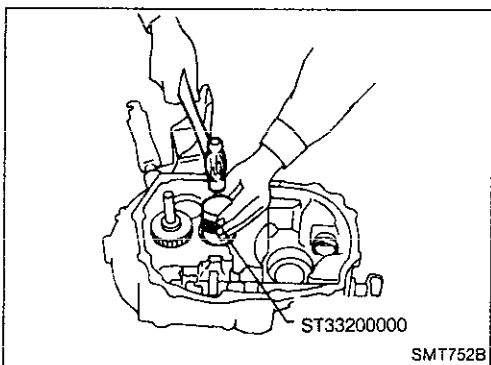

5. Install mainshaft front bearing.


6. Install mainshaft front bearing retainer.

Apply locking sealant to thread of screw before installation.


Differential Side Bearing Preload

If any of the following parts are replaced, adjust differential side bearing preload.


- Differential case
- Differential side bearing
- Clutch housing
- Transmission case

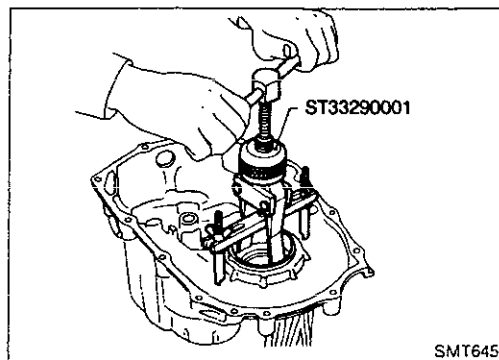

1. Remove differential side bearing outer race (transmission case side) and shim.

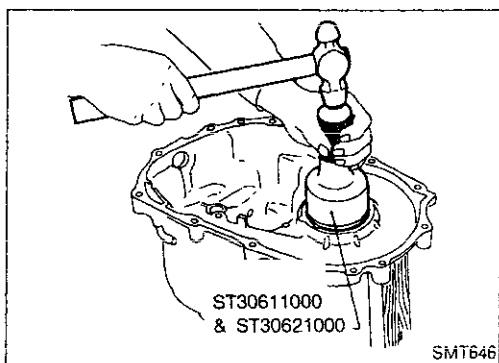

2. Reinstall differential side bearing outer race without shim.
 3. Install final drive assembly on clutch housing.
 4. Install transmission case on clutch housing.
- Tighten transmission case fixing bolts to the specified torque.

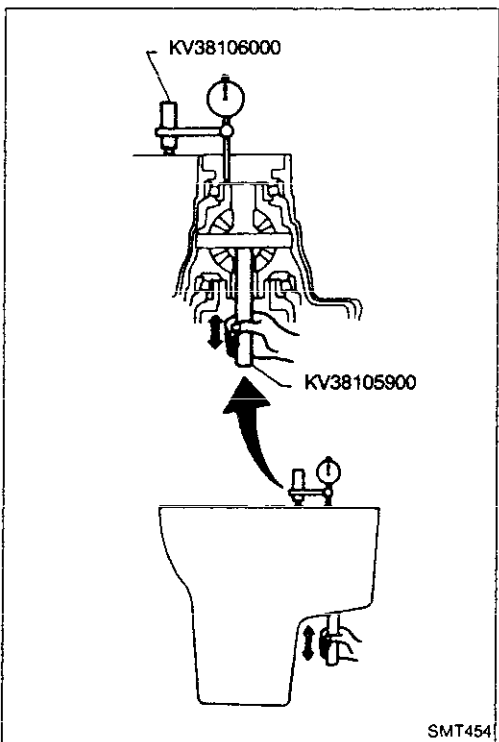

5. Set dial indicator on front end of differential case.
6. Insert Tool all the way into differential side gear.
7. Move Tool up and down and measure dial indicator deflection.
8. Select shim considering bearing preload.

Suitable shim thickness = Dial indicator deflection + Specified bearing preload


Differential side bearing adjusting shims and preload:

Refer to S.D.S.

Bearing preload:

0.25 - 0.30 mm (0.0098 - 0.0118 in)

9. Install selected shim and differential side bearing outer race.
 10. Check differential side bearing turning torque.
 - a. Install final drive assembly on clutch housing.
 - b. Install transmission case on clutch housing.
- Tighten transmission case fixing bolts to the specified torque.

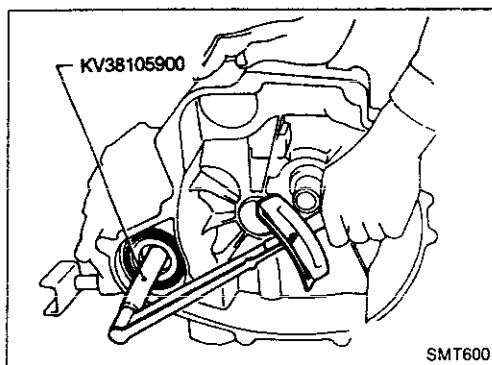Differential Side Bearing Preload (Cont'd)


c. Measure turning torque of final drive assembly.

Turning torque of final drive assembly


(New bearing):

2.9 - 6.9 N·m (30 - 70 kg-cm, 26 - 61 in-lb)


- When old bearing is used again, turning torque will be slightly less than the above.
- Make sure torque is close to the specified range.
- Changes in turning torque of final drive assembly per revolution should be within 1.0 N·m (10 kg-cm, 8.7 in-lb) without binding.

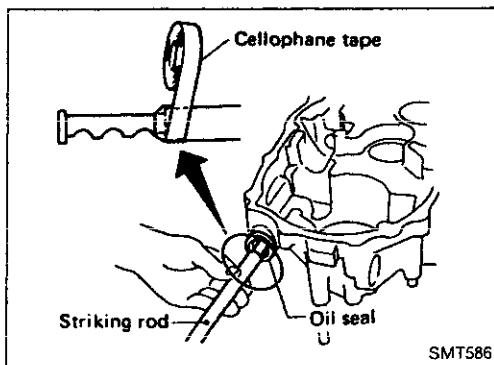

1. Install striking rod, lever and interlock.
- **When inserting striking rod into clutch housing, tape edges of striking rod to avoid damaging oil seal lip.**

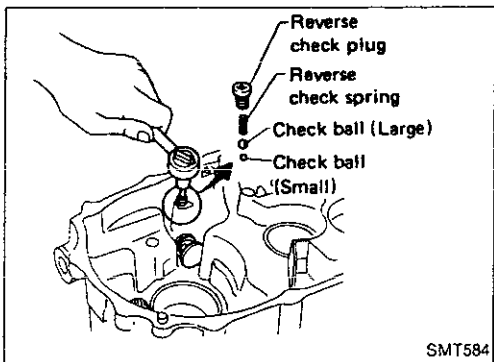

2. Install reverse check sleeve assembly.
3. Install check balls, reverse check spring and check plug.

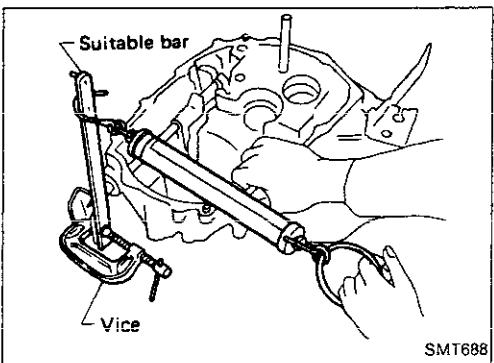

4. Check reverse check force.

Reverse check force:

4.9 - 7.4 N·m (50 - 75 kg-cm, 43 - 65 in-lb)


- If not within specification, select another check plug having a different length and reinstall it.

Available reverse check plugs:


Thickness mm (in)	Part number
7.1 (0.280)	32188-M8002
7.7 (0.303)	32188-M8003
8.3 (0.327)	32188-M8001*
8.9 (0.350)	32188-M8004

*Standard size check plug.


5. Install selected reverse check plug.
- Apply locking sealant to thread of plug before installing it.**

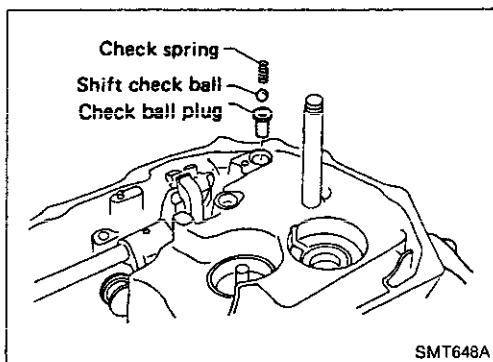


6. Install check ball plug, shift check ball and check spring.
7. Install oil pocket.

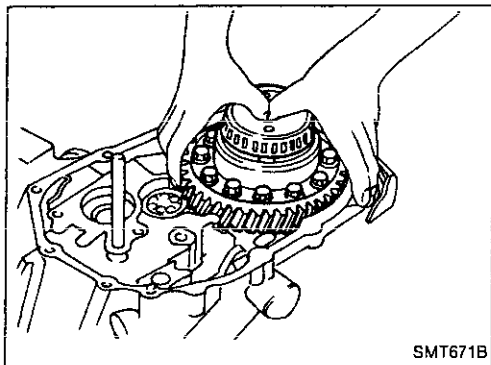


8. Install gear components onto clutch housing.
- a. Install final drive assembly.

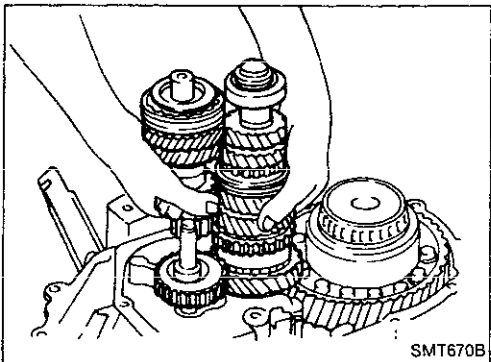


- b. Install input shaft assembly with bearing retainer, mainshaft assembly and reverse idler gear.
- Be careful not to damage oil seal lip with splines of input shaft while shaft is being inserted into clutch housing.
- Be careful not to damage oil channel when inserting mainshaft into clutch housing.

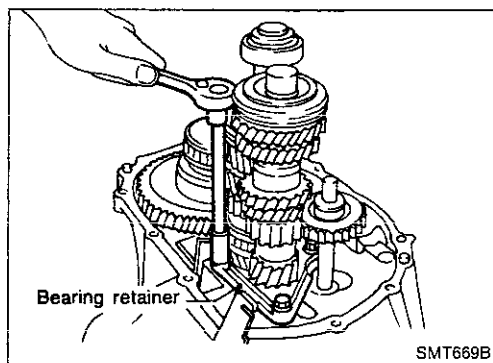


- c. Install input shaft front bearing retainer.

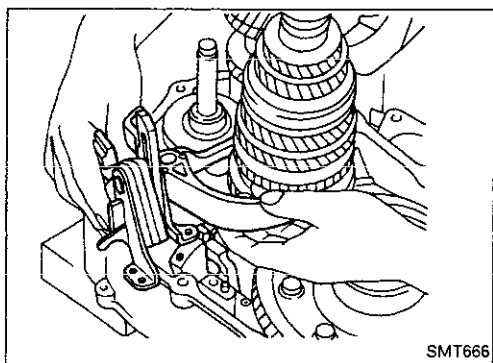

9. Apply grease to shifter caps, then install it to control bracket. Install control bracket with 1st & 2nd shift fork.

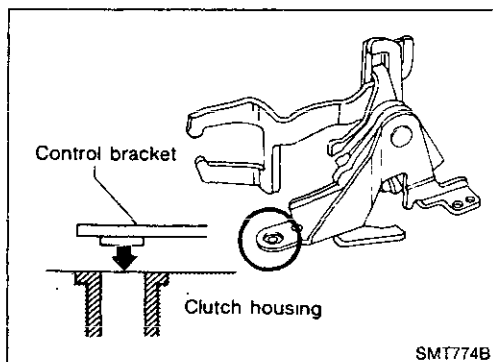


- When installing control bracket on clutch housing, ensure protrusion beneath bracket is correctly seated.
10. Install 3rd & 4th and 5th shift forks.

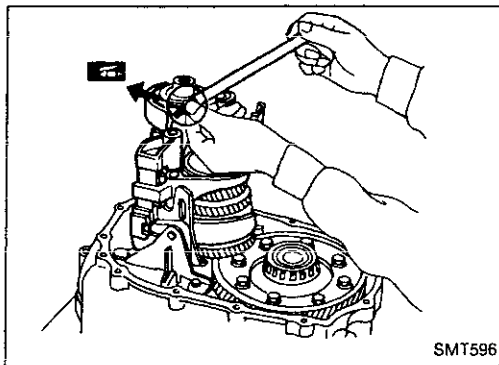


11. Insert fork shaft.

- **Apply multi-purpose grease to support spring before installing.**


12. Install reverse idler spacer.

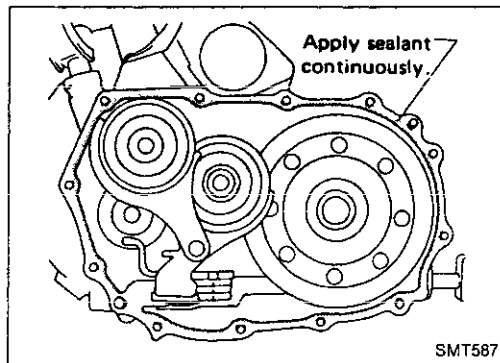


13. Apply recommended sealant to mating surface of clutch housing.

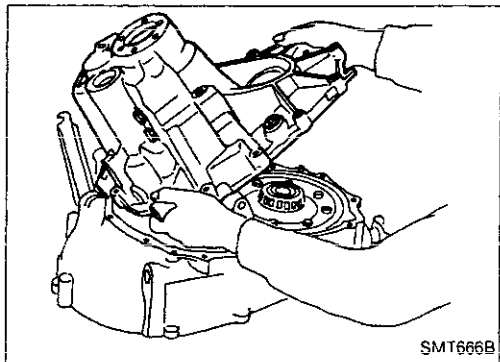

14. Install transmission case on clutch housing.

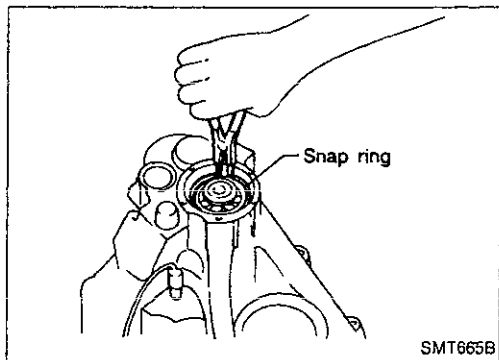

15. Install mainshaft front bearing snap ring.

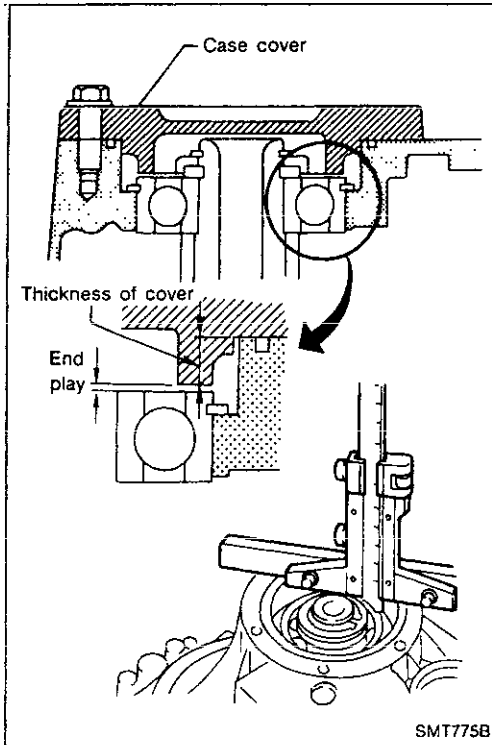

16. Check mainshaft bearing end play.


Mainshaft bearing end play:

0 - 0.1 mm (0 - 0.004 in)

- Make sure that bearing is properly seated. If not, tap main shaft end with a rubber hammer.
- If not within specification, select another case cover having a different thickness.

Available case covers:


Refer to S.D.S.

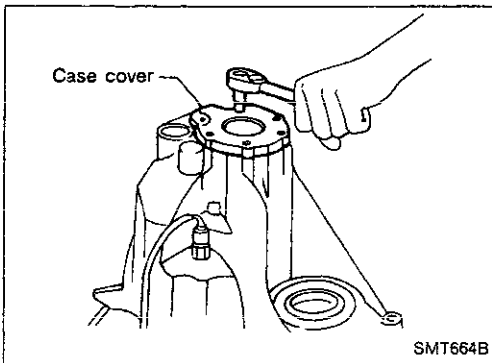

17. Install O-ring and case cover on transmission case.

Apply recommended sealant to mating surface of transmission case.

Case Components

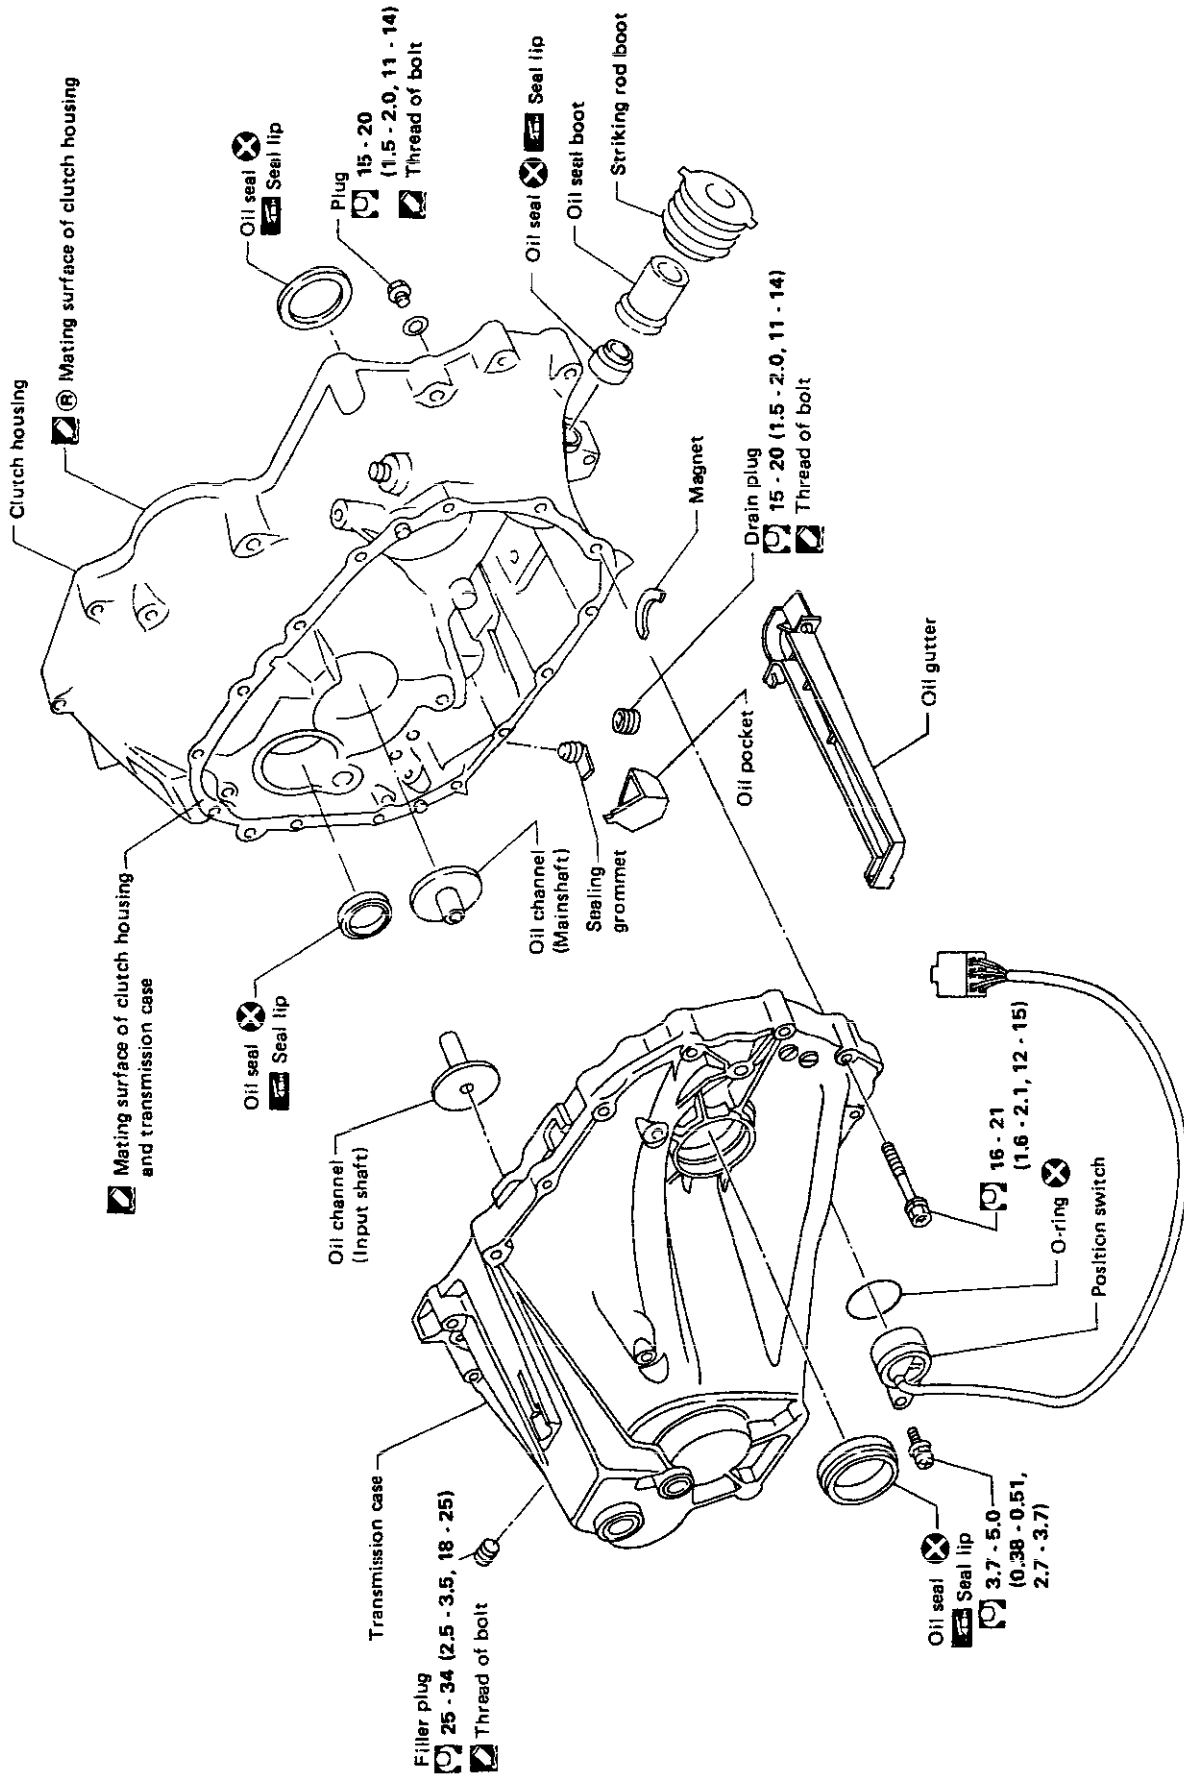


Ⓡ : Apply recommended sealant.
 (Nissan genuine part: KP510-00150 or equivalent)
 [N] : N·m (kg·m, ft·lb)

MT-70

SMT515B


Gear Components — 4WD

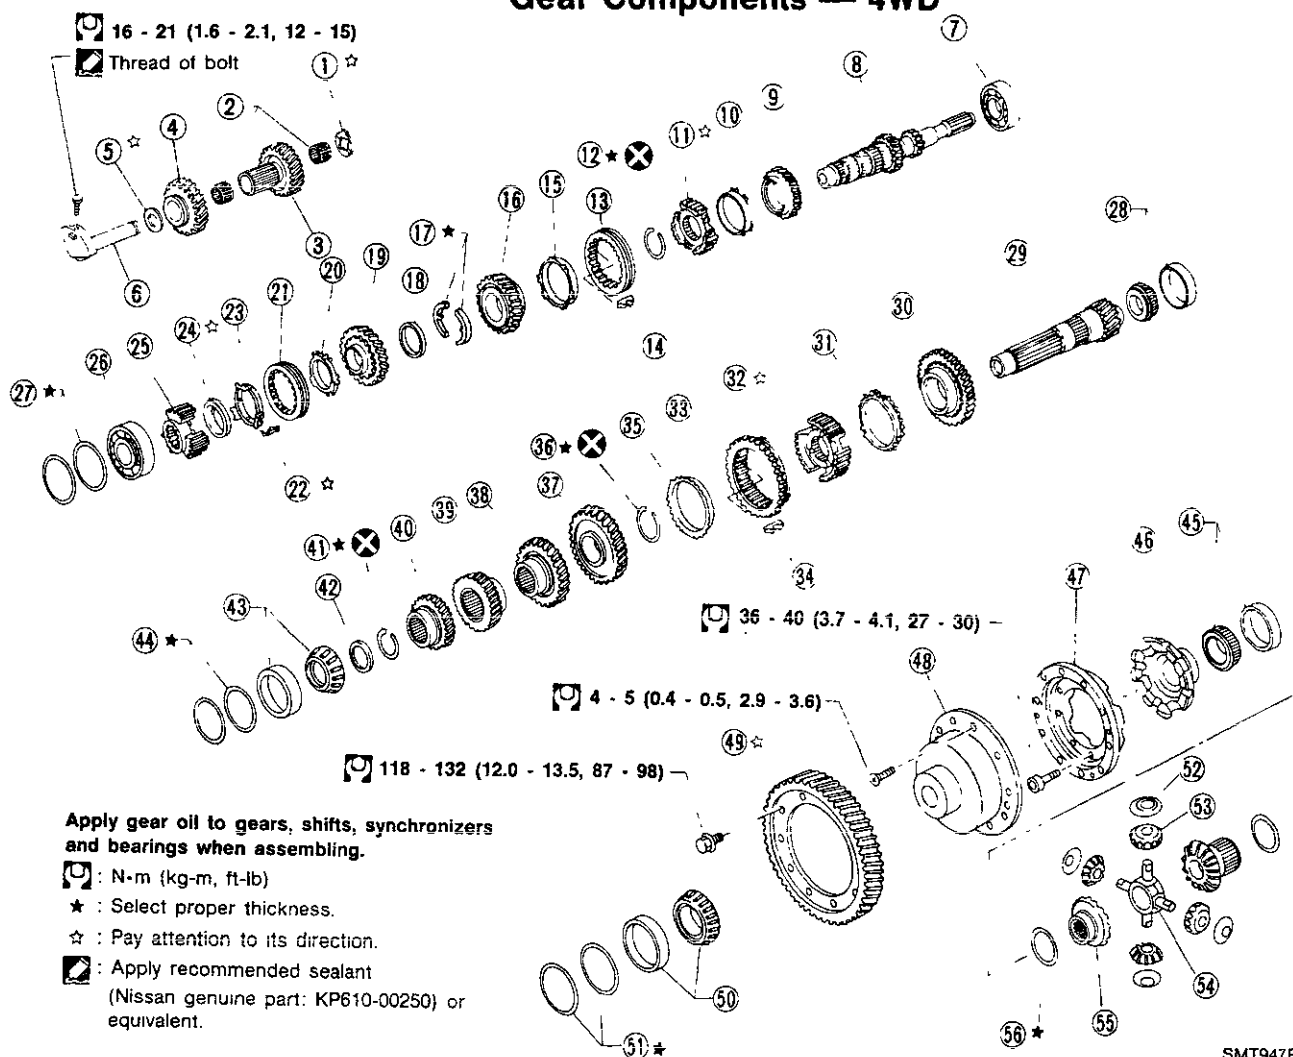

- | | | |
|------------------------------|--|---|
| ① Thrust washer | ②① Coupling sleeve | ③⑨ 4th main gear |
| ② Needle bearing | ②② Insert spring | ④⑩ 5th main gear |
| ③ Reverse idler gear | ②③ Reverse baulk ring | ④① Snap ring |
| ④ Reverse idler gear | ②④ Reverse synchronizer cone | ④② Thrust washer |
| ⑤ Thrust washer | ②⑤ 5th synchronizer hub | ④③ Mainshaft rear bearing |
| ⑥ Reverse idler shaft | ②⑥ Input shaft rear bearing | ④④ Mainshaft bearing adjusting shim |
| ⑦ Input shaft front bearing | ②⑦ Input shaft bearing adjusting shim | ④⑤ Differential side bearing |
| ⑧ Input shaft | ②⑧ Mainshaft front bearing | ④⑥ Differential case |
| ⑨ 3rd input gear | ②⑨ Mainshaft | ④⑦ Differential case |
| ⑩ 3rd baulk ring | ③⑩ 1st main gear | ④⑧ Viscous coupling |
| ⑪ 3rd & 4th synchronizer hub | ③① 1st baulk ring | ④⑨ Final gear |
| ⑫ Snap ring | ③② 1st & 2nd synchronizer hub | ⑤⑩ Differential side bearing |
| ⑬ Coupling sleeve | ③③ Reverse main gear (Coupling sleeve) | ⑤① Differential side bearing adjusting shim |
| ⑭ Insert spring | ③④ Insert spring | ⑤② Thrust washer |
| ⑮ 4th baulk ring | ③⑤ 2nd baulk ring | ⑤③ Pinion mate gear |
| ⑯ 4th input gear | ③⑥ Snap ring | ⑤④ Pinion mate shaft |
| ⑰ Input shaft thrust washer | ③⑦ 2nd main gear | ⑤⑤ Side gear |
| ⑱ Thrust washer ring | ③⑧ 3rd main gear | ⑤⑥ Thrust washer |
| ⑲ 5th input gear | | |
| ⑳ 5th baulk ring | | |

SMT947B


Shift Control Components

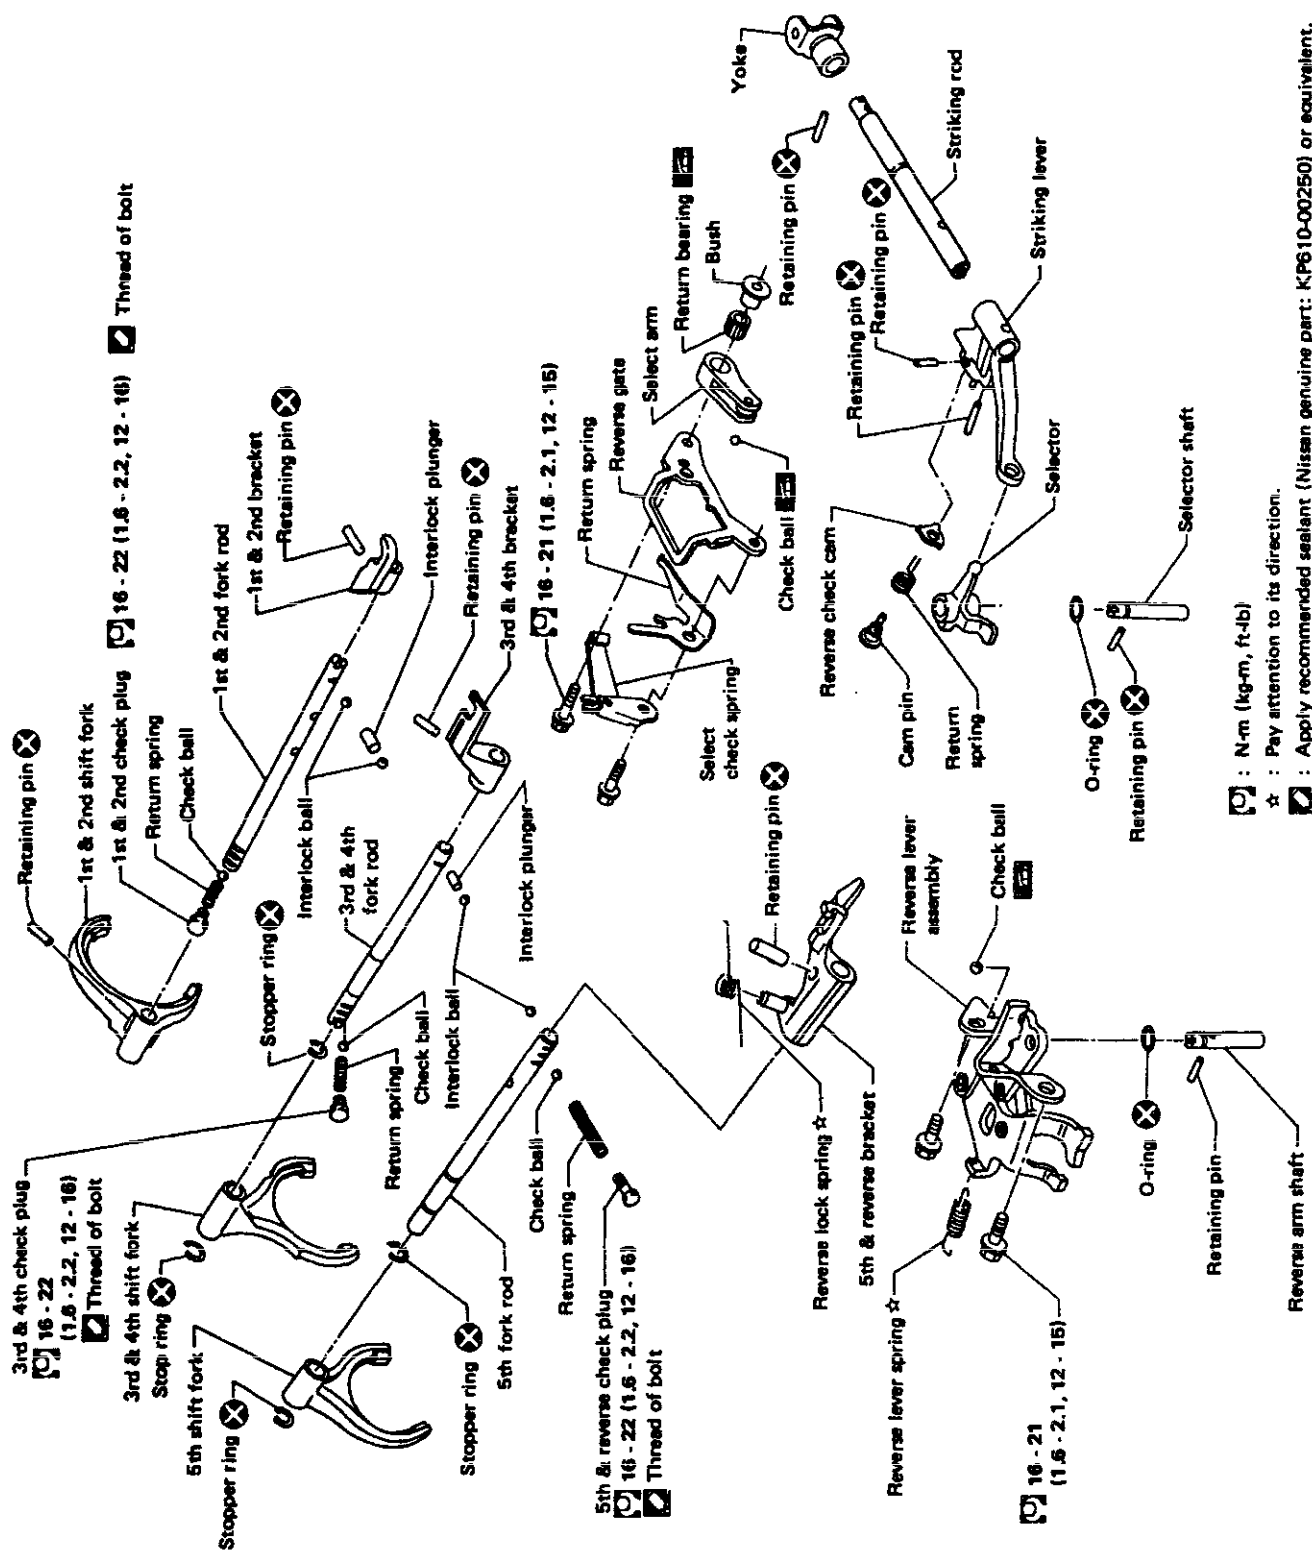


: N-m (kg-m, ft-lb)

☆ : Pay attention to its direction.


• Apply recommended sealant (Nissan genuine part: KP610-00250) or equivalent.

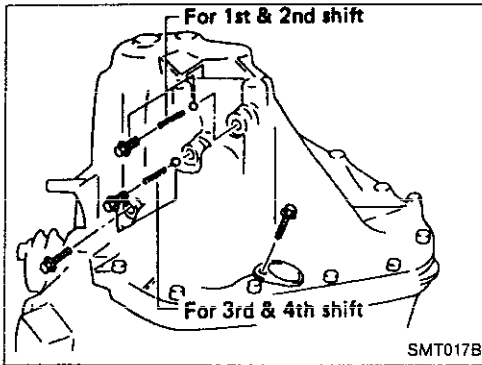


1. Before removing transmission case, remove bolts and plugs as shown left.
2. Remove transmission case.

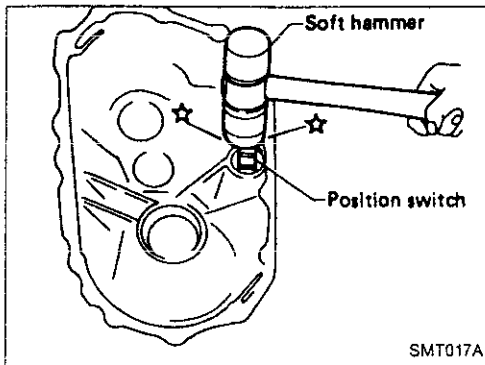


3. Remove position switch.

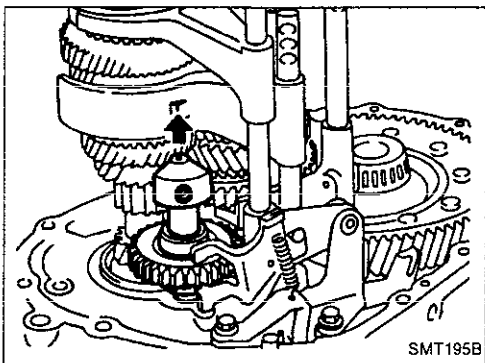


4. Mesh 4th gear, and then remove reverse idler shaft and reverse idler gear.

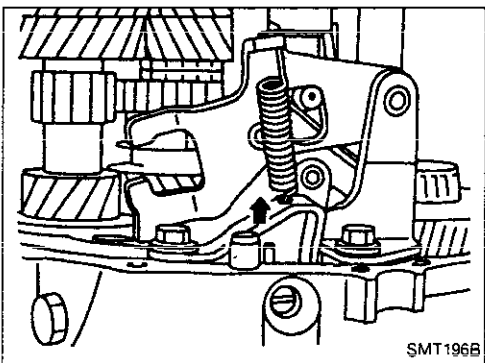


5. Pull out retaining pin from clutch housing.

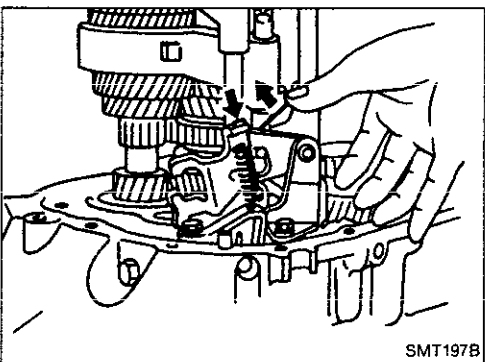


6. Remove reverse lever spring and reverse lock spring from reverse lever assembly.

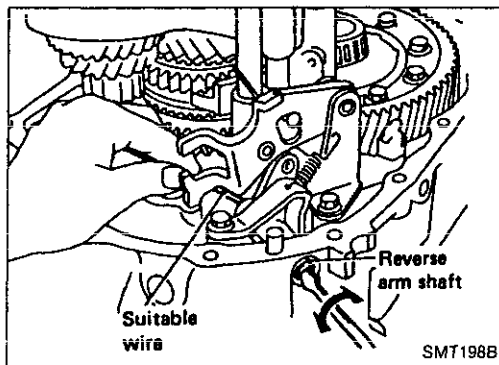


7. Remove reverse arm shaft while rotating it.

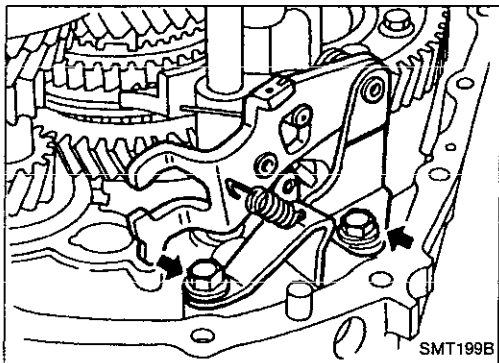

8. Remove reverse lever assembly.

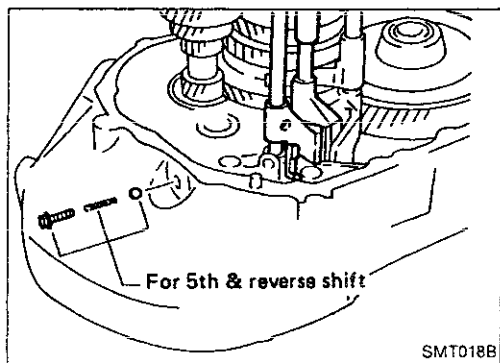


9. Remove 5th & reverse check plug, spring and ball.

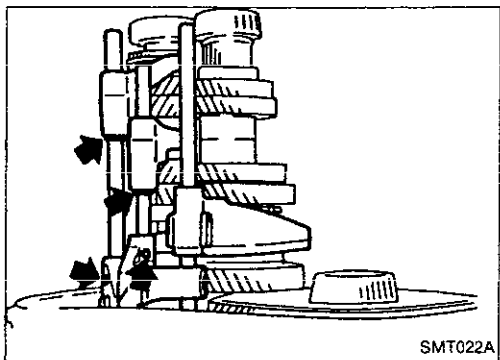


10. Remove stopper rings and retaining pins from 5th & reverse and 3rd & 4th fork rods.


11. Remove 5th & reverse and 3rd & 4th fork rods. Then remove forks and brackets.

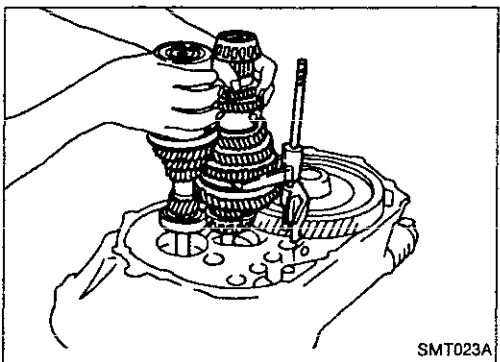


12. Remove both input and mainshafts with 1st & 2nd fork and fork rod as a set.

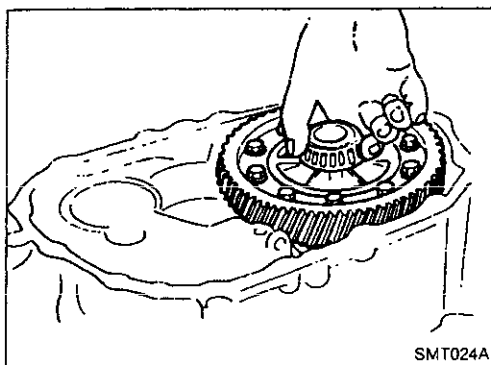



13. Remove final drive assembly.

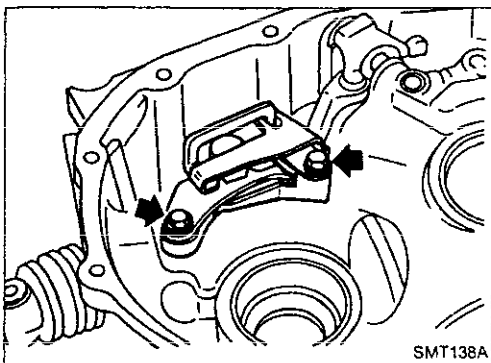


14. Remove reverse check assembly.

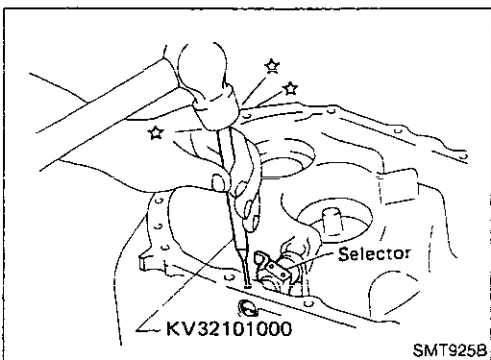






15. Remove retaining pin and detach the selector.

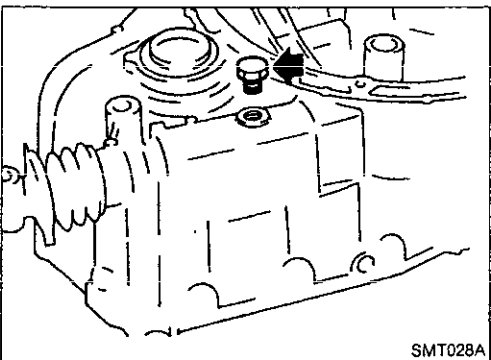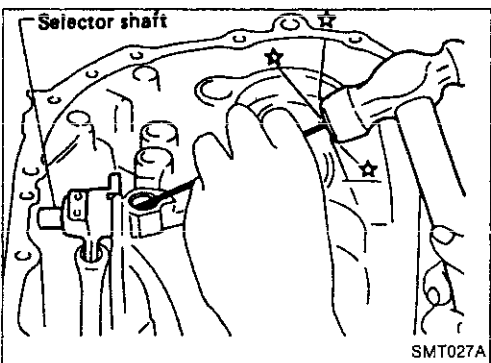

16. Remove plug for convenience in removing retaining pin which holds striking lever to striking rod.

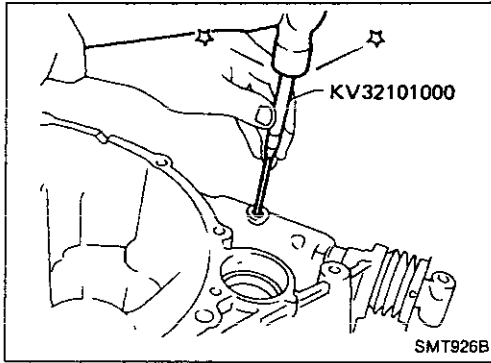

17. Remove retaining pin and then withdraw striking lever and striking rod.

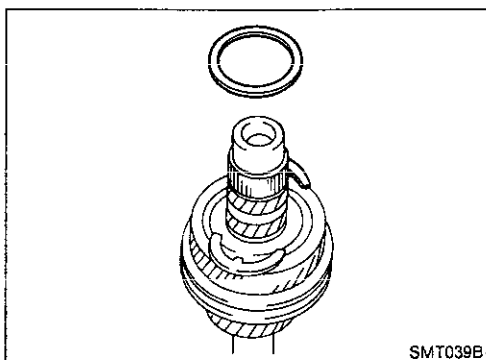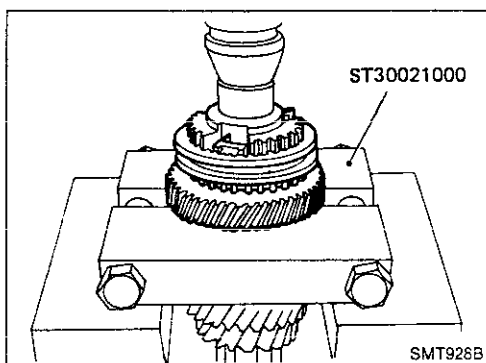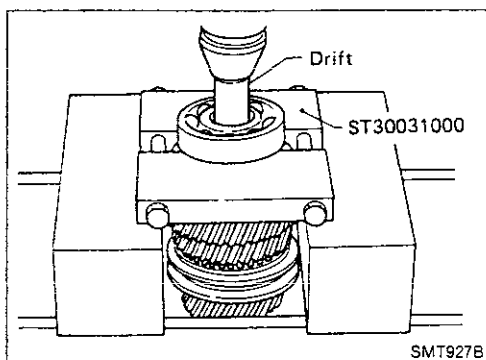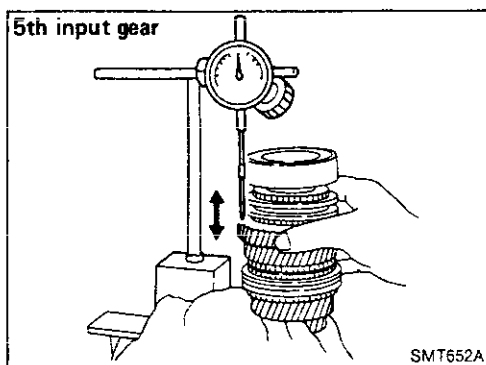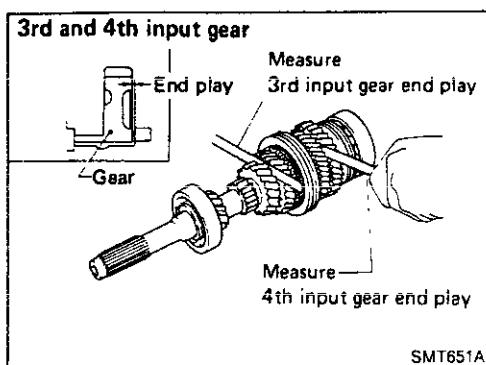

Input Shaft and Gears

DISASSEMBLY

1. Before disassembly, check 3rd, 4th and 5th input gear end plays.

Gear end play

Gears	End play mm (in)
3rd input gear	0.23 - 0.43 (0.0091 - 0.0169)
4th input gear	0.25 - 0.55 (0.0098 - 0.0217)
5th input gear	0.23 - 0.48 (0.0091 - 0.0189)

- If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of snap ring and thrust washer — Refer to "ASSEMBLY".


2. Remove input shaft rear bearing.

3. Remove 5th & reverse synchronizer and 5th input gear.


4. Remove thrust washer ring, thrust washers and 4th input gear.

Input Shaft and Gears (Cont'd)


5. Remove snap ring.

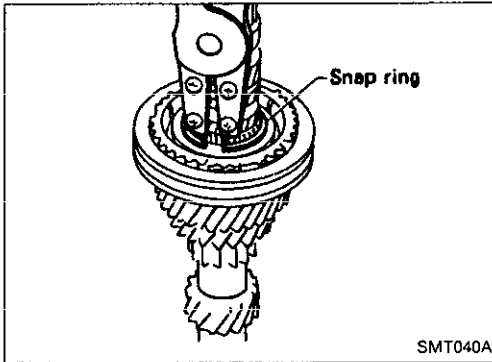

6. Remove 3rd & 4th synchronizer and 3rd input gear.

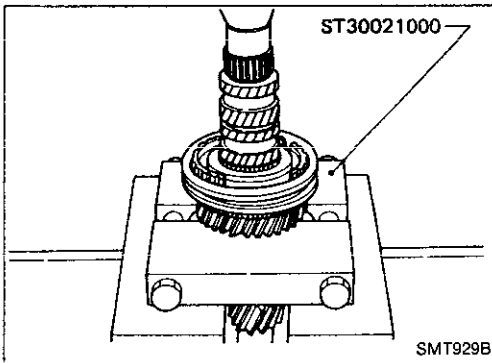


7. Remove input shaft front bearing.

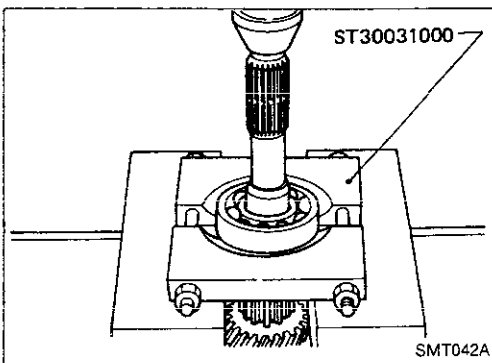

INSPECTION


Gear and shaft

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

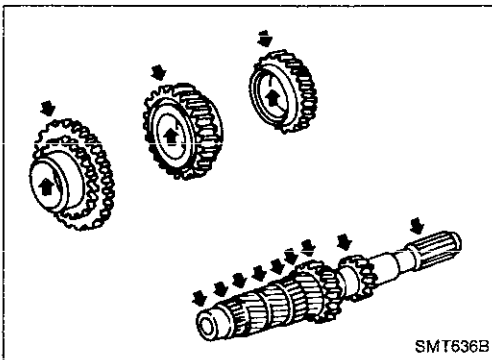


Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for wear or deformation.

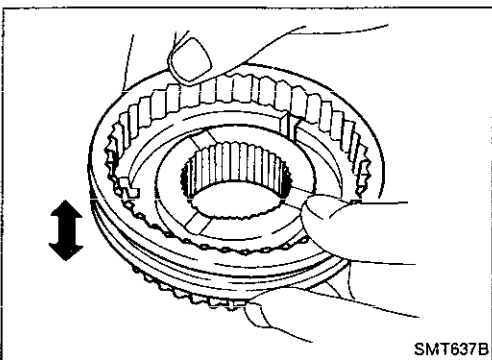

Input Shaft and Gears (Cont'd)

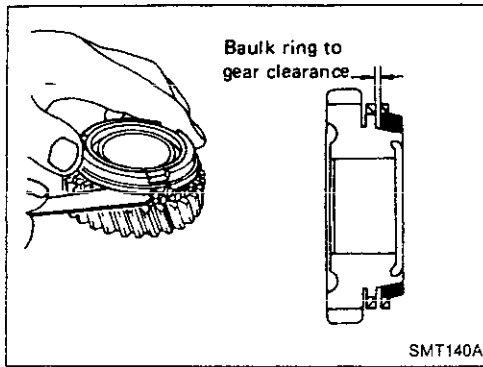

- Measure clearance between baulk ring and gear. (4th and 5th)


Clearance between baulk ring and gear:

Standard

1.0 - 1.35 mm (0.0394 - 0.0531 in)

Wear limit

0.7 mm (0.028 in)

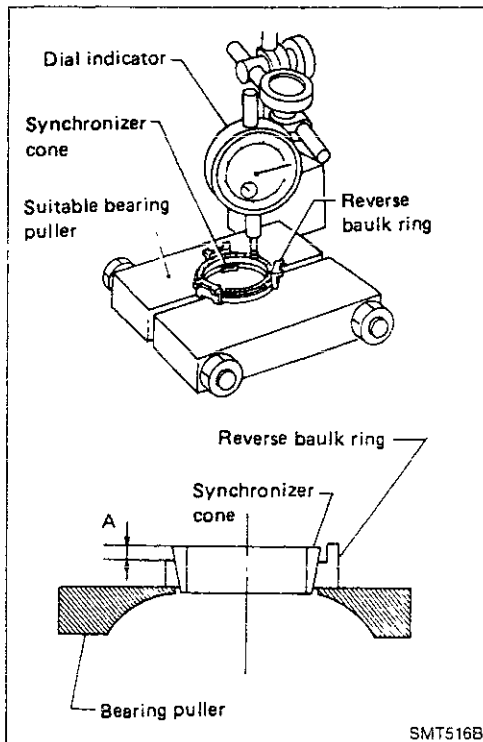


- Measure wear of reverse baulk ring.
- a. Place reverse baulk ring on Tool and then place reverse synchronizer cone on reverse baulk ring.

Make sure projection of synchronizer cone is positioned over the recess on suitable bearing puller.

- b. While holding reverse synchronizer cone against reverse baulk ring as firmly as possible, measure dimension "A" with dial indicator.

Wear limit: 1.2 mm (0.047 in)


- c. If dimension "A" is smaller than the wear limit, replace baulk ring.

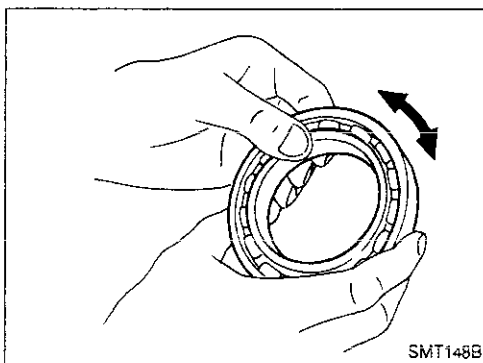

Bearing



- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

ASSEMBLY

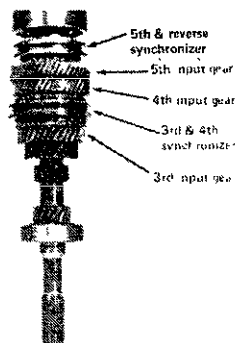

Input Shaft and Gears (Cont'd)

1. Place inserts in three grooves on coupling sleeve (3rd & 4th synchronizer).

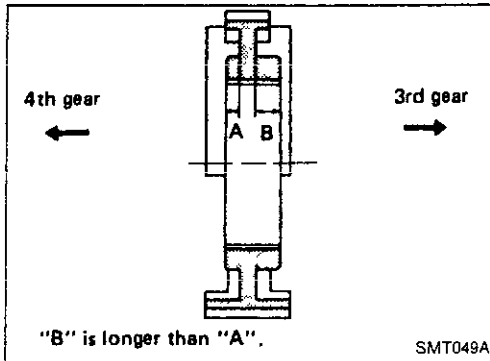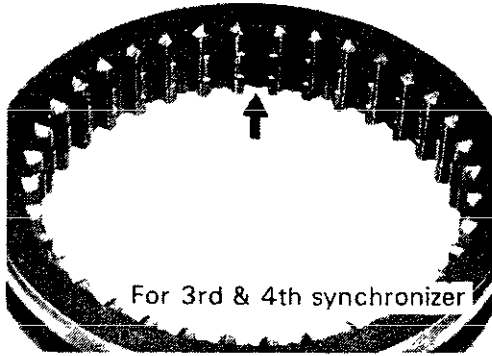



2. Install 3rd input gear and 3rd baulk ring.
3. Press on 3rd & 4th synchronizer hub.
4. Select proper snap ring of 3rd & 4th synchronizer hub to minimize clearance of groove, and then install it.

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Snap ring of 3rd & 4th synchronizer hub:

Refer to S.D.S.

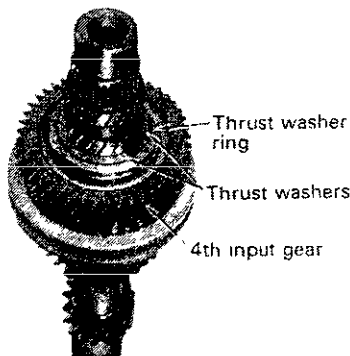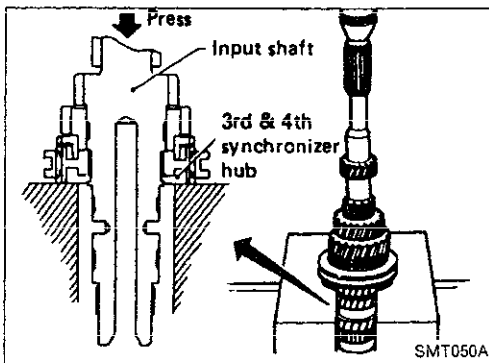

5. Install 4th input gear.
6. Select proper thrust washers to minimize clearance of groove.


Then install them and thrust washer ring.

Allowable clearance of groove:

0 - 0.06 mm (0 - 0.0024 in)


Input shaft thrust washer:

Refer to S.D.S.

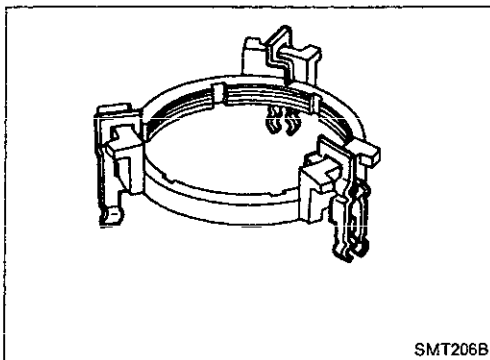


7. Install 5th & reverse synchronizer assembly.
 - a. Hook insert springs on reverse baulk ring.


Input Shaft and Gears (Cont'd)

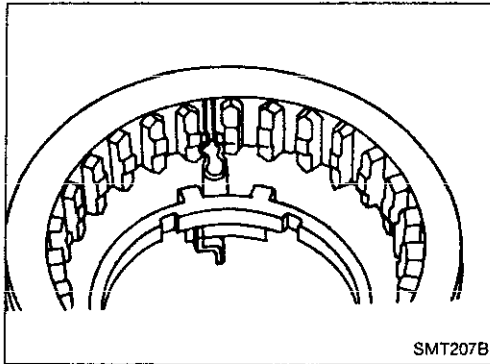


- b. Install insert springs with reverse baulk ring onto coupling sleeve.
- **Pay attention to position of insert springs.**
- c. Place 5th baulk ring on 5th input gear.
- d. Install reverse synchronizer cone on reverse baulk ring.

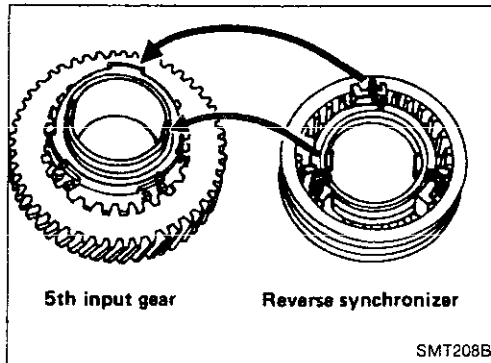


- e. Place reverse synchronizer assembly on 5th input gear.
- **Mesh recesses of 5th input gear with projections of reverse synchronizer cone.**
- **Put insert spring mounts on reverse baulk ring upon those on 5th baulk ring.**

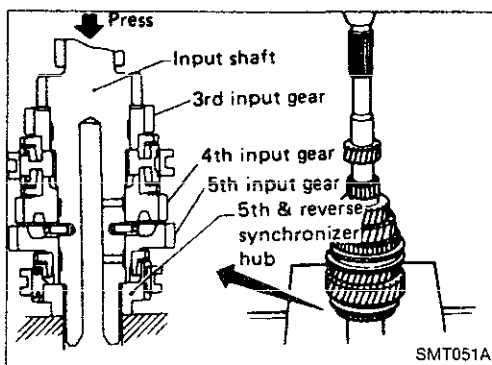


- f. Press on 5th & reverse synchronizer assembly with 5th input gear.

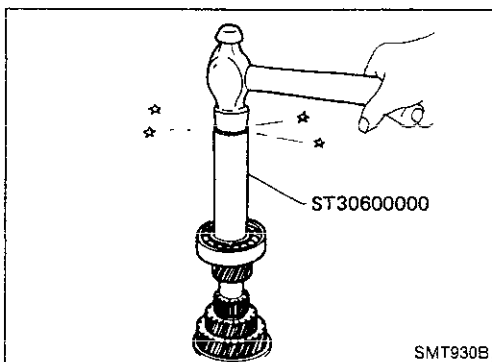

- 8. Install input shaft front and rear bearings.
- 9. Measure gear end play as the final check — Refer to "DISASSEMBLY".

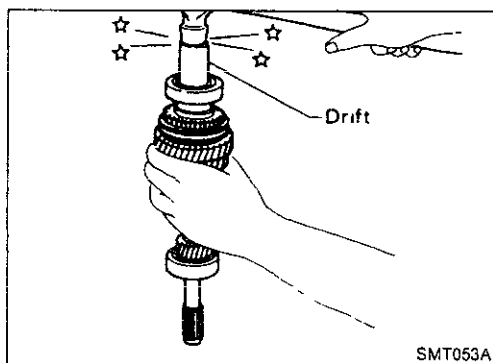

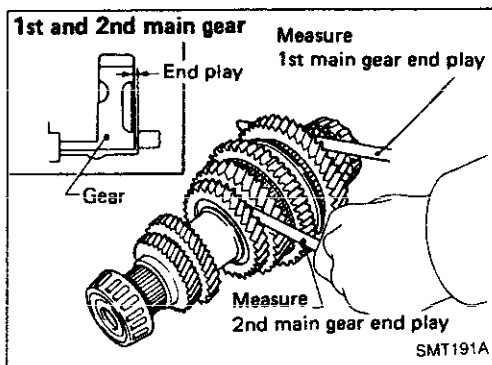

Mainshaft and Gears

DISASSEMBLY


1. Before disassembly, check 1st and 2nd main gear end plays.

Gear end play


Gears	End play mm (in)
1st main gear	0.23 - 0.43 (0.0091 - 0.0169)
2nd main gear	0.23 - 0.58 (0.0091 - 0.0228)

If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of snap ring — Refer to "ASSEMBLY".


2. Press out mainshaft rear bearing.

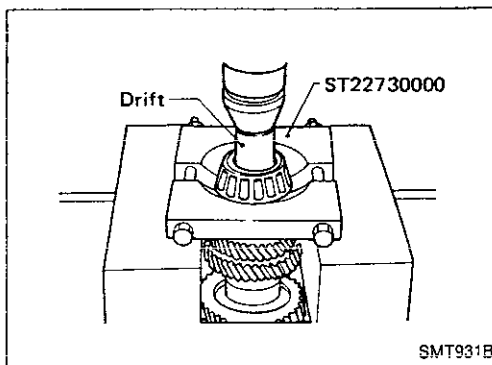


3. Remove thrust washer and snap ring.

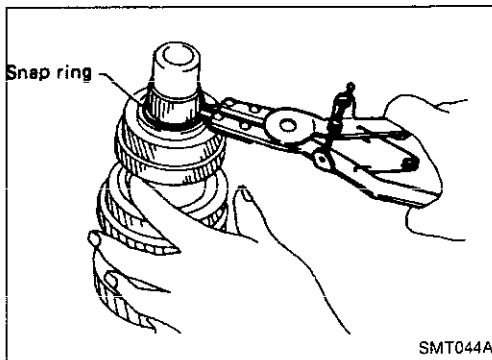

4. Press out 5th main gear and 4th main gear.

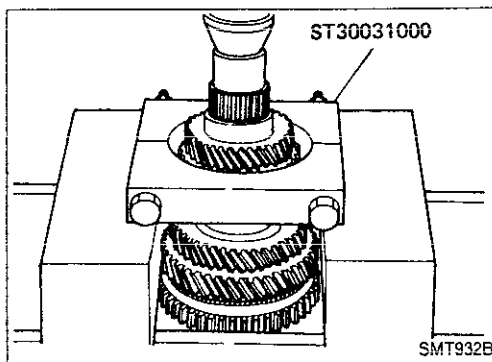


5. Press out 3rd main gear and 2nd main gear.

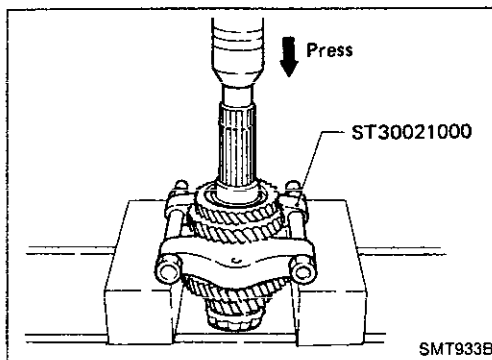


Mainshaft and Gears (Cont'd)


6. Remove snap ring.

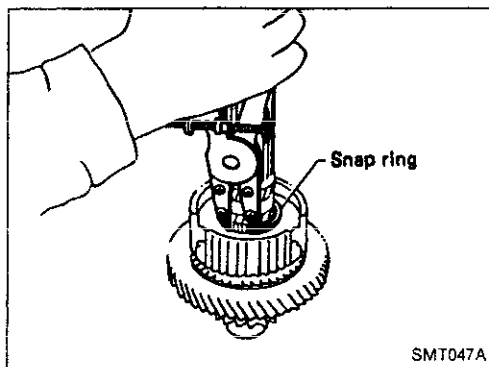

7. Remove 1st & 2nd synchronizer hub and 1st main gear.

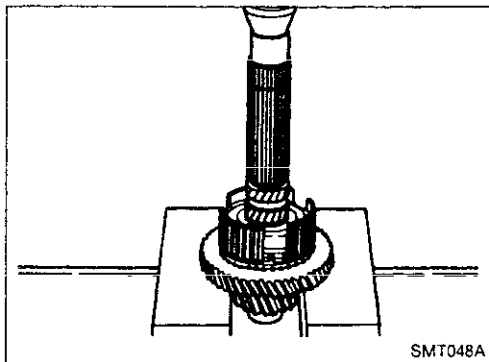


8. Remove mainshaft front bearing.

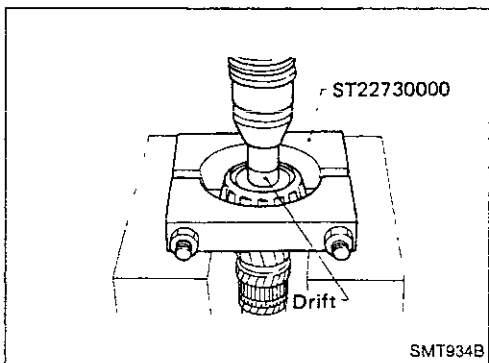

INSPECTION


Gear and shaft

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

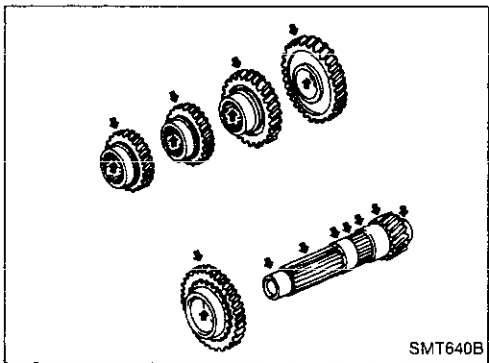

Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for deformation.

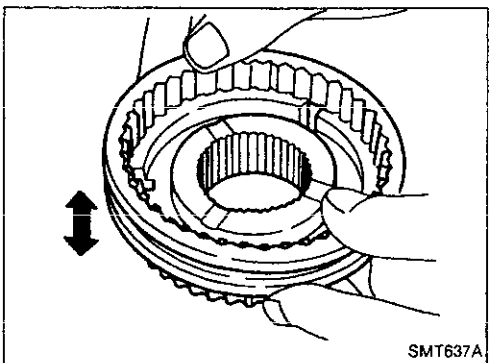

Mainshaft and Gears (Cont'd)

- Measure clearance between baulk ring and gear (1st).


Clearance between baulk ring and gear:

Standard

1.0 - 1.35 mm (0.0394 - 0.0531 in)

Wear limit

0.7 mm (0.028 in)

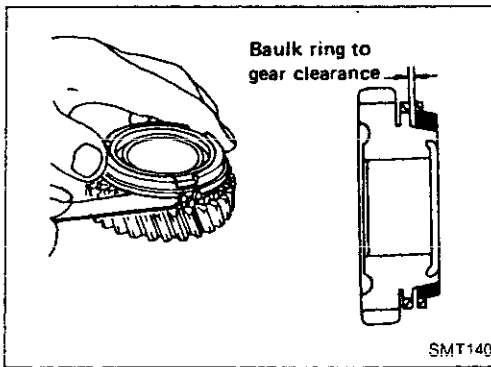

- Measure wear of 2nd baulk rings.
 - a. Place baulk rings in position on synchronizer cone.
 - b. While holding baulk ring against synchronizer cone as far as it will go, measure dimensions "A" and "B".

Standard:



A 0.6 - 0.8 mm (0.024 - 0.031 in)

B 0.6 - 1.1 mm (0.024 - 0.043 in)

Wear limit:

0.2 mm (0.008 in)


- c. If dimension "A" or "B" is smaller than the wear limit, replace baulk ring.

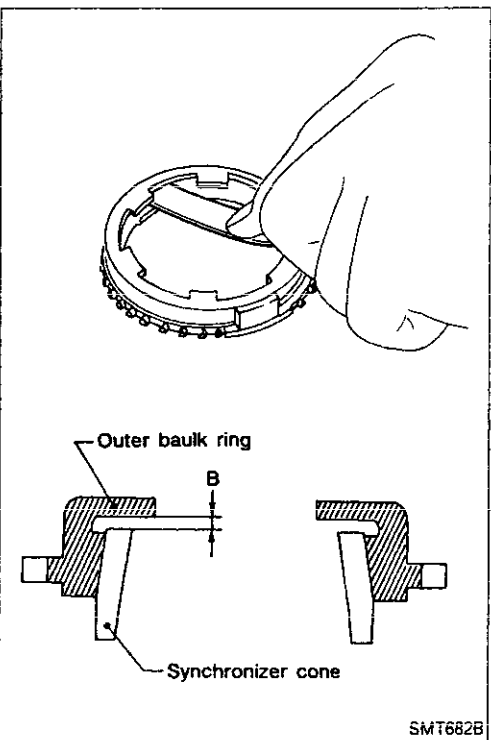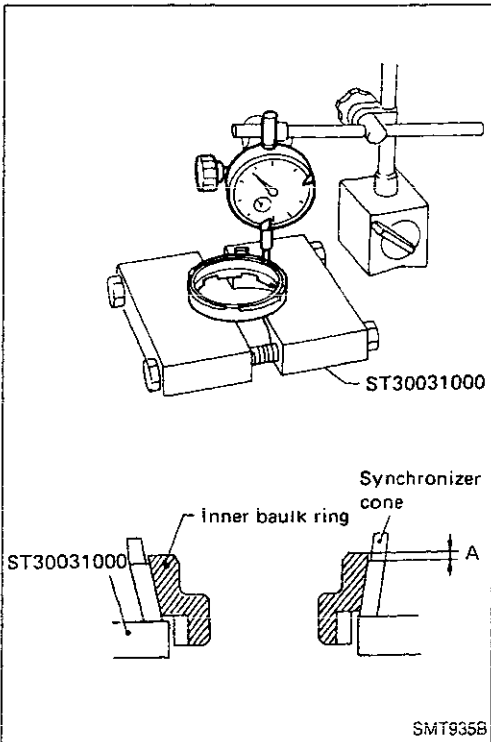



Mainshaft and Gears (Cont'd)

Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- When replacing tapered roller bearing, replace outer and inner race as a set.

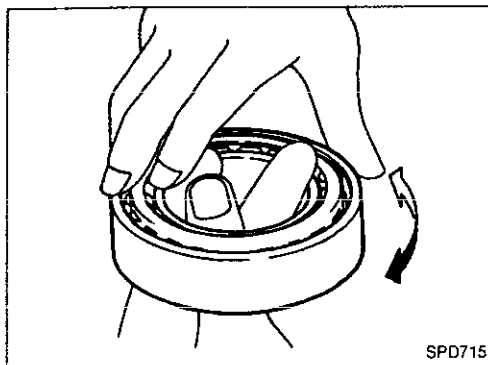

ASSEMBLY

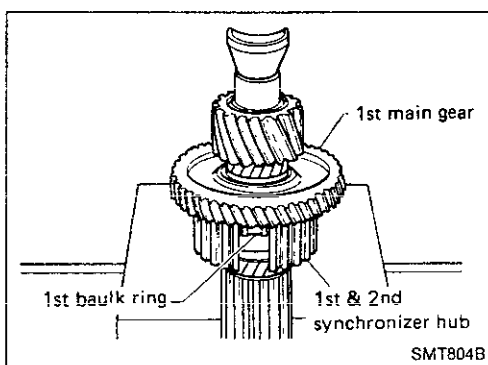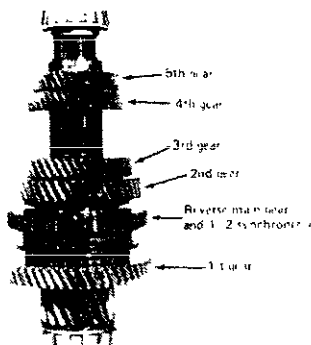

1. Press on 1st main gear, 1st baulk ring and 1st & 2nd synchronizer hub.

- Pay attention to direction of 1st & 2nd synchronizer hub.



2. Select proper snap ring of 1st & 2nd synchronizer hub to minimize clearance of groove and then install it.

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Snap ring of 1st & 2nd synchronizer hub:

Refer to S.D.S.

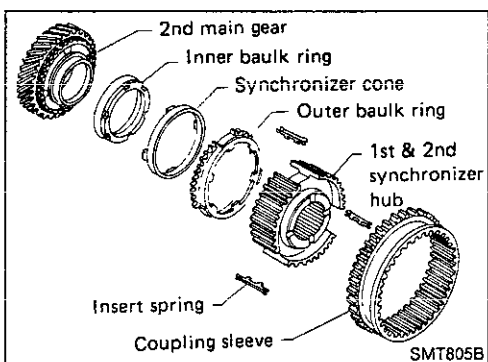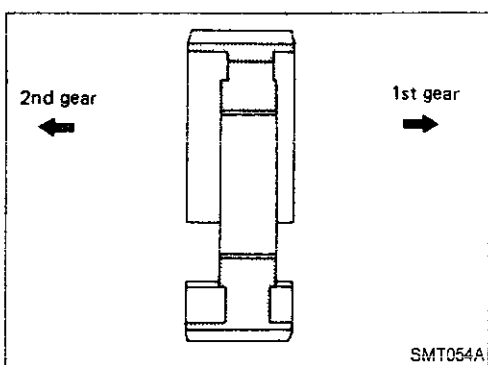


3. Install 2nd synchronizer cone, inner & outer baulk rings, insert springs and 1st & 2nd coupling sleeve.


4. Install 2nd main gear.

- Ensure four protrusions of 2nd synchronizer cone are set in holes of 2nd main gear.


Mainshaft and Gears (Cont'd)

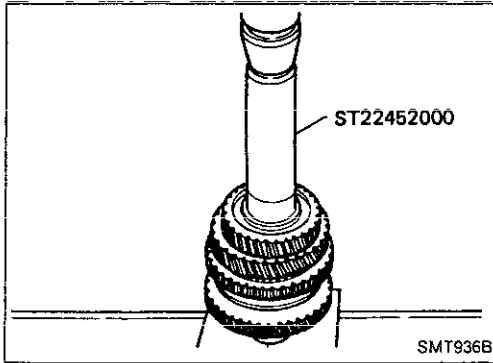

5. Press on 3rd main gear.

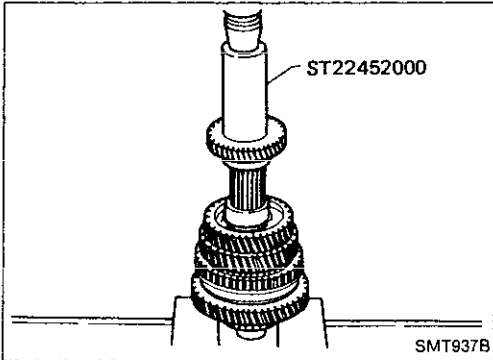

6. Press on 4th main gear.

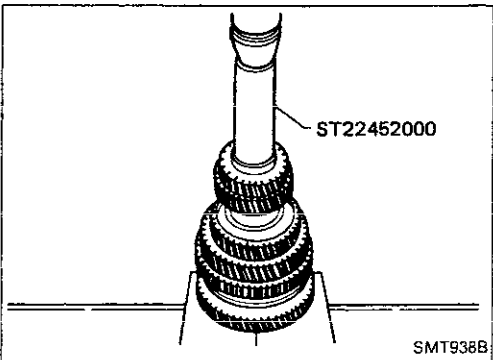

7. Press on 5th main gear.


8. Select proper snap ring of 5th main gear to minimize clearance of groove and then install it.

Allowable clearance of groove:


0 - 0.15 mm (0 - 0.0059 in)

Snap ring of 5th main gear:

Refer to S.D.S.

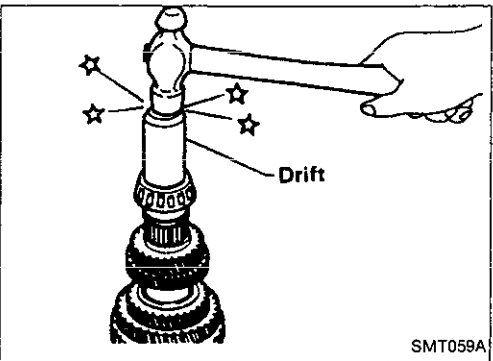


9. Press on thrust washer and press on mainshaft rear bearing.

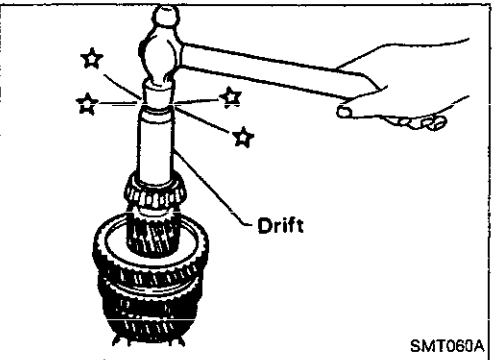


10. Press on mainshaft front bearing.


11. Measure gear end play as the final check — Refer to "Disassembly".

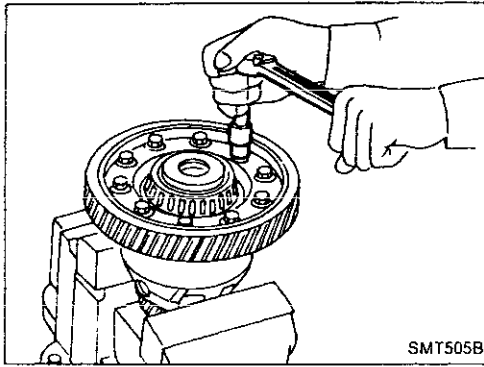**Final Drive (Center differential)****DISASSEMBLY**


1. Remove final gear.

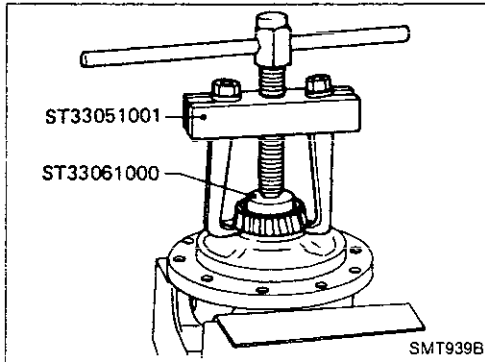

2. Press out differential side bearing.

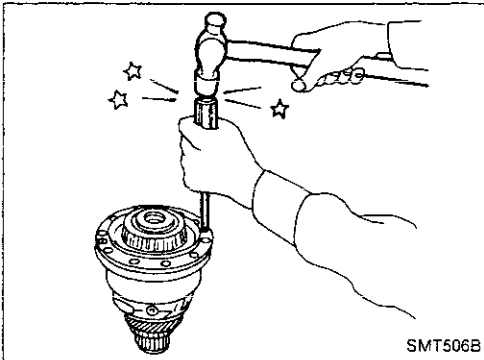

3. Remove viscous coupling.

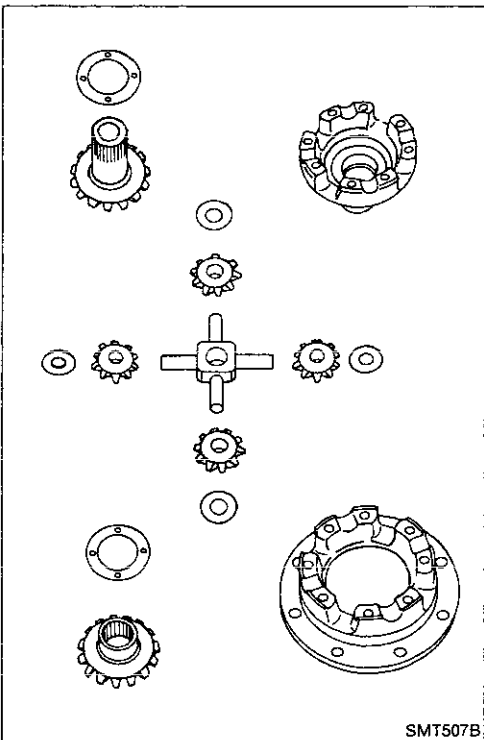


4. Disassemble differential case.

Final Drive (Center differential) (Cont'd)

INSPECTION


Viscous coupling

- Check case for cracks.
- Check silicone oil for leakage.

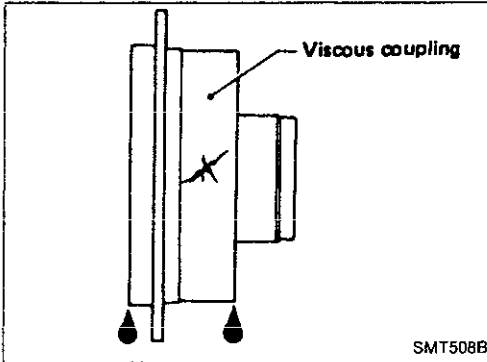

Gear, washer, shaft and case


- Check mating surfaces of differential case, viscous coupling, side gear and pinion mate gear.
- Check washers for wear.

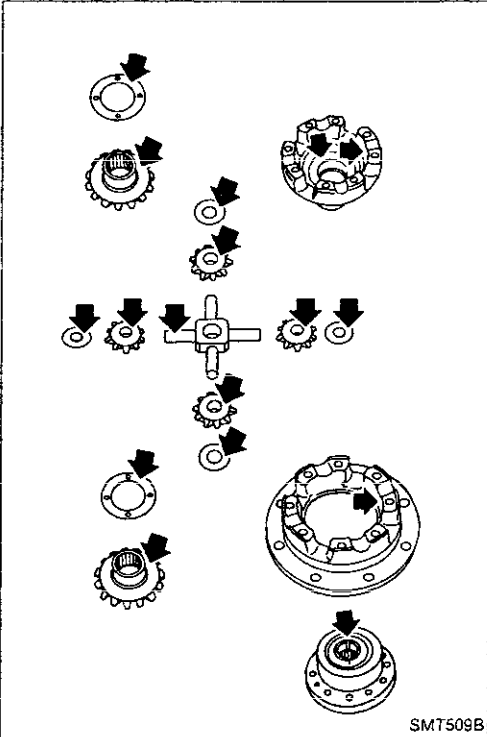

Bearing


- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.


When replacing tapered roller bearing, replace outer and inner race as a set.

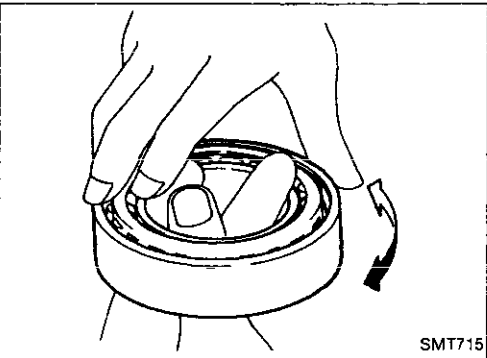


ASSEMBLY

1. Install side gear without thrust washers, pinion mate shaft and pinion mate gear.
2. Install differential case L.H. and R.H.

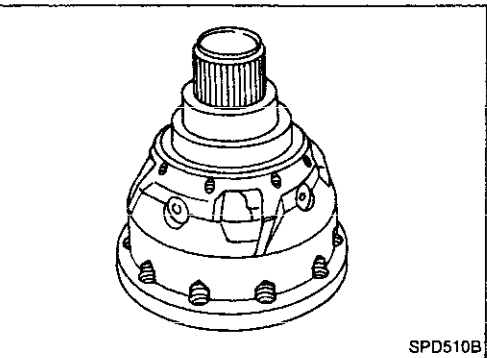


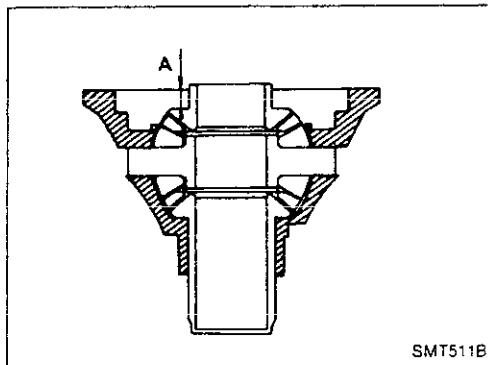Final Drive (Center differential) (Cont'd)**— L.H. side gear —**

3. Measure clearance between side gear and viscous coupling following the procedure.
 - a. Measure dimension A between side gear and differential case.

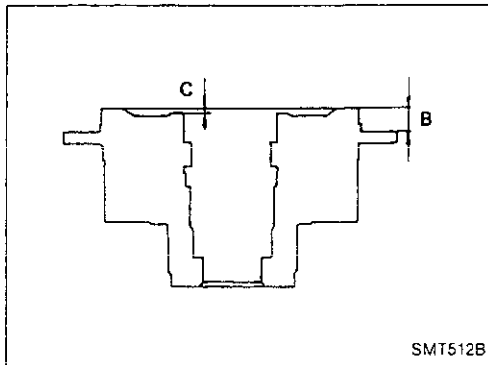

- b. Measure dimension B and C of viscous coupling
Clearance between side gear and viscous coupling with washer (A - B + C):
0.03 - 0.14 mm (0.0012 - 0.0055 in)
- c. Select side gear thrust washer so clearance between side gear and viscous coupling is within specifications.
Side gear thrust washer: Refer to S.D.S.

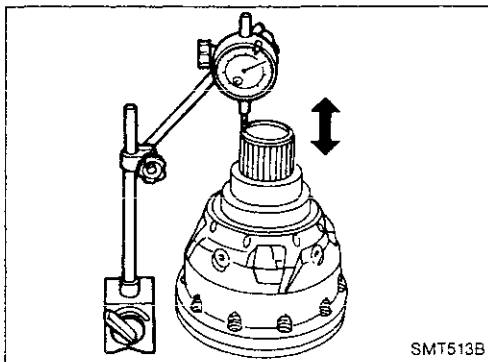**— R.H. side gear —**


3. Measure clearance between side gear and differential case following the procedure.
 - a. Install L.H. side gear thrust washer as priority selected and install differential case assembly.
 - b. Set dial indicator on side gear.
 - c. Move R.H. side gear up and down to measure dial indicator deflection.

Clearance between side gear and differential case with washer:

0.03 - 0.14 mm (0.0012 - 0.0055 in)

- d. Select side gear thrust washer so clearance between side gear and differential case is within specifications.


Side gear thrust washer: Refer to S.D.S.

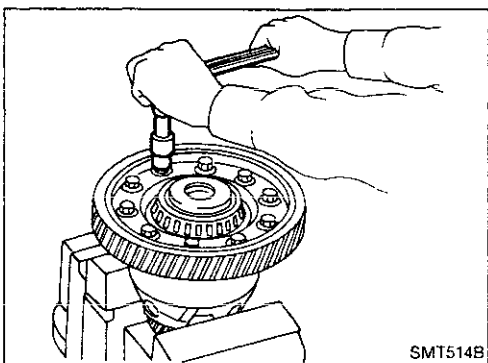

4. Install viscous coupling and final gear.

Final Drive (Center differential) (Cont'd)


5. Press on differential side bearings.

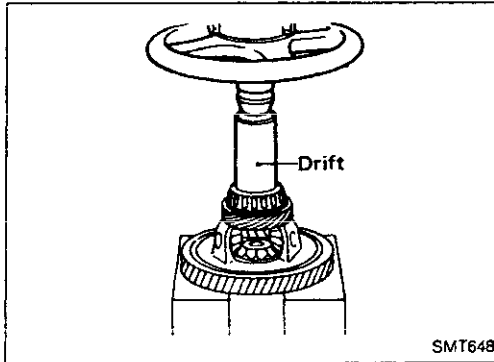

Shift Control Components

INSPECTION


- Check contact surface and sliding surface for wear, scratches, projections or other damage.

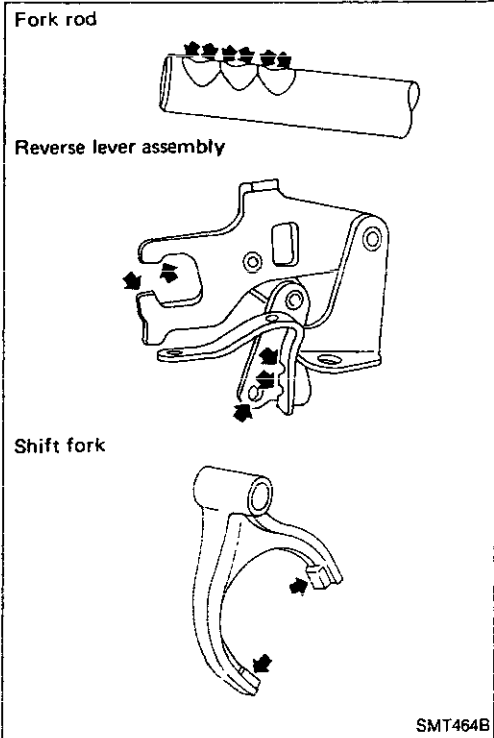


Case Components

REMOVAL AND INSTALLATION

Input shaft oil seal

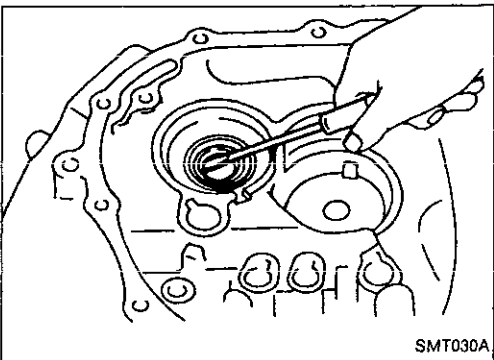


- Apply multi-purpose grease to seal lip of oil seal before installing.

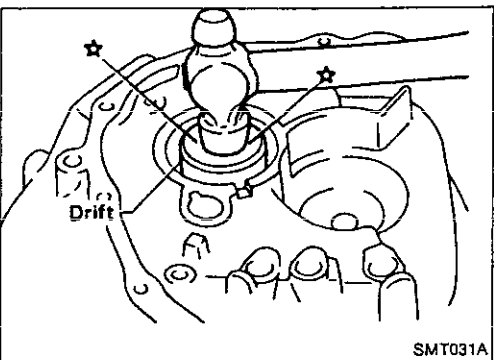

Case Components (Cont'd)

Mainshaft front bearing outer race

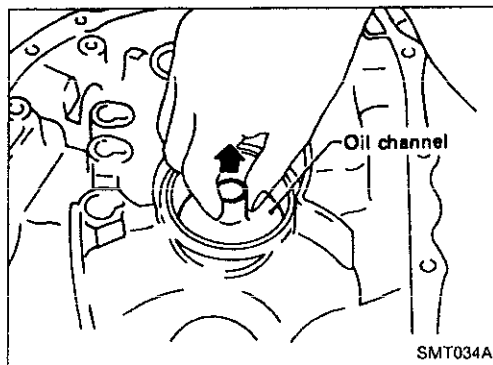

Mainshaft rear bearing outer race — Refer to "ADJUSTMENT".

Differential side bearing outer race — Refer to "ADJUSTMENT".




Input Shaft End Play and Differential Side Bearing Preload

If any of the following parts are replaced, adjust input shaft end play.

- Input shaft
- Input shaft bearing
- Clutch housing
- Transmission case


If any of the following parts are replaced, adjust differential side bearing preload.

- Differential case
- Differential side bearing
- Clutch housing
- Transmission case

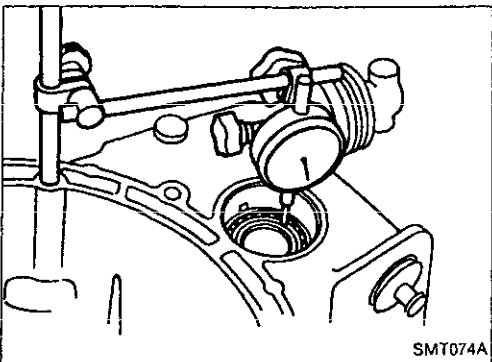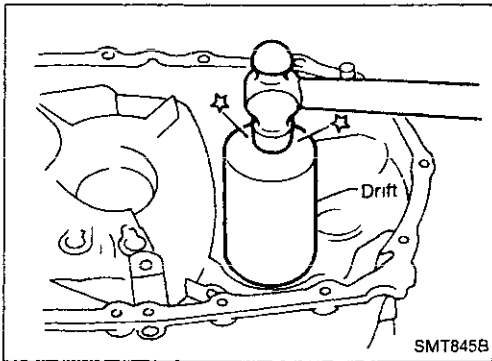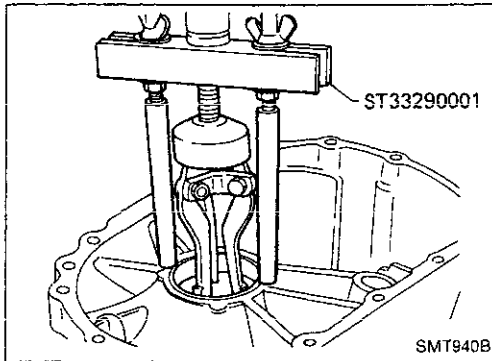


1. Remove differential side bearing outer race (transmission case side) and shim(s).
2. Reinstall differential side bearing outer race without shim(s).
3. Install input shaft and final drive assembly on clutch housing.
4. Install transmission case without input shaft bearing shim(s).
Then tighten it to the specified torque.
5. Using the following procedures, measure clearance between bearings and transmission case.
 - **Differential side**
 - a. Attach dial indicator. If clamp diameter of dial indicator is too small or too large, attach dial indicator using a magnetic stand.


Input Shaft End Play and Differential Side Bearing Preload (Cont'd)

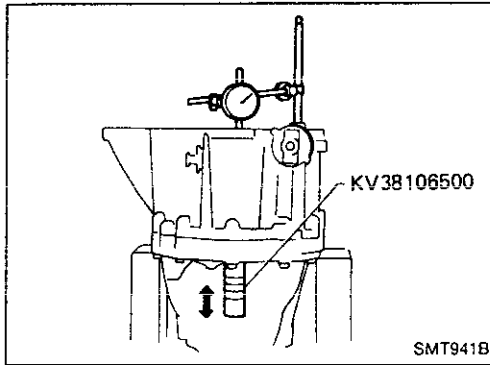


- b. Insert Tool all the way into differential side gear. Move Tool up and down and measure dial indicator deflection.

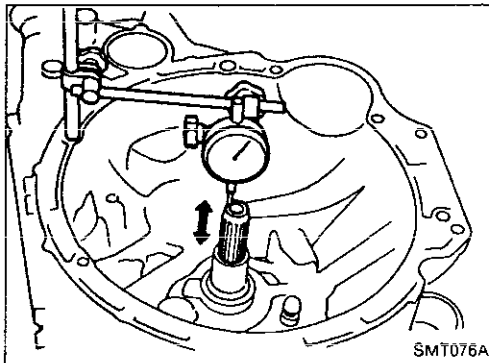

- **Input shaft side**
 - a. Set dial indicator on end of input shaft.
 - b. Move input shaft up and down and measure dial indicator deflection.
- 6. Select shims with proper thickness with S.D.S. table as a guide.
- 7. Install selected differential side bearing adjusting shim and differential side bearing outer race.

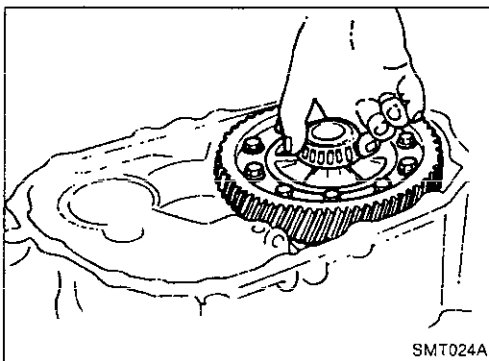

8. Check differential side bearing turning torque.
 - a. Install final drive assembly on clutch housing.
 - b. Install transmission case on clutch housing.
- **Tighten transmission case fixing bolts to the specified torque.**

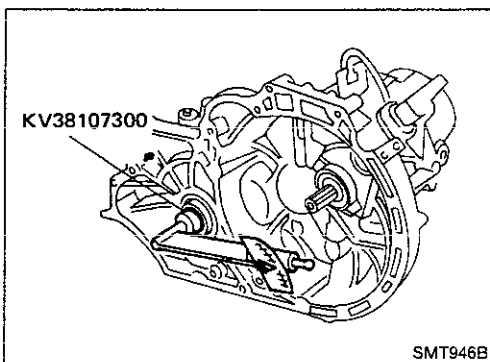

- c. Measure turning torque of final drive assembly.

**Turning torque of final drive assembly
(New bearing):**

4.9 - 7.8 N·m (50 - 80 kg·cm, 43 - 69 in·lb)





- **When old bearing is used again, turning torque will be slightly less than the above.**
- **Make sure torque is close to the specified range.**

Mainshaft Bearing Preload

If any of the following parts are replaced, adjust mainshaft bearing preload.

- **Mainshaft**
- **Mainshaft bearings**
- **Clutch housing**
- **Transmission case**

Mainshaft Bearing Preload (Cont'd)

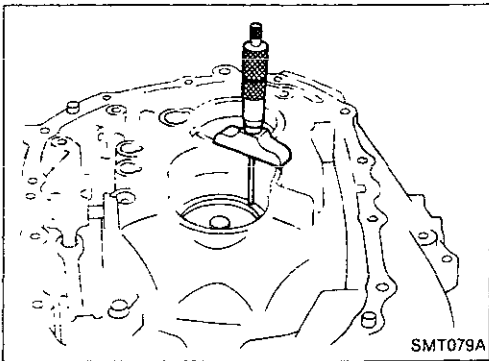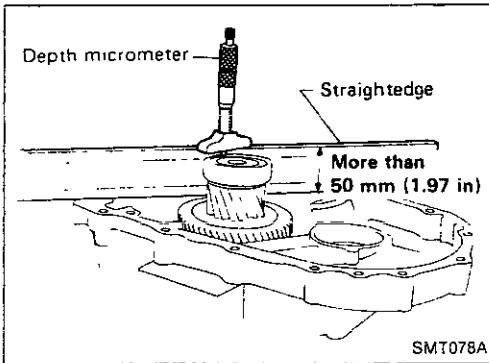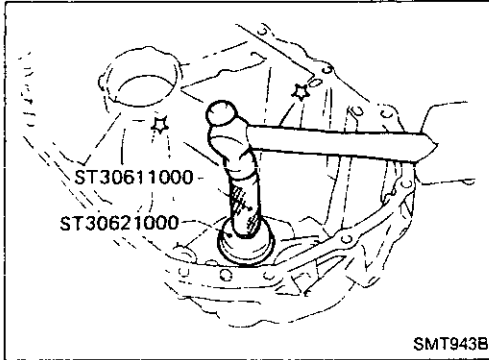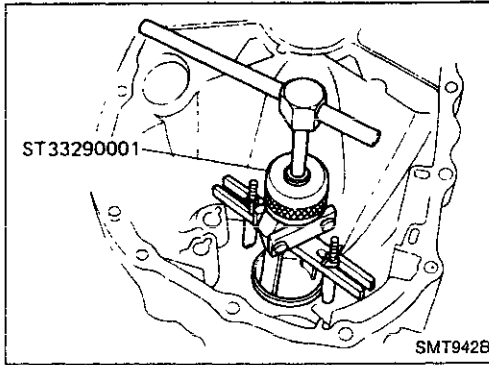

1. Remove mainshaft rear bearing outer race and shim(s).

2. Reinstall mainshaft rear bearing outer race without shims.
3. Clean mating surfaces of clutch housing and transmission case with solvent.
4. Install mainshaft and mainshaft front bearing outer race into transmission case. Turn mainshaft while holding bearing outer race so that bearings are properly seated.

5. Put straightedge [width must be more than 50 mm (1.97 in)] on transmission case, and measure the distance from upper surface of straightedge to surface of the bearing outer race using a depth micrometer.

- **Measure at three places on bearing outer race, and take the average.**

6. Determine dimension A to be used by the following equation.

$$\text{Dimension A} = \text{Width of straightedge} - \text{measured distance}$$

7. Measure the distance from mating surface of clutch housing to portion with which mainshaft front bearing outer race is to be mated.


- **Measure at three places on the portion, and take the average.**

$$\text{Dimension B} = \text{Measured distance}$$


8. Determine dimension C to be used by the following equation.

$$C = B - A$$


9. Determine total thickness of shims with S.D.S. table as a guide.
10. Install selected mainshaft bearing adjusting shim and mainshaft bearing outer race.
11. Check total turning torque after assembly — Refer to "ASSEMBLY".

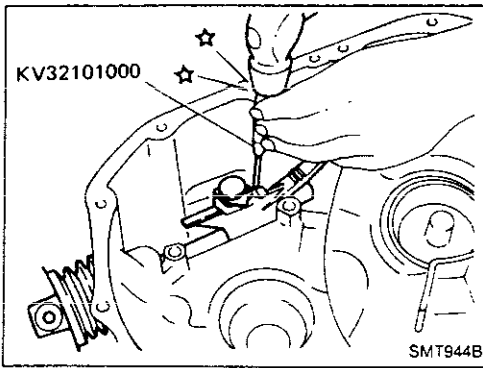


1. Install striking lever and striking rod.

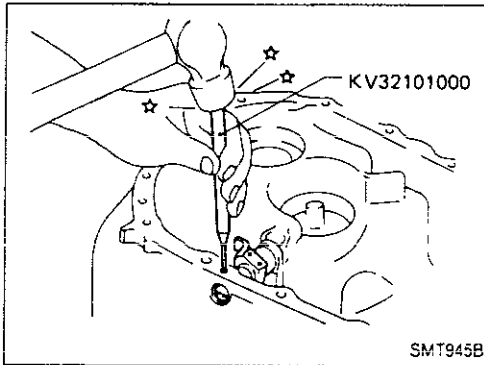


2. Install selector and retaining pin.

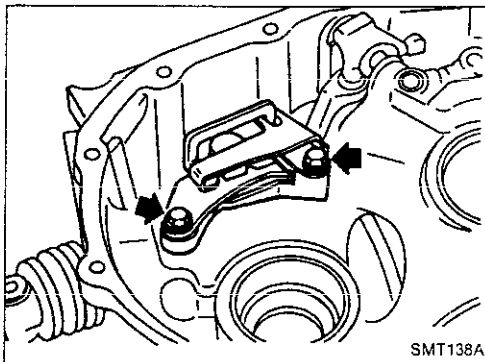

3. Install reverse gate assembly.

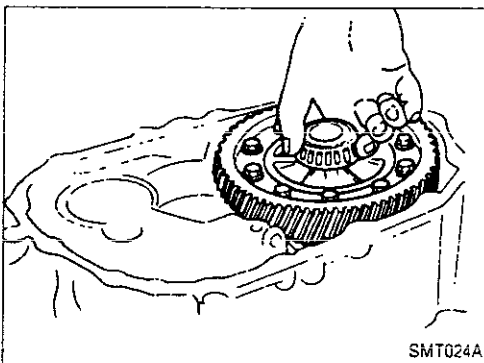


4. Install final drive assembly.

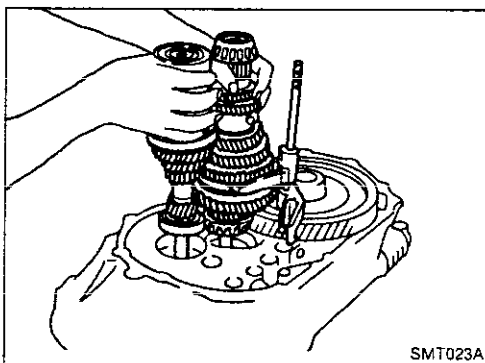


5. Install input shaft and mainshaft with 1st & 2nd shift fork assembly.



- Be careful not to damage input shaft oil seal.

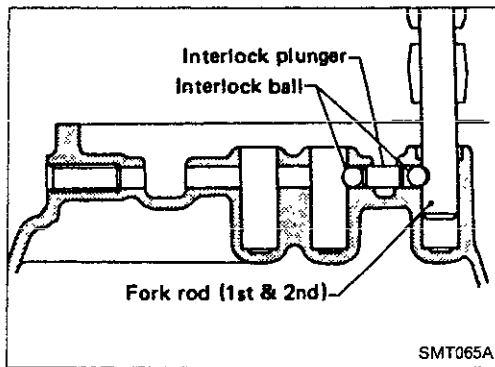


6. Install interlock balls and plunger.

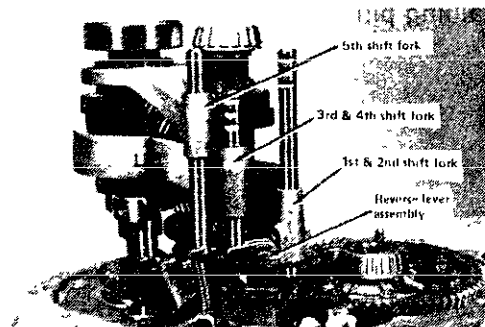


7. Install 3rd & 4th shift fork and bracket, then install 3rd & 4th shift rod, stopper ring and retaining pin.

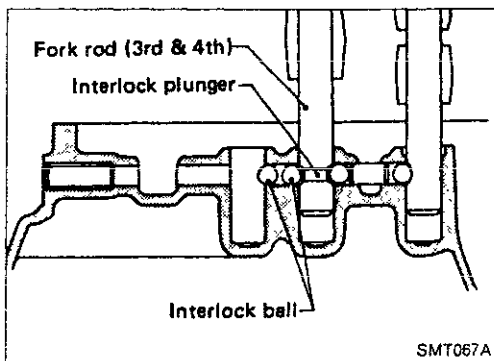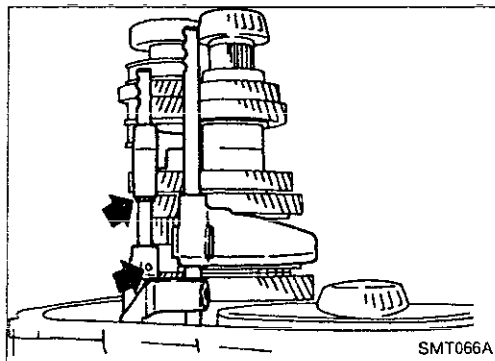


8. Install interlock balls.

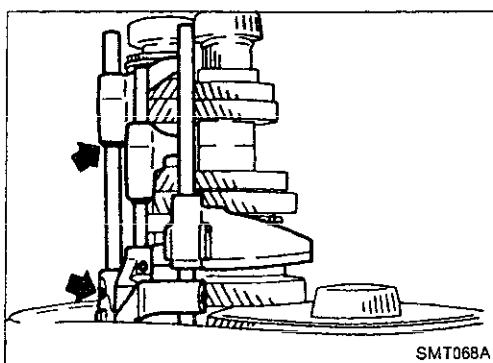

9. Install 5th shift fork and bracket, then install shift rod, stopper ring and retaining pin.

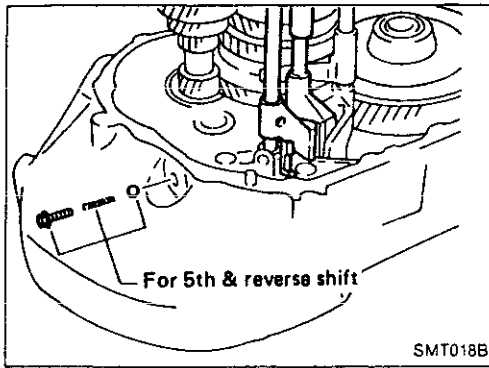


10. Install 5th & reverse check plug, spring and ball.

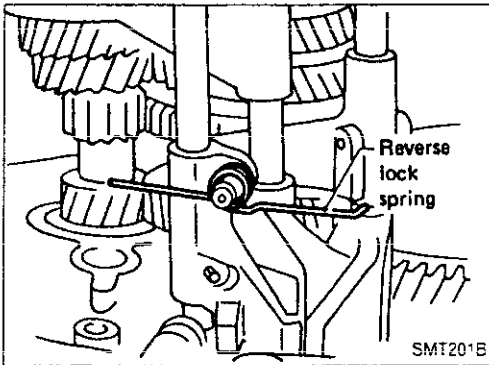

11. Reverse lever assembly


a. Install reverse lock spring on 5th & reverse bracket.

- Pay attention to its direction.

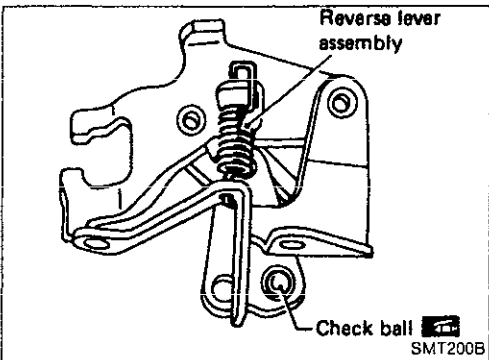


b. Install check ball and reverse lever spring on reverse lever assembly.


- Apply multi-purpose grease to check ball.
- Pay attention to direction of reverse lever spring.

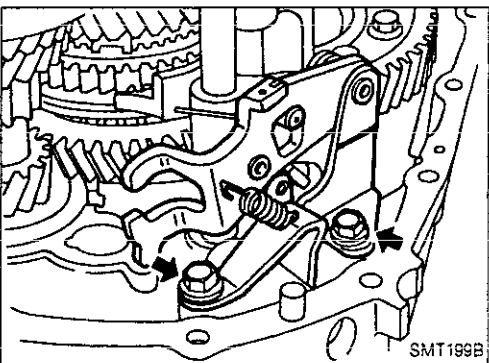


c. Install reverse lever assembly on clutch housing.

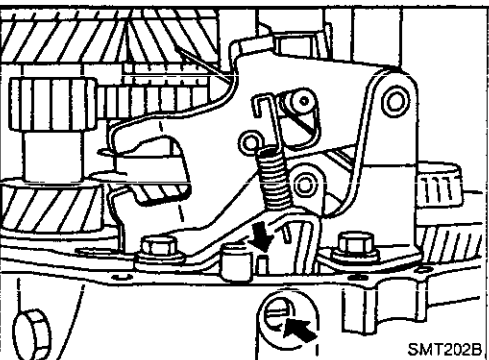


d. Install reverse arm shaft and retaining pin.

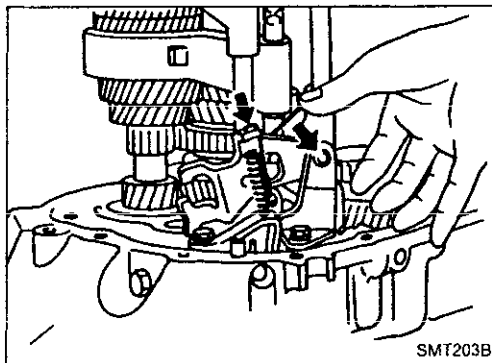


- e. Hook reverse lock spring and reverse lever spring on reverse lever assembly.

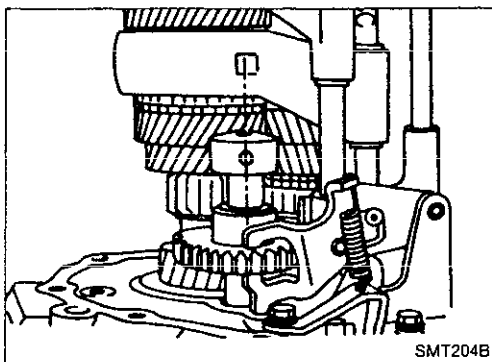

- f. Mesh 4th gear, then install reverse idler gear and shaft.
 ● Pay attention to direction of tapped hole.

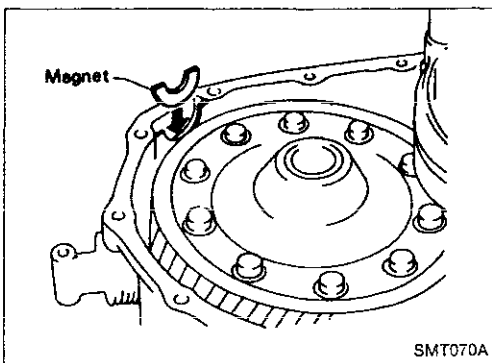

12. Place magnet on clutch housing.

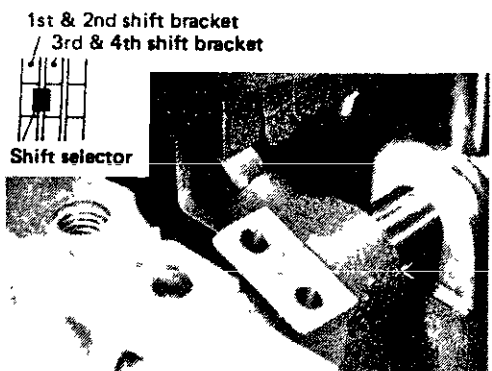


13. If bearing preload was adjusted, install selected shim(s) into transmission case.

- To aid in installation of transmission case, place shift selector in the 1st and 2nd shift bracket or between 1st and 2nd bracket and 3rd and 4th bracket.


14. Apply sealant to mating surface of transmission case and install it.

15. Install position switch.

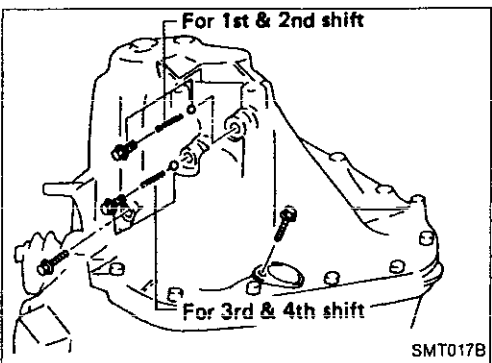

16. Apply sealant to threads of check plugs. Install balls, springs and plugs.

17. After assembly, check that you can shift into each gear smoothly.

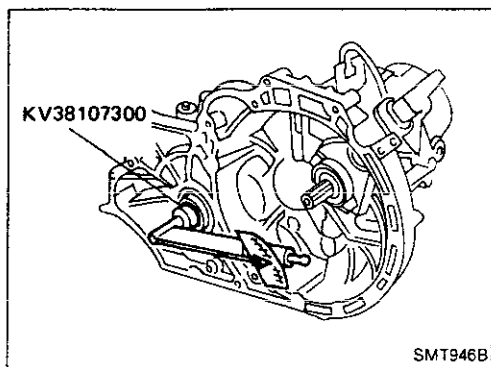

18. Measure total turning torque.

Total turning torque (New bearing):

8.8 - 21.6 N·m (90 - 220 kg-cm, 78 - 191 in-lb)

- When old bearing is used again, preload will be slightly less than the above. Make sure torque is close to the specified range.

General Specifications

TRANSAXLE

			2WD							4WD	
Engine			E10S	CD17	GA13DS, GA14DS	GA16DS	GA16DE	CD20	SR20DE	GA16DS	SR20DET
Transaxle model			RN4F30A	RS5F30A		RS5F31A			RS5F32A	RS5F31A	RS5F50A
Number of speeds			4	5							
Synchronesh type			Warner								
Shift pattern			13 24 N R		135 24 N R						
Gear ratio	1st		3.333	3.333	3.333	3.063	3.063	3.333	3.063	3.333	3.285
	2nd		1.955	1.955	1.955	1.826	1.826	1.955	1.826	1.955	1.850
	3rd		1.286	1.286	1.286	1.207	1.286	1.286	1.286	1.286	1.272
	4th		0.902	0.902	0.902	0.902	0.975	0.902	0.975	0.926	0.954
	5th		—	0.756	0.733	0.756	0.810	0.756	0.756	0.756	0.740
	Reverse		3.417	3.417	3.417	3.417	3.417	3.417	3.153	3.417	3.266
Number of teeth	Input gear	1st	15	15	15	16	16	15	16	15	14
		2nd	22	22	22	23	23	22	23	22	20
		3rd	28	28	28	29	28	28	28	28	33
		4th	41	41	41	41	40	41	40	41	44
		5th	—	45	45	45	42	45	45	45	50
		Rev.	12	12	12	12	12	12	13	12	14
	Main gear	1st	50	50	50	49	49	50	49	50	46
		2nd	43	43	43	42	42	43	42	43	37
		3rd	36	36	36	35	36	36	36	36	42
		4th	37	37	37	37	39	37	39	38	42
		5th	—	34	33	34	34	34	34	34	37
		Rev.	41	41	41	41	41	41	41	41	41
	Reverse idler gear		30							31	30
Oil capacity ℓ (Imp pt)			2.6 (4-5/8)	2.8 (4-7/8)		2.9 (5-1/8)			3.5 - 3.7 (6-1/8 - 6-1/2)	2.9 (5-1/8)	4.2 (7-3/8)

FINAL GEAR

Engine		E10S	CD17	GA13DS, GA14DS	GA16DS (2WD)	GA16DE	CD20	SR20DE	GA16DS (4WD)	SR20DET
Final gear ratio		4.471	3.789	4.167	4.167	4.167	3.650	4.176	4.353	4.125
Number of teeth	Final gear/Pinion	76/17	72/19	75/18	75/18	75/18	73/20	71/17	74/17	66/16
	Side gear/Pinion mate gear	14/10	14/10	14/10	14/10	16/10	16/10	14/10	14/10	16/10

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment

RN4F30A, RS5F30A, RS5F31A

GEAR END PLAY

Gear	End play mm (in)
1st main gear	0.18 - 0.31 (0.0071 - 0.0122)
2nd main gear	0.20 - 0.30 (0.0079 - 0.0118)
3rd main gear	0.20 - 0.30 (0.0079 - 0.0118)
4th main gear	0.20 - 0.30 (0.0079 - 0.0118)
5th input gear	0.18 - 0.31 (0.0071 - 0.0122)

CLEARANCE BETWEEN BAULK RING AND GEAR

Unit: mm (in)

	Standard	Wear limit
1st & 2nd	1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)
3rd & 4th	1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)
5th	1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)

AVAILABLE CHECK PLUGS

Reverse check plug

Reverse check turning
torque (At striking rod)
N·m (kg-cm, in-lb)

4-speed models 15.7 - 22.6
(160 - 230, 139 - 200)

5-speed models 4.9 - 7.4
(50 - 75, 43 - 65)

Thickness mm (in)	Part number
6.3 (0.327)	32188-M8001*
7.1 (0.280)	32188-M8002
7.7 (0.303)	32188-M8003
8.9 (0.350)	32188-M8004

* Standard check plug

AVAILABLE SNAP RINGS

Input shaft front bearing

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number
1.27 (0.0500)	32204-M8004
1.33 (0.0524)	32204-M8005
1.39 (0.0547)	32204-M8006
1.45 (0.0571)	32204-M8007

Input shaft 5th synchronizer hub

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number
2.00 (0.0787)	32311-M8812
2.05 (0.0807)	32311-M8813
2.10 (0.0827)	32311-M8814
2.15 (0.0846)	32311-M8815
2.20 (0.0866)	32311-M8816
2.25 (0.0886)	32311-M8817
2.30 (0.0906)	32311-M8818

AVAILABLE C-RINGS

Mainshaft C-ring

● 4-speed models

Allowable clearance		0 - 0.1 mm (0 - 0.004 in)	
Thickness mm (in)	Part number	Thickness mm (in)	Part number
3.63 (0.1429)	32348-M8000	4.05 (0.1594)	32348-M8006
3.70 (0.1457)	32348-M8001	4.12 (0.1622)	32348-M8007
3.77 (0.1484)	32348-M8002	4.19 (0.1650)	32348-M8008
3.84 (0.1512)	32348-M8003	4.26 (0.1677)	32348-M8009
3.91 (0.1539)	32348-M8004	4.33 (0.1705)	32348-M8010
3.98 (0.1567)	32348-M8005	4.40 (0.1732)	32348-M8011

● 5-speed models

Allowable clearance		0 - 0.1 mm (0 - 0.004 in)	
Thickness mm (in)	Part number	Thickness mm (in)	Part number
3.63 (0.1429)	32348-M8800	4.12 (0.1622)	32348-M8807
3.70 (0.1457)	32348-M8801	4.19 (0.1650)	32348-M8808
3.77 (0.1484)	32348-M8802	4.26 (0.1677)	32348-M8809
3.84 (0.1512)	32348-M8803	4.33 (0.1705)	32348-M8810
3.91 (0.1539)	32348-M8804	4.40 (0.1732)	32348-M8811
3.98 (0.1567)	32348-M8805	4.47 (0.1760)	32348-M8812
4.05 (0.1594)	32348-M8806	4.54 (0.1787)	32348-M8813

Inspection and Adjustment (Cont'd)

RN4F30A, RS5F30A, RS5F31A

AVAILABLE WASHERS

Differential side gear thrust washer

● GA16DE models

Allowable clearance between side gear and differential case with washer		0.1 - 0.2 mm (0.004 - 0.008 in)
Thickness mm (in)	Part number	
0.75 - 0.80 (0.0295 - 0.0315)	38424-D2111	
0.80 - 0.85 (0.0315 - 0.0335)	38424-D2112	
0.85 - 0.90 (0.0335 - 0.0354)	38424-D2113	
0.90 - 0.95 (0.0354 - 0.0374)	38424-D2114	
0.95 - 1.00 (0.0374 - 0.0394)	38424-D2115	

● Except for GA16DE models

Allowable clearance between side gear and differential case with washer		0.1 - 0.2 mm (0.004 - 0.008 in)
Thickness mm (in)	Part number	
0.76 - 0.81 (0.0299 - 0.0319)	38424-01M10	
0.81 - 0.86 (0.0319 - 0.0339)	38424-01M11	
0.86 - 0.91 (0.0339 - 0.0358)	38424-01M12	
0.91 - 0.96 (0.0358 - 0.0378)	38424-01M13	

Mainshaft bearing adjusting shims

Thickness mm (in)	Part number
0.10 (0.0039)	32137-M8000
0.15 (0.0059)	32137-M8001
0.20 (0.0079)	32137-M8002
0.25 (0.0098)	32137-M8003
0.30 (0.0118)	32137-M8004
0.35 (0.0138)	32137-M8005
0.40 (0.0157)	32137-M8006
0.45 (0.0177)	32137-M8007
0.50 (0.0197)	32137-M8008
0.55 (0.0217)	32137-M8009
0.60 (0.0236)	32137-M8010
0.65 (0.0256)	32137-M8011
0.70 (0.0276)	32137-M8012
0.75 (0.0295)	32137-M8013
0.80 (0.0315)	32137-M8014
0.85 (0.0335)	32137-M8015
0.90 (0.0354)	32137-M8016
0.95 (0.0374)	32137-M8017
1.00 (0.0394)	32137-M8018

AVAILABLE SHIMS

— MAINSHAFT AND DIFFERENTIAL SIDE BEARING PRELOAD AND ADJUSTING SHIM

Bearing preload

Unit: mm (in)

	Mainshaft bearing	Differential side bearing
RN4F30A	0.18 - 0.23	0.24 - 0.32
RS5F30A	(0.0071 - 0.0091)	(0.0094 - 0.0126)
RS5F31A	0.18 - 0.27	0.20 - 0.25
	(0.0071 - 0.0106)	(0.0079 - 0.0098)

Turning torque (New bearing)

Unit: N·m (kg·cm, in·lb)

	Final drive only	Total
RN4F30A	2.0 - 7.8	3.9 - 12.3
RS5F30A	(20 - 80, 17 - 69)	(40 - 125, 35 - 109)
RS5F31A	2.0 - 7.8	3.9 - 13.7
	(20 - 80, 17 - 69)	(40 - 140, 35 - 122)

Differential side bearing adjusting shims

Thickness mm (in)	Part number
0.44 (0.0173)	38454-M8000
0.48 (0.0189)	38454-M8001
0.56 (0.0220)	38454-M8003
0.60 (0.0236)	38454-M8004
0.64 (0.0252)	38454-M8005
0.68 (0.0268)	38454-M8006
0.72 (0.0283)	38454-M8007
0.76 (0.0299)	38454-M8008
0.80 (0.0315)	38454-M8009
0.84 (0.0331)	38454-M8010
0.88 (0.0346)	38454-M8011

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment (Cont'd)

RS5F32A

GEAR END PLAY

Gear	End play mm (in)
1st main gear	0.18 - 0.31 (0.0071 - 0.0122)
2nd main gear	0.20 - 0.30 (0.0079 - 0.0118)
3rd main gear	0.20 - 0.30 (0.0079 - 0.0118)
4th main gear	0.20 - 0.30 (0.0079 - 0.0118)
5th input gear	0.18 - 0.31 (0.0071 - 0.0122)


CLEARANCE BETWEEN BAULK RING AND GEAR

1st, 4th, 5th baulk ring

Unit: mm (in)	
Standard	Wear limit
1.00 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)

2nd and 3rd baulk ring

Unit: mm (in)

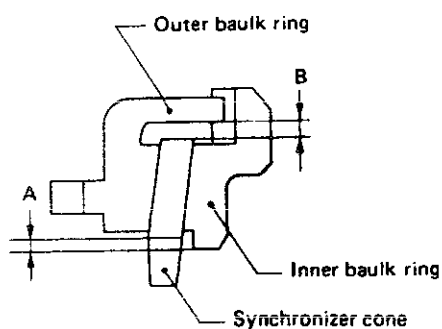

SMT044B

Dimension	Standard	Wear limit
A	0.7 - 0.9 (0.028 - 0.035)	0.2 (0.008)
B	0.6 - 1.1 (0.024 - 0.043)	

AVAILABLE REVERSE CHECK PLUGS AND CASE COVERS

Reverse check plug

Reverse check turning torque (At striking rod)		4.9 - 7.4 N·m (50 - 75 kg-cm, 43 - 65 in-lb)
Length mm (in)	Part number	
8.3 (0.327)	32188-M8001*	
7.1 (0.280)	32188-M8002	
7.7 (0.303)	32188-M8003	
8.9 (0.350)	32188-M8004	

* Standard check plug

Case cover

Mainshaft bearing end play		0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number	
10.78 (0.4244)	32131-50J00	
10.83 (0.4264)	32131-50J01	
10.88 (0.4283)	32131-50J02	
10.93 (0.4303)	32131-50J03	
10.98 (0.4323)	32131-50J04	
11.03 (0.4343)	32131-50J05	

Inspection and Adjustment (Cont'd)

RS5F32A

AVAILABLE SNAP RINGS

Input shaft front bearing


Allowable clearance 0 - 0.1 mm (0 - 0.004 in)	
Thickness mm (in)	Part number
1.27 (0.0500)	32204-M8004
1.33 (0.0524)	32204-M8005
1.39 (0.0547)	32204-M8006
1.45 (0.0571)	32204-M8007

Input shaft 5th synchronizer hub

Allowable clearance 0 - 0.1 mm (0 - 0.004 in)	
Thickness mm (in)	Part number
2.00 (0.0787)	32311-M8812
2.05 (0.0807)	32311-M8813
2.10 (0.0827)	32311-M8814
2.15 (0.0846)	32311-M8815
2.20 (0.0866)	32311-M8816
2.25 (0.0886)	32311-M8817
2.30 (0.0906)	32311-M8818

AVAILABLE SPACERS

Mainshaft bearing adjusting spacer

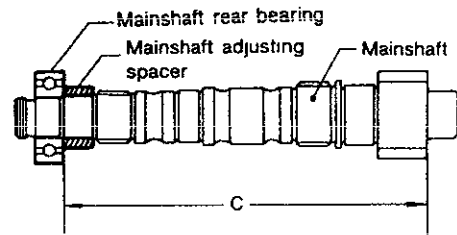

SMT693B

Bearing distance "C"	230.15 - 230.25 mm (9.0610 - 9.0649 in)
Thickness mm (in)	Part number
18.91 (0.7445)	32347-50J00
18.98 (0.7472)	32347-50J01
19.05 (0.7500)	32347-50J02
19.12 (0.7528)	32347-50J03
19.19 (0.7555)	32347-50J04
19.26 (0.7583)	32347-50J05
19.33 (0.7610)	32347-50J06
19.40 (0.7638)	32347-50J07
19.47 (0.7665)	32347-50J08

AVAILABLE C-RINGS

Mainshaft C-ring

Allowable clearance 0 - 0.1 mm (0 - 0.004 in)	
Thickness mm (in)	Part number
4.45 (0.1752)	32348-50J00
4.52 (0.1780)	32348-50J01
4.59 (0.1807)	32348-50J02
4.66 (0.1835)	32348-50J03
4.73 (0.1862)	32348-50J04
4.80 (0.1890)	32348-50J05
4.87 (0.1917)	32348-50J06
4.94 (0.1945)	32348-50J07

AVAILABLE WASHERS

Differential side gear thrust washer


Allowable clearance between side gear and differential case with washer 0.1 - 0.2 mm (0.004 - 0.008 in)	
Thickness mm (in)	Part number
0.75 - 0.80 (0.0295 - 0.0315)	38424-D2111
0.80 - 0.85 (0.0315 - 0.0335)	38424-D2112
0.85 - 0.90 (0.0335 - 0.0354)	38424-D2113
0.90 - 0.95 (0.0354 - 0.0374)	38424-D2114
0.95 - 1.00 (0.0374 - 0.0394)	38424-D2115

Inspection and Adjustment (Cont'd)

RS5F32A


INPUT SHAFT BRAKING MECHANISM

Reverse brake cam

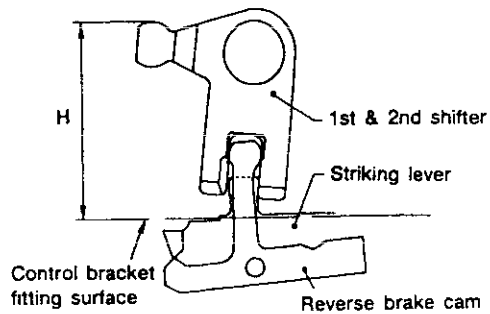

SMT735B

Maximum height "H" between the control bracket fitting surface and 1-2 shifter	67.38 - 67.86 (2.6528 - 2.6716)
mm (in)	

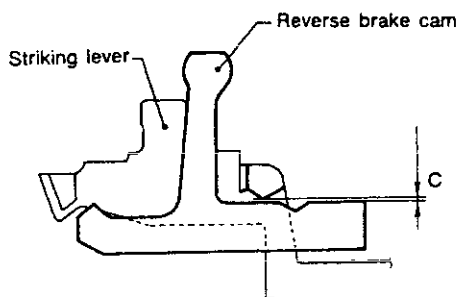

SMT736B

Clearance "C" between reverse brake cam and striking lever	0.05 - 0.20 (0.0020 - 0.0079)
mm (in)	

AVAILABLE SHIMS

— DIFFERENTIAL SIDE BEARING PRELOAD AND ADJUSTING SHIM

Bearing preload

Unit: mm (in)

Differential side bearing	0.25 - 0.30 (0.0098 - 0.0118)
---------------------------	-------------------------------

Turning torque (New bearing)

Unit: N m (kg-cm, in-lb)

Final drive	2.9 - 6.9 (30 - 70, 26 - 61)
-------------	------------------------------

Differential side bearing adjusting shims

Thickness mm (in)	Part number
0.44 (0.0173)	38454-M8000
0.48 (0.0189)	38454-M8001
0.56 (0.0220)	38454-M8003
0.60 (0.0236)	38454-M8004
0.64 (0.0252)	38454-M8005
0.68 (0.0268)	38454-M8006
0.72 (0.0283)	38454-M8007
0.76 (0.0299)	38454-M8008
0.80 (0.0315)	38454-M8009
0.84 (0.0331)	38454-M8010
0.88 (0.0346)	38454-M8011

Inspection and Adjustment (Cont'd)

RS5F50A

GEAR END PLAY

Gear	End play mm (in)
1st main gear	0.23 - 0.43 (0.0091 - 0.0169)
2nd main gear	0.23 - 0.58 (0.0091 - 0.0228)
3rd main gear	0.23 - 0.43 (0.0091 - 0.0169)
4th main gear	0.25 - 0.55 (0.0098 - 0.0217)
5th input gear	0.23 - 0.48 (0.0091 - 0.0189)

CLEARANCE BETWEEN BAULK RING AND GEAR


1st, 3rd, 4th & 5th

Unit: mm (in)

	Standard	Wear limit
1st	1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)
3rd & 4th	1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)
5th	1.0 - 1.35 (0.0394 - 0.0531)	0.7 (0.028)

2nd baulk ring


Unit: mm (in)

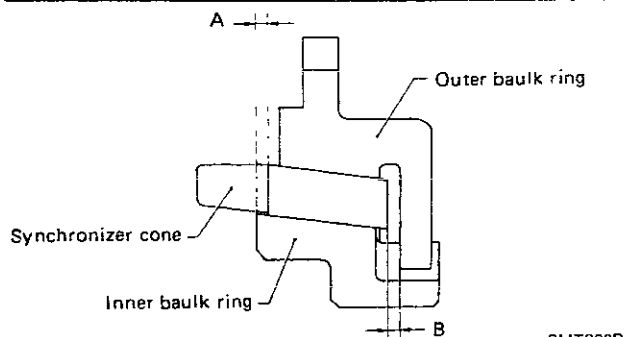

Dimension	Standard	Wear limit
A	0.6 - 0.8 (0.024 - 0.031)	0.2 (0.008)
B	0.6 - 1.1 (0.024 - 0.043)	

Reverse baulk ring

Unit: mm (in)

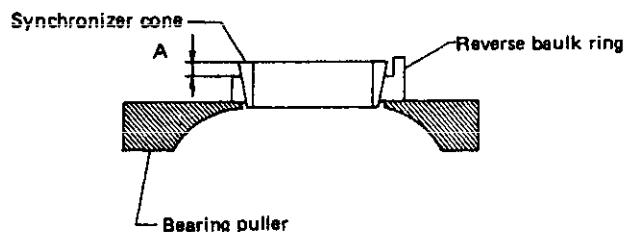

SMT517B

Dimension	Wear limit
A	1.2 (0.047)

AVAILABLE SNAP RINGS

3rd & 4th synchronizer hub (At input shaft)

Allowable clearance	0 - 0.15 mm (0 - 0.0059 in)
Thickness mm (in)	Part number
1.95 (0.0768)	32269-03E03
2.00 (0.0787)	32269-03E00
2.05 (0.0807)	32269-03E01
2.10 (0.0827)	32269-03E02

1st & 2nd synchronizer hub

Allowable clearance	0 - 0.1 mm (0 - 0.004 in)
Thickness mm (in)	Part number
1.95 (0.0768)	32269-03E03
2.00 (0.0787)	32269-03E00
2.05 (0.0807)	32269-03E01
2.10 (0.0827)	32269-03E02

5th main gear

Allowable clearance	0 - 0.15 mm (0 - 0.0059 in)
Thickness mm (in)	Part number
1.95 (0.0768)	32348-05E00
2.05 (0.0807)	32348-05E01
2.15 (0.0846)	32348-05E02
2.25 (0.0886)	32348-05E03

SERVICE DATA AND SPECIFICATIONS (S.D.S.)**Inspection and Adjustment (Cont'd)****RS5F50A****AVAILABLE WASHERS****Input shaft thrust washer**

Allowable clearance		0 - 0.06 mm (0 - 0.0024 in)
Thickness mm (in)	Part number	
4.500 (0.1772)	32278-03E01	
4.525 (0.1781)	32278-03E02	
4.550 (0.1791)	32278-03E03	
4.575 (0.1801)	32278-03E04	

Differential side gear thrust washer

Allowable clearance between side gear and differential case (viscous coupling) with washer		0.03 - 0.14 mm (0.0012 - 0.0055 in)
	Thickness mm (in)	Part number
Left side gear	0.75 - 0.80 (0.0295 - 0.0315)	38424-56E00
	0.80 - 0.85 (0.0315 - 0.0335)	38424-56E01
	0.85 - 0.90 (0.0335 - 0.0354)	38424-56E02
	0.90 - 0.95 (0.0354 - 0.0374)	38424-56E03
Right side gear	0.63 (0.0248)	38724-56E00
	0.72 (0.0283)	38724-56E01
	0.81 (0.0319)	38724-56E02
	0.90 (0.0354)	38724-56E03

AVAILABLE SHIMS**— INPUT SHAFT END PLAY AND MAINSHAFT AND DIFFERENTIAL SIDE BEARING PRELOAD AND ADJUSTING SHIM****Bearing preload and end play**

Unit: mm (in)

Mainshaft bearing preload	0.25 - 0.30 (0.0098 - 0.0118)
Input shaft end play	-0.06 to 0 (-0.0024 to 0)
Differential side bearing	0.40 - 0.45 (0.0157 - 0.0177)

Turning torque (New bearing)

Unit: N·m (kg·cm, in·lb)

Final drive	4.9 - 7.8 (50 - 80, 43 - 69)
Total	8.8 - 21.6 (90 - 220, 78 - 191)

Mainshaft bearing adjusting shims

Thickness mm (in)	Part number
0.40 (0.0157)	32139-03E11
0.44 (0.0173)	32139-03E00
0.48 (0.0189)	32139-03E01
0.52 (0.0205)	32139-03E12
0.56 (0.0220)	32139-03E02
0.60 (0.0236)	32139-03E03
0.64 (0.0252)	32139-03E04
0.68 (0.0268)	32139-03E05
0.72 (0.0283)	32139-03E06
0.76 (0.0299)	32139-03E07
0.80 (0.0315)	32139-03E08
1.20 (0.0472)	32139-03E13

Inspection and Adjustment (Cont'd)

RS5F50A

Table for selecting mainshaft bearing adjusting shim

Unit: mm (in)	
Dimension "C"	Suitable shim(s)
0.30 - 0.34 (0.0118 - 0.0134)	0.60 (0.0236)
0.34 - 0.38 (0.0134 - 0.0150)	0.64 (0.0252)
0.38 - 0.42 (0.0150 - 0.0165)	0.68 (0.0268)
0.42 - 0.46 (0.0165 - 0.0181)	0.72 (0.0283)
0.46 - 0.50 (0.0181 - 0.0197)	0.76 (0.0299)
0.50 - 0.54 (0.0197 - 0.0213)	0.80 (0.0315)
0.54 - 0.58 (0.0213 - 0.0228)	0.40 + 0.44 (0.0157 + 0.0173)
0.58 - 0.62 (0.0228 - 0.0244)	0.44 + 0.44 (0.0173 + 0.0173)
0.62 - 0.66 (0.0244 - 0.0260)	0.44 + 0.48 (0.0173 + 0.0189)
0.66 - 0.70 (0.0260 - 0.0276)	0.48 + 0.48 (0.0189 + 0.0189)
0.70 - 0.74 (0.0276 - 0.0291)	0.48 + 0.52 (0.0189 + 0.0205)
0.74 - 0.78 (0.0291 - 0.0307)	0.52 + 0.52 (0.0205 + 0.0205)
0.78 - 0.82 (0.0307 - 0.0323)	0.52 + 0.56 (0.0205 + 0.0220)
0.82 - 0.86 (0.0323 - 0.0339)	0.56 + 0.56 (0.0220 + 0.0220)
0.86 - 0.90 (0.0339 - 0.0354)	0.56 + 0.60 (0.0220 + 0.0236)
0.90 - 0.94 (0.0354 - 0.0370)	0.60 + 0.60 (0.0236 + 0.0236)
0.94 - 0.98 (0.0370 - 0.0386)	0.60 + 0.64 (0.0236 + 0.0252)
0.98 - 1.02 (0.0386 - 0.0402)	0.64 + 0.64 (0.0252 + 0.0252)
1.02 - 1.06 (0.0402 - 0.0417)	0.64 + 0.68 (0.0252 + 0.0268)
1.06 - 1.10 (0.0417 - 0.0433)	0.68 + 0.68 (0.0268 + 0.0268)
1.10 - 1.14 (0.0433 - 0.0449)	0.68 + 0.72 (0.0268 + 0.0283)
1.14 - 1.18 (0.0449 - 0.0465)	0.72 + 0.72 (0.0283 + 0.0283)
1.18 - 1.22 (0.0465 - 0.0480)	0.72 + 0.76 (0.0283 + 0.0299)
1.22 - 1.26 (0.0480 - 0.0496)	0.76 + 0.76 (0.0299 + 0.0299)
1.26 - 1.30 (0.0496 - 0.0512)	0.76 + 0.80 (0.0299 + 0.0315)
1.30 - 1.34 (0.0512 - 0.0528)	0.80 + 0.80 (0.0315 + 0.0315)
1.34 - 1.38 (0.0528 - 0.0543)	0.44 + 1.20 (0.0173 + 0.0472)
1.38 - 1.42 (0.0543 - 0.0559)	0.48 + 1.20 (0.0189 + 0.0472)
1.42 - 1.46 (0.0559 - 0.0575)	0.52 + 1.20 (0.0205 + 0.0472)
1.46 - 1.50 (0.0575 - 0.0591)	0.56 + 1.20 (0.0220 + 0.0472)

Input shaft bearing adjusting shims

Thickness mm (in)	Part number
0.40 (0.0157)	32225-08E00
0.44 (0.0173)	32225-08E01
0.48 (0.0189)	32225-08E02
0.52 (0.0205)	32225-08E03
0.56 (0.0220)	32225-08E04
0.60 (0.0236)	32225-08E05
0.64 (0.0252)	32225-08E06
0.68 (0.0268)	32225-08E07
0.72 (0.0283)	32225-08E08
0.76 (0.0299)	32225-08E09
0.80 (0.0315)	32225-08E10
1.20 (0.0472)	32225-08E11

Table for selecting input bearing adjusting shim

Unit: mm (in)	
Dial indicator deflection	Suitable shim(s)
0.65 - 0.69 (0.0256 - 0.0272)	0.64 (0.0252)
0.69 - 0.73 (0.0272 - 0.0287)	0.68 (0.0268)
0.73 - 0.77 (0.0287 - 0.0303)	0.72 (0.0283)
0.77 - 0.81 (0.0303 - 0.0319)	0.76 (0.0299)
0.81 - 0.85 (0.0319 - 0.0335)	0.80 (0.0315)
0.85 - 0.89 (0.0335 - 0.0350)	0.40 + 0.44 (0.0157 + 0.0173)
0.89 - 0.93 (0.0350 - 0.0366)	0.44 + 0.44 (0.0173 + 0.0173)
0.93 - 0.97 (0.0366 - 0.0382)	0.44 + 0.48 (0.0173 + 0.0189)
0.97 - 1.01 (0.0382 - 0.0398)	0.48 + 0.48 (0.0189 + 0.0189)
1.01 - 1.05 (0.0398 - 0.0413)	0.48 + 0.52 (0.0189 + 0.0205)
1.05 - 1.09 (0.0413 - 0.0429)	0.52 + 0.52 (0.0205 + 0.0205)
1.09 - 1.13 (0.0429 - 0.0445)	0.52 + 0.56 (0.0205 + 0.0220)
1.13 - 1.17 (0.0445 - 0.0461)	0.56 + 0.56 (0.0220 + 0.0220)
1.17 - 1.21 (0.0461 - 0.0476)	0.56 + 0.60 (0.0220 + 0.0236)
1.21 - 1.25 (0.0476 - 0.0492)	0.60 + 0.60 (0.0236 + 0.0236)
1.25 - 1.29 (0.0492 - 0.0508)	0.60 + 0.64 (0.0236 + 0.0252)
1.29 - 1.33 (0.0508 - 0.0524)	0.64 + 0.64 (0.0252 + 0.0252)
1.33 - 1.37 (0.0524 - 0.0539)	0.64 + 0.68 (0.0252 + 0.0268)
1.37 - 1.41 (0.0539 - 0.0555)	0.68 + 0.68 (0.0268 + 0.0268)
1.41 - 1.45 (0.0555 - 0.0571)	0.68 + 0.72 (0.0268 + 0.0283)
1.45 - 1.49 (0.0571 - 0.0587)	0.72 + 0.72 (0.0283 + 0.0283)
1.49 - 1.53 (0.0587 - 0.0602)	0.72 + 0.76 (0.0283 + 0.0299)
1.53 - 1.57 (0.0602 - 0.0618)	0.76 + 0.76 (0.0299 + 0.0299)
1.57 - 1.61 (0.0618 - 0.0634)	0.76 + 0.80 (0.0299 + 0.0315)
1.61 - 1.65 (0.0634 - 0.0650)	0.80 + 0.80 (0.0315 + 0.0315)
1.65 - 1.69 (0.0650 - 0.0665)	0.44 + 1.20 (0.0173 + 0.0472)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)**Inspection and Adjustment (Cont'd)****RS5F50A****Differential side bearing adjusting shims**

Thickness mm (in)	Part number
0.36 (0.0142)	38753-56E00
0.40 (0.0157)	38753-56E01
0.44 (0.0173)	38753-56E02
0.48 (0.0189)	38753-56E03
0.52 (0.0205)	38753-56E04
0.56 (0.0220)	38753-56E05
0.60 (0.0236)	38753-56E06
0.64 (0.0252)	38753-56E07
0.68 (0.0268)	38753-56E08
0.72 (0.0283)	38753-56E09
0.76 (0.0299)	38753-56E10
0.80 (0.0315)	38753-56E11
0.84 (0.0331)	38753-56E12
0.88 (0.0346)	38753-56E13
0.92 (0.0362)	38753-56E14

Table for selecting differential side bearing adjusting shim(s)

Unit. mm (in)	
Dial indicator deflection	Suitable shim(s)
0.47 - 0.51 (0.0185 - 0.0201)	0.44 + 0.48 (0.0173 + 0.0189)
0.51 - 0.55 (0.0201 - 0.0217)	0.48 + 0.48 (0.0189 + 0.0189)
0.55 - 0.59 (0.0217 - 0.0232)	0.48 + 0.52 (0.0189 + 0.0205)
0.59 - 0.63 (0.0232 - 0.0248)	0.52 + 0.52 (0.0205 + 0.0205)
0.63 - 0.67 (0.0248 - 0.0267)	0.52 + 0.56 (0.0205 + 0.0220)
0.67 - 0.71 (0.0264 - 0.0280)	0.56 + 0.56 (0.0220 + 0.0220)
0.71 - 0.75 (0.0280 - 0.0295)	0.56 + 0.60 (0.0220 + 0.0236)
0.75 - 0.79 (0.0295 - 0.0311)	0.60 + 0.60 (0.0236 + 0.0236)
0.79 - 0.83 (0.0311 - 0.0327)	0.60 + 0.64 (0.0236 + 0.0252)
0.83 - 0.87 (0.0327 - 0.0343)	0.64 + 0.64 (0.0252 + 0.0252)
0.87 - 0.91 (0.0343 - 0.0358)	0.64 + 0.68 (0.0252 + 0.0268)
0.91 - 0.95 (0.0358 - 0.0374)	0.68 + 0.68 (0.0268 + 0.0268)
0.95 - 0.99 (0.0374 - 0.0390)	0.68 + 0.72 (0.0268 + 0.0283)
0.99 - 1.03 (0.0390 - 0.0406)	0.72 + 0.72 (0.0283 + 0.0283)
1.03 - 1.07 (0.0406 - 0.0421)	0.72 + 0.76 (0.0283 + 0.0299)
1.07 - 1.11 (0.0421 - 0.0437)	0.76 + 0.76 (0.0299 + 0.0299)
1.11 - 1.15 (0.0437 - 0.0453)	0.76 + 0.80 (0.0299 + 0.0315)
1.15 - 1.19 (0.0453 - 0.0469)	0.80 + 0.80 (0.0315 + 0.0315)
1.19 - 1.23 (0.0469 - 0.0484)	0.72 + 0.92 (0.0283 + 0.0362)
1.23 - 1.27 (0.0484 - 0.0500)	0.76 + 0.92 (0.0299 + 0.0362)
1.27 - 1.31 (0.0500 - 0.0516)	0.80 + 0.92 (0.0315 + 0.0362)

AUTOMATIC TRANSAXLE

SECTION **AT**

CONTENTS

PREPARATION	AT- 2
PRECAUTIONS	AT- 5
ON-VEHICLE SERVICE	AT- 6
TROUBLE DIAGNOSES	AT- 13
ELECTRICAL SYSTEM	AT- 28
REMOVAL AND INSTALLATION	AT- 31
MAJOR OVERHAUL	AT- 34
DISASSEMBLY	AT- 44
REPAIR FOR COMPONENT PARTS	AT- 58
ASSEMBLY	AT-129
A/T SHIFT LOCK SYSTEM	AT-153
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	AT-169

When you read wiring diagrams:





 
- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

AT

PREPARATION







SPECIAL SERVICE TOOLS

*: Special tool or commercial equivalent

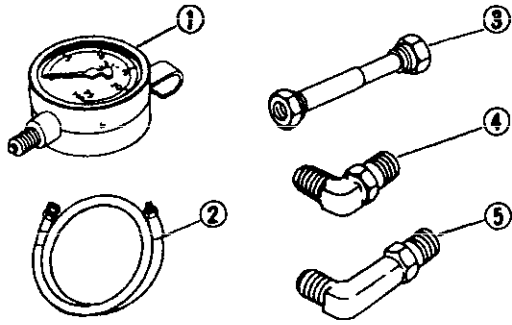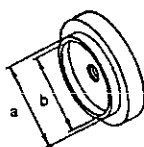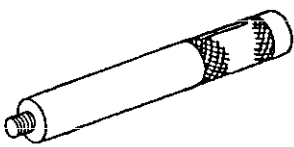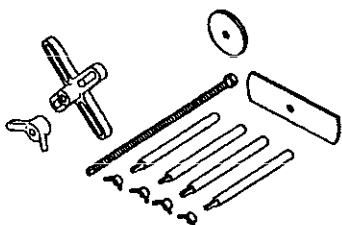Tool number Tool name	Description
ST2505S001 Oil pressure gauge set ① ST25051001 Oil pressure gauge ② ST25052000 Hose ③ ST25053000 Joint pipe ④ ST25054000 Adapter ⑤ ST25055000 Adapter	 Measuring line pressure and governor pressure
ST33290001 Puller	 Removing differential side oil seal
KV31103000* Drift	 Installing differential side oil seal (Use with ST35325000) a: 76 mm (2.99 in) dia. b: 67 mm (2.64 in) dia.
ST35325000 Drift	 Installing differential side oil seal (Use with KV31103000)
KV31103200 Clutch spring compressor	 Removing and installing clutch return spring
ST23540000* Pin punch	 Removing and installing parking rod plate, manual plate and differential pinion mate shaft retaining pins
KV32101000* Pin punch	 Installing throttle lever and manual shaft retaining pins




PREPARATION

  *: Special tool or commercial equivalent

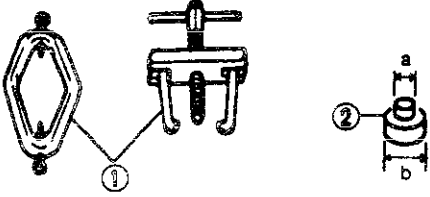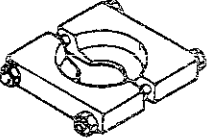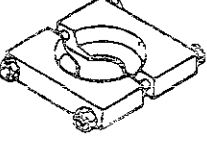

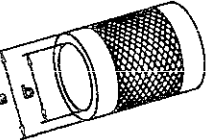
Tool number Tool name	Description
ST3306S001 Differential side bearing puller set ① ST33051001 Puller ② ST33061000 Adapter	 Removing differential side bearing inner race a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.
KV381054S0 Puller	 ⊙ Removing output shaft bearing outer race from bearing retainer ⊙ Removing output gear bearing outer race from bearing retainer ⊙ Removing idler gear bearing outer race
ST27180C01 Puller	 ⊙ Removing idler gear ⊙ Removing output gear
ST30031000 Puller	 Removing reduction gear bearing in- ner race
ST30021000 Puller	 Removing differential side bearing
ST35272000* Drift	 ⊙ Installing reduction gear bearing inner race ⊙ Installing idler gear bearing inner race ⊙ Installing output gear bearing inner race
ST37830000* Drift	 Installing idler gear bearing outer race
ST33200000* Drift	 Installing differential side bearing a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.

PREPARATION

*: Special tool or commercial equivalent

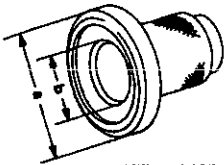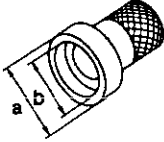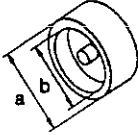
Tool number Tool name	Description
ST35271000* Drift	 ● Installing idler gear ● Installing output gear - a: 76 mm (2.99 in) dia. - b: 67 mm (2.64 in) dia.
ST33400001* Drift	 Installing output gear bearing outer race onto bearing retainer - a: 60 mm (2.36 in) dia. - b: 42 mm (1.65 in) dia.
KV40104840* Drift	 Installing output shaft bearing outer race onto bearing retainer - a: 49 mm (1.93 in) dia. - b: 42 mm (1.65 in) dia.

COMMERCIAL SERVICE TOOLS

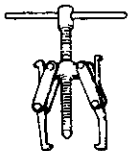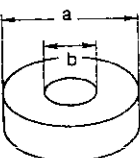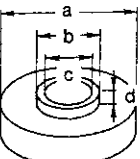Tool name	Description
Puller	 ● Removing idler gear and output gear bearing inner race ● Removing differential side bearing ● Removing and installing band servo piston snap ring
Drift	 Removing idler gear bearing inner race a: 34 mm (1.34 in) dia.
Drift	 Removing output gear bearing inner race a: 33 mm (1.30 in) dia.
Drift	 Removing differential side bearing a: 38 mm (1.50 in) dia.
Drift	 Removing output shaft bearing inner race - a: 70 mm (2.76 in) dia. - b: 30 mm (1.18 in) dia.
Drift	 Installing output shaft bearing inner race - a: 70 mm (2.76 in) dia. - b: 34 mm (1.34 in) dia. - c: 30 mm (1.18 in) dia. - d: 2 mm (0.08 in)

Service Notice


- Before proceeding with disassembly, thoroughly clean the outside of the transaxle. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transaxle.
- When disassembling parts, place them in order in a parts rack so that they can be put back into the unit in their proper positions.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transaxle is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place removed parts in order on a parts rack so they can be put back in the valve body in the same positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along their bores in the valve body under their own weight.
- Before assembly, apply a coat of recommended A.T.F. to all parts. Petroleum jelly may be applied to O-rings and seals and used to hold small bearings and washers in place during reassembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- After overhaul, refill the transaxle with new A.T.F.

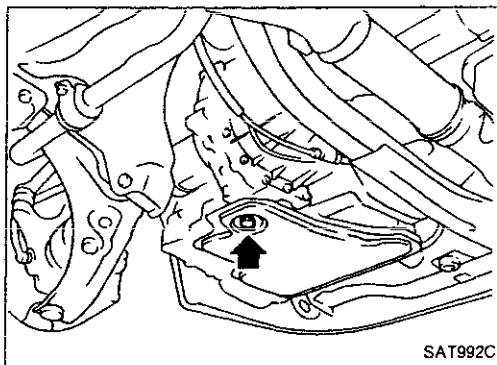


Control Valve Assembly and Accumulator

REMOVAL


1. Drain A.T.F. from transaxle.

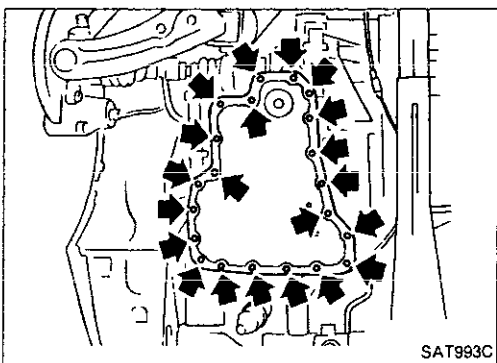


2. Remove oil pan and gasket.

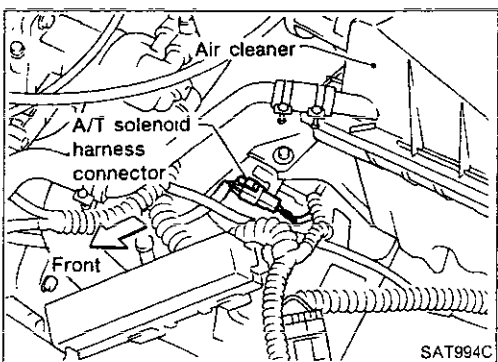

3. Disconnect A/T solenoid harness connector.

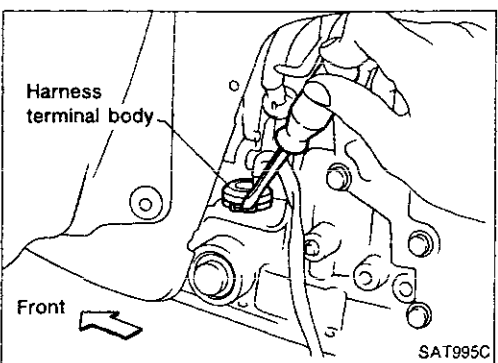

4. Remove stopper ring from A/T solenoid harness terminal body.

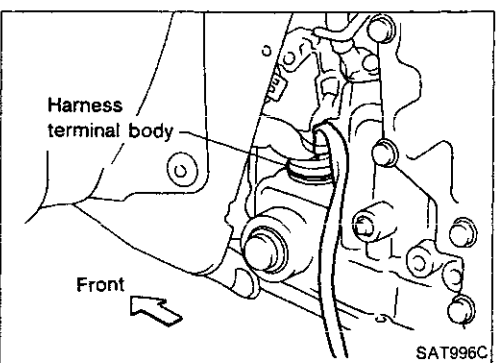

5. Pull out A/T solenoid harness from transmission case by pushing terminal body.

ON-VEHICLE SERVICE

Control Valve Assembly and Accumulator (Cont'd)



6. Remove control valve assembly by removing fixing bolts.

Bolt length, number and location:

Bolt symbol	A	B	C	D
Bolt length "ℓ"	25.0	33.0	40.0	43.5
 mm (in)	(0.984)	(1.299)	(1.575)	(1.713)
Number of bolts	2	6	5	2
Tightening torque N m (kg-m, ft-lb)	7 - 9 (0.7 - 0.9, 5.1 - 6.5)			


- Be careful not to drop manual valve, tube connector, tubes and 3-R accumulator return spring.

7. Disassemble and inspect control valve assembly if necessary — Refer to "REPAIR FOR COMPONENT PARTS".

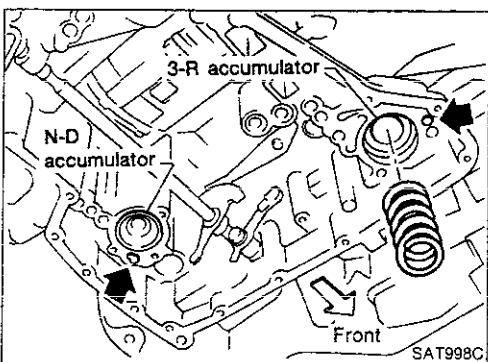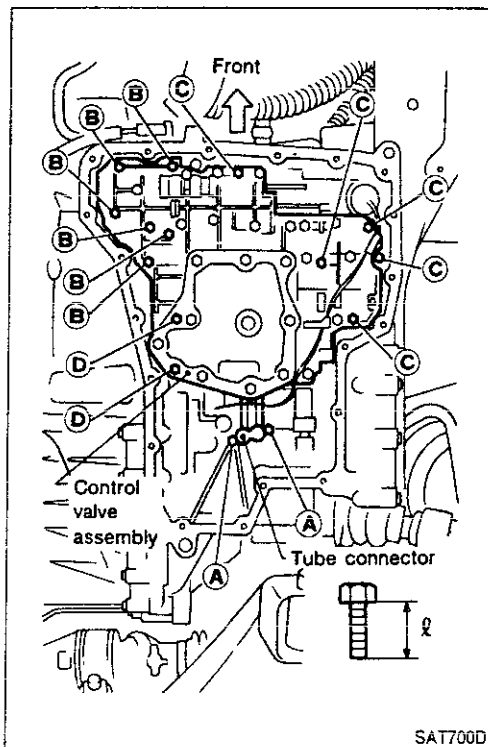

8. Remove 3-R and N-D accumulators by applying compressed air if necessary.

- Hold each piston with a rag.

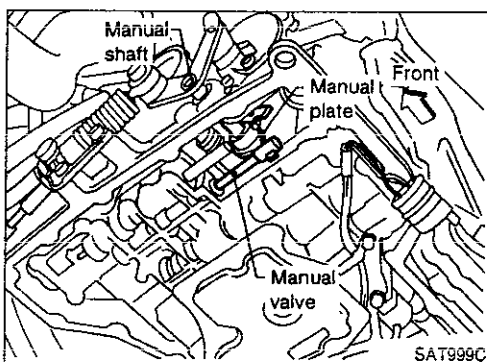


INSTALLATION

- Set manual shaft in Neutral, then align manual plate with groove in manual valve.
- After installing control valve assembly to transmission case, make sure that selector lever can be moved to all positions.

Throttle Wire Adjustment



GA14DS and GA16DS engine models

16 - 21 (1.6 - 2.1, 12 - 15)

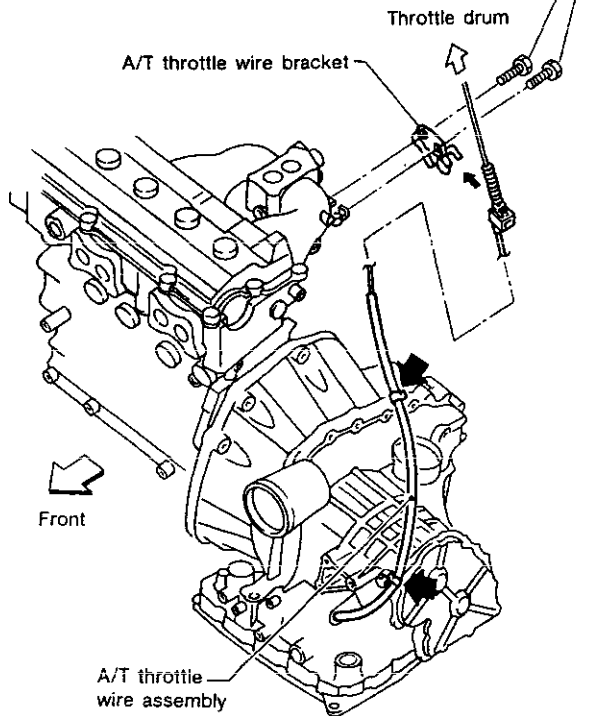

GA16DE engine models

3.7 - 5.0 (0.38 - 0.51, 2.7 - 3.7)

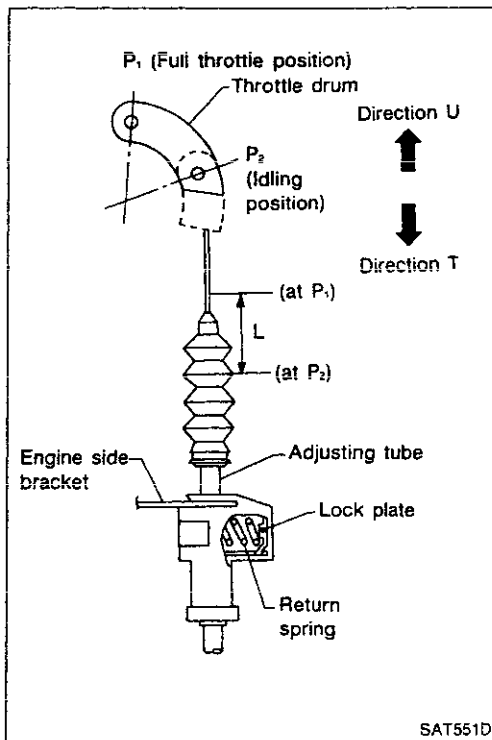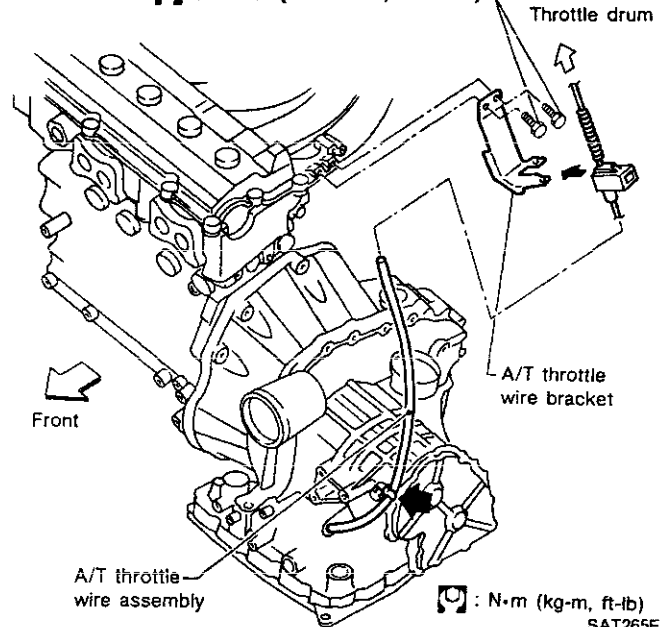

1. Turn ignition switch to OFF.
2. While pressing lock plate, move adjusting tube in direction "T" (Transaxle side).
3. Return lock plate.
(Adjusting tube is locked at this time.)
4. Move throttle drum from "P₂" to "P₁" quickly [Adjusting tube moves in direction "U" (Engine side) while depressing the lock plate.] Ensure that throttle wire stroke "L" is within the specified range, between full throttle and idle.

Throttle wire stroke "L":


40 - 42 mm (1.57 - 1.65 in)

- Adjust throttle wire stroke when throttle wire/accelerator wire is installed and adjusted.
 - Put mark on throttle wire to facilitate measuring wire stroke.
5. Clamp throttle wire at proper positions shown in the illustration after adjusting throttle wire.
 6. After properly adjusting and clamping throttle wire, ensure the parting line is as straight as possible.

Throttle Wire Adjustment (Cont'd)



If throttle wire stroke is improperly adjusted the following problems may arise.

- When the throttle drum fully-open position "P₁" is too far in direction "T", the shift schedule will be as shown by ② in the figure, and the kickdown range will greatly increase.
- When the throttle drum fully-open position "P₁" is too far in direction "U", the shift schedule will be as shown by ① in the figure, and kickdown will not occur.

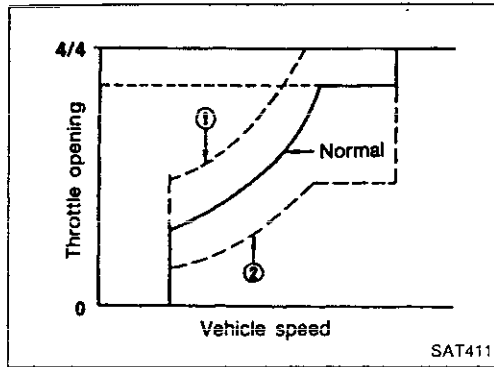

Control Cable Installation and Adjustment


- Move selector lever from the "P" range to the "1" range. You should be able to feel the detents in each range. If the detents cannot be felt or the pointer indicating the range is improperly aligned, the control cable needs adjustment.
- Always adjust control cable when it is removed from selector lever or manual shaft.

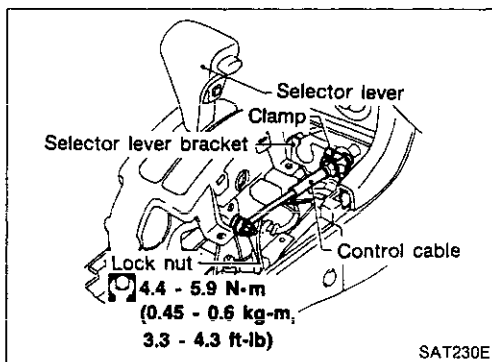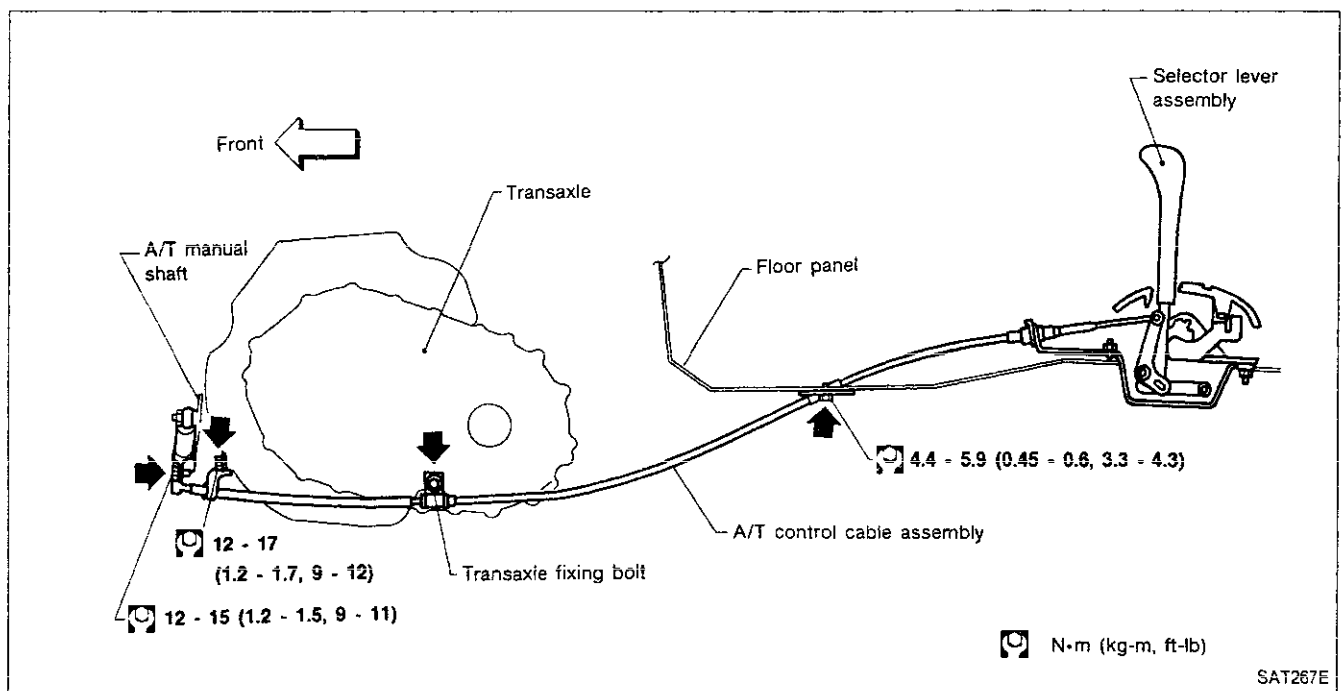

INSTALLATION

1. Place selector lever and manual shaft at "P" position.
2. Connect control cable to selector lever and tighten control cable lock nut. Clamp control cable to selector lever bracket.


Control Cable Installation and Adjustment (Cont'd)

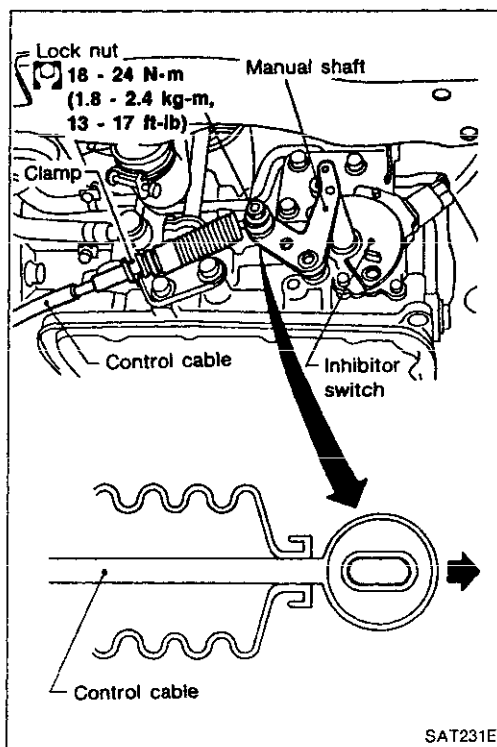

3. Connect control cable to manual shaft and clamp control cable to bracket at transaxle.
4. Pull control cable in the direction of the arrow shown in the illustration by specified force.
Specified force: 6.9 N (0.7 kg, 1.5 lb)
5. Return control cable in the opposite direction of the arrow for 1.0 mm (0.039 in).
6. Tighten control cable lock nut.
7. Move selector lever from "P" range to "1" range and make sure that selector lever can be moved smoothly and without any sliding noise.
8. Apply grease to contacting areas of selector lever and control cable. Install any part removed.


SAT231E

ADJUSTMENT

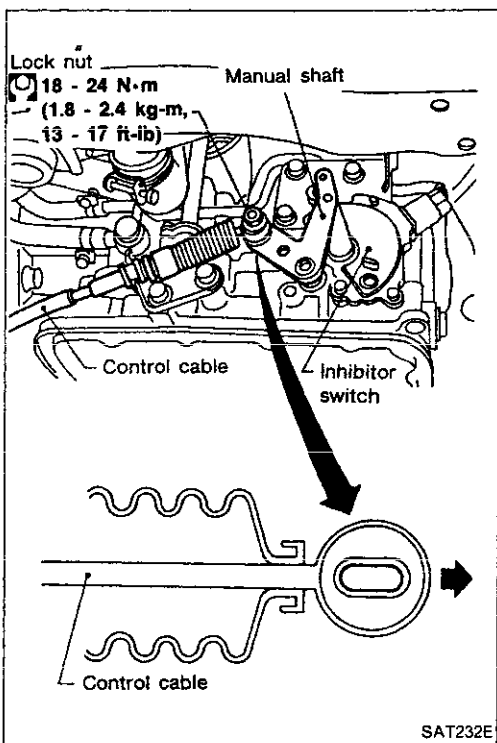

1. Loosen control cable lock nut at transaxle side.
2. Place selector lever and manual shaft at "P" position.
3. Pull control cable in the direction of the arrow shown in the illustration by specified force.
Specified force: 6.9 N (0.7 kg, 1.5 lb)
4. Return control cable in the opposite direction of the arrow for 1.0 mm (0.039 in).
5. Tighten control cable lock nut.
6. Move selector lever from "P" range to "1" range and make sure that selector lever can be moved smoothly and without any sliding noise.
7. Apply grease to contacting areas of selector lever and control cable.


SAT232E

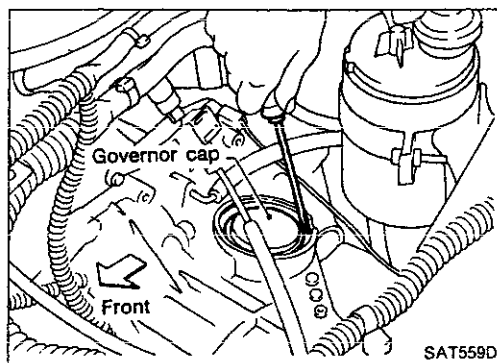


Governor Valve

1. Remove air duct.
2. Remove governor cap snap ring and spacer.
3. Remove governor cap.


SAT559D

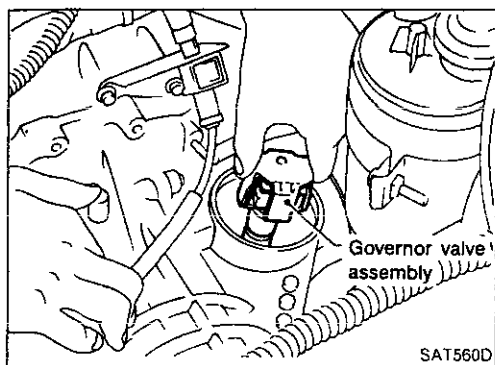Governor Valve (Cont'd)


4. Remove governor valve assembly from transaxle.
5. Check governor valve assembly if necessary — Refer to "DISASSEMBLY".

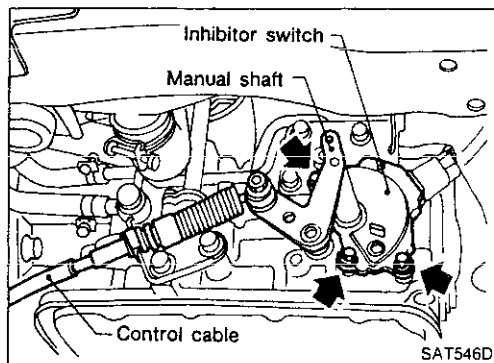**Inhibitor Switch Adjustment**

1. Remove control cable end from manual shaft.
2. Set manual shaft in "N" range.
3. Loosen inhibitor switch fixing bolts.

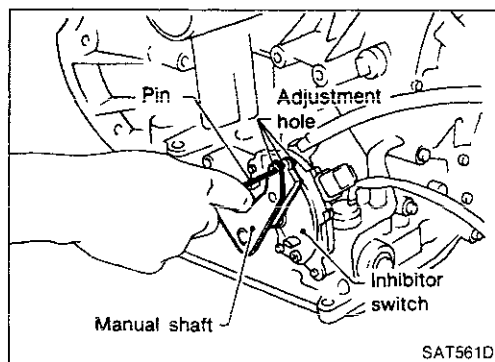

4. Insert 4.0 mm (0.157 in) dia. pin into adjustment hole in both inhibitor switch and manual shaft as near vertically as possible.
5. Tighten inhibitor switch fixing bolts.
6. Remove pin from adjustment hole after adjusting inhibitor switch.
7. Reinstall any part removed.
8. Adjust control cable — Refer to "Control Cable Installation and Adjustment".
9. Check continuity of inhibitor switch — Refer to "ELECTRICAL SYSTEM".


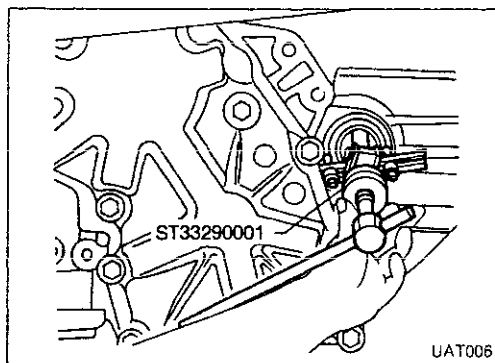
**Differential Side Oil Seal Replacement**

1. Remove drive shaft assemblies. — Refer to section FA.
2. Remove oil seals.

Differential Side Oil Seal Replacement (Cont'd)

3. Install oil seals.

- Apply A.T.F. to oil seal surface before installing.

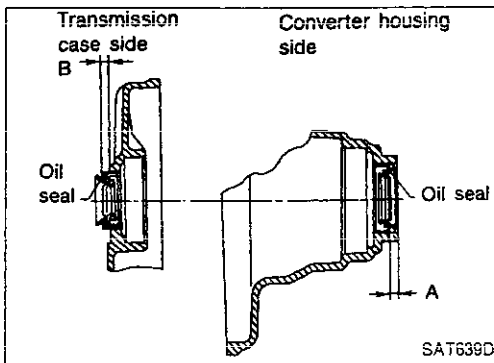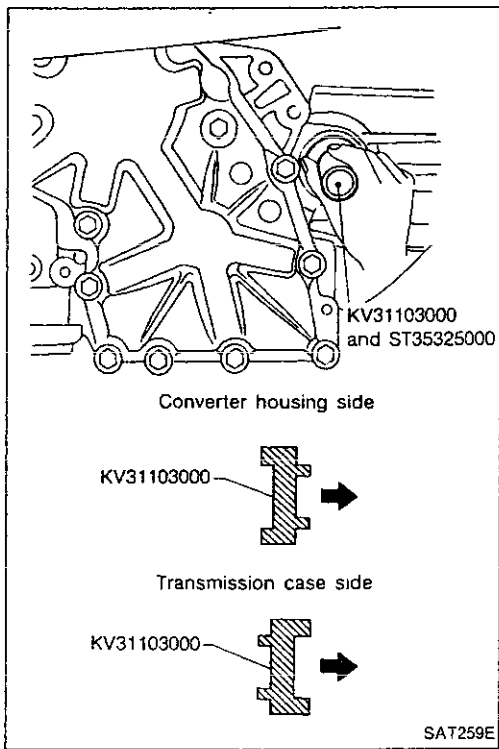


- Install oil seals so that dimensions "A" and "B" are within specifications.

Unit: mm (in)

A	B
5.5 - 6.5 (0.217 - 0.256)	0.5 (0.020) or less

4. Reinstall any part removed.


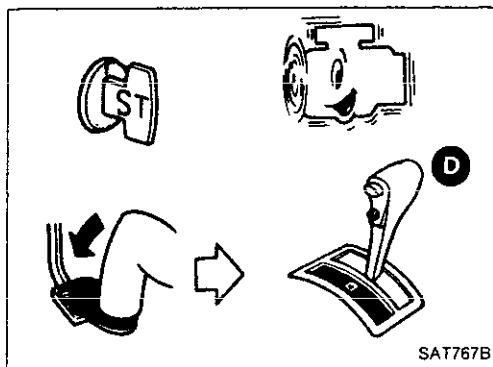


Preliminary Check (Prior to Road Testing)

A/T FLUID CHECK

Fluid leakage check

1. Clean area suspected of leaking, — for example, mating surface of converter housing and transmission case.
2. Start engine, apply foot brake, place selector lever in "D" range and wait a few minutes.
3. Stop engine.
4. Check for fresh leakage.

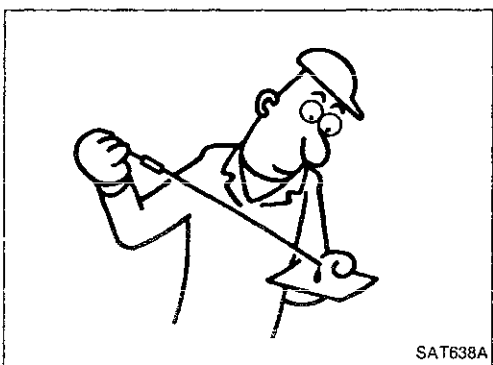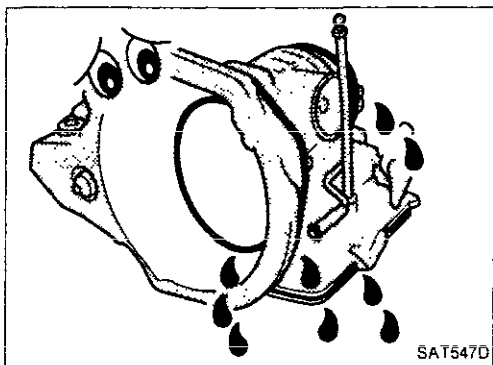

Fluid condition check

Fluid color	Suspected problem
Dark or black with burned odor	Wear of frictional material
Milky pink	Water contamination — Road water entering through filler tube or breather
Varnished fluid, light to dark brown and tacky	Oxidation — Over or under filling — Overheating

Fluid level check — Refer to section MA.

Road Testing

Perform road tests using "Symptom" chart. Refer to page AT-18.

"P" RANGE


1. Place selector lever in "P" range and start engine. Stop engine and repeat the procedure in all ranges, including neutral.
2. Stop vehicle on a slight upgrade and place selector lever in "P" range. Release parking brake to make sure vehicle remains locked.

"R" RANGE

1. Manually move selector lever from "P" to "R", and note shift quality.
2. Drive vehicle in reverse long enough to detect slippage or other abnormalities.

"N" RANGE

1. Manually move selector lever from "R" and "D" to "N" and note shift quality.
2. Release parking brake with selector lever in "N" range. Lightly depress accelerator pedal to make sure vehicle does not move. (When vehicle is new or soon after clutches have been replaced, vehicle may move slightly. This is not a problem.)

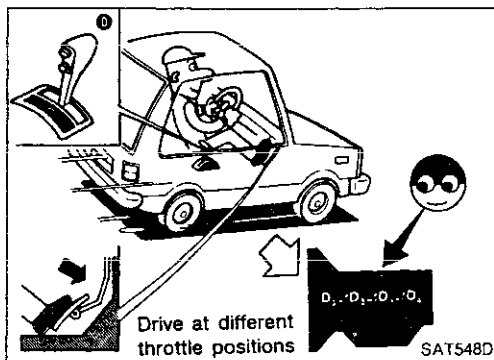


"D" RANGE

1. Manually shift selector lever from "N" to "D" range, and note shift quality.
2. Using the shift schedule as a reference, drive vehicle in "D" range. Record, on symptom chart, respective vehicle speeds at which up-shifting and down-shifting occur. These speeds are to be read at three different throttle positions (light, half and full), respectively. Also determine the timing at which shocks are encountered during shifting and which clutches are engaged.
3. Determine whether lock-up properly occurs while driving vehicle in proper gear position and at proper vehicle speed.

TROUBLE DIAGNOSES

Road Testing (Cont'd)

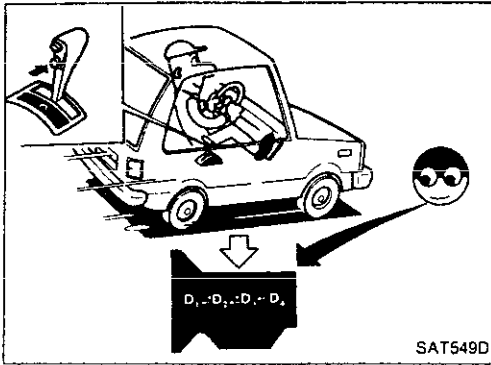

4. Check to determine if shifting to overdrive gear cannot be made while O.D. control switch is "OFF".
5. While driving vehicle in the 60 to 70 km/h (37 to 43 MPH) range in "D₃" range at half to light throttle position, fully depress accelerator pedal to make sure transaxle downshifts from 3rd to 2nd gear.
6. While driving vehicle in the 25 to 35 km/h (16 to 22 MPH) ("D₂" range) at half to light throttle position, fully depress accelerator pedal to make sure transaxle downshifts from 2nd to 1st gear.

"2" RANGE

1. Shift to "2" range and make sure vehicle starts in 1st gear.
2. Increase vehicle speed to make sure transaxle upshifts from 1st to 2nd gear.
3. Further increase vehicle speed. Make sure transaxle does not upshift to 3rd gear.
4. While driving vehicle at the 25 to 35 km/h (16 to 22 MPH) with throttle at half to light position ("2₂" range), fully depress accelerator pedal to make sure transaxle downshifts from 2nd to 1st gear.
5. Allow vehicle to run idle while in "2" range to make sure that transaxle downshifts to 1st gear.
6. Move selector lever to "D" range and allow vehicle to operate at 30 to 40 km/h (19 to 25 MPH). Then, shift to "2" range to make sure transaxle downshifts to 2nd gear.

"1" RANGE

1. Place selector lever in "1" range and accelerate vehicle. Make sure transaxle does not shift from 1st to 2nd gear although vehicle speed increases.
2. While driving vehicle in "1" range, release accelerator pedal to make sure that engine compression acts as a brake.
3. Place selector lever in "D" or "2" range and allow vehicle to run at 15 to 25 km/h (9 to 16 MPH). Then move selector lever to "1" range to make sure transaxle downshifts to 1st gear.


Road Testing (Cont'd)

VEHICLE SPEED WITH SHIFTING GEARS


This check should be carried out when oil temperature is between 50 and 80°C (122 and 176°F) after the vehicle has been driven approx. 10 minutes.

SHIFT SCHEDULE

GA16DE engine

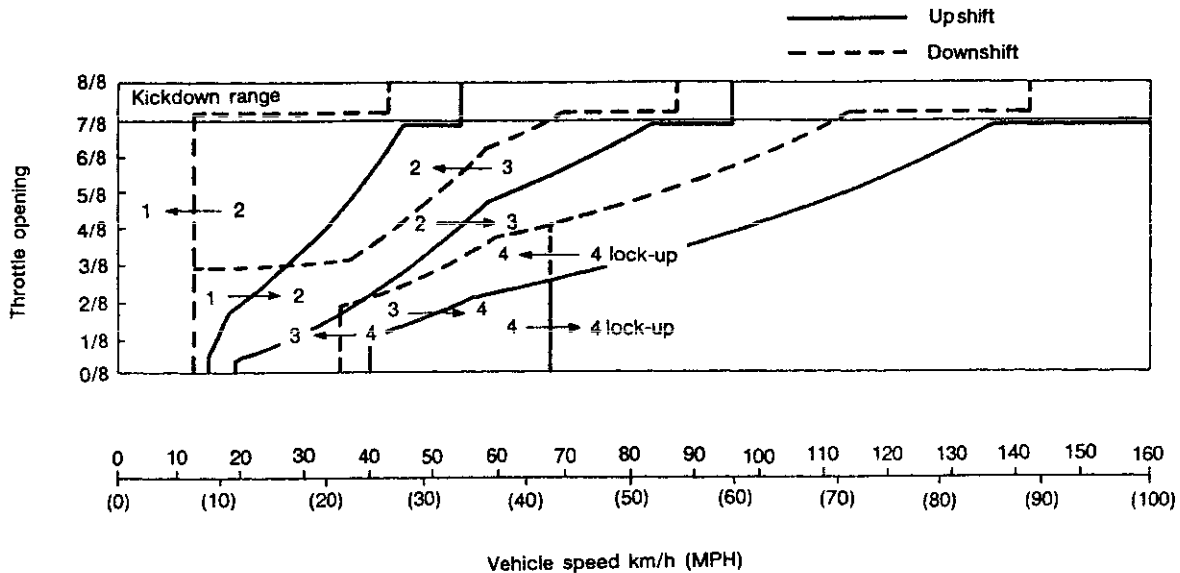


GA16DS engine for Europe

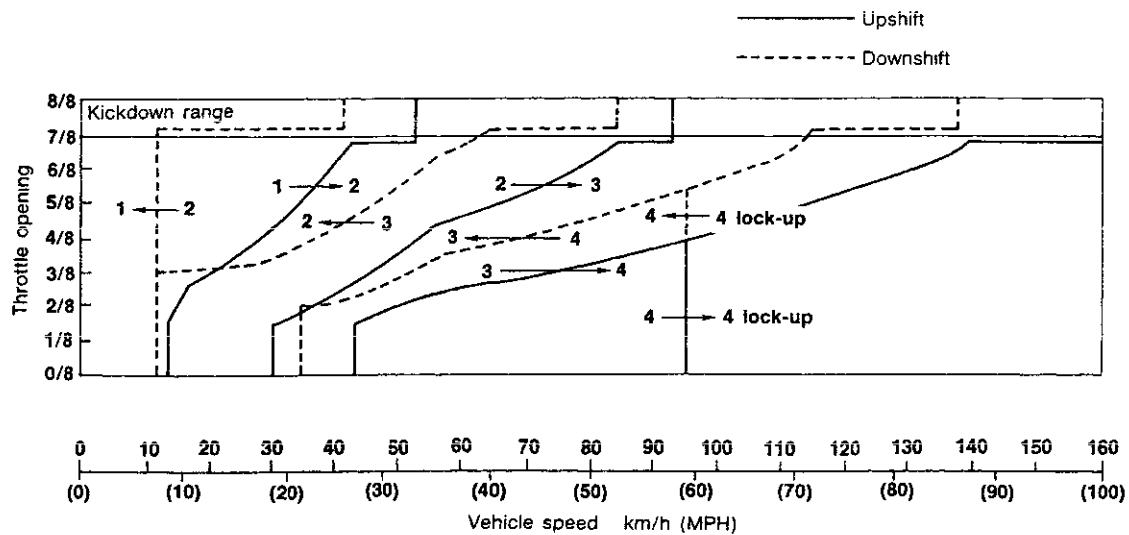


TROUBLE DIAGNOSES

Road Testing (Cont'd)

- GA16DS engine except for Europe
- GA14DS engine except for Europe and Middle East

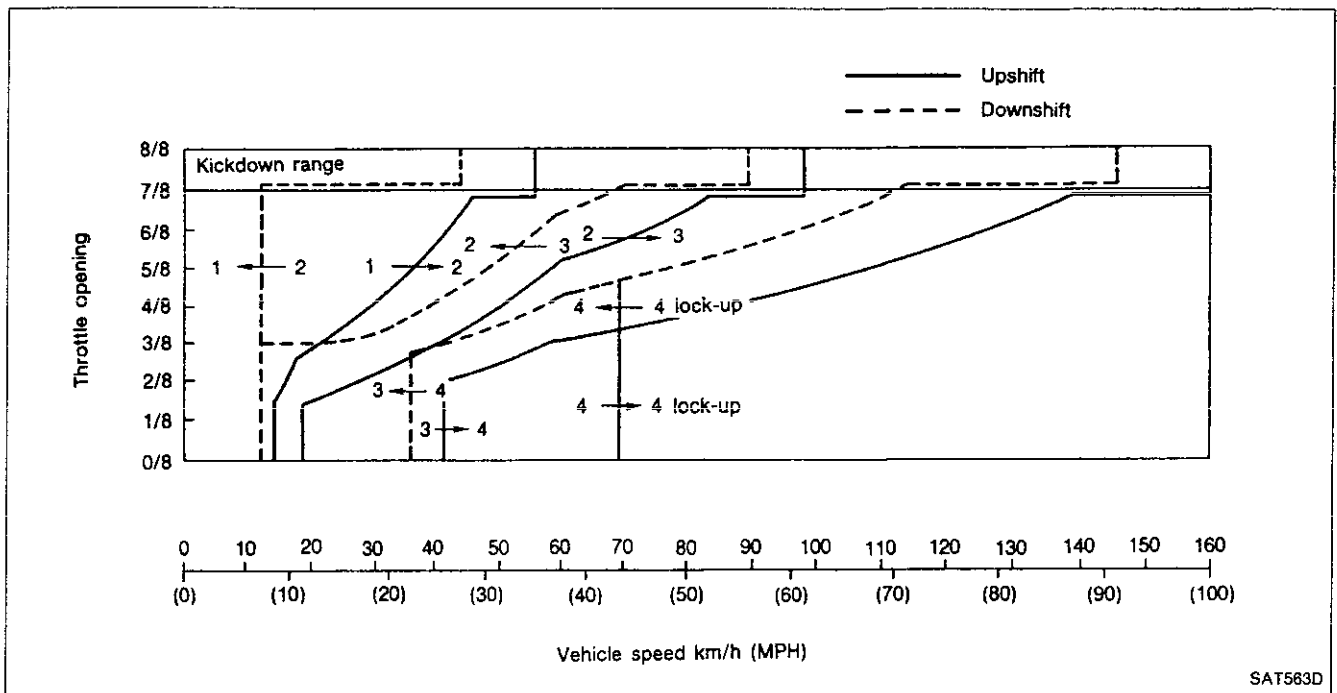

GA14DS engine for Europe and Middle East

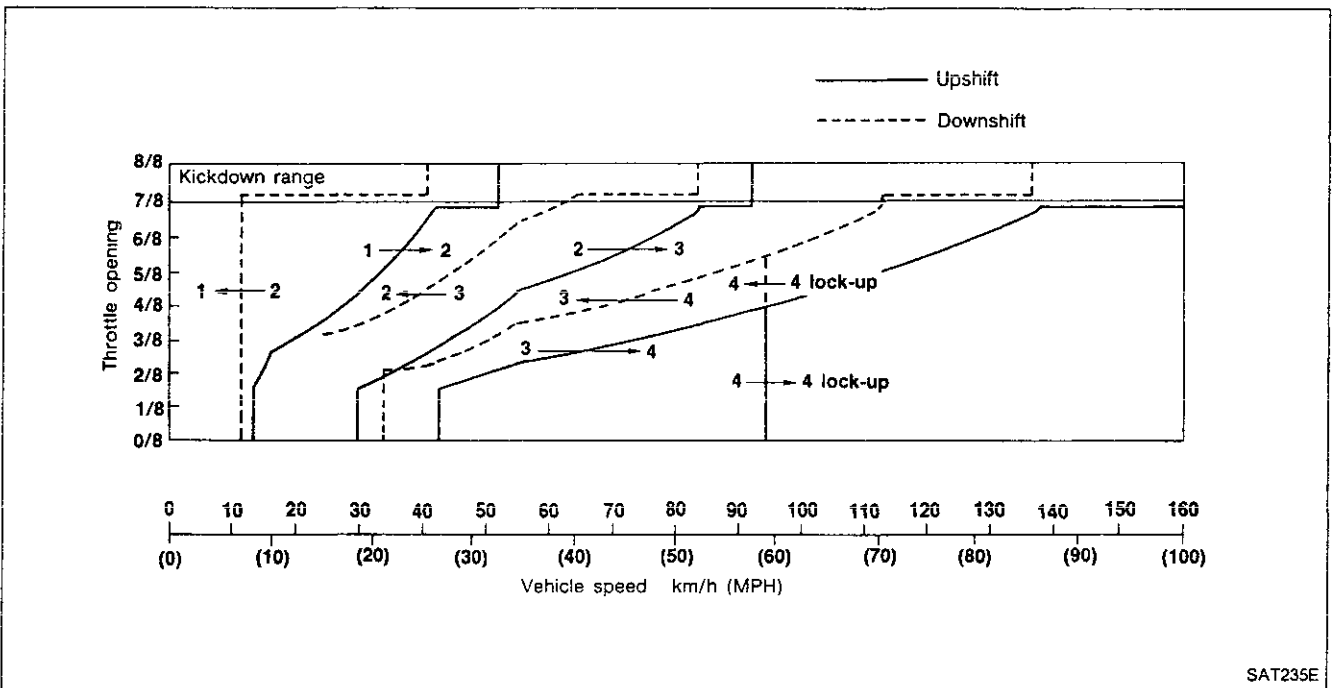

Road Testing (Cont'd)

ROAD TEST SYMPTOM CHART

Numbers are arranged in order of probability. Perform inspections starting with number one and work up.

Circled numbers indicate that the transaxle must be removed from the vehicle.

 : Valve expected to be malfunctioning

ROAD TEST SYMPTOM CHART Numbers are arranged in order of probability. Perform inspections starting with number one and work up. Circled numbers indicate that the transaxle must be removed from the vehicle.		ON VEHICLE														
		Oil level and oil quality	Control cable	Inhibitor switch and wiring	Throttle wire	Engine idling rpm	Line pressure	Control valve	Throttle valve & detent valve	Manual valve	Pressure regulator valve	3-4 shift valve	2-3 shift valve	1-2 shift valve	Overrun clutch control valve	Pressure modifier valve
Sharp shocks in shifting from "N" to "D" range		1	2		5	3	4	7								
Shift shocks	When shifting from 1st to 2nd or 2nd to 3rd	1	2		4		3	6								
	When shifting from 3rd to 4th	1	2		4		3	5								
	When shifting from D to 2 and 1 range. When O D. switch is set from "ON" to "OFF"	1	2		4		3	5								
	When shifting from 2nd to 1st in "1" range	1	2		4		3	5								
Shift slippage when upshifting	When shifting from 1st to 2nd	1	2		4		3	5								
	When shifting from 2nd to 3rd	1	2		4		3	6								
	When shifting from 3rd to 4th	1	2		4		3	5								
Shift slippage with accelerator pedal depressed	When shifting from 4th to 2nd	1	2		5		3	6								
	When shifting from 4th to 3rd	1	2		4		3	6								
	When shifting from 4th to 1st and shifting from 3rd to 1st	1	2		5		3	6								
Poor power/acceleration	When vehicle starts	1	2		4		3	6								
	When upshifting	1	2		4		3	7								
No engine braking	When shifting from "D" to "2" and "1" range	1	2		4		3	5								
	When O.D. switch is set from "ON" to "OFF"	1	2		4		3	7								
	When shifting from 2nd to 1st in "1" range	1	2		4		3	5								
Shift quality	Too low a gear change point from 2nd to 3rd and from 3rd to 2nd	1			3		2	6								
	Too high a gear change point from 2nd to 3rd and from 3rd to 2nd.	1			3		2	6								
	Too low a gear change point from 2nd to 1st in "1" range	1			3		2	6								
	Too high a gear change point from 2nd to 1st in "1" range.	1			3		2	6								

TROUBLE DIAGNOSES

Road Testing (Cont'd)

ON VEHICLE															OFF VEHICLE														
Kickdown modifier valve	1-2 accumulator valve	3-2 timing valve	1st reducing valve	Torque converter relief valve	Throttle modifier valve	4th speed cut valve	Lock-up control valve	4-2 sequence valve	Governor pressure	Governor valve	O.D. cancel solenoid	Accumulator 3-R	Accumulator N-D	Ignition switch and starter motor	O.D. control switch and wiring	Torque converter	Oil pump	Reverse clutch	High clutch	Forward clutch	Forward one-way clutch	Overrun clutch	Low one-way clutch	Low & reverse clutch	Brake band	Parking components			
												5	6	.	.	.	9	6	.	.	.								
														.	.	.	8	.	.	.					7	.			
														.	.	.		.	.	.		7	.		6	.			
														.	.	.		.	8	.	.				6	.			
														.	.	.	7	.	.	.	.			6	.	.			
														.	.	.	7	.	.	.	.	.	.		6	.			
												5		.	.	.	9	.	8	.	.			.	7	.			
														.	.	.	8	.	7	.	.				6	.			
									4	7				.	.	.	8	9	10	11	13	14	15	16	17	12	.		
												5				.	7	.	8	.	.	10	.	11	9	.			
									4	7						.	11	.	8	.	10	.	.		9	.			
												5		.	.	.	9	.	7	8	.	.	.	.	.	.			
									5	6						.	9	.		8	.	.	.	.	.	.			
														.	.	.		.	.	.		6	.	.	.	.			
											6			5		.		.	.	.		8	.		.	.			
																.	.	.	.			6		7		.			
									4	5				.	.	.	.	.	.			.	.		.	.			
									4	5						.	.	.	.			.	.		.	.			
									4	5						.	.	.	.			.	.		.	.			
									4	5						.	.	.	.			.	.		.	.			

TROUBLE DIAGNOSES

Road Testing (Cont'd)

Numbers are arranged in order of probability.
Perform inspections starting with number one
and work up.


Circled numbers indicate that the transaxle
must be removed from the vehicle.

 : Valve expected to be malfunctioning

Numbers are arranged in order of probability. Perform inspections starting with number one and work up. Circled numbers indicate that the transaxle must be removed from the vehicle. : Valve expected to be malfunctioning		ON VEHICLE														
		Oil level and oil quality	Control cable	Inhibitor switch and wiring	Throttle wire	Engine idling rpm	Line pressure	Control valve	Throttle valve & detent valve	Manual valve	Pressure regulator valve	3-4 shift valve	2-3 shift valve	1-2 shift valve	Overrun clutch control valve	Pressure modifier valve
Shift quality	Failure to change gear from 4th to 2nd with accelerator pedal depressed.	1	.	.	3	.	2	6								
	Failure to change gear from 3rd to 2nd with accelerator pedal depressed.	1	.	.	3	.	2	6								
	Failure to change gear from 1st to 2nd in "D" and "2" range	1			3		2	6								
	Vehicle does not start from "1st" in "D" and "2" range.	1	.	.	3	.	2	6								
	Failure to change gear to 3rd and 4th in "D" range	1	.	.	3	.	2	6								
	Changes gear to 1st directly when selector lever is set from "D" to "1" range	1	.	.	3	.	2	6								
	Changes gear to 2nd in "1" range.	1	.	.	3	.	2	6								
Lock-up quality	Lock-up point is extremely high or low	1	.	.	3	.	2	6								
	Torque converter does not lock-up.	1	.	.	3	.	2	6								
Engine does not start in "P" and "N" ranges or engine starts in ranges other than "P" and "N" ranges.			2	3	.	.										
Vehicle moves with selector lever in "P" range.		.	1	.	.	.	.									

Road Testing (Cont'd)

AT-21

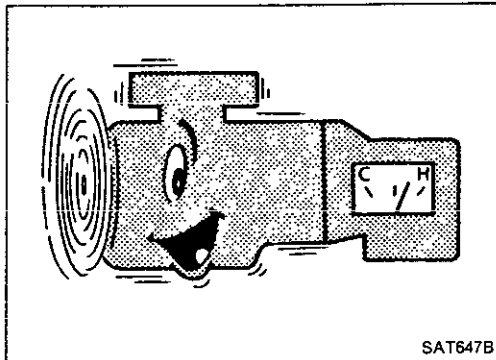


Stall Tasting


STALL TEST PROCEDURE

1. Check A/T and engine fluid levels. If necessary, add fluid.
2. Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.


A.T.F. operating temperature:
50 - 80°C (122 - 176°F)

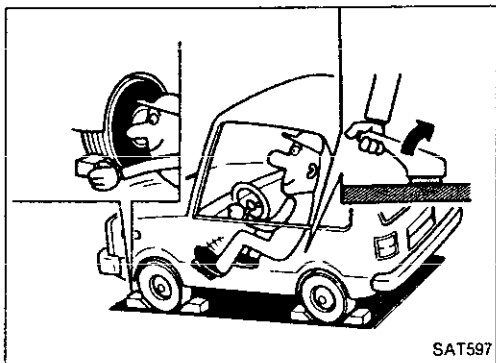

3. Set parking brake and block wheels.
4. Install a tachometer where it can be seen by driver during test.

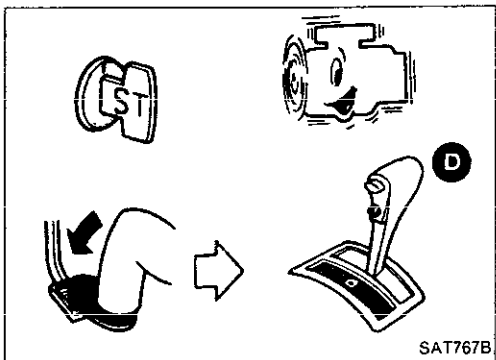

5. Start engine, apply foot brake, and place selector lever in "D" range.

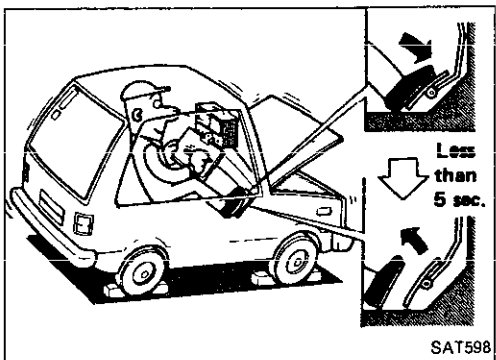

6. Accelerate to wide-open throttle gradually while applying foot brake.
 7. Quickly note the engine stall revolution and immediately release throttle.
- **During test, never hold throttle wide-open for more than 5 seconds.**

Stall revolution standard:

GA14DS engine:

For Europe 2,150 - 2,450 rpm

Except Europe 2,200 - 2,500 rpm

GA16DS engine:


For Europe and Middle East 2,450 - 2,750 rpm

Except Europe and Middle East 2,400 - 2,700 rpm

GA16DE engine 2,450 - 2,750 rpm

TROUBLE DIAGNOSES

Stall Tasting (Cont'd)

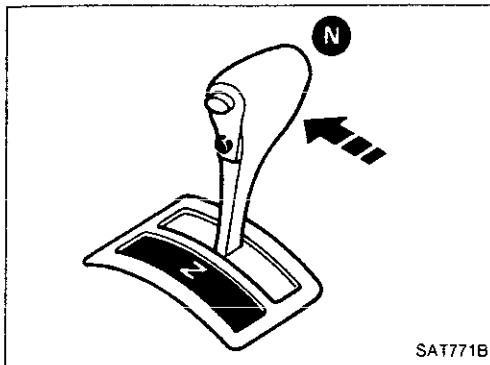

8. Shift selector lever to "N".
9. Cool off A.T.F.
 - **Run engine at idle for at least one minute.**
- 10 Perform stall tests in the same manner as in steps 5 through 9 with selector lever in "2", "1" and "R", respectively.


Stall Tasting (Cont'd)

JUDGMENT OF STALL TEST

Judgement of stall test


Selector lever position	Judgment		
D	H	O	L
2	H	O	L
1	O	O	L
R	H	H	L

O : Stall revolution is normal.
H : Stall revolution is higher than specified
L : Stall revolution is lower than specified.

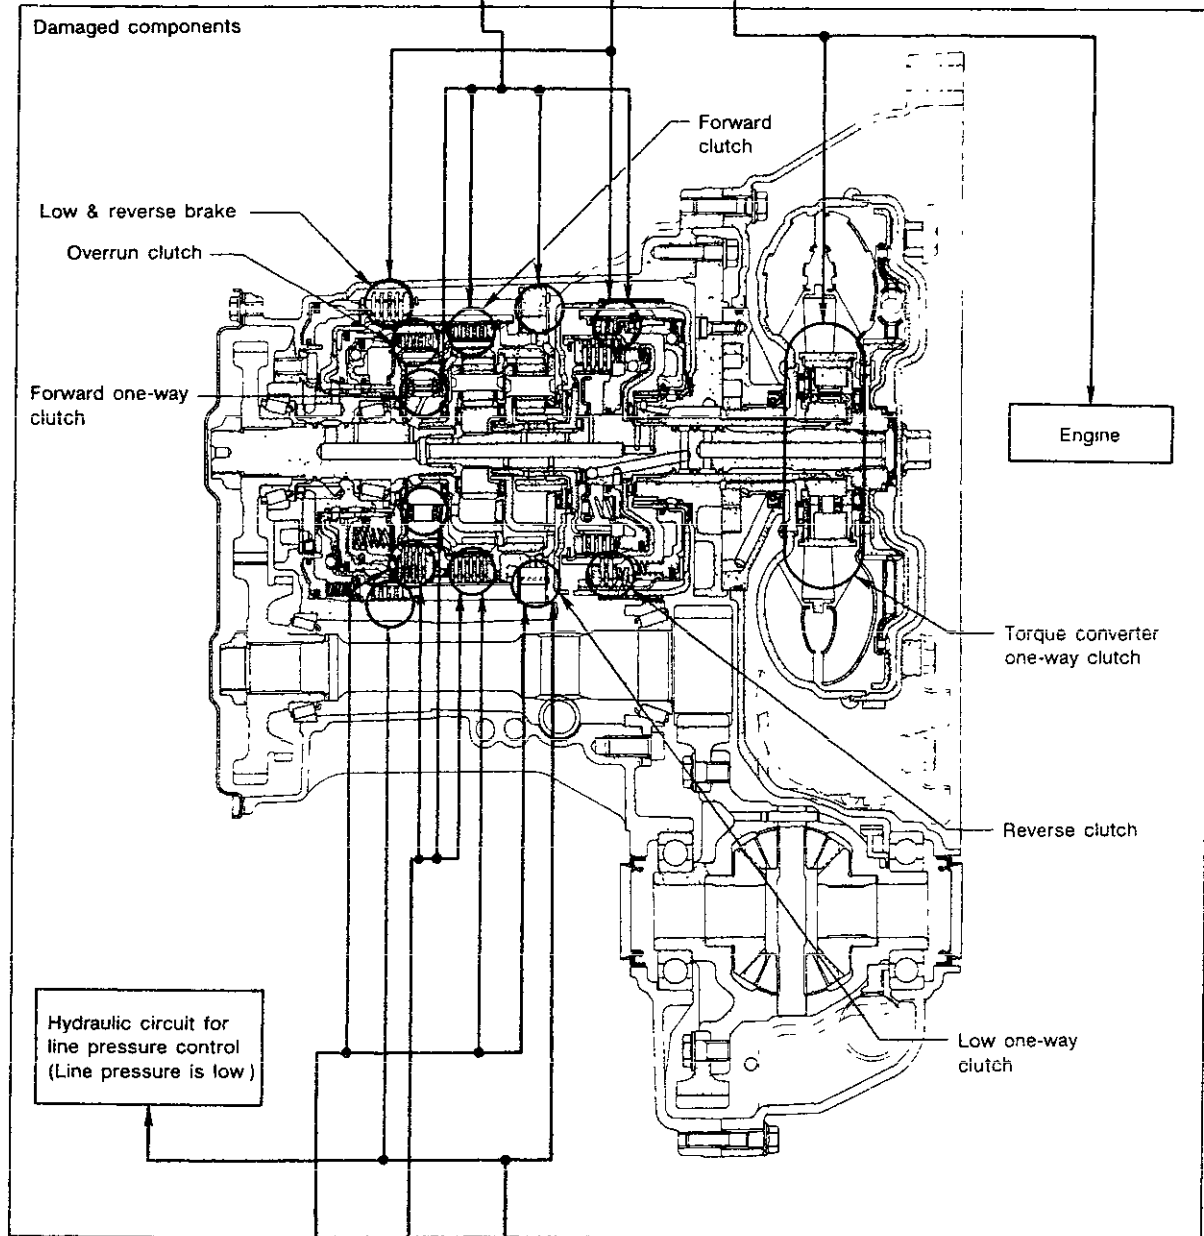


D	H	H	H	O
2	H	H	H	O
1	O	H	H	O
R	O	O	H	O
Selector lever position	Judgment			

Clutches and brakes except high clutch and brake band are O K (Condition of high clutch and brake band cannot be confirmed by stall test)

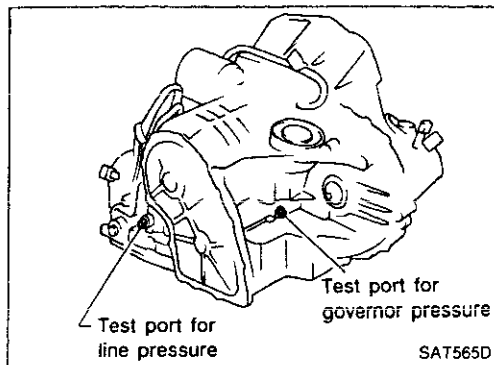

Pressure Testing


- Location of pressure test port.
- Always replace pressure plugs as they are self-sealing bolts.

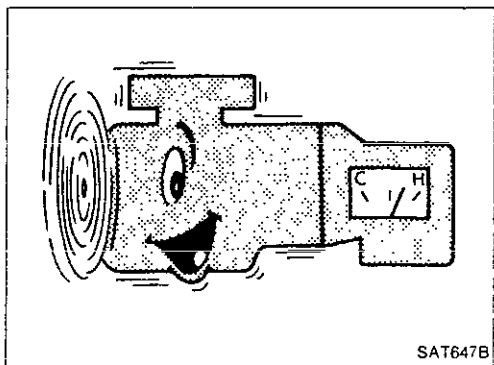


LINE PRESSURE TEST PROCEDURE

1. Check A/T and engine fluid levels. If necessary, add fluid.
2. Warm up engine until engine oil and A.T.F. reach operating temperature; after vehicle has been driven approx. 10 minutes.

A.T.F. operating temperature:
50 - 80°C (122 - 176°F)

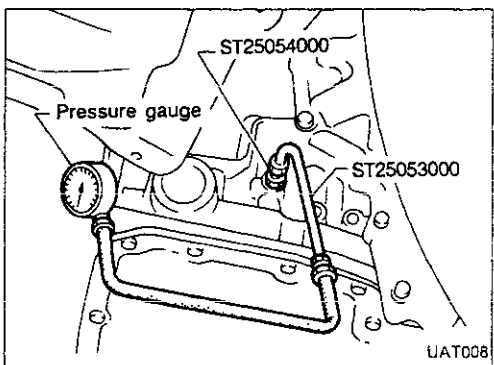


3. Install pressure gauge to line pressure port.

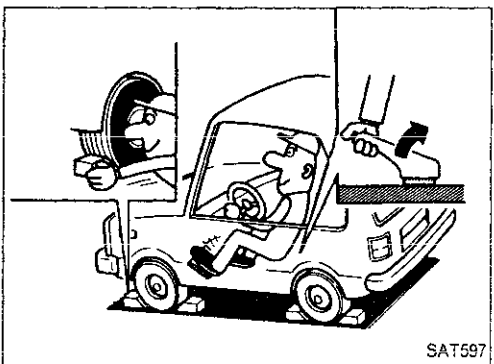

4. Set parking brake and block wheels.

Continue to depress brake pedal fully while performing line pressure test at stall speed.

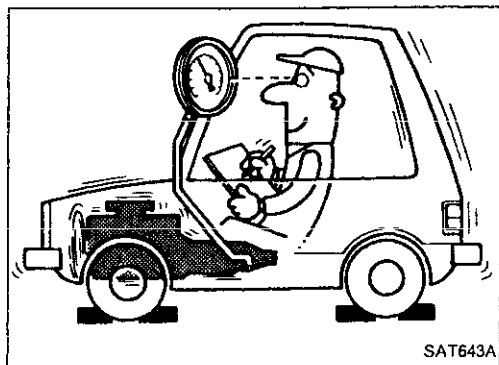

Pressure Testing (Cont'd)


5. Start engine and measure line pressure at idle and stall speed.

Line pressure:

Engine speed rpm	Line pressure kPa (bar, kg/cm ² , psi)			
	R range	D range	2 range	1 range
Idle	883 (8.83, 9.0, 128)	539 (5.39, 5.5, 78)	588 (5.88, 6.0, 85)	883 (8.83, 9.0, 128)
Stall	1,765 (17.65, 18.0, 256)	1,079 (10.79, 11.0, 156)	883 (8.83, 9.0, 128)	1,079 (10.79, 11.0, 156)

JUDGMENT OF LINE PRESSURE TEST

- If line pressure does not rise, first check to make sure that throttle wire is connected properly.
- 1) When line pressure while idling is low at all positions ("D", "2", "1", "R" and "P"), the problem may be due to:
 - Wear on interior of oil pump
 - Oil leakage at or around oil pump, control valve body, transmission case or governor
 - Sticking pressure regulator valve
 - Sticking pressure modifier valve
 - 2) When line pressure while idling is low at a particular position, the problem may be due to the following:
 - If oil leaks at or around low & reverse brake circuit, line pressure becomes low in "R" range but is normal in "P", "D", "2" or "1" range.
 - 3) When line pressure is high while idling, pressure regulator valve may have stuck.

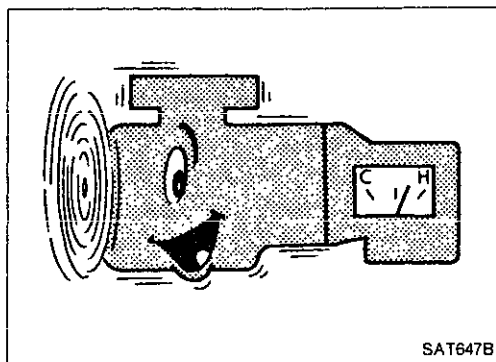

GOVERNOR PRESSURE TESTING


1. Check A/T and engine fluid levels. If necessary, add fluid.
2. Warm up engine until engine oil and A.T.F. reach operating temperature; after vehicle has been driven approx. 10 minutes.

A.T.F. operating temperature:

50 - 80°C (122 - 176°F)


TROUBLE DIAGNOSES

Pressure Testing (Cont'd)

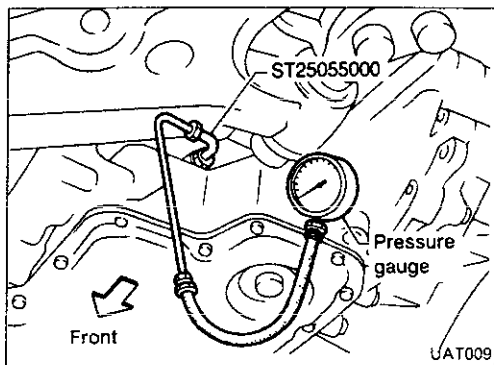


3. Remove L.H. side drive shaft.
4. Install pressure gauge to governor pressure port.
5. Reinstall drive shaft.

Make sure that pressure gauge adapter does not touch drive shaft.

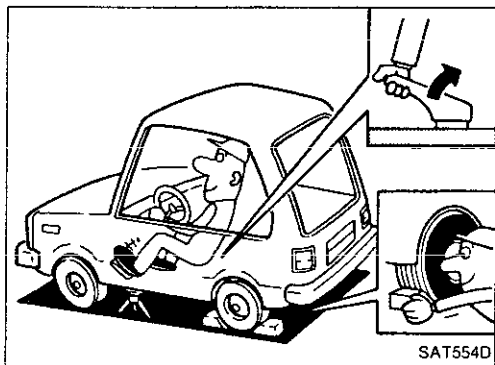

6. Set parking brake and block rear wheels.
7. Jack up front wheels.
8. Set selector lever in D range and drive vehicle.

Be careful of rotating wheels.

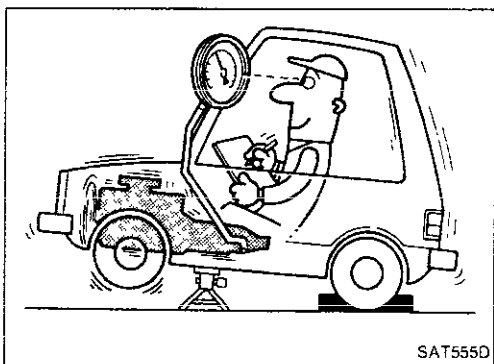


Governor pressure:

- Governor pressure is not generated when vehicle is stopped. (front wheels are not rotating.)
- Governor pressure rises gradually in response to vehicle speed. (front wheel rotating speed.)

If not, check governor valve assembly.
Refer to "DISASSEMBLY"

Wiring Diagram


R.H.D. models

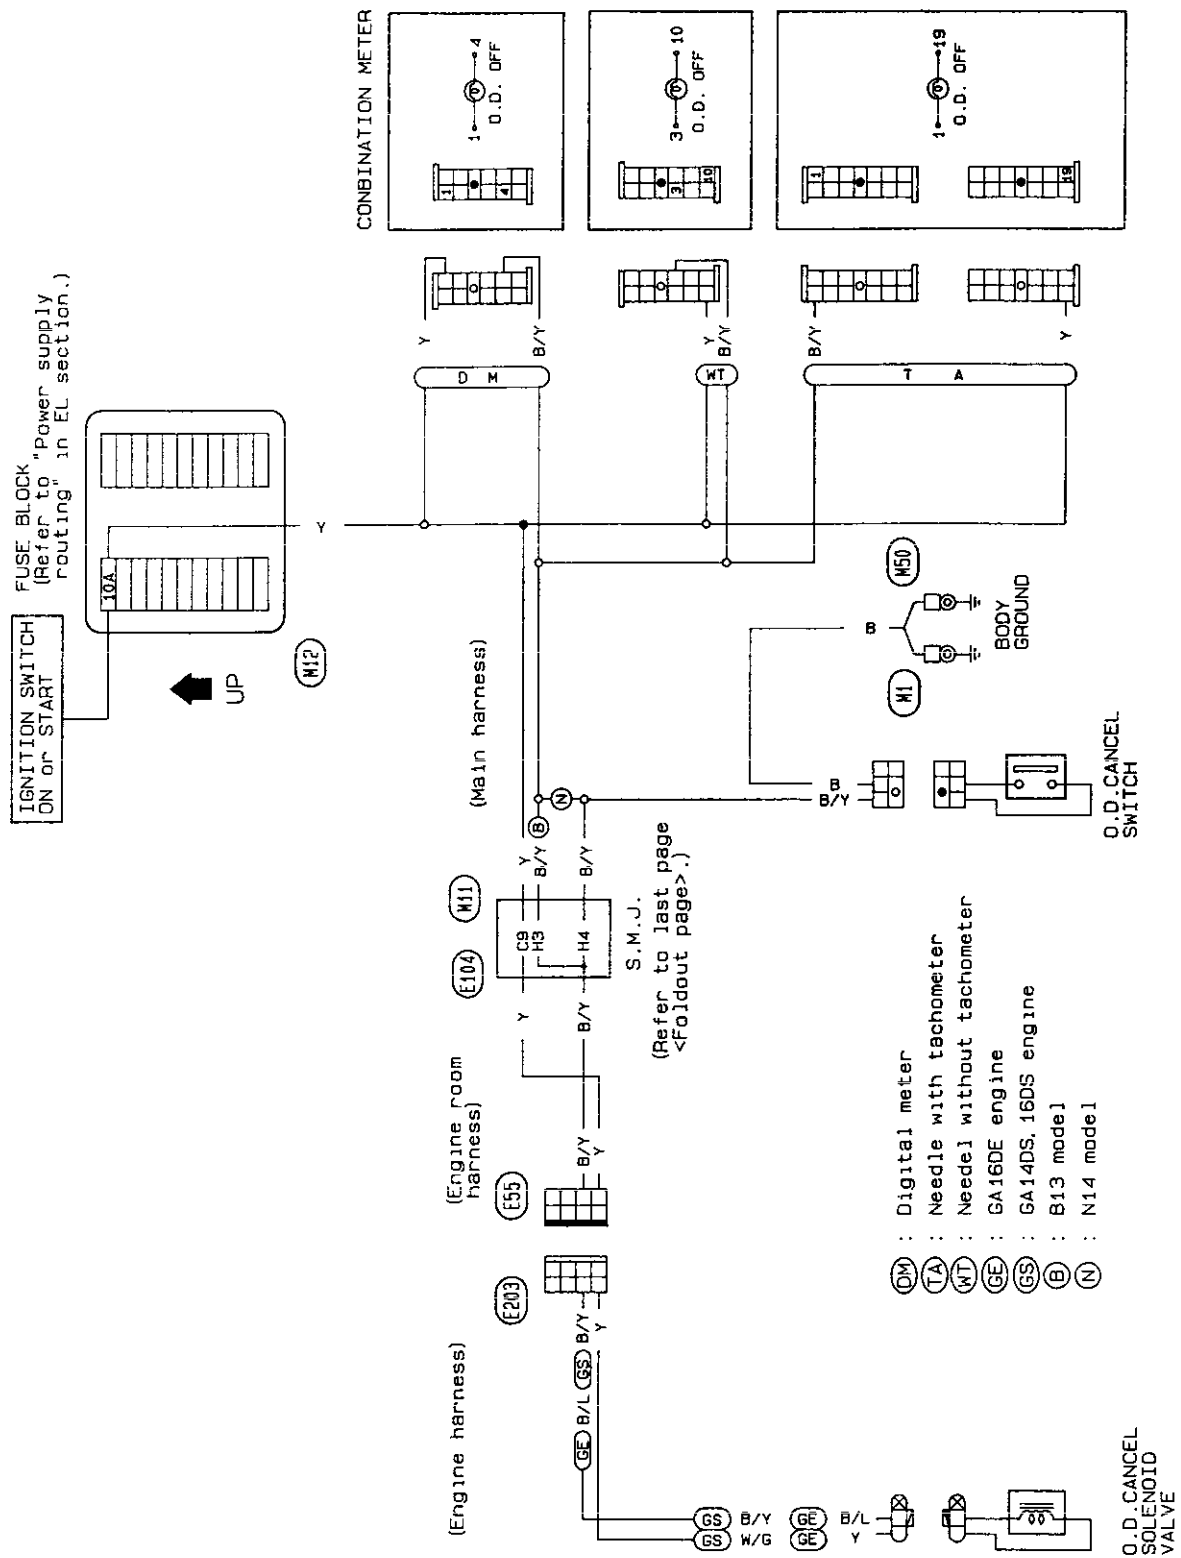


SAT269E

Wiring Diagram (Cont'd)

 FUSE BLOCK
(Refer to "Power supply routing" in EL section.)



O.D. CANCEL
SOLENOID
VALVE

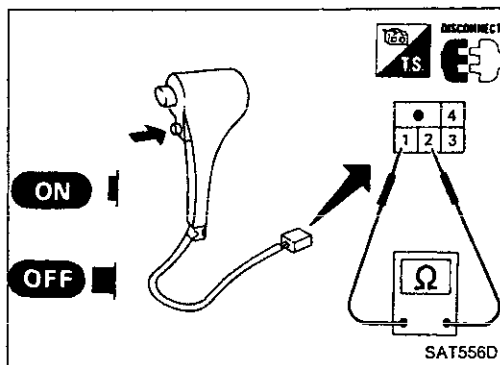


Component Check

OVERDRIVE CONTROL SWITCH

- Check continuity between two terminals.


O.D. switch position	Continuity
ON	No
OFF	Yes

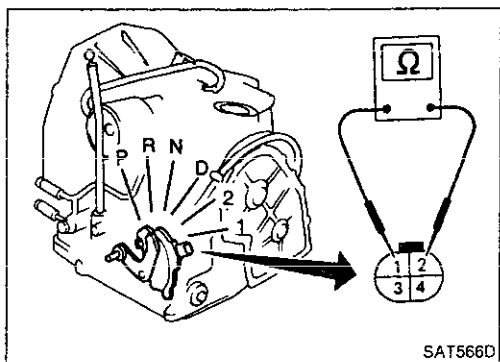

INHIBITOR SWITCH

- Check continuity in "N", "P" and "R" ranges.
- With control lever held in "N" range, turn manual lever an equal amount in both directions to see if current flow ranges are nearly the same. (When manual lever is in each position, continuity normally exists within 1.5° in either direction.) If current flows outside normal range, or if normal flow range is out of specifications, properly adjust inhibitor switch.

Terminal No.	①	②	③	④
Range				
P N.	○	○		
R			○	○





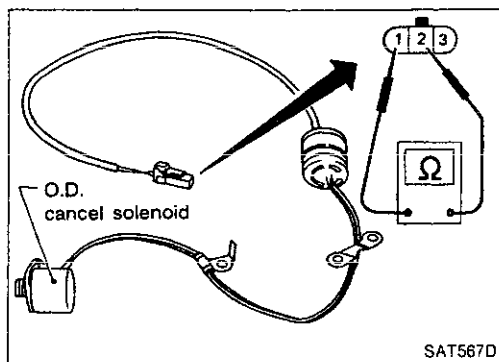


O.D. CANCEL SOLENOID

- Check resistance between terminals.

Terminal No.	Resistance
①—②	Approximately 25Ω

REMOVAL AND INSTALLATION

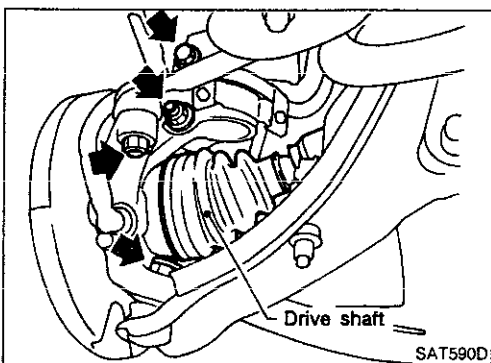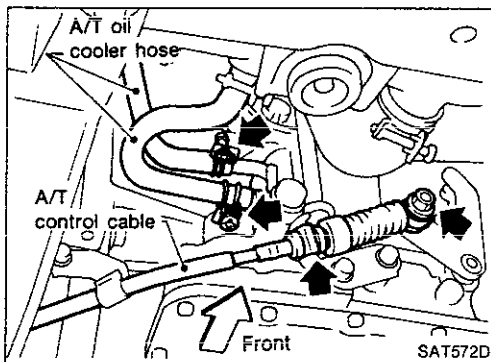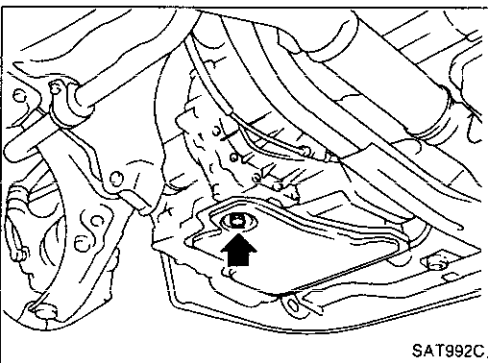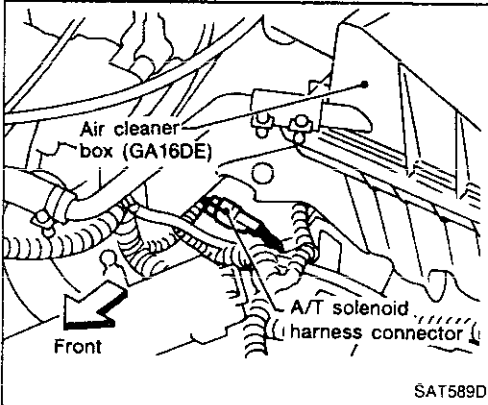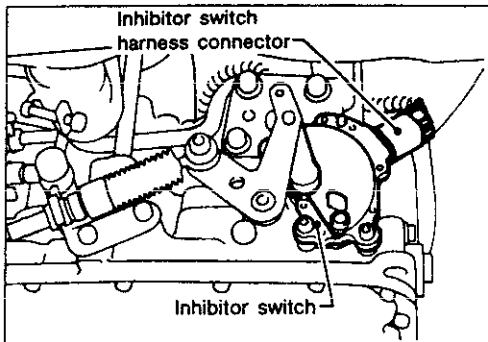

Removal


- Remove battery and bracket.
- Remove air duct. (GA16DE)
- Disconnect A/T solenoid harness connector and inhibitor switch harness connector.
- Disconnect throttle wire at engine side.

- Drain A.T.F.

- Disconnect control cable from transaxle.
- Disconnect oil cooler hoses.

- Remove drive shafts — Refer to "Section FA".
- Remove exhaust front tube.
- Remove starter motor from transaxle.

Removal (Cont'd)

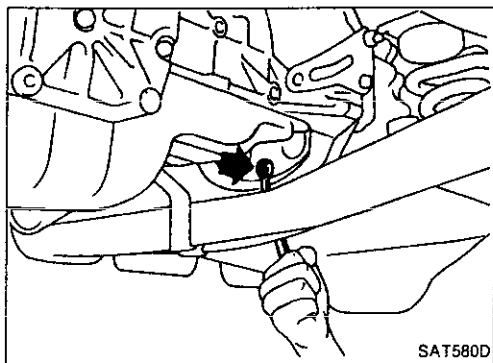


- Remove front and rear gussets and engine rear plate.
- Remove bolts securing torque converter to drive plate.


Rotate crankshaft for access to securing bolts.

- Support engine by placing a jack under oil pan.

Do not place jack under oil pan drain plug.

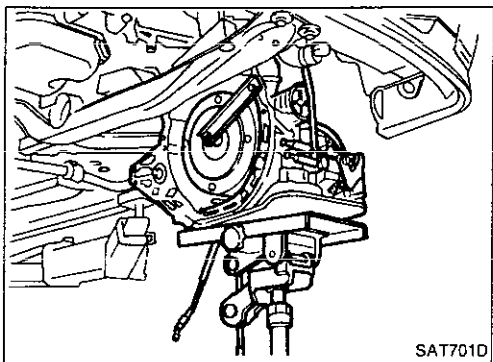

- Support transaxle with a jack.
- Remove mountings from transaxle.
- Remove bolts fixing A/T to engine.
- Lower transaxle while supporting it with a jack.

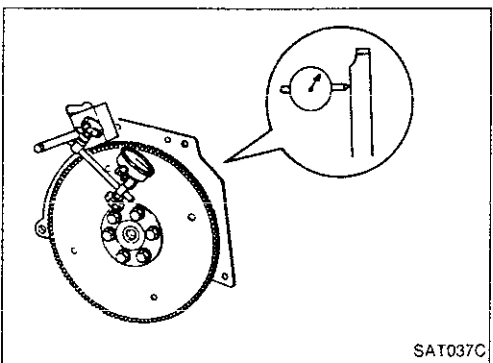


Installation

- Drive plate runout

Maximum allowable runout:

0.5 mm (0.020 in)


If this runout is out of specification, replace drive plate with ring gear.

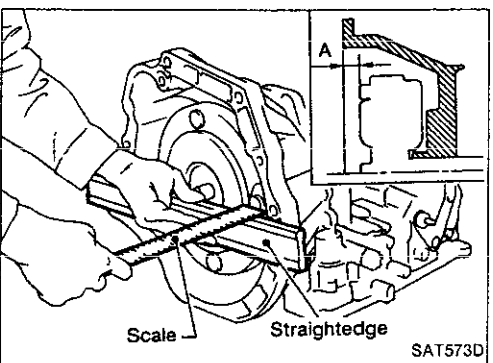

- When connecting torque converter to transaxle, measure distance "A" to be certain that they are correctly assembled.

Distance "A":


21.1 mm (0.831 in) or more

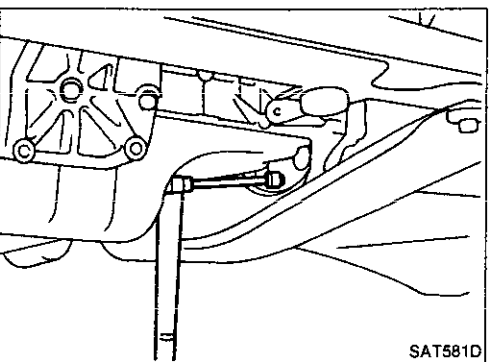

- Install converter to drive plate.
- **After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transaxle rotates freely without binding.**


REMOVAL AND INSTALLATION

Installation (Cont'd)

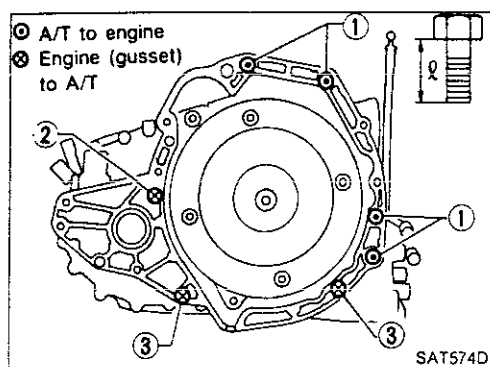

- Tighten bolts fixing transaxle


Bolt No.	Tightening torque N·m (kg-m, ft-lb)	Bolt length "ℓ" mm (in)
①	30 - 40 (3.1 - 4.1, 22 - 30)	50 (1.97)
②	30 - 40 (3.1 - 4.1, 22 - 30)	30 (1.18)
③	16 - 21 (1.6 - 2.1, 12 - 15)	25 (0.98)
Front gusset to engine	30 - 40 (3.1 - 4.1, 22 - 30)	20 (0.79)
Rear gusset to engine	16 - 21 (1.6 - 2.1, 12 - 15)	16 (0.63)

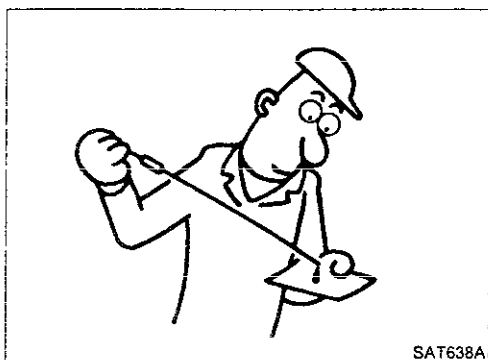

- Reinstall any part removed.
- Adjust control cable and throttle wire. Refer to "ON-VEHICLE SERVICE".
- Check inhibitor switch. Refer to "ELECTRICAL SYSTEM".
- Refill transaxle with A.T.F. and check fluid level.
- Move selector lever through all positions to be sure that transaxle operates correctly. With parking brake applied, idle engine. Move selector lever through "N" to "D", to "2", to "1" and "R". A slight shock should be felt through the hand gripping the selector each time the transaxle is shifted.
- Perform road test — Refer to "ROAD TESTING".


MAJOR OVERHAUL

Cross-sectional View

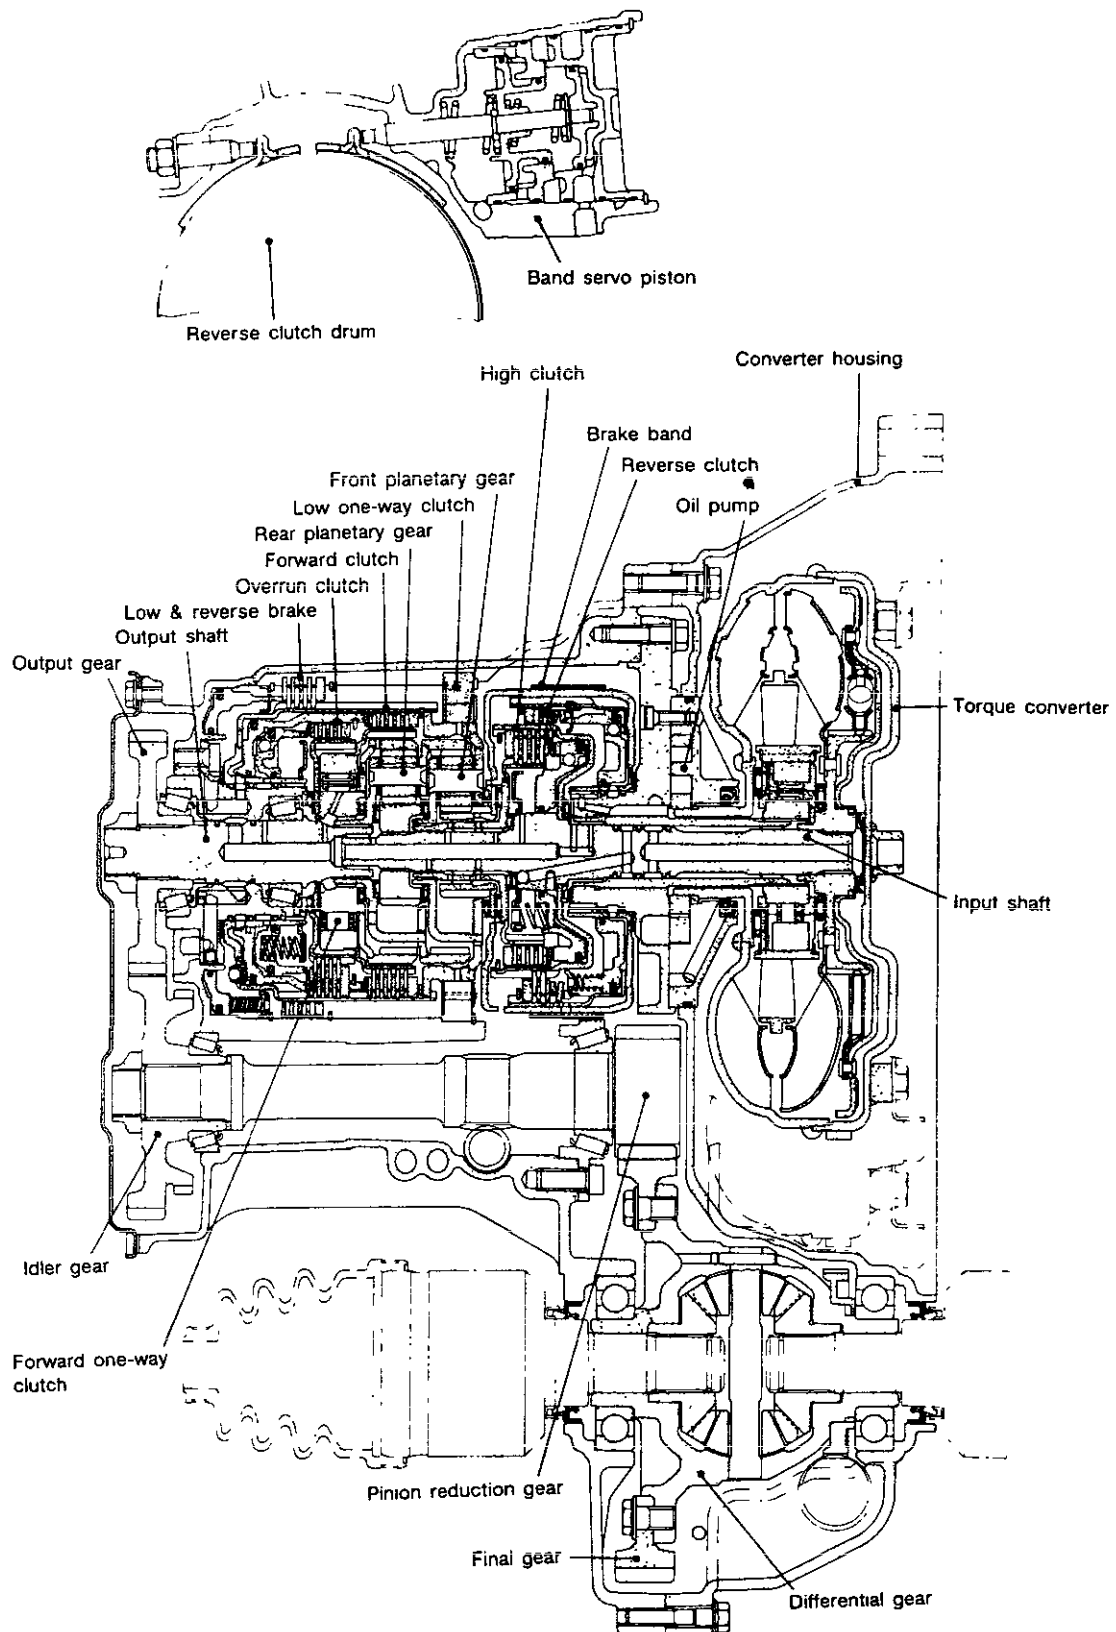


SAT213E

MAJOR OVERHAUL

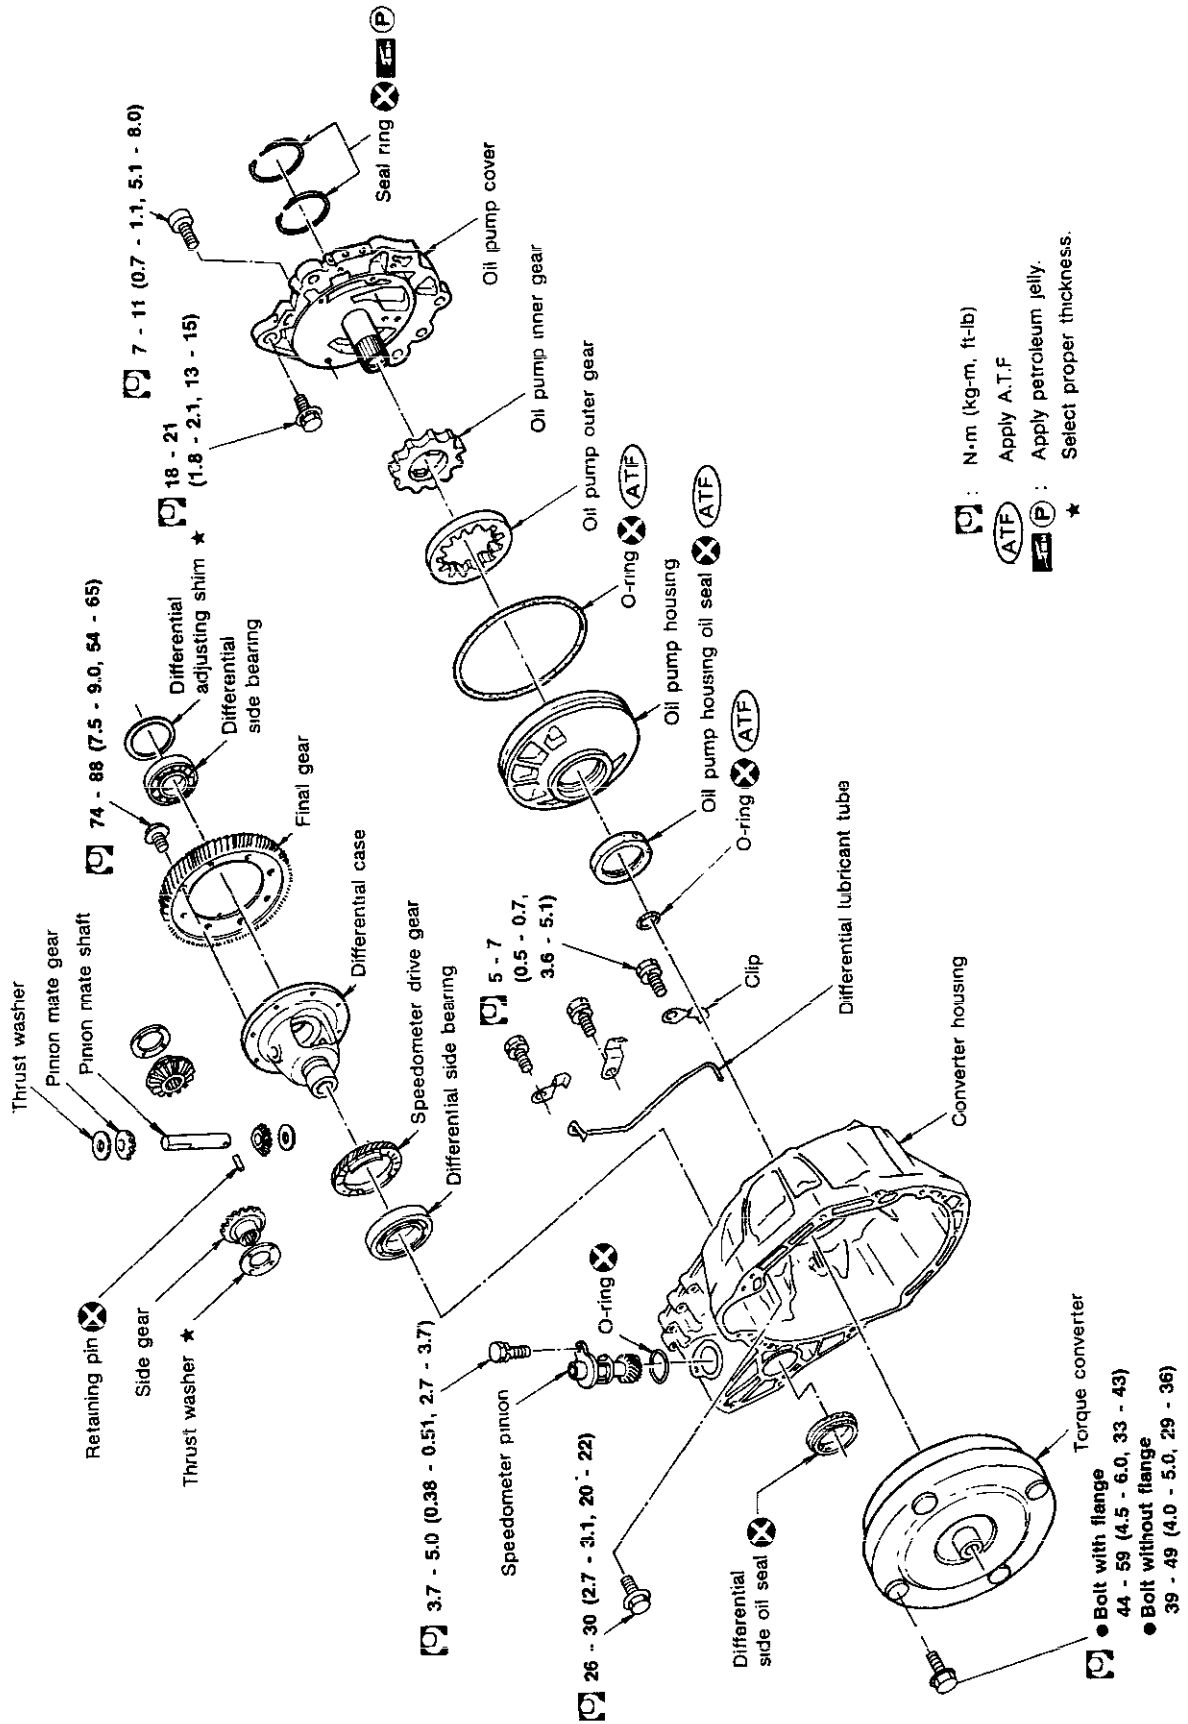

[] : N·m (kg-m, ft-lb)
 (ATF) : Apply A.T.F.
 (P) : Apply petroleum jelly.
 ★ : Select proper thickness.


MAJOR OVERHAUL

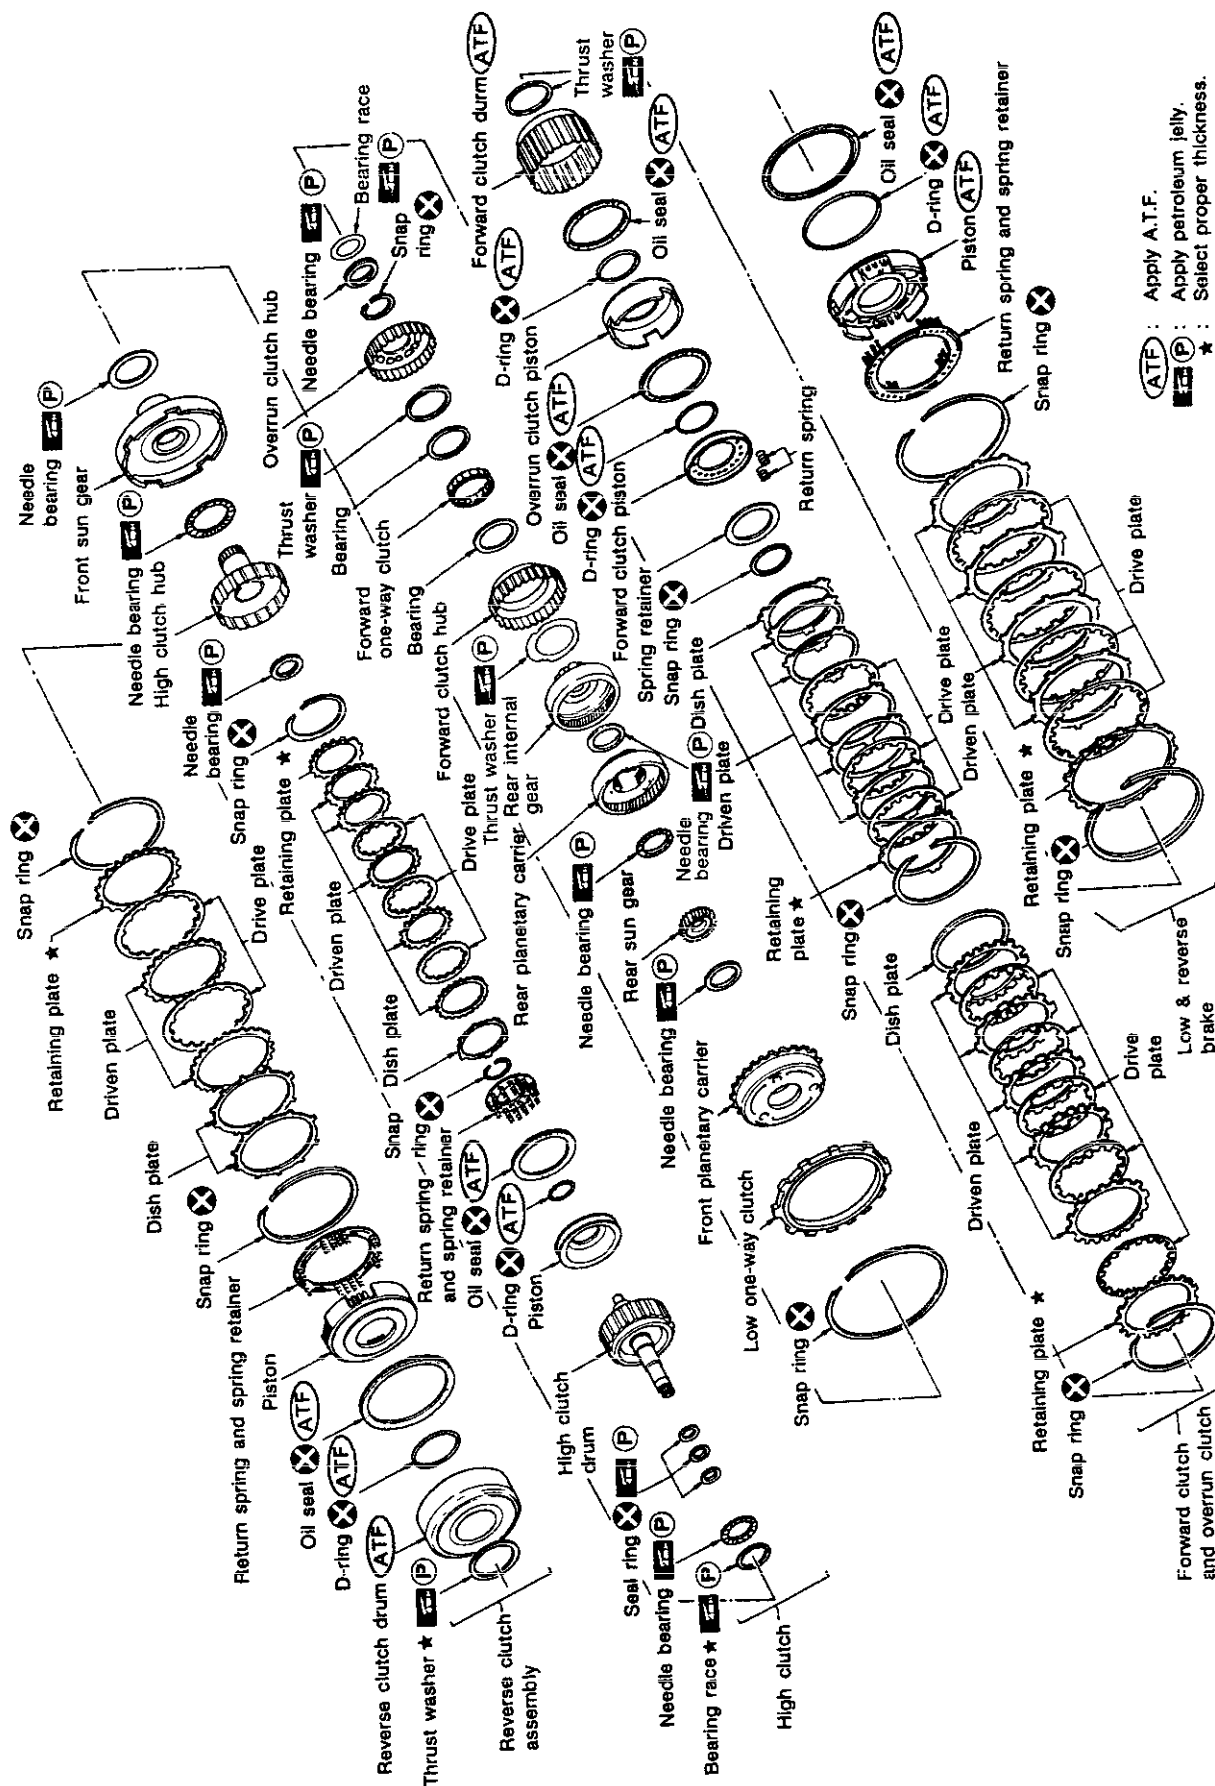


ATE : App'ly A.T.E.

Apply petroleum jelly.

★ : Select proper thickness.

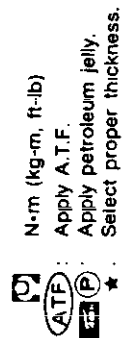AT-37

Shift Control Components

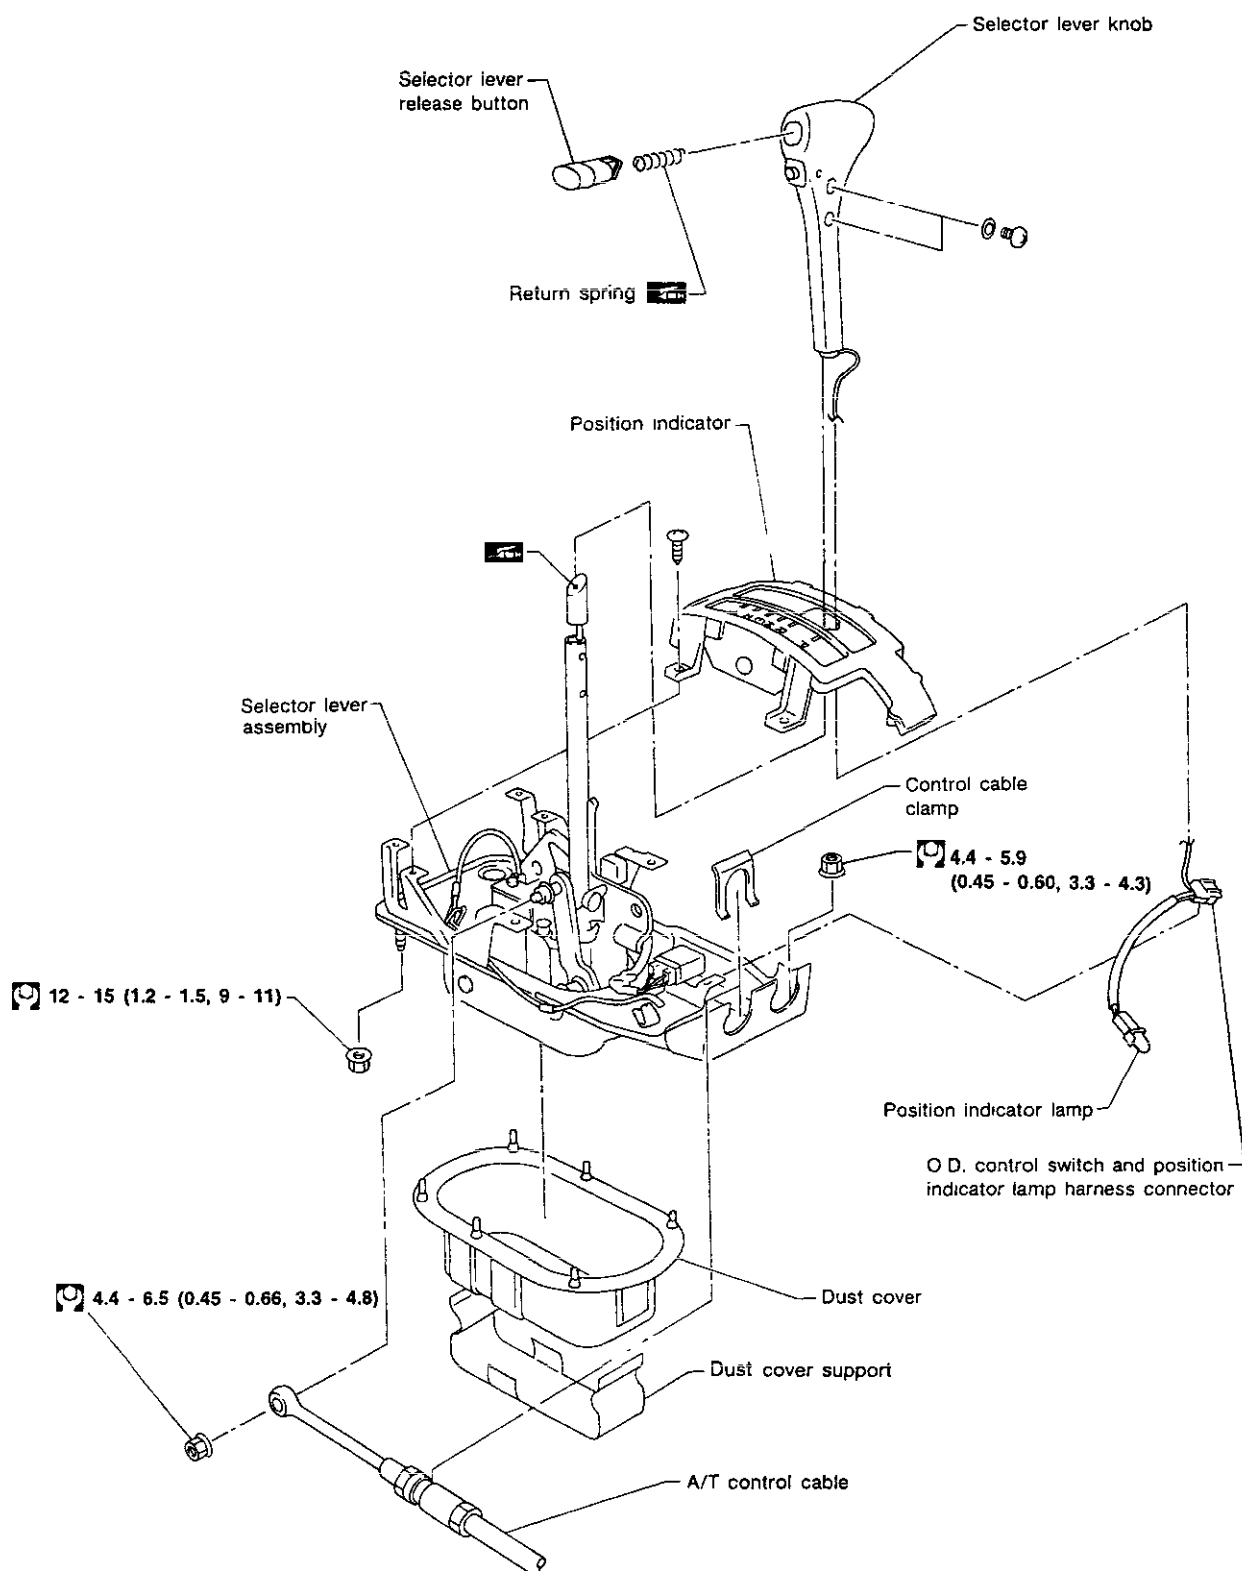


N·m (kg-m, ft-lb)

SAT238E

AT-38


Hydraulic Control Circuit

MODEL 31X74, 31X76 AND 31X77

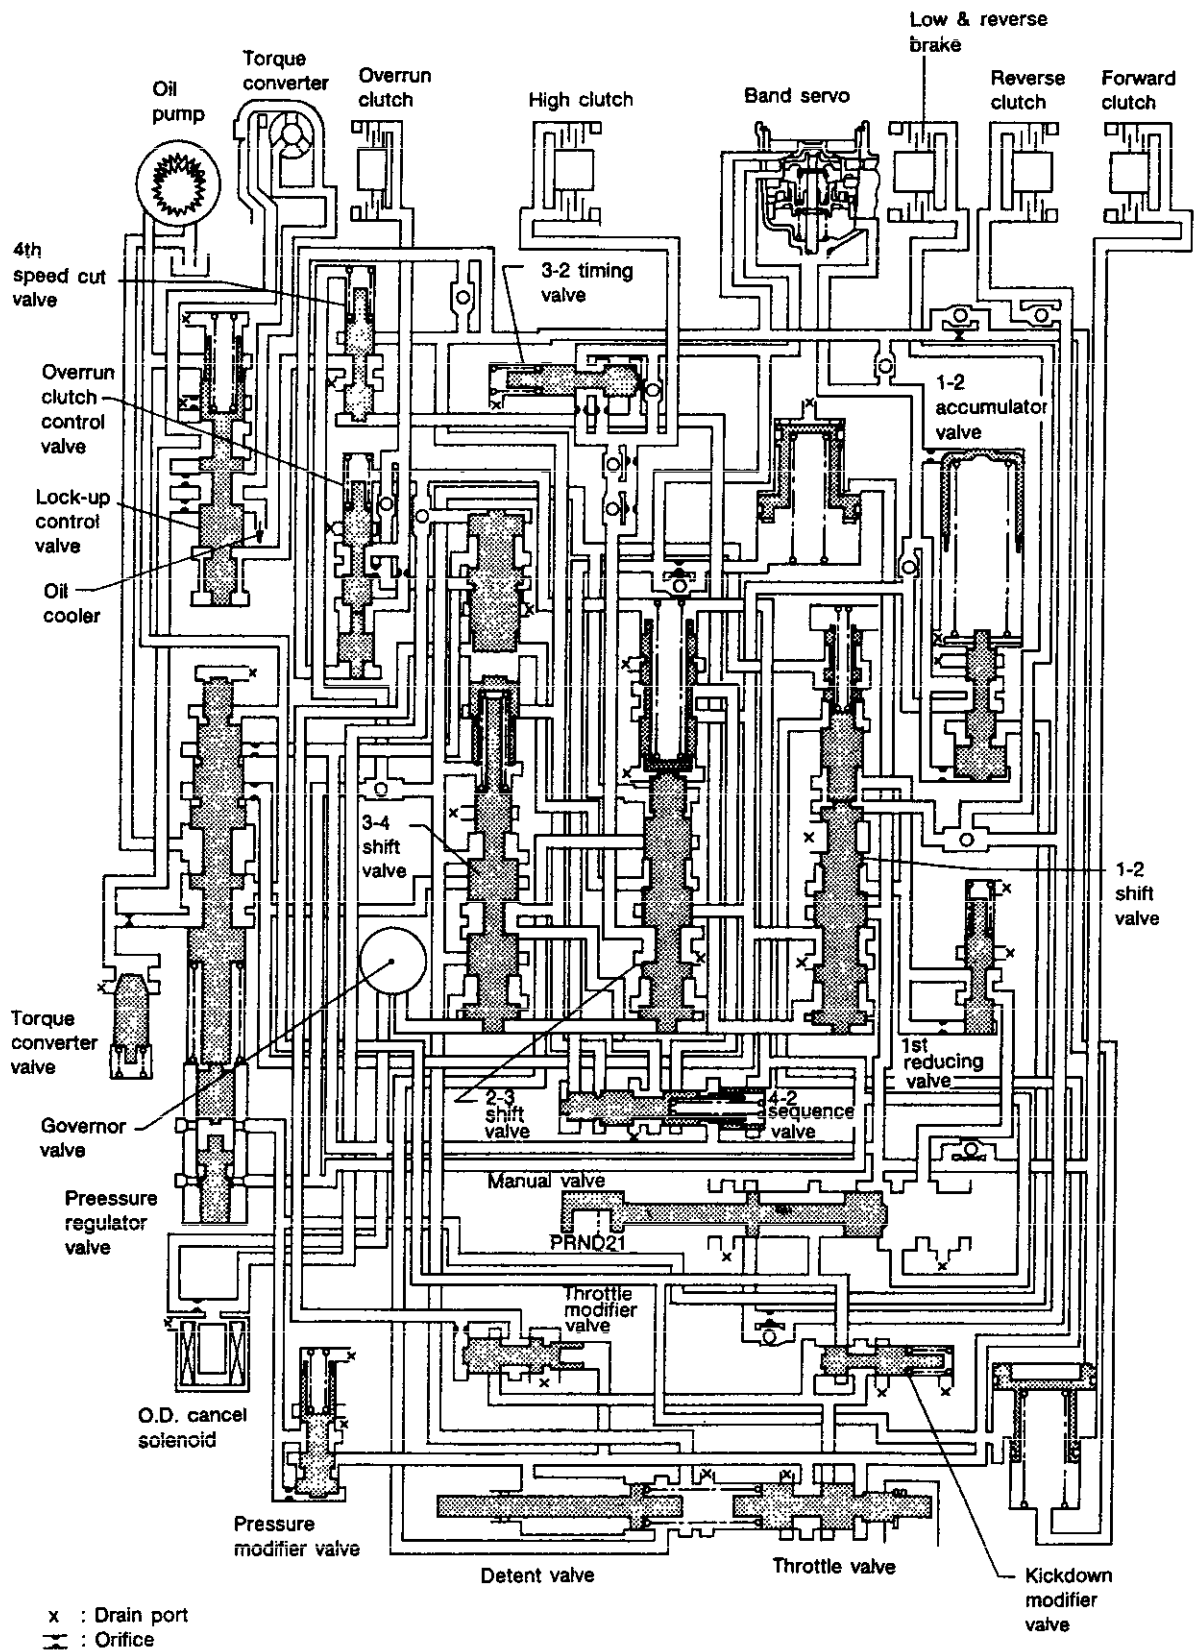

Hydraulic Control Circuit (Cont'd)

MODEL 31X75 AND 31X79

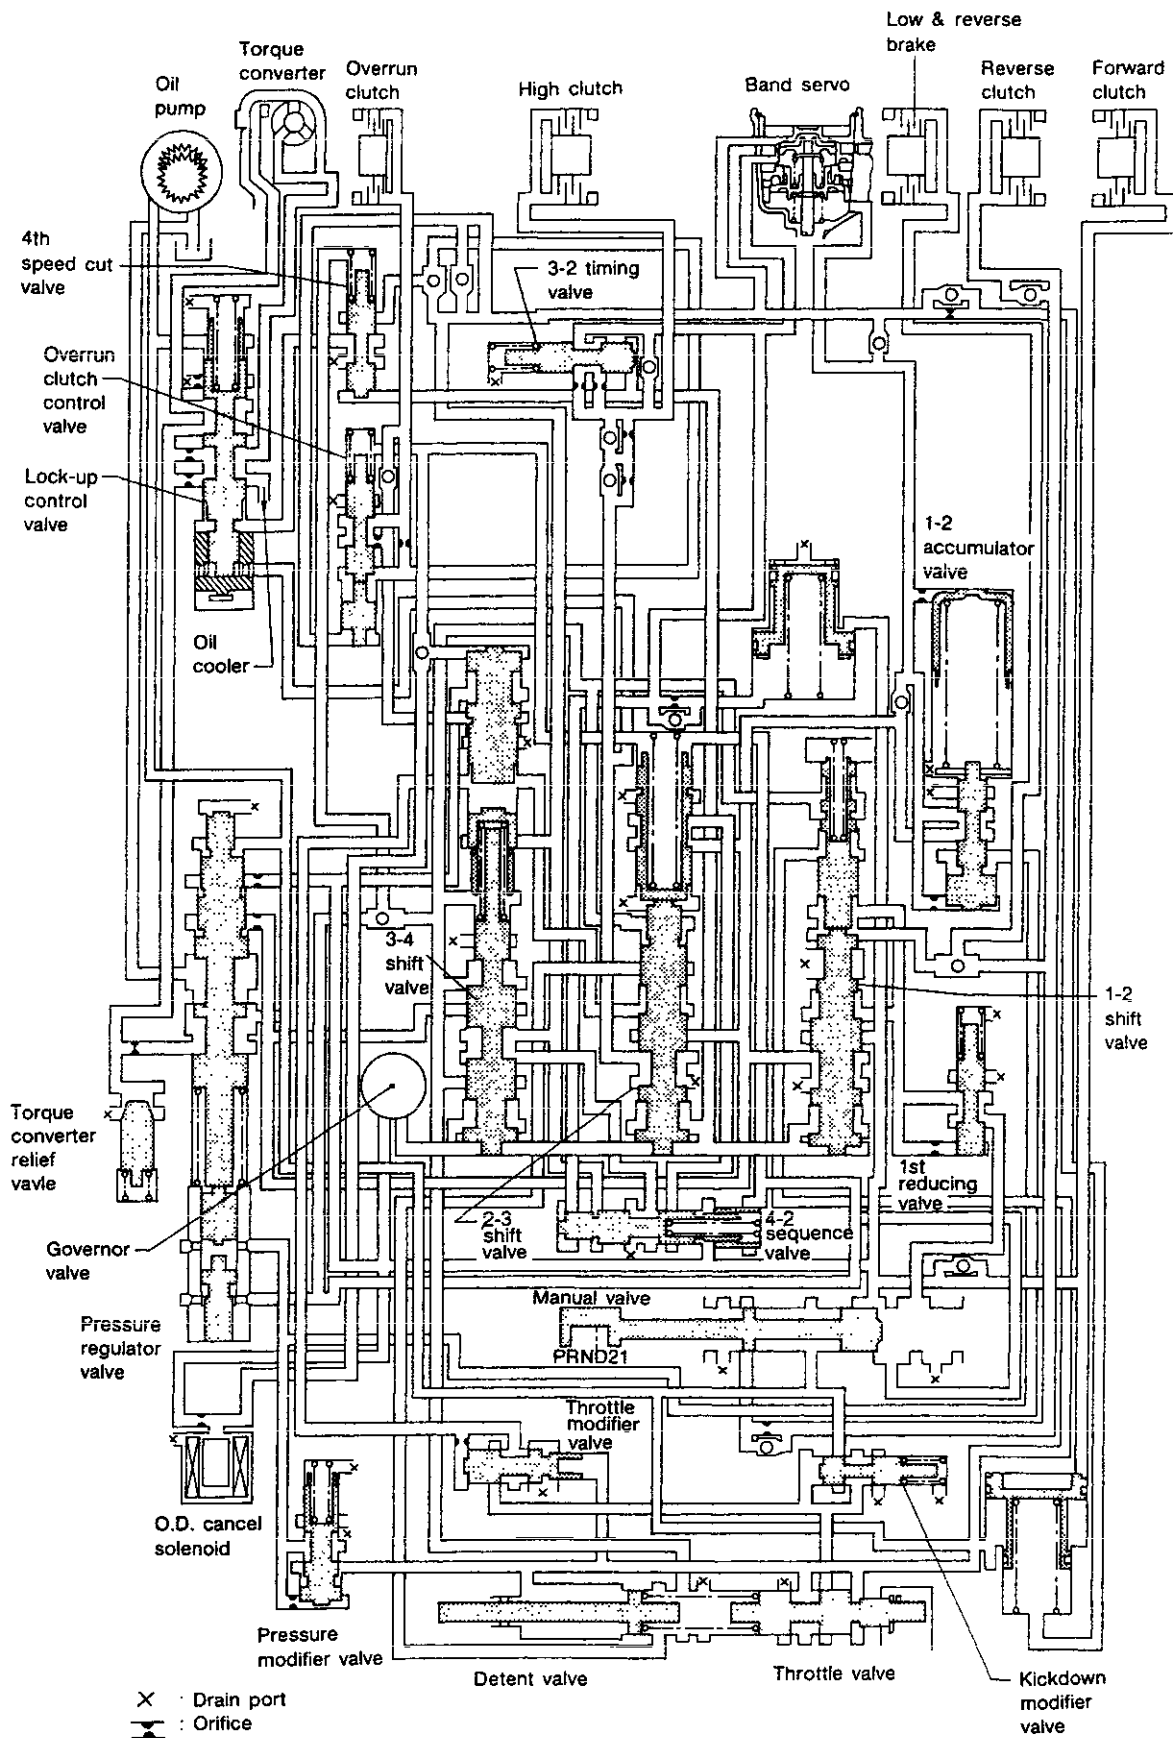

SAT280E

MAJOR OVERHAUL

Mechanical Operation

Shift position	Reverse clutch	High clutch	Forward clutch	Overrun clutch	Band servo			Forward one-way clutch	Low one-way clutch	Low & reverse brake	Lock-up	Remarks
					2nd apply	3rd release	4th apply					
P												PARK
R	○									○		REVERSE
N												NEUTRAL
D *4	1st		○	⊙				●	●			Automatic shift 1 ↔ 2 ↔ 3 ↔ 4
	2nd		○	*1 ⊙	○			●				
	3rd	○	○	⊙	*2 ⊗	⊗		●				
	4th	○	⊗		*3 ⊗	⊗	○				○	
2	1st		○	○				●	●			Automatic shift 1 ↔ 2
	2nd		○	○	○			●				
1	1st		○	○				●		○		Locks (held stationary) in 1st speed 1 ← 2
	2nd		○	○	○			●				

*1: Operates when overdrive switch is set to "OFF".

*2: Oil pressure is applied to both 2nd "apply" side and 3rd "release" side of band servo piston. However, brake band does not contract because oil pressure area on the "release" side is greater than that on the "apply" side.

*3: Oil pressure is applied to 4th "apply" side in condition *2 above, and brake band contracts.

*4: A/T will not shift to 4th when overdrive switch is set to "OFF" position.

○: Operates


⊙: Operates when throttle opening is less than 1/16.

●: Operates during "progressive" acceleration.

⊗: Operates but does not affect power transmission.

MAJOR OVERHAUL

Oil Channel

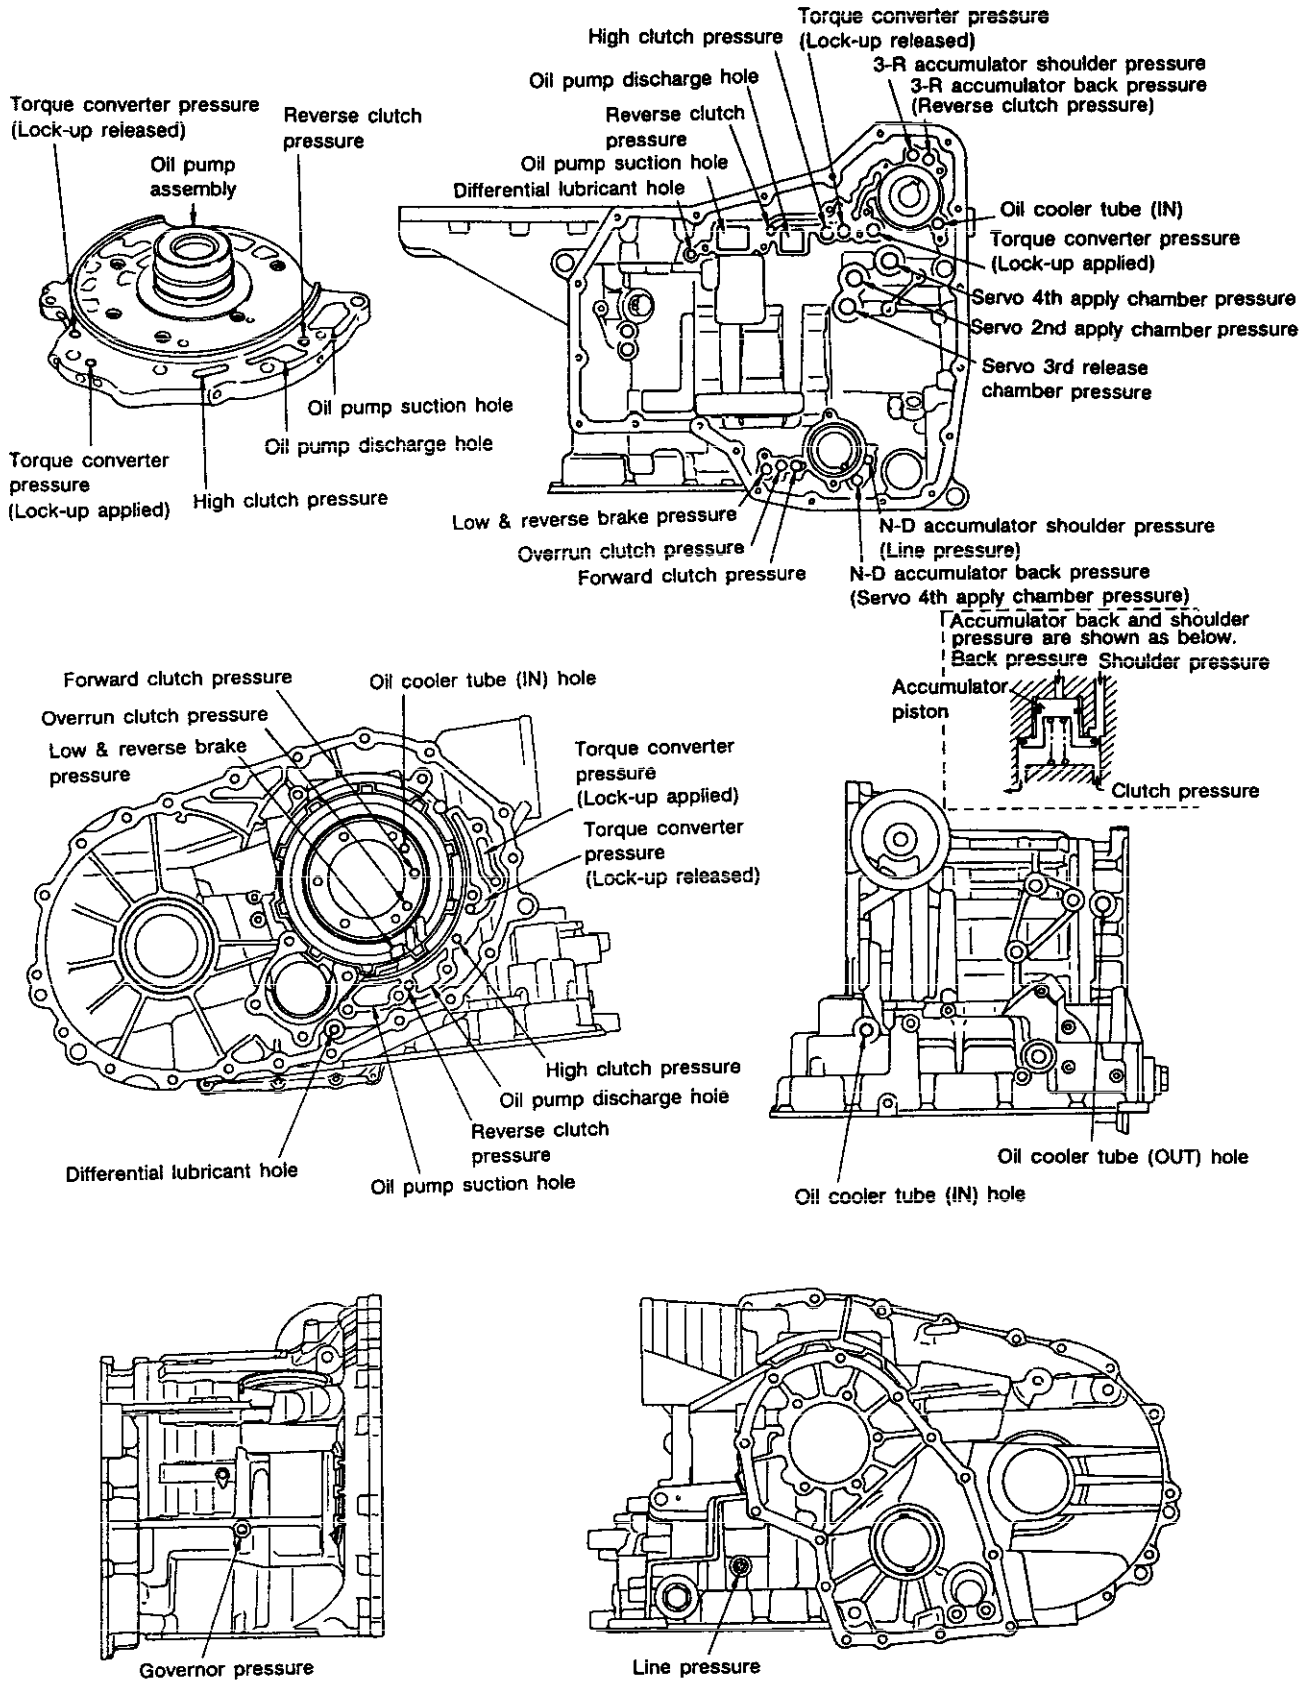

SAT586D

AT-42


Locations of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings

Outer diameter and color of thrust washers

Item number	Outer diameter mm (in)	Color
15	72.0 (2.835)	black
16	78.5 (3.091)	

Outer and inner diameter of needle bearings

Item number	Outer diameter mm (in)	Inner diameter mm (in)
7	47.0 (1.850)	32.0 (1.260)
8	35.0 (1.378)	20.0 (0.787)
9	60.0 (2.362)	42.0 (1.654)
10	60.0 (2.362)	45.0 (1.772)
11	47.0 (1.850)	30.0 (1.181)
12	42.6 (1.677)	26.0 (1.024)
13	48.0 (1.890)	33.5 (1.319)
14	54.0 (2.126)	40.0 (1.575)

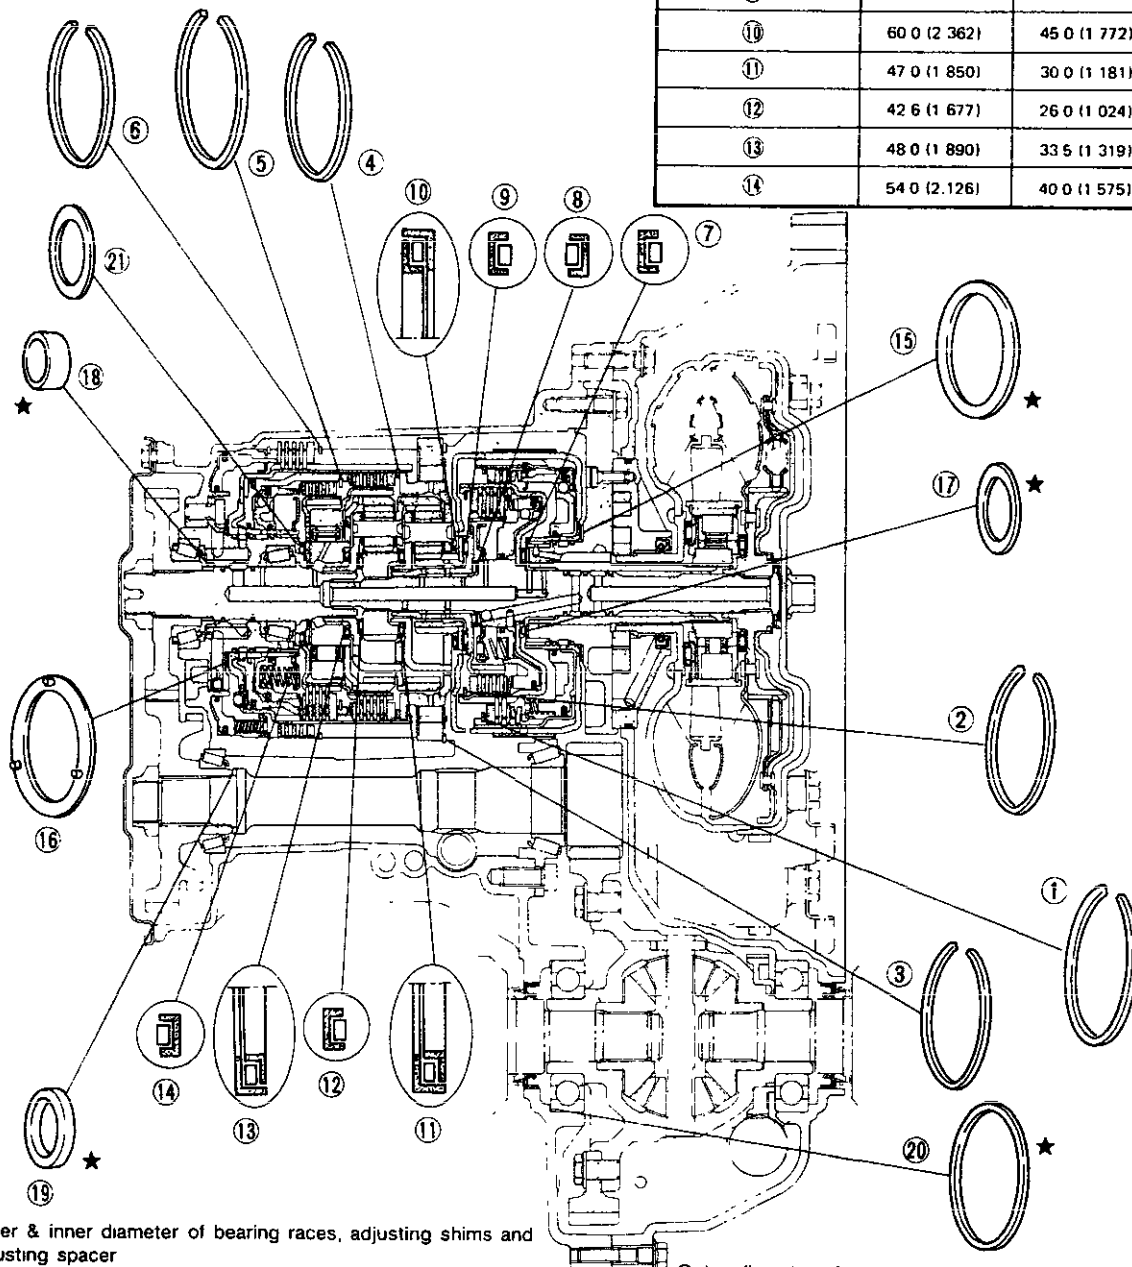


Outer & inner diameter of bearing races, adjusting shims and adjusting spacer

Item number	Outer diameter mm (in)	Inner diameter mm (in)
17	48.0 (1.890)	33.0 (1.299)
18	29.0 (1.142)	25.0 (0.984)
19	34.5 (1.358)	26.1 (1.028)
20	79.5 (3.130)	72.0 (2.835)
21	55.0 (2.165)	42.0 (1.654)


★ Select proper thickness

Outer diameter of snap rings


Item number	Outer diameter mm (in)
1	142.0 (5.59)
2	113.0 (4.45)
3	162.4 (6.39)
4	135.4 (5.33)
5	126.0 (4.96)
6	159.0 (6.26)

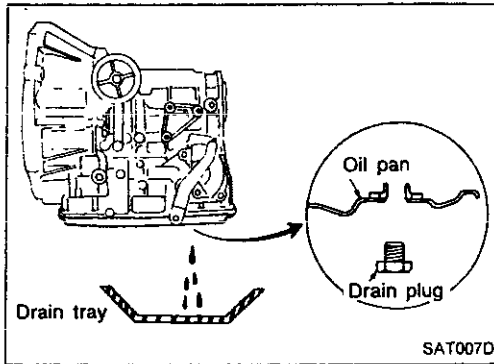

1. Drain A.T.F. through drain plug.

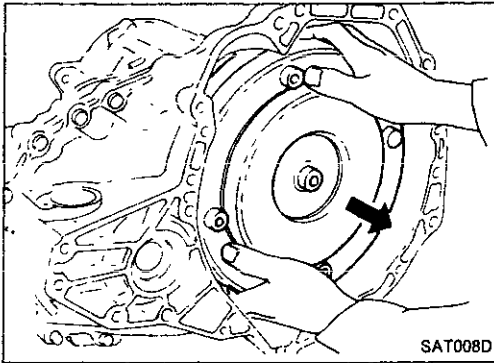


2. Remove torque converter.

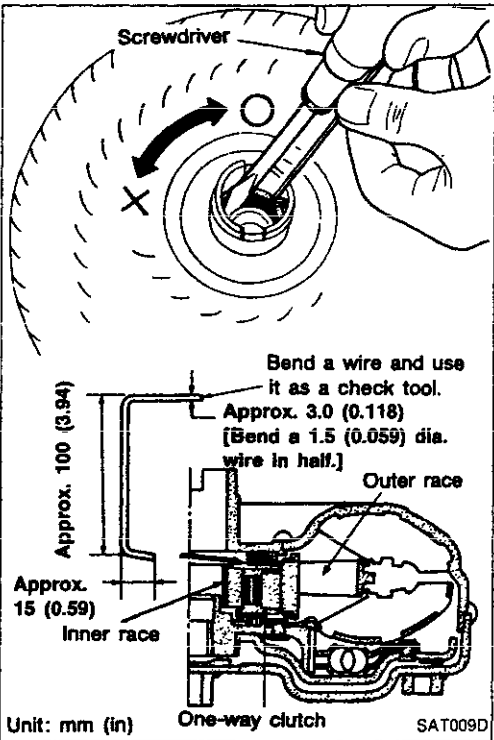


3. Check torque converter one-way clutch using check tool as shown at left.

- Insert check tool into the groove of bearing support built into one-way clutch outer race.
- While fixing bearing support with check tool, rotate one-way clutch spline using flat-bladed screwdriver.
- Check inner race rotates clockwise only. If not, replace torque converter assembly.

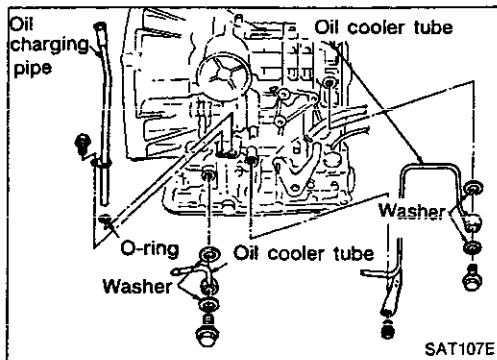


4. Remove oil charging pipe and oil cooler tube.


DISASSEMBLY

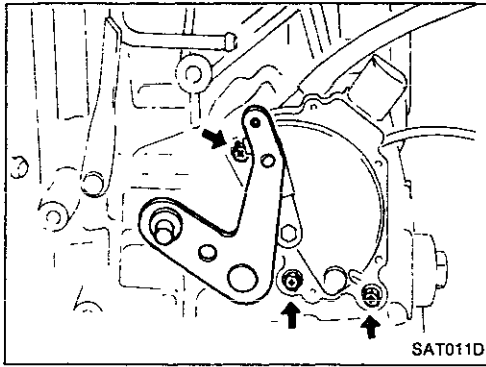


5. Set manual lever to "P" position.
6. Remove inhibitor switch.

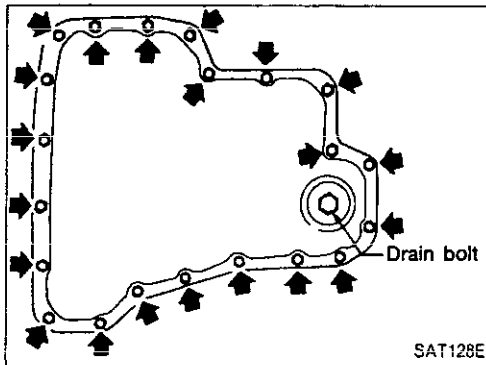

7. Remove oil pan and oil pan gasket.
 - Do not reuse oil pan bolts.

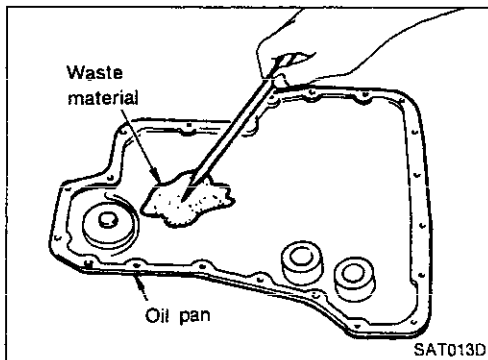


8. Check foreign materials in oil pan to help determine cause of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up which can cause valves, servo, and clutches to stick and may inhibit pump pressure.

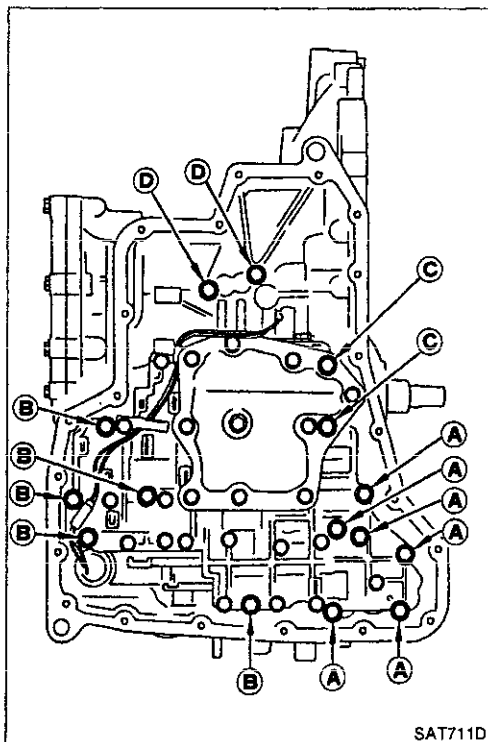


9. Remove control valve assembly according to the following procedures.
 - a. Remove control valve assembly mounting bolts (A), (B), (C) and (D).


DISASSEMBLY

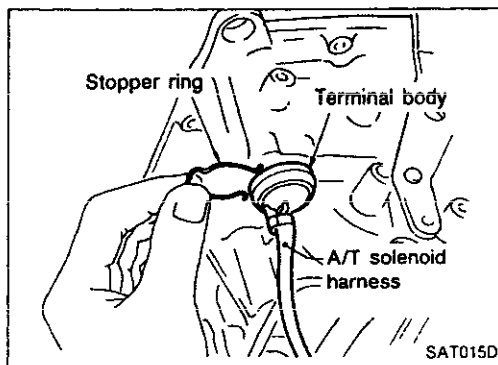


b. Remove stopper ring from terminal body.

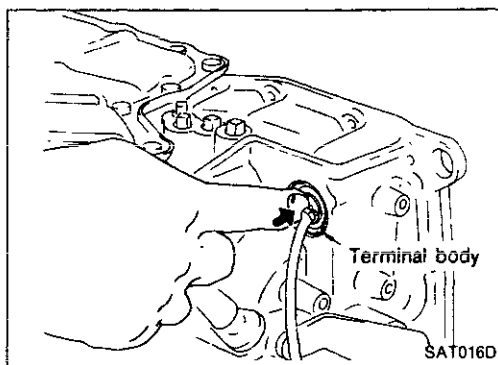


c. Push terminal body into transmission case and draw out solenoid harness.

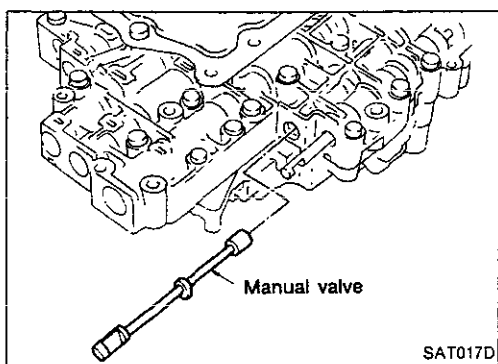

10. Remove manual valve from control valve assembly.

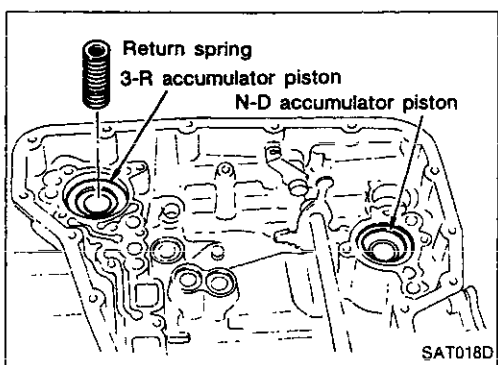


11. Remove return spring from 3-R accumulator piston.

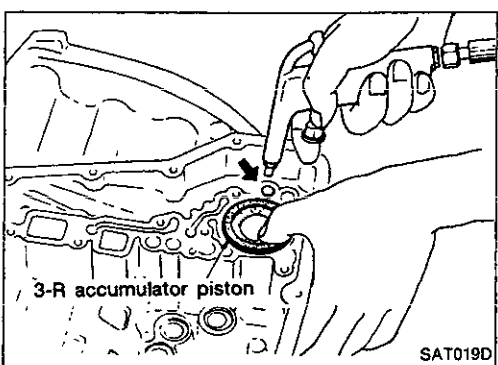


12. Remove 3-R accumulator piston with compressed air.

13. Remove O-rings from 3-R accumulator piston.

DISASSEMBLY

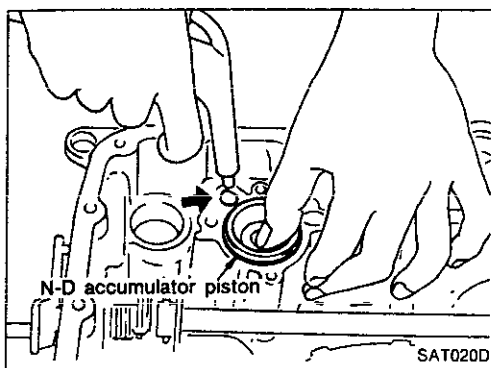


14. Remove N-D accumulator piston and return spring with compressed air.
15. Remove O-rings from N-D accumulator piston.

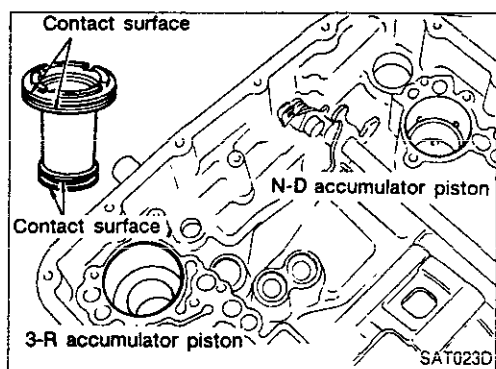


16. Check accumulator pistons and contact surface of transmission case for damage.
17. Check accumulator return springs for damage and free length.


Unit. mm (in)		
Spring	Free length	Outer diameter
3-R accumulator spring	56.4 (2.220)	21.0 (0.827)
N-D accumulator spring	43.5 (1.713)	28.0 (1.102)

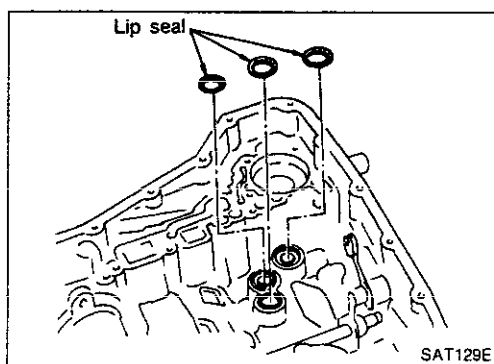

18. Remove lip seals from band servo oil port.

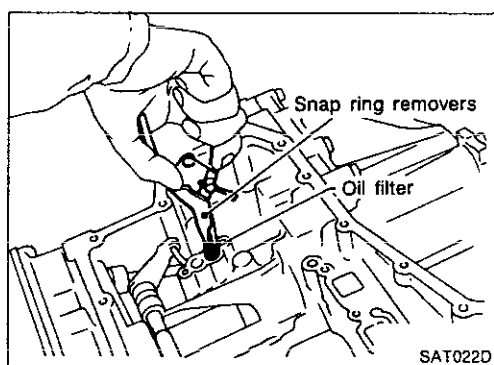


19. Remove oil filter for governor.

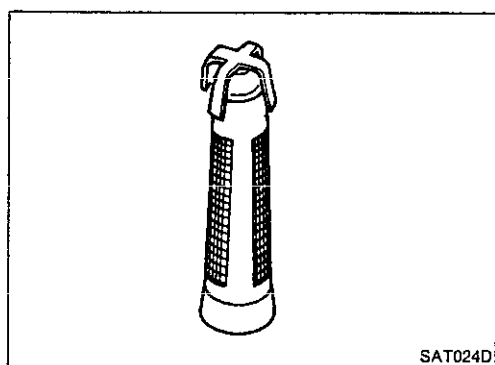


20. Check oil filter for governor for damage or clogging.

DISASSEMBLY

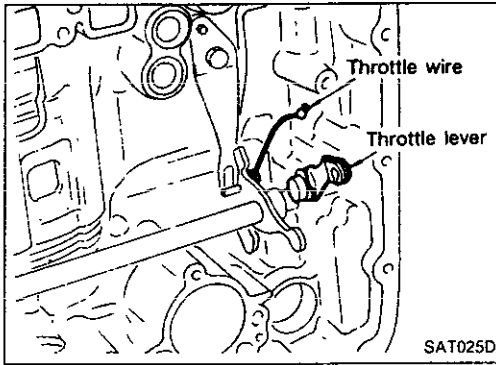


21. Remove throttle wire from throttle lever.

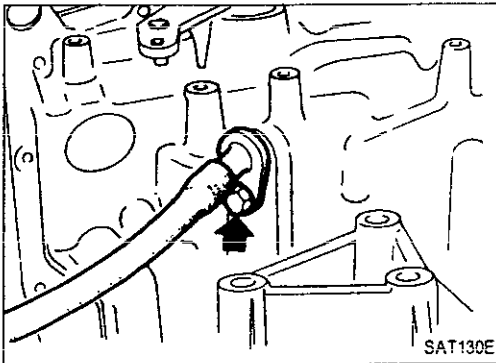


22. Remove throttle wire mounting bolt.

23. Draw out throttle wire from transmission case.

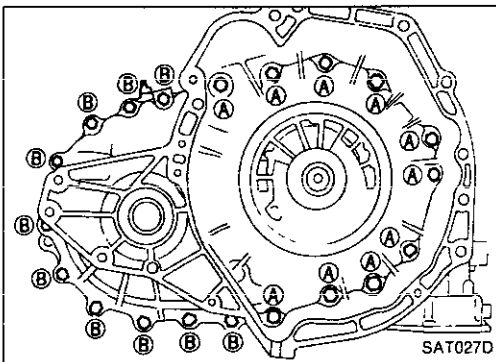


24. Remove converter housing according to the following procedures.

a. Remove converter housing mounting bolts (A) and (B).

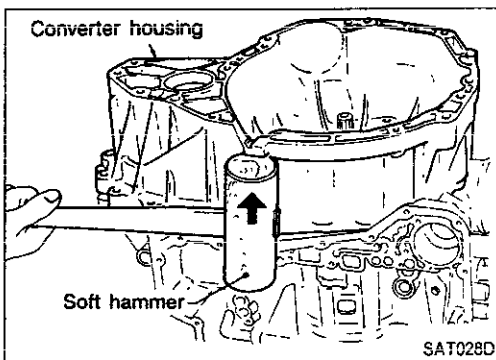


b. Remove converter housing.

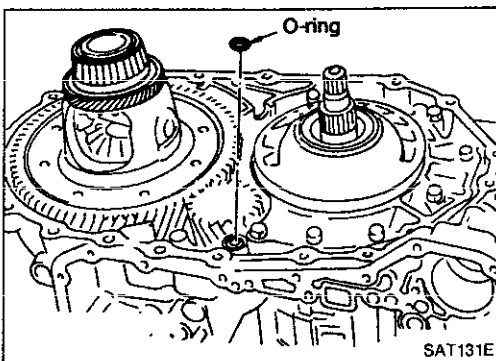


c. Remove O-ring from differential oil port.


DISASSEMBLY

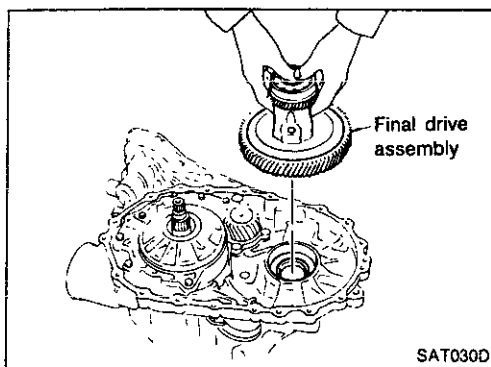

25. Remove final drive assembly from transmission case.
If it is difficult to lift up by hand, tap final drive slightly with a soft hammer.

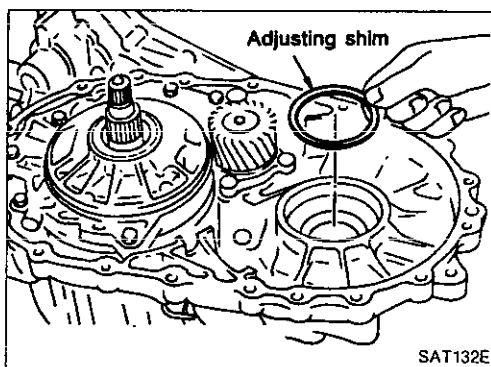


26. Remove differential side bearing adjusting shim from transmission case.

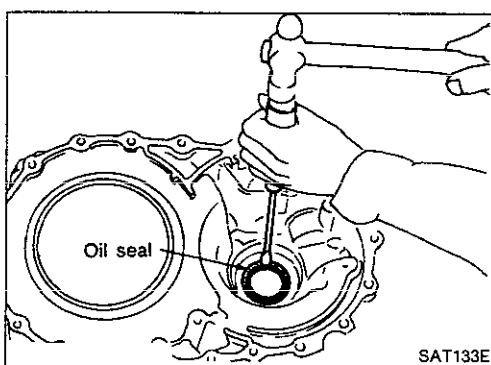


27. Remove oil seal from converter housing using a screwdriver.


- Be careful not to damage housing.

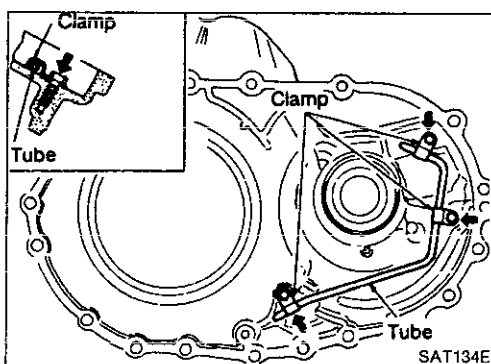


28. Remove oil tube from converter housing.

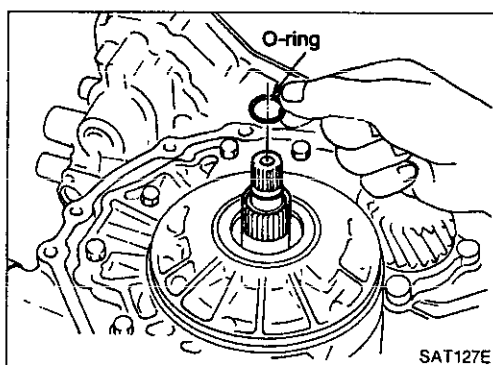


29. Remove oil pump according to the following procedures.
- a. Remove O-ring from input shaft.

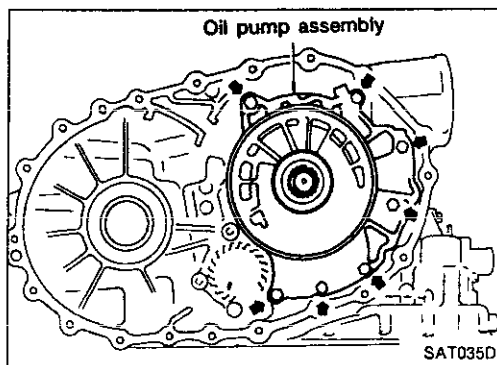


- b. Remove oil pump assembly from transmission case.

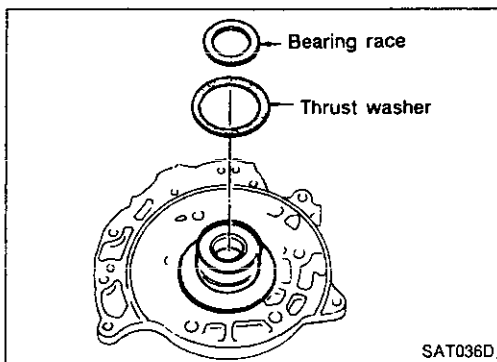


- c. Remove thrust washer and bearing race from oil pump assembly.

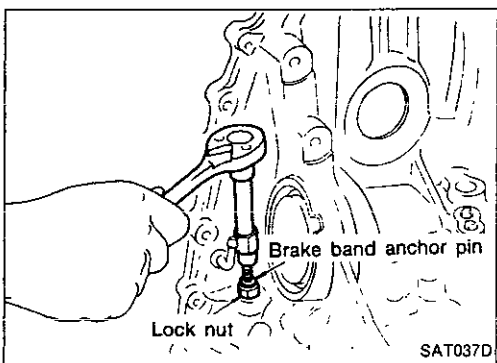

30. Remove brake band according to the following procedures.
- a. Loosen lock nut, then back off band servo anchor end pin.

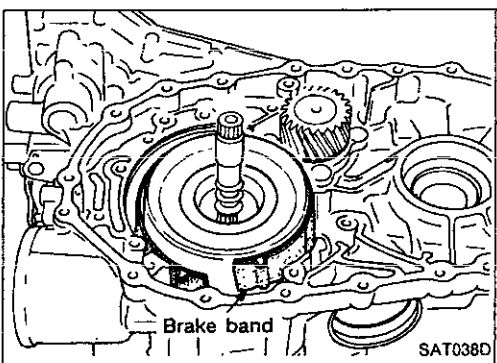


- b. Remove brake band from transmission case.

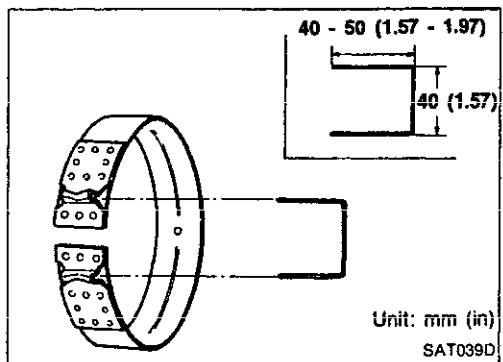


- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing the brake band, always secure it with a clip as shown in the figure at left. Leave the clip in position after removing the brake band.

DISASSEMBLY

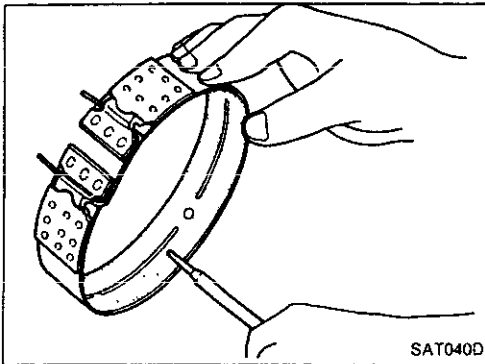


- c. Check brake band facing for damage, cracks, wear or burns.

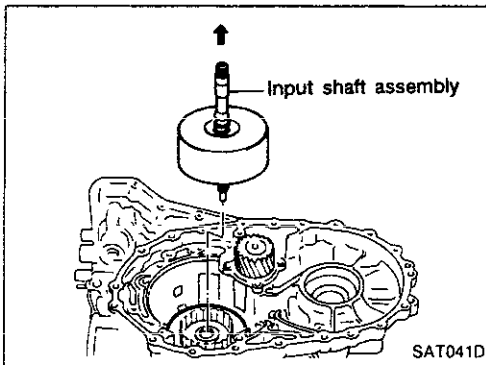


31. Remove input shaft assembly (high clutch) and reverse clutch according to the following procedures.

- a. Remove input shaft assembly (high clutch) with reverse clutch.

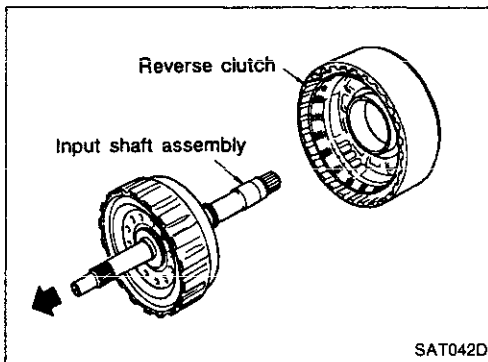


- b. Remove input shaft assembly (high clutch) from reverse clutch.

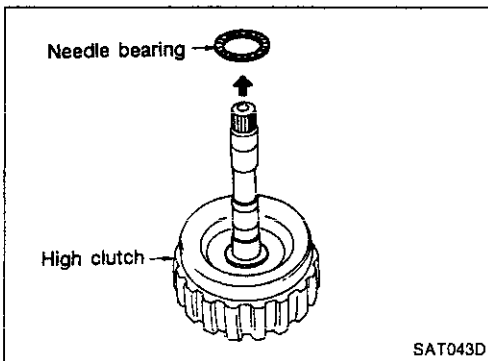

- c. Remove needle bearing from high clutch drum.


- d. Check input shaft assembly and needle bearing for damage or wear.

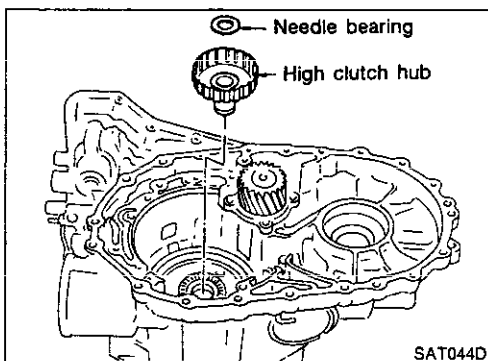


32. Remove high clutch hub and needle bearing from transmission case.

33. Check high clutch hub and needle bearing for damage or wear.


DISASSEMBLY

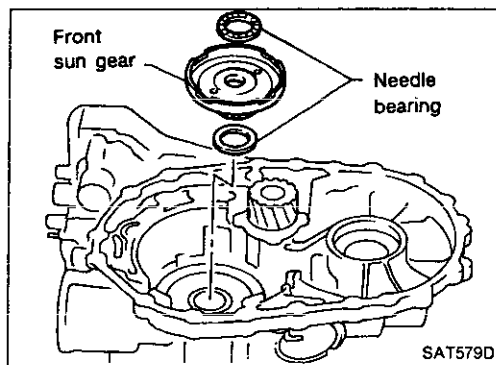


34. Remove front sun gear and needle bearings from transmission case.
35. Check front sun gear and needle bearings for damage or wear.

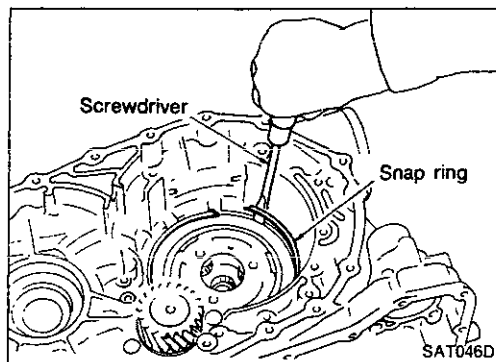


36. Remove front planetary carrier assembly and low one-way clutch according to the following procedures.
- a. Remove snap ring using a screwdriver.

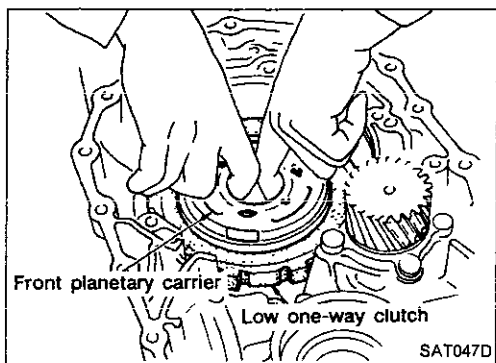

- b. Remove front planetary carrier with low one-way clutch.

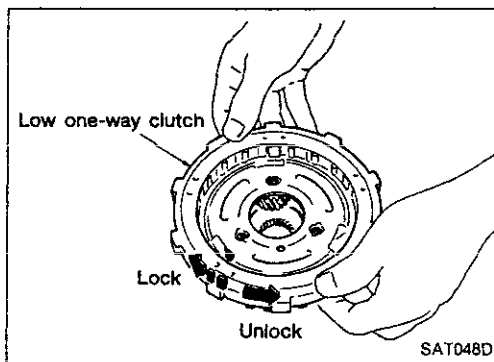


- c. Check that low one-way clutch rotates in the direction of the arrow and locks in the opposite direction.
- d. Remove low one-way clutch from front planetary carrier by rotating it in the direction of unlock.

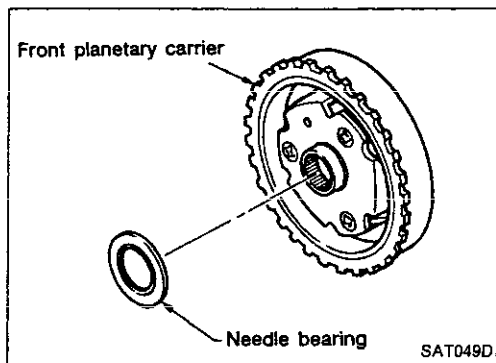

- e. Remove needle bearing from front planetary carrier.

DISASSEMBLY

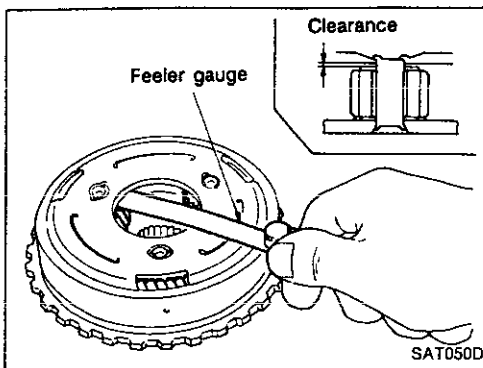


- f. Check front planetary carrier, low one-way clutch and needle bearing for damage or wear.
- g. Check clearance between pinion washer and planetary carrier using feeler gauge.

Standard clearance:


0.15 - 0.70 mm (0.0059 - 0.0276 in)

Replace if the clearance exceeds 0.80 mm (0.0315 in).

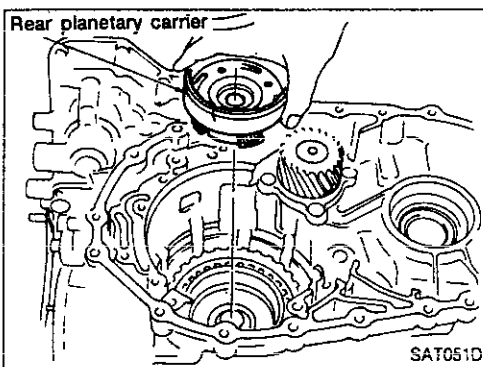


- 37. Remove rear planetary carrier assembly and rear sun gear according to the following procedures.


- a. Remove rear planetary carrier assembly from transmission case.

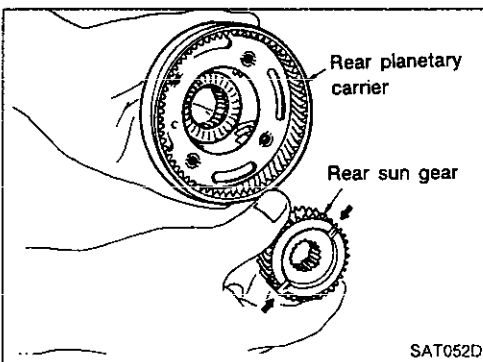

- b. Remove rear sun gear from rear planetary carrier.

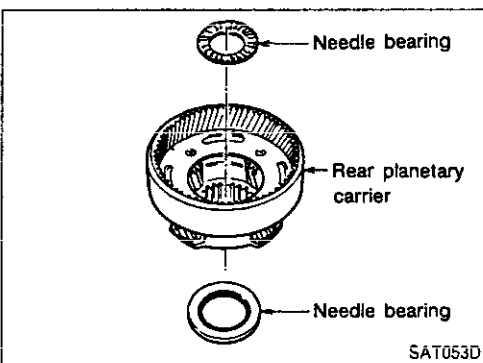

- c. Remove needle bearings from rear planetary carrier assembly.

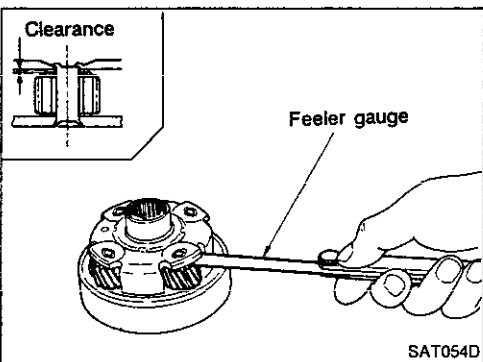


- d. Check rear planetary carrier, rear sun gear and needle bearings for damage or wear.
- e. Check clearance between pinion washer and rear planetary carrier using feeler gauge.


Standard clearance:

0.15 - 0.70 mm (0.0059 - 0.0276 in)

Replace if the clearance exceeds 0.80 mm (0.0315 in).

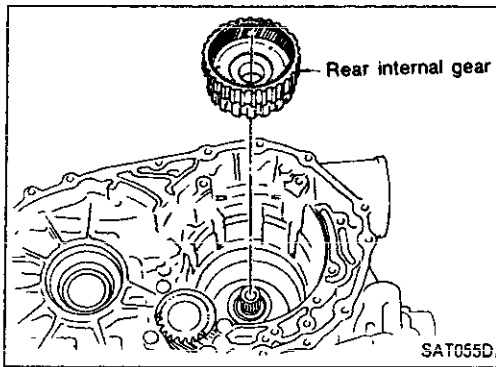


38. Remove rear internal gear from transmission case.

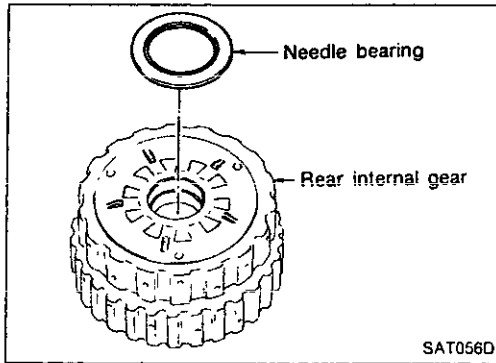


39. Remove needle bearing from rear internal gear.


40. Check needle bearing for damage or wear.

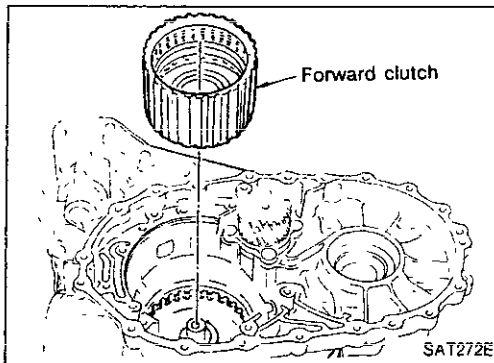

41. Remove forward clutch assembly from transmission case.

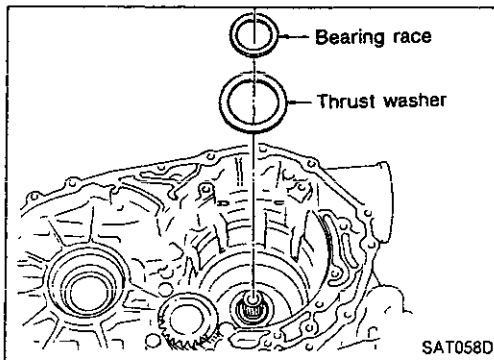

42. Remove thrust washer and bearing race from transmission case.

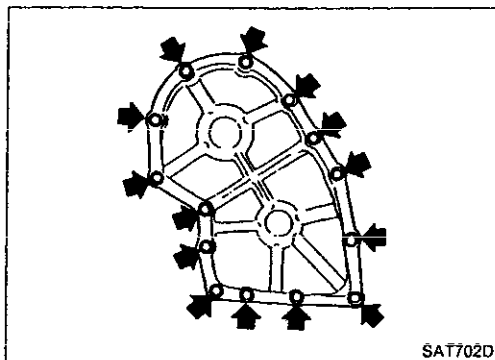


43. Remove output shaft, output gear and reduction gear according to the following procedures.


a. Remove side cover.

● **Do not reuse side cover bolts.**


DISASSEMBLY

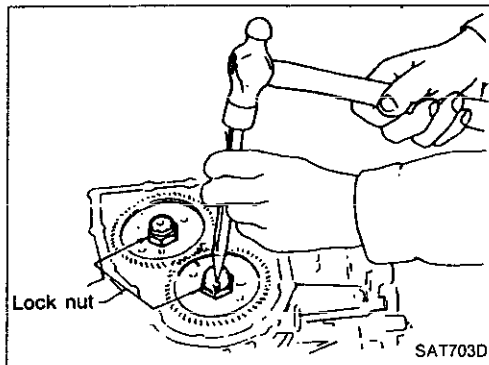


- b. Set manual lever to "P" position to fix idler gear and output gear.
- c. Unlock both idler gear and output gear lock nuts using a pin punch.

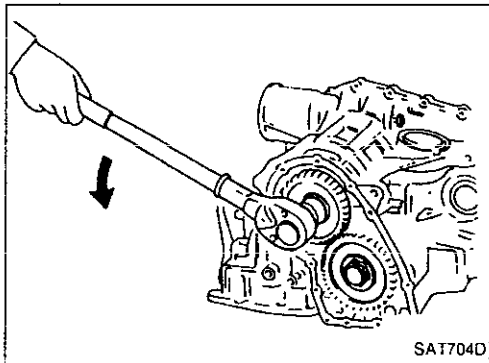


- d. Remove idler gear and output gear lock nuts.
- **Do not reuse idler gear and output gear lock nuts.**

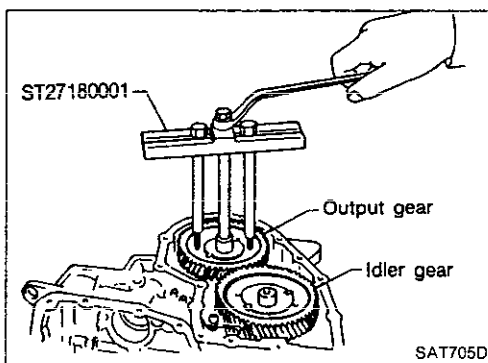


- e. Remove idler gear and output gear using a puller.

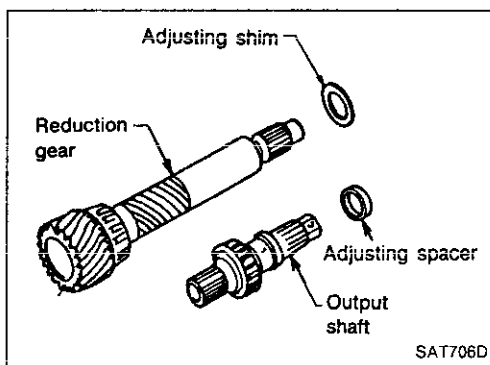


- f. Remove reduction gear and output shaft from transmission case.
- g. Remove adjusting shim from reduction gear.
- h. Remove adjusting spacer from output shaft.

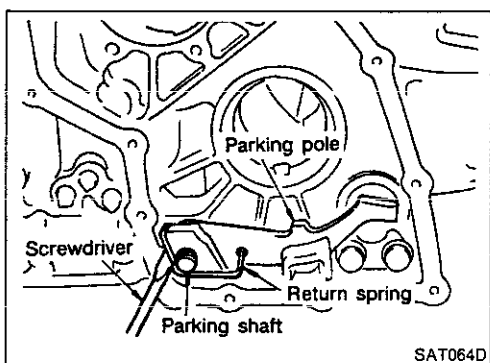


- 44. Remove return spring from parking shaft using a screwdriver.

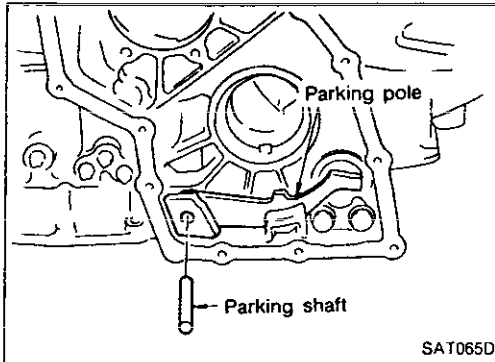


45. Draw out parking shaft and remove parking pole from transmission case.
46. Check parking pole and shaft for damage or wear.

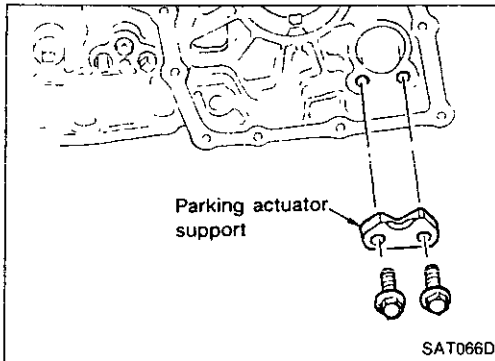


47. Remove parking actuator support from transmission case.
48. Check parking actuator support for damage or wear.

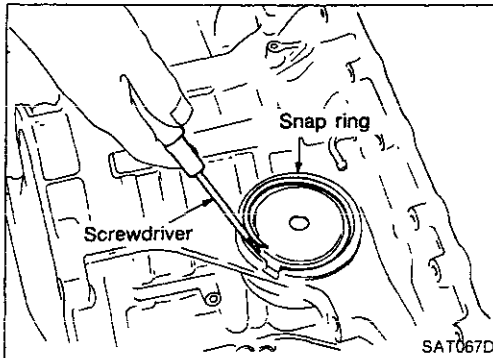

49. Remove governor valve assembly according to the following procedures.
 - a. Remove snap ring using a screwdriver.

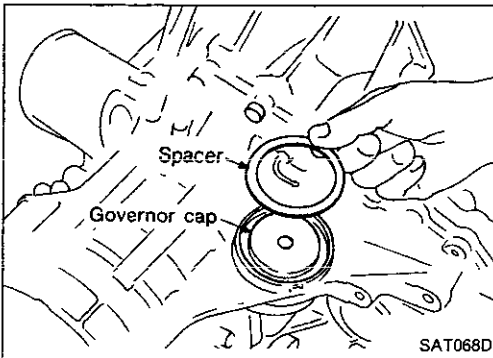


- b. Remove spacer from governor cap.

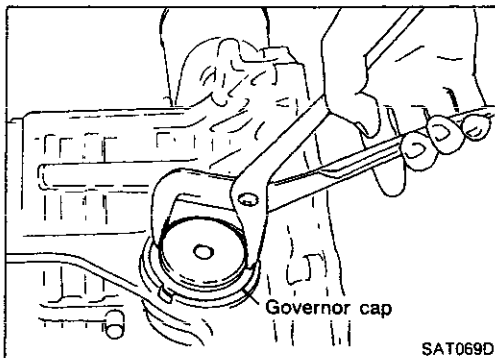


- c. Remove governor cap using water pump pliers.
 - d. Remove O-ring from governor cap.


DISASSEMBLY

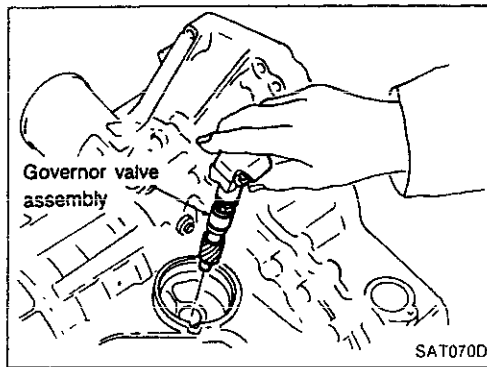

e. Remove governor valve assembly.

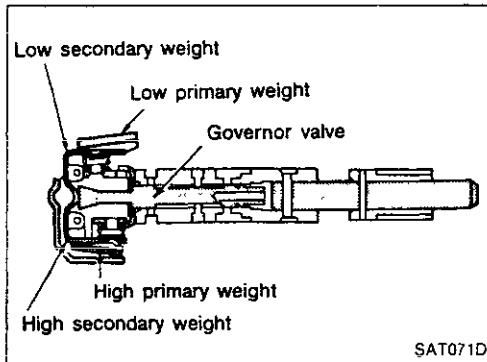


- f. With low primary weight closed, place top of governor valve assembly down to make sure governor valve properly lowers under its own weight.
- g. Place top of governor assembly down. Operate both low and high secondary weights to make sure governor valve functions properly.

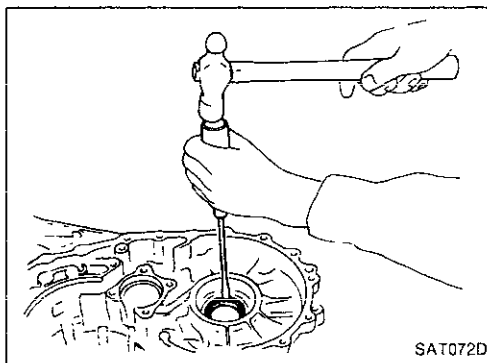

50. Remove side oil seal from transmission case using a screwdriver.




- Be careful not to damage case.

Manual Shaft and Throttle Lever

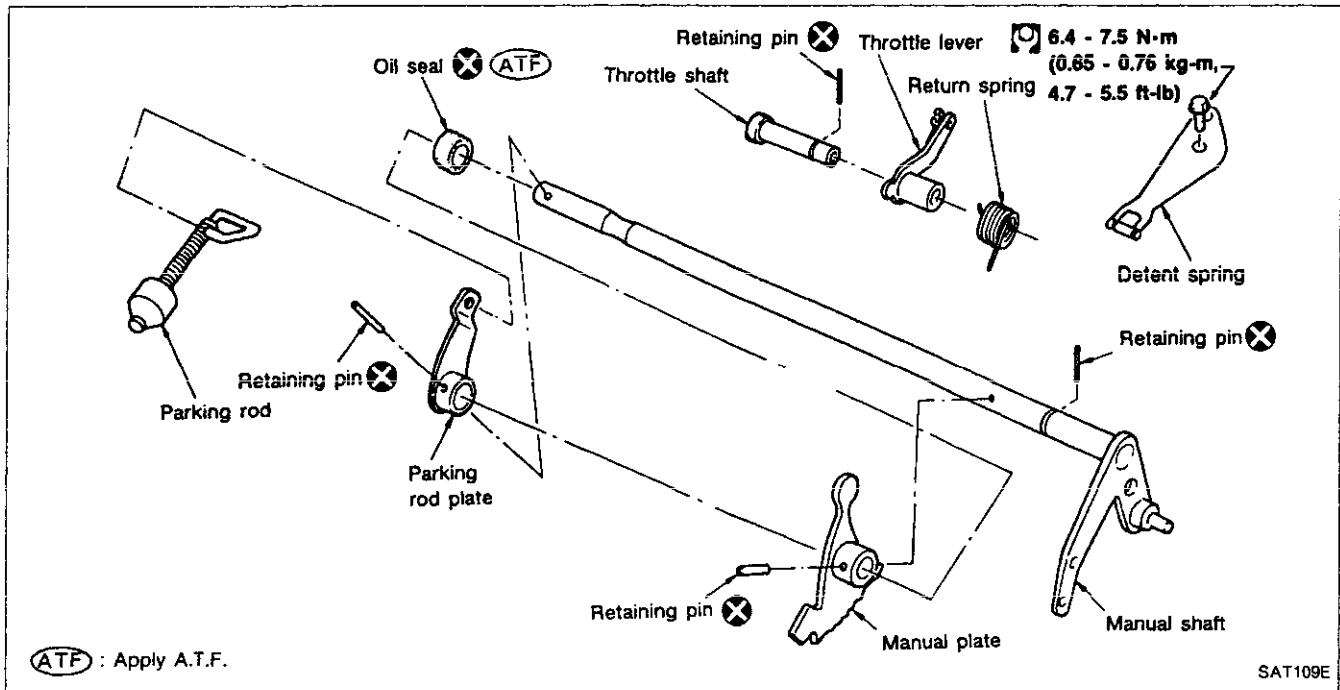


REMOVAL


1. Remove detent spring from transmission case.
2. Pull out throttle shaft retaining pin, then draw out throttle shaft from transmission case.
3. Drive out manual plate retaining pin.

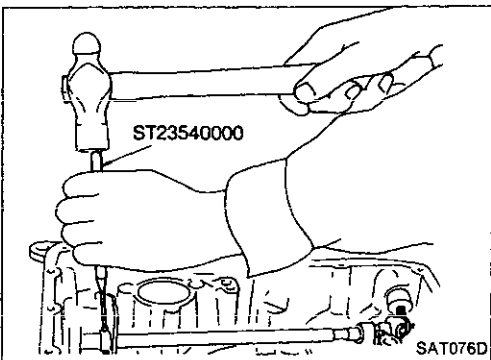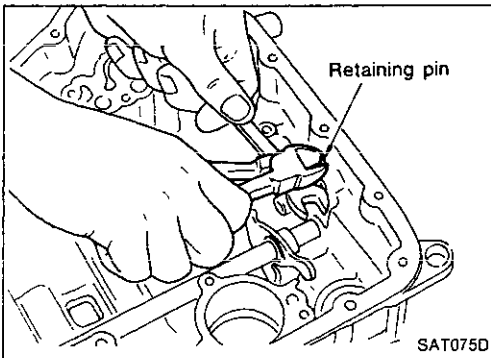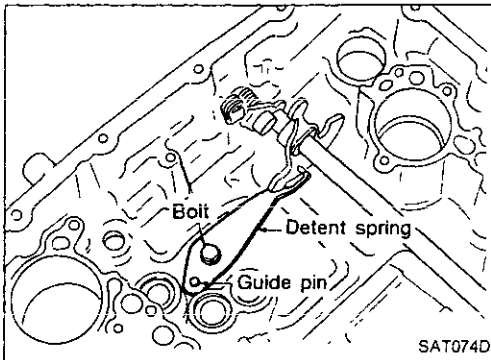

Manual Shaft and Throttle Lever (Cont'd)

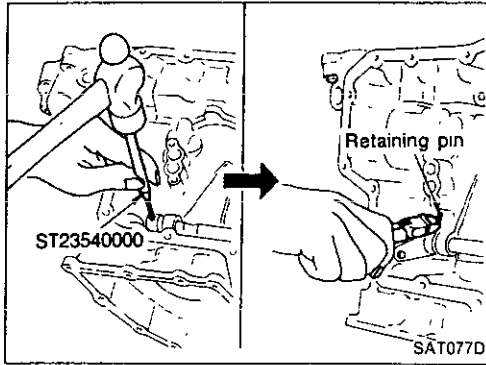


4. Drive and then pull out parking rod plate retaining pin.

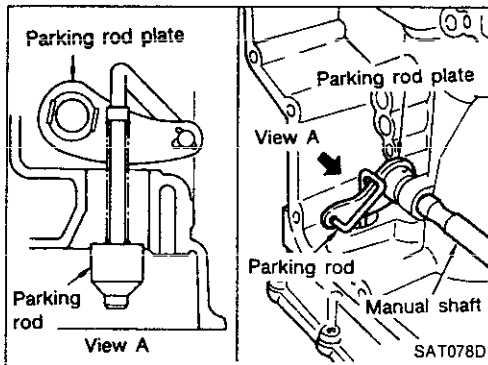


5. Remove parking rod plate from manual shaft.

6. Draw out parking rod from transmission case.

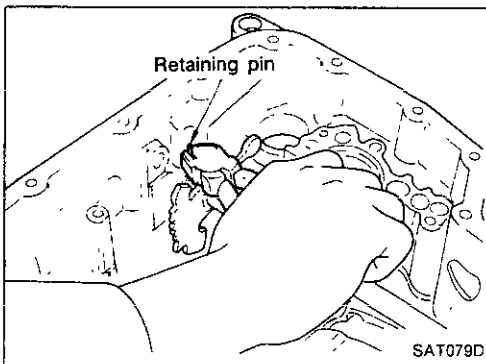

7. Pull out manual shaft retaining pin.

8. Remove manual shaft and manual plate from transmission case.

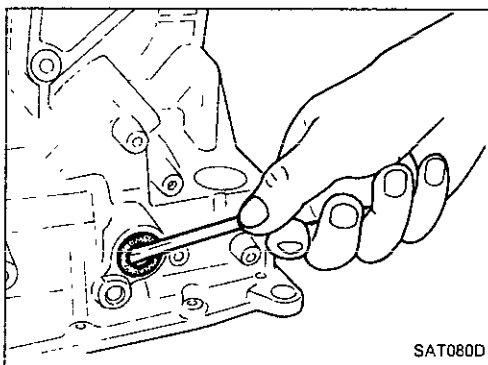

9. Remove manual shaft oil seal.


INSPECTION

- Check component parts for wear or damage. Replace if necessary.


Manual Shaft and Throttle Lever (Cont'd)

INSTALLATION


1. Install manual shaft oil seal.
 - Apply A.T.F. to outer surface of oil seal.

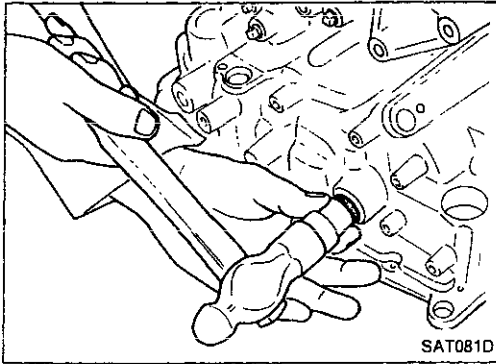


2. Install throttle lever and return spring on throttle shaft.
3. Install throttle lever assembly on transmission case.

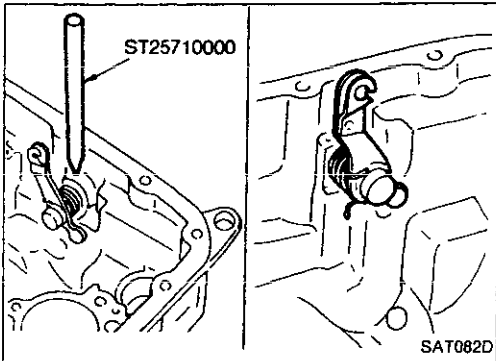


4. Align groove of throttle shaft and hole of transmission case.
5. Install throttle shaft retaining pin.

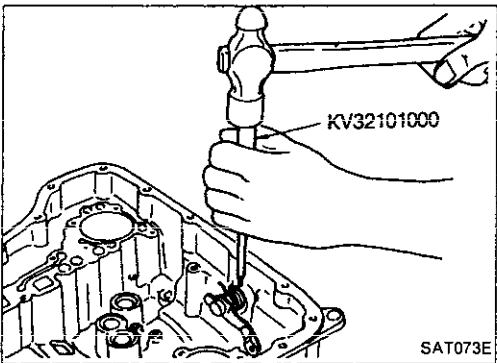

6. Move throttle lever in the direction of the arrow.
7. Install manual shaft and manual plate.

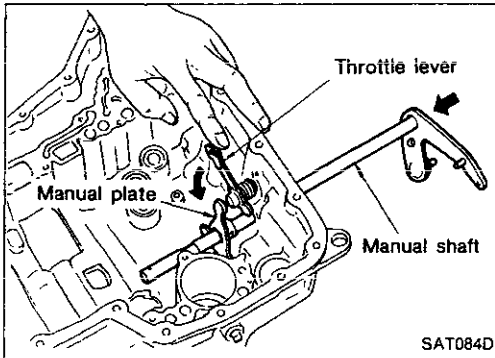


8. Align groove of manual shaft and hole of transmission case.
9. Install manual shaft retaining pin.

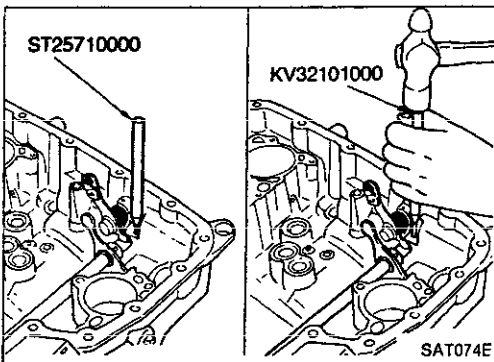


REPAIR FOR COMPONENT PARTS


Manual Shaft and Throttle Lever (Cont'd)

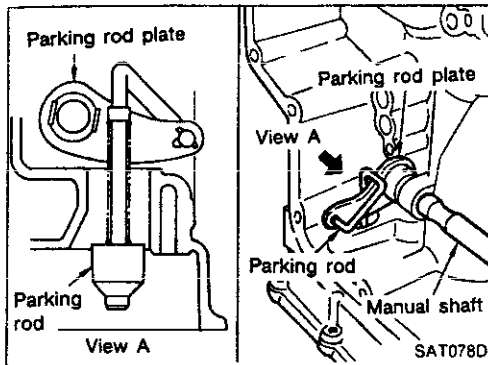

10. Install parking rod to parking rod plate.
11. Install parking rod assembly to manual shaft.

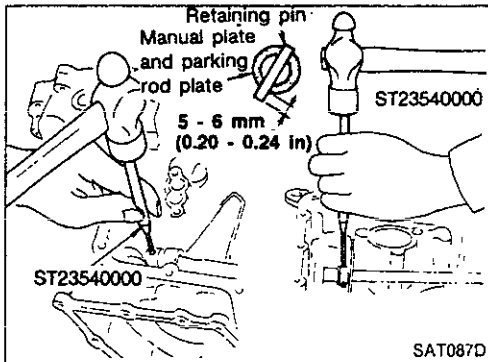


12. Install manual plate retaining pin and parking rod plate retaining pin.

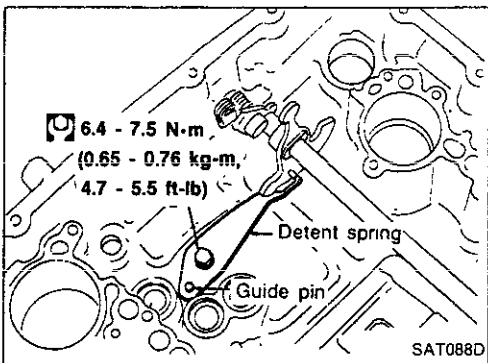


13. Install detent spring.

Oil Pump

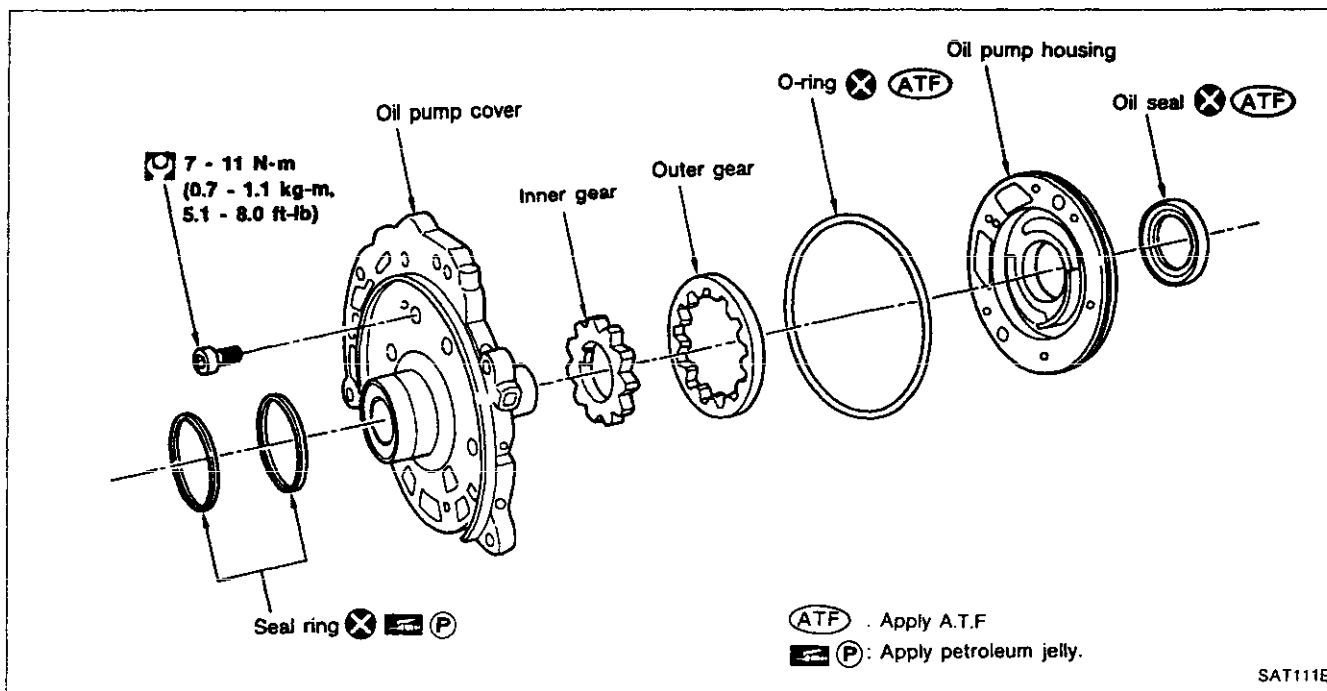


DISASSEMBLY


1. Remove seal rings by undoing hooks.

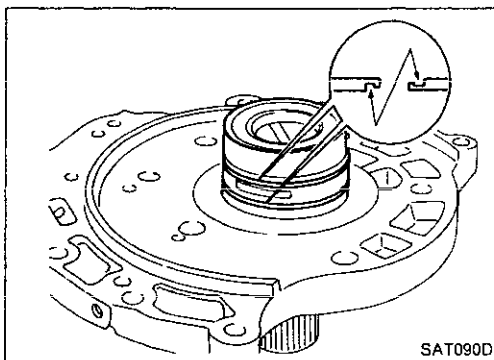

2. Loosen bolts in numerical order and remove oil pump cover.

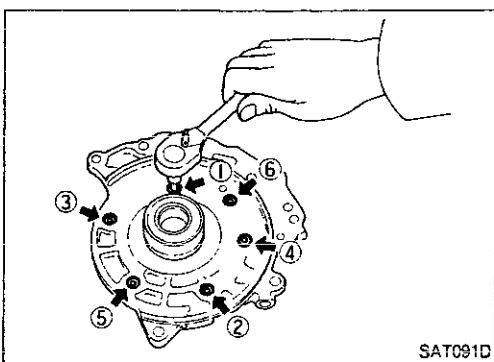


3. Remove inner and outer gear from oil pump housing.

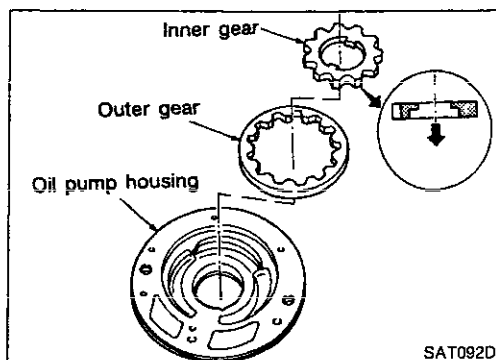


REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

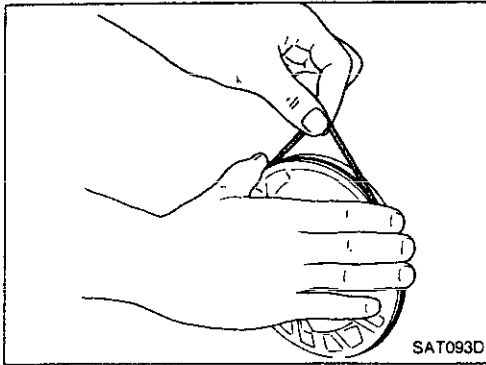

4. Remove O-ring from oil pump housing.

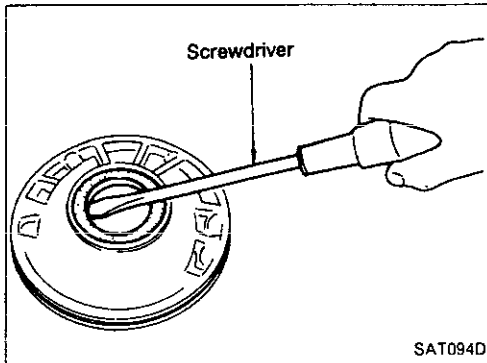


5. Remove oil pump housing oil seal.

INSPECTION

Oil pump housing, oil pump cover, inner gear and outer gear

- Check for wear or damage.

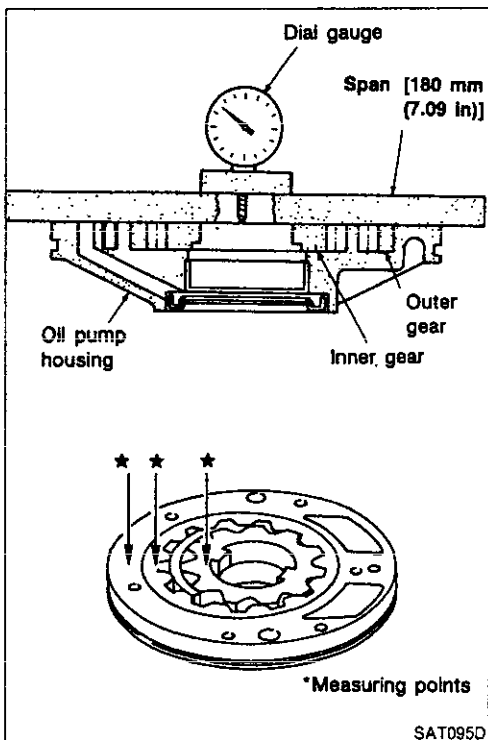

Side clearance

- Measure side clearance between end of oil pump housing and inner and outer gears in at least four places along their circumferences. Maximum measured values should be within specified ranges.

Standard clearance:

0.02 - 0.04 mm (0.0008 - 0.0016 in)


- If clearance is less than standard, select inner and outer gear as a set so that clearance is within specifications.

Inner and outer gear:

Refer to S.D.S.

- If clearance is more than standard, replace whole oil pump assembly except oil pump cover.

Oil Pump (Cont'd)

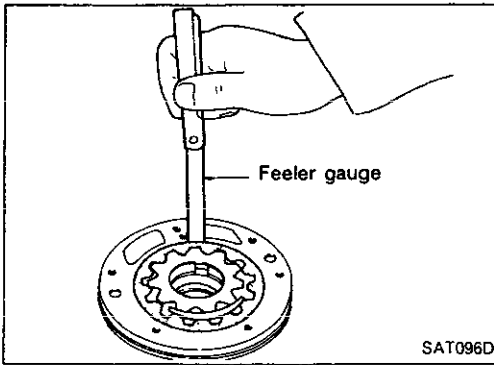


- Measure clearance between outer gear and oil pump housing.

Standard clearance:

0.08 - 0.15 mm (0.0031 - 0.0059 in)

- If not within standard clearance, replace whole oil pump assembly except oil pump cover.

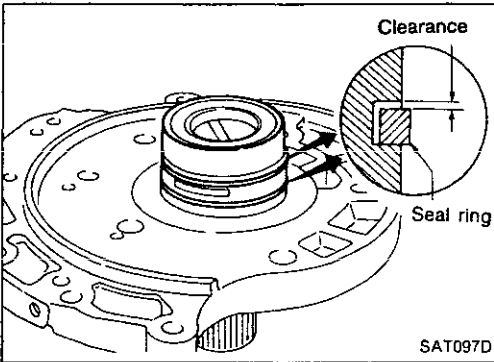

Seal ring clearance

- Install new seal rings onto oil pump cover.
- Measure clearance between seal ring and ring groove.


Standard clearance:

0.07 - 0.19 mm (0.0028 - 0.0075 in)

Allowable limit:


0.19 mm (0.0075 in)

- If not within wear limit, replace oil pump cover assembly.

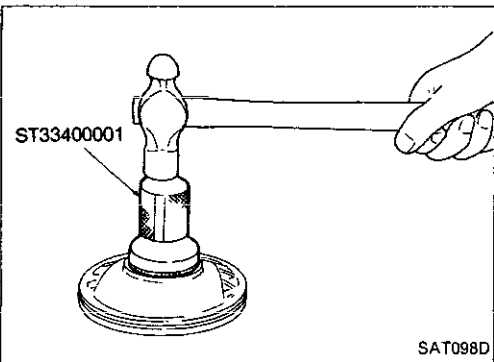


ASSEMBLY

1. Install oil seal on oil pump housing.

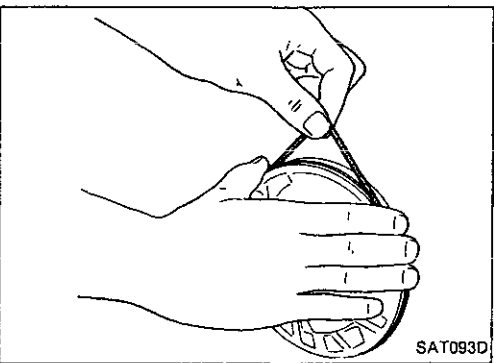


2. Install O-ring on oil pump housing.
 - Apply A.T.F. to O-ring.

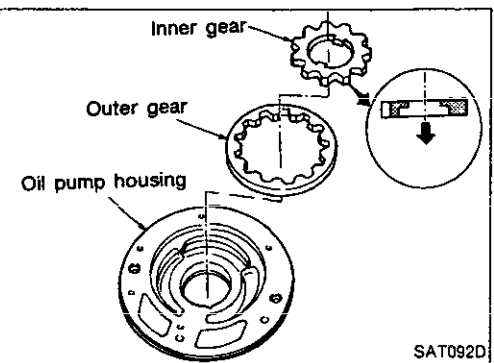


3. Install inner and outer gears on oil pump housing.
 - Take care with the direction of the inner gear.

Oil Pump (Cont'd)


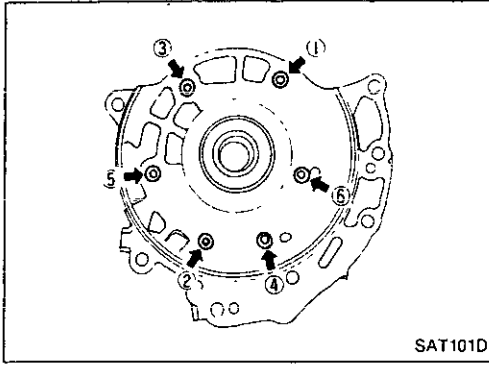


4. Install oil pump cover on oil pump housing.
 - a. Wrap masking tape around splines of oil pump cover assembly to protect seal. Position oil pump cover assembly on oil pump housing assembly, then remove masking tape.
 - b. Tighten bolts in numerical order.

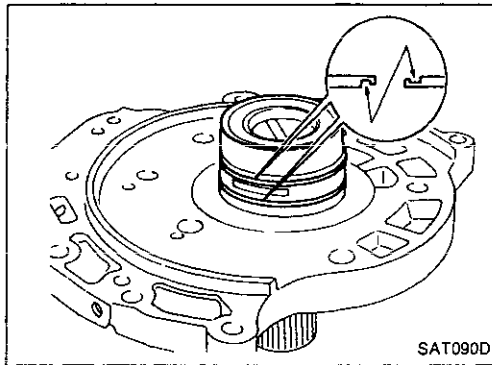

5. Install new seal rings carefully after packing ring groove with petroleum jelly and connect hooks.
 - **Do not spread gap of seal ring excessively while installing. It may deform the ring.**

Control Valve Assembly

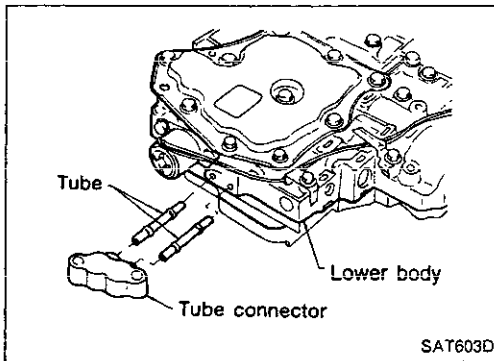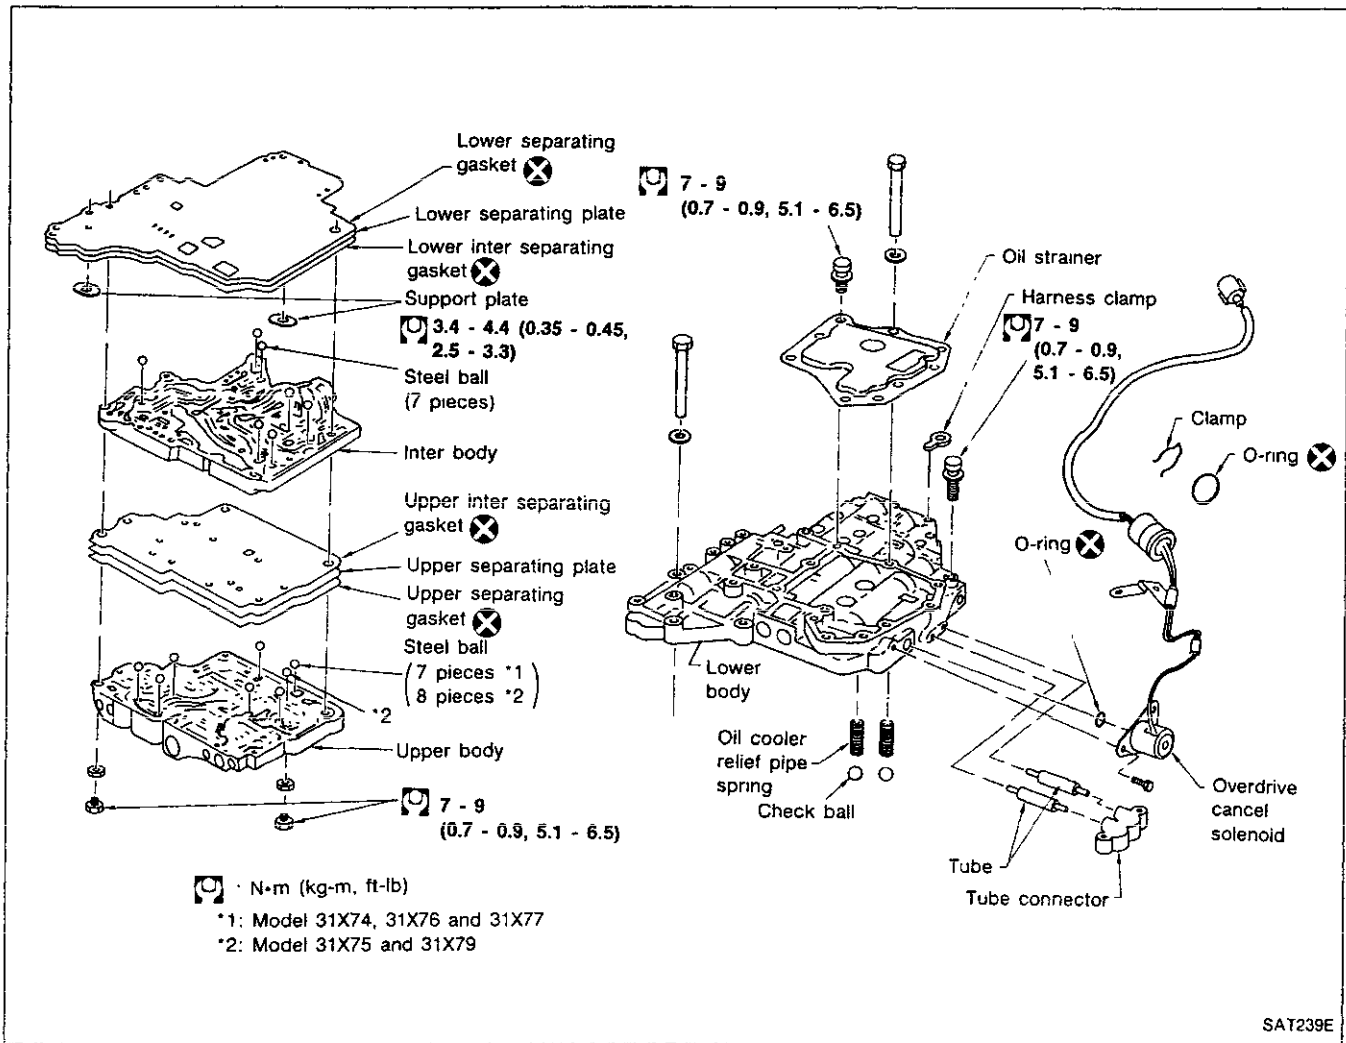

DISASSEMBLY

1. Remove tube connector and tube from control valve lower body.


REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)


2. Disassemble upper, inter and lower bodies using the following procedures.

Bolt length, number and location:

Bolt symbol	A	B	C	D	E	F
Bolt length "ℓ"	13.5	58.0	40.0	66.0	33.0	78.0
 ℓ mm (in)	(0.531)	(2.283)	(1.575)	(2.598)	(1.299)	(3.071)
Number of bolts	4	3	6	11	2	2

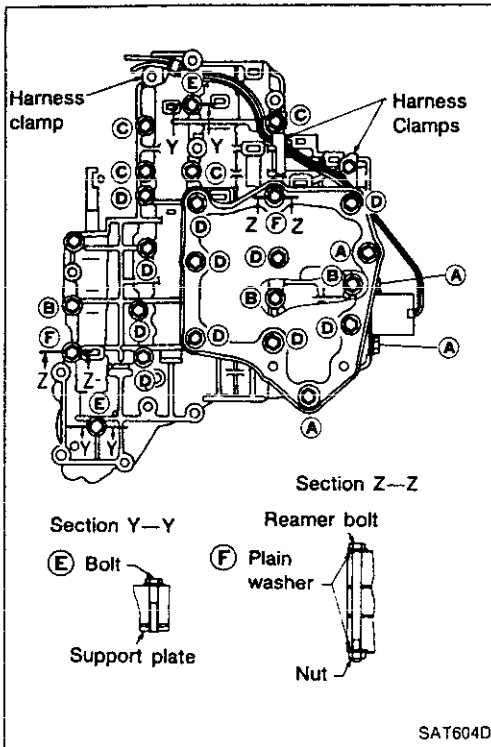


- Remove bolts **A**, **D** and **F** shown in the illustration.
- Remove oil strainer from control valve assembly.

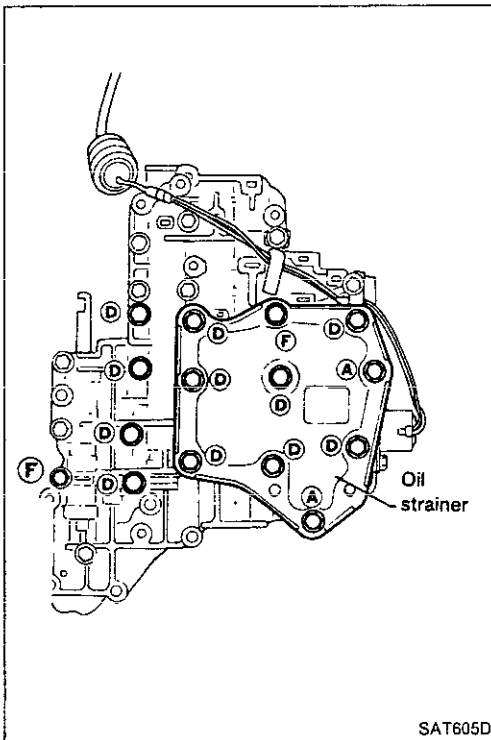


REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)


- c. Remove O.D. cancel solenoid from control valve assembly.

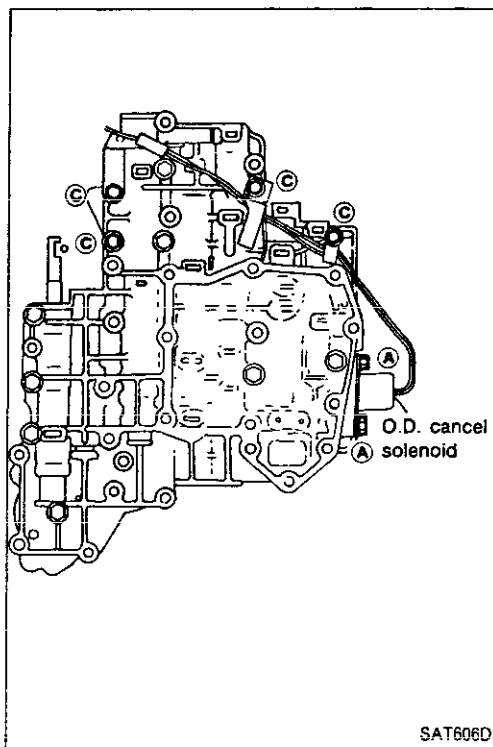


- d. Remove O-rings from O.D. cancel solenoid, and harness terminal body.

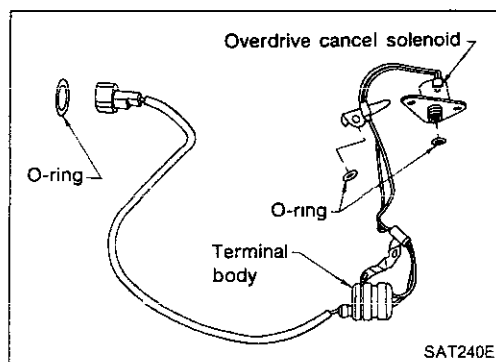


- e. Place upper body facedown, and remove bolts.

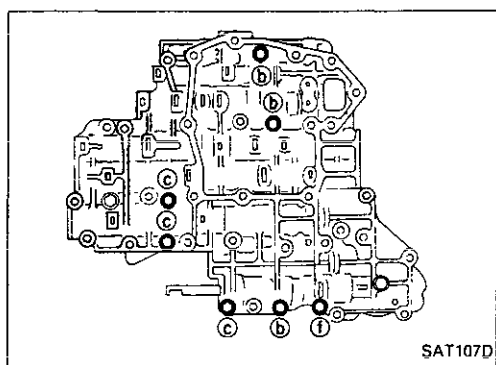


- f. Remove lower body from inter body and upper body.

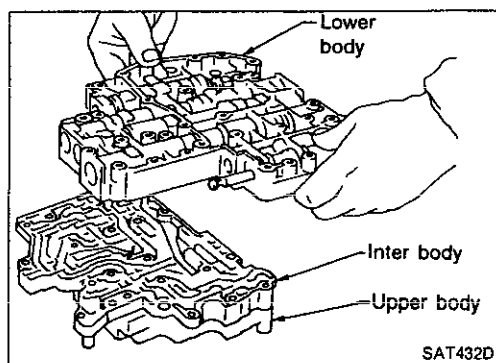


Control Valve Assembly (Cont'd)

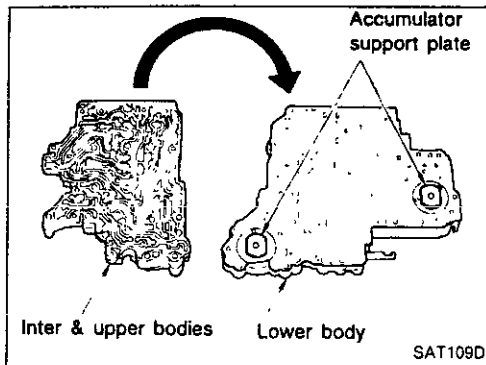


- g. Turn over lower body, and remove accumulator support plate.

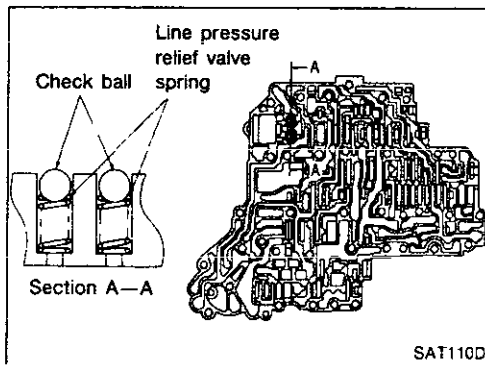

- h. Remove separating plate and separating gaskets from lower body.
i. Remove steel balls and relief valve springs from lower body.
● **Be careful not to lose steel balls and relief valve springs.**

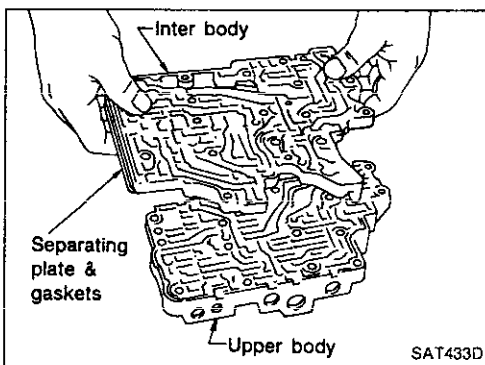


- j. Remove inter body from upper body.

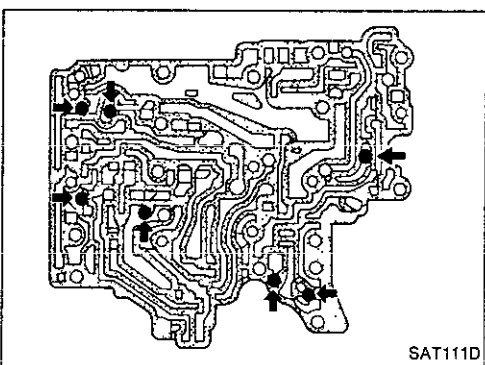


- k. Check to see that steel balls are properly positioned in inter body and then remove them from inter body.
● **Be careful not to lose steel balls.**

Model 31X74, 31X76 and 31X77

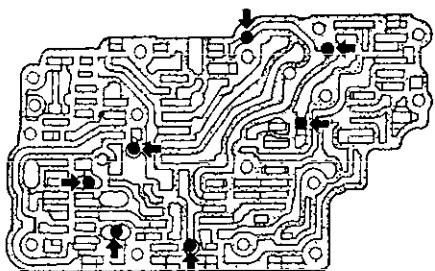

Model 31X75 and 31X79

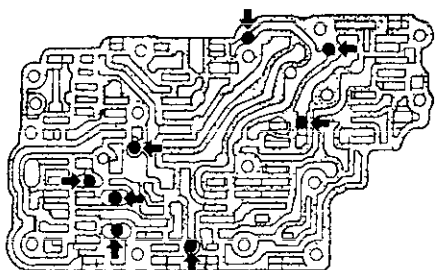

SAT241E


Control Valve Assembly (Cont'd)

- l. Remove separating plate and separating gaskets from upper body.
 - m. Check to see that steel balls are properly positioned in upper body and then remove them from upper body.
- **Be careful not to lose steel balls.**

INSPECTION


Lower and upper bodies

- Check to see that retainer plates are in proper position in lower body.

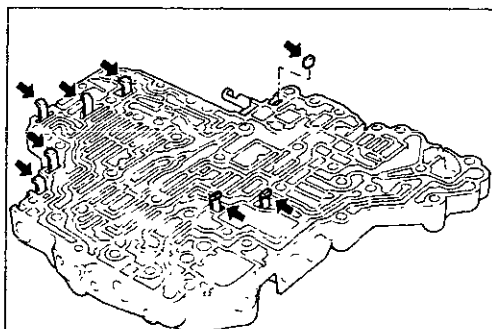

SAT113D


- Check to see that retainer plates are in proper position in upper body.
- **Be careful not to lose these parts.**

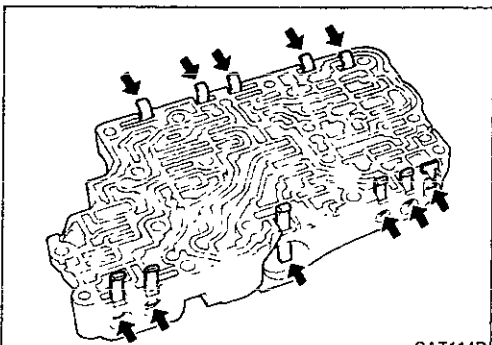

SAT114D

Oil strainer

- Check wire netting of oil strainer for damage.

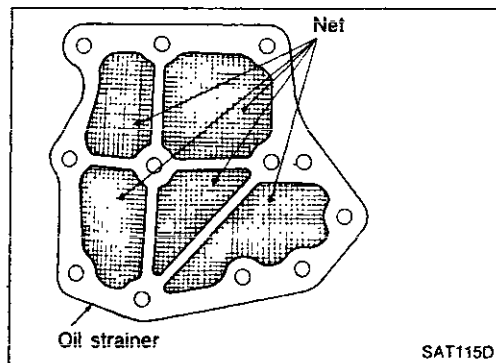



SAT115D

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

O.D. cancel solenoid

- Measure resistance — Refer to "ELECTRICAL SYSTEM".

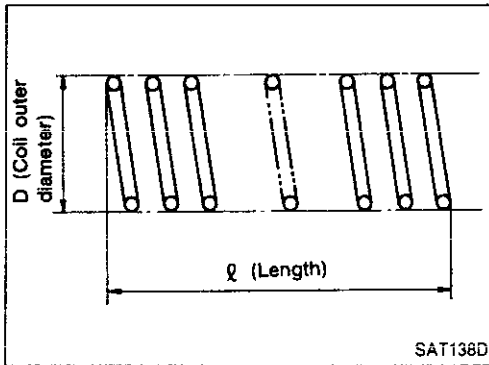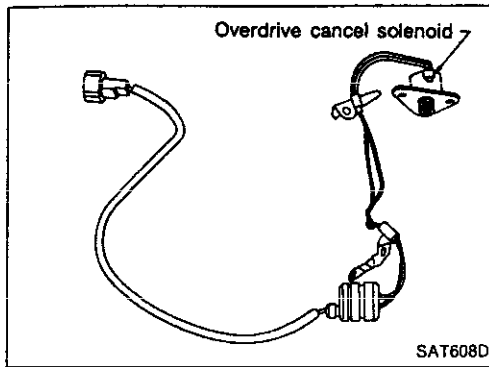


Oil cooler relief valve spring

- Check for damage or deformation.
- Measure free length and outer diameter of valve spring.


Inspection standard:

Unit: mm (in)		
Part No.	ℓ	D
31872-31X00	17 02 (0 6701)	8.0 (0.315)

Model 31X74, 31X76 and 31X77

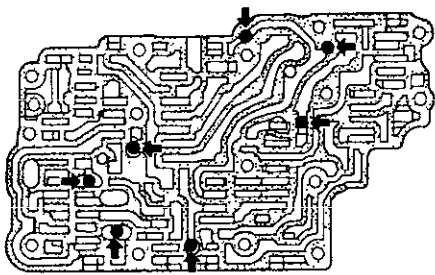


Model 31X75 and 31X79

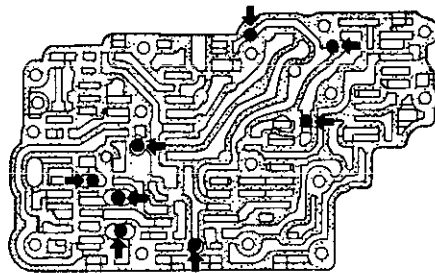

SAT241E


ASSEMBLY

1. Install upper, inter and lower body.
- a. Place oil circuit of upper body face up. Install steel balls in their proper positions.

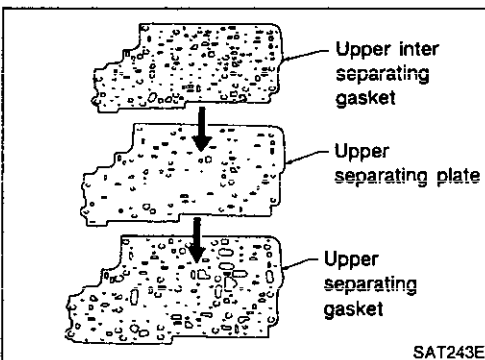


- b. Install new upper separating gasket, new upper inter separating gasket and upper separating plate in order shown in illustration.


Control Valve Assembly (Cont'd)

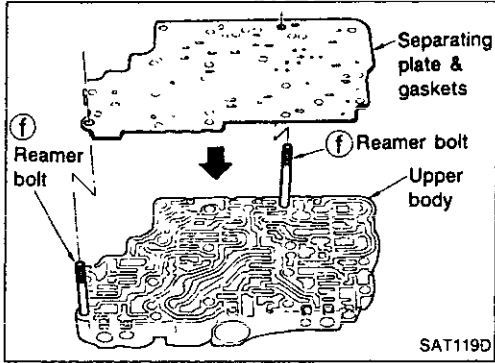

- c. Install reamer bolts ① from bottom of upper body and install separating gaskets and separating plate as a set on upper body using reamer bolts as guides.

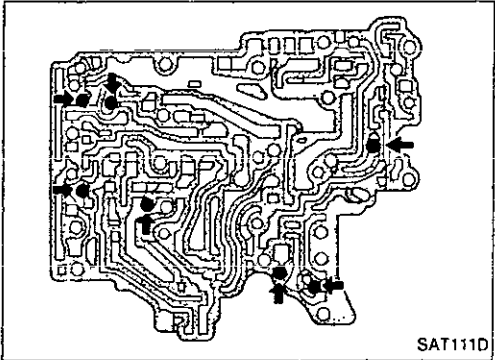


- d. Place lower body side of inter body face up. Install steel balls in their proper positions.

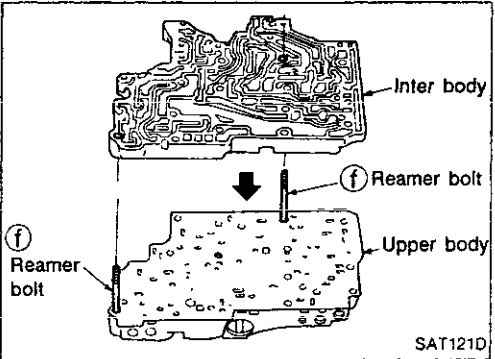


- e. Install inter body on upper body using reamer bolts ① as guides.

● **Be careful not to dislocate or drop steel balls.**

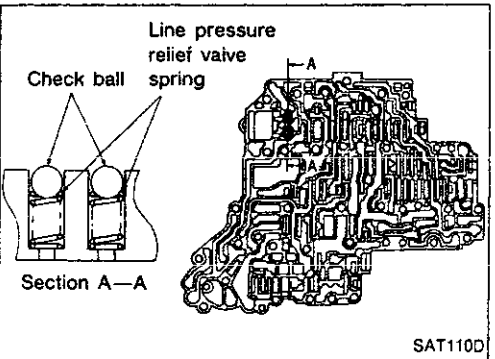


- f. Install steel balls and relief valve springs in their proper positions in lower body.

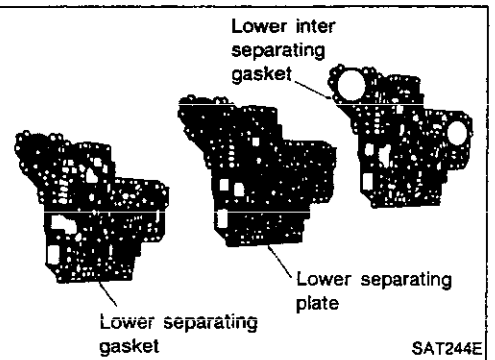


- g. Install new lower separating gasket, new lower inter separating gasket and lower separating plate in order shown in illustration.


Control Valve Assembly (Cont'd)

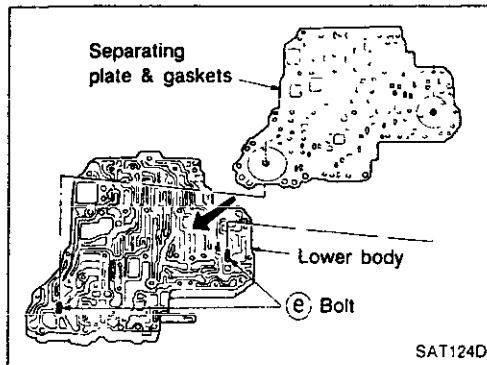


- h. Install support plate fixing bolts ⑤ from bottom of lower body and install separating gaskets and separating plate as a set on lower body using bolts ⑤ as guides.

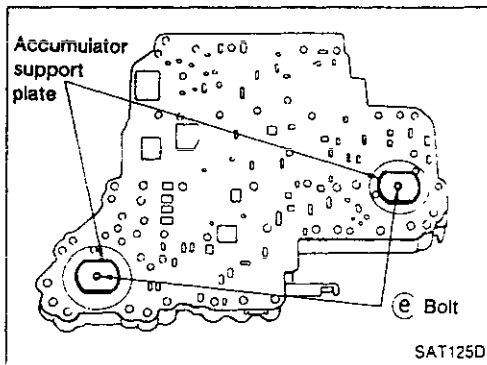

- i. Temporarily install support plates on lower body.

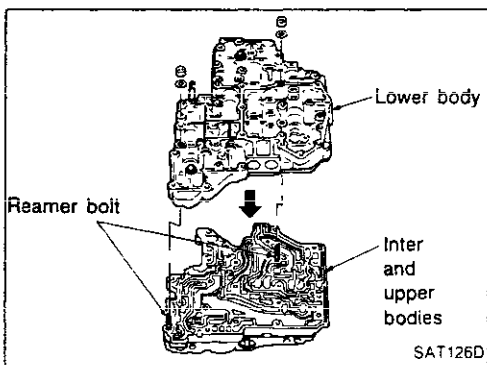

- j. Install lower body on inter body using reamer bolts ① as guides and tighten reamer bolts ① slightly.

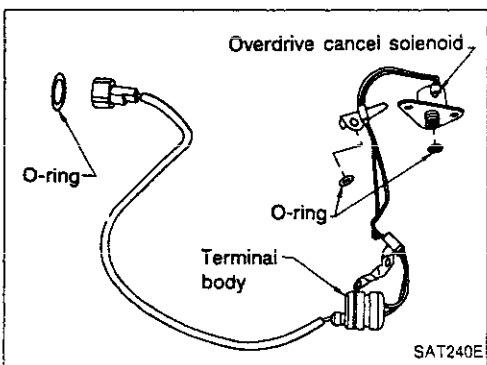



2. Install O-rings to O.D. cancel solenoid and terminal body.
● Apply A.T.F. to O-rings.

Control Valve Assembly (Cont'd)

3. Install and tighten bolts.


Bolt length, number and location:

Bolt symbol	A	B	C	D	E	F
Bolt length "ℓ"  ℓ mm (in)	13.5 (0.531)	58.0 (2.283)	40.0 (1.575)	66.0 (2.598)	33.0 (1.299)	78.0 (3.071)
Number of bolts	4	3	6	11	2	2
Tightening torque N·m (kg-m, ft-lb)	7 - 9 (0.7 - 0.9, 5.1 - 6.5)				3.4 - 4.4 (0.35 - 0.45, 2.5 - 3.3)	7 - 9 (0.7 - 0.9, 5.1 - 6.5)

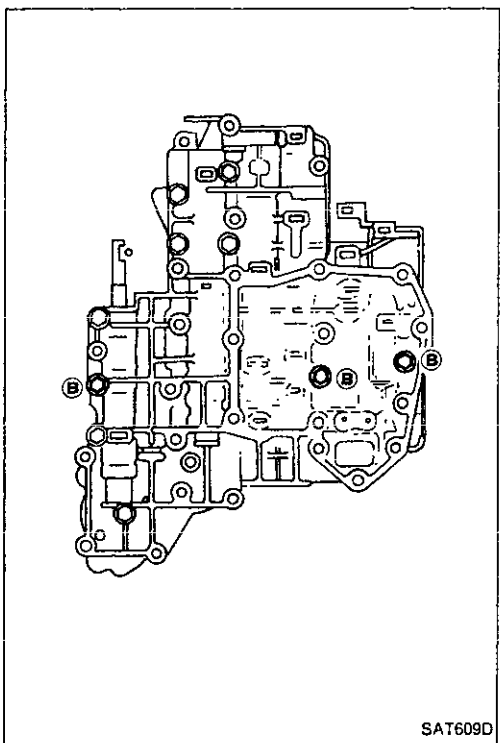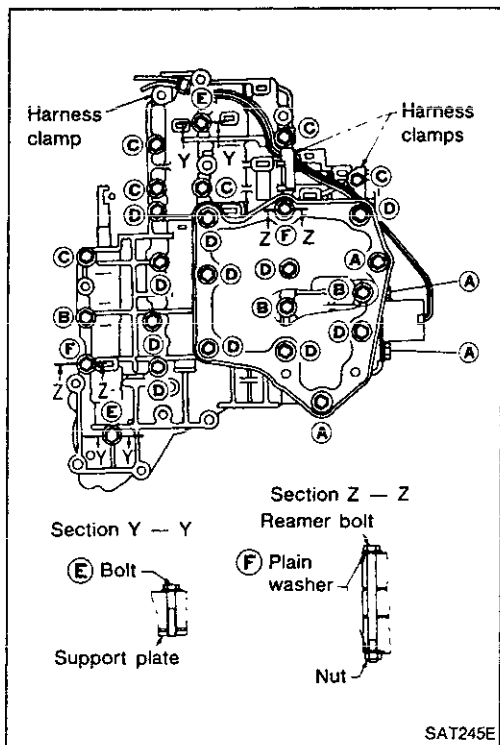


a. Install and tighten bolts ⑧ slightly.

Control Valve Assembly (Cont'd)

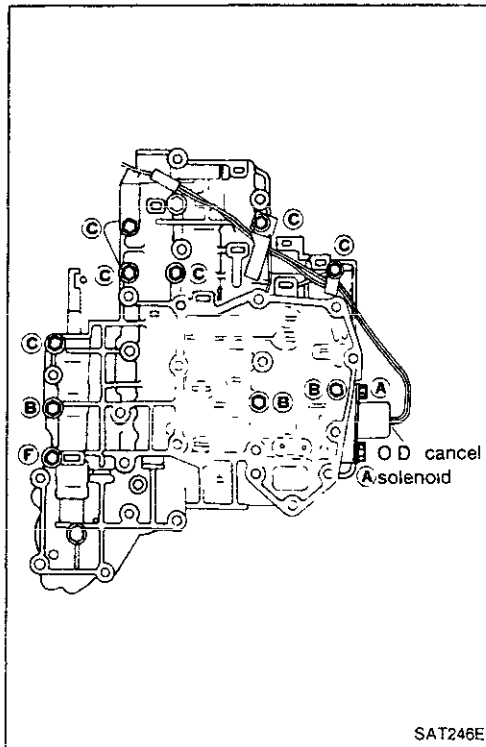


- b. Install O.D. cancel solenoid to lower body.
- c. Install and tighten bolts **(A)** and **(C)** slightly.
- d. Remove both reamer bolts **(F)** previously installed as guides. Install one reamer bolt **(F)** (marked in illustration) from lower body side.
- e. Tighten bolts **(A)**, **(B)**, **(C)** and **(F)** to specified torque.

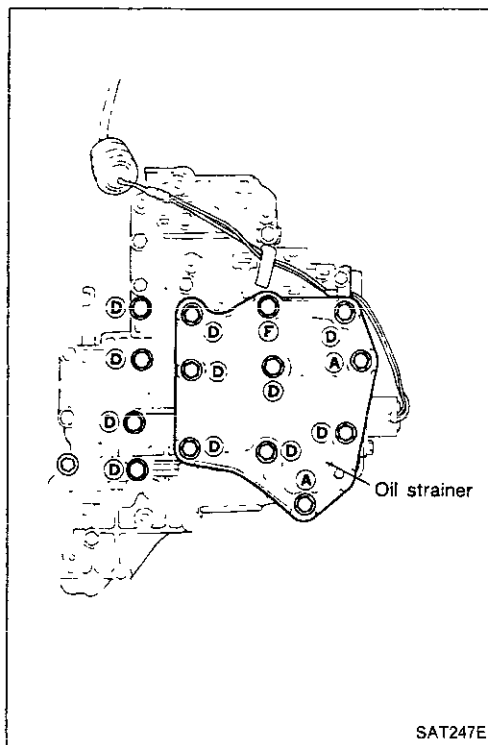


- f. Install oil strainer and the other bolt **(F)** (marked in illustration), then tighten bolts **(A)**, **(D)** and **(F)** to specified torque.

Control Valve Assembly (Cont'd)


- g. Install support plates and tighten bolts ⑤ to specified torque.

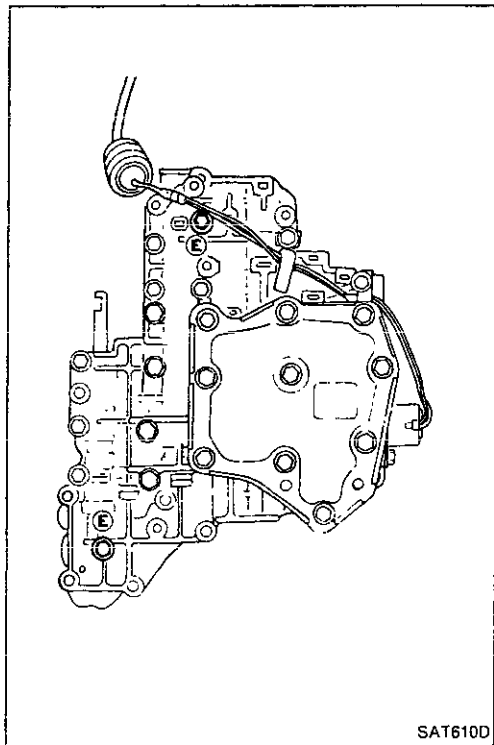

- h. Install tube connector and tubes to lower body.
- Install oil circuit side of tube connector face up.

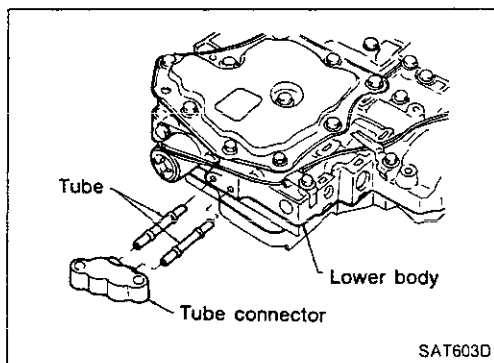

Control Valve Upper Body

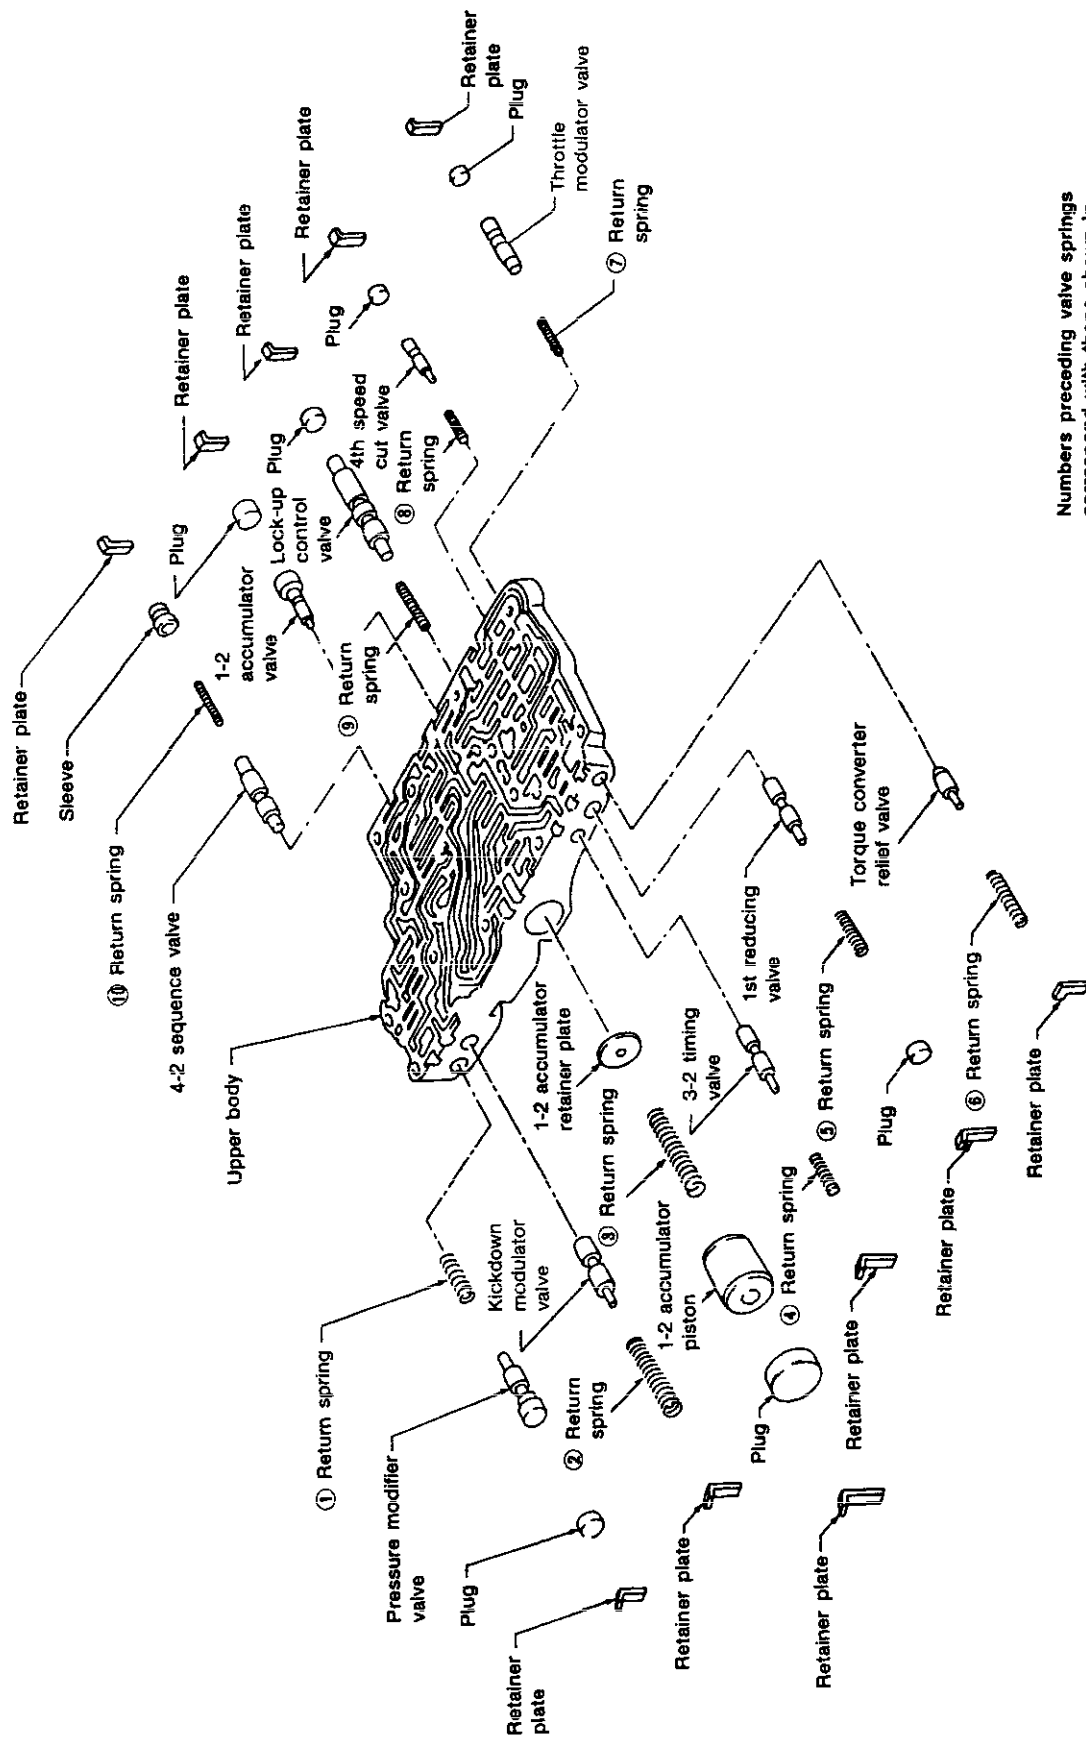


Numbers preceding valve springs correspond with those shown in Spring Chart on page AT-79.

Apply A.T.F. to all components before their installation.


Control Valve Upper Body (Cont'd)

DISASSEMBLY


1. Remove valves at retainer plates.
 - Do not use a magnetic "hand".

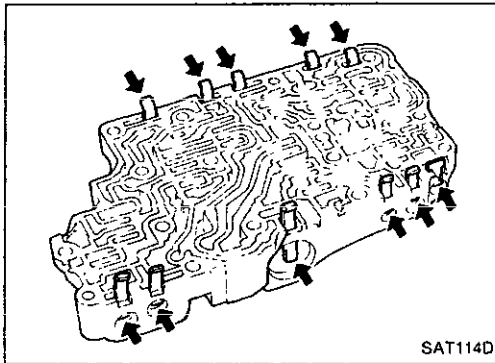


- a. Use a screwdriver to pry out retainer plates.

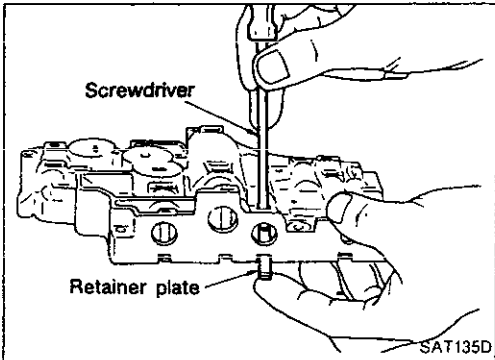

- b. Remove retainer plates while holding spring, plugs and sleeves.
 - Remove plug slowly to prevent internal parts from jumping out.

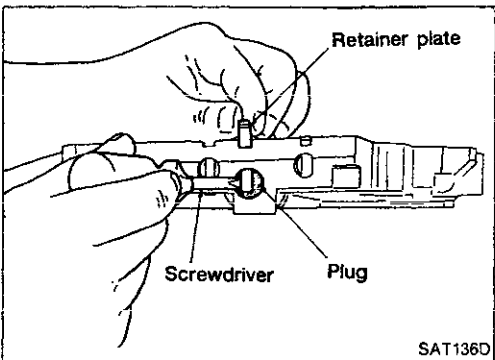


- c. Place mating surface of valve face down, and remove internal parts.
 - If a valve is hard to remove, place valve body face down and lightly tap it with a soft hammer.
 - Be careful not to drop or damage valves and sleeves.

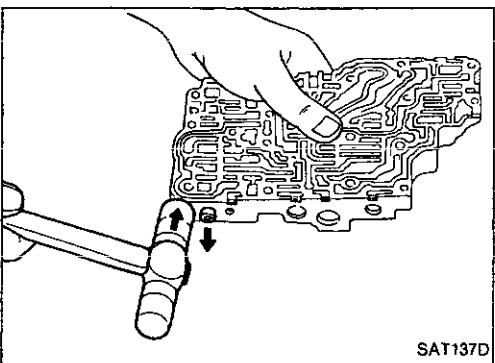

INSPECTION

Valve spring

- Measure free length and outer diameter of each valve spring. Also check for damage or deformation.
- Numbers of each valve spring listed in table below are the same as those in the figure on page AT-77.

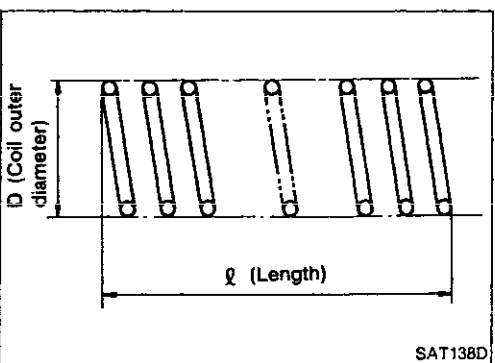

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

Inspection standard:


Unit: mm (in)

Parts		Item	Part No.	ℓ	D
①	Pressure modifier valve spring	Model 31X74, 31X75, 31X76, 31X79	31742-31X02	25.0 (0.984)	8.0 (0.315)
		Model 31X77	31742-31X10	25.0 (0.984)	8.2 (0.323)
②	Kickdown modulator valve spring		31742-31X03	40.5 (1.594)	9.0 (0.354)
③	1-2 accumulator valve spring	Model 31X74, 31X75, 31X76, 31X79	31742-31X04	51.14 (2.0134)	17.0 (0.669)
		Model 31X77	31742-31X63	50.9 (2.004)	12.6 (0.496)
④	3-2 timing valve spring		31736-21X00	26.3 (1.035)	7.2 (0.283)
⑤	1st reducing valve spring		31835-21X08	22.6 (0.890)	7.3 (0.287)
⑥	Torque converter relief valve spring		31742-31X06	23.5 (0.925)	7.4 (0.291)
⑦	Throttle modulator valve spring	Model 31X74, 31X76, 31X77	31742-31X07	29.5 (1.161)	5.5 (0.217)
		Model 31X75, 31X79	31742-31X65	29.5 (1.161)	5.5 (0.217)
⑧	4th speed cut valve spring	Model 31X74, 31X76, 31X77	31835-21X05	23.3 (0.917)	6.2 (0.244)
		Model 31X75, 31X79	31737-21X00	25.4 (1.000)	7.3 (0.287)
⑨	Lock-up control valve spring		31742-31X08	39.5 (1.555)	5.0 (0.197)
⑩	4-2 sequence valve spring		31742-31X09	39.5 (1.555)	5.1 (0.201)

- Replace valve springs if deformed or fatigued.


Control valves

- Check sliding surfaces of valves, sleeves and plugs.

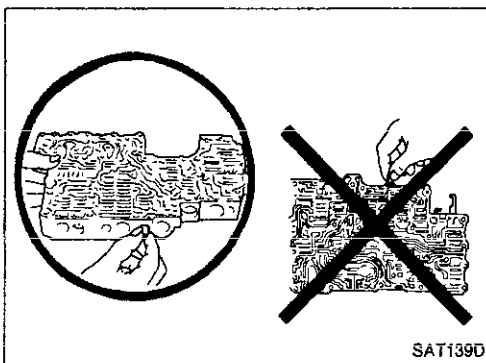

ASSEMBLY


- Lay the control valve body down when installing valves.
- Do not stand the control valve body on edge.

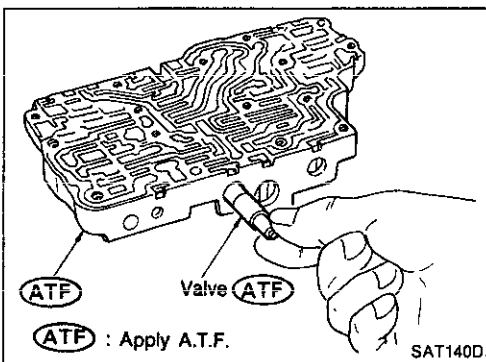


1. Lubricate the control valve body and all valves with A.T.F. Install control valves by sliding them carefully into their bores.
- Be careful not to scratch or damage valve body.

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

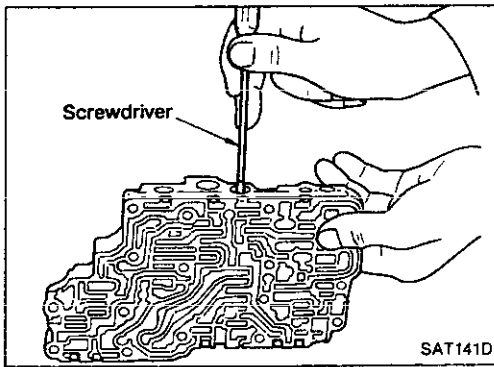


- Wrap a small screwdriver with vinyl tape and use it to insert the valves into their proper positions.

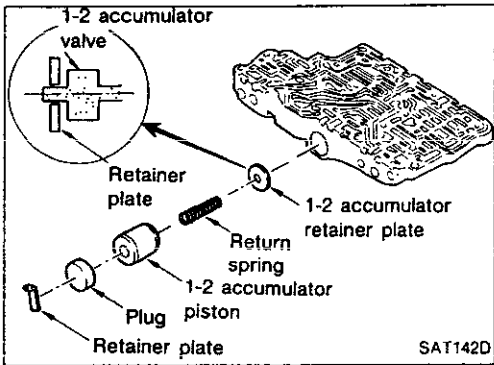


1-2 accumulator valve

- Install 1-2 accumulator valve and then align 1-2 accumulator retainer plate with 1-2 accumulator valve from opposite side of control valve body.
- Install return spring and 1-2 accumulator piston.

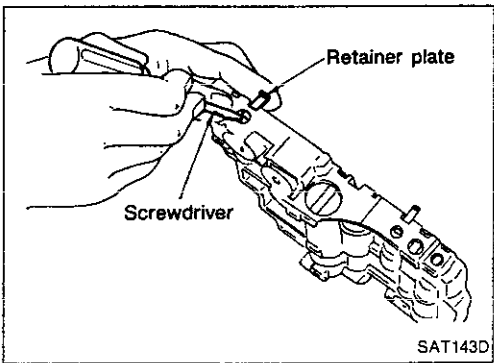

2. Install retainer plates

- While pushing plug or return spring, install retainer plate.

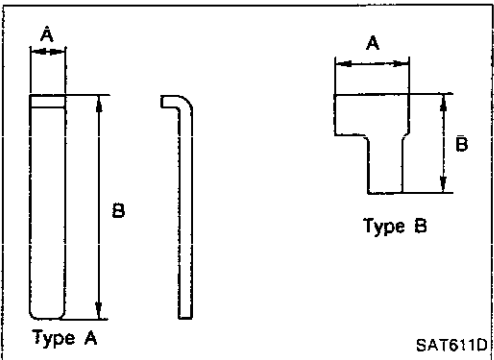


Retainer plate:

Unit: mm (in)

Name of control valves	Length A	Length B	Type
Pressure modifier valve	6.0 (0.236)	28.0 (1.102)	A
Lock-up control valve			
4-2 sequence valve			
Kickdown modulator valve	6.0 (0.236)	21.5 (0.846)	
3-2 timing valve			
1st reducing valve			
Throttle modulator valve			
4th speed cut valve	6.0 (0.236)	37.5 (1.476)	
1-2 accumulator valve			
Torque converter relief valve			
	13.0 (0.512)	17.0 (0.669)	B

- Install proper retainer plates.

Control Valve Lower Body

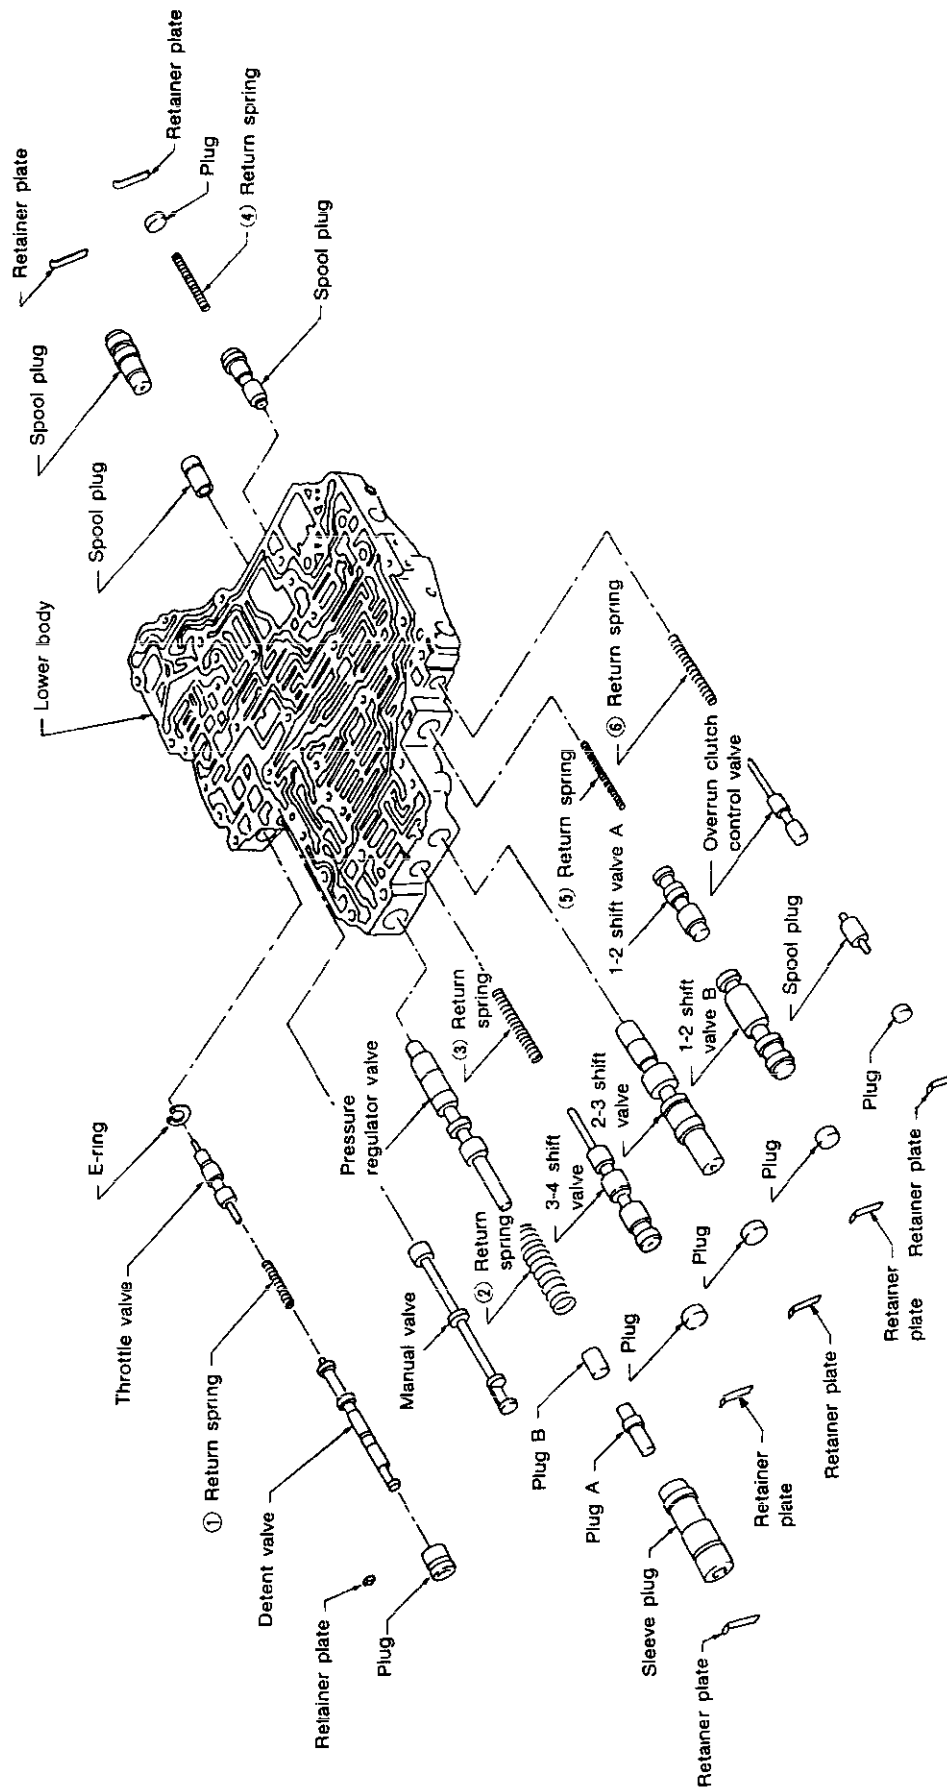

Numbers preceding valve springs correspond with those shown in Spring Chart on page AT-82.



Apply A.T.F. to all components before their installation.

REPAIR FOR COMPONENT PARTS

Control Valve Lower Body (Cont'd)


DISASSEMBLY

1. Remove valves at retainer plate.
For removal procedures, refer to "DISASSEMBLY" in "Control Valve Upper Body".

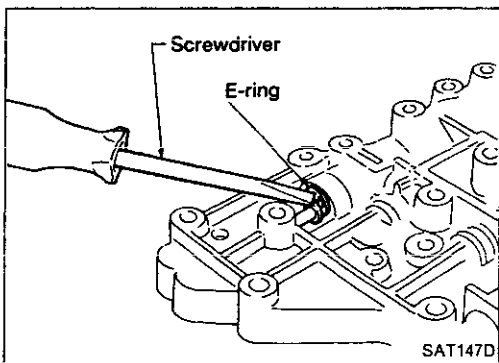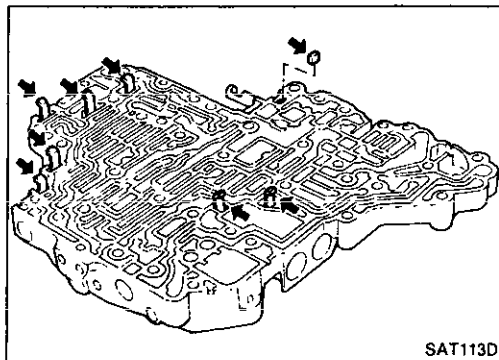

Throttle valve

- Remove throttle valve at E-ring.

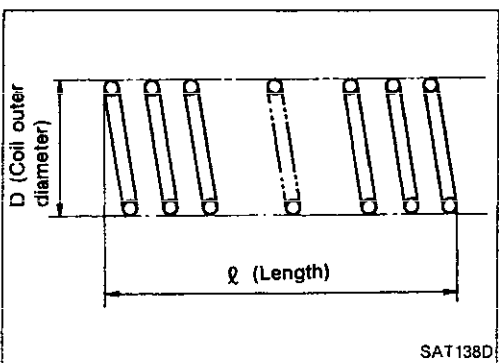

INSPECTION

Valve springs

- Check each valve spring for damage or deformation. Also measure free length and outer diameter.
- Numbers for each valve spring listed in the table below are the same as those in the figure on page AT-81.

Inspection standard:

Unit: mm (in)

Parts			Item	Part No.	l	D
①	Throttle valve & detent valve spring	Model 31X74, 31X75, 31X76, 31X79		31802-31X00	31.0 (1.220)	10.0 (0.394)
		Model 31X77		31802-31X01	33.0 (1.299)	10.0 (0.394)
②	Pressure regulator valve spring			31742-31X00	52.24 (2.0567)	15.0 (0.591)
③	3-4 shift valve spring			31762-31X00	52.0 (2.047)	8.0 (0.315)
④	2-3 shift valve spring			31762-31X01	52.7 (2.075)	7.0 (0.276)
⑤	1-2 shift valve spring			31762-31X02	45.9 (1.807)	5.3 (0.209)
⑥	Overrun clutch control valve spring			31742-31X60	48.9 (1.925)	7.0 (0.276)

- Replace valve springs if deformed or fatigued.

Control valves

- Check sliding surfaces of control valves, sleeves and plugs for damage.


REPAIR FOR COMPONENT PARTS

Control Valve Lower Body (Cont'd)

ASSEMBLY


Throttle valve

- Insert throttle valve to control valve body and then install E-ring to throttle valve.

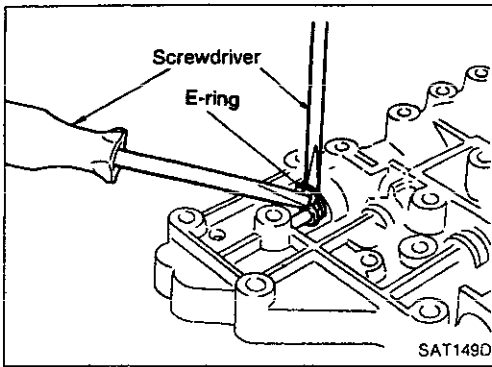


Pressure regulator valve

- Install pressure regulator valve after assembling sleeve plug, plug A and plug B.

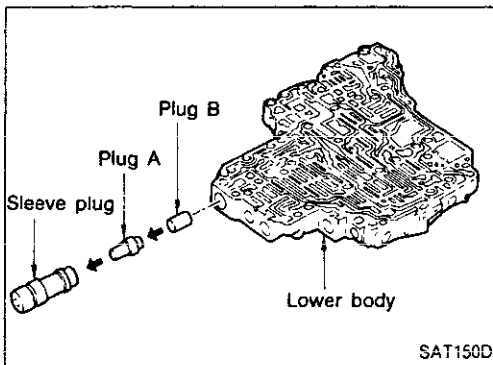


3-4 shift valve and 2-3 shift valve

- Install 3-4 shift valve and 2-3 shift valve after fixing plugs to retainer plates on the opposite side.

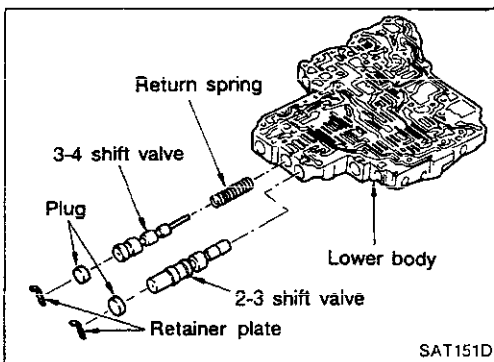


- Install control valves.
For installation procedures, refer to "ASSEMBLY in "Control Valve Upper Body."

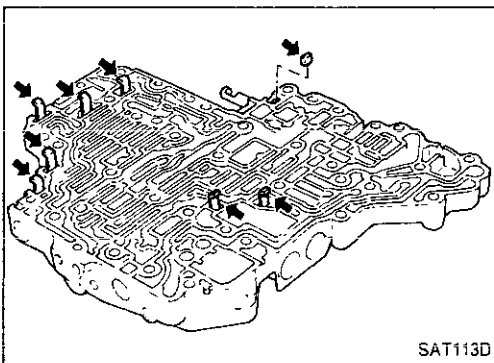

Control Valve Lower Body (Cont'd)

Retainer plate:

Unit: mm (in)

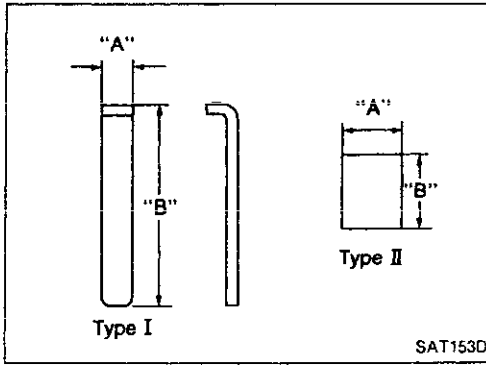


Name of control valve	Length A	Length B	Type
Throttle valve & detent valve	6.0 (0.236)	7.2 (0.283)	A
Pressure regulator valve	6.0 (0.236)	28.0 (1.102)	B
3-4 shift valve			
2-3 shift valve			
1-2 shift valve			
Overrun clutch control valve			


- Install proper retainer plates

Reverse Clutch (Cont'd)


- Do not remove return springs from spring retainer.

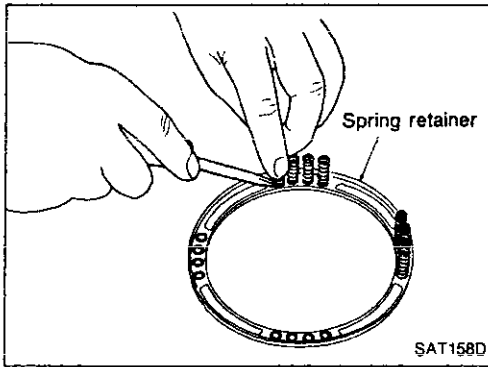

6. Remove piston from reverse clutch drum by turning it.

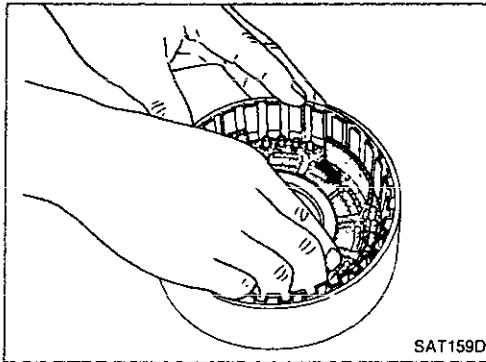

7. Remove D-ring and oil seal from piston.

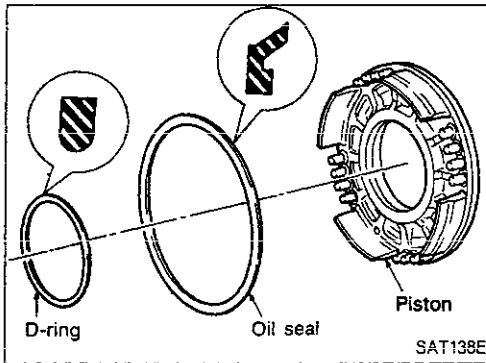


INSPECTION

Reverse clutch snap ring, spring retainer and return springs

- Check for deformation, fatigue or damage.
- Replace if necessary.
- When replacing spring retainer and return springs, replace them as a set.

Reverse clutch drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.
Thickness of drive plate:
Standard value: 2.0 mm (0.079 in)
Wear limit: 1.8 mm (0.071 in)
- If not within wear limit, replace.

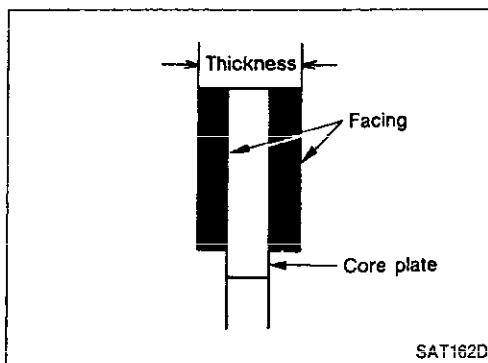

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)



Reverse clutch dished plates

- Check for deformation or damage.
- Measure thickness of dished plate.

Thickness of dished plate:

2.89 - 3.19 mm (0.1138 - 0.1256 in)

- If deformed or fatigued, replace.

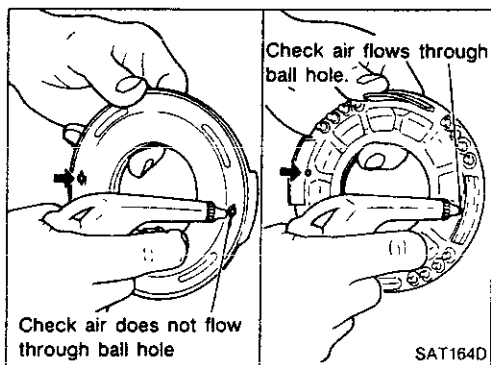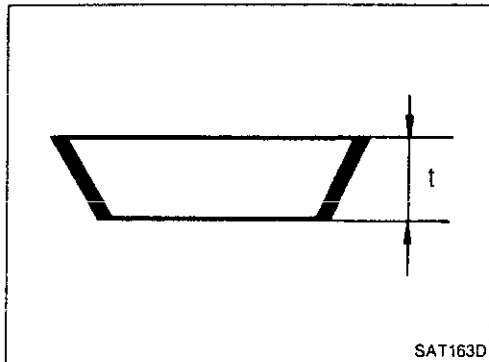


Reverse clutch piston

- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring to make sure that there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure air leaks past ball.

ASSEMBLY


1. Install D-ring and oil seal on piston.

- Take care with the direction of the oil seal.
- Apply A.T.F. to both parts.

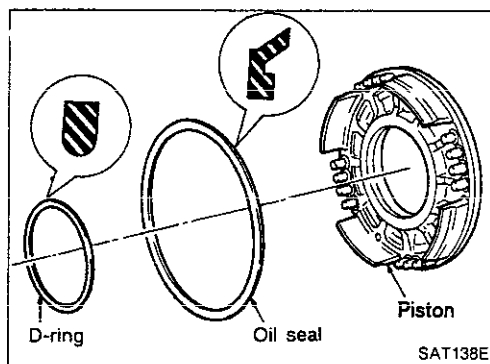


2. Install piston assembly by turning it slowly.


- Apply A.T.F. to inner surface of drum.

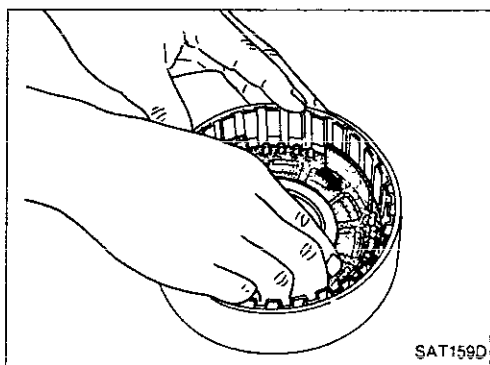

3. Install return springs and spring retainer on piston.

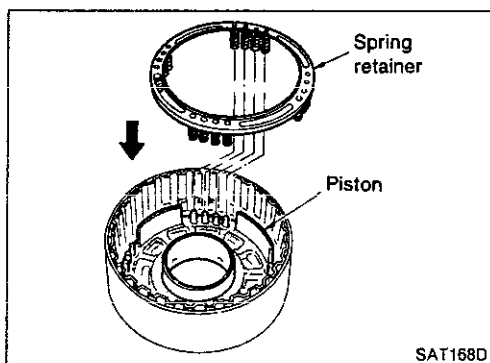


Reverse Clutch (Cont'd)

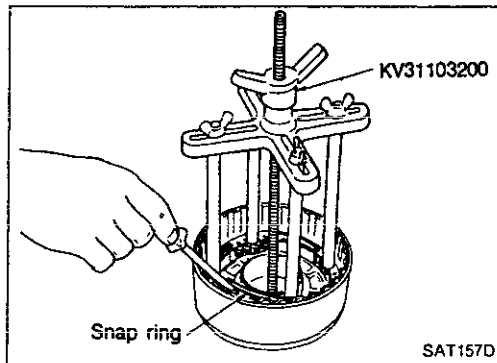



4. Set Tool on spring retainer and install snap ring while compressing return springs.

- Set Tool directly above return springs.

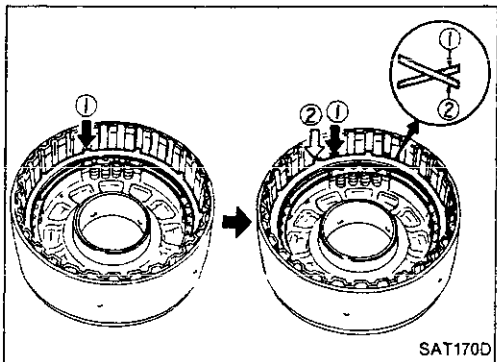


5. Install drive plates, driven plates, retaining plate and dished plates.

- Do not align the projections of any two dished plates.

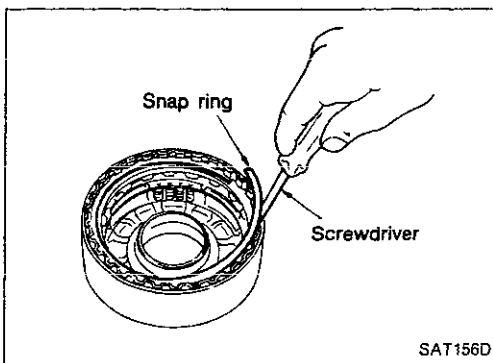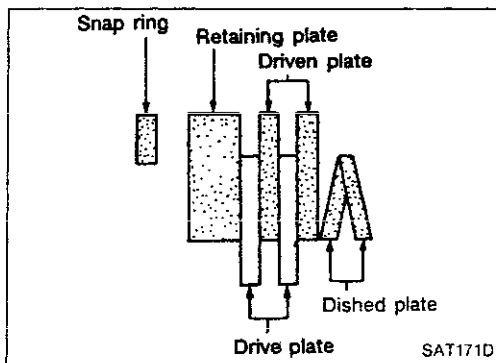

6. Install snap ring.

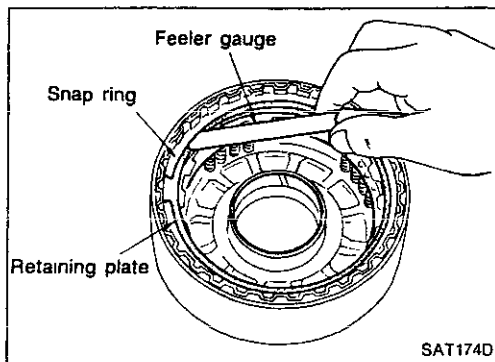

7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

Specified clearance:


Standard: 0.5 - 0.8 mm (0.020 - 0.031 in)

Allowable limit: 1.2 mm (0.047 in)

Retaining plate: Refer to S.D.S.


Reverse Clutch (Cont'd)

8. Check operation of reverse clutch.
Refer to "DISASSEMBLY" in "Reverse Clutch."

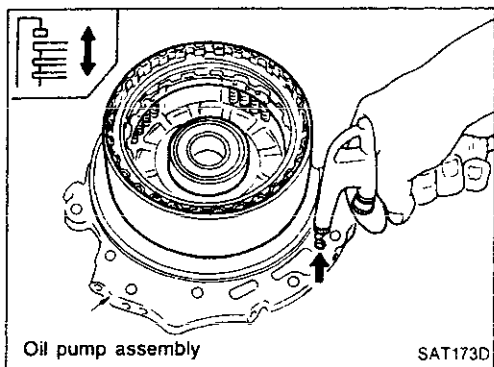


High Clutch


For the number of clutch sheets (drive plates and driven plates), refer to the below cross-section.

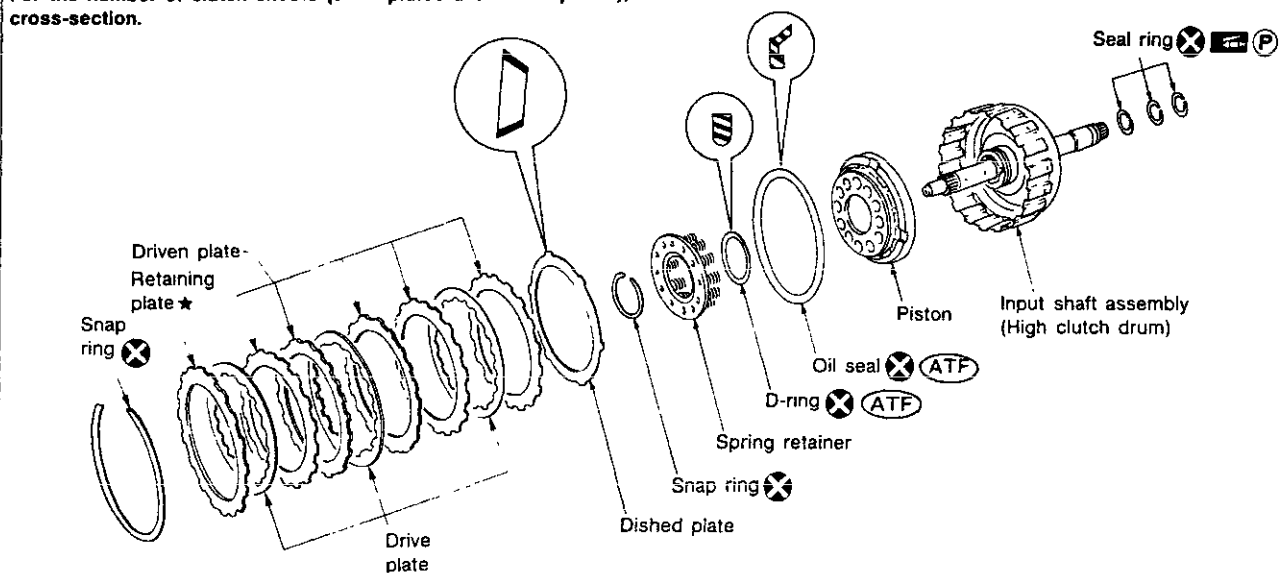

Model 31X74, 31X75, 31X76, 31X79

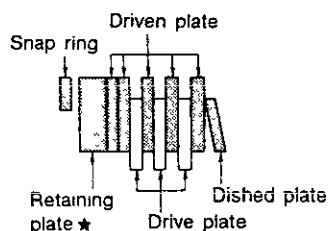


Model 31X77

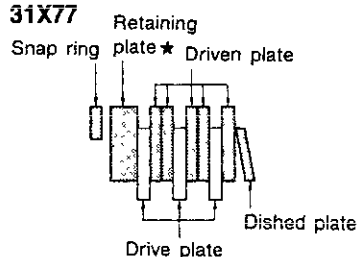


(P) Apply petroleum jelly.
(ATF) Apply ATF
★ Select proper thickness.

SAT250E

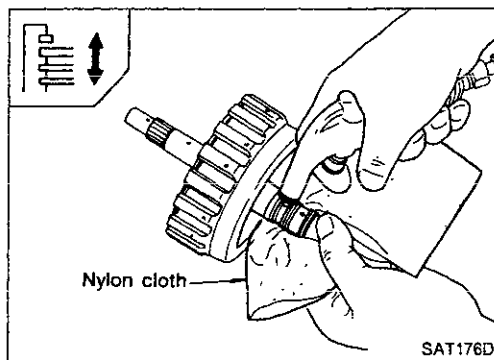

SAT176D


1. Check operation of high clutch.
 - a. Apply compressed air to oil hole of input shaft.
 - **Stop up a hole on opposite side of input shaft.**
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not move to snap ring, D-ring or oil seal may be damaged or fluid may be leaking at piston check ball.

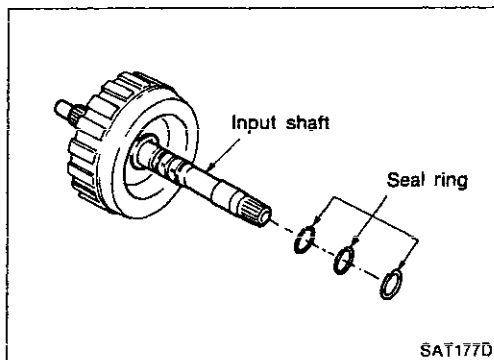


SAT177D

2. Remove seal rings from input shaft.


High Clutch (Cont'd)

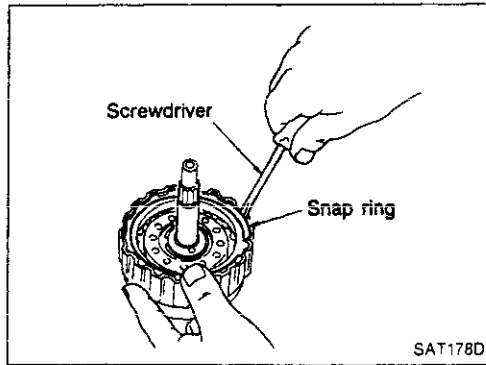


3. Remove snap ring.
4. Remove drive plates, driven plates, retaining plate and dished plate.

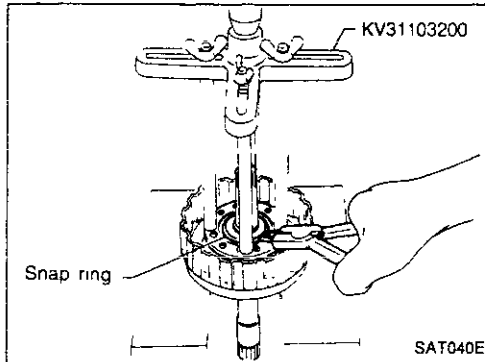


5. Set Tool on spring retainer and remove snap ring from high clutch drum while compressing return springs.
 - Set Tool directly above springs.
 - Do not expand snap ring excessively.
6. Remove spring retainer and return springs.

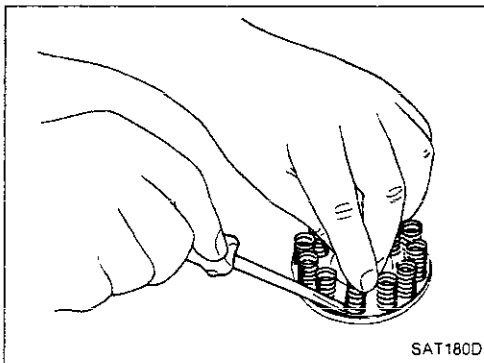

- Do not remove return springs from spring retainer.

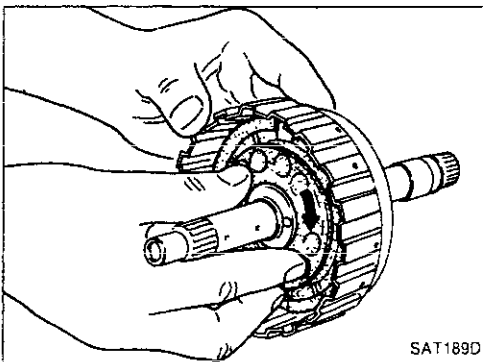

7. Remove piston from high clutch drum by turning it.

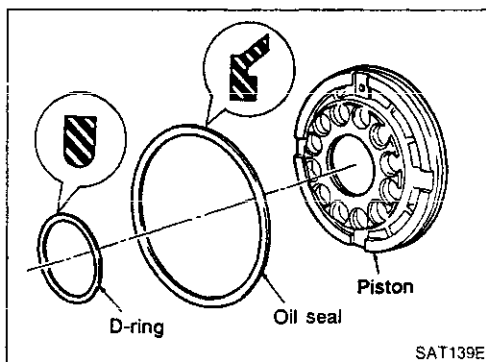


8. Remove D-ring and oil seal from piston.

High Clutch (Cont'd)

INSPECTION

Reverse clutch snap ring, spring retainer and return springs

- Check for deformation, fatigue or damage.
- Replace if necessary.
- **When replacing spring retainer and return springs, replace them as a set.**

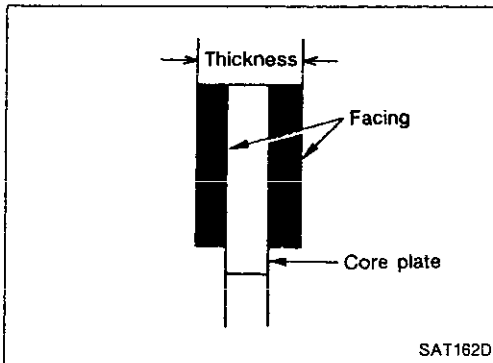

High clutch drive plates


- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate:

Standard value: 2.0 mm (0.079 in)

Wear limit: 1.8 mm (0.071 in)

- If not within wear limit, replace.

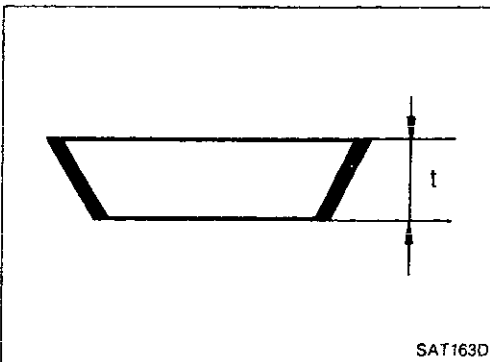


High clutch dished plate

- Check for deformation or damage.
- Measure thickness of dished plate.

Thickness of dished plate:


2.55 - 2.85 mm (0.1004 - 0.1122 in)

- If deformed or fatigued, replace.

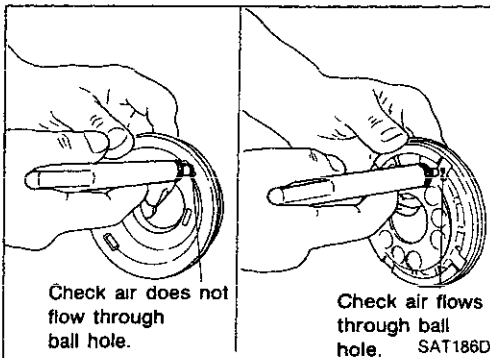

High clutch piston

- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring to make sure that there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure air leaks past ball.

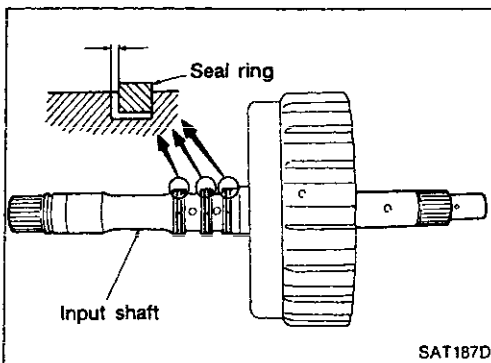

Seal ring clearance

- Install new seal rings onto input shaft.
- Measure clearance between seal ring and ring groove.

Standard clearance:

0.08 - 0.23 mm (0.0031 - 0.0091 in)

Allowable limit:

0.23 mm (0.0091 in)


- If not within wear limit, replace input shaft assembly.

REPAIR FOR COMPONENT PARTS


High Clutch (Cont'd)

ASSEMBLY


1. Install D-ring and oil seal on piston.
 - Take care with the direction of the oil seal.
 - Apply A.T.F. to both parts.

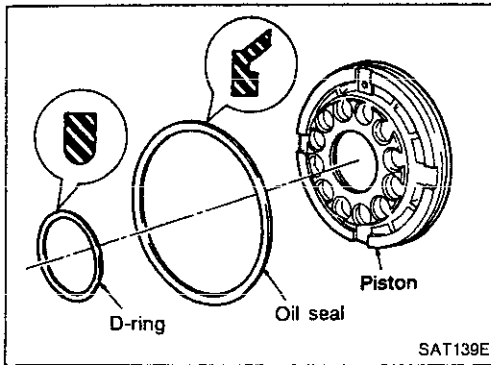


2. Install piston assembly by turning it slowly.
 - Apply A.T.F. to inner surface of drum.

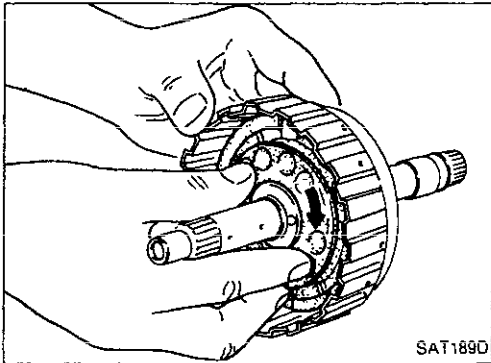


3. Install return springs and spring retainer on piston.

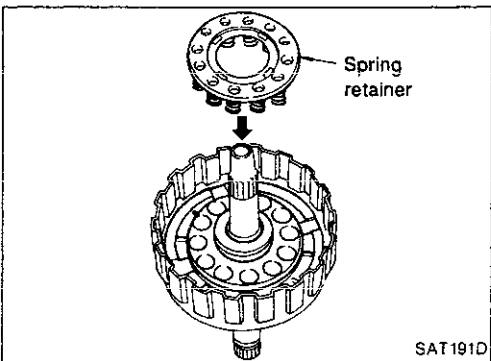

4. Set Tool on spring retainer and install snap ring while compressing return springs.
 - Set Tool directly above return springs.

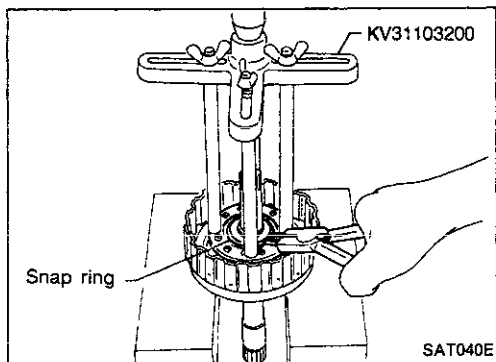


- Do not align snap ring gap with spring retainer stopper.

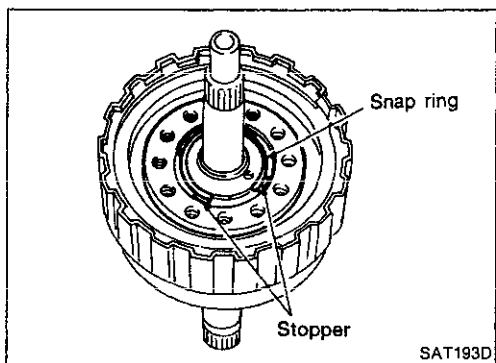


High Clutch (Cont'd)

**Model 31X74, 31X75,
31X76, 31X79**

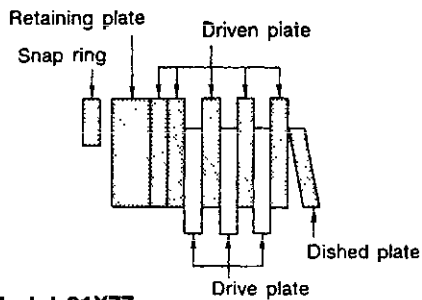


Model 31X77

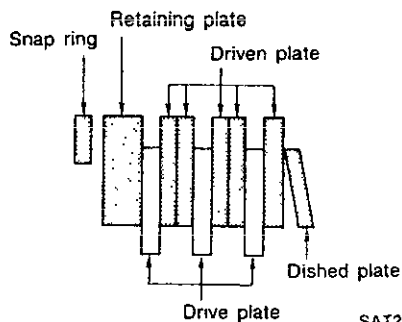

SAT251E

5. Install drive plates, driven plates, retaining plate and dished plate.

6. Install snap ring.

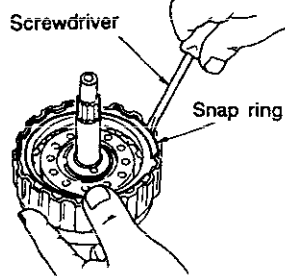

SAT195D


7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard: 1.4 - 1.8 mm (0.055 - 0.071 in)


Allowable limit: 2.4 mm (0.094 in)

Retaining plate: Refer to S.D.S.

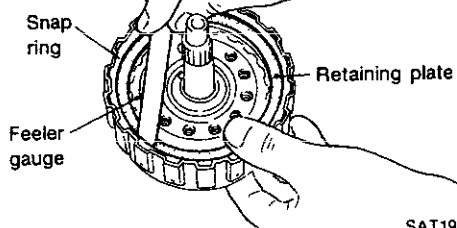

SAT199D

8. Check operation of high clutch. Refer to "DISASSEMBLY" in "High Clutch".

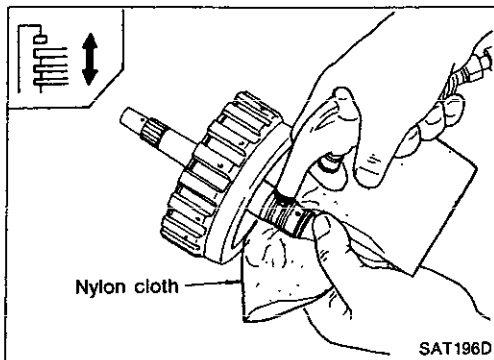



SAT196D

REPAIR FOR COMPONENT PARTS

High Clutch (Cont'd)



9. Install seal rings to input shaft.

- Apply petroleum jelly to seal rings.

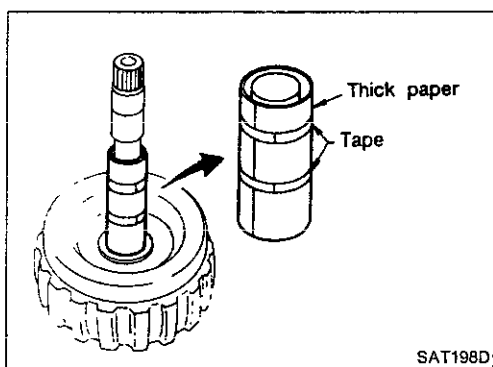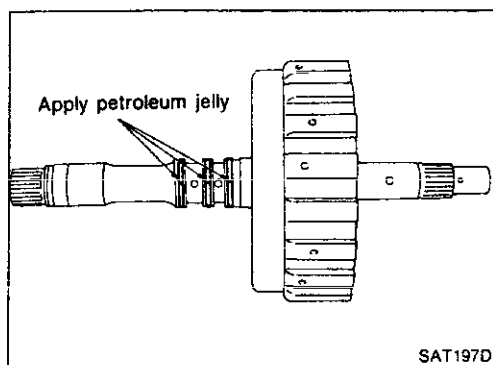


- Roll paper around seal rings to prevent seal rings from spreading.

Forward Clutch and Overrun Clutch

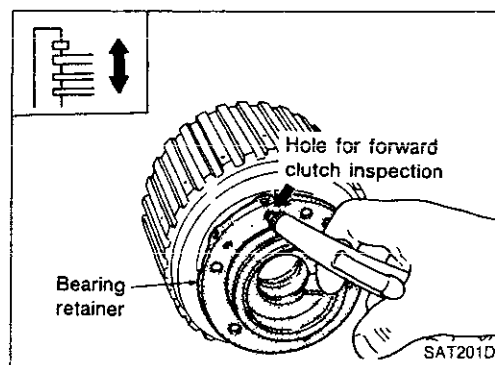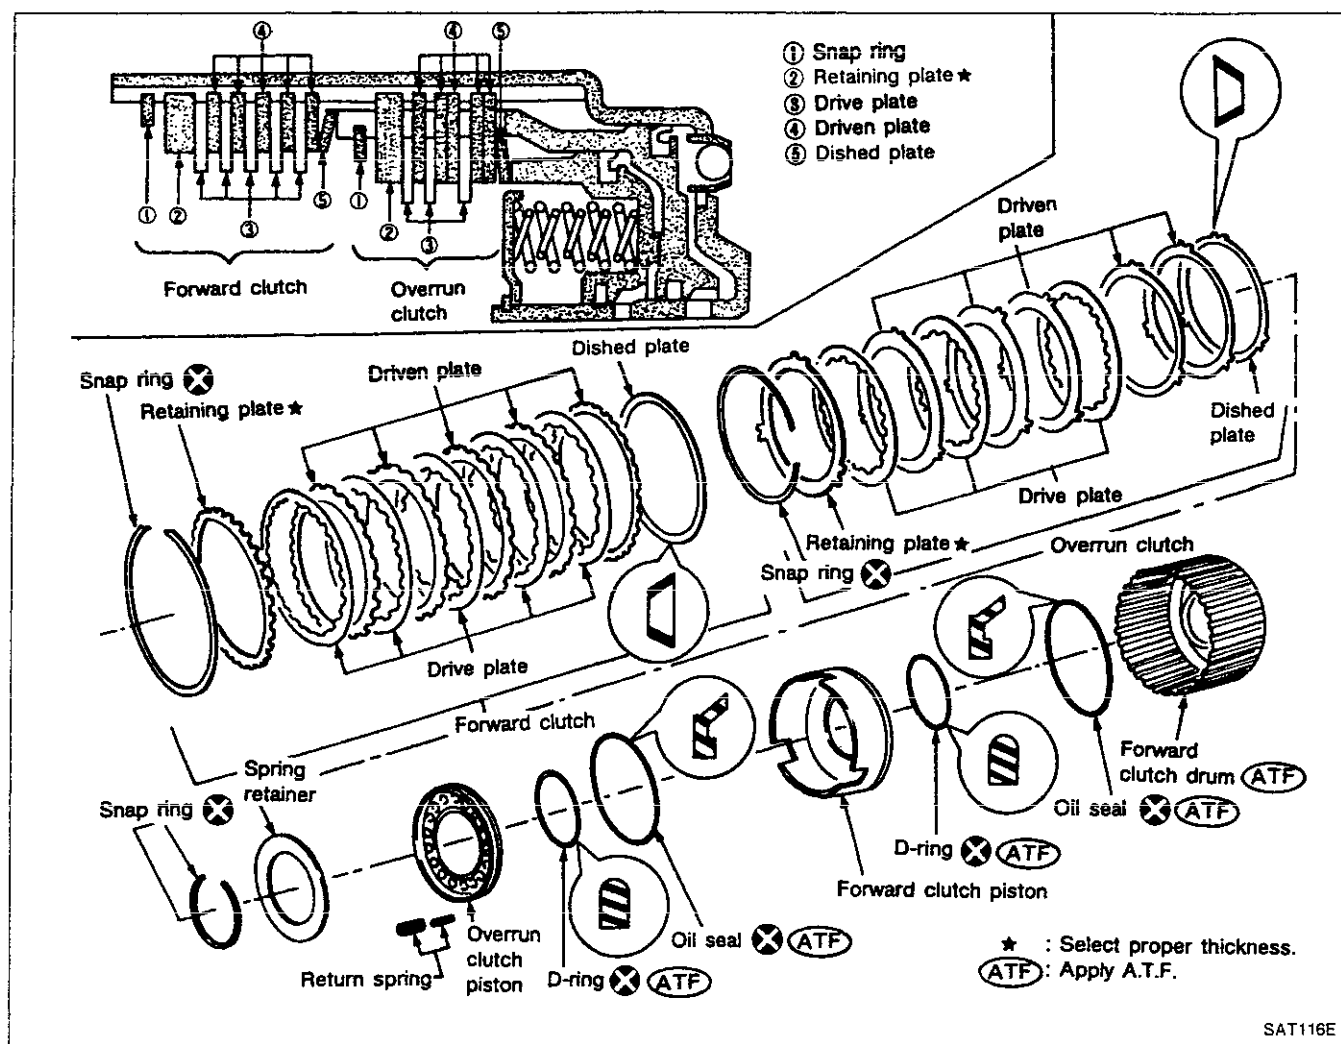

DISASSEMBLY


1. Check operation of forward clutch and overrun clutch.
 - a. Install bearing retainer on forward clutch drum.
 - b. Apply compressed air to oil hole of forward clutch drum.
 - c. Check to see that retaining plate moves to snap ring.

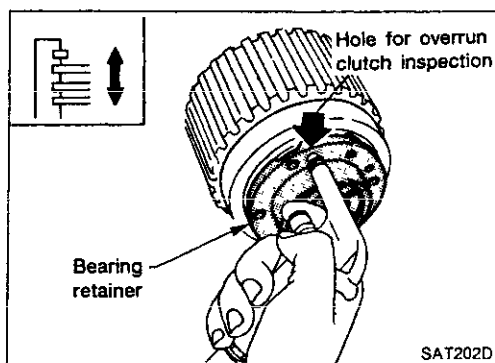


- d. If retaining plate does not move to snap ring, D-ring or oil seal may be damaged or fluid may be leaking at piston check ball.

REPAIR FOR COMPONENT PARTS


Forward Clutch and Overrun Clutch (Cont'd)

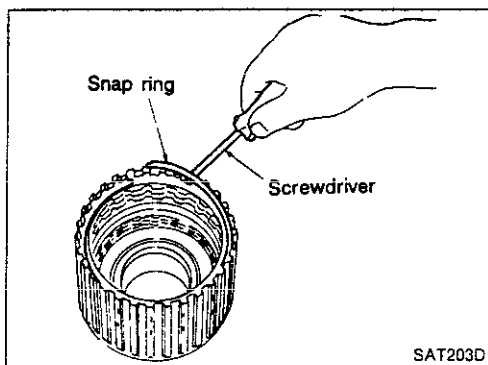

2. Remove snap ring for forward clutch.
3. Remove drive plates, driven plates, retaining plate and dished plate for forward clutch.

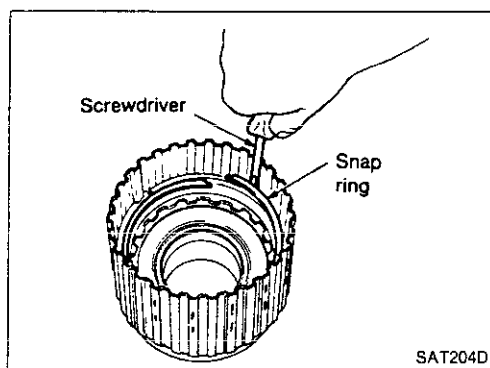


4. Remove snap ring for overrun clutch.
5. Remove drive plates, driven plates, retaining plate and dished plate for overrun clutch.

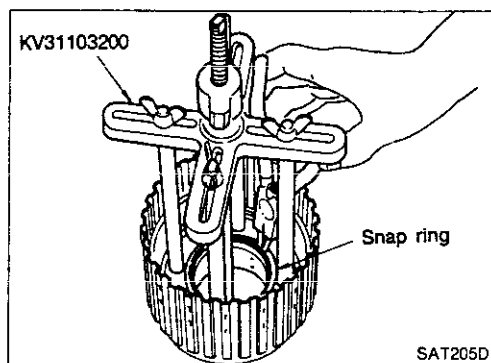


6. Set Tool on spring retainer and remove snap ring from forward clutch drum while compressing return springs.

- **Set Tool directly above return springs.**
- **Do not expand snap ring excessively.**

7. Remove spring retainer and return springs.

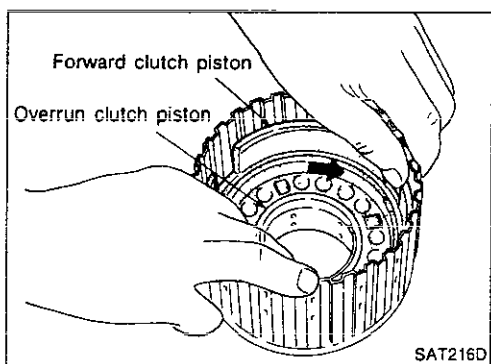


8. Remove forward clutch piston with overrun clutch piston from forward clutch drum by turning it.

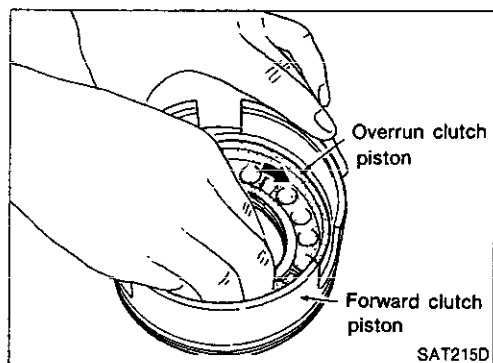

9. Remove overrun clutch piston from forward clutch piston by turning it.

Forward Clutch and Overrun Clutch (Cont'd)


10. Remove D-rings and oil seals from forward clutch piston and overrun clutch piston.

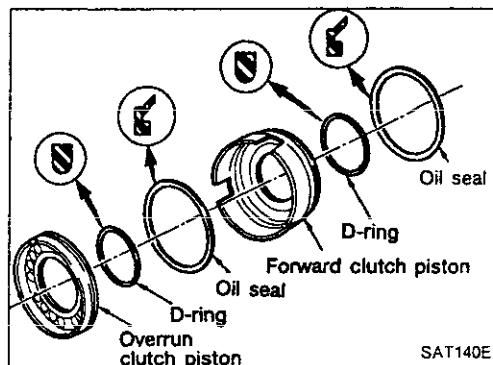

INSPECTION

Snap rings and spring retainer

- Check for deformation, fatigue or damage.

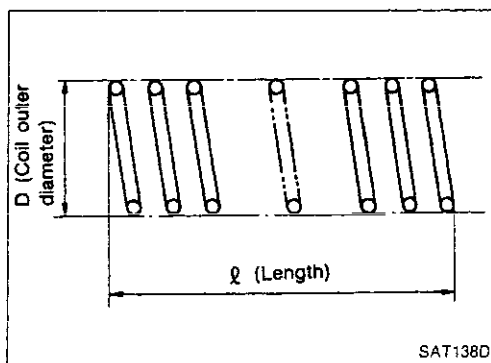


Forward clutch and overrun clutch return springs

- Check for deformation or damage.
- Measure free length and outer diameter.

Inspection standard:

Unit: mm (in)				
Parts		Part No.	l	D
Return spring	Inner	31505-31X03	26.3 (1.035)	7.7 (0.303)
	Outer	31505-31X02	26.6 (1.047)	10.6 (0.417)

- Replace if deformed or fatigued.

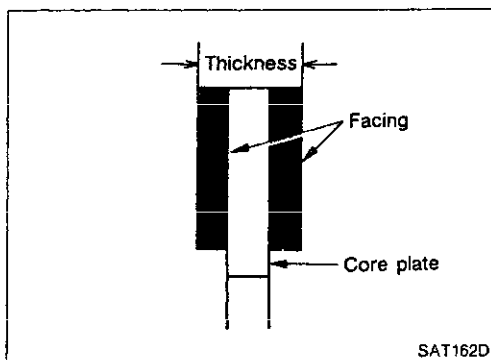

Forward clutch and overrun clutch drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate:

Forward clutch

Standard value: 1.8 mm (0.071 in)

Wear limit: 1.6 mm (0.063 in)

Overrun clutch

Standard value: 1.6 mm (0.063 in)

Wear limit: 1.4 mm (0.055 in)

- If not within wear limit, replace.

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

Forward clutch and overrun clutch dished plates


- Check for deformation or damage.
- Measure thickness of dished plate.

Thickness of dished plate:


Forward clutch: 2.35 - 2.65 mm (0.0925 - 0.1043 in)

Overrun clutch: 2.00 - 2.30 mm (0.0787 - 0.0906 in)

- If deformed or fatigued, replace.

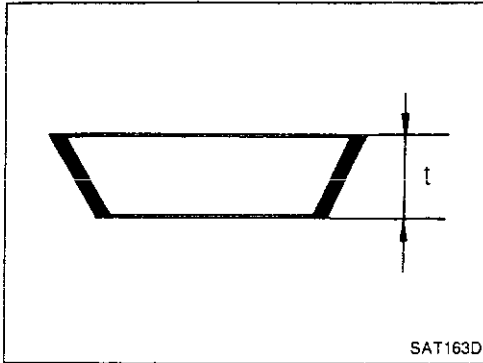


SAT163D

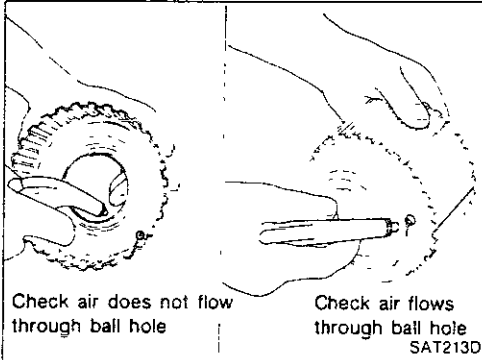

SAT213D

Forward clutch drum

- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole from outside of forward clutch drum to make sure air leaks past ball.
- Apply compressed air to oil hole from inside of forward clutch drum to make sure there is no air leakage.

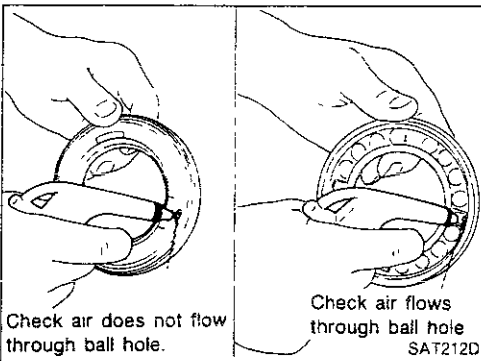

SAT212D


Overrun clutch piston

- Make sure check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring to make sure there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure air leaks past ball.

ASSEMBLY

1. Install D-rings and oil seals on forward clutch piston and overrun clutch piston.


- Take care with direction of oil seal.
- Apply A.T.F. to both parts.

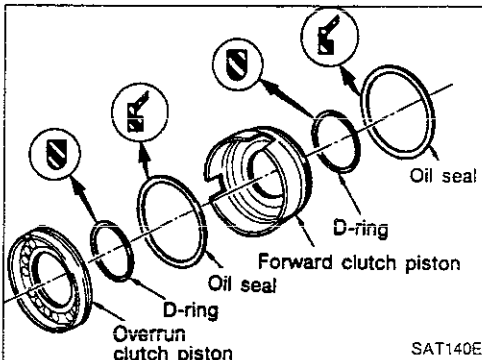

SAT140E

2. Install overrun clutch piston assembly on forward clutch piston while turning it slowly.


- Apply A.T.F. to inner surface of forward clutch piston.

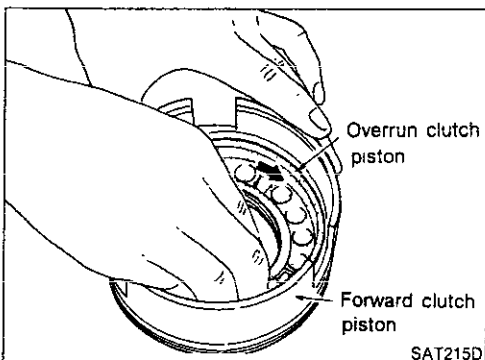


SAT215D

REPAIR FOR COMPONENT PARTS


Forward Clutch and Overrun Clutch (Cont'd)

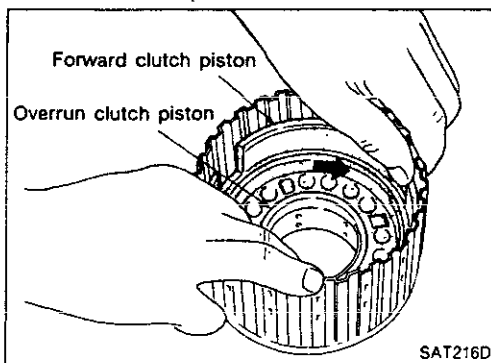


3. Install forward clutch piston assembly on forward clutch drum while turning it slowly.
- Apply A.T.F. to inner surface of drum.

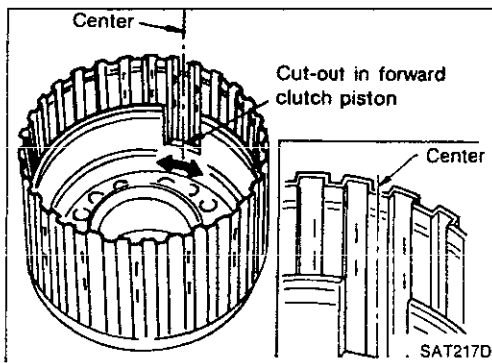


4. Align notch in forward clutch piston with groove in forward clutch drum.

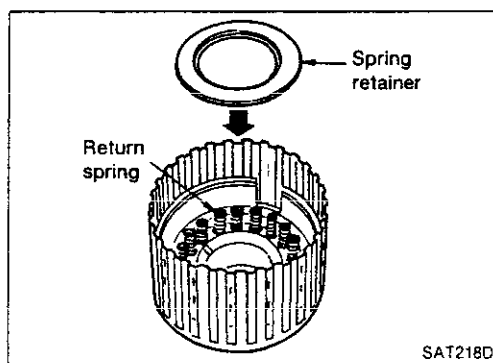

5. Install return springs on piston.
6. Install spring retainer on return springs.

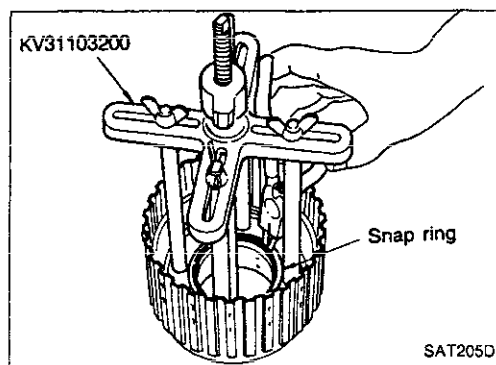


7. Set Tool on spring retainer and install snap ring while compressing return springs.
- Set Tool directly above return springs.

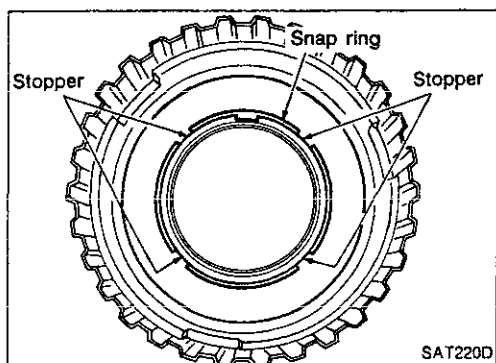


- Do not align snap ring gap with spring retainer stopper.

REPAIR FOR COMPONENT PARTS


Forward Clutch and Overrun Clutch (Cont'd)

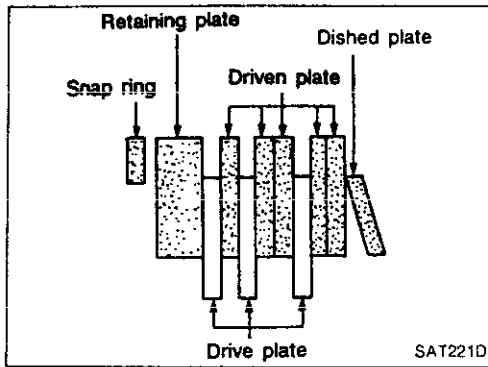

8. Install drive plates, driven plates, retaining plate and dished plate for overrun clutch.

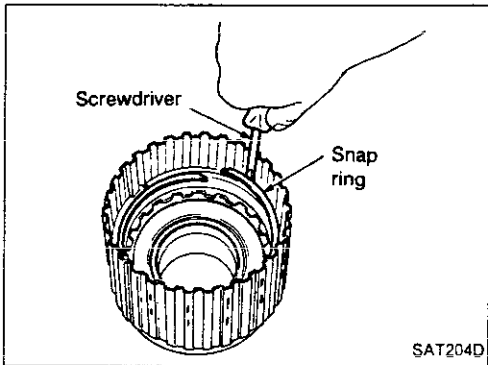

9. Install snap ring for overrun clutch.

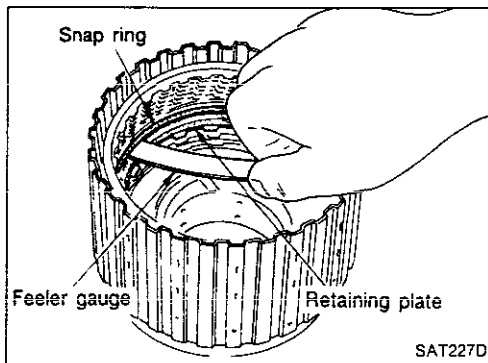

10. Measure clearance between overrun clutch retaining plate and snap ring.


If not within allowable limit, select proper retaining plate.

Specified clearance:


Standard: 1.0 - 1.4 mm (0.039 - 0.055 in)

Allowable limit: 2.0 mm (0.079 in)

Overrun clutch retaining plate: Refer to S.D.S.

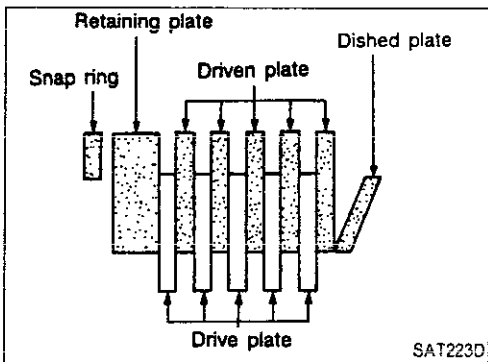


11. Install drive plates, driven plates, retaining plate and dished plate for forward clutch.

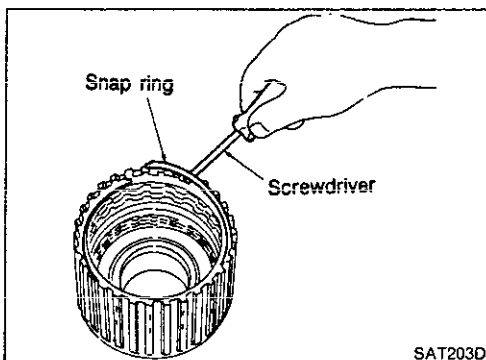

12. Install snap ring for forward clutch.

Forward Clutch and Overrun Clutch (Cont'd)

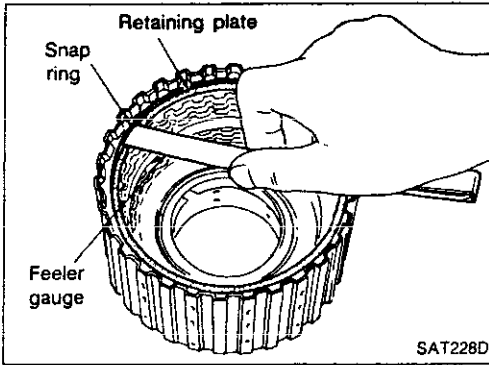

13. Measure clearance between forward clutch retaining plate and snap ring.


If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard: 0.45 - 0.85 mm (0.0177 - 0.0335 in)


Allowable limit: 1.85 mm (0.0728 in)

Forward clutch retaining plate: Refer to S.D.S.

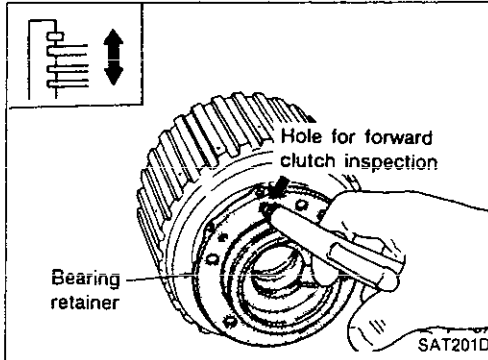

14. Check operation of forward clutch.

Refer to "DISASSEMBLY" in "Forward Clutch and Overrun Clutch."

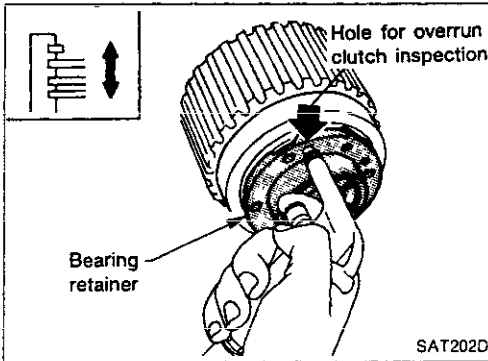


15. Check operation of overrun clutch.


Refer to "DISASSEMBLY" in "Forward Clutch and Overrun Clutch."

Low & Reverse Brake

For the number of clutch sheets (drive plates and driven plates), refer to the below cross-section.

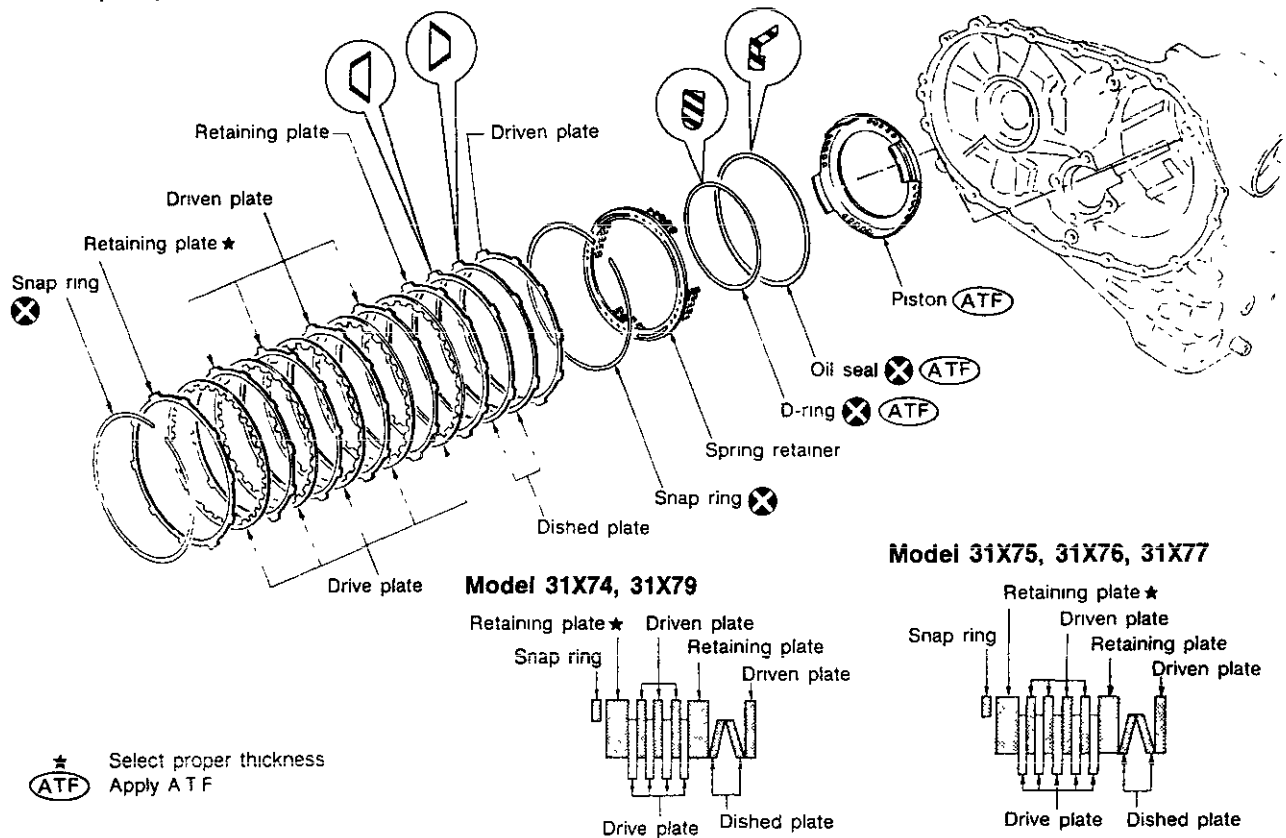


SAT252E

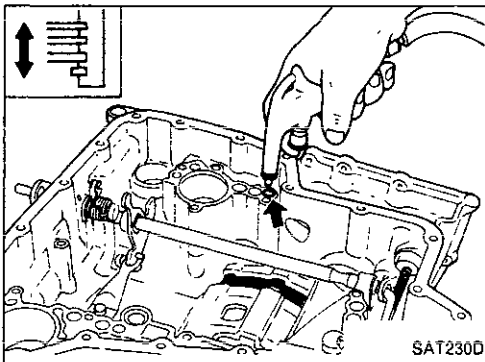


DISASSEMBLY


1. Check operation of low & reverse brake.
 - a. Apply compressed air to oil hole of transmission case.
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not move to snap ring, D-ring or oil seal may be damaged or fluid may be leaking at piston check ball.
2. Stand transmission case.
3. Remove snap ring.
4. Remove drive plates, driven plates, retaining plates and dished plates from transmission case.

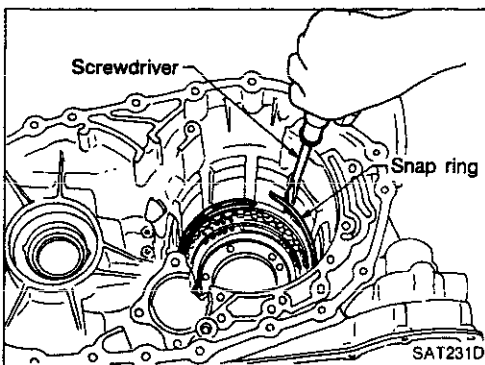


Low & Reverse Brake (Cont'd)

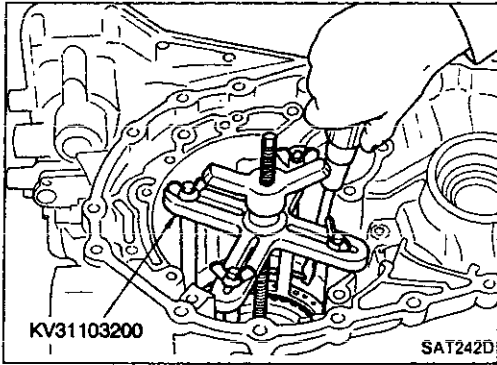


5. Set Tool on spring retainer and remove snap ring while compressing return springs.
- Set Tool directly above return springs.
- Do not expand snap ring excessively.
6. Remove spring retainer and return springs.

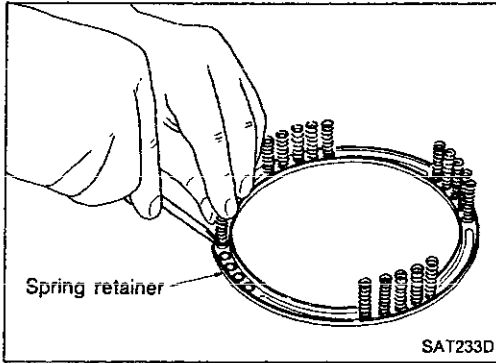

- Do not remove return springs from spring retainer.

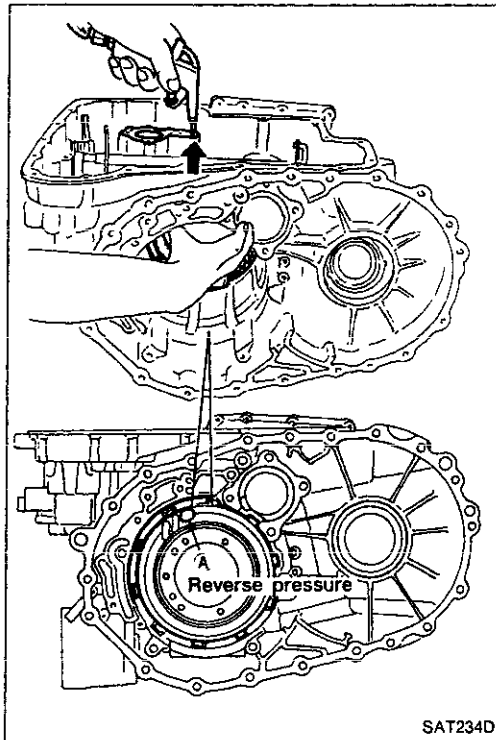

7. Apply compressed air to oil hole of transmission case while holding piston.
8. Remove piston from transmission case by turning it.

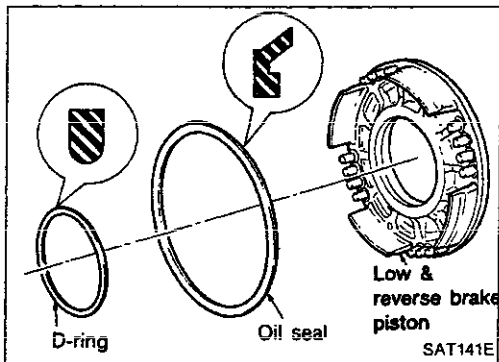

9. Remove D-ring and oil seal from piston.


REPAIR FOR COMPONENT PARTS

Low & Reverse Brake (Cont'd)

INSPECTION

Low & reverse clutch snap ring, spring retainer and return springs

- Check for deformation, fatigue or damage.
- Replace if necessary.
- When replacing spring retainer and return springs, replace them as a set.

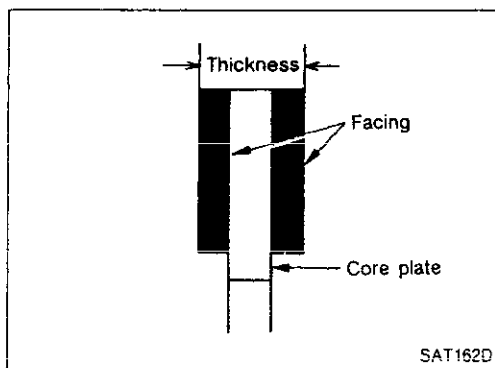

Low & reverse brake drive plate


- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate:

Standard value: 2.0 mm (0.079 in)

Wear limit: 1.8 mm (0.071 in)

- If not within wear limit, replace.

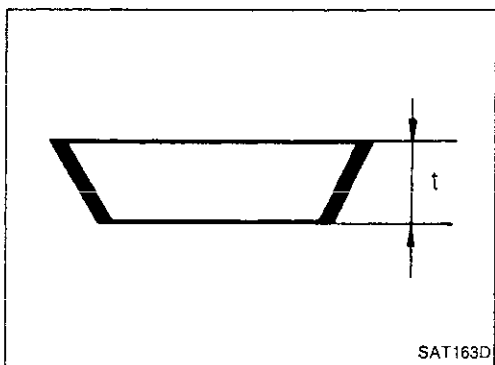


Low & reverse brake dished plates

- Check for deformation or damage.
- Measure thickness of dished plate.

Thickness of dished plate:


3.00 - 3.30 mm (0.1181 - 0.1299 in)

- If deformed or fatigued, replace.

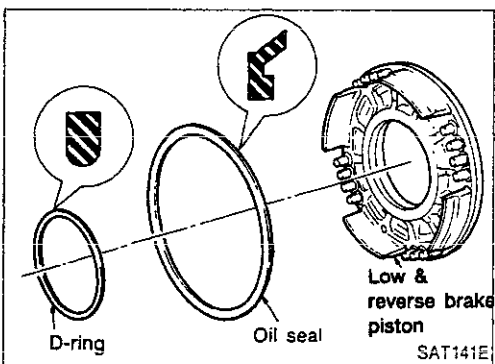


ASSEMBLY

1. Install D-ring and oil seal on piston.
 - Take care with the direction of the oil seal.
 - Apply A.T.F. to both parts.
2. Stand transmission case.
3. Install piston assembly on transmission case while turning it slowly.
 - Apply A.T.F. to inner surface of transmission case.

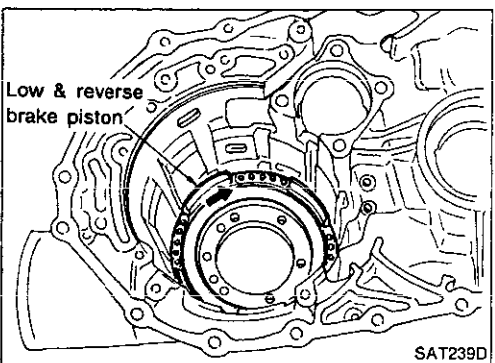


Low & Reverse Brake (Cont'd)

4. Install return springs and spring retainer on piston.

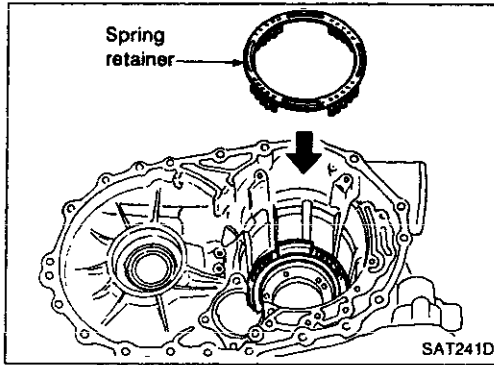


5. Install snap ring while compressing return springs.

- Set Tool directly above return springs.

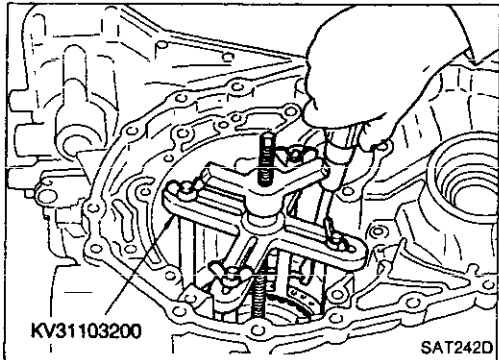


6. Install drive plates, driven plates, retaining plates and dished plates.


- Do not align the projections on the two dished plates.

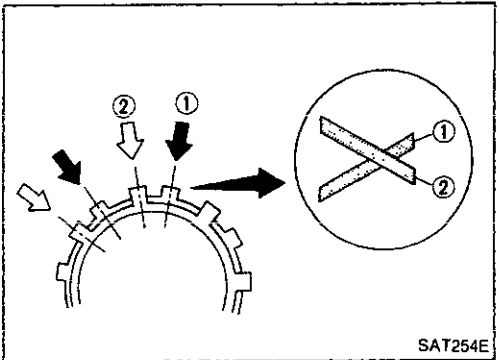

Model 31X74, 31X79

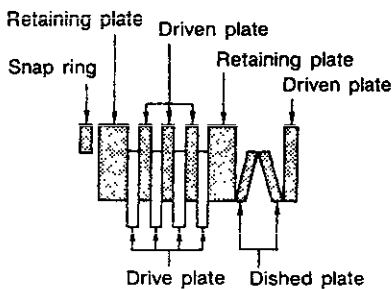


Model 31X75, 31X76, 31X77

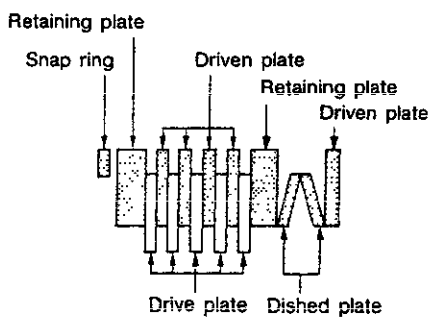

REPAIR FOR COMPONENT PARTS

Low & Reverse Brake (Cont'd)

7. Install snap ring.

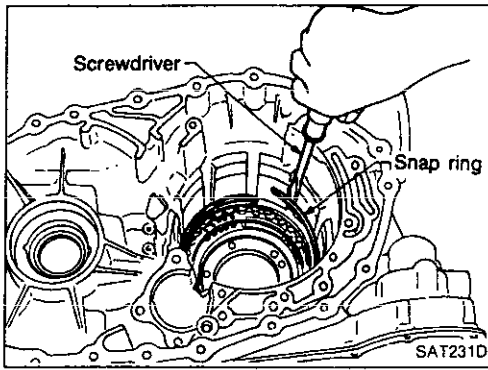

8. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate (front side).

Specified clearance:


Standard: 1.4 - 1.8 mm (0.055 - 0.071 in)

Allowable limit:


31X74, 31X79: 2.6 mm (0.102 in)

31X75, 31X76, 31X77: 2.8 mm (0.110 in)



Retaining plate: Refer to S.D.S.

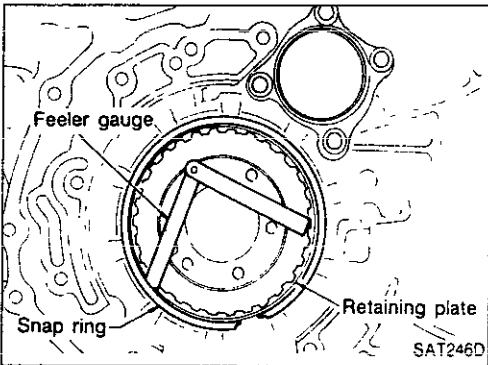

9. Check operation of low & reverse brake.
Refer to "DISASSEMBLY" in "Low & Reverse Brake."

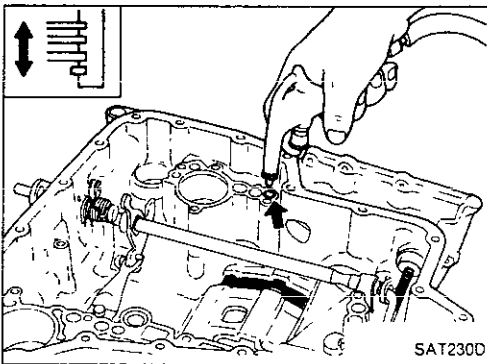


Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub

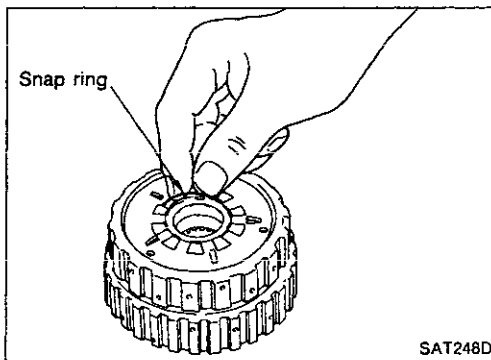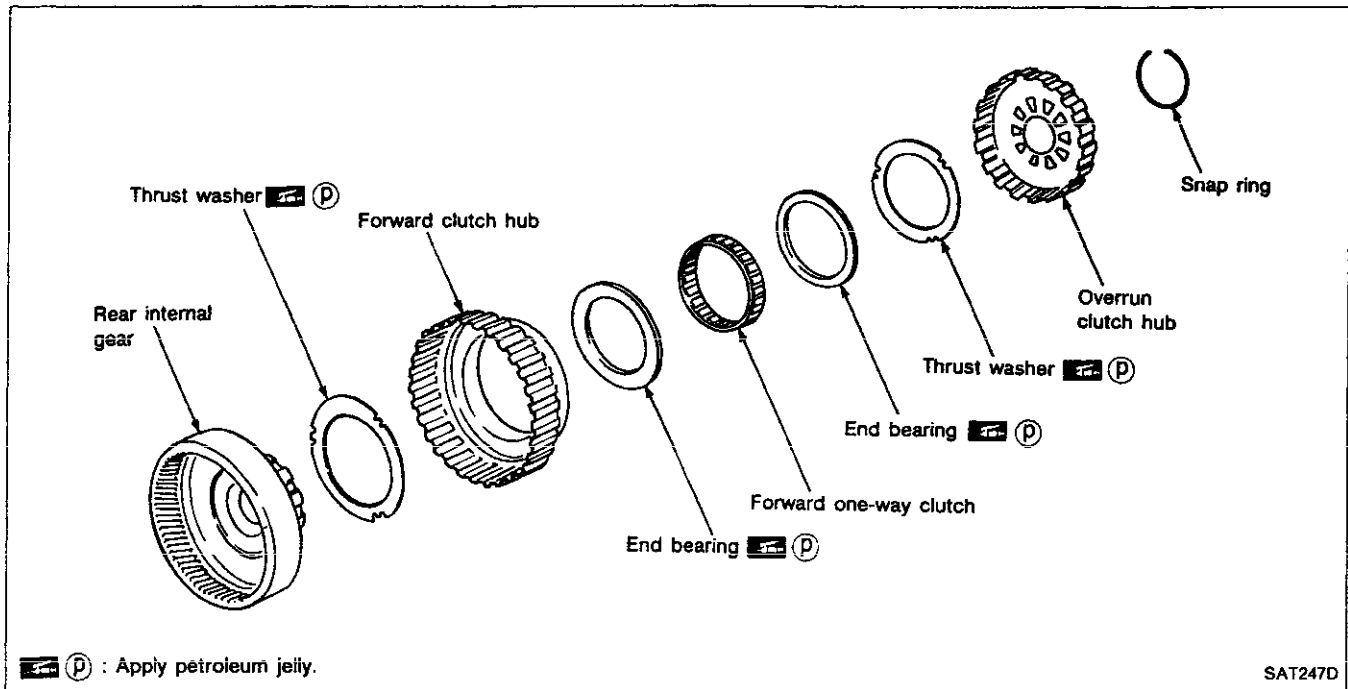

DISASSEMBLY


1. Remove snap ring from overrun clutch hub.

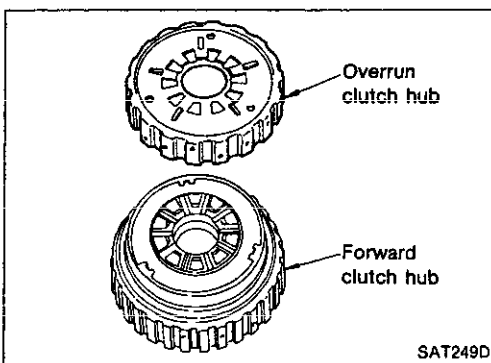


2. Remove overrun clutch hub from forward clutch hub.

REPAIR FOR COMPONENT PARTS


Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

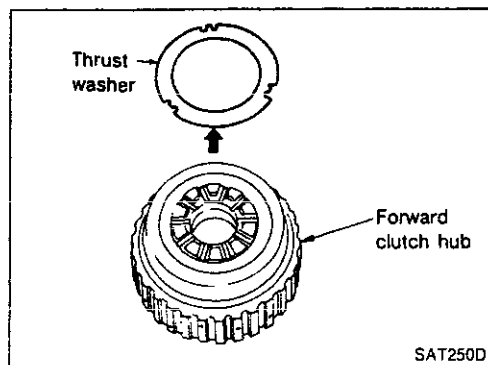


3. Remove thrust washer from forward clutch hub.

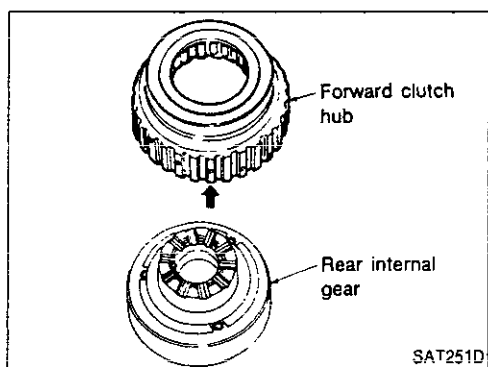


4. Remove forward clutch hub from rear internal gear.

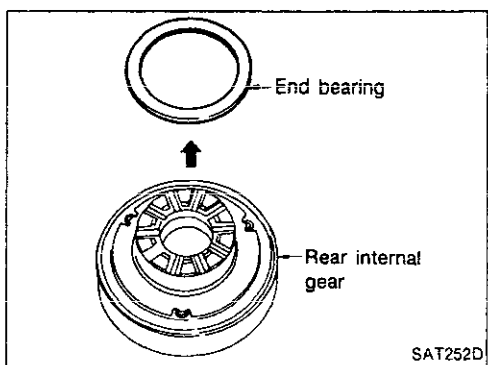

5. Remove end bearing from rear internal gear.

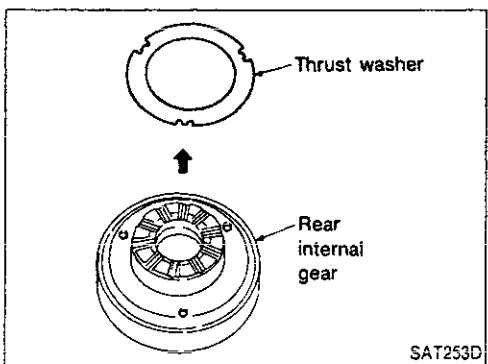


6. Remove thrust washer from rear internal gear.

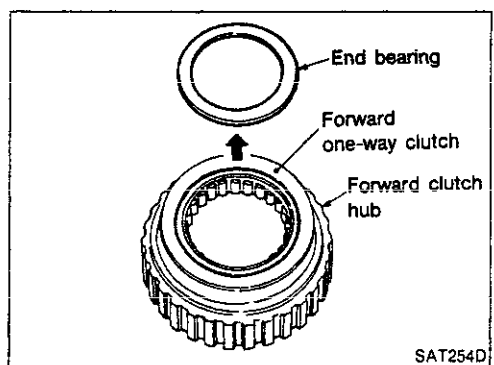


7. Remove end bearing from forward one-way clutch.

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

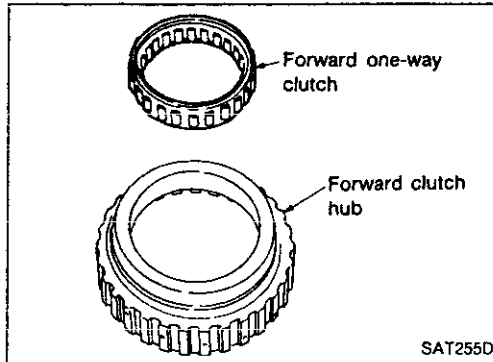


8. Remove one-way clutch from forward clutch hub.

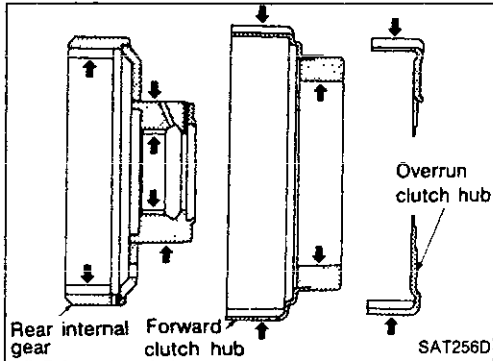

INSPECTION


Rear internal gear, forward clutch hub and overrun clutch hub

- Check rubbing surface for wear or damage.

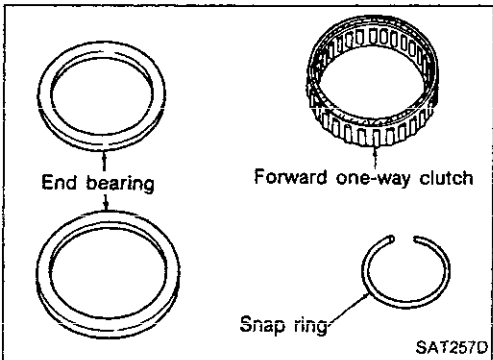


Snap ring, end bearings and forward one-way clutch

- Check snap ring and end bearings for deformation and damage.
- Check forward one-way clutch for wear and damage.

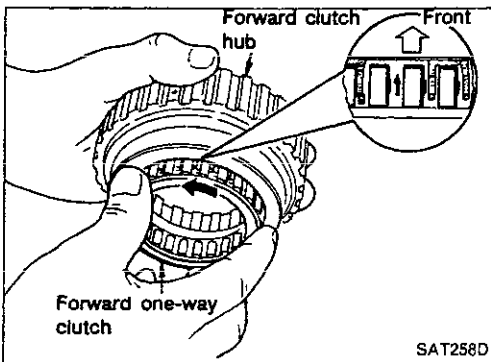

ASSEMBLY


1. Install forward one-way clutch on forward clutch.
- Take care with the direction of the forward one-way clutch.

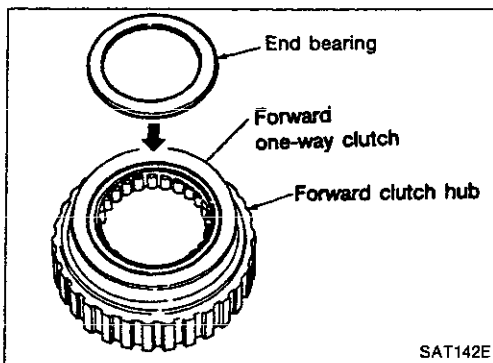


2. Install end bearing on forward one-way clutch.
- Apply petroleum jelly to end bearing.

REPAIR FOR COMPONENT PARTS


Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

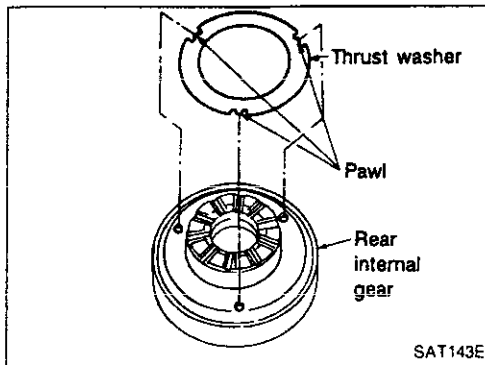


3. Install thrust washer on rear internal gear.
 - Apply petroleum jelly to thrust washer.
 - Align pawls of thrust washer with holes of rear internal gear.

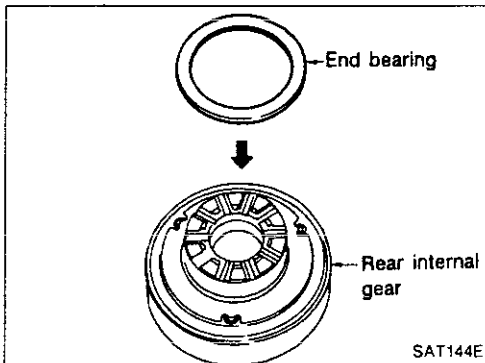


4. Install end bearing on rear internal gear.
 - Apply petroleum jelly to end bearing.

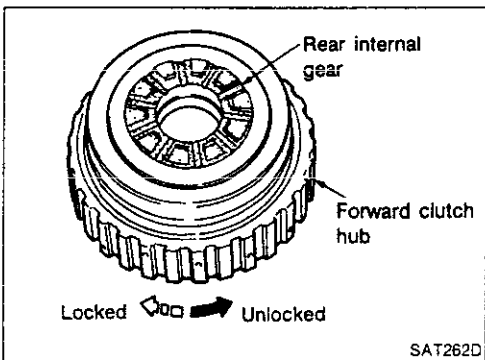

5. Install forward clutch hub on rear internal gear.
 - Check operation of forward one-way clutch.

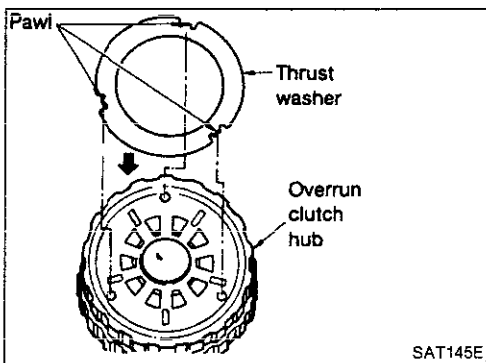


6. Install thrust washer on overrun clutch hub.
 - Apply petroleum jelly to thrust washer.
 - Align pawls of thrust washer with holes of overrun clutch hub.

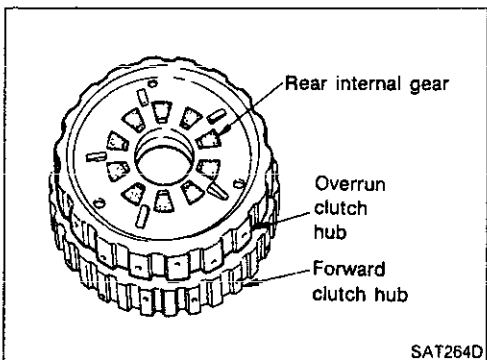



7. Install overrun clutch hub on rear internal gear.
 - Align projections of rear internal gear with holes of overrun clutch hub.

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

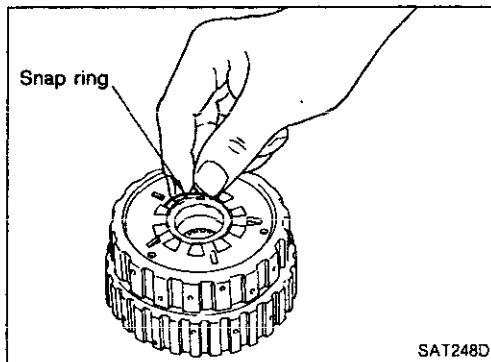


8. Install snap ring to groove of rear internal gear.

Output Shaft, Output Gear, Idler Gear, Reduction Gear and Bearing Retainer

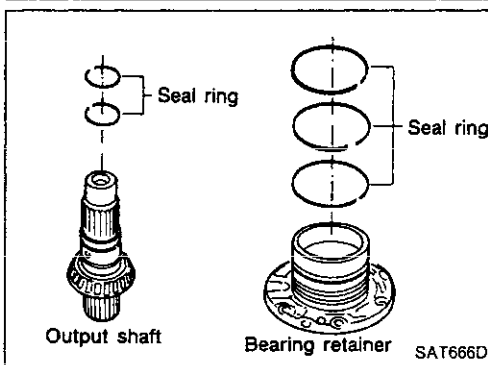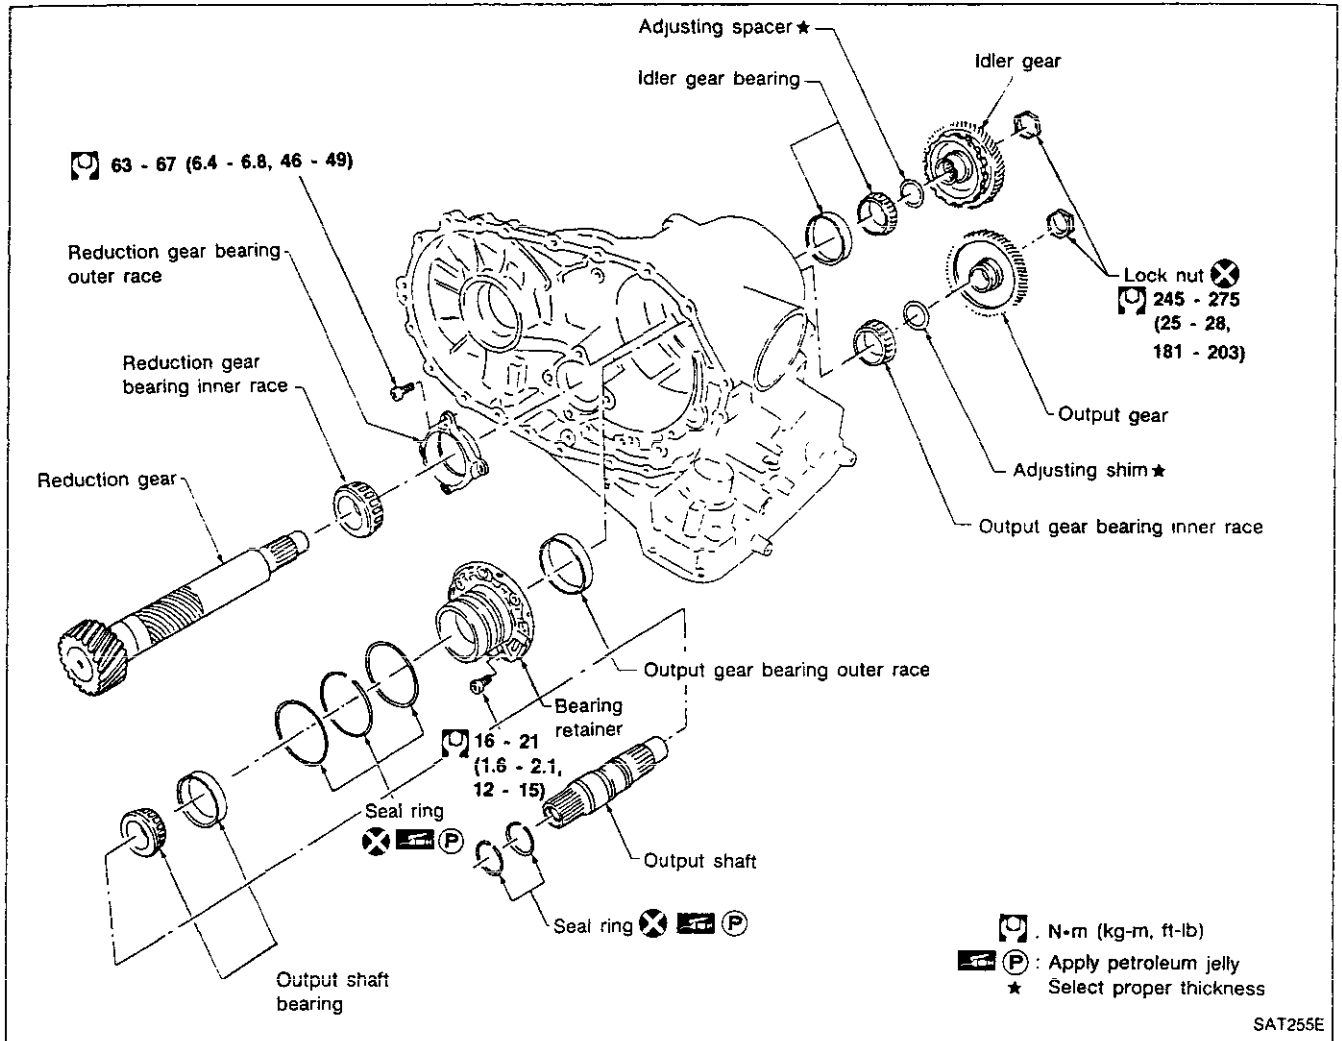


DISASSEMBLY

1. Remove seal rings from output shaft and bearing retainer.

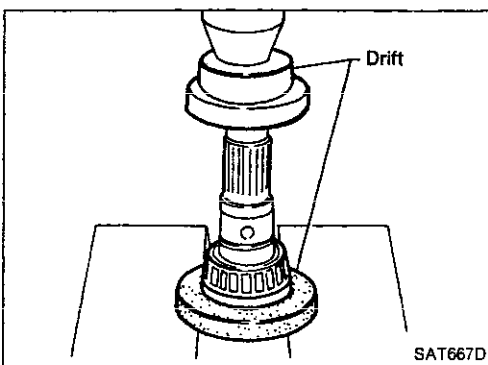


2. Press out output shaft bearing inner race.


Output Shaft, Output Gear, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)

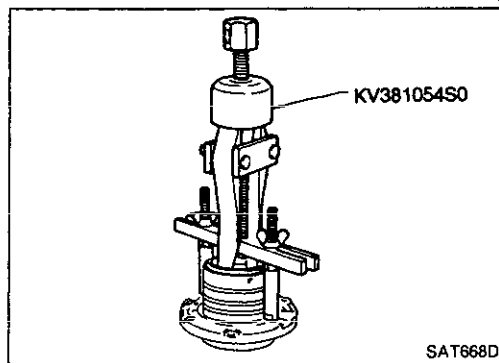


3. Remove output shaft bearing outer race from bearing retainer.

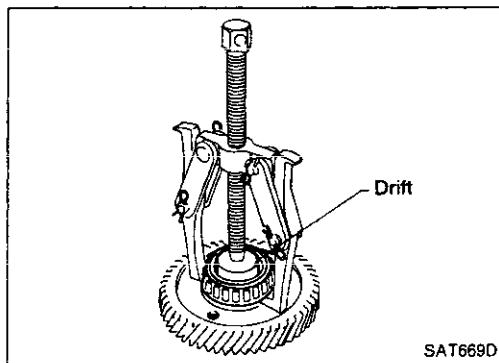


4. Remove output gear bearing inner race.

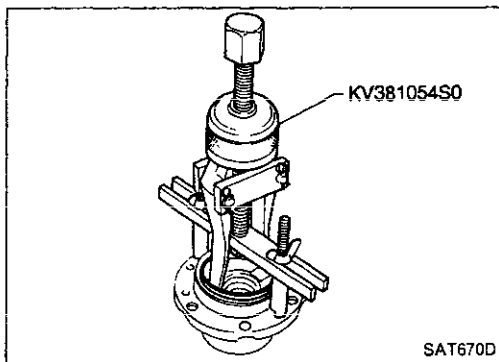

5. Remove output gear bearing outer race from bearing retainer.

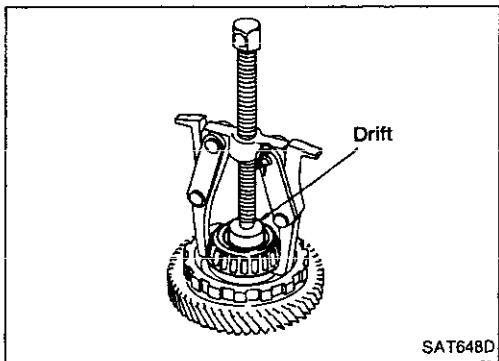


6. Remove idler gear bearing inner race.

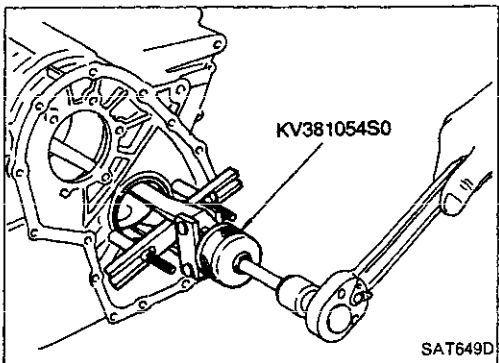


7. Remove idler gear bearing outer race from transmission case.

REPAIR FOR COMPONENT PARTS

Output Shaft, Output Gear, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)

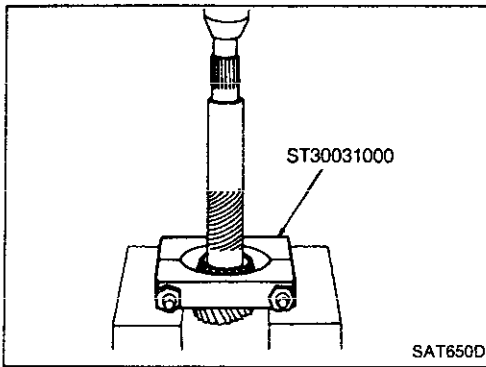

8. Press out reduction gear inner race from reduction gear.

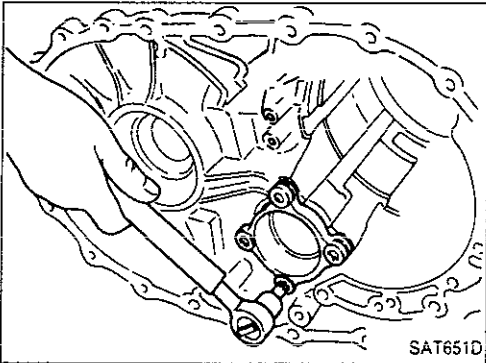


9. Remove reduction gear bearing outer race from transmission case.

INSPECTION


Output shaft, output gear, idler gear and reduction gear

- Check shafts for cracks, wear or bending.
- Check gears for wear, chips and cracks.

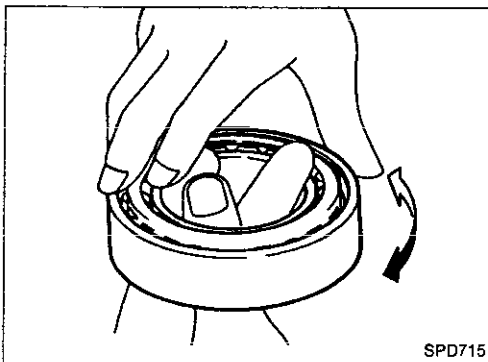

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing taper roller bearing, replace inner and outer races as a set.**

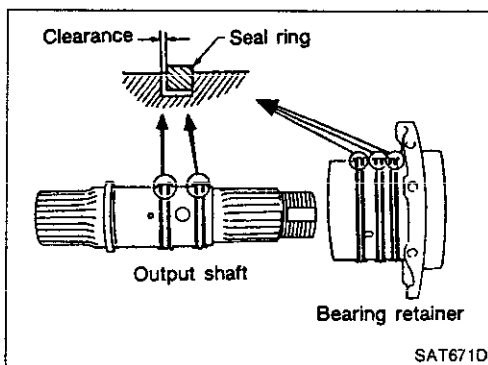

Seal ring clearance

- Install new seal rings to output shaft.
- Measure clearance between seal ring and ring groove of output shaft.

Standard clearance:

0.10 - 0.25 mm (0.0039 - 0.0098 in)

Wear limit:


0.25 mm (0.0098 in)

- If not within wear limit, replace output shaft.

REPAIR FOR COMPONENT PARTS


Output Shaft, Output Gear, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)

- Install new seal rings to bearing retainer.
- Measure clearance between seal ring and ring groove of bearing retainer.
Standard clearance:
0.10 - 0.25 mm (0.0039 - 0.0098 in)
Wear limit:
0.25 mm (0.0098 in)
- If not within wear limit, replace bearing retainer.

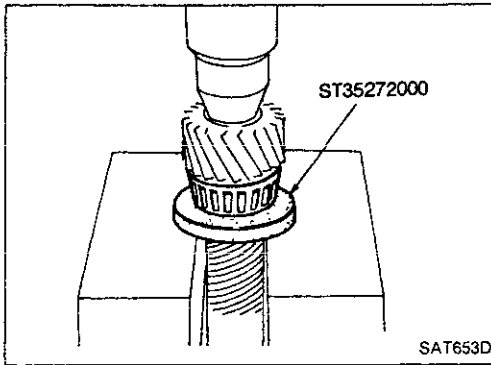


ASSEMBLY


1. Press reduction gear bearing inner race on reduction gear.

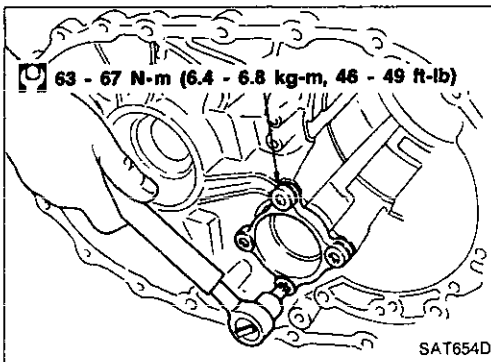

2. Install reduction gear bearing outer race on transmission case.

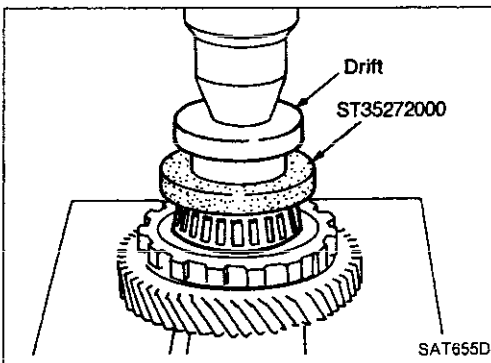


3. Press idler gear bearing inner race on idler gear.

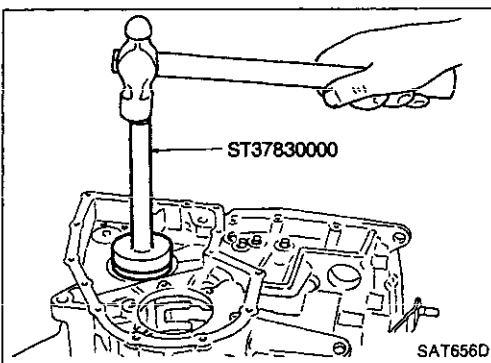


4. Install idler gear bearing outer race on transmission case.

REPAIR FOR COMPONENT PARTS


Output Shaft, Output Gear, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)

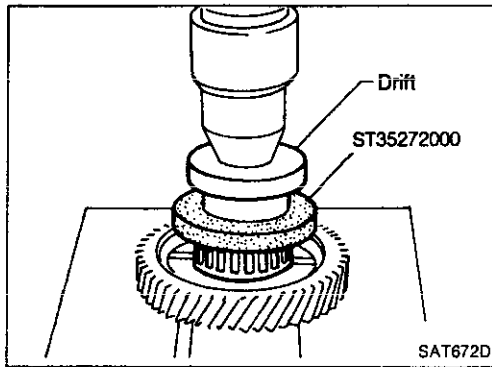


5. Press output gear bearing inner race on output gear.

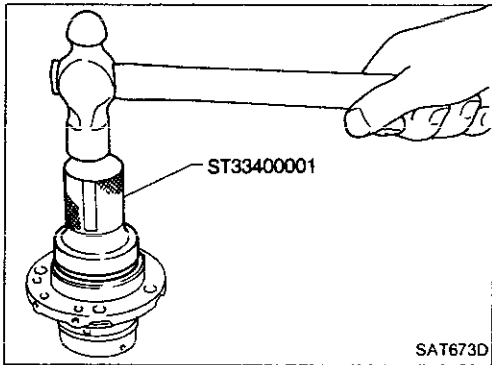


6. Install output gear bearing outer race on bearing retainer.

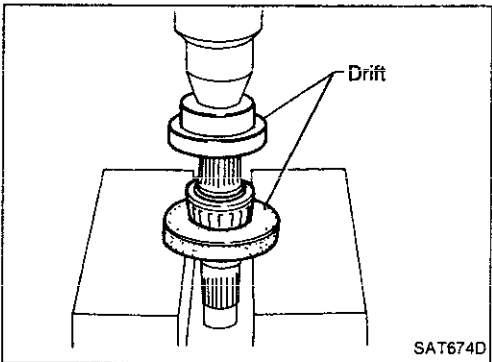

7. Press output shaft bearing inner race on output shaft.

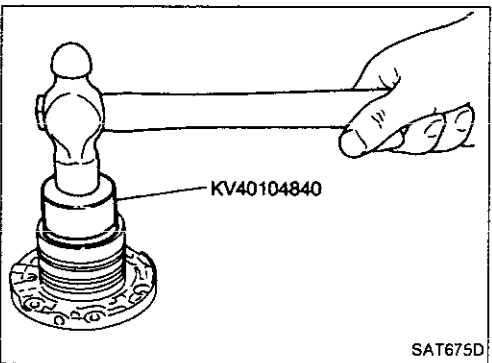


8. Install output shaft bearing outer race on bearing retainer.

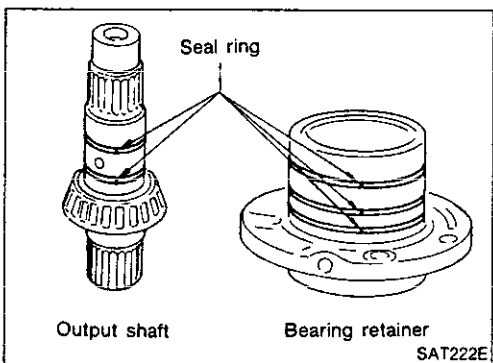

9. Install new seal rings onto output shaft and bearing retainer.



- Apply petroleum jelly to seal rings.

Output Shaft, Output Gear, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)

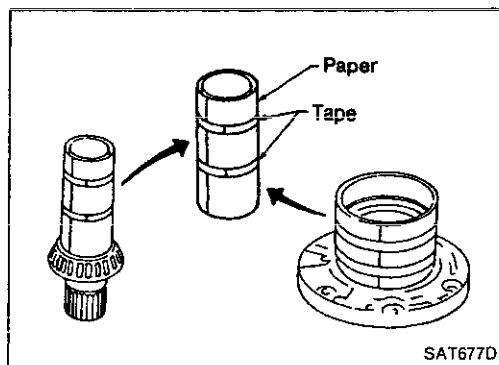


10. Roll paper around seal rings to prevent seal rings from spreading.

Band Servo Piston Assembly

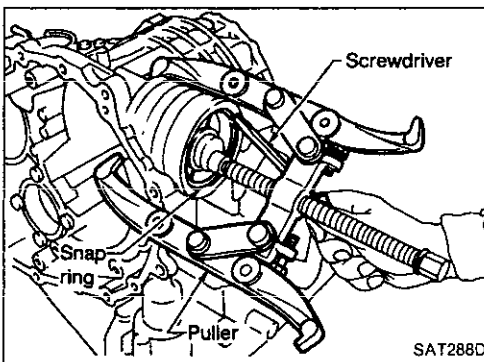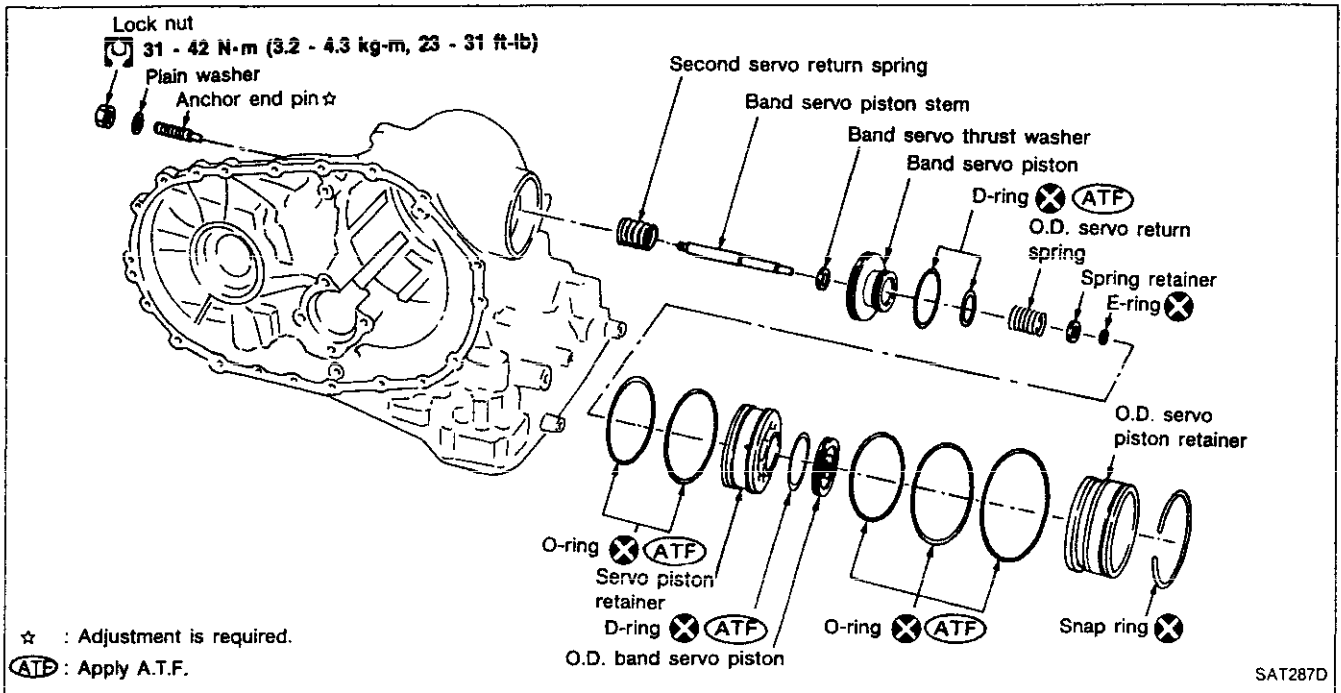


DISASSEMBLY

1. Remove band servo piston snap ring.

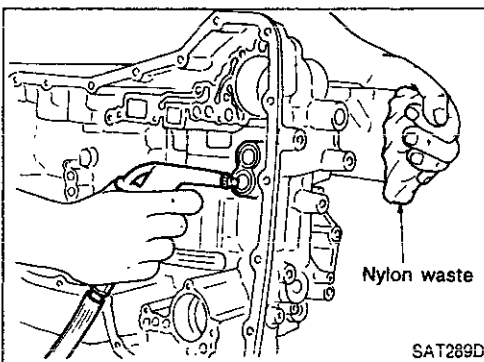

2. Apply compressed air to oil hole in transmission case to remove O.D. servo piston retainer and band servo piston assembly.

- Hold band servo piston assembly with a rag.

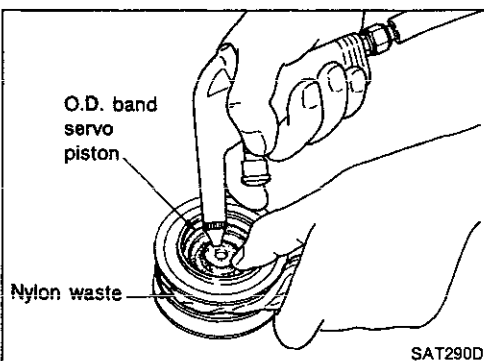


3. Apply compressed air to oil hole in O.D. servo piston retainer to remove O.D. band servo piston from retainer.

- Hold O.D. band servo piston while applying compressed air.


REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly (Cont'd)


4. Remove D-ring from O.D. band servo piston.

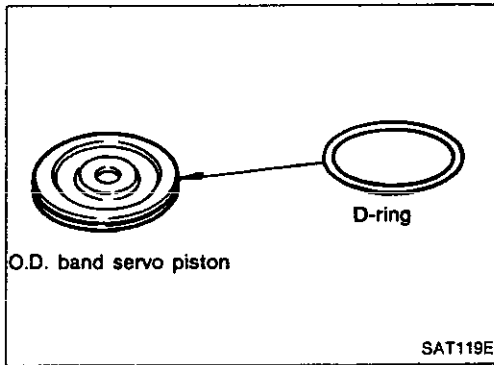


5. Remove O-rings from O.D. servo piston retainer.

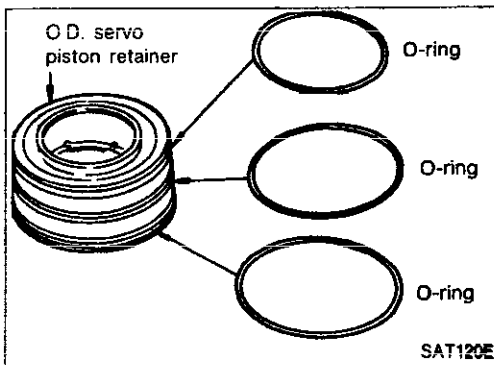


6. Remove band servo piston assembly from servo piston retainer by pushing it forward.

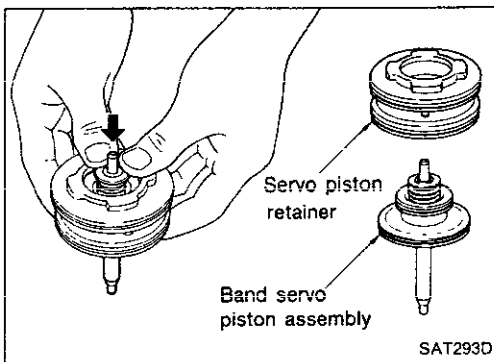

7. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, remove E-ring.

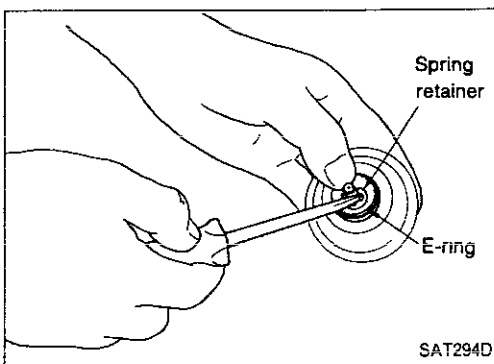


8. Remove O.D. servo return spring, band servo thrust washer and band servo piston stem from band servo piston.

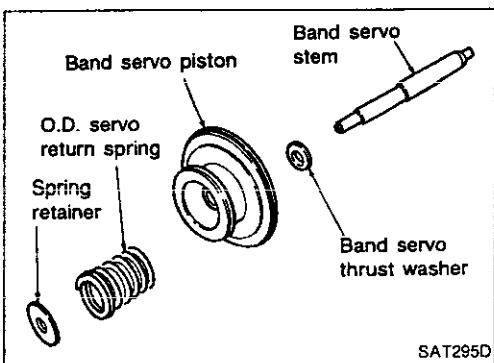


Band Servo Piston Assembly (Cont'd)

9. Remove O-rings from servo piston retainer.

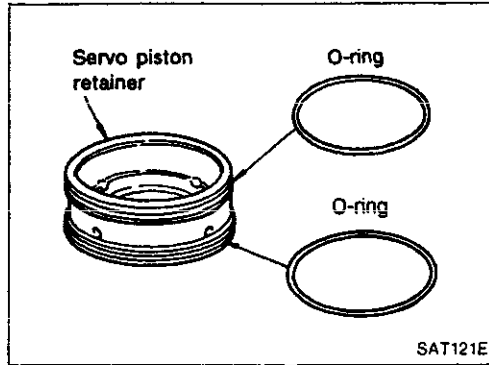


10. Remove D-rings from band servo piston.

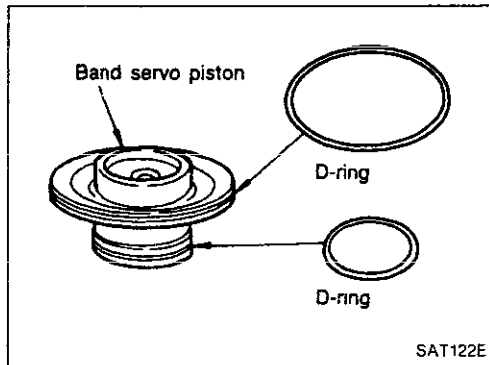

INSPECTION

Pistons, retainers and piston stem

- Check frictional surfaces for abnormal wear or damage.

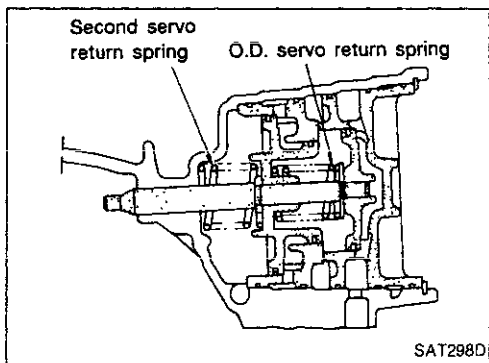


Return springs

- Check for deformation or damage.
- Measure free length and outer diameter.

Inspection standard

Unit: mm (in)		
Parts	Free length	Outer diameter
2nd servo return spring	32.5 (1.280)	25.9 (1.020)
O.D. servo return spring	31.0 (1.220)	21.7 (0.854)

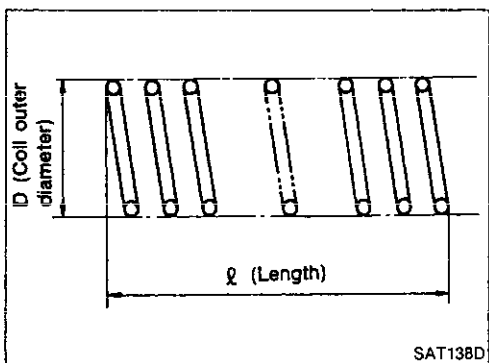

Band Servo Piston Assembly (Cont'd)

ASSEMBLY



1. Install D-rings to band servo piston.

- Apply A.T.F. to D-rings.
- Pay attention to the position of each D-ring.


D-rings:

Unit: mm (in)


D-ring	Inner diameter	
	Model 31X74, 31X79	Model 31X75, 31X76, 31X77
①	51.9 (2.043)	53.8 (2.118)
②	29.8 (1.173)	31.7 (1.248)

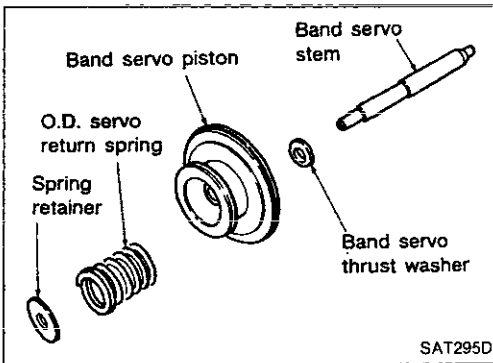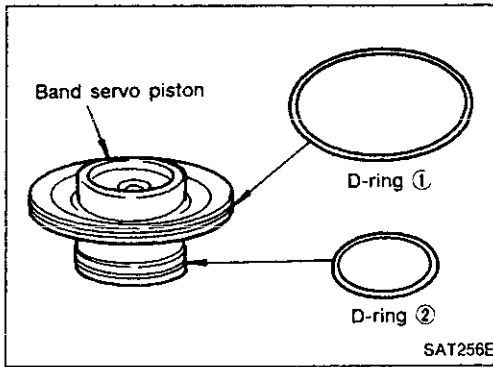

2. Install band servo piston stem, band servo thrust washer, O.D. servo return spring and spring retainer to band servo piston.

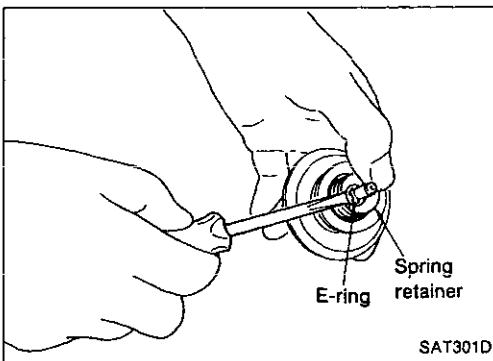

3. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, install E-ring.

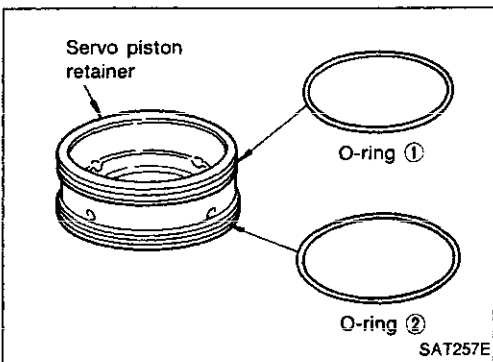

4. Install O-rings to servo piston retainer.


- Apply A.T.F. to O-rings.
- Pay attention to the position of each O-ring.

O-rings:


Unit: mm (in)

O-ring	Inner diameter
①	65.4 (2.575)
②	67.3 (2.650)


Band Servo Piston Assembly (Cont'd)

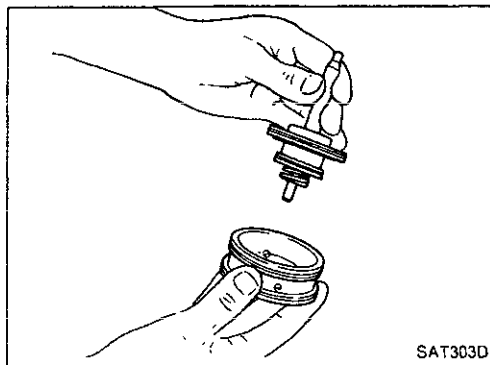

5. Install band servo piston assembly to servo piston retainer by pushing it inward.

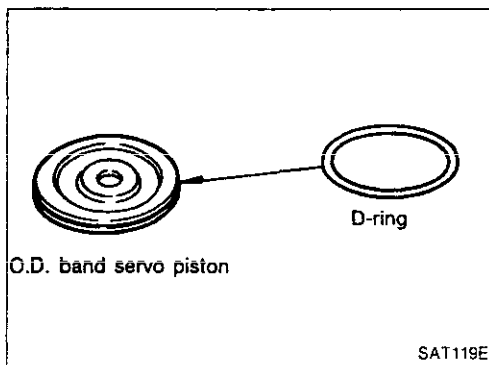

6. Install D-ring to O.D. band servo piston.
 - Apply A.T.F. to D-ring.

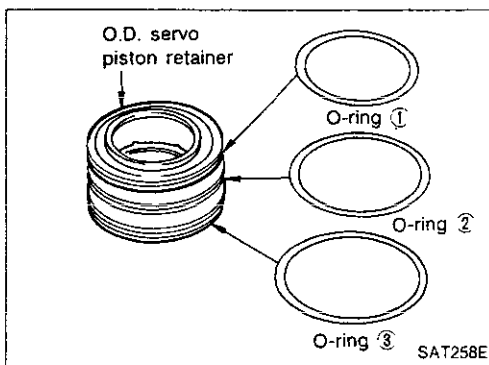


7. Install O-rings to O.D. servo piston retainer.
 - Apply A.T.F. to O-rings.
 - Pay attention to the position of each O-ring.


O-rings:

Unit: mm (in)

O-ring	Inner diameter
①	69.2 (2.724)
②	71.2 (2.803)
③	73.1 (2.878)

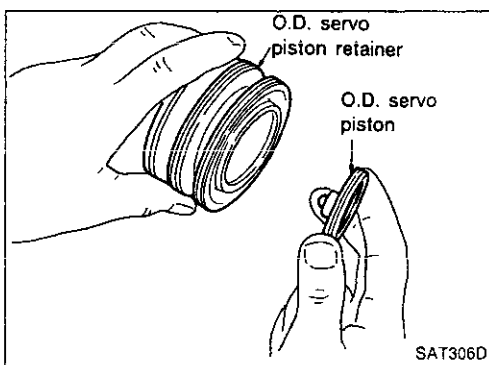


8. Install O.D. band servo piston to O.D. servo piston retainer.

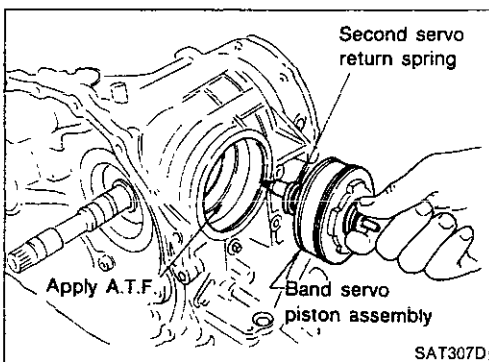


9. Install band servo piston assembly and 2nd servo return spring to transmission case.
 - Apply A.T.F. to O-ring of band servo piston and transmission case.

Band Servo Piston Assembly (Cont'd)

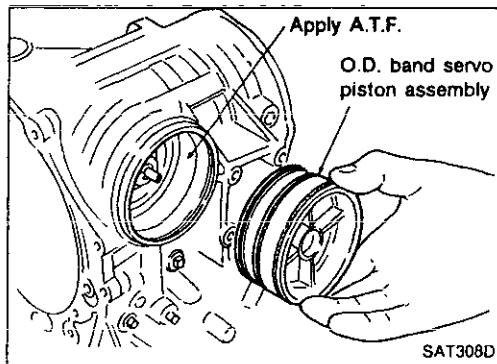



10. Install O.D. band servo piston assembly to transmission case.

- Apply A.T.F. to O-ring of band servo piston and transmission case.

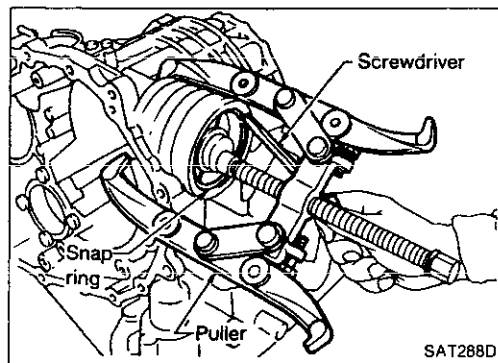


11. Install band servo piston snap ring to transmission case.

Final Drive

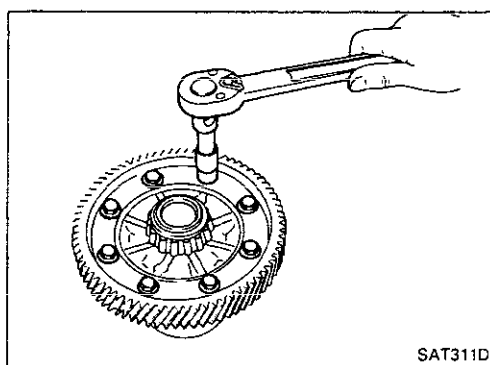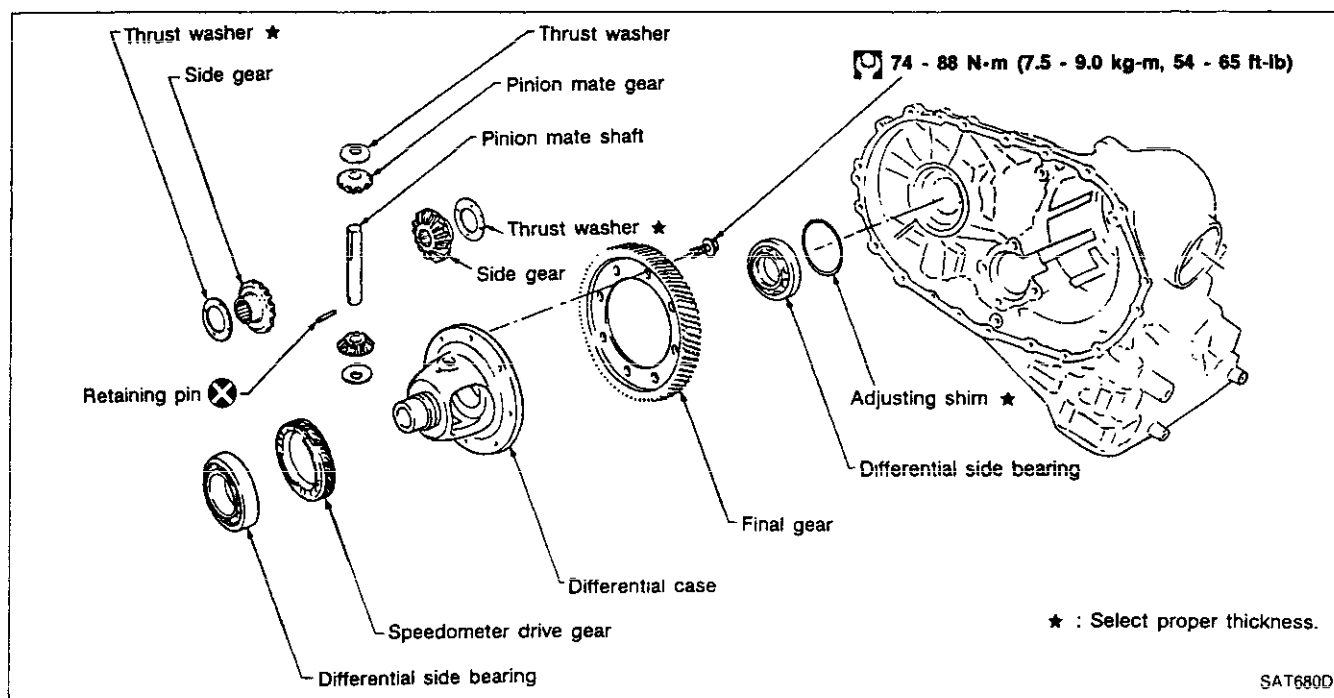


DISASSEMBLY

1. Remove final gear.

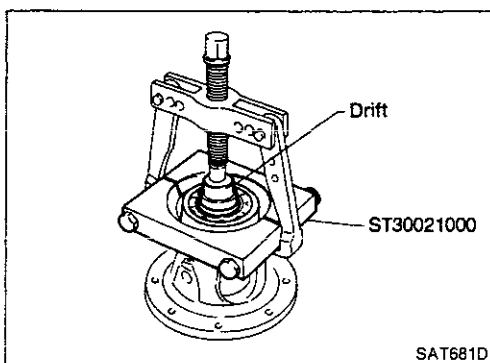


2. Press out differential side bearings.

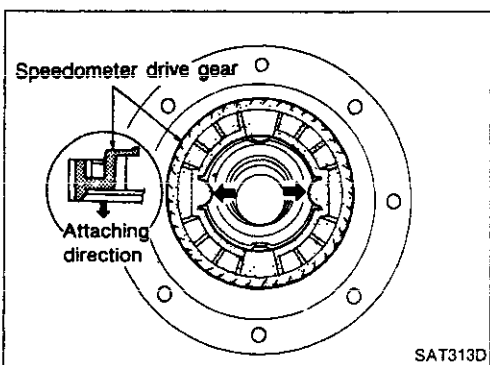


3. Remove speedometer drive gear.

Final Drive (Cont'd)

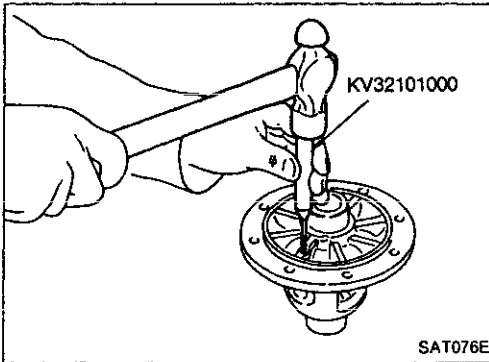


4. Drive out pinion mate shaft retaining pin.

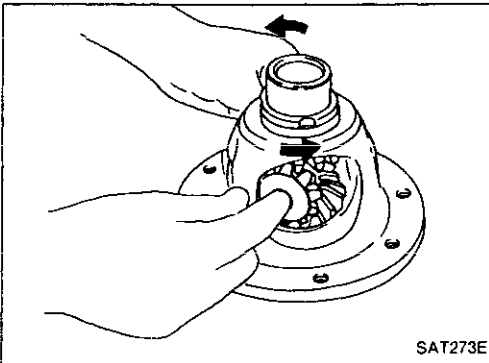

5. Draw out pinion mate shaft from differential case.


6. Remove pinion mate gears and side gears.

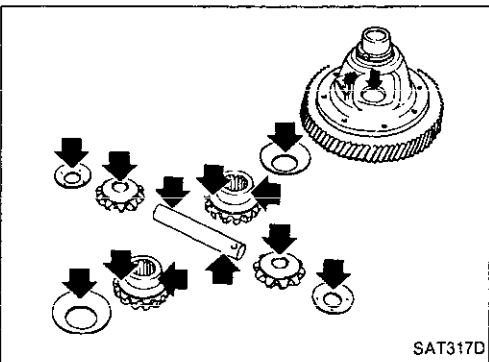

INSPECTION


Gear, washer, shaft and case

- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.

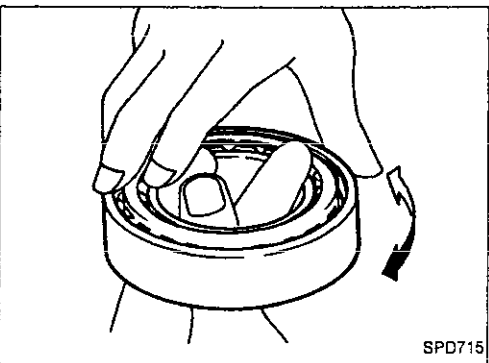

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

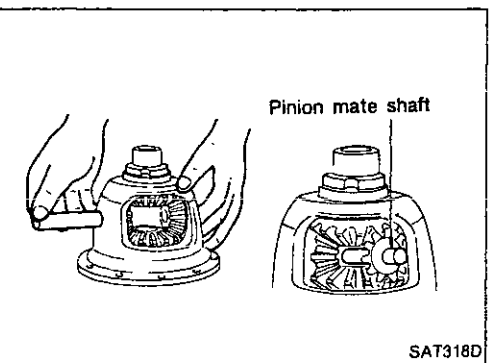


ASSEMBLY

1. Install side gears and thrust washers in differential case.
 2. Install pinion mate gears and thrust washers in the differential case while rotating them.
- Apply A.T.F. to all parts.

REPAIR FOR COMPONENT PARTS


Final Drive (Cont'd)

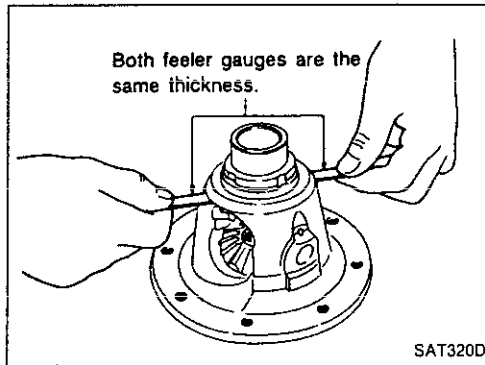

3. Measure clearance between side gear and differential case with washers.


Clearance between side gear and differential case with washers:

0.1 - 0.2 mm (0.004 - 0.008 in)

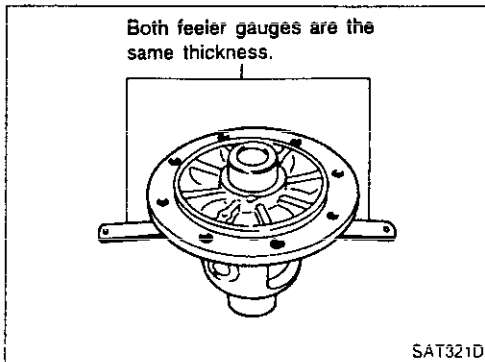


- If not within specification, adjust clearance by changing thickness of side gear thrust washers.

Side gear thrust washer: Refer to S.D.S.

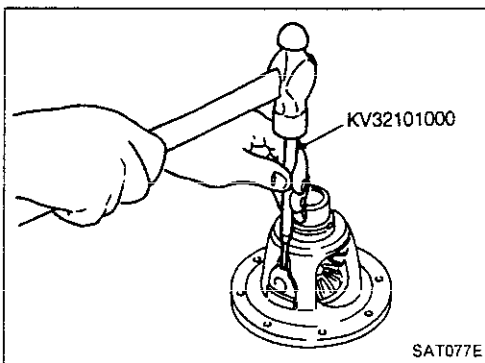


4. Install retaining pin.

- **Make sure that retaining pin is flush with case.**

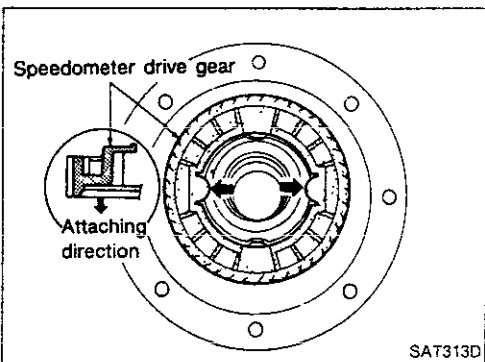



5. Install speedometer drive gear on differential case.

- **Align projection of speedometer drive gear with groove of differential case.**


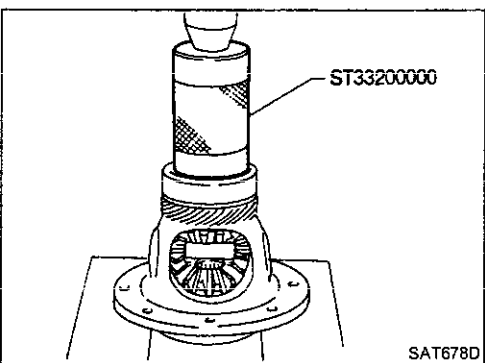


6. Press differential side bearings on differential case.

Final Drive (Cont'd)

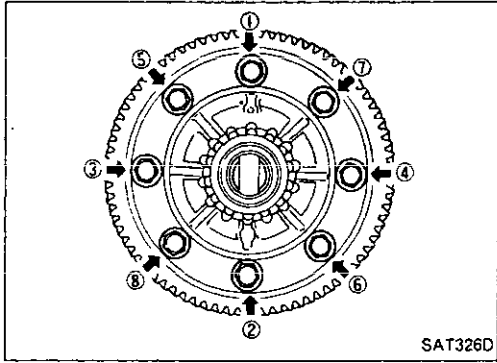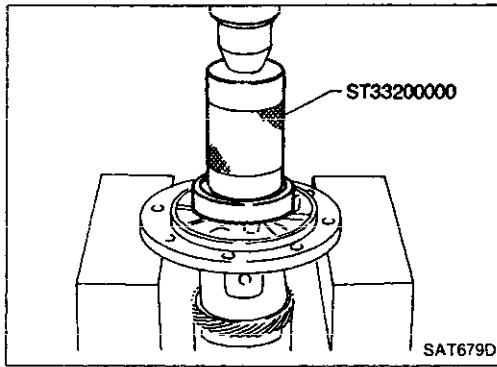

7. Install final gear and tighten fixing bolts in numerical order.

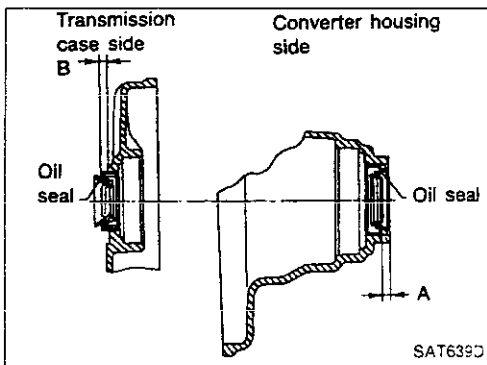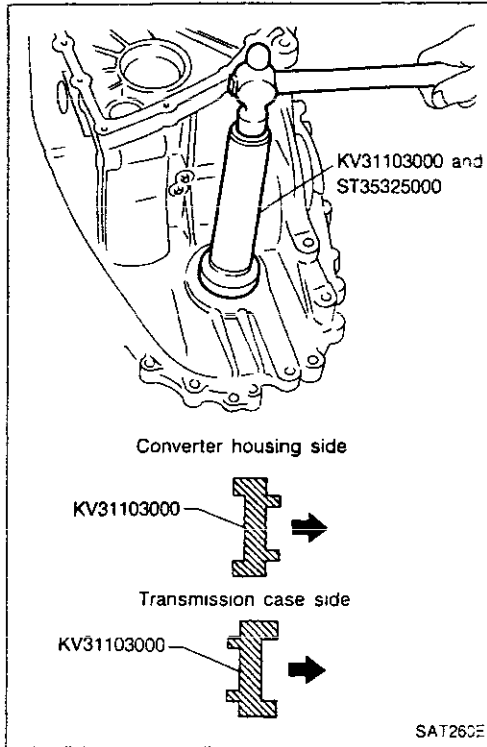


Assembly


1. Install differential side oil seals on transmission case and converter housing, so that "A" and "B" are within specifications.

Unit: mm (in)

A	B
5.5 - 6.5 (0.217 - 0.256)	0.5 (0.020) or less

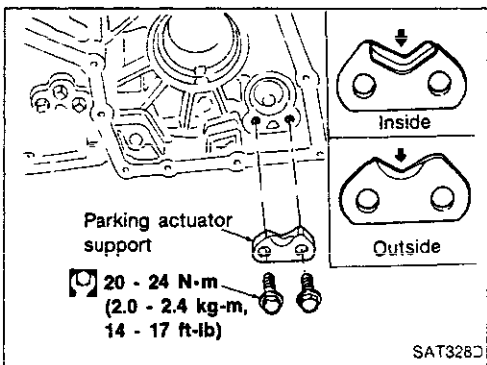


2. Install parking actuator support to transmission case.
 - Pay attention to direction of parking actuator support.

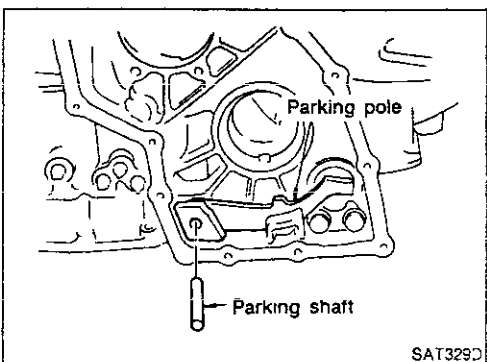

3. Install parking pawl on transmission case and fix it with parking shaft.

Assembly (Cont'd)


4. Install return spring.

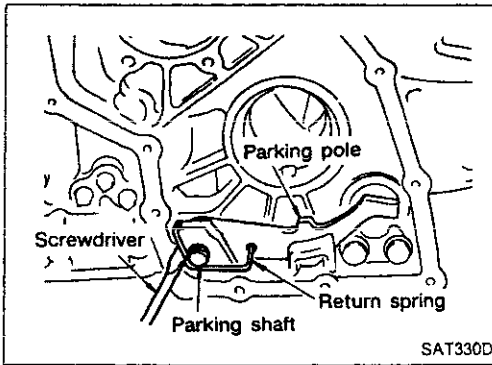

Adjustment

REDUCTION GEAR BEARING PRELOAD


1. Select proper thickness of reduction gear bearing adjusting shim using the following procedures.
 - a. Place reduction gear on transmission case as shown.

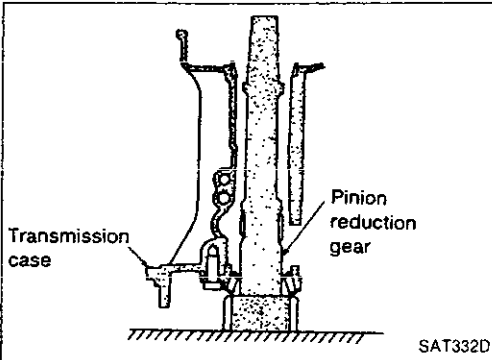


- b. Place idler gear bearing on transmission case.
- c. Measure dimensions "B", "C" and "D" and calculate dimension "A".

$$A = D - (B + C)$$


"A": Distance between surface of idler gear bearing inner race and adjusting shim mating surface of reduction gear.

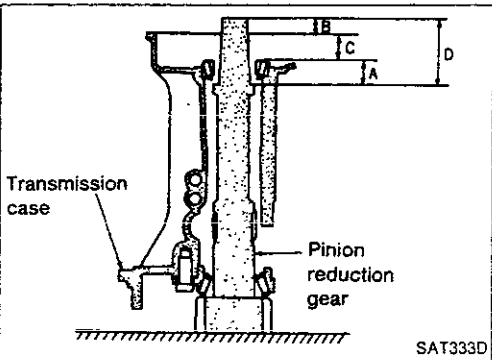

- Measure dimension "B" between end of reduction gear and surface of transmission case.
- Measure in at least two places.

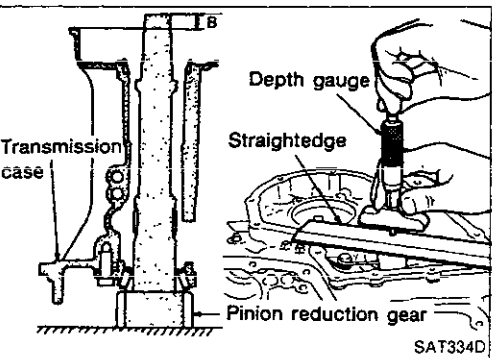


- Measure dimension "C" between surface of idler gear bearing inner race and converter housing fitting surface of transmission case.
- Measure in at least two places.

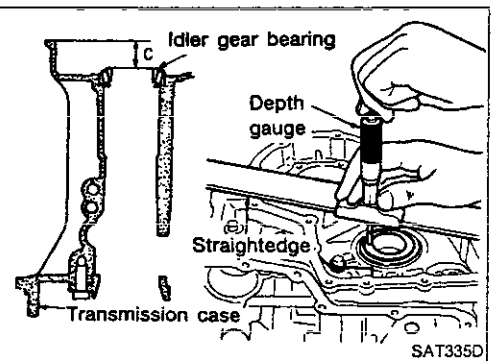


ASSEMBLY

Adjustment (Cont'd)

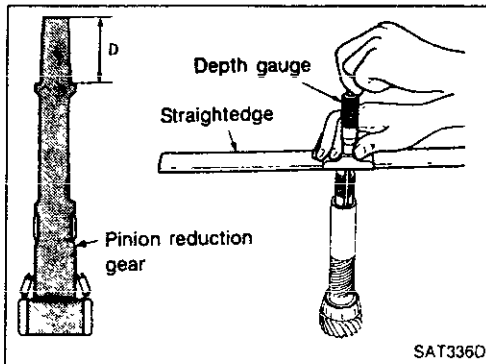

- Measure dimension "D" between end of reduction gear and adjusting shim mating surface of reduction gear.
- **Measure in at least two places.**
- Calculate dimension "A"

$$A = D - (B + C)$$

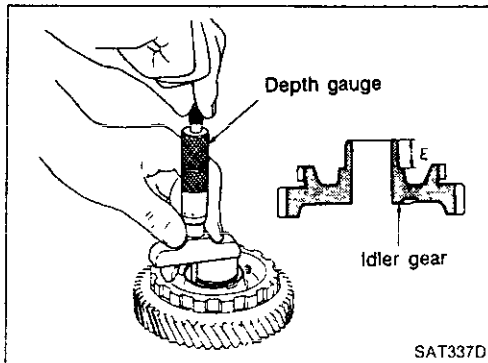


- d. Measure dimension "E" between end of idler gear and idler gear bearing of idler gear inner race mating surface.
- **Measure in at least two places.**

- e. Calculate "T" and select proper thickness of reduction gear bearing adjusting shim using S.D.S. table as a guide.


$$T = A - E$$

Reduction gear bearing adjusting shim:

Refer to S.D.S.

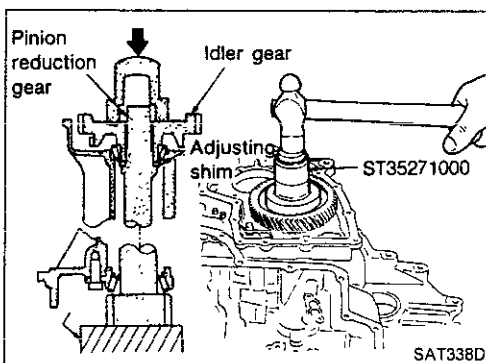


2. Install reduction gear and reduction gear bearing adjusting shim selected in step 2-e on transmission case.
 3. Press idler gear bearing inner race on idler gear.
 4. Press idler gear on reduction gear.
- **Press idler gear so that idler gear can be locked with parking pawl.**

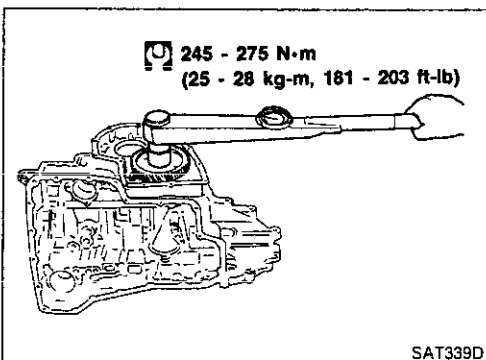

5. Tighten idler gear lock nut to specified torque.
- **Lock idler gear with parking pawl when tightening lock nut.**

ASSEMBLY

Adjustment (Cont'd)

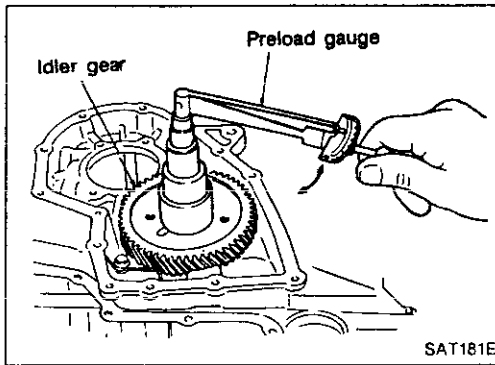


6. Measure reduction gear bearing preload.

- When measuring bearing preload, turn reduction gear in both directions several times to seat bearing rollers correctly.

Reduction gear bearing preload:


0.11 - 0.69 N·m (1.1 - 7.0 kg-cm, 0.95 - 6.08 in-lb)

- If not within specified range, readjust bearing preload.

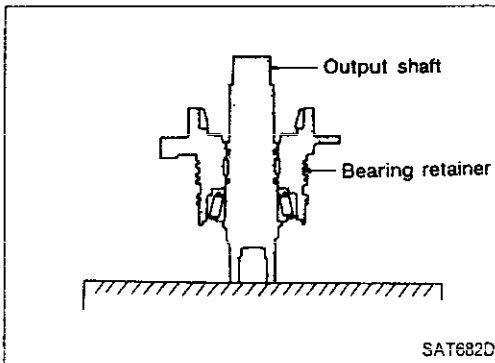

OUTPUT SHAFT BEARING PRELOAD


1. Select proper thickness of output shaft bearing adjusting spacer using the following procedures.
 - a. Remove paper rolled around output shaft.
 - b. Place bearing retainer on output shaft.

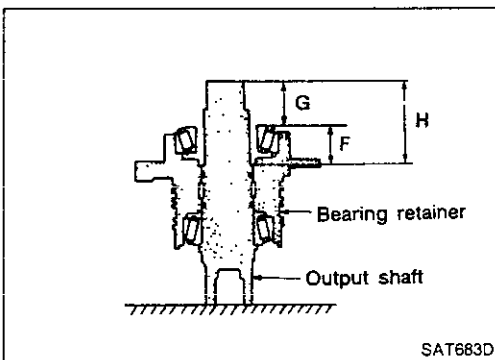


- c. Place output gear bearing inner race on bearing retainer.
- d. Measure dimensions "G" and "H" and calculate dimension "F".

"F": Distance between the surface of output gear bearing inner race and adjusting shim mating surface of output shaft.

$$F = H - G$$

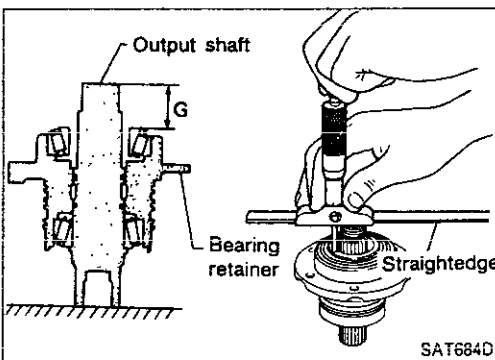

- Measure dimension "G" between end of output shaft and surface of output gear bearing inner race.
- Measure in at least two places.

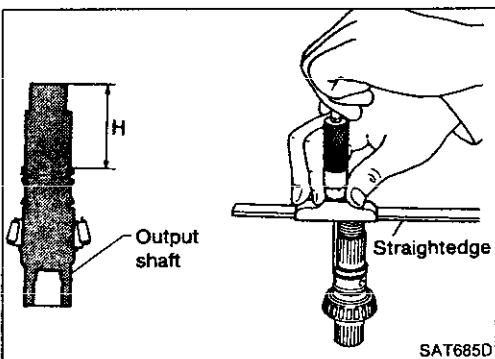


- Measure dimension "H" between end of output shaft and adjusting spacer mating surface of output shaft.
- Measure in at least two places.
- Calculate dimension "F".

$$F = H - G$$

ASSEMBLY

Adjustment (Cont'd)

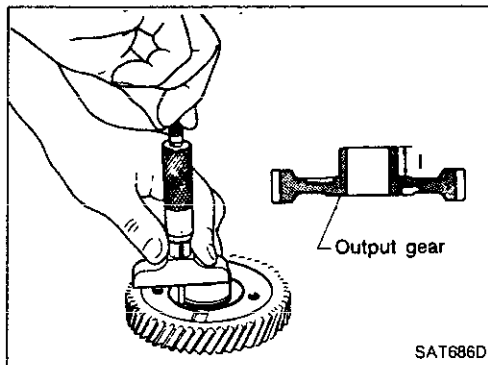

- e. Measure distance "I" between end of output gear (adjusting spacer mating surface) and bearing inner race fitting surface.
- Measure in at least two places.


- f. Calculate dimension " T_2 ".

" T_2 ": Distance between adjusting spacer mating surface of output gear and output shaft


$$T_2 = F - I$$

- g. Select proper thickness of output shaft bearing adjusting spacer using S.D.S. table as a guide.


**Output shaft bearing adjusting spacer:
Refer to S.D.S.**

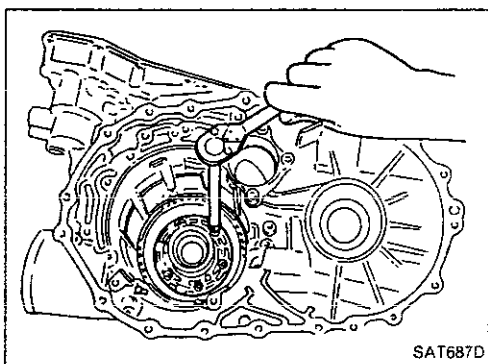

2. Install bearing retainer on transmission case.

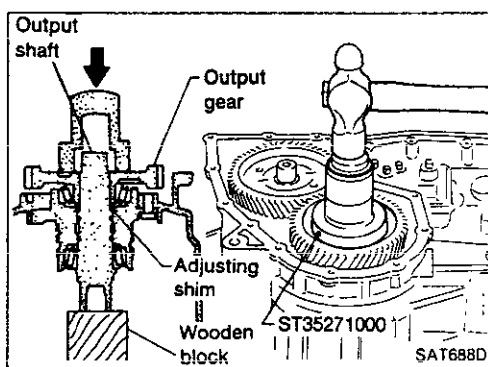


3. Place output shaft on bearing retainer.
4. Place output shaft bearing adjusting spacer selected in step 1-g on output shaft.
5. Press output gear bearing inner race on output gear.
6. Press output gear on output shaft.

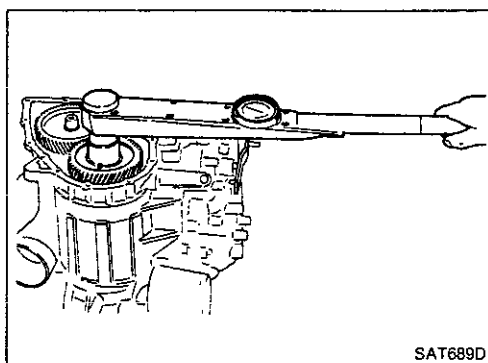


7. Tighten output gear lock nut to specified torque.

Adjustment (Cont'd)

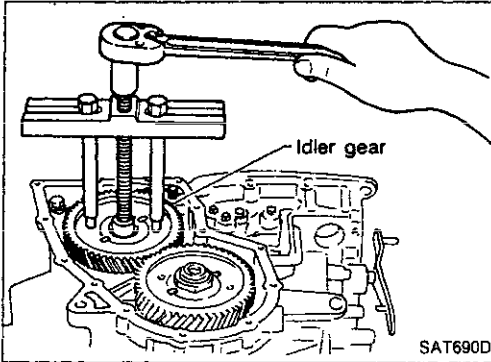

8. Remove idler gear to measure output shaft bearing preload.

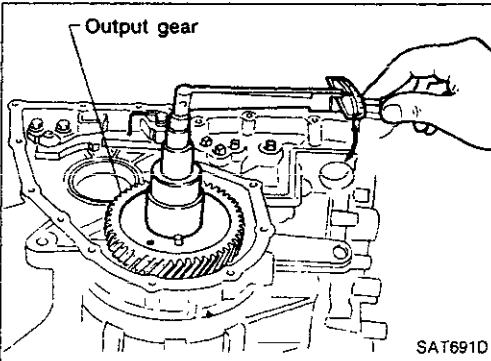


9. Measure output shaft bearing preload.

- When measuring bearing preload, turn output shaft in both directions several times to seat bearing rollers correctly.


Output shaft bearing preload:

0.25 - 0.88 N·m

(2.5 - 9.0 kg-cm, 2.2 - 7.8 in-lb)

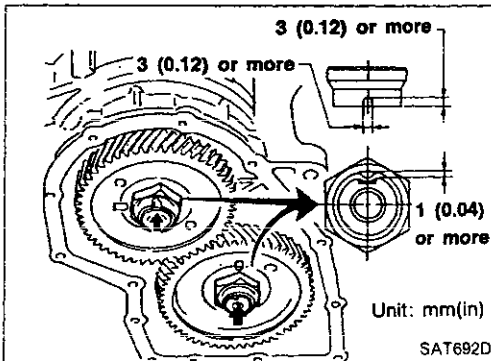


10. Install idler gear and tighten lock nut to specified torque.
11. After properly adjusting "turning" torque, clinch idler gear and output gear lock nuts as shown.

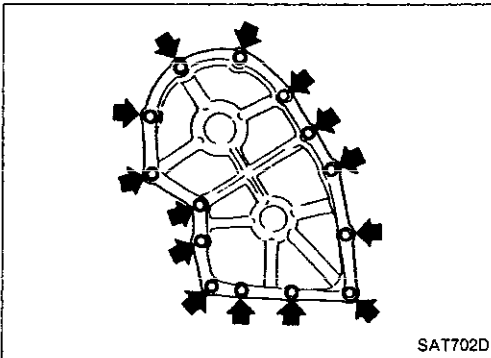

Assembly

1. Install new gasket and side cover on transmission case.


- Always replace side cover bolts.

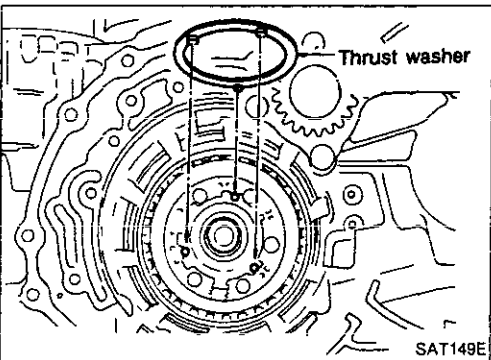


2. Remove paper rolled around bearing retainer.
 3. Install thrust washer on bearing retainer.
- Apply petroleum jelly to thrust washer.

ASSEMBLY


Assembly (Cont'd)

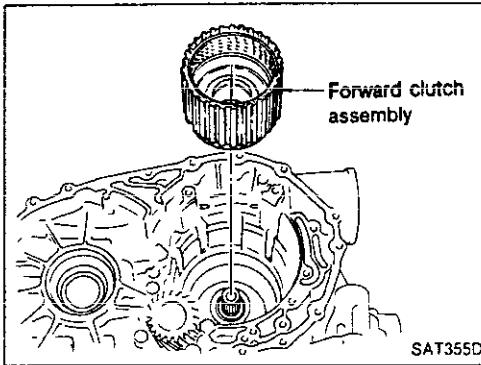


4. Install forward clutch assembly.
 - Align teeth of low & reverse brake drive plates before installing.
 - Make sure that bearing retainer seal rings are not spread.

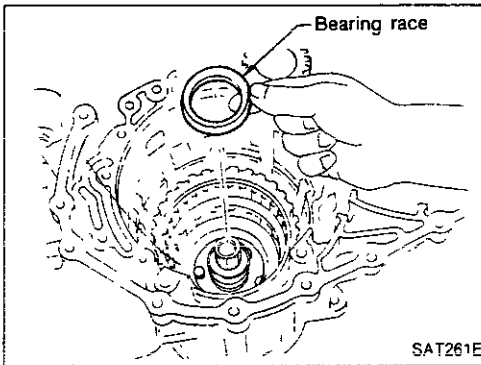


5. Install bearing race on bearing retainer.
 - Apply petroleum jelly to bearing race.
 - Pay attention to direction of bearing race.

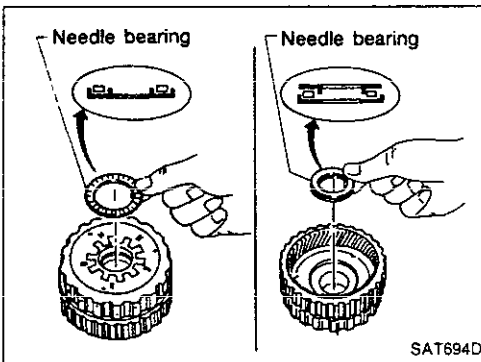

6. Install needle bearings on rear internal gear.
 - Apply petroleum jelly to needle bearings.
 - Pay attention to direction of needle bearing.

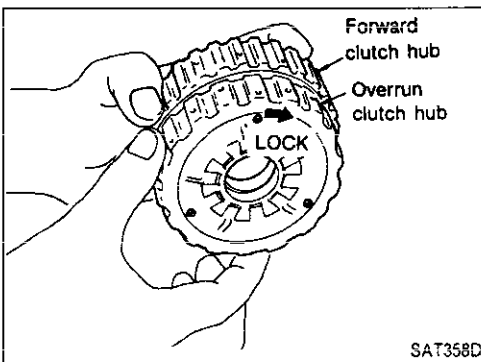


7. Hold forward clutch hub and turn overrun clutch hub. Check overrun clutch hub for directions of lock and unlock.
 - If not as shown in illustration, check installed direction of forward one-way clutch.

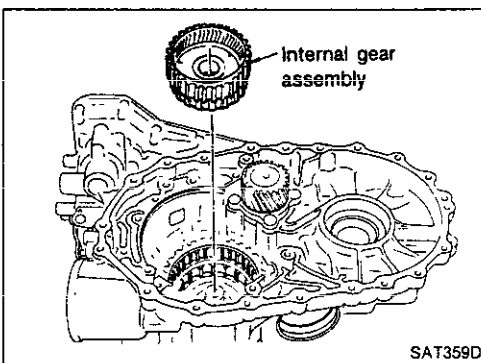


8. Install rear internal gear assembly.
 - Align teeth of forward clutch and overrun clutch drive plate.

Assembly (Cont'd)

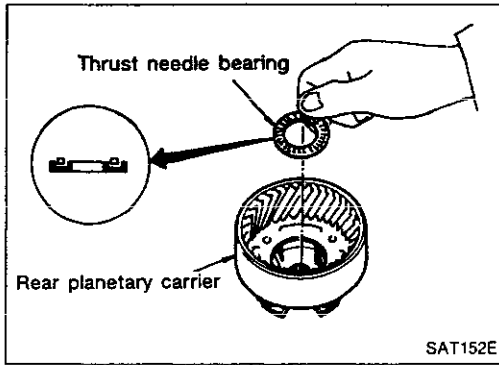


9. Install needle bearing on rear planetary carrier.

- Apply petroleum jelly to needle bearing.
- Pay attention to direction of needle bearing.

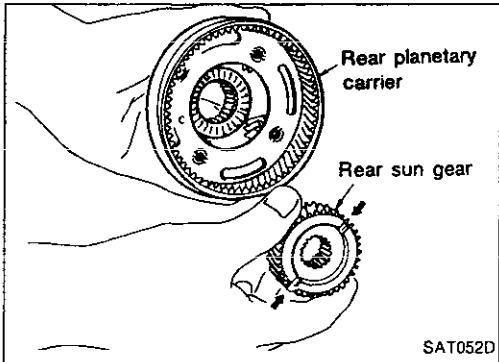


10. Install rear sun gear on rear planetary carrier.

- Pay attention to direction of rear sun gear.

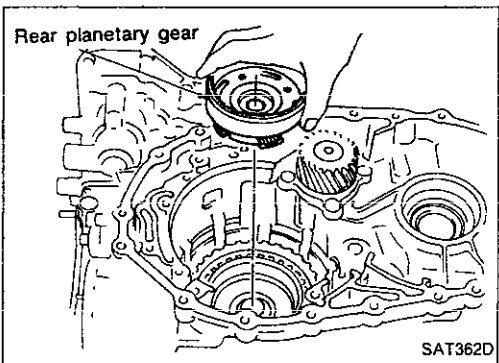


11. Install rear planetary carrier on transmission case.

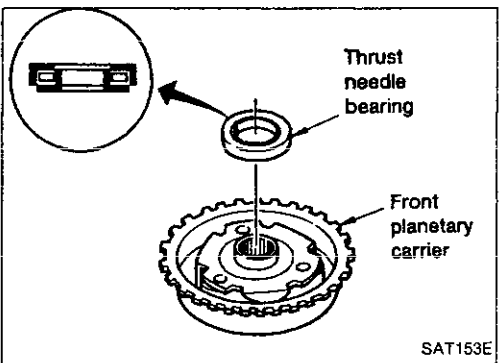

12. Install thrust needle bearing on front planetary carrier.

- Apply petroleum jelly to thrust needle bearing.
- Pay attention to direction of thrust needle bearing.

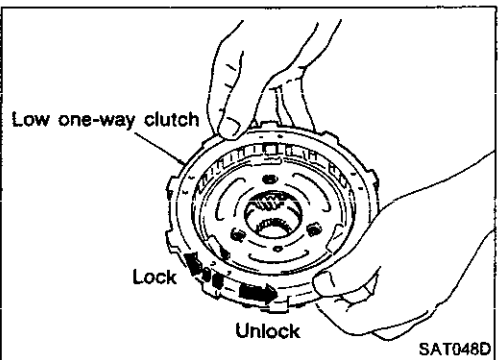


13. Install low one-way clutch to front planetary carrier by turning it in the direction of the arrow as shown.


14. While holding front planetary carrier, turn low one-way clutch.

Check low one-way clutch for correct directions of lock and unlock.


Assembly (Cont'd)

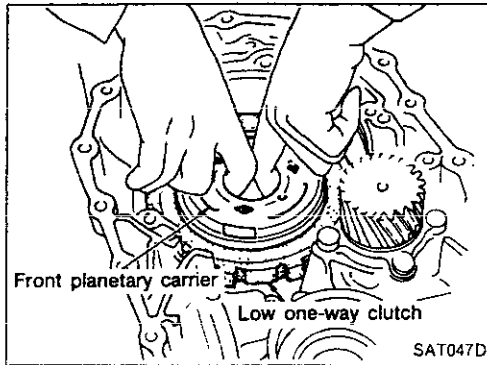


15. Install front planetary carrier assembly on transmission case.

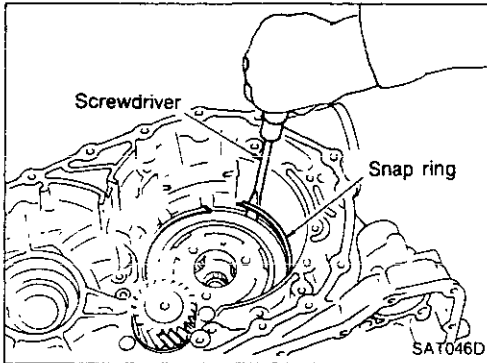


16. Install snap ring with screwdriver.
- If forward clutch and bearings are not installed correctly snap ring will not fit groove of transmission case.

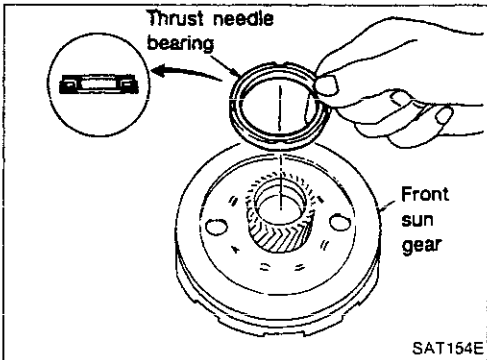

17. Install needle bearing on front sun gear.
- Apply petroleum jelly to needle bearing.
 - Pay attention to direction of needle bearing.

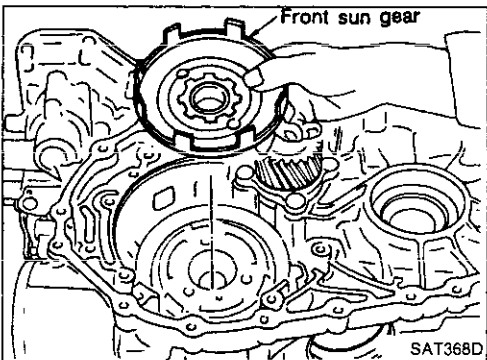


18. Install front sun gear on front planetary carrier.

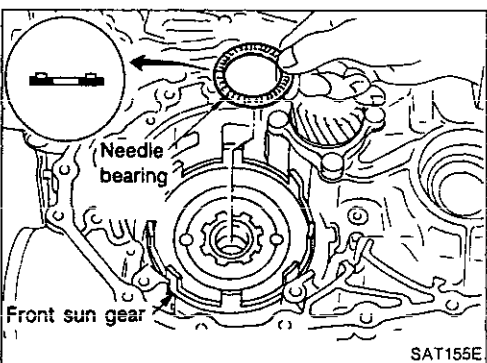

19. Install needle bearing on front sun gear.
- Apply petroleum jelly to needle bearing.
 - Pay attention to direction of needle bearing.


Assembly (Cont'd)

20. Install high clutch hub on front sun gear.

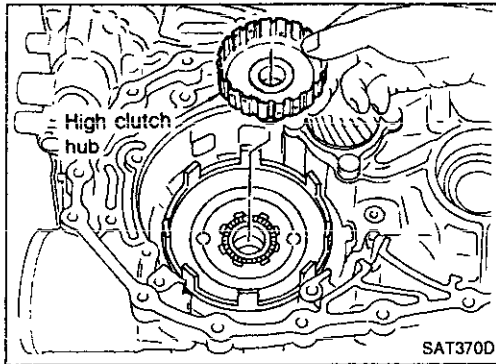

21. Install needle bearing on high clutch hub.


- Apply petroleum jelly to needle bearing.
- Pay attention to direction of needle bearing.

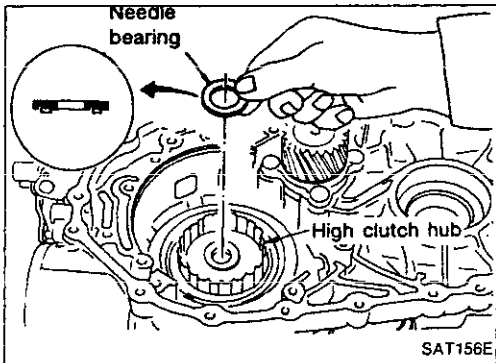

22. Remove paper rolled around input shaft.


23. Install input shaft assembly.

- Align teeth of high clutch drive plates before installing.

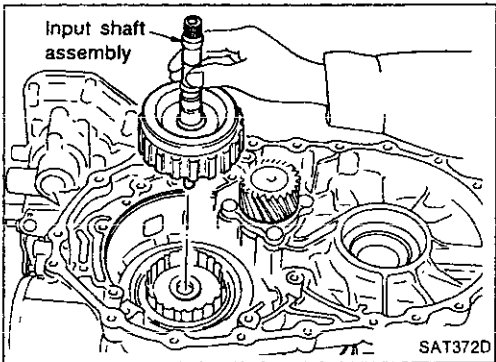

24. Install reverse clutch assembly.


- Align teeth of reverse clutch drive plates before installing.

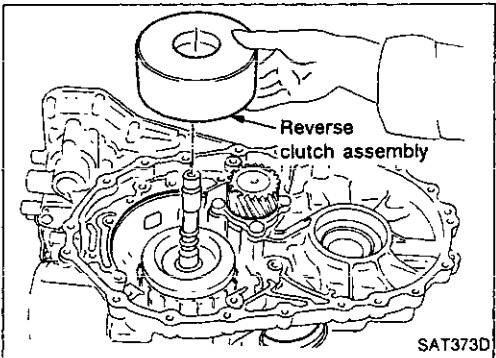

Adjustment


When any parts listed in the following table are replaced, total end play or reverse clutch end play must be adjusted.

Part name \ Item	Total end play	Reverse clutch end play
Transmission case	•	•
Overrun clutch hub	•	•
Rear internal gear	•	•
Rear planetary carrier	•	•
Rear sun gear	•	•
Front planetary carrier	•	•
Front sun gear	•	•
High clutch hub	•	•
High clutch drum	•	•
Oil pump cover	•	•
Reverse clutch drum	•	•

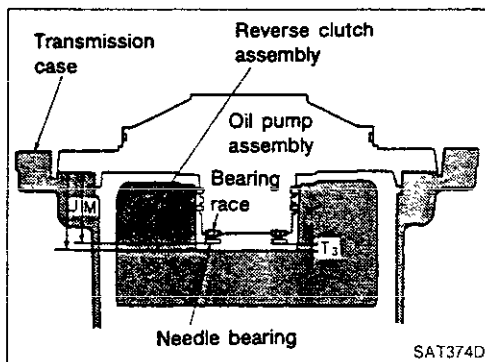


TOTAL END PLAY

- Measure clearance between reverse clutch drum and needle bearing for oil pump cover.
- Select proper thickness of bearing race so that end play is within specifications.

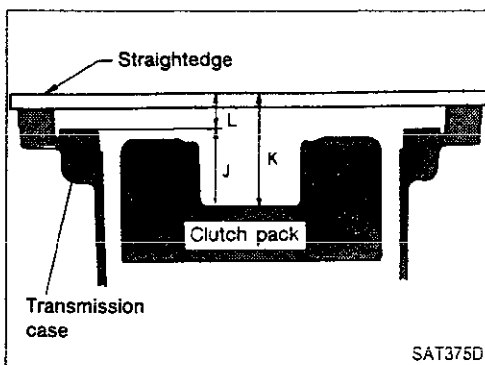


1. Measure dimensions "K" and "L" and then calculate dimension "J".

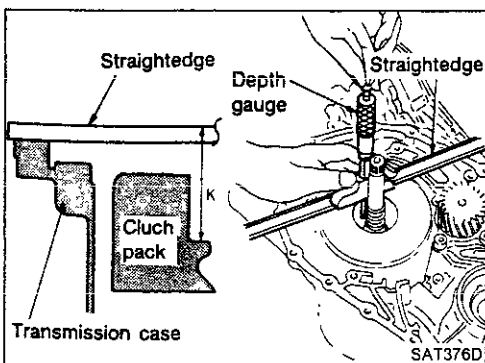

- a. Measure dimension "K".


Adjustment (Cont'd)

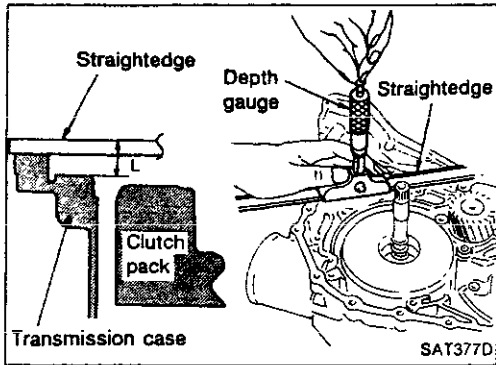

- b. Measure dimension "L".
- c. Calculate dimension "J".


"J": Distance between oil pump fitting surface of transmission case and needle bearing mating surface of high clutch drum.

$$J = K - L$$

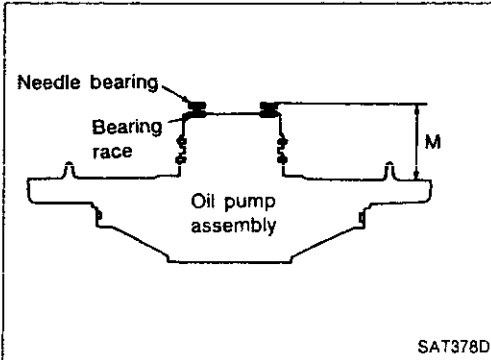

2. Measure dimension "M".


- a. Place bearing race and needle bearing on oil pump assembly.

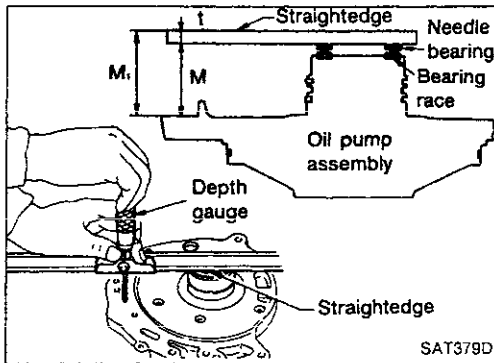

- b. Measure dimension "M".

"M": Distance between transmission case fitting surface and needle bearing on oil pump cover.

M₁: Indication of gauge.

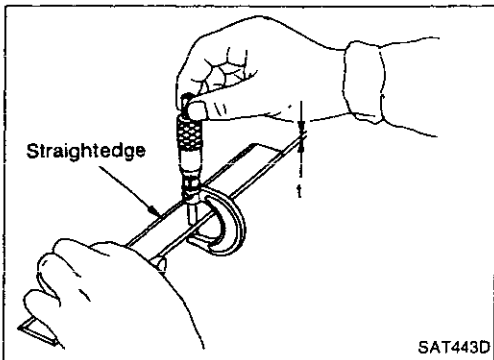

- c. Measure thickness of straightedge "t".

$$M = M_1 - t$$

3. Adjust total end play "T₃".

$$T_3 = J - M$$

Total end play "T₃":

0.25 - 0.55 mm (0.0098 - 0.0217 in)

- Select proper thickness of bearing race so that total end play is within specifications.



Bearing races: Refer to S.D.S.

ASSEMBLY


Adjustment (Cont'd)

REVERSE CLUTCH END PLAY


- Measure clearance between oil pump cover and thrust washer for reverse clutch drum.
- Select proper thickness of thrust washer so that end play is within specifications.

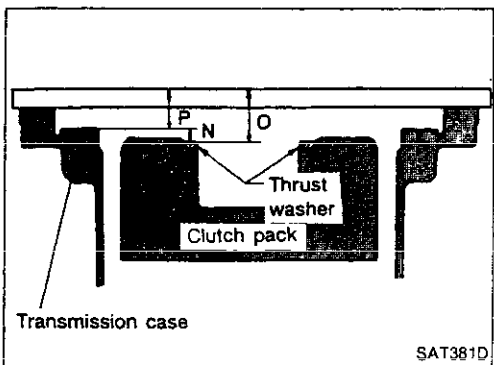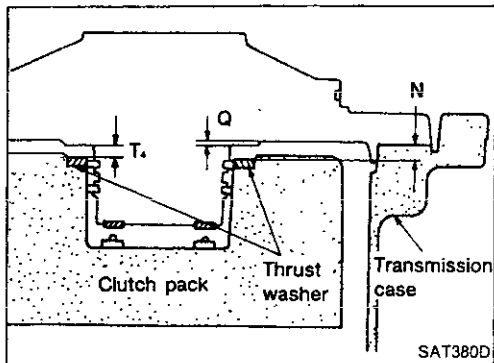

1. Measure dimensions "O" and "P" and then calculate dimension "N".

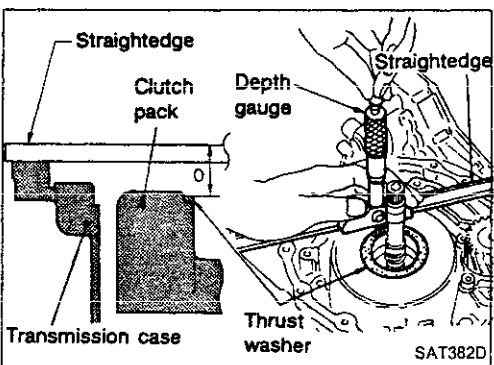

- a. Place thrust washer on reverse clutch drum.
- b. Measure dimension "O".

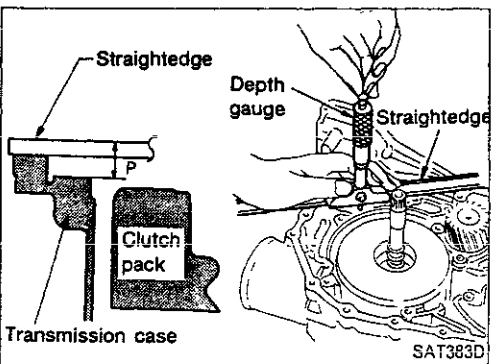


- c. Measure dimension "P".
- d. Calculate dimension "N".



"N": Distance between oil pump fitting surface of transmission case and thrust washer on reverse clutch drum.

$$N = O - P$$

2. Measure dimensions "R" and "S" and then calculate dimension "Q".

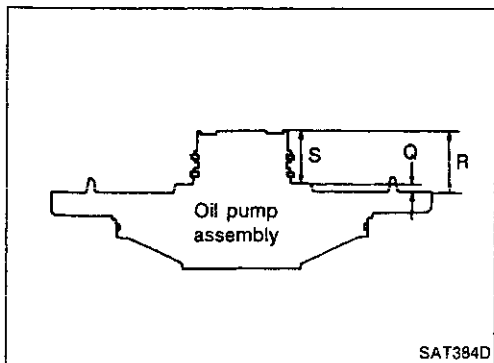

Adjustment (Cont'd)

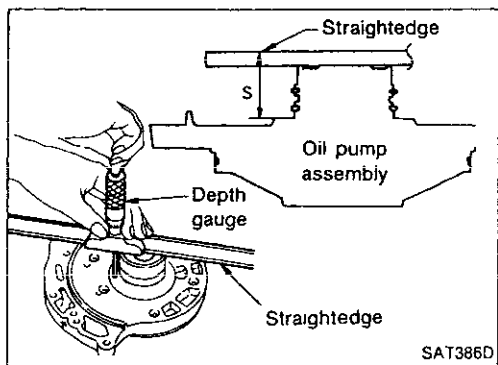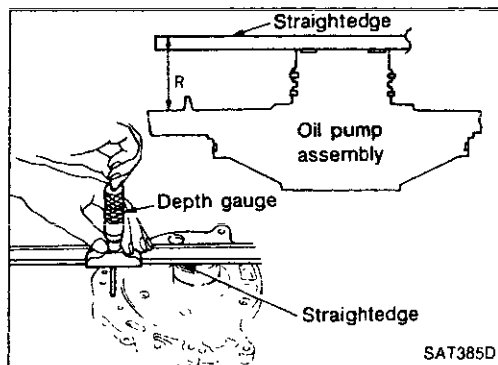

a. Measure dimension "R".

b. Measure dimension "S".

c. Calculate dimension "Q".

"Q": Distance between transmission case fitting surface and thrust washer mating surface.

$$Q = R - S$$

3. Adjust reverse clutch end play " T_4 ".



$$T_4 = N - Q$$

Reverse clutch end play:

0.65 - 1.00 mm (0.0256 - 0.0394 in)

- Select proper thickness of thrust washer so that reverse clutch end play is within specifications.

Thrust washer: Refer to S.D.S.

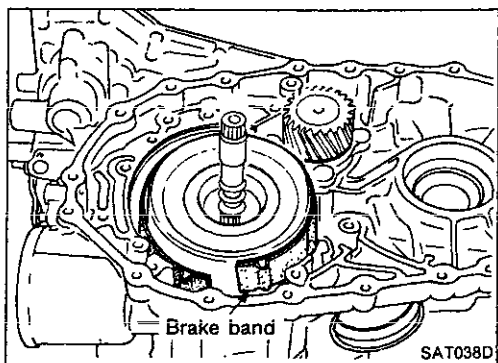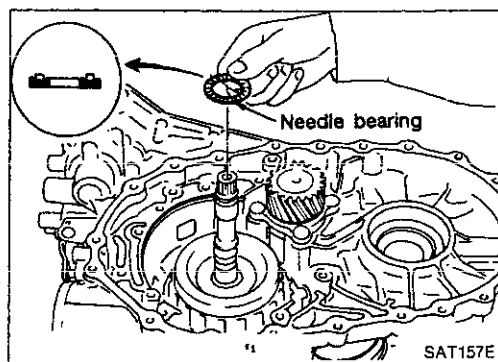


Assembly

1. Remove reverse clutch assembly and install needle bearing on high clutch assembly.
- **Pay attention to direction of needle bearing.**
2. Install reverse clutch assembly.

3. Install anchor end pin, washer and lock nut on transmission case.
4. Place brake band on periphery of reverse clutch drum. Then, tighten anchor end pin just enough so that brake band is fitted on periphery of reverse clutch drum uniformly.


ASSEMBLY

Assembly (Cont'd)

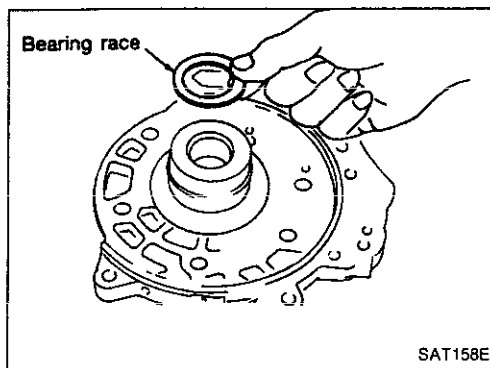


5. Place bearing race selected in total end play adjustment step on oil pump cover.

- Apply petroleum jelly to bearing race.

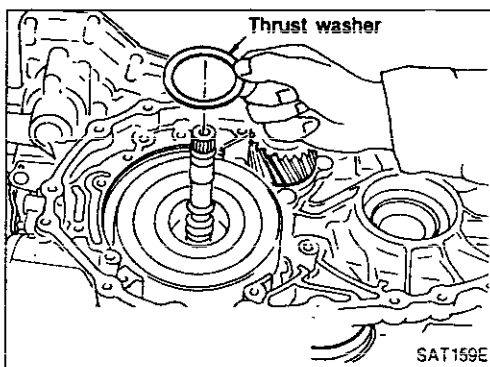


6. Place thrust washer selected in reverse clutch end play step on reverse clutch drum.


- Apply petroleum jelly to thrust washer.

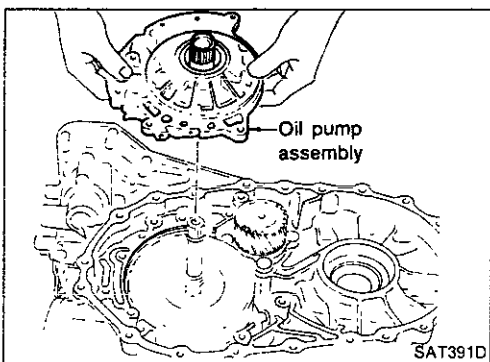

7. Install oil pump assembly on transmission case.

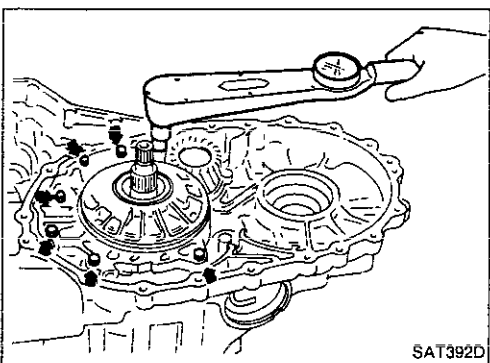


8. Tighten oil pump fixing bolts to specified torque.

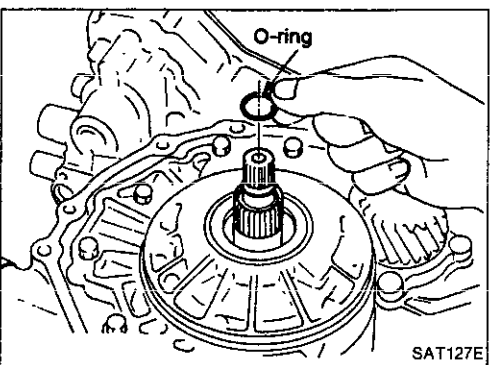


9. Install O-ring to input shaft.

- Apply A.T.F. to O-ring.


Assembly (Cont'd)

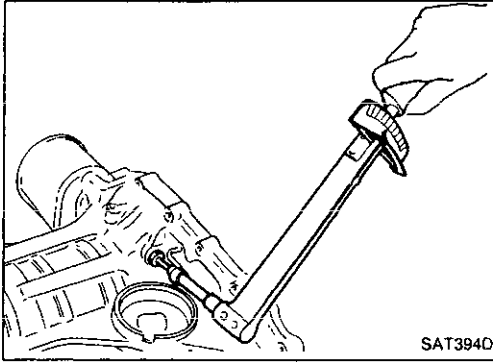


10. Adjust brake band.
 - a. Tighten anchor end pin to specified torque.
Anchor end pin:
 4 - 6 N·m (0.4 - 0.6 kg-m, 2.9 - 4.3 ft-lb)

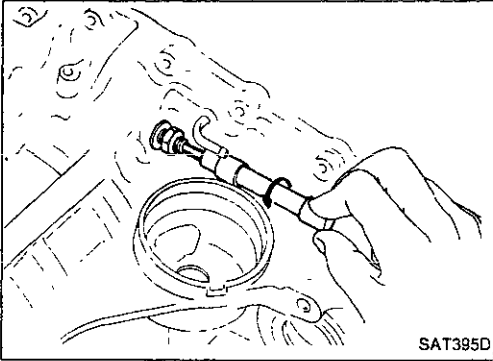

- b. Back off anchor end pin two and a half turns.

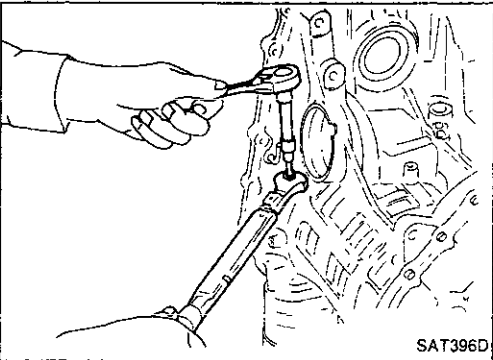

- c. While holding anchor end pin, tighten lock nut.

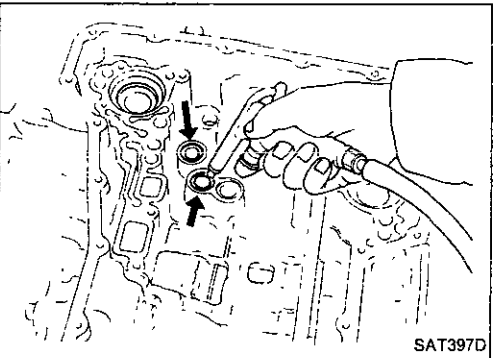

11. Apply compressed air to oil holes of transmission case and check operation of brake band.


Adjustment

FINAL DRIVE END PLAY


- Measure clearance between differential side bearing and transmission case.
- Select proper thickness of adjusting shim so that end play is within specifications.

ASSEMBLY


Adjustment (Cont'd)

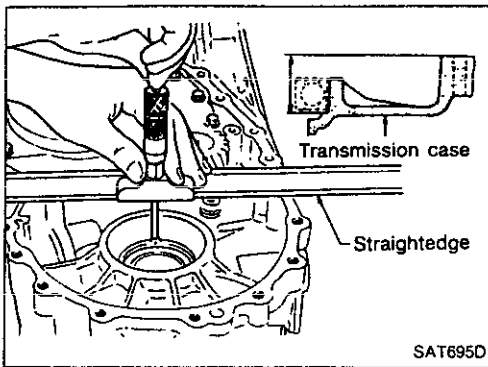


1. Measure dimension "T" between side bearing fitting surface of transmission case and converter housing fitting surface of transmission case.
"T₁": Indication of gauge

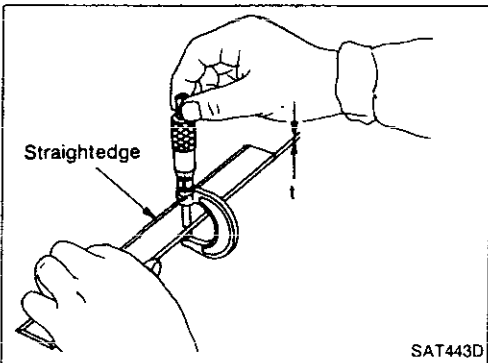





2. Measure thickness of straightedge "t".
 $T = T_1 - t$

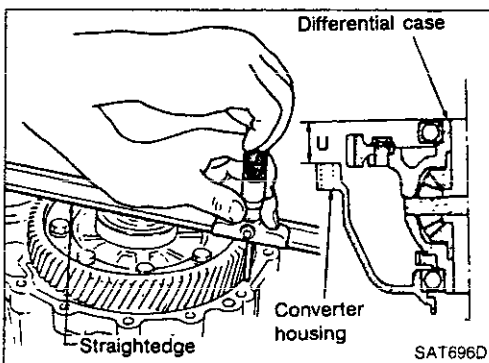

3. Place final drive assembly on converter housing.
4. Measure dimension "U" between end of differential case and transmission case fitting surface of converter housing.

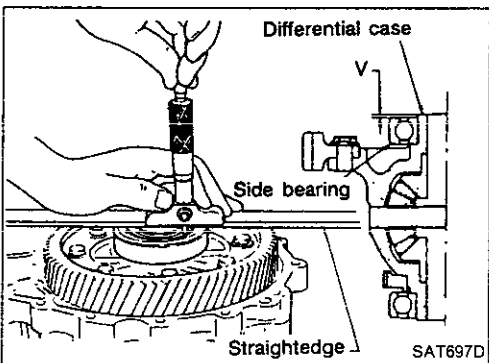

5. Measure dimension "V" between end of differential case and adjusting shim mating surface of differential side bearing.
6. Calculate final drive end play.
Final drive end play:
 $T - U + V$
7. Select proper thickness of differential side bearing adjusting shim so that final drive end play is within specifications.
Final drive end play:
0 - 0.15 mm (0 - 0.0059 in)
Differential side bearing adjusting shim:
Refer to S.D.S.

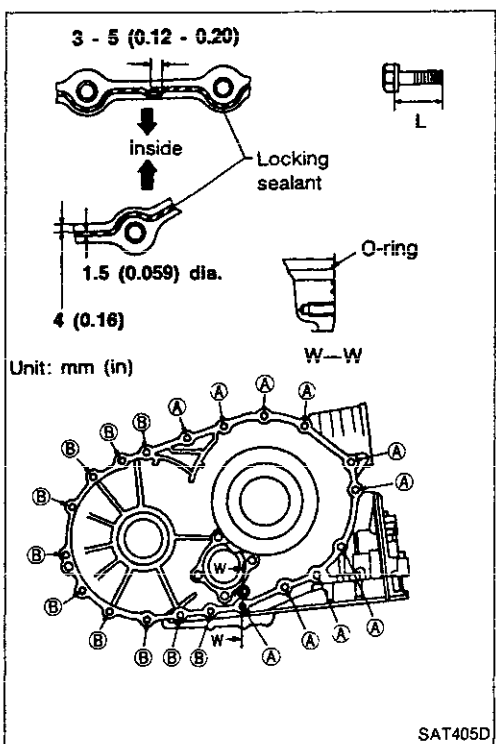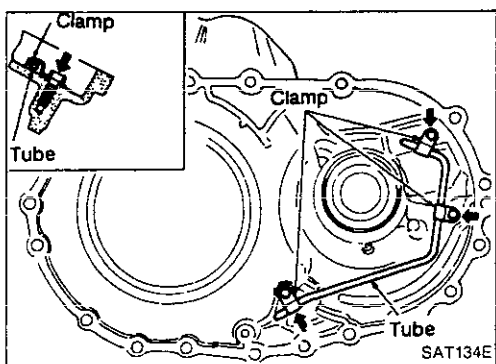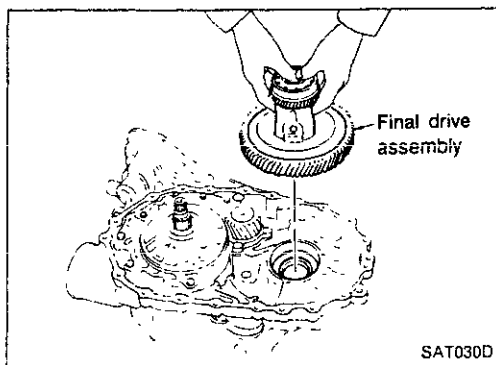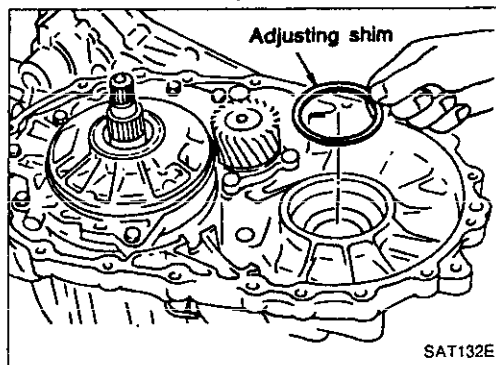


Assembly

1. Install differential side bearing adjusting shim selected in final drive end play adjustment step on transmission case.
 2. Install final drive assembly on transmission case.
 3. Install oil tube on converter housing.
 4. Install O-ring on differential oil port of transmission case.
 5. Install converter housing on transmission case.
- Apply locking sealant to mating surface of converter housing.

Bolt	Length mm (in)
Ⓐ	30 (1.18)
Ⓑ	40 (1.57)


ASSEMBLY

Assembly (Cont'd)

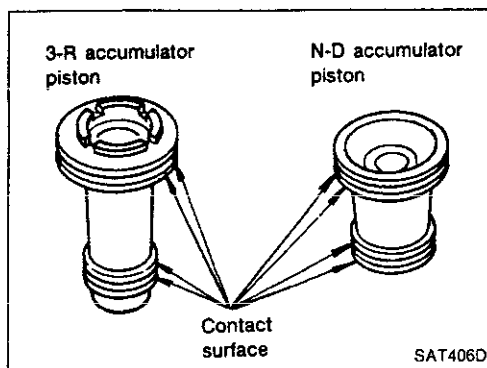

6. Install accumulator piston.

a. Check contact surface of accumulator piston for damage.

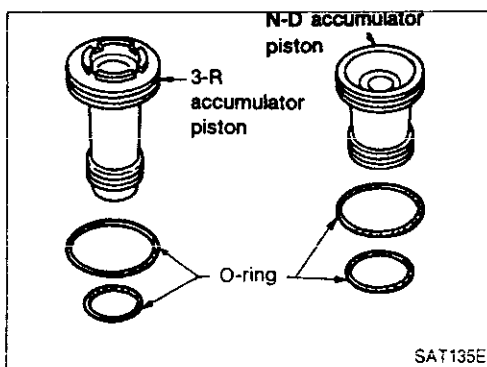


b. Install O-rings on accumulator piston.

• Apply A.T.F. to O-rings.

Accumulator piston O-rings:

Unit: mm (in)

Accumulator	Inner diameter (Small)	Inner diameter (Large)
3-R accumulator	26.9 (1.059)	44.2 (1.740)
N-D accumulator	34.6 (1.362)	39.4 (1.551)

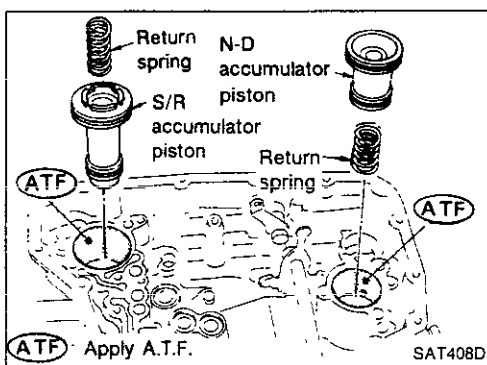


c. Install accumulator pistons and return springs on transmission case.

• Apply A.T.F. to inner surface of transmission case.

Return springs:


Unit: mm (in)

Spring	Free length	Outer diameter
3-R accumulator spring	56.4 (2.220)	21.0 (0.827)
N-D accumulator spring	43.5 (1.713)	28.0 (1.102)

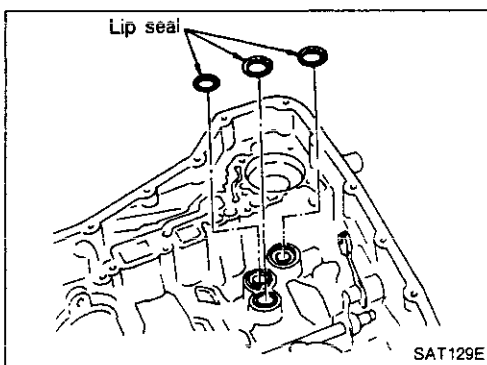

7. Install lip seals for band servo oil holes on transmission case.

• Apply petroleum jelly to lip seals.

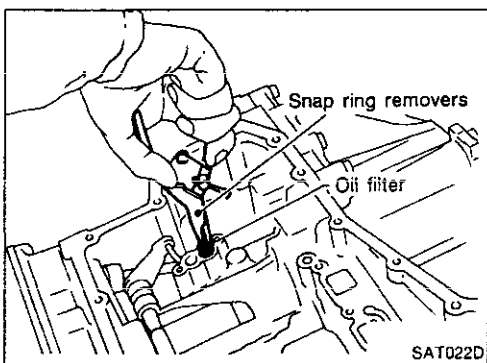


8. Install oil filter for governor valve.

• Take care with its direction.


ASSEMBLY

Assembly (Cont'd)


9. Install throttle wire to transmission case.

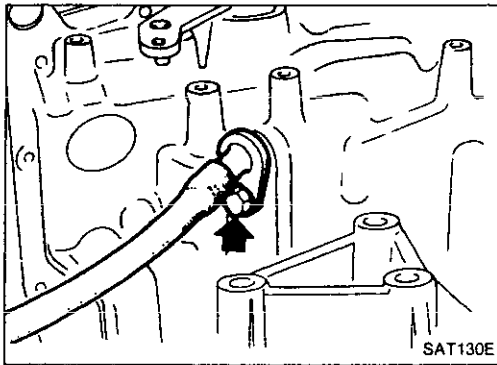


10. Install throttle wire to throttle lever.

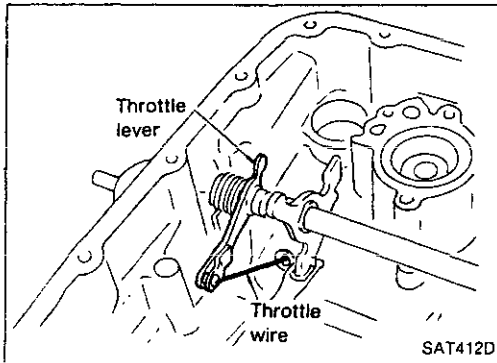


11. Install control valve assembly.
a. Insert manual valve into control valve assembly.
● **Apply A.T.F. to manual valve.**

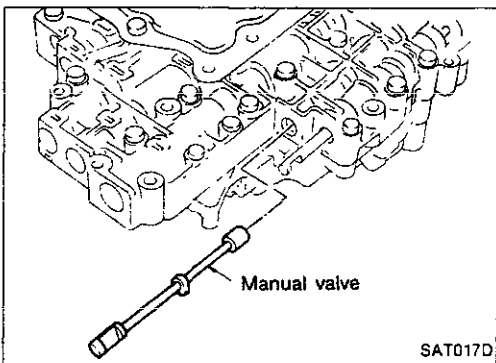

- b. Set manual shaft in Neutral position.
c. Install control valve assembly on transmission case while aligning manual valve with manual plate and detent valve with throttle lever.

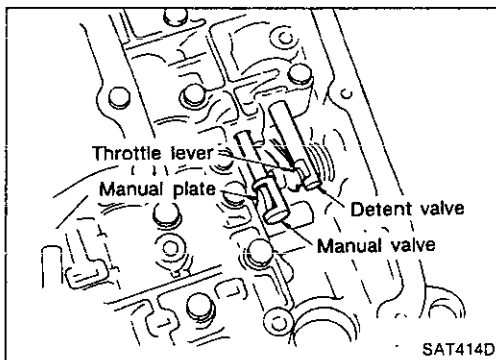


- d. Pass solenoid harness through transmission case and install terminal body on transmission case by pushing it.

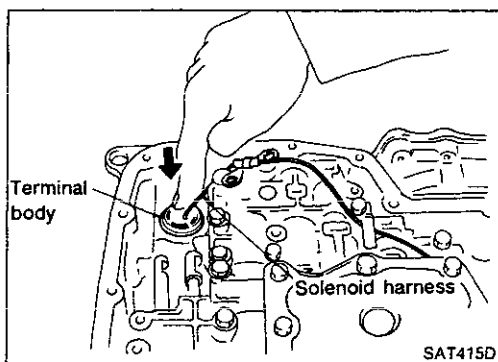

ASSEMBLY

Assembly (Cont'd)


- e. Install clip to terminal body.

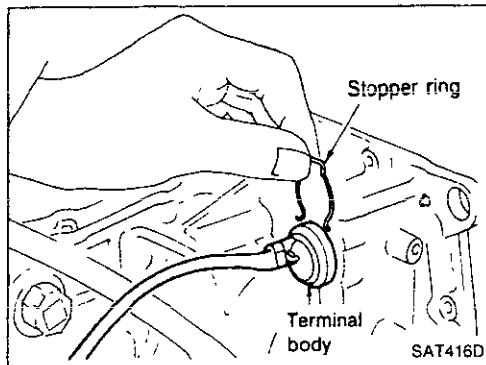

- f. Tighten bolts A, B, C and D.


Bolt length, number and location:

Bolt	A	B	C	D
Bolt length "ℓ" mm (in)	33.0 (1.299)	40.0 (1.575)	43.5 (1.713)	25.0 (0.984)
Number of bolts	6	5	2	2
Tightening torque N·m (kg-m, ft-lb)	7 - 9 (0.7 - 0.9, 5.1 - 6.5)			

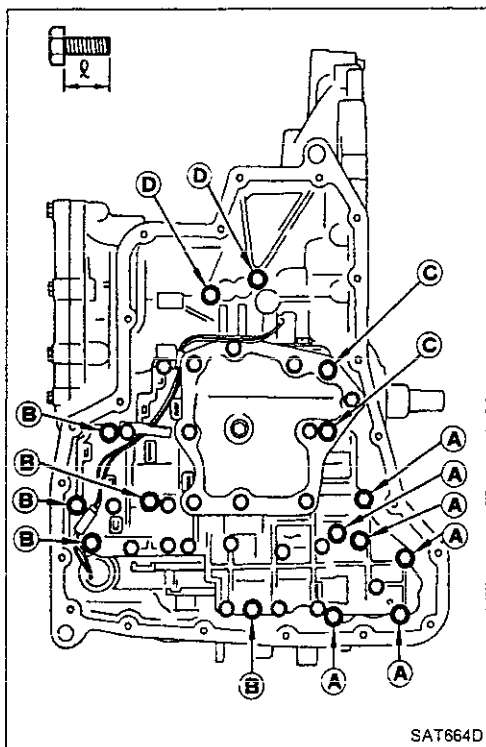

12. Install oil pan.

- a. Attach magnet to oil pan.

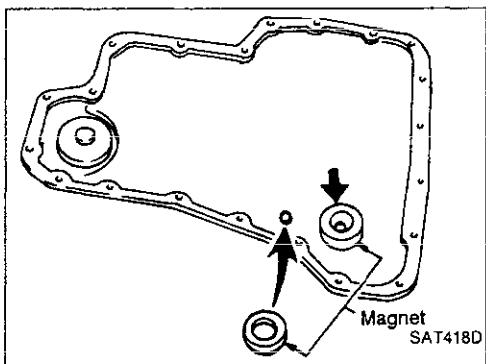


- b. Install new oil pan gasket on transmission case.


- c. Install oil pan on transmission case.

- **Always replace oil pan bolts.**
- **Tighten the four bolts in a criss-cross pattern to prevent dislocation of gasket.**


- d. Tighten drain plug to specified torque.

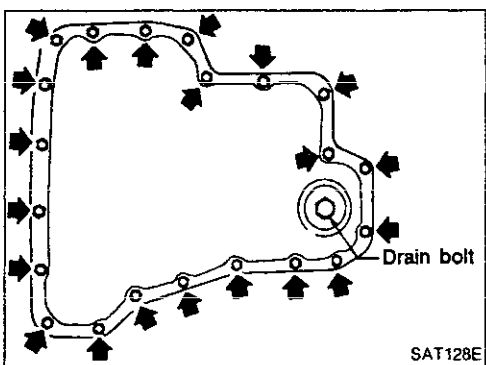


Assembly (Cont'd)

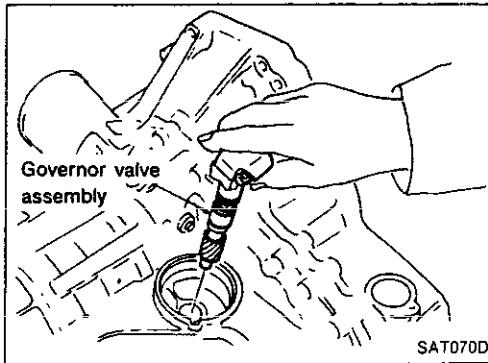


13. Install governor valve.
 - a. Install governor valve assembly into transmission case.

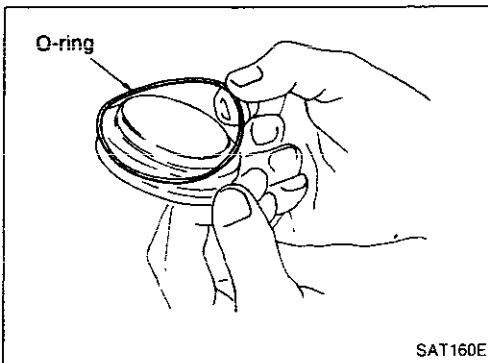


- b. Install O-ring to governor cap.
 - Apply A.T.F. to O-ring.

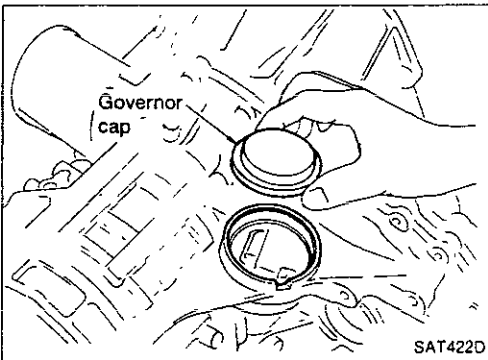

- c. Install governor cap onto transmission case.

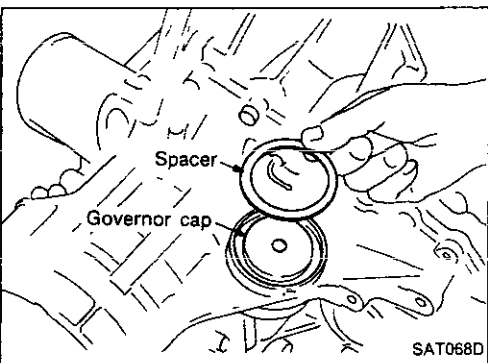


- d. Place spacer on governor cap.

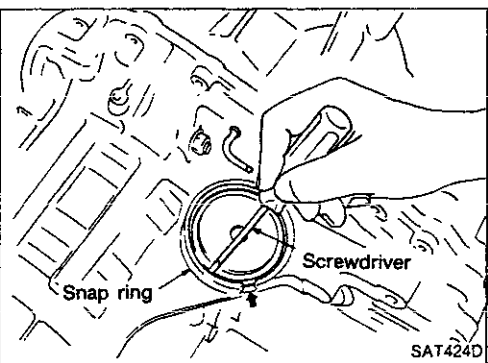


- e. Install snap ring onto transmission case with a screwdriver.
 - Align snap ring gap with the notch of transmission case.

ASSEMBLY


Assembly (Cont'd)

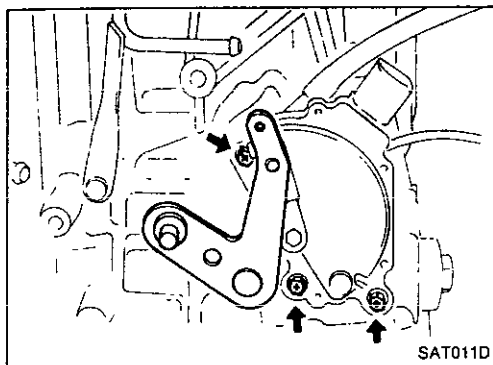


14. Install inhibitor switch.
 - a. Set manual lever in "P" position.
 - b. Temporarily install inhibitor switch on manual shaft.
 - c. Move selector lever to "N" position.

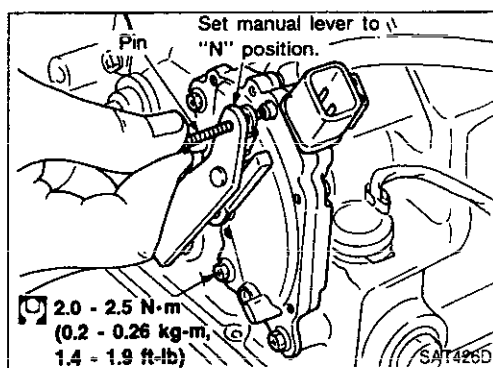


- d. Insert 4.0 mm (0.157 in) dia. pin into adjustment hole in both inhibitor switch and manual shaft as near vertically as possible.
 - e. Tighten inhibitor switch fixing bolts.
 - f. Remove pin from adjustment hole after adjusting inhibitor switch.

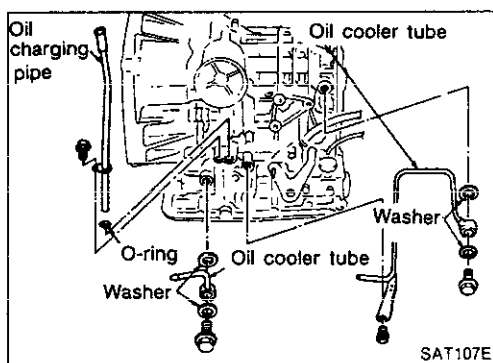

15. Install oil charging pipe and oil cooler tube to transmission case.

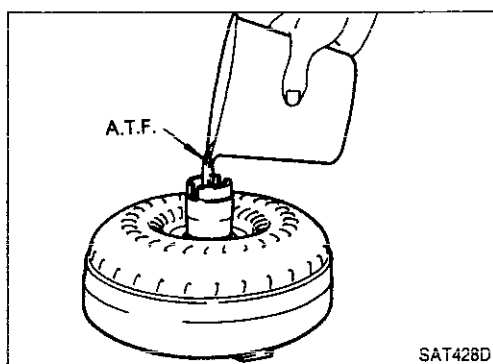


16. Install torque converter.
 - a. Pour A.T.F. into torque converter.
 - Approximately 1 liter (7/8 Imp qt) of fluid is required for a new torque converter.
 - When reusing old torque converter, add the same amount of fluid as was drained.

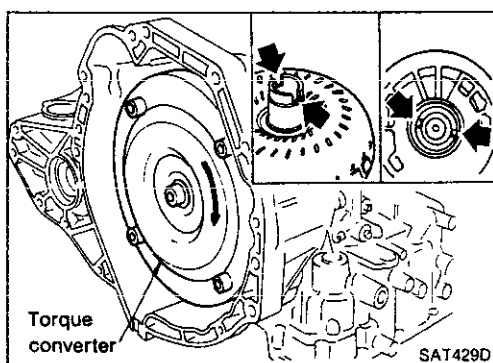

- b. Install torque converter while aligning notches of torque converter with notches of oil pump.

Assembly (Cont'd)

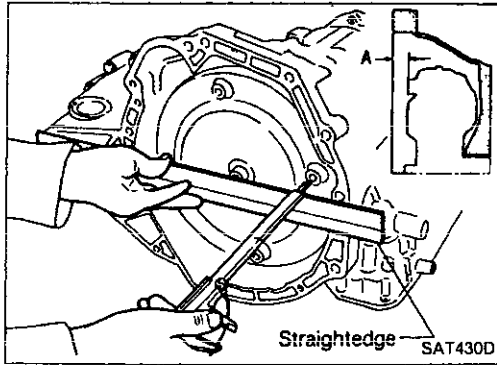






- c. Measure distance "A" to check that torque converter is in proper position.

Distance "A":


21.1 mm (0.831 in) or more

A/T SHIFT LOCK SYSTEM


Shift Lock System Part Locations

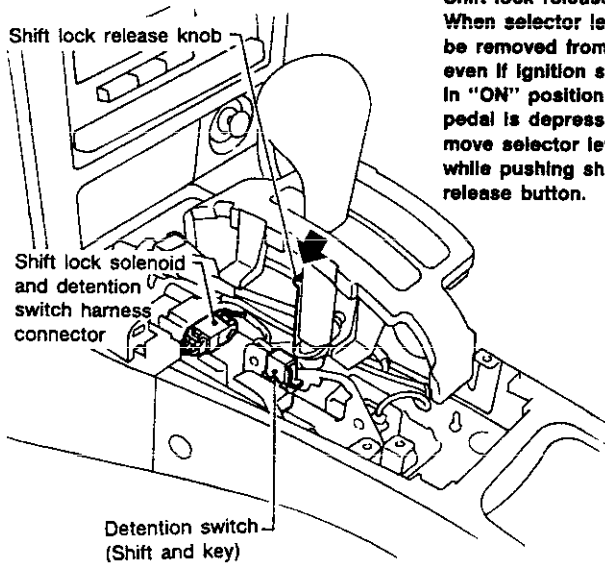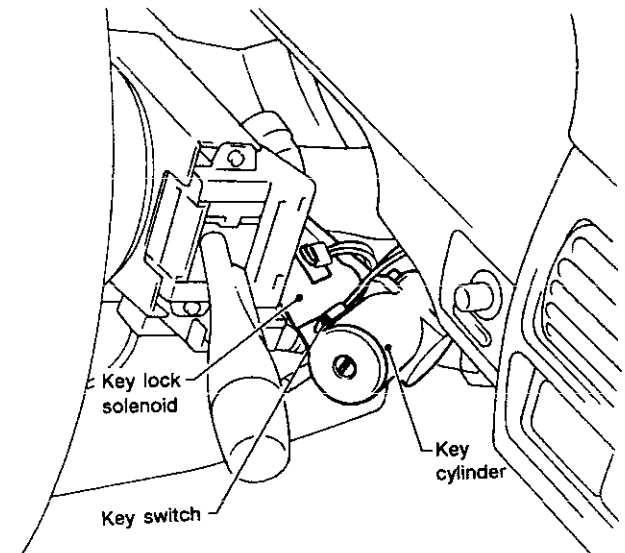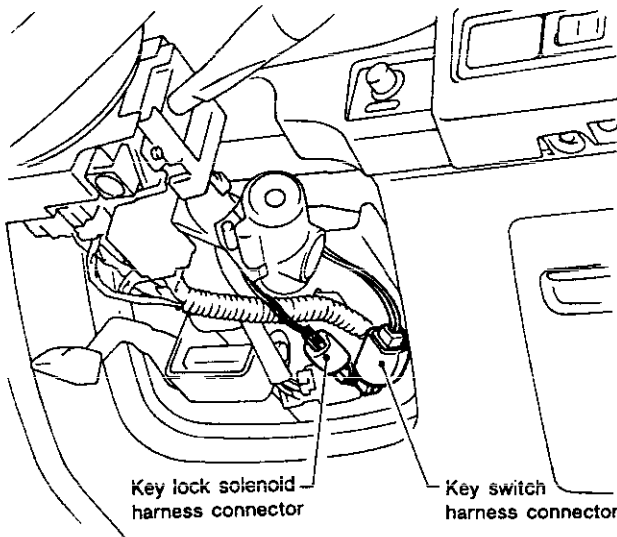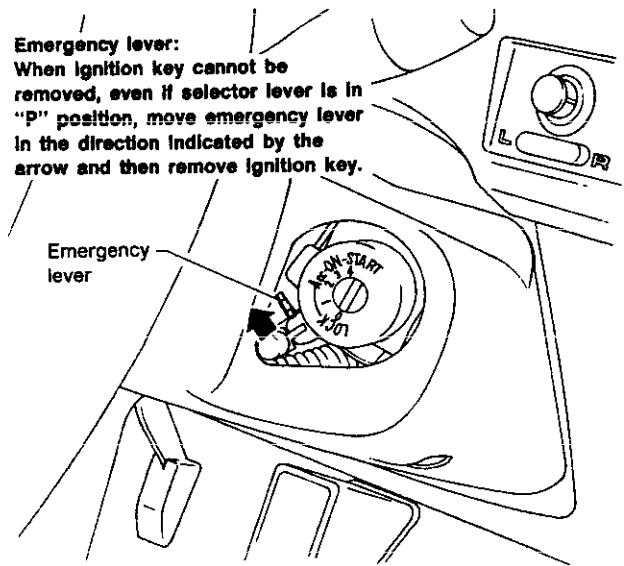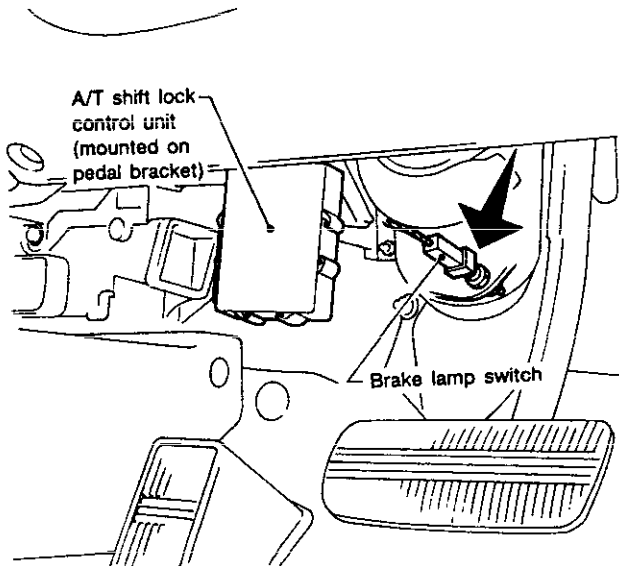


Shift lock release knob:
When selector lever cannot be removed from "P" range even if ignition switch is in "ON" position and brake pedal is depressed, move selector lever from "P" range while pushing shift lock release button.



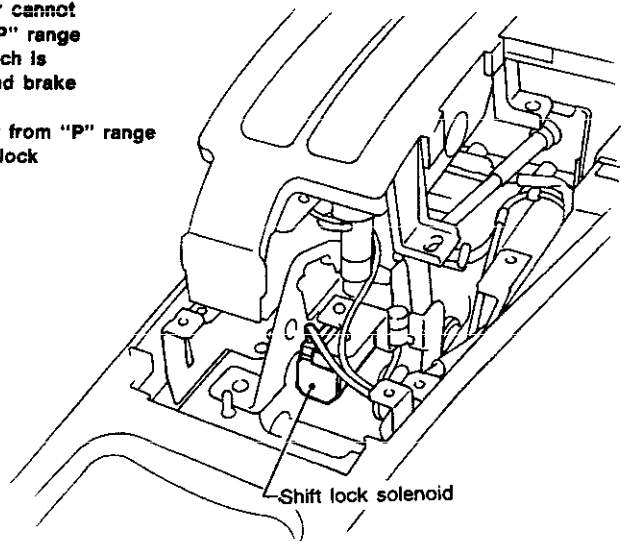


Circuit Diagram for Quick Pinpoint Check

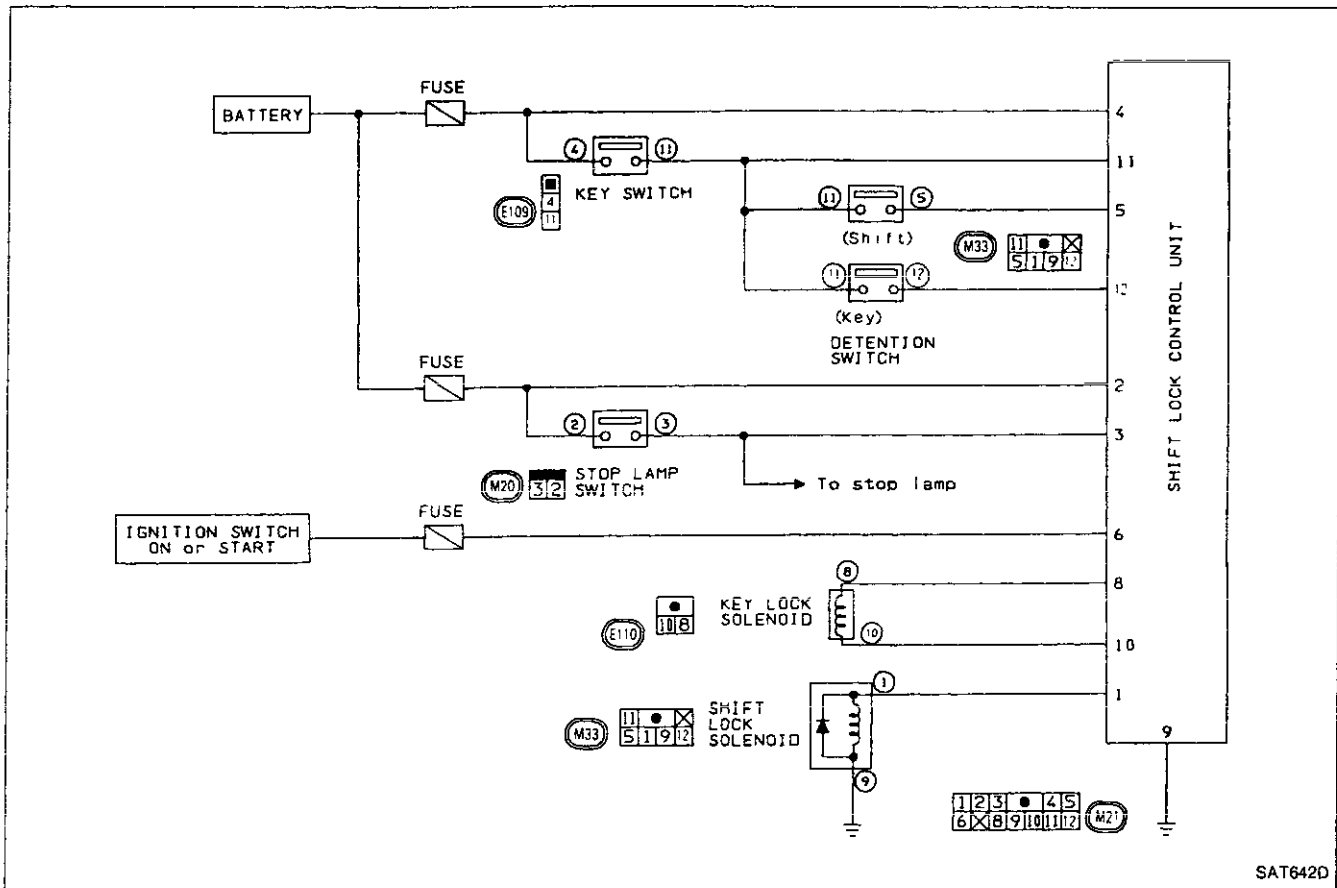

Wiring Diagram

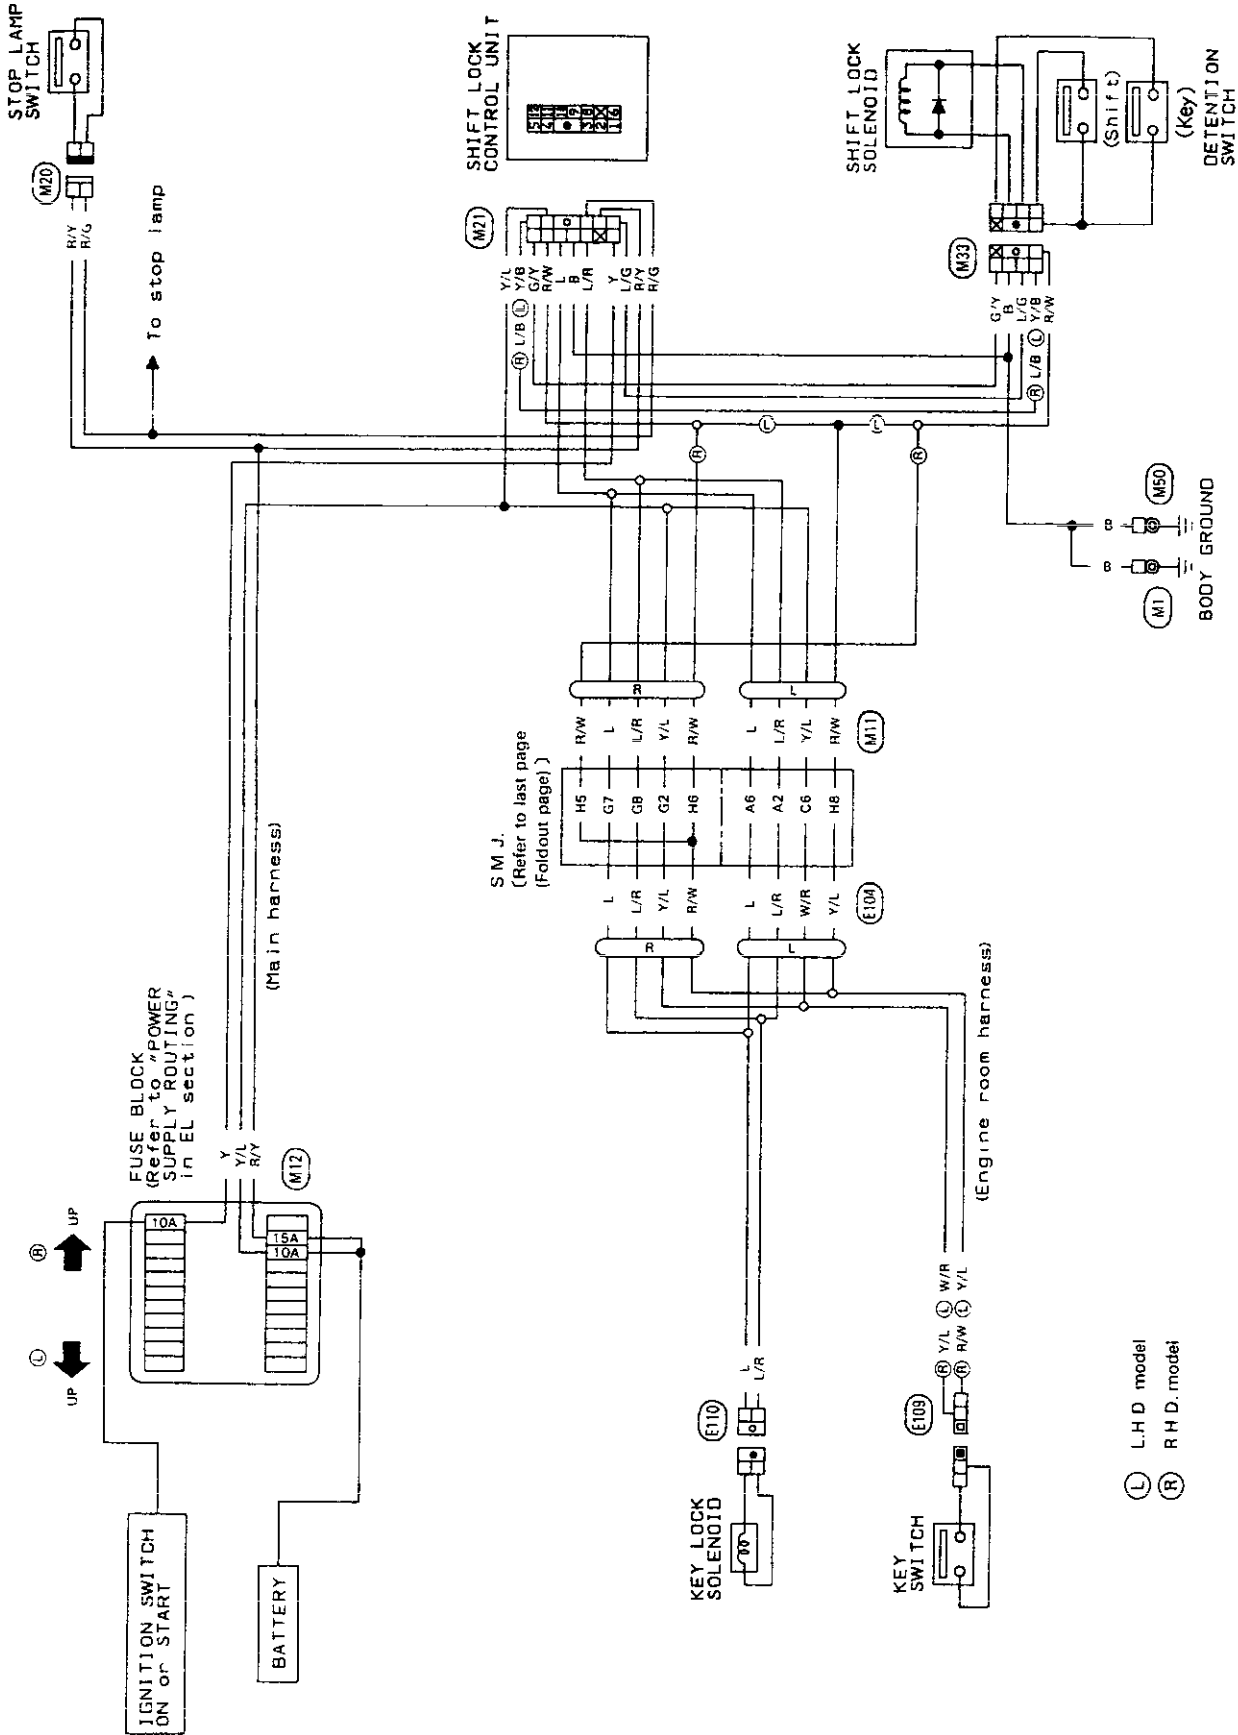

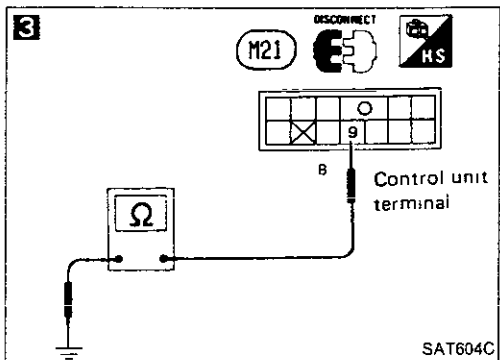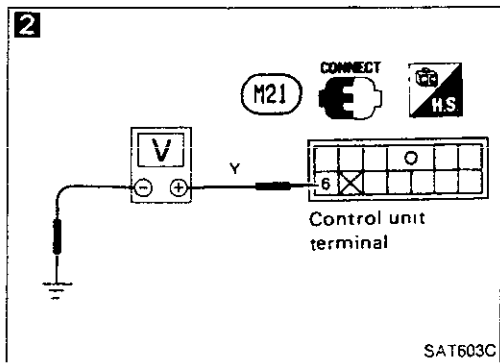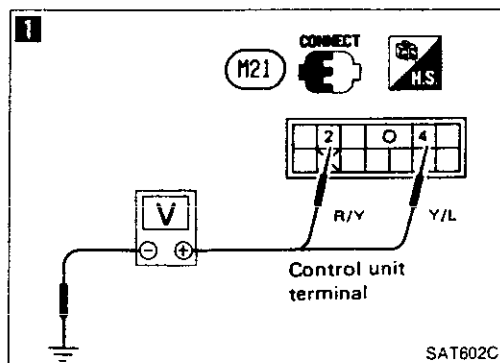


Diagnostic Procedure 1






SYMPTOM:

Selector lever cannot be moved from "P" range when ignition switch is set in "ON" position and brake pedal is applied, or can be moved when brake pedal is released.


Selector lever can be moved from "P" range when key is removed from key cylinder.

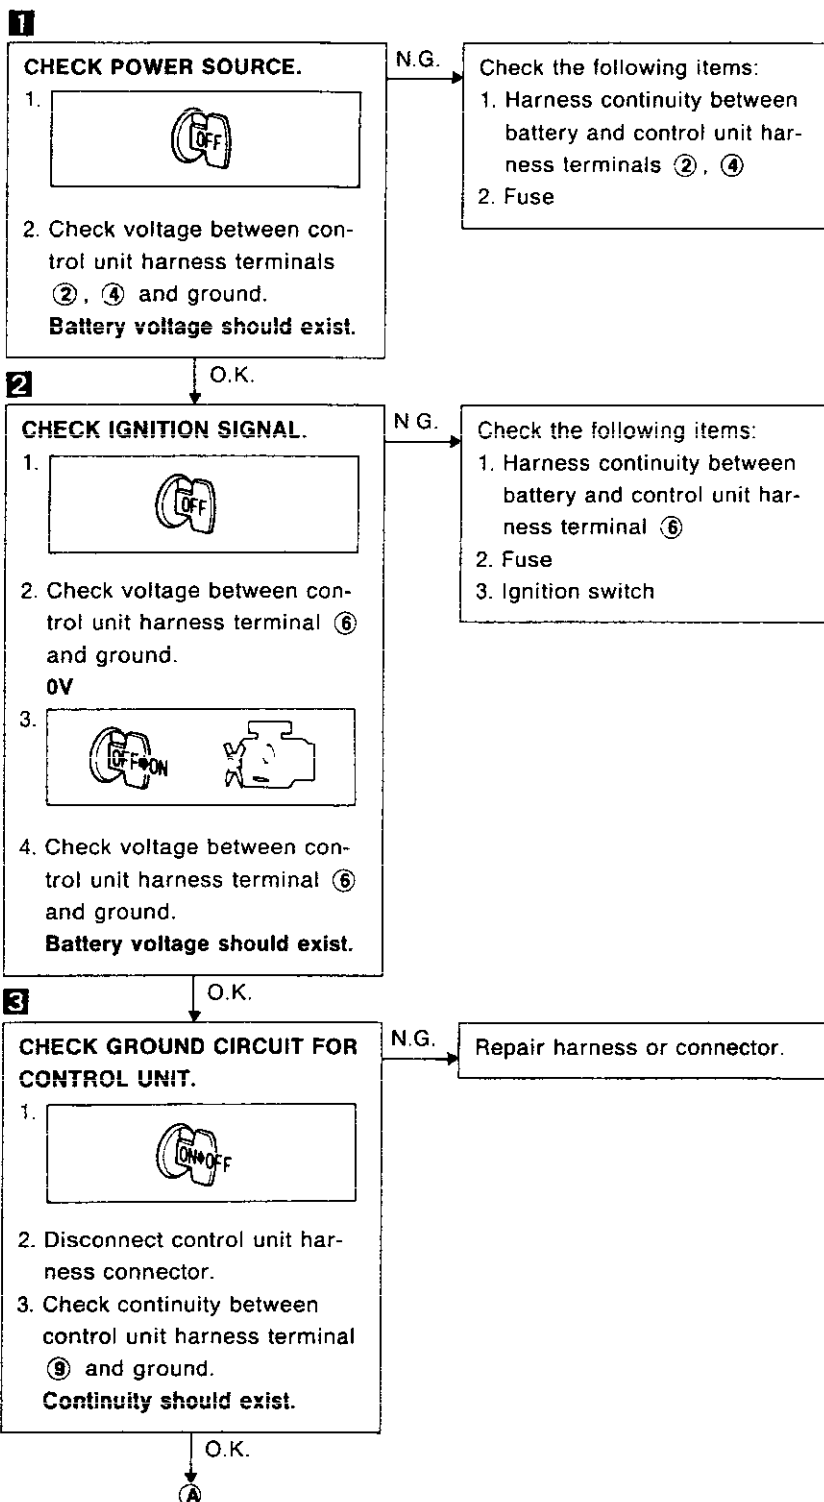

Diagnostic Procedure 1 (Cont'd)

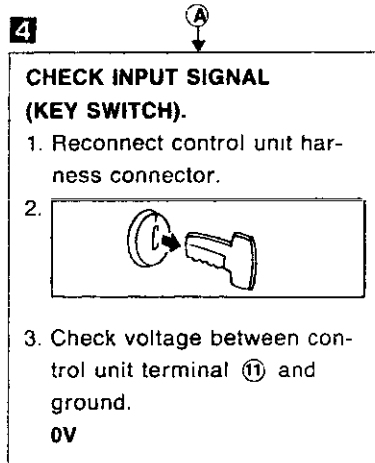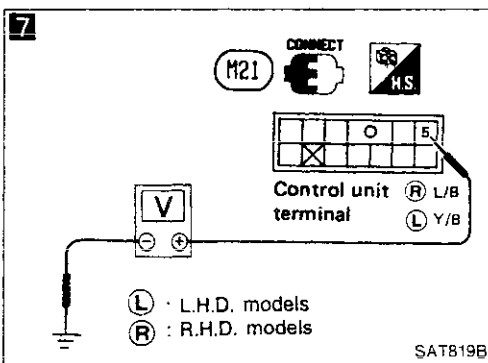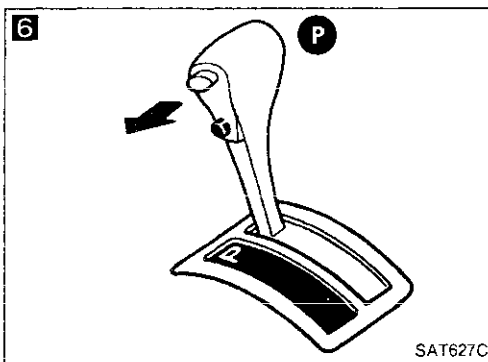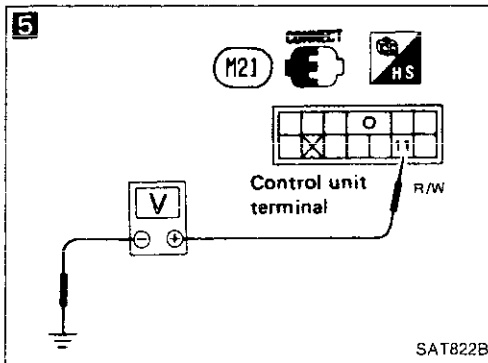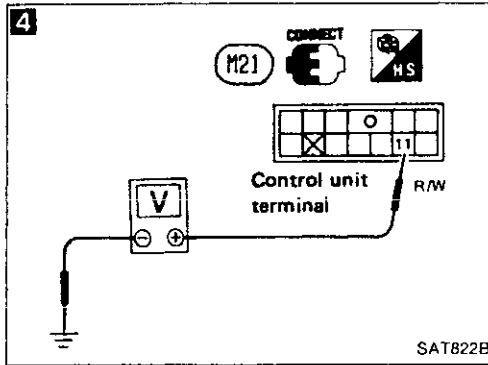


Check key switch.
(Refer to "COMPONENT CHECK".)

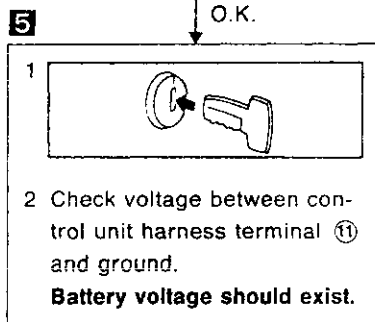

Check the following items:




1. Harness continuity between control unit harness terminal ⑪ and key switch harness terminal ⑪.
2. Harness continuity between key switch harness terminal ④ and fuse
3. Key switch (Refer to "COMPONENT CHECK".)

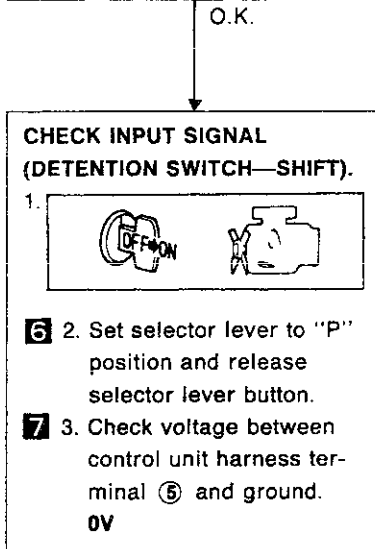


Check detention switch—shift
(Refer to "COMPONENT CHECK".)

A/T SHIFT LOCK SYSTEM

Diagnostic Procedure 1 (Cont'd)

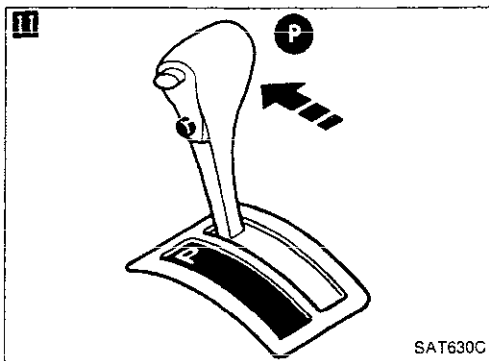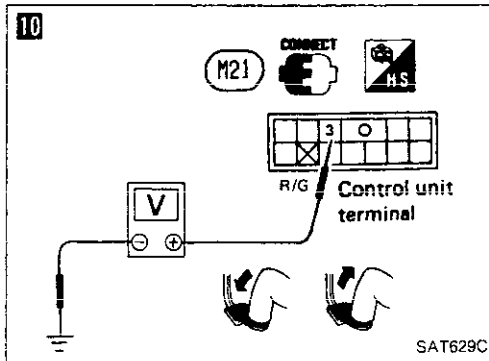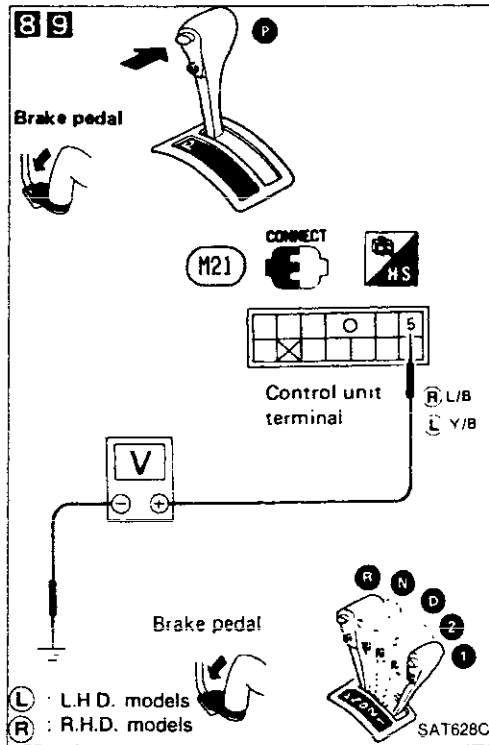

 CHECK INPUT SIGNAL (DETENTION SWITCH—SHIFT).



8 2. Check voltage between control unit harness terminal ⑤ and ground with brake pedal depressed and selector lever button pushed. **Battery voltage should exist.**

 
9 3. Check voltage between control unit harness terminal ⑤ and ground with selector lever set in any position except "P". **When selector lever cannot be moved from "P" position with brake pedal depressed, push shift lock release knob. Battery voltage should exist.**

N.G.

- Check the following items:
1. Harness continuity between control unit harness terminal ⑤ and detention switch harness terminal ⑤
 2. Harness continuity between detention switch harness terminal ⑪ and key switch harness terminal ⑪
 3. Detention switch—shift (Refer to "COMPONENT CHECK".)

O.K.

CHECK INPUT SIGNAL (STOP LAMP SWITCH).



• Check voltage between control unit harness terminal ③ and ground.

Brake pedal	Voltage
Depressed	Battery voltage
Released	0V

N.G.

- Check the following items:
1. Harness continuity between control unit harness terminal ③ and stop lamp switch harness terminal ③
 2. Harness continuity between stop lamp switch harness terminal ② and fuse
 3. Stop lamp switch (Refer to "COMPONENT CHECK".)




O.K.

Set selector lever to "P" position.

G


A/T SHIFT LOCK SYSTEM

Diagnostic Procedure 1 (Cont'd)

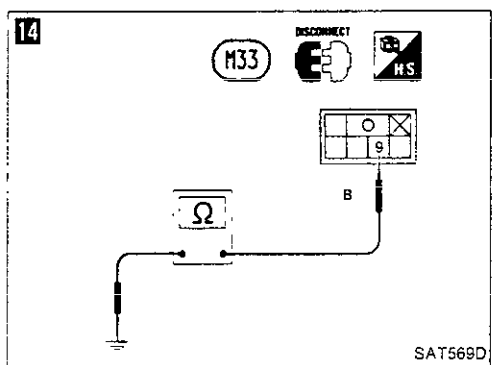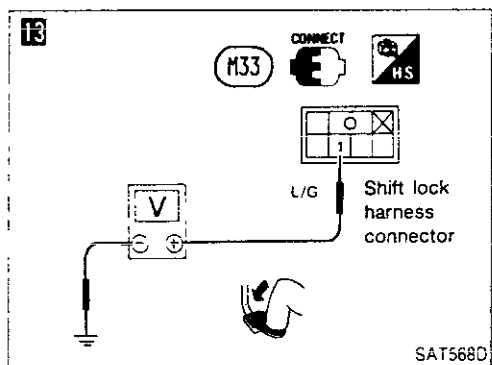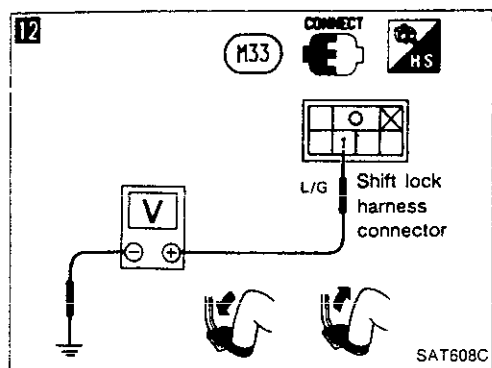

CHECK OUTPUT SIGNAL (SHIFT LOCK SOLENOID).

 1.



12 2. Check voltage between shift lock harness connector terminal ① and body ground.

Brake pedal	Voltage
Depressed	Battery voltage
Released	0V

3



13 4. Check voltage between shift lock harness connector terminal ① and ground with brake pedal depressed.
0V

N.G.

Check harness continuity between control unit harness terminal ① and shift lock solenoid harness terminal ①

14

O.K.

CHECK GROUND CIRCUIT FOR SHIFT LOCK SOLENOID.

1. Disconnect shift lock harness connector.
2. Check continuity between shift lock harness terminal ⑨ and ground.
Continuity should exist.

N.G.

Repair harness or connector.

O.K.

 
Check shift lock solenoid.
(Refer to "COMPONENT CHECK".)

N.G.

Replace A/T shift lock control device assembly.

O.K.

Reconnect shift lock harness connector.



Recheck shift lock operation.

N.G.

1. Perform control unit input/output signal inspection test.
2. If N.G., recheck harness connector connection.




O.K.

INSPECTION END

Diagnostic Procedure 2

SYMPTOM:

Ignition key cannot be removed when selector lever is set to "P" position or can be removed when selector lever is set to any position except "P".

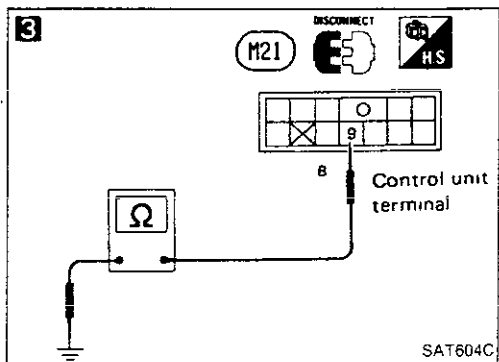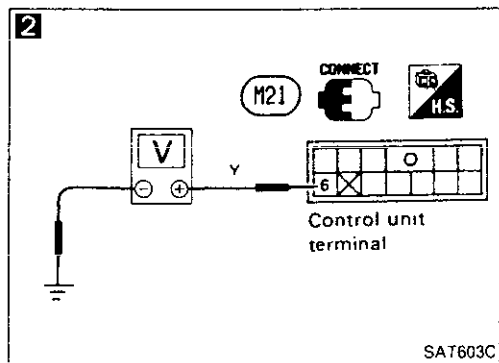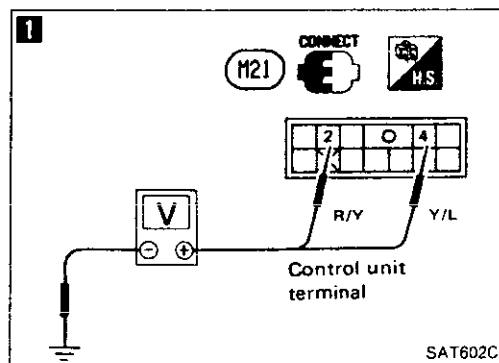

CHECK POWER SOURCE.

1. 
2. Check voltage between control unit harness terminals ②, ④ and ground.
Battery voltage should exist.

N.G.

Check the following items:

1. Harness continuity between battery and control unit harness terminals ②, ④
2. Fuse

O.K.

CHECK IGNITION SIGNAL.

1. 
2. Check voltage between control unit harness terminal ⑥ and ground.
0V
3. 
4. Check voltage between control unit harness terminal ⑥ and ground.
Battery voltage should exist.

N.G.

Check the following items:

1. Harness continuity between battery and control unit harness terminal ⑥
2. Fuse
3. Ignition switch

O.K.

CHECK GROUND CIRCUIT FOR CONTROL UNIT.

1. 
2. Disconnect control unit harness connector.
3. Check continuity between control unit harness terminal ⑨ and ground.
Continuity should exist.

N.G.





Repair harness or connector.

O.K.



A/T SHIFT LOCK SYSTEM

Diagnostic Procedure 2 (Cont'd)

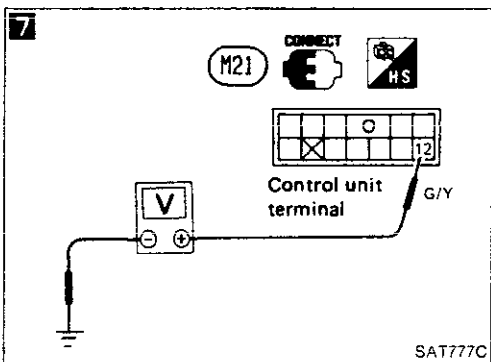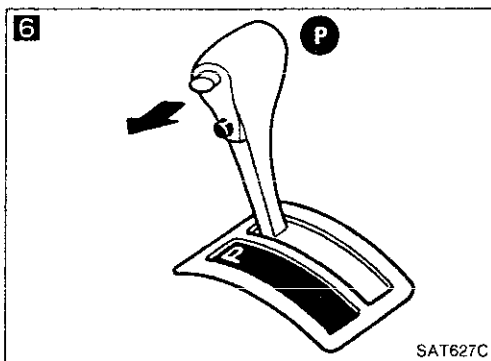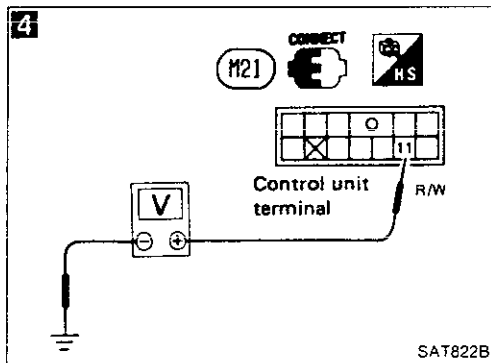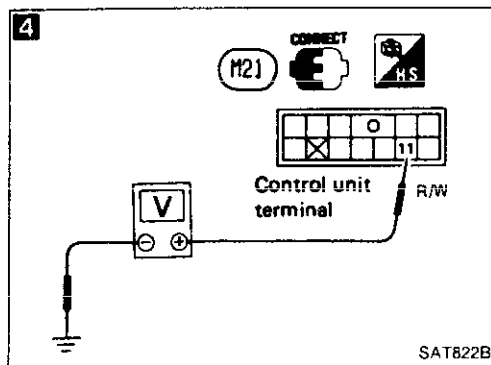

4

CHECK INPUT SIGNAL (KEY SWITCH).

1. Reconnect control unit harness connector.
- 2.

When ignition key cannot be removed, even if selector lever is in "P" position, use emergency lever.

3. Check voltage between control unit terminal ⑪ and ground
0V

N.G. → Check key switch.
(Refer to "COMPONENT CHECK".)

5

O.K.

- 1.
2. Check voltage between control unit harness terminal ⑪ and ground.
Battery voltage should exist.

N.G. → Check the following items.

1. Harness continuity between control unit harness terminal ⑪ and key switch harness terminal ⑪.
2. Harness continuity between key switch harness terminal ④ and fuse
3. Key switch (Refer to "COMPONENT CHECK".)

O.K.


CHECK INPUT SIGNAL (DETENTION SWITCH—KEY).

- 1.
2. Set selector lever to "P" position and release selector lever button.
3. Check voltage between control unit harness terminal 12 and ground.
0V


N.G. → Check detention switch—key.
(Refer to "COMPONENT CHECK".)

O.K. → **B**

Diagnostic Procedure 2 (Cont'd)

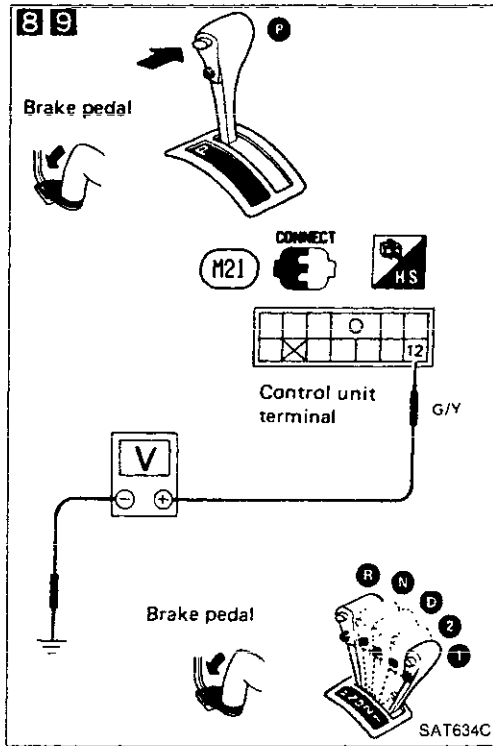

 CHECK INPUT SIGNAL (DETENTION SWITCH—KEY).



- 8** 1. Check voltage between control unit harness terminal ⑫ and ground with brake pedal depressed and selector lever button pushed.

Battery voltage should exist.


- 9** 2. Check voltage between control unit harness terminal ⑫ and ground with selector lever set in any position except "P".

Battery voltage should exist.

N.G.

Check the following items:

1. Harness continuity between control unit harness terminal ⑫ and detention switch harness terminal ⑫
2. Harness continuity between detention switch harness terminal ⑪ and key switch harness terminal ⑪
3. Detention switch—key (Refer to "COMPONENT CHECK".)

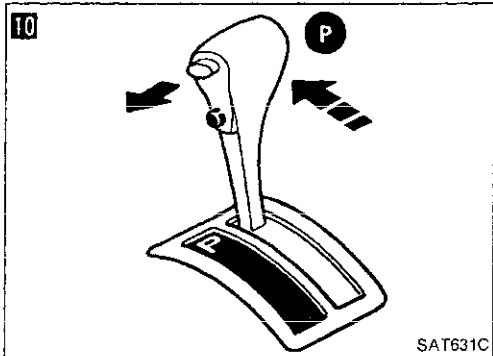


O.K.

Set selector lever to "P" position and release selector lever button.



11

 CHECK OUTPUT SIGNAL (KEY LOCK SIGNAL).



Check voltage between key lock solenoid harness terminal ⑧ and ground at the moment ignition key is turned from OFF to ON.

Battery voltage should exist for approximately 0.1 seconds.

N.G.

Check harness continuity between shift lock solenoid harness terminal ⑧ and control unit harness terminal ⑧.

O.K.

N.G.

Repair harness or connector.





Replace control unit.

O.K.


C


A/T SHIFT LOCK SYSTEM

Diagnostic Procedure 2 (Cont'd)

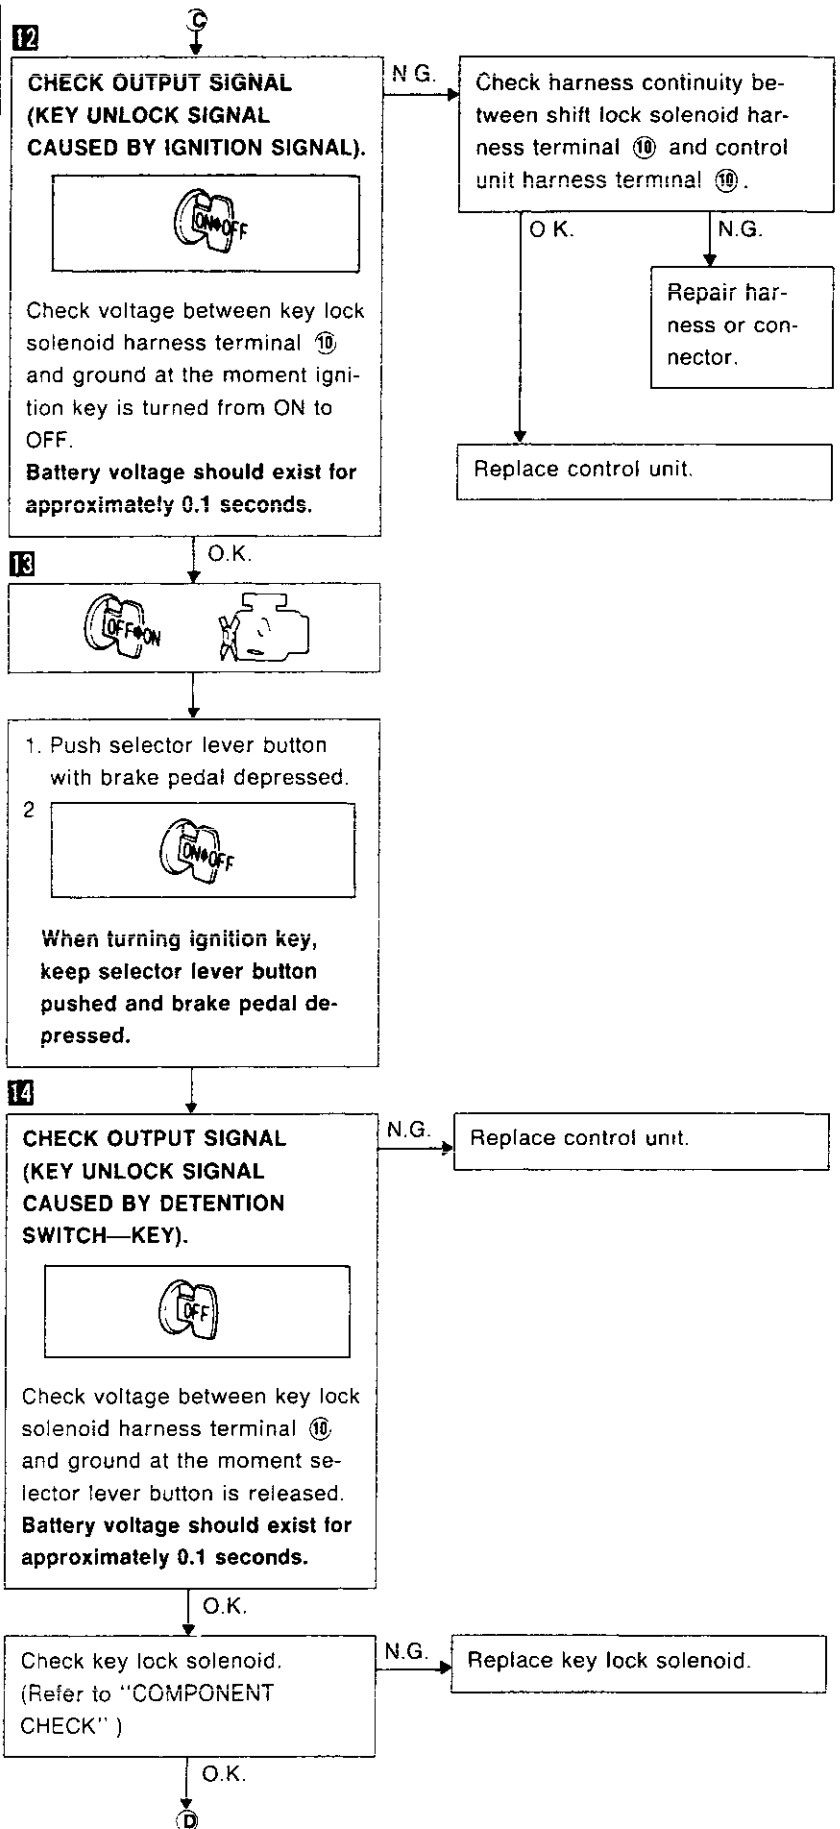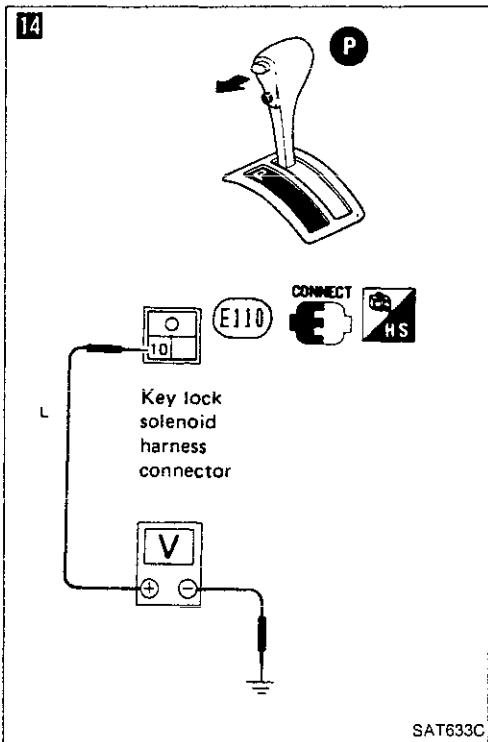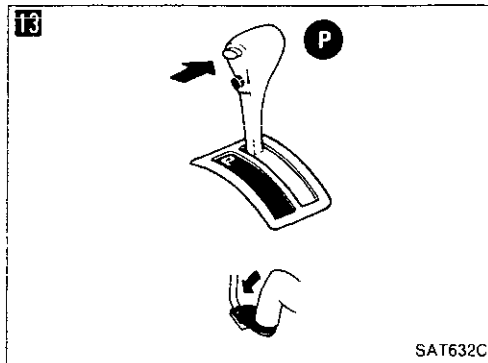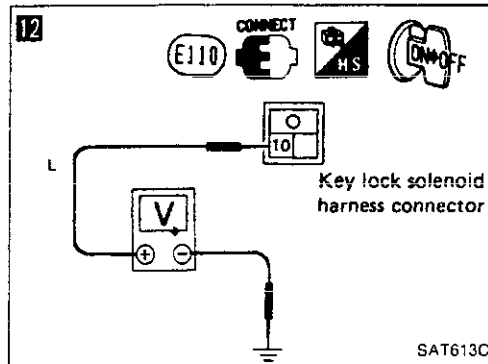

Diagnostic Procedure 2 (Cont'd)

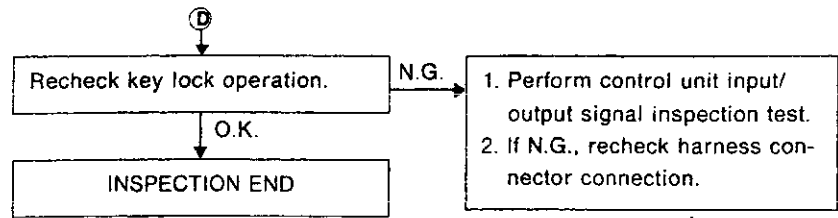

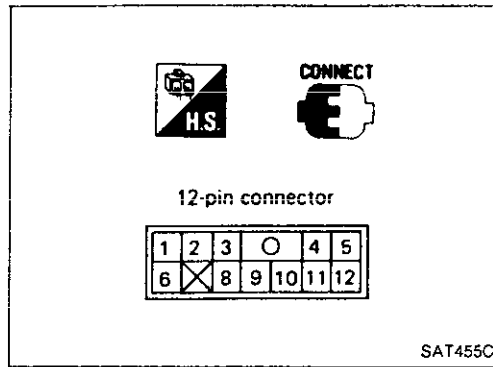


Shift Lock Control Unit Inspection

- Measure voltage between each terminal by following "SHIFT LOCK CONTROL UNIT INSPECTION TABLE".
- Pin connector terminal layout.

Shift Lock Control Unit Inspection (Cont'd)

SHIFT LOCK CONTROL UNIT INSPECTION TABLE (Data are reference values.)


Terminal No.		Item	Condition	Judgment standard
⊕	⊖			
1	9	Shift lock signal	 When selector lever is set in "P" position and brake pedal is depressed	Battery voltage
			Except above	0V
2		Power source	Any condition	Battery voltage
3		Stop lamp switch	When brake pedal is depressed	Battery voltage
			When brake pedal is released	0V
4		Power source		Battery voltage
5		Detention switch (Shift)	- When key is inserted into key cylinder and selector lever is set in "P" position with selector lever button pushed - When selector lever is set in any position except "P".	Battery voltage
			Except above	0V
6		Ignition signal		Battery voltage
8	10	Key lock signal	When ignition switch is turned from LOCK, OFF or ACC to ON.	Battery voltage (Approximately 0.1 seconds)
			Except above	0V
9	—	Ground	—	—
10	8	Key unlock signal	When selector lever is set in "P" position and ignition key is turned from ON to LOCK, OFF or ACC with selector lever button released.	Battery voltage (Approximately 0.1 seconds)
			Except above	0V
11	9	Key switch	When key is inserted into key cylinder	Battery voltage
			When key is removed from key cylinder	0V
12		Detention switch (Key)	- When key is inserted into key cylinder and selector lever is set in "P" position with selector lever button pushed - When selector lever is set in any position except "P"	Battery voltage
			Except above	0V

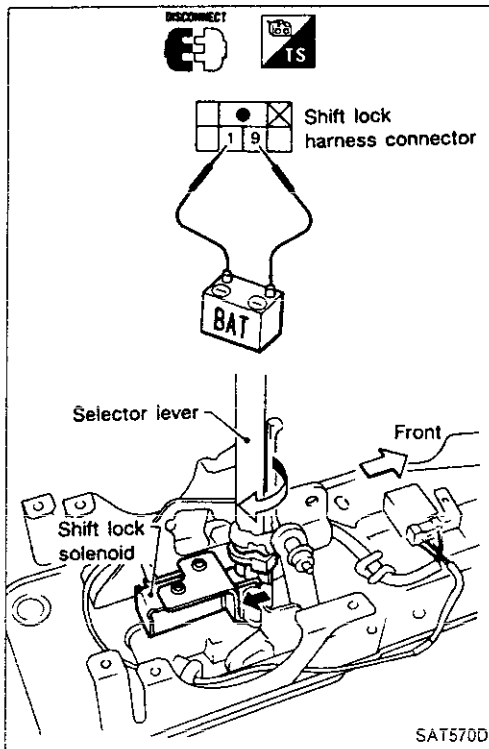

Component Check

SHIFT LOCK SOLENOID

- Check operation by applying battery voltage to shift lock harness connector.

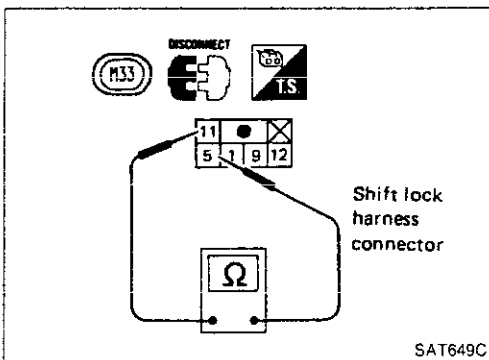


DETENTION SWITCH

Shift detention switch

- Check continuity between terminals ⑤ and ⑪ of shift lock harness connector.


Condition	Continuity
When selector lever is set in "P" position with selector lever button pushed or selector lever is set in any position except "P".	Yes
Except the above	No

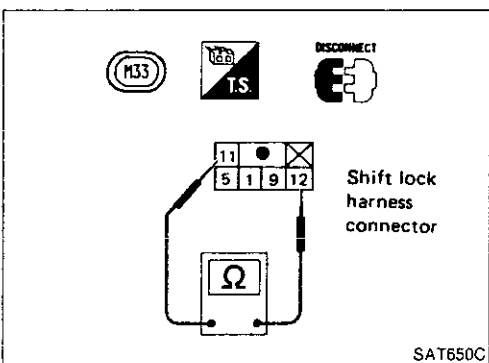

Key detention switch

- Check continuity between terminals ⑪ and ⑫ of shift lock harness connector.

Condition	Continuity
When selector lever is set in "P" position with selector lever button pushed or selector lever is set in any position except "P".	Yes
Except the above	No

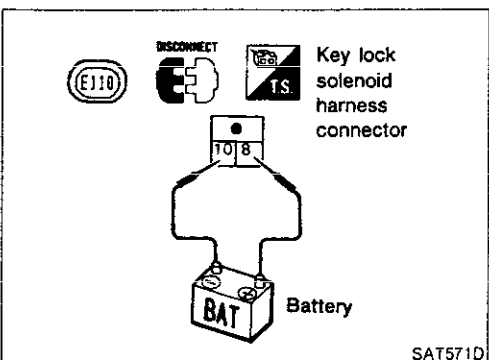


KEY LOCK SOLENOID

Operation of locking mechanism

- Check operation by applying battery voltage to key lock solenoid harness connector.


Operating sound must be emitted.

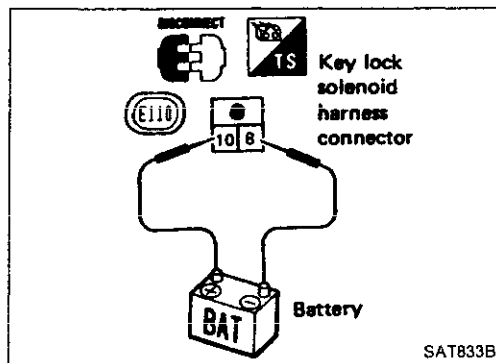

Component Check (Cont'd)

Operation of unlocking mechanism


- Check operation by applying battery voltage to key lock solenoid harness connector.
- Operating sound must be emitted.

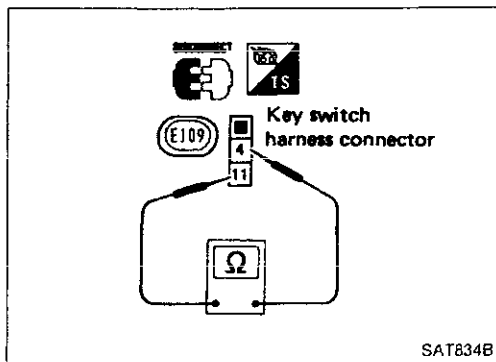

KEY SWITCH

- Check continuity between terminals ④ and ⑪ of key switch harness connector.

Condition	Continuity
When key is inserted into key cylinder	Yes
When key is removed from key cylinder	No

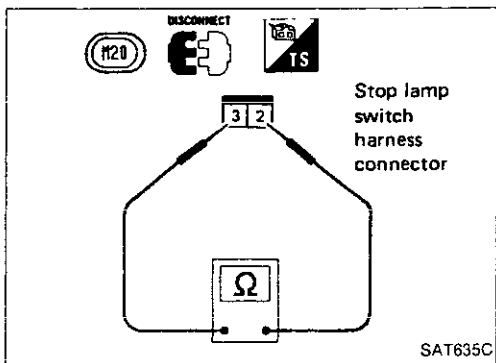

STOP LAMP SWITCH

- Check continuity between terminals ② and ③ of stop lamp switch harness connector.

Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

Check stop lamp switch after adjusting brake pedal — refer to section BR.

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications

Applied model	GA14DS		GA16DS		GA16DE
	Except Europe and Middle East	Europe and Middle East	Europe	Except Europe	
Automatic transaxle model	RL4F03A				
Automatic transaxle assembly					
Model code number	31X74	31X79	31X75	31X76	31X77
Transaxle gear ratio					
1st	2.861 (2.8611)*				
2nd	1.562 (1.5622)*				
3rd	1.000 (1.0000)*				
4th	0.697 (0.6979)*				
Reverse	2.310 (2.3103)*				
Final drive	3.827	4.072 (4.0721)*		3.827	
Recommended oil	Automatic transaxle fluid Type DEXRON™				
Oil capacity ℓ (Imp qt)	7.0 (6-1/8)				

(*): Gear ratio for Europe

Specifications and Adjustments

VEHICLE SPEED WHEN SHIFTING GEARS

Model 31X74

Throttle position	Vehicle speed km/h (MPH)						
	D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	51 - 59 (32 - 37)	94 - 102 (58 - 63)	—	141 - 149 (88 - 93)	85 - 93 (53 - 58)	39 - 47 (24 - 29)	47 - 55 (29 - 34)
Half throttle	25 - 33 (16 - 21)	46 - 54 (29 - 34)	81 - 89 (50 - 55)	52 - 60 (32 - 37)	34 - 42 (21 - 26)	8 - 16 (5 - 10)	47 - 55 (29 - 34)

Model 31X76

Throttle position	Vehicle speed km/h (MPH)						
	D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	50 - 58 (31 - 36)	92 - 100 (57 - 62)	—	139 - 147 (86 - 91)	83 - 91 (52 - 57)	39 - 47 (24 - 29)	47 - 55 (29 - 34)
Half throttle	25 - 33 (16 - 21)	45 - 53 (28 - 33)	81 - 89 (50 - 55)	51 - 59 (32 - 37)	34 - 42 (21 - 26)	7 - 15 (4 - 9)	47 - 55 (29 - 34)

Model 31X77

Throttle position	Vehicle speed km/h (MPH)						
	D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	51 - 59 (32 - 37)	94 - 102 (58 - 63)	—	141 - 149 (88 - 93)	85 - 93 (53 - 58)	39 - 47 (24 - 29)	48 - 56 (30 - 35)
Half throttle	29 - 37 (18 - 23)	50 - 58 (31 - 36)	94 - 102 (58 - 63)	62 - 70 (39 - 43)	40 - 48 (25 - 30)	8 - 16 (5 - 10)	48 - 56 (30 - 35)

Specifications and Adjustments (Cont'd)

Model 31X75 and 31X79

Throttle position	Vehicle speed km/h (MPH)						
	D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	48 - 56 (30 - 35)	88 - 96 (55 - 60)	—	133 - 141 (83 - 88)	80 - 88 (50 - 55)	37 - 45 (23 - 28)	45 - 53 (28 - 33)
Half throttle	23 - 31 (14 - 19)	49 - 57 (30 - 35)	92 - 100 (57 - 62)	65 - 73 (40 - 45)	32 - 40 (20 - 25)	7 - 15 (4 - 9)	45 - 53 (28 - 33)

VEHICLE SPEED WHEN PERFORMING
LOCK-UP

Model 31X74 and 31X76

Throttle position	Gear position	Vehicle speed km/h (MPH)
		Lock-up "ON"
Half throttle	D ₄	65 - 73 (40 - 45)

Model 31X77

Throttle position	Gear position	Vehicle speed km/h (MPH)
		Lock-up "ON"
Half throttle	D ₄	64 - 72 (40 - 45)

Model 31X75 and 31X79

Throttle position	Gear position	Vehicle speed km/h (MPH)
		Lock-up "ON"
Half throttle	D ₄	90 - 98 (56 - 61)

STALL REVOLUTION

Engine		Stall revolution rpm
GA14DS	Europe	2,200 - 2,500
	Except Europe	2,150 - 2,450
GA16DS	Europe and Middle East	2,450 - 2,750
	Except Europe and Middle East	2,400 - 2,700
GA16DE		2,450 - 2,750

THROTTLE WIRE ADJUSTMENT

Unit: mm (in)

Throttle wire stroke	40 - 42 (1.57 - 1.65)
----------------------	-----------------------

LINE PRESSURE

Engine speed rpm	Line pressure kPa (bar, kg/cm ² , psi)			
	R range	D range	2 range	1 range
Idle	883 (8.83, 9.0, 128)	539 (5.39, 5.5, 78)	588 (5.88, 6.0, 85)	883 (8.83, 9.0, 128)
Stall	1,765 (17.65, 18.0, 256)	1,079 (10.79, 11.0, 156)	883 (8.83, 9.0, 128)	1,079 (10.79, 11.0, 156)

Specifications and Adjustments (Cont'd)

CONTROL VALVES

Control valve return springs

Unit: mm (in)

Parts			Part No.	Free length	Outer diameter
Model					
Upper body	Pressure modifier valve spring	31X74, 31X75, 31X76, 31X79	31742-31X02	25.0 (0.984)	8.0 (0.315)
		31X77	31742-31X10	25.0 (0.984)	8.2 (0.323)
	Kickdown modulator valve spring		31742-31X03	40.5 (1.594)	9.0 (0.354)
	1-2 accumulator valve spring	31X74, 31X75, 31X76, 31X79	31742-31X04	51.14 (2.0134)	17.0 (0.669)
		31X77	31742-31X63	50.9 (2.004)	12.6 (0.496)
	3-2 timing valve spring		31736-21X00	26.3 (1.035)	7.2 (0.283)
	1st reducing valve spring		31835-21X08	22.6 (0.890)	7.3 (0.287)
	Torque converter relief valve spring		31742-31X06	23.5 (0.925)	7.4 (0.291)
	Throttle modulator valve spring	31X74, 31X76, 31X77	31742-31X07	29.5 (1.161)	5.5 (0.217)
		31X75, 31X79	31742-31X65	29.5 (1.161)	5.5 (0.217)
	4th speed cut valve spring	31X74, 31X76, 31X77	31835-21X05	23.3 (0.917)	6.2 (0.244)
		31X75, 31X79	31737-21X00	25.4 (1.000)	7.3 (0.287)
	Lock-up control valve spring		31742-31X08	39.5 (1.555)	5.0 (0.197)
	4-2 sequence valve spring		31742-31X09	39.5 (1.555)	5.1 (0.201)
	Oil cooler relief valve spring		31872-31X00	17.02 (0.6701)	8.0 (0.315)
Lower body	Throttle valve and detent valve spring	31X74, 31X75, 31X76, 31X79	31802-31X00	31.0 (1.220)	10.0 (0.394)
		31X77	31802-31X01	33.0 (1.299)	10.0 (0.394)
	Pressure regulator valve spring		31742-31X00	52.24 (2.0567)	15.0 (0.591)
	3-4 shift valve spring		31762-31X00	52.0 (2.047)	8.0 (0.315)
	2-3 shift valve spring		31762-31X01	52.7 (2.075)	7.0 (0.276)
	1-2 shift valve spring		31762-31X02	45.9 (1.807)	5.3 (0.209)
	Overrun clutch control valve spring		31742-31X60	48.9 (1.925)	7.0 (0.276)

Specifications and Adjustments (Cont'd)

CLUTCH AND BRAKES

Model	31X74	31X79	31X75	31X76	31X77	
Reverse clutch						
Number of drive plates	2					
Number of driven plates	2					
Drive plate thickness	mm (in)					
Standard	2.0 (0.079)					
Wear limit	1.8 (0.071)					
Clearance	mm (in)					
Standard	0.5 - 0.8 (0.020 - 0.031)					
Allowable limit	1.2 (0.047)					
Thickness of retaining plates	Thickness mm (in)			Part number		
	4.4 (0.173)			31537-31X00		
	4.6 (0.181)			31537-31X01		
	4.8 (0.189)			31537-31X02		
	5.0 (0.197)			31537-31X03		
	5.2 (0.205)			31537-31X04		
High clutch						
Number of drive plates	3					
Number of driven plates	5					
Drive plate thickness	mm (in)					
Standard	2.0 (0.079)					
Wear limit	1.8 (0.071)					
Clearance	mm (in)					
Standard	1.4 - 1.8 (0.055 - 0.071)					
Allowable limit	2.4 (0.094)					
Thickness of retaining plates	Thickness mm (in)		Part number		Thickness mm (in)	Part number
	3.6 (0.142)		31537-31X10		3.6 (0.142)	31537-31X10
	3.8 (0.150)		31537-31X11		3.8 (0.150)	31537-31X11
	4.0 (0.157)		31537-31X12		4.0 (0.157)	31537-31X12
	4.2 (0.165)		31537-31X13		4.2 (0.165)	31537-31X13
	4.4 (0.173)		31537-31X14		4.4 (0.173)	31537-31X14
	4.6 (0.181)		31537-31X15		4.6 (0.181)	31537-31X15
					4.8 (0.189)	31537-31X16

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Specifications and Adjustments (Cont'd)

Model	31X74	31X79	31X75	31X76	31X77
Forward clutch					
Number of drive plates	5				
Number of driven plates	5				
Drive plate thickness	mm (in)				
Standard	1.8 (0.071)				
Wear limit	1.6 (0.063)				
Clearance	mm (in)				
Standard	0.45 - 0.85 (0.0177 - 0.0335)				
Allowable limit	1.85 (0.0728)				
Thickness of retaining plate	Thickness mm (in)			Part number	
	3.6 (0.142)			31537-31X60	
	3.8 (0.150)			31537-31X61	
	4.0 (0.157)			31537-31X62	
	4.2 (0.165)			31537-31X63	
	4.4 (0.173)			31537-31X64	
	4.6 (0.181)			31537-31X65	
Overrun clutch					
Number of drive plates	3				
Number of driven plates	5				
Drive plate thickness	mm (in)				
Standard	1.6 (0.063)				
Wear limit	1.4 (0.055)				
Clearance	mm (in)				
Standard	1.0 - 1.4 (0.039 - 0.055)				
Allowable limit	2.0 (0.079)				
Thickness of retaining plate	Thickness mm (in)			Part number	
	3.6 (0.142)			31537-31X70	
	3.8 (0.150)			31537-31X71	
	4.0 (0.157)			31537-31X72	
	4.2 (0.165)			31537-31X73	
	4.4 (0.173)			31537-31X74	

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Specifications and Adjustments (Cont'd)

Model	31X74	31X79	31X75	31X76	31X77
Low & reverse brake					
Number of drive plates	4		5		
Number of driven plates	4		5		
Drive plate thickness	mm (in)				
Standard	2.0 (0.079)				
Wear limit	1.8 (0.071)				
Clearance	mm (in)				
Standard	1.4 - 1.8 (0.055 - 0.071)		1.4 - 1.8 (0.055 - 0.071)		
Allowable limit	2.6 (0.102)		2.8 (0.110)		
Thickness of retaining plate	Thickness mm (in)			Part number	
	3.6 (0.142)			31667-31X10	
	3.8 (0.150)			31667-31X11	
	4.0 (0.157)			31667-31X12	
	4.2 (0.165)			31667-31X13	
	4.4 (0.173)			31667-31X14	
	4.6 (0.181)			31667-31X15	
Brake band					
Anchor end bolt tightening torque	N-m (kg-m, ft-lb)				
	4 - 6 (0.4 - 0.6, 2.9 - 4.3)				
Number of returning revolutions for anchor end bolt	2.5 ± 0.125				
Lock nut tightening torque	N-m (kg-m, ft-lb)				
	31 - 42 (3.2 - 4.3, 23 - 31)				

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Specifications and Adjustments (Cont'd)

Clutch and brake return springs

Unit: mm (in)

Return spring		Free length	Outer diameter
Forward clutch (Overrun clutch) (16 pcs)	Inner	26.3 (1.035)	7.7 (0.303)
	Outer	26.6 (1.047)	10.6 (0.417)

OIL PUMP

Oil pump side clear- ance mm (in)	0.02 - 0.04 (0.0008 - 0.0016)	
Thickness of inner gears and outer gears	Inner gear	
	Thickness mm (in)	Part number
	9.99 - 10.00 (0.3933 - 0.3937)	31346-31X00
	9.98 - 9.99 (0.3929 - 0.3933)	31346-31X01
	9.97 - 9.98 (0.3925 - 0.3929)	31346-31X02
	Outer gear	
	Thickness mm (in)	Part number
	9.99 - 10.00 (0.3933 - 0.3937)	31347-31X00
	9.98 - 9.99 (0.3929 - 0.3933)	31347-31X01
	9.97 - 9.98 (0.3925 - 0.3929)	31347-31X02
Clearance between oil pump housing and outer gear mm (in)		
Standard	0.08 - 0.15 (0.0031 - 0.0059)	
Allowable limit	0.15 (0.0059)	
Oil pump cover seal ring clearance mm (in)		
Standard	0.07 - 0.19 (0.0028 - 0.0075)	
Allowable limit	0.19 (0.0075)	

INPUT SHAFT

Input shaft seal ring clearance mm (in)		
Standard	0.08 - 0.23 (0.0031 - 0.0091)	
Allowable limit	0.23 (0.0091)	

PLANETARY CARRIER

Clearance between planetary carrier and pinion washer mm (in)	
Standard	0.15 - 0.70 (0.0059 - 0.0276)
Allowable limit	0.80 (0.0315)

FINAL DRIVE

Differential side gear clearance

Clearance between side gear and differential case with washer mm (in)	0.1 - 0.2 (0.004 - 0.008)
---	---------------------------

Differential side gear thrust washers for model 31X74, 31X76 and 31X79

Thickness mm (in)	Part number
0.75 - 0.80 (0.0295 - 0.0315)	38424-31X00
0.80 - 0.85 (0.0315 - 0.0335)	38424-31X01
0.85 - 0.90 (0.0335 - 0.0354)	38424-31X02
0.90 - 0.95 (0.0354 - 0.0374)	38424-31X04

Differential side gear thrust washers for model 31X75 and 31X77

Thickness mm (in)	Part number
0.75 - 0.80 (0.0295 - 0.0315)	38424-D2111
0.80 - 0.85 (0.0315 - 0.0335)	38424-D2112
0.85 - 0.90 (0.0335 - 0.0354)	38424-D2113
0.90 - 0.95 (0.0354 - 0.0374)	38424-D2114
0.95 - 1.00 (0.0374 - 0.0394)	38424-D2115

Differential case end play

Differential case end play mm (in)	0 - 0.15 (0 - 0.0059)
---------------------------------------	-----------------------

Specifications and Adjustments (Cont'd)

Differential side bearing adjusting shims

Thickness mm (in)	Part number
0.44 (0.0173)	38454-M8000
0.48 (0.0189)	38454-M8001
0.56 (0.0220)	38454-M8003
0.60 (0.0236)	38454-M8004
0.64 (0.0252)	38454-M8005
0.68 (0.0268)	38454-M8006
0.72 (0.0283)	38454-M8007
0.76 (0.0299)	38454-M8008
0.80 (0.0315)	38454-M8009
0.84 (0.0331)	38454-M8010
0.88 (0.0346)	38454-M8011

Reduction gear bearing adjusting shims

Thickness mm (in)	Part number
1.10 (0.0433)	31438-31X00
1.14 (0.0449)	31438-31X01
1.18 (0.0465)	31438-31X02
1.22 (0.0480)	31438-31X03
1.26 (0.0496)	31438-31X04
1.30 (0.0512)	31438-31X05
1.34 (0.0528)	31438-31X06
1.38 (0.0543)	31438-31X07
1.42 (0.0559)	31438-31X08
1.46 (0.0575)	31438-31X09
1.50 (0.0591)	31438-31X10
1.54 (0.0606)	31438-31X11
1.58 (0.0622)	31438-31X12
1.62 (0.0638)	31438-31X13
1.66 (0.0654)	31438-31X14
1.70 (0.0669)	31438-31X15
1.74 (0.0685)	31438-31X16
1.78 (0.0701)	31438-31X17
1.82 (0.0717)	31438-31X18
1.86 (0.0732)	31438-31X19
1.90 (0.0748)	31438-31X20
1.92 (0.0756)	31439-31X60
1.94 (0.0764)	31438-31X21
1.96 (0.0772)	31439-31X61
1.98 (0.0780)	31438-31X22
2.00 (0.0787)	31439-31X62
2.02 (0.0795)	31438-31X23
2.04 (0.0803)	31439-31X63
2.06 (0.0811)	31438-31X24
2.08 (0.0819)	31439-31X64
2.10 (0.0827)	31438-31X60
2.12 (0.0835)	31439-31X65
2.14 (0.0843)	31438-31X61
2.16 (0.0850)	31439-31X66
2.18 (0.0858)	31438-31X62
2.20 (0.0866)	31439-31X67
2.22 (0.0874)	31438-31X63
2.24 (0.0882)	31439-31X68
2.26 (0.0890)	31438-31X64
2.28 (0.0898)	31439-31X69
2.30 (0.0906)	31438-31X65
2.34 (0.0921)	31438-31X66
2.38 (0.0937)	31438-31X67
2.42 (0.0953)	31438-31X68
2.46 (0.0969)	31438-31X69
2.50 (0.0984)	31438-31X70
2.54 (0.1000)	31438-31X71
2.58 (0.1016)	31438-31X72
2.62 (0.1031)	31438-31X73
2.66 (0.1047)	31438-31X74
2.70 (0.1063)	31438-31X75
2.74 (0.1079)	31438-31X76
2.78 (0.1094)	31438-31X77
2.82 (0.1110)	31438-31X78

REDUCTION GEAR

Bearing preload

Reduction gear bearing preload N·m (kg-cm, in-lb)	0.11 - 0.69 (1.1 - 7.0, 0.95 - 6.08)
---	--------------------------------------

Specifications and Adjustments (Cont'd)

Table for selecting reduction gear bearing adjusting shim

Unit: mm (in)

Dimension "T"	Suitable shim(s)
1.13 - 1.17 (0.0445 - 0.0461)	1.10 (0.0433)
1.17 - 1.21 (0.0461 - 0.0476)	1.14 (0.0449)
1.21 - 1.25 (0.0476 - 0.0492)	1.18 (0.0465)
1.25 - 1.29 (0.0492 - 0.0508)	1.22 (0.0480)
1.29 - 1.33 (0.0508 - 0.0524)	1.26 (0.0496)
1.33 - 1.37 (0.0524 - 0.0539)	1.30 (0.0512)
1.37 - 1.41 (0.0539 - 0.0555)	1.34 (0.0528)
1.41 - 1.45 (0.0555 - 0.0571)	1.38 (0.0543)
1.45 - 1.49 (0.0571 - 0.0587)	1.42 (0.0559)
1.49 - 1.53 (0.0587 - 0.0602)	1.46 (0.0575)
1.53 - 1.57 (0.0602 - 0.0618)	1.50 (0.0591)
1.57 - 1.61 (0.0618 - 0.0634)	1.54 (0.0606)
1.61 - 1.65 (0.0634 - 0.0650)	1.58 (0.0622)
1.65 - 1.69 (0.0650 - 0.0665)	1.62 (0.0638)
1.69 - 1.73 (0.0665 - 0.0681)	1.66 (0.0654)
1.73 - 1.77 (0.0681 - 0.0697)	1.70 (0.0669)
1.77 - 1.81 (0.0697 - 0.0713)	1.74 (0.0685)
1.81 - 1.85 (0.0713 - 0.0728)	1.78 (0.0701)
1.85 - 1.89 (0.0728 - 0.0744)	1.82 (0.0717)
1.89 - 1.93 (0.0744 - 0.0760)	1.86 (0.0732)
1.93 - 1.97 (0.0760 - 0.0776)	1.90 (0.0748)
1.97 - 2.01 (0.0776 - 0.0791)	1.94 (0.0764)
2.01 - 2.05 (0.0791 - 0.0807)	1.98 (0.0780)
2.05 - 2.09 (0.0807 - 0.0823)	2.02 (0.0795)
2.09 - 2.13 (0.0823 - 0.0839)	2.06 (0.0811)
2.13 - 2.17 (0.0839 - 0.0854)	2.10 (0.0827)
2.17 - 2.21 (0.0854 - 0.0870)	2.14 (0.0843)
2.21 - 2.25 (0.0870 - 0.0886)	2.18 (0.0858)
2.25 - 2.29 (0.0886 - 0.0902)	2.22 (0.0874)
2.29 - 2.33 (0.0902 - 0.0917)	2.26 (0.0890)
2.33 - 2.37 (0.0917 - 0.0933)	2.30 (0.0906)
2.37 - 2.41 (0.0933 - 0.0949)	2.34 (0.0921)
2.41 - 2.45 (0.0949 - 0.0965)	2.38 (0.0937)
2.45 - 2.49 (0.0965 - 0.0980)	2.42 (0.0953)
2.49 - 2.53 (0.0980 - 0.0996)	2.46 (0.0969)
2.53 - 2.57 (0.0996 - 0.1012)	2.50 (0.0984)
2.57 - 2.61 (0.1012 - 0.1028)	2.54 (0.1000)
2.61 - 2.65 (0.1028 - 0.1043)	2.58 (0.1016)
2.65 - 2.69 (0.1043 - 0.1059)	2.62 (0.1031)
2.69 - 2.73 (0.1059 - 0.1075)	2.66 (0.1047)
2.73 - 2.77 (0.1075 - 0.1091)	2.70 (0.1063)
2.77 - 2.81 (0.1091 - 0.1106)	2.74 (0.1079)
2.81 - 2.85 (0.1106 - 0.1122)	2.78 (0.1094)
2.85 - 2.89 (0.1122 - 0.1138)	2.82 (0.1110)

OUTPUT SHAFT

Seal ring clearance

Output shaft seal ring clearance mm (in)	
Standard	0.10 - 0.25 (0.0039 - 0.0098)
Allowable limit	0.25 (0.0098)

Bearing preload

Output shaft bearing preload N·m (kg-cm, in-lb)	
	0.25 - 0.88 (2.5 - 9.0, 2.2 - 7.8)

Specifications and Adjustments (Cont'd)

Output shaft bearing adjusting spacers

Thickness mm (in)	Part number
5.62 (0.2213)	31437-31X00
5.66 (0.2228)	31437-31X01
5.70 (0.2244)	31437-31X02
5.74 (0.2260)	31437-31X03
5.78 (0.2276)	31437-31X04
5.82 (0.2291)	31437-31X05
5.86 (0.2307)	31437-31X06
5.90 (0.2323)	31437-31X07
5.94 (0.2339)	31437-31X08
5.98 (0.2354)	31437-31X09
6.02 (0.2370)	31437-31X10
6.06 (0.2386)	31437-31X11
6.10 (0.2402)	31437-31X12
6.14 (0.2417)	31437-31X13
6.18 (0.2433)	31437-31X14
6.22 (0.2449)	31437-31X15
6.26 (0.2465)	31437-31X16
6.30 (0.2480)	31437-31X17
6.34 (0.2496)	31437-31X18
6.38 (0.2512)	31437-31X19
6.42 (0.2528)	31437-31X20
6.46 (0.2543)	31437-31X21
6.50 (0.2559)	31437-31X22
6.54 (0.2575)	31437-31X23
6.58 (0.2591)	31437-31X24
6.62 (0.2606)	31437-31X60
6.64 (0.2614)	31437-31X78
6.66 (0.2622)	31437-31X61
6.68 (0.2630)	31437-31X79
6.70 (0.2638)	31437-31X62
6.72 (0.2646)	31437-31X80
6.74 (0.2654)	31437-31X63
6.76 (0.2661)	31437-31X81
6.78 (0.2669)	31437-31X64
6.80 (0.2677)	31437-31X82
6.82 (0.2685)	31437-31X65
6.84 (0.2693)	31437-31X83
6.86 (0.2701)	31437-31X66
6.88 (0.2709)	31437-31X84
6.90 (0.2717)	31437-31X67
6.92 (0.2724)	31437-31X46
6.94 (0.2732)	31437-31X68
6.96 (0.2740)	31437-31X47
6.98 (0.2748)	31437-31X69
7.00 (0.2756)	31437-31X48
7.02 (0.2764)	31437-31X70
7.06 (0.2780)	31437-31X71
7.10 (0.2795)	31437-31X72
7.14 (0.2811)	31437-31X73
7.18 (0.2827)	31437-31X74
7.22 (0.2843)	31437-31X75

Table for selecting output shaft bearing adjusting spacer

Unit: mm (in)	
Dimension "T"	Suitable spacer
5.65 - 5.69 (0.2224 - 0.2240)	5.62 (0.2213)
5.69 - 5.73 (0.2240 - 0.2256)	5.66 (0.2228)
5.73 - 5.77 (0.2256 - 0.2272)	5.70 (0.2244)
5.77 - 5.81 (0.2272 - 0.2287)	5.74 (0.2260)
5.81 - 5.85 (0.2287 - 0.2303)	5.78 (0.2276)
5.85 - 5.89 (0.2303 - 0.2319)	5.82 (0.2291)
5.89 - 5.93 (0.2319 - 0.2335)	5.86 (0.2307)
5.93 - 5.97 (0.2335 - 0.2350)	5.90 (0.2323)
5.97 - 6.01 (0.2350 - 0.2366)	5.94 (0.2339)
6.01 - 6.05 (0.2361 - 0.2382)	5.98 (0.2354)
6.05 - 6.09 (0.2382 - 0.2398)	6.02 (0.2370)
6.09 - 6.13 (0.2398 - 0.2413)	6.06 (0.2386)
6.13 - 6.17 (0.2413 - 0.2429)	6.10 (0.2402)
6.17 - 6.21 (0.2429 - 0.2445)	6.14 (0.2417)
6.21 - 6.25 (0.2445 - 0.2461)	6.18 (0.2433)
6.25 - 6.29 (0.2461 - 0.2476)	6.22 (0.2449)
6.29 - 6.33 (0.2476 - 0.2492)	6.26 (0.2465)
6.33 - 6.37 (0.2492 - 0.2508)	6.30 (0.2480)
6.37 - 6.41 (0.2508 - 0.2524)	6.34 (0.2496)
6.41 - 6.45 (0.2524 - 0.2539)	6.38 (0.2512)
6.45 - 6.49 (0.2539 - 0.2555)	6.42 (0.2528)
6.49 - 6.53 (0.2555 - 0.2571)	6.46 (0.2543)
6.53 - 6.57 (0.2571 - 0.2587)	6.50 (0.2559)
6.57 - 6.61 (0.2587 - 0.2602)	6.54 (0.2575)
6.61 - 6.65 (0.2602 - 0.2618)	6.58 (0.2591)
6.65 - 6.69 (0.2618 - 0.2634)	6.62 (0.2606)
6.69 - 6.73 (0.2634 - 0.2650)	6.66 (0.2622)
6.73 - 6.77 (0.2650 - 0.2665)	6.70 (0.2638)
6.77 - 6.81 (0.2665 - 0.2681)	6.74 (0.2654)
6.81 - 6.85 (0.2681 - 0.2697)	6.78 (0.2669)
6.85 - 6.89 (0.2697 - 0.2713)	6.82 (0.2685)
6.89 - 6.93 (0.2713 - 0.2728)	6.86 (0.2701)
6.93 - 6.97 (0.2728 - 0.2744)	6.90 (0.2717)
6.97 - 7.01 (0.2744 - 0.2760)	6.94 (0.2732)
7.01 - 7.05 (0.2760 - 0.2776)	6.98 (0.2748)
7.05 - 7.09 (0.2776 - 0.2791)	7.02 (0.2764)
7.09 - 7.13 (0.2791 - 0.2807)	7.06 (0.2780)
7.13 - 7.17 (0.2807 - 0.2823)	7.10 (0.2795)
7.17 - 7.21 (0.2823 - 0.2839)	7.14 (0.2811)
7.21 - 7.25 (0.2839 - 0.2854)	7.18 (0.2827)
7.25 - 7.29 (0.2854 - 0.2870)	7.22 (0.2843)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Specifications and Adjustments (Cont'd)

BEARING RETAINER

Seal ring clearance

Bearing retainer seal ring clearance mm (in)	
Standard	0.10 - 0.25 (0.0039 - 0.0098)
Allowable limit	0.25 (0.0098)

TOTAL END PLAY

Total end play mm (in)	
	0.25 - 0.55 (0.0098 - 0.0217)

Bearing races for adjusting total end play

Thickness mm (in)	Part number
0.6 (0.024)	31435-31X01
0.8 (0.031)	31435-31X02
1.0 (0.039)	31435-31X03
1.2 (0.047)	31435-31X04
1.4 (0.055)	31435-31X05
1.6 (0.063)	31435-31X06
1.8 (0.071)	31435-31X07
2.0 (0.079)	31435-31X08
2.2 (0.087)	31435-31X09

REVERSE CLUTCH END PLAY

Reverse clutch end play mm (in)	
	0.65 - 1.00 (0.0256 - 0.0394)

Thrust washers for adjusting reverse clutch end play

Thickness mm (in)	Part number
0.65 (0.0256)	31508-31X00
0.80 (0.0315)	31508-31X01
0.95 (0.0374)	31508-31X02
1.10 (0.0433)	31508-31X03
1.25 (0.0492)	31508-31X04
1.40 (0.0551)	31508-31X05
1.55 (0.0610)	31508-31X06

ACCUMULATOR

O-ring

Unit: mm (in)

Accumulator	Inner diameter (Small)	Inner diameter (Large)
3-R accumulator	26.9 (1.059)	44.2 (1.740)
N-D accumulator	34.6 (1.362)	39.4 (1.551)

Return spring

Unit: mm (in)

Accumulator	Free length	Outer diameter
3-R accumulator spring	56.4 (2.220)	21.0 (0.827)
N-D accumulator spring	43.5 (1.713)	28.0 (1.102)

BAND SERVO

Return spring

Unit: mm (in)

Return spring	Free length	Outer diameter
2nd servo return spring	32.5 (1.280)	25.9 (1.020)
O.D. servo return spring	31.0 (1.220)	21.7 (0.854)

REMOVAL AND INSTALLATION

Distance between end of converter housing and torque converter	21.1 mm (0.831 in) or more
Drive plate runout limit	0.5 mm (0.020 in)

SECTION TF

CONTENTS

PREPARATION	TF- 2
-------------------	-------







VTY10A (GA16DS engine models)	
ON-VEHICLE SERVICE	TF- 7
REMOVAL AND INSTALLATION	TF-10
MAJOR OVERHAUL	TF-12
PRE-DISASSEMBLY INSPECTION	TF-14
TOOTH CONTACT	TF-17
DISASSEMBLY	TF-19
REPAIR FOR COMPONENT PARTS	TF-20
ADJUSTMENT	TF-28
ASSEMBLY	TF-36

FTY10A (SR20DET engine models)	
ON-VEHICLE SERVICE	TF-37
REMOVAL AND INSTALLATION	TF-38
MAJOR OVERHAUL	TF-40
PRE-DISASSEMBLY INSPECTION	TF-42
TOOTH CONTACT	TF-45
DISASSEMBLY	TF-47
REPAIR FOR COMPONENT PARTS	TF-48
ADJUSTMENT	TF-59
ASSEMBLY	TF-67

VTY10A & FTY10A	
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	TF-68





SPECIAL SERVICE TOOLS

*: Special tool or commercial equivalent

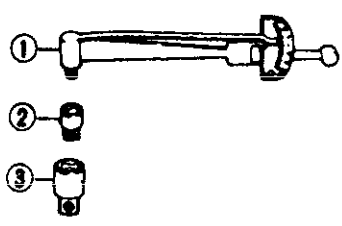
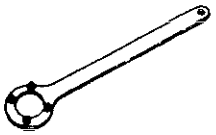
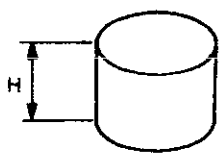
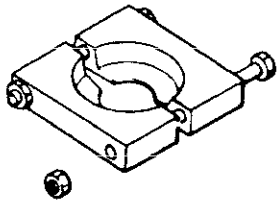
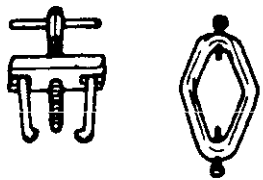
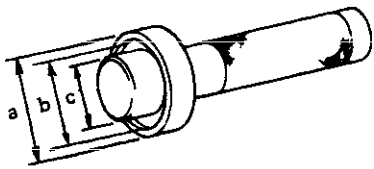
Tool number Tool name	Description
ST3127S000* Preload gauge ① GG91030000 Torque wrench ② HT62940000 Socket adapter ③ HT62900000 Socket adapter	 Measuring pinion bearing preload
ST38060002* Pinion flange wrench	 Removing and installing pinion nut
KV38101900* Master gauge	 H: 20 mm (0.79 in) Selecting hypoid gear bearing adjusting shim
ST30021000* Puller	 Removing hypoid gear and hypoid gear bearing Removing countershaft bearing
ST30031000* Puller	
ST33051001* Puller	 ① Removing ring gear bearing (R.H. side) ② Removing front differential side bearing (FTY10A)
ST33290001* Puller	 ① Removing pinion oil seal and drive shaft oil seal ② Removing front cover oil seal (FTY10A) ③ Removing adapter oil seal (VTY10A)
ST33230000* Drift	 a: 51 mm (2.01 in) dia. b: 41 mm (1.61 in) dia. c: 28.5 mm (1.122 in) dia. ① Installing drive shaft oil seal ② Installing front differential side bearing (FTY10A)

PREPARATION




*: Special tool or commercial equivalent

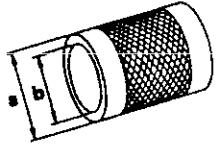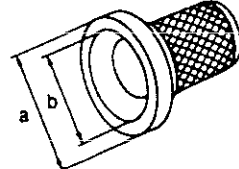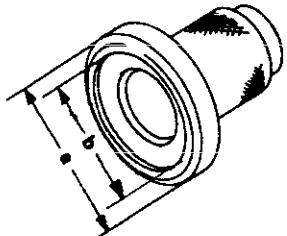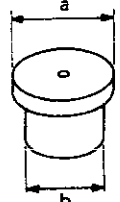Tool number Tool name	Description
ST33200000 Drift	 a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia. Installing companion flange (FTY10A)
ST33400001* Drift	 a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia. Installing hypoid gear bearing
ST30613000* Drift	 a: 72 mm (2.83 in) dia. b: 48 mm (1.89 in) dia. ① Installing ring gear oil seal (Use with KV40101630.) ② Installing pinion rear bearing outer race
KV40101630* Drift	 a: 68 mm (2.68 in) dia. b: 61 mm (2.40 in) dia. Installing ring gear oil seal (Use with ST30613000.)
KV40100621* Drift	 a: 76 mm (2.99 in) dia. b: 69 mm (2.72 in) dia. ① Installing pinion oil seal ② Installing ring gear bearing (R H. side of VTY10A) ③ Seating countershaft bearing (VTY10A)
ST33061000* Drift	 a: 38 mm (1.50 in) dia. b: 28.5 mm (1.122 in) dia. Removing ring gear bearing (L.H. side of VTY10A) Removing front differential side bearing (FTY10A)

  

 
*: Special tool or commercial equivalent

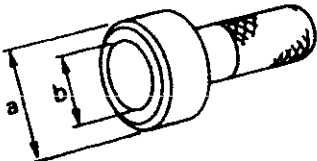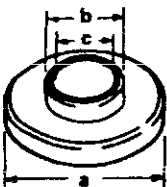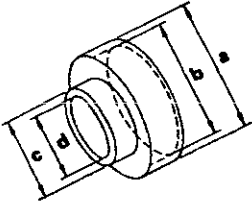
Tool number Tool name	Description
ST30621000* Drift	 a: 79 mm (3.11 in) dia. b: 59 mm (2.32 in) dia. ① Installing hypoid gear bearing outer race (Use with ST30611000) ② Installing pinion front bearing outer race (FTY10A)
ST30611000* Drift handle	 (Use with ST30621000)
ST30720000* Drift	 a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia. Installing front cover oil seal (FTY10A)
ST30901000* Drift	 a: 79 mm (3.11 in) dia. b: 45 mm (1.77 in) dia. c: 35 mm (1.38 in) dia. ① Installing countershaft bearing ② Installing pinion front bearing inner race (FTY10A)
KV38102510* Drift	 a: 71 mm (2.80 in) dia. b: 65 mm (2.56 in) dia. c: 55 mm (2.17 in) dia. d: 45 mm (1.77 in) dia. ① Installing hypoid gear ② Installing pinion front bearing inner race (VTY10A)
ST19840000* Drift	 a: 60 mm (2.36 in) dia. b: 34.8 mm (1.37 in) dia. ① Removing ring gear bearing (R.H. side of VTY10A) ② Installing ring gear bearing (L.H. side of VTY10A) ③ Removing ring gear bearing (L.H. side of FTY10A) ④ Installing ring gear bearing (R.H. side of FTY10A)

  *: Special tool or commercial equivalent

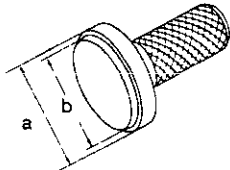Tool number Tool name	Description
ST33081000* Drift	 a: 43 mm (1.69 in) dia. b: 33.5 mm (1.319 in) dia. Removing hypoid gear bearing
ST01500001* Drift	 a: 89 mm (3.50 in) dia. b: 77 mm (3.03 in) dia. Installing pinion front bearing outer race
KV38104010 Drift	 a: 67 mm (2.64 in) dia. b: 49 mm (1.93 in) dia. ① Removing ring gear bearing (R.H. side of FTY10A) ② Installing ring gear bearing (L.H. side of FTY10A)


COMMERCIAL SERVICE TOOLS

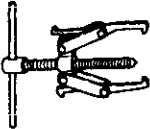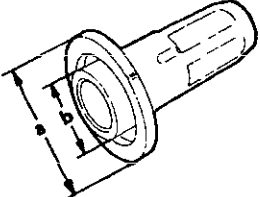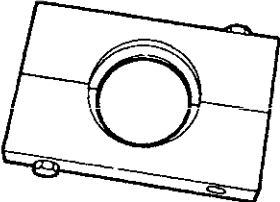Tool name	Description
Puller	 ① Removing ring gear bearing (L.H. side) ② Removing viscous coupling (VTY10A)
Puller	 Removing hypoid gear bearing outer race
Drift	 Installing adapter oil seal (VTY10A) a: 95 mm (3.74 in) dia. b: 58 mm (2.28 in) dia.
Puller	 Removing pinion front bearing inner race

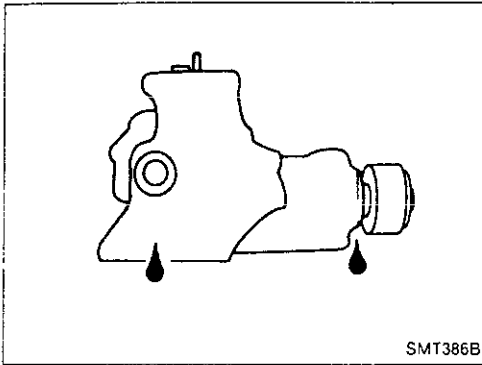

Checking Transfer Oil


- Check transfer for leakage.

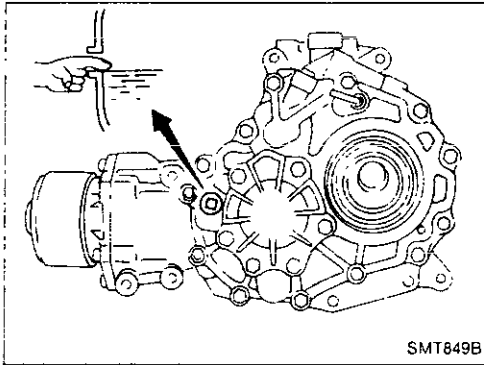


- Check oil level.

Replacing Oil Seal

ADAPTER OIL SEAL


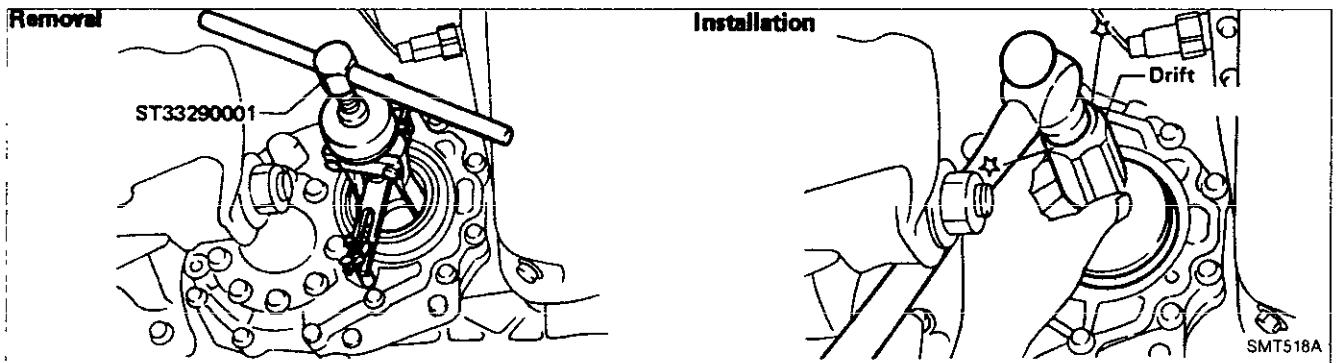


DRIVE SHAFT OIL SEAL

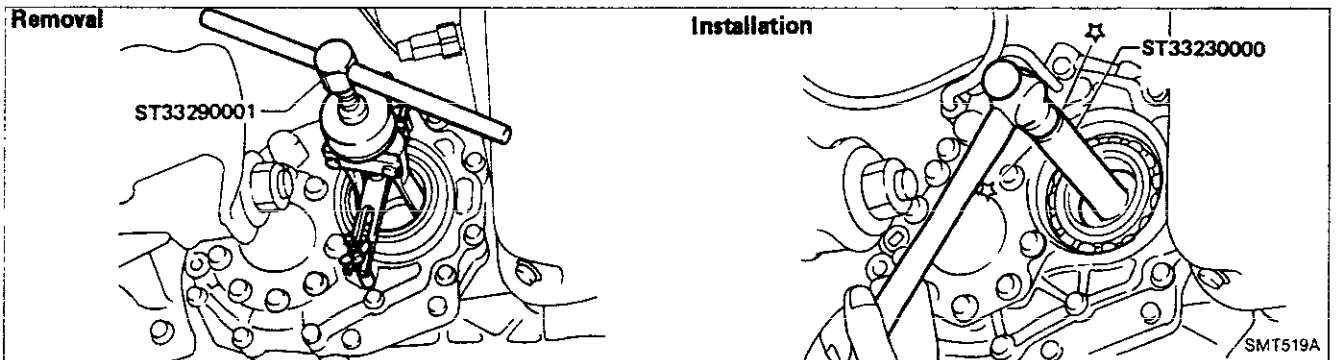


- Lubricate seal lips of drive shaft oil seal and adapter oil seal of transfer with multi-purpose grease before installing drive shaft.
- Be careful not to damage drive shaft oil seal and adapter oil seal of transfer when installing drive shaft.

Replacing Viscous Coupling

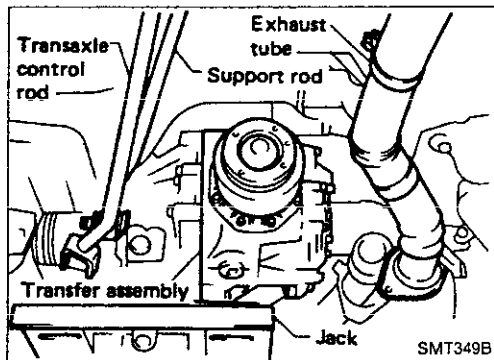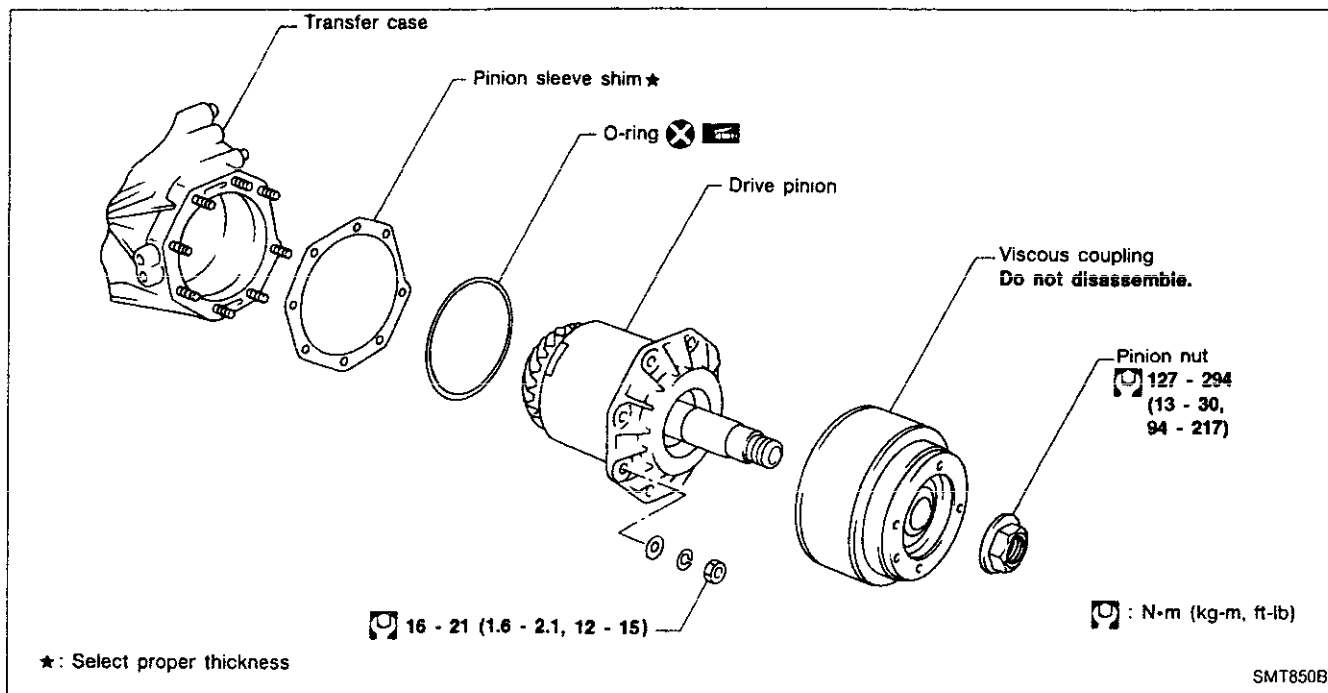

REMOVAL

- Drain transfer oil.
- Remove front stabilizer bar.
- Remove transaxle control rod and support rod from trans-axle.
- Remove propeller shaft from transfer.
- Separate center exhaust tube from front tube.
- Support transaxle and transfer by a jack.
- Remove rear mount.
- Remove pinion sleeve assembly using a sliding hammer.

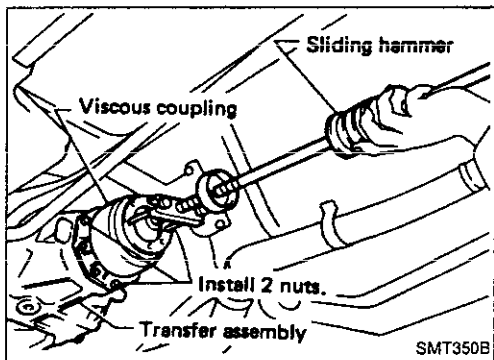



Install 2 nuts to prevent the pinion sleeve assembly from dropping. Do not tighten nuts.

- Replacing viscous coupling
Refer to "REPAIR FOR COMPONENT PARTS".

Replacing Viscous Coupling (Cont'd)**INSTALLATION**

- Install O-ring on pinion sleeve and then install pinion sleeve shim and pinion sleeve.

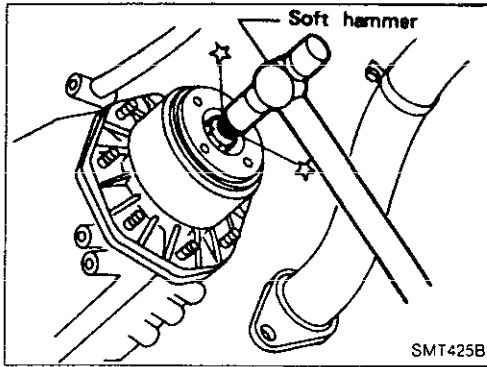


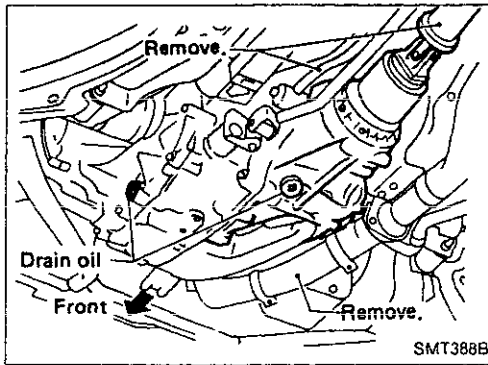


Removal

- Drain gear oil from transfer and transaxle.
- Remove exhaust front tube.
- Put matchmarks on flanges and then separate propeller shaft from transfer.
- Remove transaxle support rod from transfer.

- Remove R.H. drive shaft and oil filter.

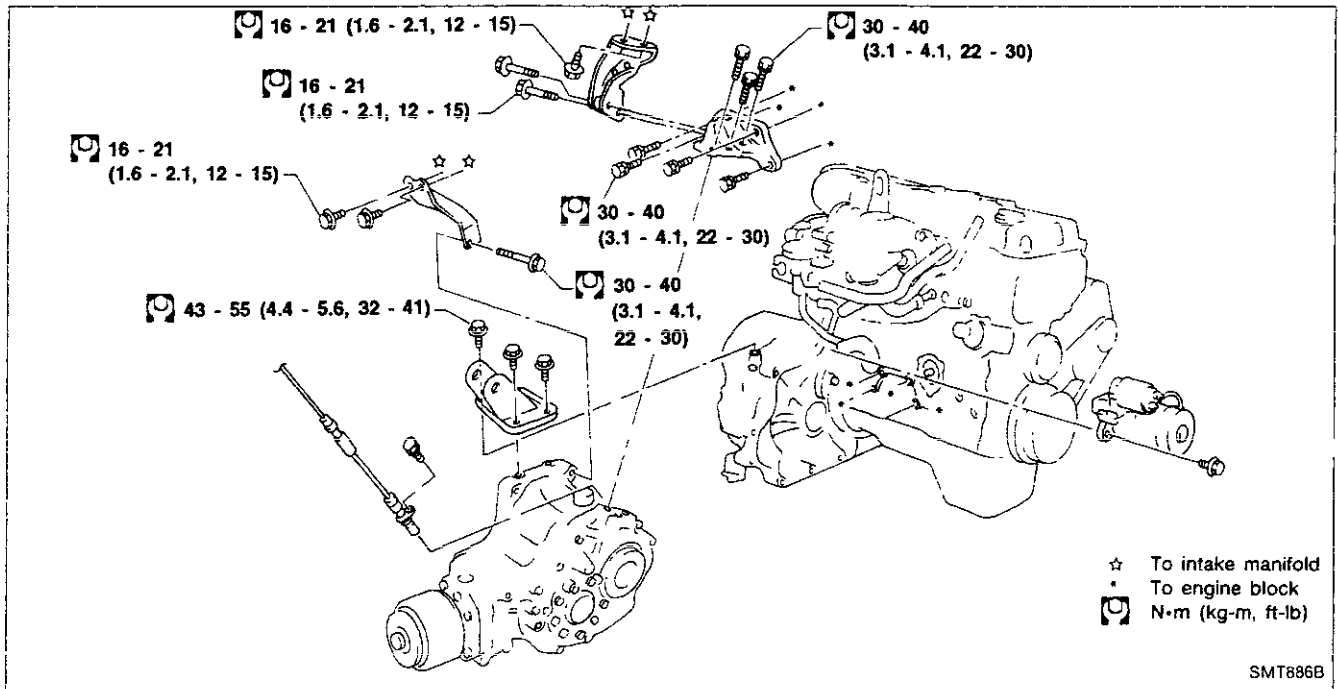

- Remove parts shown in above illustration.
 - Rear mount bracket
 - Speedometer pinion
 - Stays and gusset
 - Starter motor

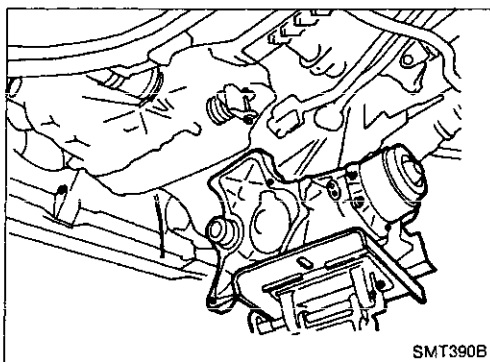


- Remove transfer fixing bolts, then lower transfer.

WARNING:

- Support transaxle by a jack.
- Support transfer by a jack while removing it.

Installation

- Lubricate seal lips of transfer side oil seal in transaxle and drive shaft oil seal and adapter oil seal of transfer, with multi-purpose grease before installing transfer and drive shaft.

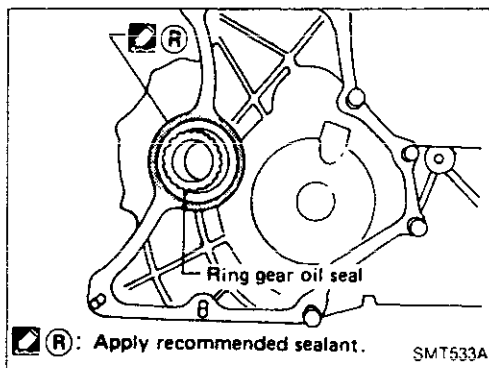


- Apply recommended sealant on transfer case as shown at left.

Recommended sealant:

Nissan genuine part (KP510-00150) or equivalent

- **Be careful not to damage transaxle oil seal when inserting spline portion of transfer ring gear into transaxle.**

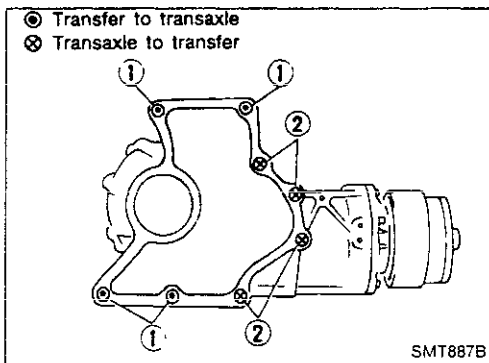


- Tighten bolts securing transfer.

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	ℓ mm (in)
1	30 - 40 (3.1 - 4.1, 22 - 30)	65 (2.56)
2	30 - 40 (3.1 - 4.1, 22 - 30)	65 (2.56)


- **Be careful not to damage drive shaft oil seal and transfer front cover oil seal when installing drive shaft.**
- Refill with recommended gear oil.
- **Gear oil for transfer is different from that for transaxle.**

Case Components

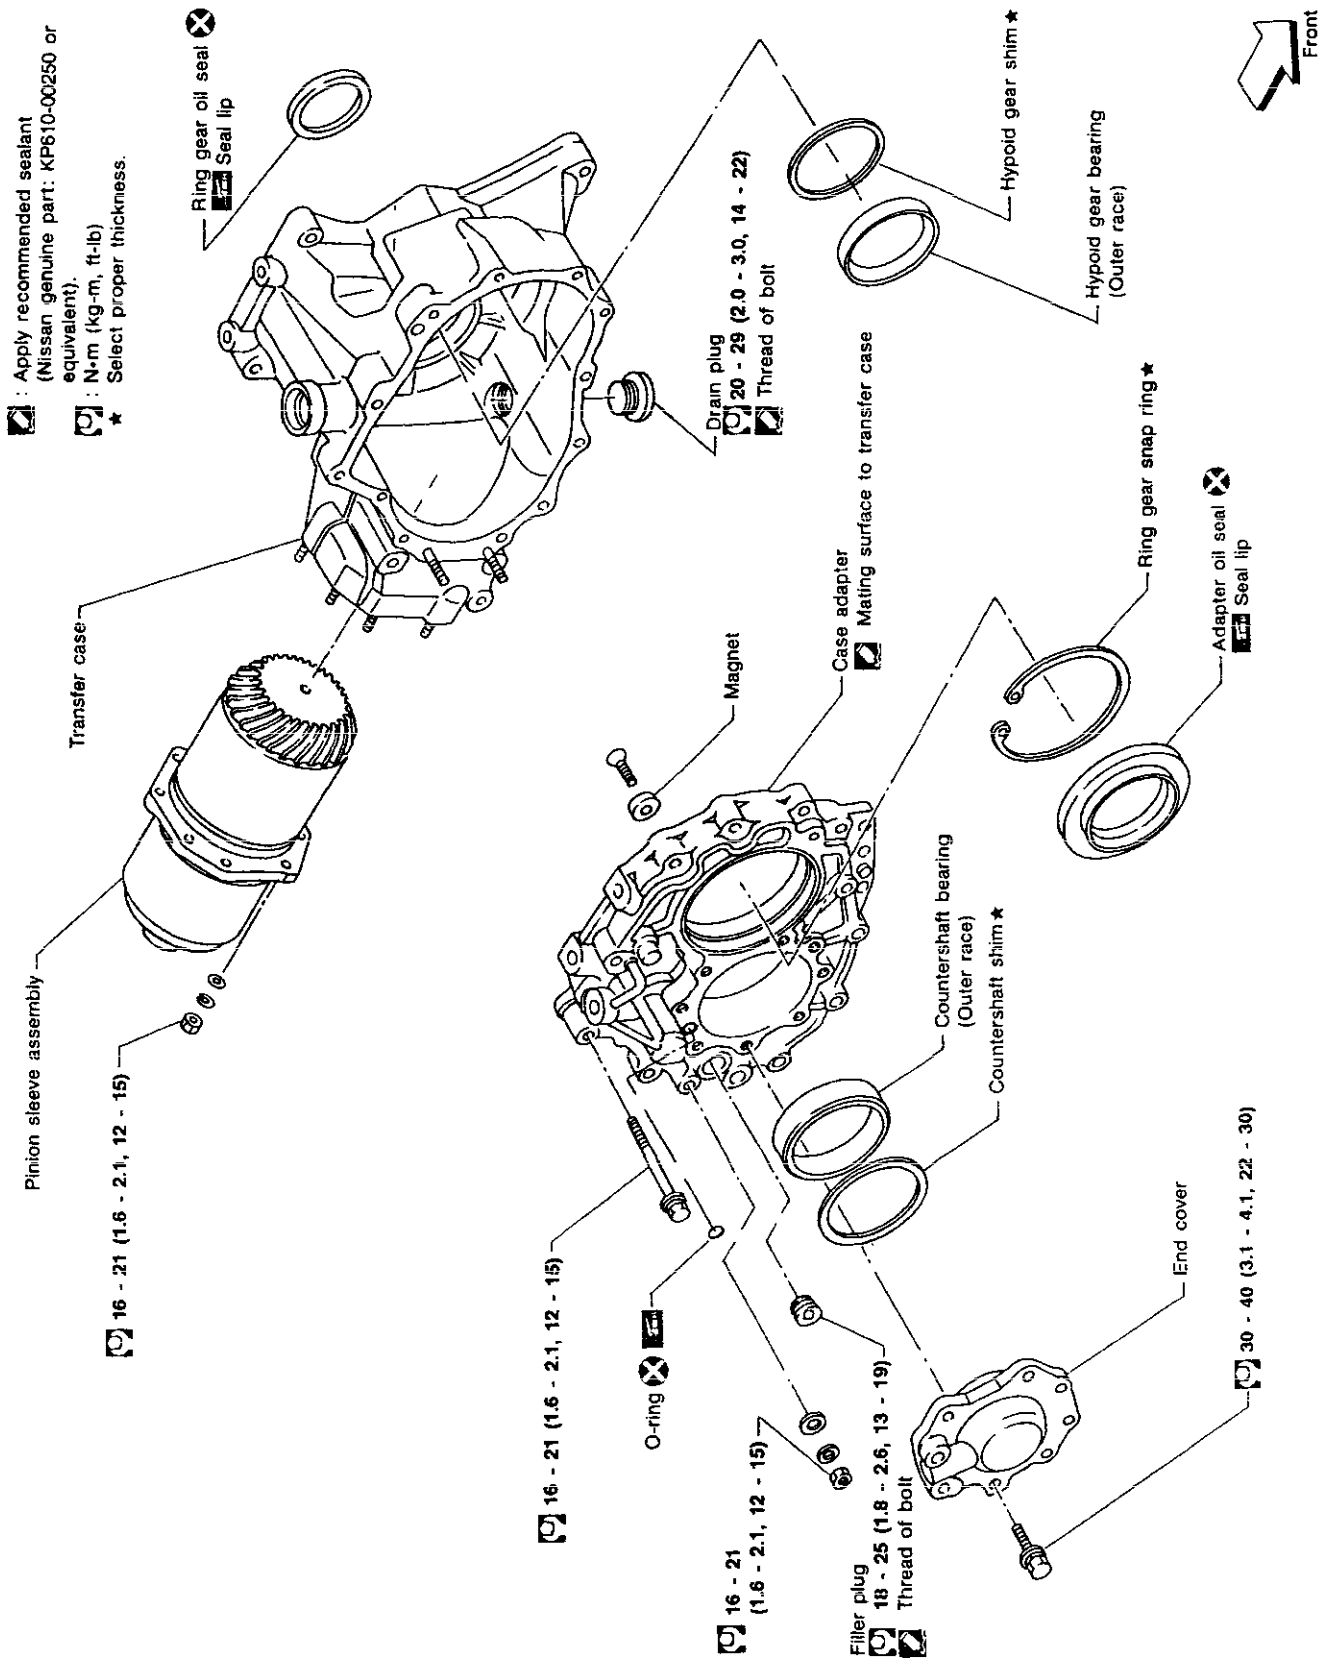


SMT851B

Gear Components

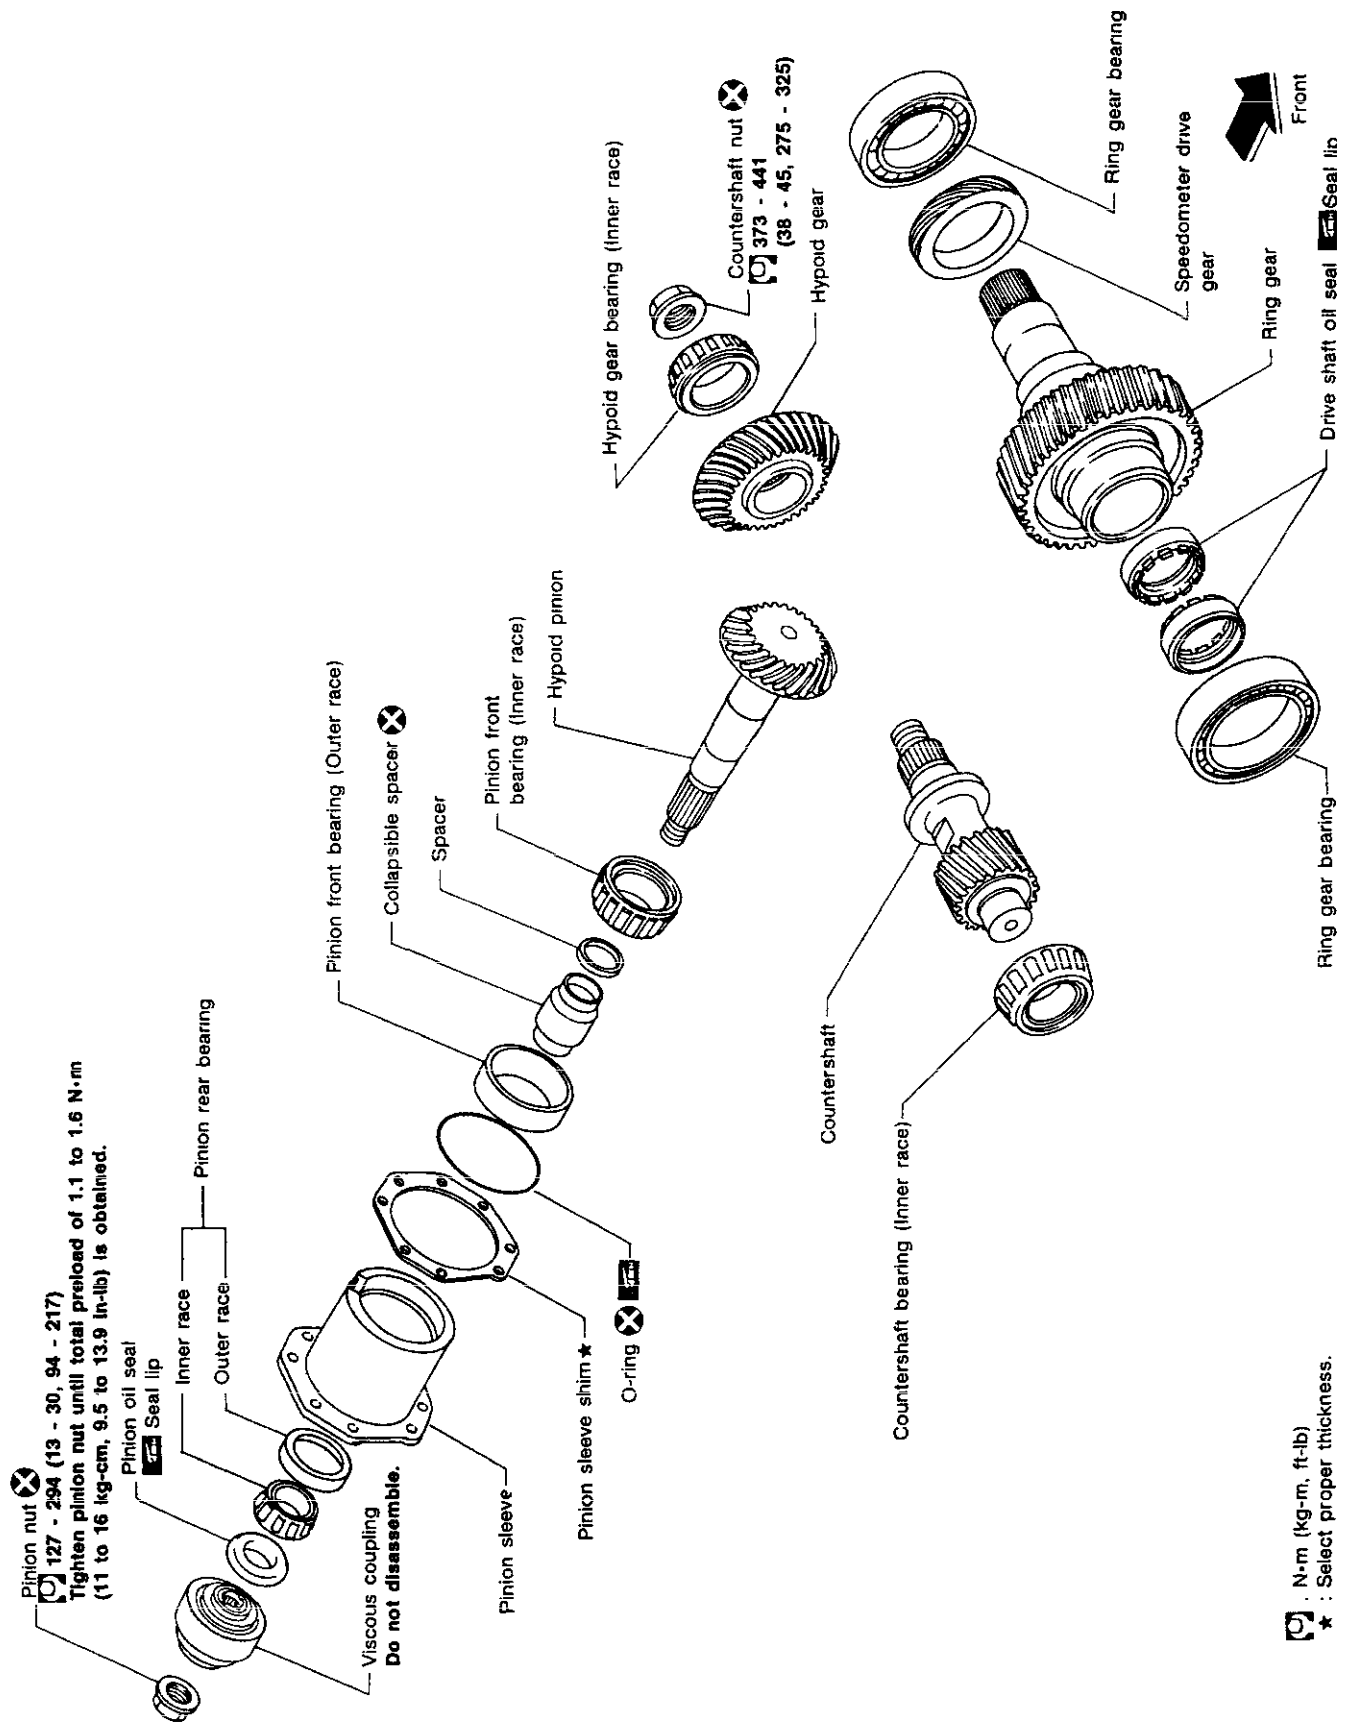


: N·m (kg-m, ft-lb)
★ : Select proper thickness.

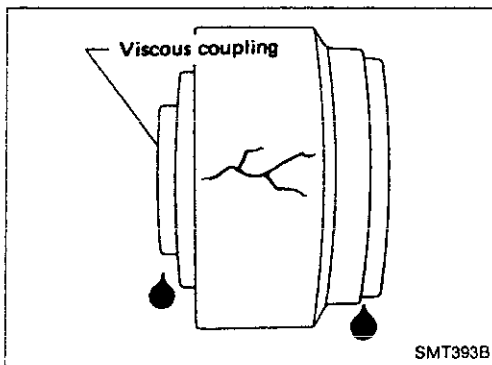

Viscous Coupling

- Check case for cracks.
- Check silicone oil for leakage.

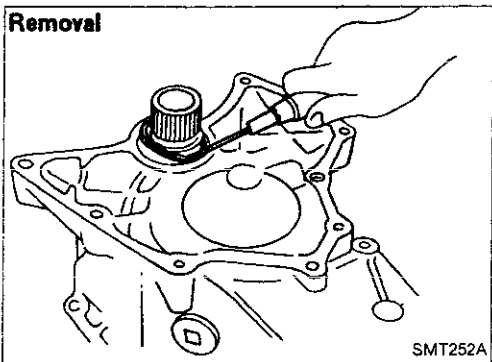


Oil Seal


RING GEAR OIL SEAL

- Check ring gear oil seal for oil leakage.

Be careful not to damage ring gear when removing ring gear oil seal.

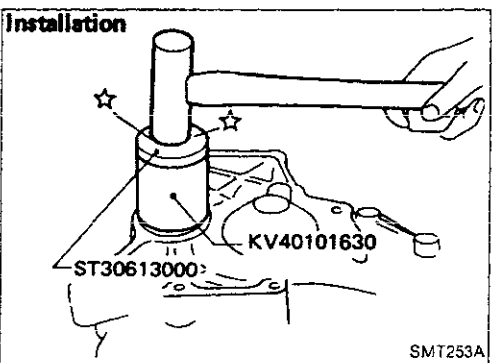


Apply multi-purpose grease to seal lip of oil seal before installing.

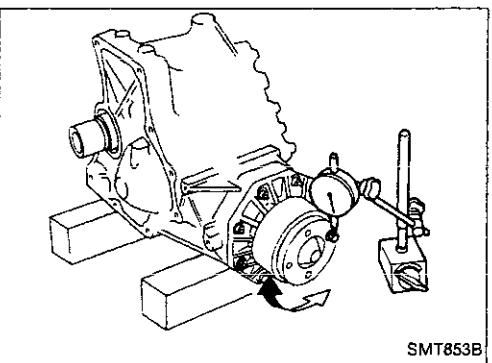

Gear Components

1. Check hypoid gear-to-pinion backlash.
 - a. Install a bolt in viscous coupling.
 - b. Measure hypoid gear-to-pinion backlash.

Hypoid gear-to-pinion backlash
(at bolt hole of companion flange):
0.08 - 0.12 mm (0.0031 - 0.0047 in)
 - c. If not within specification, adjust hypoid pinion height — Refer to "ADJUSTMENT".

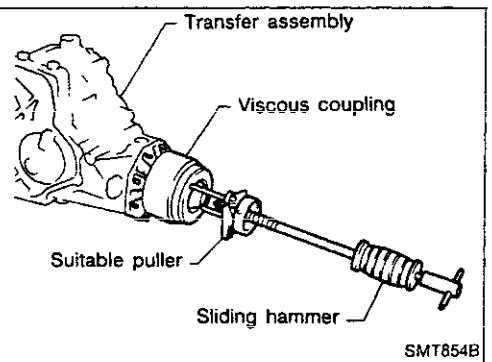



2. Remove pinion sleeve assembly using a sliding hammer. **Install 2 nuts to prevent the pinion sleeve assembly from dropping. Do not tighten nuts.**

Gear Components (Cont'd)

3. Check ring gear-to-counter gear backlash.

Ring gear-to-counter gear backlash**(at ring gear spline):****0.02 - 0.04 mm (0.0008 - 0.0016 in)**

If not within specification, disassemble and check transfer case, case adapter, ring gear and countershaft components. Replace if necessary.

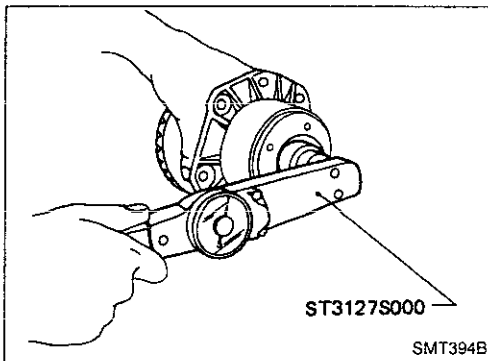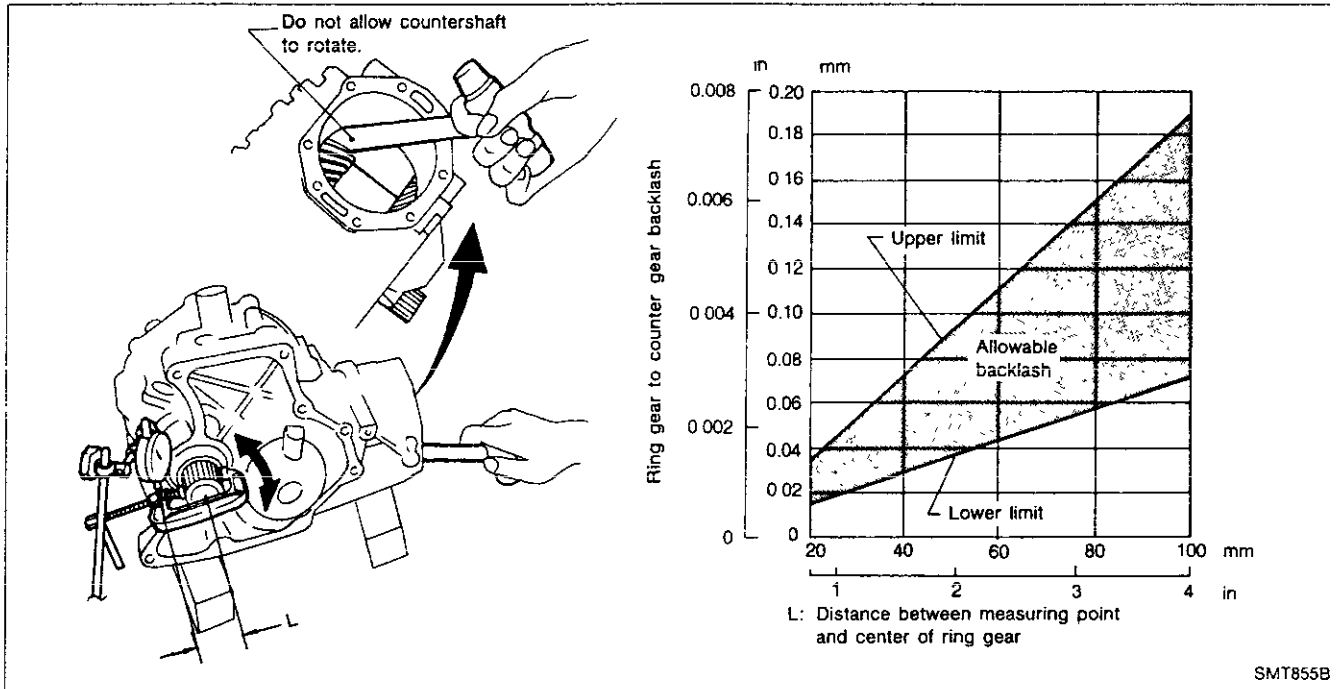


4. Check pinion bearing preload.

- Turn hypoid pinion several times in both directions to seat bearings correctly.
- Measure preload with Tool.

Pinion bearing preload:**1.1 - 1.6 N·m (11 - 16 kg-cm, 9.5 - 13.9 in-lb)**

If not within specification, disassemble and adjust it — Refer to "REPAIR FOR COMPONENT PARTS".

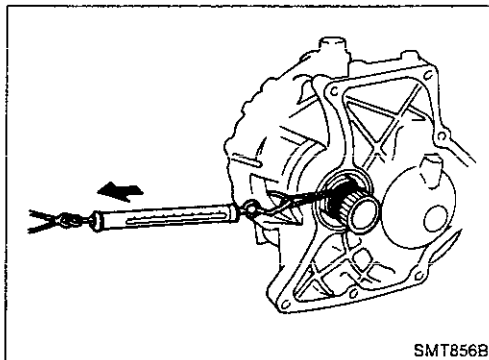

5. Check countershaft bearing preload.

- Wind a strong line on to ring gear spline.
- Turn ring gear several times in both directions to seat bearing correctly.
- Measure countershaft bearing preload.

Countershaft bearing preload**(at outer diameter of ring gear spline):****88 - 235 N (9 - 24 kg, 20 - 53 lb)**


If not within specification, disassemble and adjust countershaft bearing preload — Refer to "ADJUSTMENT" and check countershaft, hypoid gear and ring gear bearings.

Gear Components (Cont'd)


6. Check tooth contact — Refer to "TOOTH CONTACT".

Check the gear tooth contact pattern to verify correct contact of the hypoid gear and pinion.


A hypoid gear set not positioned properly may be noisy, have short life or both.

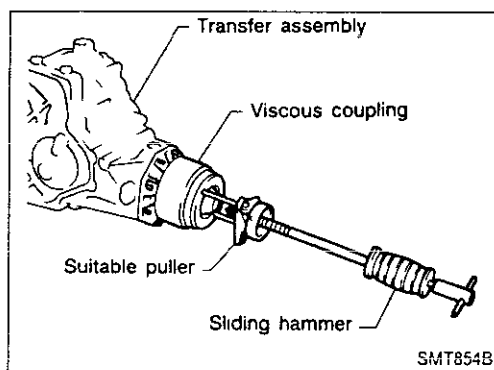


1. Remove pinion sleeve using a sliding hammer.
Install 2 nuts to prevent the pinion sleeve from dropping. Do not tighten nuts.
2. Thoroughly clean hypoid gear and pinion teeth.

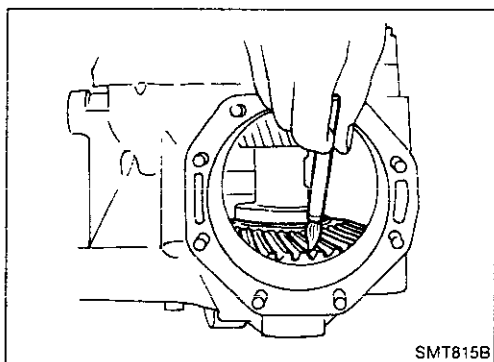

3. Sparingly apply a mixture of powdered ferric oxide and oil or equivalent to 3 or 4 teeth of hypoid gear.







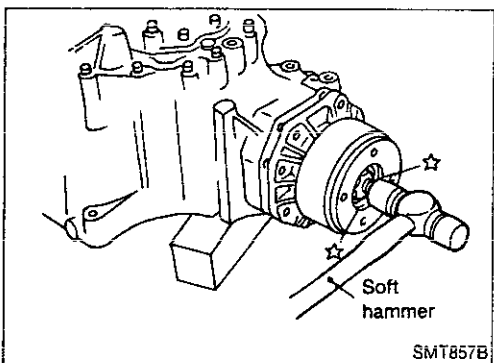



4. Install pinion sleeve shim and sleeve assembly.
 - **After installing pinion sleeve, tighten nuts to the specified torque.**

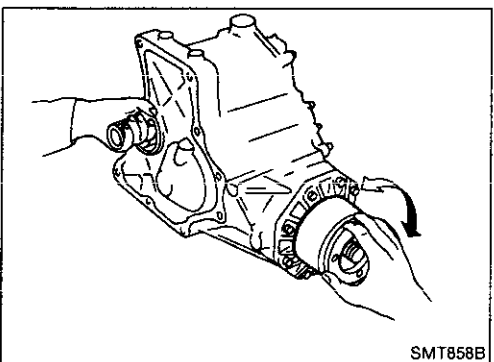


5. Hold ring gear spline steady by hand and rotate companion flange back and forth.
6. Remove pinion sleeve assembly.
7. Compare contact marks left on hypoid gear to those in the following illustration.

Tooth Pattern Interpretation

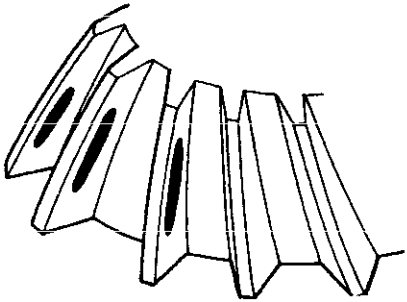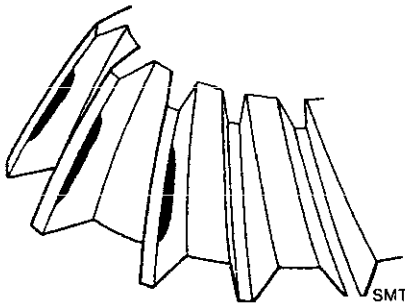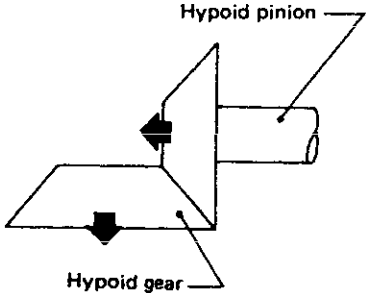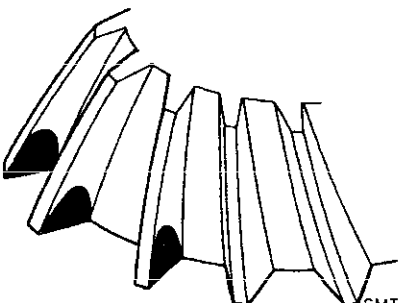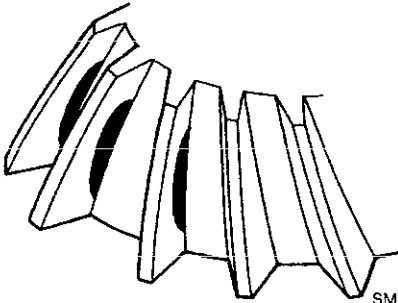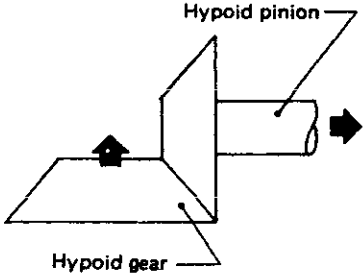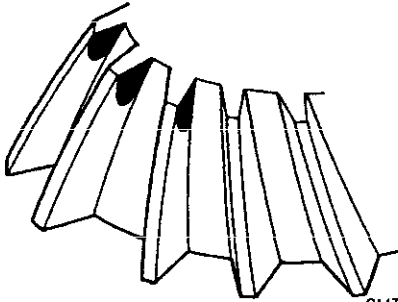
TOOTH PATTERN	
 Correct Pattern SMT364A	After adjustment, check hypoid gear to pinion gear backlash. — Refer to "PRE-DISASSEMBLY INSPECTION".
	Adjustment
 SMT464A	 SMT469A a. Increase thickness of countershaft shim and decrease thickness of hypoid gear shim. Do not change total thickness of countershaft shim plus hypoid gear shim. b. Decrease thickness of pinion sleeve shim.
 SMT465A	
 SMT466A	 SMT468A a. Increase thickness of hypoid gear shim and decrease thickness of countershaft shim. Do not change total thickness of countershaft shim plus ring gear shim. b. Increase thickness of pinion sleeve shim.
 SMT467A	

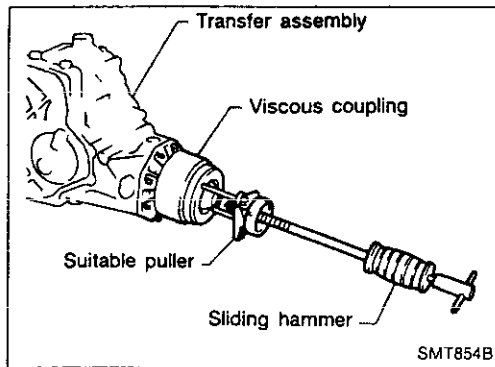


1. Remove pinion sleeve using a sliding hammer.
Install 2 nuts to prevent the pinion sleeve from dropping. Do not tighten nuts.

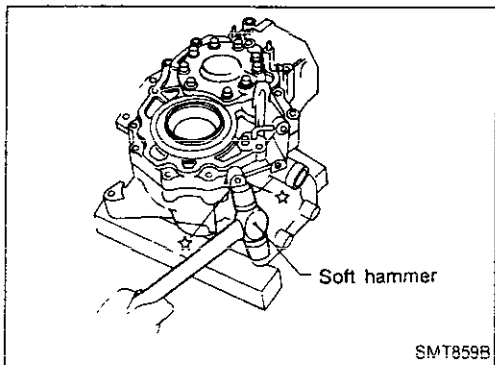

2. Remove all case adapter bolts and then remove case adapter by lightly tapping.

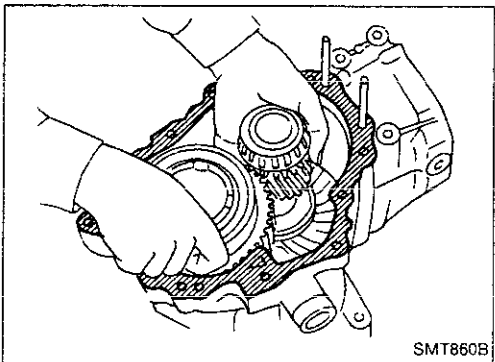

3. Remove ring gear and countershaft assembly as a set.

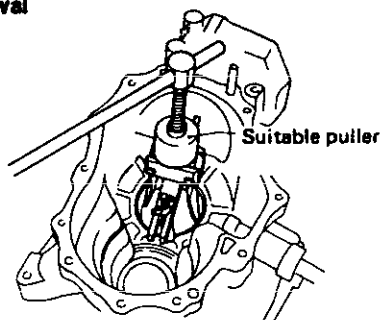Removal


SMT246A

Transfer Case and Case Adapter**REMOVAL AND INSTALLATION**

- Hypoid gear bearing outer race (Transfer case side)
- Adapter oil seal — Refer to "ON-VEHICLE SERVICE".

Install adapter oil seal after assembly.


- Shift shaft oil seal — Refer to "PRE-DISASSEMBLY INSPECTION".
- Ring gear oil seal — Refer to "PRE-DISASSEMBLY INSPECTION".

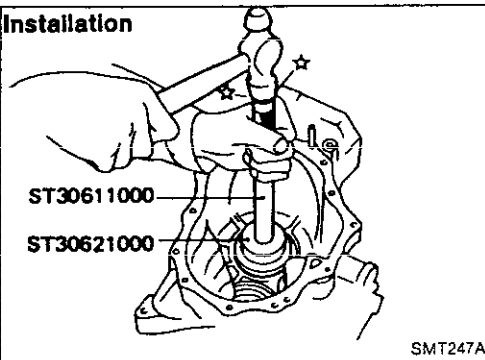Installation


SMT247A

Ring Gear**DISASSEMBLY**


1. Pull out ring gear bearings.
2. Remove speedometer drive gear.
3. Remove drive shaft oil seal — Refer to "ON-VEHICLE SERVICE".

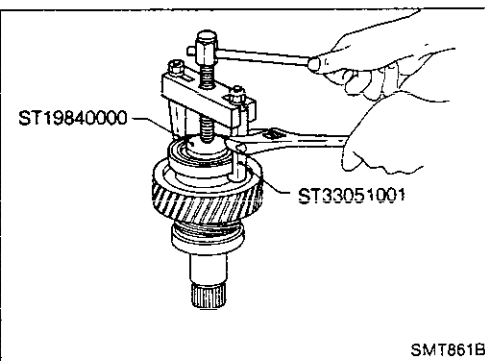

SMT861B

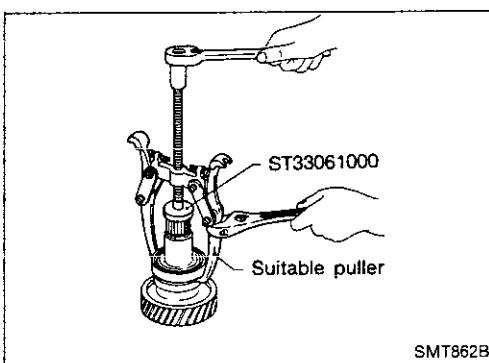

SMT862B

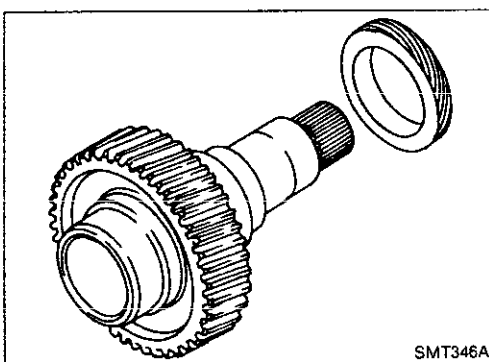

SMT346A




INSPECTION**Gear and shaft**

- Check gears for excessive wear, chips or cracks.
- Check shaft for cracks or wear.

Ring Gear (Cont'd)

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

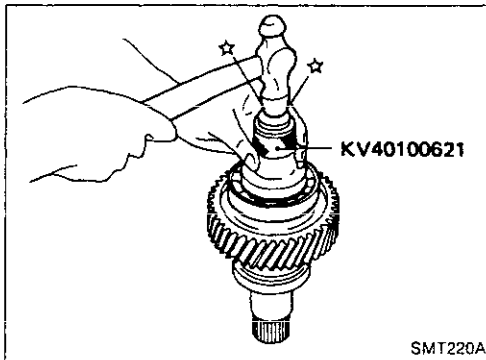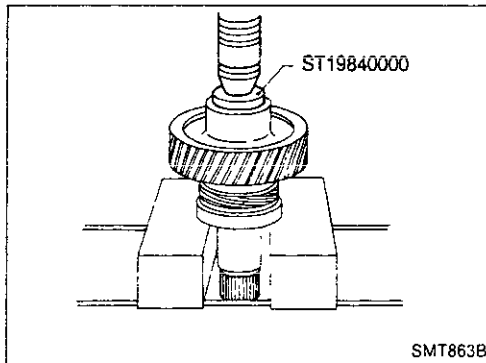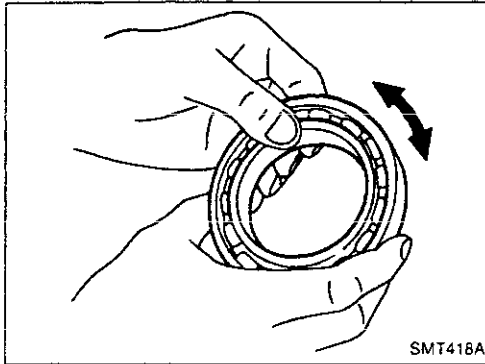



ASSEMBLY

1. Install speedometer drive gear.
2. Press on ring gear bearings.
3. Install drive shaft oil seal — Refer to "ON-VEHICLE SERVICE".


Countershaft

DISASSEMBLY


1. Remove countershaft nuts.
2. Press out hypoid gear together with hypoid gear bearing. **Only use press — do not use puller. Puller could damage plug of countershaft.**

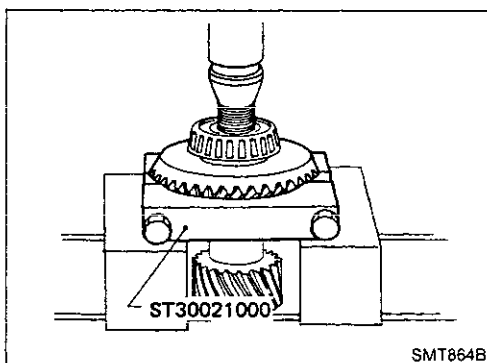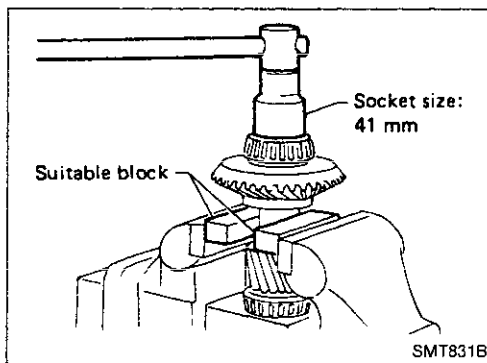


Countershaft (Cont'd)

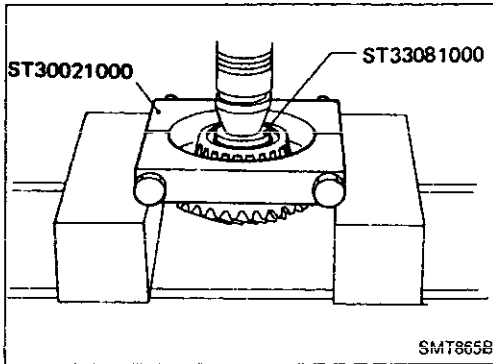

3. Press out hypoid gear bearing.

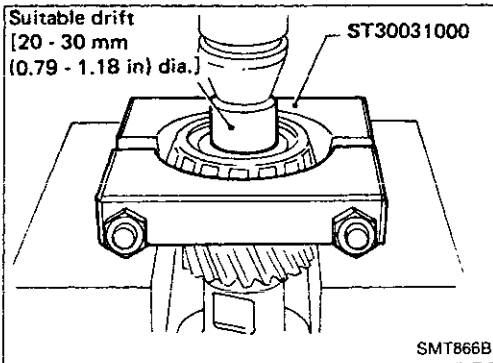

4. Press out countershaft bearing.

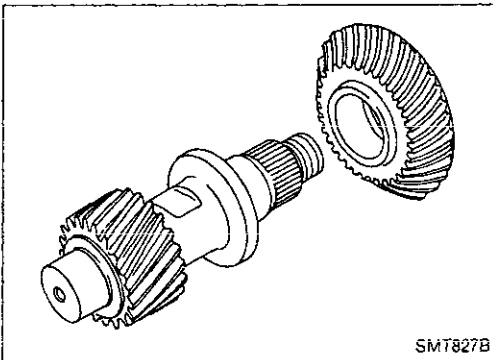


INSPECTION

Gears and shaft

- Check gears for excessive wear, chips or cracks.

When replacing hypoid gear, replace hypoid gear and hypoid pinion as a set.


- Check shaft for cracks or wear.

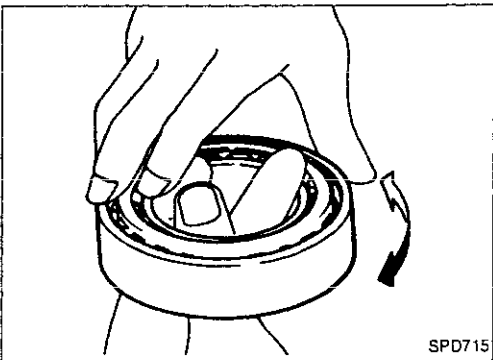

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.






When replacing tapered roller bearing, replace outer and inner race as a set.

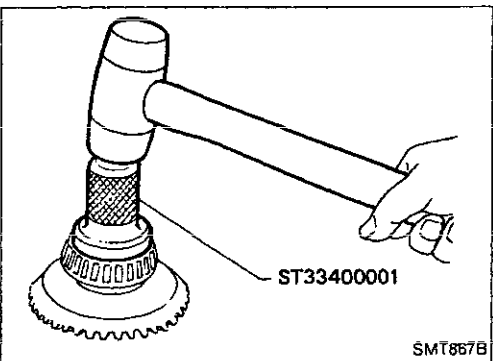

ASSEMBLY

1. Press on hypoid gear bearing.

Countershaft (Cont'd)

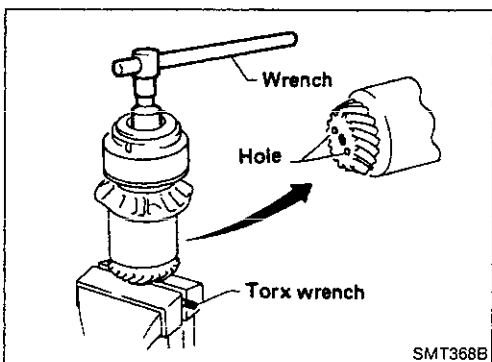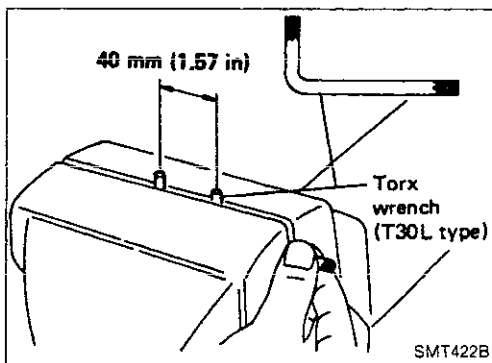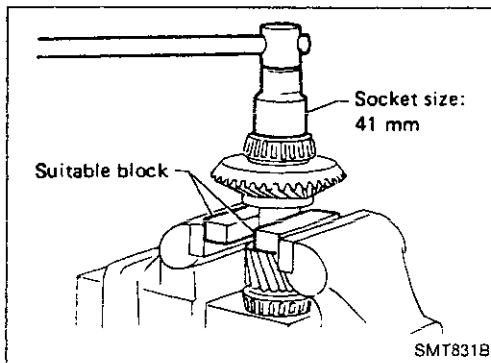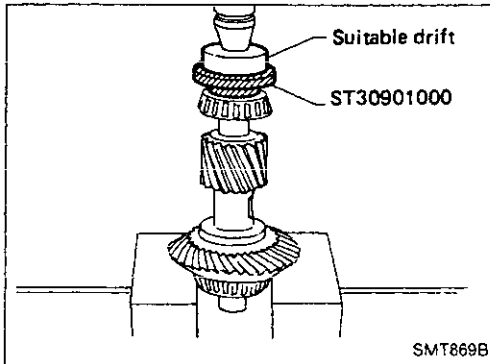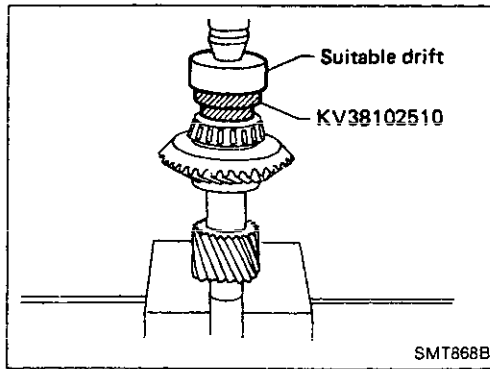

2. Press on hypoid gear together with hypoid gear bear

3. Press on countershaft bearing.


4. Install new countershaft nuts and tighten them.
 ⚙️: 373 - 441 N·m (38 - 45 kg-m, 275 - 325 ft-lb)

Pinion Sleeve


DISASSEMBLY

1. Before disassembly, check pinion bearing preload — F to "PRE-DISASSEMBLY INSPECTION".
2. Remove pinion nut.
 - a. Hold torx wrenches (T30L type) in vise.
 - b. Put assembly on the vise aligning two holes with two wrenches.
 - c. Loosen pinion nut.


Pinion Sleeve (Cont'd)

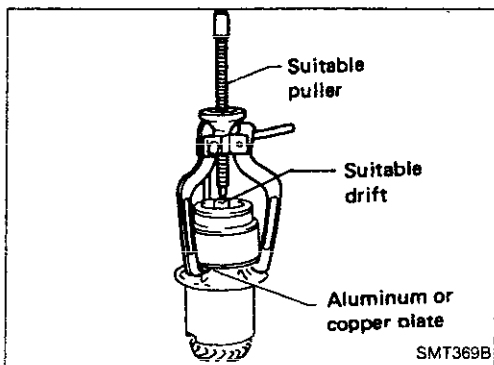


3. Remove viscous coupling with suitable puller and drift. **Insert aluminum or copper plates between puller and viscous coupling.**

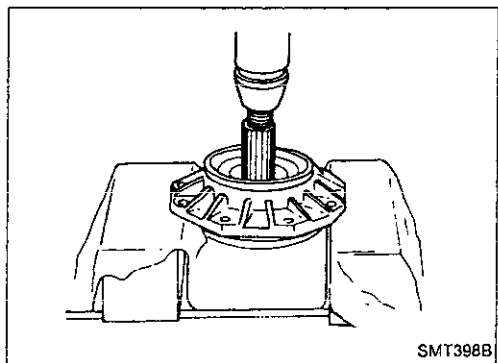


4. Press out hypoid pinion together with front bearing inner race, collapsible spacer and spacer.

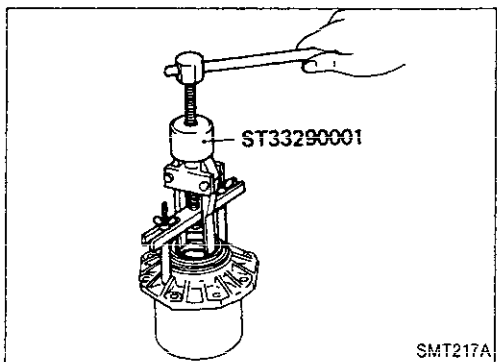


5. Pull out pinion oil seal and remove pinion rear bearing inner race.

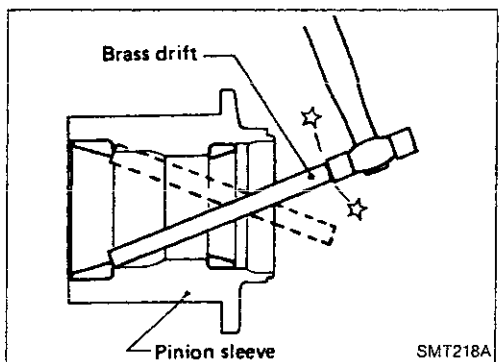

6. Remove bearing outer races with brass drift.

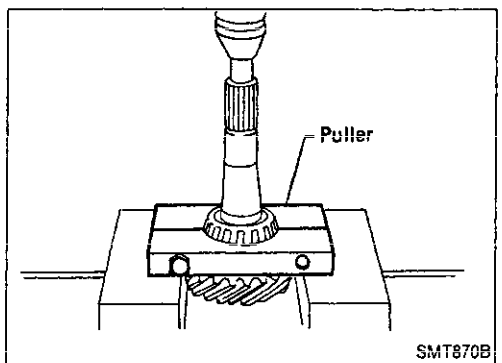

7. Remove pinion front bearing inner race. **Always replace after removing.**

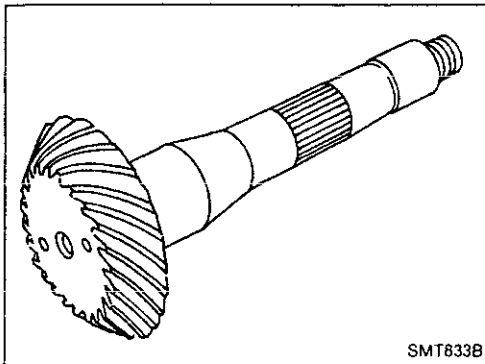


Pinion Sleeve (Cont'd)

INSPECTION


Gear and shaft

- Check gears for excessive wear, chips or cracks.
When replacing hypoid pinion, replace hypoid gear and hyp pinion as a set.
- Check shaft for cracks or wear.

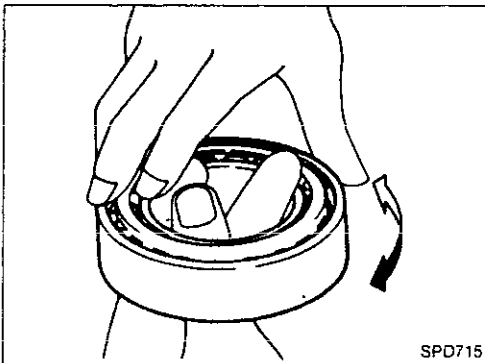


Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
When replacing tapered roller bearing, replace outer and inner race as a set.

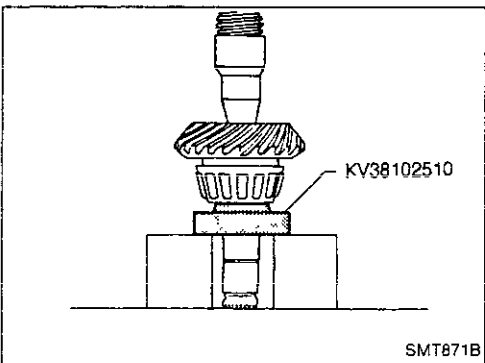


ASSEMBLY


1. Press on pinion front bearing inner race.

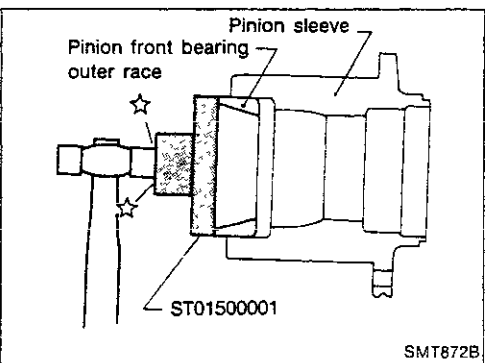

2. Press-fit front and rear bearing outer races.

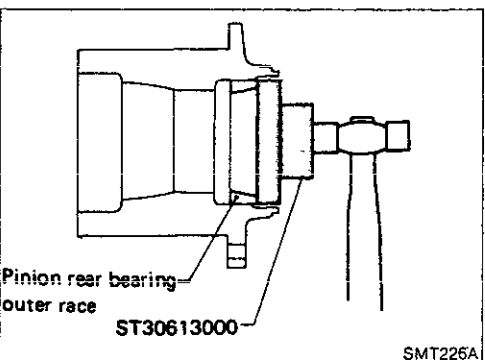


Pinion Sleeve (Cont'd)

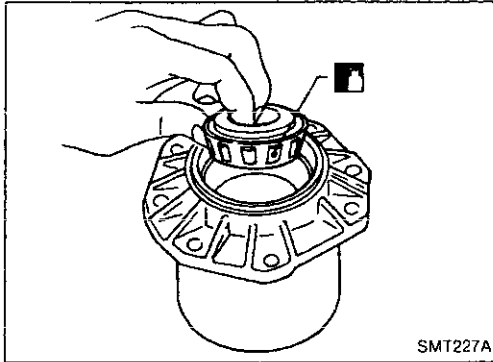


3. Place pinion rear bearing inner race in pinion sleeve.

Before installing, lubricate pinion rear bearing with recommended gear oil.

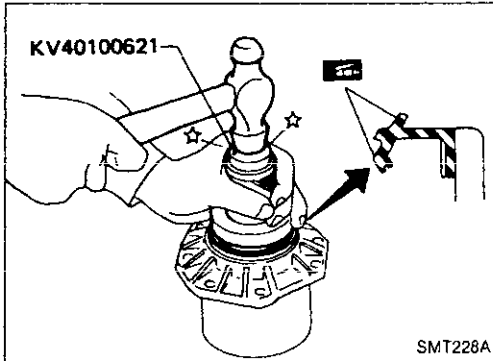


4. Install pinion oil seal.


Before installing, apply multi-purpose grease to seal lip of oil seal.

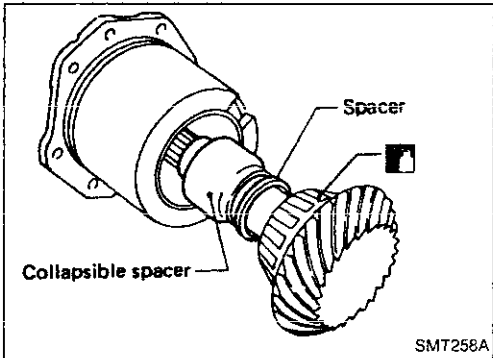



5. Place spacer and new collapsible spacer on hypoid pinion and lubricate pinion front bearing with gear oil, and insert them in pinion sleeve.

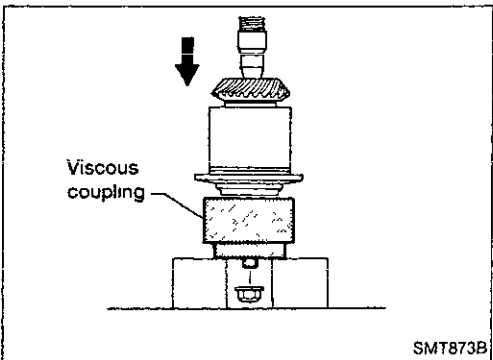

6. Press viscous coupling so pinion nut can be tightened.

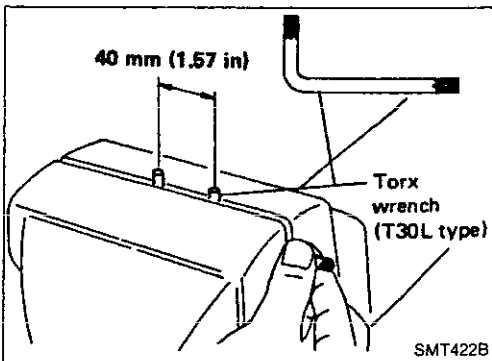

7. Tighten pinion nut slowly to the specified preload. Check bearing preload often to prevent over torque.

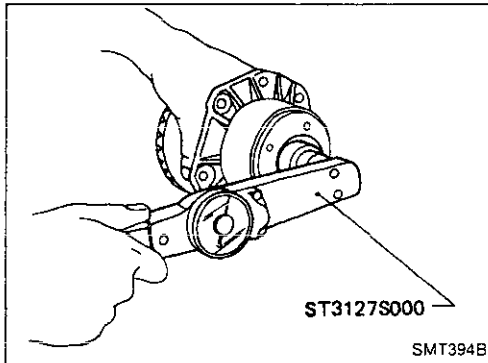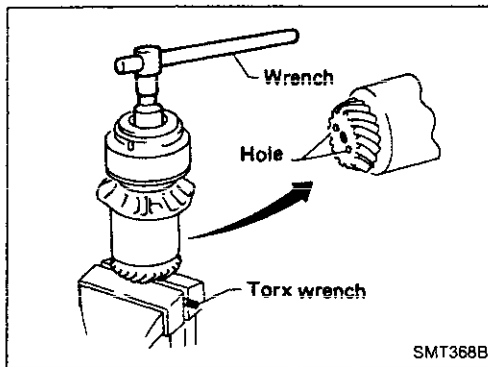Pinion Sleeve (Cont'd)**Tightening torque of pinion nut:****127 - 294 N·m (13 - 30 kg-m, 94 - 217 ft-lb)****When checking preload, turn drive pinion in both direction several times to seat bearings correctly.****Pinion bearing preload:****1.1 - 1.6 N·m (11 - 16 kg-cm, 9.5 - 13.9 in-lb)**

When replacing any part in chart below, the adjustments indicated by "x" are required.

Adjustment Application Chart

Determine the required adjustment

X: Necessary

Blank: Not necessary

Adjustment Adjusting method	Ring gear end play	Countershaft bearing preload	Hypoid gear height	Hypoid pinion height
	Ring gear snap ring	Countershaft shim and Hypoid gear shim	Hypoid gear shim	Pinion sleeve shim
Replaced part				
Transfer case set (Transfer case and case adapter)	X	X	X	X
Ring gear	X			
Ring gear bearing	X			
Hypoid gear set (Hypoid gear and pinion)		X	X	X
Countershaft		X		
Hypoid gear bearing		X	X	X
Countershaft bearing		X		
Hypoid pinion bearing				X
Pinion sleeve				X

Adjustment Sequence Chart

Perform required adjustment with this chart.

For details, refer to following pages.

Operation	Adjustment	Ring gear end play	Countershaft bearing preload	Hypoid gear height	Hypoid pinion height
①	Selection of hypoid gear shim			1	
②	Removal of ring gear snap ring	1			
③	Installation of ring gear countershaft and case adapter	2	1	2	1
④	Selection of ring gear snap ring	3			
⑤	Selection of counter-shaft shim		2	3	
⑥	Selection of pinion sleeve shim				2
⑦	Hypoid gear-to-pinion backlash inspection		3	4	3
⑧	Check of tooth contact	4	4	5	4
⑨	Removal of end cover		5	6	
⑩	Removal of case adapter, ring gear and countershaft	5	6	7	5


The numbers in the chart show the order of the operations required for each adjustment.

Adjustment Procedure

① SELECTION OF HYPOID GEAR SHIM

1. To simplify the adjustment, make a chart like the one below and write measurements on the chart.


FACTOR	HUNDREDTHS OF A MILLIMETER
A. Transfer case	
B. Hypoid gear	
C. Hypoid gear bearing	

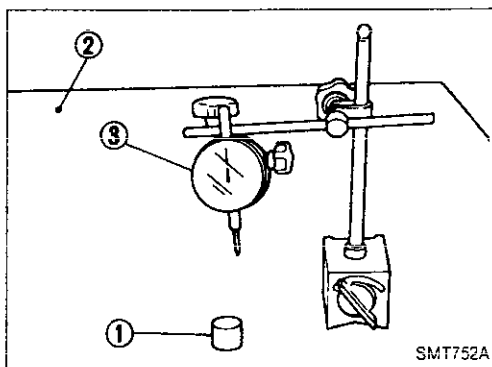


2. Measure hypoid gear bearing thickness.

- a. Prepare required tools for measurement.

- ① Master gauge (KV38101900)
- ② Base plate
- ③ Dial indicator

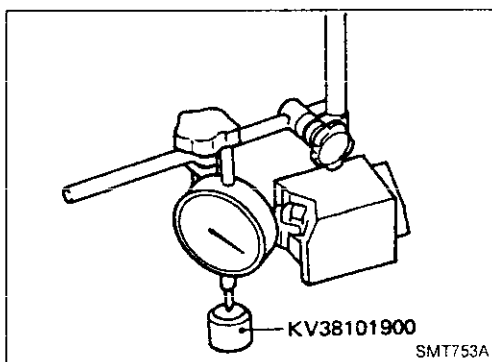

- b. Place dial indicator and master gauge on base plate.
- c. Place dial indicator on top of master gauge and then adjust dial indicator scale to zero.
- d. Carefully slide master gauge out from under dial indicator.

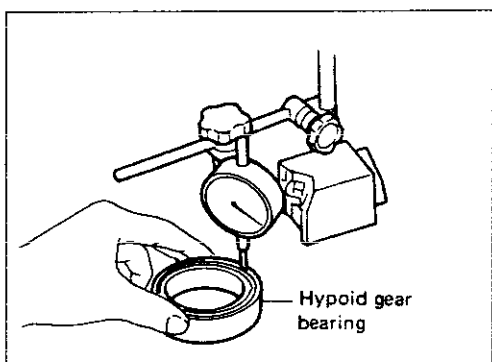



- e. Place hypoid gear bearing inner race on base plate and then place hypoid gear bearing outer race on inner race.
- f. Place dial indicator on top of outer race.
- g. Read dial indicator.
- If the needle fluctuates erratically then bearing is either dirty or defective and should be cleaned or replaced.
- h. Determine factor "C" to be used by the following equation.

$$C = \text{"Dial gauge deflection"} \times 100$$


(Bearing height = 20 mm (0.79 in) + Dial gauge deflection)

- i. Write "C" on chart.

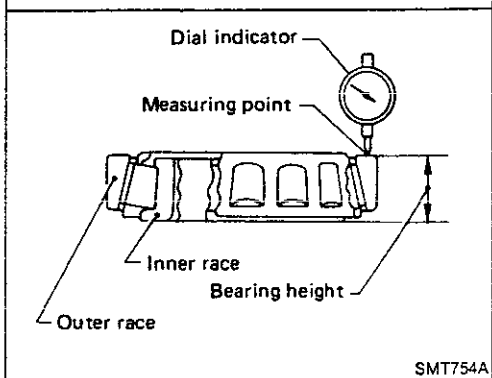

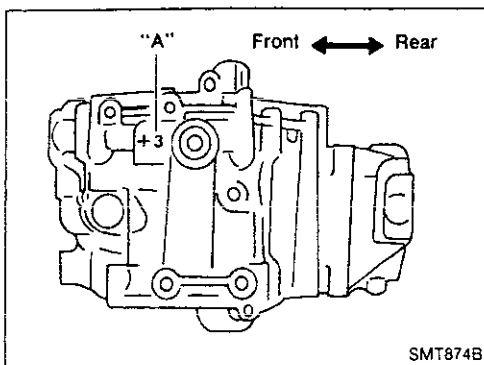Adjustment Procedure (Cont'd)

3. Write figure marked on transfer case as factor "A" on chart.

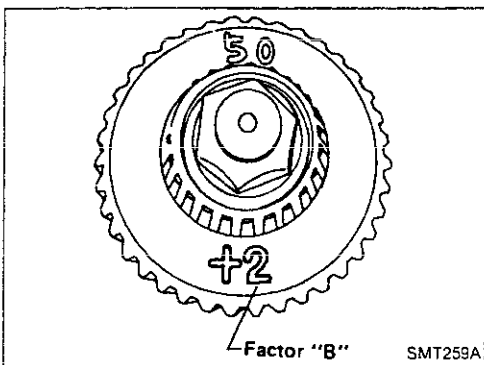

4. Write figure marked on hypoid gear as factor "B" on chart.

5. Determine dimension "D" to be used by the following equation.


$$D = 100 + A - B - C$$

FOR EXAMPLE


FACTOR	HUNDREDTHS OF A MILLIMETER
A. Transfer case	3
B. Hypoid gear	2
C. Hypoid gear bearing	9 (0.09 x 100)

$$D = 100 + 3 - 2 - 9 = 92$$

6. Select proper shims using S.D.S. table as a guide.

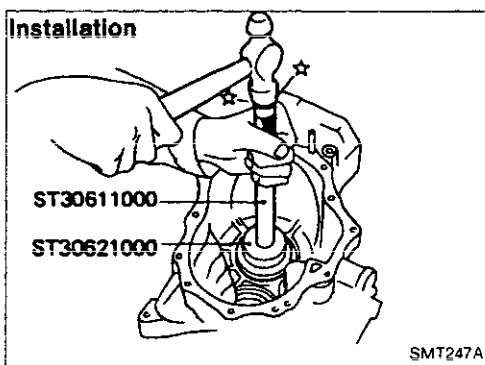

7. Install selected shims and hypoid gear bearing outer race (Transfer case side) in transfer case.

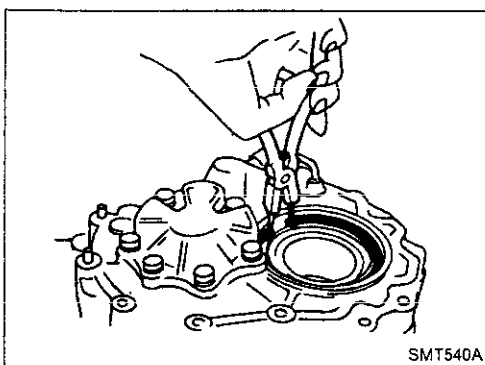
**② REMOVAL OF RING GEAR SNAP RING**

1. Remove adapter oil seal.
2. Remove ring gear snap ring.


Adjustment Procedure (Cont'd)**③ INSTALLATION OF RING GEAR, COUNTERSHAFT AND CASE ADAPTER**

1. Install ring gear and countershaft.
2. Install case adapter.


Tighten bolts to the specified torque.

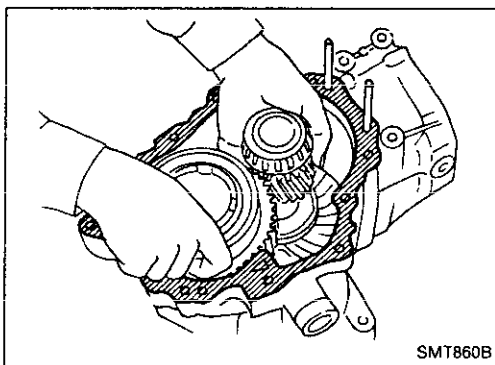**④ SELECTION OF RING GEAR SNAP RING**

1. Install the thinnest snap ring [Part No. 33138-10R00, Thickness: 3.00 mm (0.1181 in)] in ring gear snap ring groove.

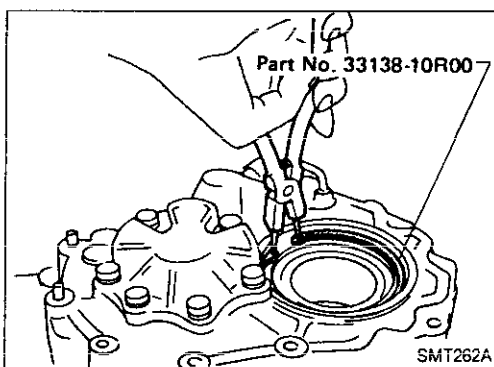


2. Tap ring gear snap ring lightly to seat it into groove.

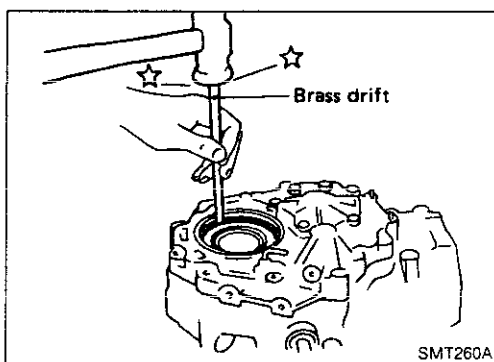


3. Measure clearance of groove.
4. Select proper snap ring using S.D.S. table as a guide.
5. Remove snap ring (Part No. 33138-10R00).
6. Install selected snap ring in ring gear snap ring groove.
7. Measure clearance of groove (ring gear end play) as a final check.


**Allowable clearance of groove
(Ring gear end play):**
0 - 0.06 mm (0 - 0.0024 in)

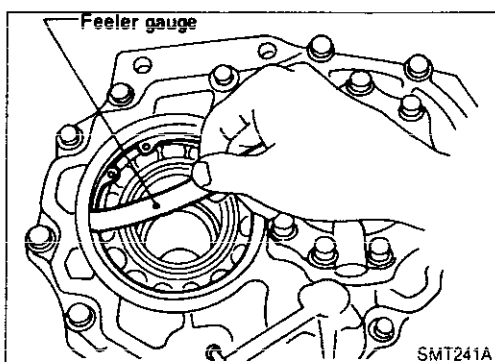**⑤ SELECTION OF COUNTERSHAFT SHIM**


1. Remove end cover and countershaft shim.
- Be careful not to lose O-ring.

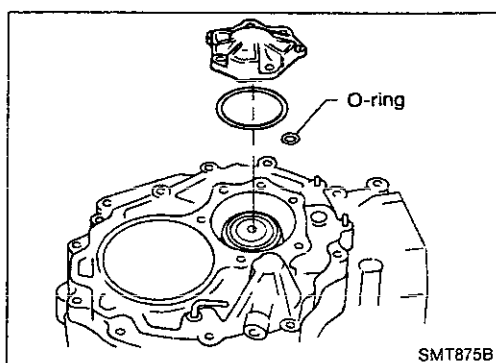


Adjustment Procedure (Cont'd)

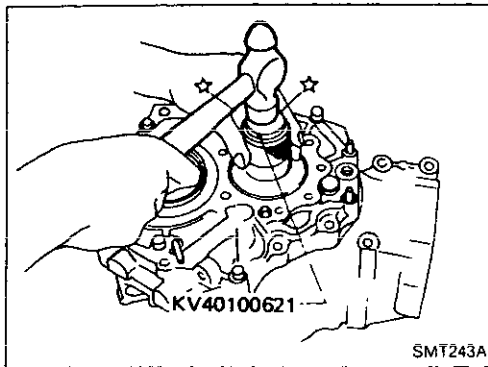

2. Tap countershaft bearing outer race lightly to seat bearings properly.

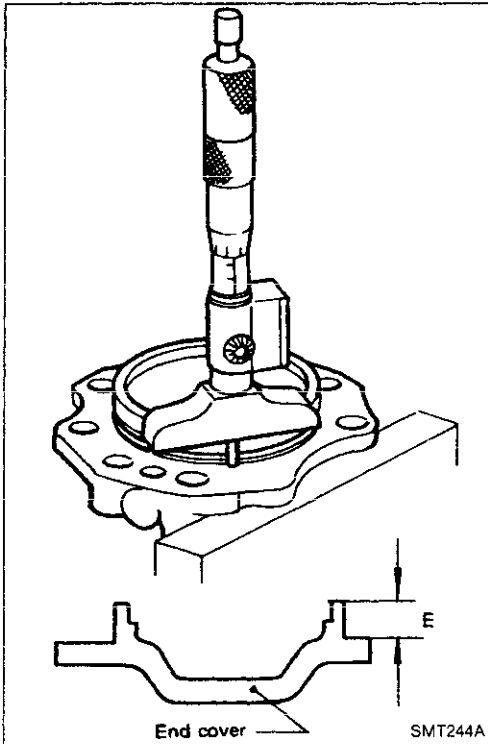

3. Measure factor "E".

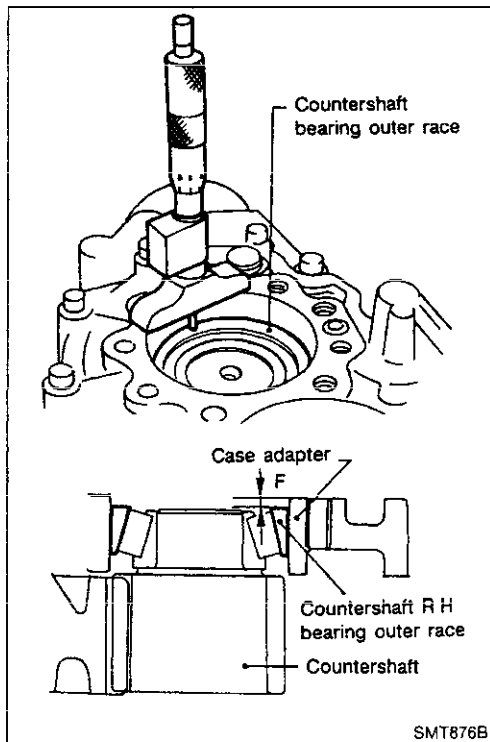

4. Measure factor "F".
5. Determine dimension "G" to be used by the following equation.

$$G = F - E$$

6. Select proper shims using S.D.S. table as a guide.
7. Install selected shims and end cover without O-ring in case adapter.


Tighten bolts to the specified torque.

8. Check countershaft preload as final check — Refer to "PRE-DISASSEMBLY INSPECTION".
If not within specification, select countershaft shim again.


Adjustment Procedure (Cont'd)

⑥ SELECTION OF PINION SLEEVE SHIM

1. Install pinion sleeve assembly without O-ring and shim.

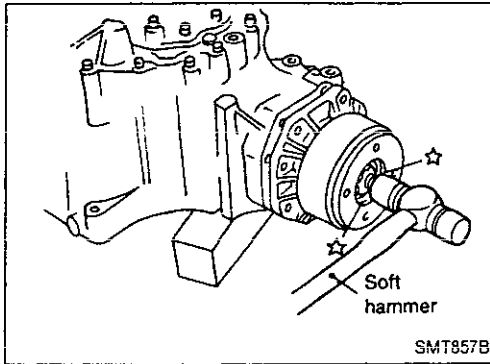

2. While pushing pinion sleeve assembly, measure clearance "H" between transfer case and pinion sleeve, (at least 4 points) with feeler gauge.
3. Select proper shims using S.D.S. table as a guide.
4. Remove pinion sleeve assembly.

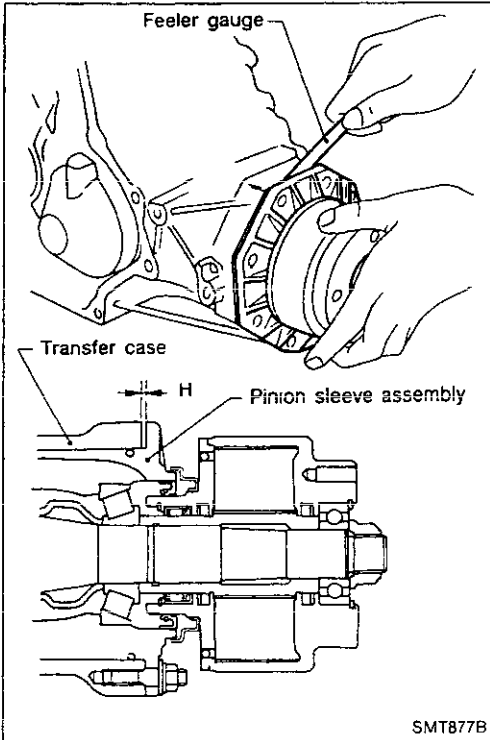

⑦ HYPOID GEAR-TO-PINION BACKLASH INSPECTION

1. Install pinion sleeve assembly with pinion sleeve shim.
2. Check hypoid gear-to-pinion backlash.


Hypoid gear-to-pinion backlash:

0.08 - 0.12 mm (0.0031 - 0.0047 in)

- If backlash is too small, decrease thickness of hypoid gear shim and increase thickness of countershaft shim by the same amount.
- If backlash is too great, reverse the above procedure.

Never change the total amount of shims as it will change the bearing preload.

3. Remove pinion sleeve assembly.

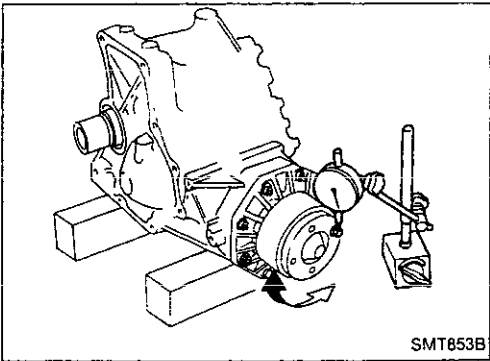

Adjustment Procedure (Cont'd)

⑧ CHECK OF TOOTH CONTACT — Refer to "TOOTH CONTACT".


Usually tooth contact pattern will be correct if you have selected the shims accurately.

However, in extremely rare cases you will have to use trial-and-error processes until the tooth contact pattern is right.

The tooth pattern is the best indication of how well a hypoid gear and pinion have been set up.

⑨ REMOVAL OF END COVER


⑩ REMOVAL OF CASE ADAPTER, RING GEAR AND COUNTERSHAFT

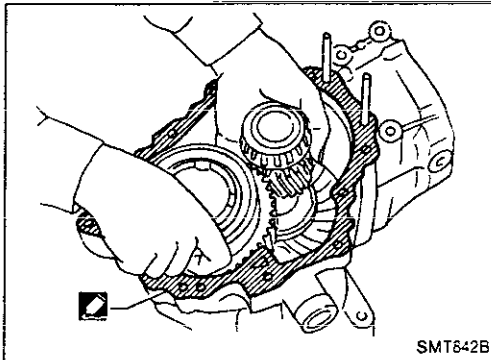


1. Install countershaft.
2. Install ring gear. Tilt countershaft a little to install ring gear more easily.
3. Clean mating surface of case adapter and transfer case.
4. Apply recommended sealant to mating surface of transfer case and case adapter.

Recommended sealant:


Nissan genuine part (KP610-00250) or equivalent

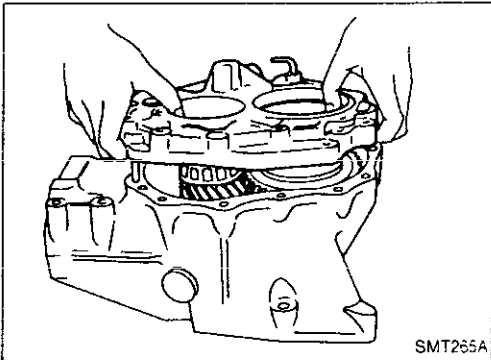


5. Install case adapter.

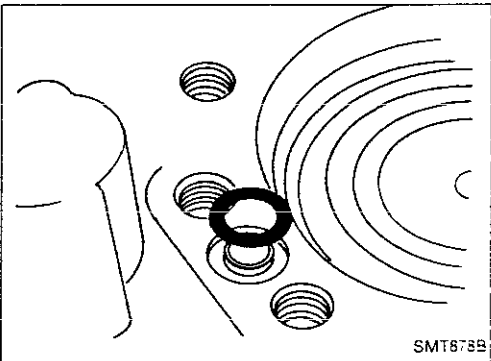


6. Install O-rings on case adapter and end cover.
Before installing, apply multi-purpose grease to O-rings.

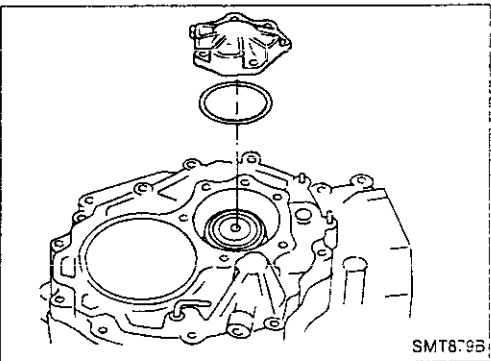

7. Install countershaft bearing outer race, countershaft shim and end cover.

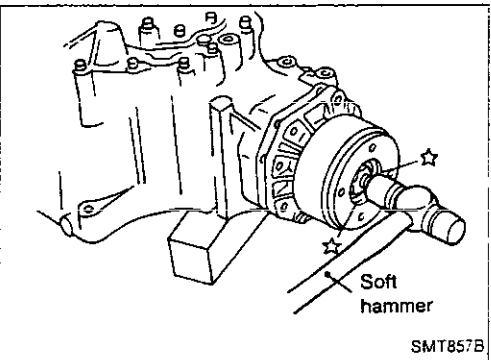


8. Install O-ring on pinion sleeve and then install pinion sleeve shim and pinion sleeve assembly on transfer case.
● **Before installing O-ring, apply multi-purpose grease to O-ring.**
9. Install adapter oil seal. Refer to "ON-VEHICLE SERVICE".

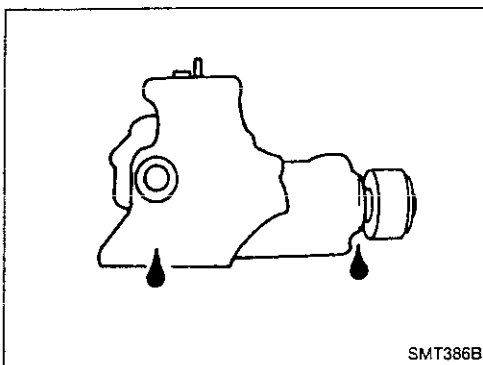


Checking Transfer Oil

- Check transfer oil for leakage.

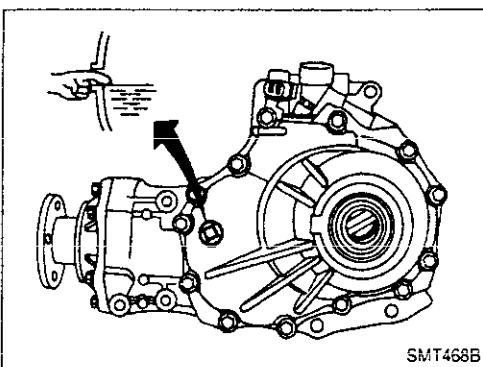

- Check oil level.

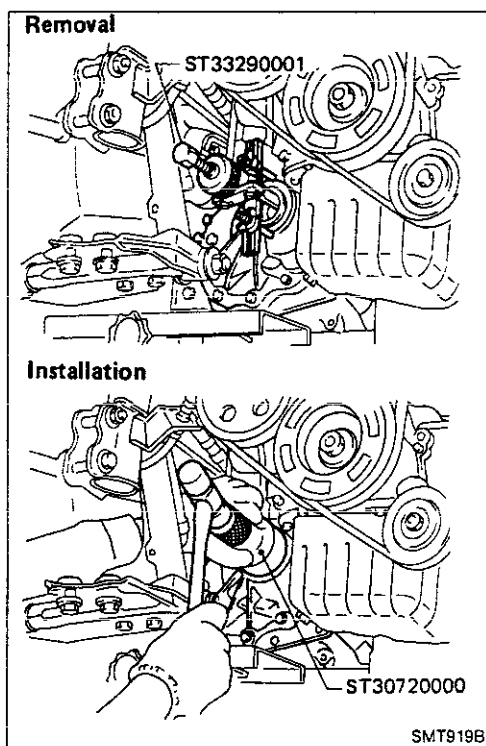


Replacing Oil Seal

FRONT COVER OIL SEAL


- Lubricate transfer front cover oil seal lips with multi purpose grease before installing drive shaft.

Be careful not to damage transfer front cover oil seal when installing drive shaft.

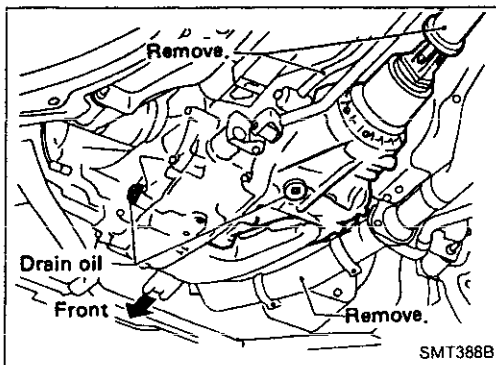

Removal



- Drain gear oil from transfer and transaxle.
- Remove exhaust front tube.
- Put matchmarks on flanges and then separate propeller shaft from transfer.
- Remove shift control rod and support rod from transaxle and transfer.
- Draw out drive shafts from transaxle — Refer to section FA.
- Remove clutch operating cylinder and hose from transaxle.
- **Support engine with hoist.**
- Remove engine mounting bracket LH and insulator located at left front corner of engine compartment.
- Remove parts shown in below illustration.

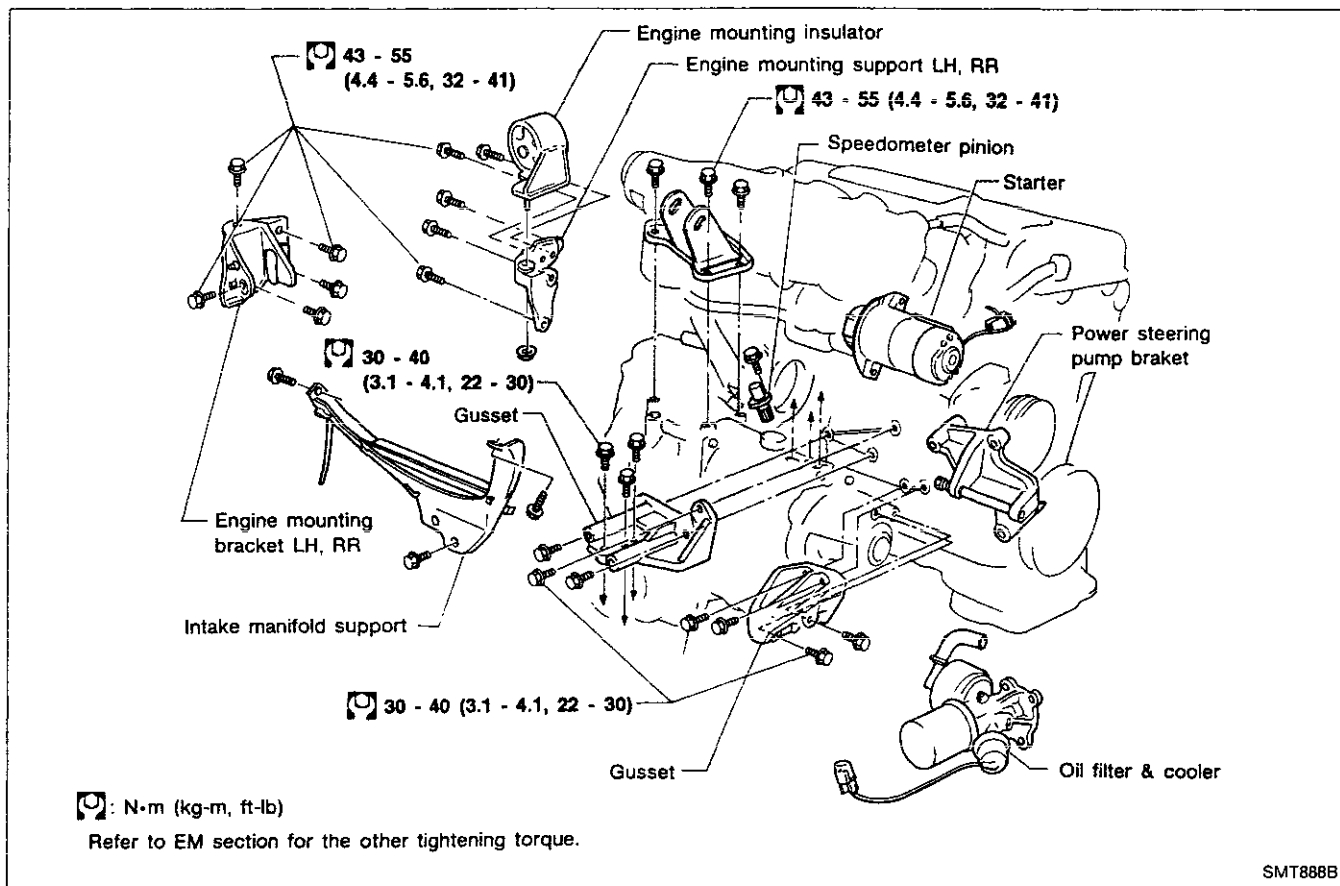

- Separate transaxle from engine and transfer and slide transaxle to left side about 50 mm (1.97 in).
- Remove transfer fixing bolts, then lower transfer.

WARNING

- **Support transaxle by a jack.**
- **Support transfer by a jack while removing it.**
- **Be careful not to damage transaxle oil seal when removing transfer.**

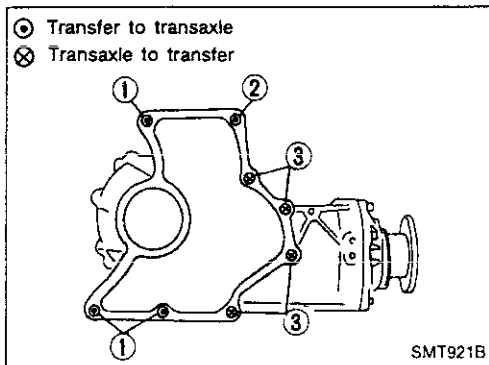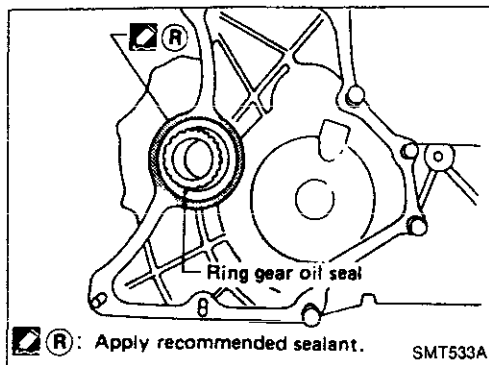

Installation

- Lubricate transfer side oil seal lip in transaxle and transfer front cover oil seal with multi-purpose grease before installing transfer and drive shaft.
- Apply recommended sealant on transfer case as shown at left.

Recommended sealant:

Nissan genuine part (KP510-00150) or equivalent


- Be careful not to damage transaxle oil seal when inserting spline portion of transfer ring gear and connect shaft into transaxle.
- Tighten bolts securing transfer.

Bolt No.	Tightening torque N m (kg-m, ft-lb)	ℓ mm (in)
1	30 - 40 (3.1 - 4.1, 22 - 30)	65 (2.56)
2	30 - 40 (3.1 - 4.1, 22 - 30)	85 (3.35)
3	30 - 40 (3.1 - 4.1, 22 - 30)	65 (2.56)

- Be careful not to damage drive shaft oil seal and transfer front cover oil seal when installing drive shaft.
- Refill with recommended gear oil.


Gear oil for transfer is different from that for transaxle.

Case Components

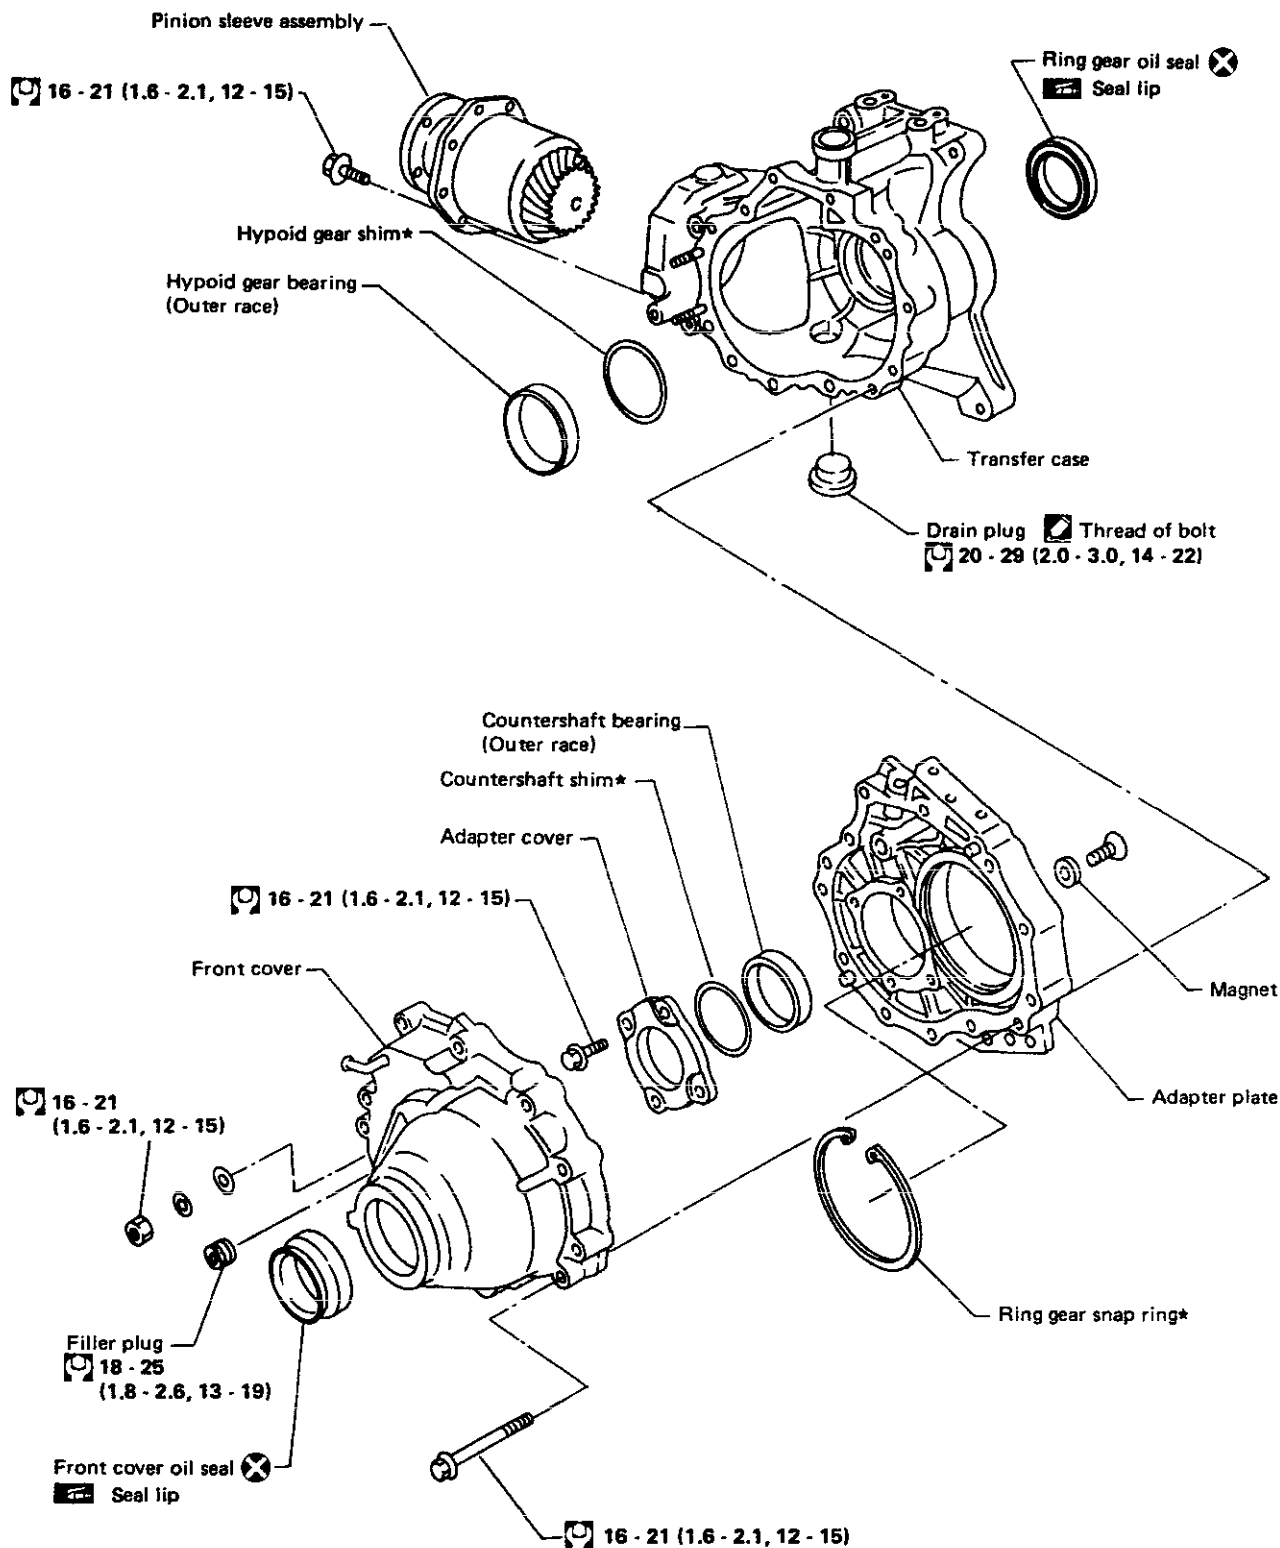


★ Select proper thickness.
: N·m (kg·m, ft·lb)

Gear Components

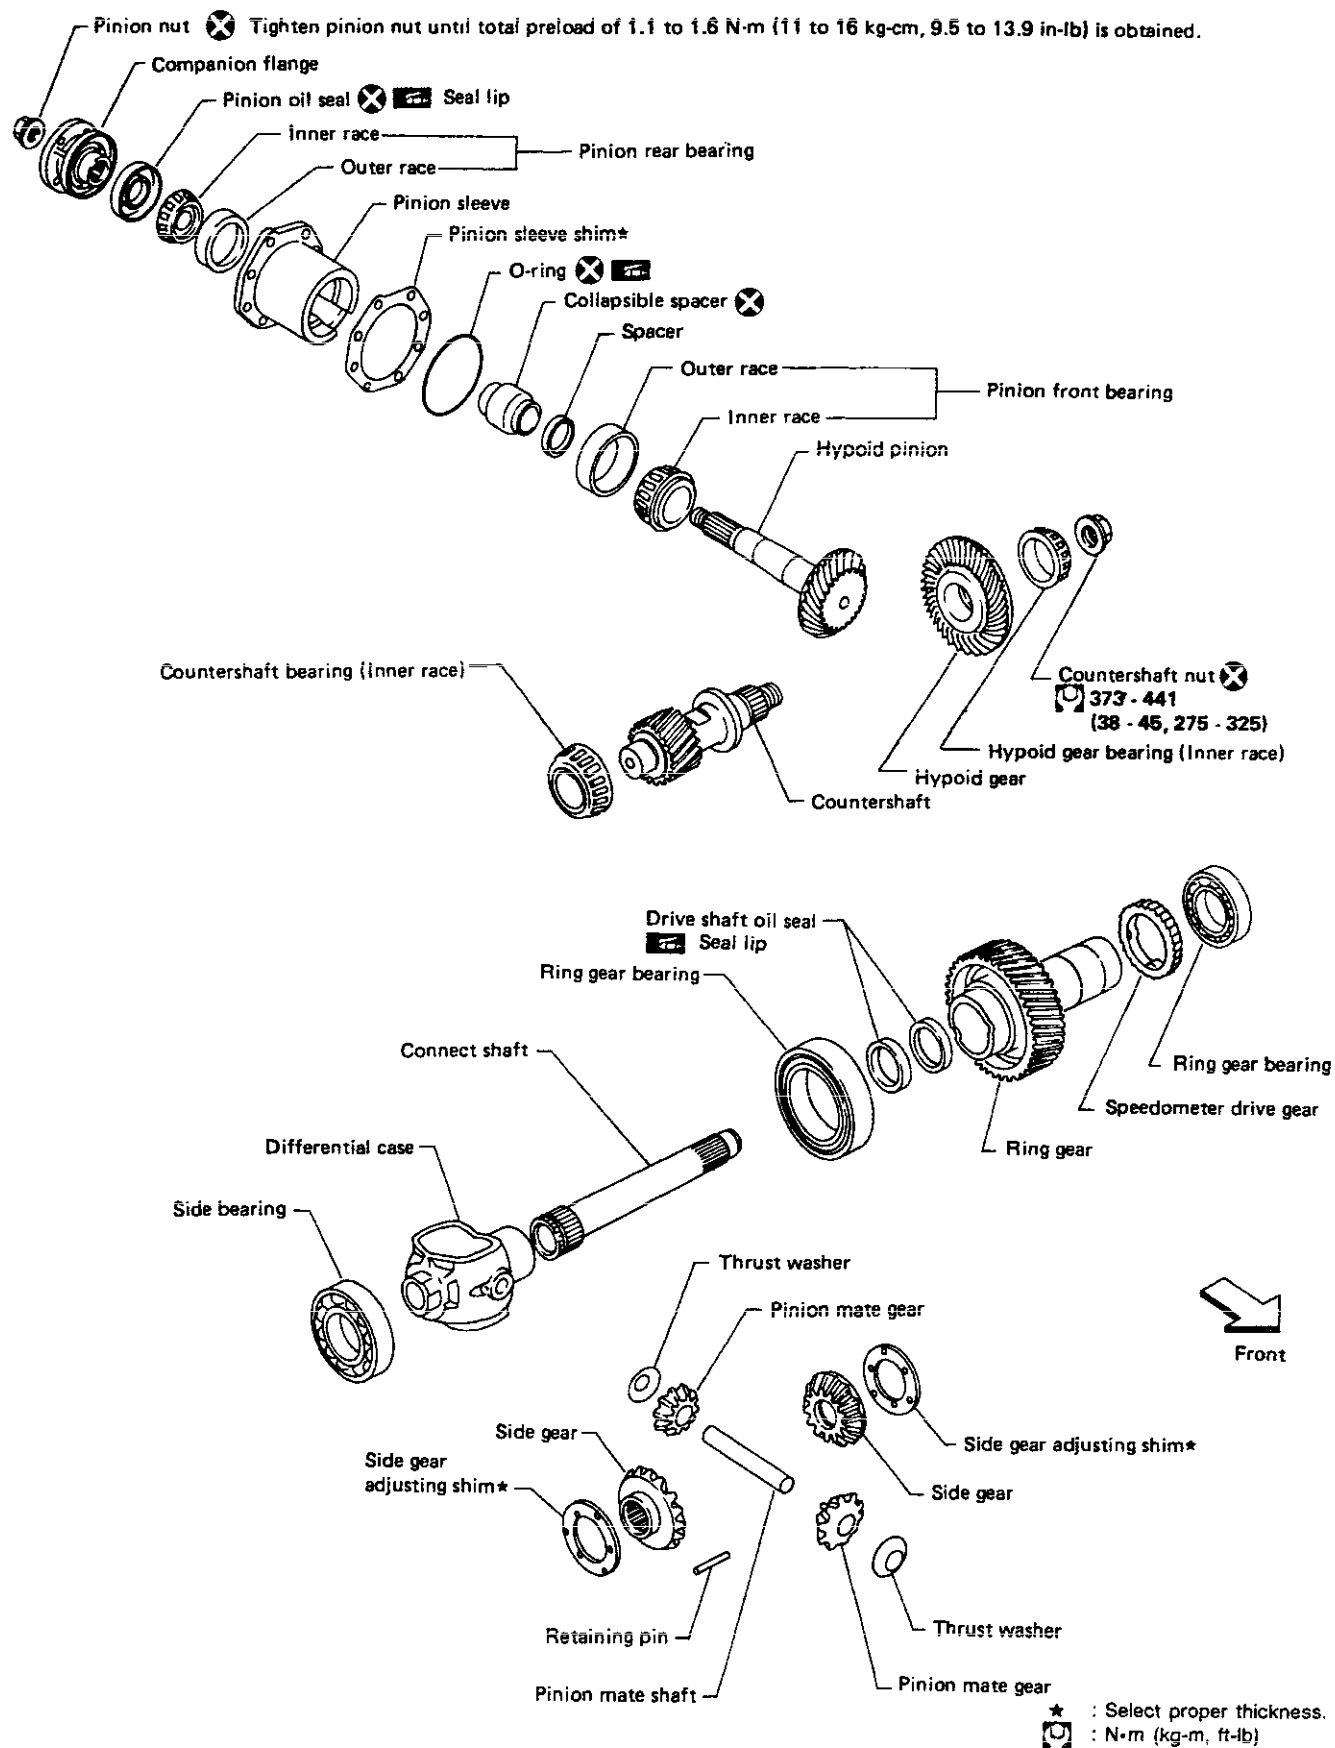

SMT810B

Removal

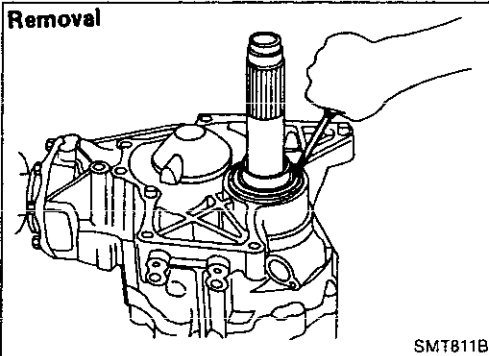


Oil seal

RING GEAR OIL SEAL


- Check ring gear oil seal for oil leakage.

Be careful not to damage ring gear when removing ring gear oil seal.

Installation

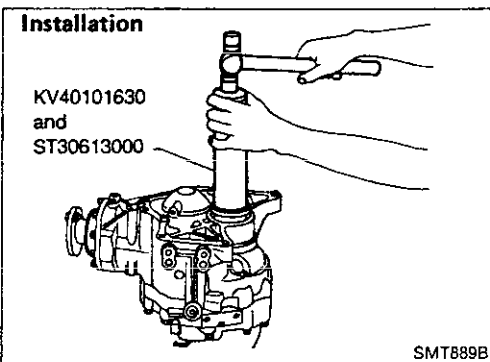

Apply multi-purpose grease to seal lip of oil seal before installing.

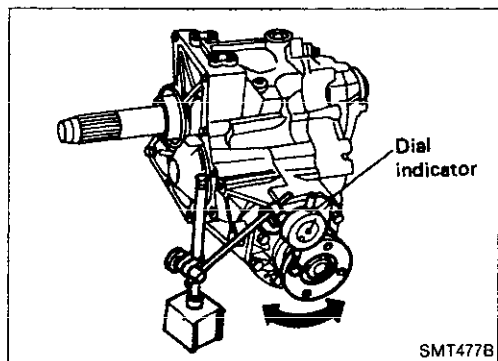


Gear Components

1. Check hypoid gear-to-pinion backlash.
 - a. Install a bolt and nut in one bolt hole of companion flange.
 - b. Measure hypoid gear-to-pinion backlash.

**Hypoid gear-to-pinion backlash
(at bolt hole of companion flange):**
0.10 - 0.15 mm (0.0039 - 0.0059 in)


- c. If not within specification, adjust hypoid pinion height.

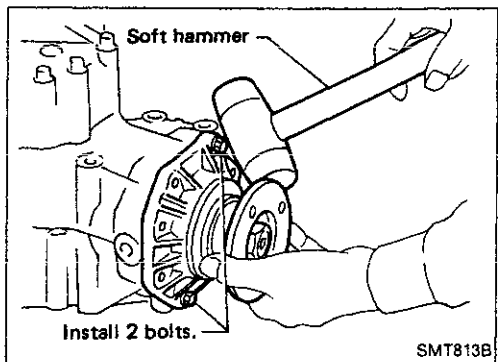

2. Remove pinion sleeve assembly by tapping.

Install 2 bolts through pinion sleeve and onto transfer case to prevent the pinion sleeve assembly from dropping. Do not tighten bolts.

Gear Components (Cont'd)

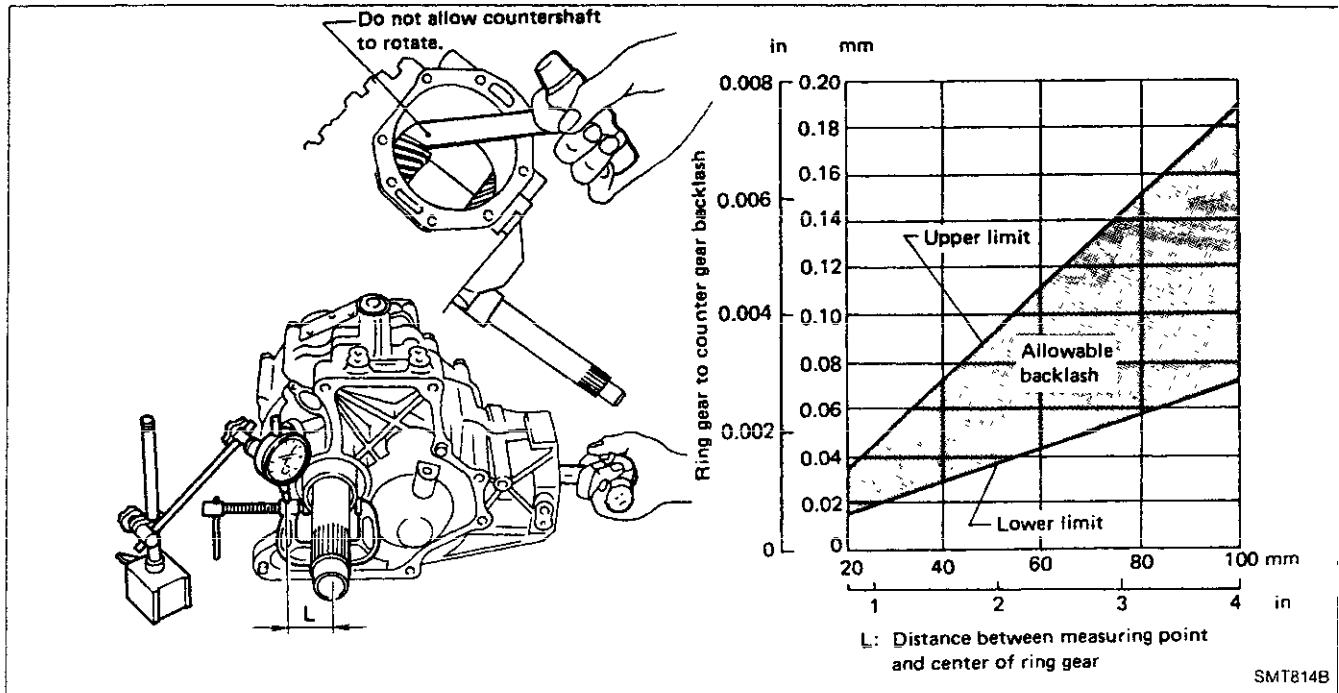


3. Check ring gear-to-counter gear backlash.

Ring gear-to-counter gear backlash:

0.02 - 0.04 mm (0.0008 - 0.0016 in)

If not within specification, disassemble and check transfer case, adapter plate, ring gear and countershaft components. Replace if necessary.

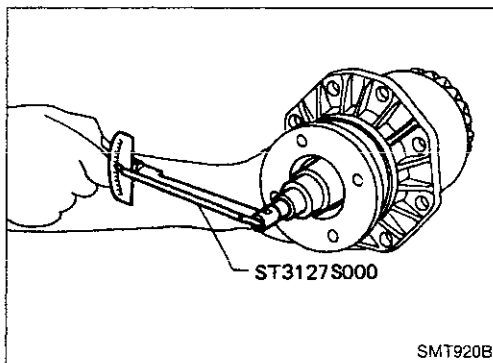


4. Check pinion bearing preload.
 - a. Turn hypoid pinion several times in both directions to seat bearings correctly.
 - b. Measure preload with Tool.

Pinion bearing preload:

1.1 - 1.6 N·m

(11 - 16 kg-cm, 9.5 - 13.9 in-lb)

If not within specification, disassemble and adjust it — Refer to "REPAIR FOR COMPONENT PARTS".

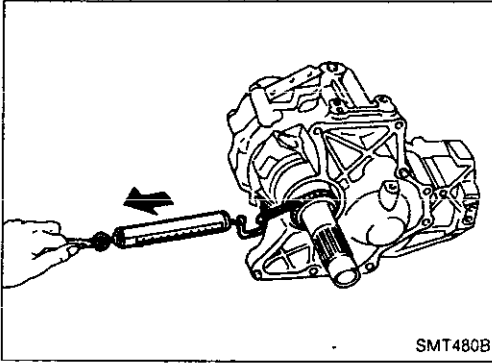Gear Components (Cont'd)

5. Check countershaft bearing preload.
 - a. Wind a strong line onto ring gear shaft.
 - b. Turn ring gear several times in both directions to seat bearing correctly.
- c. Measure countershaft bearing preload.

Countershaft bearing preload

(at outer diameter of ring gear spline):


88 - 235 N (9 - 24 kg, 20 - 53 lb)

If not within specification, disassemble and adjust countershaft bearing preload — Refer to "ADJUSTMENT" and check countershaft, hypoid gear and ring gear bearings.

6. Check tooth contact — Refer to "TOOTH CONTACT".

Check the gear tooth contact pattern to verify correct contact of the hypoid gear and pinion.


A hypoid gear set not positioned properly may be noisy, have short life or both.

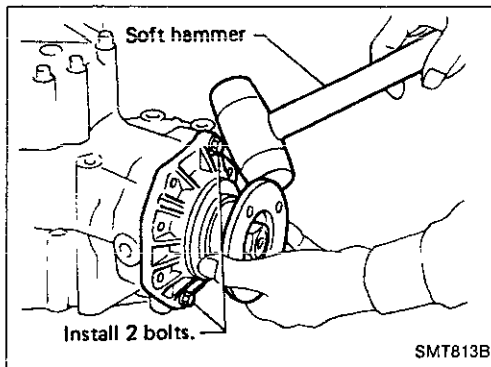


1. Remove pinion sleeve by lightly tapping.

Install 2 bolts through pinion sleeve and onto transfer case to prevent the pinion sleeve from dropping. Do not tighten bolts.

2. Thoroughly clean hypoid gear and pinion teeth.

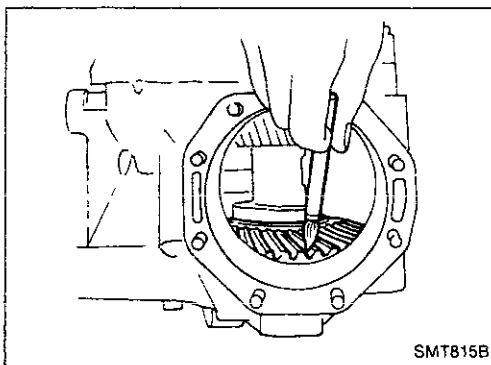


3. Sparingly apply a mixture of powdered ferric oxide and oil or equivalent to 3 or 4 teeth of hypoid gear.

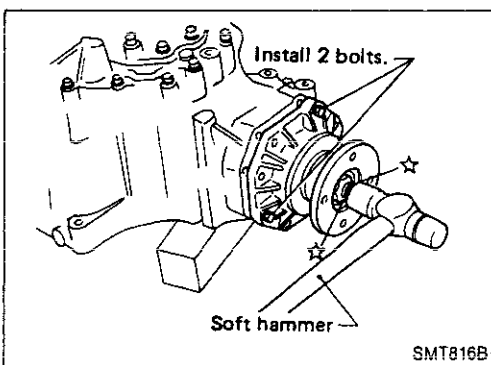








4. Install pinion sleeve shim and sleeve assembly.


- **Install 2 bolts through pinion sleeve and onto transfer case. Do not tighten bolts. These bolts will guide pinion sleeve into case.**
- **After installing pinion sleeve, tighten bolts to the specified torque.**

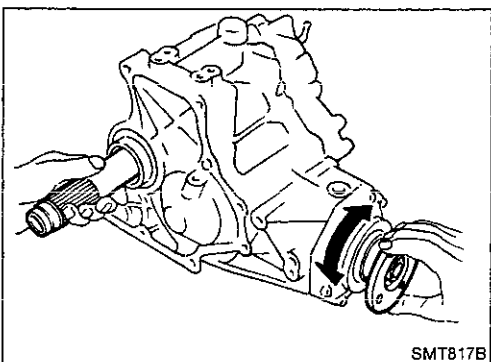


5. Hold ring gear spline steady by hand and rotate companion flange back and forth.
6. Remove pinion sleeve assembly.
7. Compare contact marks left on hypoid gear to those in the following illustration.

Tooth Pattern Interpretation

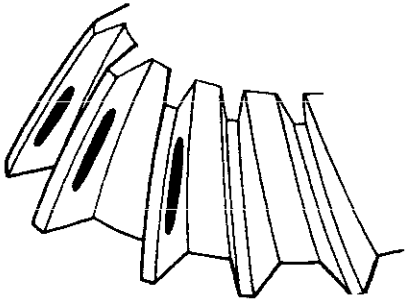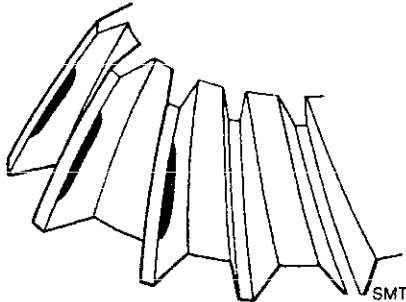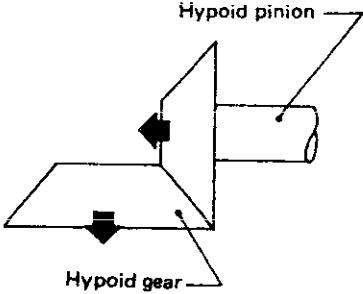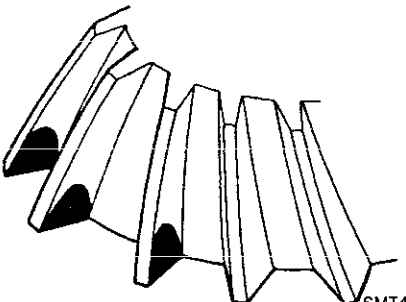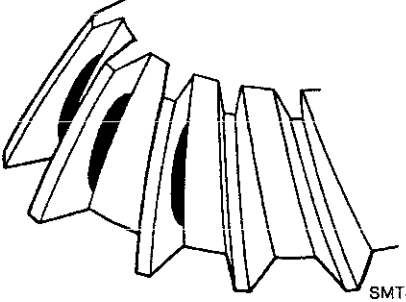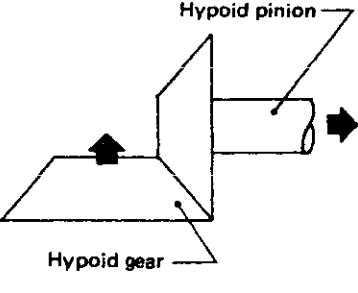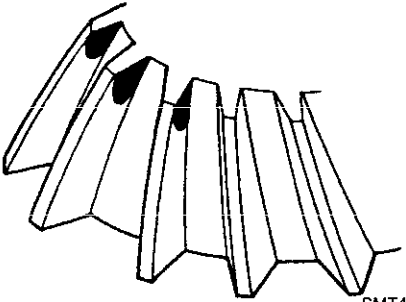TOOTH PATTERN	
 Correct Pattern SMT364A	After adjustment, check hypoid gear to pinion gear backlash. — Refer to "PRE-DISASSEMBLY INSPECTION".
 SMT464A	Adjustment  SMT469A - Increase thickness of countershaft shim and decrease thickness of hypoid gear shim. Do not change total thickness of countershaft shim plus hypoid gear shim. - Decrease thickness of pinion sleeve shim.
 SMT465A	
 SMT466A	 SMT468A - Increase thickness of hypoid gear shim and decrease thickness of countershaft shim. Do not change total thickness of countershaft shim plus ring gear shim. - Increase thickness of pinion sleeve shim.
 SMT467A	

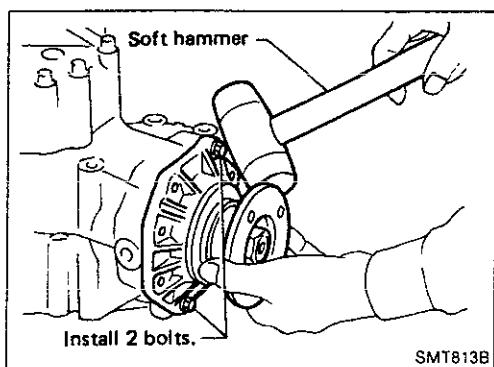


1. Remove pinion sleeve by lightly tapping.
Install 2 bolts through pinion sleeve and onto transfer case to prevent the pinion sleeve from dropping. Do not tighten bolts.

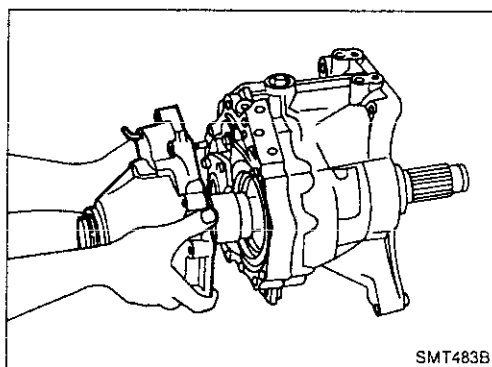


2. Remove all front cover bolts and then remove front cover with front differential by lightly tapping.

3. Remove adapter plate by lightly tapping.

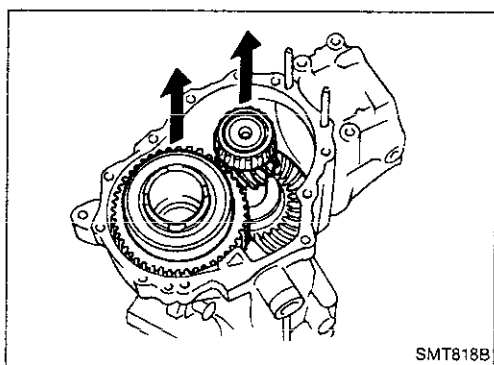

4. Remove ring gear, countershaft and shift fork assembly as a set.

Removal

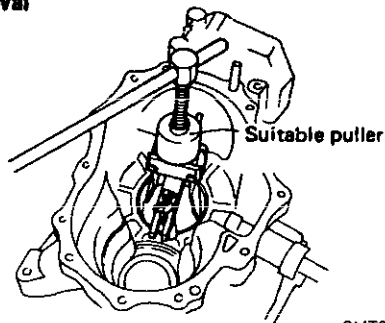


SMT246A

Transfer Case and Front Cover

REMOVAL AND INSTALLATION


- Hypoid gear bearing outer race

Installation

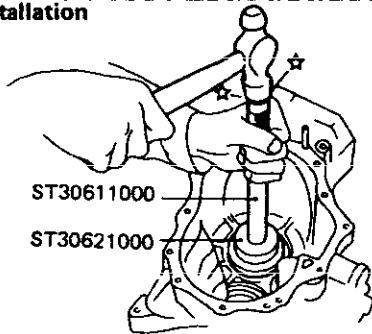

SMT890B

Removal

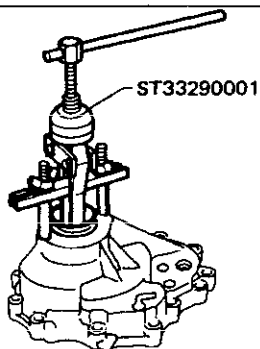


SMT891B

- Front cover oil seal


Install front cover oil seal after assembly.

- Refer to "PRE-DISASSEMBLY INSPECTION".

Installation

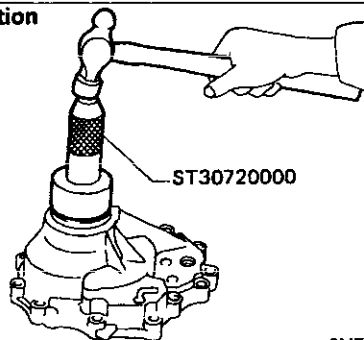

SMT892B

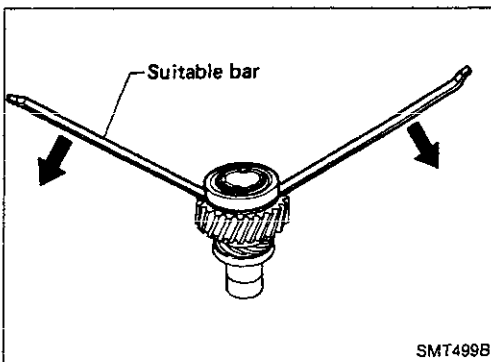


SMT499B

Ring Gear


DISASSEMBLY

1. Pull out ring gear bearings.


Ring Gear (Cont'd)

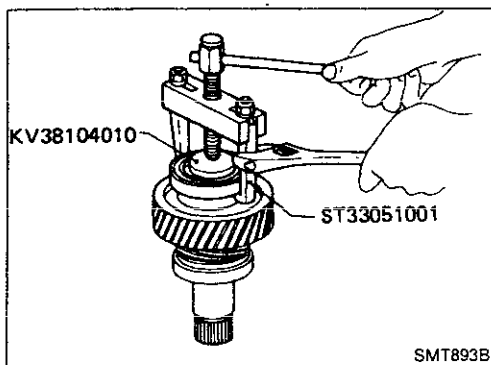

2. Remove speedometer drive gear.

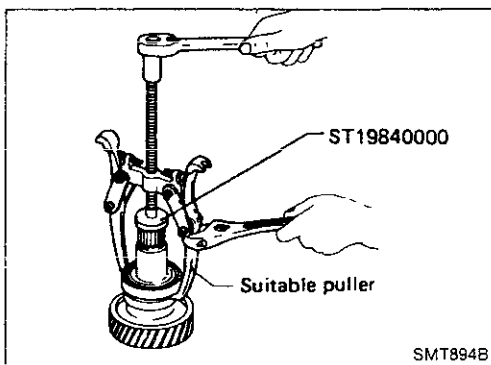


3. Remove drive shaft oil seal.

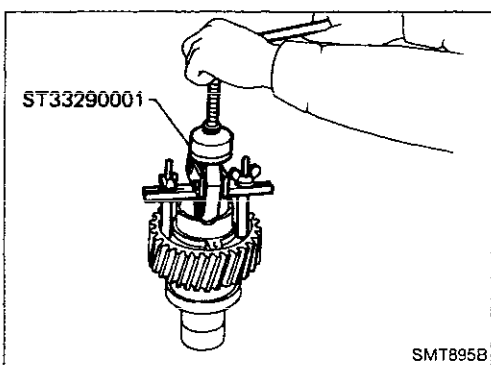

INSPECTION


Gear and shaft

- Check gears for excessive wear, chips or cracks.
- Check shaft for cracks or wear.

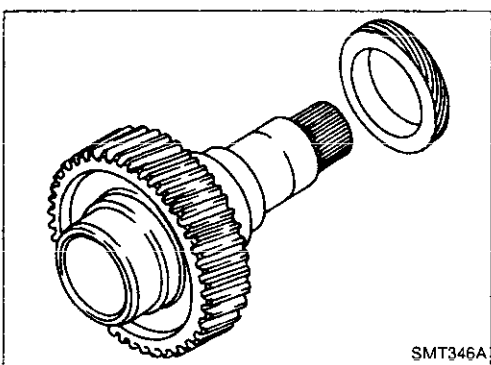


Bearings

- Make sure bearings roll freely and are free from noise, crack, pitting or wear.

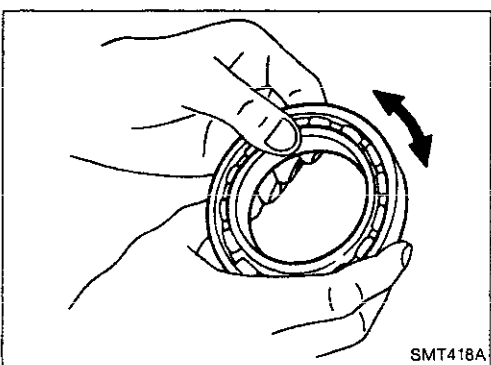


Ring Gear (Cont'd)


ASSEMBLY

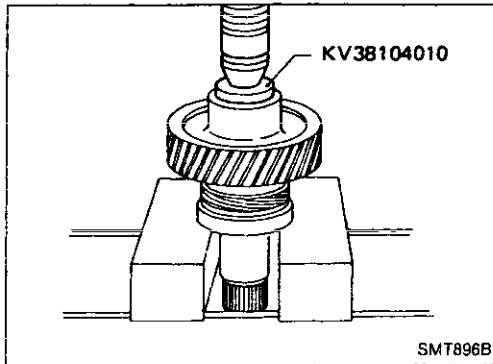


1. Install speedometer drive gear.

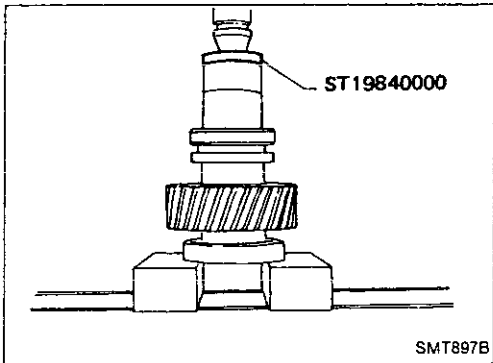

2. Press on ring gear bearings.

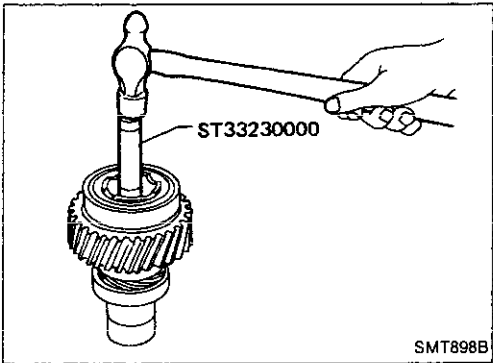


3. Install drive shaft oil seal.

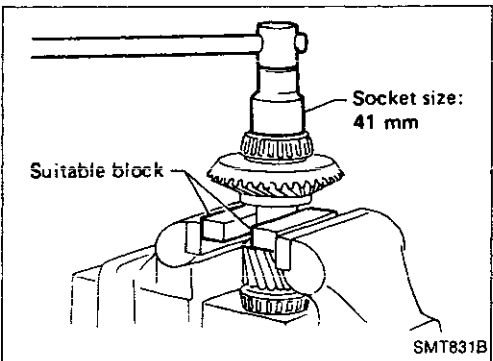

Countershaft

DISASSEMBLY


1. Remove countershaft nut.

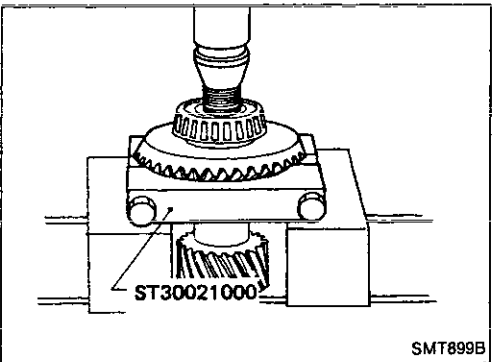



2. Press out hypoid gear together with hypoid gear bearing.

Countershaft (Cont'd)

3. Press out hypoid gear bearing.

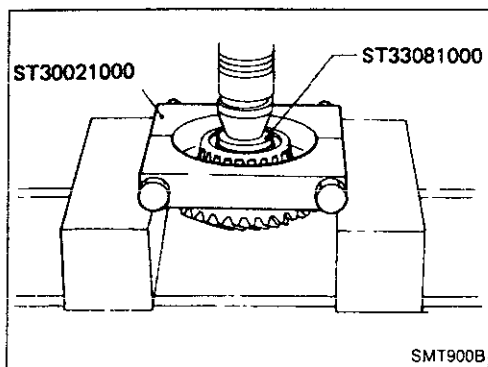

4. Press out countershaft bearing.

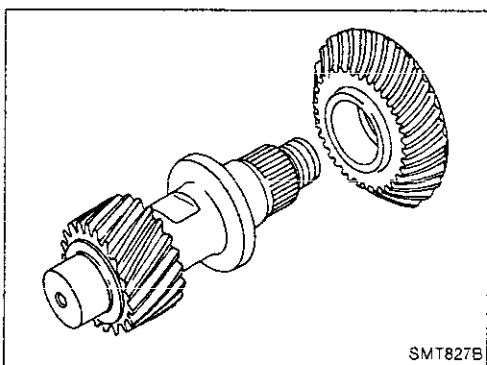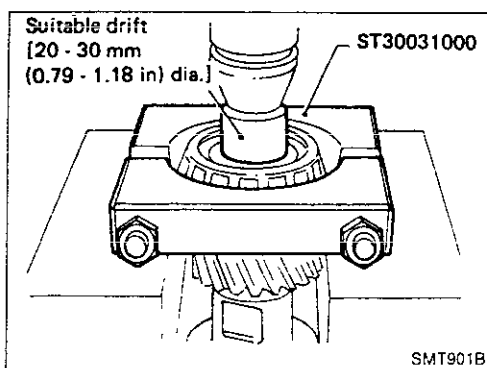


INSPECTION

Gears and shaft

- Check gears for excessive wear, chips or cracks.
- When replacing hypoid gear, replace hypoid gear and hypoid pinion as a set.**
- Check shaft for cracks or wear.


Bearings

- Make sure bearings roll freely and are free from noise, crack, pitting or wear.
- When replacing tapered roller bearing, replace outer and inner race as a set.**

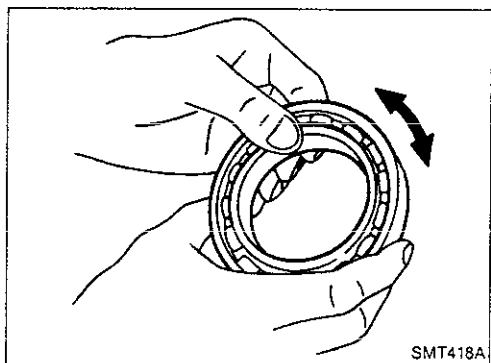


ASSEMBLY


1. Press on hypoid gear bearing.

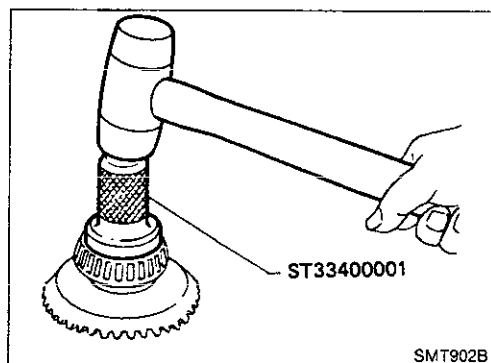


Countershaft (Cont'd)

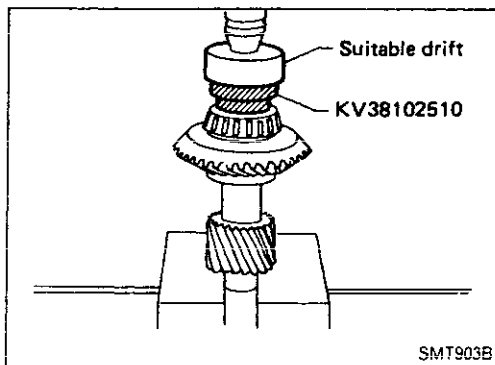


2. Press on hypoid gear together with hypoid gear bearing.

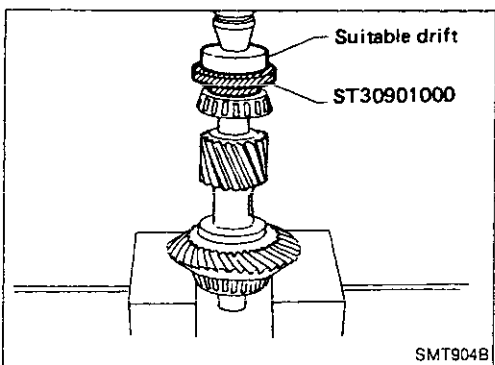

3. Press on countershaft bearing.

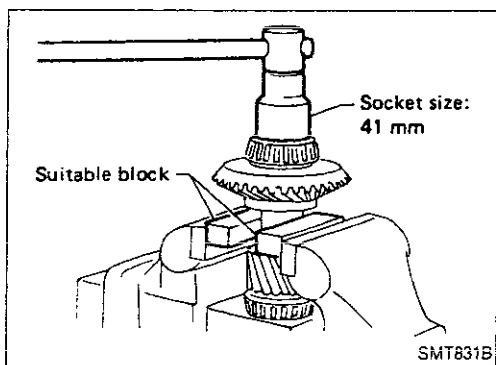


4. Install new countershaft nut.

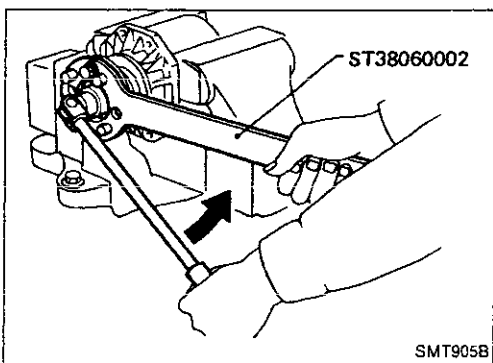


Pinion Sleeve

DISASSEMBLY


1. Before disassembly, check pinion bearing preload — Refer to "PRE-DISASSEMBLY INSPECTION".
2. Remove pinion nut.

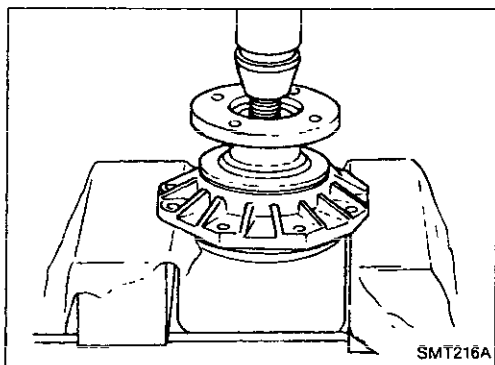


3. Press out hypoid pinion together with front inner race, collapsible spacer and spacer.

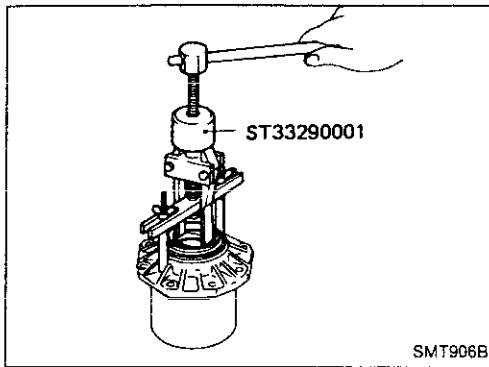Pinion Sleeve (Cont'd)


4. Pull out pinion oil seal and remove pinion rear bearing inner cone.

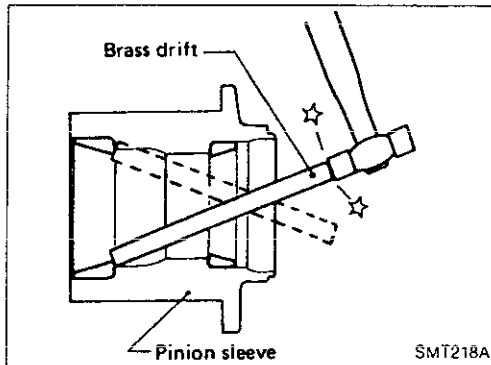


5. Remove bearing outer races with brass drift.

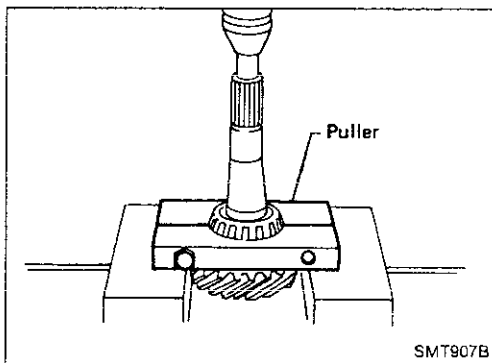

6. Remove pinion front bearing inner race.
Always replace after removing.

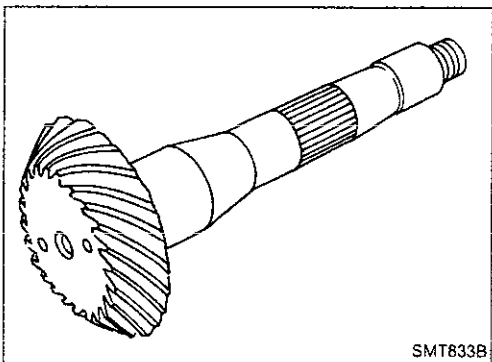**INSPECTION****Gear and shaft**

- Check gears for excessive wear, chips or cracks.
- When replacing hypoid pinion, replace hypoid gear and hypoid pinion as a set.**
- Check shaft for cracks or wear.

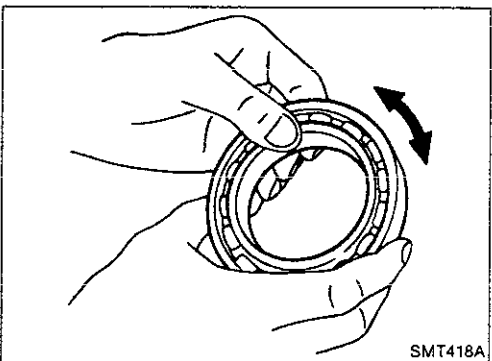
**Bearing**

- Make sure bearings roll freely and are free from noise, crack, pitting or wear.
- When replacing tapered roller bearing, replace outer and inner race as a set.**



Pinion Sleeve (Cont'd)

ASSEMBLY


1. Press fit pinion front bearing.

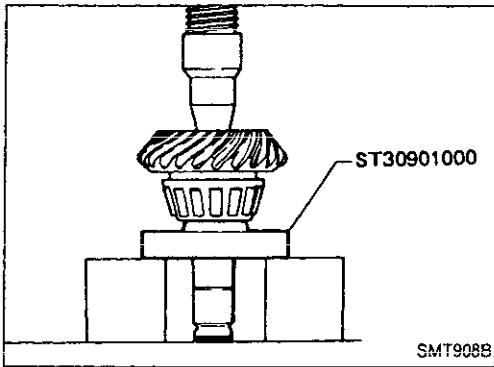


2. Press fit front and rear bearing outer races.

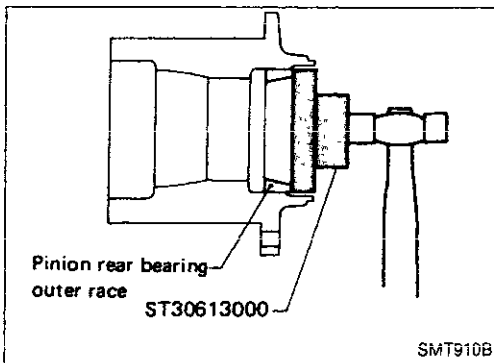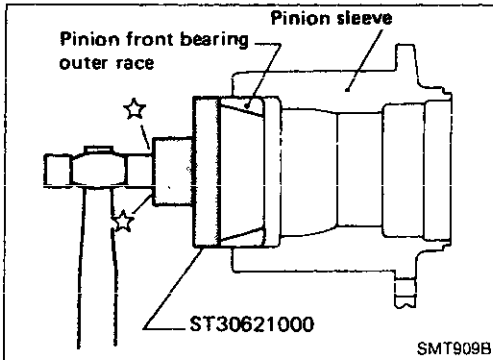


3. Place pinion rear bearing inner race in pinion sleeve.
Before installing, lubricate pinion rear bearing with recommended gear oil.

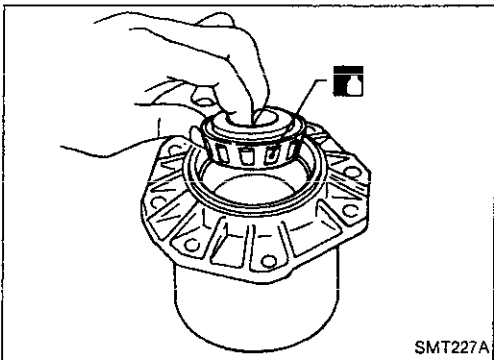


4. Install pinion oil seal.
Before installing, apply multi-purpose grease to seal lip of oil seal.

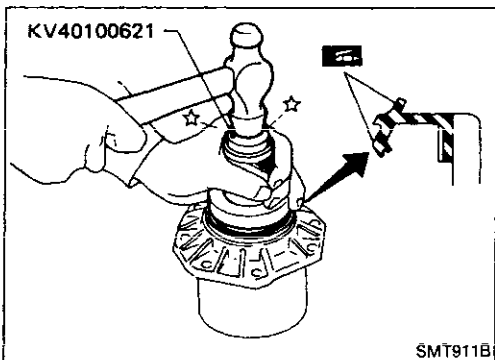


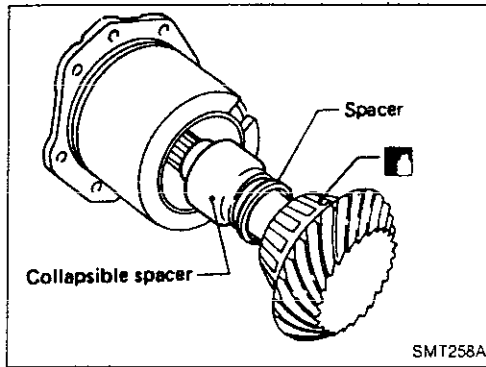Pinion Sleeve (Cont'd)


5. Place spacer and **new** collapsible spacer on hypoid pinion and lubricate pinion front bearing with gear oil, and insert them in pinion sleeve.

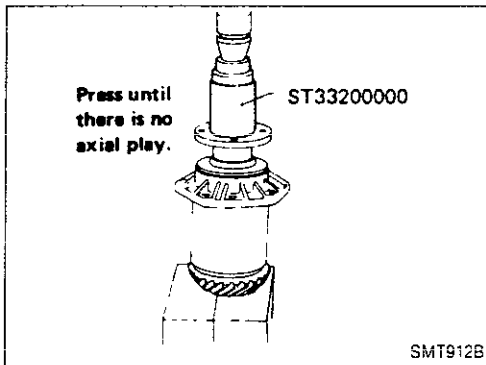

6. Press in companion flange until there is no axial end play.

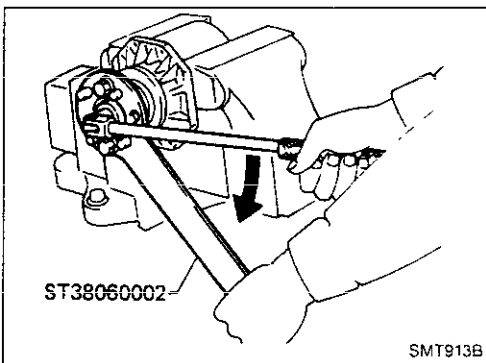


7. Tighten pinion nut slowly to the specified preload. Check bearing preload often to prevent over torque.

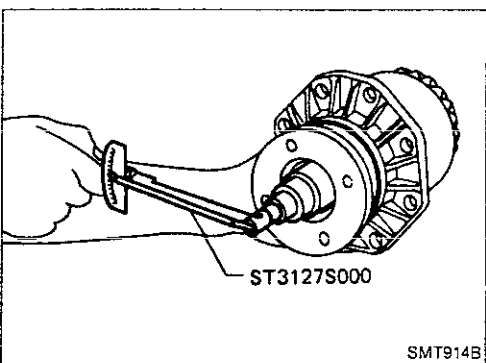

When checking preload, turn drive pinion in both directions several times to seat bearing correctly.


Pinion bearing preload:

1.1 - 1.6 N·m (11 - 16 kg-cm, 9.5 - 13.9 in-lb)

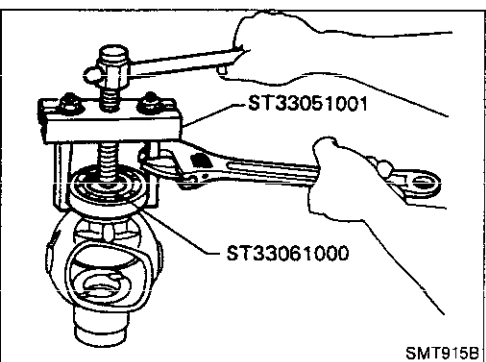
**Front Differential****DISASSEMBLY**

1. Remove front differential side bearing.


Front Differential (Cont'd)

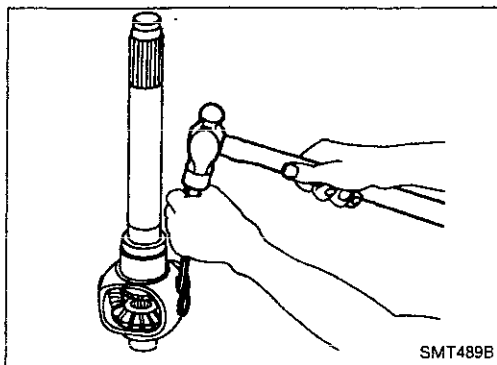

2. Drive out pinion mate shaft retaining pin.
3. Remove pinion mate shaft, pinion mate gear and side gear.

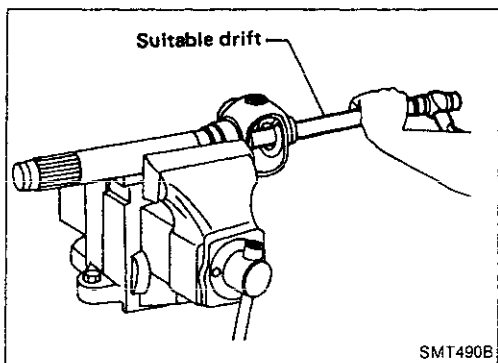


4. Remove connect shaft.

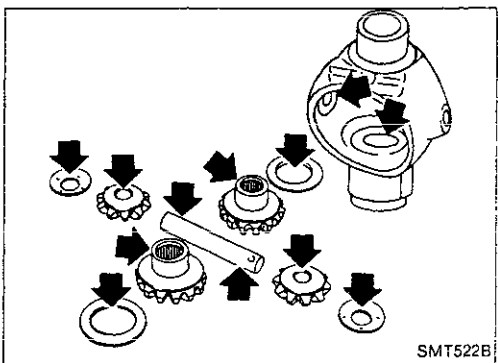

INSPECTION


Gear, washer, shaft and case

- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.

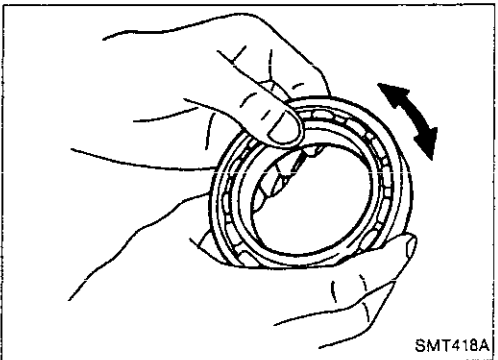

Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.


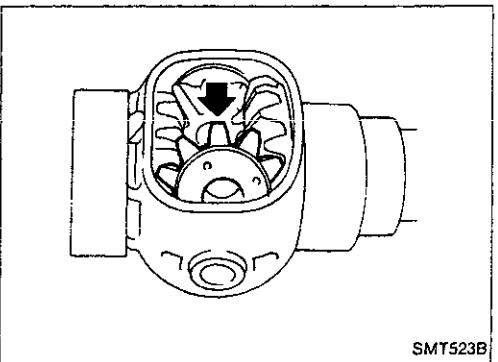


ASSEMBLY

1. Fit side gear thrust washers and side gears, then install pinion mate washers and pinion mate gears in case.


Front Differential (Cont'd)

Take care to install left and right side gear correctly.

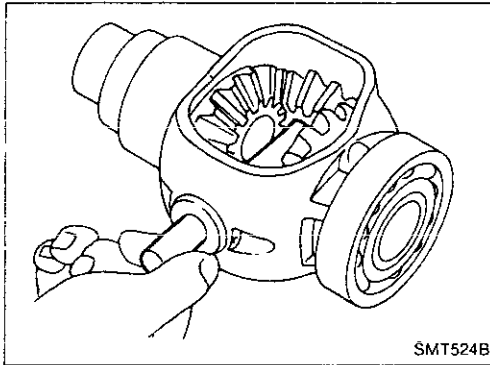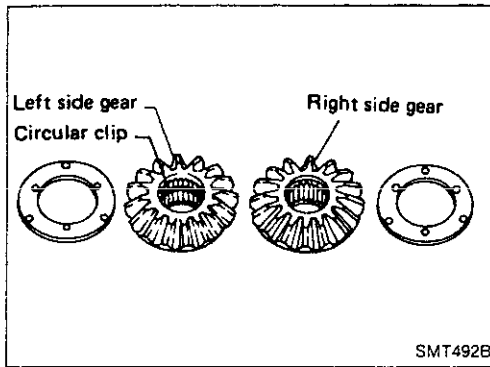

2. Insert pinion mate shaft.

When installing, be careful not to damage pinion mate thrust washers.

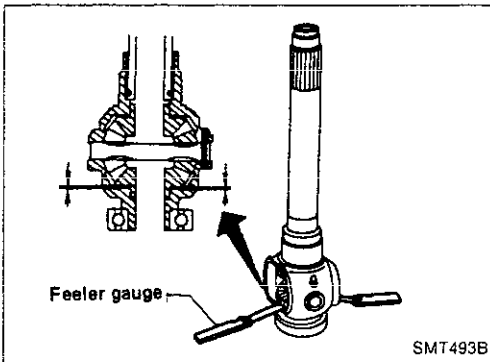

3. Measure clearance between side gear and differential case with washers.


Clearance between side gear and differential case with washers:

0.1 - 0.2 mm (0.004 - 0.008 in)

If not within specification, adjust clearance by changing thickness of side gear thrust washers.


Side gear thrust washer:

Refer to S.D.S.

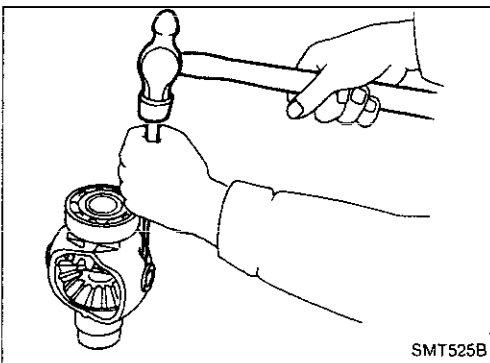

4. Install retaining pin.


Make sure that retaining pin is flush with case.

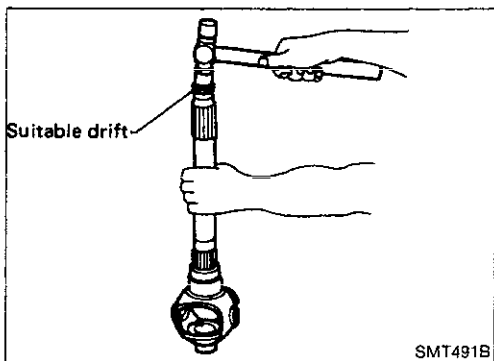

5. Install connect shaft by lightly tapping.

Front Differential (Cont'd)

6. Press on differential side bearing.

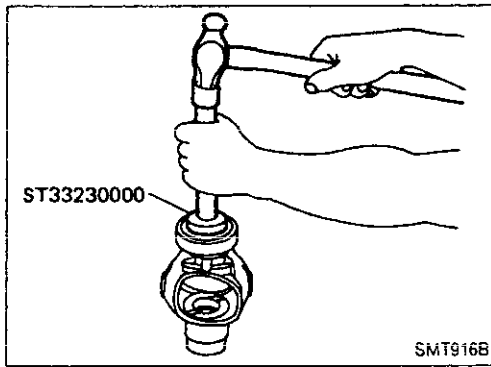

It is necessary to adjust ring gear end play, countershaft bearing preload, hypoid gear and hypoid pinion height, front differential case end play when replacing any part in chart below.

Adjustment Application Chart

Determine the required adjustment						X: Necessary Blank: Not necessary
Replaced part	Adjustment	Ring gear end play	Countershaft bearing preload	Hypoid gear height	Hypoid pinion height	Front differential case end play
	Adjusting method	Ring gear snap ring	Countershaft shim and Hypoid gear shim	Hypoid gear shim	Pinion sleeve shim	Front differential side bearing adjusting shim
Transfer case set (Transfer case, adapter plate and front cover)		X	X	X	X	X
Ring gear		X				X
Ring gear bearing		X				
Hypoid gear set (Hypoid gear and pinion)			X	X	X	
Countershaft			X			
Hypoid gear bearing			X	X	X	
Countershaft bearing			X			
Hypoid pinion bearing					X	
Pinion sleeve					X	
Front differential case						X
Front differential side bearing						X

Adjustment Sequence Chart

Perform required adjustment with this chart.

For details, refer to following pages.

Adjustment		Ring gear end play	Countershaft bearing preload	Hypoid gear height	Hypoid pinion height	Front differential case end play
Operation						
①	Selection of hypoid gear shim			1		
②	Removal of ring gear snap ring	1				
③	Installation of ring gear, countershaft and adapter plate	2	1	2	1	1
④	Selection of ring gear snap ring	3				
⑤	Selection of countershaft shim		2	3		
⑥	Selection of pinion sleeve shim				2	
⑦	Hypoid gear-to-pinion backlash inspection		3	4	3	
⑧	Selection of front differential side bearing shim					2
⑨	Tooth contact inspection	4	4	5	4	
⑩	Removal of adapter cover		5	6		
⑪	Removal of front cover, front differential, adapter plate, ring gear and countershaft	5	6	7	5	





The numbers in the chart show the order of the operations required for each adjustment

Adjustment Procedure Chart

① SELECTION OF HYPOID GEAR SHIM

1. To simplify the adjustment, make a chart like the one below and write measurements on the chart.

FACTOR	HUNDREDTHS OF A MILLIMETER
A: Hypoid gear	
B Hypoid gear bearing	

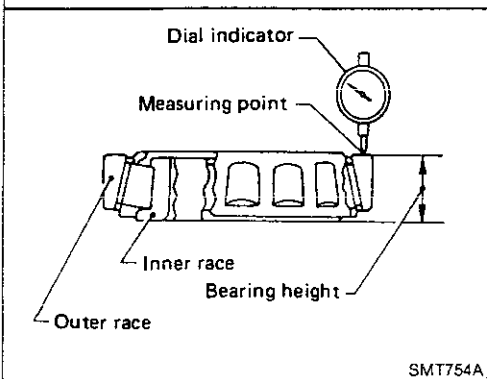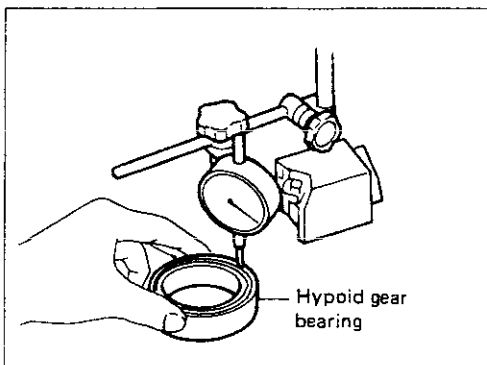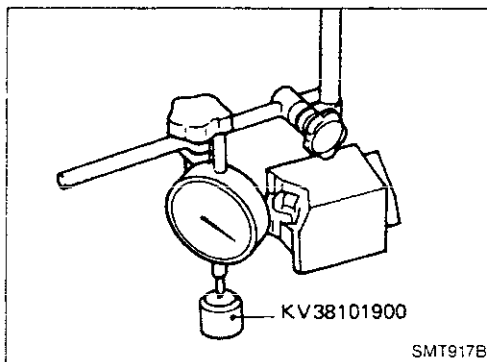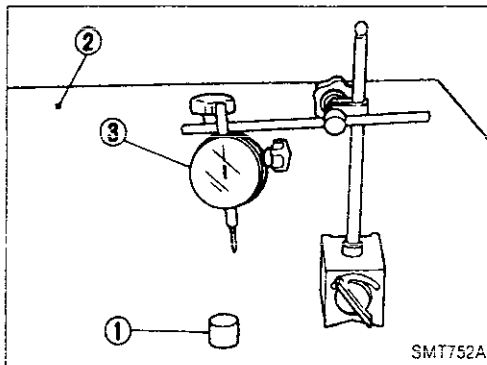


2. Measure hypoid gear bearing thickness.
- Prepare required tools for measurement.
 - Master Gauge KV38101900
 - Base Plate
 - Dial Indicator
 - Place dial indicator and master gauge on base plate.
 - Place dial indicator on top of master gauge and then adjust dial indicator scale to zero.
 - Carefully slide master gauge out from under dial indicator.
 - Place hypoid gear bearing inner race on base plate and then place hypoid gear bearing outer race on inner race.
 - Place dial indicator on top of outer race.
 - Read dial indicator.
 - If the needle fluctuates erratically then bearing is either dirty or defective and should be cleaned or replaced.
 - Determine factor "B" to be used by the following equation.

$$B = \text{"Dial gauge deflection"} \times 100$$

[Bearing height = 20 mm (0.79 in) + Dial gauge deflection]
 - Write "B" on chart.

Adjustment Procedure Chart (Cont'd)

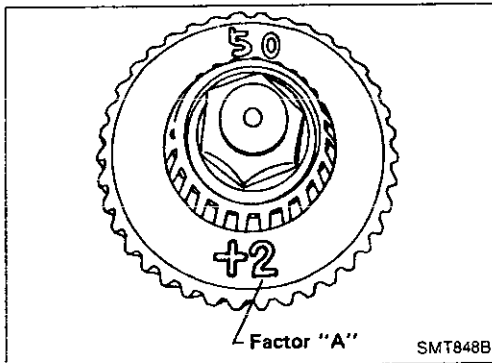

3. Write figure marked on hypoid gear as factor "A" on chart.
4. Determine dimension "C" to be used by the following equation.


$$C = 110 - A - B$$

FOR EXAMPLE


FACTOR	HUNDREDTHS OF A MILLIMETER
A: Hypoid gear	2
B: Hypoid gear bearing	9 (0.09 × 100)

$$C = 110 - 2 - 9$$

$$= 99$$

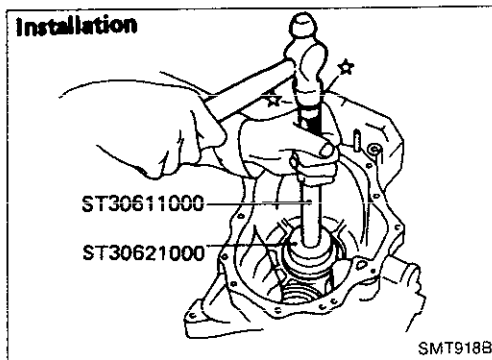


6. Select proper shims using S.D.S. table as a guide.
7. Install selected shims and hypoid gear bearing outer race (Transfer case side) in transfer case.

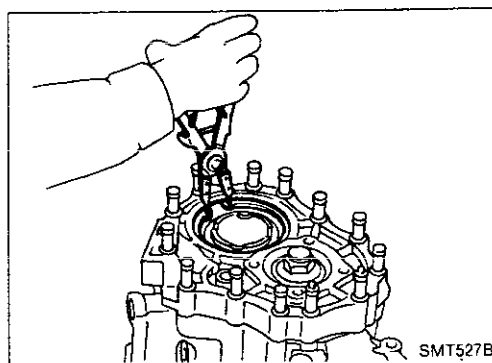

② REMOVAL OF RING GEAR SNAP RING

Removing ring gear snap ring.

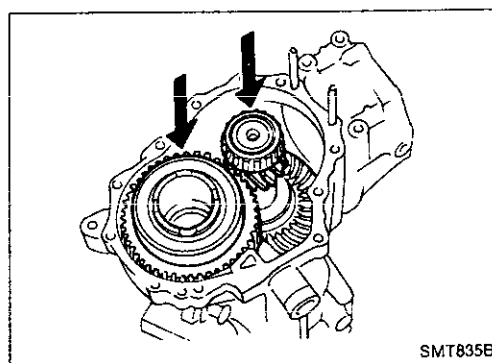



③ INSTALLATION OF RING GEAR, COUNTERSHAFT AND ADAPTER PLATE

1. Install ring gear and countershaft.
2. Install adapter plate.

Temporarily install spacers and tighten bolts to the specified torque.


Spacer: 25 mm (0.98 in)

Adjustment Procedure Chart (Cont'd)

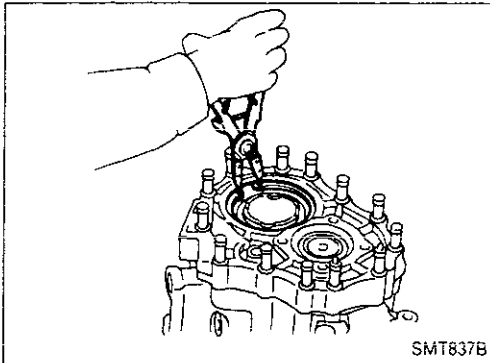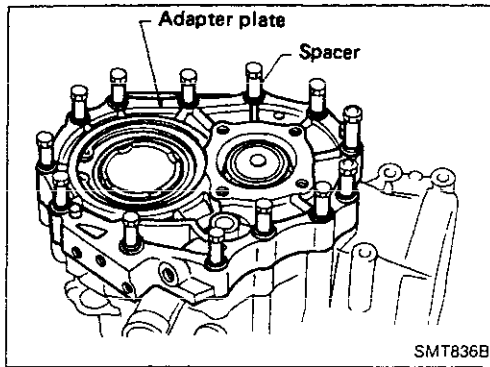


④ SELECTION OF RING GEAR SNAP RING

1. Install the thinnest snap ring [Part No. 33138-56E00, Thickness: 4.00 mm (0.1575 in)] in ring gear snap ring groove.

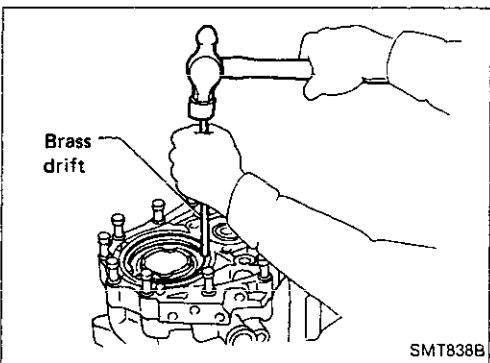

2. Tap ring gear snap ring lightly to seat it into groove.

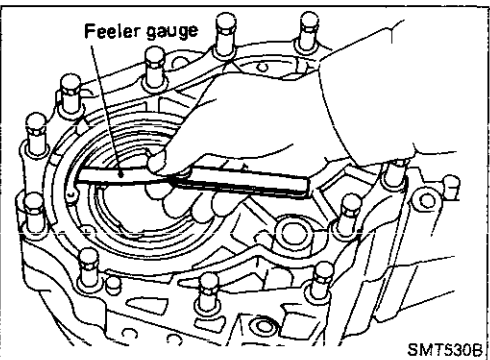


3. Measure clearance of groove.
4. Select proper snap ring using S.D.S. table as a guide.
5. Remove snap ring (Part No. 33138-56E00).
6. Install selected snap ring in ring gear snap ring groove.
7. Measure clearance of groove (ring gear end play) as a final check.

Allowable clearance of groove

(Ring gear end play):


0 - 0.06 mm (0 - 0.0024 in)

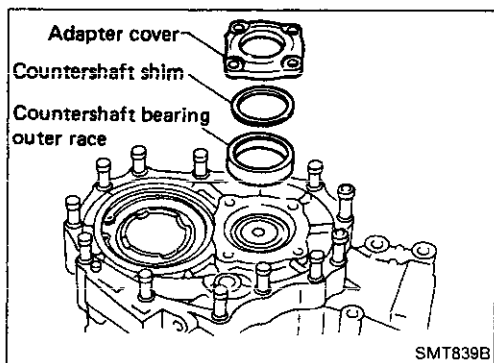


⑤ SELECTION OF COUNTERSHAFT SHIM

1. Remove adapter cover and countershaft shim.


Adjustment Procedure Chart (Cont'd)

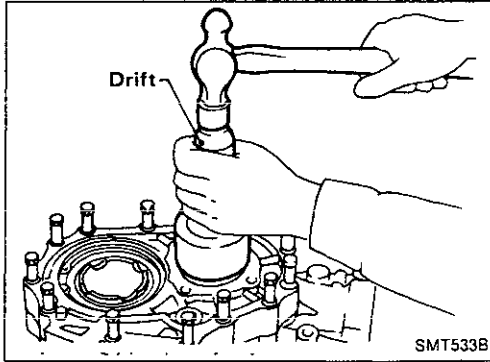

2. Tap countershaft bearing outer race lightly to seat bearings properly.

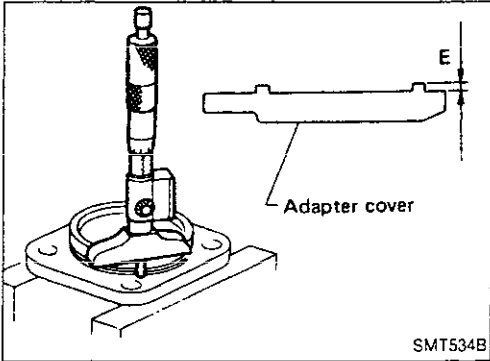

3. Measure factor "E".

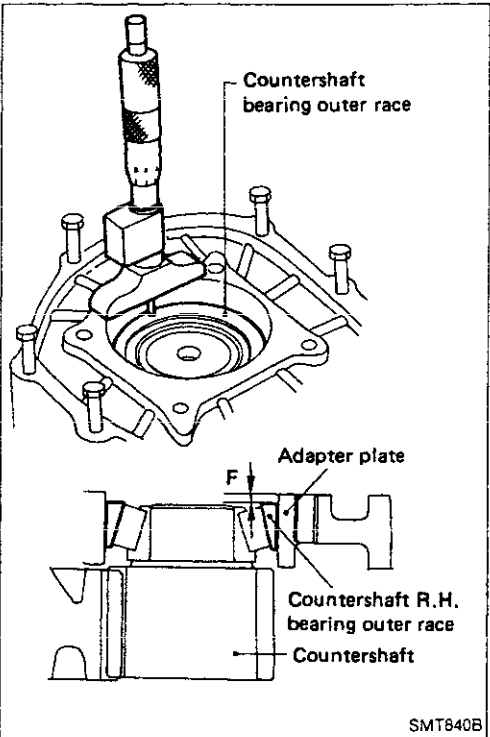


4. Measure factor "F".
5. Determine dimension "G" to be used by the following equation.

$$G = F - E$$

6. Select proper shims using S.D.S. table as a guide.
7. Install selected shims and adapter cover in adapter plate.


Tighten bolts to the specified torque.

8. Check countershaft preload as final check — Refer to "PRE-DISASSEMBLY INSPECTION".
If not within specification, select countershaft shim again.

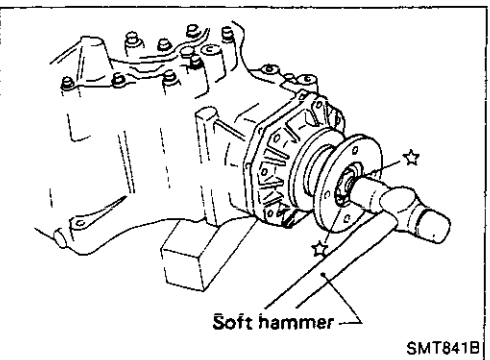


⑥ SELECTION OF PINION SLEEVE SHIM

1. Install pinion sleeve assembly without O-ring and shim.

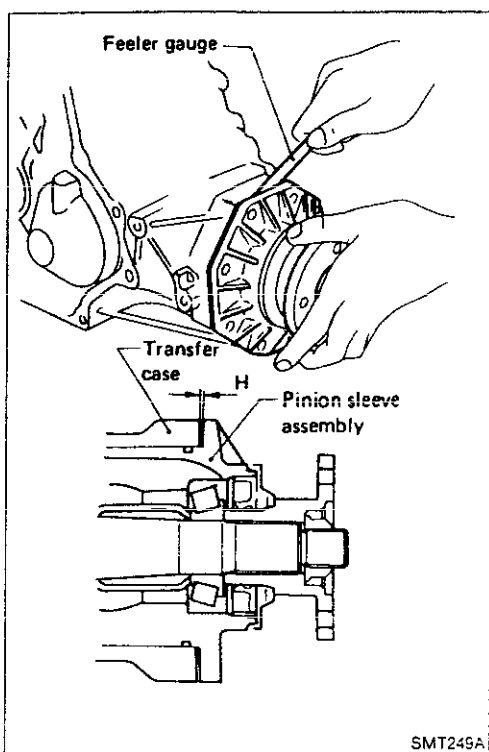Adjustment Procedure Chart (Cont'd)

2. While pushing pinion sleeve assembly, measure clearance "H" between transfer case and pinion sleeve at least 4 points with feeler gauge.
3. Select proper shims using S.D.S. table as a guide.
4. Remove pinion sleeve assembly.

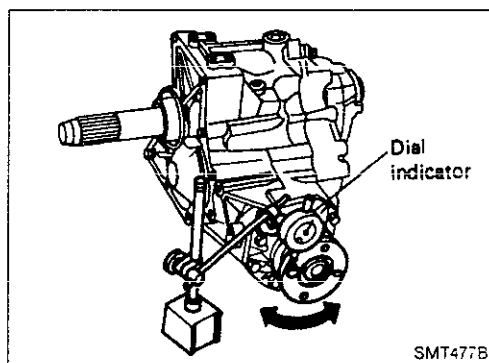**⑦ HYPOID GEAR-TO-PINION BACKLASH INSPECTION**

1. Install pinion sleeve assembly with pinion sleeve shim.
2. Check hypoid gear-to-pinion backlash.


Hypoid gear-to-pinion backlash:

0.10 - 0.15 mm (0.0039 - 0.0059 in)


- If backlash is too small, decrease thickness of hypoid gear shim and increase thickness of countershaft shim by the same amount.
- If backlash is too great, reverse the above procedure.

Never change the total amount of shims as it will change the bearing preload.


3. Remove pinion sleeve assembly.

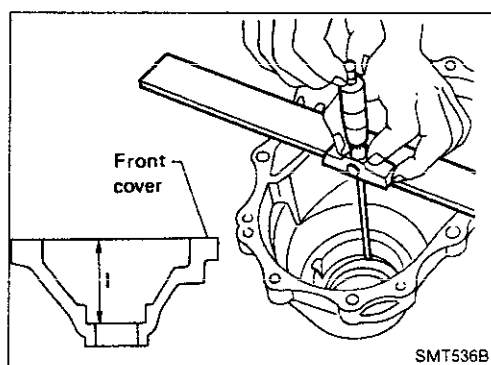**⑧ SELECTION OF FRONT DIFFERENTIAL SIDE BEARING SHIM**


1. Measure factor "I".

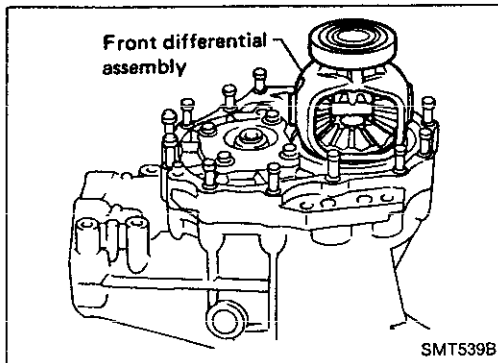Adjustment Procedure Chart (Cont'd)

2. Install front differential assembly in adapter plate.

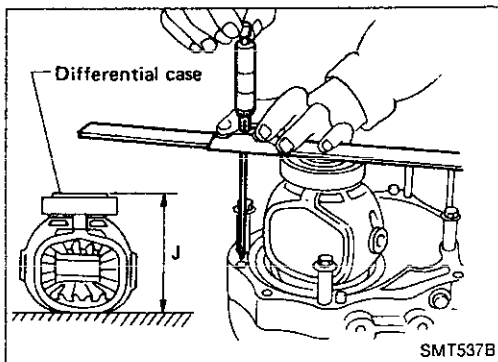

3. Measure factor "J".

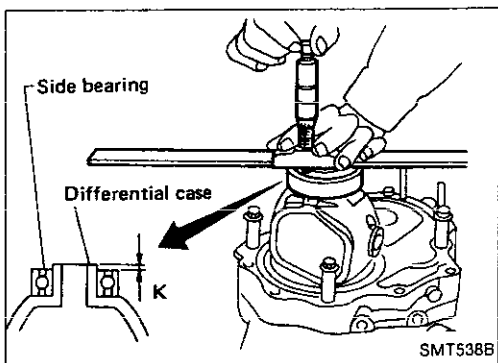

4. Measure factor "K".

Front differential case end play (I - J + K):
0.05 - 0.20 mm (0.0020 - 0.0079 in)

Select proper shims using S.D.S. table as a guide.

5. Install front cover.

⑨ TOOTH CONTACT INSPECTION — Refer to "TOOTH CONTACT".


Usually tooth contact pattern will be correct if you have selected the shims accurately.

However, in extremely rare cases you will have to use trial-and-error processes until the tooth contact pattern is right.


The tooth pattern is the best indication of how well a hypoid gear and pinion have been set up.

⑩ REMOVAL OF ADAPTER COVER


⑪ REMOVAL OF FRONT COVER, FRONT DIFFERENTIAL, ADAPTER PLATE, RING GEAR AND COUNTER-SHAFT

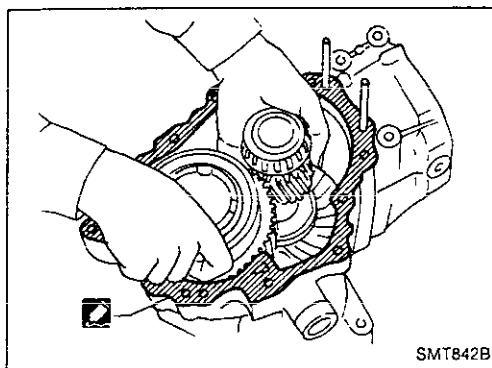


1. Install countershaft and ring gear as a set.
2. Clean adapter plate and transfer case mating surface.
3. Apply recommended sealant to transfer case and adapter plate mating surface.

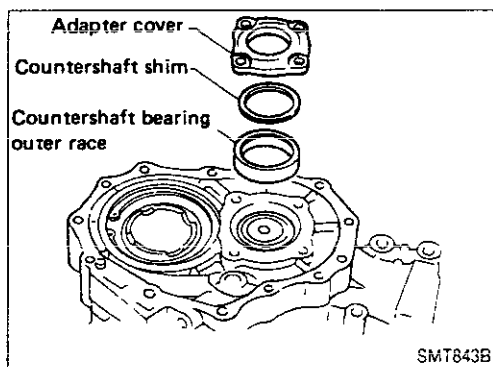

4. Install adapter plate.
5. Install countershaft bearing, countershaft shim and adapter cover.

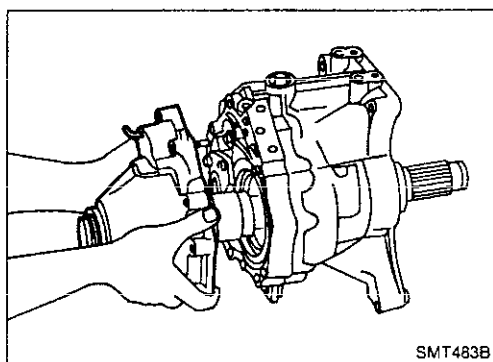

6. Install front differential assembly and front cover.

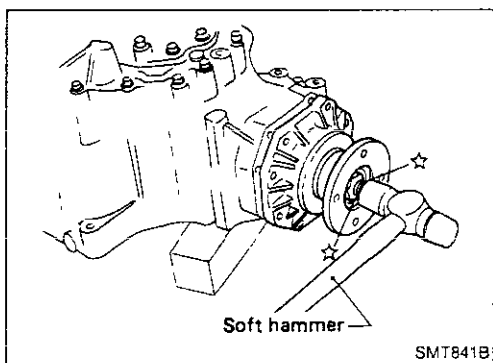

7. Install O-ring on pinion sleeve and then install pinion sleeve shim and pinion sleeve.
8. Install front cover oil seal.

General Specifications

Vehicle model		GA16DS en- gine models	SR20DET en- gine models
Transfer model		VTY10A	FTY10A
Gear ratio		0.270	0.270
Number of teeth	Ring gear	47	47
	Counter gear	21	21
	Hypoid gear	38	38
	Hypoid pinion	23	23
Oil capacity ℓ (Imp qt)		1.1 (1)	1.5 (1-3/8)

Inspection and Adjustment

GEAR END PLAY (VTY10A & FTY10A)

Unit: mm (in)

Ring gear	0 - 0.06 (0 - 0.0024)
-----------	-----------------------

BEARING PRELOAD (VTY10A & FTY10A)

Hypoid pinion bearing	Adjusting method		Collapsible spacer
	Preload	N·m (kg·cm, in·lb) *2	
			1.1 - 1.6 (11 - 16, 9.5 - 13.9)
Counter- shaft bearing	Adjusting method		Shim (countershaft shim and hypoid gear shim)
	Preload	N (kg, lb)*1	
		mm (in)	
			88 - 235 (9 - 24, 20 - 53)
			0.20 - 0.26 (0.0079 - 0.0102)
Total pre-load		N·m (kg·cm, in·lb) *2	2.0 - 3.9 (20 - 40, 17 - 35)

*1 at right gear spline outer diameter

*2 at pinion nut

AVAILABLE SHIMS

Countershaft shims

Thickness mm (in)	Part number	
	VTY10A	FTY10A
0.40 (0.0157)	33123-06R00	33123-56E00
0.44 (0.0173)	33123-06R01	33123-56E01
0.48 (0.0189)	33123-06R02	33123-56E02
0.52 (0.0205)	33123-06R03	33123-56E03
0.56 (0.0220)	33123-06R04	33123-56E04
0.60 (0.0236)	33123-06R05	33123-56E05
0.64 (0.0252)	33123-06R06	33123-56E06
0.68 (0.0268)	33123-06R07	33123-56E07
0.72 (0.0283)	33123-06R08	33123-56E08
0.76 (0.0299)	33123-06R09	33123-56E09
0.92 (0.0362)	33123-06R10	33123-56E10
1.32 (0.0520)	33123-06R11	33123-56E11

GEAR BACKLASH

Unit: mm (in)

Transfer model	VTY10A	FTY10A
Ring gear-to- counter gear*1	0.02 - 0.04 (0.0008 - 0.0016)	0.02 - 0.04 (0.0008 - 0.0016)
Hypoid gear-to- pinion*2	0.08 - 0.12 (0.0031 - 0.0047)*2	0.10 - 0.15 (0.0039 - 0.0059)*3

*1 at ring gear spline

*2 at bolt hole in viscous coupling

*3 at bolt hole of companion flange

Inspection and Adjustment (Cont'd)

**Table for selecting suitable countershaft shim
(VTY10A & FTY10A)**

Unit: mm (in)

Unit: mm (in)		
Dimension "G"	Suitable shim thickness	Appropriate shim
0.31 - 0.35 (0.0122 - 0.0138)	0.56 (0.0220)	0.56 (0.0220)
0.35 - 0.39 (0.0138 - 0.0154)	0.60 (0.0236)	0.60 (0.0236)
0.39 - 0.43 (0.0154 - 0.0169)	0.64 (0.0252)	0.64 (0.0252)
0.43 - 0.47 (0.0169 - 0.0185)	0.68 (0.0268)	0.68 (0.0268)
0.47 - 0.51 (0.0185 - 0.0201)	0.72 (0.0283)	0.72 (0.0283)
0.51 - 0.55 (0.0201 - 0.0217)	0.76 (0.0299)	0.76 (0.0299)
0.55 - 0.59 (0.0217 - 0.0232)	0.80 (0.0315)	0.40 + 0.40 (0.0157 + 0.0157)
0.59 - 0.63 (0.0232 - 0.0248)	0.84 (0.0331)	0.40 + 0.44 (0.0157 + 0.0173)
0.63 - 0.67 (0.0248 - 0.0264)	0.88 (0.0346)	0.40 + 0.48 (0.0157 + 0.0189)
0.67 - 0.71 (0.0264 - 0.0280)	0.92 (0.0362)	0.92 (0.0362)
0.71 - 0.75 (0.0280 - 0.0295)	0.96 (0.0378)	0.40 + 0.56 (0.0157 + 0.0220)
0.75 - 0.79 (0.0295 - 0.0311)	1.00 (0.0394)	0.40 + 0.60 (0.0157 + 0.0236)
0.79 - 0.83 (0.0311 - 0.0327)	1.04 (0.0409)	0.40 + 0.64 (0.0157 + 0.0252)
0.83 - 0.87 (0.0327 - 0.0343)	1.08 (0.0425)	0.40 + 0.68 (0.0157 + 0.0268)
0.87 - 0.91 (0.0343 - 0.0358)	1.12 (0.0441)	0.40 + 0.72 (0.0157 + 0.0283)
0.91 - 0.95 (0.0358 - 0.0374)	1.16 (0.0457)	0.40 + 0.76 (0.0157 + 0.0299)
0.95 - 0.99 (0.0374 - 0.0390)	1.20 (0.0472)	0.44 + 0.76 (0.0173 + 0.0299)
0.99 - 1.03 (0.0390 - 0.0406)	1.24 (0.0488)	0.48 + 0.76 (0.0189 + 0.0299)
1.03 - 1.07 (0.0406 - 0.0421)	1.28 (0.0504)	0.52 + 0.76 (0.0205 + 0.0299)
1.07 - 1.11 (0.0421 - 0.0437)	1.32 (0.0520)	1.32 (0.0520)
1.11 - 1.15 (0.0437 - 0.0453)	1.36 (0.0535)	0.60 + 0.76 (0.0236 + 0.0299)
1.15 - 1.19 (0.0453 - 0.0469)	1.40 (0.0551)	0.64 + 0.76 (0.0252 + 0.0299)
1.19 - 1.23 (0.0469 - 0.0484)	1.44 (0.0567)	0.68 + 0.76 (0.0268 + 0.0299)
1.23 - 1.27 (0.0484 - 0.0500)	1.48 (0.0583)	0.72 + 0.76 (0.0283 + 0.0299)

Dimension "G"	Suitable shim thickness	Appropriate shim
1.27 - 1.31 (0.0500 - 0.0516)	1.52 (0.0598)	0.76 + 0.76 (0.0299 + 0.0299)
1.31 - 1.35 (0.0516 - 0.0531)	1.56 (0.0614)	0.64 + 0.92 (0.0252 + 0.0362)
1.35 - 1.39 (0.0531 - 0.0547)	1.60 (0.0630)	0.68 + 0.92 (0.0268 + 0.0362)
1.39 - 1.43 (0.0547 - 0.0563)	1.64 (0.0646)	0.72 + 0.92 (0.0283 + 0.0362)
1.43 - 1.47 (0.0563 - 0.0579)	1.68 (0.0661)	0.76 + 0.92 (0.0299 + 0.0362)
1.47 - 1.51 (0.0579 - 0.0594)	1.72 (0.0677)	0.40 + 1.32 (0.0157 + 0.0520)
1.51 - 1.55 (0.0594 - 0.0610)	1.76 (0.0693)	0.44 + 1.32 (0.0173 + 0.0520)
1.55 - 1.59 (0.0610 - 0.0626)	1.80 (0.0709)	0.48 + 1.32 (0.0189 + 0.0520)
1.59 - 1.63 (0.0626 - 0.0642)	1.84 (0.0724)	0.52 + 1.32 (0.0205 + 0.0520)
1.63 - 1.67 (0.0642 - 0.0657)	1.88 (0.0740)	0.56 + 1.32 (0.0220 + 0.0520)
1.67 - 1.71 (0.0657 - 0.0673)	1.92 (0.0756)	0.60 + 1.32 (0.0236 + 0.0520)
1.71 - 1.75 (0.0673 - 0.0689)	1.96 (0.0772)	0.64 + 1.32 (0.0252 + 0.0520)
1.75 - 1.79 (0.0689 - 0.0705)	2.00 (0.0787)	0.68 + 1.32 (0.0268 + 0.0520)
1.79 - 1.83 (0.0705 - 0.0720)	2.04 (0.0803)	0.72 + 1.32 (0.0283 + 0.0520)

Inspection and Adjustment (Cont'd)

AVAILABLE SNAP RINGS

Ring gear snap rings

(VTY10A)

Unit: mm (in)

Thickness	Part number
3.00 (0.1181)	33138-10R00
3.04 (0.1197)	33138-10R01
3.08 (0.1213)	33138-10R02
3.12 (0.1228)	33138-10R03
3.16 (0.1244)	33138-10R04
3.20 (0.1260)	33138-10R05
3.24 (0.1276)	33138-10R06
3.28 (0.1291)	33138-10R07
3.32 (0.1307)	33138-10R08
3.36 (0.1323)	33138-10R09
3.40 (0.1339)	33138-10R10
3.44 (0.1354)	33138-10R11
3.48 (0.1370)	33138-10R12
3.52 (0.1386)	33138-10R13
3.56 (0.1402)	33138-10R14
3.60 (0.1417)	33138-10R15
3.64 (0.1433)	33138-10R16

(FTY10A)

Unit: mm (in)

Thickness	Part number
4.00 (0.1575)	33138-56E00
4.04 (0.1591)	33138-56E01
4.08 (0.1606)	33138-56E02
4.12 (0.1622)	33138-56E03
4.16 (0.1638)	33138-56E04
4.20 (0.1654)	33138-56E05
4.24 (0.1669)	33138-56E06
4.28 (0.1685)	33138-56E07
4.32 (0.1701)	33138-56E08
4.36 (0.1717)	33138-56E09
4.40 (0.1732)	33138-56E10
4.44 (0.1748)	33138-56E11
4.48 (0.1764)	33138-56E12
4.52 (0.1780)	33138-56E13
4.56 (0.1795)	33138-56E14
4.60 (0.1811)	33138-56E15
4.64 (0.1827)	33138-56E16

Table for selecting suitable ring gear snap ring

(VTY10A)

Unit: mm (in)

Measured clearance	Thickness of suitable snap ring
0.00 - 0.04 (0.0000 - 0.0016)	3.00 (0.1181)
0.04 - 0.08 (0.0016 - 0.0031)	3.04 (0.1197)
0.08 - 0.12 (0.0031 - 0.0047)	3.08 (0.1213)
0.12 - 0.16 (0.0047 - 0.0063)	3.12 (0.1228)
0.16 - 0.20 (0.0063 - 0.0079)	3.16 (0.1244)
0.20 - 0.24 (0.0079 - 0.0094)	3.20 (0.1260)
0.24 - 0.28 (0.0094 - 0.0110)	3.24 (0.1276)
0.28 - 0.32 (0.0110 - 0.0126)	3.28 (0.1291)
0.32 - 0.36 (0.0126 - 0.0142)	3.32 (0.1307)
0.36 - 0.40 (0.0142 - 0.0157)	3.36 (0.1323)
0.40 - 0.44 (0.0157 - 0.0173)	3.40 (0.1339)
0.44 - 0.48 (0.0173 - 0.0189)	3.44 (0.1354)
0.48 - 0.52 (0.0189 - 0.0205)	3.48 (0.1370)
0.52 - 0.56 (0.0205 - 0.0220)	3.52 (0.1386)
0.56 - 0.60 (0.0220 - 0.0236)	3.56 (0.1402)
0.60 - 0.64 (0.0236 - 0.0252)	3.60 (0.1417)
0.64 - 0.68 (0.0252 - 0.0268)	3.64 (0.1433)

(FTY10A)

Unit: mm (in)

Measured clearance	Thickness of suitable snap ring
0.00 - 0.04 (0.0000 - 0.0016)	4.00 (0.1575)
0.04 - 0.08 (0.0016 - 0.0031)	4.04 (0.1591)
0.08 - 0.12 (0.0031 - 0.0047)	4.08 (0.1606)
0.12 - 0.16 (0.0047 - 0.0063)	4.12 (0.1622)
0.16 - 0.20 (0.0063 - 0.0079)	4.16 (0.1638)
0.20 - 0.24 (0.0079 - 0.0094)	4.20 (0.1654)
0.24 - 0.28 (0.0094 - 0.0110)	4.24 (0.1669)
0.28 - 0.32 (0.0110 - 0.0126)	4.28 (0.1685)
0.32 - 0.36 (0.0126 - 0.0142)	4.32 (0.1701)
0.36 - 0.40 (0.0142 - 0.0157)	4.36 (0.1717)
0.40 - 0.44 (0.0157 - 0.0173)	4.40 (0.1732)
0.44 - 0.48 (0.0173 - 0.0189)	4.44 (0.1748)
0.48 - 0.52 (0.0189 - 0.0205)	4.48 (0.1764)
0.52 - 0.56 (0.0205 - 0.0220)	4.52 (0.1780)
0.56 - 0.60 (0.0220 - 0.0236)	4.56 (0.1795)
0.60 - 0.64 (0.0236 - 0.0252)	4.60 (0.1811)
0.64 - 0.68 (0.0252 - 0.0268)	4.64 (0.1827)

Inspection and Adjustment (Cont'd)

Hypoid gear shims (VTY10A & FTY10A)

Unit: mm (in)

Thickness	Part number
0.40 (0.0157)	33147-06R00
0.44 (0.0173)	33147-06R01
0.48 (0.0189)	33147-06R02
0.60 (0.0236)	33147-06R03
0.64 (0.0252)	33147-06R04
0.68 (0.0268)	33147-06R06
0.72 (0.0283)	33147-06R07
0.76 (0.0299)	33147-06R05

Table for selecting suitable hypoid gear shim

(VTY10A)

Unit: mm (in)

Dimension "D"	Suitable shim thickness	Appropriate shim
70 - 74 (2.76 - 2.91)	0.80 (0.0315)	0.40 + 0.40 (0.0157 + 0.0157)
74 - 78 (2.91 - 3.07)	0.84 (0.0331)	0.40 + 0.44 (0.0157 + 0.0173)
78 - 82 (3.07 - 3.23)	0.88 (0.0346)	0.40 + 0.48 (0.0157 + 0.0189)
82 - 86 (3.23 - 3.39)	0.92 (0.0362)	0.44 + 0.48 (0.0173 + 0.0189)
86 - 90 (3.39 - 3.54)	0.96 (0.0378)	0.48 + 0.48 (0.0189 + 0.0189)
90 - 94 (3.54 - 3.70)	1.00 (0.0394)	0.40 + 0.60 (0.0157 + 0.0236)
94 - 98 (3.70 - 3.86)	1.04 (0.0409)	0.44 + 0.60 (0.0173 + 0.0236)
98 - 102 (3.86 - 4.02)	1.08 (0.0425)	0.48 + 0.60 (0.0189 + 0.0236)
102 - 106 (4.02 - 4.17)	1.12 (0.0441)	0.48 + 0.64 (0.0189 + 0.0252)
106 - 110 (4.17 - 4.33)	1.16 (0.0457)	0.48 + 0.68 (0.0189 + 0.0268)
110 - 114 (4.33 - 4.49)	1.20 (0.0472)	0.48 + 0.72 (0.0189 + 0.0283)

(FTY10A)

Unit: mm (in)

Dimension "C"	Suitable shim thickness	Appropriate shim
78 - 81 (3.07 - 3.19)	0.80 (0.0315)	0.40 + 0.40 (0.0157 + 0.0157)
82 - 85 (3.23 - 3.35)	0.84 (0.0331)	0.40 + 0.44 (0.0157 + 0.0173)
86 - 89 (3.39 - 3.50)	0.88 (0.0346)	0.40 + 0.48 (0.0157 + 0.0189)
90 - 93 (3.54 - 3.66)	0.92 (0.0362)	0.44 + 0.48 (0.0173 + 0.0189)
94 - 97 (3.70 - 3.82)	0.96 (0.0378)	0.48 + 0.48 (0.0189 + 0.0189)
98 - 101 (3.86 - 3.98)	1.00 (0.0394)	0.40 + 0.60 (0.0157 + 0.0236)
102 - 105 (4.02 - 4.13)	1.04 (0.0409)	0.44 + 0.60 (0.0173 + 0.0236)
106 - 109 (4.17 - 4.29)	1.08 (0.0425)	0.48 + 0.60 (0.0189 + 0.0236)
110 - 113 (4.43 - 4.45)	1.12 (0.0441)	0.48 + 0.64 (0.0189 + 0.0252)
114 - 117 (4.49 - 4.61)	1.16 (0.0457)	0.48 + 0.68 (0.0189 + 0.0268)
118 - 121 (4.65 - 4.76)	1.20 (0.0472)	0.48 + 0.72 (0.0189 + 0.0283)

Inspection and Adjustment (Cont'd)

Pinion sleeve shims (VTY10A & FTY10A)

Unit: mm (in)

Thickness	Part number
0.40 (0.0157)	33155-10R00
0.44 (0.0173)	33155-10R01
0.48 (0.0189)	33155-10R02
0.52 (0.0205)	33155-10R03
0.56 (0.0220)	33155-10R04
0.60 (0.0236)	33155-10R05
0.64 (0.0252)	33155-10R06
0.68 (0.0268)	33155-10R07
0.72 (0.0283)	33155-10R08
0.76 (0.0299)	33155-10R09

Table for selecting suitable pinion sleeve shim

(VTY10A & FTY10A)

Unit: mm (in)

Dimension "H"	Suitable shim thickness	Appropriate shim
0.64 - 0.67 (0.0252 - 0.0264)	0.84 (0.0331)	0.40 + 0.44 (0.0157 + 0.0173)
0.68 - 0.71 (0.0268 - 0.0280)	0.88 (0.0346)	0.40 + 0.48 (0.0157 + 0.0189)
0.72 - 0.75 (0.0283 - 0.0295)	0.92 (0.0362)	0.40 + 0.52 (0.0157 + 0.0205)
0.76 - 0.79 (0.0299 - 0.0311)	0.96 (0.0378)	0.40 + 0.56 (0.0157 + 0.0220)
0.80 - 0.83 (0.0315 - 0.0327)	1.00 (0.0394)	0.40 + 0.60 (0.0157 + 0.0236)
0.84 - 0.87 (0.0331 - 0.0343)	1.04 (0.0409)	0.40 + 0.64 (0.0157 + 0.0252)
0.88 - 0.91 (0.0346 - 0.0358)	1.08 (0.0425)	0.40 + 0.68 (0.0157 + 0.0268)
0.92 - 0.95 (0.0362 - 0.0374)	1.12 (0.0441)	0.40 + 0.72 (0.0157 + 0.0283)
0.96 - 0.99 (0.0378 - 0.0390)	1.16 (0.0457)	0.40 + 0.76 (0.0157 + 0.0299)
1.00 - 1.03 (0.0394 - 0.0406)	1.20 (0.0472)	0.44 + 0.76 (0.0173 + 0.0299)
1.04 - 1.07 (0.0409 - 0.0421)	1.24 (0.0488)	0.48 + 0.76 (0.0189 + 0.0299)
1.08 - 1.11 (0.0425 - 0.0437)	1.28 (0.0504)	0.52 + 0.76 (0.0205 + 0.0299)
1.12 - 1.15 (0.0441 - 0.0453)	1.32 (0.0520)	0.56 + 0.76 (0.0220 + 0.0299)
1.16 - 1.19 (0.0457 - 0.0469)	1.36 (0.0535)	0.60 + 0.76 (0.0236 + 0.0299)
1.20 - 1.23 (0.0472 - 0.0484)	1.40 (0.0551)	0.64 + 0.76 (0.0252 + 0.0299)
1.24 - 1.27 (0.0488 - 0.0500)	1.44 (0.0567)	0.68 + 0.76 (0.0268 + 0.0299)
1.28 - 1.31 (0.0504 - 0.0516)	1.48 (0.0583)	0.72 + 0.76 (0.0283 + 0.0299)
1.32 - 1.35 (0.0520 - 0.0531)	1.52 (0.0598)	0.76 + 0.76 (0.0299 + 0.0299)

Front differential side bearing adjusting shims

(FTY10A only)

Unit: mm (in)

Side bearing end play	0.05 - 0.20 (0.0020 - 0.0079)
Thickness mm (in)	Part number
0.40 (0.0157)	33147-06R00
0.44 (0.0173)	33147-06R01
0.48 (0.0189)	33147-06R02
0.60 (0.0236)	33147-06R03
0.64 (0.0252)	33147-06R04
0.68 (0.0268)	33147-06R06
0.72 (0.0283)	33147-06R07
0.76 (0.0299)	33147-06R05

AVAILABLE WASHERS

Front differential side gear thrust washers

(FTY10A only)

Unit: mm (in)

Clearance between side gear and differential case	0.1 - 0.2 (0.004 - 0.008)
Thickness mm (in)	Part number
0.75 - 0.80 (0.0295 - 0.0315)	38424-E3000
0.80 - 0.85 (0.0315 - 0.0335)	38424-E3001
0.85 - 0.90 (0.0335 - 0.0354)	38424-E3002
0.90 - 0.95 (0.0354 - 0.0374)	38424-E3003

PROPELLER SHAFT & DIFFERENTIAL CARRIER

SECTION **PD**









CONTENTS

PREPARATION	PD- 2
PROPELLER SHAFT	PD- 4
ON-VEHICLE SERVICE (Final drive)	PD- 7
REMOVAL AND INSTALLATION (Final drive)	PD- 9
FINAL DRIVE	PD-10
DISASSEMBLY	PD-12
INSPECTION	PD-16
ADJUSTMENT	PD-17
ASSEMBLY	PD-25
VISCOUS LIMITED SLIP DIFFERENTIAL CASE	PD-30
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	PD-32

PREPARATION







SPECIAL SERVICE TOOLS

    *. Special tool or commercial equivalent

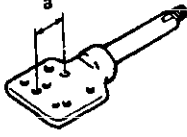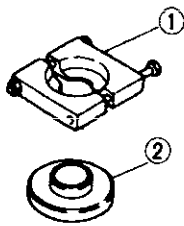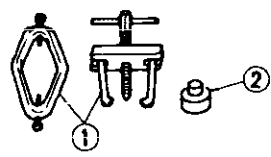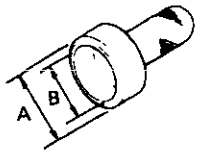

Tool number Tool name	Description
KV38100800 Differential attachment	 a: 152 mm (5.98 in) Mounting final drive (To use, make a new hole.)
ST3090S000 Drive pinion rear inner cone puller set ① ST30031000 Puller ② ST30901000 Base	 Removing and installing drive pinion rear bearing inner cone
ST3306S001 Differential side bearing puller set ① ST33051001 Body ② ST33061000 Adapter	 Removing and installing differential side bearing inner cone
ST30611000 Drift	 Installing pinion rear bearing outer race
ST30701000* Drift	 Installing pinion front bearing outer race A: 61.5 mm (2.421 in) dia. B: 41 mm (1.61 in) dia.
ST30720000 Oil seal drift	 Installing front oil seal A: 77 mm (3.03 in) dia. B: 55 mm (2.17 in) dia.
ST30621000* Drift	 Installing side bearing outer race and pinion rear bearing outer race A: 79 mm (3.11 in) dia. B: 59 mm (2.32 in) dia.
ST33720000 Differential side retainer guide	 Installing side retainer

PREPARATION

  *: Special tool or commercial equivalent

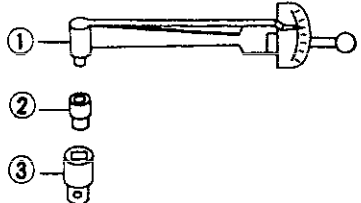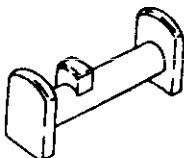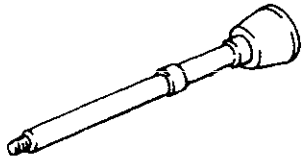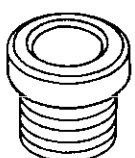Tool number Tool name	Description	
ST3127S000 Preload gauge ① GG91030000 Torque wrench ② HT62940000 Socket adapter ③ HT62900000 Socket adapter		Measuring pinion bearing preload and total preload
KV38101900 Master gauge 20.0 mm (0.787 in)		Selecting side bearing adjusting shim
ST32501000 Weight block		Selecting side bearing adjusting shim
ST31211000 Height gauge		Selecting pinion height adjusting washer
ST31212000 Dummy shaft		Selecting pinion height adjusting washer
ST31851000 Dummy shaft spacer		Installing dummy shaft without excessive play
ST31214000 Collar		Selecting pinion height adjusting washer
ST31213000* Stopper		Adjusting drive pinion bearing preload

PROPELLER SHAFT

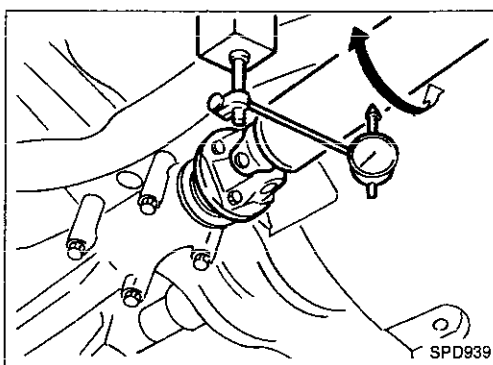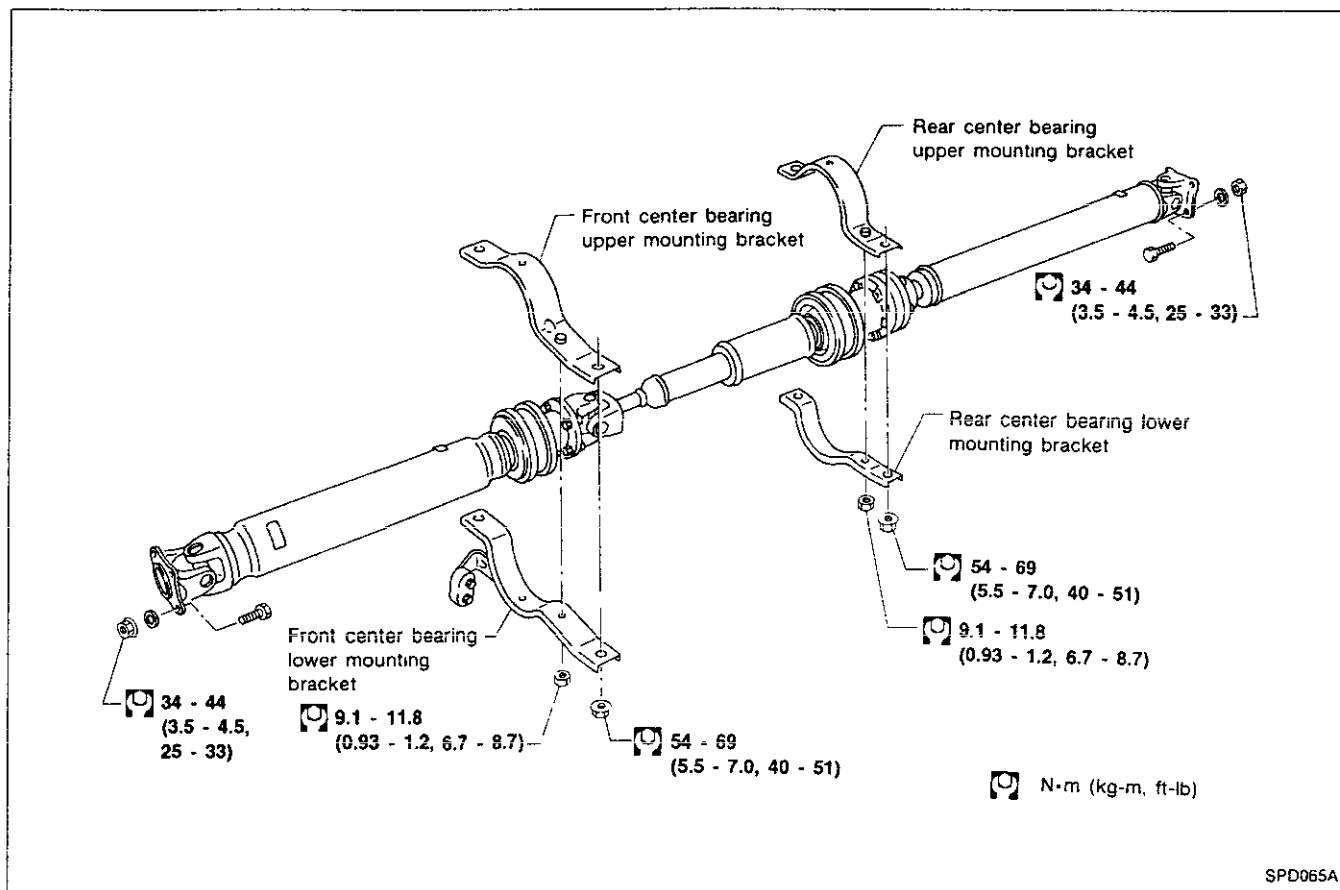

On-vehicle Service

PROPELLER SHAFT VIBRATION

If vibration is present at high speed, inspect propeller shaft runout first.

1. Raise rear wheels.
2. Measure propeller shaft runout at indicated points by rotating final drive companion flange with hands.

Runout limit: 0.6 mm (0.024 in)

Propeller shaft runout measuring points:

Distance "A"

GA16DS: 222.5 mm (8.76 in)

SR20DET: 234 mm (9.21 in)

Distance "B"


GA16DS: 317.5 mm (12.50 in)

SR20DET: 315 mm (12.40 in)

Distance "C"


GA16DS: 281 mm (11.06 in)

SR20DET: 272.5 mm (10.73 in)

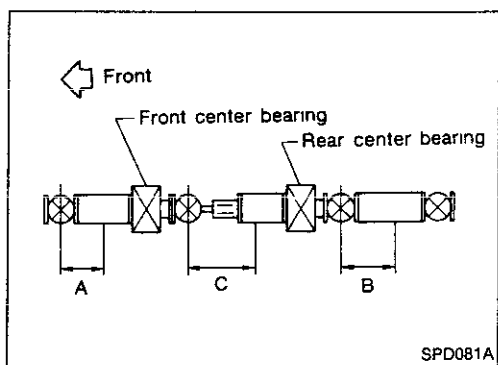

PROPELLER SHAFT

On-vehicle Service (Cont'd)

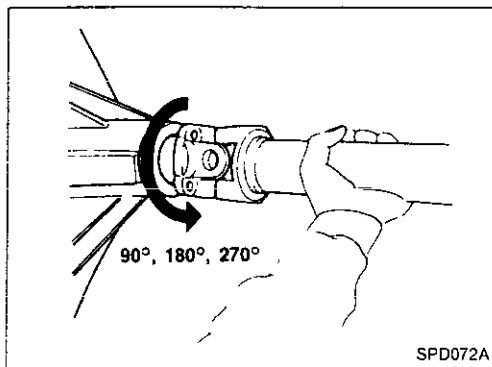


3. If runout exceeds specifications, disconnect propeller shaft at final drive companion flange; then rotate companion flange 90, 180 and 270 degrees and reconnect propeller shaft.

Runout limit: 0.6 mm (0.024 in)

4. Check runout again. If runout still exceeds specifications replace propeller shaft assembly.
5. Perform road test.


APPEARANCE CHECK

- Inspect propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace center bearing.

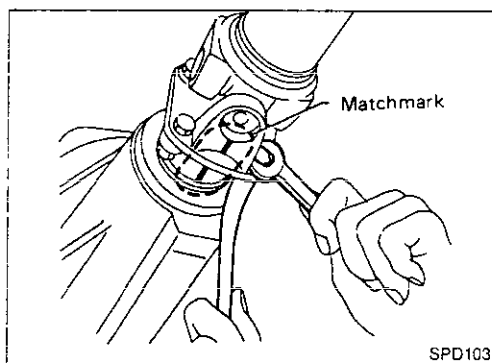


Removal and Installation

- Put matchmarks on flanges and separate propeller shaft from final drive.

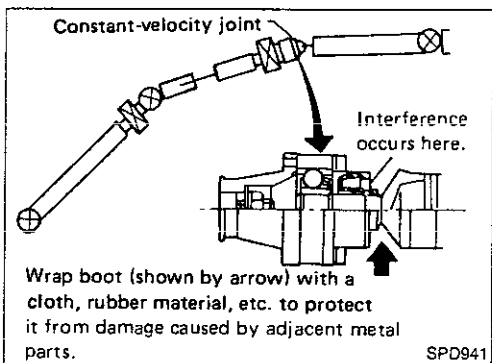

- Before removing/installing propeller shaft or moving it from one place to another, wrap boot located at constant-velocity joint with a cloth or rubber material to protect it against damage, as shown in figure at left.

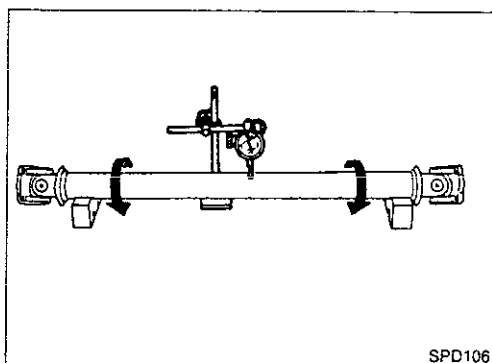

Inspection


- Inspect propeller shaft runout. If runout exceeds specifications, replace propeller shaft assembly.


Runout limit: 0.6 mm (0.024 in)

Inspection (Cont'd)

- Inspect journal axial play. If the play exceeds specifications, replace propeller shaft assembly.


Journal axial play:
0 mm (0 in)

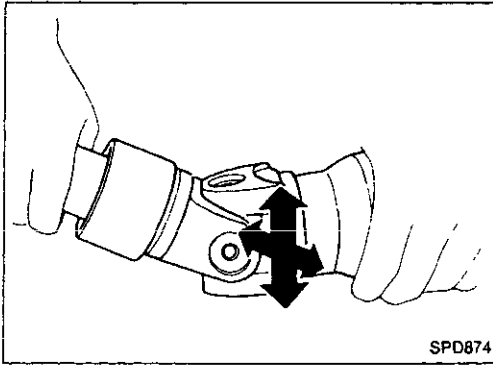

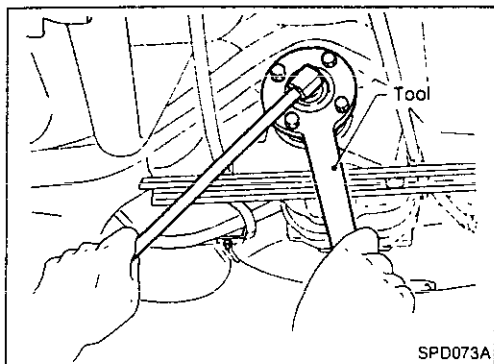


Front Oil Seal Replacement


1. Remove propeller shaft.
2. Loosen drive pinion nut with Tool.

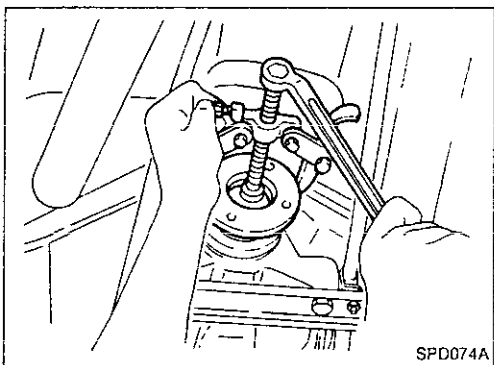


3. Remove companion flange.

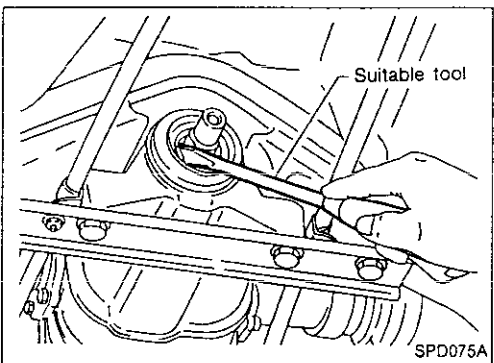

4. Remove front oil seal.

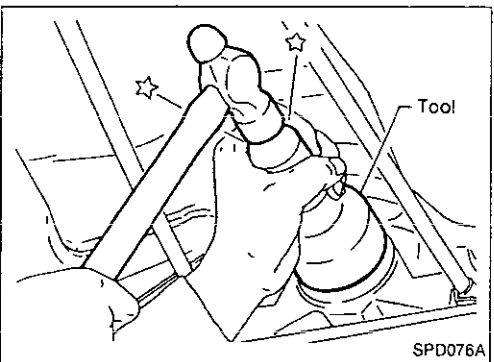


5. Apply multi-purpose grease to sealing lips of oil seal. Press front oil seal into carrier.
6. Install companion flange and drive pinion nut.
7. Install propeller shaft.

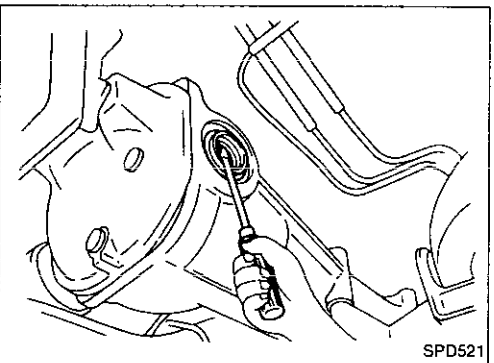

Side Oil Seal Replacement

1. Remove drive shafts.
Refer to RA section.
2. Remove oil seal.

Side Oil Seal Replacement (Cont'd)


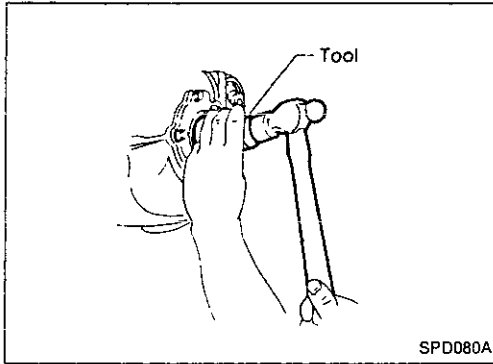


3. Apply multi-purpose grease to sealing lips of oil seal. Press-fit oil seal into carrier with Tool.

Tool number: ST33400001

4. Install drive shafts.

REMOVAL AND INSTALLATION (Final drive)

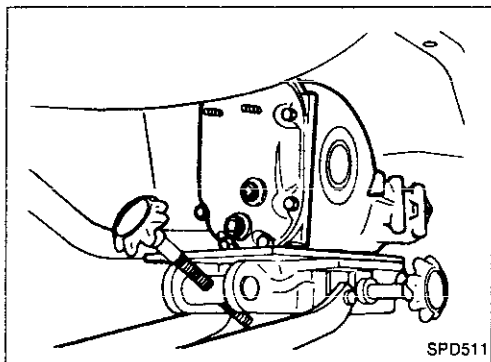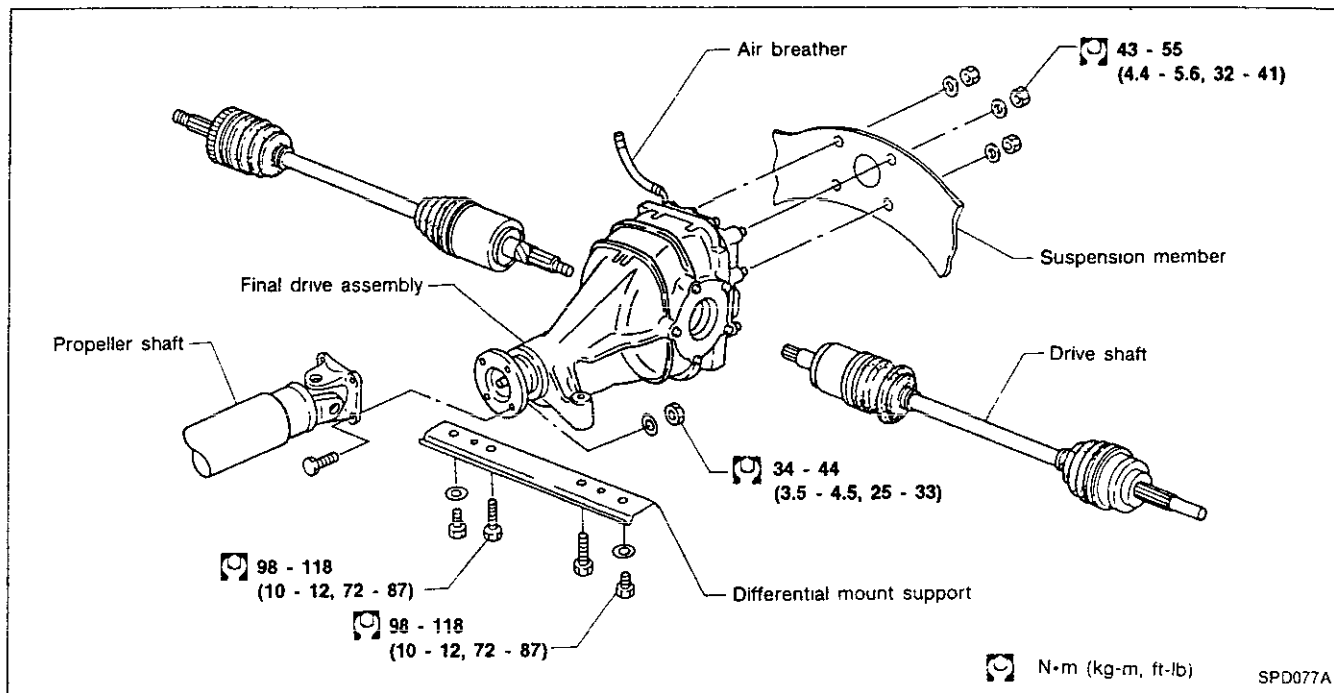


Removal


- Remove propeller shaft.
- Remove drive shafts.
Refer to RA section.
- Disconnect breather hose from final drive side in advance.
- Support final drive with jack and disconnect differential mounting bracket from final drive.
- Disconnect final drive from mounting member.
- Remove final drive by moving it slightly forward and down.
- Remove final drive mounting member from body.


CAUTION:

Be careful not to damage spline, joint and front oil seal when removing propeller shaft.

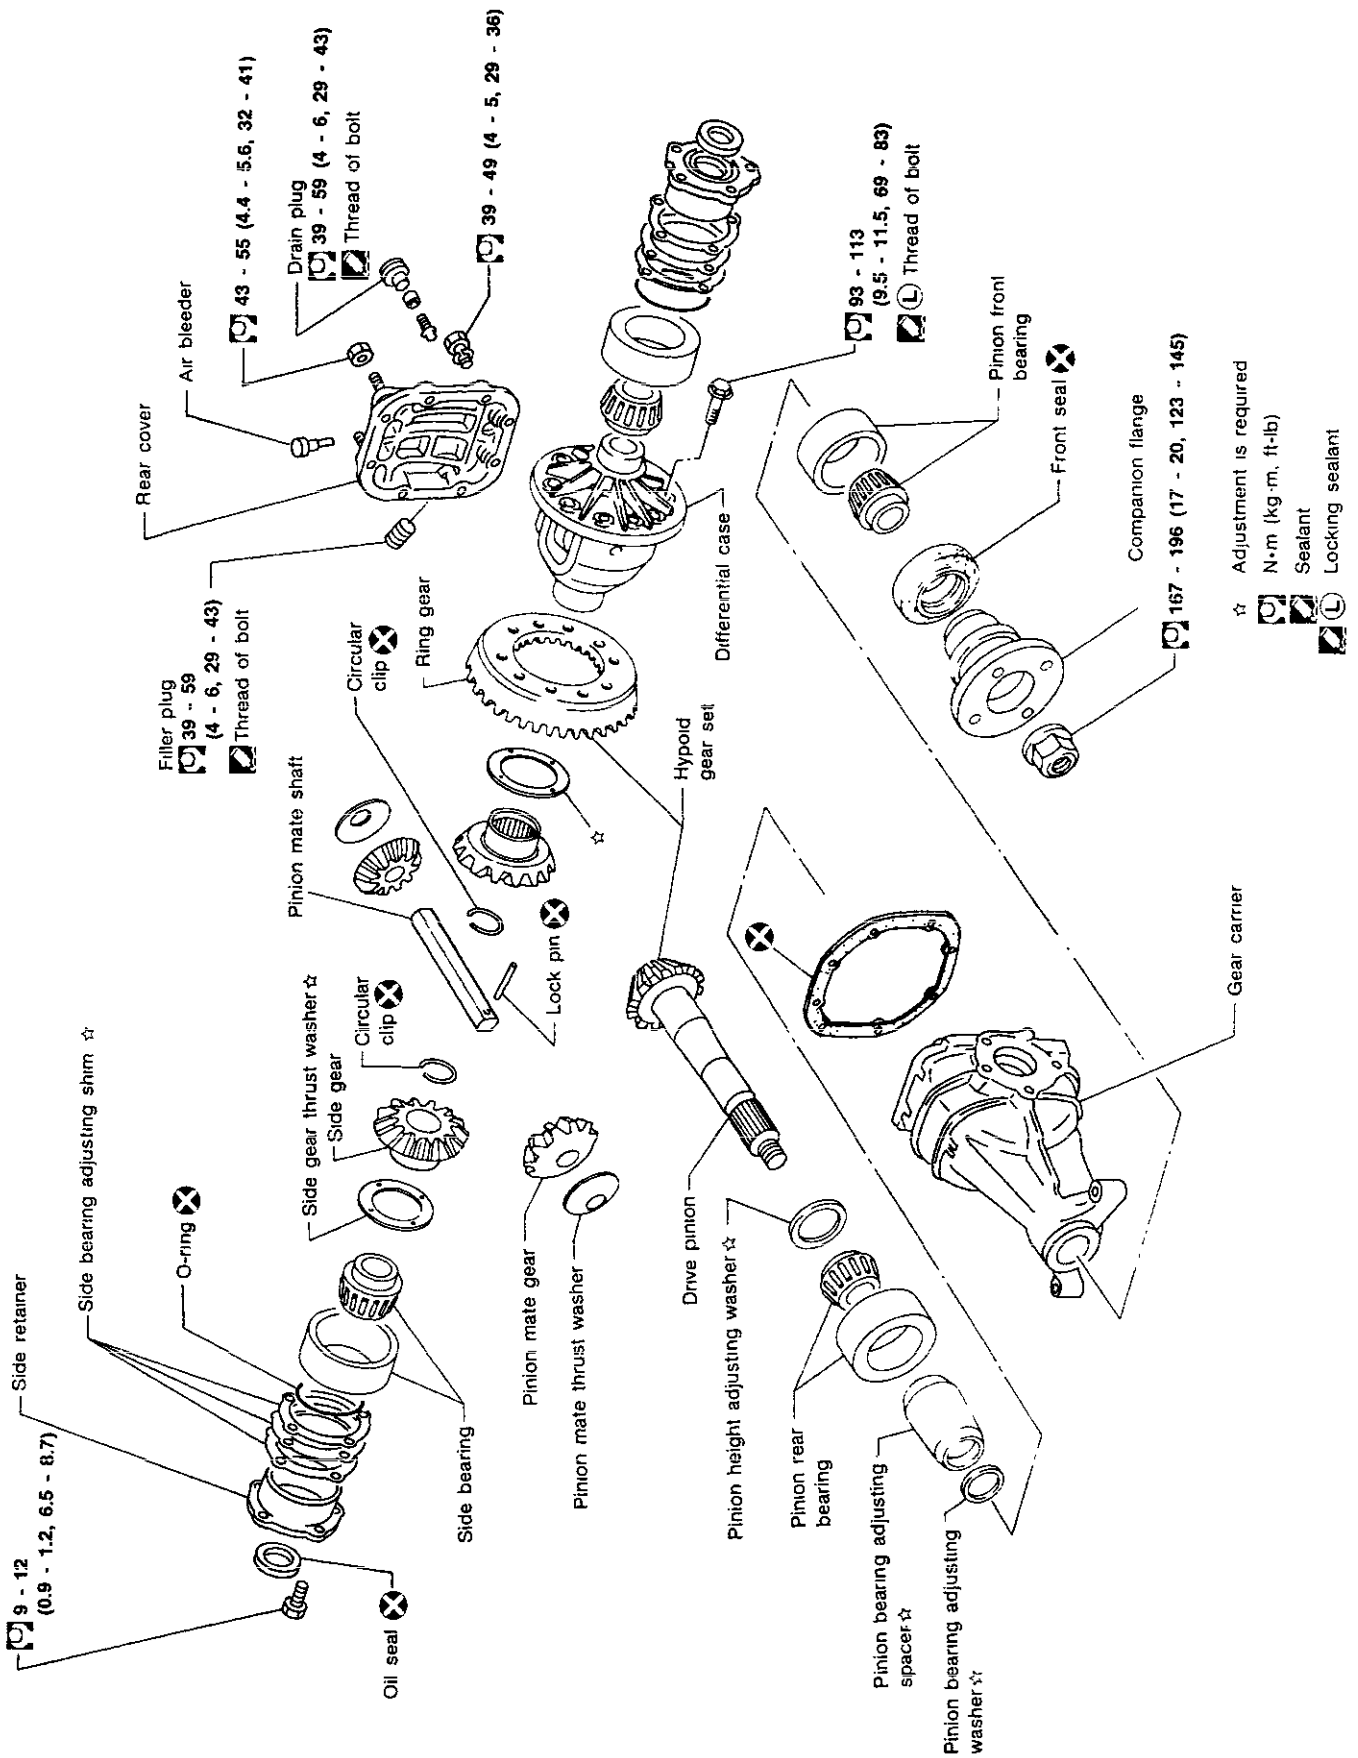

R180V

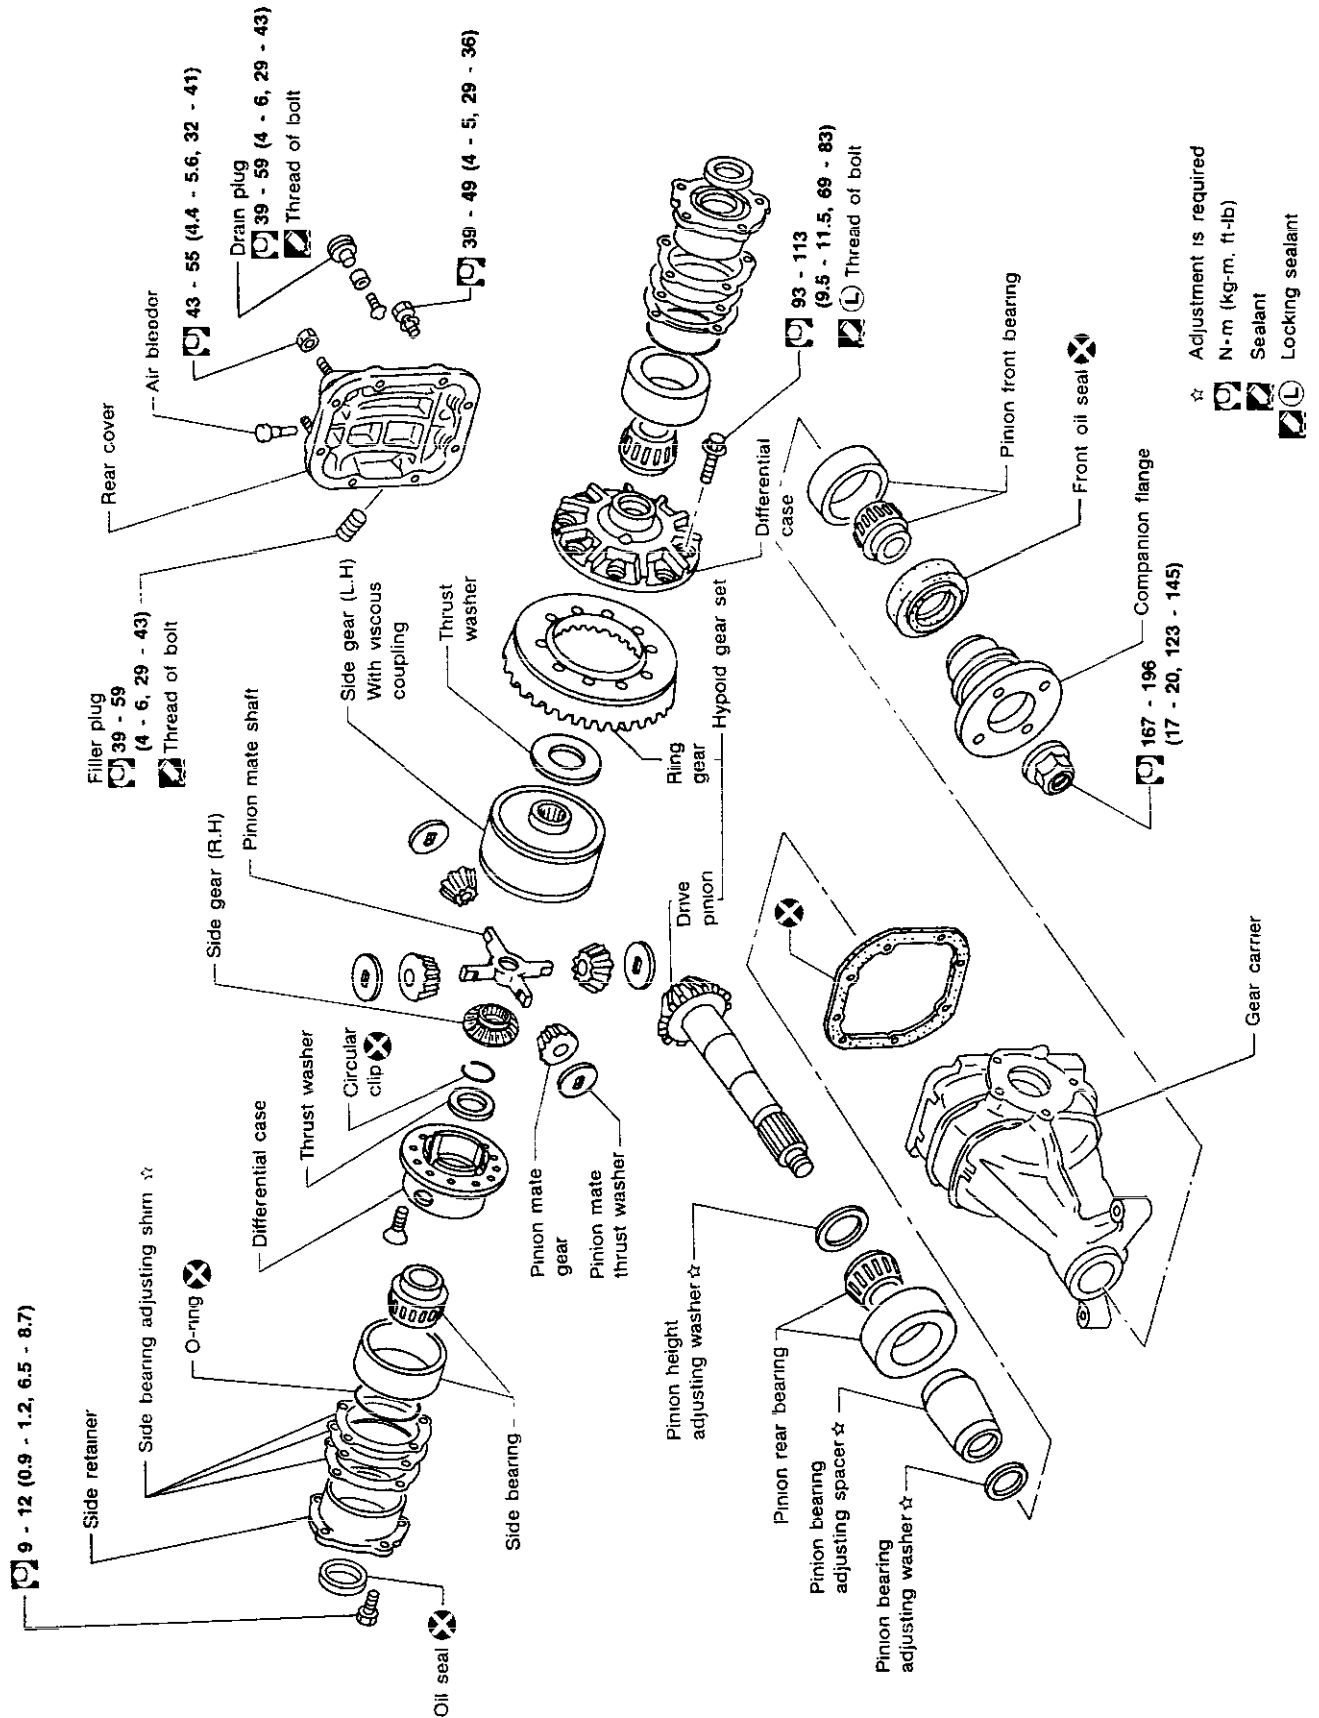

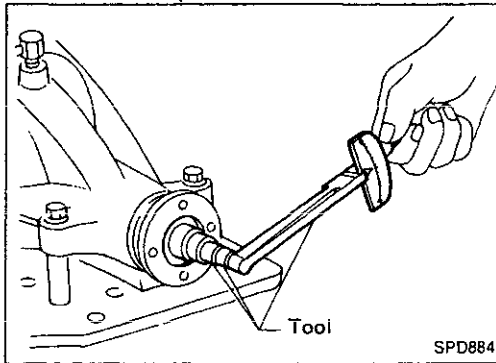

Pre-inspection

Before disassembling final drive, perform the following inspection.

- Total preload
 - 1) Turn drive pinion in both directions several times to set bearing rollers.
 - 2) Check total preload with Tool.

Tool number: ST3127S000

Total preload:

1.0 - 1.6 N·m



(10 - 16 kg-cm, 8.7 - 13.9 in-lb)

- Ring gear backlash

Check ring gear backlash with a dial indicator at several points.

Ring gear backlash:

0.10 - 0.20 mm (0.0039 - 0.0079 in)

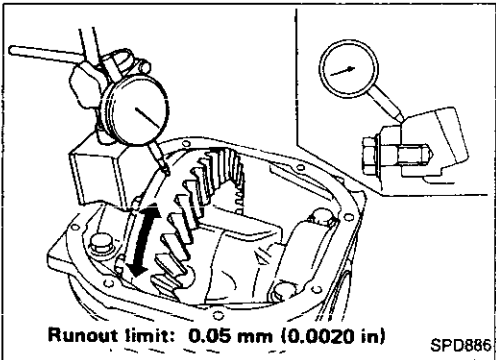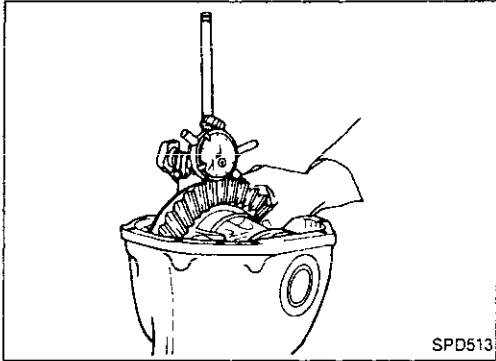

- Ring gear runout


Check runout of ring gear with a dial indicator.

Runout limit:

0.05 mm (0.0020 in)

- Tooth contact


Check tooth contact. (Refer to Adjustment.)

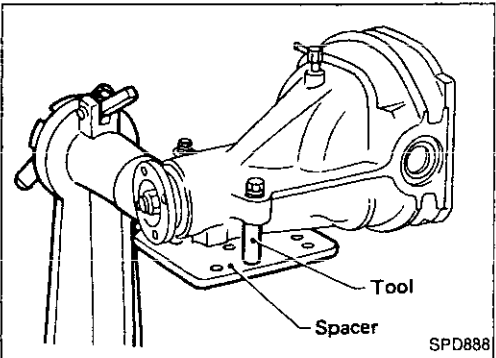

Differential Carrier

1. Using three 12 mm (0.5 in) spacers, mount final drive on Tool.

Tool number: KV38100800

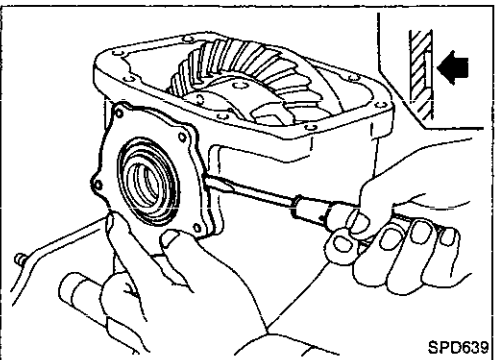


2. Mark side retainers for identification. Remove side retainers.


Be careful not to confuse right and left side retainers and shims.

DISASSEMBLY

Differential Carrier (Cont'd)

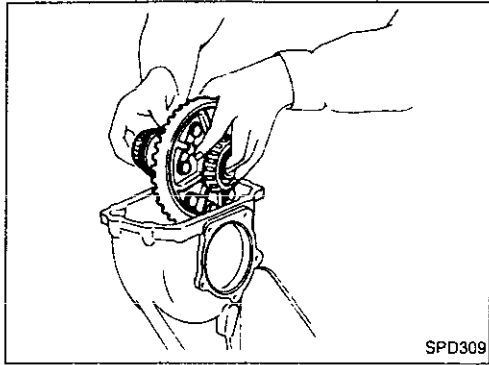

3. Extract differential case from final drive housing.

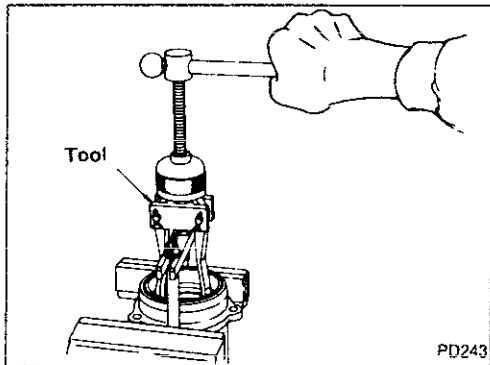


4. Remove side outer races.


Tool number: ST33290001

Be careful to keep the side bearing outer races together with their respective inner cones — do not mix them up.


5. Remove side oil seal.

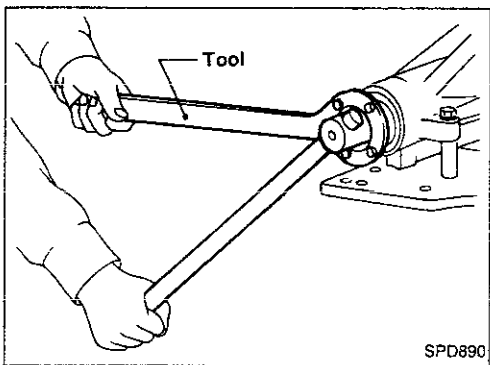

6. Loosen drive pinion nut.

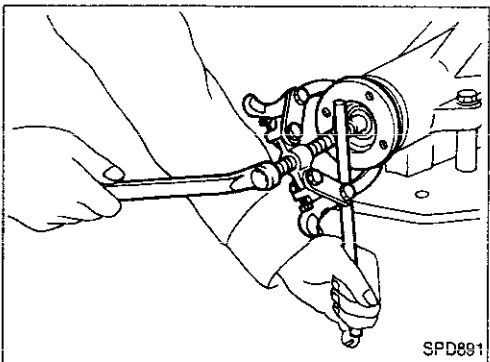


7. Remove companion flange with puller.

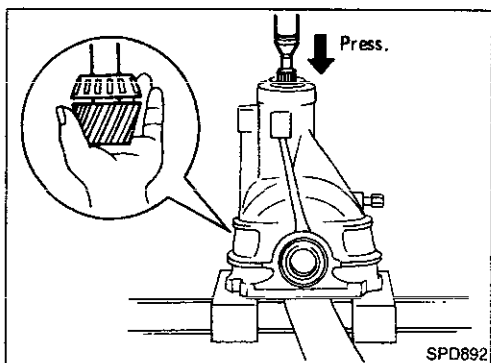


8. Take out drive pinion together with pinion rear bearing inner cone, drive pinion bearing spacer and pinion bearing adjusting washer.

9. Remove front oil seal.

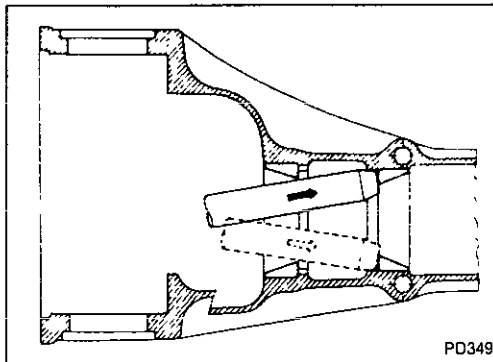
Differential Carrier (Cont'd)

10. Remove pinion front and rear bearing outer races with brass drift.

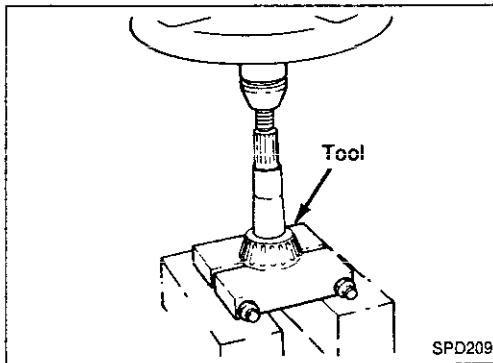

11. Remove pinion rear bearing inner cone and drive pinion adjusting washer.

Tool number: ST30031000

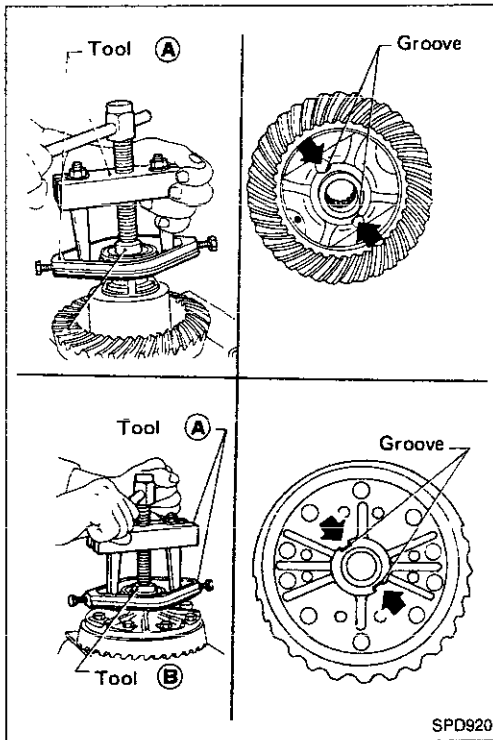**Differential Case**


1. Remove side bearing inner cones.

To prevent damage to bearing, engage puller jaws in grooves.


Tool number:

(A) ST33051001


(B) ST33061000

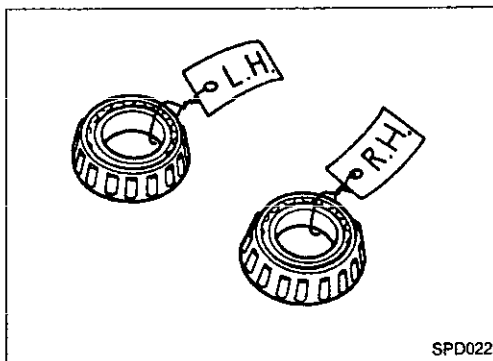

Be careful not to confuse the right and left hand parts.

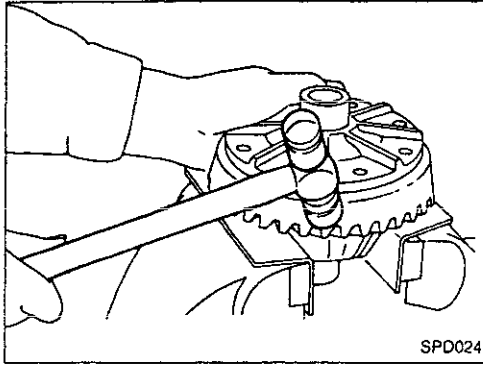Differential Case (Cont'd)


2. Loosen ring gear bolts in a criss-cross fashion.
3. Tap ring gear off differential case with a soft hammer.
Tap evenly all around to keep ring gear from binding.

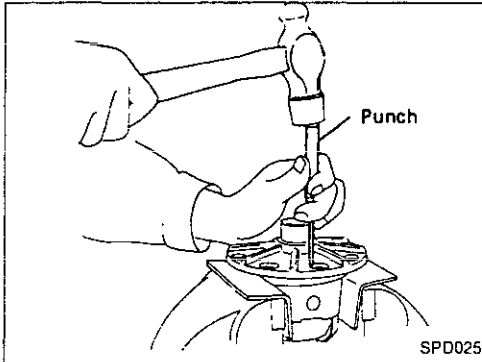

4. Drive out pinion mate shaft lock pin with Tool from ring gear side.
Lock pin is caulked at pin hole mouth on differential case.


Ring Gear and Drive Pinion

Check gear teeth for scoring, cracks or chipping.
If any damaged part is evident, replace ring gear and drive pinion as a set (hypoid gear set).

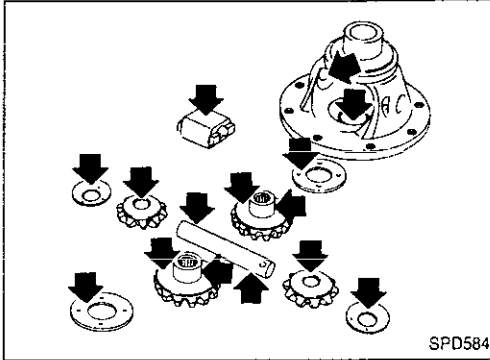

Differential Case Assembly

Check mating surfaces of differential case, side gears, pinion mate gears, pinion mate shaft, thrust block and thrust washers.

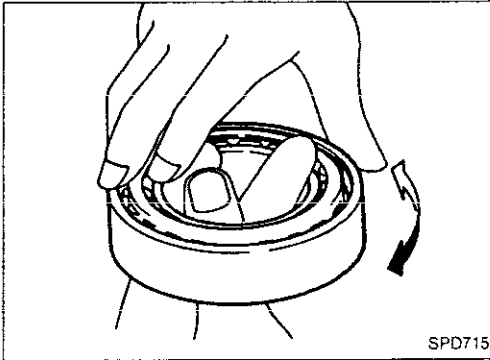


Bearing

1. Thoroughly clean bearing.
2. Check bearing for wear, scratches, pitting or flaking.
Check tapered roller bearing for smooth rotation. If damaged, replace outer race and inner cone as a set.

ADJUSTMENT

For quiet and reliable final drive operation, the following five adjustments must be made correctly:

1. Side bearing preload
2. Pinion gear height
3. Pinion bearing preload (Refer to ASSEMBLY.)
4. Ring gear-to-pinion backlash (Refer to ASSEMBLY.)
5. Ring and pinion gear tooth contact pattern

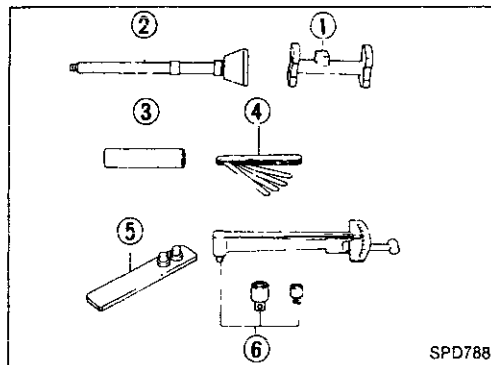

Drive Pinion Height

1. First prepare Tools for pinion height adjustment.


- ① Height gauge (ST31211000)
- ② Dummy shaft (ST31212000)
- ③ Collar (ST31214000)
- ④ Feeler gauge
- ⑤ Stopper (ST31213000)
- ⑥ Preload gauge (ST3127S000)

2. To simplify the job, make a chart, like the one below, to organize your calculations.


LETTERS	HUNDREDTHS OF A MILLIMETER
H: Head number	
D': Figure marked on dummy shaft	
S: Figure marked on height gauge	
N: Measuring clearance	
W: Thickness of washer used	

3. Write the following numbers down in the chart.

H: Head number

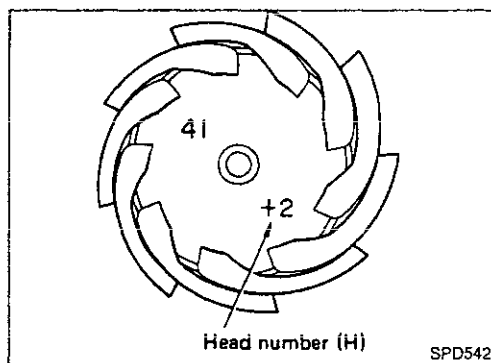


D': Figure marked on dummy shaft

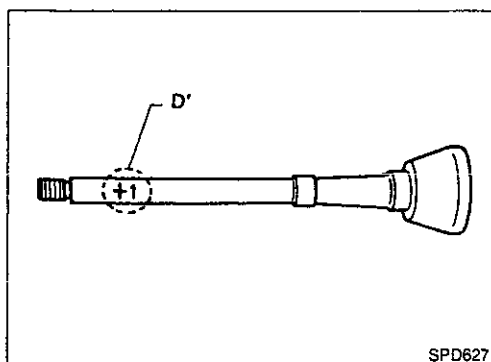


ADJUSTMENT

Drive Pinion Height (Cont'd)

S: Figure marked on height gauge

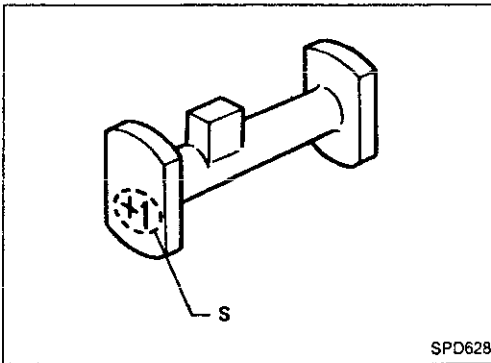



W: Thickness of washer used

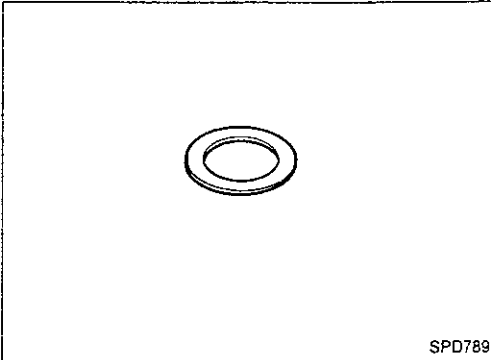

4. Set Tool (Dummy shaft) as shown at left.

Tool number:


- Ⓐ Dummy shaft (ST31212000)
- Ⓑ Collar (ST31214000)
- Ⓒ Dummy shaft spacer (ST31851000)
- Ⓓ Stopper (ST31213000)

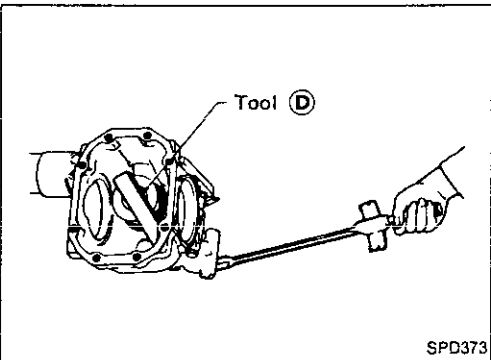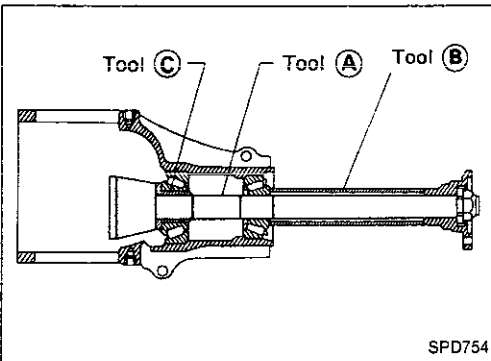

5. Attach Tool (Height gauge) to gear carrier, and measure the clearance between the height gauge tip and the dummy shaft face.

Tool number:

- Ⓐ Height gauge (ST31211000)
- Ⓑ Dummy shaft (ST31212000)

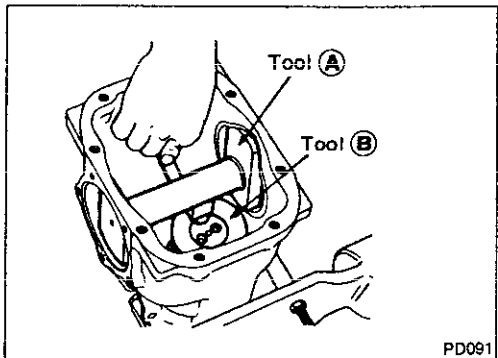

ADJUSTMENT

Drive Pinion Height (Cont'd)

6. Substitute these values into the equation to calculate the thickness of the washer.

If values signifying H, D' and S are not given, regard them as zero and calculate.

T: Thickness of washer

$$T = W + N + [(D' - H - S) \times 0.01] - 0.20$$

Example:

$$W = 3.09$$

$$N = 0.33$$

$$H = +2$$

$$D' = +1$$

$$S = +1$$

$$T = W + N + [(D' - H - S) \times 0.01] - 0.20$$

(1)	D' (+1)	
	- H - (+2)	
		- 1

(2)	- S - (+1)	
		- 2

(3)		- 2
		× 0.01
		- 0.02

(4)	W 3.09	
	+ N + 0.33	
		3.42

(5)		+ [- 0.02]
		3.40

(6)		- 0.20
		3.20

7. Select the proper washer (Refer to S.D.S.).

If you cannot find the desired thickness of washer, use washer so that thickness is the closest to the calculated value.

Example:


Calculated value ... T = 3.20 mm

Used washer ... T = 3.21 mm


Side Bearing Preload

- To simplify the job, make a chart like the one below to organize your calculation.


LETTERS	HUNDREDTHS OF A MILLIMETER
A - Left housing	
B - Right housing	
C - Differential case	
D - Differential case	
E - Left side bearing	
F - Right side bearing	
G ₁ - Left side retainer	
G ₂ - Right side retainer	

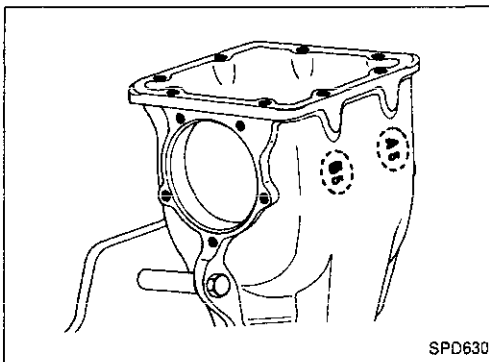

- Write the following numbers down in the chart.
A & B: Figures marked on gear carrier

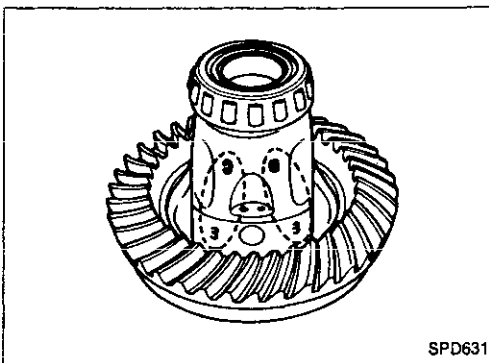


C & D: Figures marked on differential case

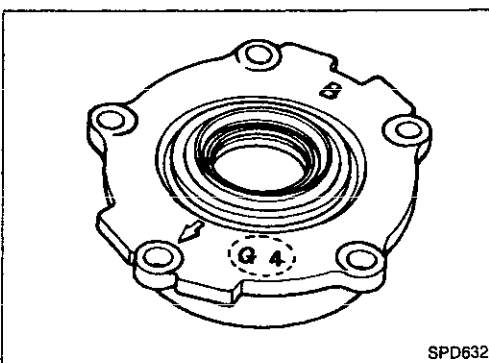

G₁ & G₂: Figures marked on side retainer

ADJUSTMENT


Side Bearing Preload (Cont'd)

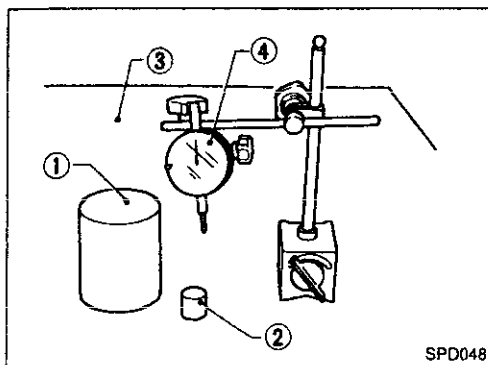

3. Measure how far under standard thickness [20 mm (0.79 in) in the side bearings are.

It will require tools shown at left.

- ① Weight block (ST32501000)
- ② Master gauge (KV38101900)
- ③ Base plate
- ④ Dial indicator

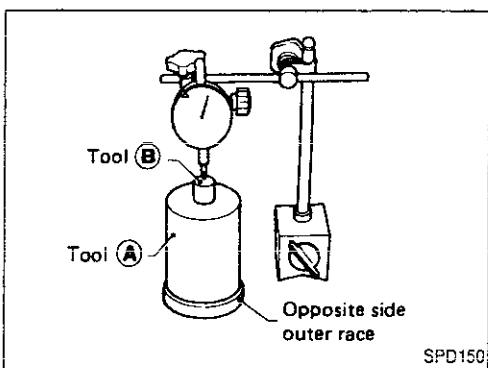


4. Place the outer race of the opposite side bearing to be measured.
5. Place a weight block on the outer race, and a master gauge on that block.

Tool number:

① ST32501000


② KV38101900

6. Adjust dial indicator scale to zero.
7. Carefully slide master gauge and weight block out from under dial indicator.

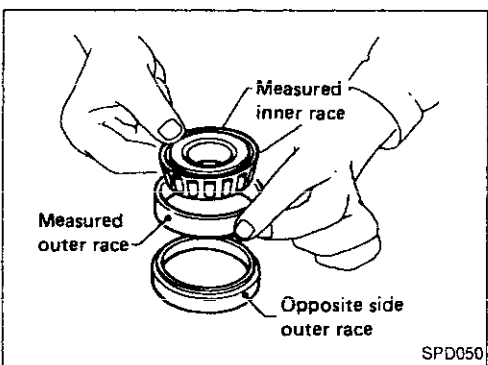


8. Lubricate side bearing and place the bearing outer race and inner cone to be measured on the opposite side outer race.

If the bearing assembly is placed on the base plate, the bearing width cannot be accurately determined due to its cage being in contact with base plate.

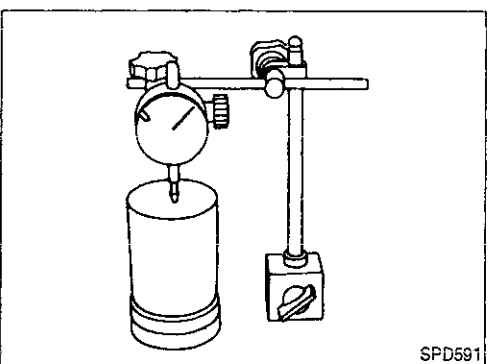

9. Place weight block on side bearing.
10. Slide dial indicator on weight block.

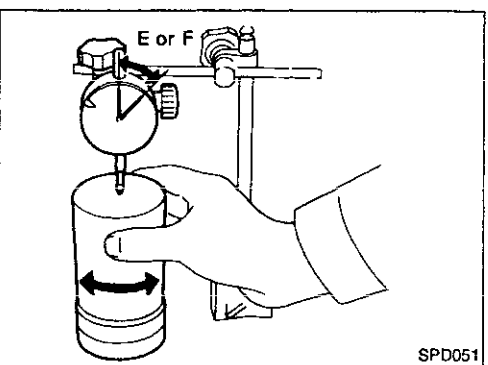

11. Turn weight block a few times to ensure that bearing is properly seated.
12. Read dial indicator.

Normal indication:

0.10 - 0.30 mm (0.0039 - 0.0118 in)

If the needle fluctuates erratically then bearing is either dirty or damaged and should be cleaned or replaced.

Side Bearing Preload (Cont'd)

13. Measure both bearings in the same way and write the left side bearing measurement next to "E" and the right side bearing measurement next to "F".
14. Substitute these values into the equation to calculate the thickness of the shim.

If values signifying A, B, C, D, G₁ and G₂ are not given, regard them as zero and calculate.

Left side:

$$T_1 = (A + C + G_1 - D) \times 0.01 + 0.76 - E$$

Right side:

$$T_2 = (B + D + G_2) \times 0.01 + 0.76 - F$$

ADJUSTMENT

Side Bearing Preload (Cont'd)

Example:

$$\begin{array}{ll} A = 5 & E = 0.11 \\ B = 5 & F = 0.15 \\ C = 3 & G_1 = 4 \\ D = 3 & G_2 = 1 \end{array}$$

Left side:

$$\begin{aligned} T_1 &= (A + C + G_1 - D) \times 0.01 + 0.76 - E \\ &= (5 + 3 + 4 - 3) \times 0.01 + 0.76 - 0.11 \end{aligned}$$

(1)	A	5	
	+ C	+3	
		8	
	+ G ₁	+4	
		12	
	- D	-3	
		9	
(2)		9	
		× 0.01	
		0.09	
(3)		0.09	
		+ 0.76	
		0.85	
(4)		0.85	
	- E	- 0.11	
		0.74	

$$\therefore T_1 = 0.74 \text{ mm}$$

Right side:

$$\begin{aligned} T_2 &= (B + D + G_2) \times 0.01 + 0.76 - F \\ &= (5 + 3 + 1) \times 0.01 + 0.76 - 0.15 \end{aligned}$$

(1)	B	5	
	+ D	+3	
		8	
	+ G ₂	+1	
		9	
(2)		9	
		× 0.01	
		0.09	
(3)		0.09	
		+ 0.76	
		0.85	
(4)		0.85	
		- 0.15	
		0.70	


$$\therefore T_2 = 0.70 \text{ mm}$$

15. Select the proper shims (Refer to S.D.S.).

If you cannot find the desired thickness of shims, use shims so that the total thickness is the closest to the calculated value.

Tooth Contact


Checking of gear tooth contact pattern is necessary to verify correct relationship between ring gear and drive pinion. Hypoid gear sets which are not positioned properly in relation to one another may be noisy, or have short life, or both. With a pattern check, the most desirable contact for low noise level and long life can be assured.

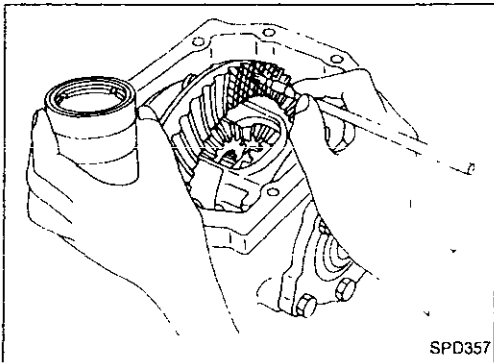


1. Thoroughly clean ring gear and drive pinion teeth.
2. Sparingly apply a mixture of powdered ferric oxide and oil or equivalent to 3 or 4 teeth of ring gear drive side.
3. Hold companion flange steady by hand and rotate the ring gear in both directions.

Usually the pattern will be correct if you have calculated the shims correctly and the backlash is correct. However, in rare cases you may have to use trial-and-error processes until you get a good tooth contact pattern. The tooth pattern is the best indication of how well a differential has been set up.


Heel contact

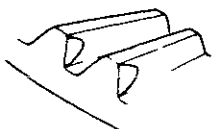


Face contact

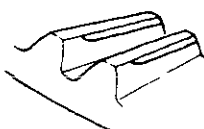

 To correct, increase thickness of pinion height adjusting washer in order to bring drive pinion close to ring gear.



Toe contact

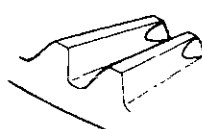


Flank contact



To correct, reduce thickness of pinion height adjusting washer in order to make drive pinion go away from ring gear.




Correct tooth contact

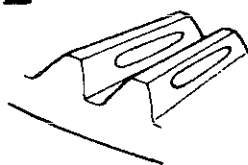


When adjustment is completed, be sure to wipe off completely the ferric oxide and oil or their equivalent.

SPD007

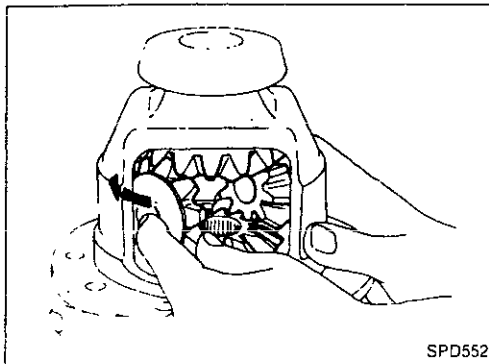

Differential Case


1. Install side gears, pinion mate gears and thrust washers into differential case.

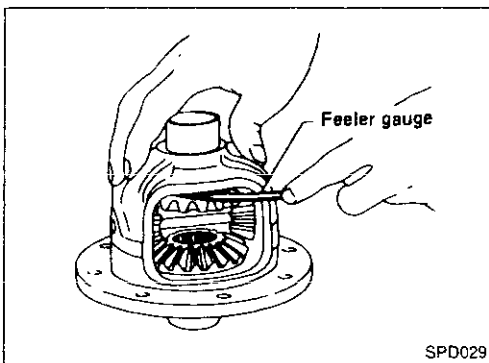

2. Fit pinion mate shaft to differential case so that it meets lock pin holes.
3. Adjust backlash between side gear and pinion mate gear selecting side gear thrust washer. (Refer to S.D.S.)

**Backlash between side gear and pinion mate gear
(Clearance between side gear thrust washer and differential case):**


0.10 - 0.20 mm (0.0039 - 0.0079 in)

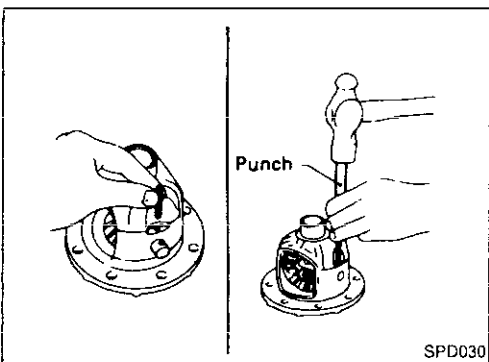


4. Install pinion mate shaft lock pin with a punch.

Make sure lock pin is flush with case.

5. Apply gear oil to gear tooth surfaces and thrust surfaces and check to see they turn properly.

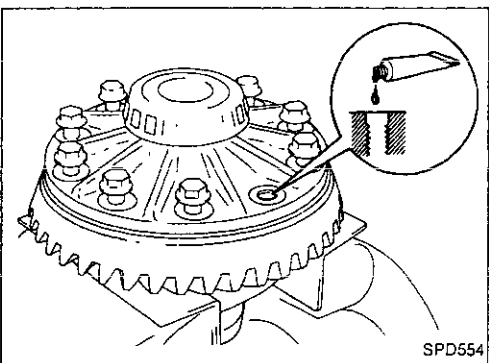

6. Place differential case on ring gear.
7. Apply locking sealant to ring gear bolts, and install them. **Tighten bolts in a criss-cross fashion, lightly tapping bolt heads with a hammer.**

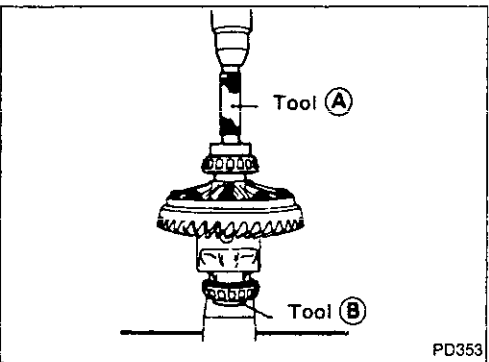


8. Select side bearing adjusting shims. Refer to ADJUSTMENT.
9. Install the shims behind each bearing and press on side bearing inner cones with Tool.

Tool number:

Ⓐ ST33230000

Ⓑ ST33061000

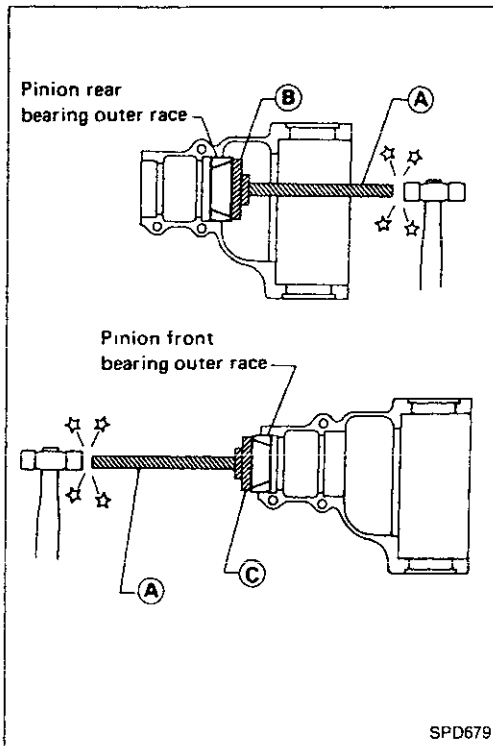


Differential Carrier

1. Press-fit front and rear bearing outer races with Tools.

Tool number:


- (A) ST30611000
- (B) ST30621000
- (C) ST30701000

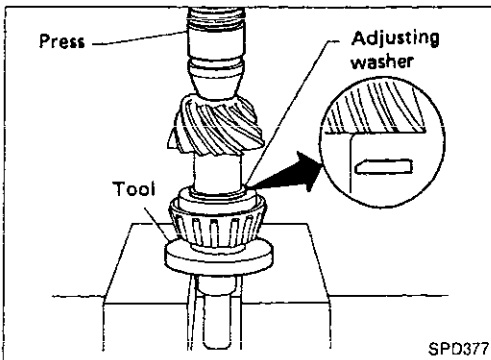

2. Select pinion height adjusting washer, referring to ADJUSTMENT.
3. Install pinion height adjusting washer in drive pinion, and press-fit rear bearing inner cone in it with a press and Tool.


Tool number:

ST30901000

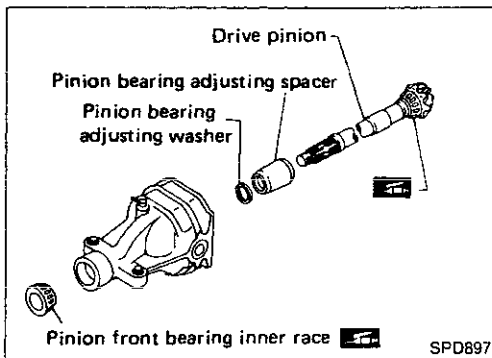


4. Set drive pinion assembly (as shown at left) in differential carrier and install drive pinion, using press and suitable tool.

Stop when drive pinion touches bearing.

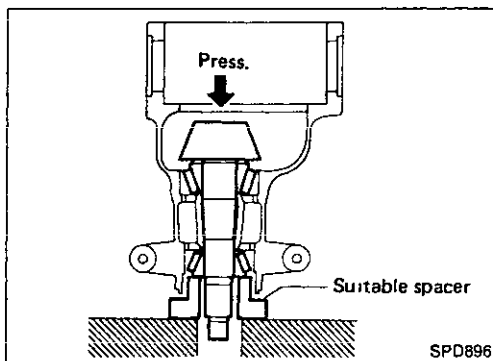


Differential Carrier (Cont'd)

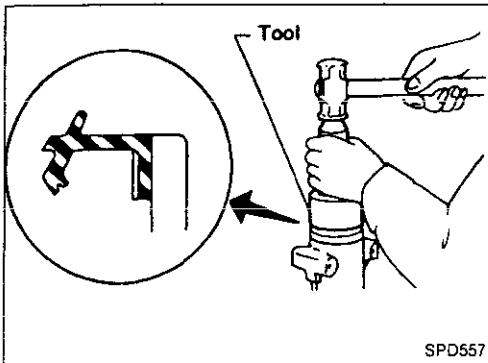

5. Apply multi-purpose grease to cavity at sealing lips of front oil seal.


Install front oil seal.

Tool number: ST30720000

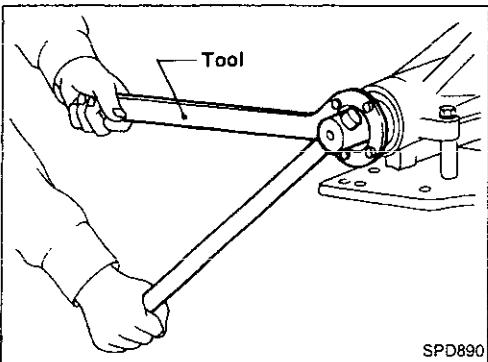

6. Install companion flange, and tighten pinion nut to specified torque.

Ascertain that threaded portion of drive pinion and pinion nut are free from oil or grease.

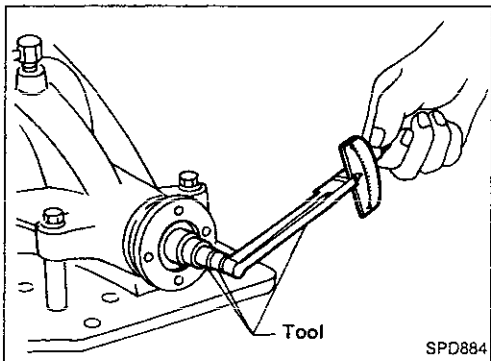


7. Turn drive pinion in both directions several times, and measure pinion bearing preload.

Tool number: ST3127S000

Pinion bearing preload (With oil seal):

1.1 - 1.7 N·m (11 - 17 kg-cm, 9.5 - 14.8 in-lb)

When pinion bearing preload is outside the specification, replace pinion bearing adjusting washer and spacer with different thickness.

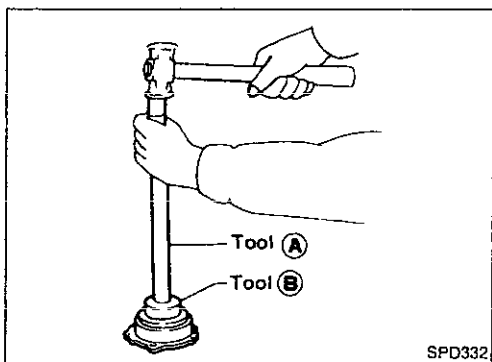

8. Select side retainer adjusting washer. Refer to Adjustment.


9. Press-fit side bearing outer race into side retainer.

Tool number:

(A) ST30611000


(B) ST30621000

Differential Carrier (Cont'd)

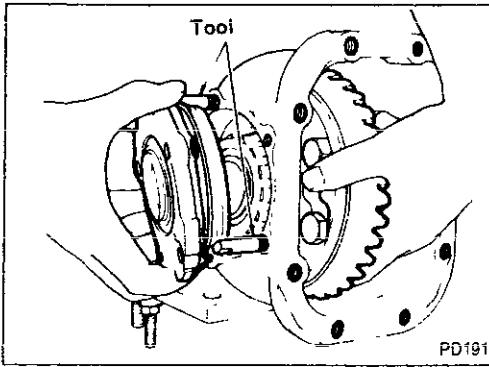


10. Install side oil seal.
11. Install differential case assembly.
12. Place side retainer adjusting shims and O-ring on side retainer, and install them in gear carrier.

Tool number: ST33720000

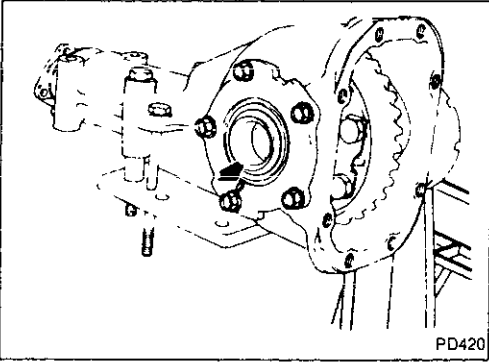

- Align mark on side retainer and gear carrier.

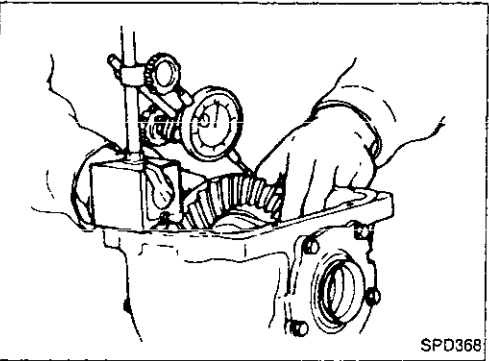


13. Measure ring gear-to-drive pinion backlash with a dial indicator.

Ring gear-to-drive pinion backlash:

0.10 - 0.20 mm (0.0039 - 0.0079 in)

- If backlash is too small, decrease thickness of right shim and increase thickness of left shim by the same amount.
- If backlash is too great, reverse the above procedure.

Never change the total amount of shims as it will change the bearing preload.

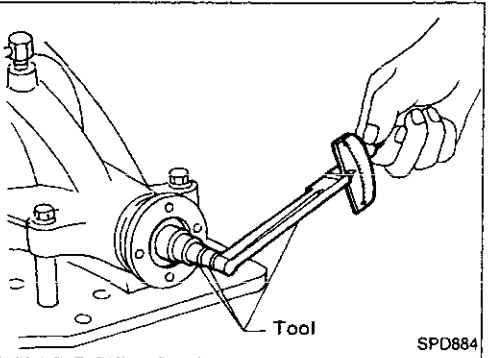

14. Check total preload with Tool.

When checking preload, turn drive pinion in both directions several times to set bearing rollers.

Tool number: ST3127S000


Total preload:

1.0 - 1.6 N·m (10 - 16 kg-cm, 8.7 - 13.9 in-lb)

- If preload is too great, add the same amount of shims from each side.
- If preload is too small, remove the same amount of shims to each side.

Never add or remove a different number of shims for each side as it will change ring gear-to-drive pinion backlash.

15. Recheck ring gear-to-drive pinion backlash because an increase or decrease in thickness of shims will cause change of ring gear-to-drive pinion backlash.

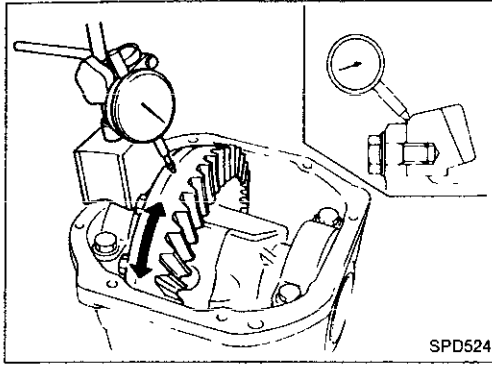Differential Carrier (Cont'd)

16. Check ring gear runout with a dial indicator.



Runout limit: 0.05 mm (0.0020 in)

- If backlash varies excessively in different places, the variance may have resulted from foreign matter caught between the ring gear and the differential case.
- If the backlash varies greatly when the ring gear runout is within the specified range, the hypoid gear set or differential case should be replaced.

17. Check tooth contact.

Refer to ADJUSTMENT.

18. Install rear cover and gasket.

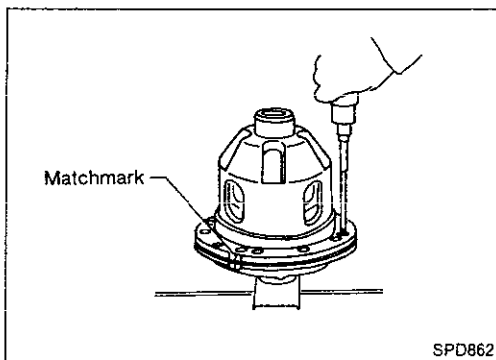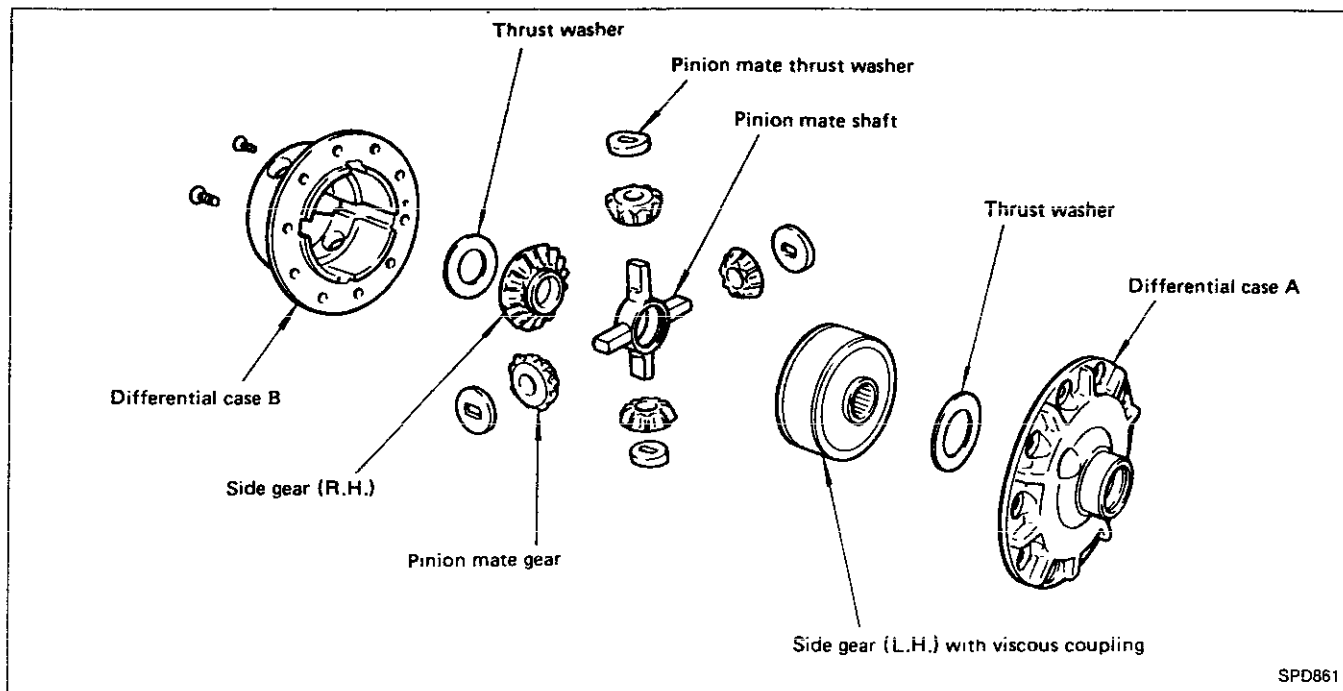

Disassembly and Assembly

1. Loosen screws on differential cases A and B.
2. Separate differential cases A and B.


CAUTION:

Assemble differential case firmly.

Inspection

CONTACT SURFACES

1. Clean the disassembled parts in suitable solvent and blow dry with compressed air.
2. If following surfaces are found to be burred or scratched, smooth with oil stone.
 - Differential case A
 - Differential case B
 - Side gear
 - Pinion mate gear
 - Pinion mate shaft
3. Check viscous coupling for oil leakage. If necessary, replace it with new one.

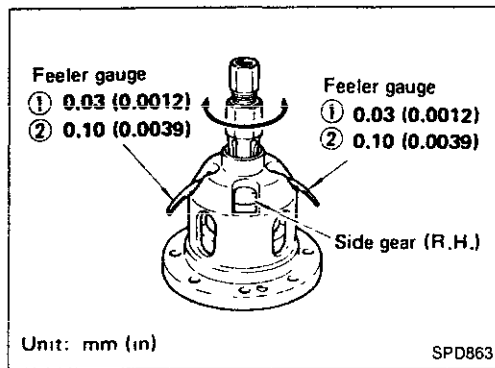

Adjustment

THRUST WASHER SELECTION

Whenever side gears or pinion mate gears are replaced, select suitable thrust washers as follows:

1. Clean side gears and pinion mate gears using white gasoline.
2. Before assembling gears, apply hypoid gear oil to frictional surfaces.
3. Install the previously removed thrust washer on right side gear. On left side gear, install a suitable thrust washer. Temporarily tighten differential cases using two screws.
4. Position differential assembly so that right side gear is on the upper side. Place a 0.03 mm (0.0012 in) feeler gauge (for example) between right side gear and thrust washer.

Do not place feeler gauge at groove side of differential case.

5. Also place a 0.03 mm (0.0012 in) additional feeler gauge between right side gear and thrust washer so that it is positioned diagonal to (180° apart from) the feeler gauge described previously.
6. Rotate right side gear with a suitable tool attached to splines.
If right side gear cannot be rotated, replace thrust washer used on left side gear with a thinner one.
7. Replace both 0.03 mm (0.0012 in) feeler gauges with 0.10 mm (0.0039 in) gauges. At this point, make sure right side gear does not rotate. If it does, replace thrust washer on left side gear with a thicker one so that right side gear does not rotate.
8. As explained in above example, select suitable thrust washers to ensure that:
 - a) Both side gears rotate. [0.03 mm (0.0012 in) feeler gauges are used in this case.]
 - b) Side gear is held stationary. [0.10 mm (0.0039 in) feeler gauges are used in this case.]
 (Refer to S.D.S.)

Propeller Shaft

GENERAL SPECIFICATIONS

Engine	SR20DET	GA16DS
Propeller shaft model	4F63A-VL91	4F56A-VL91
Number of joints	4	
Coupling method with transfer	Flange type	
Type of journal bearings	Shell type (Non-disassembly type)	
Shaft length (Joint to joint) mm (in)		
1st	588 (23.15)	560 (22.05)
2nd	500 (19.69)	507 (19.96)
3rd	680 (26.77)	690 (27.17)
Shaft outer diameter mm (in)		
1st	70 (2.76)	
2nd	63.5 (2.500)	
3rd	70 (2.76)	

INSPECTION AND ADJUSTMENT

Unit: mm (in)

Propeller shaft model	4F63A-VL91, 4F56A-VL91
Propeller shaft runout limit	0.6 (0.024)
Journal axial play	0 (0)

Final Drive

GENERAL SPECIFICATIONS

Engine	GA16DS	SR20DET
Final drive model	R180	R180V
Ring gear pitch diameter mm (in)	181 (7.13)	
Gear ratio	3.700	
Number of teeth (Ring gear/Drive pinion)	37/10	
Oil capacity (approx.) ℓ (Imp pt)	1.0 (1-3/4)	
Differential case	2 pinion	Viscous L.S.D.

Available pinion height adjusting washers

Thickness mm (in)	Part number
3.09 (0.1217)	38154-P6017
3.12 (0.1228)	38154-P6018
3.15 (0.1240)	38154-P6019
3.18 (0.1252)	38154-P6020
3.21 (0.1264)	38154-P6021
3.24 (0.1276)	38154-P6022
3.27 (0.1287)	38154-P6023
3.30 (0.1299)	38154-P6024
3.33 (0.1311)	38154-P6025
3.36 (0.1323)	38154-P6026
3.39 (0.1335)	38154-P6027
3.42 (0.1346)	38154-P6028
3.45 (0.1358)	38154-P6029
3.48 (0.1370)	38154-P6030
3.51 (0.1382)	38154-P6031
3.54 (0.1394)	38154-P6032
3.57 (0.1406)	38154-P6033
3.60 (0.1417)	38154-P6034
3.63 (0.1429)	38154-P6035
3.66 (0.1441)	38154-P6036

INSPECTION AND ADJUSTMENT

Drive pinion bearing adjusting method	Pinion bearing adjusting washer
Ring gear backlash mm (in)	0.10 - 0.20 (0.0039 - 0.0079)
Drive pinion preload (With front oil seal) N·m (kg-cm, in-lb)	1.1 - 1.7 (11 - 17, 9.5 - 14.8)
Total preload N·m (kg-cm, in-lb)	1.0 - 1.6 (10 - 16, 8.7 - 14)
Side bearing adjusting method	Adjusting shim
Side gear to pinion mate gear backlash (Clearance between side gear and differential case) mm (in)	0.10 - 0.20 (0.0039 - 0.0079)
Ring gear runout mm (in)	0.05 (0.0020)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Final Drive (Cont'd)

Available drive pinion bearing preload adjusting washers

Thickness mm (in)	Part number
6.31 (0.2484)	38127-01G14
6.33 (0.2492)	38127-01G13
6.35 (0.2500)	38127-01G12
6.37 (0.2508)	38127-01G11
6.39 (0.2516)	38127-01G10
6.41 (0.2524)	38127-01G09
6.43 (0.2531)	38127-01G08
6.45 (0.2539)	38127-01G07
6.47 (0.2547)	38127-01G06
6.49 (0.2555)	38127-01G05
6.51 (0.2563)	38127-01G04
6.53 (0.2571)	38127-01G03
6.55 (0.2579)	38127-01G02
6.57 (0.2587)	38127-01G01
6.59 (0.2594)	38127-01G00

Available drive pinion bearing preload adjusting spacers

Length mm (in)	Part number
52.20 (2.0551)	38130-78500
52.40 (2.0630)	38131-78500
52.60 (2.0709)	38132-78500
52.80 (2.0787)	38133-78500
53.00 (2.0866)	38134-78500
53.20 (2.0945)	38135-78500

Available side bearing adjusting washers

Thickness mm (in)	Part number
0.20 (0.0079)	38453-21100
0.25 (0.0098)	38453-21101
0.30 (0.0118)	38453-21102
0.40 (0.0157)	38453-21103
0.50 (0.0197)	38453-21104

Available side gear thrust washers

	Thickness mm (in)	Part number
Standard type	0.75 - 0.78 (0.0295 - 0.0307)	38424-W2010
	0.78 - 0.81 (0.0307 - 0.0319)	38424-W2011
	0.81 - 0.84 (0.0319 - 0.0331)	38424-W2012
	0.84 - 0.87 (0.0331 - 0.0343)	38424-W2013
	0.87 - 0.90 (0.0343 - 0.0354)	38424-W2014
	0.90 - 0.93 (0.0354 - 0.0366)	38424-W2015
	0.93 - 0.96 (0.0366 - 0.0378)	38424-W2016
	0.96 - 0.99 (0.0378 - 0.0390)	38424-W2017
Viscous type	0.80 (0.0315)	38424-20R00
	0.85 (0.0335)	38424-20R11
	0.90 (0.0354)	38424-20R01
	0.95 (0.0374)	38424-20R12
	1.00 (0.0394)	38424-20R02
	1.05 (0.0413)	38424-20R13
	1.10 (0.0433)	38424-20R03
	1.15 (0.0453)	38424-20R08
	1.20 (0.0472)	38424-20R04
	1.25 (0.0492)	38424-20R09
	1.30 (0.0512)	38424-20R05
	1.35 (0.0531)	38424-20R10
	1.40 (0.0551)	38424-20R06
	1.45 (0.0571)	38424-20R14
	1.50 (0.0591)	38424-20R07
	1.55 (0.0610)	38424-20R15
	1.60 (0.0630)	38424-20R16
	1.65 (0.0650)	38424-20R17
	1.70 (0.0669)	38424-20R18
	1.75 (0.0689)	38424-20R19
	1.80 (0.0709)	38424-20R20
	1.85 (0.0728)	38424-20R21
	1.90 (0.0748)	38424-20R22
	1.95 (0.0768)	38424-20R23


FRONT AXLE & FRONT SUSPENSION

SECTION **FA**

CONTENTS

PRECAUTIONS AND PREPARATION	FA- 2
FRONT AXLE AND FRONT SUSPENSION	FA- 4
CHECK AND ADJUSTMENT	FA- 6
FRONT AXLE	FA-10
FRONT AXLE — Wheel Hub and Knuckle	FA-11
FRONT AXLE — Drive Shaft	FA-16
FRONT AXLE — Drive Shaft for 2WD	FA-19
FRONT AXLE — Drive Shaft for 4WD	FA-29
FRONT SUSPENSION	FA-35
FRONT SUSPENSION — Coil Spring and Strut Assembly	FA-37
FRONT SUSPENSION — Stabilizer Bar	FA-39
FRONT SUSPENSION — Transverse Link and Lower Ball Joint	FA-40
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	FA-41

PRECAUTIONS AND PREPARATION

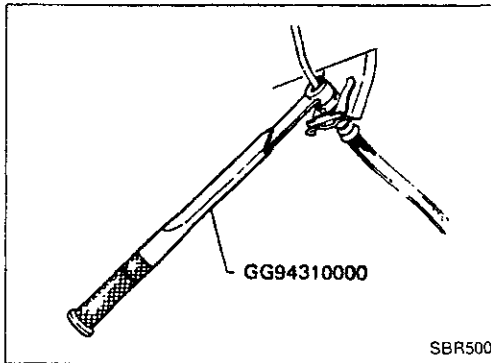





Precautions

- When installing each rubber part, final tightening must be carried out under unladen condition* with tires on ground.
*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- When removing each suspension part, check wheel alignment and adjust if necessary.
- Use Tool when removing or installing brake tubes.

Preparation


SPECIAL SERVICE TOOLS

*. Special tool or commercial equivalent

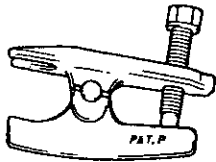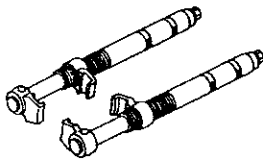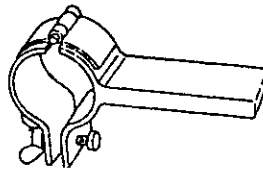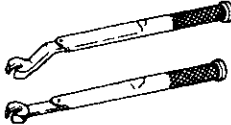Tool number Tool name	Description
HT72520000* Ball joint remover	 Removing tie-rod outer end and lower ball joint
HT71780000* Spring compressor	 Removing and installing coil spring
ST35652000* Strut attachment	 Fixing strut assembly
GG94310000* Flare nut torque wrench	 Removing and installing brake piping
KV38106700* KV38106800* Differential side oil seal protector	 Installing drive shaft L.H.: KV38106700 R.H.: KV38106800

PRECAUTIONS AND PREPARATION

Preparation (Cont'd)
COMMERCIAL SERVICE TOOLS

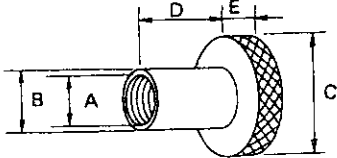
Tool name	Description
Attachment Wheel alignment	 Measure wheel alignment A: Screw M22 x 1.5 B: 35 (1.38) dia. C: 65 (2.56) dia. D: 56 (2.20) E: 12 (0.47) Unit: mm (in)

FRONT AXLE AND FRONT SUSPENSION

2WD MODELS

When installing each rubber part final tightening must be carried out under unladen condition* with tires on ground.

- * Fuel, radiator coolant and engine oil full.
- Spare tire, jack, hand tools and mats in designated positions.

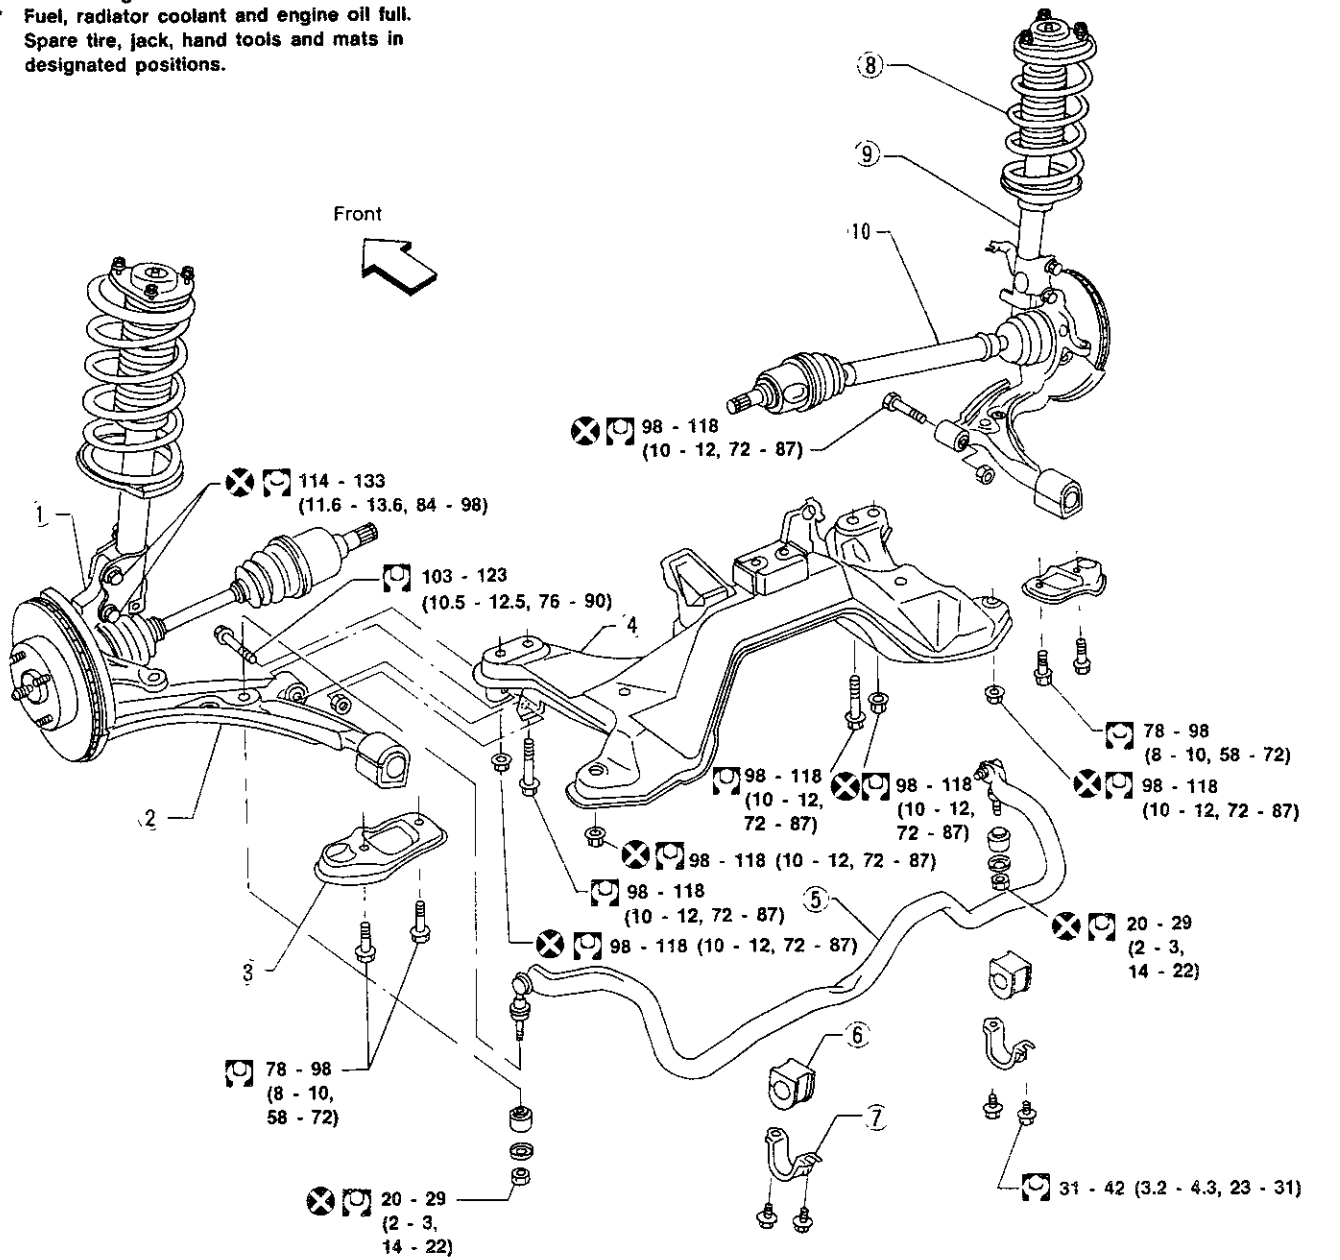

□ N·m (kg-m, ft-lb)

SFA152B

- ① Knuckle assembly
- ② Transverse link
- ③ Compression rod clamp
- ④ Front suspension member

- ⑤ Stabilizer bar
- ⑥ Bushing
- ⑦ Bracket


- ⑧ Coil spring
- ⑨ Strut assembly
- ⑩ Drive shaft

FRONT AXLE AND FRONT SUSPENSION

4WD MODELS

When installing each rubber part final tightening must be carried out under unladen condition* with tires on ground.

* Fuel radiator coolant and engine oil full.
Spare tire, jack hand tools and mats in designated positions.

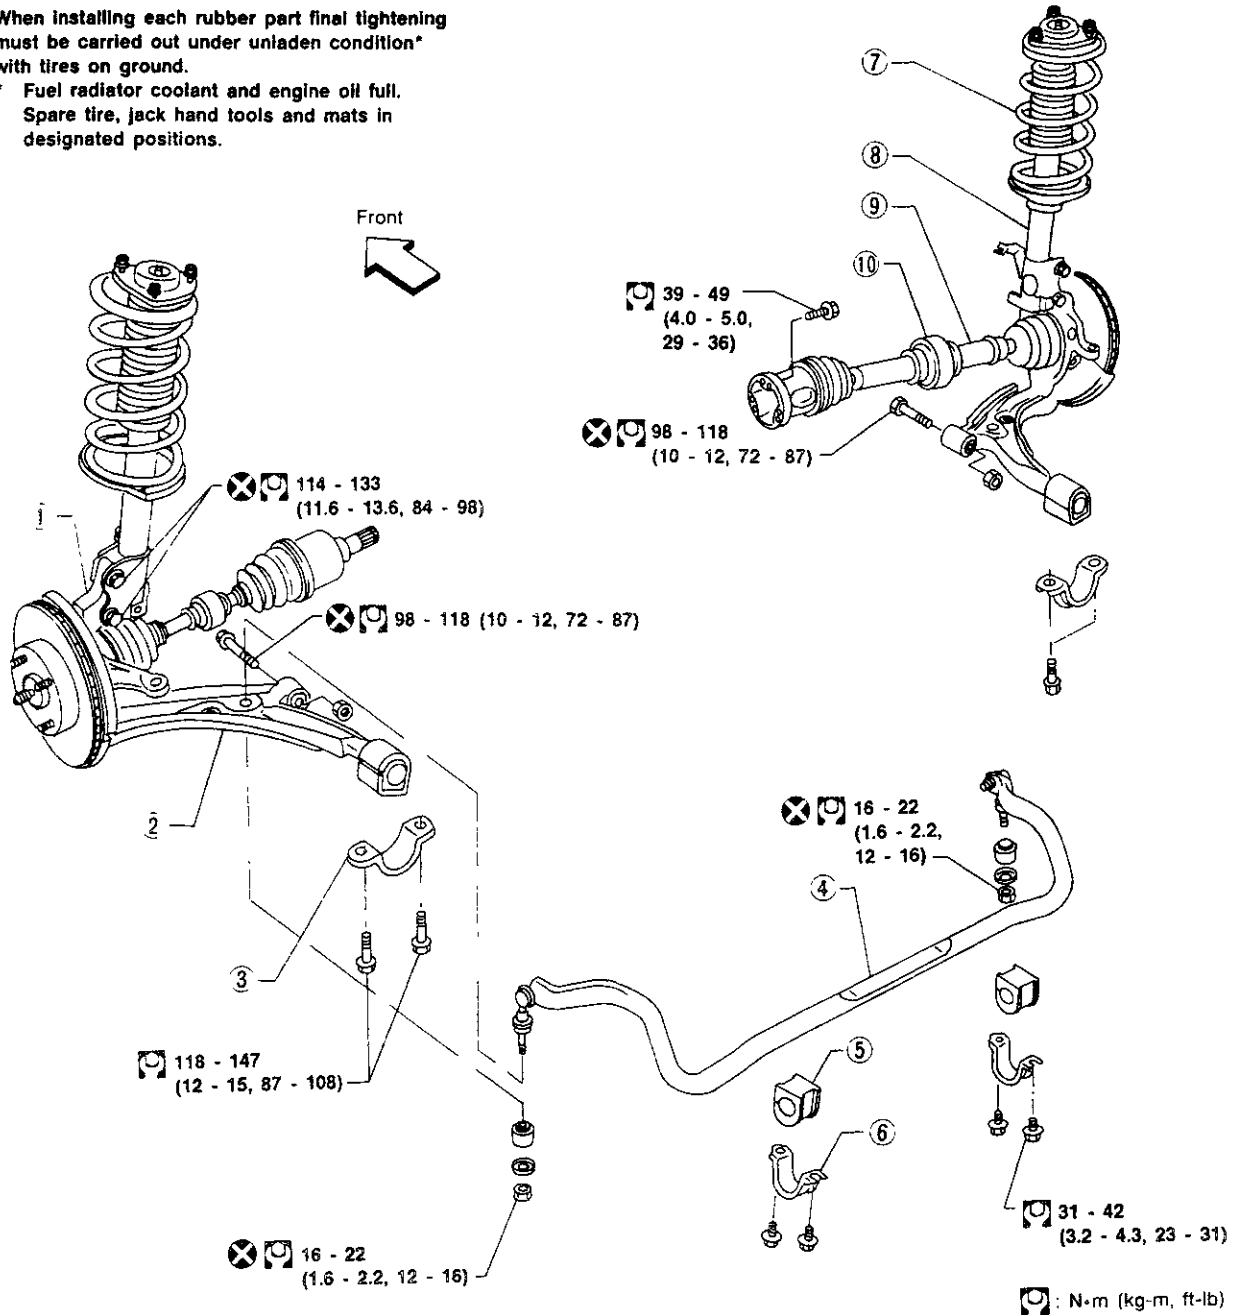

- ① Knuckle assembly
- ② Transverse link
- ③ Compression rod clamp
- ④ Stabilizer bar

- ⑤ Bushing
- ⑥ Bracket
- ⑦ Coil spring

- ⑧ Strut assembly
- ⑨ Drive shaft
- ⑩ Damper



SFA133B

CHECK AND ADJUSTMENT

Front Axle and Front Suspension Parts

Check front axle and front suspension parts for looseness, cracks, wear or other damage.



- Shake each front wheel to check for excessive play.

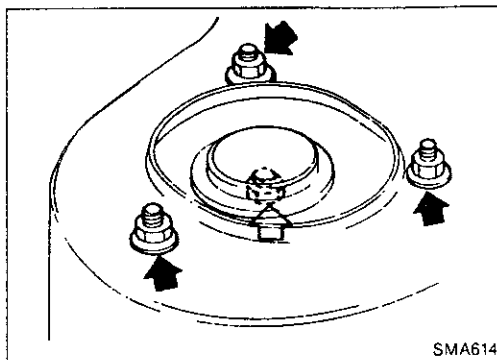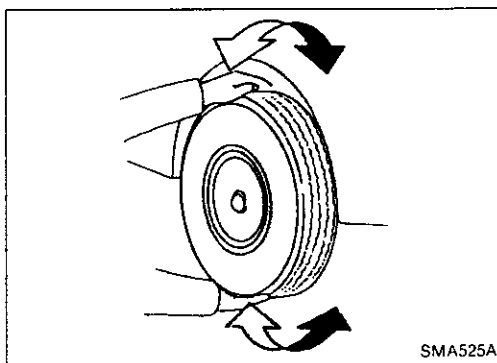


- Make sure that cotter pin is inserted.
- Retighten all nuts and bolts to the specified torque.

Tightening torque:

Refer to FRONT SUSPENSION.

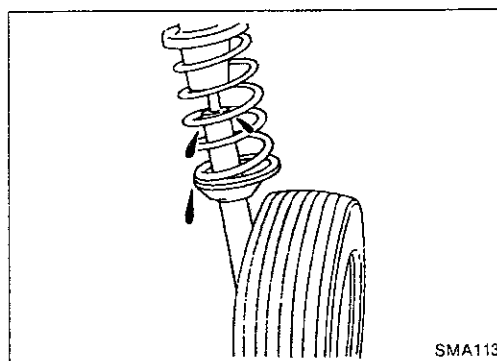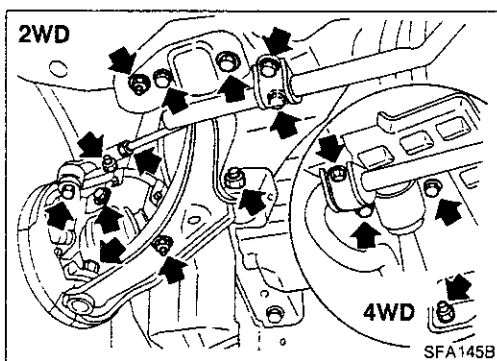


- Check strut (shock absorber) for oil leakage or other damage.

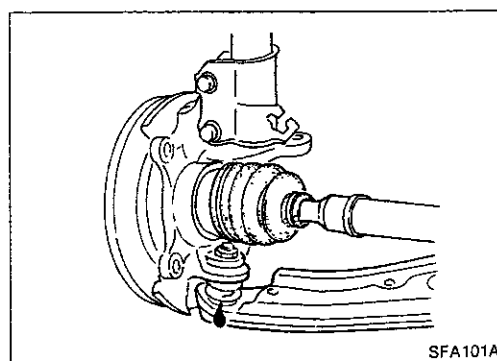

- Check suspension ball joint for grease leakage and ball joint dust cover for cracks or other damage.

CHECK AND ADJUSTMENT

Front Axle and Front Suspension Parts (Cont'd)

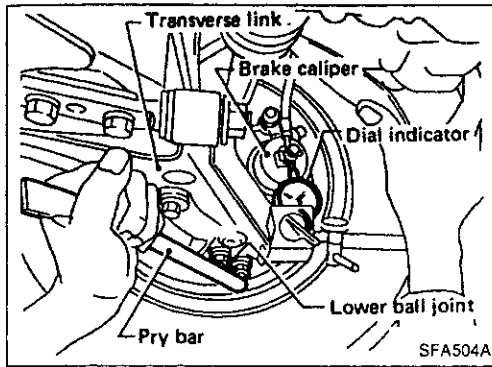


- Check suspension ball joint end play.
 - a. Jack up front of vehicle and set the stands.
 - b. Clamp dial indicator onto transverse link and place indicator tip on lower edge of brake caliper.
 - c. Make sure front wheels are straight and brake pedal is depressed.
 - d. Place a pry bar between transverse link and inner rim of road wheel.
 - e. While raising and releasing pry bar, observe maximum dial indicator value.

Vertical end play:

0 mm (0 in)

- f. If ball joint movement is beyond specifications, remove and recheck it.

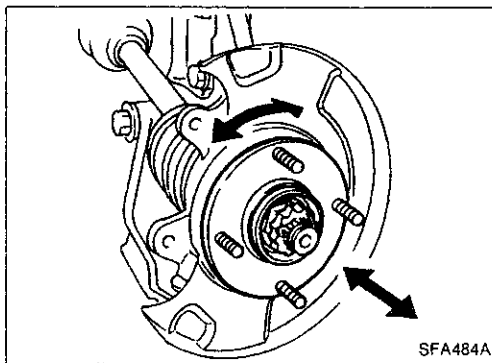


Front Wheel Bearing

- Check that wheel bearings operate smoothly.
- Check axial end play.

Axial end play:

0.05 mm (0.0020 in) or less

- If axial end play is not within specification or wheel bearing does not turn smoothly, replace wheel bearing assembly. Refer to FRONT AXLE — Wheel Hub and Knuckle.

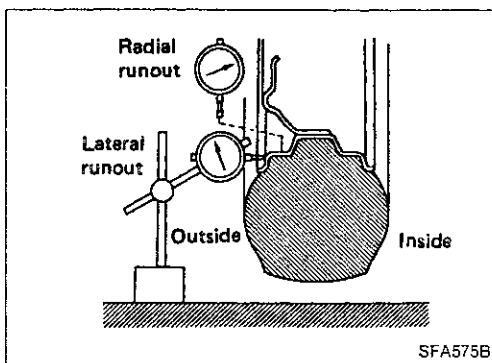

Front Wheel Alignment

Before checking front wheel alignment, be sure to make a preliminary inspection (Unladen*).

*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

PRELIMINARY INSPECTION

1. Check tires for wear and improper inflation.
2. Check wheel runout.

Wheel runout:

Refer to S.D.S.

3. Check front wheel bearings for looseness.
4. Check front suspension for looseness.
5. Check steering linkage for looseness.
6. Check that front shock absorbers work properly by using the standard bounce test.
7. Check vehicle posture (Unladen).

CHECK AND ADJUSTMENT

Front Wheel Alignment (Cont'd)

CAMBER, CASTER AND KINGPIN INCLINATION

Camber, caster and kingpin inclination are preset at factory and cannot be adjusted.

1. Measure camber, caster and kingpin inclination of both right and left wheels with a suitable alignment gauge.

Camber:

Refer to S.D.S.



Caster:

Refer to S.D.S.

Kingpin inclination:


Refer to S.D.S.

2. If camber, caster and kingpin inclination are not within specification, inspect and replace any damaged or worn front suspension parts.

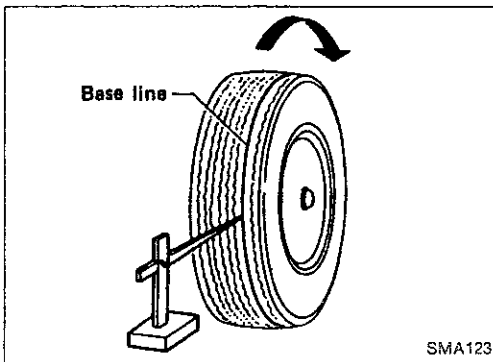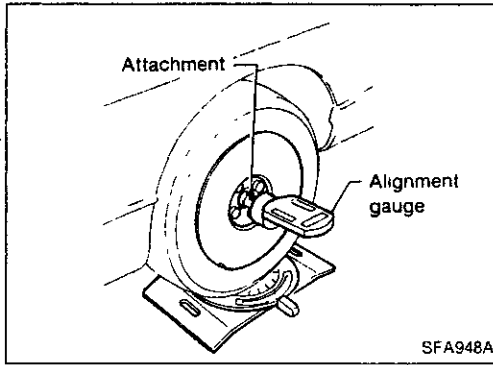

TOE-IN

1. Draw a base line across the tread.
2. After lowering front of vehicle, move it up and down to eliminate friction, and set steering wheel in straight-ahead position.

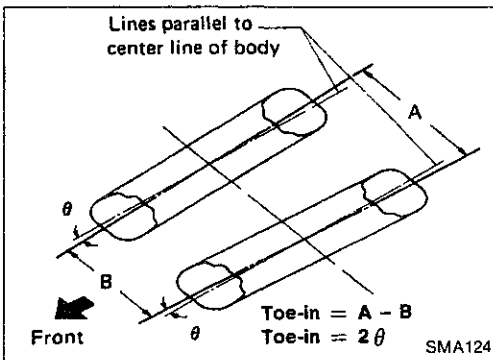


3. Measure toe-in.

- Measure distance "A" and "B" at the same height as hub center.

Total toe-in (Unladen):


A - B	1 - 3 mm (0.04 - 0.12 in)
2θ	6' - 18'

4. Adjust toe-in by varying the length of steering tie-rods.
 - a. Loosen lock nuts.
 - b. Adjust toe-in by screwing tie-rods in and out.

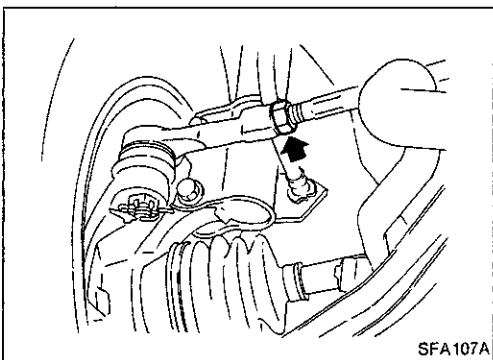

CHECK AND ADJUSTMENT

Front Wheel Alignment (Cont'd)

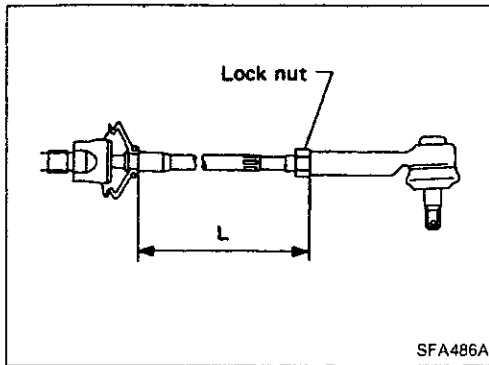


Standard length "L":

Refer to ST section.

- c. Tighten lock nuts to specified torque.


Lock nut tightening torque:

Refer to ST section.

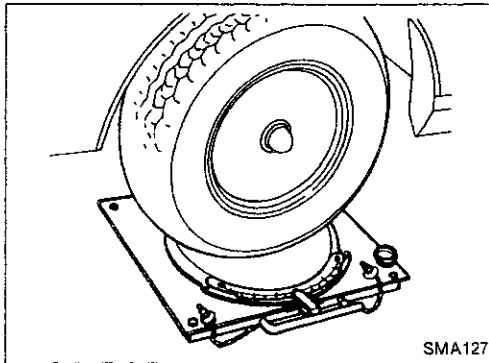

FRONT WHEEL TURNING ANGLE

1. Set wheels in straight-ahead position and then move vehicle forward until front wheels rest on turning radius gauge properly.

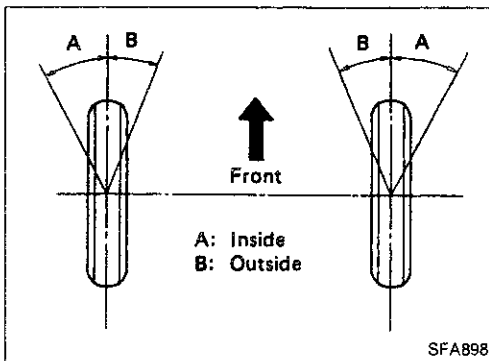


2. Rotate steering wheel all the way right and left with a force of 98 to 147 N (10 to 15 kg, 22 to 33 lb) while engine is running at idle and measure turning angle.

Do not hold the steering wheel on full lock for more than 15 seconds.


Wheel turning angle (Full turn):

Refer to S.D.S.

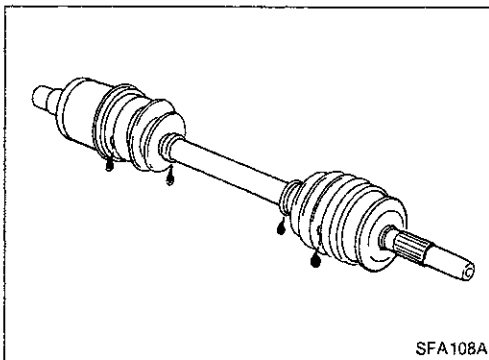

Drive Shaft

 
Check for grease leakage or other damage.



SFA949A


- ① Drive shaft
- ② Inner grease seal
- ③ Knuckle
- ④ Baffle plate
- ⑤ Wheel bearing assembly
- ⑥ Snap ring

FRONT AXLE — Wheel Hub and Knuckle

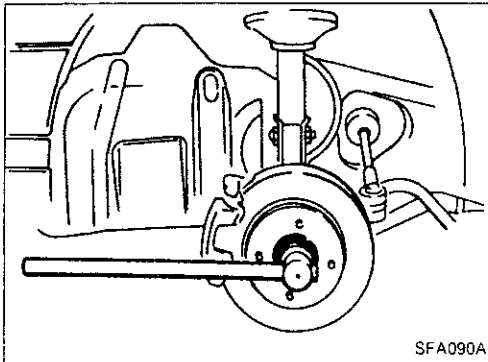


Removal


- Remove wheel bearing lock nut while depressing brake pedal.

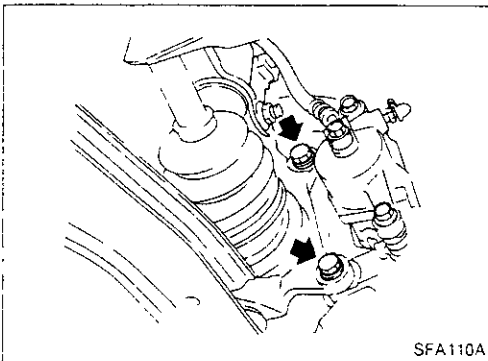


- Remove brake caliper assembly.
Brake hose does not need to be disconnected from brake caliper. Be careful not to depress brake pedal, or piston will pop out.
Make sure brake hose is not twisted.

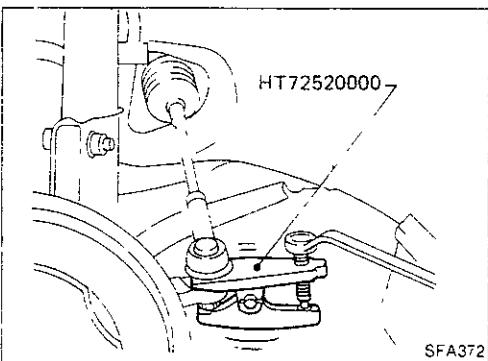

- Remove tie-rod ball joint.

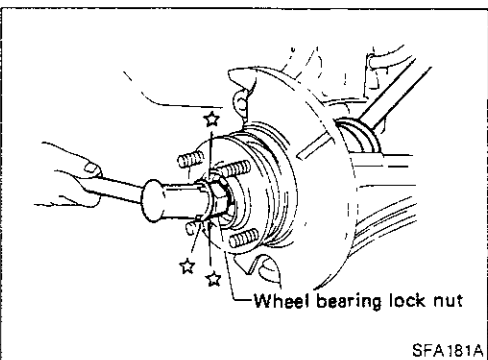


- Separate drive shaft from knuckle by slightly tapping it.
Cover boots with waste cloth so as not to damage them when removing drive shaft.

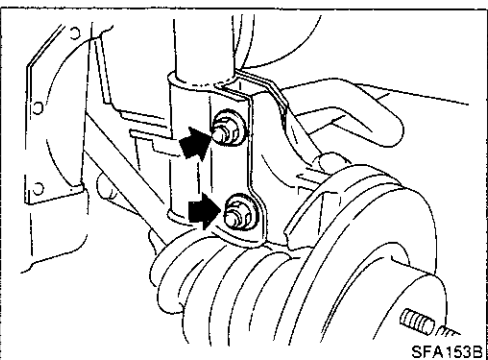

- Remove strut lower mounting bolts.


FRONT AXLE — Wheel Hub and Knuckle

Removal (Cont'd)

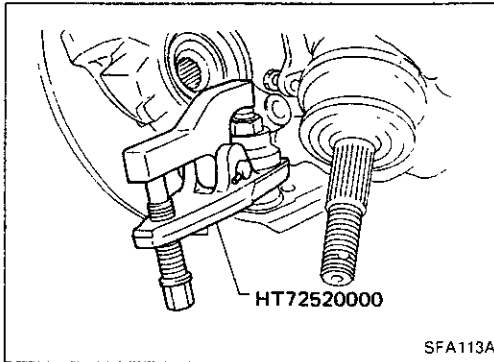


- Loosen lower ball joint tightening nut.
- Separate knuckle from lower ball joint stud with Tool.
- Remove knuckle from transverse link.

Installation

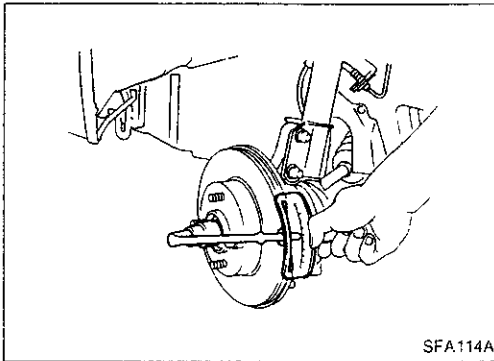

- Install knuckle with wheel hub.
- Tighten wheel bearing lock nut.
 τ : 196 - 275 N·m
(20 - 28 kg-m, 145 - 203 ft-lb)
- Check that wheel bearings operate smoothly.

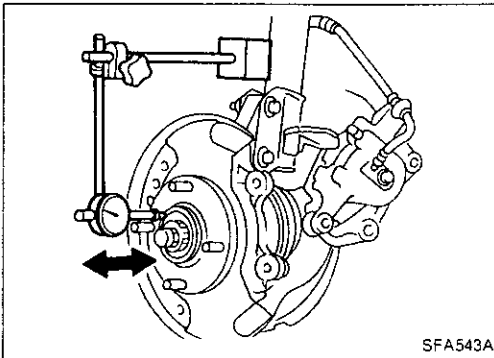


- Check wheel bearing axial end play.
Axial end play:
0.05 mm (0.0020 in) or less

Disassembly

CAUTION:

When removing wheel hub or wheel bearing from knuckle, replace wheel bearing assembly (outer race, inner races and grease seals) with a new one.

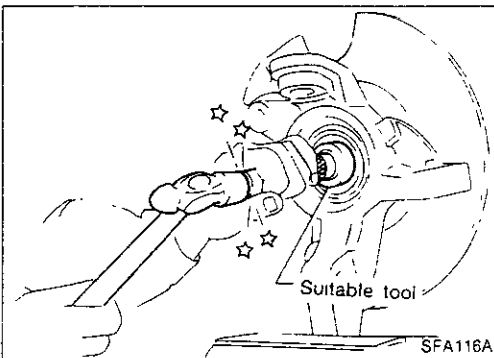


WHEEL HUB

Drive out hub with inner race (outside) from knuckle with a suitable tool.

WHEEL BEARING


When replacing wheel bearing, replace wheel bearing assembly (including inner and outer races).

- Remove bearing inner race (outside), then remove outer grease seal.

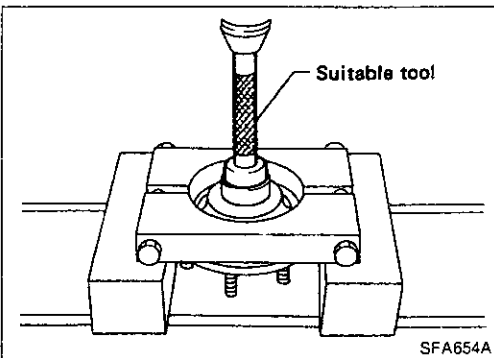


FRONT AXLE — Wheel Hub and Knuckle


Disassembly (Cont'd)

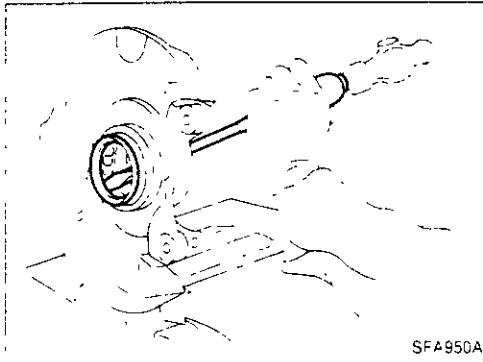

- Remove inner and outer grease seals from knuckle.

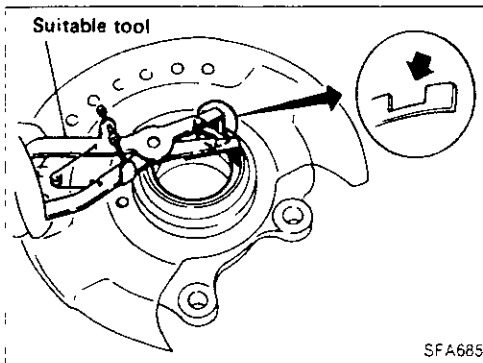

- Remove snap ring.

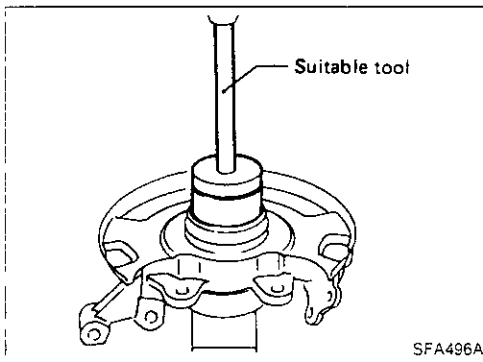

- Press out bearing outer race.


Inspection

WHEEL HUB AND KNUCKLE

Check wheel hub and knuckle for cracks by using a magnetic exploration or dyeing test.

SNAP RING

Check snap ring for wear or cracks. Replace if necessary.

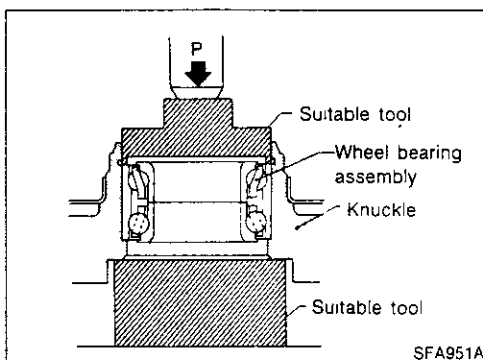

Assembly

1. Press new wheel bearing assembly into knuckle.

Maximum load P:


29 kN (3 t, 3.3 US ton, 3.0 Imp ton)

CAUTION:


- Do not press inner race of wheel bearing assembly.
 - Do not apply oil or grease to mating surfaces of wheel bearing outer race and knuckle.
2. Install snap ring into groove of knuckle.

FRONT AXLE — Wheel Hub and Knuckle


Assembly (Cont'd)

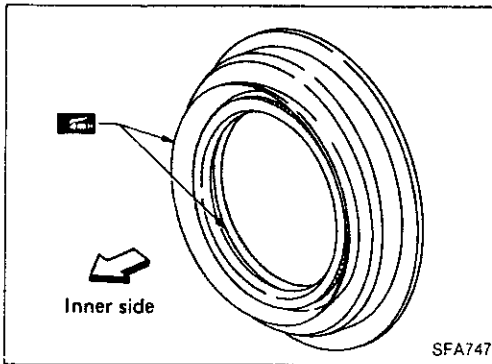


3. Pack grease seal lip with multi-purpose grease.

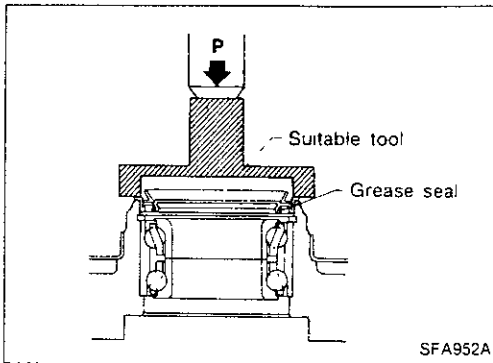

4. Install outer grease seal.

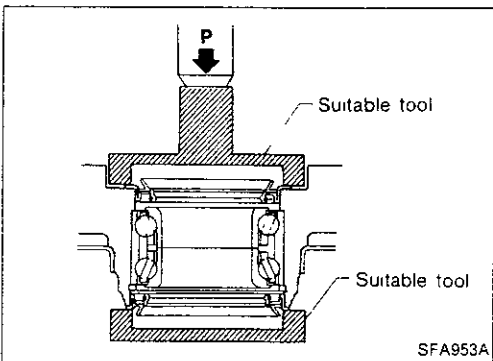

5. Install inner grease seal.

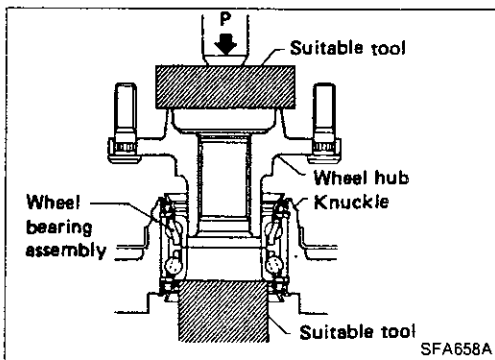


6. Press wheel hub into knuckle.

Maximum load P:

29 kN (3 ton, 3.3 US ton, 3.0 Imp ton)

Be careful not to damage grease seal.

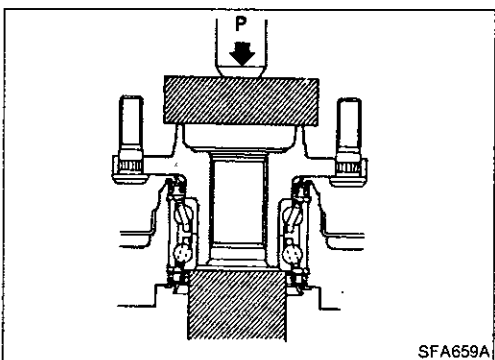

7. Check bearing operation.

- a. Add load P with press.


Load P:

34.3 - 49.0 kN

(3.5 - 5.0 ton, 3.9 - 5.5 US ton, 3.44 - 4.92 Imp ton)


FRONT AXLE — Wheel Hub and Knuckle

Assembly (Cont'd)

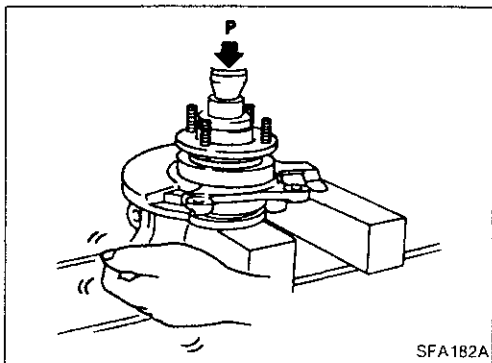

- b. Spin knuckle several turns in both directions.
- c. Make sure that wheel bearings operate smoothly.


FRONT AXLE — Drive Shaft

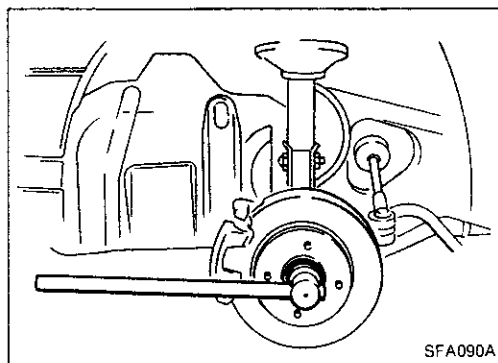

Removal

- Remove wheel bearing lock nut.
- Remove brake caliper assembly.


Brake hose need not be disconnected from brake caliper.
Be careful not to depress brake pedal, or piston will pop out.
Do not pull or twist brake hose.

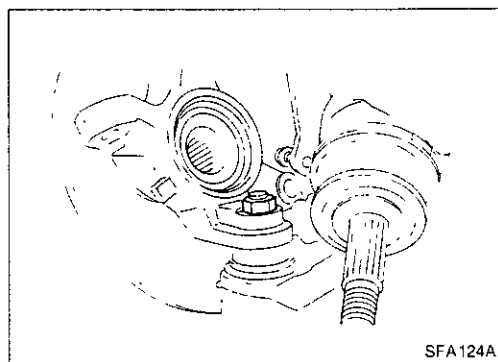


- Remove tie-rod ball joint.
- Separate drive shaft from knuckle by lightly tapping it. If it is hard to remove, use a puller.

When removing drive shaft, cover boots with waste cloth to prevent damage to them.


Refer to FRONT AXLE — Wheel Hub and Knuckle.

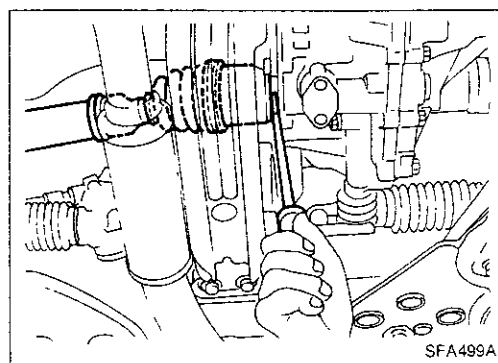

1. Remove right drive shaft from transaxle.
— Models without support bearing —

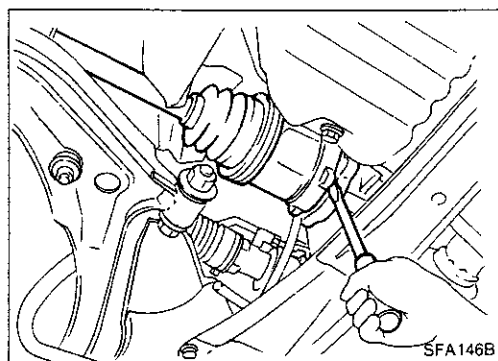

— Models with support bearing —

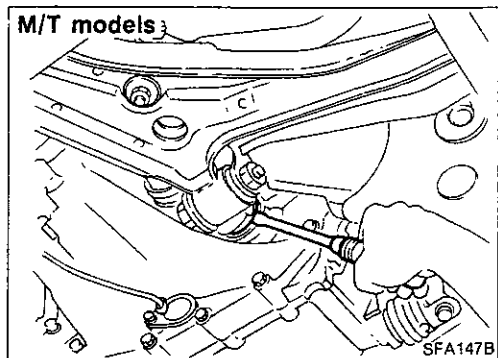

2. Remove left drive shaft from transaxle.
— For M/T models —

FRONT AXLE — Drive Shaft



Removal (Cont'd)

— For A/T models —

- Remove left drive shaft with a suitable tool.


Be careful not to damage pinion mate shaft and side gear.

A/T models

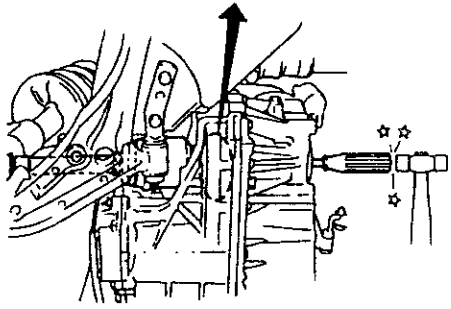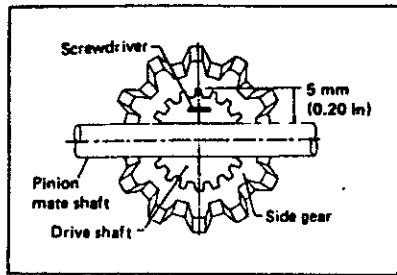

SFA730

— For 4WD models (SR20DET: Left drive shaft, GA16DS: Right drive shaft) —

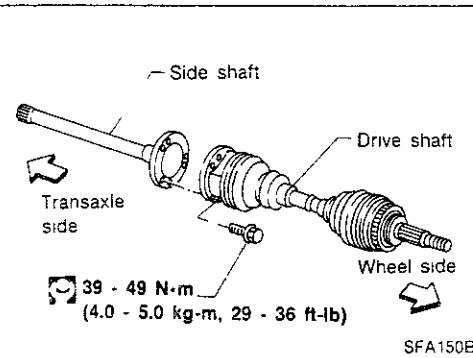


SFA150B

Installation

TRANSAXLE SIDE


1. Drive a new oil seal to transaxle. Refer to section MT or AT.
2. Set Tool along the inner circumference of oil seal.

R.H.

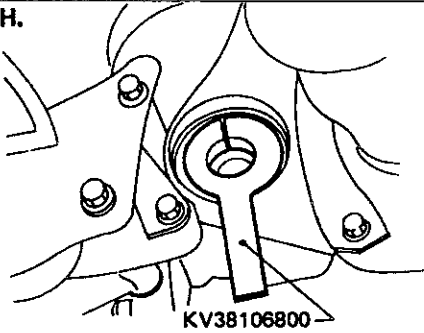

SFA482

L.H.

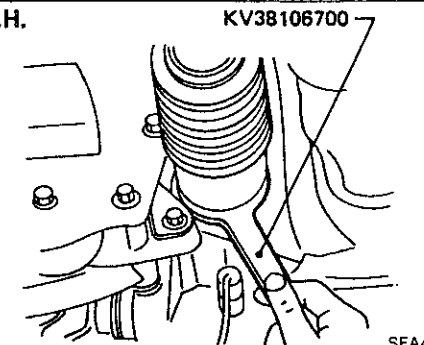

SFA483

3. Insert drive shaft into transaxle. Be sure to properly align the serrations and then withdraw Tool.
4. Push drive shaft, then press-fit circular clip on the drive shaft into circular clip groove of side gear.
5. After its insertion, try to pull the flange out of the slide joint by hand. If it pulls out, the circular clip is not properly meshed with the side gear.

FRONT AXLE — Drive Shaft

Installation (Cont'd)

WHEEL SIDE

- Install drive shaft into knuckle.
- Tighten wheel bearing lock nut. Refer to section Installation in FRONT AXLE — Wheel Hub and Knuckle.



FRONT AXLE — Drive Shaft for 2WD **Components (Cont'd)**

Circular clip:


Make sure circular clip is properly meshed with side gear (transaxle side) and joint assembly (wheel side), and will not come out

Be careful not to damage boots. Use suitable protector of cloth during removal and installation.

Wheel side (ZF86)

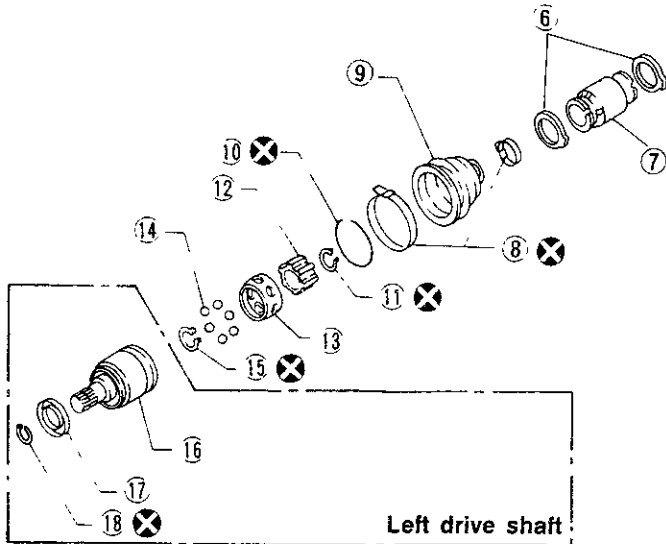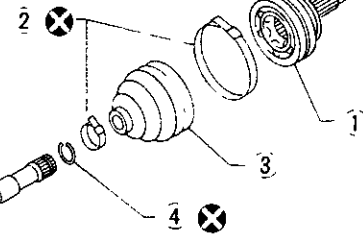

Left drive shaft

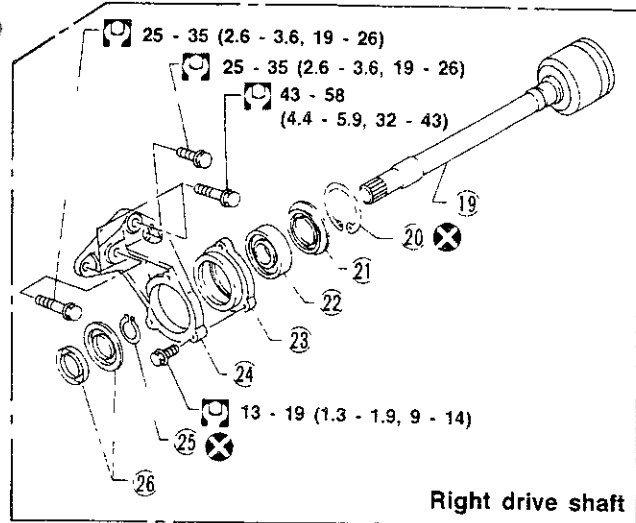

Right drive shaft


 N·m (kg-m, ft-lb)

Transaxle side (DS86)

SFA151B

- | | | |
|-------------------|-----------------------|--|
| ① Joint assembly | ⑩ Snap ring A | ⑲ Slide joint housing with extension shaft |
| ② Boot band | ⑪ Snap ring B | ⑳ Snap ring E |
| ③ Boot | ⑫ Inner race | ㉑ Dust shield |
| ④ Circular clip B | ⑬ Cage | ㉒ Support bearing |
| ⑤ Drive shaft | ⑭ Ball | ㉓ Support bearing retainer |
| ⑥ Band | ⑮ Snap ring C | ㉔ Bracket |
| ⑦ Dynamic damper | ⑯ Slide joint housing | ㉕ Snap ring D |
| ⑧ Boot band | ⑰ Dust shield | ㉖ Dust shield |
| ⑨ Boot | ⑱ Circular clip A | |


FRONT AXLE — Drive Shaft for 2WD

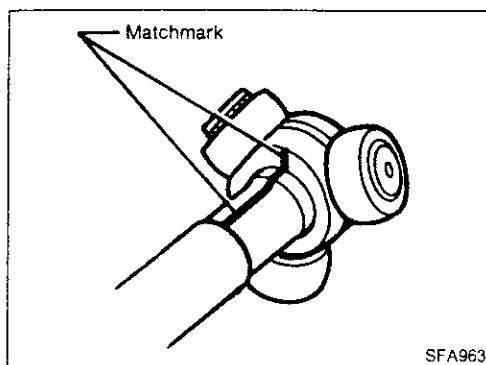

Disassembly

TRANSAXLE SIDE (TS70C, TS79C type)

1. Remove boot bands.
2. Put matchmarks on slide joint housing and drive shaft before separating joint assembly.
3. Put matchmarks on spider assembly and drive shaft.

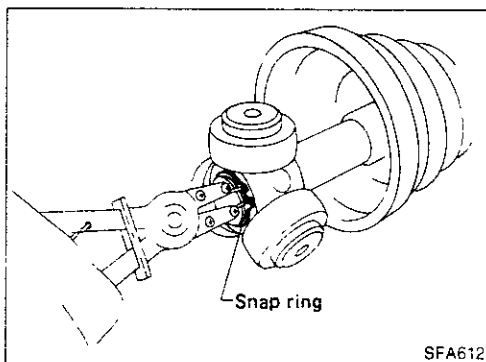


4. Pry off snap ring, then remove spider assembly.

CAUTION:

Do not disassemble spider assembly.


5. Draw out boot.

Cover drive shaft serration with tape to prevent damage to the boot.

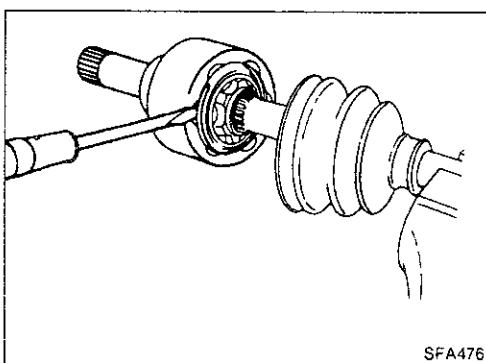


TRANSAXLE SIDE (DS86 type)

1. Remove boot bands.
2. Put matchmarks on slide joint housing and inner race, before separating joint assembly.
3. Pry off snap ring "A" with a screwdriver, and pull out slide joint housing.

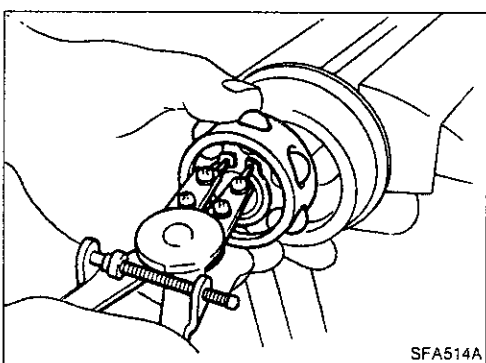

4. Put matchmarks on inner race and drive shaft.
5. Pry off snap ring "C", then remove ball cage, inner race and balls as a unit.
6. Pry off snap ring "B".
7. Draw out boot.

Cover drive shaft serrations with tape so as not to damage the boot.

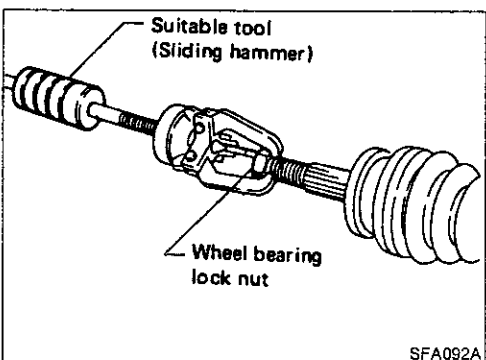

WHEEL SIDE (ZF80, ZF90, BF86 type)

CAUTION:

The joint on the wheel side cannot be disassembled.

- Before separating joint assembly, put matchmarks on drive shaft and joint assembly.
- Separate joint assembly with a suitable tool.

Be careful not to damage threads on drive shaft.



- Remove boot bands.

FRONT AXLE — Drive Shaft for 2WD


Disassembly (Cont'd)

SUPPORT BEARING


- Remove dust shield.

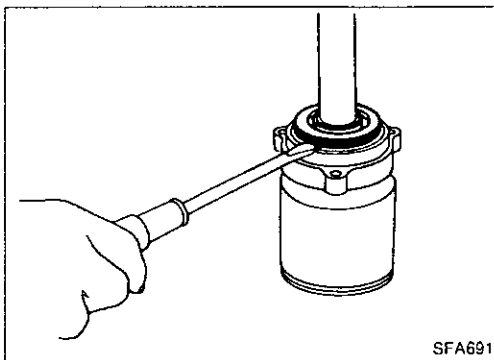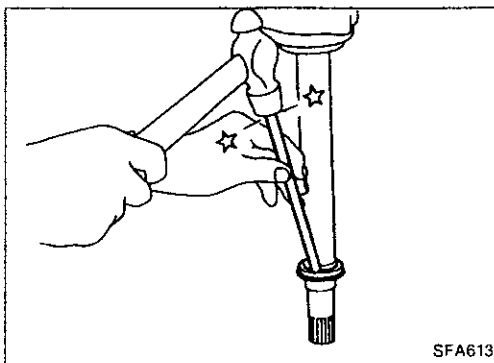


- Pry off snap ring.

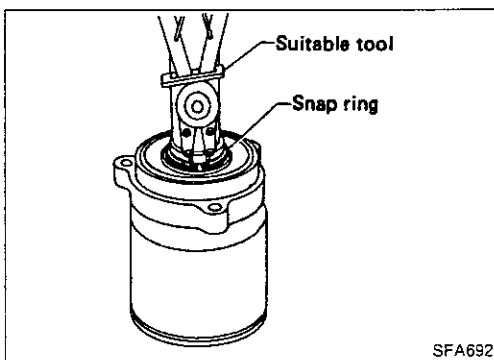

- Press support bearing assembly out of drive shaft.

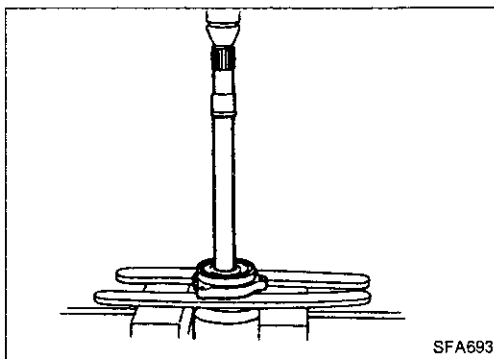

- Press support bearing out of retainer.

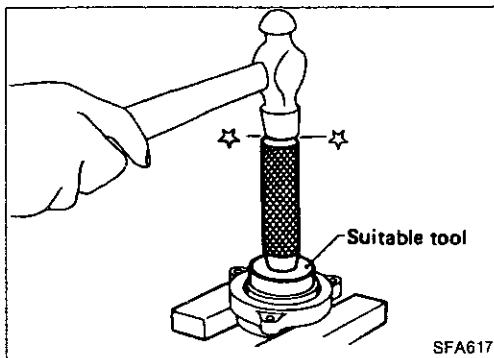

Inspection

Thoroughly clean all parts in cleaning solvent, and dry with compressed air. Check parts for evidence of deformation or other damage.

DRIVE SHAFT

Replace drive shaft if it is twisted or cracked.


BOOT

Check boot for fatigue, cracks, or wear. Replace boot with new boot bands.

JOINT ASSEMBLY (Transaxle side)

TS70C, TS79C type

- Check spider assembly for bearing, roller and washer damage. Replace spider assembly if necessary.
- Check housing for any damage. Replace housing set and spider assembly, if necessary.

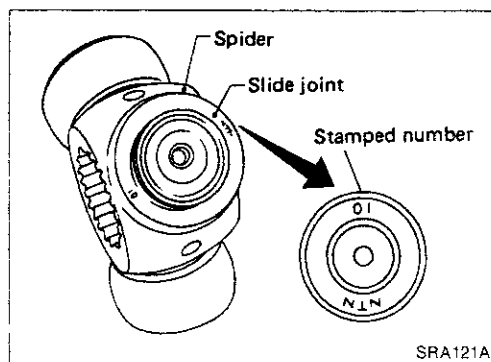

- When replacing only spider assembly, select a new spider assembly from among those listed in table below. Ensure the number stamped on sliding joint is the same as that stamped on new part.

Housing alone cannot be replaced. It must be replaced together with spider assembly.

TS70C

Stamped number	Part No.
00	39720-51E00
01	39720-51E01
02	39720-51E02
03	39720-51E03

TS79C

Stamped number	Part No.
00	39720-61E00
01	39720-61E01
02	39720-61E02
03	39720-61E03
04	39720-61E04
05	39720-61E05
06	39720-61E06

DS86 type

- Replace joint assembly if it is deformed or damaged.

JOINT ASSEMBLY (Wheel side)

Replace joint assembly if it is deformed or damaged.

Inspection (Cont'd)

SUPPORT BEARING


Make sure wheel bearing rolls freely and is free from noise, cracks, pitting or wear.

SUPPORT BEARING BRACKET

Check support bearing bracket for cracks with a magnetic exploration or dyeing test.

Assembly


- After drive shaft has been assembled, ensure that it moves smoothly over its entire range without binding.
- Use **NISSAN GENUINE GREASE** or equivalent after every overhaul.

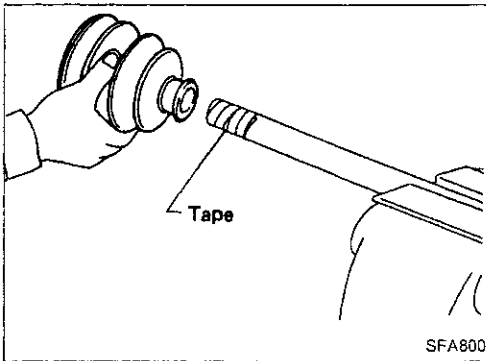


WHEEL SIDE (ZF80, ZF90, BF86 type)

1. Install boot and new small boot band on drive shaft.

Cover drive shaft serration with tape so as not to damage boot during installation.

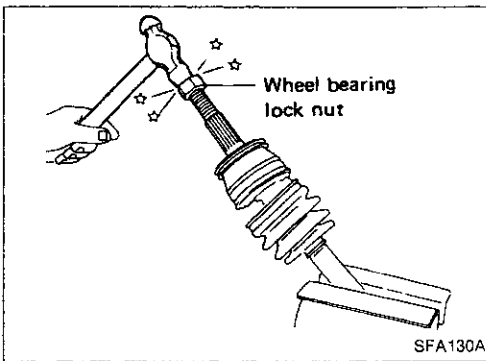

2. Set joint assembly onto drive shaft by lightly tapping it. Install joint assembly securely, ensuring marks which were made during disassembly are properly aligned.

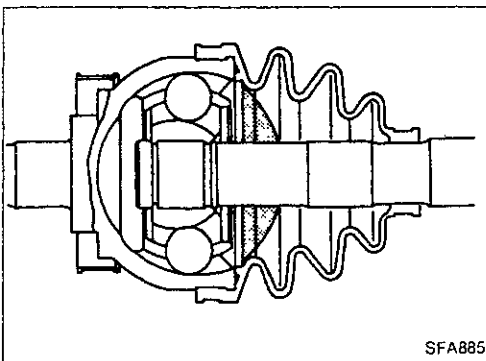


3. Pack drive shaft with specified amount of grease.

Specified amount of grease:

ZF80	90 - 100 g (3.17 - 3.53 oz)
ZF90	155 - 175 g (5.47 - 6.17 oz)
BF86	105 - 125 g (3.70 - 4.41 oz)

FRONT AXLE — Drive Shaft for 2WD


Assembly (Cont'd)

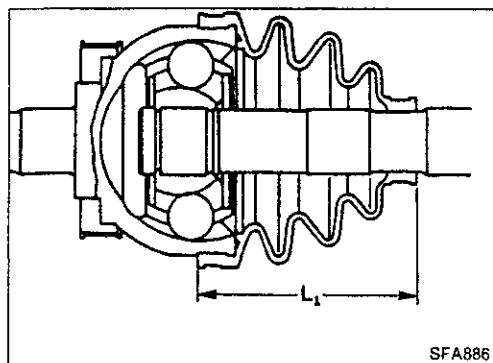



4. Make sure that boot is properly installed on the drive shaft groove.
Set boot so that it does not swell and deform when its length is "L₁".

Length "L₁":

ZF80	90.5 - 92.5 mm (3.563 - 3.642 in)
ZF90	96 - 98 mm (3.78 - 3.86 in)
BF86	99.5 - 101.5 mm (3.917 - 3.996 in)

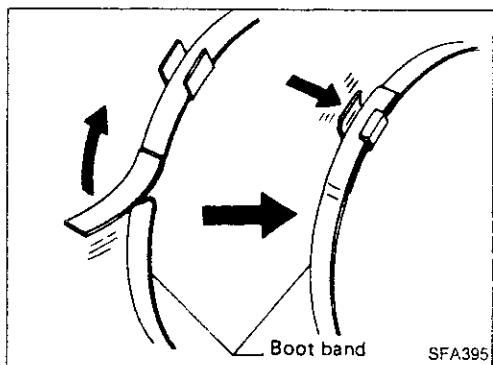


5. Lock new larger and smaller boot bands securely with a suitable tool.

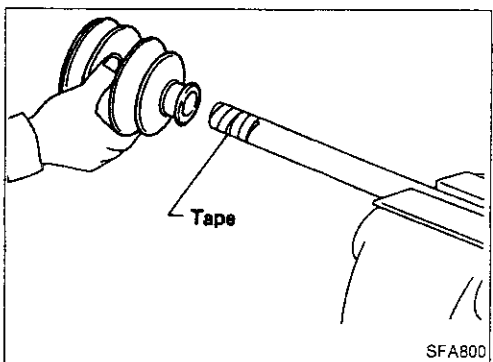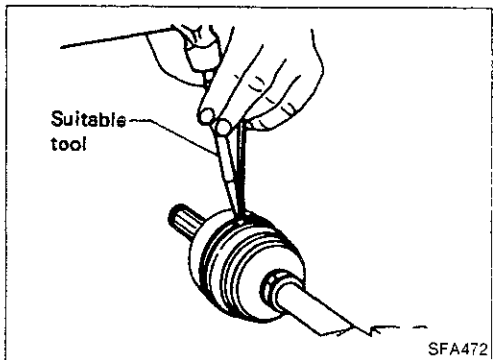

TRANSAXLE SIDE

(TS70C, TS79C type)


1. Install boot and new small boot band on drive shaft.
Cover drive shaft serration with tape to prevent damage to boot during installation.

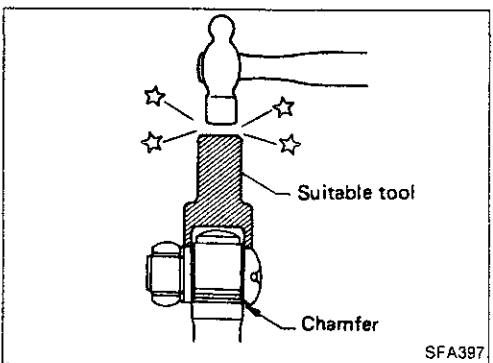

2. Install spider assembly securely, making sure marks are properly aligned.
 - Press-fit with spider assembly serration chamfer facing shaft.
3. Install new snap ring.

FRONT AXLE — Drive Shaft for 2WD

Assembly (Cont'd)

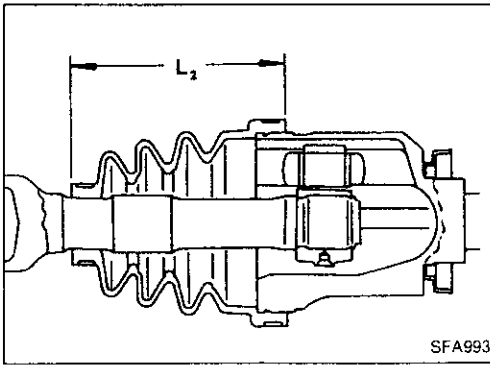

4. Pack drive shaft with specified amount of grease.

Specified amount of grease:

TS70C 185 - 195 g (6.52 - 6.88 oz)

TS79C 225 - 235 g (7.94 - 8.29 oz)


5. Install slide joint housing.
6. Set boot so that it does not swell and deform when its length is " L_2 ".

Length " L_2 ":


TS70C 95.5 - 97.5 mm (3.760 - 3.839 in)

TS79C 101.5 - 103.5 mm (4.00 - 4.07 in)

Make sure that boot is properly installed on the drive shaft groove.

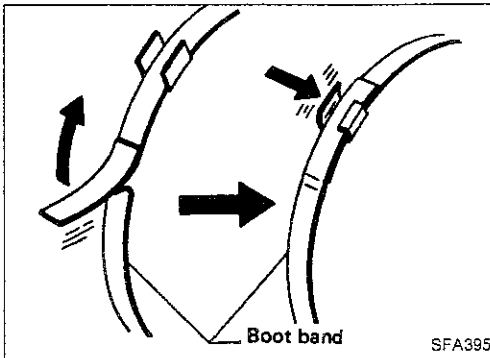


7. Lock new larger and smaller boot bands securely with a suitable tool.

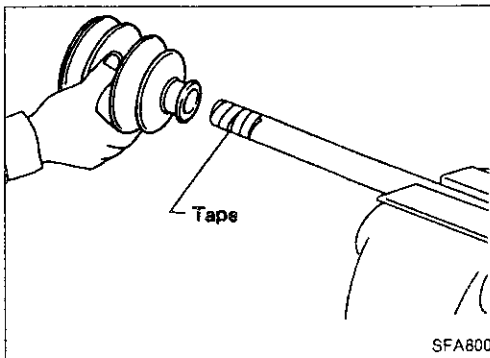

(DS86 type)

1. Install boot and new small boot band on drive shaft.


Cover drive shaft serration with tape to prevent damage boot during installation.

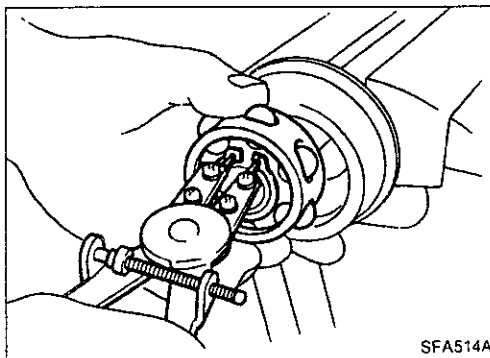

2. Install new snap ring "B", then securely install ball cage, inner race and balls as a unit, making sure the marks which were made during disassembly are properly aligned.
3. Install new snap ring "C".

FRONT AXLE — Drive Shaft for 2WD

Assembly (Cont'd)

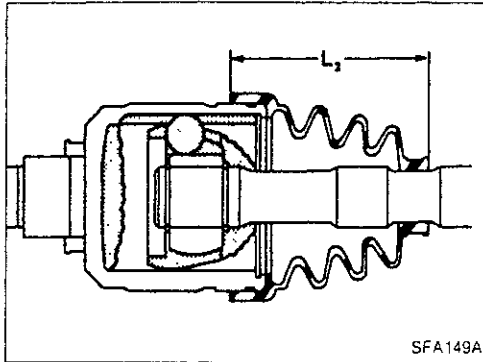

4. Pack drive shaft with specified amount of grease.

Specified amount of grease:


140 - 160 g (4.94 - 5.64 oz)

5. Install slide joint housing, then install new snap ring "A".
6. Make sure that boot is properly installed on the drive shaft groove.

Set boot so that it does not swell and deform when its length is "L₂".

Length "L₂":


97 - 99 mm (3.82 - 3.90 in)

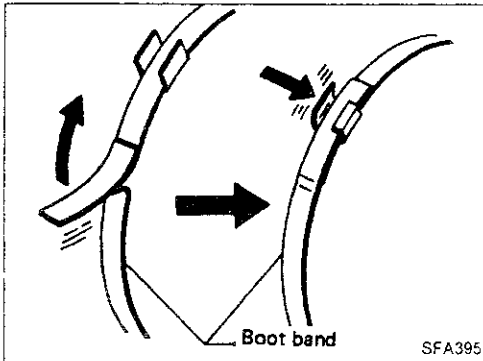


7. Lock new larger and smaller boot bands securely with a suitable tool.

SUPPORT BEARING


- Press bearing into retainer.

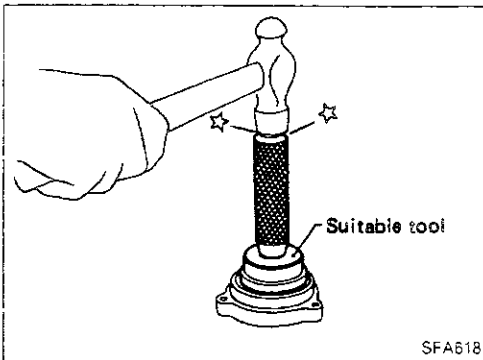

- Press drive shaft into bearing.

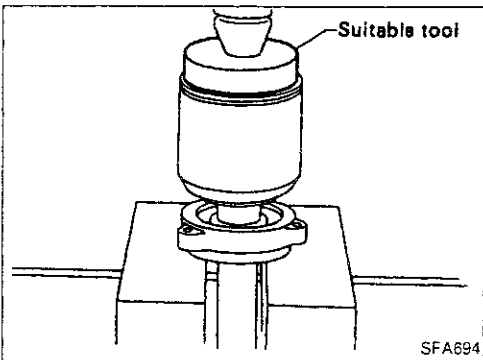


- Install snap ring.
- Install new dust shield.

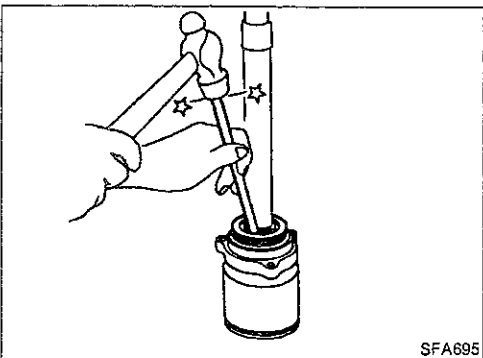

FRONT AXLE — Drive Shaft for 2WD

Assembly (Cont'd)

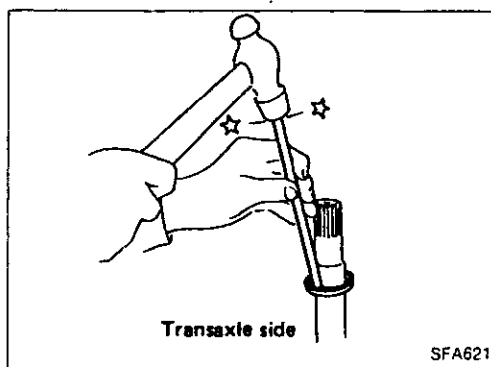


Components

Circular clip.

Make sure circular clip is properly meshed with side gear (transaxle side) and joint assembly (wheel side), and will not come out.


Drive shaft joint grease.

Use Nissan Genuine Grease or equivalent after every overhaul

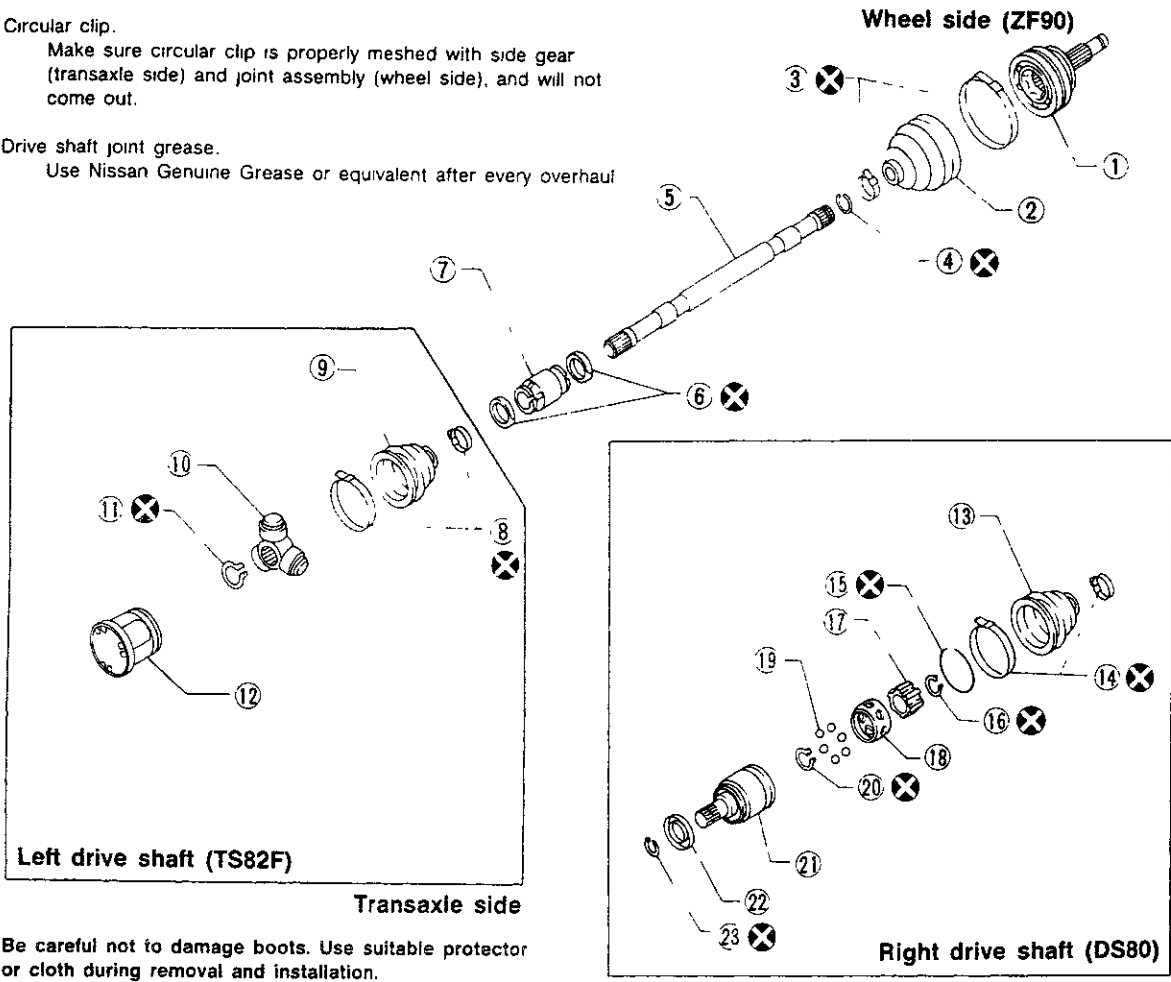

SFA139B

- | | | |
|---------------------|-----------------------|-----------------------|
| ① Joint assembly | ⑨ Boot | ⑰ Inner race |
| ② Boot | ⑩ Spider assembly | ⑱ Cage |
| ③ Boot band | ⑪ Snap ring "C" | ⑲ Ball |
| ④ Circular clip "B" | ⑫ Slide joint housing | ⑳ Snap ring "C" |
| ⑤ Drive shaft | ⑬ Boot | ㉑ Slide joint housing |
| ⑥ Damper band | ⑭ Boot band | ㉒ Dust shield |
| ⑦ Dynamic damper | ⑮ Snap ring "A" | ㉓ Circular clip |
| ⑧ Boot band | ⑯ Snap ring "B" | |

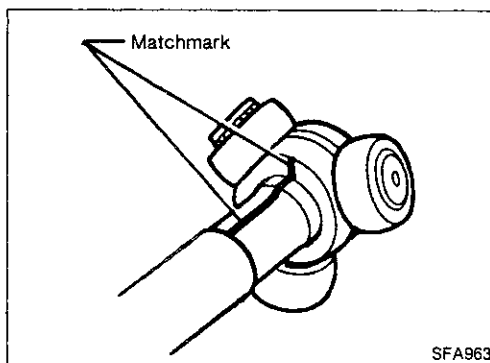


Disassembly

TRANSAXLE SIDE (TS82F)

1. Remove boot bands.
2. Put matchmarks on slide joint housing and drive shaft before separating joint assembly.
3. Put matchmarks on spider assembly and drive shaft.

FRONT AXLE — Drive Shaft for 4WD

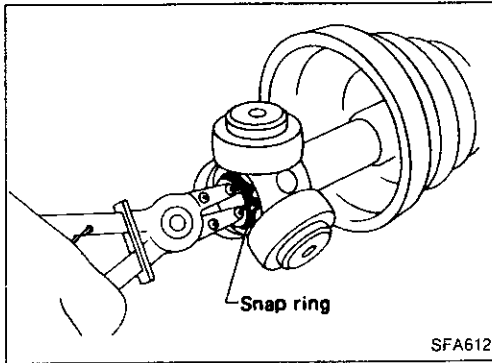

Disassembly (Cont'd)


4. Pry off snap ring, then remove spider assembly.

CAUTION:

Do not disassemble spider assembly.


5. Draw out boot.

Cover drive shaft serration with tape so as not to damage the boot.

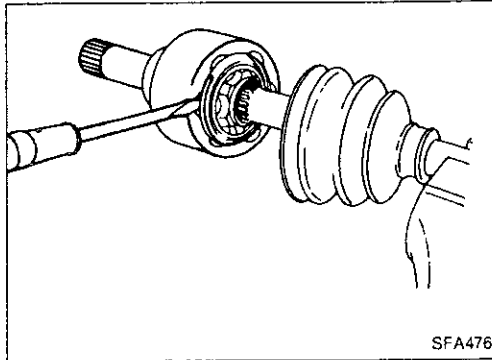


TRANSAXLE SIDE (DS80, DS90)

1. Remove boot bands.
2. Put matchmarks on slide joint housing and inner race, before separating joint assembly.
3. Pry off snap ring "A" with a screwdriver, and pull out slide joint housing.

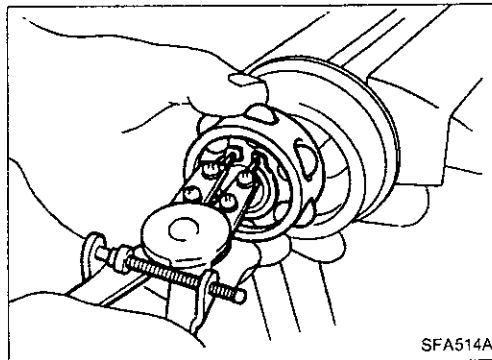

4. Put matchmarks on inner race and drive shaft.
5. Pry off snap ring "C", then remove ball cage, inner race and balls as a unit.
6. Pry off snap ring "B".
7. Draw out boot.

Cover drive shaft serration with tape so as not to damage the boot.

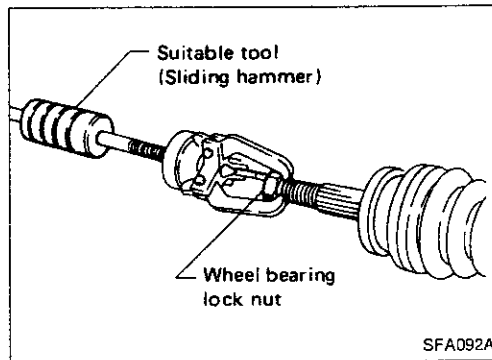

WHEEL SIDE (ZF90)

CAUTION:

The joint on the wheel side cannot be disassembled.

- Before separating joint assembly, put matching marks on drive shaft and joint assembly.
- Separate joint assembly with suitable tool.

Be careful not to damage threads on drive shaft.

- Remove boot bands.

Inspection

Thoroughly clean all parts in cleaning solvent, and dry with compressed air. Check parts for evidence of deformation or other damage.

DRIVE SHAFT

Replace drive shaft if it is twisted or cracked.

BOOT

Check boot for fatigue, cracks, or wear. Replace boot with new boot bands.


FRONT AXLE — Drive Shaft for 4WD

Inspection (Cont'd)

JOINT ASSEMBLY — Transaxle side

TS82F type

- Check spider assembly for bearing, roller and washer damage. Replace spider assembly if necessary.
- Check housing for any damage. Replace housing set and spider assembly, if necessary.

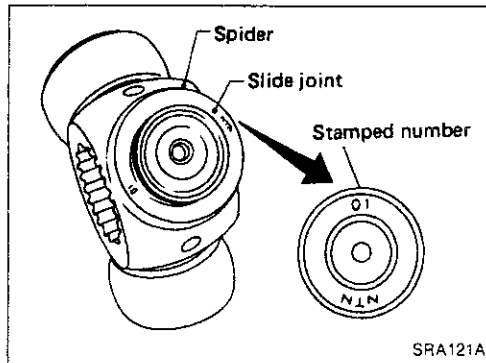

- When replacing only spider assembly, select a new spider assembly from among those listed in table below. Ensure the number stamped on sliding joint is the same as that stamped on new part.

Housing alone cannot be replaced. It must be replaced together with spider assembly.

Stamped number	Part No.
10	39720-10V10
11	39720-10V11
12	39720-10V12

DS80 type


Replace joint assembly if it is deformed or damaged.

JOINT ASSEMBLY — Wheel side (ZF90)

Replace joint assembly if it is deformed or damaged.

Assembly

- After drive shaft has been assembled, ensure that it moves smoothly over its entire range without binding.
- Use Nissan Genuine Grease or equivalent after every overhaul.

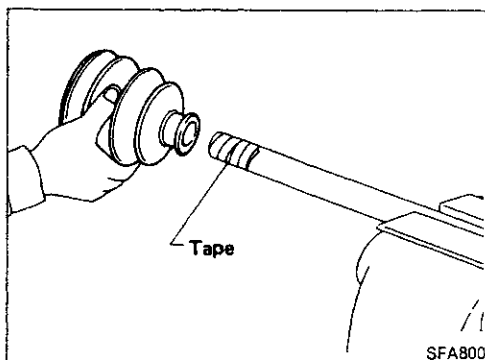


WHEEL SIDE (ZF90)

1. Install boot and new small boot band on drive shaft.


Cover drive shaft serration with tape so as not to damage boot during installation.

FRONT AXLE — Drive Shaft for 4WD


Assembly (Cont'd)

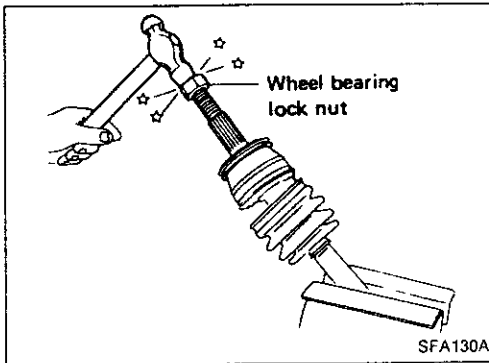

2. Set joint assembly onto drive shaft by lightly tapping it. Install joint assembly securely, ensuring marks which were made during disassembly are properly aligned.

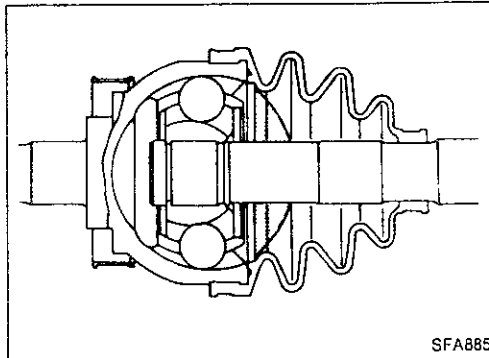

3. Pack drive shaft with specified amount of grease.
Specified amount of grease:
160 - 170 g (5.64 - 6.00 oz)

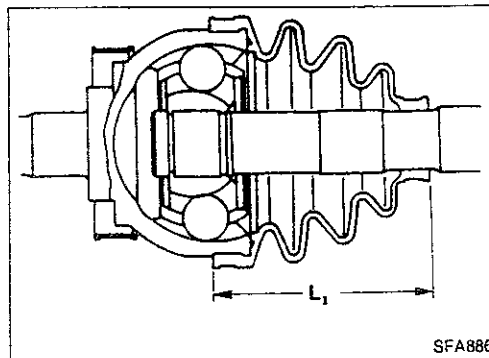


4. Set boot so that it does not swell and deform when its length is " L_1 ".

Length " L_1 ":

96 - 98 mm (3.78 - 3.86 in)

Make sure that boot is properly installed on the drive shaft groove.

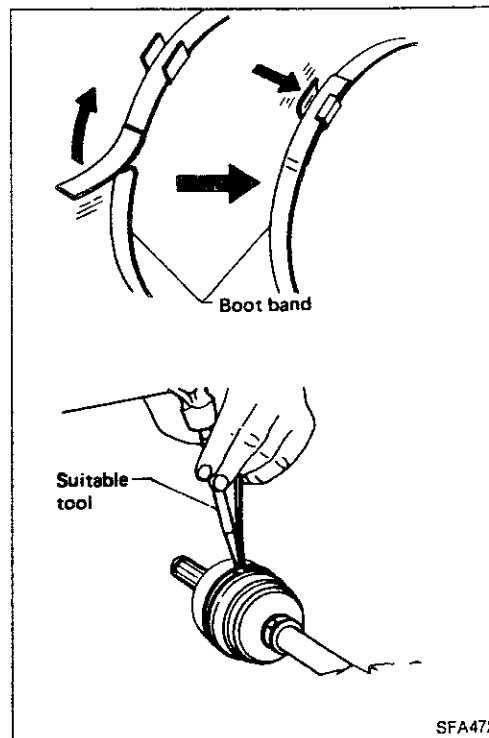



5. Lock new larger and smaller boot bands securely with a suitable tool.

Assembly (Cont'd)

TRANSAXLE SIDE (TS82F)

1. Install boot and new small boot band on drive shaft.


Cover drive shaft serration with tape so as not to damage boot during installation.

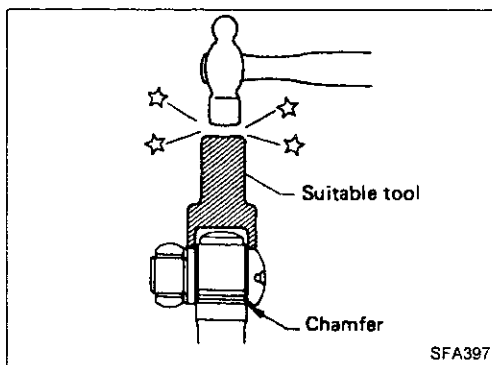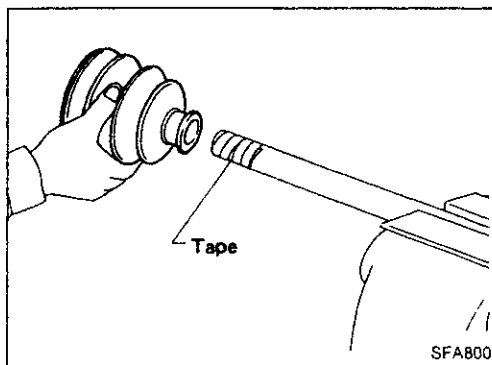

2. Install spider assembly securely, making sure marks are properly aligned.

- Press-fit with spider assembly serration chamfer facing shaft.

3. Install new snap ring.

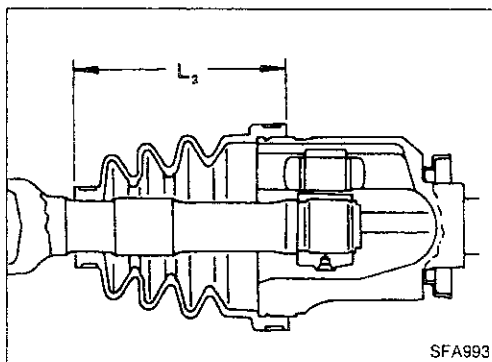

4. Pack drive shaft with specified amount of grease.

Specified amount of grease:


185 - 195 g (6.52 - 6.88 oz)

5. Install slide joint housing.

6. Set boot so that it does not swell and deform when its length is "L₂".

Length "L₂": 95 - 97 mm (3.74 - 3.82 in)

Make sure that boot is properly installed on the drive shaft groove.

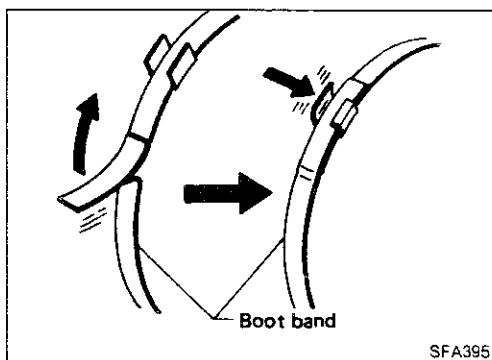


7. Lock new larger and smaller boot bands securely with a suitable tool.

TRANSAXLE SIDE (DS80, DS90)


1. Install boot and new small boot band on drive shaft.

Cover drive shaft serration with tape so as not to damage boot during installation.

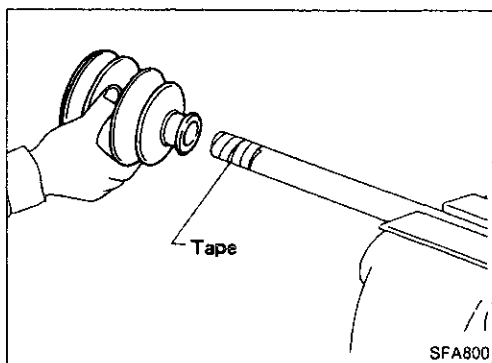


FRONT AXLE — Drive Shaft for 4WD

Assembly (Cont'd)

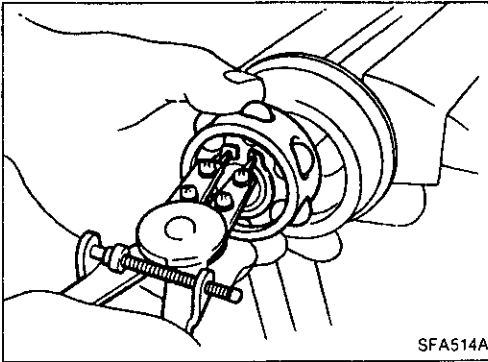


2. Install new snap ring "B", then securely install ball cage, inner race and balls as a unit, making sure the marks which were made during disassembly are properly aligned.
3. Install new snap ring "C".

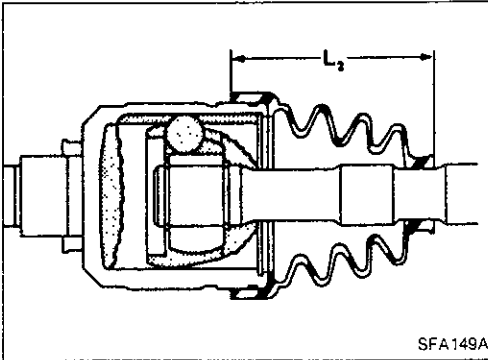

4. Pack drive shaft with specified amount of grease.
Specified amount of grease:
DS80 90 - 110 g (3.17 - 3.88 oz)
DS90 165 - 175 g (5.82 - 6.17 oz)
5. Install slide joint housing, then install new snap ring "A".
6. Set boot so that it does not swell and deform when its length is "L₃".
Length "L₃":
DS80 86 - 88 mm (3.39 - 3.46 in)
DS90 97 - 99 mm (3.82 - 3.90 in)

Make sure that boot is properly installed on the drive shaft groove.

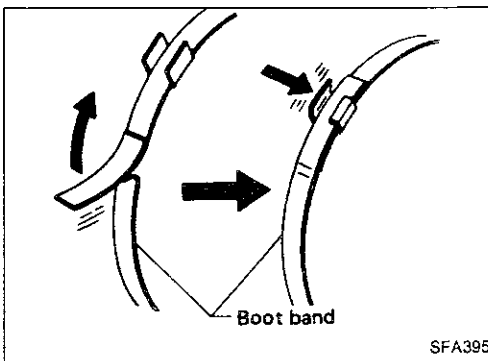


7. Lock new larger and smaller boot bands securely with a suitable tool.

FRONT SUSPENSION

2WD MODELS

When installing stabilizer bar and transverse link, final tightening requires to be carried out under unladen condition* with tires on ground.

* Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

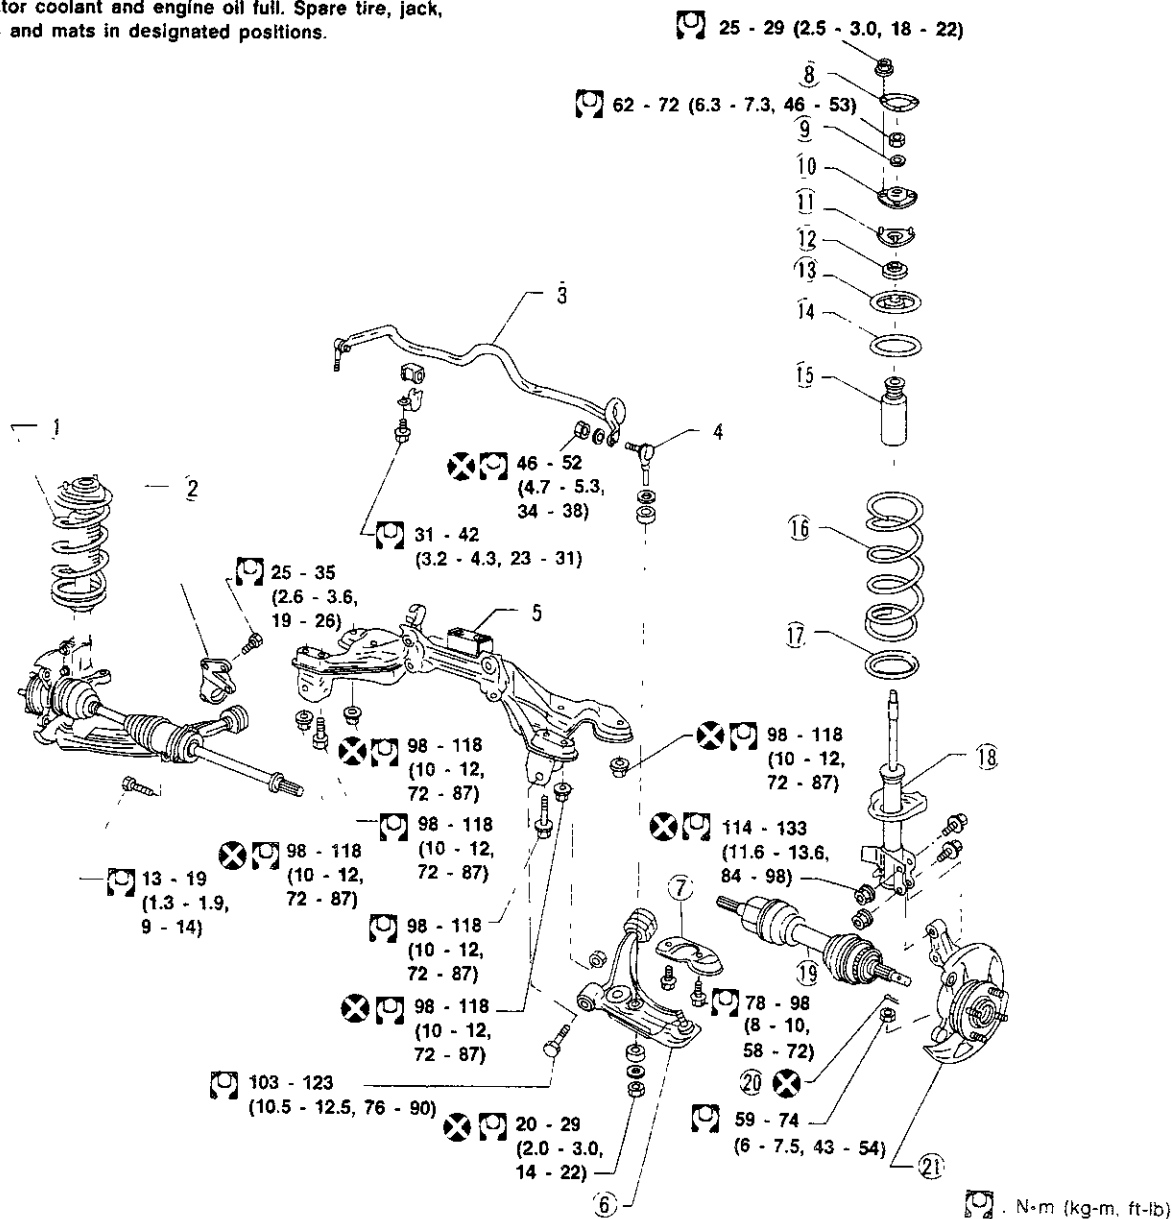

- ① Shock absorber assembly
- ② Support bearing bracket
- ③ Stabilizer bar
- ④ Connecting rod
- ⑤ Front suspension member
- ⑥ Transverse link
- ⑦ Compression rod clamp

- ⑧ Gasket
- ⑨ Washer
- ⑩ Strut mounting insulator
- ⑪ Strut insulator bracket
- ⑫ Thrust bearing
- ⑬ Upper spring seat
- ⑭ Rubber seat

- ⑮ Bumper rubber
- ⑯ Coil spring
- ⑰ Rubber seat
- ⑱ Strut assembly
- ⑲ Drive shaft
- ⑳ Cotter pin
- ㉑ Wheel hub assembly


SFA154B

FRONT SUSPENSION

4WD MODELS

When installing stabilizer bar and transverse link, final tightening requires to be carried out under unladen condition* with tires on ground.

* Fuel radiator coolant and engine oil full. Spare tire, jack hand tools and mats in designated positions.

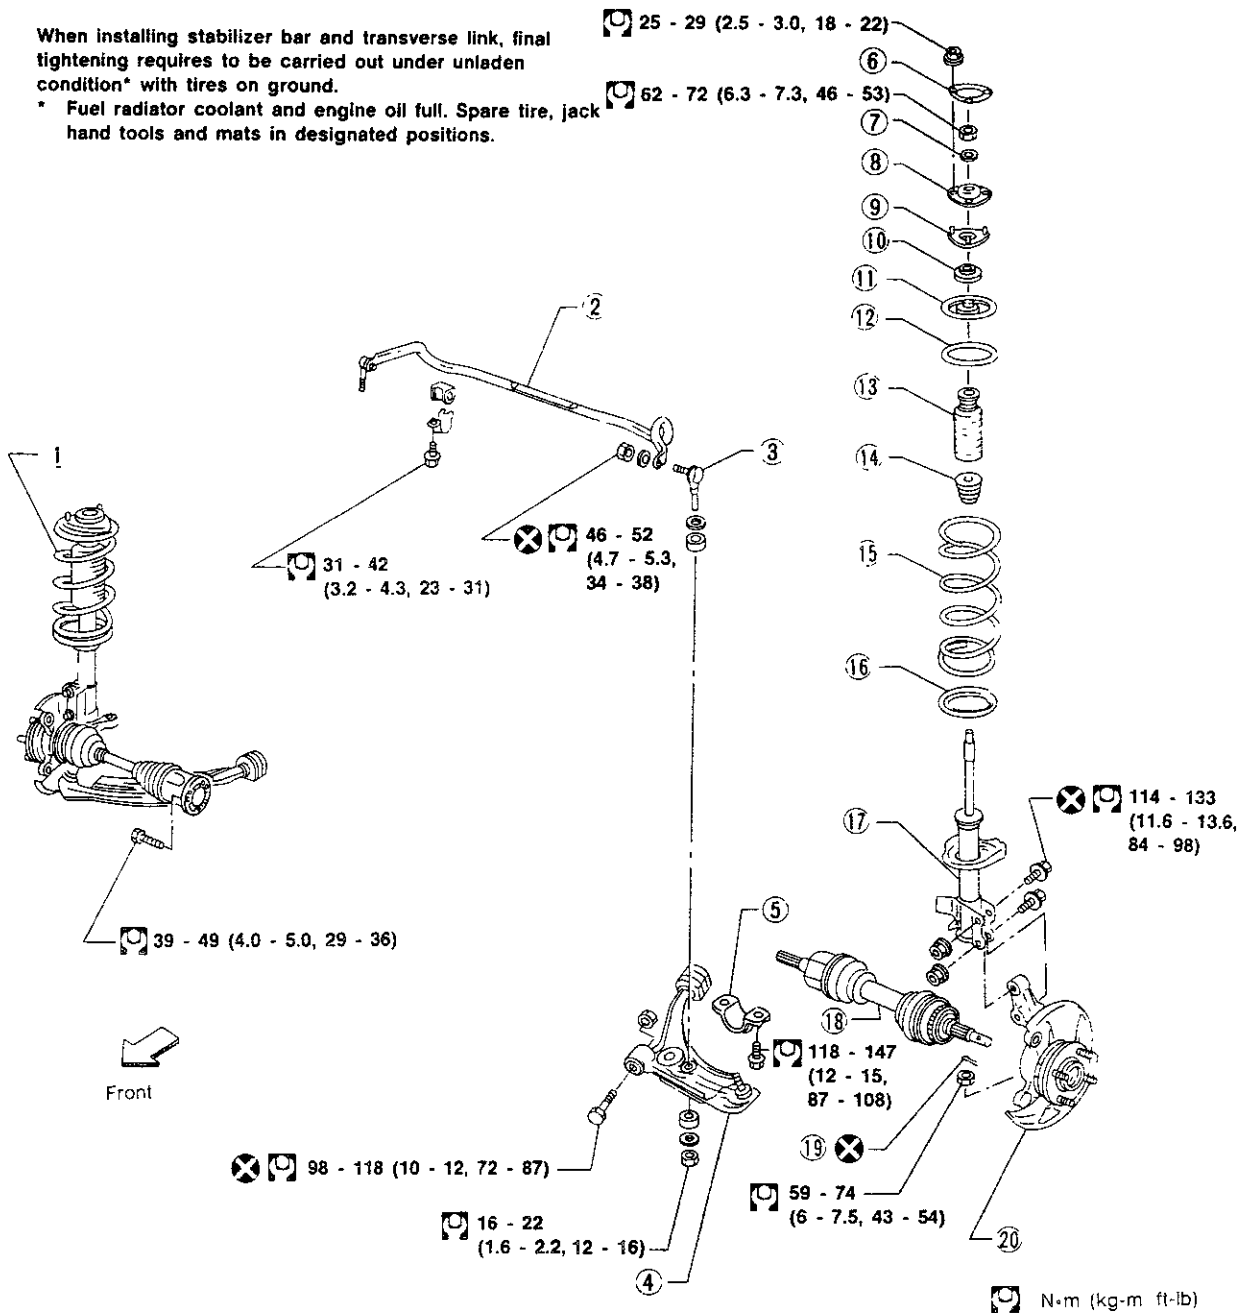


- ① Shock absorber assembly
- ② Stabilizer bar
- ③ Connecting rod
- ④ Transverse link
- ⑤ Compression rod clamp
- ⑥ Gasket
- ⑦ Washer

- ⑧ Strut mounting insulator
- ⑨ Strut insulator bracket
- ⑩ Thrust bearing
- ⑪ Upper spring seat
- ⑫ Rubber seat
- ⑬ Dust cover
- ⑭ Bound bumper rubber

- ⑮ Coil spring
- ⑯ Rubber seat
- ⑰ Strut assembly
- ⑱ Drive shaft
- ⑲ Cotter pin
- ⑳ Wheel hub assembly


SFA141B

FRONT SUSPENSION — Coil Spring and Strut Assembly

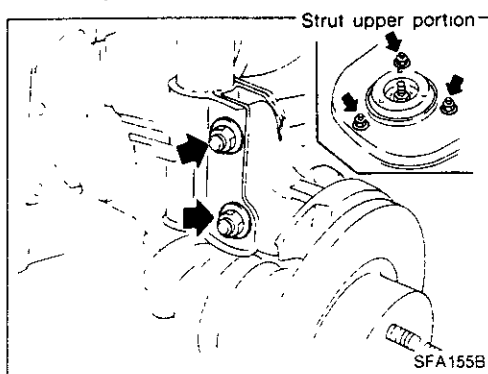

Removal and Installation


- Remove strut assembly fixing bolts and nuts (to hoodledge).
Do not remove piston rod lock nut on vehicle.

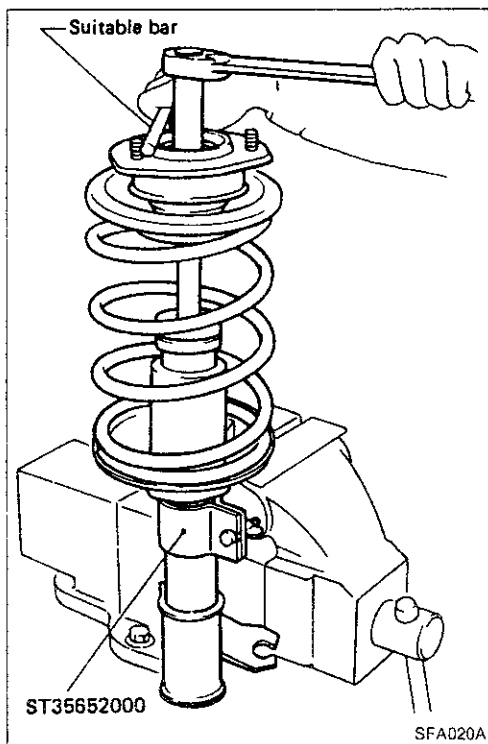


Disassembly

1. Set strut assembly on vise with Tool, then loosen piston rod lock nut.

Do not remove piston rod lock nut.

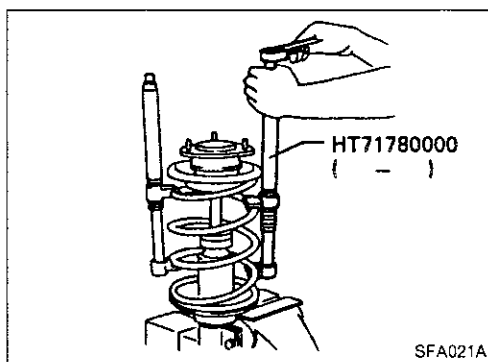


2. Compress spring with Tool so that the strut mounting insulator can be turned by hand.

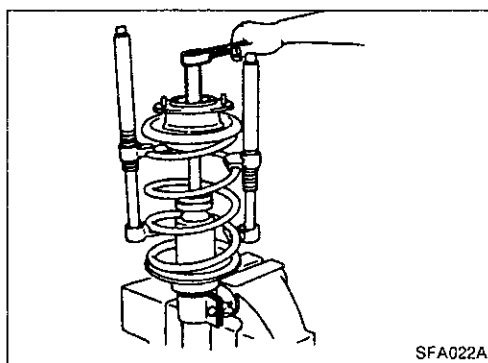


3. Remove piston rod lock nut.

FRONT SUSPENSION — Coil Spring and Strut Assembly

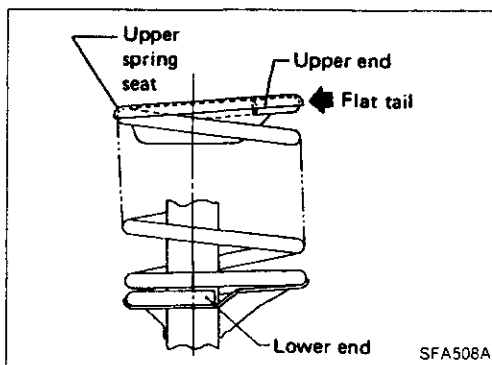


Assembly

- When installing coil spring on strut, it must be positioned as shown in the figure at left.

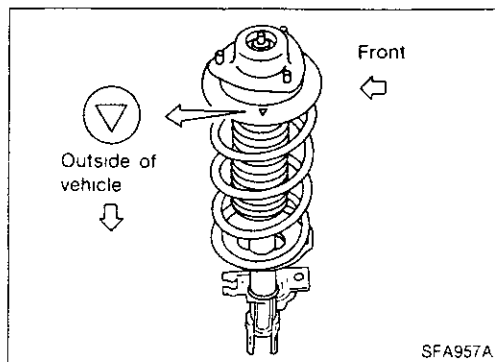




- When installing spring seat, make sure that it is positioned as shown.

FRONT SUSPENSION — Stabilizer Bar

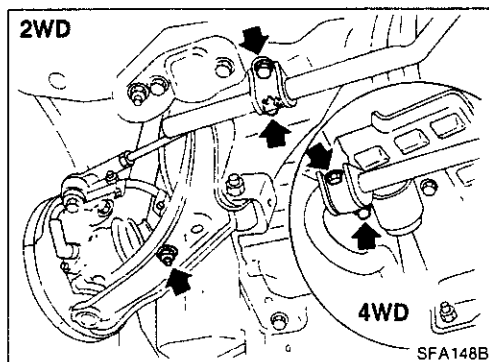


Removal and Installation

- Remove stabilizer bar.
- When installing stabilizer, make sure that paint mark and clamp face in their correct directions.
- When removing and installing stabilizer bar, fix portion A.
- Install stabilizer bar with ball joint socket properly placed.

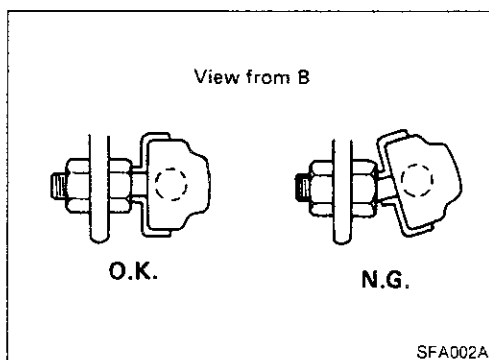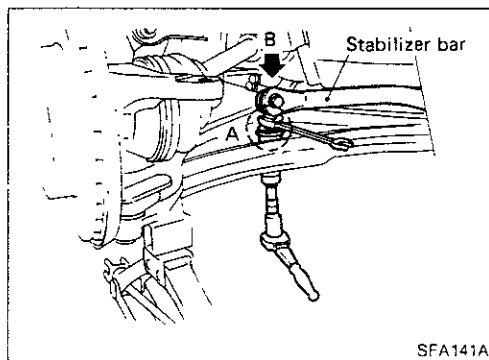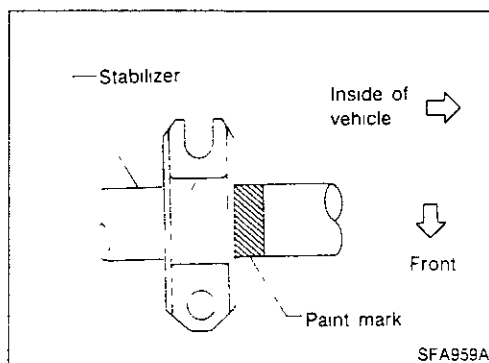


FRONT SUSPENSION — Transverse Link and Lower Ball Joint

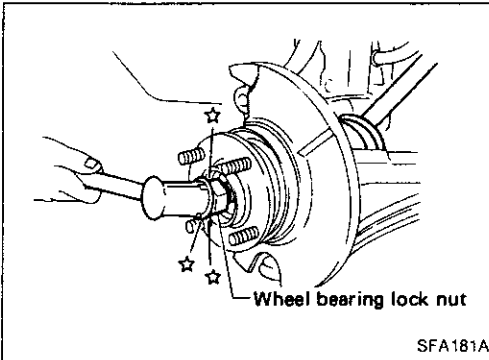


Removal and Installation

1. Remove wheel bearing lock nut.
2. Remove tie-rod ball joint.
3. Remove strut lower bracket fixing bolts and nuts.
4. Separate drive shaft from knuckle by slightly tapping drive shaft end.


Cover boots with waste cloth so as not to damage them when removing drive shaft.

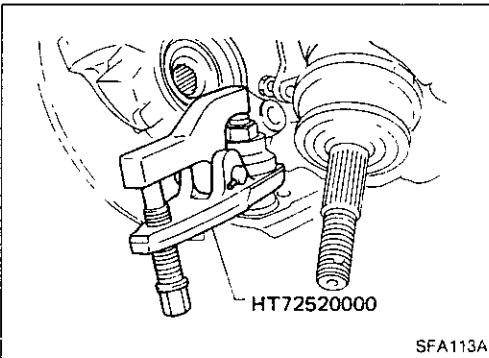

5. Separate lower ball joint stud from knuckle with Tool. Refer to FRONT AXLE — Wheel Hub and Knuckle.

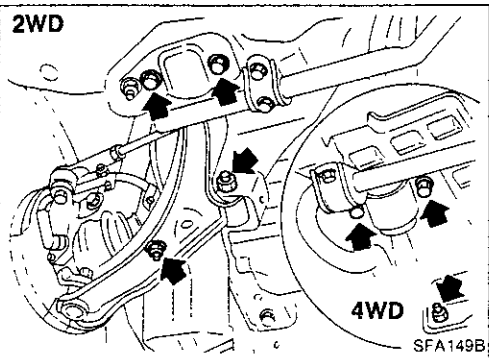

6. Remove bolts and nuts as shown at left.

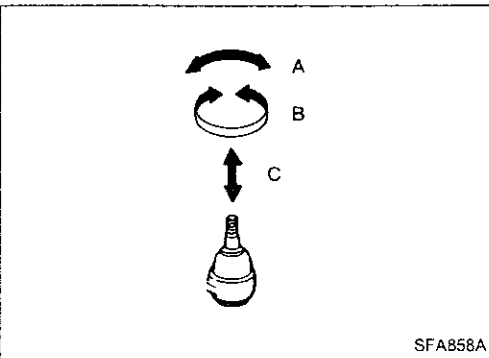

Inspection

- Check ball joint for play. If ball stud is worn, play in axial direction is excessive or joint is hard to swing, replace lower ball joint.

Before checking, turn ball joint at least 10 revolutions so that ball joint is properly broken in.

Swinging force "A":

(measuring point: cotter pin hole of ball stud)

7.8 - 57.9 N (0.8 - 5.9 kg, 1.8 - 13.0 lb)

Turning torque "B":

0.5 - 3.4 N·m (5 - 35 kg-cm, 4.3 - 30.4 in-lb)

Vertical end play "C":

0 mm (0 in)

- Check dust cover for damage. Replace it and cover clamp if necessary.

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model B13

SUSPENSION

Suspension type	Strut type independent suspension
-----------------	-----------------------------------

COIL SPRING

R.H.D. except for Europe

Applied model	Sedan								Coupe	
	E10S		GA13DS & Except S/S* model for GA14DS, GA16DS		CD17, GA16DE M/T & Except S/S* model for GA14DS, GA16DS A/T		GA16DE & S/S* model for GA14DS, GA16DS			
	M.T				A/T, M/T		A/T		M/T	A/T
Standard	Option	Standard	Option	Standard	Option	Standard	Option			
Wire diameter mm (in)										
Left	11.4 (0.449)	11.6 (0.457)		11.8 (0.465)		12.0 (0.472)		12.1 (0.476)	11.8 (0.465)	12.0 (0.472)
Right	11.6 (0.457)	11.8 (0.465)		12.0 (0.472)		12.1 (0.476)		12.3 (0.484)	12.0 (0.472)	12.1 (0.476)
Coil diameter mm (in)										
Left	130 (5.12)									
Right										
Free length mm (in)										
Left	335 (13.19)	345 (13.58)		355 (13.98)		365 (14.37)		375 (14.76)	355 (13.98)	365 (14.37)
Right	345 (13.58)	355 (13.98)		365 (14.37)		375 (14.76)		385 (15.16)	365 (14.37)	375 (14.76)
Spring constant N/mm (kg/mm, lb/in)										
Left	19.6 (2.0, 112)									
Right										
Identification color										
Left	White x 2, Red x 1	White x 2, Yellow x 1		White x 2, Light green x 1		White x 2, Purple x 1		Pink x 2, Yellow x 1	White x 2, Light green x 1	White x 2, Purple x 1
Right	White x 2, Yellow x 1	White x 2, Light green x 1		White x 2, Purple x 1		Pink x 2, Yellow x 1		Pink x 2, White x 1	White x 2, Purple x 1	Pink x 2, Yellow x 1

*S/S: Super Saloon

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model B13 (Cont'd)

R.H.D. for Europe

Applied model		GA16DS		SR20DE
		M/T	A/T	
Wire diameter	mm (in)			
Left		11.8 (0.465)	12.0 (0.472)	12.3 (0.484)
Right		12.0 (0.472)	12.1 (0.476)	12.5 (0.492)
Coil outer diameter	mm (in)	130 (5.12)		
Free length	mm (in)			
Left		355 (13.98)	365 (14.37)	360 (14.17)
Right		365 (14.37)	375 (14.76)	370 (14.57)
Spring constant	N/mm (kg/mm, lb/in)	19.6 (2.0, 112)		21.6 (2.2, 123)
Identification color				
Left		White x 2, Light green x 1	White x 2, Purple x 1	Orange x 2, Light blue x 1
Right		White x 2, Purple x 1	Pink x 2, Yellow x 1	Orange x 2, Orange x 1

L.H.D. except for Europe & Middle East

Applied model		Sedan			Coupe	
		GA13DS & Except EX/S* model for GA14DS	GA16DS		GA16DE, CD17 & EX/S* model for GA14DS	
			M/T	A/T		
Wire diameter	mm (in)					
Standard		11.8 (0.465)		12.0 (0.472)	12.0 (0.472)	12.1 (0.476)
Option		12.0 (0.472)		12.1 (0.476)	—	—
Coil diameter	mm (in)					
Standard		130 (5.12)				
Option						
Free length	mm (in)					
Standard		355 (13.98)		365 (14.37)	365 (14.37)	375 (14.76)
Option		365 (14.37)		375 (14.76)	—	—
Spring constant	N/mm (kg/mm, lb/in)	19.6 (2.0, 112)				
Identification color						
Standard		White x 2, Light green x 1		White x 2, Purple x 1	White x 2, Purple x 1	Pink x 2, Yellow x 1
Option		White x 2, Purple x 1		Pink x 2, Yellow x 1	—	—

*EX/S: EX Saloon

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model B13 (Cont'd)

L.H.D. for Europe

Applied model		GA16DS		SR20DE
		M/T	A/T	
Wire diameter	mm (in)	12.0 (0.472)	12.1 (0.476)	12.3 (0.484)
Coil outer diameter	mm (in)	130 (5.12)		
Free length	mm (in)	365 (14.37)	375 (14.76)	360 (14.17)
Spring constant	N/mm (kg/mm, lb/in)	19.6 (2.0, 112)		
Identification color		White × 2, Purple × 1	Pink × 2, Yellow × 1	Orange × 2, Light blue × 1

For Middle East

Applied model		Sedan		Coupe		T-bar roof
		M/T	A/T	M/T	A/T	
Wire diameter	mm (in)	12.1 (0.476)	12.3 (0.484)	12.0 (0.472)	12.1 (0.476)	
Coil outer diameter	mm (in)	130 (5.12)				
Free length	mm (in)	375 (14.76)	385 (15.16)	365 (14.37)	375 (14.76)	
Spring constant	N/mm (kg/mm, lb/in)	19.6 (2.0, 112)				
Identification color		Pink × 2, Yellow × 1	Pink × 2, White × 1	White × 2, Purple × 1	Pink × 2, Yellow × 1	

SHOCK ABSORBER OR STRUT

R.H.D. except for Europe

Applied model	Sedan					Coupe
	Standard				Option (Heavy Duty model)	
	Except CD17 & GA16DE	CD17		GA16DE		
		Without P/S	With P/S			
Strut type	Double-acting hydraulic					
Damping force [at 0.3 m (1.0 ft)/sec.]						
N (kg, lb)						
Expansion	1,138 - 1,530 (116 - 156, 256 - 344)		922 - 1,236 (94 - 126, 207 - 278)		1,138 - 1,530 (116 - 156, 256 - 344)	
Compression	333 - 510 (34 - 52, 75 - 115)		265 - 422 (27 - 43 60 - 95)		333 - 510 (34 - 52, 75 - 115)	
Piston rod diameter	18 (0.71)				20 (0.79)	18 (0.71)
mm (in)						

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model B13 (Cont'd)

L.H.D. except for Europe & Middle East

Applied model	Sedan					Coupe
	Standard			Option		
	Except GA16DE		GA16DE	Heavy Duty model	Head Suspension model	
	Without P/S	With P/S				
Strut type	Double-acting hydraulic					
Damping force [at 0.3 m (1.0 ft)/sec.] N (kg, lb)						
Expansion	1,138 - 1,530 (116 - 156, 256 - 344)	922 - 1,236 (94 - 126, 207 - 278)	1,138 - 1,530 (116 - 156, 256 - 344)			
Compression	333 - 510 (34 - 52, 75 - 115)	265 - 422 (27 - 43, 60 - 95)	333 - 510 (34 - 52, 75 - 115)			
Piston rod diameter mm (in)	18 (0.71)		20 (0.79)	18 (0.71)		

For Europe

Applied model		GA16DS		SR20DE
		R.H.D.	L.H.D.	
Strut type		Double-acting hydraulic		
Damping force [at 0.3 m (1.0 ft)/sec.]		N (kg, lb)		
Expansion		1,000 - 1,353 (102 - 138, 225 - 304)	834 - 1,128 (85 - 115, 187 - 254)	1,265 - 1,687 (129 - 172, 284 - 379)
Compression		314 - 471 (32 - 48, 71 - 106)	382 - 559 (39 - 57, 86 - 126)	432 - 647 (44 - 66, 97 - 146)
Piston rod diameter		mm (in)	18 (0.71)	

For Middle East

Applied model	Without A.B.S.		With A.B.S
	Except 175 tire	175 tire	
Strut type	Double-acting hydraulic		
Damping force [at 0.3 m (1.0 ft)/sec.]	N (kg, lb)		
Expansion	1,138 - 1,530 (116 - 156, 256 - 344)	922 - 1,236 (94 - 126, 207 - 278)	
Compression	333 - 510 (34 - 52, 75 - 115)	265 - 422 (27 - 43, 60 - 95)	
Piston rod diameter	mm (in)	18 (0.71)	

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model B13 (Cont'd)

STABILIZER BAR

Except for Europe & Middle East

Applied model	Sedan	Coupe
Bar diameter		
mm (in)		
Outer diameter	28.6 (1.126)	28 (1.10)
Inner diameter	20.6 (0.811)	—
Identification color	Orange	Purple


For Europe & Middle East

Applied model	Middle East	Europe
		GA16DS R.H.D.
Bar diameter		
mm (in)		
Outer diameter	28.6 (1.126)	28 (1.10)
Inner diameter	20.6 (0.811)	—
Identification color	Orange	Purple

DRIVE SHAFT


Applied model	Except GA16DS, GA16DE, SR20DE engines	GA16DE, GA16DS	SR20DE
Joint type			
Transaxle side	TS70C	TS79C	DS86
Wheel side	ZF80	ZF90	BF86
Applied grease	Nissan genuine grease or equivalent		
Quality			
Capacity g (oz)			
Transaxle side	185 - 195 (6.52 - 6.88)	225 - 235 (7.94 - 8.29)	140 - 160 (4.94 - 5.64)
Wheel side	90 - 100 (3.17 - 3.53)	155 - 175 (5.47 - 6.17)	105 - 125 (3.70 - 4.41)
Boot length mm (in)			
Transaxle side "L ₂ "	95.5 - 97.5 (3.760 - 3.839)	101.5 - 103.5 (4.00 - 4.07)	97 - 99 (3.82 - 3.90)
Wheel side "L ₁ "	90.5 - 92.5 (3.563 - 3.642)	96 - 98 (3.78 - 3.86)	99.5 - 101.5 (3.917 - 3.996)

Transaxle side

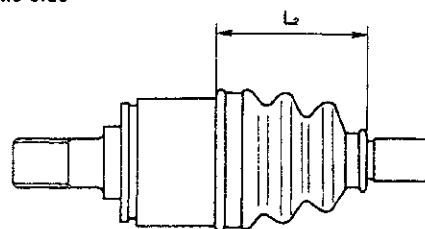

SFA961A

Wheel side

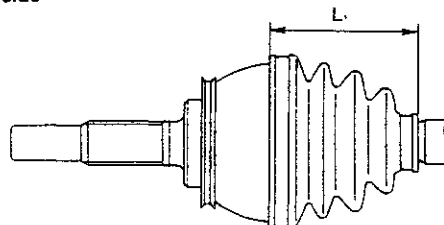

SFA962A

Inspection and Adjustment — Model B13

WHEEL ALIGNMENT (Unladen*1)

Except for Europe & Middle East

Applied model	Standard			Option
	Sedan		Coupe	
	Except CD17	CD17		
Camber degree	-1°00' to 0°15'			-0°50' to 0°40'
Caster degree	1°05' - 2°35'			1°05' - 2°35'
Kingpin inclination degree	13°15' - 14°45'			12°50' - 14°20'
Total toe-in mm (in) degree	1 - 3 (0.04 - 0.12) 6' - 18'			
Front wheel turning angle Full turn*2 13-inch wheel Inside	39° - 43°	36° - 40°	39° - 43°	39° - 43°
Outside	34°	32°	34°	34°
14-inch wheel Inside	33° - 37°			
Outside	30°			

For Europe & Middle East

Applied model	Europe	Middle East
Camber degree	-1°00' to 0°30'	-0°50' to 0°40'
Caster degree	1°05' - 2°35'	0°55' - 2°25'
Kingpin inclination degree	13°15' - 14°45'	12°50' - 14°20'
Total toe-in mm (in) degree	0 - 4 (0 - 0.16) 0' - 22'	1 - 3 (0.04 - 0.12) 6' - 18'
Front wheel turning angle Full turn*2 Inside	33° - 37°	39° - 43°
Outside	30°	34°

*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

*2: On power steering models, wheel turning force (at circumference of steering wheel) is 98 to 147 N (10 to 15 kg, 22 to 33 lb) with engine at idle.

WHEEL BEARING

Applied model	All
Axial end play mm (in)	Less than 0.05 (0.0020)
Lock nut tightening torque N·m (kg-m, ft-lb)	196 - 275 (20 - 28, 145 - 203)
Preload N·m (kg-cm, in-lb)	1.31 (13.4, 11.6)
At knuckle arm N (kg, lb)	8.8 (0.9, 2.0)

LOWER BALL JOINT

Applied model	All
Axial end play mm (in)	0 (0)
Swinging force N (kg, lb)	7.8 - 57.9 (0.8 - 5.9, 1.8 - 13.0)
At cotter pin hole	
Rotating torque N·m (kg-cm, in-lb)	0.5 - 3.4 (5 - 35, 4.3 - 30.4)

WHEEL RUNOUT

Unit: mm (in)

Wheel type	Aluminum wheel	Steel wheel
Maximum radial runout limit	0.3 (0.012)	0.5 (0.020)
Maximum lateral runout limit	0.3 (0.012)	0.8 (0.031)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model N14

SUSPENSION

Suspension type	Strut type independent suspension
-----------------	-----------------------------------

COIL SPRING

Except for Europe

Applied model		GA14DS		GA16DE	
		M/T	A/T	M/T	A/T
Wire diameter	mm (in)				
Left		11.6 (0.457)	11.8 (0.465)	12.0 (0.472)	
Right		11.8 (0.465)	12.0 (0.472)	12.1 (0.476)	
Coil diameter	mm (in)	130 (5.12)			
Left					
Right					
Free length	mm (in)				
Left		345 (13.58)	355 (13.98)	365 (14.37)	
Right		355 (13.98)	365 (14.37)	375 (14.76)	
Spring constant	N/mm (kg/mm, lb/in)	19.6 (2.0, 112)			
Identification color					
Left		White x 2, Yellow x 1	White x 2, Light green x 1	White x 2, Purple x 1	
Right		White x 2, Light green x 1	White x 2, Purple x 1	Pink x 2, Yellow x 1	

R.H.D. for Europe

Applied model		2WD				4WD
		GA14DS, GA16DS		CD20	SR20DE	
		M/T	A/T			
Wire diameter	mm (in)					
Left		11.8 (0.465)	12.0 (0.472)	12.1 (0.476)	12.3 (0.484)	12.7 (0.500)
Right		12.0 (0.472)	12.1 (0.476)	12.3 (0.484)	12.5 (0.492)	12.9 (0.508)
Coil diameter	mm (in)	130 (5.12)				
Left						
Right						
Free length	mm (in)					
Left		355 (13.98)	365 (14.37)	375 (14.76)	360 (14.17)	390 (15.35)
Right		365 (14.37)	375 (14.76)	385 (15.16)	370 (14.57)	400 (15.75)
Spring constant	N/mm (kg/mm, lb/in)	19.6 (2.0, 112)				21.6 (2.2, 123)
Identification color						
Left		White × 2, Light green × 1	White × 2, Purple × 1	Pink × 2, Yellow × 1	Orange × 2, Light blue × 1	Pink × 2, Orange × 1
Right		White × 2, Purple × 1	Pink × 2, Yellow × 1	Pink × 2, White × 1	Orange × 2, Orange × 1	Light blue × 2, Orange × 1

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model N14 (Cont'd)

L.H.D. for Europe

Applied model		2WD				4WD	
		GA14DS M/T	GA14DS A/T & GA16DS	CD20	SR20DE	GA16DS	SR20DET
Wire diameter	mm (in)	11.8 (0.465)	12.0 (0.472)	12.1 (0.476)	12.5 (0.492)	12.3 (0.484)	12.9 (0.508)
Coil diameter	mm (in)	130 (5.12)					
Free length	mm (in)	355 (13.98)	365 (14.37)	375 (14.76)	370 (14.57)	390 (15.35)	400 (15.75)
Spring constant	N/mm (kg/mm, lb/in)	19.6 (2.0, 112)			21.6 (2.2, 123)	19.6 (2.0, 112)	21.6 (2.2, 123)
Identification color		White × 2, Light green × 1	White × 2, Purple × 1	Pink × 2, Yellow × 1	Orange × 2, Orange × 1	Orange × 1, Light green × 1, Blue × 1	Light blue × 2, Orange × 1

SHOCK ABSORBER OR STRUT

Except for Europe

Applied model	ALL
Strut type	Double-acting hydraulic
Damping force	N (kg, lb)
[at 0.3 m (1.0 ft)/sec.]	
Expansion	922 - 1,236 (94 - 126, 207 - 278)
Compression	265 - 422 (27 - 43, 60 - 95)
Piston rod diameter	mm (in)
	18 (0.71)

For Europe

Applied model		2WD				4WD	
		GA14DS, GA16DS		SR20DE		GA16DS	SR20DET
		R.H.D	L.H.D	R.H.D.	L.H.D		
Strut type		Double-acting hydraulic					
Damping force [at 0.3 m (1.0 ft)/sec.]		N (kg, lb)					
Expansion		1,000 - 1,353 (102 - 138, 225 - 304)	834 - 1,128 (85 - 115, 187 - 254)	1,000 - 1,353 (102 - 138, 225 - 304)	1,265 - 1,687 (129 - 172, 284 - 379)	1,000 - 1,353 (102 - 138, 225 - 304)	1,265 - 1,687 (129 - 172, 284 - 379)
Compression		314 - 471 (32 - 48, 71 - 106)	382 - 559 (39 - 57, 86 - 126)	520 - 755 (53 - 77, 117 - 170)	432 - 647 (44 - 66, 97 - 146)	226 - 363 (23 - 37, 51 - 82)	432 - 647 (44 - 66, 97 - 146)
Piston rod diameter		mm (in)		18 (0.71)			

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — Model N14 (Cont'd)


STABILIZER BAR

Applied model	2WD			4WD
	R.H.D.		L.H.D.	
	Except SR20DE	SR20DE		
Bar diameter	mm (in)			
Outer		28.6 (1.126)	28 (1.10)	28 (1.10)
Inner		20.6 (0.811)	—	—
Identification color		Orange	Purple	Yellow

DRIVE SHAFT


Applied model	2WD			4WD	
	GA14DS CD20	GA16DS GA16DE	SR20DE	GA16DS	SR20DET
Joint type					
Transaxle side	TS70C	TS79C	DS86	Right: DS80 Left: TS82F	Right: DS90 Left: TS82F
Wheel side	ZF80	ZF90	BF86	ZF90	ZF90
Applied grease	Nissan genuine grease or equivalent				
Quality					
Capacity g (oz)					
Transaxle side	185 - 195 (6.52 - 6.88)	225 - 235 (7.94 - 8.29)	140 - 160 (4.94 - 5.64)	R: 90 - 110 (3.17 - 3.88) L: 185 - 195 (6.52 - 6.88)	R: 165 - 175 (5.82 - 6.17) L: 185 - 195 (6.52 - 6.88)
Wheel side	90 - 100 (3.17 - 3.53)	155 - 175 (5.47 - 6.17)	105 - 125 (3.70 - 4.41)	160 - 170 (5.64 - 6.00)	160 - 170 (5.64 - 6.00)
Boot length mm (in)					
Transaxle side L ₂	95.5 - 97.5 (3.760 - 3.839)	101.5 - 103.5 (4.00 - 4.07)	97 - 99 (3.82 - 3.90)	R: 86 - 88 (3.39 - 3.46) L: 95 - 97 (3.74 - 3.82)	R: 97 - 99 (3.82 - 3.90) L: 95 - 97 (3.74 - 3.82)
Wheel side "L"	90.5 - 92.5 (3.563 - 3.642)	96 - 98 (3.78 - 3.86)	99.5 - 101.5 (3.917 - 3.996)	96 - 98 (3.78 - 3.86)	96 - 98 (3.78 - 3.86)

Transaxle side

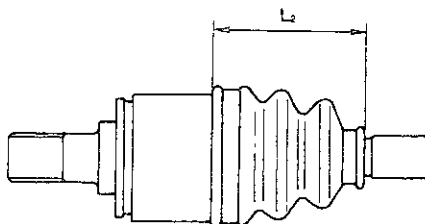

SFA961A

Wheel side

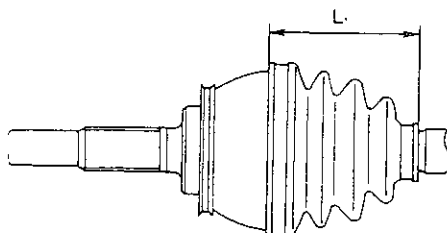

SFA962A

Inspection and Adjustment — Model N14

WHEEL ALIGNMENT (Unladen*1)

Applied model	2WD			4WD	
	13-inch wheel		14-inch wheel	13-inch wheel	14-inch wheel
	Except CD engine	CD engine			
Camber degree	-1°00' to 0°30'			-0°40' to 0°50'	
Caster degree	0°40' - 2°10'			0°30' - 2°00'	
Kingpin inclinatidegree	13°15' - 14°45'			12°15' - 13°45'	
Total toe-in mm (in)	0 - 4 (0 - 0.16)				
degree	0' - 22'				
Front wheel turning angle					
Full turn*2 degree					
Inside	39° - 43°	36° - 40°	33° - 37°	37° - 41°	34° - 38°
Outside	34°	32°	30°	31°	29°

*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

*2: On power steering models, wheel turning force (at circumference of steering wheel) is 98 to 147 N (10 to 15 kg, 22 to 33 lb) with engine at idle.

LOWER BALL JOINT

Applied model	All
Axial end play mm (in)	0 (0)
Swinging force N (kg, lb) At cotter pin hole	7.8 - 57.9 (0.8 - 5.9, 1.8 - 13.0)
Rotating torque N·m (kg·cm, in·lb)	0.5 - 3.4 (5 - 35, 4.3 - 30.4)

WHEEL RUNOUT

Unit: mm (in)

Wheel type	Aluminum wheel	Steel wheel
Maximum radial runout limit	0.3 (0.012)	0.5 (0.020)
Maximum lateral runout limit	0.3 (0.012)	0.8 (0.031)

WHEEL BEARING

Applied model	All
Axial end play mm (in)	Less than 0.05 (0.0020)
Lock nut tightening torque N·m (kg·m, ft·lb)	196 - 275 (20 - 28, 145 - 203)
Preload N·m (kg·cm, in·lb)	1.31 (13.4, 11.6)
At knuckle arm N (kg, lb)	8.8 (0.9, 2.0)

REAR AXLE & REAR SUSPENSION

SECTION **RA**

CONTENTS

PRECAUTIONS AND PREPARATION	RA- 2
-----------------------------------	-------


2WD	
REAR AXLE AND REAR SUSPENSION	RA- 3
CHECK AND ADJUSTMENT — On-vehicle	RA- 4
REAR AXLE — Wheel Hub	RA- 7
REAR SUSPENSION	RA- 9
REAR SUSPENSION — Coil Spring and Strut Assembly	RA-11
REAR SUSPENSION — Stabilizer Bar	RA-13

4WD	
REAR AXLE AND REAR SUSPENSION	RA-14
CHECK AND ADJUSTMENT — On-vehicle	RA-15
REAR AXLE	RA-18
REAR AXLE — Wheel Hub and Knuckle	RA-19
REAR AXLE — Drive Shaft	RA-23
REAR SUSPENSION	RA-30
REAR SUSPENSION — Coil Spring and Strut Assembly	RA-32
REAR SUSPENSION — Stabilizer Bar	RA-34

2WD & 4WD	
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	RA-35

RA

PRECAUTIONS AND PREPARATION



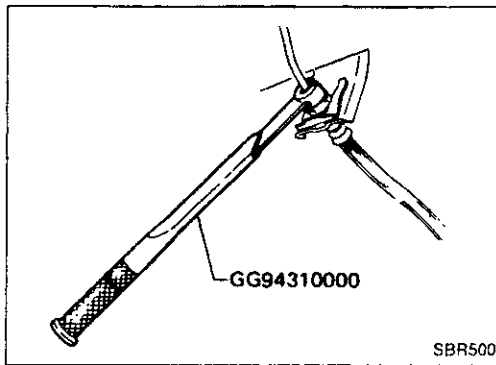


Precautions

- When installing each rubber part, final tightening must be carried out under unladen condition* with tires on ground.
- *: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- Use Tool when removing or installing brake tubes.
- When removing each suspension part, check wheel alignment and adjust if necessary.
- Do not jack up at the parallel links.


Preparation

SPECIAL SERVICE TOOLS

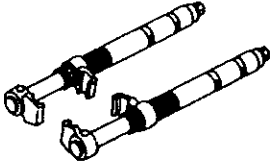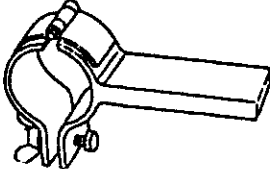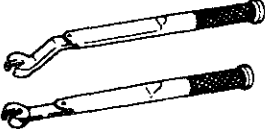Tool number Tool name	Description
HT71780000 Spring compressor	Removing and installing coil spring 
ST35652000 Strut attachment	Fixing strut assembly 
GG94310000 Flare nut torque wrench	Removing and installing brake piping 

When installing each rubber part, final tightening must be carried out under unladen condition* with tires on ground.

* Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

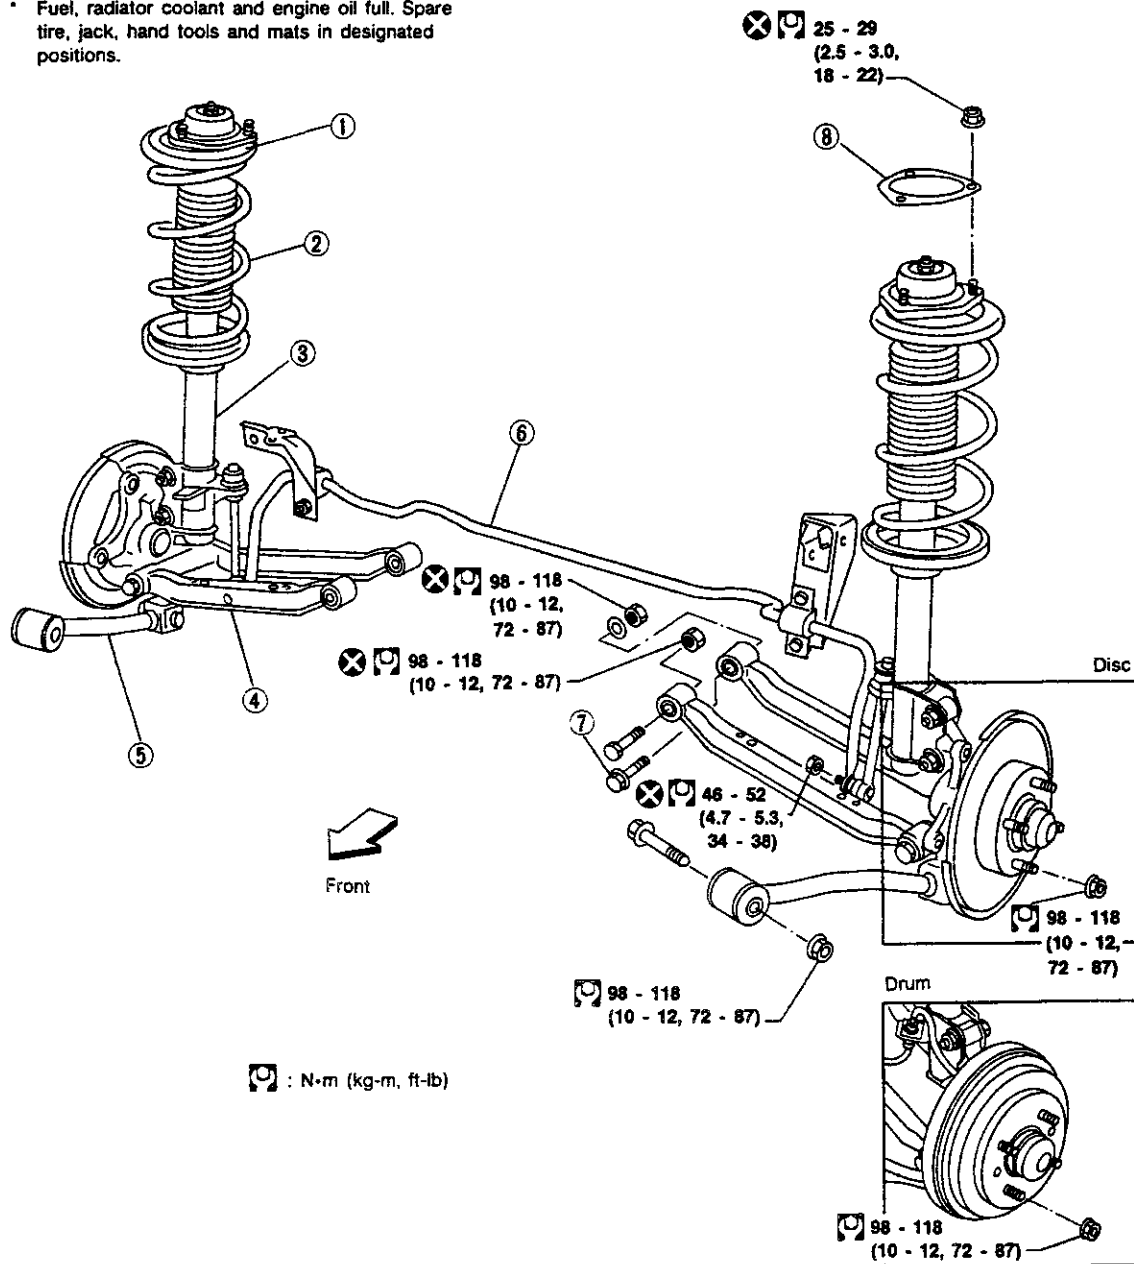


- ① Strut mounting insulator assembly
- ② Coil spring
- ③ Strut assembly

- ④ Parallel link
- ⑤ Radius rod
- ⑥ Stabilizer bar

- ⑦ Adjusting bolt
- ⑧ Gasket


SRA350A

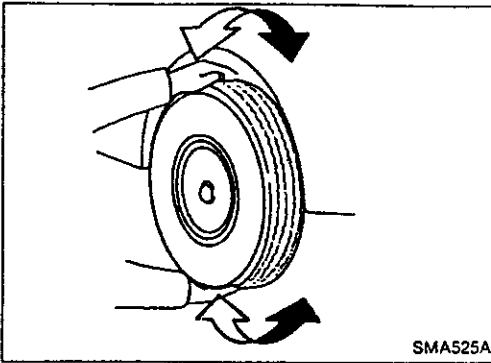


Rear Axle and Rear Suspension Parts

Check axle and suspension parts for looseness, wear or damage.


- Shake each rear wheel to see excessive play.

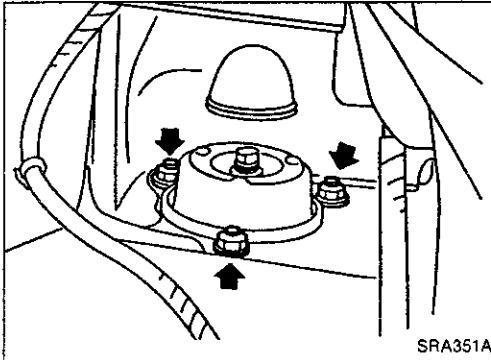

- Retighten all nuts and bolts to the specified torque.
Tightening torque: Refer to **REAR SUSPENSION**.

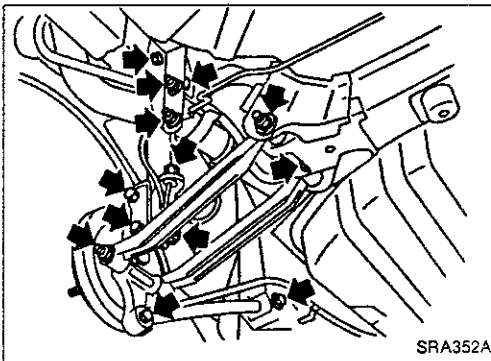

- Check strut (shock absorber) for oil leakage or other damage.

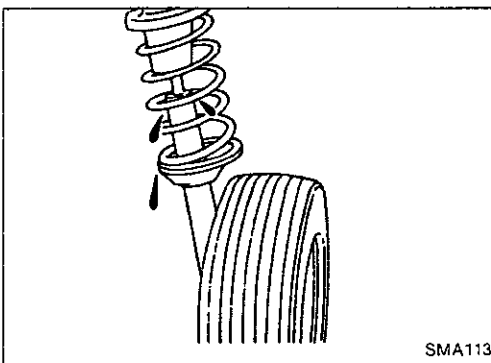

Rear Wheel Bearing

- Check axial end play.

Axial end play:


0.05 mm (0.0020 in) or less


- Check that wheel bearings operate smoothly.
- Check tightening torque of wheel bearing lock nut.

Ⓜ: 186 - 255 N·m

(19 - 26 kg-m, 137 - 188 ft-lb)

- If there is any axial end play or wheel bearing does not turn smoothly, replace wheel bearing assembly. Refer to **REAR AXLE — Wheel Hub**.

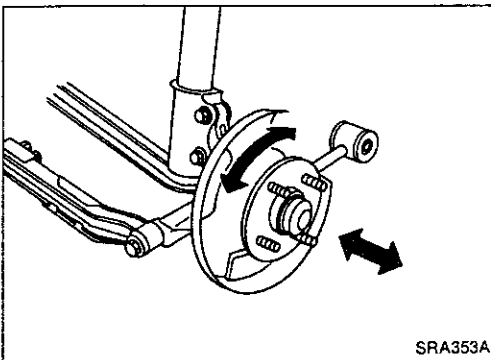

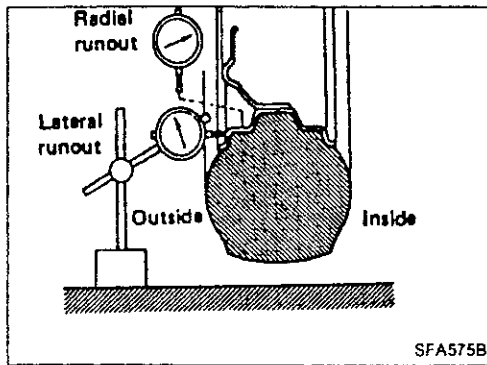

Rear Wheel Alignment

PRELIMINARY INSPECTION

Make following checks. Adjust, repair or replace if necessary.

- Check tires for wear and for improper inflation.
- Check rear wheel bearings for looseness.
- Check wheel runout.

Wheel runout: Refer to S.D.S. in FA section.

- Check that rear strut (shock absorber) works properly.
- Check rear axle and rear suspension parts for looseness.
- Check vehicle posture (Unladen*).

*: Fuel, radiator and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

CAMBER

Camber is preset at factory and cannot be adjusted.

Camber:


B13 models

$-1^{\circ}55'$ to $-0^{\circ}25'$

N14 models

$-1^{\circ}40'$ to $-0^{\circ}10'$


- If the camber is not within specification, inspect and replace any damaged or worn rear suspension parts.

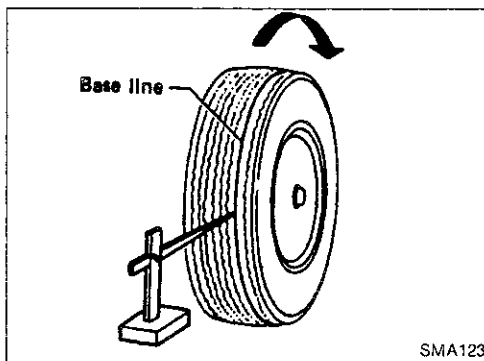

TOE-IN

1. Draw a base line across the tread.

- After lowering rear of vehicle, move it up and down to eliminate friction.

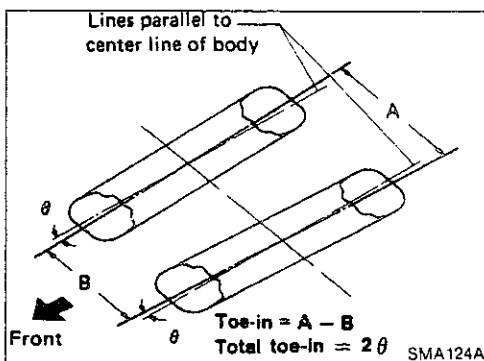


2. Measure toe-in.

- Measure distance "A" and "B" at the same height as hub center.

Total toe-in:

$A - B$	-1 to 3 mm (-0.04 to 0.12 in)
2θ	$-6'$ to $18'$

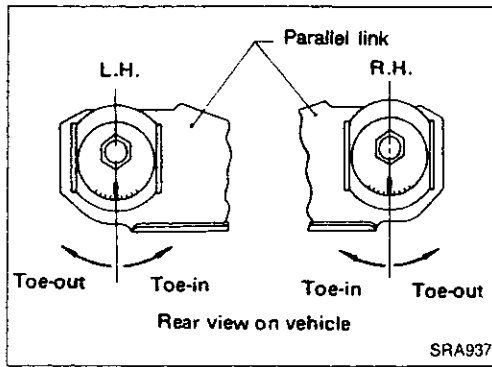
Rear Wheel Alignment (Cont'd)

3. Loosen adjusting pin fixing nuts.
4. Adjust toe-in by turning adjusting pins.

Toe changes about 2.0 mm (0.079 in) [One side] with each graduation of the adjusting pin.

5. Tighten adjusting pin fixing nuts to the specified torque.

**⚙: 98 - 118 N·m
(10 - 12 kg-m, 72 - 87 ft-lb)**

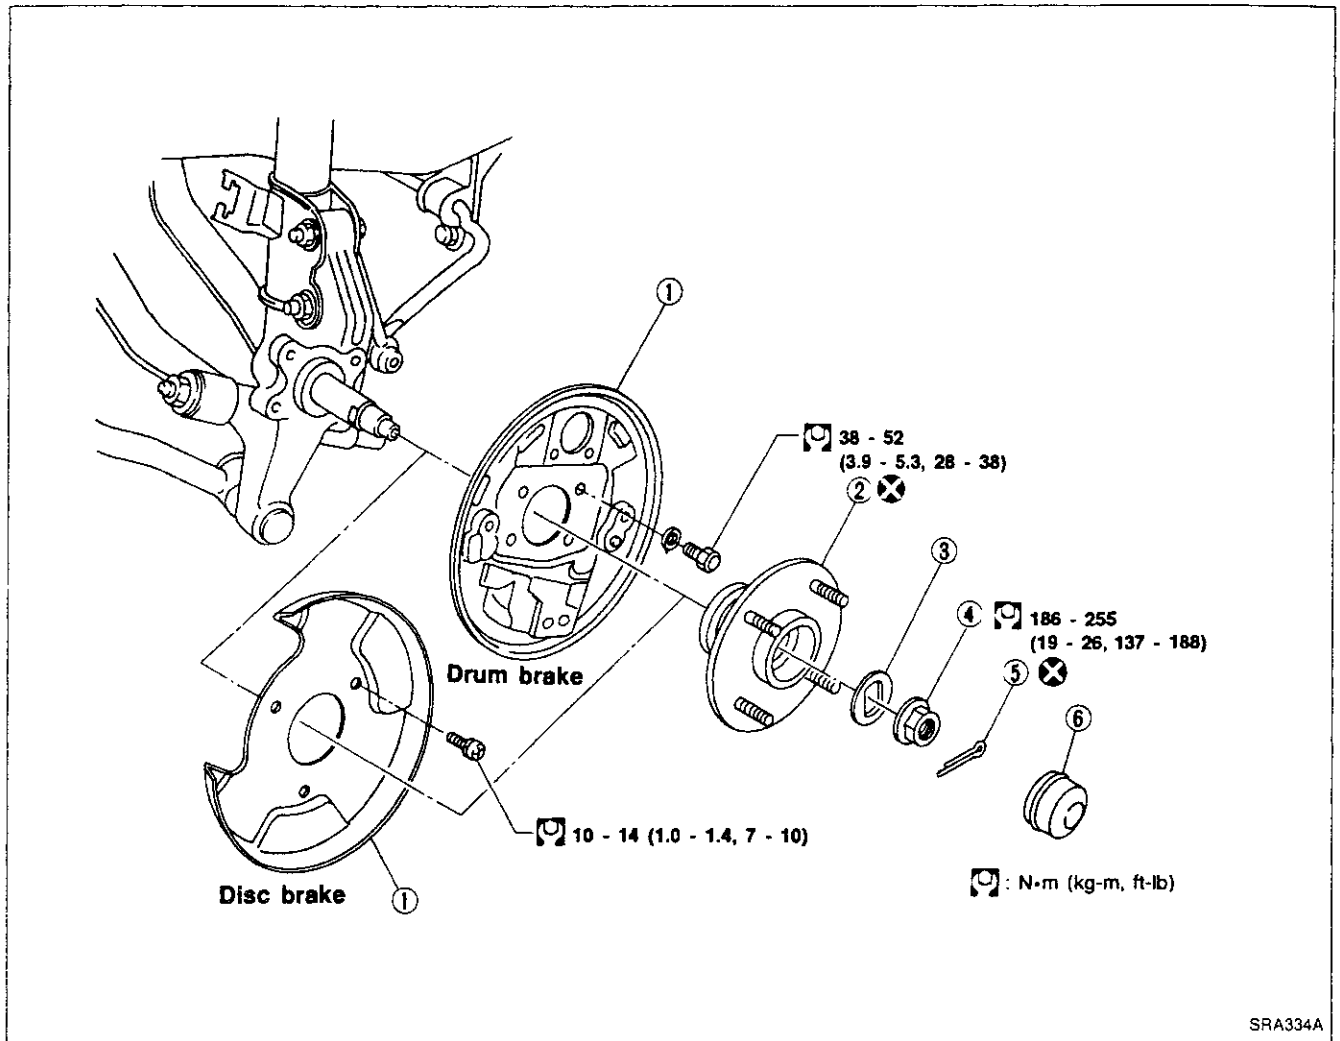


Removal

CAUTION:

Wheel hub bearing usually does not require maintenance. If any of the following symptoms are noted, replace wheel hub bearing assembly.


- Growling noise is emitted from wheel hub bearing during operation.
- Wheel hub bearing drags or turns roughly when hub is turned with your hand after bearing lock nut is tightened to specified torque.
- If the wheel hub bearing assembly is removed, it must be renewed. The old assembly must not be re-used.

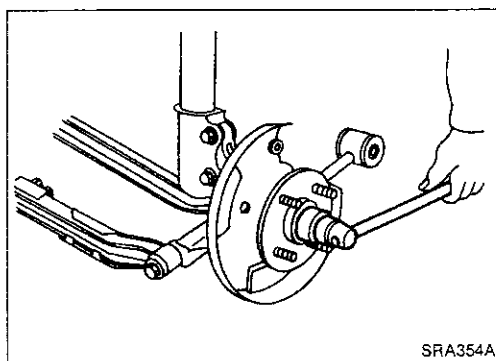

1. Remove brake caliper assembly and rotor.
2. Remove wheel bearing lock nut.


Brake hose does not need to be disconnected from brake caliper.

Be careful not to depress brake pedal, or piston will pop out. Make sure brake hose is not twisted.

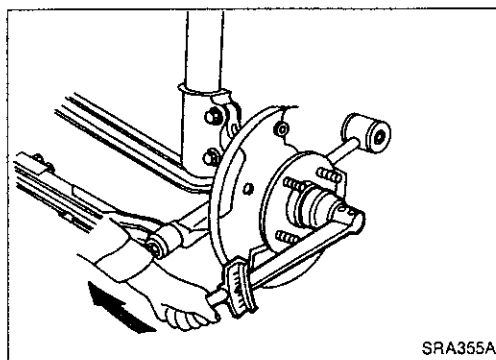

Installation

- Install wheel hub bearing.
- Tighten wheel bearing lock nut.
 $\text{Torque: } 186 - 255 \text{ N}\cdot\text{m}$
 $(19 - 26 \text{ kg}\cdot\text{m}, 137 - 188 \text{ ft}\cdot\text{lb})$
- Check that wheel bearings operate smoothly.

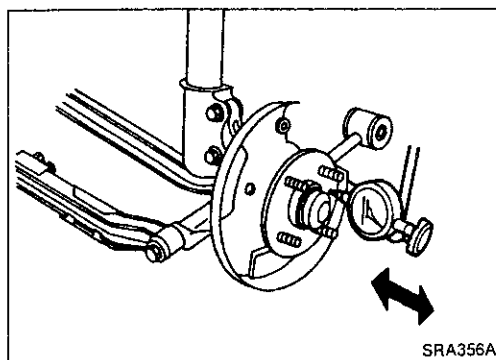


- Check wheel bearing axial end play.
Axial end play:
 $0.05 \text{ mm } (0.0020 \text{ in}) \text{ or less}$

When installing each rubber part, final tightening must be carried out under unladen condition* with tires on ground.

* Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

CAUTION:

Do not jack up at the parallel links, radius rods.

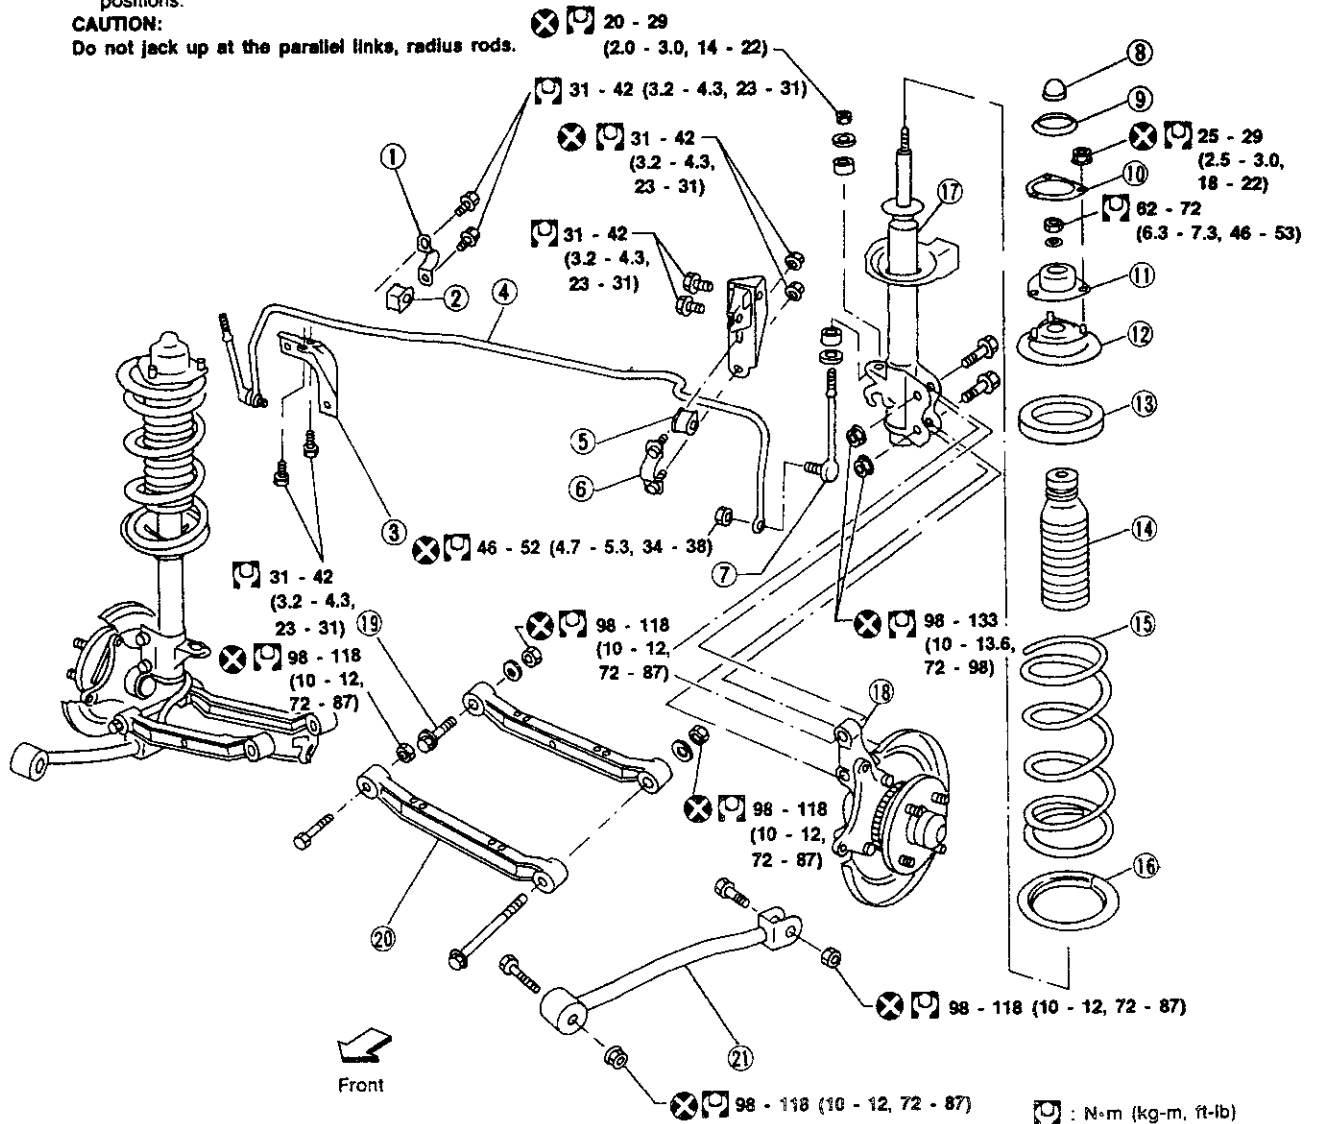


- ① Clamp
- ② Bushing
- ③ Bracket
- ④ Stabilizer bar
- ⑤ Bushing
- ⑥ Clamp
- ⑦ Connecting rod

- ⑧ Cap
- ⑨ Strut seal
- ⑩ Gasket
- ⑪ Strut mounting case
- ⑫ Upper seat
- ⑬ Rubber seat
- ⑭ Dust cover

- ⑮ Coil spring
- ⑯ Rubber seat
- ⑰ Strut assembly
- ⑱ Knuckle assembly
- ⑲ Adjusting bolt
- ⑳ Parallel link
- ㉑ Radius rod

SRA357A

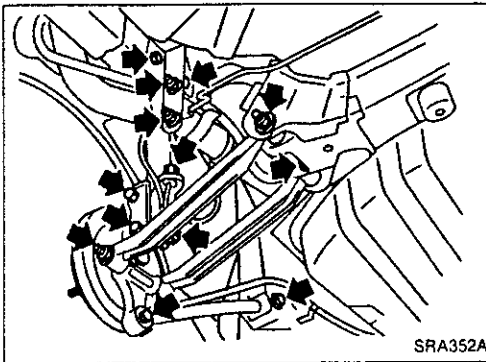



Removal and Installation

CAUTION:

Do not jack up at the parallel links or radius rods.

- Remove suspension assembly.
- 1. Remove brake caliper assembly and rotor.
- 2. Remove parallel link fixing bolt, radius rod fixing bolt, stabilizer fixing bolt and stabilizer connecting rod.
- 3. Remove rear seat and finisher. Refer to section BF.
- 4. Remove strut securing nuts (Upper side). Then pull out strut assembly.

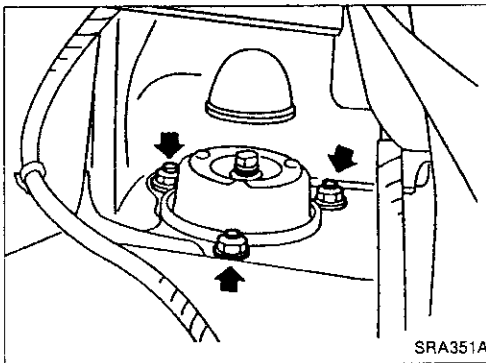


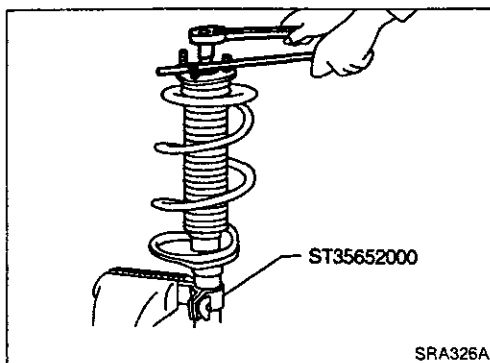


Disassembly

1. Set strut assembly in vise with attachment, then loosen piston rod lock nut.

Do not remove piston rod lock nut.

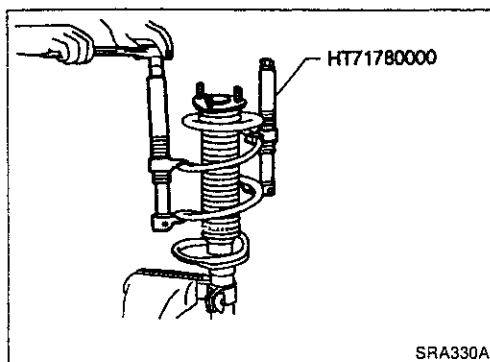

2. Compress spring with Tool so that the strut mounting insulator can be turned by hand.

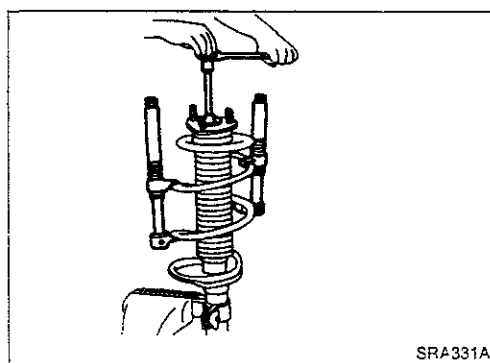

3. Remove piston rod lock nut.
4. Remove spring, complete with Tool.

Inspection

STRUT ASSEMBLY

- Check for smooth operation through a full stroke, both compression and extension.
- Check for oil leakage occurring on welded or gland packing portions.
- Check piston rod for cracks, deformation or other damage. Replace if necessary.

SPRING RUBBER SEAT AND DUST COVER

Check rubber parts for deterioration or cracks. Replace if necessary.

STRUT MOUNTING INSULATOR

- Check cemented rubber-to-metal portion for melting or cracks.
- Check rubber parts for deterioration.


Inspection (Cont'd)

COIL SPRING


Check for cracks, deformation or other damage.
Replace if necessary.

Assembly

1. Locate upper spring seat as shown.

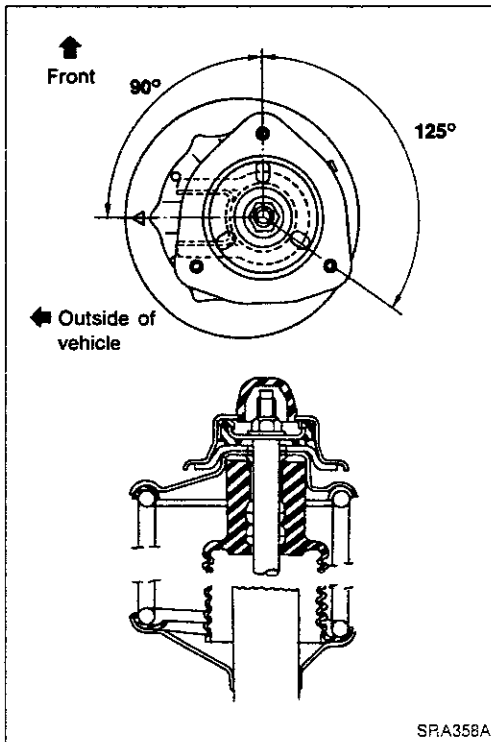


SPRA358A

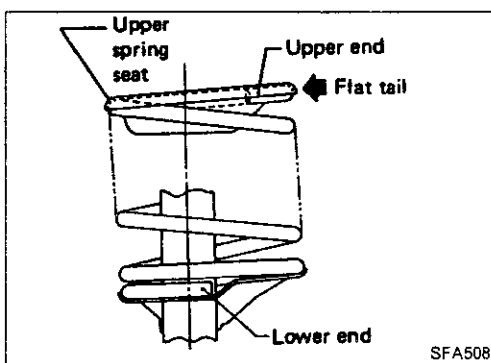


SFA508

2. When installing coil spring on strut, there must be 2 identification color marks on the lower side.
3. After placing coil spring in position on lower spring seat tighten lock nut, and release spring compressor gradually.

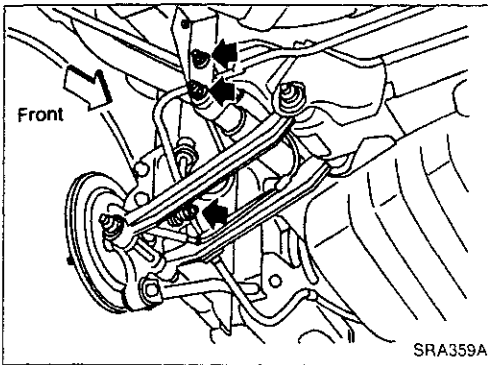


Removal and Installation

- Remove stabilizer bar.

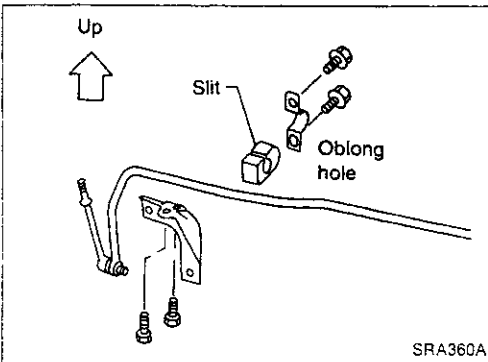


- When installing stabilizer, it must be positioned as shown.

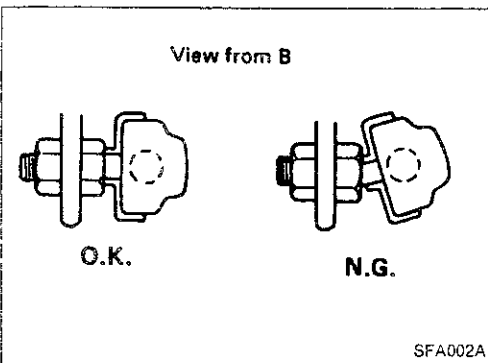

- Install stabilizer bar with ball joint socket properly placed.

When installing each rubber part, final tightening must be carried out under unladen condition* with tires on ground.


* Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

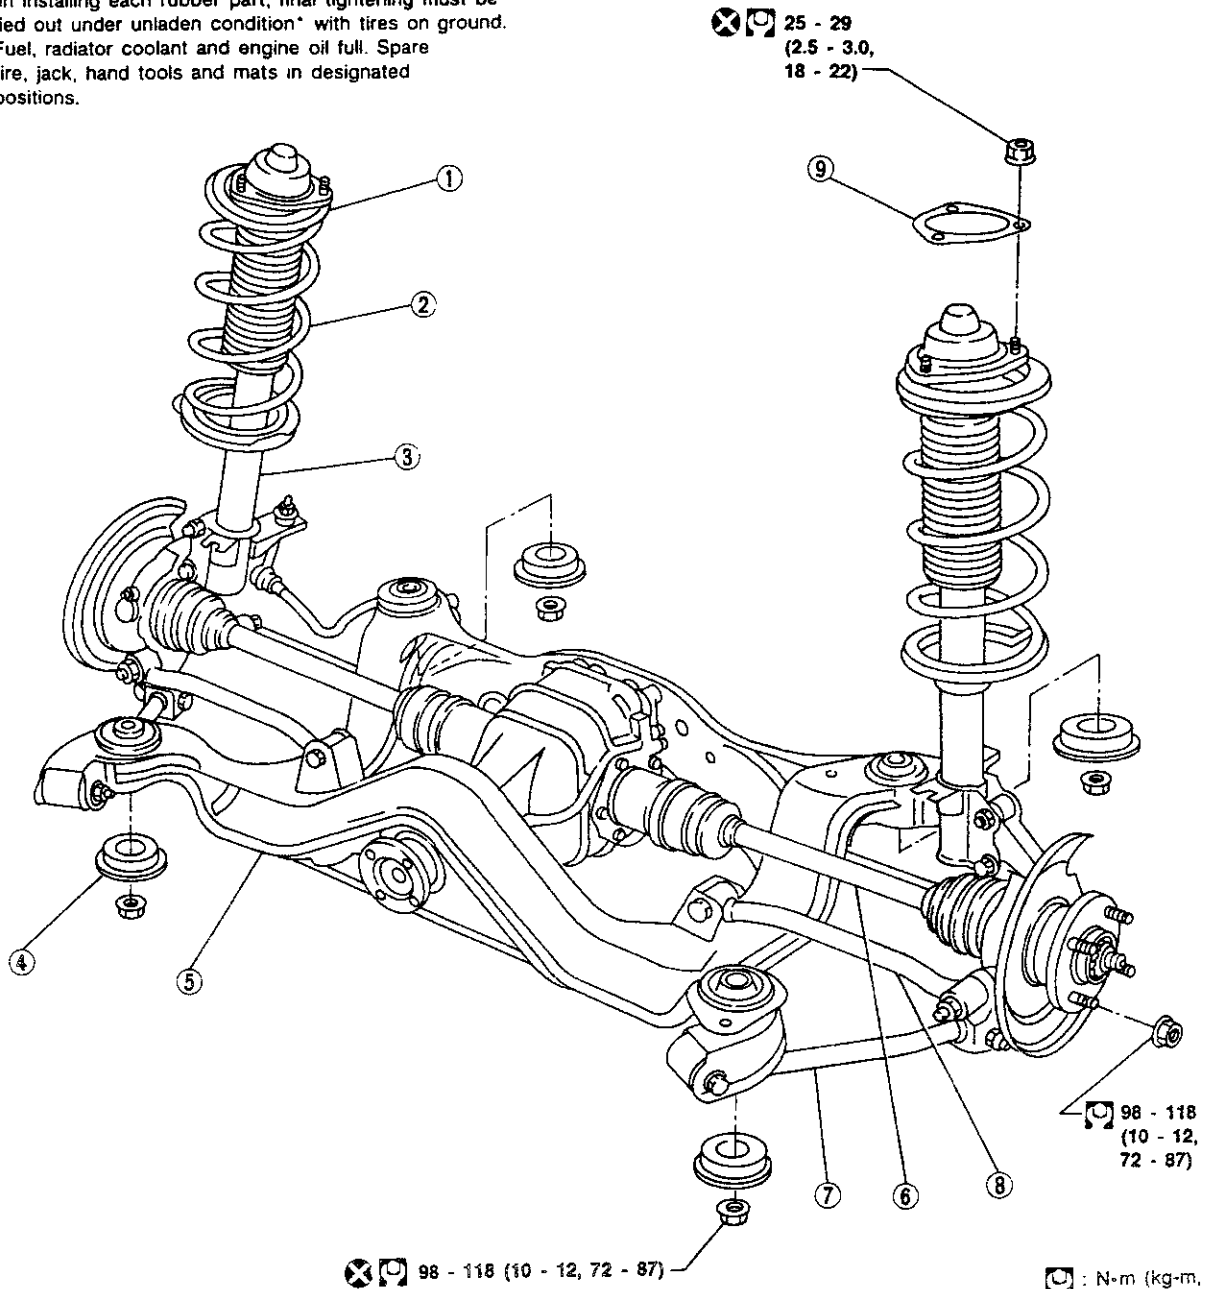

- ① Strut mounting insulator assembly
- ② Coil spring
- ③ Strut assembly
- ④ Stopper
- ⑤ Suspension member


- ⑥ Drive shaft
- ⑦ Radius rod
- ⑧ Parallel link
- ⑨ Gasket

SRA403A

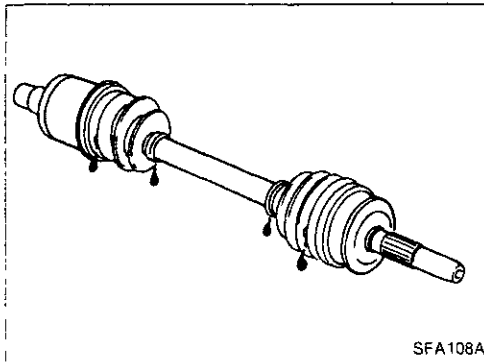

Drive Shaft

- Check for grease leakage or other damage.

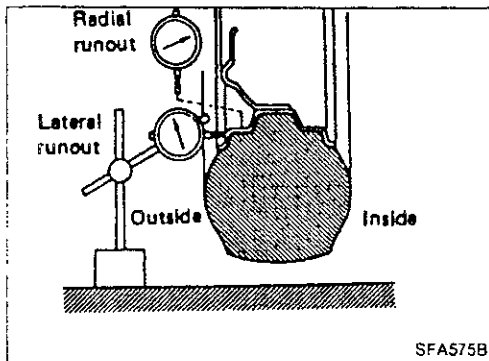

Rear Wheel Alignment

PRELIMINARY INSPECTION

Make following checks. Adjust, repair or replace if necessary.

- Check tires for wear and for improper inflation.
- Check rear wheel bearings for looseness.
- Check wheel runout.

Wheel runout: Refer to S.D.S. in FA section.

- Check that rear strut (shock absorber) works properly.
- Check rear axle and rear suspension parts for looseness.
- Check vehicle posture (Unladen*).

*: Fuel, radiator and engine oil full. Spare tire, jack, hand tools and mats in designated positions.


CAMBER

Camber is preset at factory and cannot be adjusted.

Camber:


–0°55' to 0°35'

- If the camber is not within specification, inspect and replace any damaged or worn rear suspension parts.

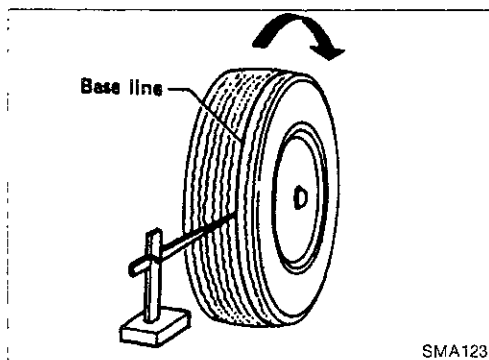

TOE-IN


1. Draw a base line across the tread.
- After lowering rear of vehicle, move it up and down to eliminate friction.

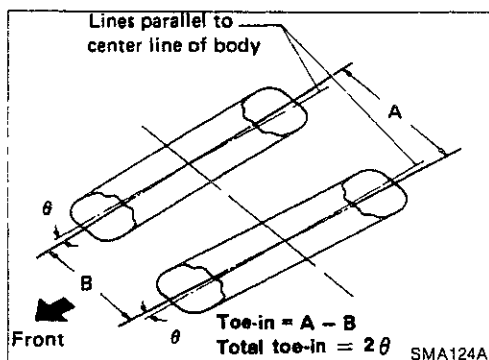

2. Measure toe-in.
- Measure distance "A" and "B" at the same height as hub center.

Total toe-in:

$A - B$	–1 to 3 mm (–0.04 to 0.12 in)
2θ	–6' to 18'

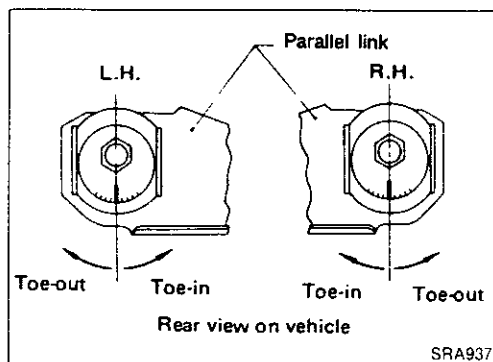Rear Wheel Alignment (Cont'd)

SRA937

3. Loosen adjusting pin fixing nuts.
4. Adjust toe-in by turning adjusting pins.

Toe changes about 2.0 mm (0.079 in) [One side] with each graduation of the adjusting pin.


5. Tighten adjusting pin fixing nuts to the specified torque.

: 98 - 118 N·m
(10 - 12 kg-m, 72 - 87 ft-lb)


Rear Axle and Rear Suspension Parts

Check axle and suspension parts for looseness, wear or damage.

- Shake each rear wheel to see excessive play.

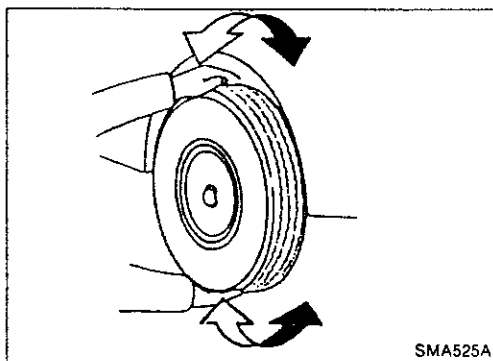


SMA525A

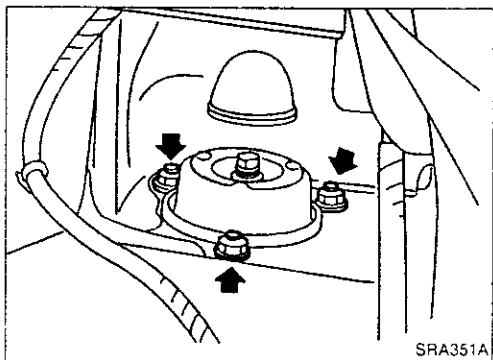


SRA351A

- Retighten all nuts and bolts to the specified torque.
Tightening torque: Refer to REAR SUSPENSION.

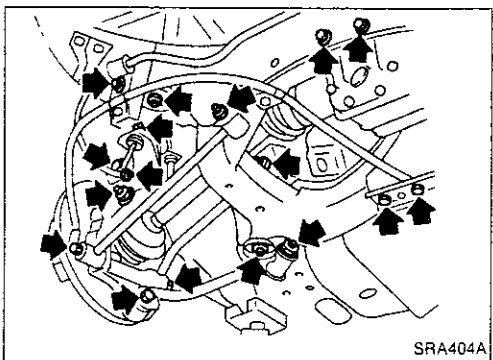


SRA404A

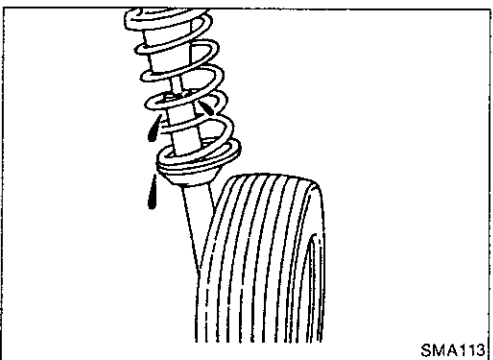


SMA113

- Check strut (shock absorber) for oil leakage or other damage.

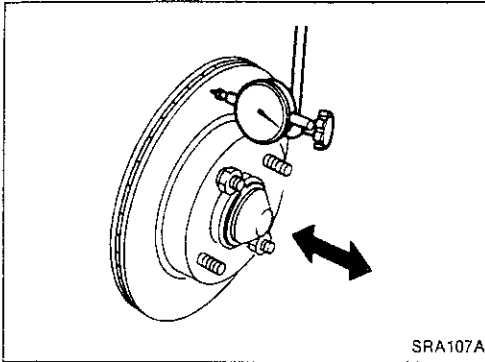


Rear Wheel Bearing

- Check axial end play.
Axial end play:
0.05 mm (0.0020 in) or less
- Check that wheel bearings operate smoothly.
- Check tightening torque of wheel bearing lock nut.
🔧: 196 - 275 N·m
(20 - 28 kg-m, 145 - 203 ft-lb)
- If there is any axial end play or wheel bearing does not turn smoothly, replace wheel bearing assembly. Refer to REAR AXLE — Wheel Hub.

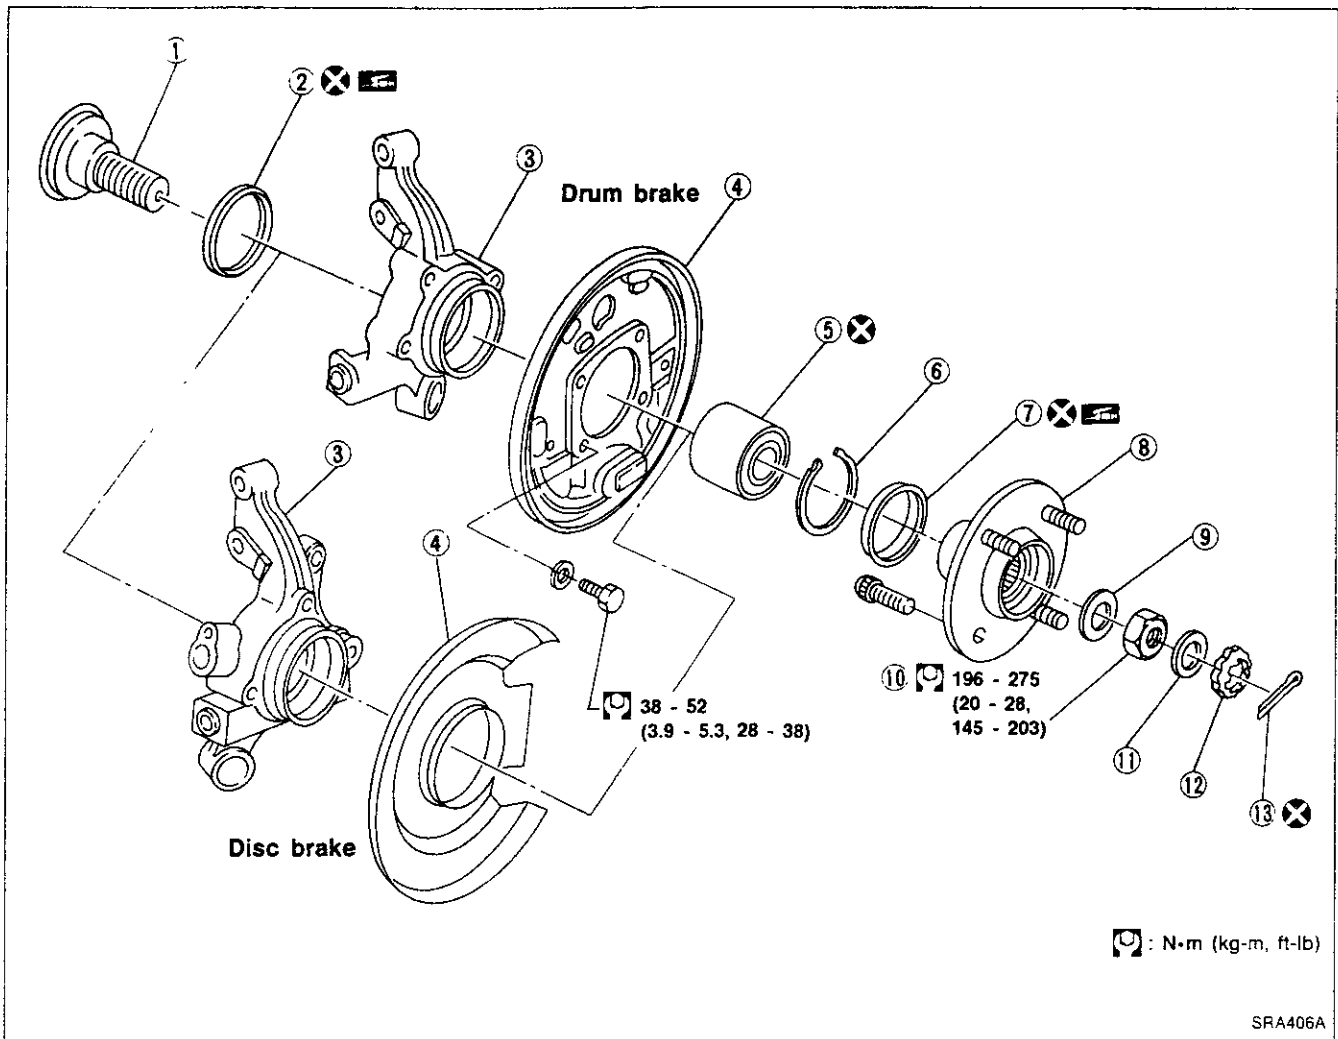

- | | |
|--------------------------|--------------------------|
| ① Drive shaft | ⑧ Wheel hub |
| ② Inner grease seal | ⑨ Washer |
| ③ Knuckle | ⑩ Wheel bearing lock nut |
| ④ Baffle plate | ⑪ Insulator |
| ⑤ Wheel bearing assembly | ⑫ Adjusting cap |
| ⑥ Snap ring | ⑬ Cotter pin |
| ⑦ Outer grease seal | |

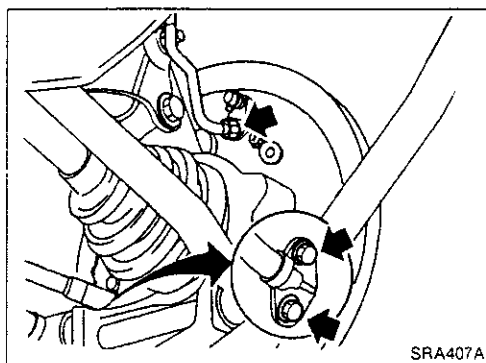


Removal

For drum brake models

- Remove wheel bearing lock nut.
- Disconnect brake hydraulic line and parking brake cable.

CAUTION:


Use Tool when removing or installing brake tubes.

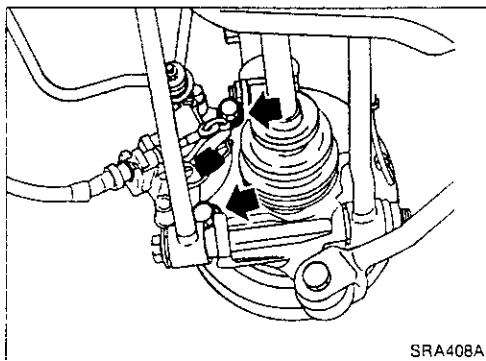


For disc brake models

- Remove wheel bearing lock nut.
- Remove brake caliper assembly and rotor.
- Remove parking brake cable.
- Remove A.B.S. sensor. (Models with A.B.S. only)


Brake hose need not be disconnected from brake caliper. Be careful not to depress brake pedal, or piston will pop out. Make sure brake hose is not twisted.

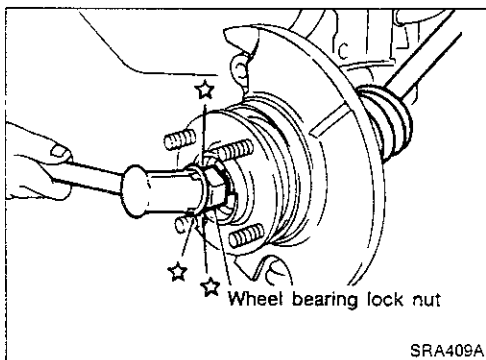

- Separate drive shaft from knuckle by slightly tapping it. Cover boots with waste cloth so as not to damage them when removing drive shaft.

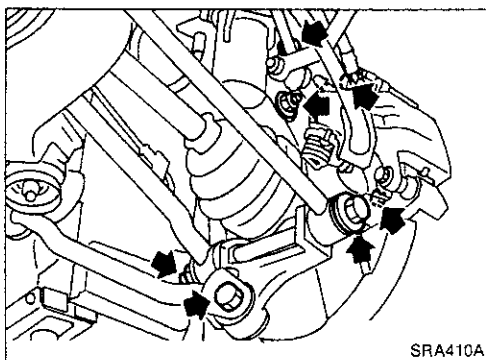

- Remove nuts and bolts.

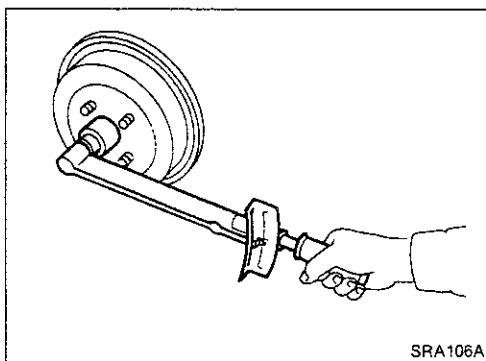


Installation

- Install axle housing with wheel hub.
- Tighten wheel bearing lock nut.
 [T]: 196 - 275 N·m (20 - 28 kg-m, 145 - 203 ft-lb)

Installation (Cont'd)

- Check wheel bearing axial end play.
Axial end play: 0.05 mm (0.0020 in) or less

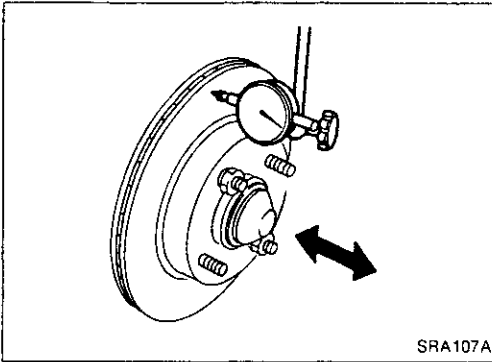


Disassembly

CAUTION:

When removing wheel hub or wheel bearing from knuckle, replace wheel bearing assembly (outer race, inner races and grease seal) with a new one.


WHEEL HUB

- Drive out hub with inner race (Outside) from knuckle with Tool.

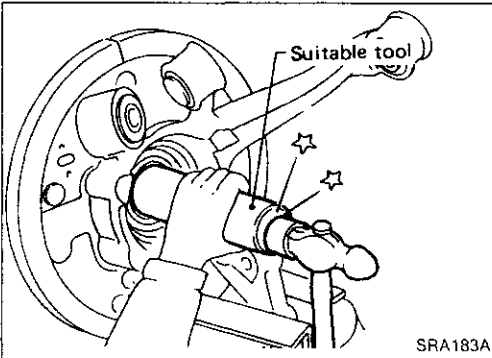


WHEEL BEARING


- Drive out bearing inner race (Outside), then remove outer grease seal.

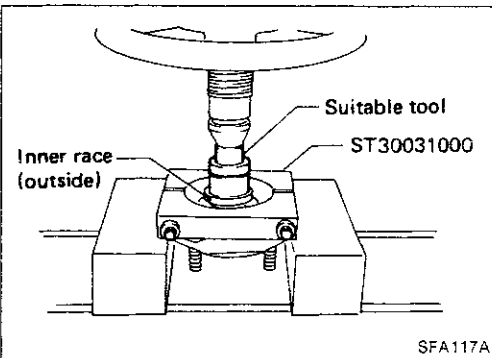

- Drive out bearing inner race (Inside), inner and outer grease seals.

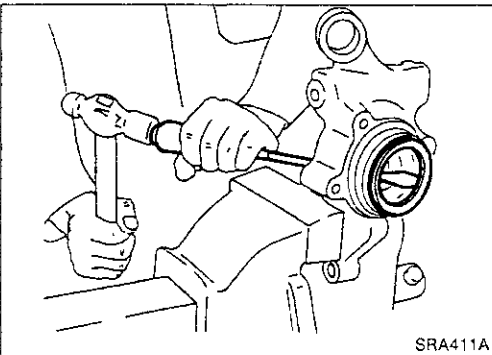


- Remove snap rings.

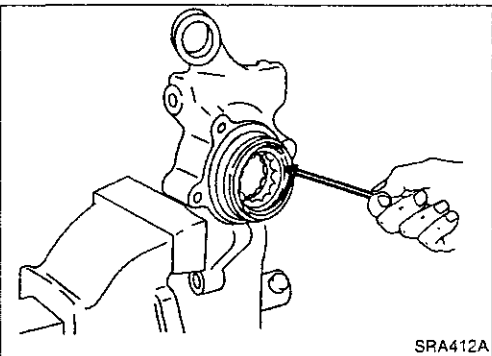

Disassembly (Cont'd)

- Drive out bearing outer race.

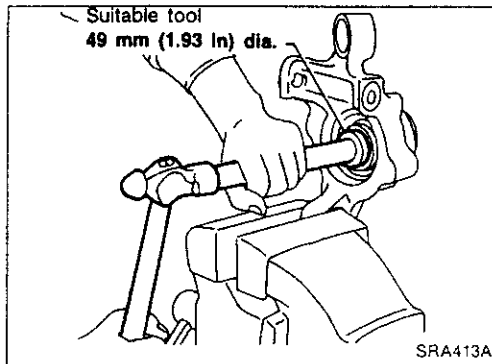

Inspection

WHEEL HUB AND KNUCKLE

- Check wheel hub for cracks by using a magnetic exploration or dyeing test.
- Check rubber bushings for wear or other damage.

If necessary, replace radius rod bushing with a suitable tool.

SNAP RING

Check snap rings for wear or cracks.

Replace if necessary.

Assembly



1. Press new wheel bearing assembly into knuckle.

Maximum load P:


29 kN (3 t, 3.3 US ton, 3.0 Imp ton)

CAUTION:

- Do not press inner race of wheel bearing assembly.
 - Do not apply oil or grease to mating surfaces of wheel bearing outer race and knuckle.
2. Install snap ring into groove of knuckle.

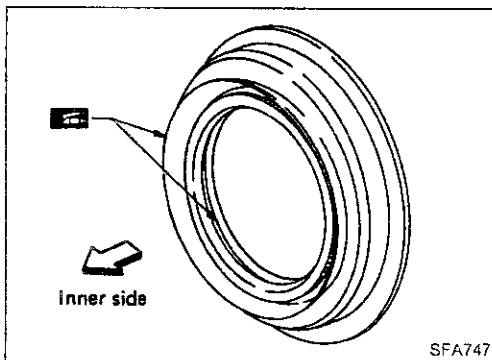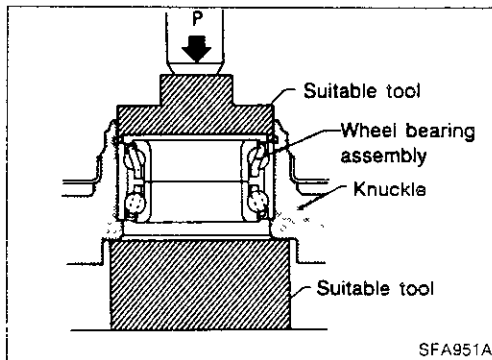


3. Pack grease seal lip with multi-purpose grease.

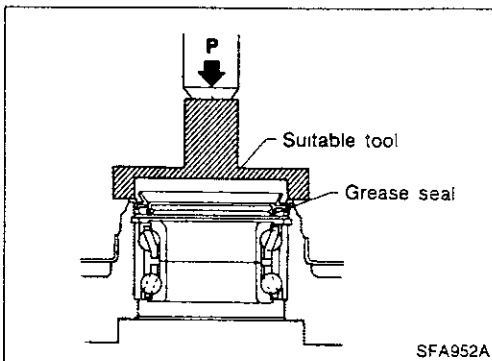

4. Install outer grease seal.

Assembly (Cont'd)

5. Install inner grease seal.

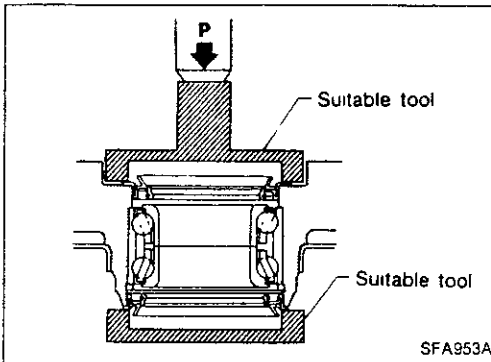


6. Press wheel hub into knuckle.

Maximum load P:

29 kN (3 ton, 3.3 US ton, 3.0 Imp ton)

Be careful not to damage grease seal.

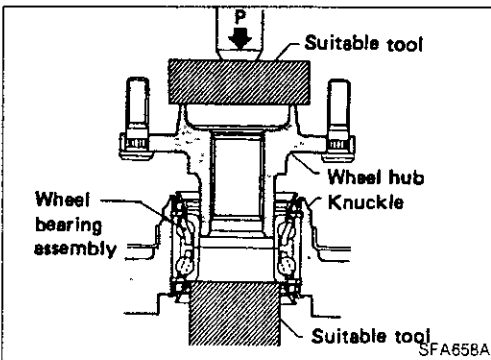


7. Check bearing operation.

a. Add load P with press.

Load P:


34.3 - 49.0 kN


(3.5 - 5.0 ton, 3.9 - 5.5 US ton, 3.44 - 4.92 Imp ton)

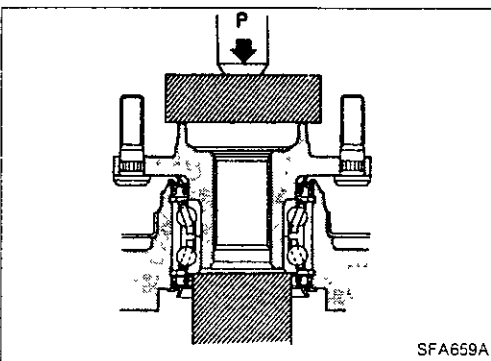

b. Spin knuckle several turns in both directions.


c. Make sure that wheel bearings operate smoothly.

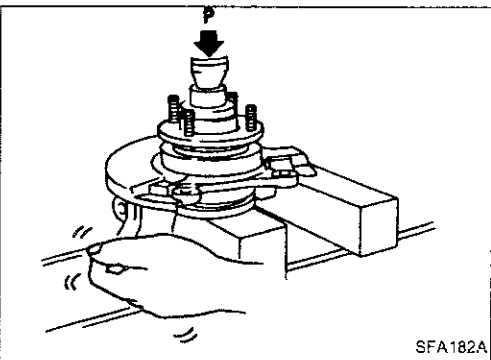

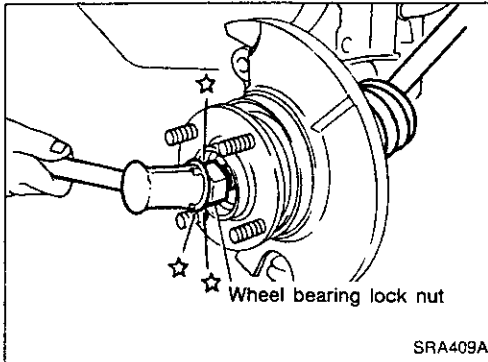


Removal and Installation

- Remove wheel bearing lock nut.
 - Separate drive shaft from knuckle by slightly tapping it.
- Cover boots with cloth so as not to damage them when removing drive shaft.

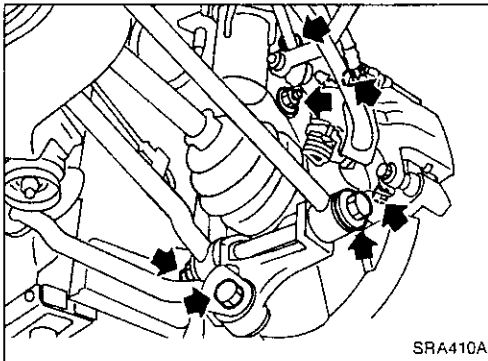

- Remove parallel link and radius rod fixing bolts.

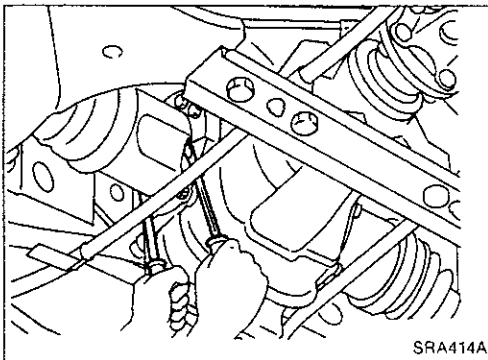

- Extract drive shaft from final drive gear by prying it with a suitable tool.

CAUTION:

Be careful not to damage oil seal of final drive gear. Make sure that circular clip is properly meshed with side gear and will not come out.

Components


Circular clip:

Make sure circular clip is properly installed with side gear (final drive side) and joint assembly (wheel side), and will not come out.

Drive shaft joint grease:

Use Nissan Genuine Grease or equivalent after every overhaul.

Wheel side (ZF80, ZF90)

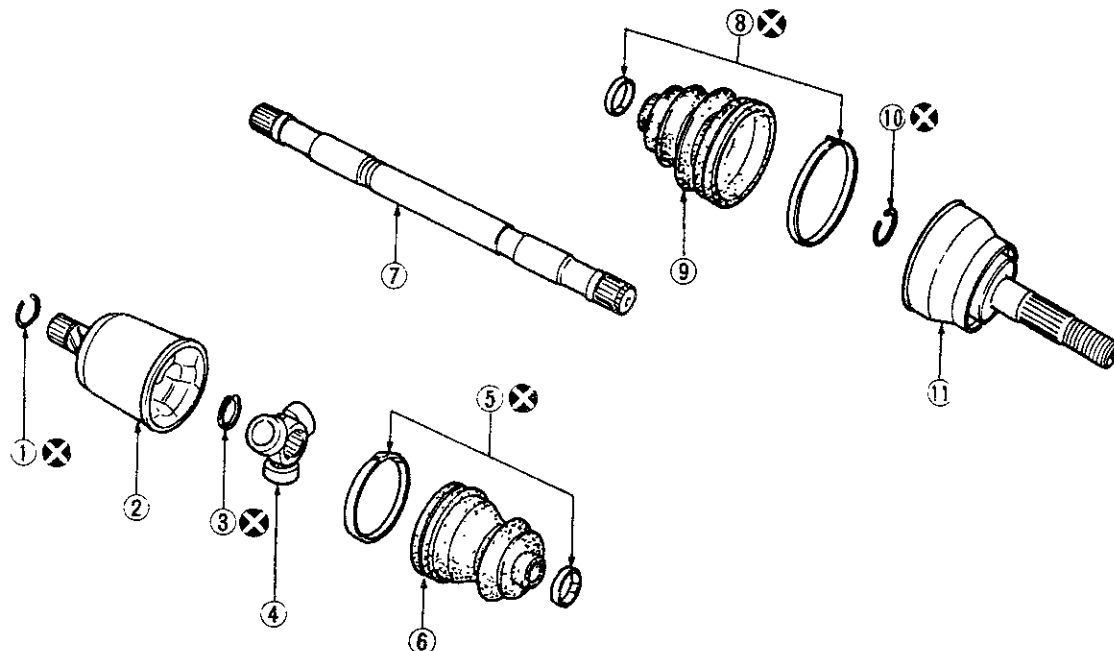


Final drive side (TS70C, TS79C)

Be careful not to damage boots. Use suitable protector or cloth during removal and installation.

SRA415A

- | | | |
|-----------------------|---------------|------------------|
| ① Circular clip | ⑤ Boot band | ⑨ Boot |
| ② Slide joint housing | ⑥ Boot | ⑩ Circular clip |
| ③ Snap ring | ⑦ Drive shaft | ⑪ Joint assembly |
| ④ Spider assembly | ⑧ Boot band | |

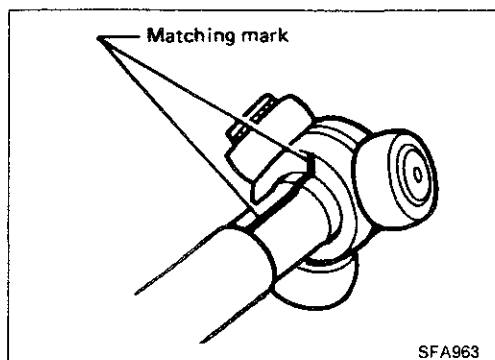

SFA963

Disassembly

FINAL DRIVE SIDE (TS70C, TS79C)

1. Remove boot bands.
2. Put matchmarks on slide joint housing and drive shaft before separating joint assembly.
3. Put matchmarks on spider assembly and drive shaft.

Disassembly (Cont'd)



4. Pry off snap ring, then remove spider assembly.

CAUTION:

Do not disassemble spider assembly.

5. Draw out boot.

Cover drive shaft serration with tape so as not to damage the boot.

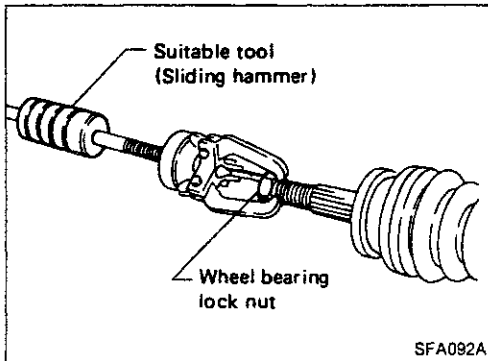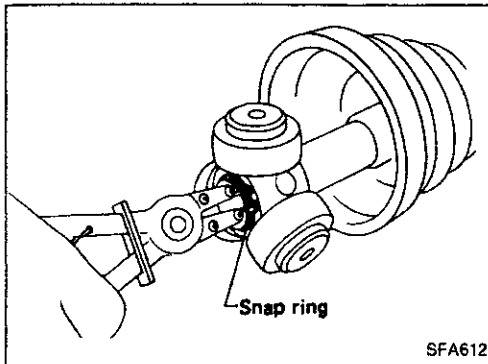

WHEEL SIDE (ZF80, ZF90)

CAUTION:

The joint on the wheel side cannot be disassembled.

- Before separating joint assembly, put matchmarks on drive shaft and joint assembly.
- Separate joint assembly with a suitable tool.

Be careful not to damage threads on drive shaft.

- Remove boot bands.

Inspection

Thoroughly clean all parts in cleaning solvent, and dry with compressed air. Check parts for evidence of deformation or other damage.

DRIVE SHAFT


Replace drive shaft if it is twisted or cracked.

BOOT

Check boot for fatigue, cracks, or wear. Replace boot with new boot bands.

JOINT ASSEMBLY (Final drive side)

- Check spider assembly for bearing, roller and washer damage. Replace spider assembly if necessary.
- Check housing for any damage. Replace housing set and spider assembly, if necessary.

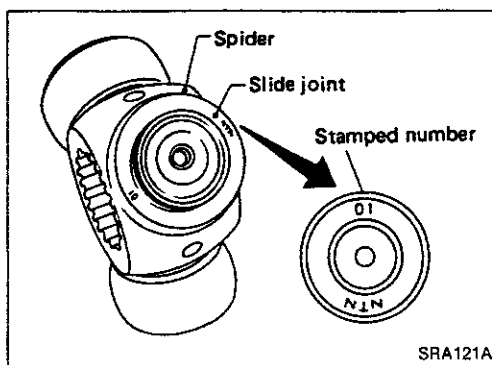

Inspection (Cont'd)

- When replacing only spider assembly, select a new spider assembly from among those listed in table below. Ensure the number stamped on sliding joint is the same as that stamped on new part.

Housing alone cannot be replaced. It must be replaced together with spider assembly.

TS70C

Stamped number	Part No.
00	39720-51E00
01	39720-51E01
02	39720-51E02
03	39720-51E03

TS79C

Stamped number	Part No.
00	39720-61E00
01	39720-61E01
02	39720-61E02
03	39720-61E03
04	39720-61E04
05	39720-61E05
06	39720-61E06

JOINT ASSEMBLY (Wheel side)

Replace joint assembly if it is deformed or damaged.


Assembly

- After drive shaft has been assembled, ensure that it moves smoothly over its entire range without binding.
- Use Nissan Genuine Grease or equivalent after every overhaul.


Assembly (Cont'd)

WHEEL SIDE (ZF80, ZF90)

1. Install boot and new small boot band on drive shaft.
Cover drive shaft serration with tape so as not to damage boot during installation.

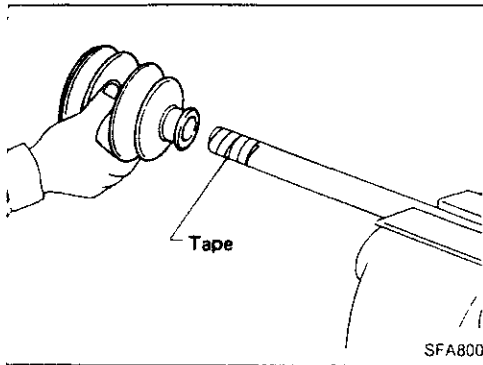

2. Set joint assembly onto drive shaft by lightly tapping it. Install joint assembly securely, ensuring marks which were made during disassembly are properly aligned.

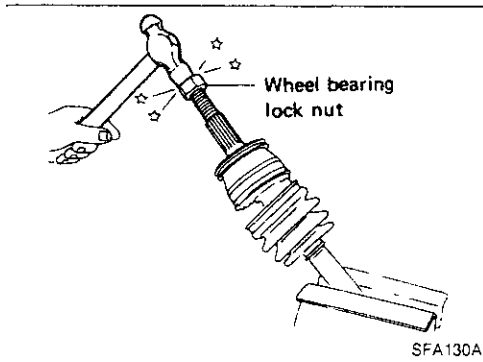


3. Pack drive shaft with specified amount of grease.

Specified amount of grease:

ZF80: 90 - 100 g (3.17 - 3.53 oz)

ZF90: 160 - 170 g (5.64 - 6.00 oz)

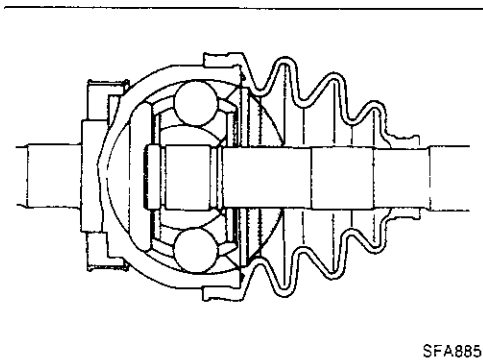


4. Set boot so that it does not swell and deform when its length is "L₁".

Length "L₁":

ZF80: 90.5 - 92.5 mm (3.563 - 3.642 in)


ZF90: 96 - 98 mm (3.78 - 3.86 in)

Make sure that boot is properly installed on the drive shaft groove.

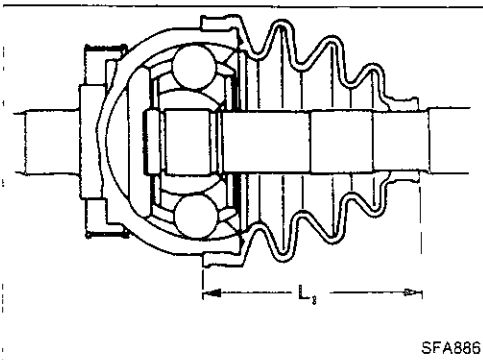

Assembly (Cont'd)

- Lock new larger and smaller boot bands securely with a suitable tool.

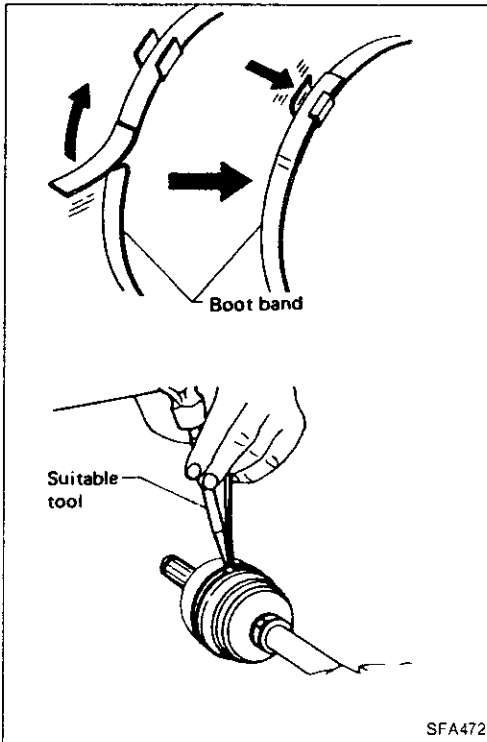


SFA472

FINAL DRIVE SIDE (TS70C, TS79C)


- Install boot and new small boot band on drive shaft.

Cover drive shaft serration with tape so as not to damage boot during installation.

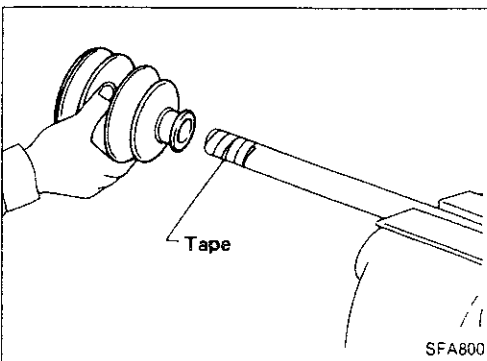

SFA800

- Install spider assembly securely, making sure marks are properly aligned.
- Press-fit with spider assembly serration chamfer facing shaft.
- Install new snap ring.

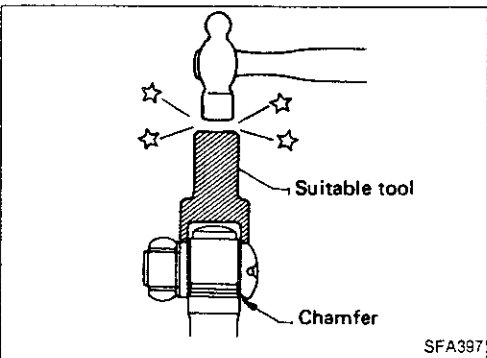

SFA397

- Pack drive shaft with specified amount of grease.

Specified amount of grease:

TS70C: 185 - 195 g (6.52 - 6.88 oz)


TS79C: 225 - 235 g (7.94 - 8.29 oz)

- Install slide joint housing.
- Set boot so that it does not swell and deform when its length is " L_2 ".

Length " L_2 ":

TS70C: 95.5 - 97.5 mm (3.760 - 3.839 in)

TS79C: 101.5 - 103.5 mm (4.00 - 4.07 in)

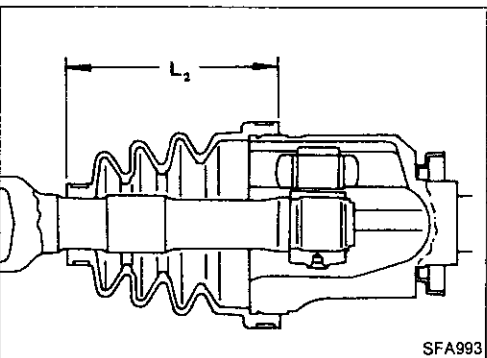


SFA993

Assembly (Cont'd)


Make sure that boot is properly installed on the drive shaft groove.

7. Lock new larger and smaller boot bands securely with a suitable tool.

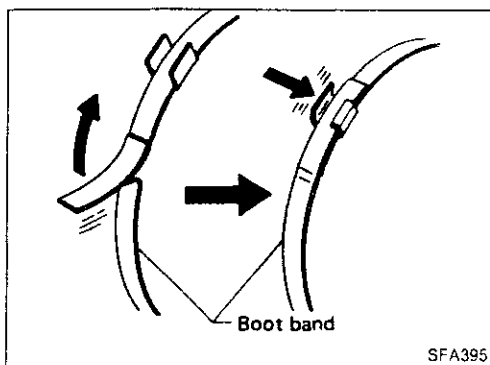


REAR SUSPENSION

4WD

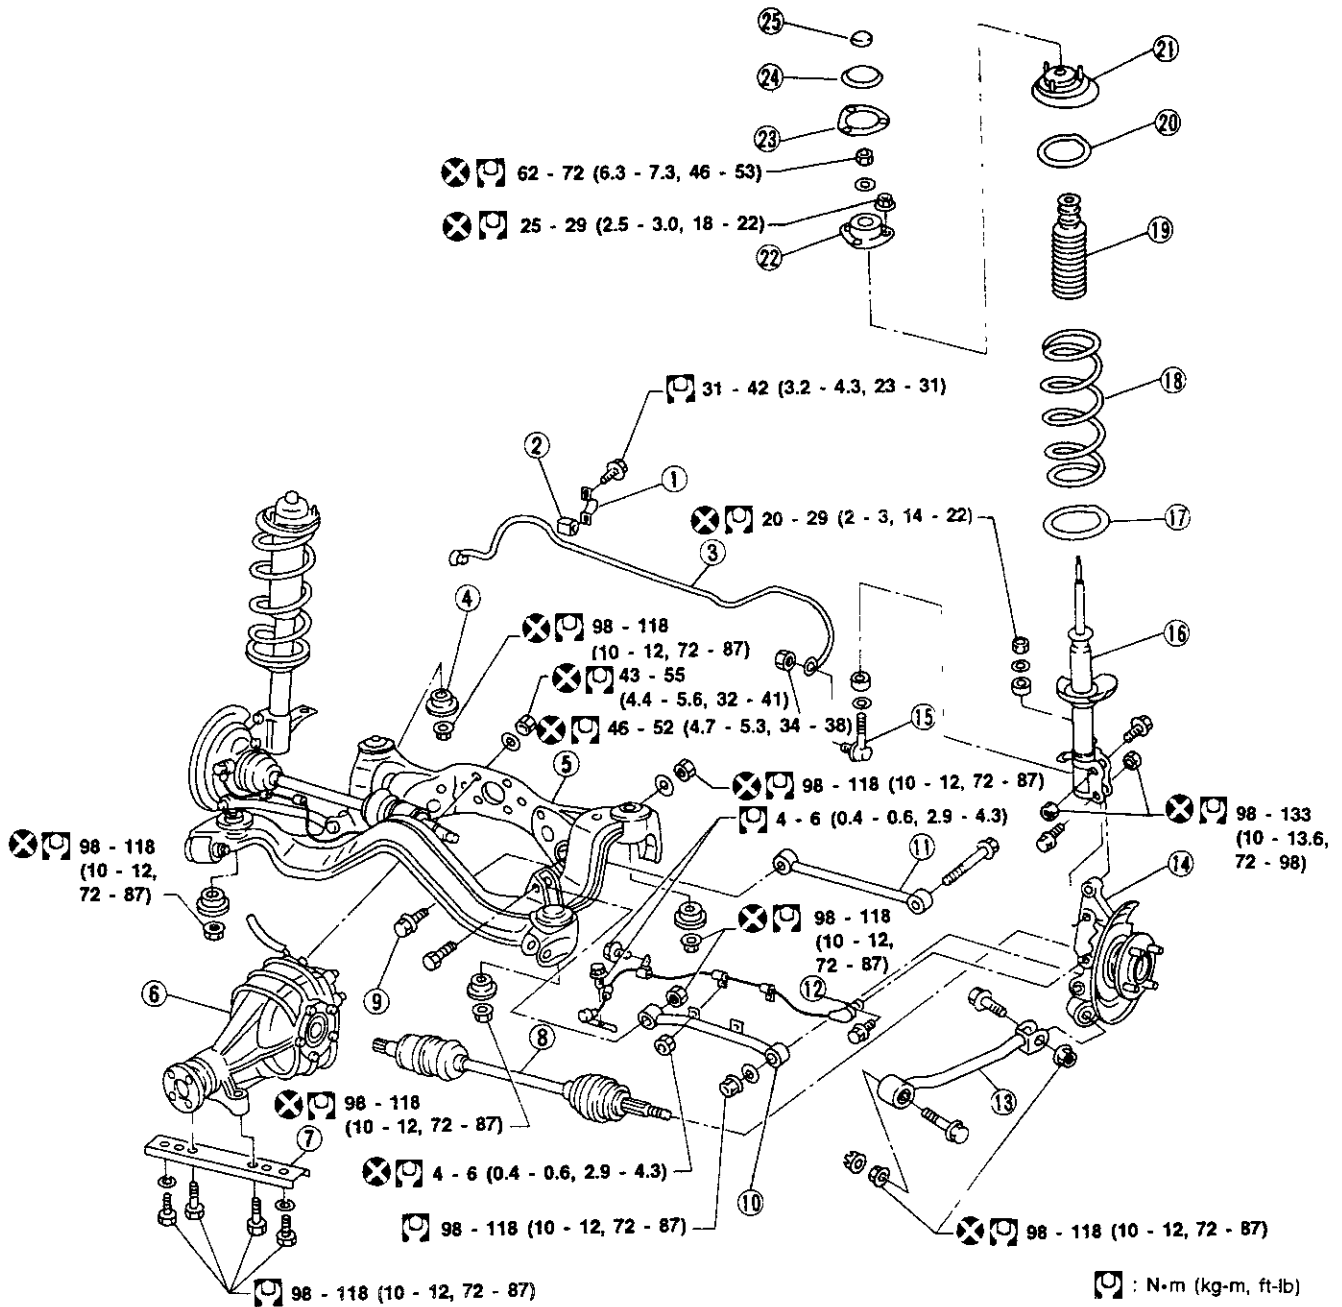

SRA416A

- | | | |
|-----------------------------------|-------------------------|-----------------------|
| ① Clamp | ⑩ Parallel link (Front) | ⑱ Coil spring |
| ② Bushing | ⑪ Parallel link (Rear) | ⑲ Dust cover |
| ③ Stabilizer bar | ⑫ A.B.S. sensor | ⑳ Rubber seat |
| ④ Stopper | ⑬ Radius rod | ㉑ Upper seat |
| ⑤ Suspension member | ⑭ Knuckle assembly | ㉒ Strut mounting case |
| ⑥ Rear differential gear assembly | ⑮ Connecting rod | ㉓ Gasket |
| ⑦ Bracket | ⑯ Strut assembly | ㉔ Strut seal |
| ⑧ Drive shaft | ⑰ Rubber seat | ㉕ Cap |
| ⑨ Adjusting bolt | | |

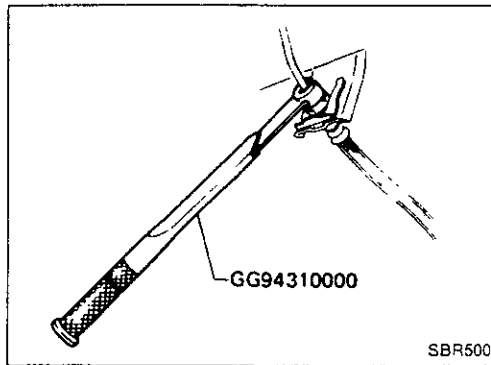


Removal and Installation


CAUTION:

Do not jack up at the parallel links or radius rods.


- Disconnect brake hydraulic line and parking brake cable at equalizer.

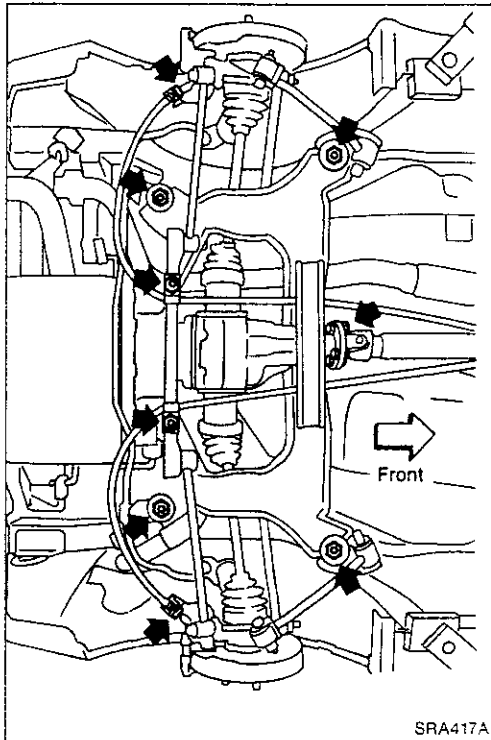

- Remove suspension assembly.
 1. Remove brake caliper assembly and rotor.
 2. Remove parallel link fixing bolt, radius rod fixing bolt, stabilizer fixing bolt and stabilizer connecting rod.

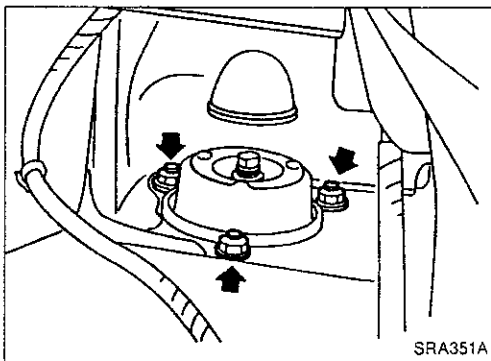


3. Remove rear seat and finisher. Refer to section BF.
4. Remove strut securing nuts (Upper side). Then pull out strut assembly.

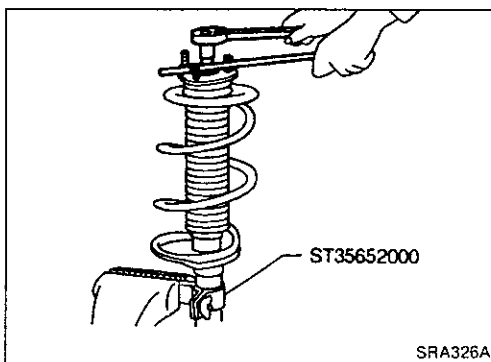


Disassembly

1. Set strut assembly in vise with attachment, then loosen piston rod lock nut.

Do not remove piston rod lock nut.

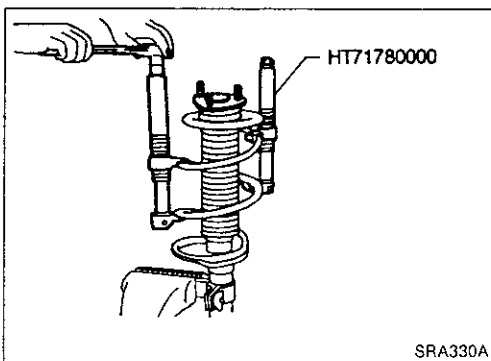

2. Compress spring with Tool so that the strut mounting insulator can be turned by hand.

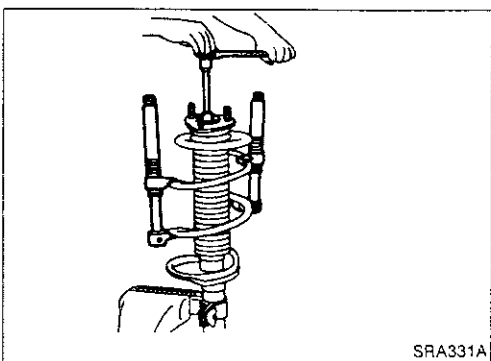

3. Remove piston rod lock nut.
4. Remove spring, complete with Tool.

Inspection

STRUT ASSEMBLY

- Check for smooth operation through a full stroke, both compression and extension.
- Check for oil leakage occurring on welded or gland packing portions.
- Check piston rod for cracks, deformation or other damage. Replace if necessary.

SPRING RUBBER SEAT AND DUST COVER

Check rubber parts for deterioration or cracks. Replace if necessary.

STRUT MOUNTING INSULATOR

- Check cemented rubber-to-metal portion for melting or cracks.
- Check rubber parts for deterioration.



Inspection (Cont'd)

COIL SPRING




Check for cracks, deformation or other damage.
Replace if necessary.

Assembly

1. Locate upper spring seat as shown.

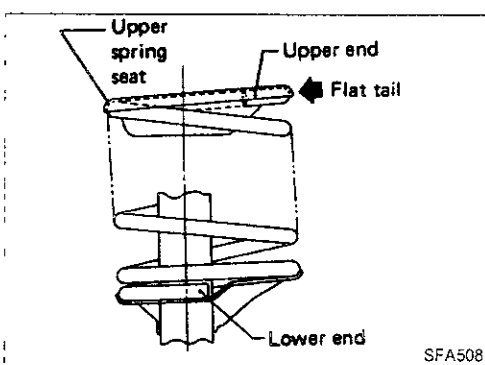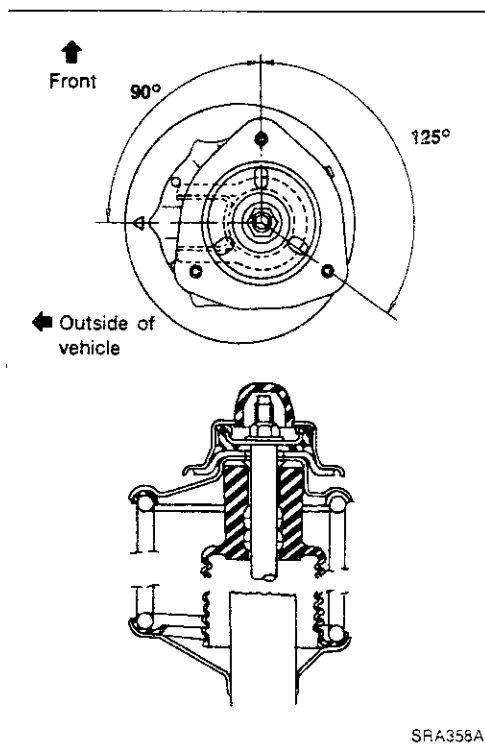

2. When installing coil spring on strut, there must be 2 identification color marks on the lower side.
3. After placing coil spring in position on lower spring seat tighten lock nut, and release spring compressor gradually.

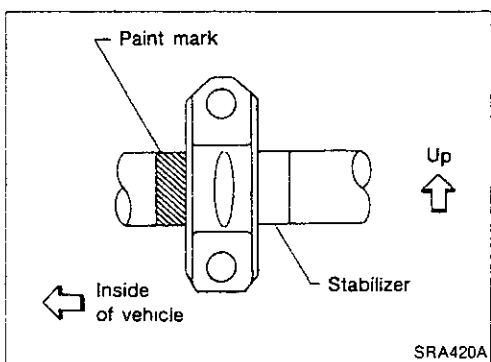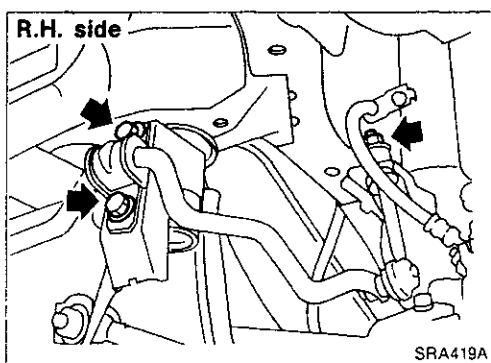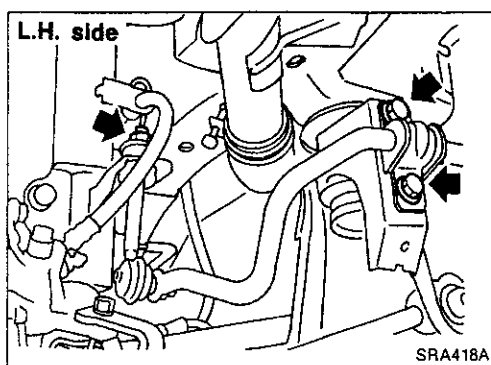

Removal and Installation

- Remove stabilizer bar.
- When installing stabilizer, make sure that paint mark and clamp face in their correct directions.

General Specifications — Model B13

SUSPENSION

Suspension type	Strut type parallel link independent suspension
-----------------	---

COIL SPRING

Except for Middle East & Europe

Applied model	Sedan								Coupe	
	E10S	GA13, 14, 16DS				GA16DE		CD17		
		S/S* model		Except S/S* model						
		Standard	Option	Standard	Option	Standard	Option	Standard		Option
Wire diameter mm (in)	11 2 (0.441)		11 1 (0.437)				11 2 (0.441)		11 1 (0.437)	10.7 (0.421)
Coil diameter mm (in)	130 (5.12)									
Free length mm (in)	321 (12.64)		341 (13.43)	311 (12.24)	331 (13.03)	341 (13.43)	321 (12.64)		331 (13.03)	311 (12.24)
Spring constant N·m (kg-m, ft-lb)	18 (1.8, 13)		16 (1.6, 12)	18 (1.8, 13)	16 (1.6, 12)		18 (1.8, 13)		16 (1.6, 12)	
Identification color	Pink × 2 Light green × 1		Pink × 2, Pink × 1	Light green × 2, Light green × 1	Pink × 2, Light blue × 1	Pink × 2, Pink × 1	Pink × 2, Light green × 1		Pink × 2, Light blue × 1	Light green × 2, Yellow × 1

S/S*: Super Saloon

For Middle East

Applied model	Sedan			Coupe & T-bar roof	
	Except S/S* model		S/S* model	Without A.B.S.	With A.B.S.
	Option	Standard	Option		
Wire diameter mm (in)	11.1 (0.437)	11.2 (0.441)	11.1 (0.437)	10.7 (0.421)	11.1 (0.437)
Coil diameter mm (in)	130 (5.12)				
Free length mm (in)	331 (13.03)	321 (12.64)	341 (13.43)	321 (12.64)	301 (11.85)
Spring constant N·m (kg-m, ft-lb)	16 (1.6, 12)	18 (1.8, 13)	16 (1.6, 12)	16 (1.6, 12)	18 (1.8, 13)
Identification color	Pink × 2, Light blue × 1	Pink × 2, Light green × 1	Pink × 2, Pink × 1	Light green × 2, Light blue × 1	Light green × 2, Purple × 1

S/S*: Super Saloon

For Europe

Applied model	Coupe		T-bar roof	
	GA16DS	SR20DE	GA16DS	SR20DE
Wire diameter mm (in)	10.7 (0.421)	11.1 (0.437)	10.7 (0.421)	11.1 (0.437)
Coil diameter mm (in)	130 (5.12)			
Free length mm (in)	311 (12.24)	301 (11.85)	321 (12.64)	311 (12.24)
Spring constant N·m (kg-m, ft-lb)	16 (1.6, 12)	18 (1.8, 13)	16 (1.6, 12)	18 (1.8, 13)
Identification color	Light green × 2, Yellow × 1	Light green × 2, Purple × 1	Light green × 2, Light blue × 1	Light green × 2, Light green × 1

General Specifications — Model B13 (Cont'd)

STRUT

Except for Middle East & Europe

Applied model	Sedan		Coupe
	Hard suspension model for GA16D		
Strut type	Double-acting hydraulic		
Damping force [at 0.3 m (1.0 ft)/sec.] N (kg, lb)			
Expansion	539 - 736 (55 - 75, 121 - 165)	696 - 951 (71 - 97, 157 - 214)	
Compression	226 - 363 (23 - 37, 51 - 82)	314 - 490 (32 - 50, 71 - 110)	
Piston rod diameter	mm (in)	18 (0.71)	

For Middle East & Europe

Applied model	Middle East		Europe		
			GA16DS		SR20DE
	Standard	Option	Without A.B.S.	With A B.S.	
Strut type	Double-acting hydraulic				
Damping force [at 0.3 m (1.0 ft)/sec] N (kg, lb)					
Expansion	539 - 736 (55 - 75, 121 - 165)	539 - 736 (55 - 75, 121 - 165)	412 - 579 (42 - 59, 93 - 130)	412 - 579 (42 - 59, 93 - 130)	490 - 686 (50 - 70, 110 - 154)
Compression	226 - 363 (23 - 37, 51 - 82)	226 - 363 (23 - 37, 51 - 82)	265 - 422 (27 - 43, 60 - 95)	265 - 422 (27 - 43, 60 - 95)	324 - 500 (33 - 51, 73 - 112)
Piston rod diameter mm (in)	18 (0.71)				

STABILIZER BAR

Applied model	Except Europe	Europe			
		R.H.D.		L.H.D.	
		GA16DS	SR20DE	GA16DS	SR20DE
Bar diameter mm (in)	10 (0.39)	9 (0.35)	14 (0.55)	10 (0.39)	14 (0.55)
Identification color	Orange	Red	White	Orange	White

Inspection and Adjustment — Model B13

WHEEL ALIGNMENT (Unladen*1)

Applied model		Coupe	Sedan
Camber	degree	-1°55' to -0°25'	
Toe-in	mm (in)	-1 to 3 (-0.04 to 0.12)	
Total toe-in	degree	-6' to 18'	

*1. Fuel, radiator coolant and engine oil full

Spare tire, jack, hand tools and mats in designated positions

WHEEL BEARING

Brake		Drum	Disc
Wheel bearing axial end play	mm (in)	Less than 0.05 (0.0020)	
Wheel bearing lock nuts			
Tightening torque		186 - 255	
	N·m (kg-m, ft-lb)	(19 - 26, 137 - 188)	
Wheel bearing preload			
At wheel center		0.18 - 0.94	
	N·m (kg-cm, in-lb)	(1.8 - 9.6, 1.6 - 8.3)	
At wheel hub bolt		3.9 - 18.6	
	N (kg, lb)	(0.4 - 1.9, 0.9 - 4.2)	

General Specifications — Model N14

SUSPENSION

Suspension type	Strut type parallel link independent suspension
-----------------	---

COIL SPRING

Except for Europe

Applied model	Without A B S.	With A B S.
Wire diameter mm (in)	11.2 (0.441)	11.4 (0.449)
Coil diameter mm (in)	130 (5.12)	
Free length mm (in)	351 (13.82)	331 (13.03)
Spring constant N·m (kg-m, ft-lb)	16 (1.6, 12)	18 (1.8, 13)
Identification color	Purple × 2, Orange × 1	Pink × 1, Purple × 2

For Europe

Applied model	2WD								4WD	
	3-door Hatchback			5-door Hatchback			4-door Sedan		GA16DS	SR20DET
	GA14DS & CD20	GA16DS	SR20DE	GA14DS	GA16DS & CD20	SR20DE	GA14DS	GA16DS & CD20		
Wire diameter mm (in)	11.1 (0.437)	11.1 (0.437)	11.2 (0.441)	11.1 (0.437)	11.2 (0.441)	11.5 (0.453)	11.1 (0.437)	11.1 (0.437)	11.6 (0.457)	9.7 - 11.9 (0.382 - 0.469)
Coil diameter mm (in)	130 (5.12)									
Free length mm (in)	331 (13.03)	341 (13.43)	321 (12.64)	341 (13.43)	351 (13.82)	341 (13.43)	331 (13.03)	341 (13.43)	351 (13.82)	314 (12.36)
Spring constant N·m (kg-m, ft-lb)	16 (1.6, 12)	16 (1.6, 12)	18 (1.8, 13)	16 (1.6, 12)	16 (1.6, 12)	18 (1.8, 13)	16 (1.6, 12)	16 (1.6, 12)	20 (2.0, 14)	14 - 24 (1.4 - 2.4, 10 - 17)
Identification color	Pink × 2, Light blue × 1	Pink × 2, Pink × 1	Pink × 2, Light green × 1	Pink × 2, Pink × 1	Purple × 2, Orange × 1	Purple × 2, White × 1	Pink × 2, Light blue × 1	Pink × 2, Pink × 1	Yellow × 2, Yellow × 1	White × 2, Light blue × 1

General Specifications — Model N14 (Cont'd)

SHOCK ABSORBER OR STRUT

Except for Europe

Applied model	All
Strut type	Double-acting hydraulic
Damping force [at 0.3 m (1.0 ft)/sec]	N (kg, lb)
Expansion	539 - 736 (55 - 75, 121 - 165)
Compression	226 - 363 (23 - 37, 51 - 82)
Piston rod diameter	mm (in)
	18 (0.71)

For Europe

Applied model		2WD				4WD			
		GA14DS & CD20	GA16DS		SR20DE	GA16DS		SR20DET	
			Without A B S	With A B S		Without A B S.	With A B S		
Strut type		Double-acting hydraulic							
Damping force [at 0.3 m (1.0 ft) / sec]		N (kg, lb)							
Expansion		412 - 579 (42 - 59, 93 - 130)	412 - 579 (42 - 59, 93 - 130)	412 - 579 (42 - 59, 93 - 130)	490 - 686 (50 - 70, 110 - 154)	490 - 686 (50 - 70, 110 - 154)	490 - 686 (50 - 70, 110 - 154)	667 - 902 (68 - 92, 150 - 203)	
Compression		265 - 422 (27 - 43, 60 - 95)	265 - 422 (27 - 43, 60 - 95)	265 - 422 (27 - 43, 60 - 95)	324 - 500 (33 - 51, 73 - 112)	265 - 422 (27 - 43, 60 - 95)	265 - 422 (27 - 43, 60 - 95)	314 - 471 (32 - 48, 71 - 106)	
Piston rod diameter		mm (in)	18 (0.71)	22 (0.87)	22 (0.87)	22 (0.87)	18 (0.71)	18 (0.71)	22 (0.87)

STABILIZER BAR


Applied model	2WD			4WD	
	Except SR20DE		SR20DE	GA16DS	SR20DET
	R H D.	L H D.			
Bar diameter	mm (in)				
	9 (0.35)	10 (0.39)	14 (0.55)	10 (0.39)	15 (0.59)
Identification color	Red	Orange	White	Red	Green

General Specifications — Model N14 (Cont'd)

DRIVE SHAFT


Applied model	GA16DS	SR20DET
Joint type		
Final drive side	TS70C	TS79C
Wheel side	ZF80	ZF90
Applied grease	Nissan genuine grease or equivalent	
Quality		
Capacity g (oz)		
Final drive side	185 - 195 (6.52 - 6.88)	225 - 235 (7.94 - 8.29)
Wheel side	90 - 100 (3.17 - 3.53)	160 - 170 (5.64 - 6.00)
Boot length mm (in)		
Final drive side "L ₂ "	95.5 - 97.5 (3.760 - 3.839)	101.5 - 103.5 (4.00 - 4.07)
Wheel side "L ₁ "	90.5 - 92.5 (3.563 - 3.642)	96 - 98 (3.78 - 3.86)

Final drive side

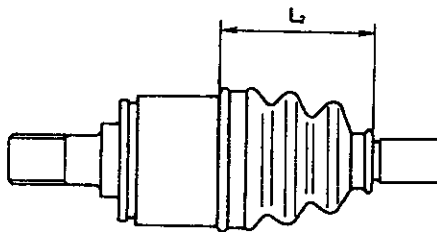

SFA961A

Wheel side

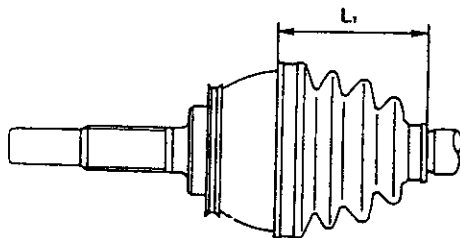

SFA962A

Inspection and Adjustment — Model N14

WHEEL ALIGNMENT (Unladen*1)

Applied model	2WD	4WD
Camber degree	-1°40' to -0°10'	-0°55' to 0°35'
Toe-in mm (in)	-1 to 3 (-0.04 to 0.12)	
Total toe-in degree	-6' to 18'	

*1 Fuel, radiator coolant and engine oil full.

Spare tire, jack, hand tools and mats in designated positions

WHEEL BEARING

Brake	2WD	4WD
Wheel bearing axial end play mm (in)	Less than 0.05 (0.0020)	
Wheel bearing lock nuts		
Tightening torque N·m (kg-m, ft-lb)	186 - 255 (19 - 26, 137 - 188)	196 - 275 (20 - 28, 145 - 203)
Wheel bearing preload		
At wheel center N·m (kg-cm, in-lb)	0.18 - 0.94 (1.8 - 9.6, 1.6 - 8.3)	1.31 (13.4 - 11.6)
At wheel hub bolt N (kg, lb)	3.9 - 18.6 (0.4 - 1.9, 0.9 - 4.2)	9.8 (1.0, 2.2)

BRAKE SYSTEM

SECTION **BR**


CONTENTS

PRECAUTIONS AND PREPARATION	BR- 2
CHECK AND ADJUSTMENT	BR- 3
AIR BLEEDING	BR- 4
BRAKE HYDRAULIC LINE	BR- 5
CONTROL VALVE	BR- 8
BRAKE PEDAL AND BRACKET	BR- 13
MASTER CYLINDER	BR- 15
BRAKE BOOSTER	BR- 18
VACUUM HOSE	BR- 20
FRONT DISC BRAKE	BR- 22
REAR DRUM BRAKE	BR- 28
REAR DISC BRAKE	BR- 34
PARKING BRAKE CONTROL	BR- 46
ANTI-LOCK BRAKING SYSTEM	BR- 49
TROUBLE DIAGNOSES	BR- 73
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	BR-100

PRECAUTIONS AND PREPARATION

Precautions

- Use brake fluid "DOT 3".
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
- To clean or wash all parts of master cylinder, disc brake caliper and wheel cylinder, use clean brake fluid.
- Never use mineral oils such as gasoline or kerosene. They will ruin rubber parts of hydraulic system.

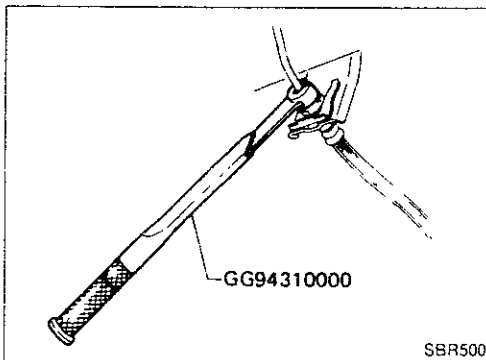


- Use Tool when removing and installing brake tube.

WARNING:


- Clean brake pads and shoes with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.

Preparation

SPECIAL SERVICE TOOLS

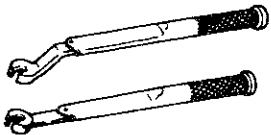Tool number Tool name	Description
GG94310000 Flare nut torque wrench	 Removing and installing each brake piping
KV991V0010 Brake fluid pressure gauge	 Measuring brake fluid pressure

CHECK AND ADJUSTMENT

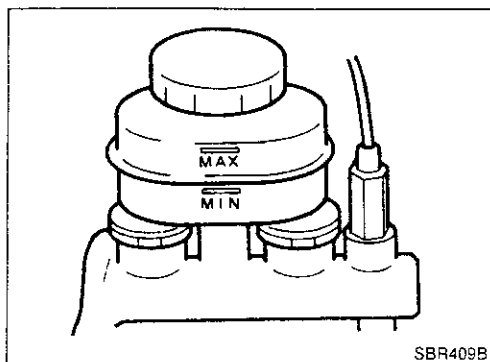

Checking Brake Fluid Level


- Check fluid level in reservoir tank. It should be between Max. and Min. lines on reservoir tank.
- If fluid level is extremely low, check brake system for leaks.
- When brake warning lamp comes on even when parking brake lever is released, check brake system for leaks.

Checking Brake Line

CAUTION:

If leakage occurs around joints, retighten or, if necessary, replace damaged parts.

1. Check brake lines (tubes and hoses) for cracks, deterioration or other damage. Replace any damaged parts.
2. Check for oil leakage by fully depressing brake pedal while engine is running.

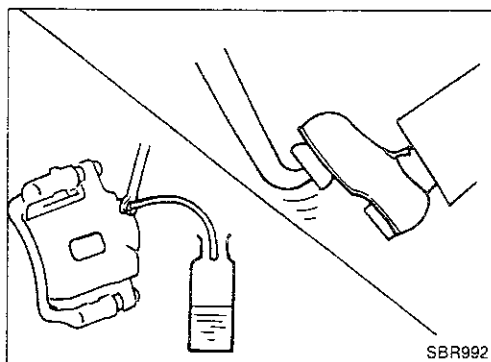

Changing Brake Fluid

CAUTION:


- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to each air bleeder valve.
2. Drain brake fluid from each air bleeder valve by depressing brake pedal.
3. Refill until new brake fluid comes out of each air bleeder valve.

Use same procedure as in bleeding hydraulic system to refill brake fluid.

Refer to "Bleeding Procedure" in "AIR BLEEDING".


AIR BLEEDING

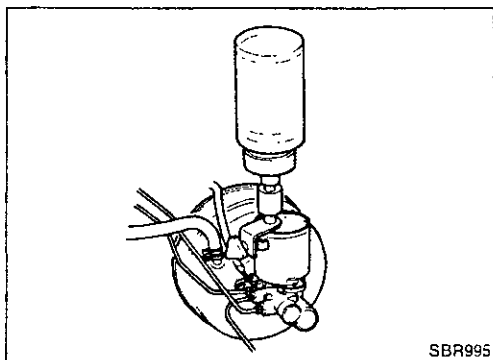

Bleeding Procedure

CAUTION:

- Carefully monitor brake fluid level at master cylinder during bleeding operation.
- Fill reservoir with new brake fluid "DOT 3". Make sure it is full at all times while bleeding air out of system.
- Place a container under master cylinder to avoid spillage of brake fluid.

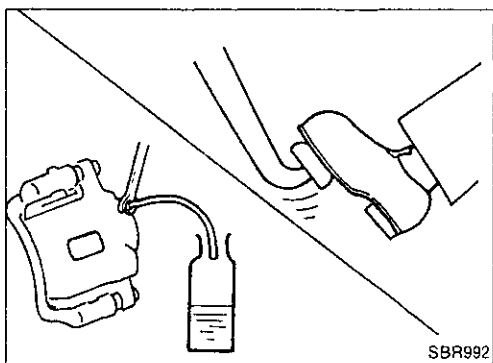


1. Connect a transparent vinyl tube to air bleeder valve.
2. Fully depress brake pedal several times.
3. With brake pedal depressed, open air bleeder valve to release air.
4. Close air bleeder valve.
5. Release brake pedal slowly.
6. Repeat steps 2. through 5. until clear brake fluid comes out of air bleeder valve.

- Bleed air in the following order.
Left rear brake
↓
Right front brake
↓
Right rear brake
↓
Left front brake

BRAKE HYDRAULIC LINE


Without anti-lock braking system

(Models with dual proportioning valve built into master cylinder)(built-in type)

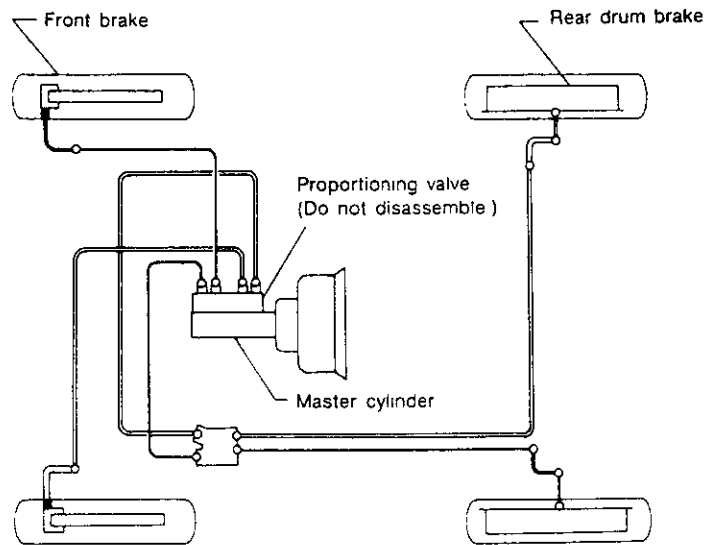


Without anti-lock braking system

(Models with dual proportioning valve separated from master cylinder)(separated type)

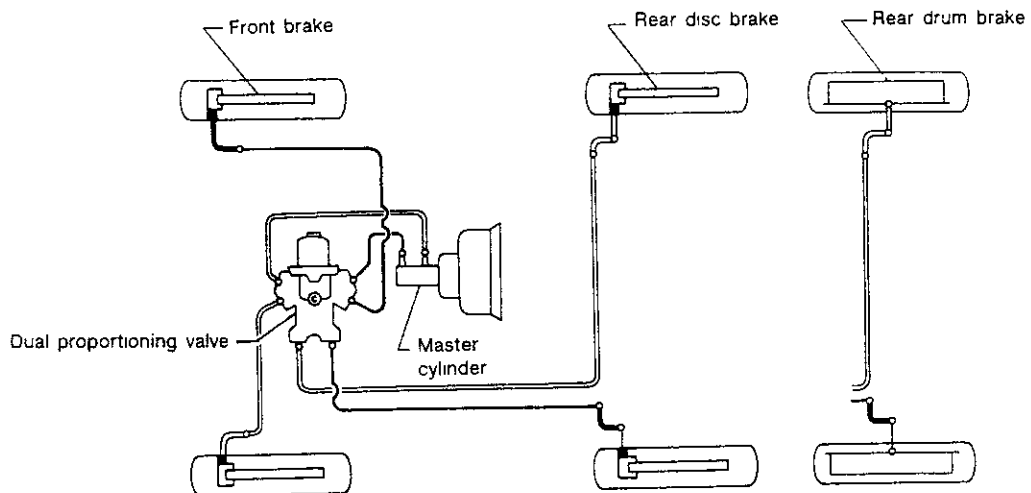


Without anti-lock braking system

(Models with twin load sensing valve)

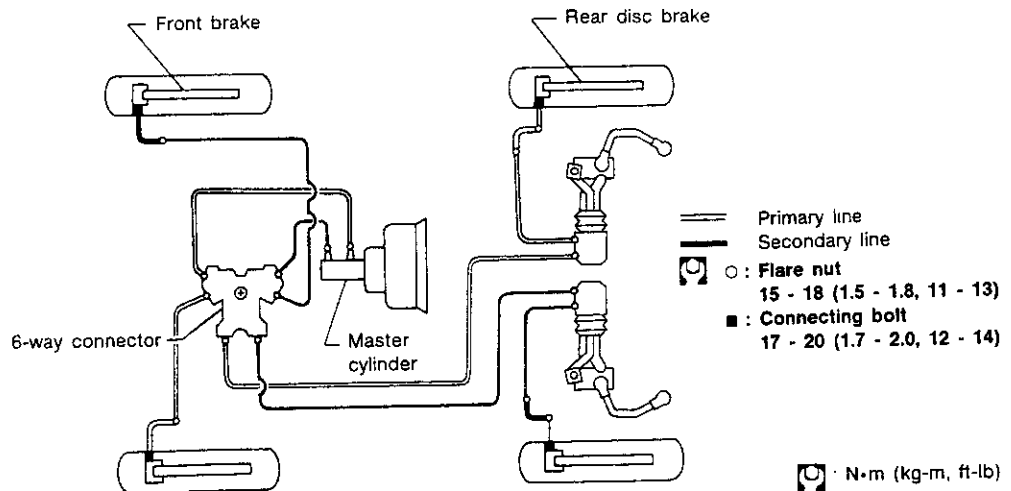


BRAKE HYDRAULIC LINE

With anti-lock braking system

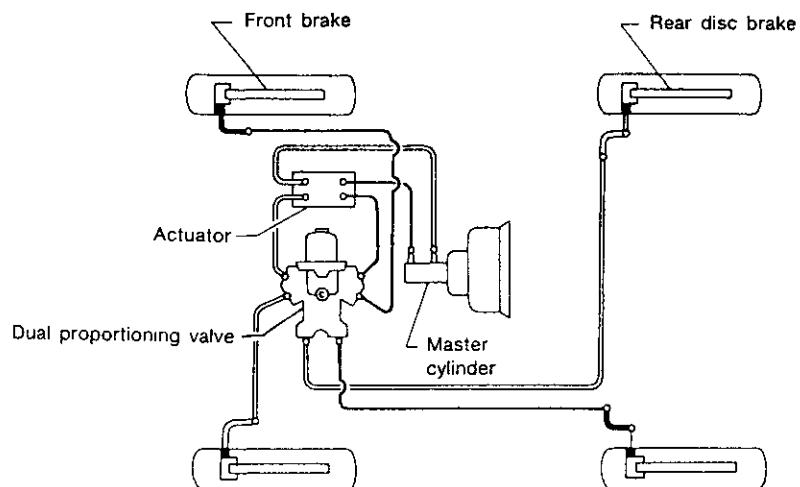


With anti-lock braking system (Models with twin load sensing valve)

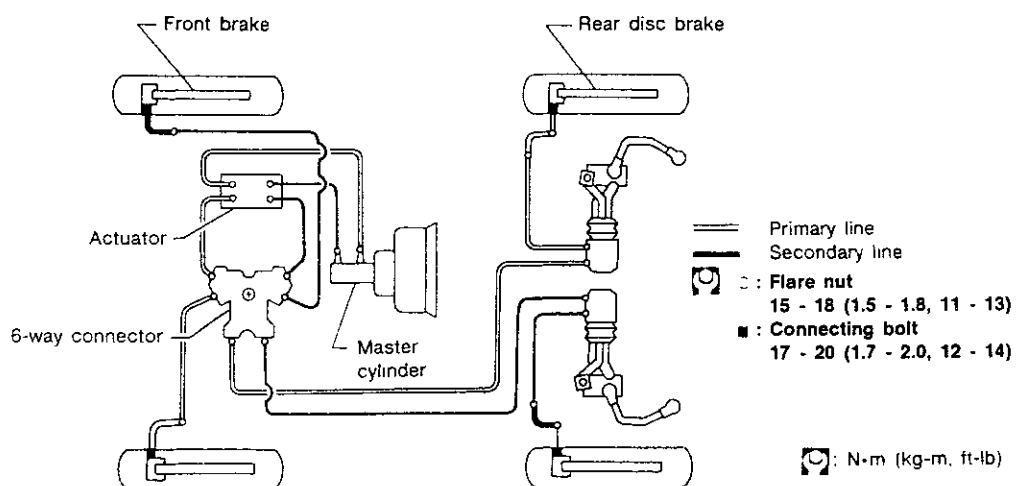

SBR761B

BRAKE HYDRAULIC LINE

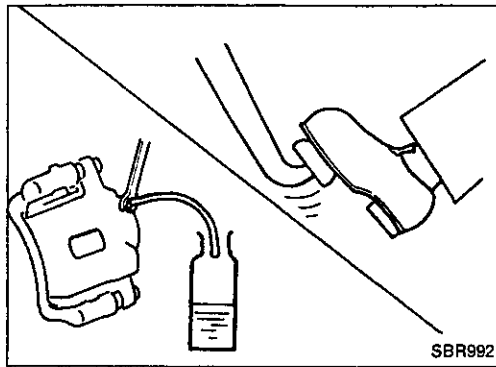


Removal

CAUTION:

- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
 - All hoses must be free from excessive bending, twisting and pulling.
1. Connect a vinyl tube to air bleeder valve.
 2. Drain brake fluid from each air bleeder valve by depressing brake pedal.
 3. Remove flare nut securing brake tube to hose, then withdraw lock spring.
 4. Cover openings to prevent entrance of dirt whenever disconnecting hydraulic line.

Inspection

Check brake lines (tubes and hoses) for cracks, deterioration or other damage. Replace any damaged parts.

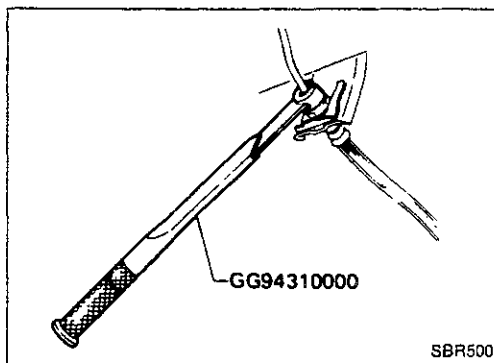

Installation

CAUTION:

- Refill with new brake fluid "DOT 3".
 - Never reuse drained brake fluid.
1. Tighten all flare nuts and connecting bolts.

Specification:

Flare nut

15 - 18 N·m

(1.5 - 1.8 kg-m, 11 - 13 ft-lb)



Connecting bolt

17 - 20 N·m

(1.7 - 2.0 kg-m, 12 - 14 ft-lb)

2. Refill until new brake fluid comes out of each air bleeder valve.
3. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".

CONTROL VALVE

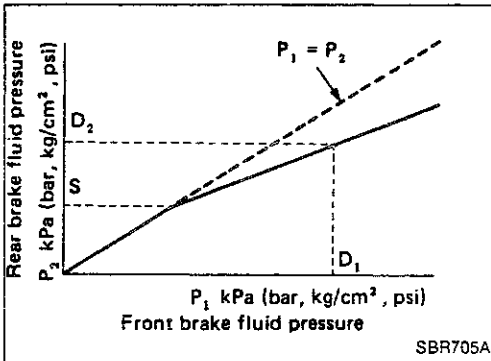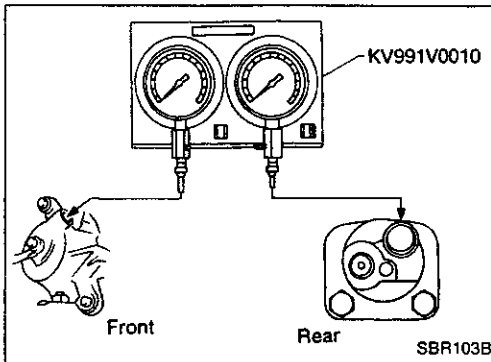

Proportioning Valve

INSPECTION

CAUTION:

- Carefully monitor brake fluid level at master cylinder.
 - Use new brake fluid "DOT 3".
 - Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on paint areas, wash it away with water immediately.
 - Depress pedal slowly when raising front brake pressure.
 - Check rear brake pressure 2 seconds after front brake pressure reaches specified value.
 - For models with A.B.S. disconnect harness connectors from A.B.S. actuator relay before checking.
1. Connect Tool to air bleeders of front and rear brakes on either L.H. and R.H. side.
 2. Bleed air from the Tool.
 3. Check fluid pressure by depressing brake pedal.

Applied models	Except Europe		Europe			
	With A.B.S.	Without A.B.S.	2WD	4WD		
			With rear drum brake	With A.B.S.	GA16DS	SR20DET
Applied pressure (Front brake) kPa (bar, kg/cm², psi)	4,904 (49.0, 50, 711)	7,355 (73.6, 75, 1,067)	6,865 (68.6, 70, 995)		7,355 (73.6, 75, 1,067)	6,375 (63.7, 65, 924)
Output pressure (Rear brake) kPa (bar, kg/cm², psi)	1,961 - 2,354 (19.6 - 23.5, 20 - 24, 284 - 341)	4,511 - 4,805 (45.1 - 48.1, 46 - 49, 654 - 697)	SR20DET 3,629 - 3,923, (36.3 - 39.2, 37 - 40, 526 - 569) Except SR20DET 3,923 - 4,315 (39.2 - 43.2, 40 - 44, 569 - 626)		4,511 - 4,805 (45.1 - 48.1, 46 - 49, 654 - 697)	L.H.D. 3,432 - 3,825 (34.3 - 38.2, 35 - 39, 498 - 555) R.H.D. 4,119 - 4,511 (41.2 - 45.1, 42 - 46, 597 - 654)

If output pressure is out of specifications, replace dual proportioning valve (separated type) or master cylinder assembly (built-in type).

4. Bleed air after disconnecting the Tool. Refer to "Bleeding Procedure" in "AIR BLEEDING".

CONTROL VALVE



Proportioning Valve (Cont'd)

REMOVAL (Separated type)

CAUTION:

- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to air bleeder valve.
2. Drain brake fluid from each air bleeder valve by depressing brake pedal.

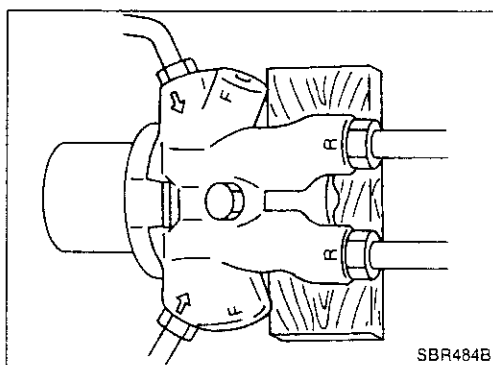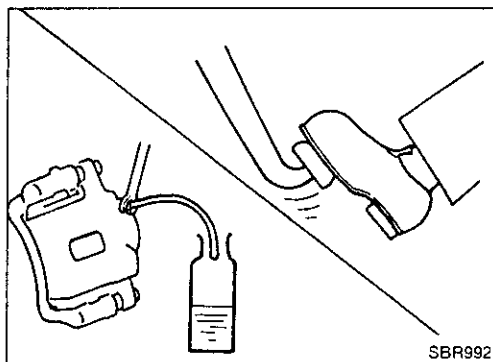

3. Loosen flare nut with wooden block placed between proportioning valve and dash panel.
4. Remove proportioning valve mounting bolt, then remove flare nut.

INSTALLATION (Separated type)

CAUTION:

- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.

1. Temporarily fit flare nut to proportioning valve.
2. Tighten proportioning valve mounting bolt, then tighten flare nut with wooden block placed between proportioning valve and dash panel.

Specification:

Flare nut

15 - 18 N·m

(1.5 - 1.8 kg-m, 11 - 13 ft-lb)

3. Refill until new brake fluid comes out of each air bleeder valve.
4. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".


REMOVAL AND INSTALLATION (Built-in type)

Always replace together with master cylinder as an assembly.

- Refer to "MASTER CYLINDER".

CONTROL VALVE

Twin Load Sensing Valve

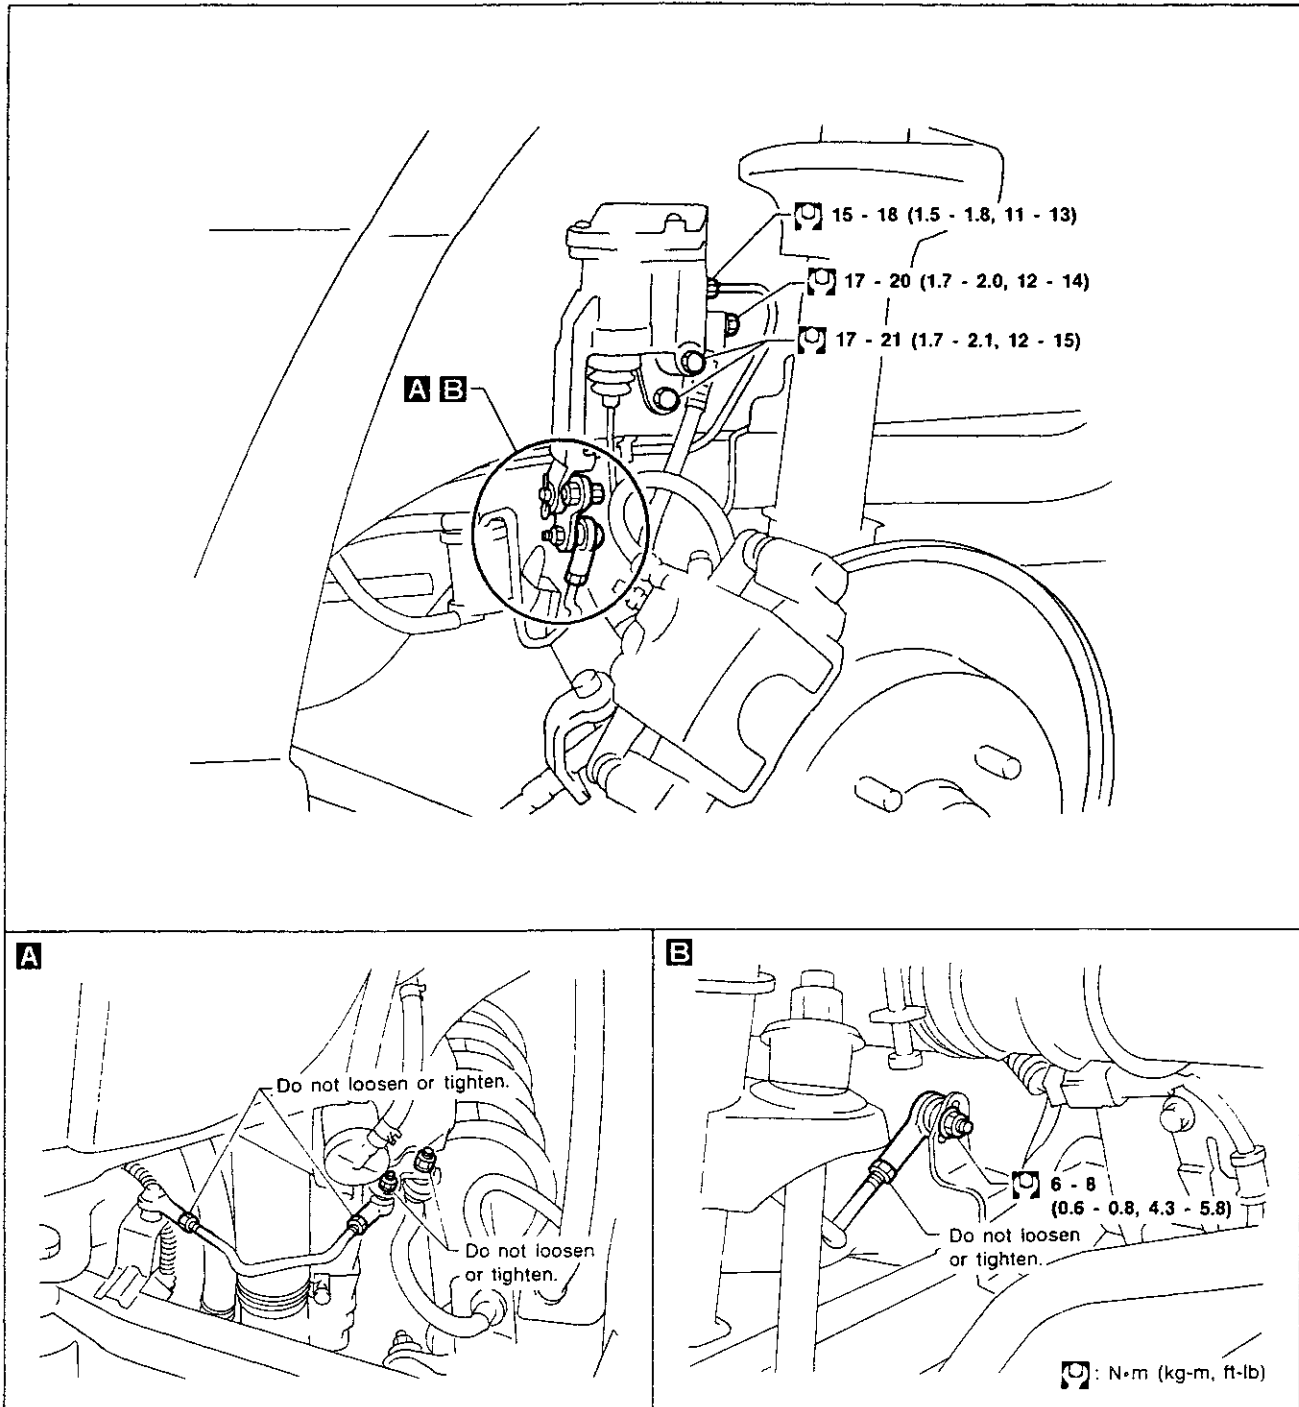

SBR803B

When replacing load sensing valve, it should be replaced with rod as an assembly.

CONTROL VALVE

Twin Load Sensing Valve (Cont'd)

INSPECTION

CAUTION:

- Carefully monitor brake fluid level at master cylinder.
- Use new brake fluid "DOT 3".
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on paint areas, wash it away with water immediately.
- Depress pedal slowly when raising front brake pressure.
- Check rear brake pressure 2 seconds after front brake pressure reaches specified value.
- For models with A.B.S. disconnect harness connectors from A.B.S. actuator relay before checking.

1. Check length "H" in unladen condition.
"Unladen"





Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

Length "H":

SR20DE 38.2 mm (1.504 in) or more

GA16DS 39.0 mm (1.535 in) or more

2. Connect tool to air bleeders of front and rear brakes on either L.H. and R.H. side.
3. Bleed air from Tool.

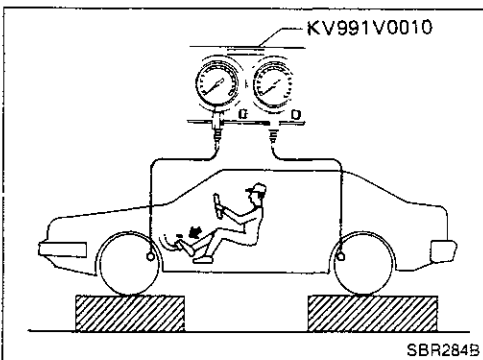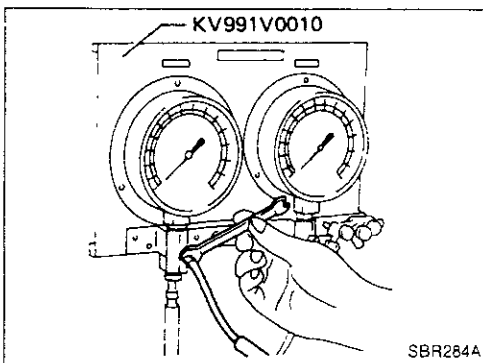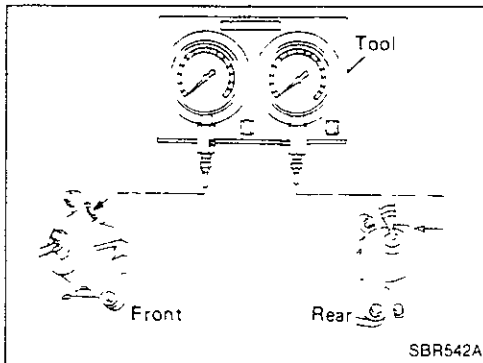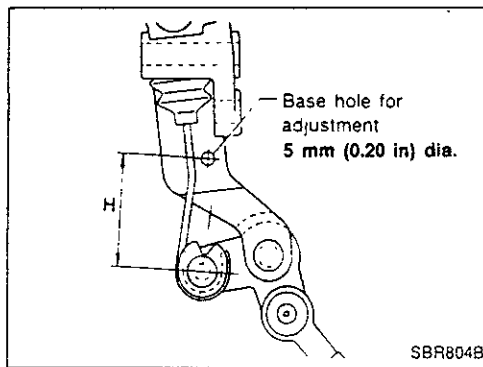

4. With one person aboard depress brake pedal until master cylinder oil pressure reaches 4,904 kPa (49.0 bar, 50 kg/cm², 711 psi). Hold brake pedal in that position and read rear brake oil pressure on pressure gauge indicator.

Rear brake pressure:

SR20DE

1,667 - 3,138 kPa

(16.7 - 31.4 bar, 17 - 32 kg/cm², 242 - 455 psi)

GA16DS

981 - 1,863 kPa

(9.8 - 18.6 bar, 10 - 19 kg/cm², 142 - 270 psi)

5. Depress brake pedal until master cylinder oil pressure reaches 9,807 kPa (98.1 bar, 100 kg/cm², 1,422 psi). With brake pedal held in that position, read rear brake oil pressure on pressure gauge indicator.

Rear brake pressure:

SR20DE

2,648 - 4,119 kPa

(26.5 - 41.2 bar, 27 - 42 kg/cm², 384 - 597 psi)


GA16DS

1,471 - 2,354 kPa

(14.7 - 23.5 bar, 15 - 24 kg/cm², 213 - 341 psi)

CONTROL VALVE

Twin Load Sensing Valve (Cont'd)

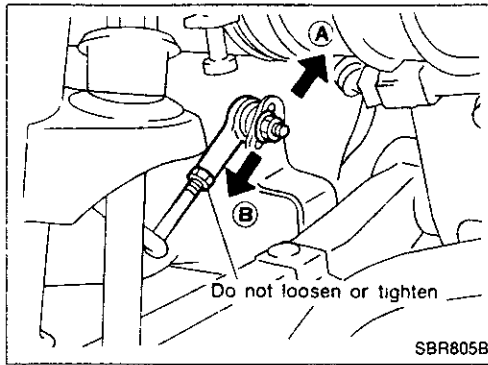

6. If rear brake pressure is out of specifications, adjust rod mounting so that rear brake pressure is within specifications.

Adjusting direction:



- Ⓐ: If rear brake pressure is lower than specifications
- Ⓑ: If rear brake pressure is higher than specifications.

If it is impossible to adjust load sensing valve correctly, it is out of order. Replace load sensing valve assembly.

7. Check length "H" again. For details, refer to step 1. If length "H" is out of specifications, adjust rod mounting again (step 6).

BRAKE PEDAL AND BRACKET


Removal and Installation

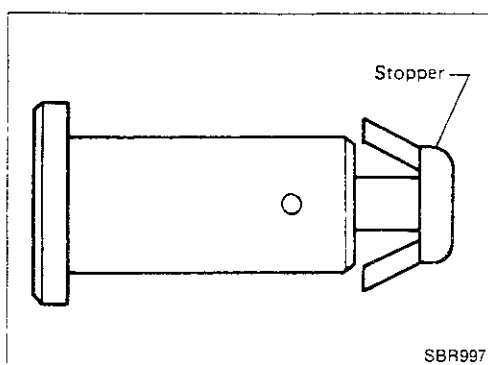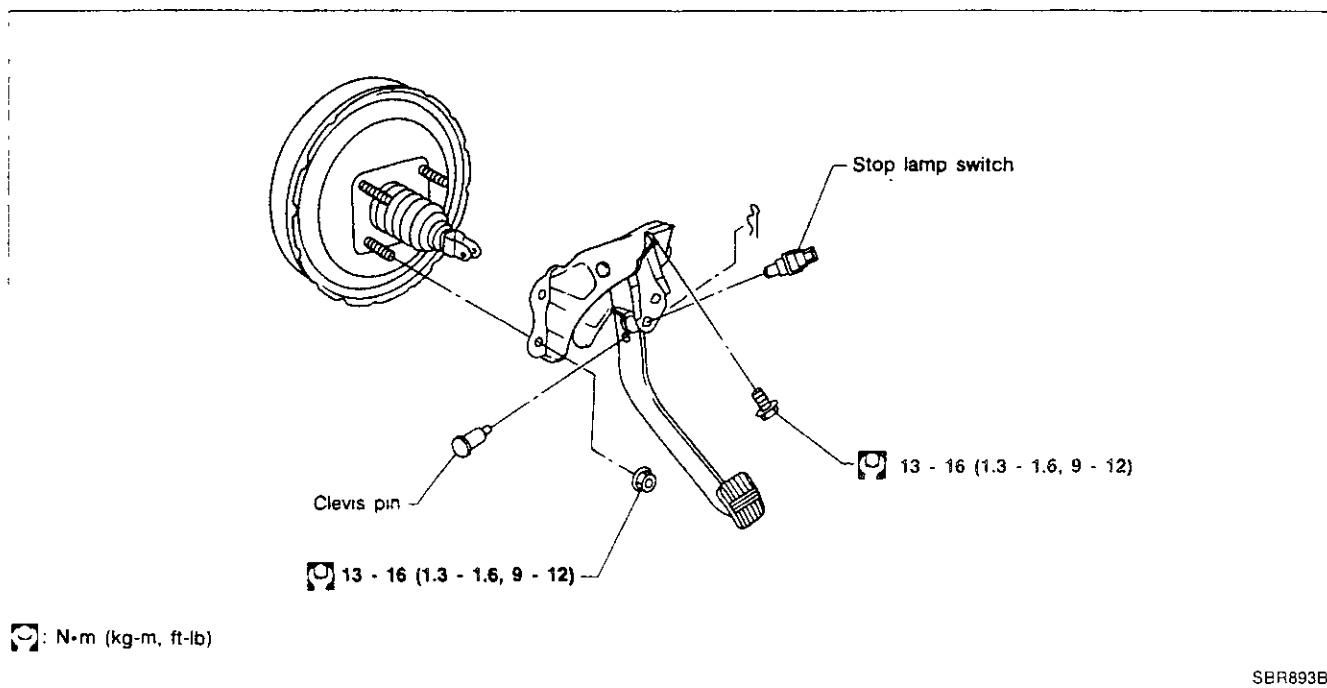

Inspection

Check brake pedal for following items.

- Brake pedal bend
- Clevis pin deformation
- Crack of any welded portion
- Crack or deformation of clevis pin stopper

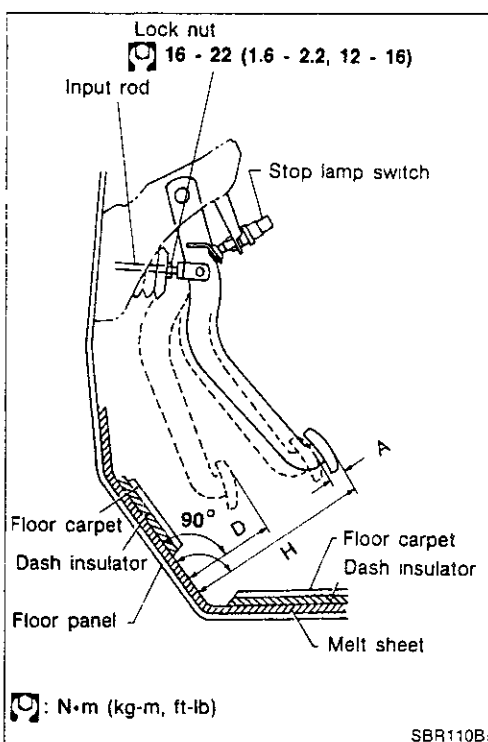

Adjustment

Check brake pedal free height from dash reinforcement panel. Adjust if necessary.

- H: Free height
Refer to S.D.S.
- D: Depressed height
Refer to S.D.S.
Under force of 490 N (50 kg, 110 lb)
with engine running
- A: Pedal free play
Refer to S.D.S.

BRAKE PEDAL AND BRACKET

Adjustment (Cont'd)


1. Loosen lock nut and adjust pedal free height by turning brake booster input rod. Then tighten lock nut.
2. Check pedal free play.

Make sure that stop lamps go off when pedal is released.

3. Check brake pedal's depressed height while engine is running.

If depressed height is below specified value, check brake system for leaks, accumulation of air or any damage to components (master cylinder, wheel cylinder, etc.); then make necessary repairs.

MASTER CYLINDER

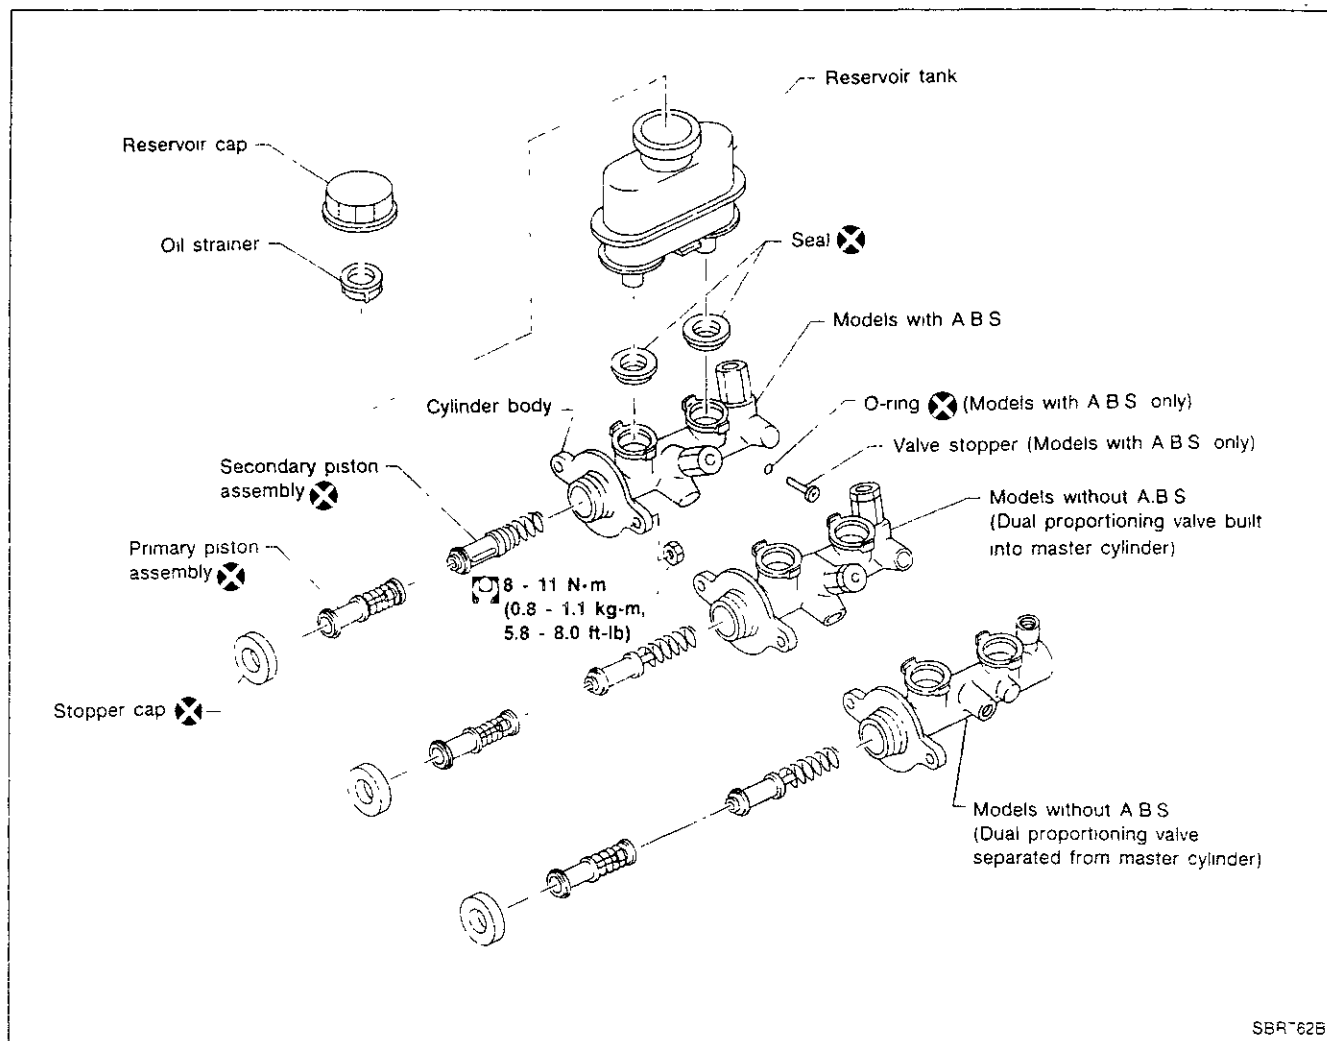


Removal

CAUTION:

Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to air bleeder valve.
2. Drain brake fluid from each air bleeder valve, depressing brake pedal to empty fluid from master cylinder.
3. Remove brake pipe flare nuts.
4. Remove master cylinder mounting nuts.

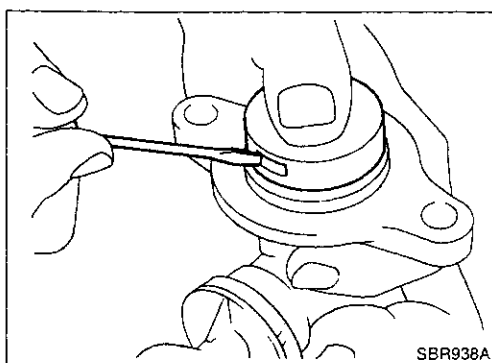


Disassembly


1. Bend claws of stopper cap outward.

MASTER CYLINDER

Disassembly (Cont'd)

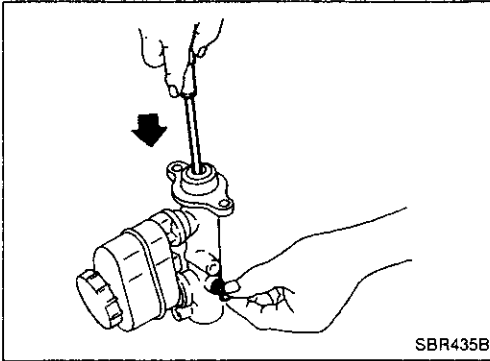

2. Remove valve stopper while piston is pushed into cylinder. (Models with A.B.S. only)

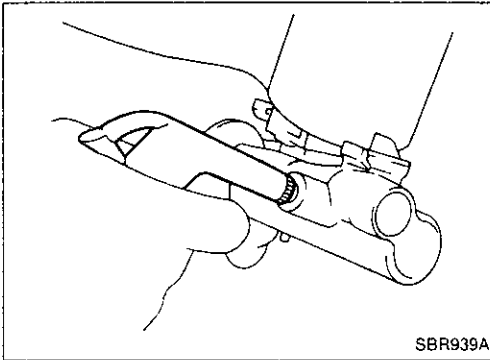

3. Remove piston assemblies.

If it is difficult to remove secondary piston assembly, gradually apply compressed air through fluid outlet.

4. Draw out reservoir tank.

Inspection

Check for the following items.

Replace any part if damaged.

Master cylinder:

- Pin holes or scratches on inner wall.

Piston:

- Deformation of or scratches on piston cups.

Stopper cap:



- Damage or excessive deformation of claws.

Assembly

1. Insert secondary piston assembly. Then insert primary piston assembly.


- Pay attention to direction of piston cups in figure at left. Also, insert pistons squarely to avoid scratches on cylinder bore.

- Pay attention to alignment of secondary piston slit with valve stopper mounting hole of cylinder body (For models with A.B.S. only).

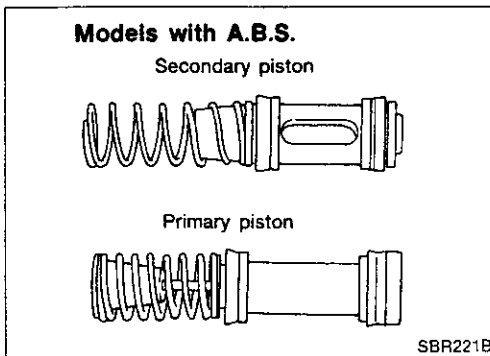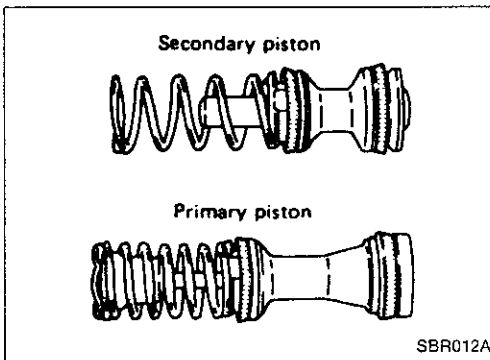

MASTER CYLINDER

Assembly (Cont'd)

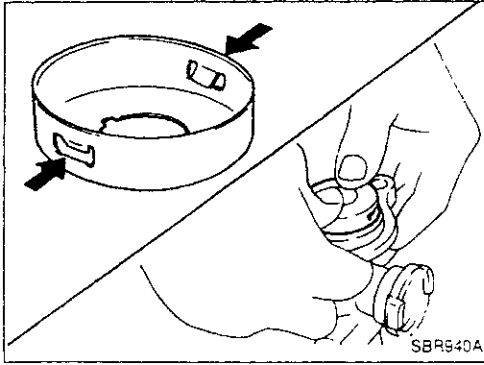


2. Install stopper cap.

Before installing stopper cap, ensure that claws are bent inward.

3. Push reservoir tank seals.

4. Push reservoir tank into master cylinder.

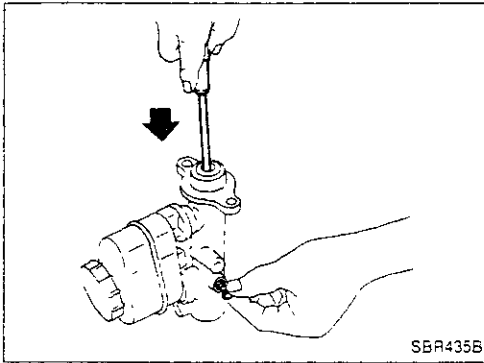

5. Install valve stopper while piston is pushed into cylinder.
(Models with A.B.S. only)

Installation

CAUTION:

- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.

1. Place master cylinder onto brake booster and secure mounting nuts lightly.
2. Fit flare nuts to master cylinder.
3. Tighten mounting nuts.

Specification:

8 - 11 N·m

(0.8 - 1.1 kg-m, 5.8 - 8.0 ft-lb)

4. Tighten flare nuts.


Specification:

15 - 18 N·m

(1.5 - 1.8 kg-m, 11 - 13 ft-lb)

5. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".


BRAKE BOOSTER

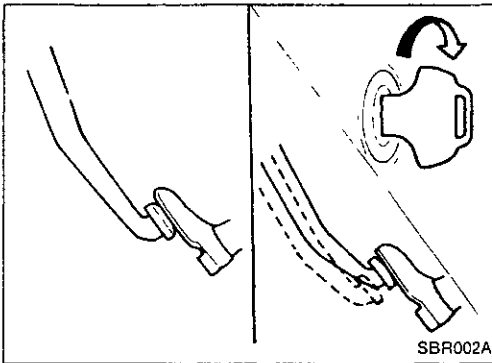

On-vehicle Service

OPERATING CHECK


- Depress brake pedal several times with engine off, and check that there is no change in pedal stroke.
- Depress brake pedal, then start engine. If pedal goes down slightly, operation is normal.

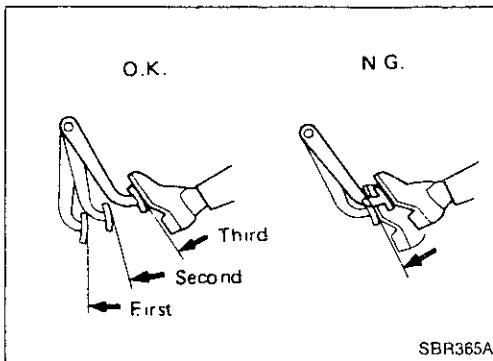

AIRTIGHT CHECK

- Start engine, and stop it after one or two minutes. Depress brake pedal several times slowly. If pedal goes further down the first time and gradually rises after second or third time, booster is airtight.
- Depress brake pedal while engine is running, and stop engine with pedal depressed. If there is no change in pedal stroke after holding pedal down **30 seconds**, brake booster is airtight.

Removal

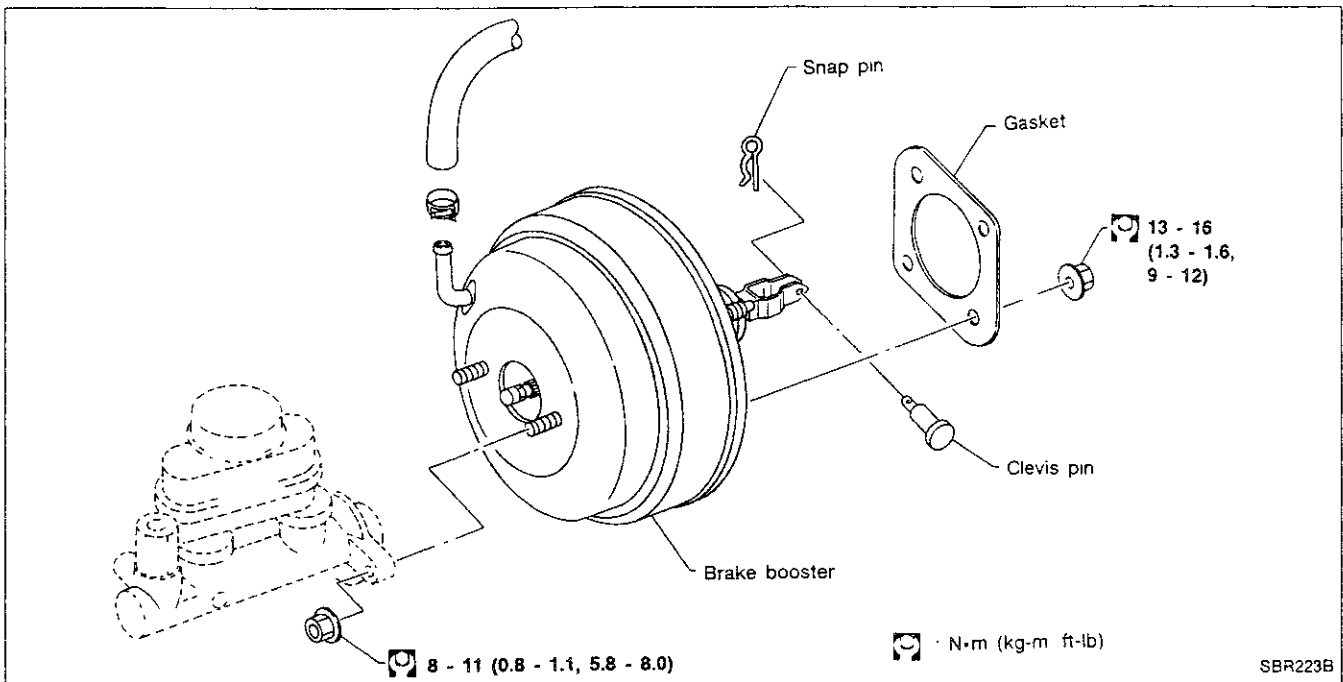

BRAKE BOOSTER


Removal (Cont'd)

CAUTION:

- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
- Be careful not to deform or bend brake pipes, during removal of booster.
- Take care not to damage brake booster mounting bolt thread when installing. Due to the acute angle of installation, the threads can be damaged on the metal surrounding the bulkhead holes.

(For GA16DE engine models)

- It is necessary to remove intake manifold first because space around booster is limited.

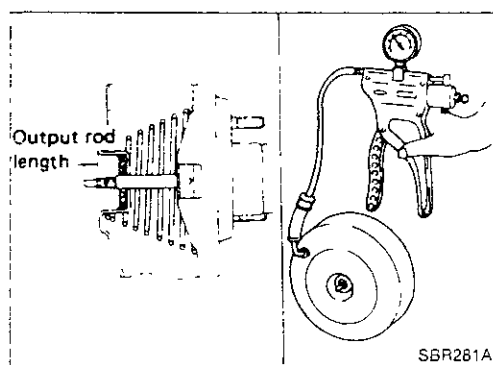

Inspection

OUTPUT ROD LENGTH CHECK

1. Supply brake booster with vacuum of -66.7 kPa (-667 mbar , -500 mmHg , -19.69 inHg) using a handy vacuum pump.
2. Check output rod length.


Specified length:

S180 or C180

4.875 - 5.125 mm (0.1919 - 0.2018 in)

M165T, M195T, S205 or C205

10.275 - 10.525 mm (0.4045 - 0.4144 in)

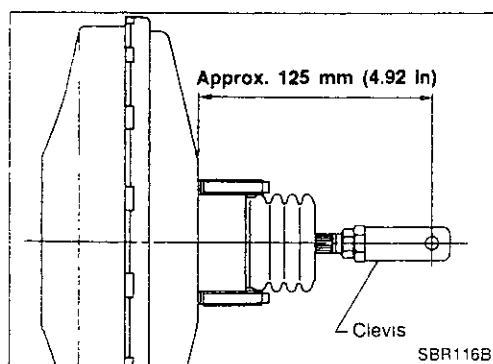

Installation

CAUTION:

- Be careful not to deform or bend brake pipes, during installation of booster.
- Replace clevis pin if damaged.
- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.

1. Before fitting booster, temporarily adjust clevis to dimension shown. (Does not apply to vehicles fitted with A.B.S.)
2. Fit booster, then secure mounting nuts (brake pedal bracket to master cylinder) lightly.
3. Connect brake pedal and booster input rod with clevis pin.
4. Secure mounting nuts.


Specification:

13 - 16 N·m

(1.3 - 1.6 kg-m, 9 - 12 ft-lb)

5. Install master cylinder. Refer to "Installation" in "MASTER CYLINDER".
6. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".

VACUUM HOSE

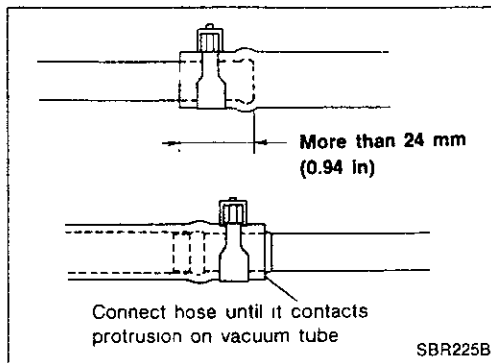


Removal and Installation


CAUTION:

When installing vacuum hoses, pay attention to the following points.

- Do not apply any oil or lubricants to vacuum hose and check valve.
- Insert vacuum tube into vacuum hose as shown.

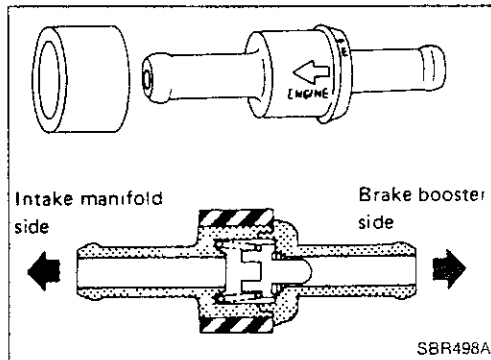

- Install check valve, paying attention to its direction.
TYPE 1

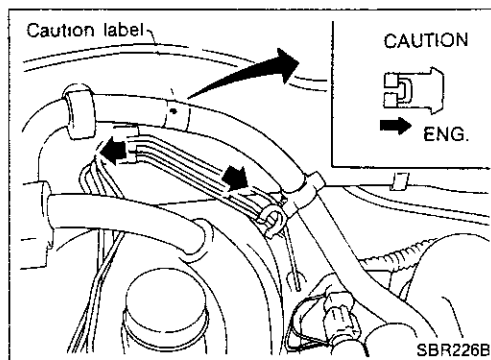

TYPE 2

Inspection

HOSES AND CONNECTORS


Check vacuum lines, connections and check valve for airtightness, improper attachment chafing and deterioration.

VACUUM HOSE

Inspection (Cont'd)

CHECK VALVE

Check vacuum with a vacuum pump.

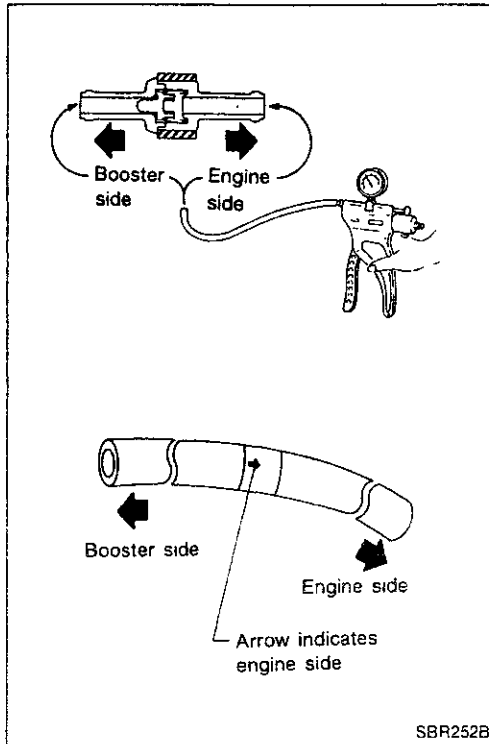

Connect to booster side	Vacuum should exist.
Connect to engine side	Vacuum should not exist.

FRONT DISC BRAKE


Pad Replacement

WARNING:


Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.

CAUTION:

- When cylinder body is open, do not depress brake pedal because piston will pop out.
- Be careful not to damage piston boot or get oil on rotor. Always replace shims when replacing pads.
- If shims are rusted or show peeling of the rubber coat, replace them with new shims.
- It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend cylinder body with wire so as not to stretch brake hose.

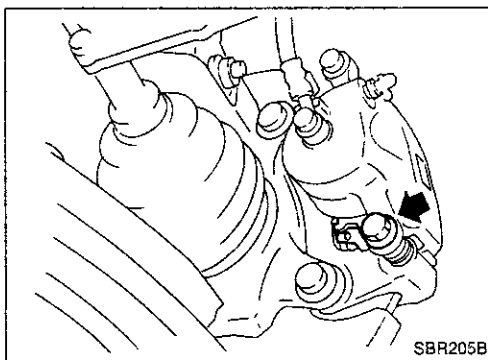

1. Remove master cylinder reservoir cap.
2. Remove pin bolt.

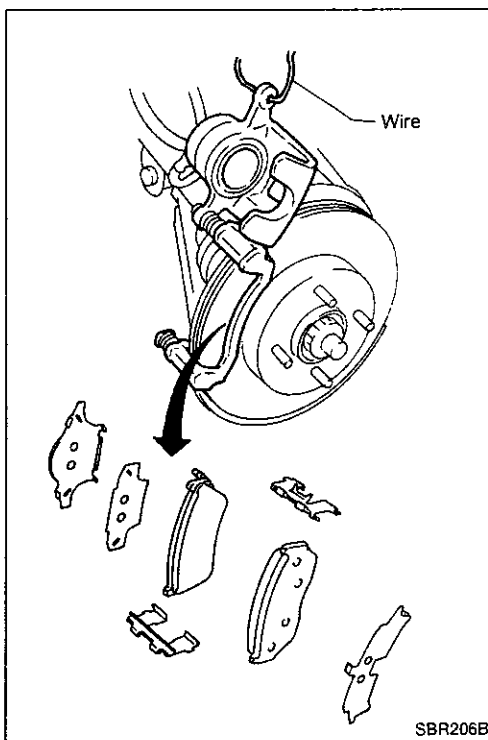

3. Open cylinder body upward. Then remove pad retainers, and inner and outer shims.

Standard pad thickness:

10 mm (0.39 in)


Pad wear limit:

2.0 mm (0.079 in)

Carefully monitor brake fluid level because brake fluid will return to reservoir when pushing back piston.

FRONT DISC BRAKE

CL18C AND CL18VD

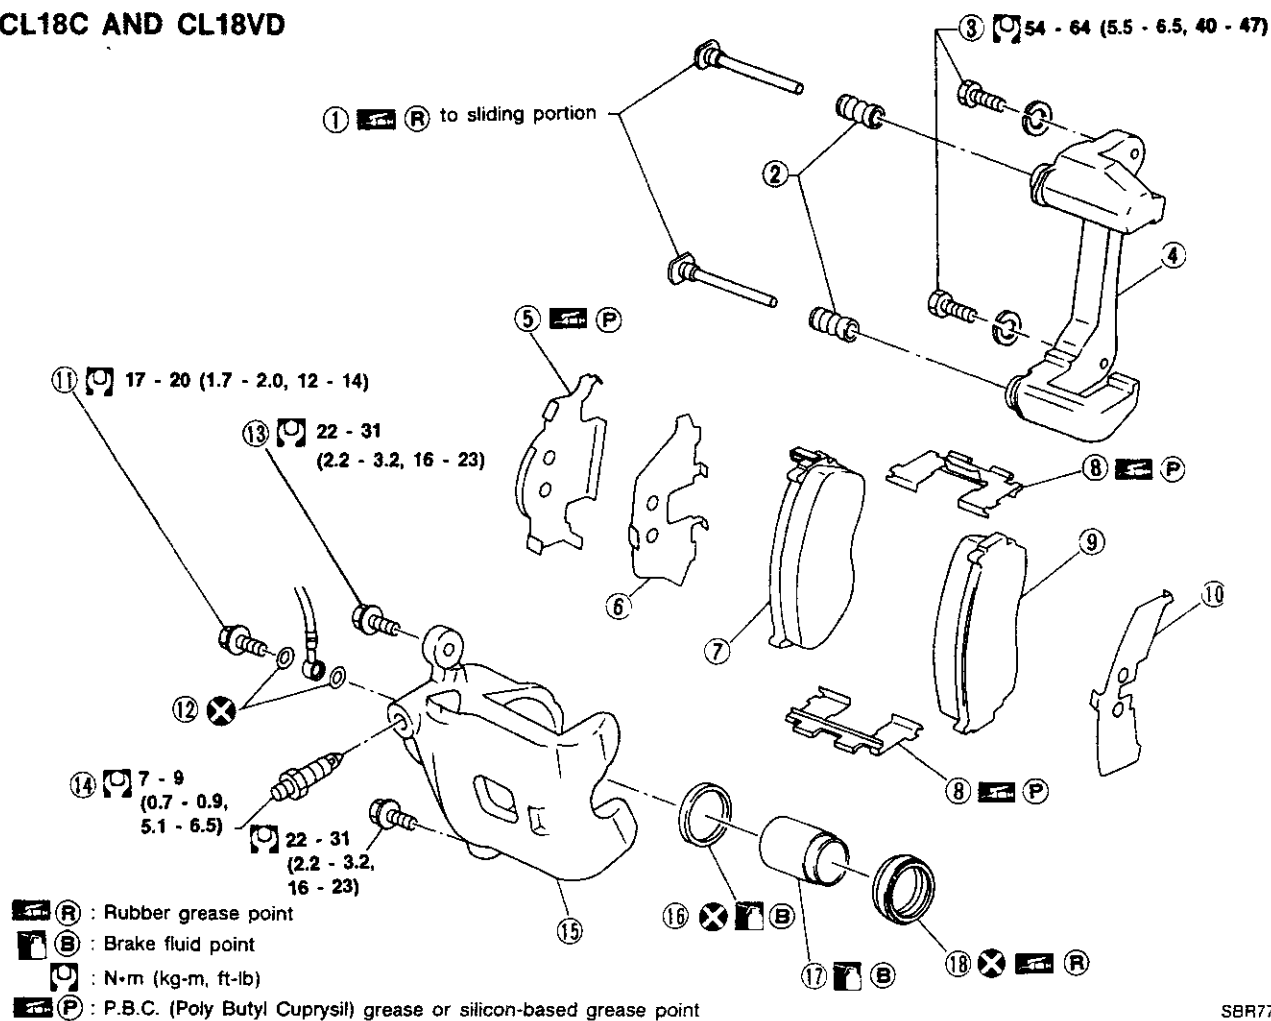

- | | | |
|-----------------------------|-------------------|-----------------|
| ① Main pin | ⑦ Inner pad | ⑬ Main pin bolt |
| ② Pin boot | ⑧ Pad retainer | ⑭ Bleed valve |
| ③ Torque member fixing bolt | ⑨ Outer pad | ⑮ Cylinder body |
| ④ Torque member | ⑩ Outer shim | ⑯ Piston seal |
| ⑤ Shim cover | ⑪ Connecting bolt | ⑰ Piston |
| ⑥ Inner shim | ⑫ Copper washer | ⑱ Piston boot |

AD22VF

1 31 - 41 (3.2 - 4.2, 23 - 30)

10 17 - 20 (1.7 - 2.0, 12 - 14)

13 7 - 9
(0.7 - 0.9, 5.1 - 6.5)

3 54 - 64
(5.5 - 6.5, 40 - 47)

5 P

6

7

8

9

11

12

14

15

16

17

18

P : P.B.C. (Poly Butyl Cuprysil)
 grease or silicon-based grease point
 R : Rubber grease point
 Brake fluid point
 N·m (kg·m, ft·lb)

SBR806B

- | | | |
|-----------------------------|-------------------|------------------------|
| ① Main pin bolt | ⑦ Inner shim | ⑬ Air bleeder |
| ② Pin boot | ⑧ Pad | ⑭ Cylinder body |
| ③ Torque member fixing bolt | ⑨ Outer shim | ⑮ Piston seal |
| ④ Torque member | ⑩ Connecting bolt | ⑯ Piston |
| ⑤ Pad retainer | ⑪ Brake hose | ⑰ Piston boot |
| ⑥ Shim cover | ⑫ Copper washer | ⑱ Piston boot retainer |

FRONT DISC BRAKE


Removal

WARNING:

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.


CAUTION:

Suspend caliper assembly with wire so as not to stretch brake hose.

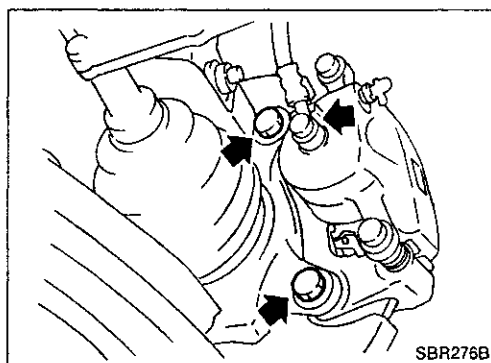


Remove torque member fixing bolts and connecting bolt.

It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly.

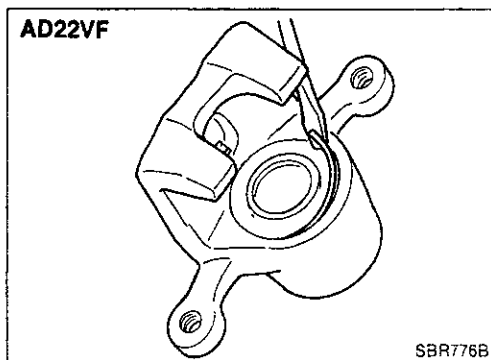

Disassembly

1. Remove piston boot retainer with a screwdriver.

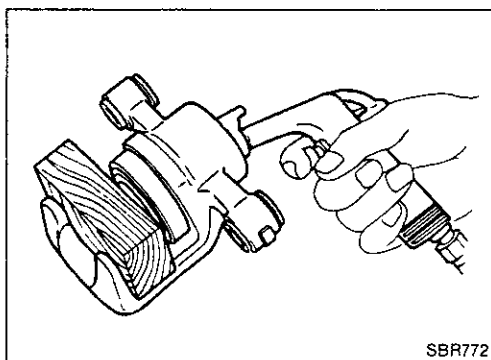

WARNING:

Do not place your fingers in front of piston.

CAUTION:

Do not scratch or score cylinder wall.

2. Push out piston with dust seal with compressed air.
3. Remove piston seal with a suitable tool.

FRONT DISC BRAKE

Inspection — Caliper

CYLINDER BODY

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

CAUTION:

Use brake fluid to clean. Never use mineral oil.

PISTON

Check piston for score, rust, wear, damage or presence of foreign materials. Replace if any of the above conditions are observed.

CAUTION:

Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign materials are stuck to sliding surface.


SLIDE PIN, PIN BOLT AND PIN COVER

Check for wear, cracks or other damage. Replace if any of the above conditions are observed.

Inspection — Rotor

RUBBING SURFACE

Check rotor for roughness, cracks or chips.

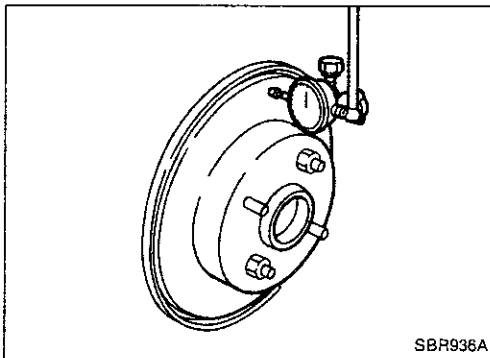

RUNOUT


1. Secure rotor to wheel hub with two nuts (M12 x 1.25).
2. Check runout using a dial indicator.

Make sure that axial end play is within the specifications before measuring. Refer to section FA.

3. Change relative positions of rotor and wheel hub so that runout is minimized.

Maximum runout

0.07 mm (0.0028 in)

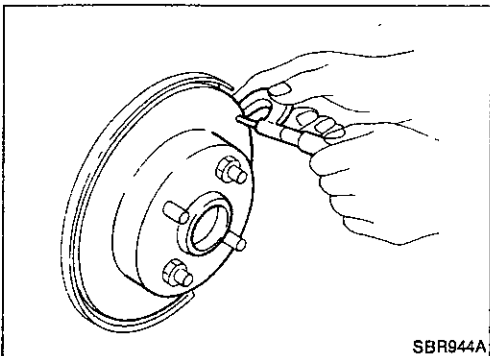

THICKNESS

Rotor repair limit:

Minimum thickness

CL18C 12.0 mm (0.472 in)

CL18VD 18.0 mm (0.709 in)

AD22VF 24.0 mm (0.945 in)

Thickness variation (At least 8 portions)

Maximum 0.02 mm (0.0008 in)



Replace rotor if any of the above did not meet the specifications.

FRONT DISC BRAKE

Inspection — Rotor (Cont'd)

Assembly


1. With piston boot fitted to piston, insert piston boot into groove on cylinder body and install piston.
2. Properly secure piston boot
3. Secure piston boot with retainer.
(AD22VF model only)

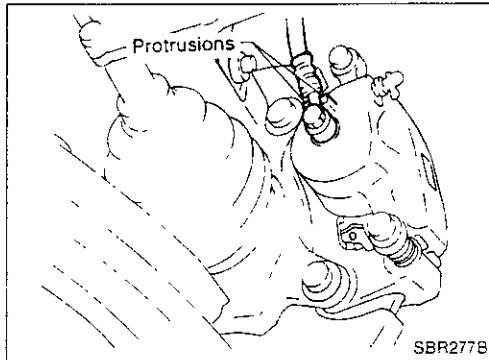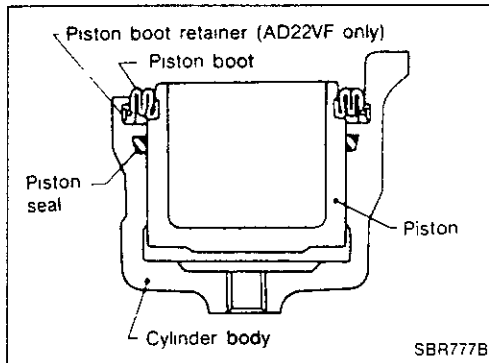


Installation

CAUTION:

- Refill with new brake fluid "DOT 3".
 - Never reuse drained brake fluid.
1. Install brake hose to caliper securely.
 2. Install all parts and secure all bolts.
 3. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".

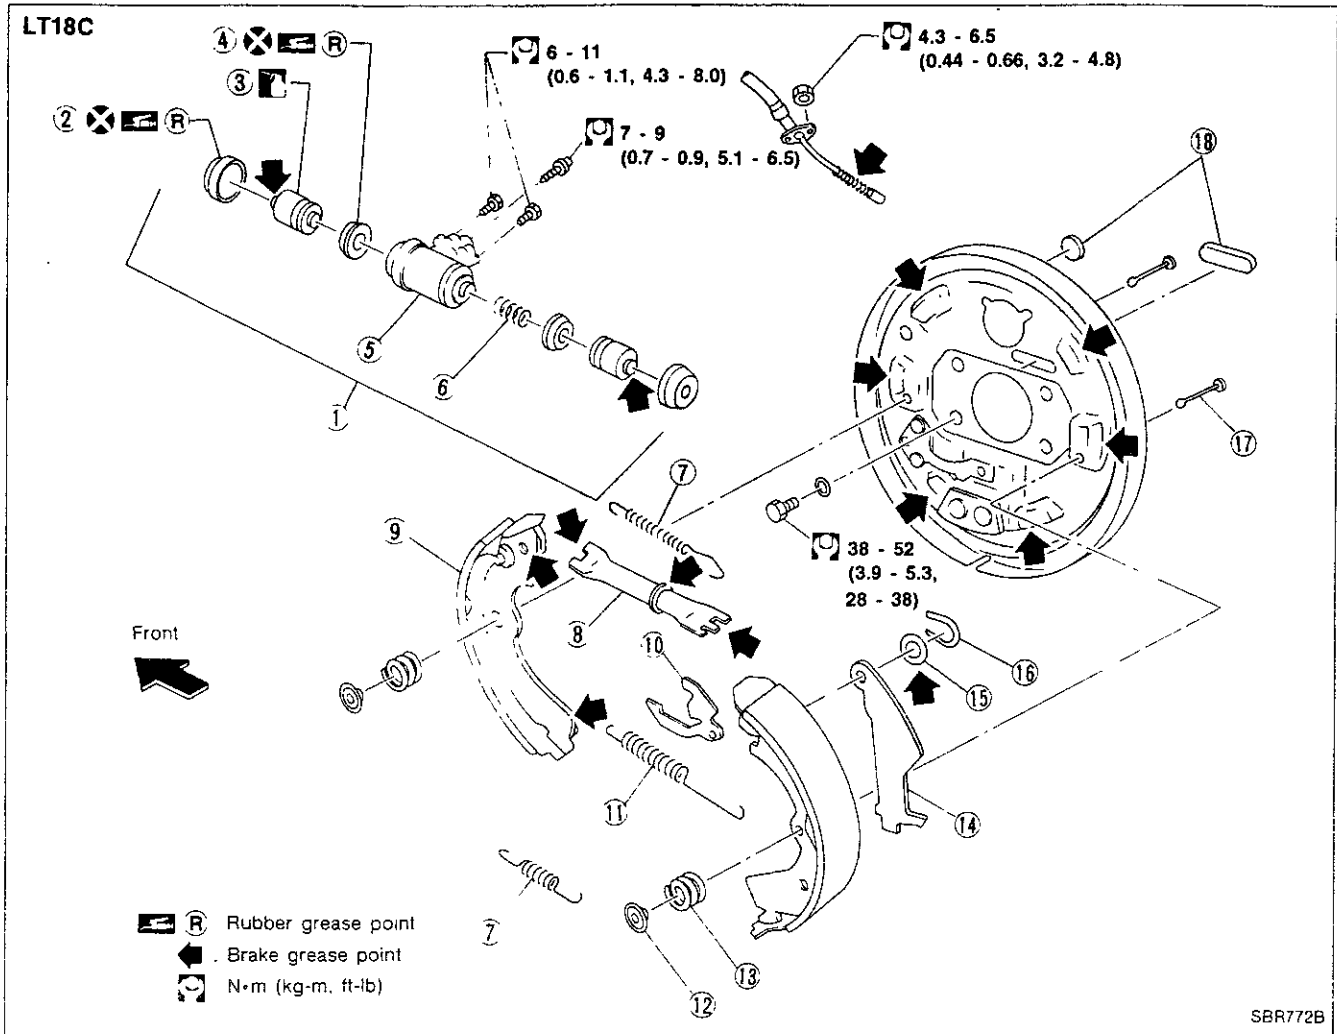

REAR DRUM BRAKE

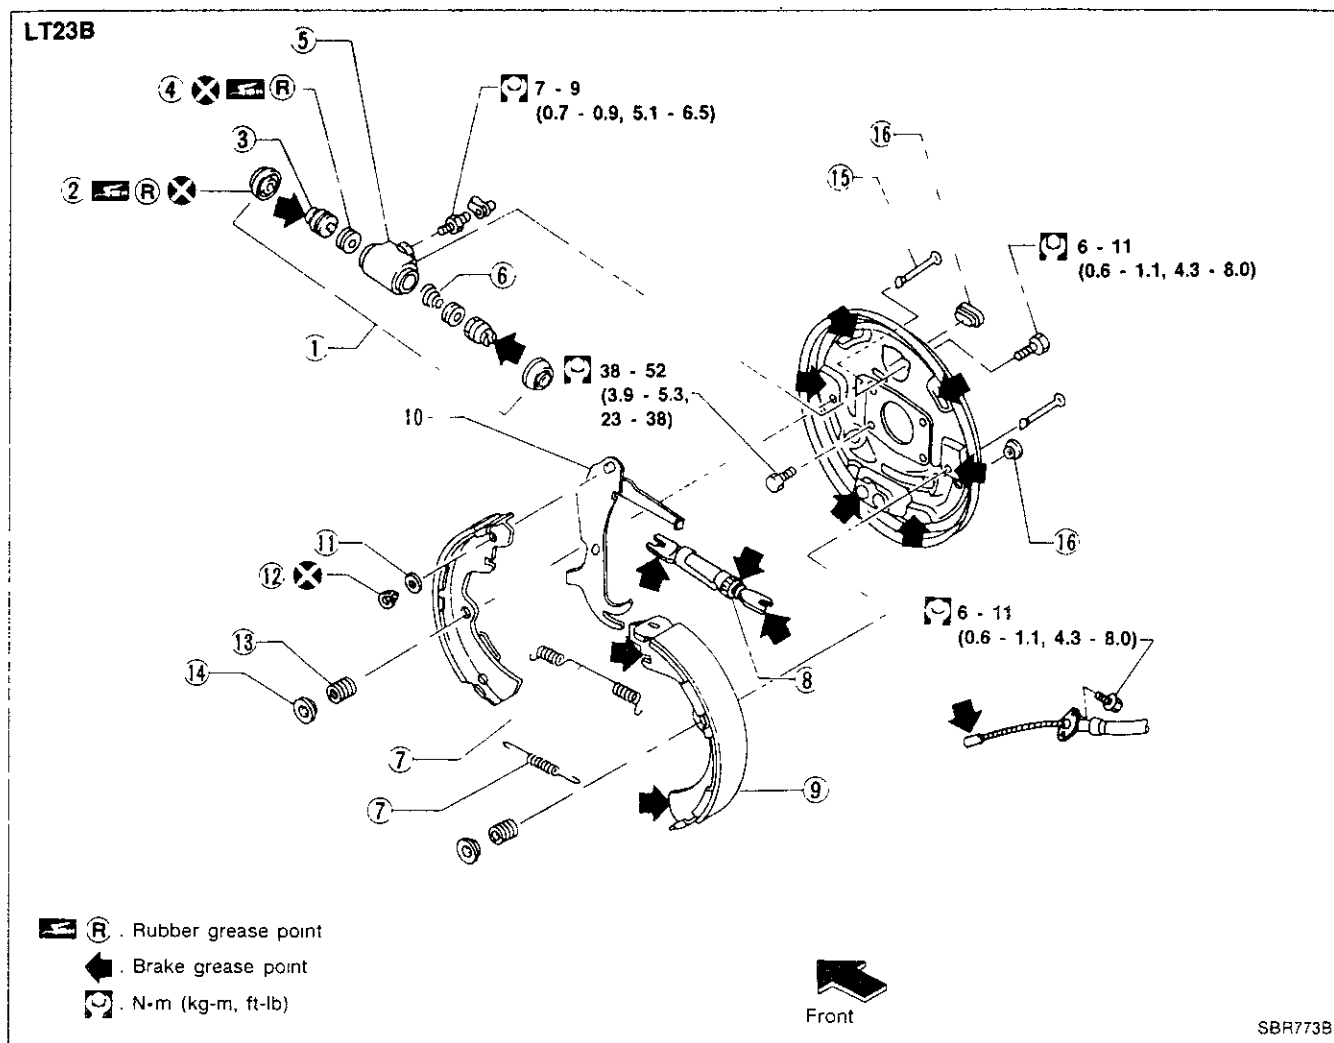

Removal

WARNING:

Clean brake lining with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.




CAUTION:

Make sure parking brake lever is released completely.


REAR DRUM BRAKE

Removal (Cont'd)


1. Release parking brake lever fully, then remove drum.
If drum is hard to remove, the following procedures should be carried out.
 - a. Remove plug. Then shorten adjuster to make clearance between brake shoe and drum as shown.

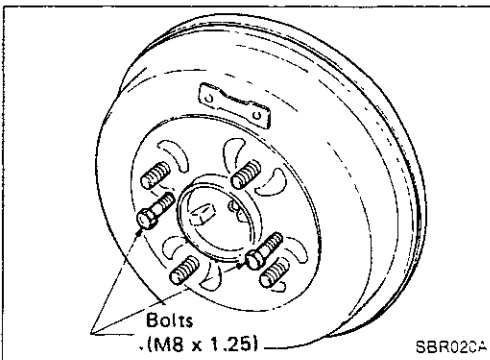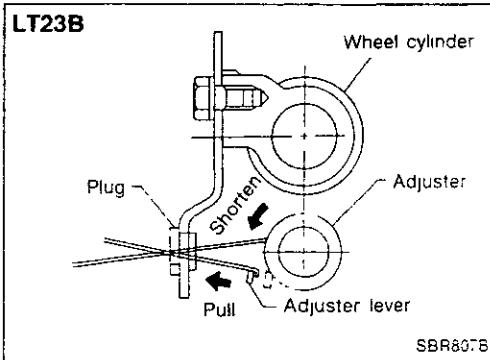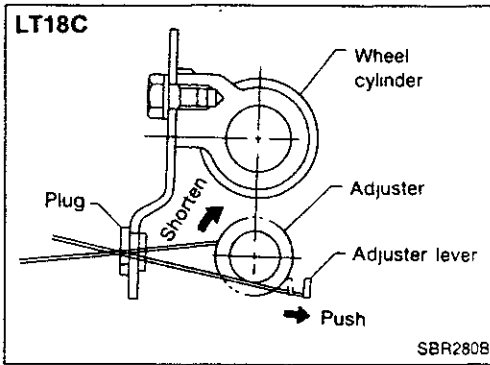

- b. Tighten the two bolts gradually.

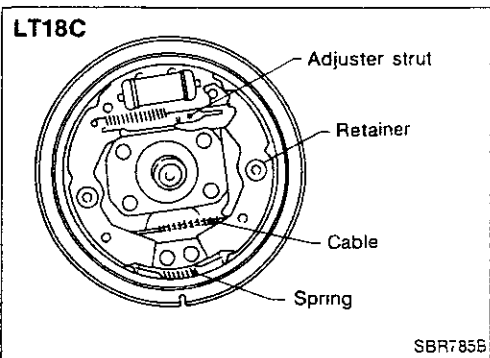



2. After removing retainer, remove spring by rotating shoes.
Be careful not to damage parking brake cable when separating it.
3. Remove adjuster.
4. Disconnect parking brake cable from toggle lever.

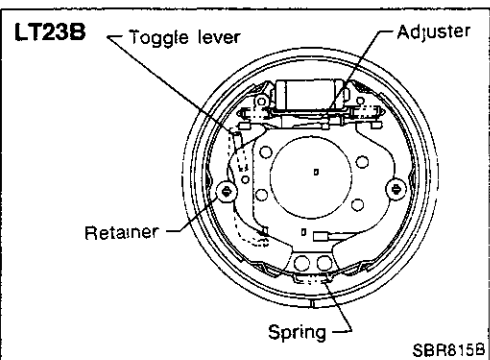

REAR DRUM BRAKE


Removal (Cont'd)

5. Remove retainer ring with a suitable tool. Then separate toggle lever and brake shoe.

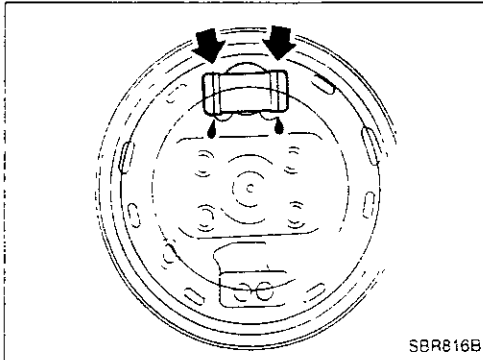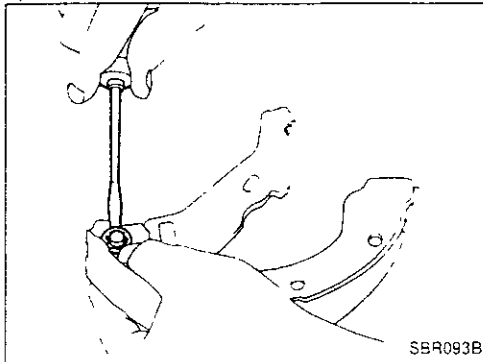


Inspection — Wheel Cylinder

- Check wheel cylinder for leakage.
- Check for wear, damage and loose conditions. Replace if any such condition exists.

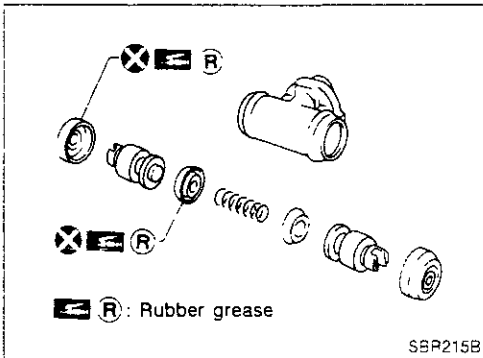

Wheel Cylinder Overhaul

Pay attention so as not to scratch cylinder when installing pistons.

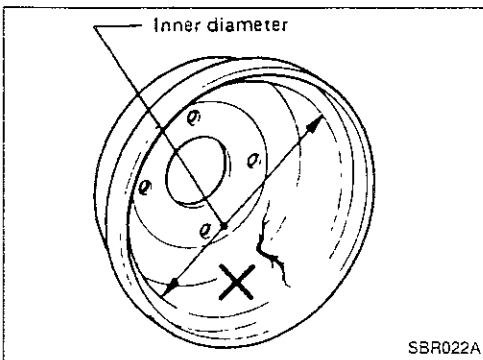

Inspection — Drum

Maximum inner diameter:

LT18C 181 mm (7.13 in)


LT23B 230 mm (9.06 in)

Out-of-roundness:

0.03 mm (0.0012 in) or less

- Contact surface should be fine finished with No. 120 to 150 emery paper.
- Using a drum lathe, lathe brake drum if it shows scoring, partial wear or stepped wear.
- After brake drum has been completely reconditioned or replaced, check drum and shoes for proper contact pattern.


REAR DRUM BRAKE

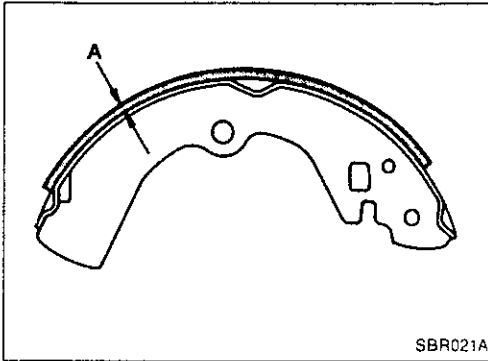

Inspection — Lining

Check lining thickness.


Lining wear limit (A):
1.5 mm (0.059 in)

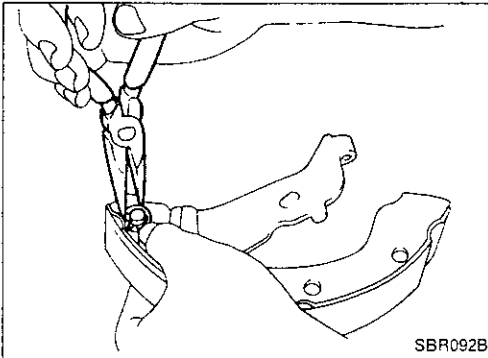


Installation

Always perform shoe clearance adjustment. Refer to "Adjustment" in "PARKING BRAKE CONTROL".

1. Fit toggle lever to brake shoe with retainer ring.
LT18C: Trailing side
LT23B: Leading side

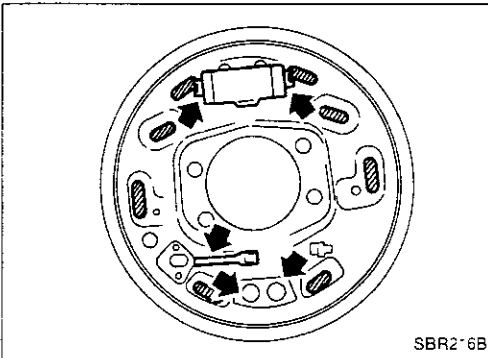

2. Apply brake grease to the contact areas shown at left.

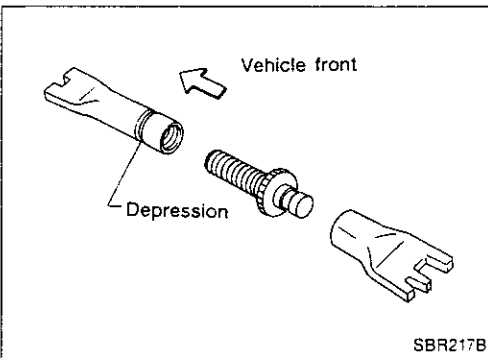

— LT18C —

3. Shorten adjuster by rotating it.


● Pay attention to direction of adjuster.

Wheel	Screw	Depression
Left	Left-hand thread	Yes
Right	Right-hand thread	No

4. Connect parking brake cable to toggle lever.
5. Install all parts.
6. Check all parts are installed properly.

Pay attention to direction of adjuster.

7. Install brake drum.
8. When installing new wheel cylinder or overhauling wheel cylinder, bleed air. Refer to "Bleeding procedure" in "AIR BLEEDING".


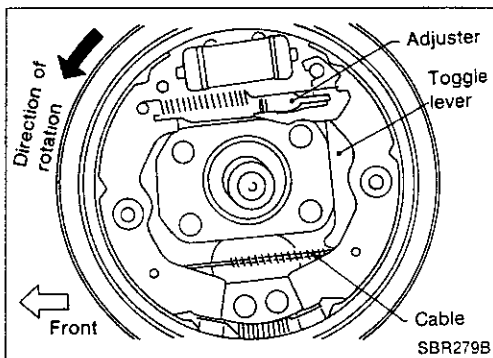


REAR DRUM BRAKE

Installation (Cont'd)

— LT23B —

- Install return spring so that paint mark faces downward (adjuster side).

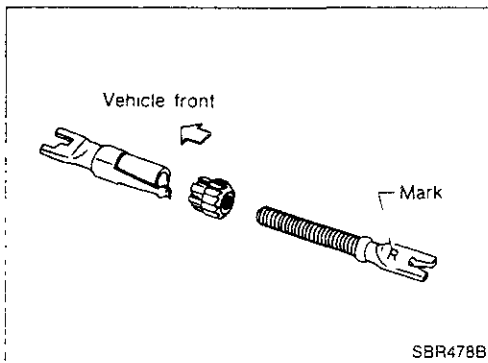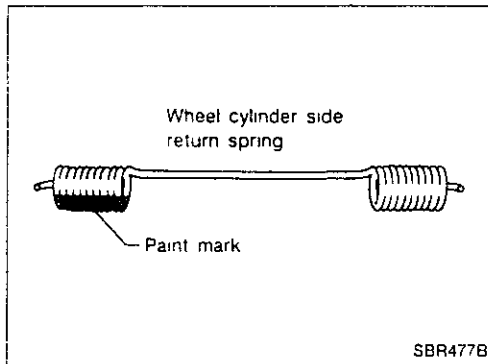


3. Shorten adjuster by rotating it.

CAUTION:

Pay attention to adjuster assembly direction since stamped mark and wheel locations differ for left-hand and right-hand brakes.

Wheel	Screw	Indication mark
Left	Left-hand thread	"R"
Right	Right-hand thread	"L"

4. Connect parking brake cable to toggle lever.
5. Install all parts.




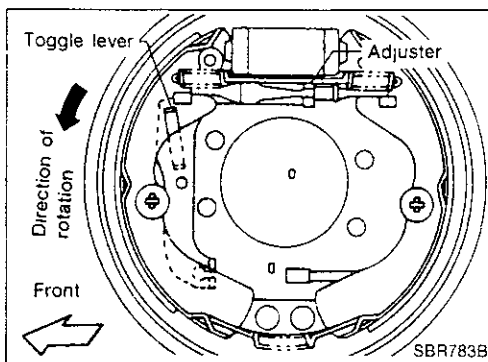


6. Check all parts are installed properly.

Pay attention to direction of adjuster assembly.

7. Install brake drum.
8. When installing new wheel cylinder, bleed air. Refer to "Bleeding procedure" in "AIR BLEEDING".

REAR DISC BRAKE

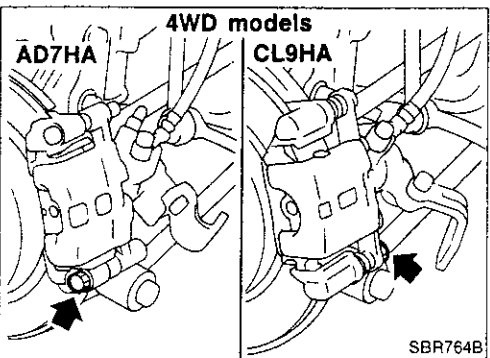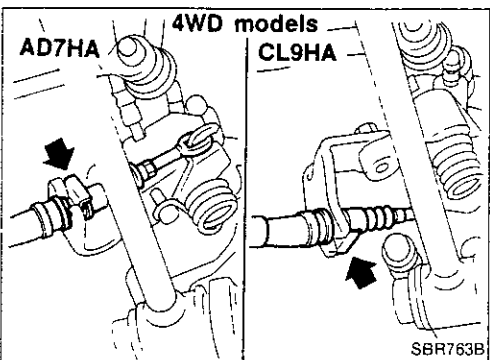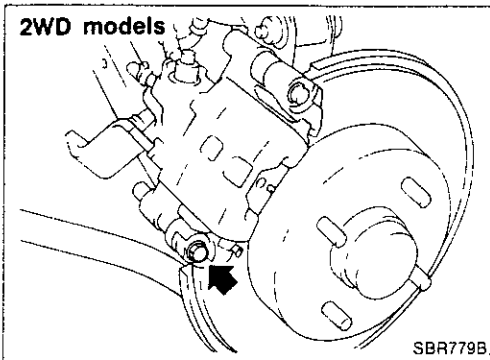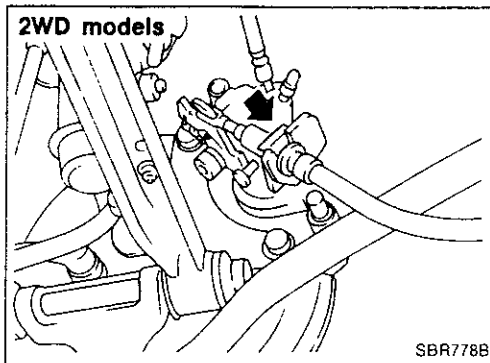

Pad Replacement

WARNING:

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.




CAUTION:

- When cylinder body is open, do not depress brake pedal because piston will pop out.
- Be careful not to damage piston boot or get oil on rotor. Always replace shims in replacing pads.
- If shims are rusted or show peeling of rubber coat, replace them with new shims.
- It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend cylinder body with wire so as not to stretch brake hose.

1. Remove master cylinder reservoir cap.
2. Remove brake cable lock spring.
3. Disconnect cable.
4. Remove pin bolt.

REAR DISC BRAKE

Pad Replacement (Cont'd)

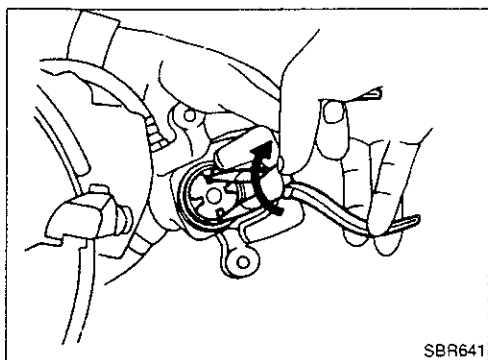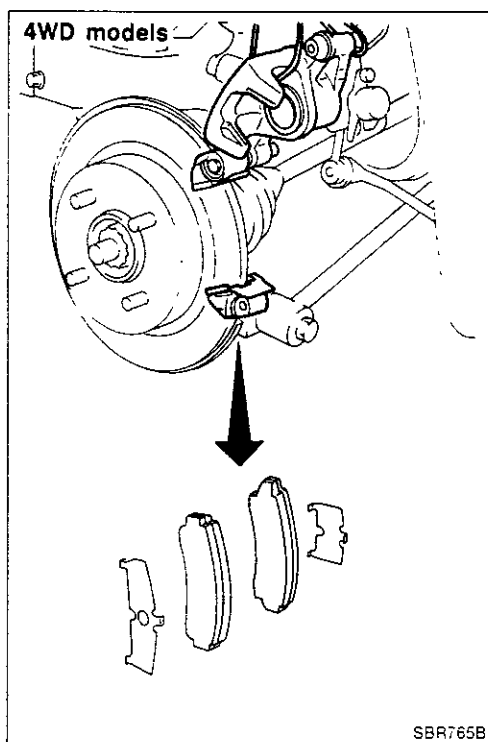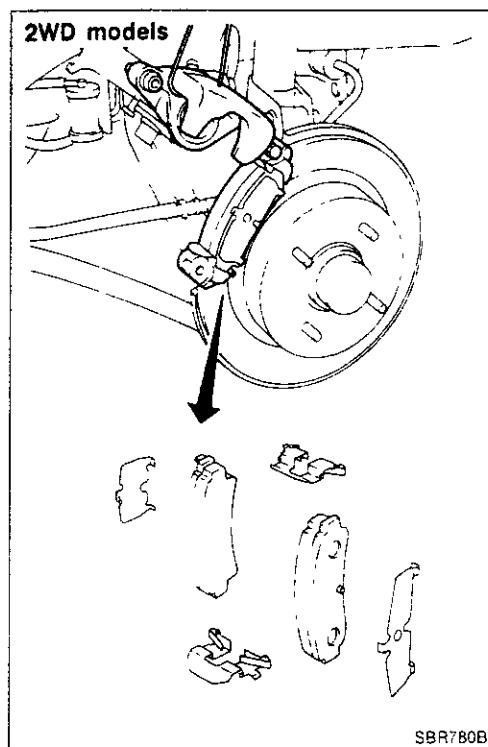

5. Open cylinder body upward. Then remove pad retainers, and inner and outer shims.

Standard pad thickness:

10 mm (0.39 in)

Pad wear limit:

2.0 mm (0.079 in)


6. When installing new pads, push piston into cylinder body by turning piston clockwise.

Carefully monitor brake fluid level because brake fluid will return to reservoir when pushing back piston.

REAR DISC BRAKE


AD7HA

-  (R) Rubber grease point
-  (B) Brake fluid point
-  N·m (kg·m, ft·lb)
-  (P) P.B.C. (Poly Butyl Cuprysil) grease or silicon-based grease point

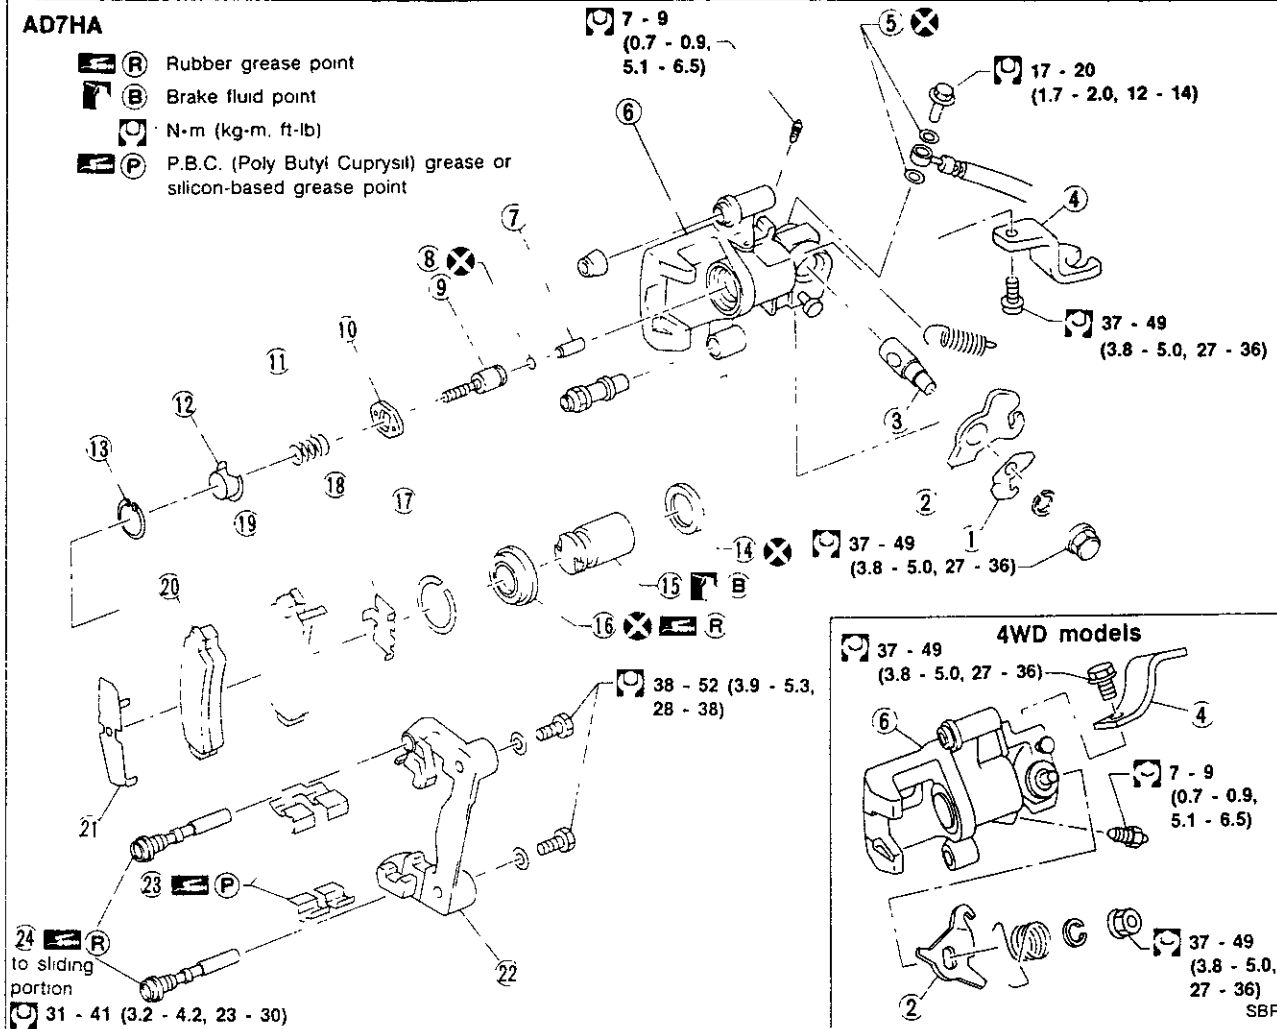

- | | | |
|-----------------|----------------|------------------------|
| ① Spring | ⑨ Push rod | ⑰ Piston boot retainer |
| ② Toggle lever | ⑩ Key plate | ⑱ Inner shim |
| ③ Cam | ⑪ Spring | ⑲ Inner pad |
| ④ Cable guide | ⑫ Spring cover | ⑳ Outer pad |
| ⑤ Copper washer | ⑬ Snap ring | ㉑ Outer shim |
| ⑥ Cylinder | ⑭ Piston seal | ㉒ Torque member |
| ⑦ Strut | ⑮ Piston | ㉓ Pad retainer |
| ⑧ O-ring | ⑯ Piston boot | ㉔ Slide pin bolt |

REAR DISC BRAKE

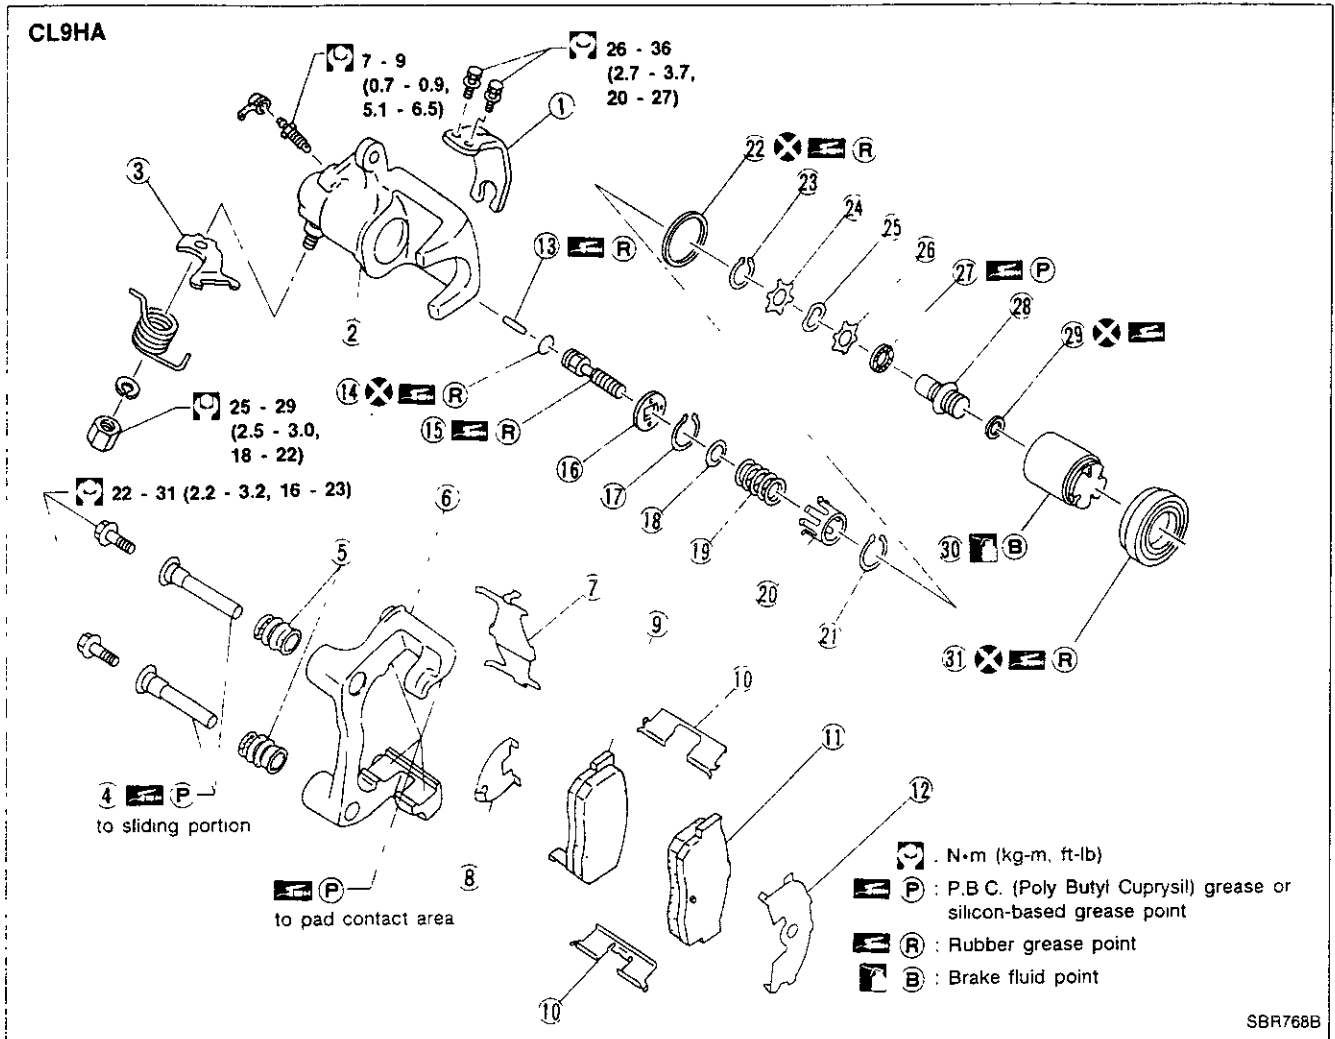

- ① Cable guide
- ② Cylinder
- ③ Toggle lever
- ④ Pin
- ⑤ Pin boot
- ⑥ Torque member
- ⑦ Retainer
- ⑧ Inner shim
- ⑨ Inner pad
- ⑩ Pad retainer
- ⑪ Outer pad

- ⑫ Outer shim
- ⑬ Strut
- ⑭ O-ring
- ⑮ Push rod
- ⑯ Key plate
- ⑰ Snap ring
- ⑱ Seat
- ⑲ Spring
- ⑳ Spring cover
- ㉑ Snap ring

- ㉒ Piston seal
- ㉓ Snap ring
- ㉔ Spacer
- ㉕ Wave washer
- ㉖ Spacer
- ㉗ Bearing
- ㉘ Adjuster
- ㉙ Cup
- ㉚ Piston
- ㉛ Piston boot

REAR DISC BRAKE


Removal

WARNING:

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.


CAUTION:

Suspend caliper assembly with wire so as not to stretch brake hose.

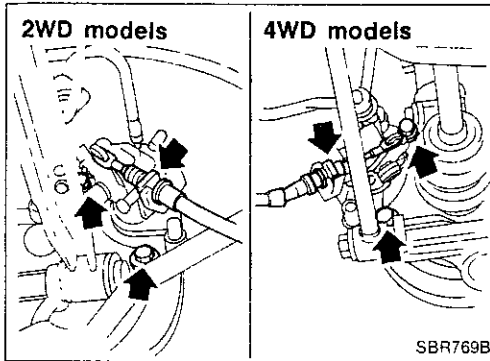

1. Remove brake cable mounting bracket bolt and lock spring.
2. Remove torque member fixing bolts and connecting bolt.


It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly.

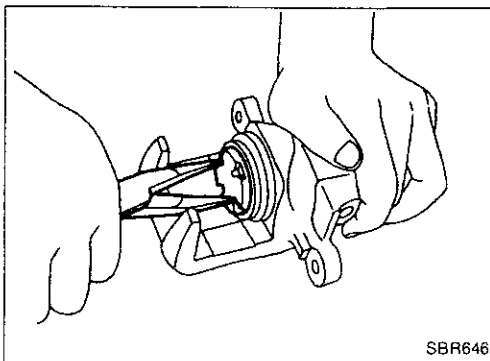


Disassembly

AD7HA

1. Remove piston by turning it counterclockwise with suitable long nose pliers.

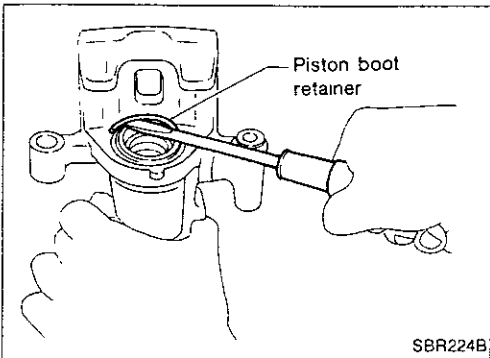

2. Remove piston boot retainer with a suitable tool and remove piston boot.

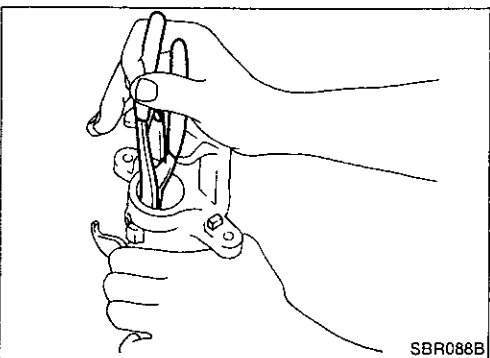


3. Disassemble cylinder body.
 - a. Pry off snap ring with suitable pliers, then remove spring cover, spring, key plate, push rod and strut.

REAR DISC BRAKE

Disassembly (Cont'd)


b. Remove piston seal.

Be careful not to damage cylinder body.

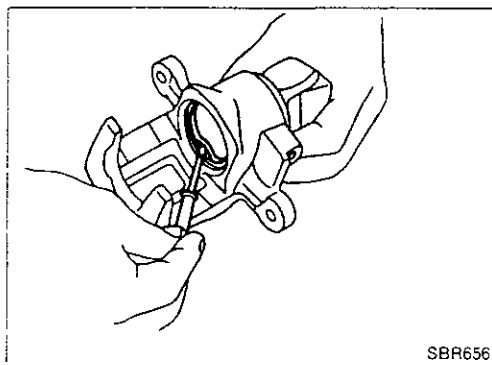

SBR656


2WD models

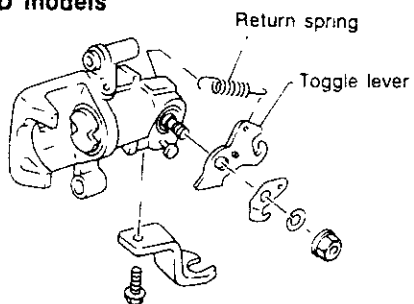

SBR781B

4. Remove return spring and toggle lever.


4WD models

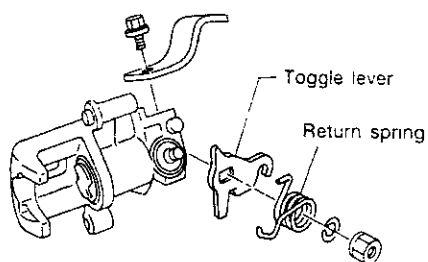

SBR770B


CL9HA

1. Remove piston by turning it counterclockwise with suitable long nose pliers.

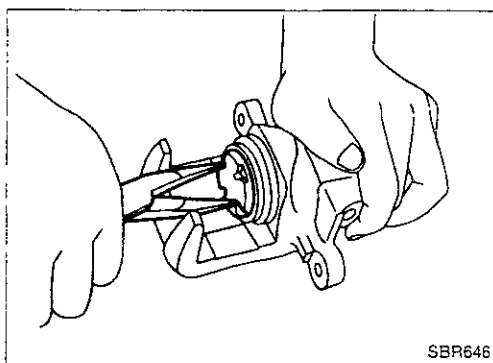

SBR646


2. Pry off snap ring from piston with suitable pliers and remove adjusting nut.

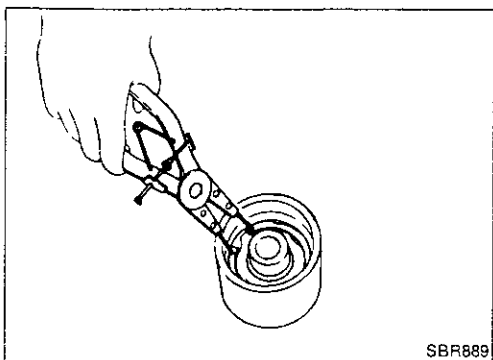

SBR689


REAR DISC BRAKE

Disassembly (Cont'd)

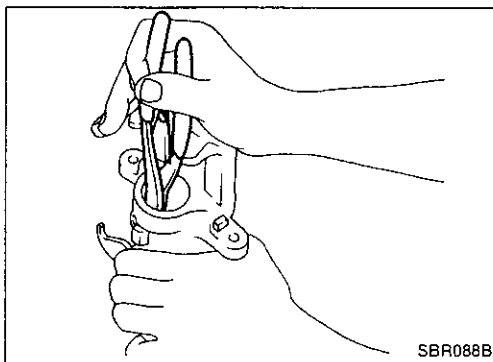

3. Disassemble cylinder body.

- a. Pry off snap ring with suitable pliers, then remove spring cover, spring and seat.
- b. Pry off snap ring, then remove key plate, push rod and rod.

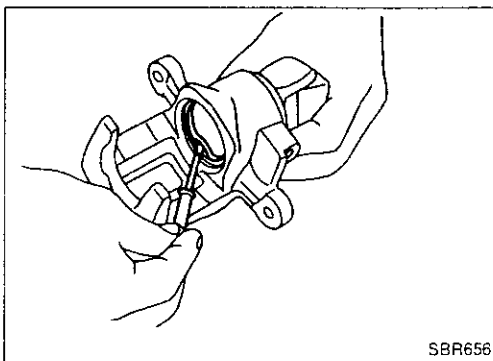

c. Remove piston seal.

Be careful not to damage cylinder body.

Inspection — Caliper

CAUTION:

Use brake fluid to clean cylinder. Never use mineral oil.

CYLINDER BODY

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

TORQUE MEMBER

Check for wear, cracks or other damage. Replace if necessary.

PISTON

Check piston for score, rust, wear, damage or presence of foreign materials.

Replace if any of the above conditions are observed.

CAUTION:

Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign materials is stuck to sliding surface.

PIN AND PIN BOOT

Check for wear, cracks or other damage.


Replace if any of the above conditions are observed.

REAR DISC BRAKE

Inspection — Rotor

RUBBING SURFACE

Check rotor for roughness, cracks or chips.

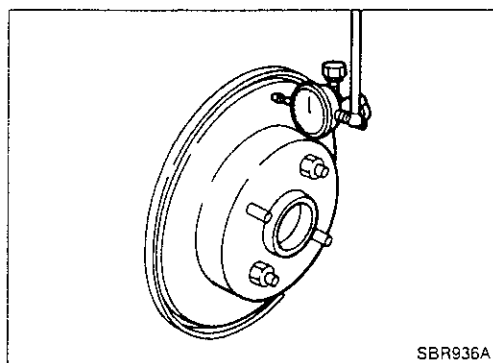


RUNOUT

1. Secure rotor to wheel hub with two nuts (M12 x 1.25).
2. Check runout using a dial indicator.

Make sure that axial end play is within the specifications before measuring. Refer to section RA.

3. Change relative positions of rotor and wheel hub so that runout is minimized.

Maximum runout
0.07 mm (0.0028 in)

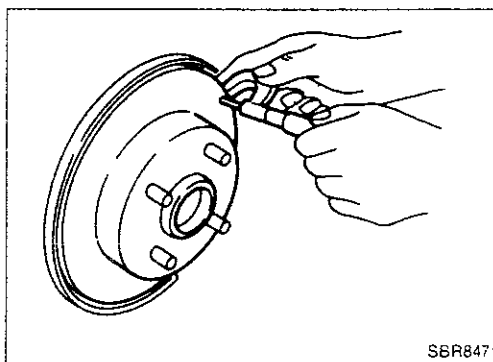

THICKNESS

Rotor repair limit:

Minimum thickness


AD7HA 6.0 mm (0.236 in)

CL9HA 8.0 mm (0.315 in)

Thickness variation (At least 8 portions)

Maximum 0.02 mm (0.0008 in)


Replace rotor if any of the above did not meet the specifications.

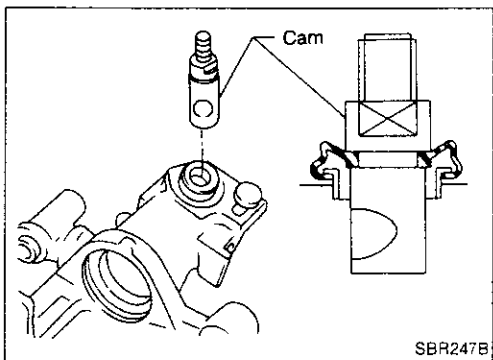

Assembly

AD7HA


1. Insert cam with depression facing towards open end of cylinder.

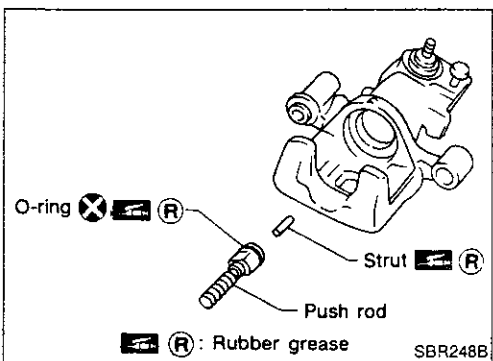


2. Generously apply rubber grease to strut and push rod to make insertion easy.

REAR DISC BRAKE


Assembly (Cont'd)

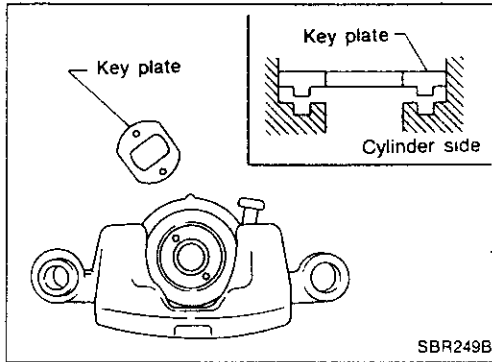


3. Match depressions in cylinder bottom with key plate protrusions.

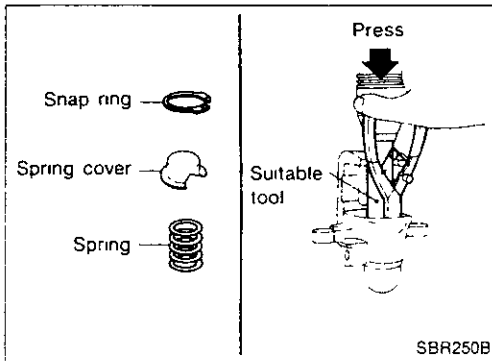


4. Install spring, spring cover and snap ring with a suitable tool.

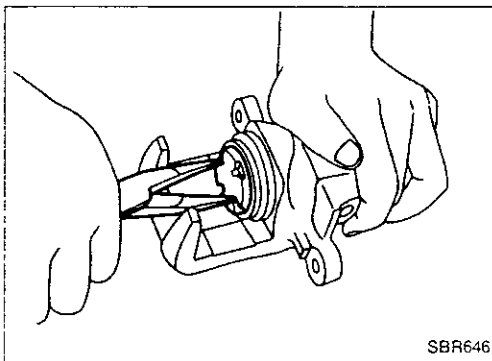

5. Fit piston by turning it clockwise with suitable long nose pliers.

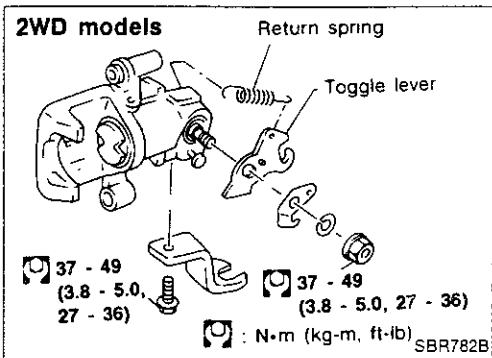


6. Fit toggle lever and return spring.

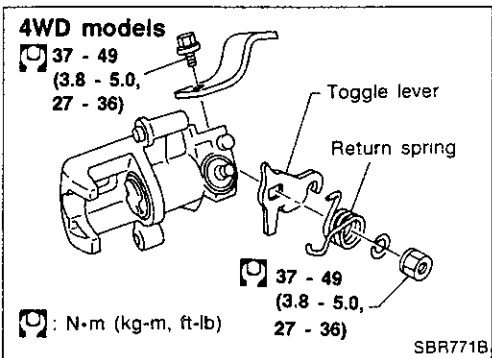


REAR DISC BRAKE

Assembly (Cont'd)


CL9HA

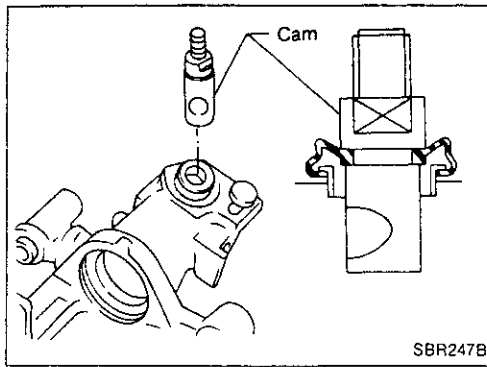


1. Insert cam with depression facing towards open end of cylinder.

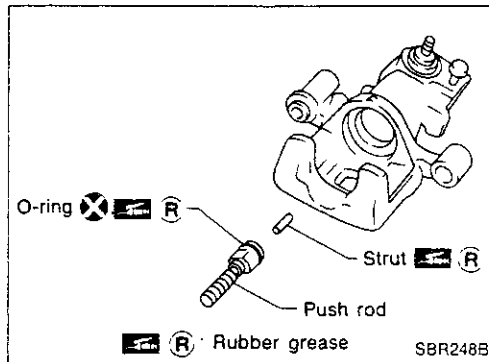


2. Generously apply rubber grease to strut and push rod to make insertion easy.

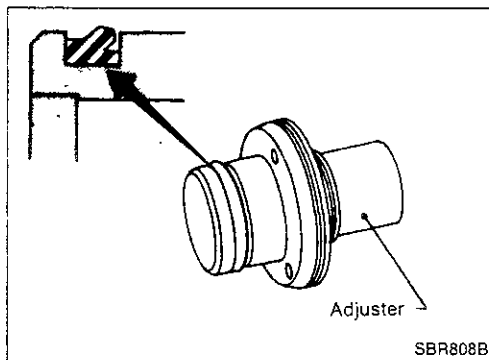

3. Install cup in the specified direction.

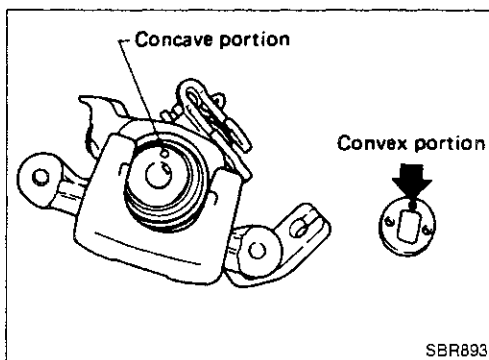


4. Match convex portion of key plate with concave portion of cylinder.

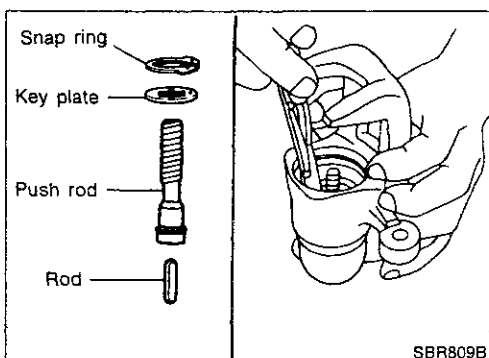


5. Install snap ring with a suitable tool.

REAR DISC BRAKE


Assembly (Cont'd)

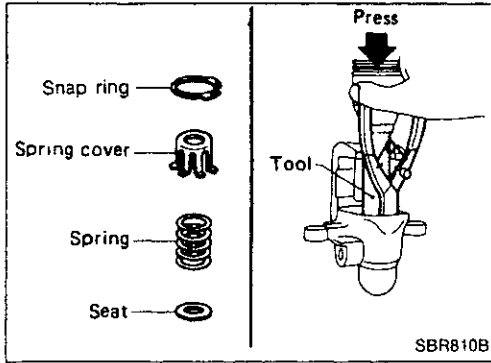


6. Install seat, spring, spring cover and snap ring with a suitable tool.

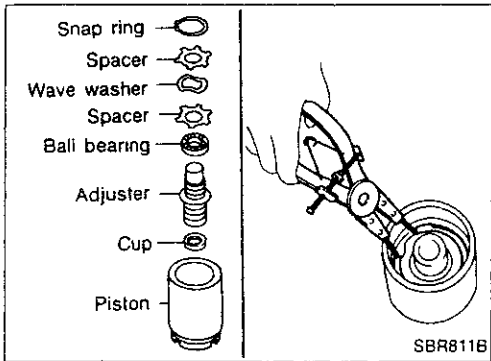


7. Install cup, adjuster, bearing, spacers, washers and snap ring with a suitable tool.

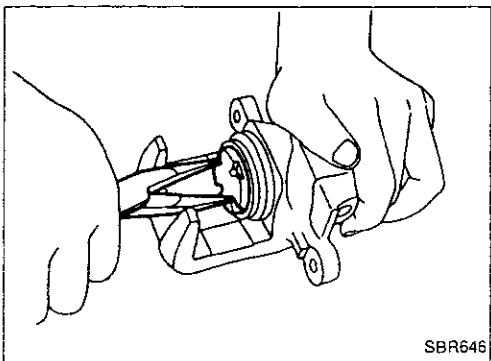

8. Fit piston by turning it clockwise with suitable long nose pliers.

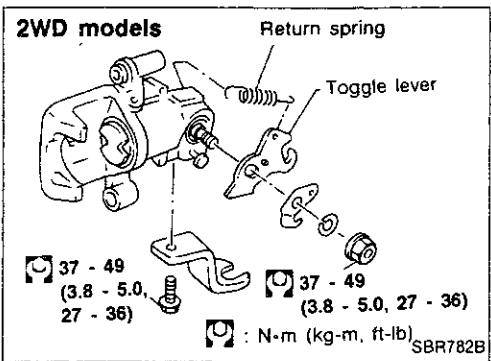

9. Fit toggle lever and return spring.

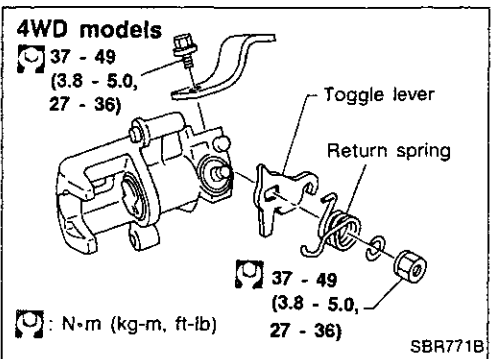




REAR DISC BRAKE

Installation

CAUTION:

- Refill with new brake fluid "DOT 3".
 - Never reuse drained brake fluid.
1. Install brake hose to caliper securely.
 2. Install all parts and secure all bolts.
 3. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".

PARKING BRAKE CONTROL

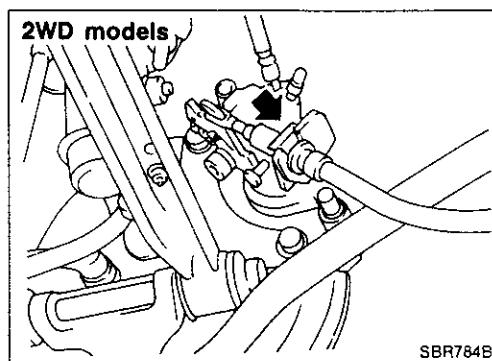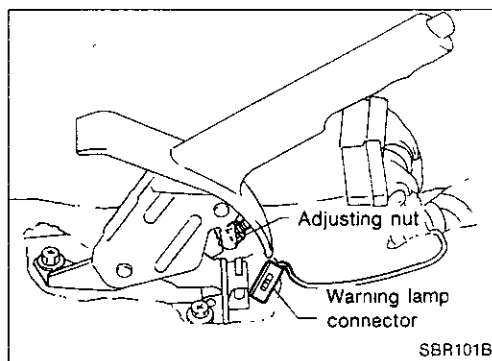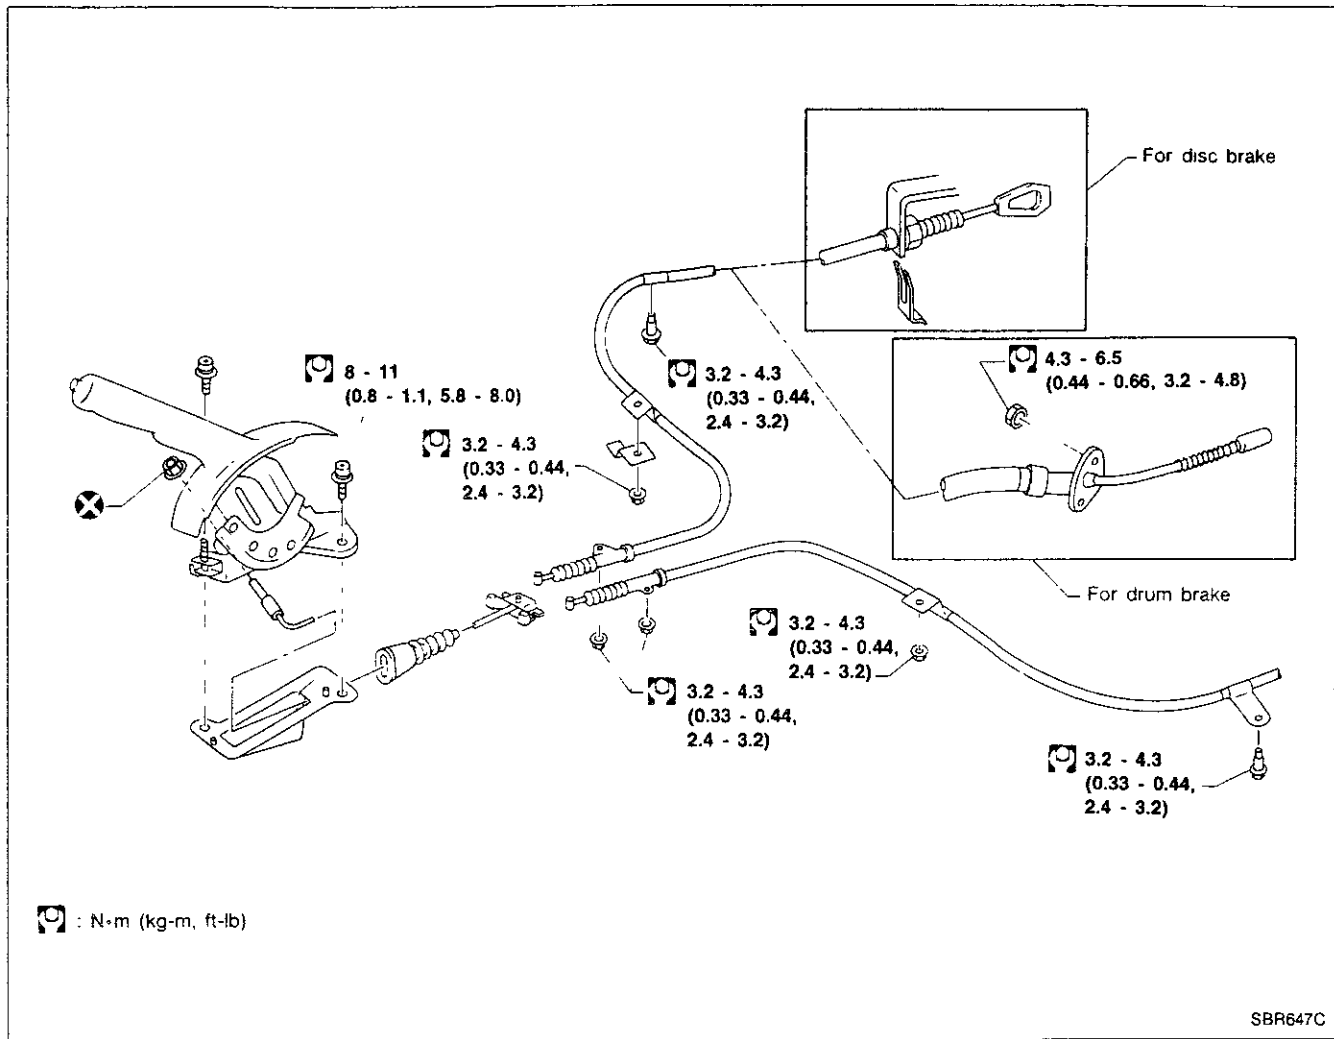


Removal and Installation

1. To remove parking brake cable, first remove center console.
2. Disconnect warning lamp connector.
3. Remove bolts, slacken off and remove adjusting nut.
4. Remove lock plate and disconnect cable (disc brake only). For drum brake models, refer to "Removal" in "REAR DRUM BRAKE".


PARKING BRAKE CONTROL

Removal and Installation (Cont'd)

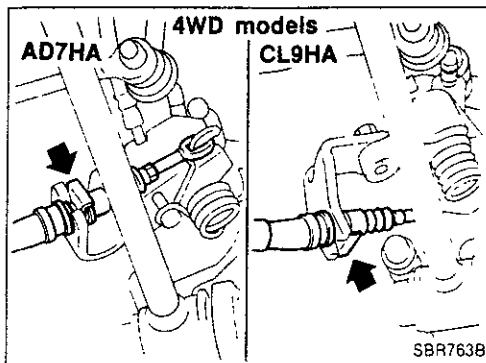

Inspection

1. Check control lever for wear or other damage. Replace if necessary.
2. Check wires for discontinuity or deterioration. Replace if necessary.
3. Check warning lamp and switch. Replace if necessary.
4. Check parts at each connecting portion and, if found deformed or damaged, replace.

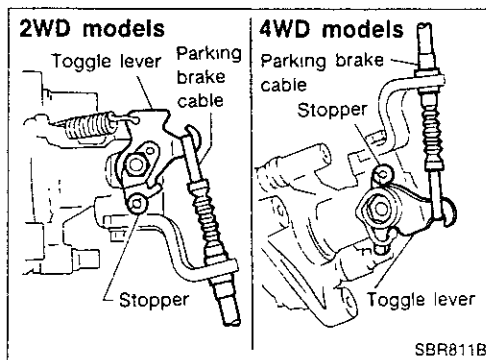

Adjustment

Before or after adjustment, pay attention to the following points.

- a. For rear disc brake be sure that toggle lever returns to stopper when parking brake lever is released.
- b. There is no drag when parking brake lever is released.


1. Adjust clearance between shoe and drum/pad and rotor as follows:

— LT23B —

- a. Pull parking brake lever several times until clicking sound does not occur from rear brake.


— OTHERS —

- a. Release parking brake lever and loosen adjusting nut.
 - b. Depress brake pedal fully at least 10 times.
2. Pull control lever 4 - 5 notches. Then adjust control lever by turning adjusting nut.

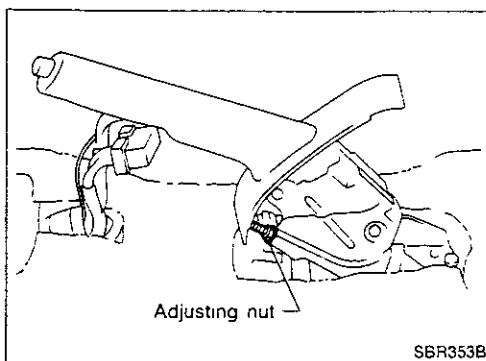

PARKING BRAKE CONTROL

Adjustment (Cont'd)

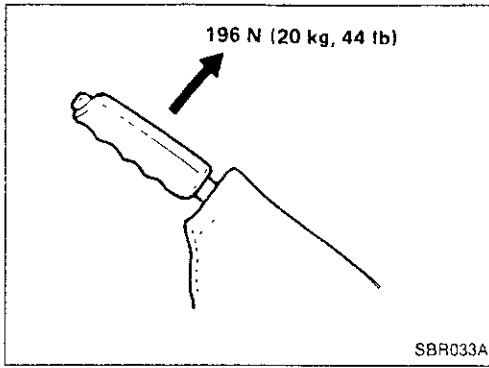

3. Pull control lever with specified amount of force. Check lever stroke and ensure smooth operation.

Number of notches:

Drum brake 5 - 6

Disc brake 7 - 8

4. Bend parking brake warning lamp switch plate so that brake warning lamp comes on when ratchet at parking brake control lever is pulled "A" notches and goes out when fully released.

Number of "A" notches : 1 or less

ANTI-LOCK BRAKING SYSTEM


Purpose

- Excessive braking in any condition (Dry or wet) will adversely affect the normal turning of the vehicle's wheels and they may lock up.
- When the front wheels are locked, a vehicle cannot be controlled by the steering system.
- When the rear wheels are locked, the vehicle will enter a flat spin.

The A.B.S., by the use of electronic and hydraulic components, allows for control of braking force so that locking of the wheels can be avoided in the circumstances described above.

The A.B.S.:

- 1) Ensures proper tracking performance through steering wheel operation.
- 2) Enables obstacles to be avoided through steering wheel operation.
- 3) Ensures vehicle stability by preventing flat spins.

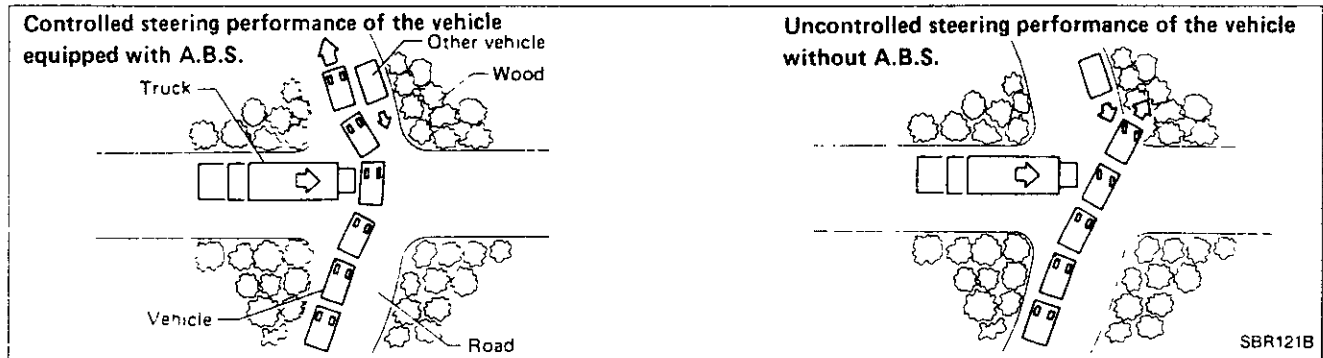

Operation

The A.B.S. is controlled by an electronic control unit (E.C.U.), which receives signals from various sensors relating to vehicle condition, speed, etc.

The hydraulic circuit is controlled by an actuator containing an electric motor, pump and 2 solenoids. The E.C.U. directs the actuator to increase, hold or decrease hydraulic pressure to all or individual wheels. The E.C.U. receives information regarding wheel speed from sensors, mounted one per wheel.

When excessive braking force causes a wheel to lock, the E.C.U. sends a 5 amp current to the actuator to release the locked wheel.

As the wheel unlocks, it can be steered. The E.C.U. senses wheel speed is increasing and re-applies hydraulic pressure. The wheel locks again, is released, steered, braked, and so on. This continuous locking and unlocking of the wheels allows for rapid speed reduction and the vehicle to be steered in the correct manner.


The hydraulic pressure can also be "held" constant by a 2 amp current sent from the E.C.U. to the actuator.

The rear wheels utilize a load-sensing valve to further prevent wheel locking, especially under minimum vehicle load conditions.

However, when the vehicle speed is less than 10 km/h (6MPH), this system does not work.

ANTI-LOCK BRAKING SYSTEM

Operation (Cont'd)


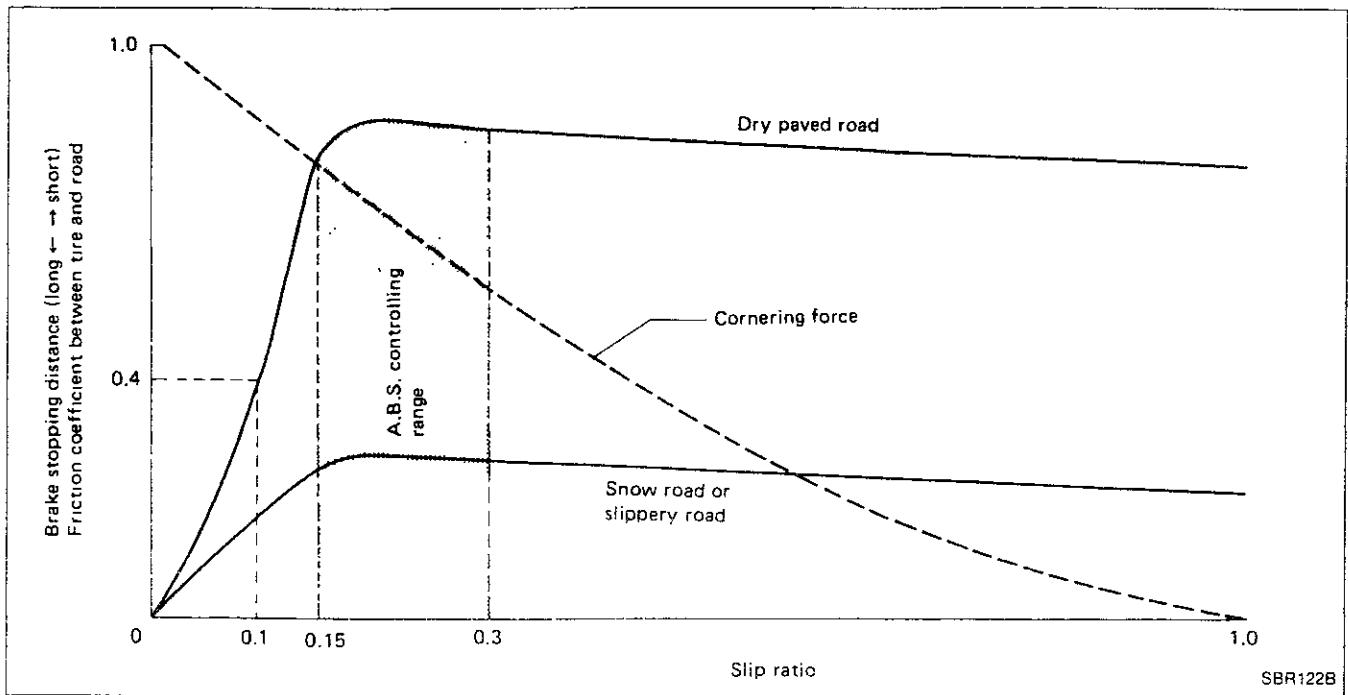


$$\text{SLIP RATIO} = \frac{\text{VEHICLE SPEED} - \text{WHEEL SPEED}}{\text{VEHICLE SPEED}}$$

- The applied brake condition is expressed by a slip ratio, as shown above. If the slip ratio is in the range from 0.15 to 0.3, the wheel has adequate cornering performance, and also minimum stopping distance can be achieved.
- The slip ratio formula indicates the control of wheel speed by the brakes.
The Anti-lock Braking System (A.B.S.) controls brake fluid pressure using the slip ratios and locking condition calculation contained in the A.B.S. control unit.
- To adjust wheel speed so that the optimum slip ratio can be obtained, the A.B.S. must sense wheel speed and vehicle speed through a wheel speed sensor.
If the brake is applied, especially in the locked wheel condition, the vehicle speed differs from the wheel speed.
- After the wheel speed changes from the vehicle speed due to excessive brake force, the A.B.S. calculates vehicle speed when the reduced wheel speed reaches the minimum.

ANTI-LOCK BRAKING SYSTEM

System Components

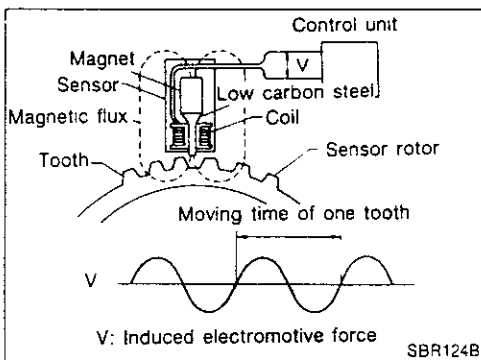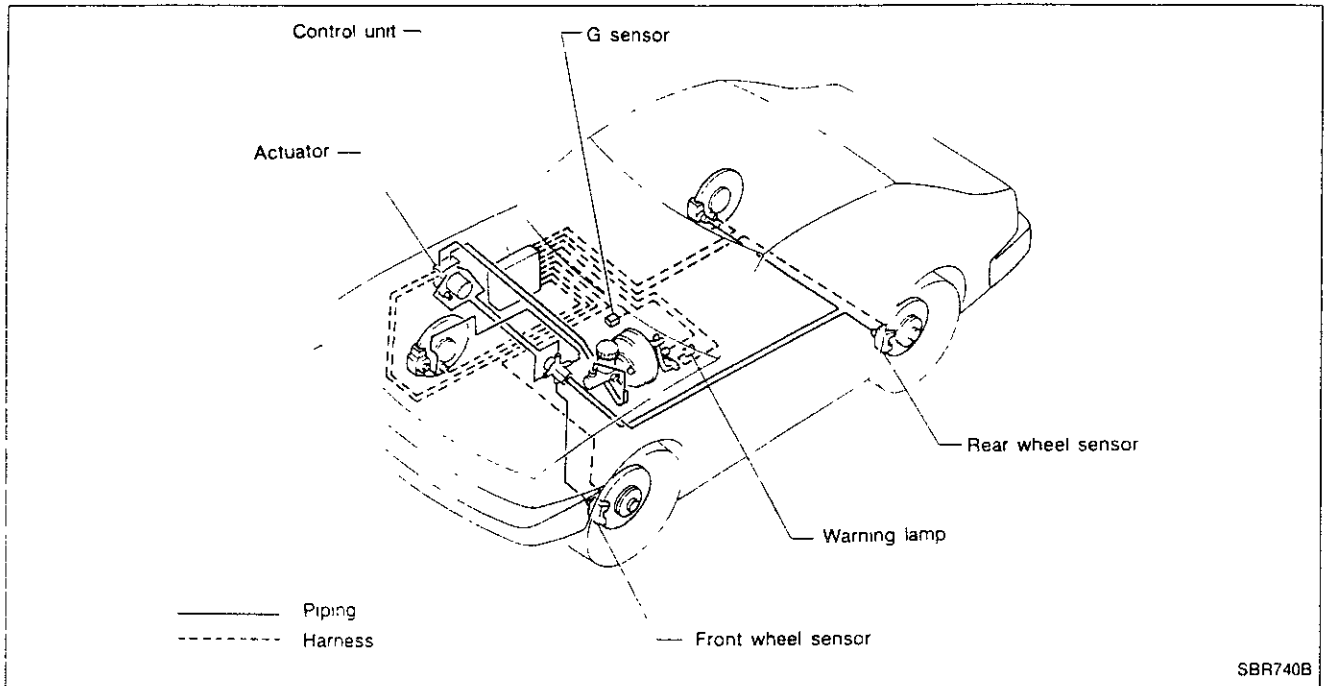



System Description

SENSOR

The sensor unit consists of a gear-shaped rotor and a sensor element which contains a bar magnet around which a coil is wound. The sensor is installed on the back side of the brake rotor. Sine-wave current is generated by the sensor as the wheel rotates. The frequency and voltage increase(s) as the rotating speed increases.

CONTROL UNIT


The control unit computes the rotating speed of the wheel by the signal current sent from the sensor, and supplies a DC current of about 5 amperes, about 2 amperes, or 0 amperes to the actuator solenoid valve provided for each wheel by changing its internal resistance. It also controls ON-OFF operation of the valve relay and pump relay. If any electrically detectable malfunction should occur in the system, the control unit causes the warning light to light up, and the L.E.D. indicator to flash the number of times which corresponds to the malfunction location. In this condition, the A.B.S. will be deactivated by the control unit, and the vehicle's braking system reverts to normal operation.

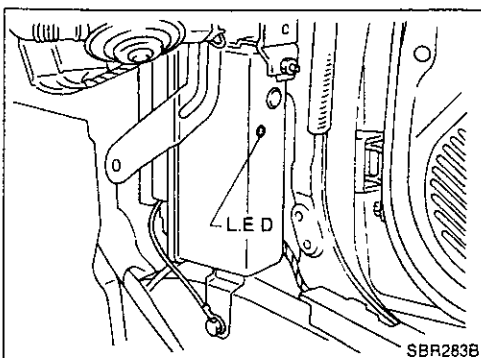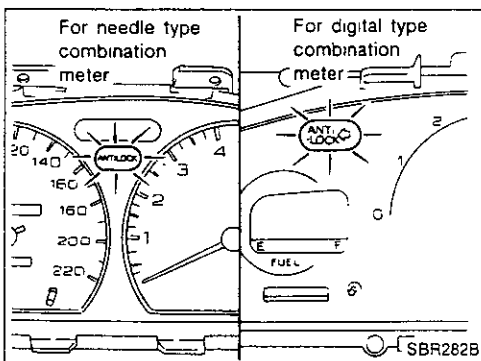

ANTI-LOCK BRAKING SYSTEM

System Description (Cont'd)

CONTROL UNIT CONTROL CHART

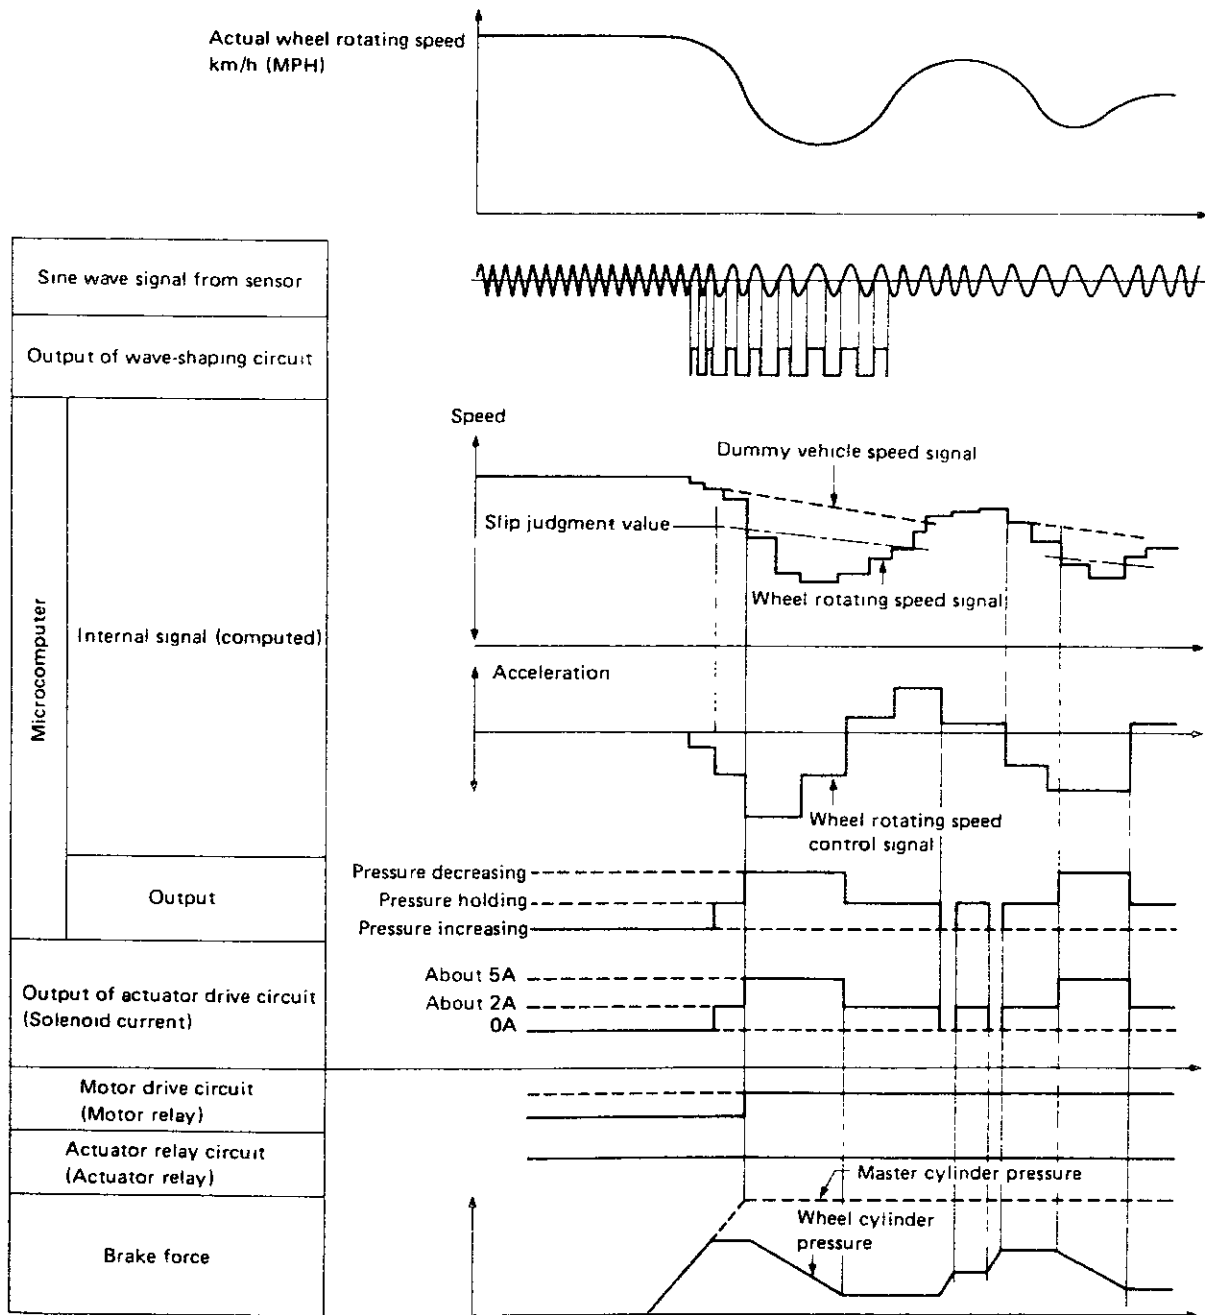

ANTI-LOCK BRAKING SYSTEM

System Description (Cont'd)



G SENSOR (4WD models only)

Since engine power can be delivered simultaneously to all four wheels, the 4WD model has the following characteristics:

- (A) Ease of synchronous wheel rotation
- (B) High rotational inertia of wheels

The above two characteristics (A) and (B) have a tendency to increase while vehicle is being driven on road surfaces with low frictional coefficients. These characteristics also have a tendency to increase due to the limited slip differential that utilizes viscous coupling, etc.

The following figure shows the effect of characteristics (A) and (B) on the ABS.

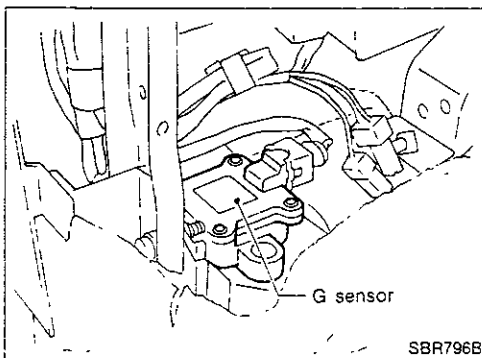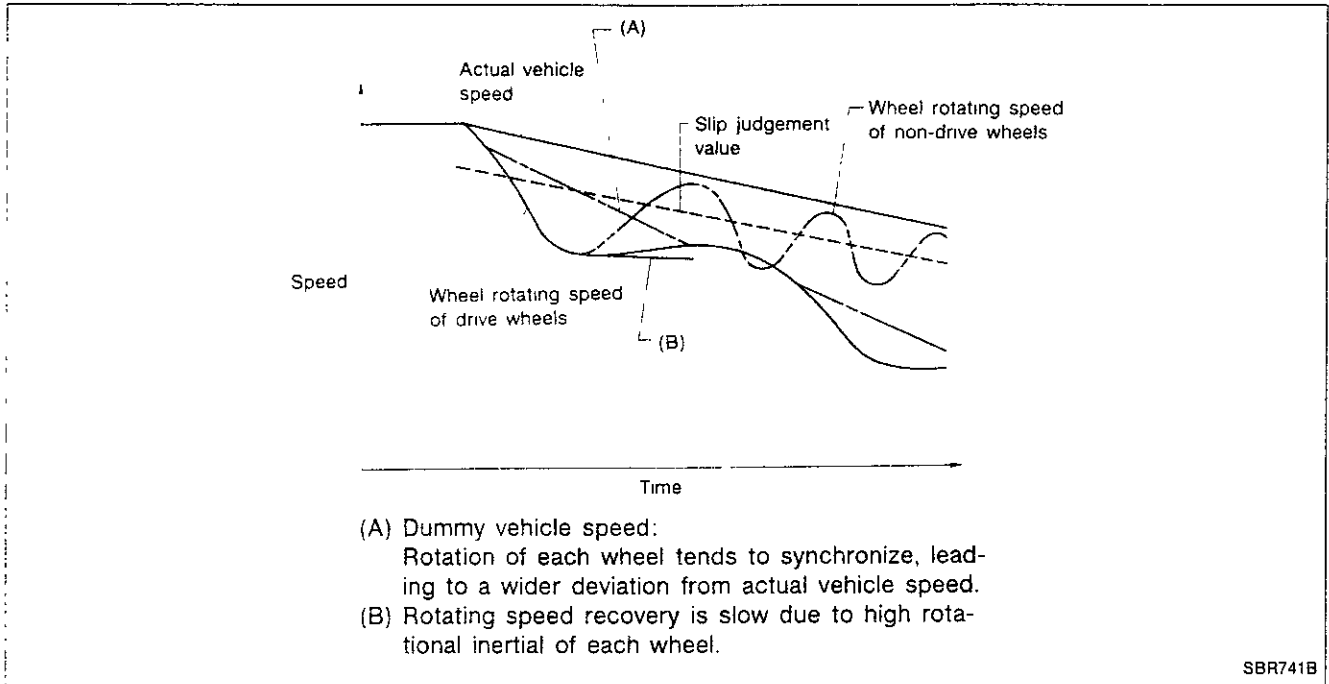

In general, 4WD and ABS are made compatible with each other by utilizing the following techniques:


- The ABS does not operate with the center differential locked.
- 4WD is set in the 2WD mode during braking.
- Torque distribution to the front and rear wheels is controlled in response to ABS action.

The G sensor indirectly senses the frictional coefficient of different road surfaces during braking to control the ABS accordingly. In other words, control of the center differential, etc. are not required anymore.

ANTI-LOCK BRAKING SYSTEM

System Description (Cont'd)


ACTUATOR

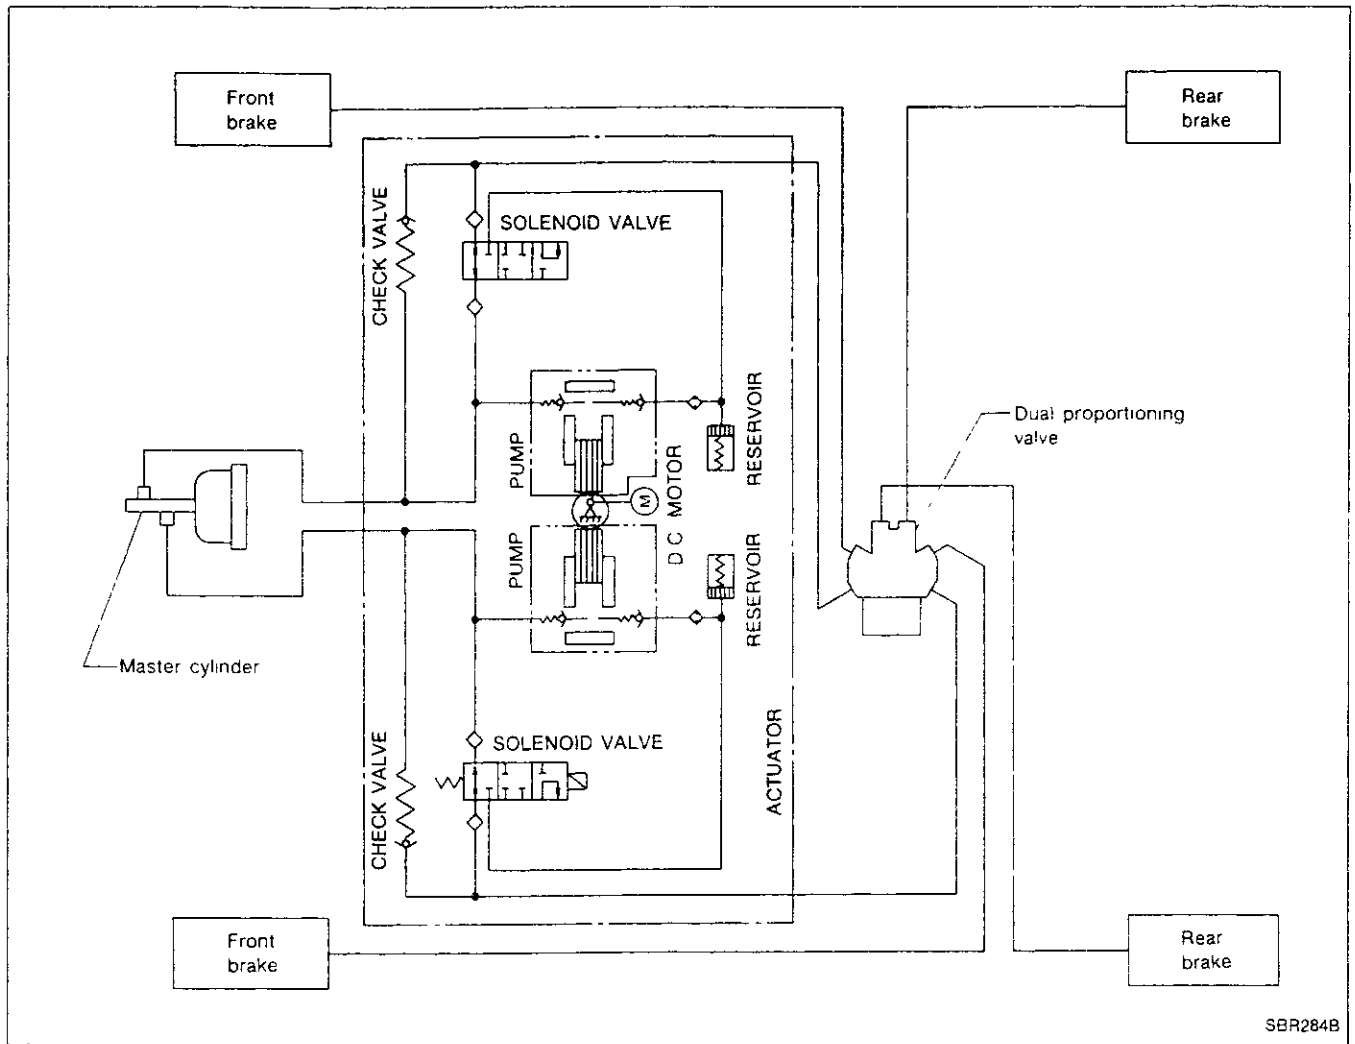


The actuator consists of solenoid valves, a pump, reservoir (for pressure decreasing). The solenoid valve changes its spool position corresponding to the control unit output amperage: it forms a pressure decreasing circuit at about 5 amperes, a pressure holding circuit at about 2 amperes, and a pressure increasing circuit at 0 amperes. When the pressure decreasing circuit is formed, the brake fluid in the caliper flows into the reservoir and the pressure drops. The pump delivers the fluid to the master cylinder. When the pressure holding circuit is formed, the caliper line is cut off, and the fluid pressure in the caliper is held constant.

ANTI-LOCK BRAKING SYSTEM

Operation of Actuator Hydraulic Circuit

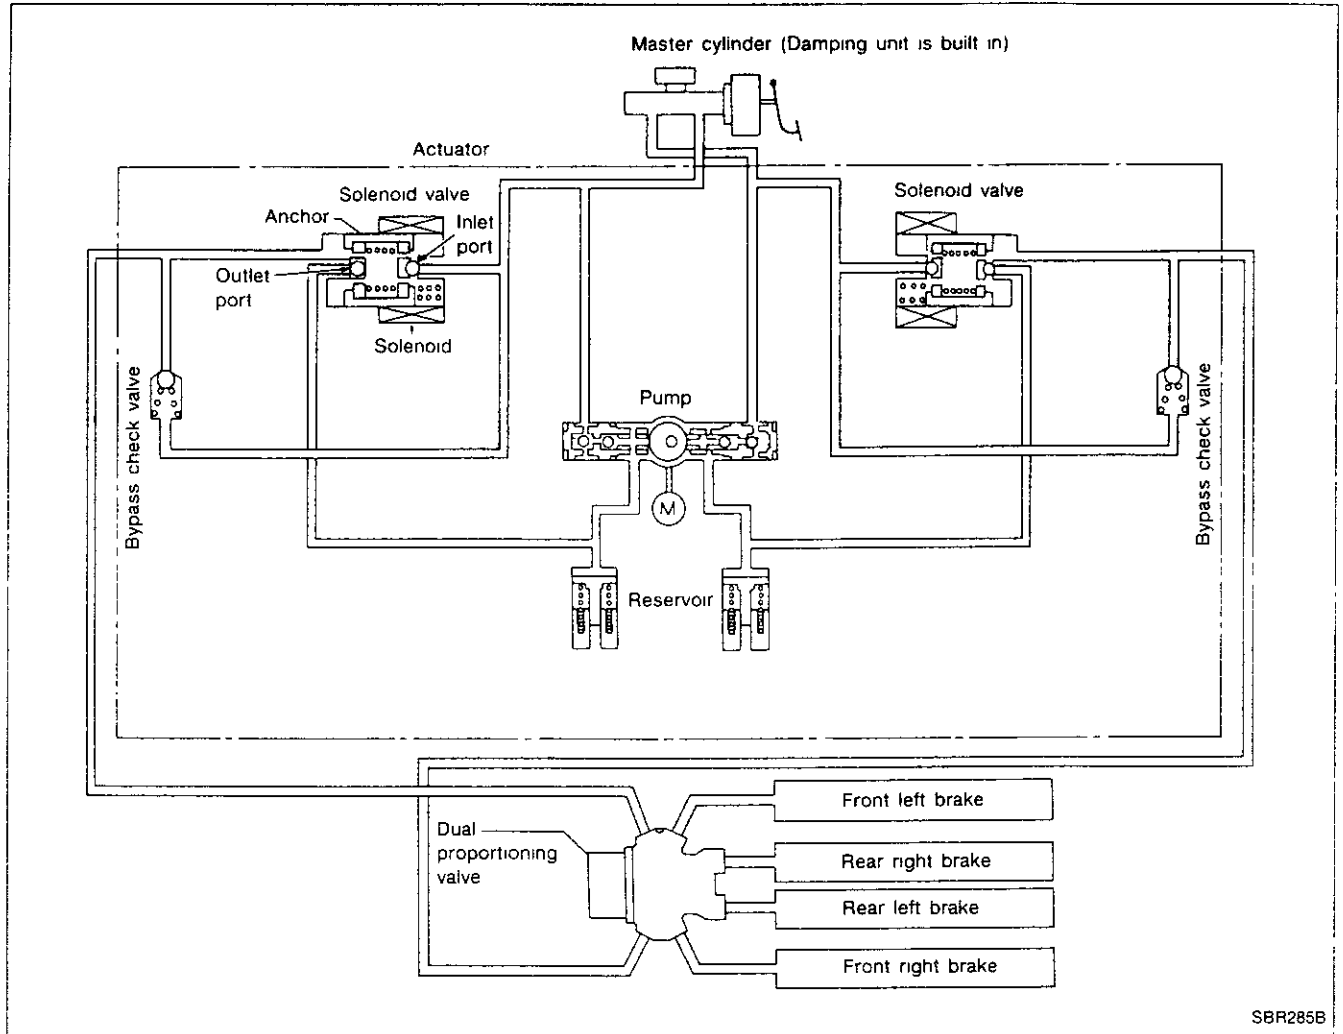


SBR285B

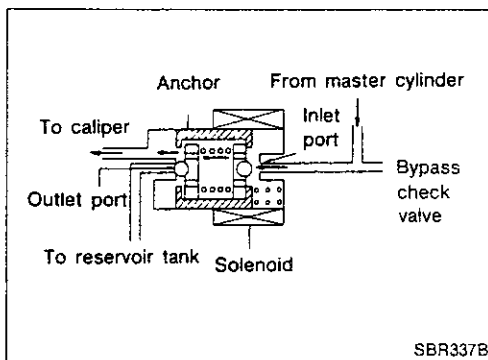

COMPONENT PARTS AND THEIR FUNCTIONS

Solenoid valve

Current flowing through the solenoid controls the anchor position. Thus, the required ports open or close so that brake pressure to the caliper is adjusted properly.

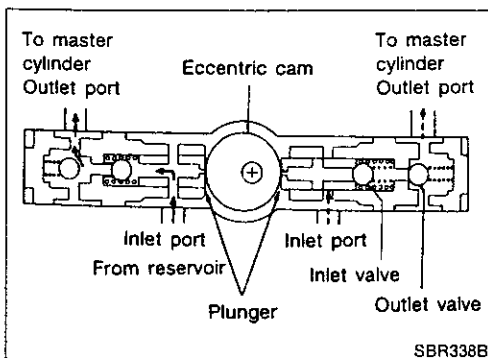

Pump


The pump delivers **brake fluid to the master cylinder to decrease fluid pressure in the caliper**. When the pump shaft's eccentric cam pushes the plunger to the left (as shown in the figure), oil from the reservoir is delivered to the master cylinder via the inlet and outlet ports and the inlet and outlet valves. At this point, the plunger on the right side of the pump is held stationary so that both the inlet and outlet ports as well as the inlet and outlet valves are closed. In this manner, the valve controls suction and discharge.

ANTI-LOCK BRAKING SYSTEM

Operation of Actuator Hydraulic Circuit (Cont'd)


Reservoir

The reservoir temporarily stores brake fluid returning from the calipers as required in order to provide a smooth pressure decrease in the calipers.

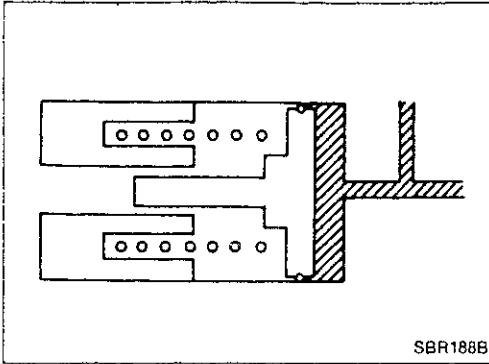

Bypass check valve


During brake release, brake fluid returns from the caliper to the master cylinder through this valve without entering the solenoid valve.

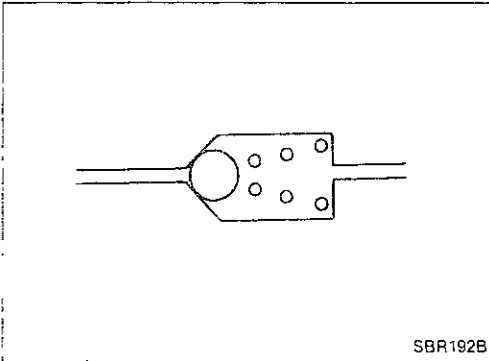

ANTI-LOCK BRAKING SYSTEM

Operation of Actuator Hydraulic Circuit (Cont'd)

NORMAL BRAKE OPERATION (A.B.S. is not operating)

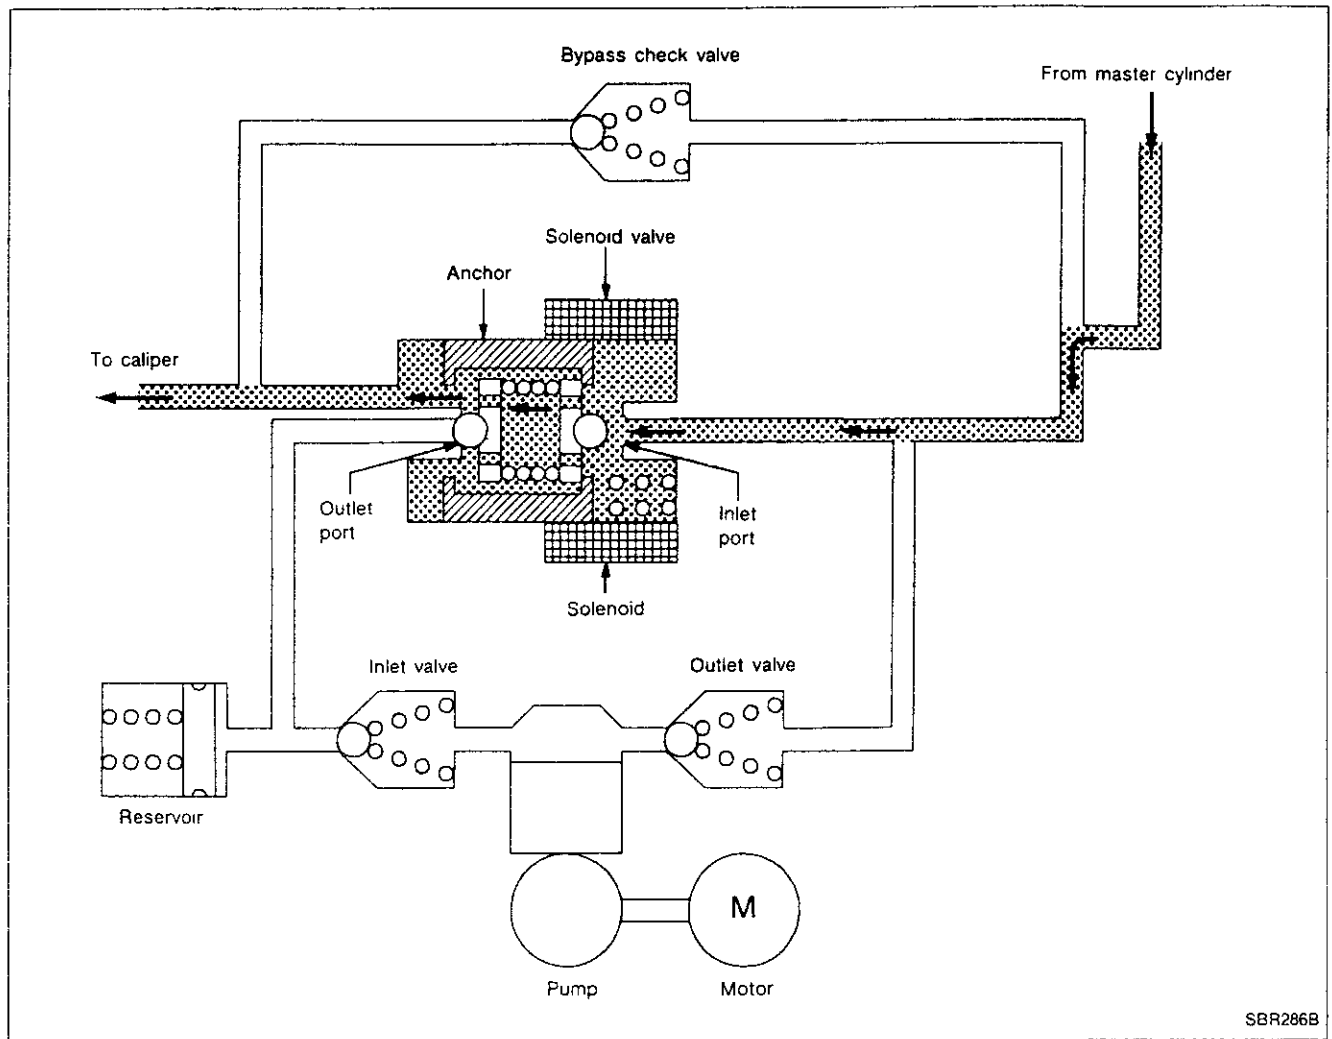

Description

Electric current to the solenoid ... 0 [A]

1. Magnetic force is not produced at the solenoid valve so that the anchor is not attracted toward the solenoid.
2. The inlet port is opened and the outlet port is closed.
3. Master cylinder brake fluid pressure is directly transmitted to the caliper (= disc brake) via the inlet port of the solenoid valve.
 - ➡ Since the outlet port of the solenoid valve is closed, brake fluid pressure is not delivered to the reservoir.


ANTI-LOCK BRAKING SYSTEM

Operation of Actuator Hydraulic Circuit (Cont'd)

ANTI-LOCK OPERATION

The following operations are repeated in a very short period of time (during pressure "Hold" and "Decrease"). As a result, each wheel is prevented from locking up.

Operation during pressure "Hold" (Wheels begin to slip)

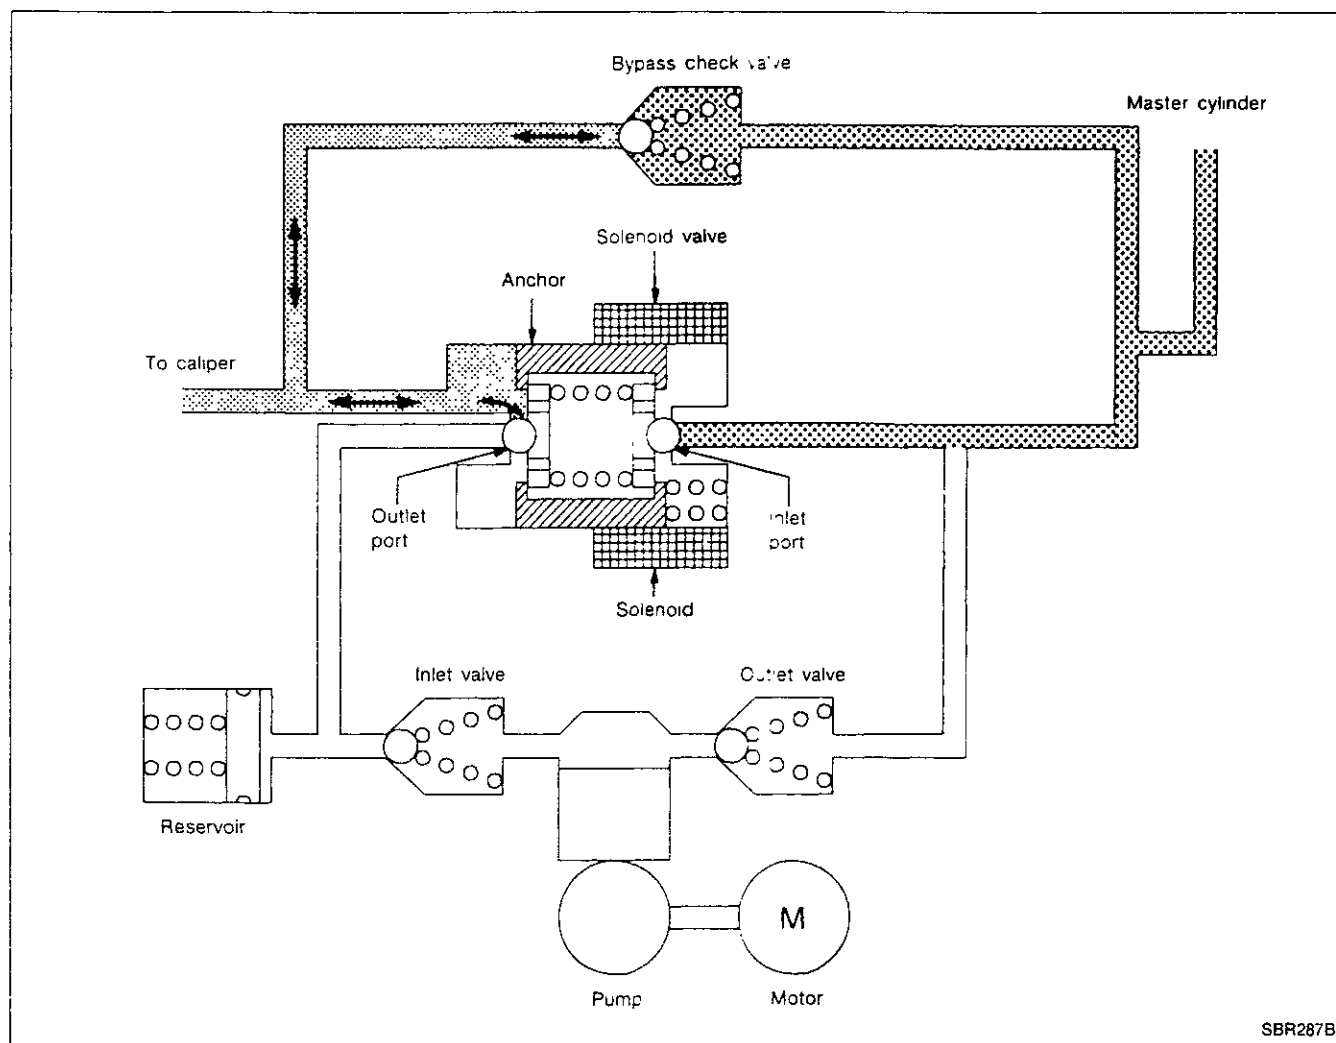

Description


Electric current to the solenoid ... 2 [A]

1. Magnetic force produced by current "2[A]" attracts the anchor to a position where the anchor and return spring are balanced. (Travel distance is small.)
2. Both inlet and outlet ports are closed.
3. Master cylinder fluid pressure is not delivered to the solenoid valve so that caliper pressure is held.
 - ➡ Caliper fluid pressure is not delivered to the reservoir since the outlet port of the solenoid valve is closed. The bypass check valve is closed due to high master cylinder fluid pressure.

ANTI-LOCK BRAKING SYSTEM

Operation of Actuator Hydraulic Circuit (Cont'd)

Operation during pressure "Decrease" (Wheels slip excessively)

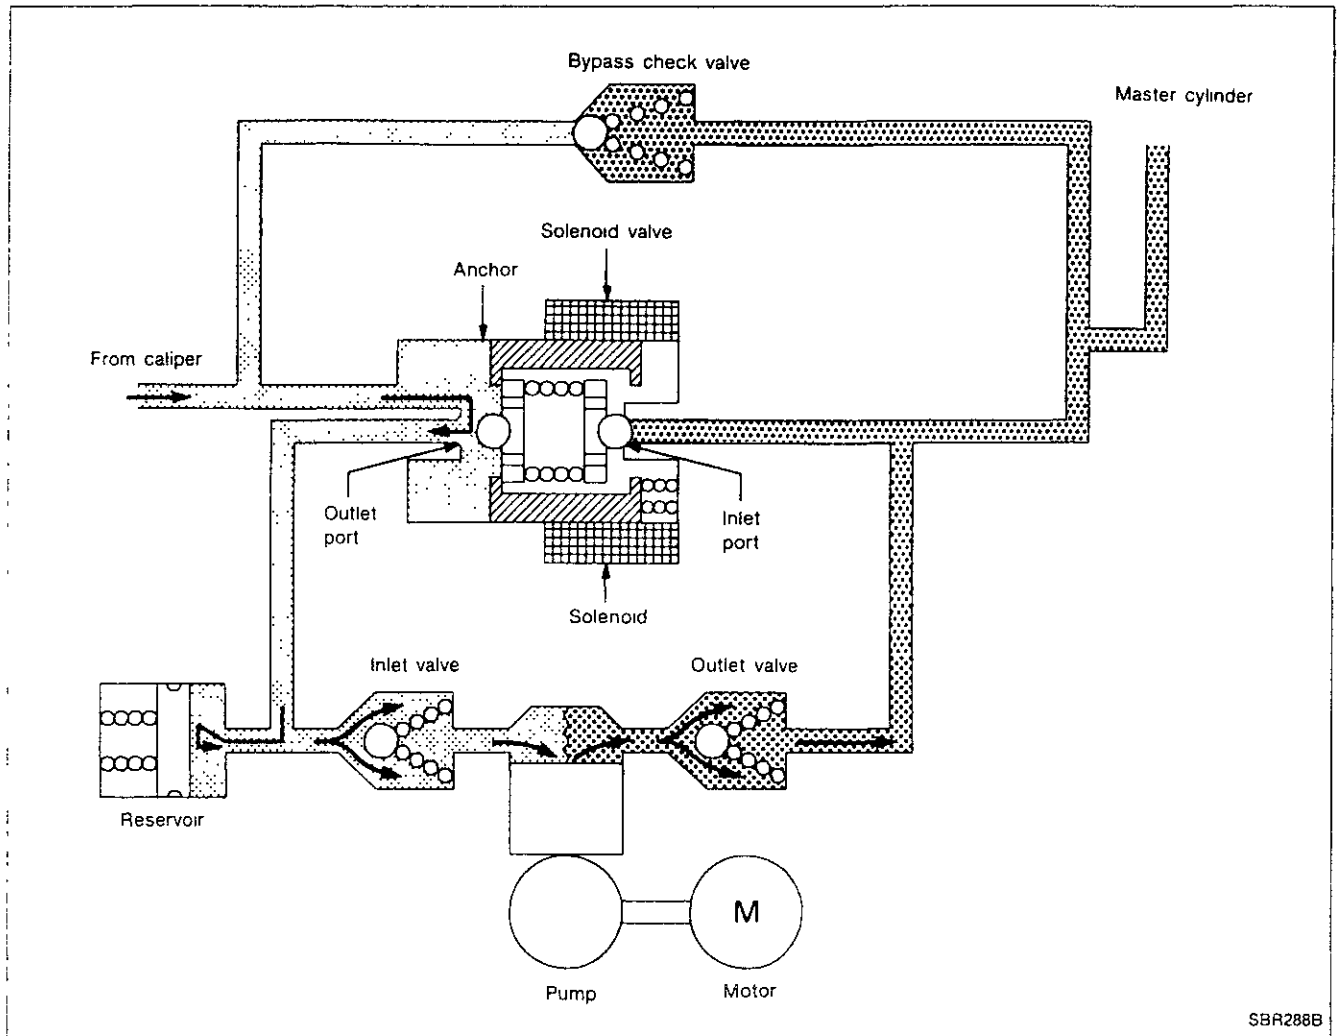

SBR288B

Description


Electric current to the solenoid ... 5 [A]

1. Magnetic force of the solenoid increases to attract the anchor further.
2. The inlet port remains closed and the outlet port opens.
3. Master cylinder fluid pressure does not act on the caliper since the inlet port of the solenoid valve is closed.
4. Caliper pressure is delivered to the reservoir via the outlet port of the solenoid valve so that it decreases.
5. Current "5[A]" to the solenoid is controlled and the pump motor activates at the same time. This has brake fluid (which returns to the reservoir) return to the master cylinder.
6. The damping unit which is built into the master cylinder activates to reduce the high pressure of the brake fluid from being applied to the master cylinder. Therefore, brake pedal "kickback" is prevented.

ANTI-LOCK BRAKING SYSTEM

Operation of Actuator Hydraulic Circuit (Cont'd)

OPERATION DURING BRAKE RELEASE

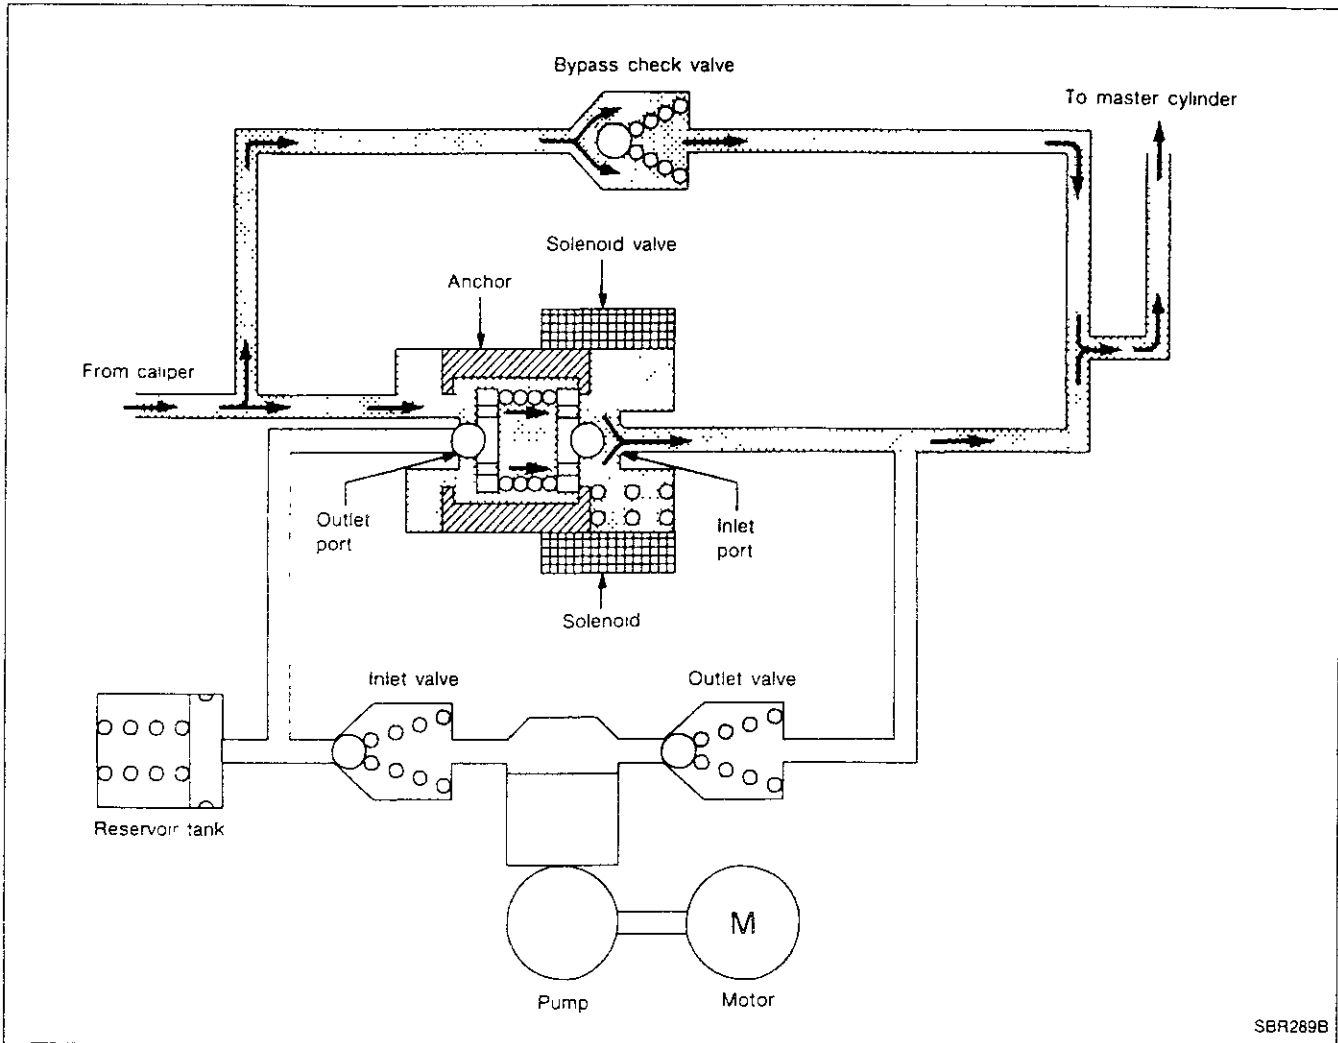

Description


Electric current to the solenoid ... 0 [A]

Master cylinder fluid pressure decreases so that the bypass valve opens. This allows caliper fluid pressure to return to the master cylinder.


ANTI-LOCK BRAKING SYSTEM

Operation of Damping Unit Hydraulic Circuit

CONSTRUCTION OF DAMPING UNIT (Built into master cylinder)

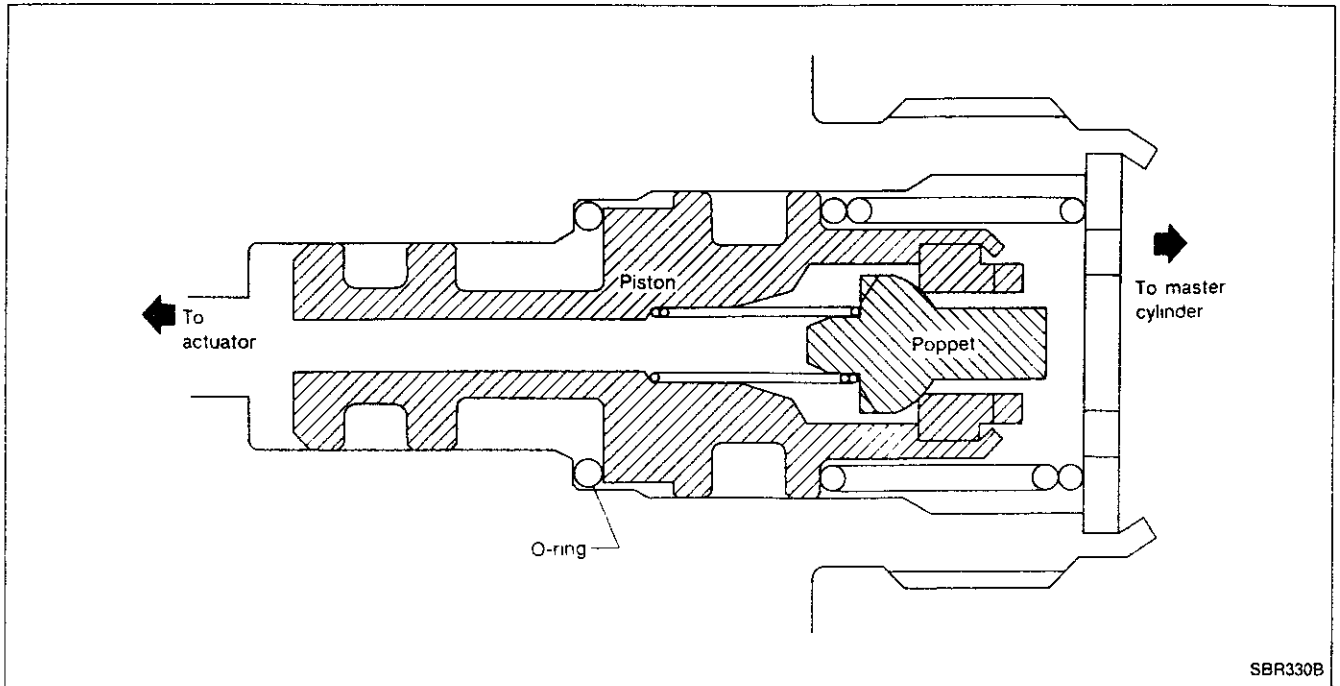

INCREASE OPERATION

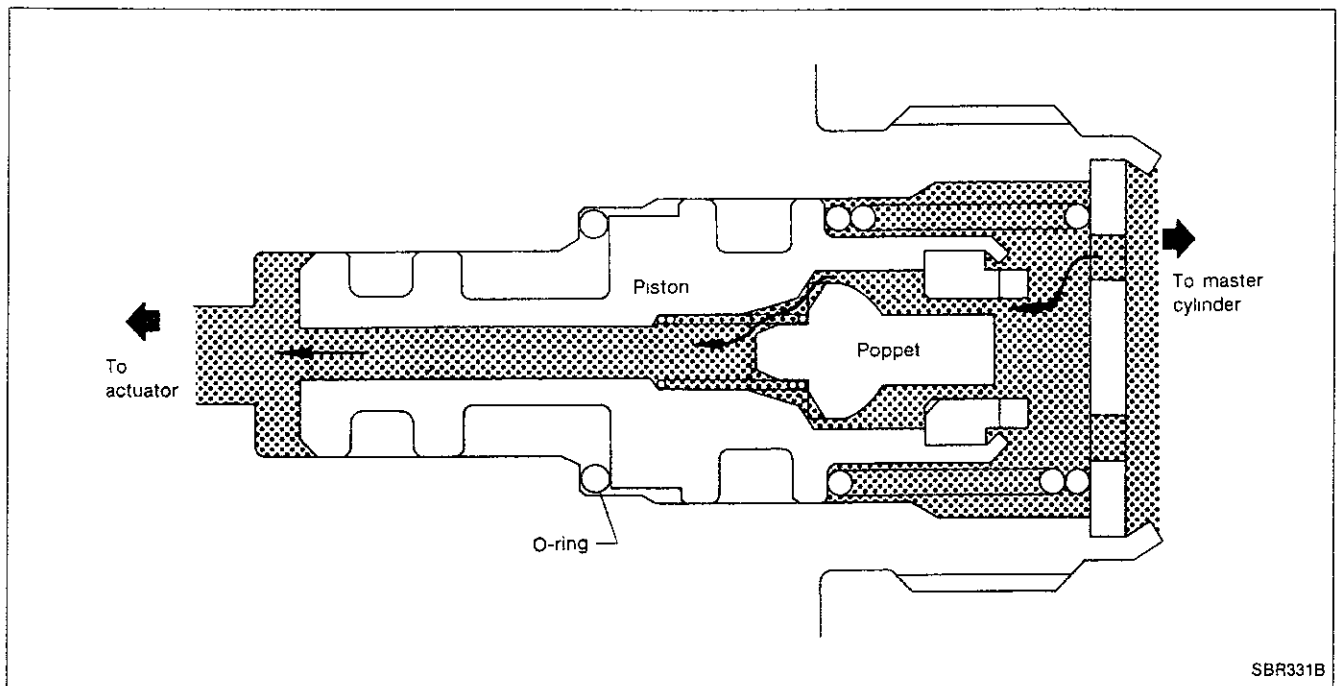


Description

1. When the brake pedal is depressed, the master cylinder produces pressure on the brake fluid.
2. This pressure is applied to the piston and the poppet of the damping unit so that the passage between the poppet and the piston is opened.
3. The brake fluid pressure is applied to the actuator.

ANTI-LOCK BRAKING SYSTEM

Operation of Damping Unit Hydraulic Circuit (Cont'd)


DAMPING OPERATION (During decreasing operation of actuator)

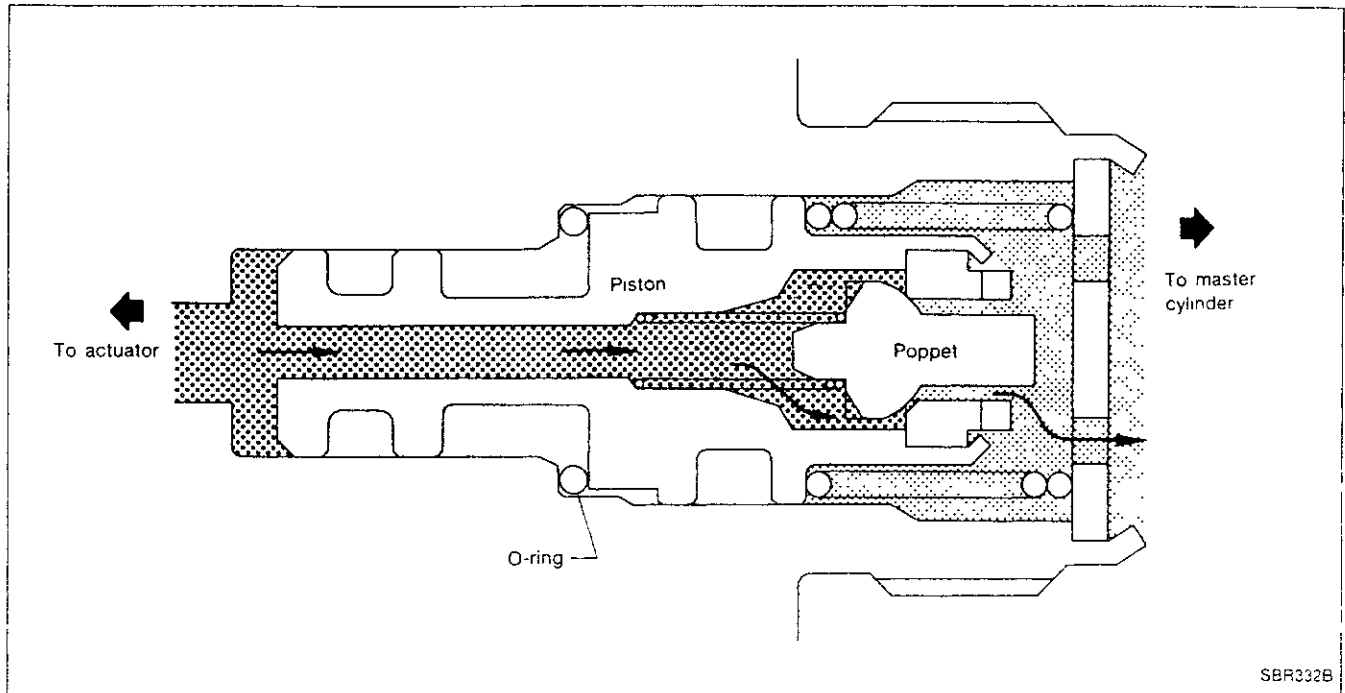

Description

1. While the brake pedal is being depressed, the master cylinder and actuator produce fluid pressure. Because of the application of these pressures to the poppet and the piston respectively, they are positioned as shown.
2. The passage between the poppet and the piston is very small so that it works as an orifice. Therefore, brake pedal "kickback" is prevented.

RELEASING OPERATION (Brake pedal release)

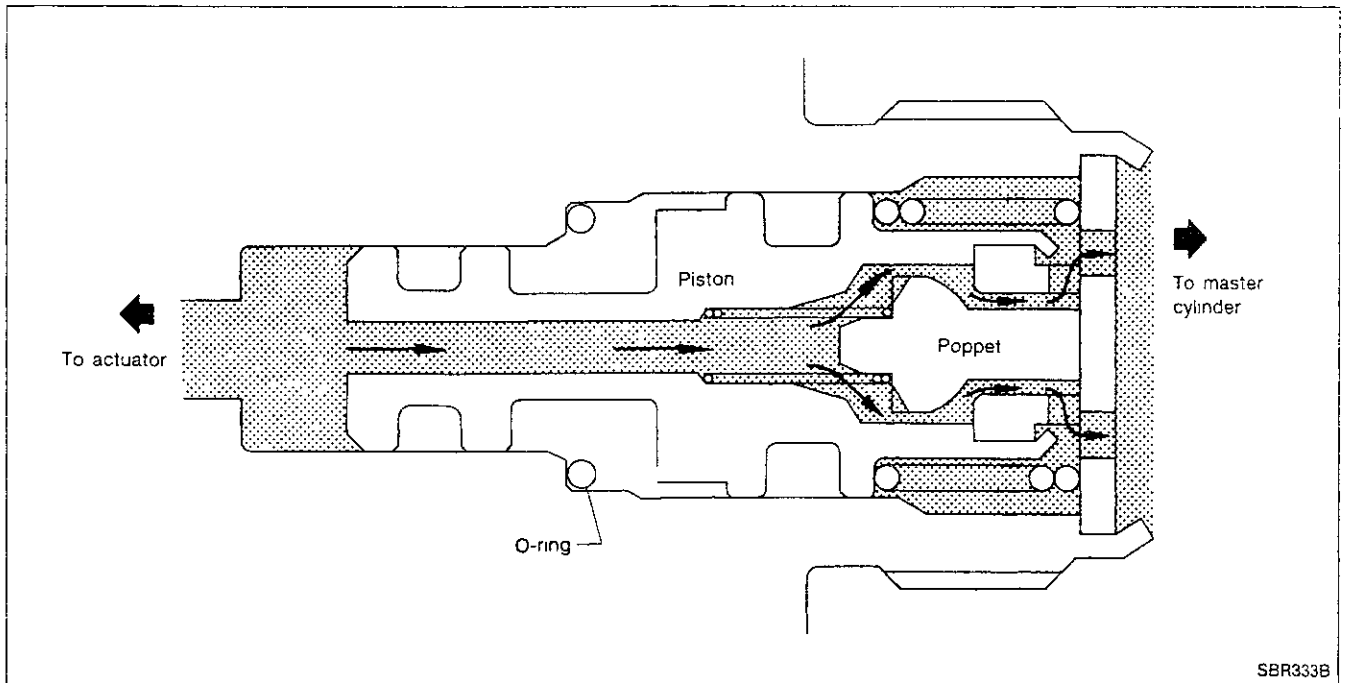


Description

1. The fluid pressure of the actuator side is much higher than the pressure of the master cylinder side. Therefore, the piston moves to the body end as shown.
2. The brake fluid is returned through the passage between the piston and the poppet.

ANTI-LOCK BRAKING SYSTEM

Circuit Diagram

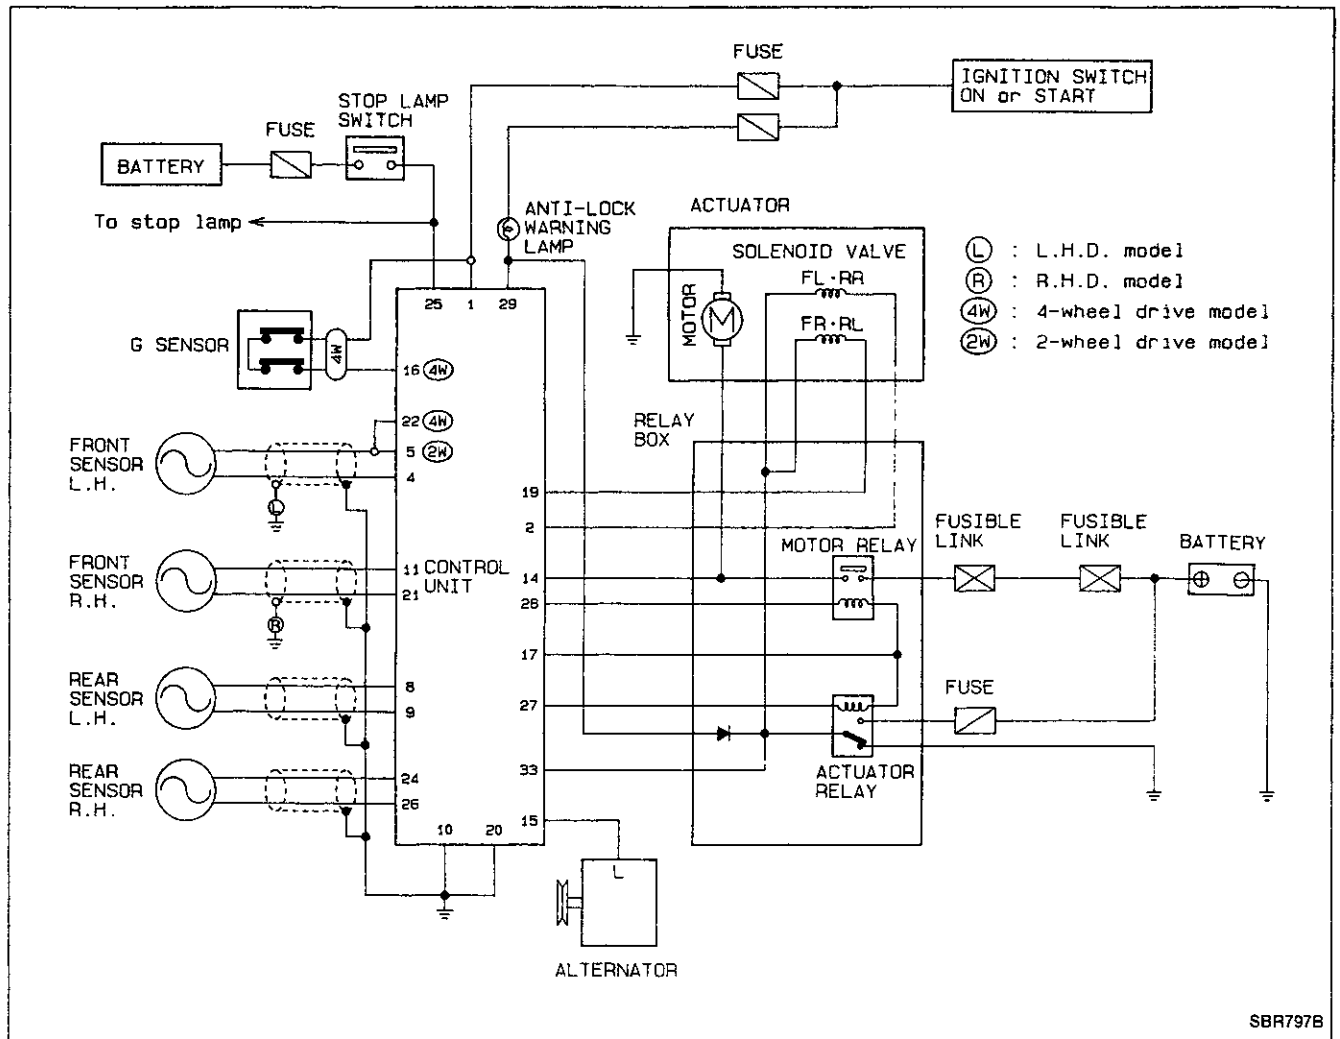


SBR797B

ANTI-LOCK BRAKING SYSTEM

Wiring Diagram

B13 L.H.D. MODELS

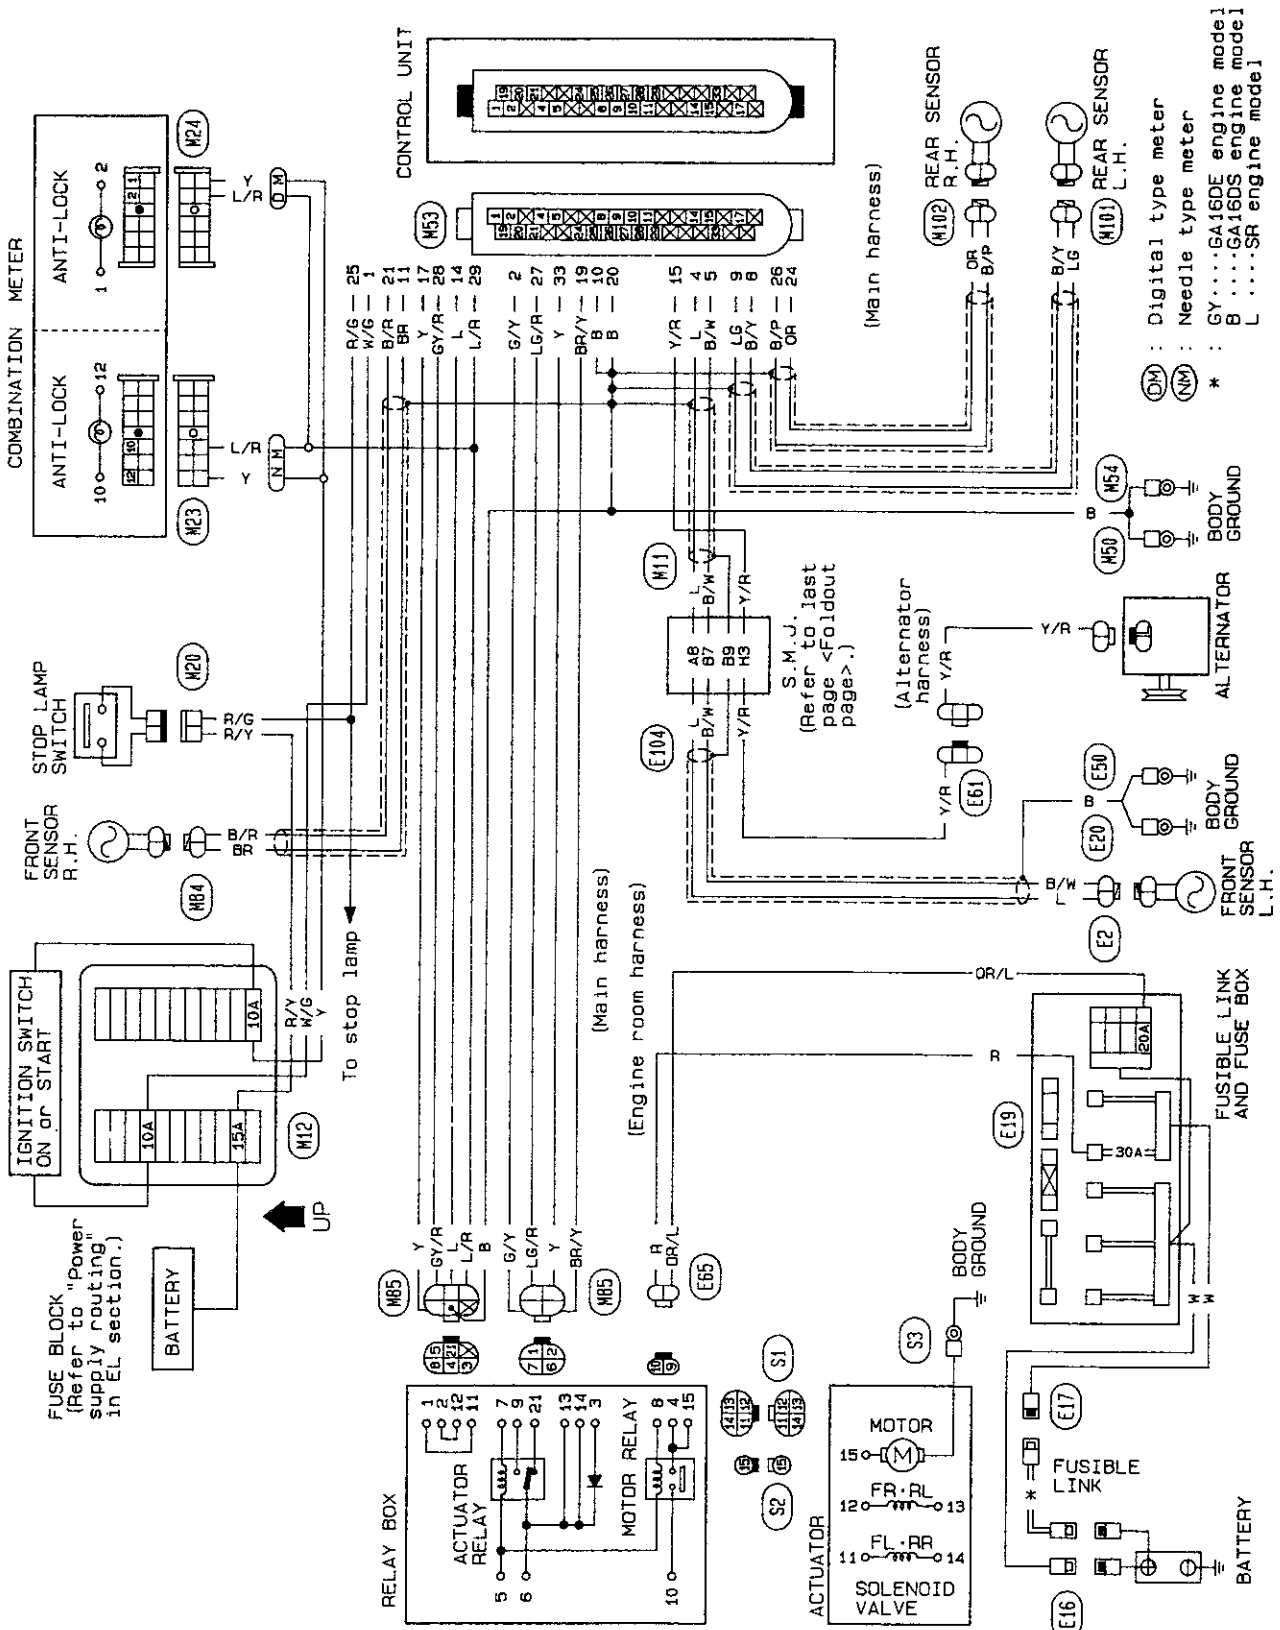


SBR798B

ANTI-LOCK BRAKING SYSTEM

Wiring Diagram (Cont'd)


B13 R.H.D. MODELS

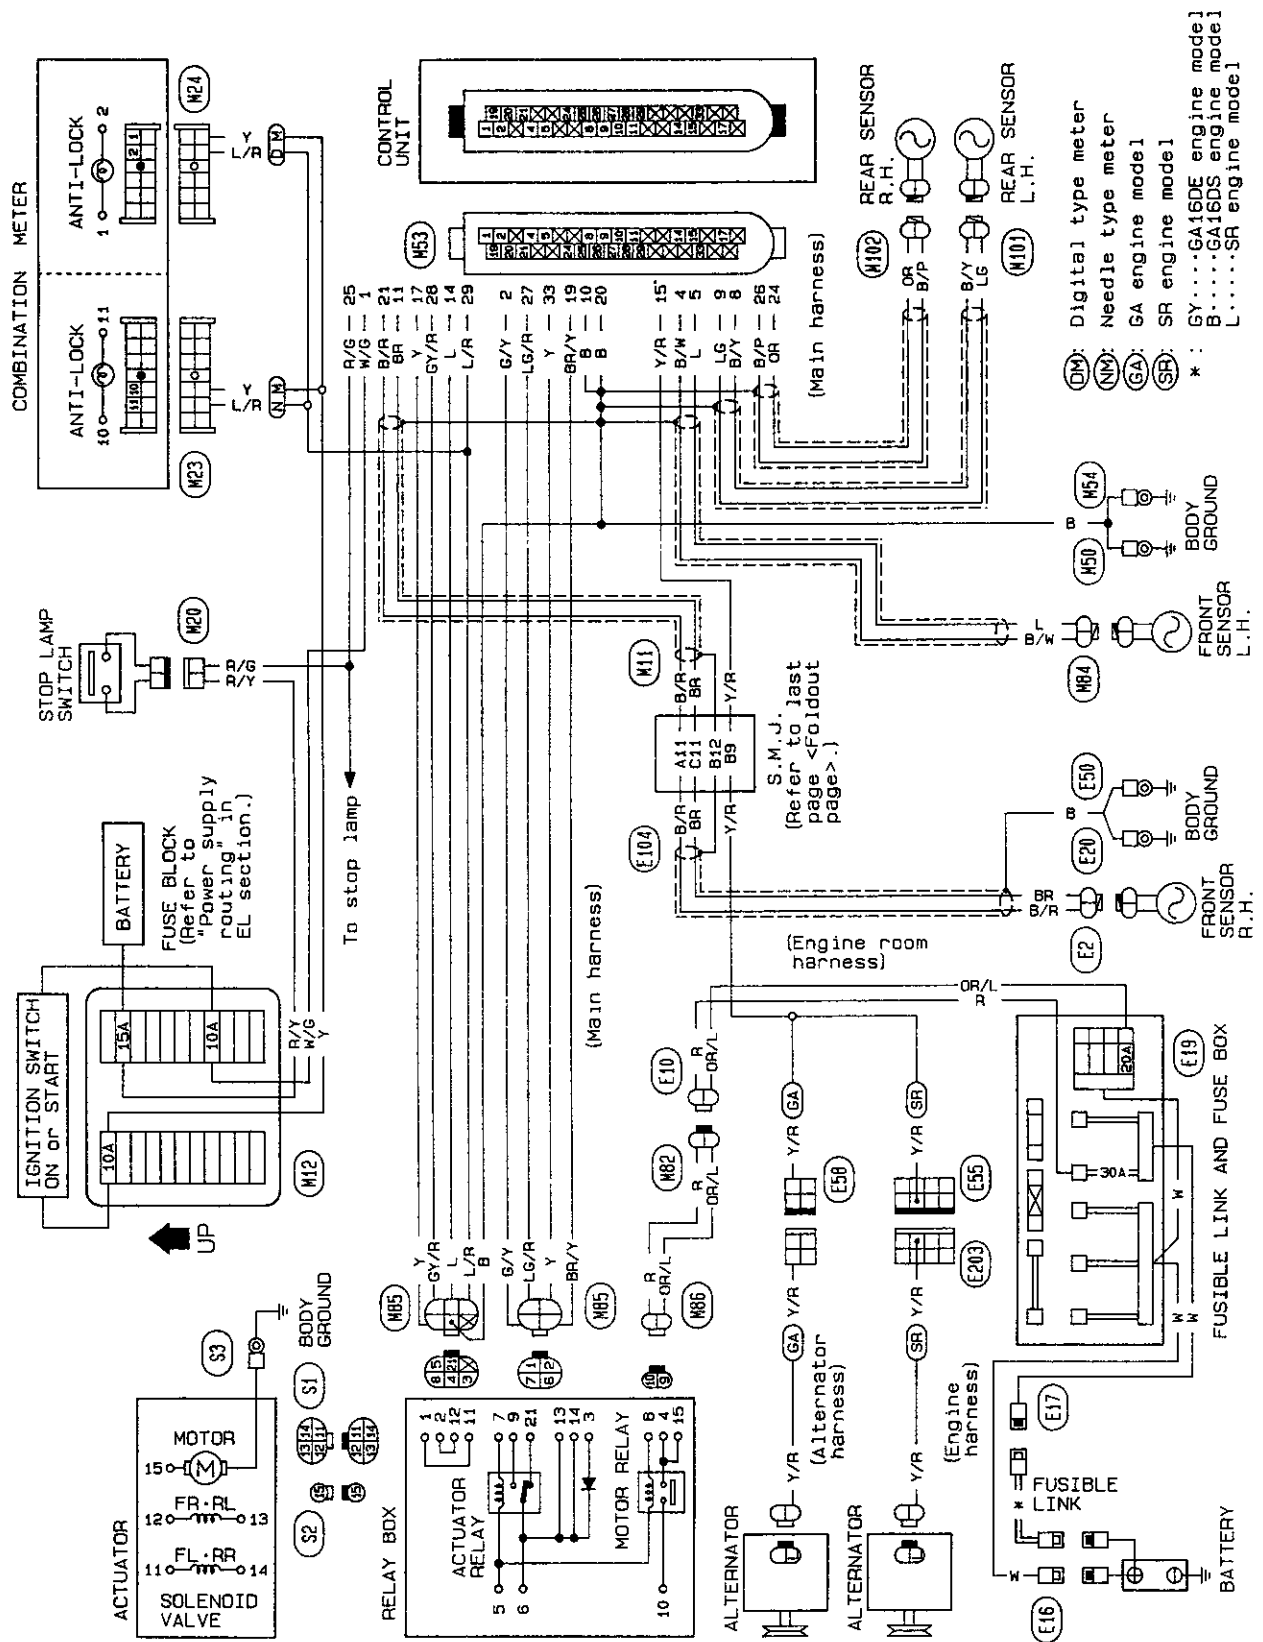

SBR799B

Wiring Diagram (Cont'd)


N14 L.H.D. MODELS

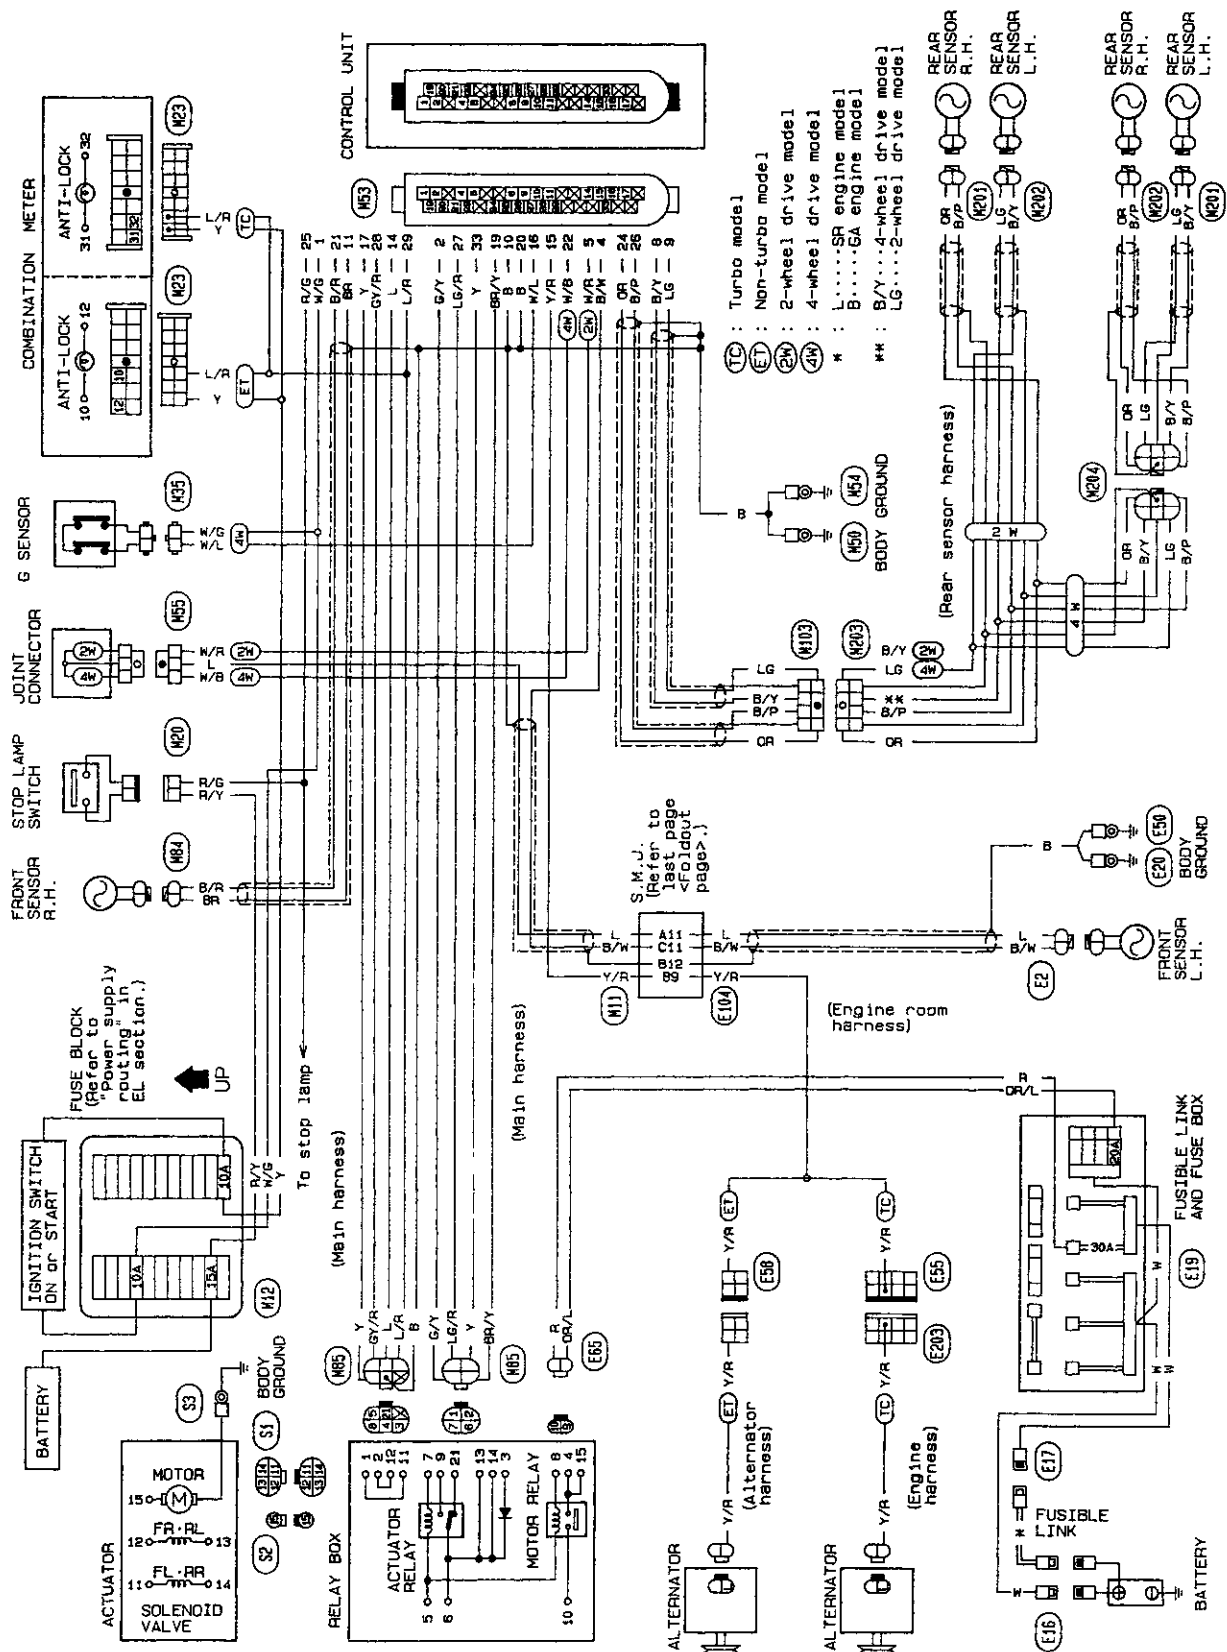

ANTI-LOCK BRAKING SYSTEM

Wiring Diagram (Cont'd)

N14 R.H.D. MODELS

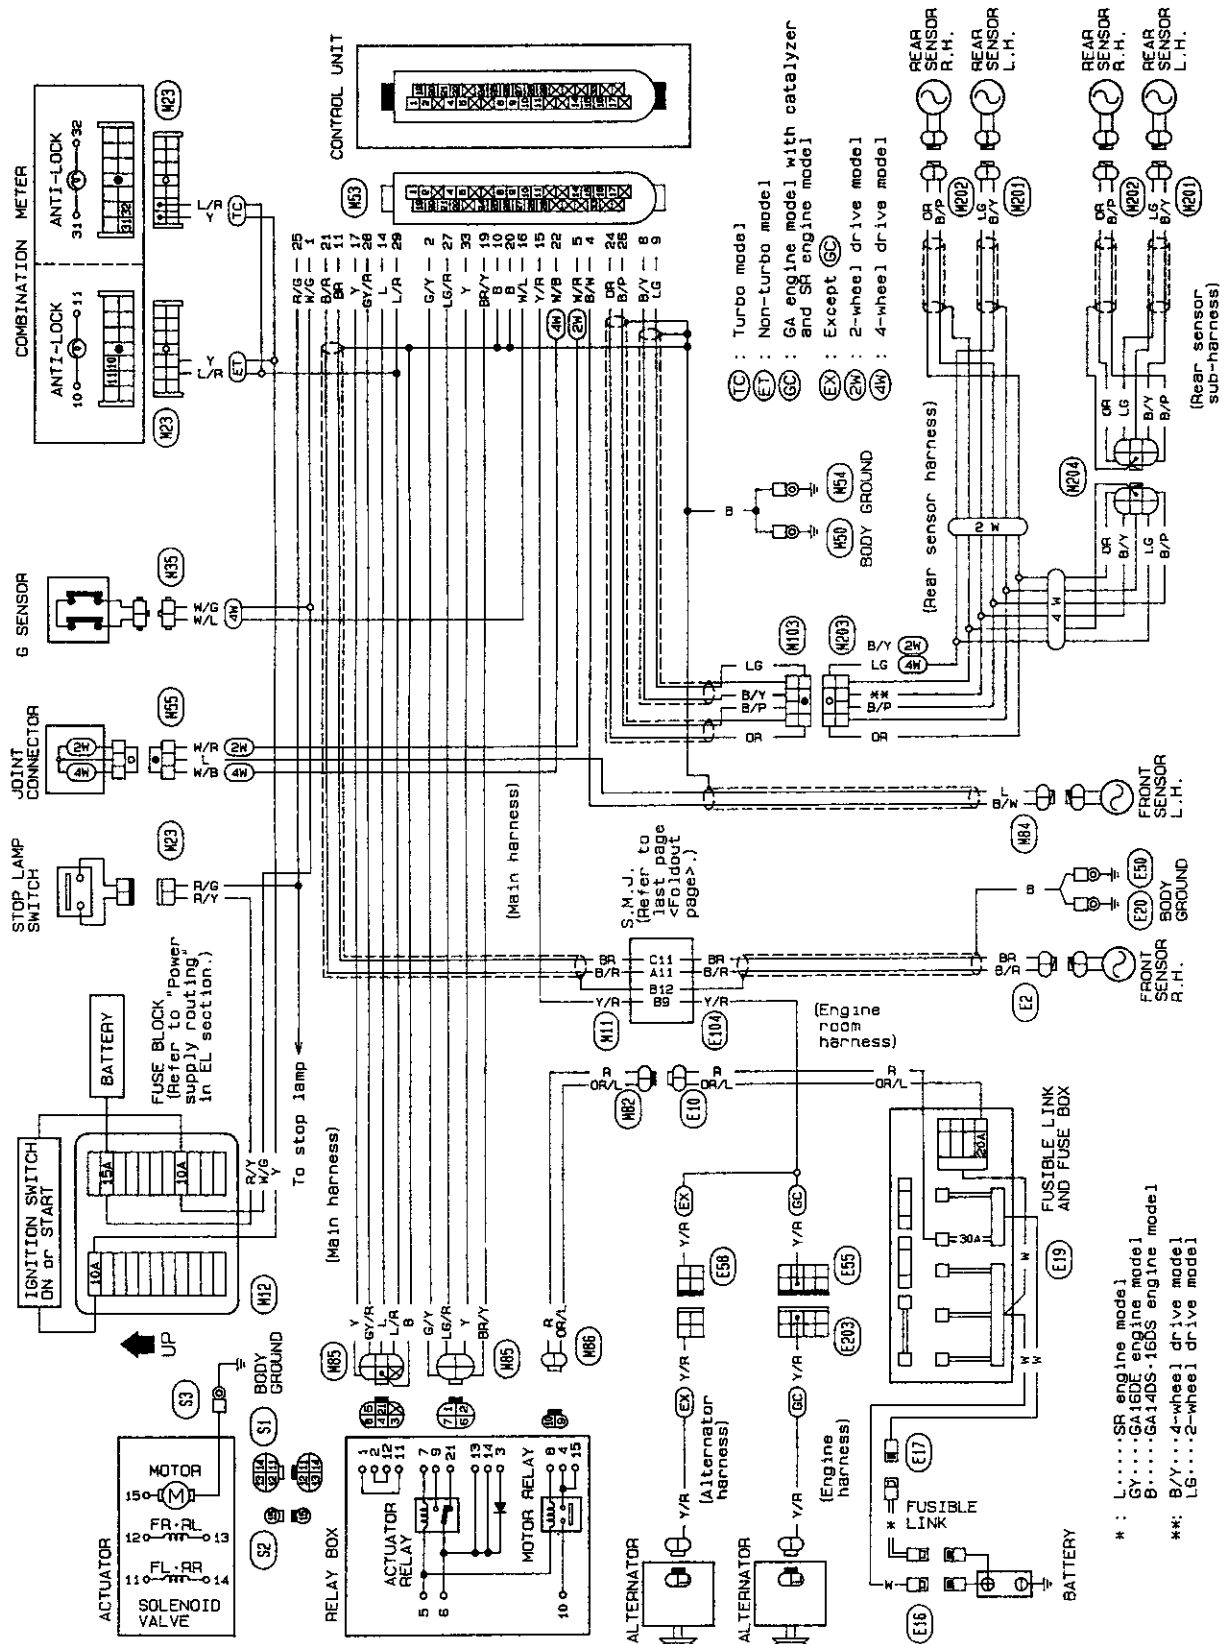

SBR801B


ANTI-LOCK BRAKING SYSTEM

Removal and Installation

CAUTION:

Be careful not to damage sensor edge and sensor rotor teeth.

FRONT WHEEL SENSOR

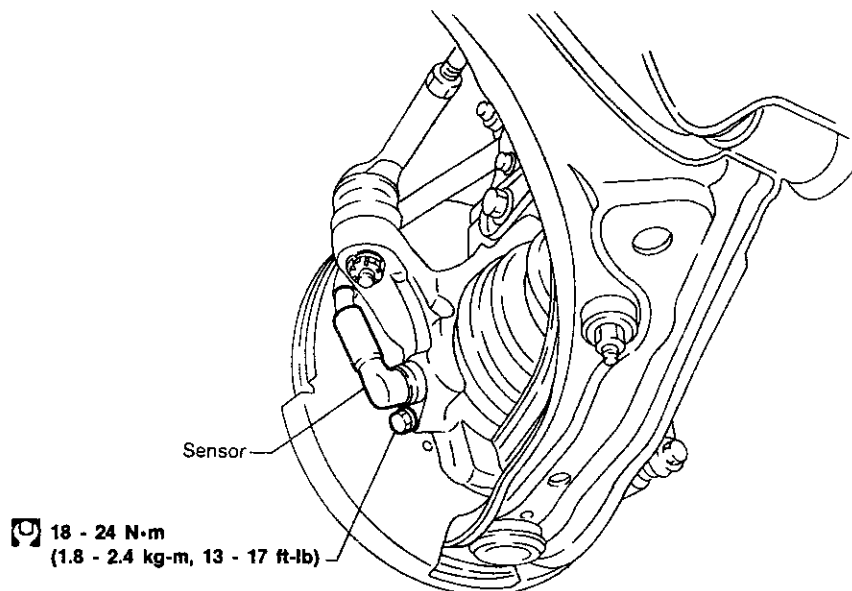


SBR290BA

REAR WHEEL SENSOR

2WD models

18 - 24 N·m
(1.8 - 2.4 kg-m, 13 - 17 ft-lb)

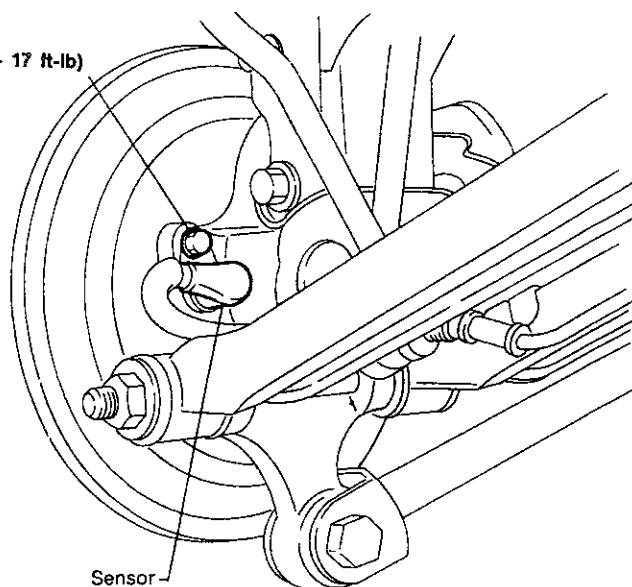


SBR743BA


ANTI-LOCK BRAKING SYSTEM

Removal and Installation (Cont'd)

4WD models

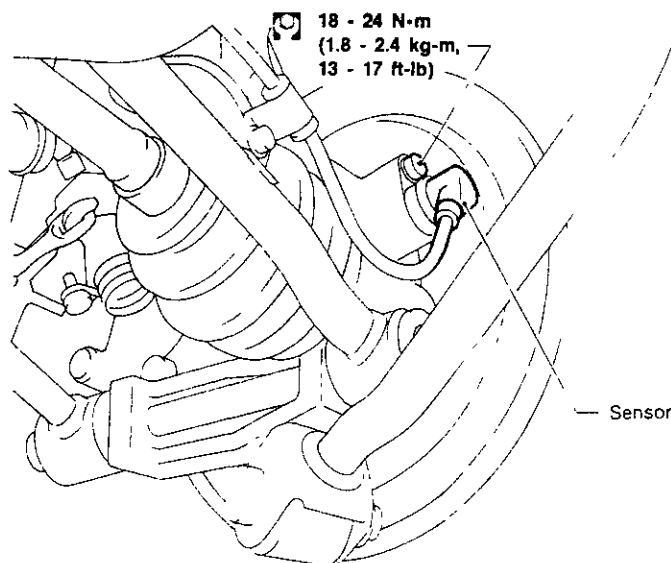


SBR744BA

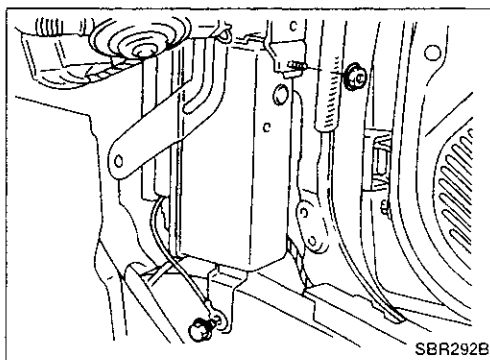

CONTROL UNIT

Location: Front passenger side dash side lower.

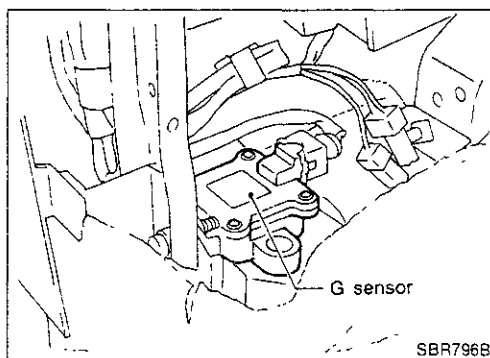


G SENSOR


Always replace G sensor if bumped or dropped. Otherwise, performance characteristics of G sensor will be changed, which in turn changes ABS control performance characteristics.

Removal


ACTUATOR (L.H.D. models)

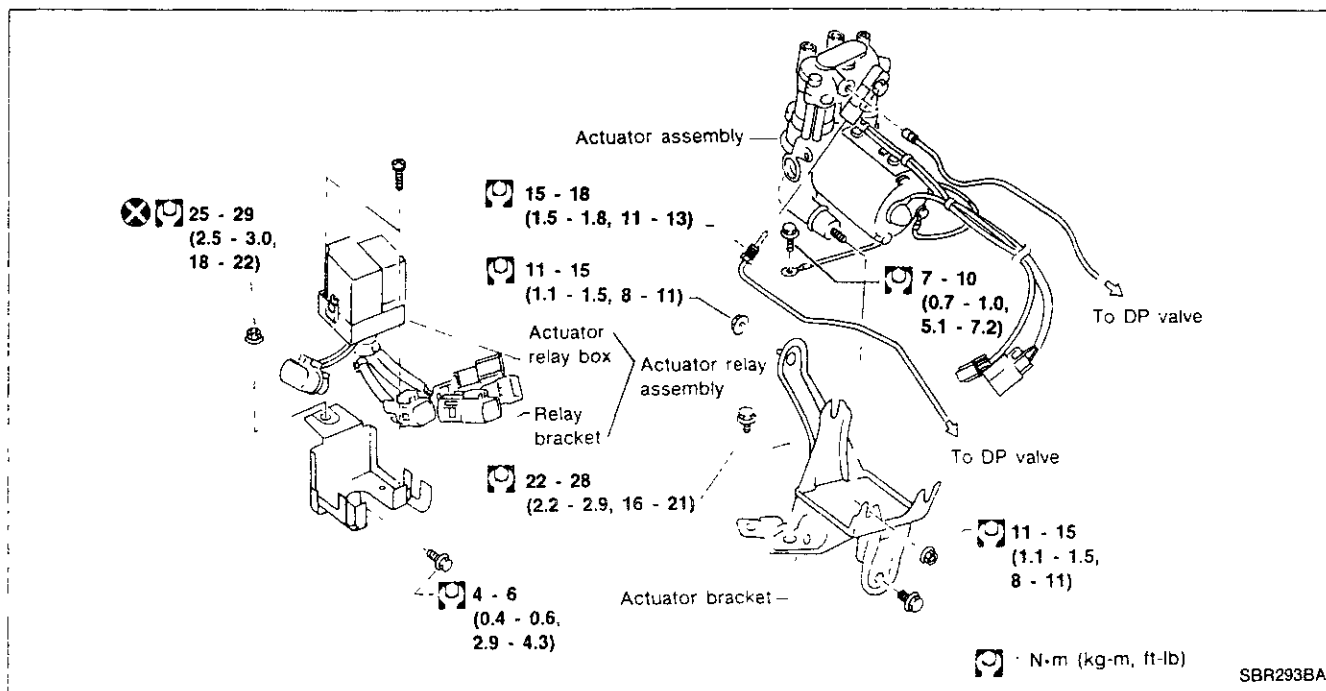

1. Disconnect battery cable.
2. Drain brake fluid. Refer to "Changing Brake Fluid" in "CHECK AND ADJUSTMENT".
3. Drain power steering fluid. Refer to section ST.
4. Discharge air conditioner refrigerant. Refer to section HA.

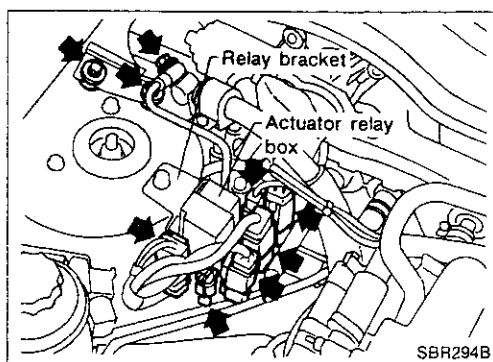


5. Disconnect power steering fluid pipe and hose.
6. Disconnect all connectors from actuator relay bracket.

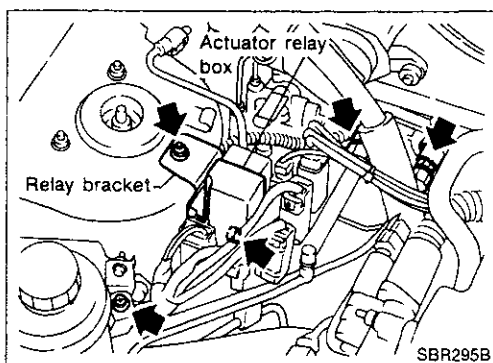

7. Remove mounting nut for relay bracket.
8. Remove mounting bolt for relay bracket. (This bolt is located just under the relay.)
9. Remove actuator relay box with bracket.
10. Remove air conditioner tubes.


ANTI-LOCK BRAKING SYSTEM

Removal (Cont'd)

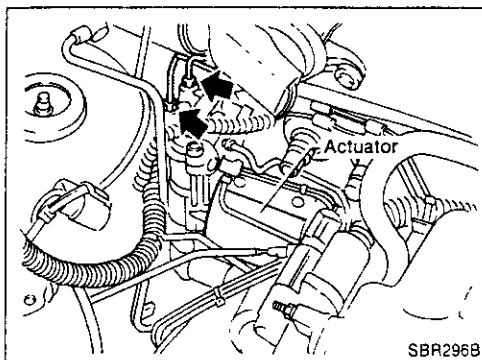


11. Disconnect top two brake pipes from actuator. (Pipes from master cylinder to actuator)

It is not necessary to remove these pipes.


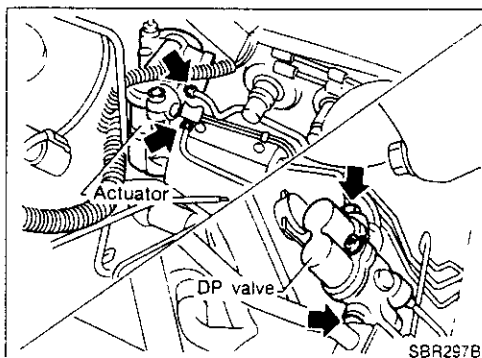


12. Remove the other two brake pipes. (Pipes from actuator to DP valve)

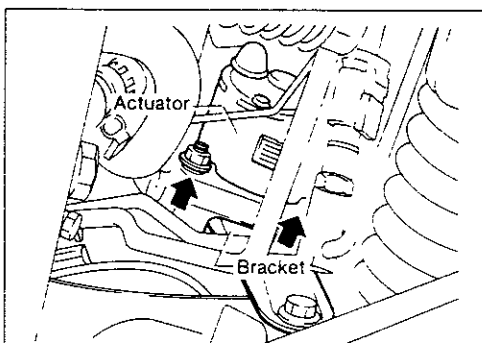


13. Remove/loosen mounting nuts between actuator and bracket.

14. Remove actuator grounding bolt.

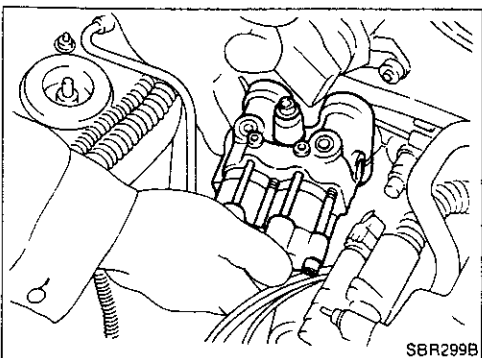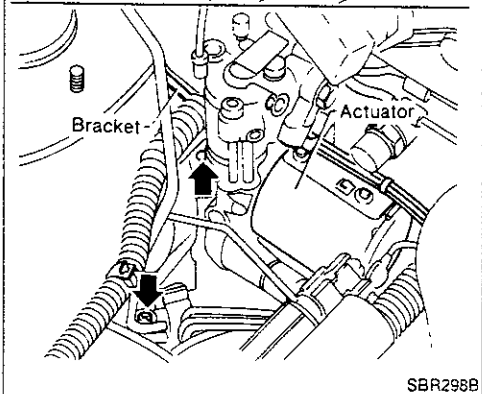

15. Draw out actuator as shown.

ANTI-LOCK BRAKING SYSTEM

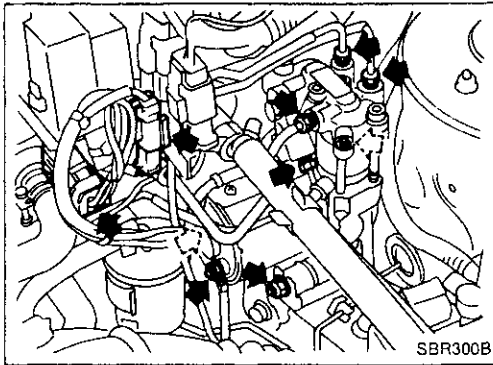

Removal (Cont'd)

ACTUATOR (R.H.D.)


1. Disconnect battery cable.
2. Drain brake fluid. Refer to "Changing Brake Fluid" in "CHECK AND ADJUSTMENT".
3. Discharge air conditioner refrigerant. Refer to section HA. Then, remove air conditioner tubes.
4. Disconnect connector from actuator relay.
5. Remove grounding cable from actuator.
6. Remove/loosen actuator mounting nuts and draw out actuator.

Installation


CAUTION:

After installation, pay attention to the following points.

- Refill brake fluid and bleed air. Refer to "CHECK AND ADJUSTMENT" and "AIR BLEEDING" respectively.
- Charge air conditioner refrigerant. Refer to section HA.
- For L.H.D. models, refill power steering fluid. Refer to section ST.

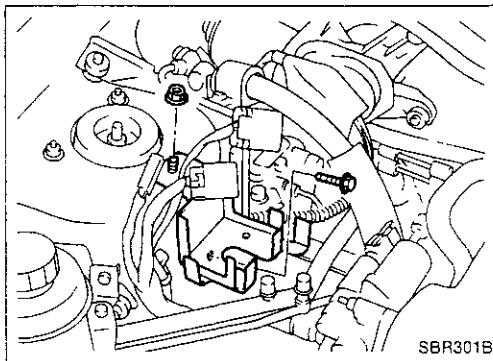

- Installation procedure is basically the reverse order of removal.
- For L.H.D. models, it is recommended to install relay bracket first. Then install actuator relay box.

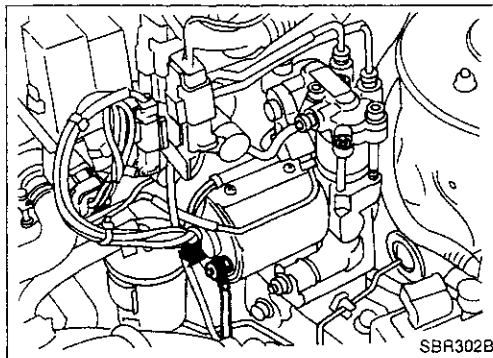


- For R.H.D. models, tighten ground cable nut to specified torque to prevent poor grounding or damage to bolt.

Specification:

2.2 - 2.6 N·m

(0.22 - 0.27 kg-m, 1.6 - 2.0 ft-lb)

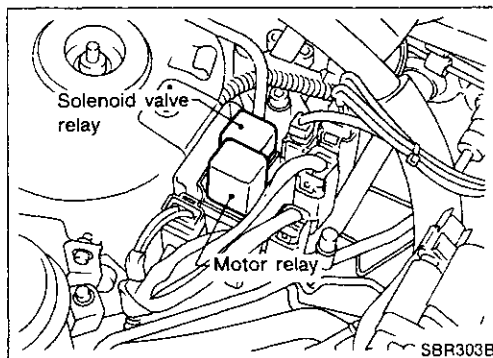

Removal and Installation

ACTUATOR RELAYS

METAL BODY: MOTOR RELAY

LIGHT BLUE: SOLENOID VALVE RELAY



1. Disconnect battery cable.
2. Remove actuator relay cover.

It is not necessary to remove the two screws for relay box.

TROUBLE DIAGNOSES

Contents

How to Perform Trouble Diagnoses for Quick and Accurate Repair	BR-74
Symptom Chart	BR-77
Preliminary Check	BR-78
Self-diagnosis	BR-79
Component Parts and Harness Connector Location	BR-80
Ground Circuit Check	BR-83
Circuit Diagram for Quick Pinpoint Check	BR-84
Diagnostic Procedure 1	BR-85
Diagnostic Procedure 2	BR-87
Diagnostic Procedure 3	BR-87
Diagnostic Procedure 4	BR-88
Diagnostic Procedure 5	BR-88
Diagnostic Procedure 6	BR-89
Diagnostic Procedure 7	BR-90
Diagnostic Procedure 8	BR-91
Diagnostic Procedure 9	BR-92
Diagnostic Procedure 10	BR-93
Diagnostic Procedure 11	BR-95
Diagnostic Procedure 12	BR-96
Diagnostic Procedure 13	BR-97
Diagnostic Procedure 14	BR-97
Diagnostic Procedure 15	BR-98
Electrical Components Inspection	BR-99

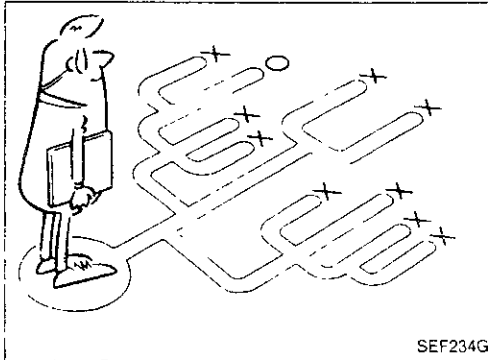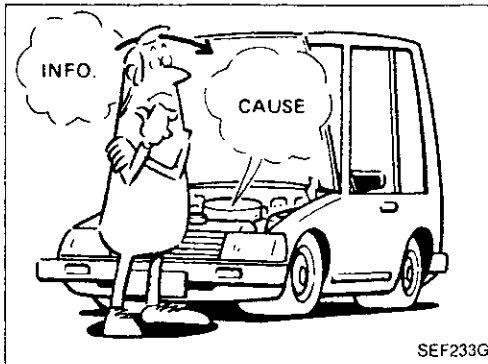

How to Perform Trouble Diagnoses for Quick and Accurate Repair

INTRODUCTION

The A.B.S. system has an electronic control unit to control major functions. The control unit accepts input signals from sensors and instantly drives actuators. It is essential that both kinds of signals are proper and stable. At the same time, it is important that there are no conventional problems such as air leaks in the booster or lines, lack of brake fluid, or other problems with brake system.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or faulty wiring. In this case, careful checking of suspicious circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the problems, so a road test should be carried out.


Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with a A.B.S. complaint. The customer is a very good source of information on such problems; especially intermittent ones. Through the talks with the customer, find out what symptoms are present and under what conditions they occur.

Start your diagnosis by looking for "conventional" problems first. This is one of the best ways to troubleshoot brake problems on an A.B.S. controlled vehicle.

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

WORK FLOW

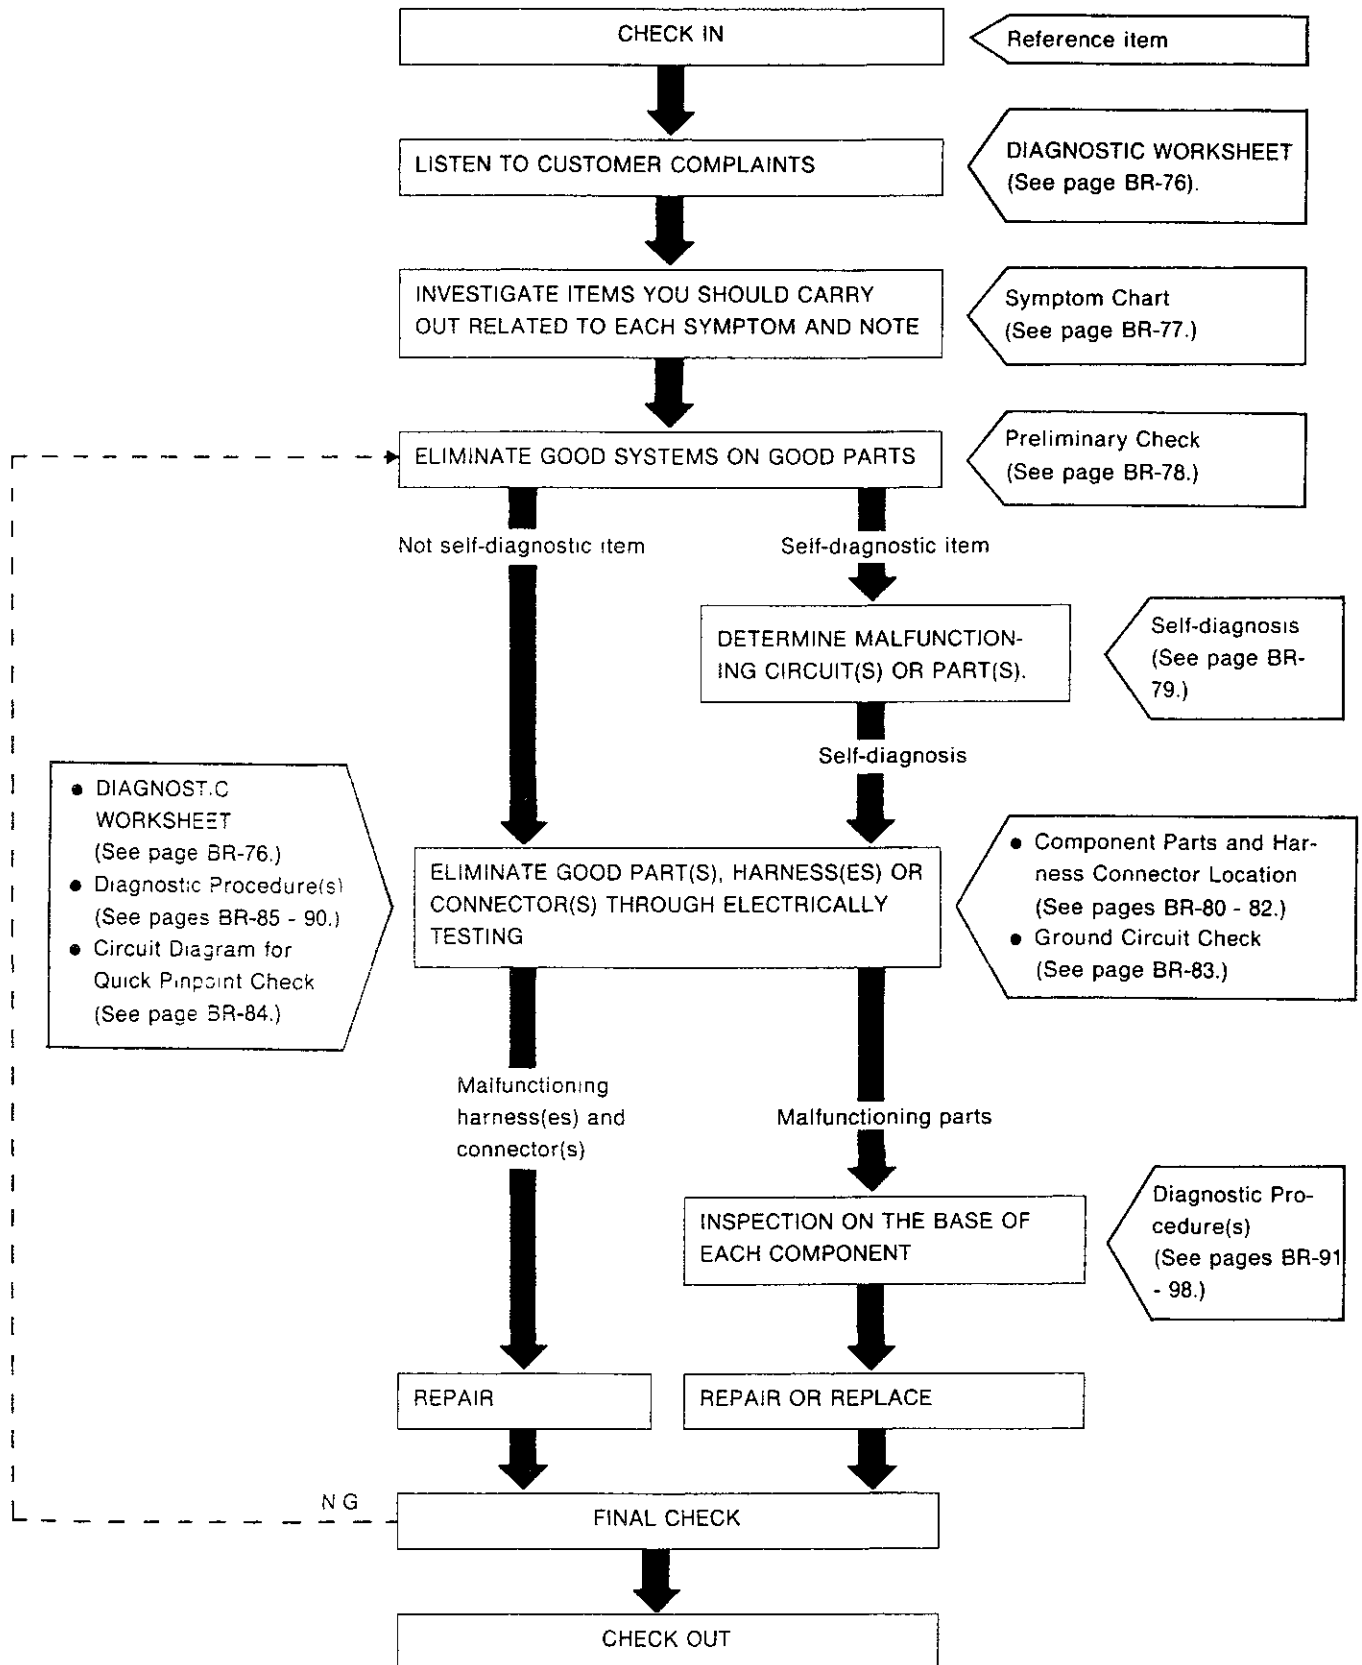

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

KEY POINTS

WHAT Vehicle model
WHEN Date, Frequencies
WHERE Road conditions
HOW Operating conditions,
 Weather conditions,
 Symptoms

SBR339B

DIAGNOSTIC WORKSHEET

There are many kinds of operating conditions that lead to customer complaints, even if the system is normal.

A good grasp of such conditions can make trouble-shooting faster and more accurate.

In general, feelings for a problem depend on each customer's information. It is therefore important to fully understand the symptoms or under what conditions a customer complains.

Make good use of a diagnostic worksheet such as the one shown below in order to utilize all the complaints for trouble-shooting.

Worksheet sample


Customer name MR/MS		Model & Year			VIN		
Engine #		Trans			Mileage		
Incident Date		Manuf. Date			In Service Date		
Symptoms	☐ Pedal vibration and noise	☐ Warning activates	☐ Long stop-ping distance	☐ Unexpected pedal action	☐ A.B.S. doesn't work	☐ A B S works but warning ac-tivates	☐ A B S works fre-quently
Engine conditions		☐ When starting ☐ After starting ☐ Engine speed: 5,000 rpm or more					
Road conditions		☐ Low friction road (☐ Snow ☐ Gravel ☐ Other) ☐ Protrusion					
Driving conditions		☐ High speed cornering ☐ Vehicle speed: Greater than 10 km/h (6 MPH) ☐ Vehicle speed: 10 km/h (6 MPH) or less ☐ Vehicle is stopped					
Applying brake conditions		☐ Suddenly ☐ Gradually					
Other conditions		☐ Operation of electrical equipment ☐ Large pedal stroke ☐ Operation of clutch					

Symptom Chart

[illegible]

TROUBLE DIAGNOSES


Preliminary Check

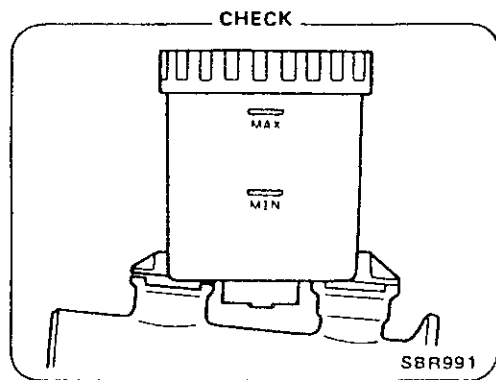

Check brake fluid level in reservoir tank.


N.G. → Fill up brake fluid.

O.K. →

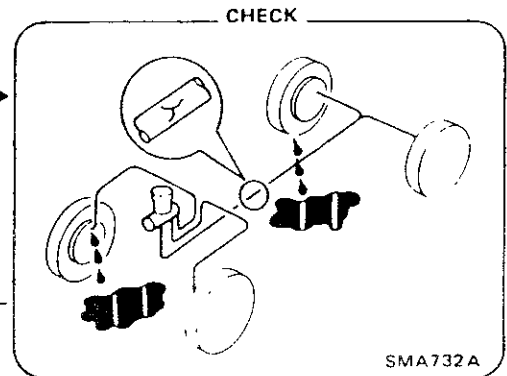

Check brake system.
Refer to CHECK AND ADJUSTMENT.


O.K. →

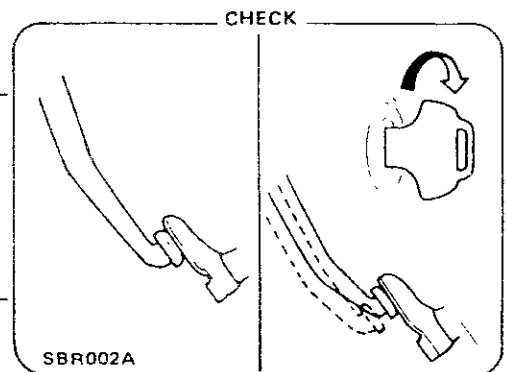

Check brake booster operation and airtightness.
Refer to "Inspection" of BRAKE BOOSTER.

Repair or replace booster system. ← N.G.

O.K. →

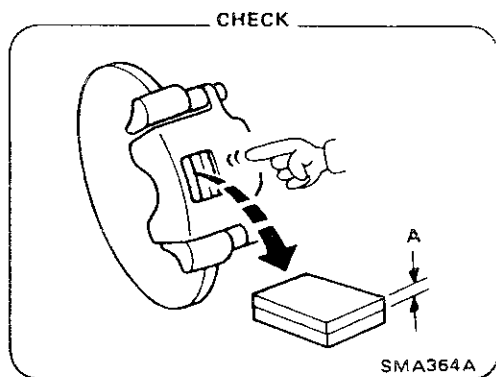

Check brake pads and rotor.
Refer to "Inspection" of FRONT and REAR DISC BRAKE.

N.G. → Replace malfunctioning parts.

TROUBLE DIAGNOSES

Self-diagnosis

CHECKING THE NUMBER OF L.E.D. FLASHES

When a problem occurs in the A.B.S., the warning light on the instrument panel comes on. As shown in the Table, the control unit performs self-diagnosis.

To obtain satisfactory self-diagnosing results, the vehicle must be driven above 30 km/h (19 MPH) for at least one minute before the self-diagnosis is performed. After the vehicle is stopped, the number of L.E.D. flashes is counted while the engine is running.


The L.E.D. is located on the control unit, identifying a malfunctioning part or unit by the number of flashes. Both the warning light and the L.E.D. persistently activate, even after a malfunctioning part or unit has been repaired, unless the ignition switch is turned "OFF". After repairs, turn the ignition switch "OFF". Then start the engine and drive the vehicle over 30 km/h (19 MPH) for at least one minute to ensure that the malfunctioning part or unit has been repaired properly.

If more than two circuits malfunction at the same time, the L.E.D. will flash to indicate one of the malfunctioning circuits. After the circuit has been repaired, the L.E.D. will then flash to indicate that the other circuit is malfunctioning.

No. of L.E.D. flashes	Malfunctioning parts or circuit	Diagnostic Procedure
1	Left front actuator solenoid circuit	8
2	Right front actuator solenoid circuit	8
3	Both actuator solenoid circuits	8
5	Left front wheel sensor circuit	9
6	Right front wheel sensor circuit	9
7	Right rear wheel sensor circuit	9
8	Left rear wheel sensor circuit	9
9	Motor and motor relay	10
10	Solenoid valve relay	11
11	G sensor circuit	12
15	Sensor rotor	13
*16	Control unit	14
Warning activates and L.E.D. "OFF"	Power supply and ground circuit	15

Example

Improper operation of left front wheel sensor circuit

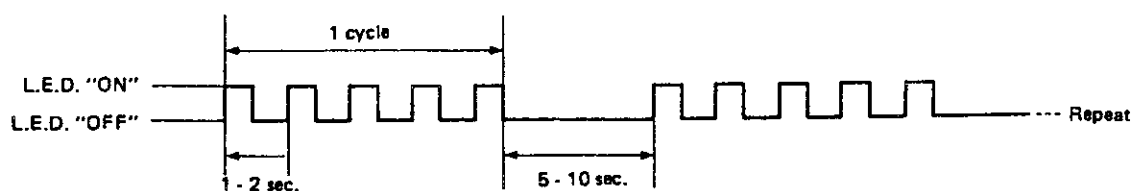


SBR745B

* Turn off the engine, and start it again by slowly turning the ignition key (quickly doing so may cause the ABS warning light to stay on when there is nothing wrong). If the light stays on, carry out the diagnostic procedure.

TROUBLE DIAGNOSES


Component Parts and Harness Connector Location

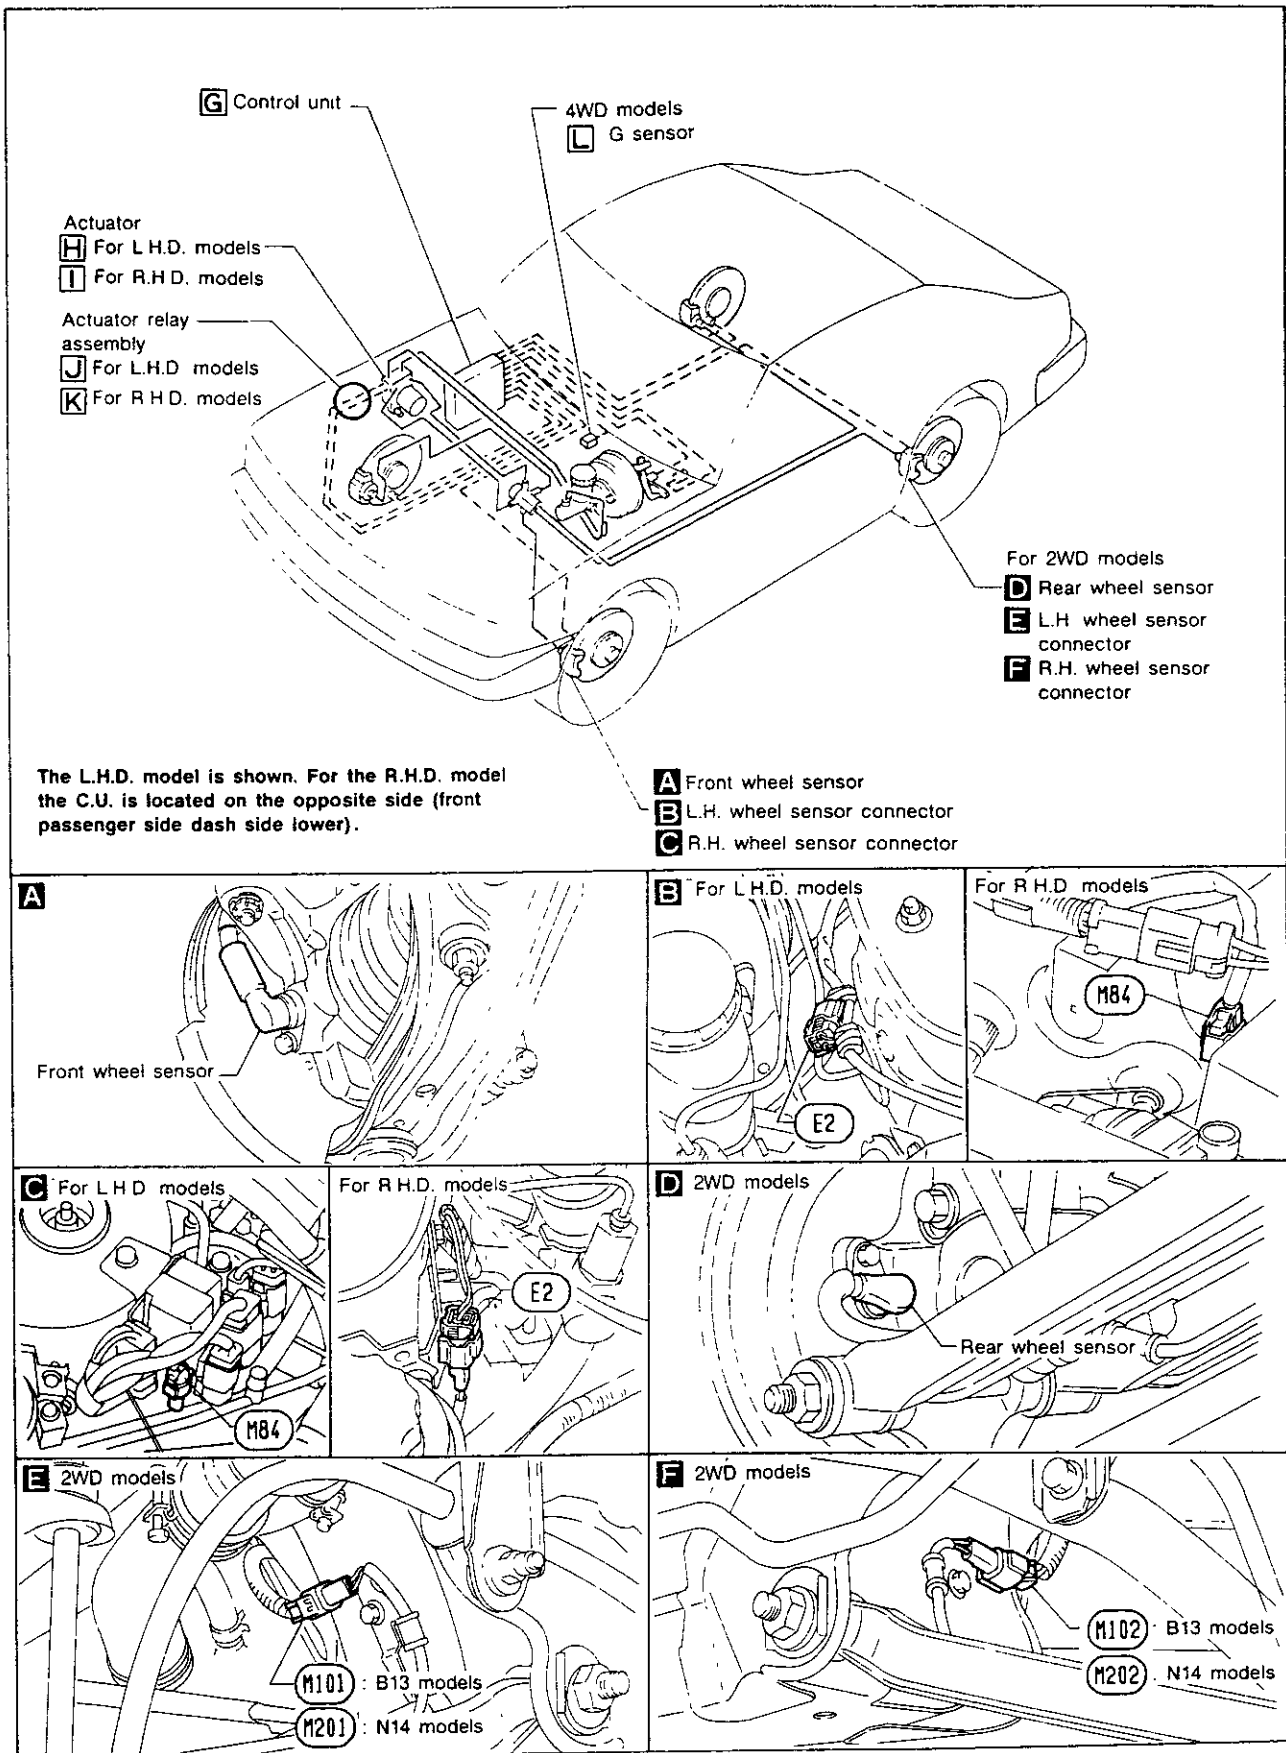

SBR746B


TROUBLE DIAGNOSES

Component Parts and Harness Connector Location (Cont'd)

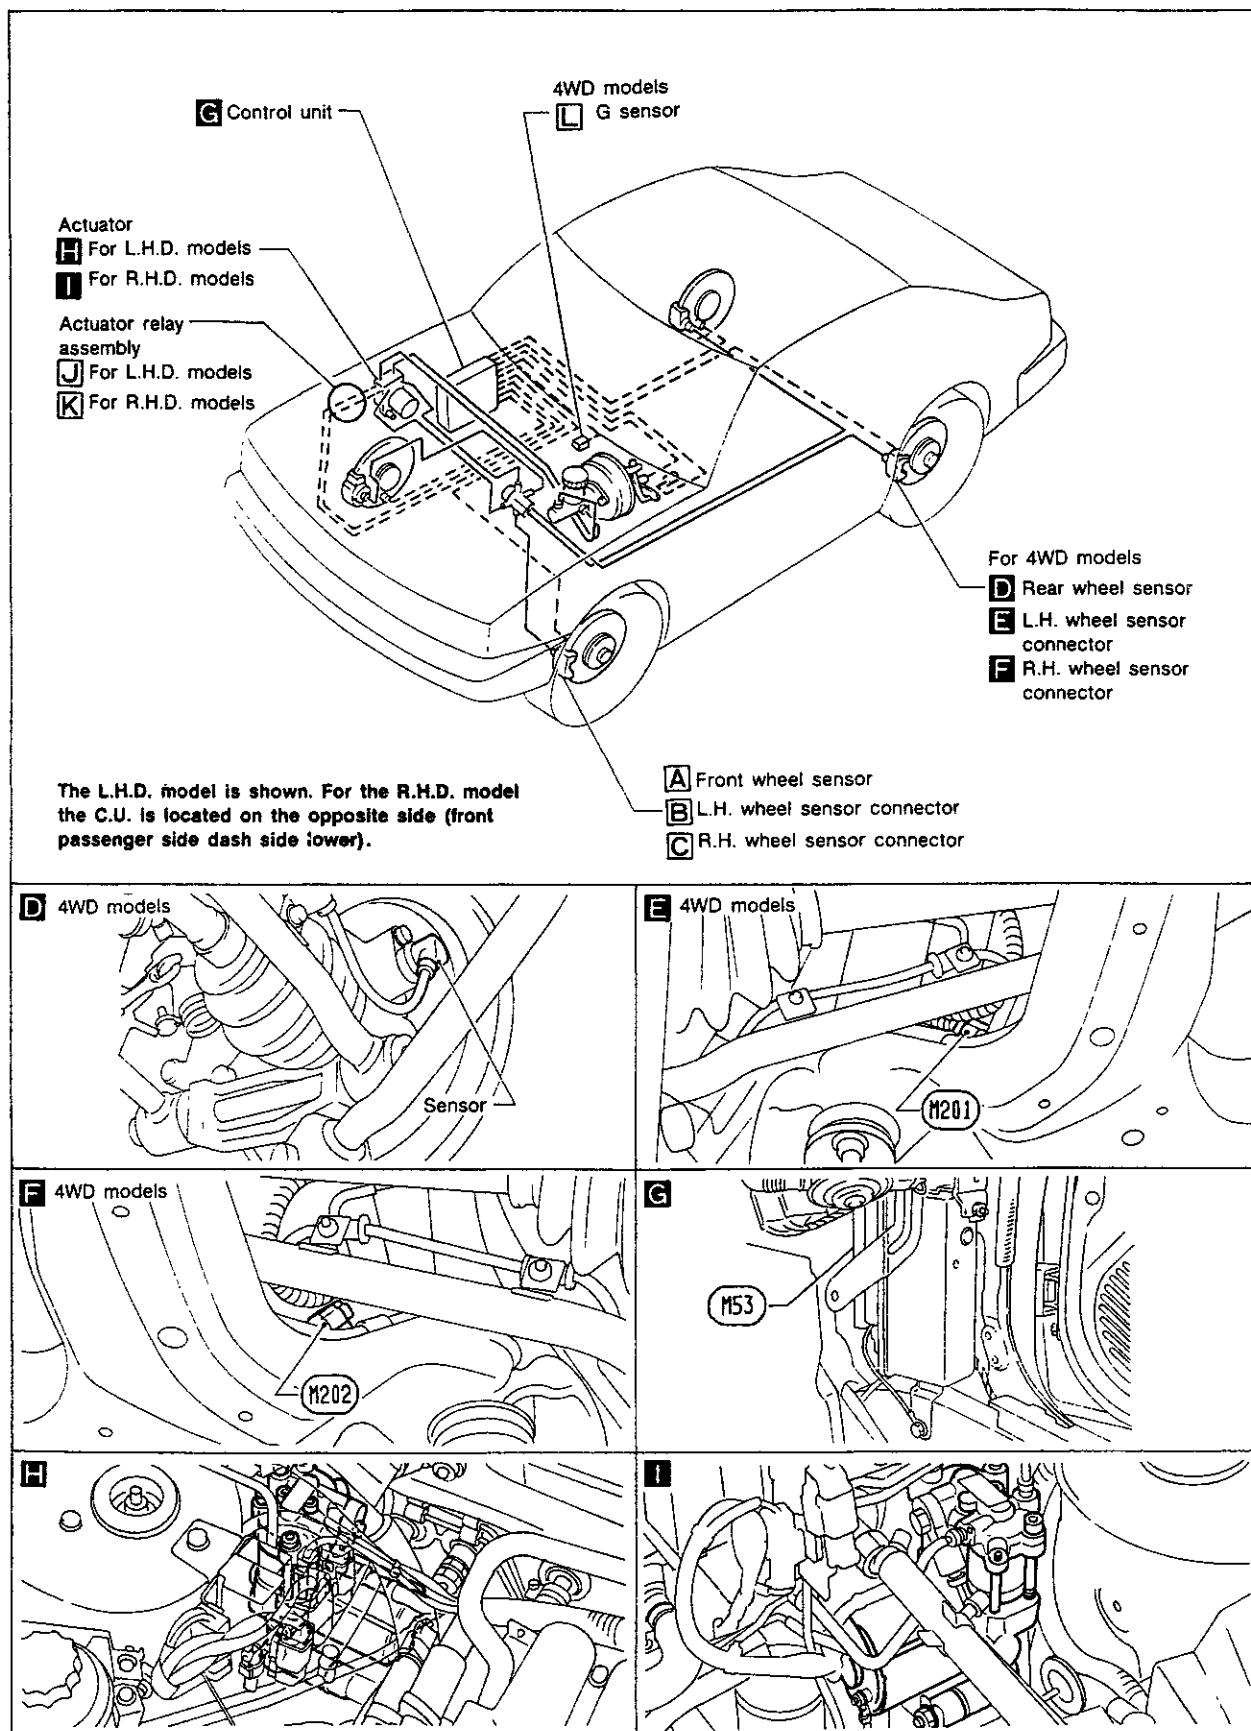


TROUBLE DIAGNOSES

Component Parts and Harness Connector Location (Cont'd)

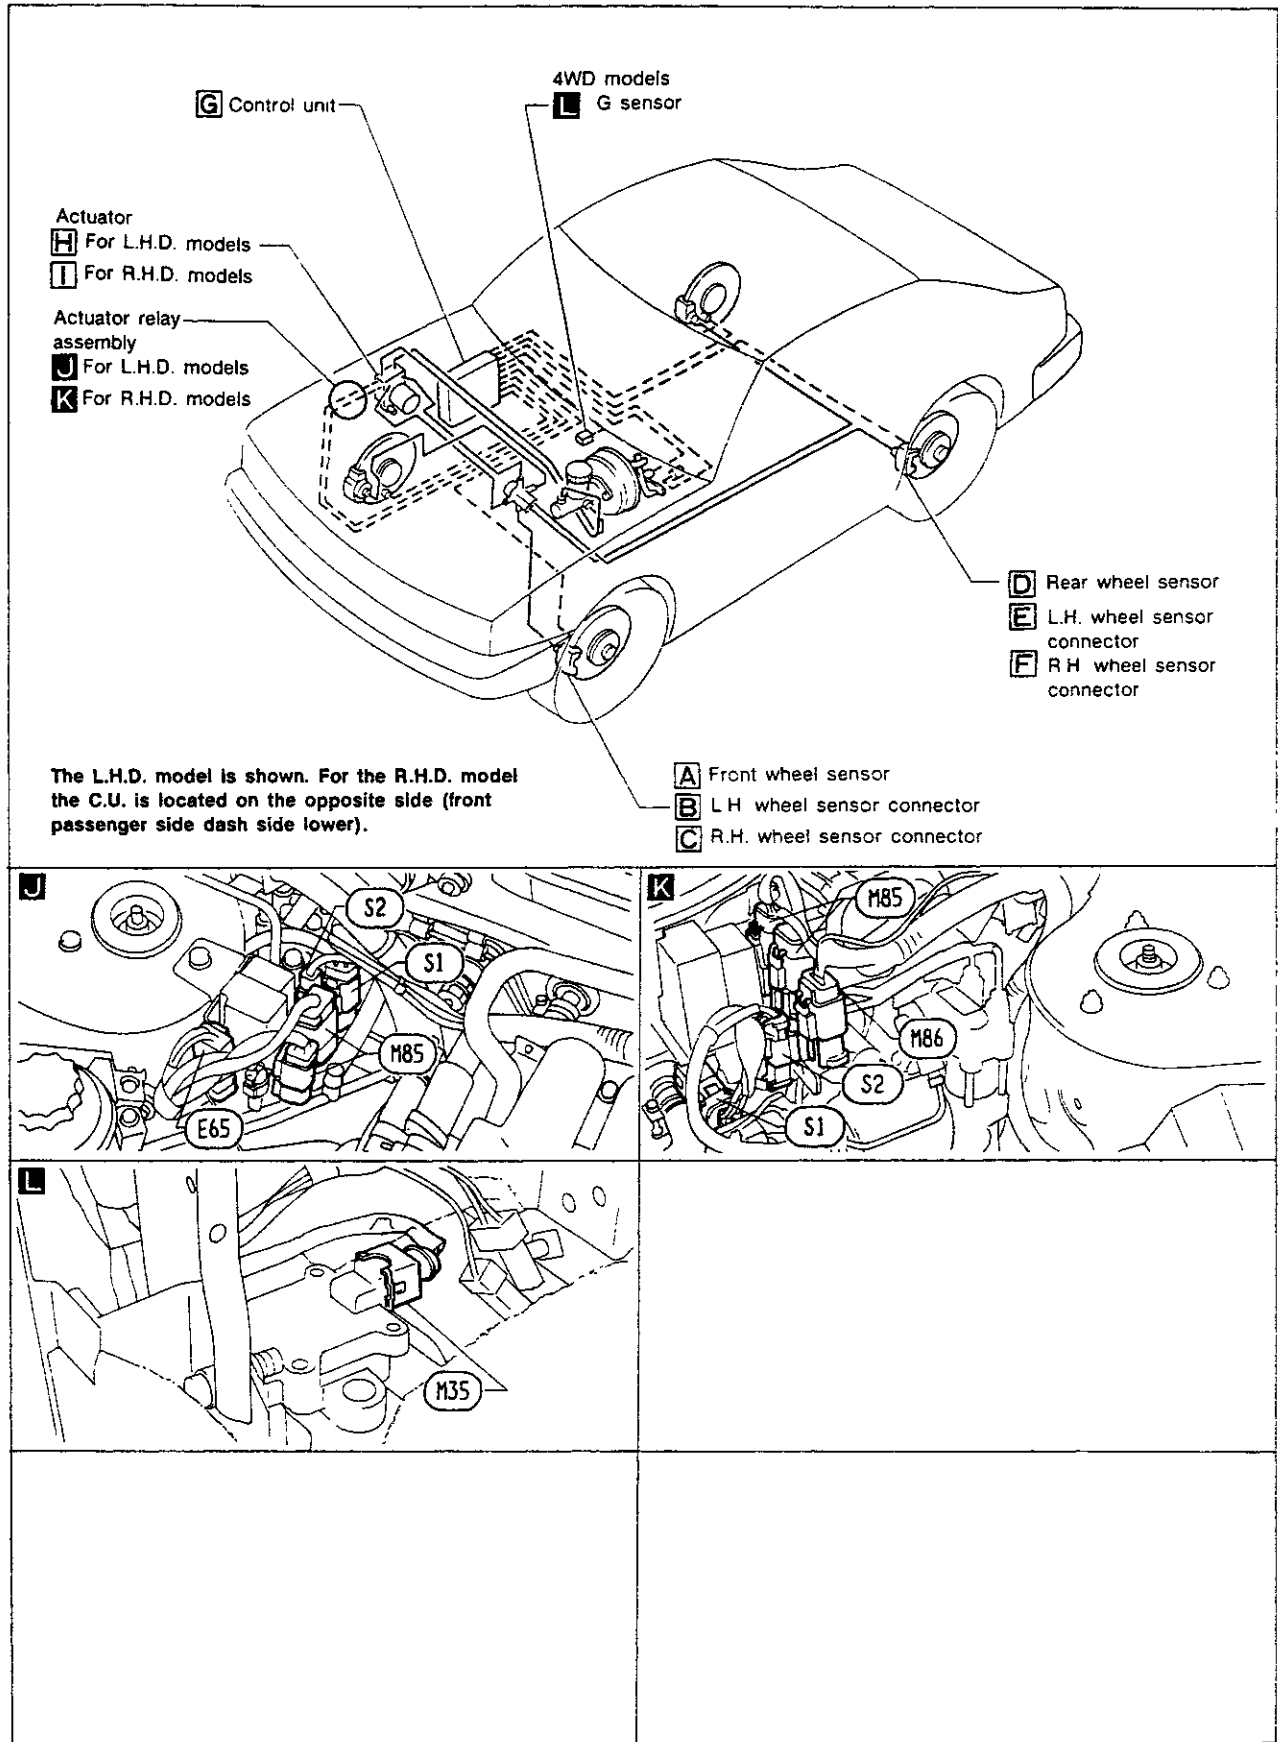

TROUBLE DIAGNOSES

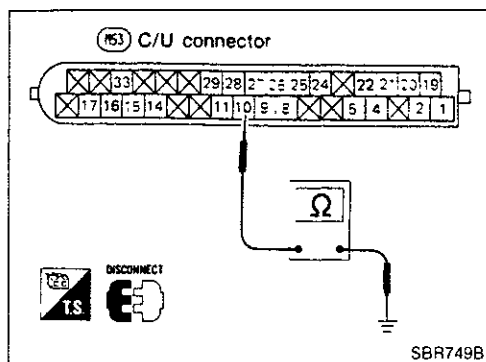

Ground Circuit Check

CONTROL UNIT GROUND CIRCUIT


- Check continuity between control unit connector terminal ⑩ and ground.

Continuity should exist.

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check

- The unit side connectors with a double circle "◯" are connected to the harness side connectors shown in the "Component Parts and Harness Connector Location". (See page BR-80.)
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "◯".

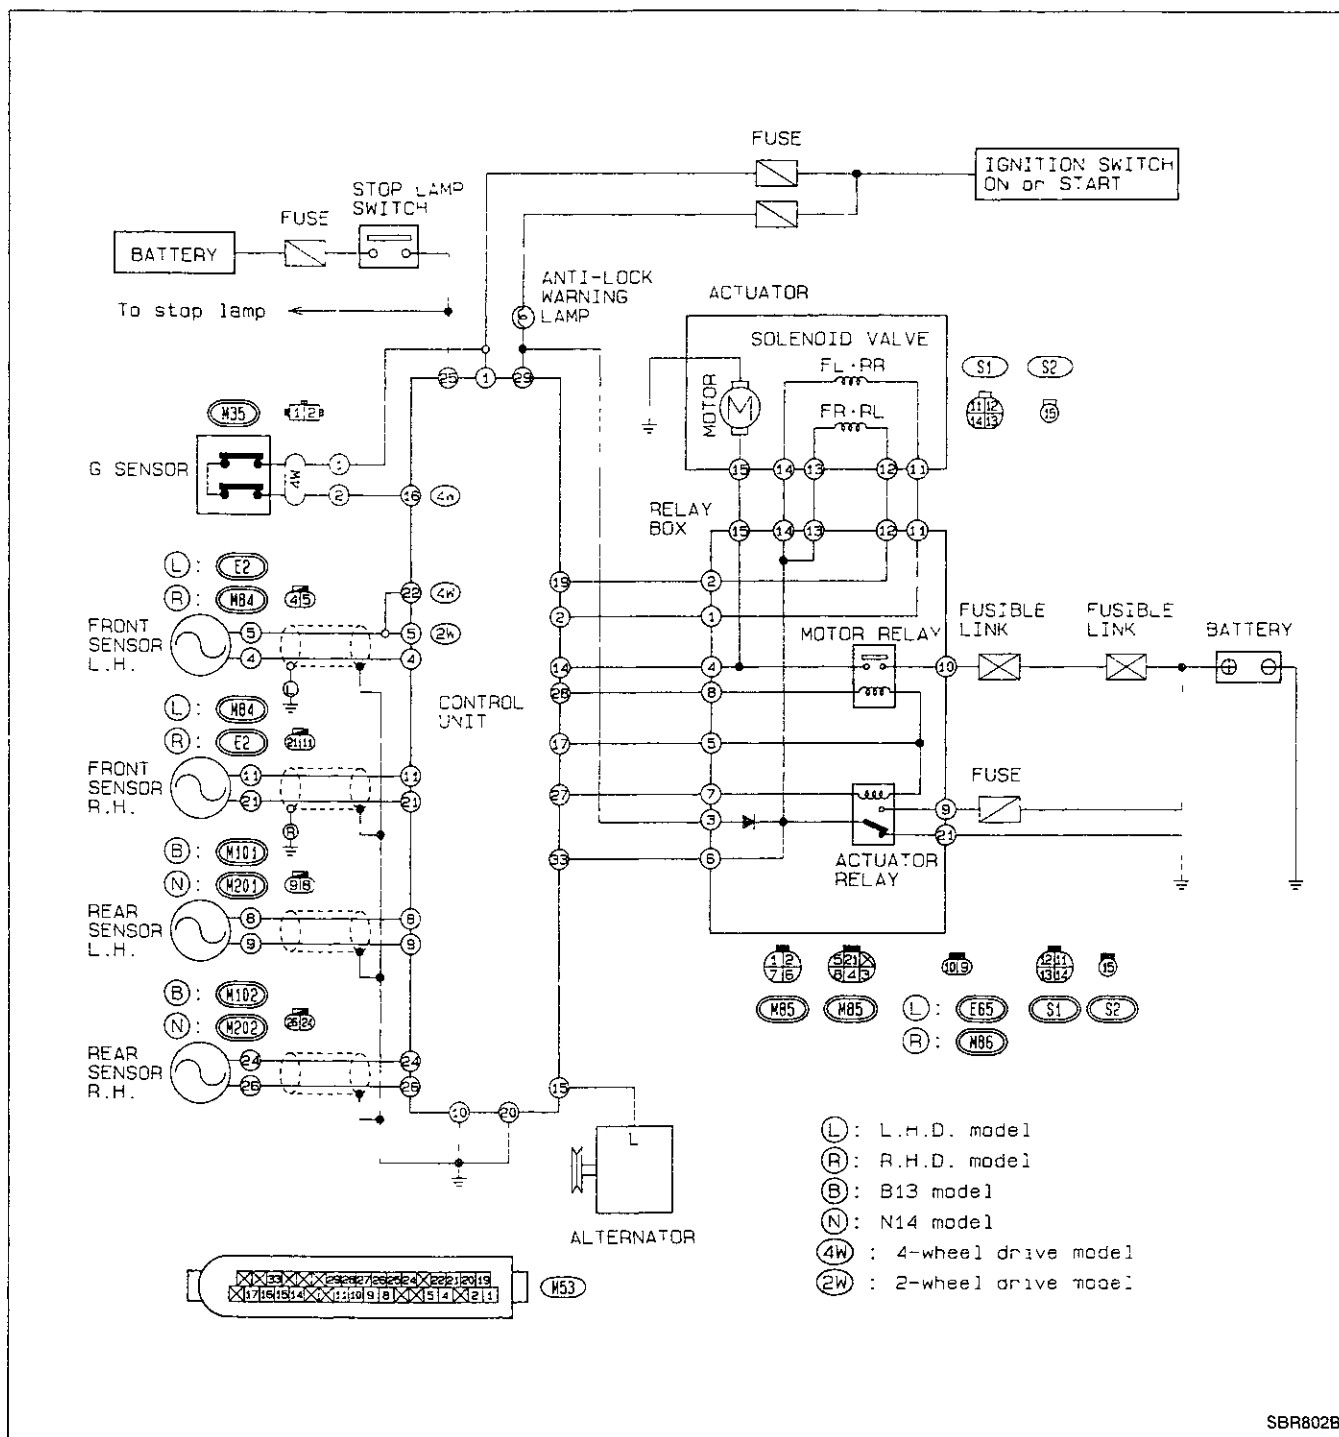


TROUBLE DIAGNOSES

Diagnostic Procedure 1

SYMPTOM: Pedal vibration and noise

Refer to worksheet result.

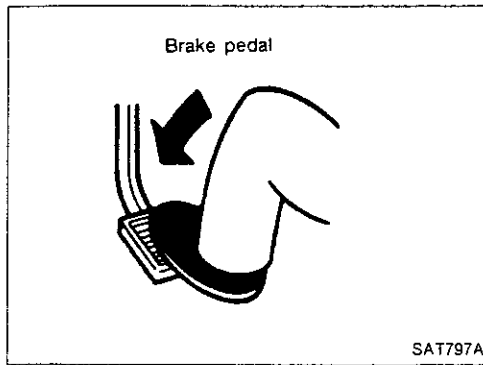

Check whether the symptom appears only when brake is applied suddenly.

Yes

 
When brake is suddenly applied, A.B.S. works and produces pedal vibration or noise.

No

Check whether the symptom appears only when engine is started.

Yes

Carry out self-diagnosis (See page BR-79.)



No

Check whether the symptom appears only when the vehicle speed is within 10 km/h (6 MPH) after starting engine.

Yes

Check whether the symptom disappears within 5 seconds.

No

Yes

A

A.B.S. may sometimes operate when load is high and voltage is low due to insufficient alternator output.

No

Check whether the symptom appears while the vehicle is being driven.

No

A

Yes

Check whether the symptom appears when brake is applied gradually.

No

(Appears when brake is not applied.)

Check if there are any conditions, among those listed below, when symptom appears.

- Shifting
- Operating clutch
- Passing over bumps/potholes



No

Yes

A


Under these conditions individual wheel speed can change suddenly. This may sometimes cause the A.B.S. to operate.

B

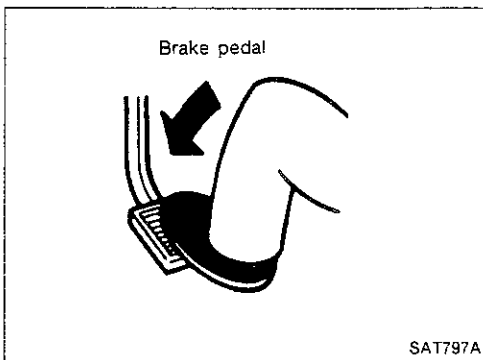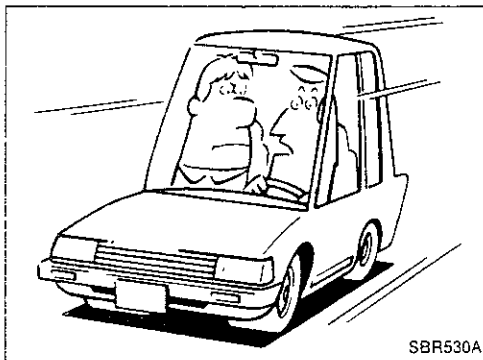


TROUBLE DIAGNOSES

Diagnostic Procedure 1 (Cont'd)

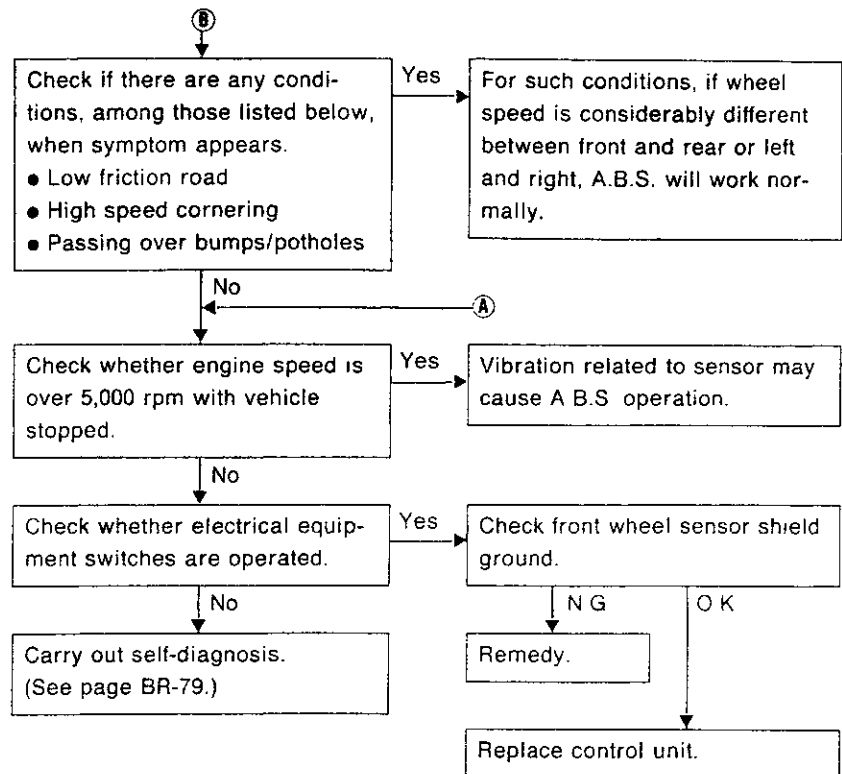




TROUBLE DIAGNOSES

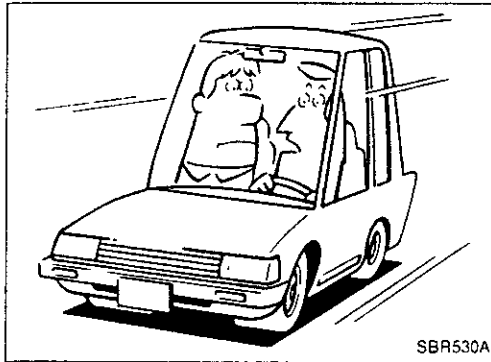

Diagnostic Procedure 2

SYMPTOM: Long stopping distance



Refer to worksheet results.

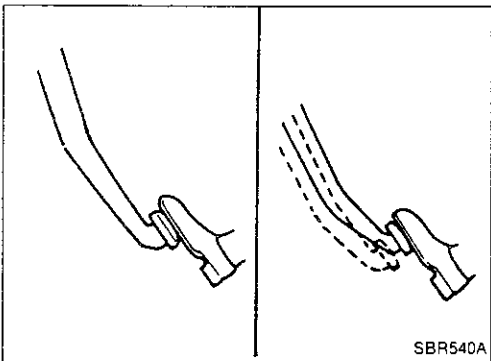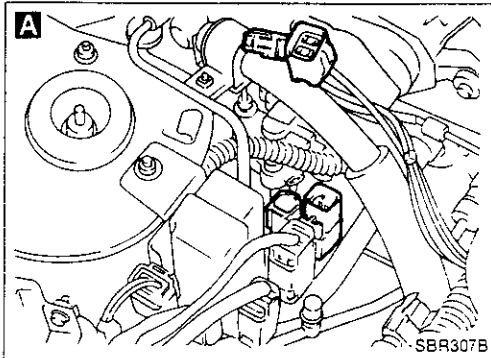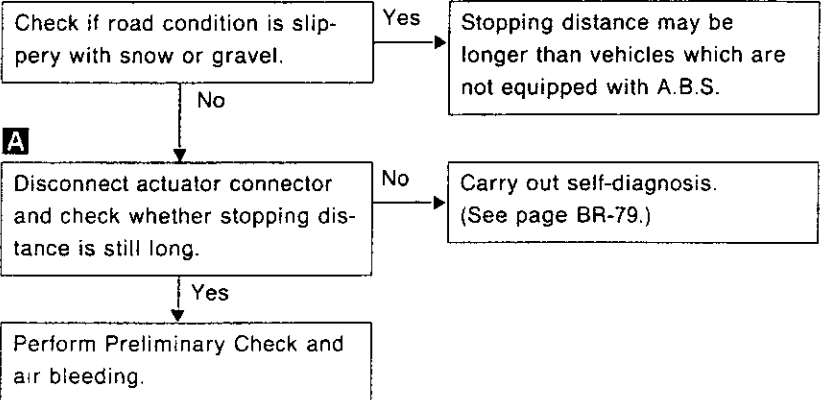

Diagnostic Procedure 3

SYMPTOM: Unexpected pedal action

Refer to worksheet results.

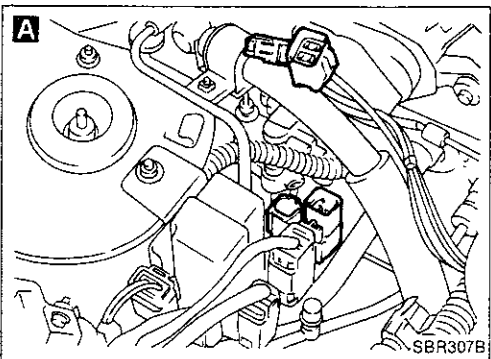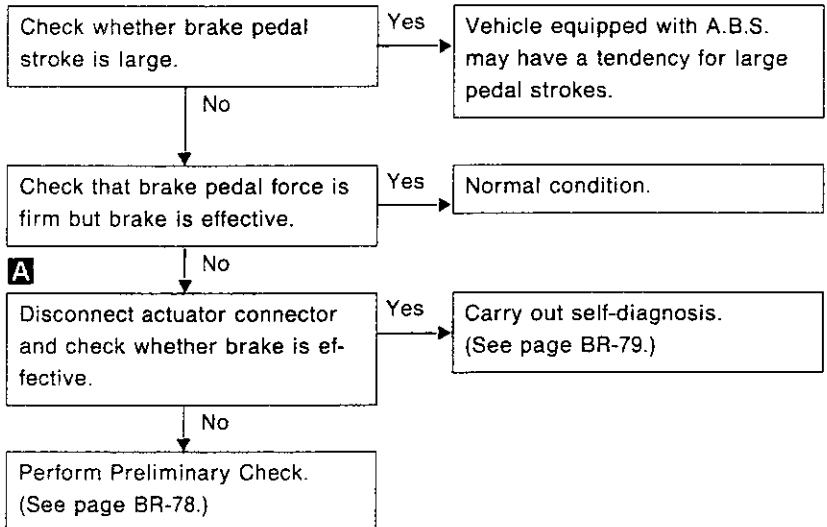


TROUBLE DIAGNOSES

Diagnostic Procedure 4


SYMPTOM: A.B.S. doesn't work.

Refer to worksheet results.

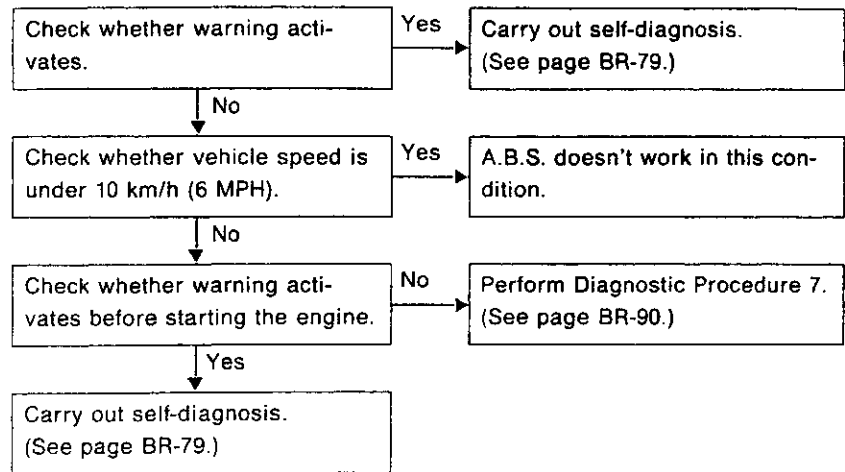


Diagnostic Procedure 5

SYMPTOM: A.B.S. works but warning activates.

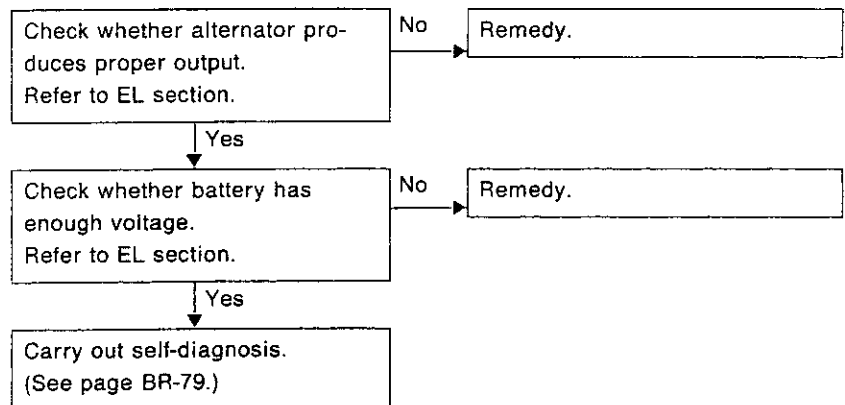

TROUBLE DIAGNOSES

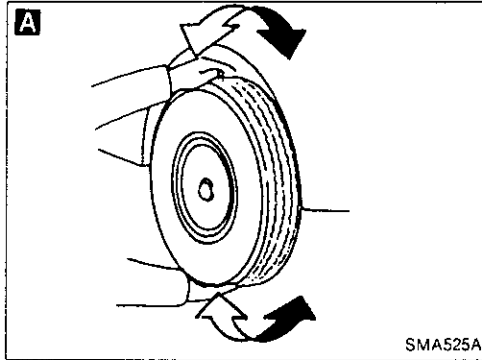

Diagnostic Procedure 6

SYMPTOM: A.B.S. works frequently.

CHECK BRAKE FLUID PRESSURE.
Check whether brake fluid pressure distribution is normal.
For details, refer to "CONTROL VALVE".

No

Perform Preliminary Check.

Yes

A
Check whether front axles have excessive looseness.

Yes

Remedy.





No

Perform Diagnostic Procedure 13 and Ground Circuit Check.
(See pages BR-97 and 83.)

TROUBLE DIAGNOSES




Diagnostic Procedure 7

SYMPTOM: Warning never activates.

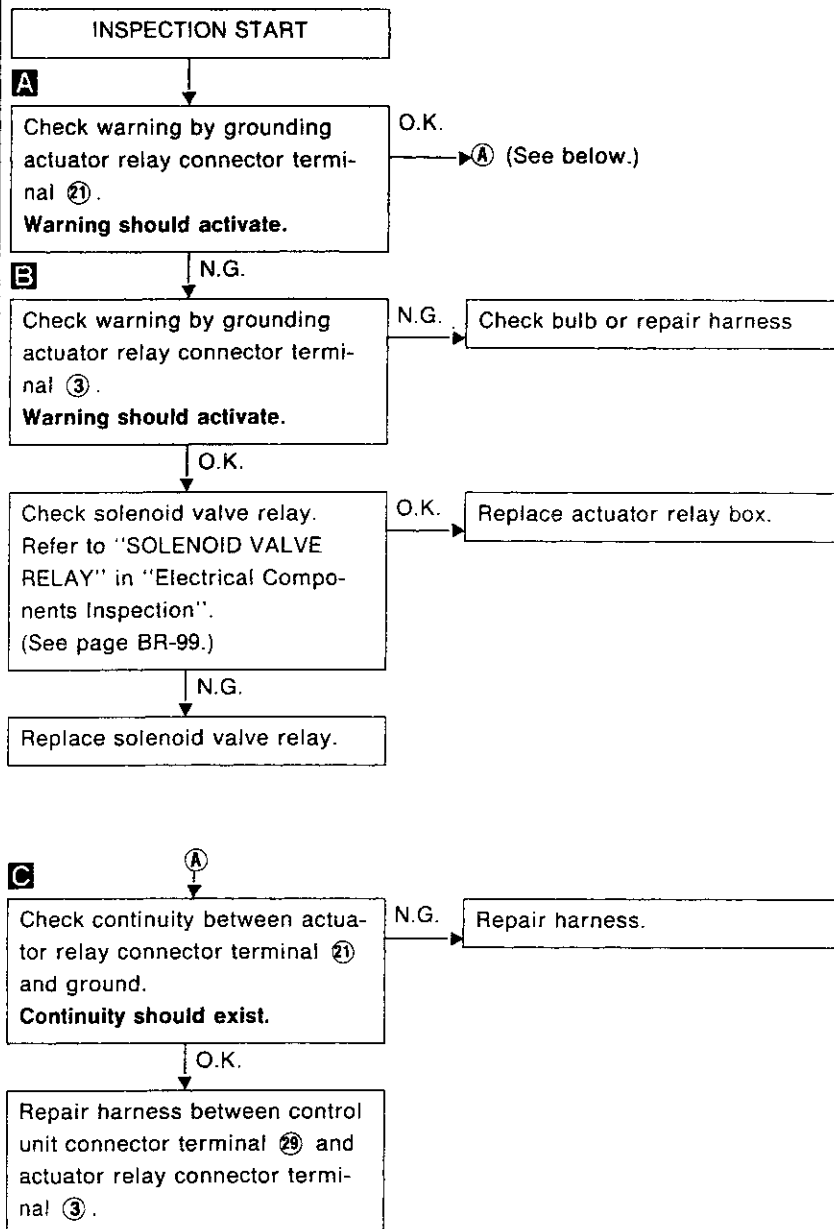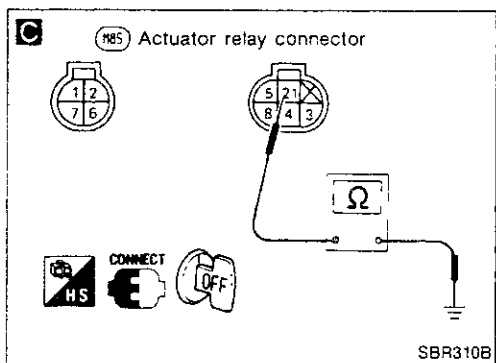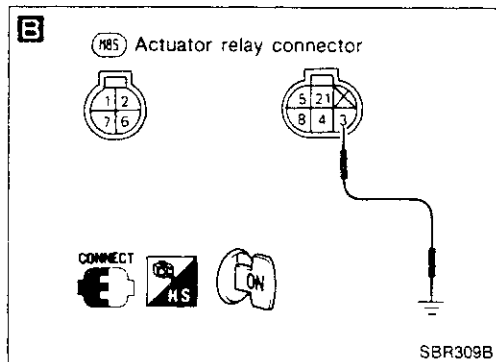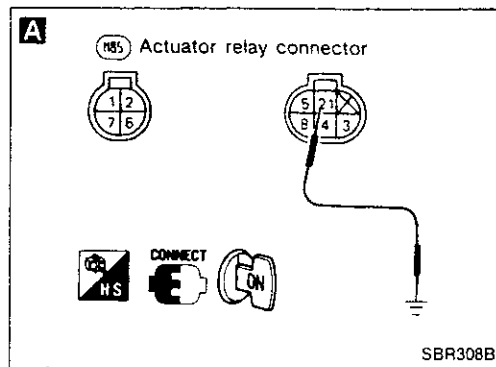

Diagnostic Procedure 8

ACTUATOR SOLENOID (L.E.D. flashing number 1 - 3)

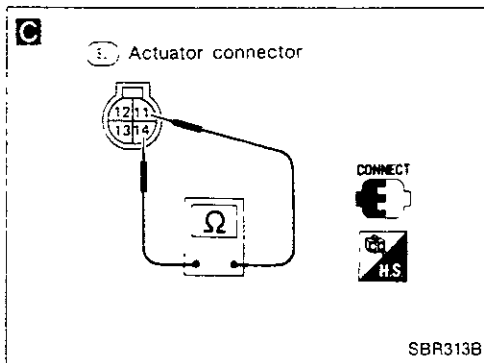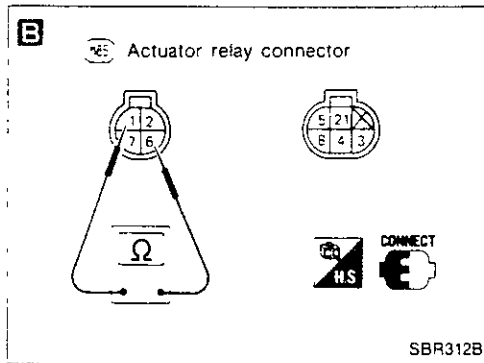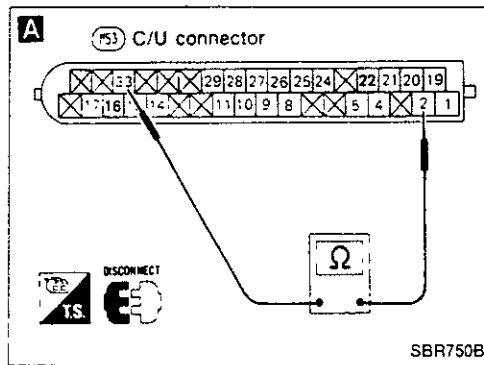

INSPECTION START
Remove battery negative terminal connector.

A
CHECK SOLENOID VALVE RESISTANCE.
Check resistance between control unit connector (vehicle side) terminals.
Flashing number 1:
Terminals ③③ and ②②
Flashing number 2:
Terminals ③③ and ①⑨
Flashing number 3:
Terminals ③③ and ②②
Terminals ③③ and ①⑨
Resistance: Approx. 3Ω

O.K. → Replace control unit.

B N.G.
Check resistance between actuator relay connector terminals.
Flashing number 1:
Terminals ⑥⑥ and ①①
Flashing number 2:
Terminals ⑥⑥ and ②②
Flashing number 3:
Terminals ⑥⑥ and ①①
Terminals ⑥⑥ and ②②
Resistance: Approx. 3Ω

O.K. → Repair harness between actuator relay connector and control unit connector.





C N.G.
Check resistance between actuator relay connector terminals.
Flashing number 1:
Terminals ⑪⑪ and ⑭⑭
Flashing number 2:
Terminals ⑫⑫ and ⑬⑬
Flashing number 3:
Terminals ⑪⑪ and ⑭⑭
Terminals ⑫⑫ and ⑬⑬
Resistance: Approx. 3Ω

O.K. → Replace actuator relay assembly.

N.G.
Replace actuator.

Diagnostic Procedure 9

WHEEL SPEED SENSOR (LED flashing number 5 - 8)

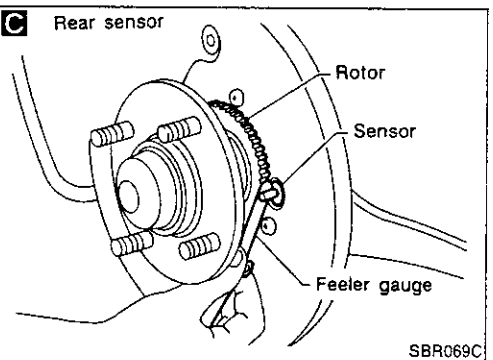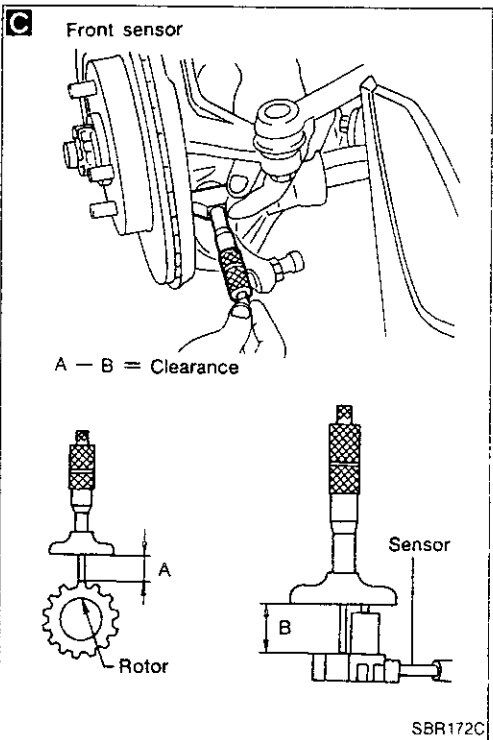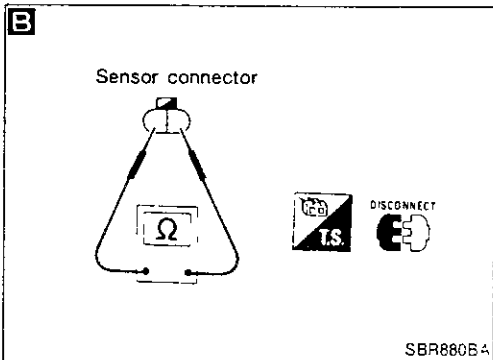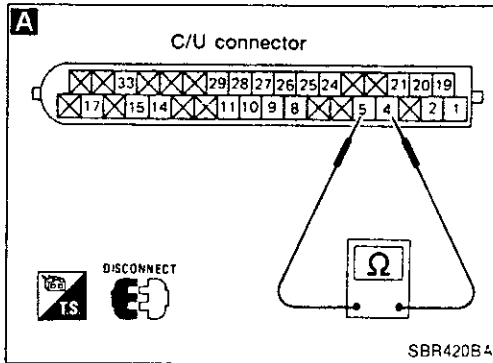

INSPECTION START
Remove battery negative terminal connector.

A

CHECK SPEED SENSOR RESISTANCE. Check resistance between control unit connector (vehicle side) terminals as shown.

Flashing number 5 (Fr. LH): 2WD
④ and ⑤
4WD
④ and ②②

Flashing number 6 (Fr. RH): ①① and ②①

Flashing number 7 (Rr. RH): ②④ and ②⑥

Flashing number 8 (Rr. LH): ⑧ and ⑨

Resistance: 0.8 - 1.3 kΩ

B

Check resistance for sensor.
Resistance: 0.8 - 1.3 kΩ

Repair harness between sensor connector and control unit connector.

Note

WHEEL SENSOR MECHANICAL CHECK

Check for inflation pressure, wear and size of each tire.

Note

Adjust tire pressure or replace tire(s).

Note

Check wheel bearing axial end play. Refer to FA or RA section ("Front/Rear Wheel Bearing", "ON-VEHICLE SERVICE").

Note

Follow the direction in FA or RA section ("Front/Rear Wheel Bearing", "ON-VEHICLE SERVICE").

C

Note

Check clearance between sensor and rotor.
Clearance: 0.1 - 1.1 mm (0.004 - 0.043 in)

Note

Clean sensor fixing portion, or replace sensor.

Note




Check sensor rotor for teeth damage.

Note

Replace sensor rotor (with drive shaft, wheel hub).


Replace control module.

Note: Wheel position should be distinguished by code No.

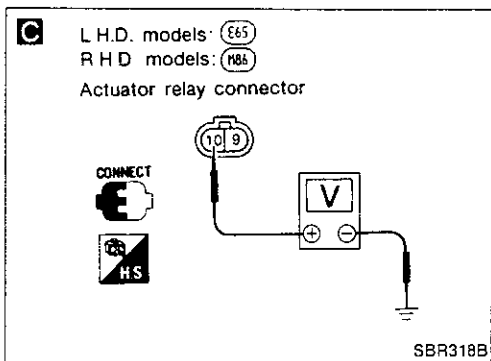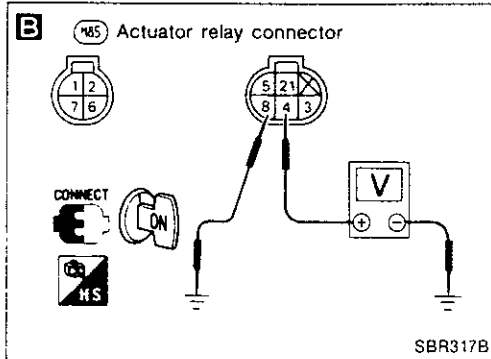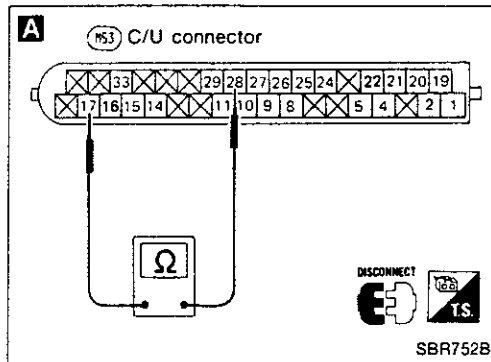





Diagnostic Procedure 10





ACTUATOR MOTOR RELAY (L.E.D. flashing number 9)

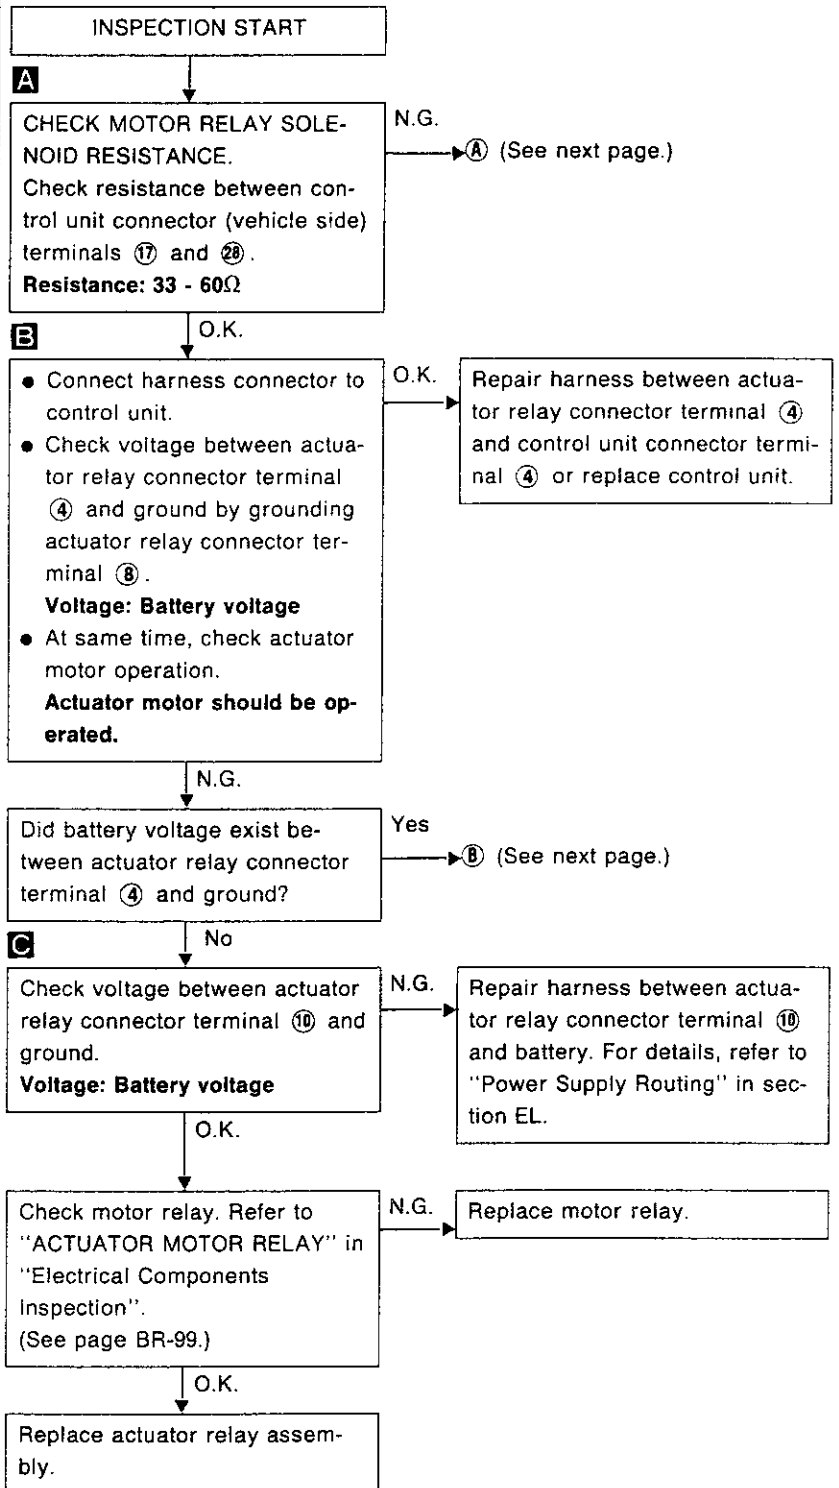

TROUBLE DIAGNOSES


Diagnostic Procedure 10 (Cont'd)

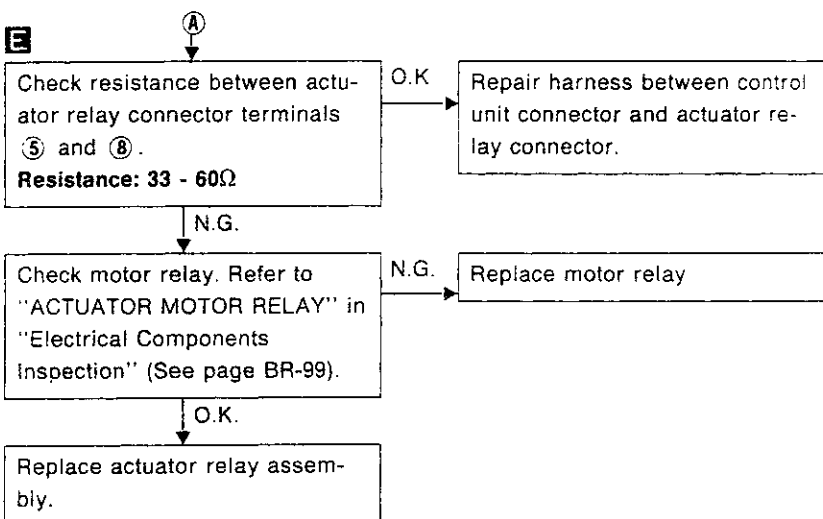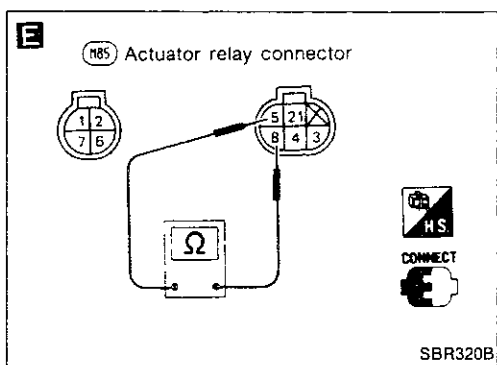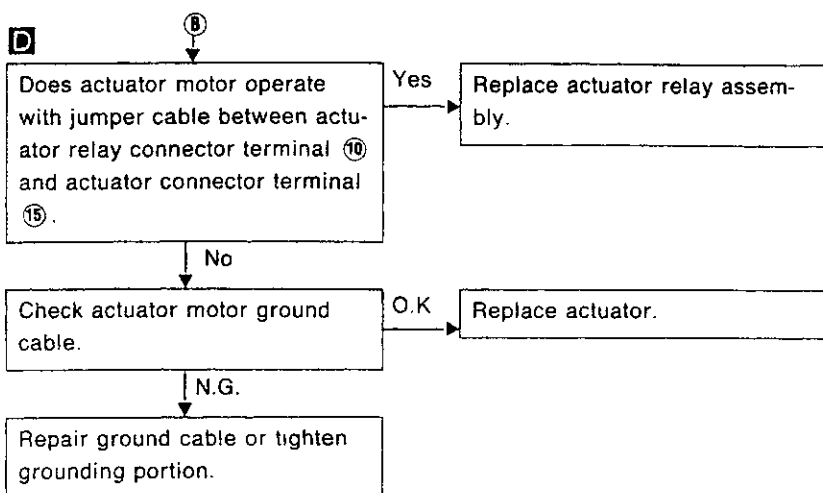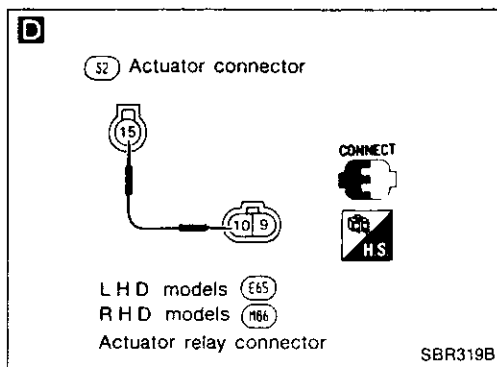

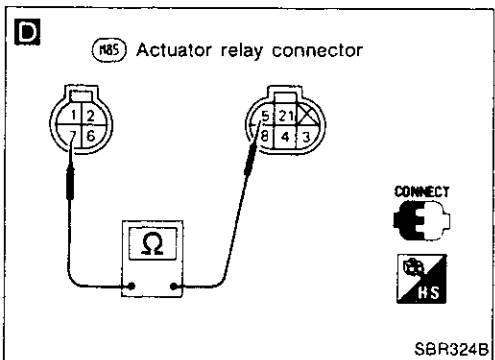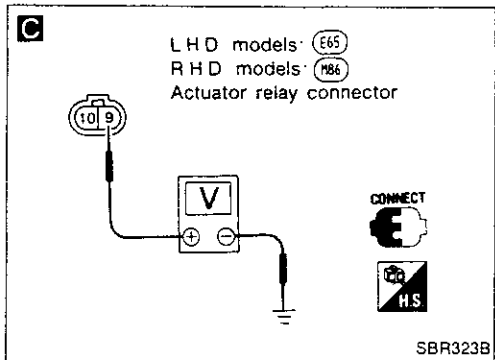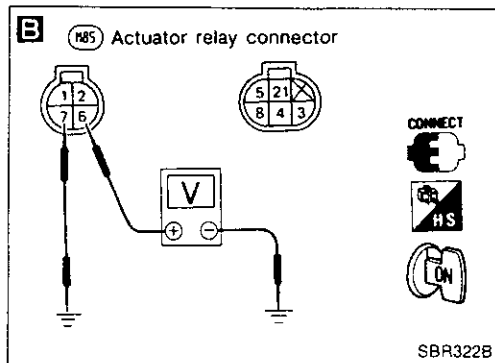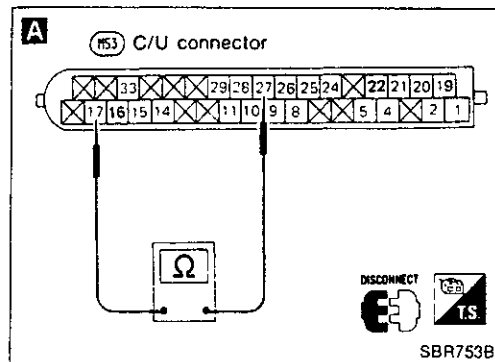

Diagnostic Procedure 11


ACTUATOR SOLENOID VALVE RELAY (L.E.D. flashing number 10)

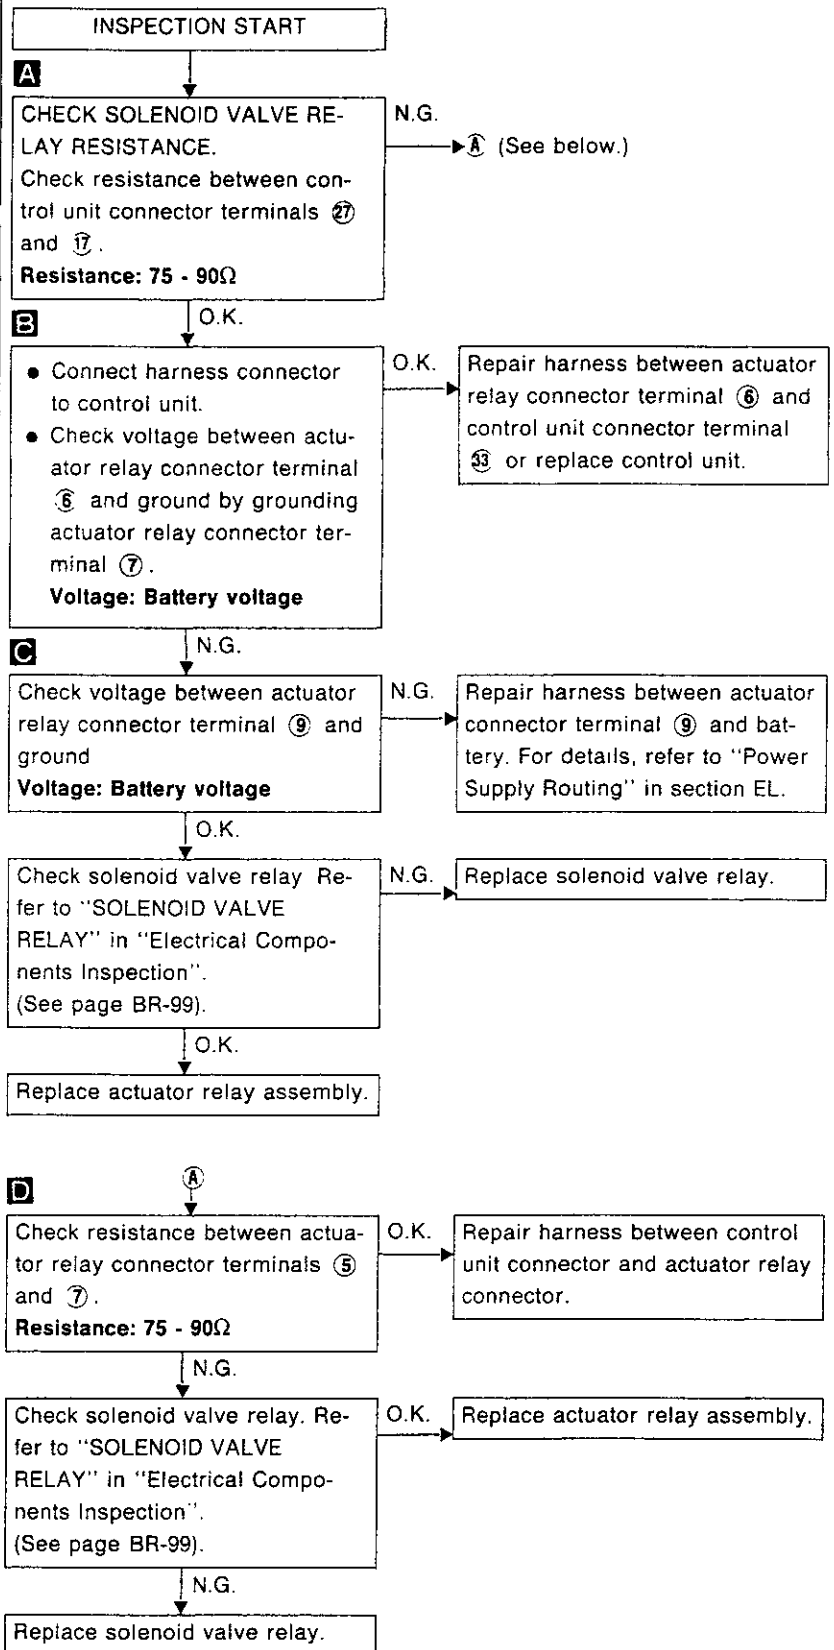

TROUBLE DIAGNOSES

Diagnostic Procedure 12


G SENSOR (L.E.D. flashing number 11)

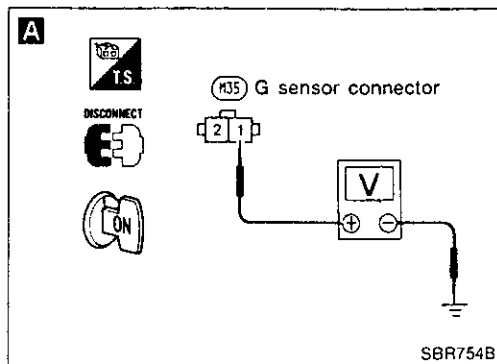

INSPECTION START

Check G sensor. Refer to "G SENSOR" in "Electrical Components Inspection".
(See page BR-99.)

N.G. → Replace G sensor.

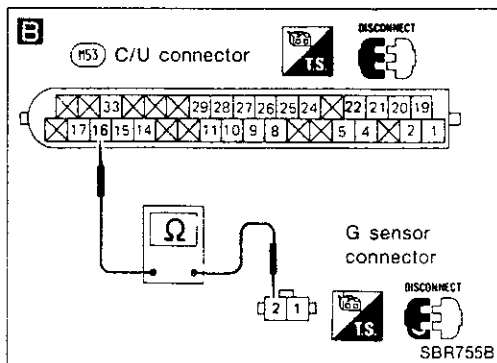

A

Check voltage between G sensor connector terminal ① and ground.
Battery voltage should exist.

N.G. → Repair harness between G sensor connector terminal ① and battery. For details, refer to "Power Supply Routing" in section EL.

B

- Disconnect harness connector from control unit.
- Check continuity between control unit connector terminal ⑩ and G sensor connector terminal ②.
Continuity should exist.


N.G. → Repair harness.

O.K. → Replace control unit.

TROUBLE DIAGNOSES


Diagnostic Procedure 13

SENSOR AND SENSOR ROTOR (L.E.D. flashing number 15)

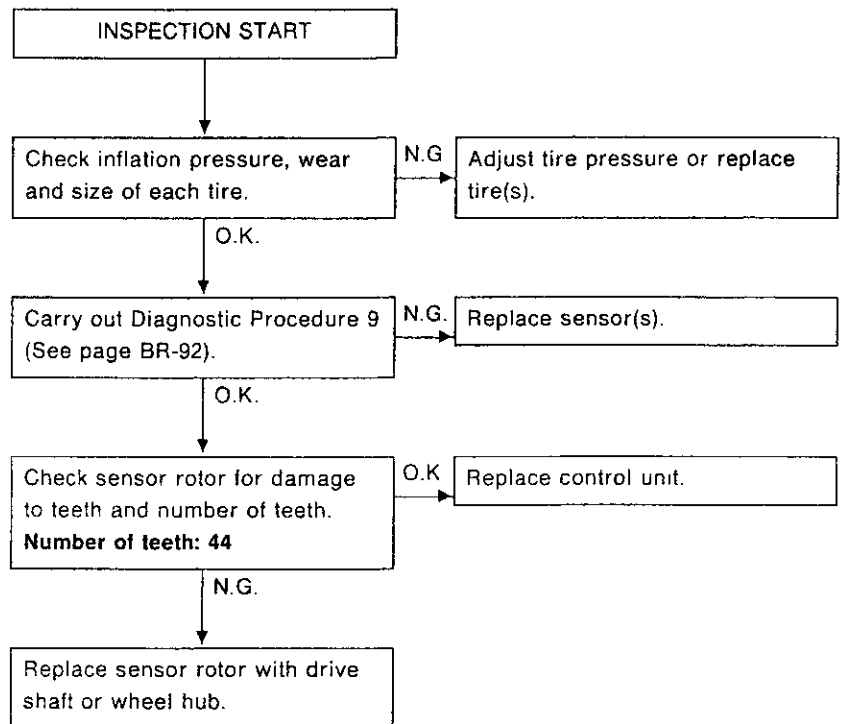

Diagnostic Procedure 14





CONTROL UNIT (L.E.D. flashing number 16)

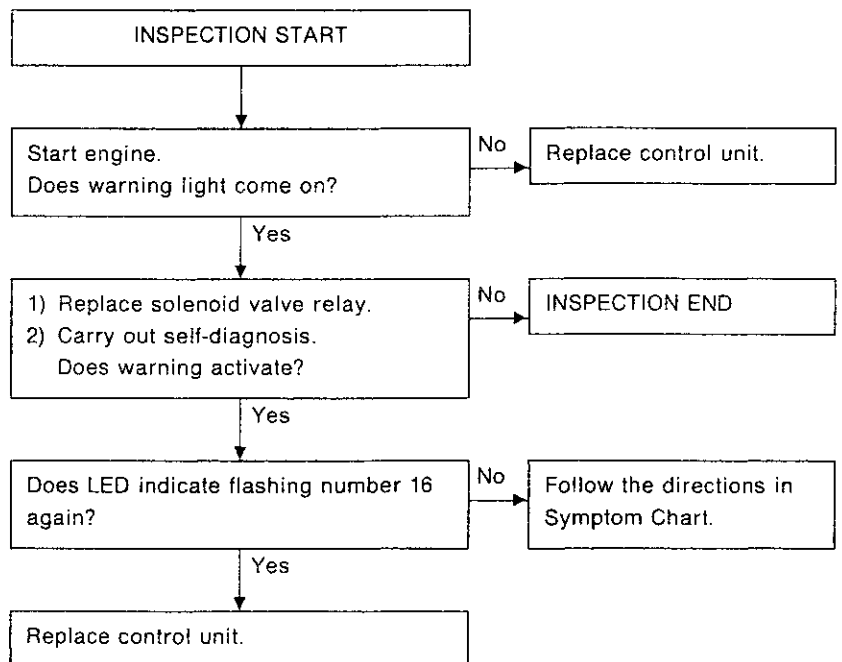


TROUBLE DIAGNOSES

Diagnostic Procedure 15

CONTROL UNIT OR POWER SUPPLY AND GROUND CIRCUIT (Warning activates but L.E.D. comes off.)

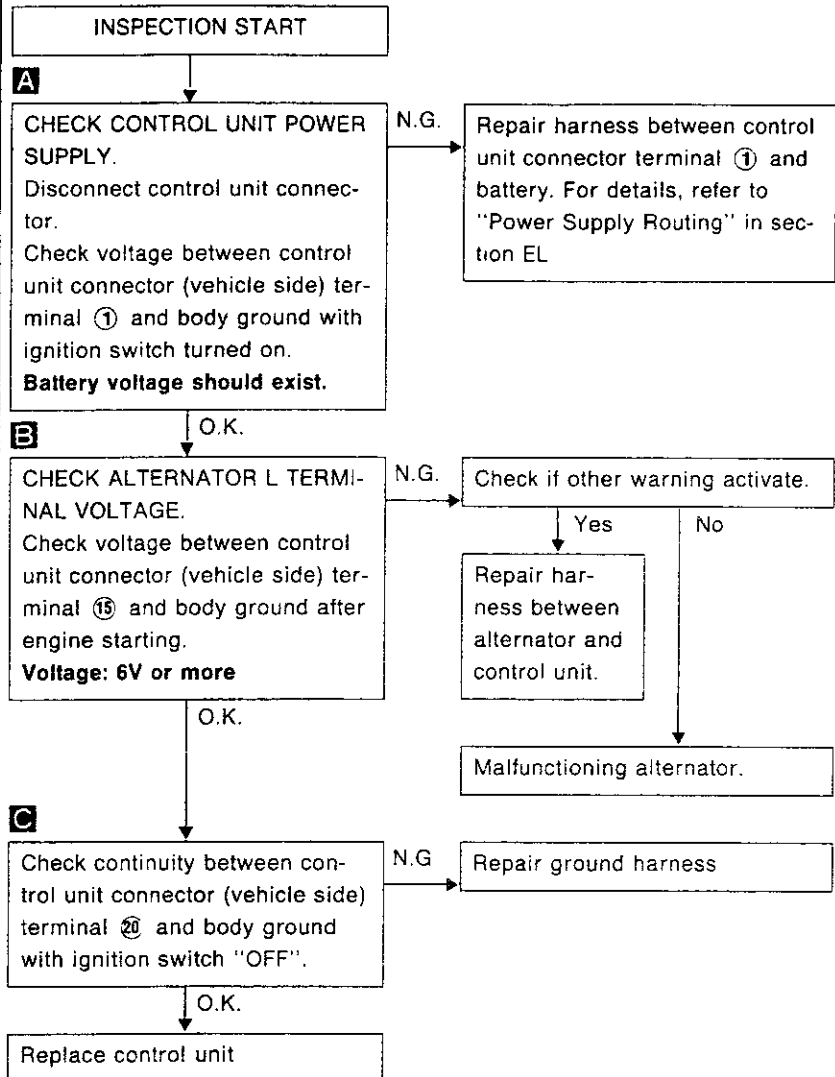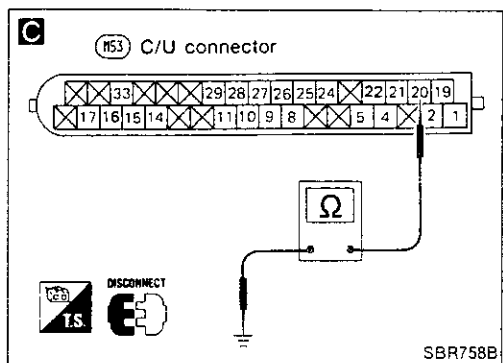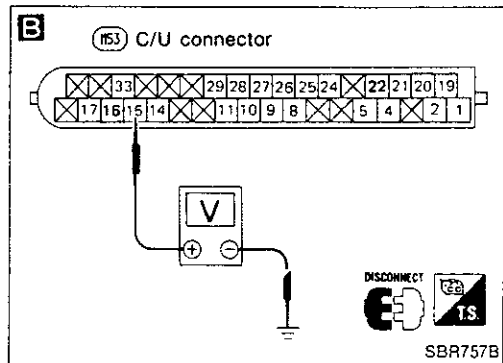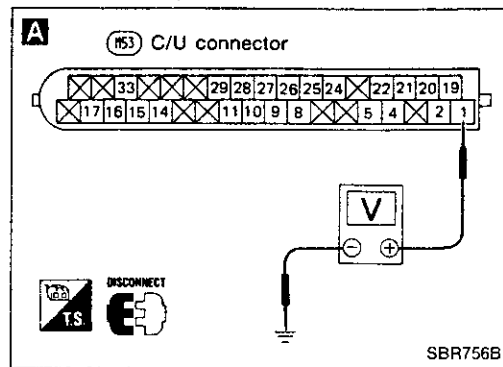


TROUBLE DIAGNOSES

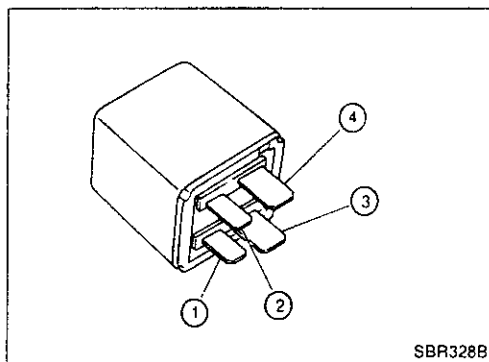

Electrical Components Inspection


ACTUATOR MOTOR RELAY

Condition	Continuity existence between terminals ③ and ④
Battery voltage not applied between terminals ① and ②.	No
Battery voltage applied between terminals ① and ②.	Yes

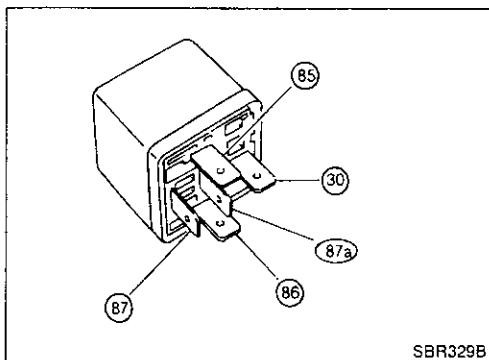

SOLENOID VALVE RELAY

Condition	Continuity existence between terminals ③⑩ and ⑧⑦a	Continuity existence between terminals ③⑩ and ⑧⑦
Battery voltage not applied between terminals ⑧⑤ and ⑧⑥.	Yes	No
Battery voltage applied between terminals ⑧⑤ and ⑧⑥.	No	Yes

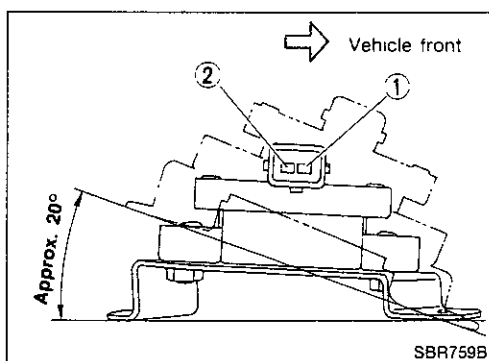

G SENSOR

Condition	Resistance between terminals ① and ②	Continuity
Installed in vehicle	Less than 100Ω	Yes
Tilted as shown in figure	Over 100 kΩ	No

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — B13 models

BRAKE UNIT (Except Middle East & Europe)

Applied model	Except GA16D engine models		GA16D engine models	
	Standard	Option	Without A.B.S.	With A.B.S.
Front brake				
Brake model	CL18C		CL18VD	
Cylinder bore diameter	mm (in)	48.1 (1.894)		
Lining length x width x thickness	mm (in)	106 x 43 x 10 (4.17 x 1.69 x 0.39)		
Rotor outer diameter x thickness	mm (in)	240 x 12 (9.45 x 0.47)	240 x 18 (9.45 x 0.71)	
Rear brake				
Brake model	LT18C		AD7HA	
Cylinder bore diameter	mm (in)	15.9 (5/8)	30.16 (1.1874)	
Lining length x width x thickness	mm (in)	172.8 x 30 x 4 (6.80 x 1.18 x 0.16)	94 x 29 x 10 (3.70 x 1.14 x 0.39)	
Drum inner diameter or rotor outer diameter x thickness	mm (in)	180 (7.09)	234 x 7 (9.21 x 0.28)	
Master cylinder				
Cylinder bore diameter	mm (in)	19.05 (3/4)	20.64 (13/16)	
Control valve				
Split point [kPa (bar, kg/cm ² , psi)] x reducing ratio	D.P.V.*1 3,923 (39.2, 40, 569) x 0.2		D.P.V.*2 1,471 (14.7, 15, 213) x 0.2	
Brake booster				
Booster model	C180 or S180	C205 or S205	M165T	
Diaphragm diameter	mm (in)	180 (7)	205 (8)	Primary 180 (7) Secondary 155 (6)
Recommended brake fluid	DOT 3			

*1: Dual proportioning valve built into master cylinder (built-in type)

*2: Dual proportioning valve separated from master cylinder (separated type)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — B13 models (Cont'd)

BRAKE UNIT (Middle East & Europe)

Applied model		Middle East			Europe		
		GA14DS	GA16DS			SR20DE	
		Without A.B.S.	With A.B.S.	Without A.B.S.	With A.B.S.	Without A.B.S.	With A.B.S.
Front brake							
Brake model		CL18C	CL18VD			AD22VF	
Cylinder bore diameter	mm (in)	48.1 (1.894)				54.0 (2.126)	
Lining length x width x thickness	mm (in)	106 x 43 x 10 (4.17 x 1.69 x 0.39)				106.8 x 41.8 x 10 (4.20 x 1.646 x 0.39)	
Rotor outer diameter	mm (in)	240 x 12 (9.45 x 0.47)	240 x 18 (9.45 x 0.71)			257 x 26 (10.12 x 1.02)	
Rear brake							
Brake model		LT18C	AD7HA	LT18C	AD7HA	CL9HA	
Cylinder bore diameter	mm (in)	15.9 (5/8)	30.16 (1.1874)	15.9 (5/8)	30.16 (1.1874)	33.96 (1.3370)	
Lining length x width x thickness	mm (in)	172.8 x 30 x 4 (6.80 x 1.18 x 0.16)	94 x 29 x 10 (3.70 x 1.14 x 0.39)	172.8 x 30 x 4 (6.80 x 1.18 x 0.16)	94 x 29 x 10 (3.70 x 1.14 x 0.39)	89.1 x 39.5 x 10 (3.508 x 1.555 x 0.39)	
Drum inner diameter or rotor outer diameter x thickness	mm (in)	180 (7.09)	234 x 7 (9.21 x 0.28)	180 (7.09)	234 x 7 (9.21 x 0.28)	258 x 9 (10.16 x 0.35)	
Master cylinder							
Cylinder bore diameter	mm (in)	19.05 (3/4)	20.64 (13/16)			22.22 (7/8)	
Control valve		D.P.V.*1	D.P.V.*2	R.H.D.: D.P.V.*2 L.H.D.: D.P.V.*1	Twin load sensing valve		
Split point [kPa (bar, kg cm ² , psi)] x reducing ratio		3,923 (39.2, 40, 569) x 0.2	1,471 (14.7, 15, 213) x 0.2	3,432 (34.3, 35, 498) x 0.2	Variable		
Brake booster							
Booster model		C205 or S205	M165T			M195T	
Diaphragm diameter	mm (in)	205 (8)	Primary: 180 (7) Secondary: 155 (6)			Primary: 205 (8) Secondary: 180 (7)	
Recommended brake fluid		DOT 3					

*1: Dual proportioning valve built into master cylinder (built-in type)

*2: Dual proportioning valve separated from master cylinder (separated type)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — N14 models

BRAKE UNIT (Except Europe)

Applied model	2WD		
	GA14DS	GA16DE	
	Without A.B.S		With A.B.S.
Front brake			
Brake model	CL18C	CL18VD	
Cylinder bore diameter	mm (in)	48.1 (1.894)	
Lining length x width x thickness	mm (in)	106 x 43 x 10 (4.17 x 1.69 x 0.39)	
Rotor outer diameter x thickness	mm (in)	240 x 12 (9.45 x 0.47)	240 x 18 (9.45 x 0.71)
Rear brake			
Brake model	LT18C		AD7HA
Cylinder bore diameter	mm (in)	15.9 (5/8)	30.16 (1.1874)
Lining length x width x thickness	mm (in)	172.8 x 30 x 4 (6.80 x 1.18 x 0.16)	94 x 29 x 10 (3.70 x 1.14 x 0.39)
Drum inner diameter or rotor outer diameter x thickness	mm (in)	180 (7.09)	234 x 7 (9.21 x 0.28)
Master cylinder			
Cylinder bore diameter	mm (in)	19.05 (3/4)	20.64 (13/16)
Control valve			
Split point [kPa (bar, kg/cm ² , psi)] x reducing ratio	D.P.V.*1		D.P.V.*2
	3,923 (39.2, 40, 569) x 0.2		1,471 (14.7, 15, 213) x 0.2
Brake booster			
Booster model	C205 or S205		M165T
Diaphragm diameter	mm (in)	205 (8)	Primary 180 (7) Secondary 155 (6)
Recommended brake fluid	DOT 3		

*1: Dual proportioning valve built into master cylinder (built-in type)

*2: Dual proportioning valve separated from master cylinder (separated type)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications — N14 models (Cont'd)

N14 MODELS

BRAKE UNIT (Europe)

Applied model	2WD			4WD			
	GA14, 16DS CD20	GA16DS	SR20DE	GA16DS		SR20DET	
	Without A.B.S.	With A.B.S.		Without A.B.S.	With A.B.S.	Without A.B.S.	With A.B.S.
Front brake							
Brake model	CL18VD		AD22VF	CL18VD		AD22VF	
Cylinder bore diameter mm (in)	48.1 (1.894)		54.0 (2.126)	48.1 (1.894)		54.0 (2.126)	
Lining mm (in) length x width x thickness	106 x 43 x 10 (4.17 x 1.69 x 0.39)		106.8 x 41.8 x 10 (4.20 x 1.646 x 0.39)	106 x 43 x 10 (4.17 x 1.69 x 0.39)		106.8 x 41.8 x 10 (4.20 x 1.646 x 0.39)	
Rotor outer diameter mm (in)	240 x 18 (9.45 x 0.71)		257 x 26 (10.12 x 1.02)	240 x 18 (9.45 x 0.71)		257 x 26 (10.12 x 1.02)	
Rear brake							
Brake model	LT18C	AD7HA	CL9HA	LT23B	AD7HA	CL9HA	
Cylinder bore diameter mm (in)	15.9 (5/8)	30.16 (1.1874)	33.96 (1.3370)	15.9 (5/8)	30.16 (1.1874)	33.96 (1.3370)	
Lining mm (in) length x width x thickness	172.8 x 30 x 4 (6.80 x 1.18 x 0.16)	94 x 29 x 10 (3.70 x 1.14 x 0.39)	89.1 x 39.5 x 10 (3.508 x 1.555 x 0.39)	219.4 x 40 x 4.5 (8.64 x 1.57 x 0.177)	94 x 29 x 10 (3.70 x 1.14 x 0.39)	89.1 x 39.5 x 10 (3.508 x 1.555 x 0.39)	
Drum inner diameter or rotor outer diameter x thickness mm (in)	180 (7.09)	234 x 7 (9.21 x 0.28)	258 x 9 (10.16 x 0.35)	228.6 (9)	234 x 7 (9.21 x 0.28)	258 x 9 (10.16 x 0.35)	
Master cylinder							
Cylinder bore diameter mm (in)	20.64 (13/16)		22.22 (7/8)	20.64 (13/16)		23.81 (15/16)	
Control valve	R.H.D.: D.P.V.*2 L.H.D.: D.P.V.*1	Twin load sensing valve		D.P.V.*1	D.P.V.*2	R.H.D.: D.P.V.*2 L.H.D.: D.P.V.*1	D.P.V.*2
Split point [kPa (bar, kg/cm ² , psi)] x reducing ratio	3.432 (34.3, 35, 498) x 0.2	Variable		3.923 (39.2, 40, 569) x 0.2	3.432 (34.3, 35, 498) x 0.2	2.942 (29.4, 30, 427) x 0.4	3.432 (34.3, 35, 498) x 0.1
Brake booster							
Booster model	M165T	M195T					
Diaphragm diameter mm (in)	Primary: 180 (7) Secondary: 155 (6)	Primary: 205 (8) Secondary: 180 (7)					
Recommended brake fluid	DOT 3						

*1: Dual proportioning valve built into master cylinder (built-in type)

*2: Dual proportioning valve separated from master cylinder (separated type)

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment

DISC BRAKE

Unit: mm (in)

Brake model	Front			Rear	
	CL18C	CL18VD	AD22VF	AD7HA	CL9HA
Lining wear limit					
Minimum thickness	2.0 (0.079)				1.5 (0.059)
Rotor repair limit					
Minimum thickness	10.0 (0.394)	16.0 (0.630)	24.0 (0.945)	6.0 (0.236)	8.0 (0.315)
Maximum runout	0.07 (0.0028)				
Maximum thickness variation	0.02 (0.0008)				

DRUM BRAKE

Unit: mm (in)

Brake model	Rear	
	LT18C	LT23B
Lining wear limit		
Minimum thickness	1.5 (0.059)	
Drum repair limit		
Maximum inner diameter	181 (7.13)	230 (9.06)
Out-of-round	0.03 (0.0012)	

BRAKE PEDAL

Unit: mm (in)

	2WD		4WD	
	R.H.D.	L.H.D.	R.H.D.	L.H.D.
Free height				
M/T	155 - 165 (6.10 - 6.50)	148 - 158 (5.83 - 6.22)	158 - 168 (6.22 - 6.61)	157 - 167 (6.18 - 6.57)
A/T	164 - 174 (6.46 - 6.85)	157 - 167 (6.18 - 6.57)	—	—
Depressed height [under force of 490 N (50 kg, 110 lb) with engine running]	See next page.			
Clearance between switches and pedal stopper bracket	0.1 - 0.3 (0.004 - 0.012)			
Pedal free play	1 - 3 (0.04 - 0.12)			

PARKING BRAKE CONTROL

Brake type	Drum	Disc
Control type	Center lever	
Number of notches [under force of 196 N (20 kg, 44 lb)]	5 - 6	7 - 8
Number of notches when warning switch comes on	1 or less	

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment (Cont'd)

BRAKE PEDAL

Depressed Height [Under force of 490 N (50 kg, 110 lb) with engine running]

Europe

Unit: mm (in)

Applied model		2WD			4WD		
		Except SR20DE		SR20DE	GA16DS		SR20DET
		Without A.B.S.	With A.B.S.	—	Without A.B.S.	With A.B.S.	—
L.H.D.	M/T	75 (2.95) or more	75 (2.95) or more	90 (3.54) or more	75 (2.95) or more	75 (2.95) or more	85 (3.35) or more
	A/T	75 (2.95) or more	80 (3.15) or more	—	—	—	—
R.H.D.	M/T	80 (3.15) or more	80 (3.15) or more	85 (3.35) or more	—	—	80 (3.15) or more
	A/T	85 (3.35) or more	85 (3.35) or more	—	—	—	—

Except Europe

Unit: mm (in)

Applied model		N14 and B13		N14	B13
		GA16D		GA14D	Others
		Without A.B.S.	With A.B.S.		
L.H.D.	M/T	75 (2.95) or more	75 (2.95) or more	75 (2.95) or more	80 (3.15) or more
	A/T	80 (3.15) or more	85 (3.35) or more	80 (3.15) or more	85 (3.35) or more
R.H.D.	M/T	80 (3.15) or more	80 (3.15) or more	80 (3.15) or more	80 (3.15) or more
	A/T	85 (3.35) or more	85 (3.35) or more	85 (3.35) or more	90 (3.54) or more

STEERING SYSTEM

SECTION **ST**

CONTENTS

PRECAUTIONS	ST- 2
PREPARATION	ST- 3
ON-VEHICLE INSPECTION	ST- 5
STEERING WHEEL AND STEERING COLUMN	ST- 9
MANUAL STEERING GEAR AND LINKAGE (Model R24S and R24N)	ST-15
POWER STEERING GEAR AND LINKAGE (Model PR24SC)	ST-22
POWER STEERING OIL PUMP	ST-34
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	ST-37









PRECAUTIONS

- The power steering gear and oil pump should be disassembled only when repairing an "oil leak". they should not be disassembled to repair any other steering defect, steering noise, etc.
- Before disassembly, thoroughly clean the outside of the unit.
- Disassembly should be done in a clean work area. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- When disassembling parts, be sure to place them in order in a parts rack so they can be put back in the unit in their proper positions.
- Use a nylon cloth or paper towel for wiping parts clean. Common shop rags can leave lint that might interfere with the operation.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Before assembly, apply a coat of recommended A.T.F.* to hydraulic parts. Vaseline may be applied to O-rings and seals. Do not use any grease.
- Gaskets, seals and O-rings should be replaced. Care should be taken to avoid damaging O-rings, seals and gaskets when assembling. It is also very important to perform functional tests whenever it is designated.


*: Automatic transmission fluid

PREPARATION




SPECIAL SERVICE TOOLS

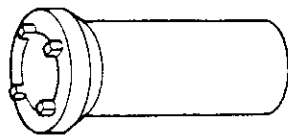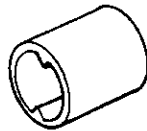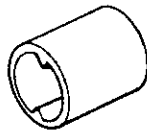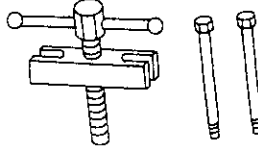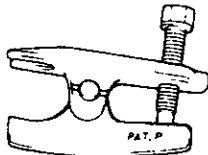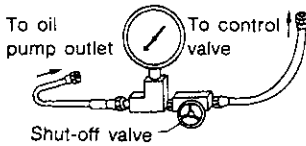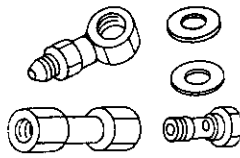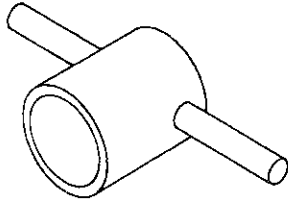Tool number Tool name	Description	Unit application		
		Manual steering	Power steering	
KV48102000 End cover socket wrench		Removing and installing rear cover and end cover	X	X
KV48100700 Torque adapter		Measuring pinion rotating torque	—	X
KV48101100 Torque adapter		Measuring pinion rotating torque	X	—
ST27180001 Steering wheel puller		Removing and installing steering wheel	X	X
HT72520000 Ball joint remover		Removing ball joint	X	X
ST27091000 Pressure gauge		Measuring oil pressure	—	X
KV48102500 Pressure gauge adapter		Measuring oil pressure	—	X
KV48104400 Rack seal ring reformer		Reforming teflon ring	—	X


PREPARATION

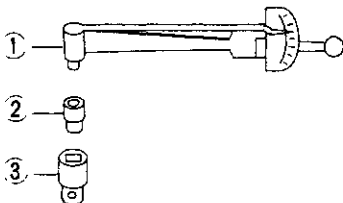Tool number Tool name	Description	Unit application	
		Manual steering	Power steering
ST3127S000 ① GG91030000 Torque wrench 2 HT62940000 Socket adapter ③ HT62900000 Socket adapter	Measuring turning torque 	X	X

COMMERCIAL SERVICE TOOLS

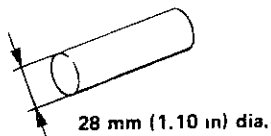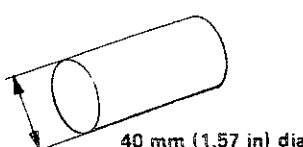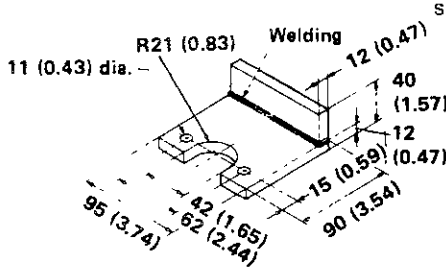
Tool name	Description	Unit application	
		Manual steering	Power steering
Rear oil seal drift	Installing rear oil seal  28 mm (1.10 in) dia.	—	X
Pinion oil seal drift	Installing pinion oil seal  40 mm (1.57 in) dia.	—	X
Oil pump attachment	Disassembling and assembling oil pump  SST481A Unit: mm (in)	— (For oil pump)	— (For oil pump)

ON-VEHICLE INSPECTION

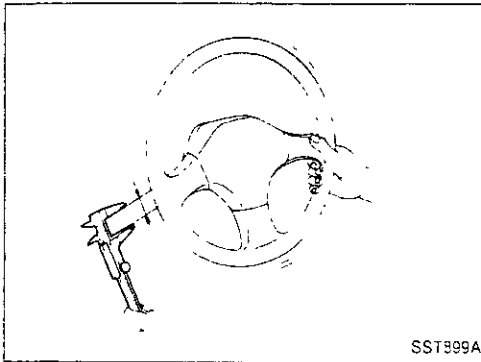

Checking Steering Wheel Play

1. With wheels in a straight-ahead position, check steering wheel play.
Steering wheel play:
35 mm (1.38 in) or less
2. If it is not within specification, check steering gear assembly when front suspension and axle, steering gear assembly and steering column are mounted correctly.

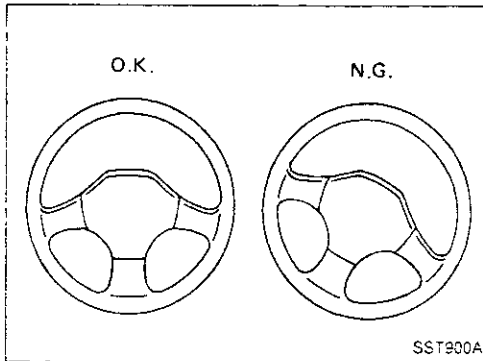


Checking Neutral Position on Steering Wheel

Pre-checking

- Make sure that wheel alignment is correct.
Wheel alignment:
Refer to section FA for S.D.S.
- Verify that the steering gear is centered before removing the steering wheel.


Checking

1. Check that the steering wheel is in the neutral position when driving straight ahead.
2. If it is not in the neutral position, remove the steering wheel and reinstall it correctly.
3. If the neutral position is between two serrated teeth, loosen tie-rod lock nut and move tie-rod in the opposite direction by the same amount on both left and right sides to compensate for error in the neutral position.

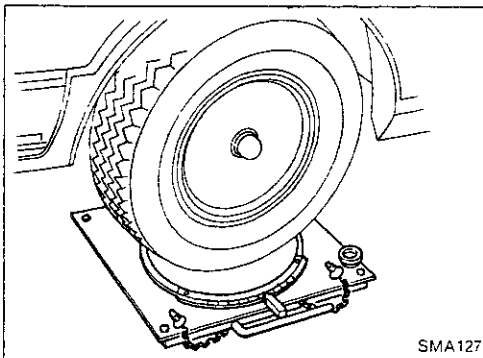

Front Wheel Turning Angle

1. Rotate steering wheel all the way right and left; measure turning angle.
Turning angle of full turns:
Refer to section FA for S.D.S.
2. If it is not within specification, check rack stroke.
Rack stroke "L":
Refer to S.D.S.

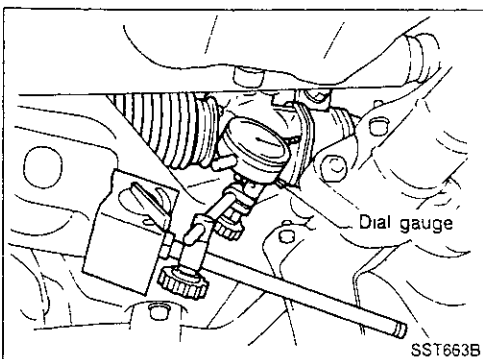


Checking Gear Housing Movement

1. Check the movement of steering gear housing during stationary steering on a dry paved surface.
 - Apply a force of 49 N (5 kg, 11 lb) to steering wheel to check the gear housing movement.
Turn off ignition key while checking.
Movement of gear housing:
 ± 2 mm (± 0.08 in) or less
2. If movement exceeds the limit, replace mount insulator after confirming proper installation of gear housing clamps.

ON-VEHICLE INSPECTION

Checking and Adjusting Drive Belts

Refer to section MA for Drive Belt Inspection.

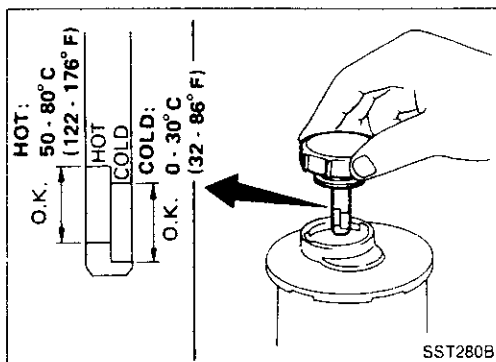


Checking Fluid Level

Check fluid level.

Fluid level should be checked using "HOT" range on dipstick at fluid temperatures of 50 to 80°C (122 to 176°F) or using "COLD" range on dipstick at fluid temperatures of 0 to 30°C (32 to 86°F).

CAUTION:

- Do not overfill.
- Recommended fluid is Automatic Transmission Fluid "DEXRON™" type.

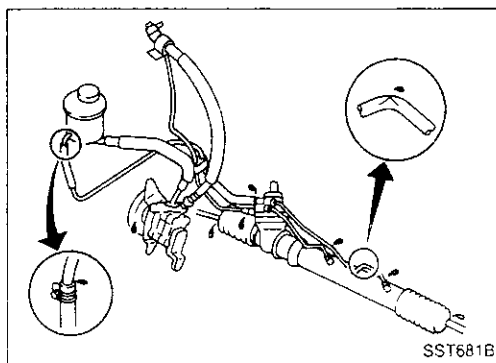

Checking Fluid Leakage

Check the lines for improper attachment and for leaks, cracks, damage, loose connections, chafing or deterioration.

1. Run engine between idle speed and 1,000 rpm.

Make sure temperature of fluid in oil tank rises to 60 to 80°C (140 to 176°F).

2. Turn steering wheel right-to-left several times.
3. Hold steering wheel at each "lock" position for five seconds and carefully check for fluid leakage.

CAUTION:

Do not hold the steering wheel in a locked position for more than 15 seconds.

4. If fluid leakage at connectors is noticed, loosen flare nut and then retighten.

Do not overtighten connector as this can damage O-ring, washer and connector.

Bleeding Hydraulic System


1. Raise front end of vehicle until wheels are clear of the ground.
2. Add fluid into oil tank to specified level. Meanwhile quickly turn steering wheel fully to right and left and lightly touch steering stoppers.
Repeat steering wheel operation until fluid level no longer decreases.
3. Start engine.
Repeat step 2 above.

ON-VEHICLE INSPECTION

Bleeding Hydraulic System (Cont'd)

- Incomplete air bleeding will cause the following to occur.
When this happens, bleed air again.
 - a. Generation of air bubbles in reservoir tank
 - b. Generation of clicking noise in oil pump
 - c. Excessive buzzing in oil pump

While the vehicle is stationary or while moving the steering wheel slowly, fluid noise may occur in the valve or oil pump. This noise is inherent in this steering system, and it will not affect performance or durability of the system.

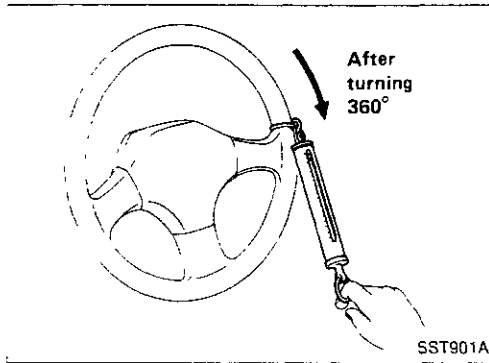

Checking Steering Wheel Turning Force


1. Park vehicle on a level, dry surface and set parking brake.
2. Start engine.
3. Bring power steering fluid up to adequate operating temperature. [Make sure temperature of fluid is approximately 60 to 80°C (140 to 176°F).]

Tires need to be inflated to normal pressure.

4. Check steering wheel turning force when steering wheel has been turned 360° from the neutral position.

Steering wheel turning force:

39 N (4 kg, 9 lb) or less

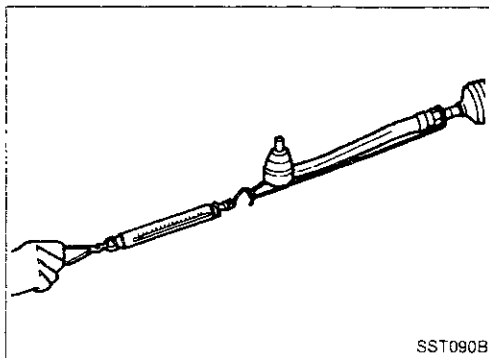

5. If steering wheel turning force is out of specifications, check rack sliding force to detect condition of steering gear assembly.
 - a. Disconnect steering column lower joint and knuckle arms from the gear.
 - b. Start and run engine at idle to make sure steering fluid has reached normal operating temperature.
 - c. While pulling tie-rod slowly in the ± 11.5 mm (± 0.453 in) range from the neutral position, make sure rack sliding force is within specification.

Average rack sliding force:


Less than 226 N (23 kg, 51 lb)


- d. Check sliding force outside above range.

Maximum rack sliding force:

Not more than 39 N (4 kg, 9 lb) beyond above value

6. If rack sliding force is not within specification, overhaul steering gear assembly.

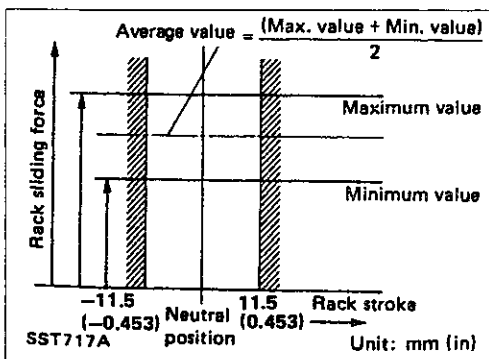

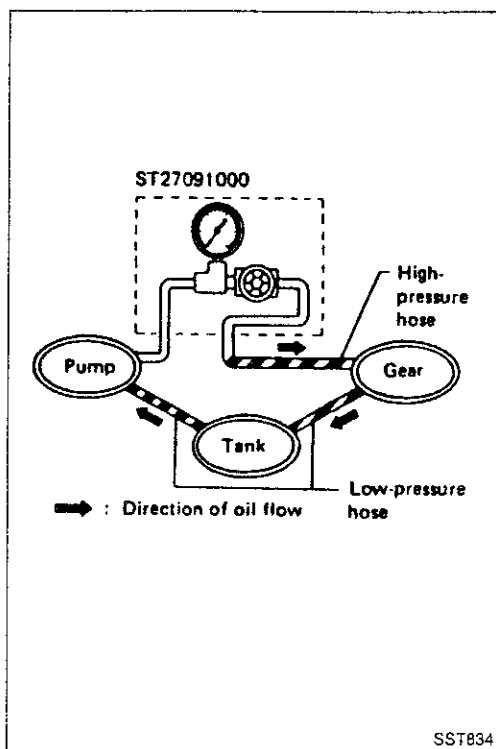

Checking Hydraulic System

Before starting, check belt tension, driving pulley and tire pressure.

1. Set Tool. Open shut-off valve. Then bleed air. (See "Bleeding Hydraulic System".)
2. Run engine.

Make sure temperature of fluid in tank rises to 60 to 80°C (140 to 176°F).

WARNING:

Warm up engine with shut-off valve fully opened. If engine is started with shut-off valve closed, oil pressure in oil pump will increase to relief pressure, resulting in an abnormal rise in oil temperature.

3. Check pressure with steering wheel fully turned to left and right positions with engine idling at 1,000 rpm.

CAUTION:

Do not hold the steering wheel in a locked position for more than 15 seconds.

Oil pump maximum standard pressure:

Except CD17 engine

7,649 - 8,238 kPa

(76.5 - 82.4 bar, 78 - 84 kg/cm², 1,109 - 1,194 psi)

CD17 engine

6,669 - 7,257 kPa

(66.7 - 72.6 bar, 68 - 74 kg/cm², 967 - 1,052 psi)


4. If oil pressure is below the standard pressure, slowly close shut-off valve and check pressure.
 - When pressure reaches standard pressure, gear is damaged.
 - ⊗ When pressure remains below standard pressure, pump is damaged.

CAUTION:


Do not close shut-off valve for more than 15 seconds.

5. If oil pressure is higher than standard pressure, check oil pump flow control valve.
6. After checking hydraulic system, remove Tool and add fluid as necessary, then completely bleed air out of system.

STEERING WHEEL AND STEERING COLUMN

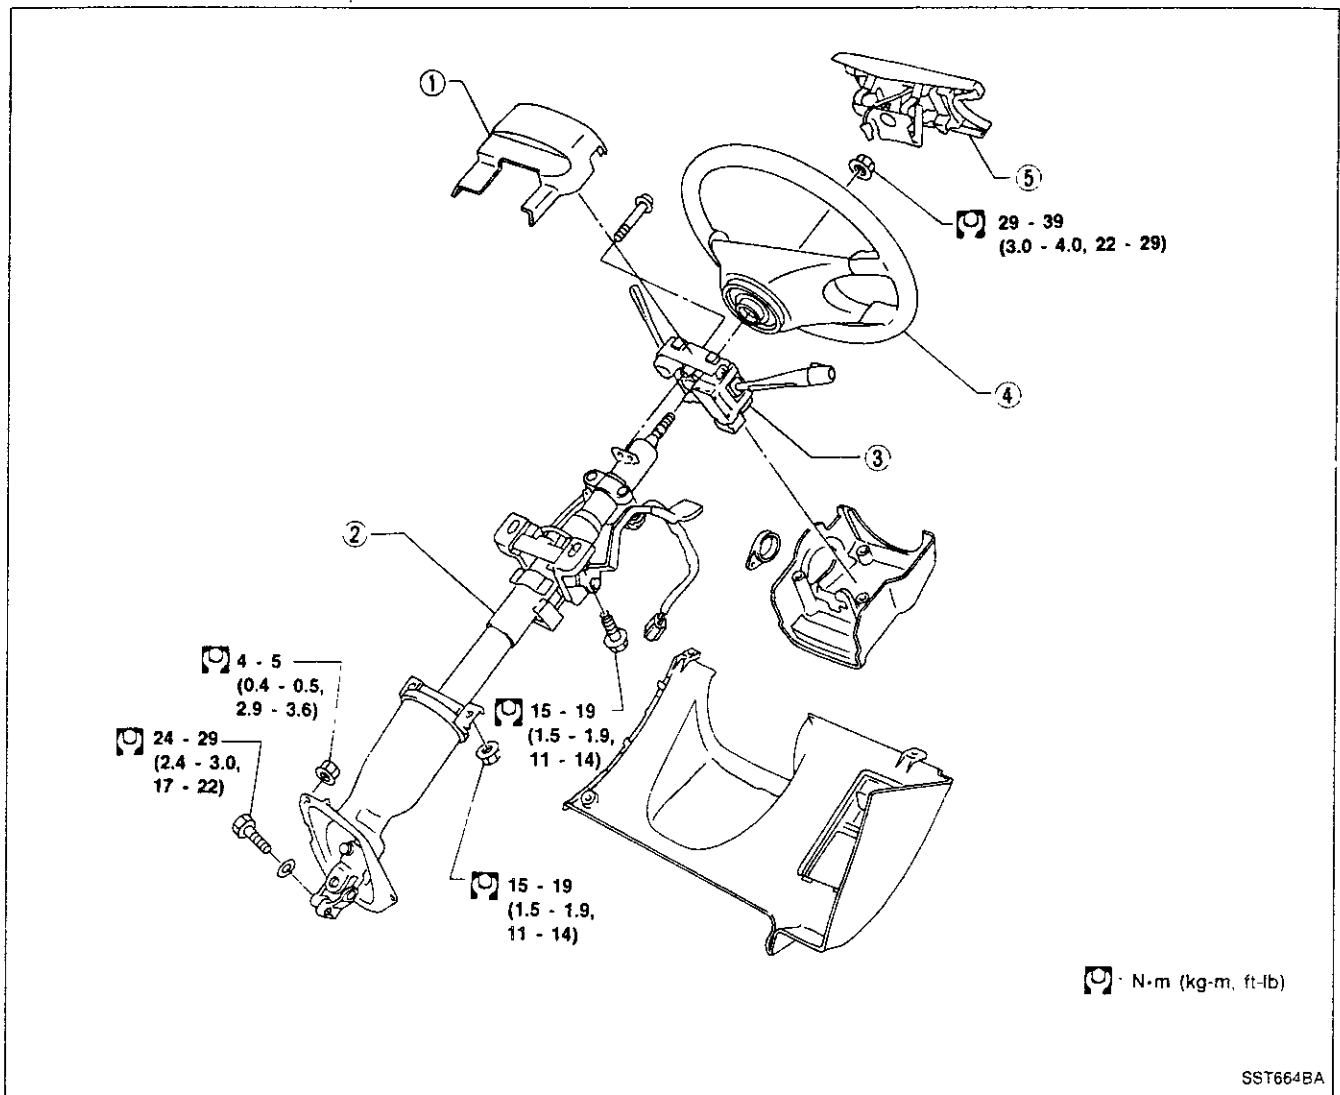

- ① Column cover
- ② Steering column assembly
- ③ Combination switch
- ④ Steering wheel
- ⑤ Horn pad

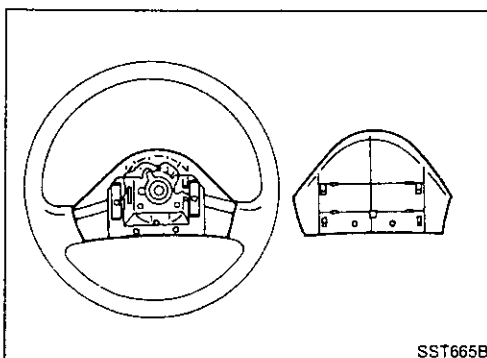

Removal

STEERING WHEEL


1. Remove horn pad.

— Two spoke type —

- Horn pad is installed using pawls (plastic) and clamps. To remove horn pad, pry pawls by hand and push clamps with a standard screwdriver inserted between pad and steering wheel.


STEERING WHEEL AND STEERING COLUMN

Removal (Cont'd)

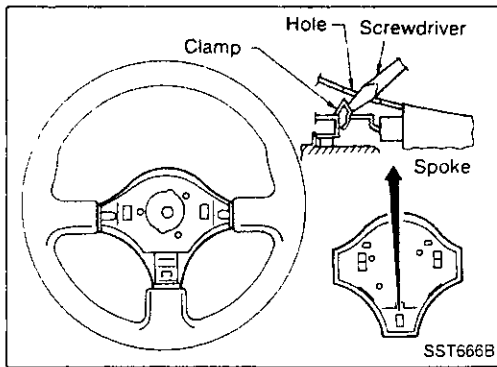


— Three spoke type —

- Horn pad is installed using three clamps. To remove horn pad, insert a standard screwdriver into hole on back of lower spoke and pry clamps up.

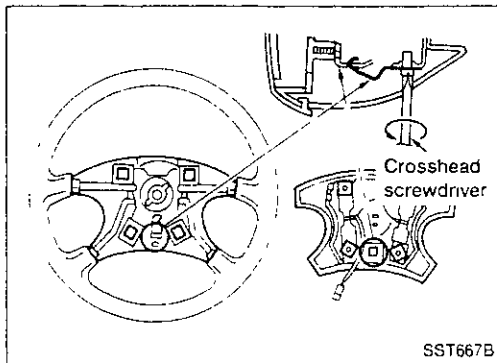


— Four spoke type —

- Insert a crosshead screwdriver into hole on lower side of spoke and remove clamps. Lift horn pad off by hand.

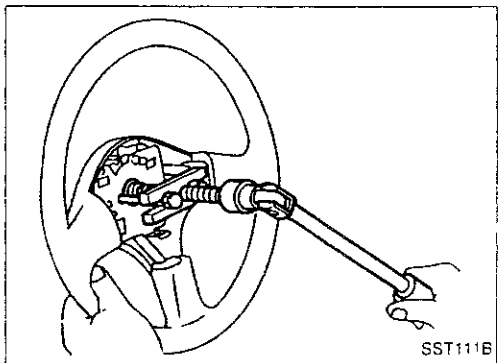

2. Remove steering wheel with Tool.

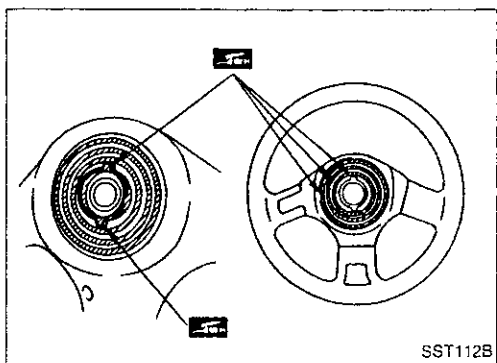


Installation

STEERING WHEEL

When installing steering wheel, apply multi-purpose grease to entire surface of turn signal cancel pin (both portions) and also to horn contact slip ring.

STEERING WHEEL AND STEERING COLUMN

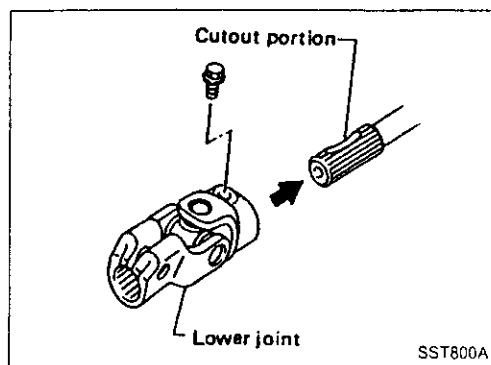

Installation (Cont'd)


STEERING COLUMN

- When installing steering column, fingertighten all lower bracket and clamp retaining bolts; then tighten them securely. Do not apply undue stress to steering column.
- When attaching coupling joint, be sure tightening bolt faces cutout portion.

CAUTION:

After installing steering column, turn steering wheel to make sure it moves smoothly and that the number of turns from the straight forward position to left and right locks are equal. Be sure that the steering wheel is in a neutral position when driving straight ahead.

Disassembly and Assembly

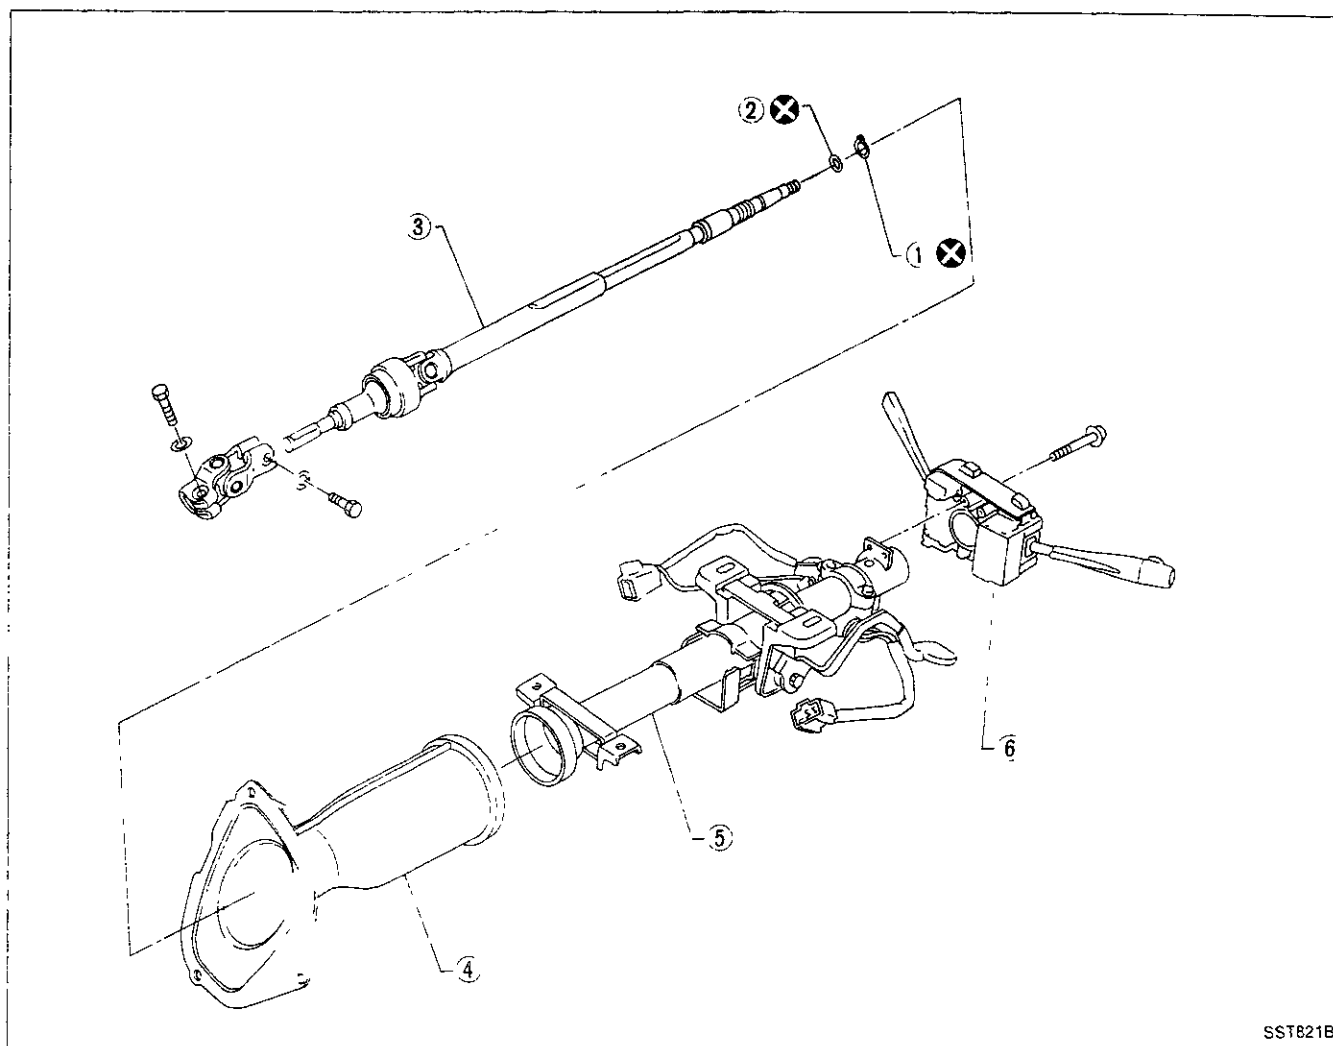

SST821B



- | | |
|-------------------------|------------------------|
| ① Snap ring | ④ Boot |
| ② O-ring | ⑤ Jacket tube assembly |
| ③ Column shaft assembly | ⑥ Combination switch |

- When disassembling and assembling, unlock steering lock with key.


STEERING WHEEL AND STEERING COLUMN

Disassembly and Assembly (Cont'd)


- Remove combination switch.

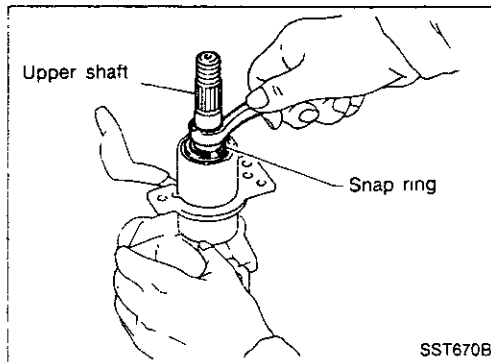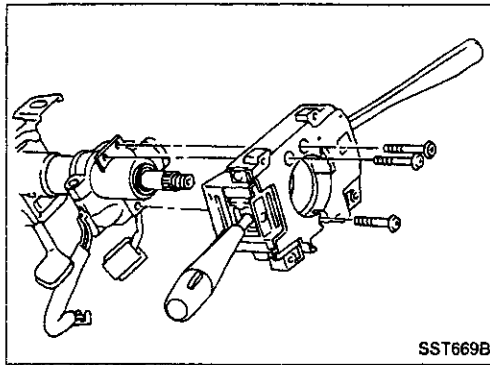


- Ensure that rounded surface of snap ring faces toward bearing when snap ring is installed.
- Install snap ring on upper shaft with a suitable tool.

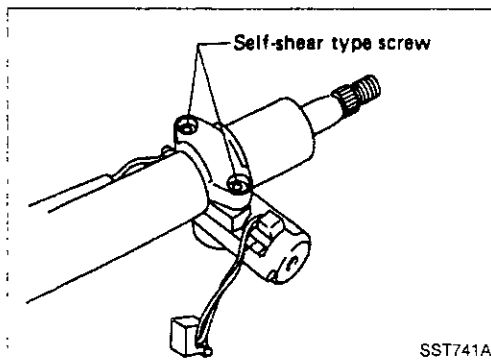

- Steering lock
- a. Break self-shear type screws with a drill or other appropriate tool.

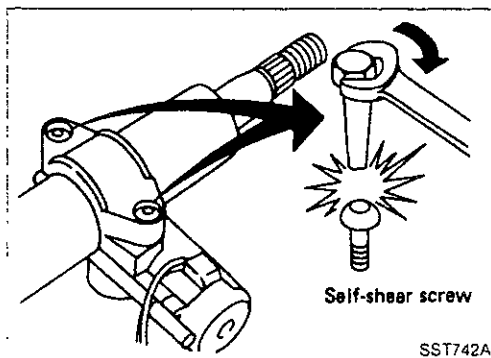


- b. Install self-shear type screws and then cut off self-shear type screw heads.

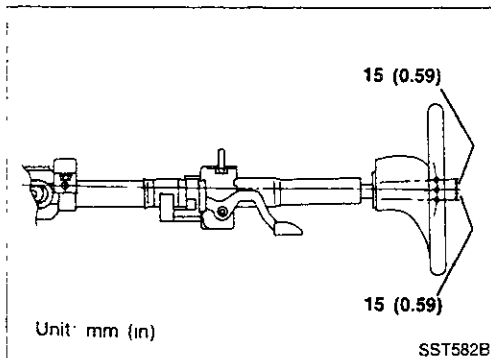

Tilt mechanism

- After installing steering column, check tilt mechanism operation.

STEERING WHEEL AND STEERING COLUMN

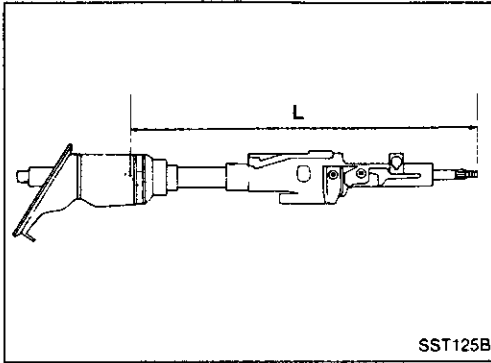


Inspection


- When steering wheel can not be rotated smoothly, check the steering column for the following matters and replace damaged parts.
 - a. Check column bearings for damage or unevenness. Lubricate with recommended multi-purpose grease or replace steering column as an assembly, if necessary.
 - b. Check jacket tube for deformation or breakage. Replace if necessary.
- When the vehicle is involved in a light collision, check column length "L". If it is not within specifications, replace steering column as an assembly.

Column length "L":

536.2 - 537.8 mm (21.11 - 21.17 in)

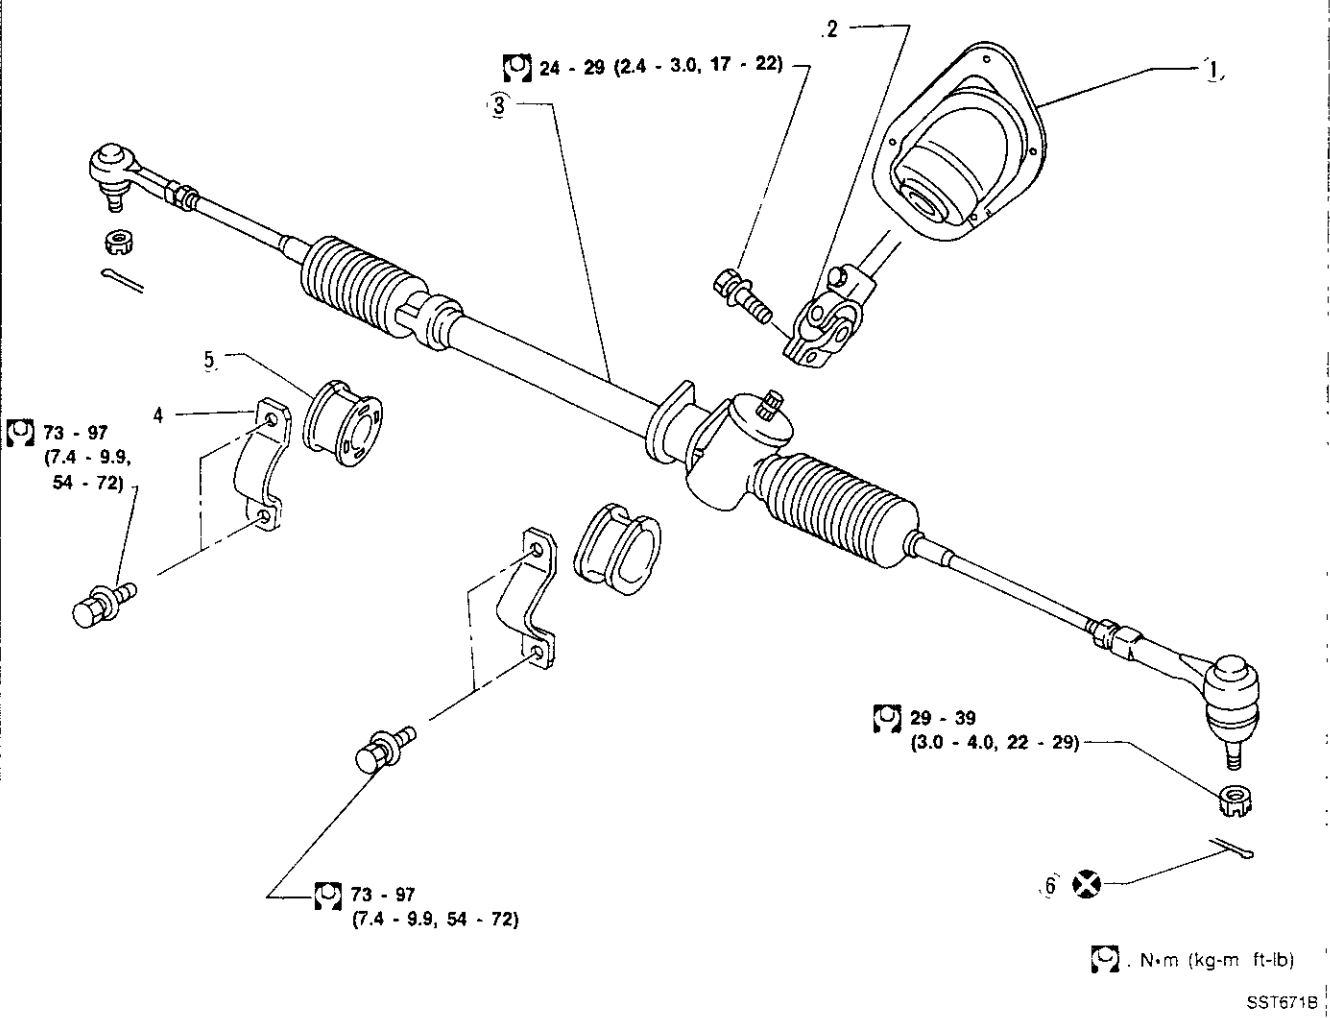


- ① Hole cover
- ② Lower joint
- ③ Manual steering gear assembly
- ④ Steering gear mounting clamp
- ⑤ Rack mounting insulator
- ⑥ Cotter pin

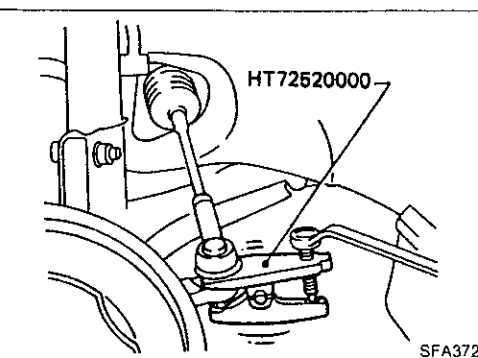

- Detach tie-rod ball studs from knuckle arms with Tool.

MANUAL STEERING GEAR AND LINKAGE (Model R24S and R24N)

Removal and Installation (Cont'd)

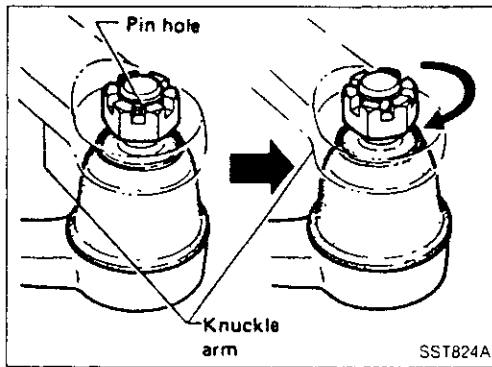


- Initially, tighten nut on tie-rod outer socket and knuckle arm to 29 to 39 N·m (3 to 4 kg-m, 22 to 29 ft-lb).
- Tighten nut further to align nut groove with the first pin hole so cotter pin can be installed.

CAUTION:

Tightening torque must not exceed 49 N·m (5 kg-m, 36 ft-lb).

Disassembly

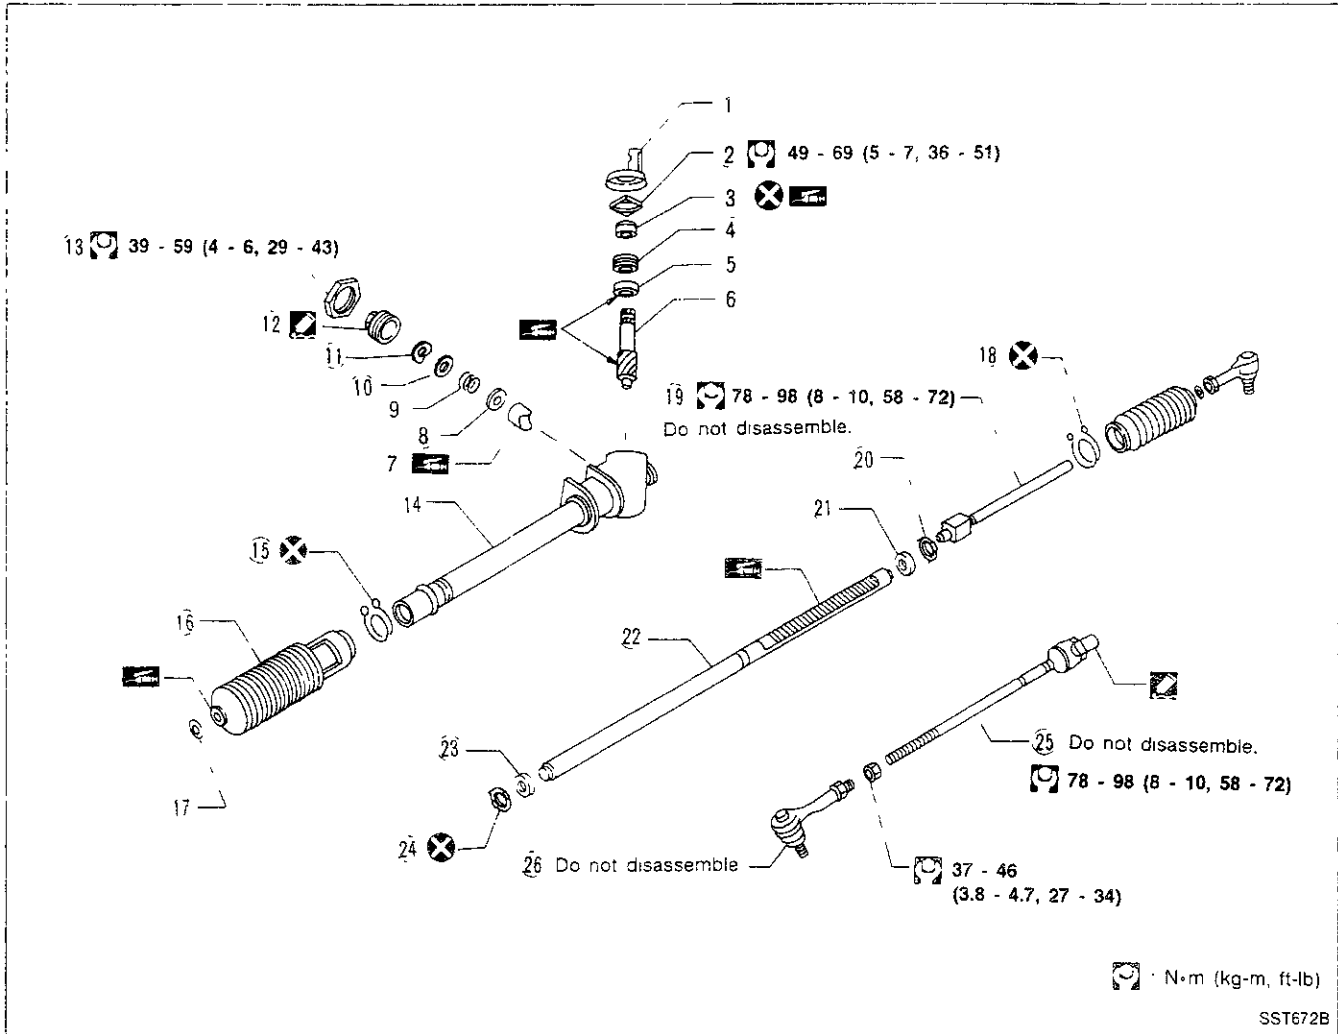

- | | | |
|-----------------------|-------------------------|------------------------|
| ① Guide chip | ⑩ Plain washer | ⑲ Tie-rod inner socket |
| ② Rear cover lock nut | ⑪ Wave washer | ⑳ Lock plate |
| ③ Dust seal | ⑫ Adjusting screw | ㉑ Spacer |
| ④ Rear cover | ⑬ Adjusting lock nut | ㉒ Rack |
| ⑤ Pinion bearing | ⑭ Gear housing assembly | ㉓ Spacer |
| ⑥ Pinion assembly | ⑮ Boot clamp | ㉔ Lock plate |
| ⑦ Retainer | ⑯ Boot | ㉕ Tie-rod inner socket |
| ⑧ Spring seat | ⑰ Boot band | ㉖ Tie-rod outer socket |
| ⑨ Retaining spring | ⑱ Boot clamp | |

Inspection

BOOT


Check condition of boot. If it is cracked excessively, replace it.

RACK

Thoroughly examine rack gear. If rack gear is damaged, cracked or worn, replace.


PINION ASSEMBLY

- Thoroughly examine pinion gear. If pinion gear is damaged, cracked or worn, replace.
- Inspect bearings to see that they roll freely and are free from cracked, pitted, or worn balls, rollers and races. Replace if necessary.

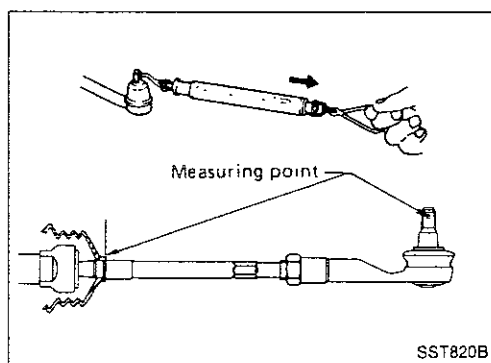


TIE-ROD OUTER AND INNER SOCKET

- Check ball joint for swinging force.
Tie-rod outer ball joint:
At cotter pin hole
6.9 - 64.7 N (0.7 - 6.6 kg, 1.5 - 14.6 lb)
Tie-rod inner ball joint:
14.7 - 21.6 N (1.5 - 2.2 kg, 3.3 - 4.9 lb)

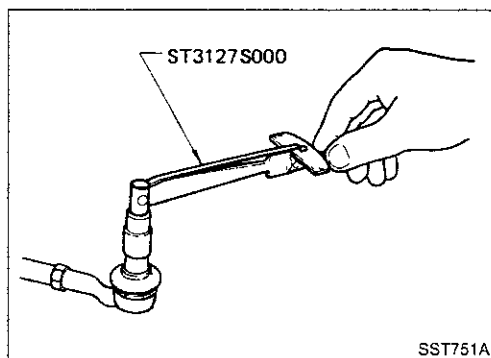

- Check ball joint for rotating torque.
Tie-rod outer ball joint:
0.3 - 2.9 N·m
(3 - 30 kg-cm, 2.6 - 26.0 in-lb)

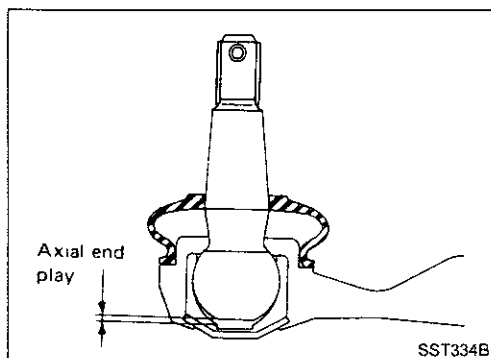


- Check ball joint for axial end play.
Tie-rod outer ball joint:
Less than 0.5 mm (0.020 in)
Tie-rod inner ball joint:
0 mm (0 in)

MANUAL STEERING GEAR AND LINKAGE (Model R24S and R24N)

Inspection (Cont'd)


- Check condition of dust cover. If it is cracked excessively, replace it.

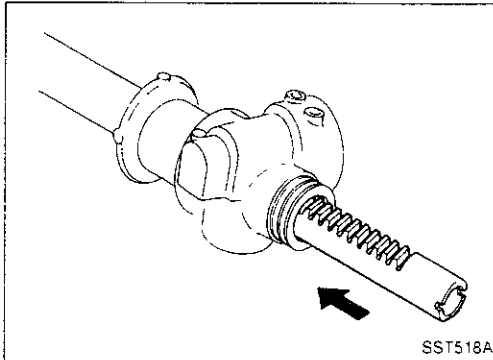


Assembly and Adjustment

STEERING GEAR

1. Insert rack gear from gear housing side.
2. Set rack gear in neutral position.

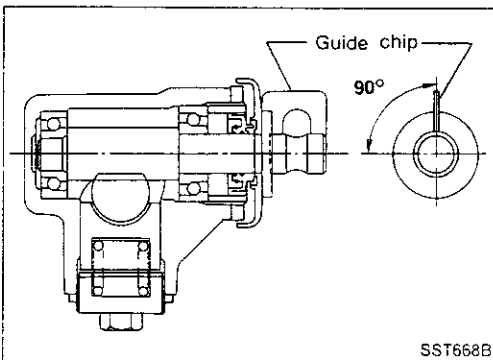

3. Insert pinion assembly, then set guide chip at neutral position as shown in figure. Pinion rack gear should be held in place.

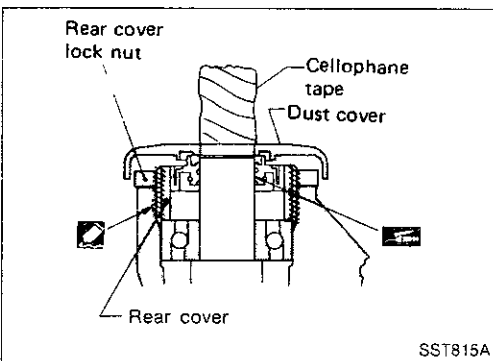


4. Install rear cover with Tool and secure with lock nut.

Tool number: KV48102000

- Before installing rear cover, apply locking sealant to threaded areas. Do not allow sealant to get into pinion bearing.
- Apply a coat of multi-purpose grease to sealing lips of dust seal.

CAUTION:

Wrap cellophane tape around pinion gear end when installing dust seal.

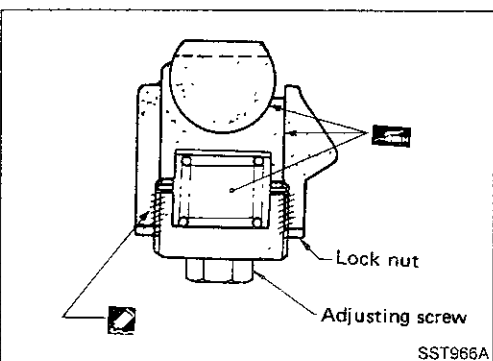


5. Insert retainer, spring, plain washer and wave washer. Then, install adjusting screw.
- Apply a coat of locking sealant to threaded areas of retainer cover.

MANUAL STEERING GEAR AND LINKAGE (Model R24S and R24N)


Assembly and Adjustment (Cont'd)

6. Adjust pinion rotating torque as follows:
 - a. Set gears to Neutral position.
 - b. Loosen lock nut.
 - c. Tighten adjusting screw two times to a torque of 2.9 N·m (30 kg-cm, 26 in-lb).
 - d. Loosen adjusting screw and retighten it to a torque of 0.2 N·m (2 kg-cm, 1.7 in-lb).
 - e. Rotate pinion to move rack back and forth two times, and return it to Neutral position.

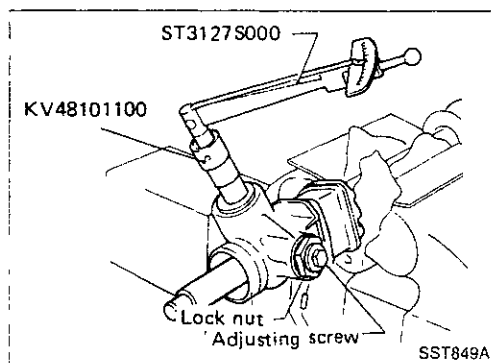

- f. Slowly rotate the pinion and measure rotating torque in the $\pm 180^\circ$ range from Neutral position. Find the position where the rotating torque is at its maximum.

- g. Loosen adjusting screw at the position where the rotating torque is at its maximum.
- h. Tighten adjusting screw to a torque of 2.9 N·m (30 kg-cm, 26 in-lb). Then back it off by 50° to 70° .
- i. Prevent adjusting nut from rotating and tighten lock nut to specified torque 39 to 59 N·m (4 to 6 kg-m, 29 to 43 ft-lb) holding adjusting screw in place.

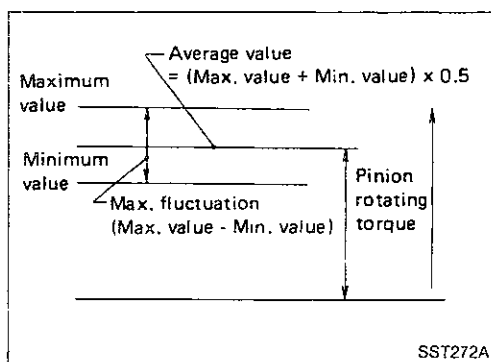

- j. While slowly rotating pinion in the $\pm 100^\circ$ range from Neutral position, make sure its rotating torque is within the specifications.

Average value in the $\pm 100^\circ$ range from neutral position:

**0.7 - 1.2 N·m
(7 - 12 kg-cm, 6.1 - 10.4 in-lb)**

Max. allowable fluctuation within $\pm 100^\circ$ range from neutral position:

Below 0.3 N·m (3 kg-cm, 2.6 in-lb)

Max. allowable fluctuation within $\pm 500^\circ$ range from neutral position:


Below 0.5 N·m (5 kg-cm, 4.3 in-lb)

- k. If pinion rotating torque is not within the specifications, readjust.

If pinion rotating torque is outside the specifications after adjustment has been made, replace retaining spring.

MANUAL STEERING GEAR AND LINKAGE (Model R24S and R24N)

Assembly and Adjustment (Cont'd)

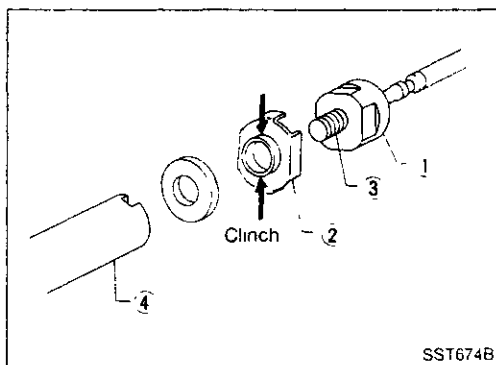


7. Install new lock plate.
 - Attach lock plate ② to side rod inner socket ①.
 - Apply locking sealant to inner socket threads ③.
 - Screw inner socket into rack ④ and tighten to specified torque.
 - Clinch two places of lock plate at rack's groove.

CAUTION:

To prevent scratching the boot, remove burrs from lock plate.


TIE-ROD AND BOOT

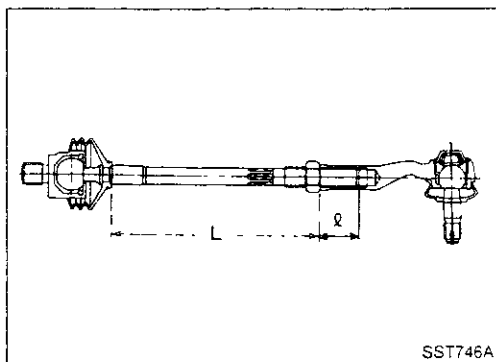


1. Install boot on tie-rod inner socket.
2. Apply locking sealant to threaded portion of inner socket and install tie-rod inner socket to rack end together with new lock plate.
3. Install lock nut and outer socket to inner socket. Adjust tie-rod length "L" and tighten lock nut.

Tie-rod length "L": Refer to S.D.S.


Screwed length "l": 32 mm (1.26 in) or more

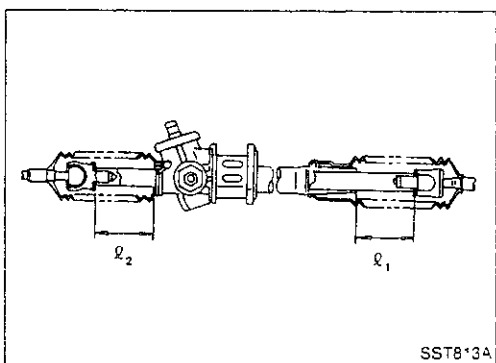

4. Measure rack stroke.
Measure length "l":
Refer to S.D.S.

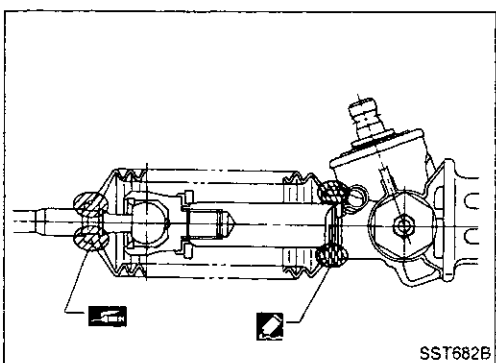


5. Install boot to gear housing.
Apply sealant between boot and gear housing.

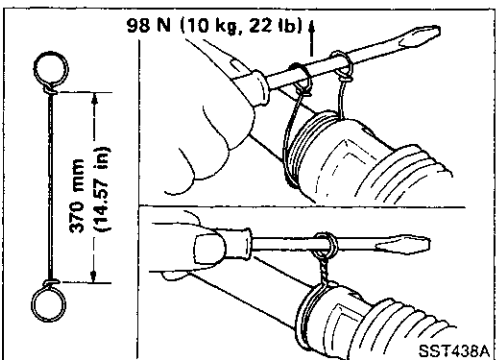


6. Install boot clamps.
 - To install, wrap boot clamp around boot groove twice. Tighten clamp by twisting rings at both ends four or four and one-half turns with screwdriver while pulling with a force of approx. 98 N (10 kg, 22 lb).

MANUAL STEERING GEAR AND LINKAGE (Model R24S and R24N)

Assembly and Adjustment (Cont'd)

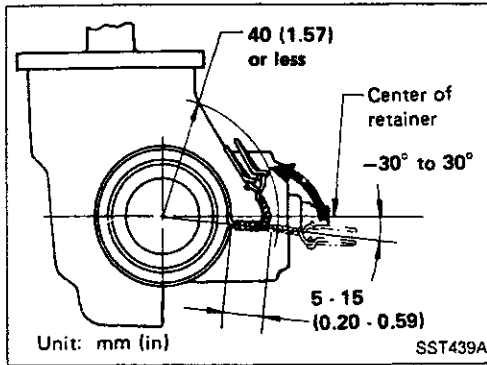


- Install boot clamp so that it is to the rear of the vehicle when gear housing is attached to the body. (This will avoid interference with other parts.)

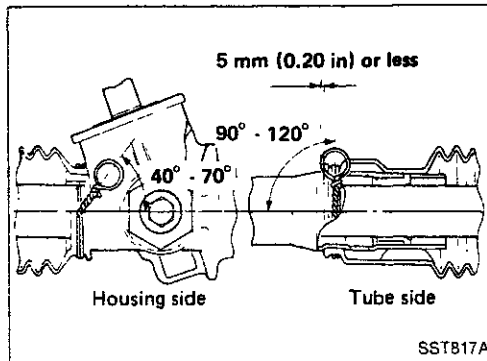

- After twisting boot clamp four or four and one-half turns, bend twisted end diagonally so it does not contact boot.

POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Removal and Installation

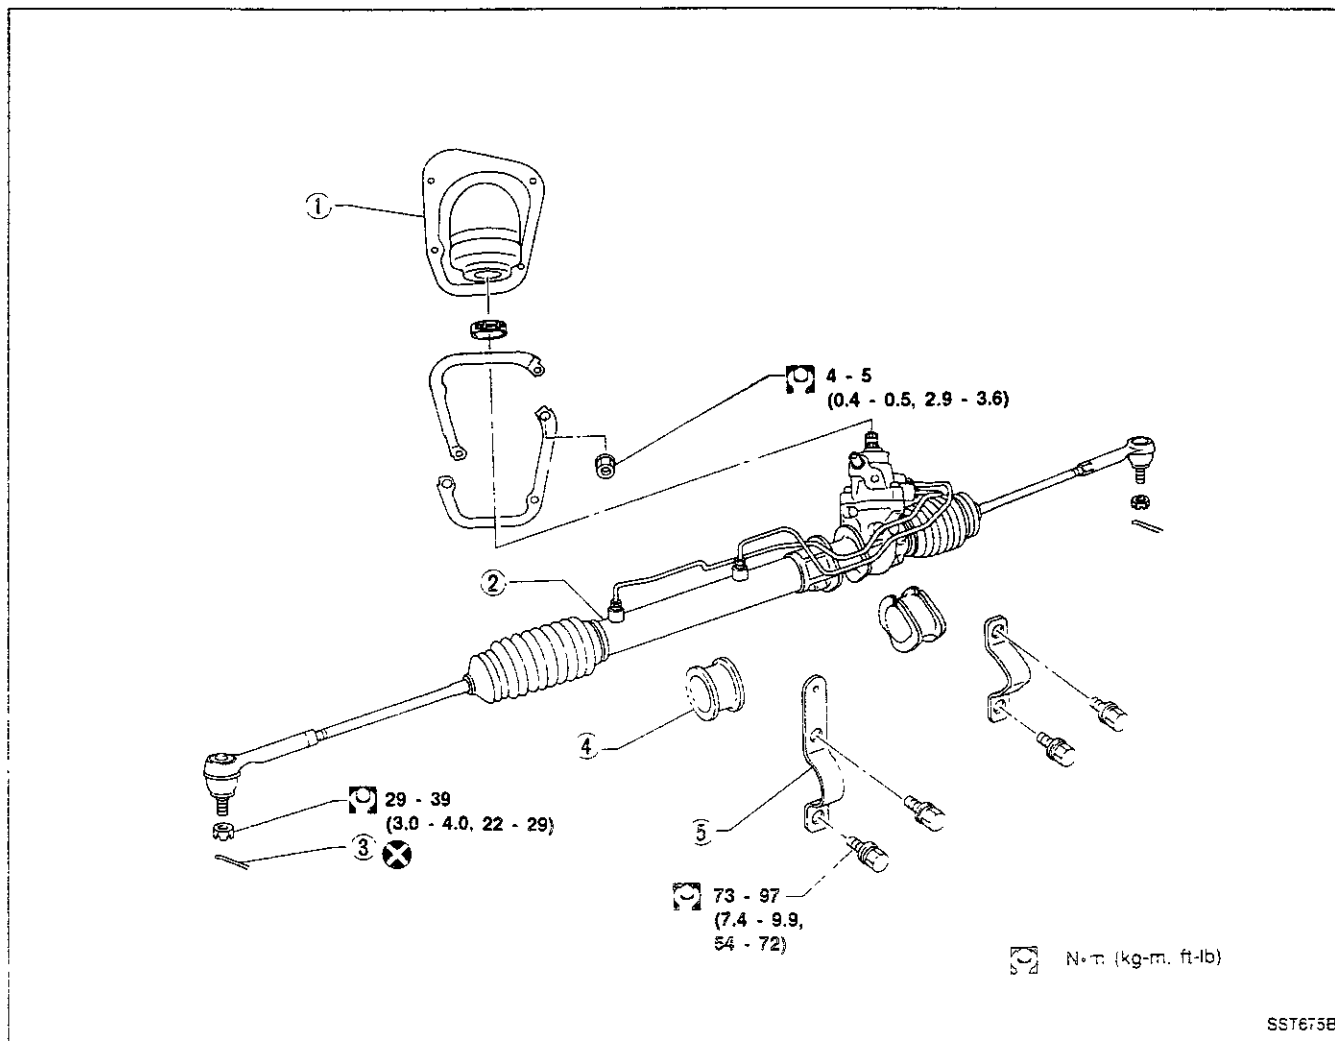

① Hole cover


② Gear and linkage assembly

③ Cotter pin

④ Rack mounting insulator

⑤ Gear housing mounting bracket


- On N14 GTI-R left-hand drive models; engine must be removed (in advance.)

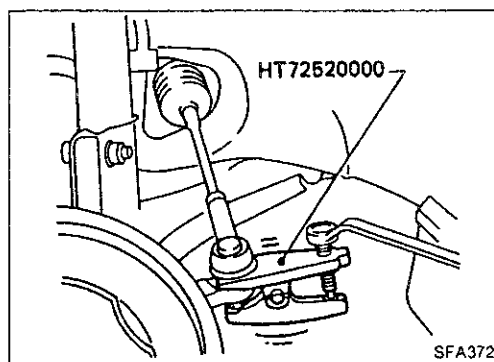

- Detach tie-rod outer sockets from knuckle arms with Tool.

POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Removal and Installation (Cont'd)

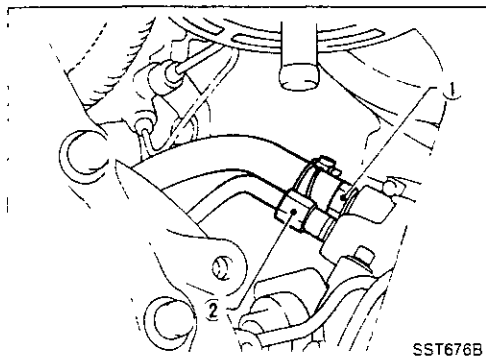

- Install pipe connector.
- Observe specified tightening torque when tightening high-pressure and low-pressure pipe connectors. Excessive tightening will damage threads of connector or O-ring.
- The O-ring in low-pressure pipe connector is larger than that in high-pressure connector. Take care to install the proper O-ring.


Connector tightening torque:

Low-pressure side "1"

27 - 39 N·m (2.8 - 4.0 kg-m, 20 - 29 ft-lb)

High-pressure side "2"


15 - 25 N·m (1.5 - 2.5 kg-m, 11 - 18 ft-lb)

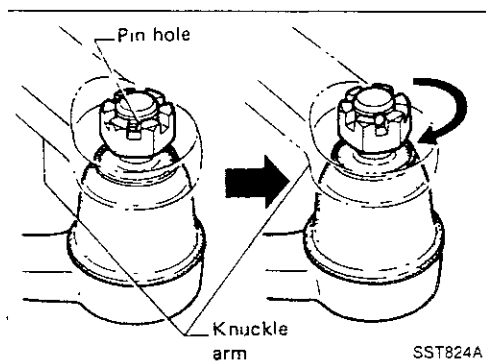


- Initially, tighten nut on tie-rod outer socket and knuckle arm to 29 to 39 N·m (3 to 4 kg-m, 22 to 29 ft-lb). Then tighten further to align nut groove with first pin hole so that cotter pin can be installed.

CAUTION:

Tightening torque must not exceed 49 N·m (5 kg-m, 36 ft-lb).

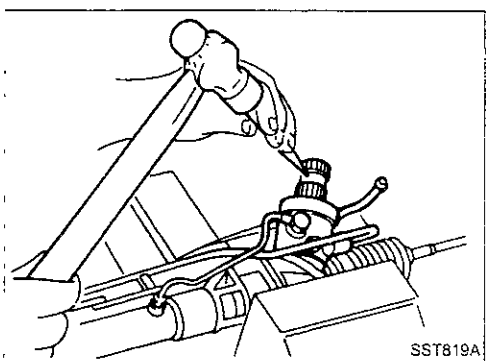


- Before removing lower joint from gear, set gear in neutral (wheels in straight-ahead position). After removing lower joint, put matching mark on pinion shaft and pinion housing to record neutral position of gear.
- To install, set left and right dust boots to equal deflection, and attach lower joint by aligning matching marks of pinion shaft and pinion housing.

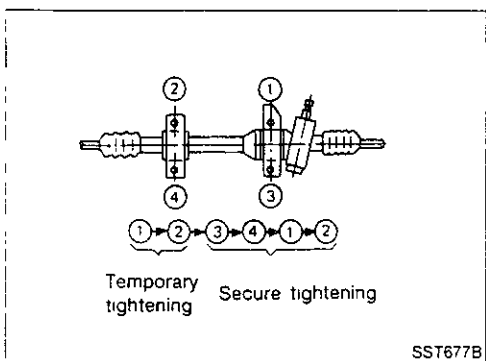

- Tighten gear housing mounting bracket bolts in the order shown.


POWER STEERING GEAR AND LINKAGE (Model PR24SC)

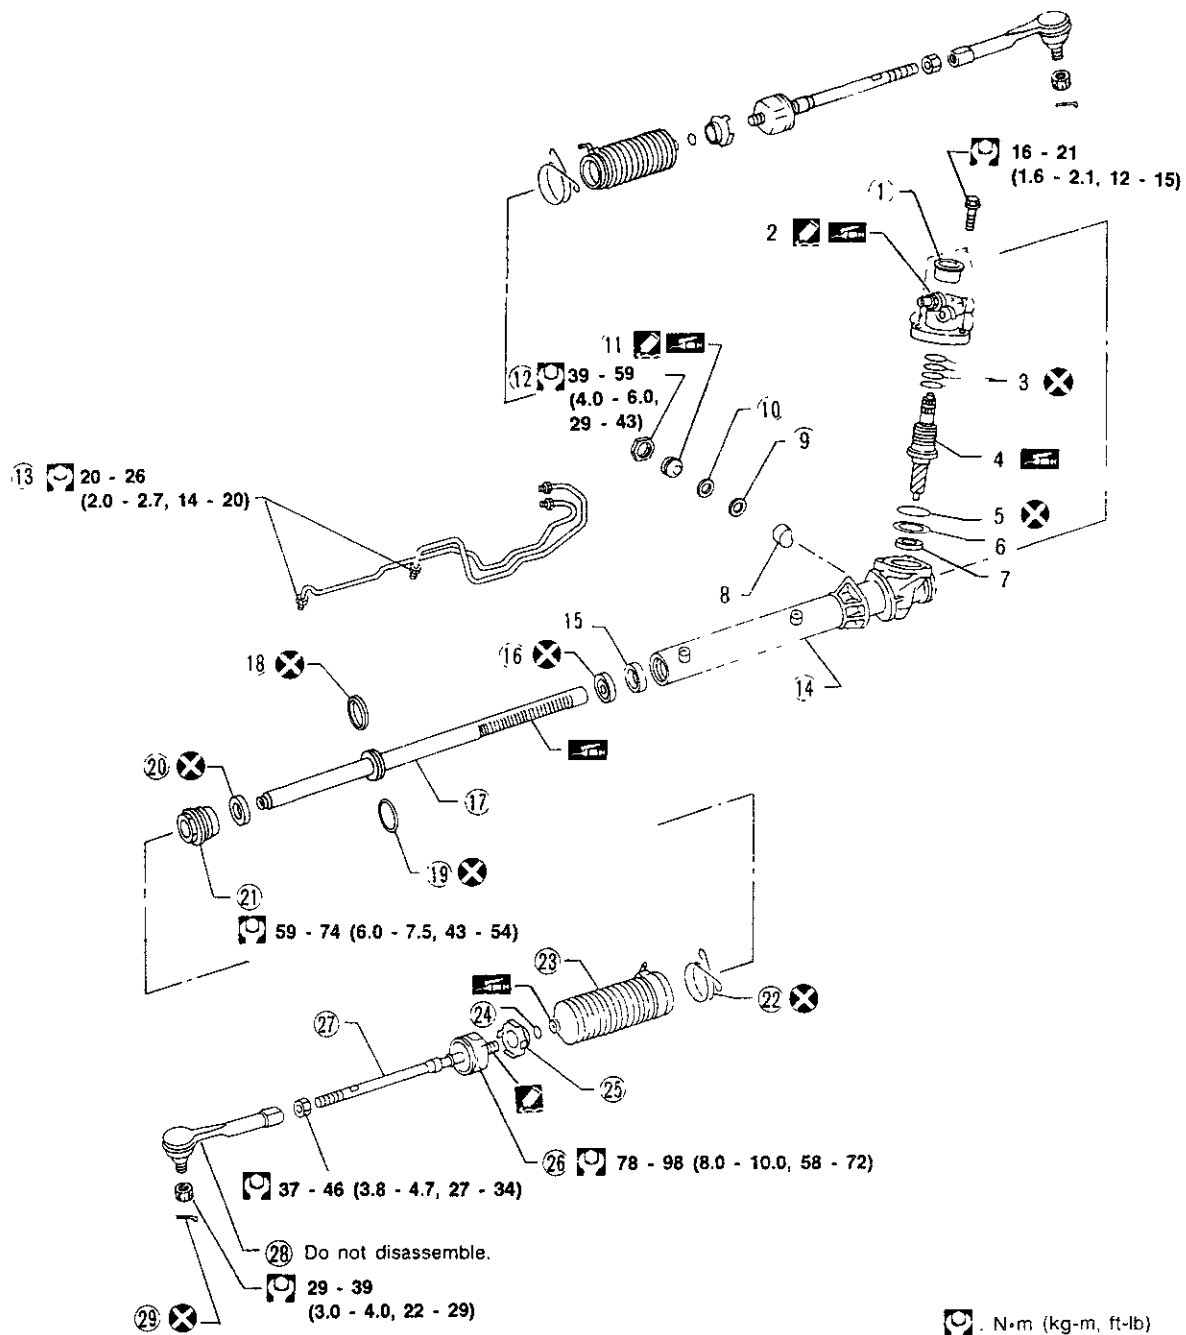

SST678B

- | | | |
|-------------------------|---------------------|------------------------|
| ① Rear housing cover | ⑪ Adjusting screw | ⑳ End cover assembly |
| ② Rear housing assembly | ⑫ Lock nut | ㉑ Boot clamp |
| ③ Pinion seal ring | ⑬ Gear housing tube | ㉒ Dust boot |
| ④ Pinion assembly | ⑭ Gear housing | ㉓ Boot band |
| ⑤ O-ring | ⑮ Center bushing | ㉔ Lock plate |
| ⑥ Shim | ⑯ Rack oil seal | ㉕ Tie-rod inner socket |
| ⑦ Pinion oil seal | ⑰ Rack assembly | ㉖ Tie-rod |
| ⑧ Retainer | ⑱ Rack seal ring | ㉗ Tie-rod outer |
| ⑨ Washer | ㉒ O-ring | ㉘ Cotter pin |
| ⑩ Spring disc | ㉓ Rack oil seal | |


POWER STEERING GEAR AND LINKAGE (Model PR24SC)

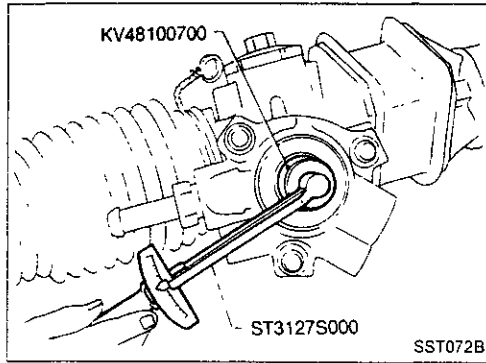


Disassembly

1. Prior to disassembling, measure pinion rotating torque. Record the pinion rotating torque as a reference.
 - Before measuring, disconnect gear housing tube and drain fluid.
 - Use soft jaws when holding steering gear housing. Handle gear housing carefully, as it is made of aluminum. Do not grip cylinder in a vise.
2. Remove pinion gear.


Be careful not to damage pinion gear when removing pinion seal ring.

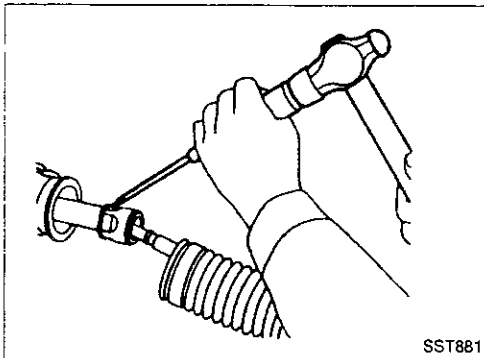

3. Remove tie-rod outer sockets and boots.
4. Loosen tie-rod inner socket by prying up staked portion, and remove socket.
5. Remove retainer.
6. Remove pinion assembly.

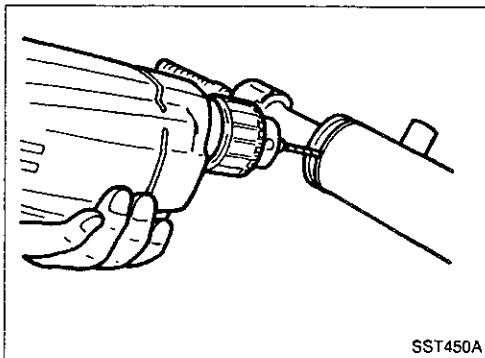


7. Drill staked portion of gear housing end with drill of 2 to 2.5 mm (0.079 to 0.098 in) diameter, until the staking is eliminated.

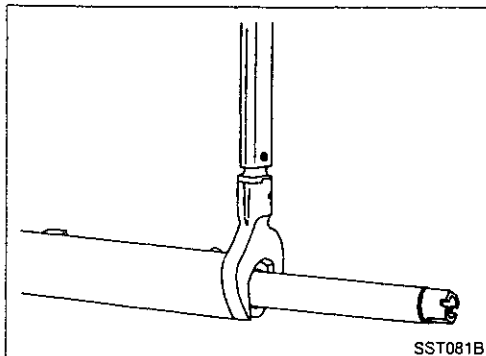

8. Remove end cover assembly with a suitable tool.
9. Draw out rack assembly.

POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Disassembly (Cont'd)

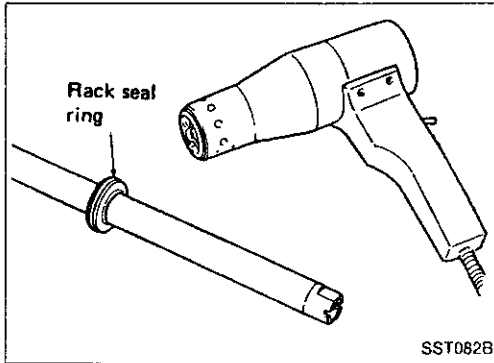


10. Remove rack seal ring.

- Using a heat gun, heat rack seal to approximately 40°C (104°F).

- Remove rack seal ring.

Be careful not to damage rack.

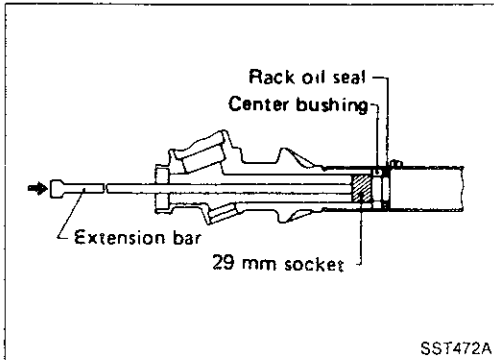

11. Remove center bushing and rack oil seal using tape wrapped socket and extension bar.

Do not scratch inner surfaces of pinion housing.

Inspection

Thoroughly clean all parts in cleaning solvent or automatic transmission fluid "DEXRONTM" type, and blow dry with compressed air, if available.

BOOT

Check condition of boot. If cracked excessively, replace it.

RACK

Thoroughly examine rack gear. If damaged, cracked or worn, replace it.

PINION ASSEMBLY

- Thoroughly examine pinion gear. If pinion gear is damaged, cracked or worn, replace it.
- Inspect bearings to see that they roll freely and are free from cracked, pitted, or worn balls, rollers and races. Replace if necessary.

GEAR HOUSING CYLINDER

Check gear housing cylinder bore for scratches or other damage. Replace if necessary.

POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Inspection (Cont'd)

TIE-ROD OUTER AND INNER SOCKET

- Check ball joint for swinging force.

Tie-rod outer ball joint:

At cotter pin hole


6.9 - 64.7 N

(0.7 - 6.6 kg, 1.5 - 14.6 lb)

Tie-rod inner ball joint:

14.7 - 21.6 N

(1.5 - 2.2 kg, 3.3 - 4.9 lb)

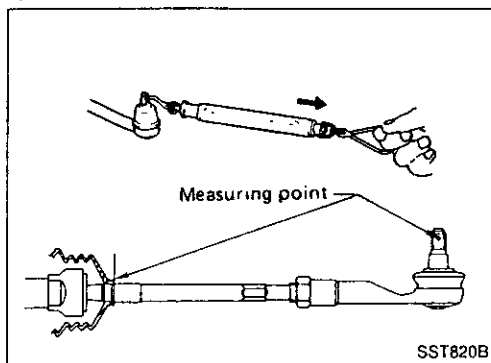


- Check ball joint for rotating torque.

Tie-rod outer ball joint:

0.3 - 2.9 N·m

(3 - 30 kg·cm, 2.6 - 26.0 in-lb)

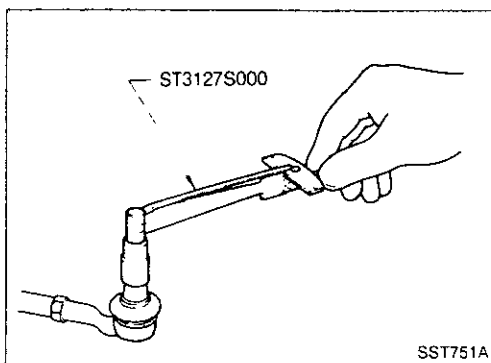

- Check ball joint for axial end play.


Tie-rod outer ball joint:

Less than 0.5 mm (0.020 in)

Tie-rod inner ball joint:


0 mm (0 in)

- Check condition of dust cover. If cracked excessively, replace it.

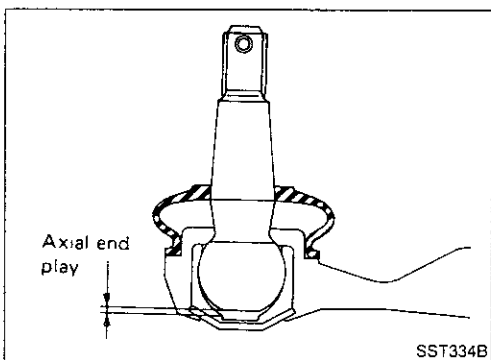


Assembly

1. Using a heat gun, heat new rack seal ring (made of Teflon) to approximately 40°C (104°F) and install it onto rack with your hand.

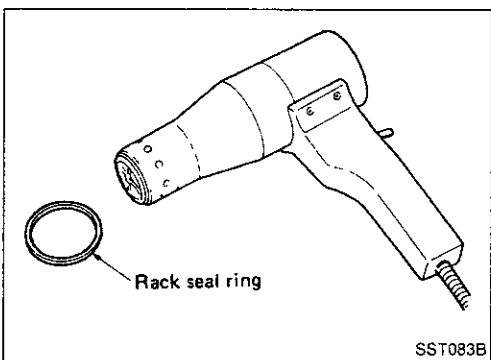


2. Using Tool, compress periphery of rack seal ring to position and secure it on rack.

Always insert Tool from the rack gear side.

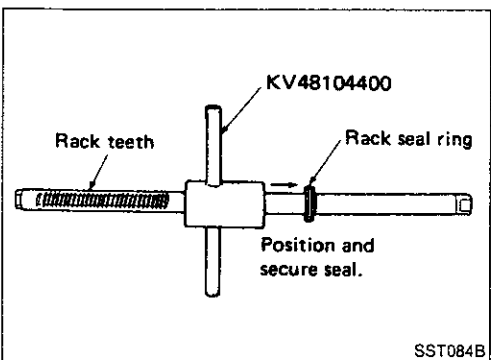


POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Assembly (Cont'd)

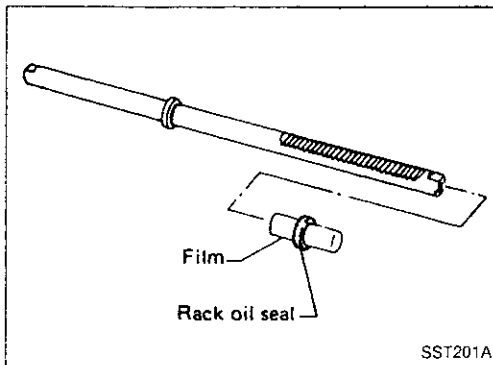


3. Insert new rack oil seal.


- Place plastic film into rack oil seal to prevent damage by rack teeth.
- Do not forget to remove plastic film after rack oil seal is positioned properly.
- Make sure lips of rack oil seal face each other.

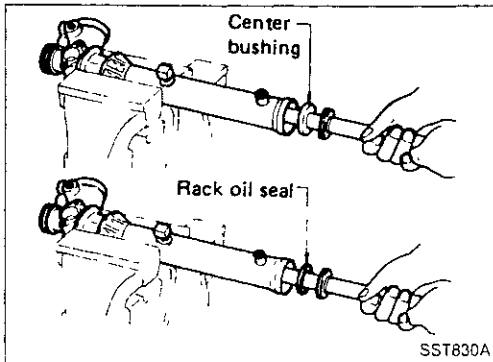


4. Install center bushing and rack oil seal with rack assembly.

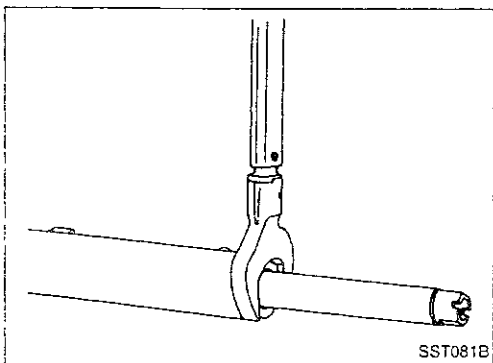

5. Tighten end cover assembly with a suitable tool.

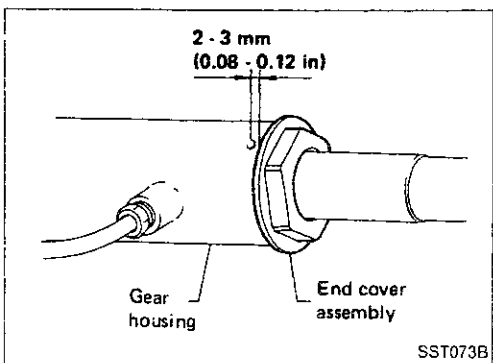

6. Fasten end cover assembly to gear housing by staking.

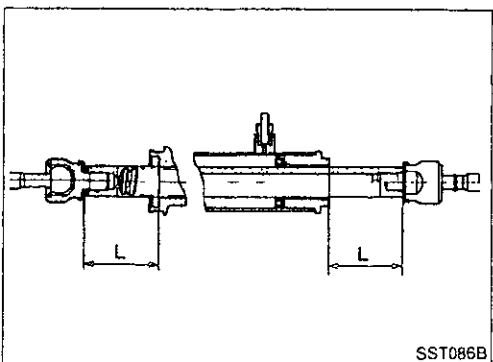


7. Set rack gear in neutral position.

Rack stroke "L":

Refer to S.D.S.


POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Assembly (Cont'd)

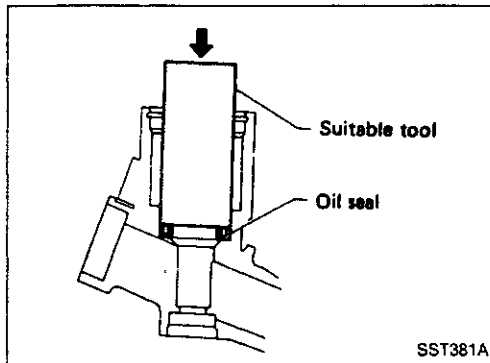


8. Coat seal lip of new pinion oil seal with multi-purpose grease and install it to pinion housing of gear housing with a suitable tool.


Make sure lip of oil seal faces up when installed.

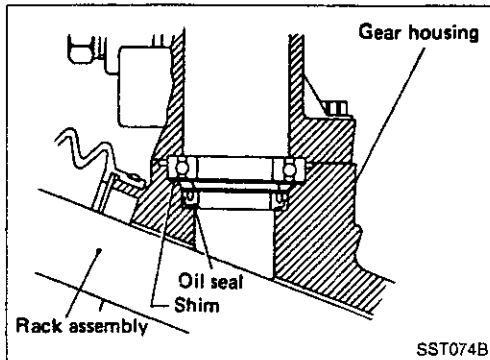


9. Install pinion bearing adjusting shim(s).
- Whenever pinion assembly, gear housing and rear housing are disassembled, replace shim(s) with new ones. Always use the same number of shim(s) when replacing.

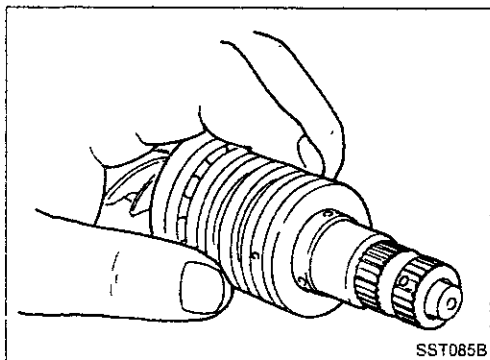

10. Install new pinion seal ring (made of Teflon) on pinion gear assembly.
- Using a heat gun, heat pinion seal ring to approximately 40°C (104°F) before installing it onto pinion gear assembly.
 - Make sure pinion seal ring is properly settled in valve groove.

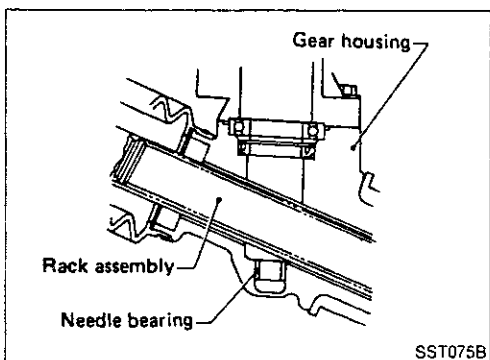


11. Apply a coat of multi-purpose grease to needle bearing roller and oil seal lip before installing pinion assembly in gear housing.

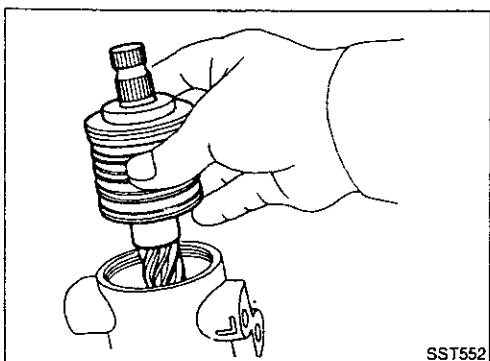


12. Install pinion assembly to pinion housing.
- Be careful not to damage pinion oil seal.**

POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Assembly (Cont'd)

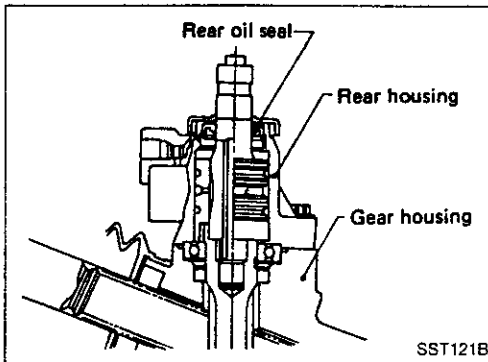


13. Apply a coat of multi-purpose grease to new rear oil seal lip before installing rear housing.

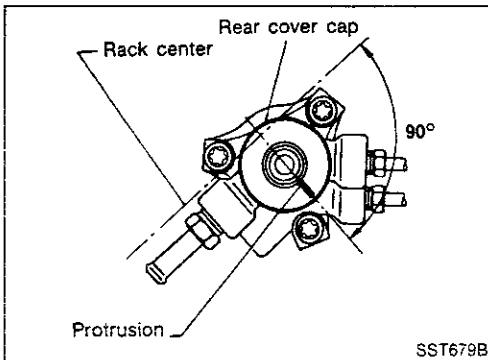


14. Install rear cover cap so that protrusion of rear housing cover is positioned as shown in figure at left when rack is centralized.

Be careful not to damage worm ring and oil seal.

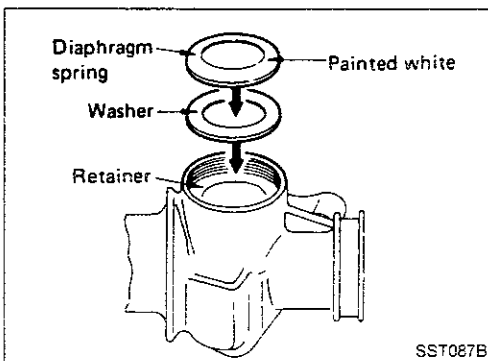


15. Install diaphragm spring into gear housing.
- Always install retainer, spring washer and diaphragm spring in that order.
 - Make sure convex end (painted white) of diaphragm spring faces outward when installing.
16. Install retainer and adjusting screw temporarily.

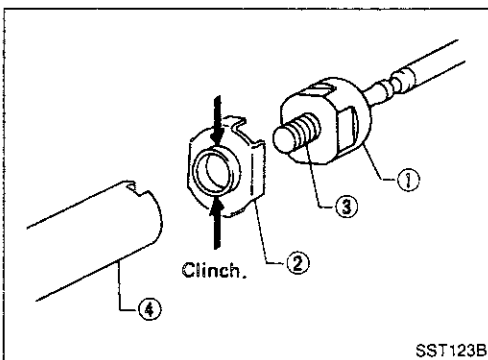

17. Install new lock plate.
- Attach lock plate ② to side rod inner socket ①.
 - Apply locking sealant to inner socket threads ③.
 - Screw inner socket into rack ④ and tighten to specified torque.
 - Clinch two places of lock plate at rack's groove.

CAUTION:

To prevent scratching the boot, remove burrs from lock plate.

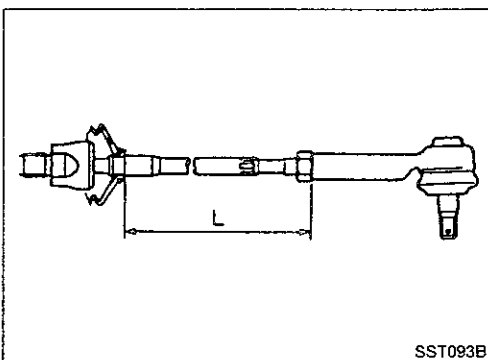


18. Tighten outer socket lock nut.

Tie-rod length "L":


Refer to S.D.S.

POWER STEERING GEAR AND LINKAGE (Model PR24SC)


Assembly (Cont'd)

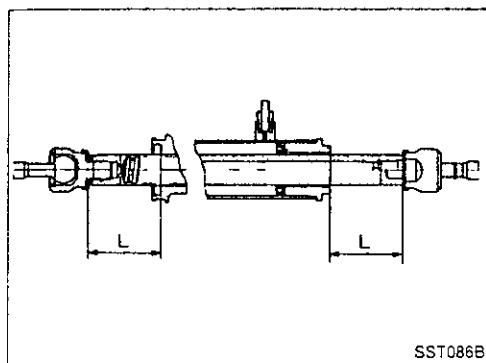


19. Measure rack stroke.
Rack stroke "L":
Refer to S.D.S.

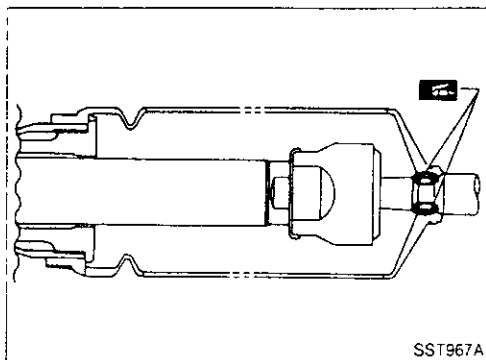


20. Before installing boot, coat the contact surfaces between boot and tie-rod with grease.

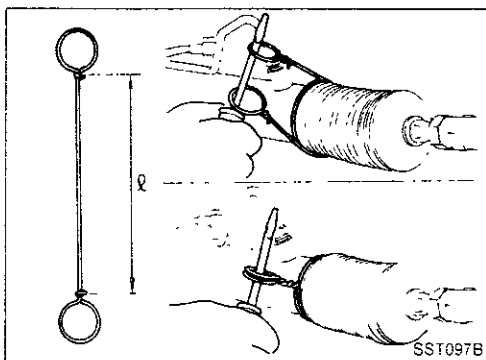

21. Install boot clamps.
- To install, wrap boot clamp around boot groove twice. Tighten clamp by twisting rings at both ends 4 to 4-1/2 turns with screwdriver while pulling with a force of approx. 98 N (10 kg, 22 lb).

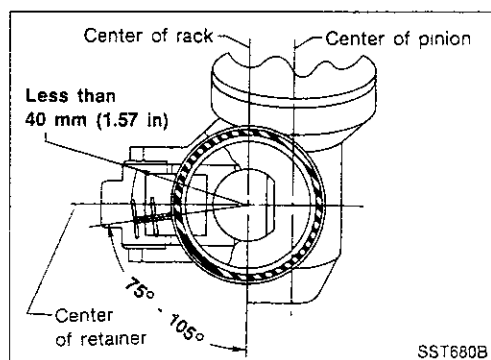

- Install boot clamps so they are behind the gear housing when it is attached to the vehicle. (This will prevent interference with other parts.)

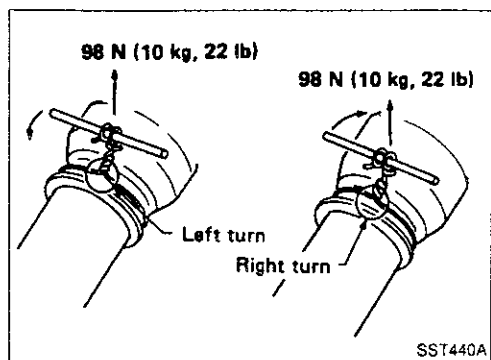


- Twist boot clamp in the direction shown in figure at left.

POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Assembly (Cont'd)




- After twisting boot clamp, bend twisted and diagonally so it does not contact boot.

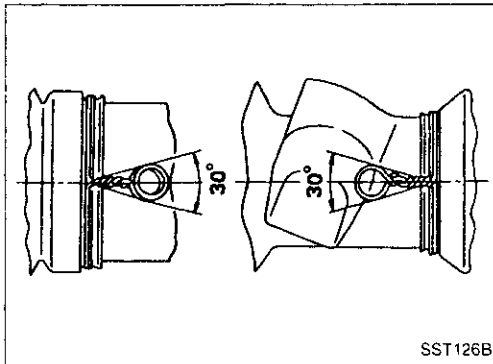

Adjustment


Adjust pinion rotating torque as follows:

1. Set rack to the neutral position without fluid in the gear.
2. Coat the adjusting screw with locking sealant and screw it in.
3. Lightly tighten lock nut.
4. Tighten adjusting screw to a torque of 4.9 to 5.9 N·m (50 to 60 kg-cm, 43 to 52 in-lb).
5. Loosen adjusting screw, then retighten it to 0.2 N·m (2 kg-cm, 1.7 in-lb).
6. Move rack over its entire stroke several times.
7. Measure pinion rotating torque within the range of 180° from neutral position.
Stop the gear at the point of maximum torque.
8. Loosen adjusting screw, then retighten it to 4.9 N·m (50 kg-cm, 43 in-lb).
9. Loosen adjusting screw by 40° to 60°.
10. Prevent adjusting screw from turning, and tighten lock nut to specified torque.

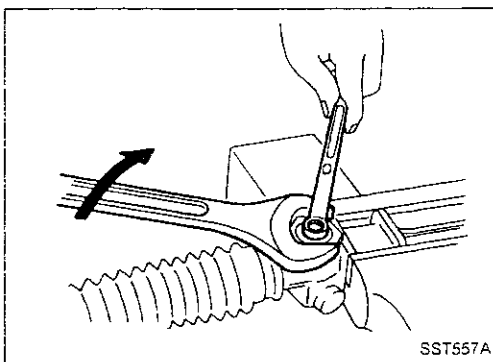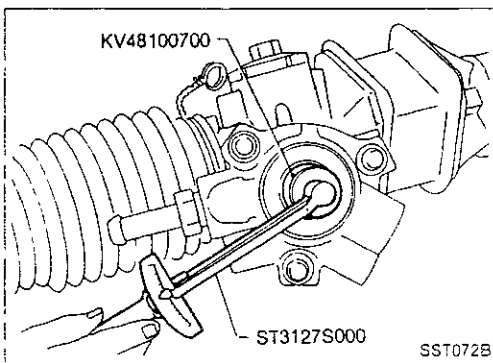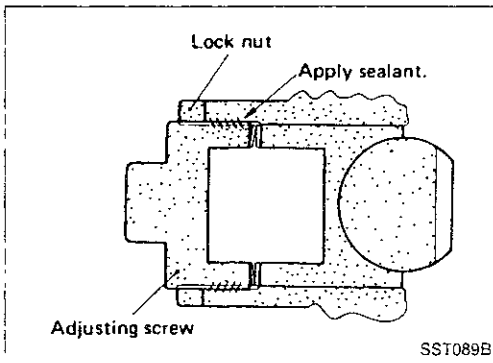

POWER STEERING GEAR AND LINKAGE (Model PR24SC)

Adjustment (Cont'd)

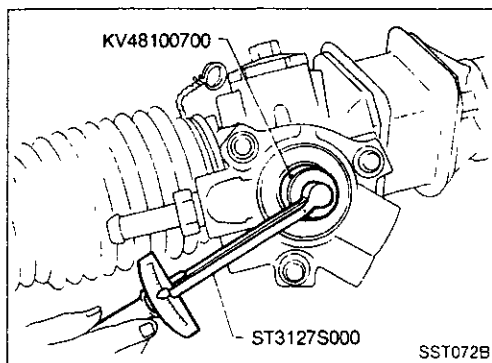

11. Measure pinion rotating torque.

Within $\pm 100^\circ$ from the neutral position:

Average rotating torque

0.8 - 1.3 N·m (8 - 13 kg-cm, 6.9 - 11.3 in-lb)

Maximum torque deviation

0.4 N·m (4 kg-cm, 3.5 in-lb)

Except for above measuring range:


Maximum rotating torque

1.9 N·m (19 kg-cm, 16 in-lb)

Maximum force deviation

0.6 N·m (6 kg-cm, 5.2 in-lb)

- If pinion rotating torque is not within specifications, readjust it starting from procedure 4. If pinion rotating torque is still out of specifications after readjustment, replace steering gear assembly.

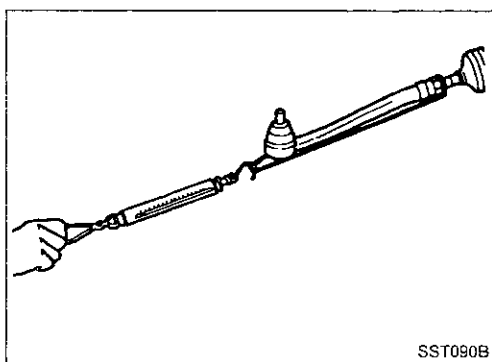

12. Check rack sliding force on vehicle as follows:

- Install steering gear onto vehicle, but do not connect tie-rod to knuckle arm.
- Connect all piping and fill with steering fluid.
- Start engine and bleed air completely.
- Disconnect steering column lower joint from the gear.
- Keep engine at idle and make sure steering fluid has reached normal operating temperature.
- While pulling tie-rod slowly in the ± 11.5 mm (± 0.453 in) range from the neutral position, make sure rack sliding force is within specification.

Average rack sliding force:


Less than 226 N (23 kg, 51 lb)

- Check sliding force outside above range.

Maximum rack sliding force:


Not more than 39 N (4 kg, 9 lb) beyond above value

- If rack sliding force is not within specification, readjust by repeating adjustment procedure from the beginning.
- If rack sliding force is still out of specification after readjustment, gear assembly needs to be replaced.

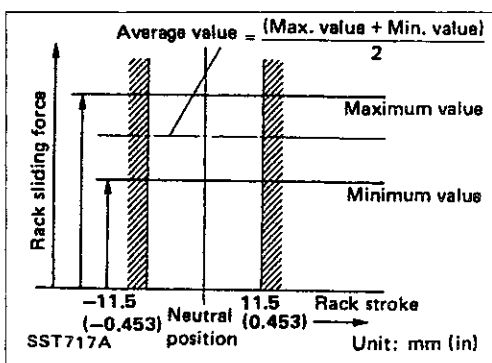


POWER STEERING OIL PUMP

Disassembly and Assembly

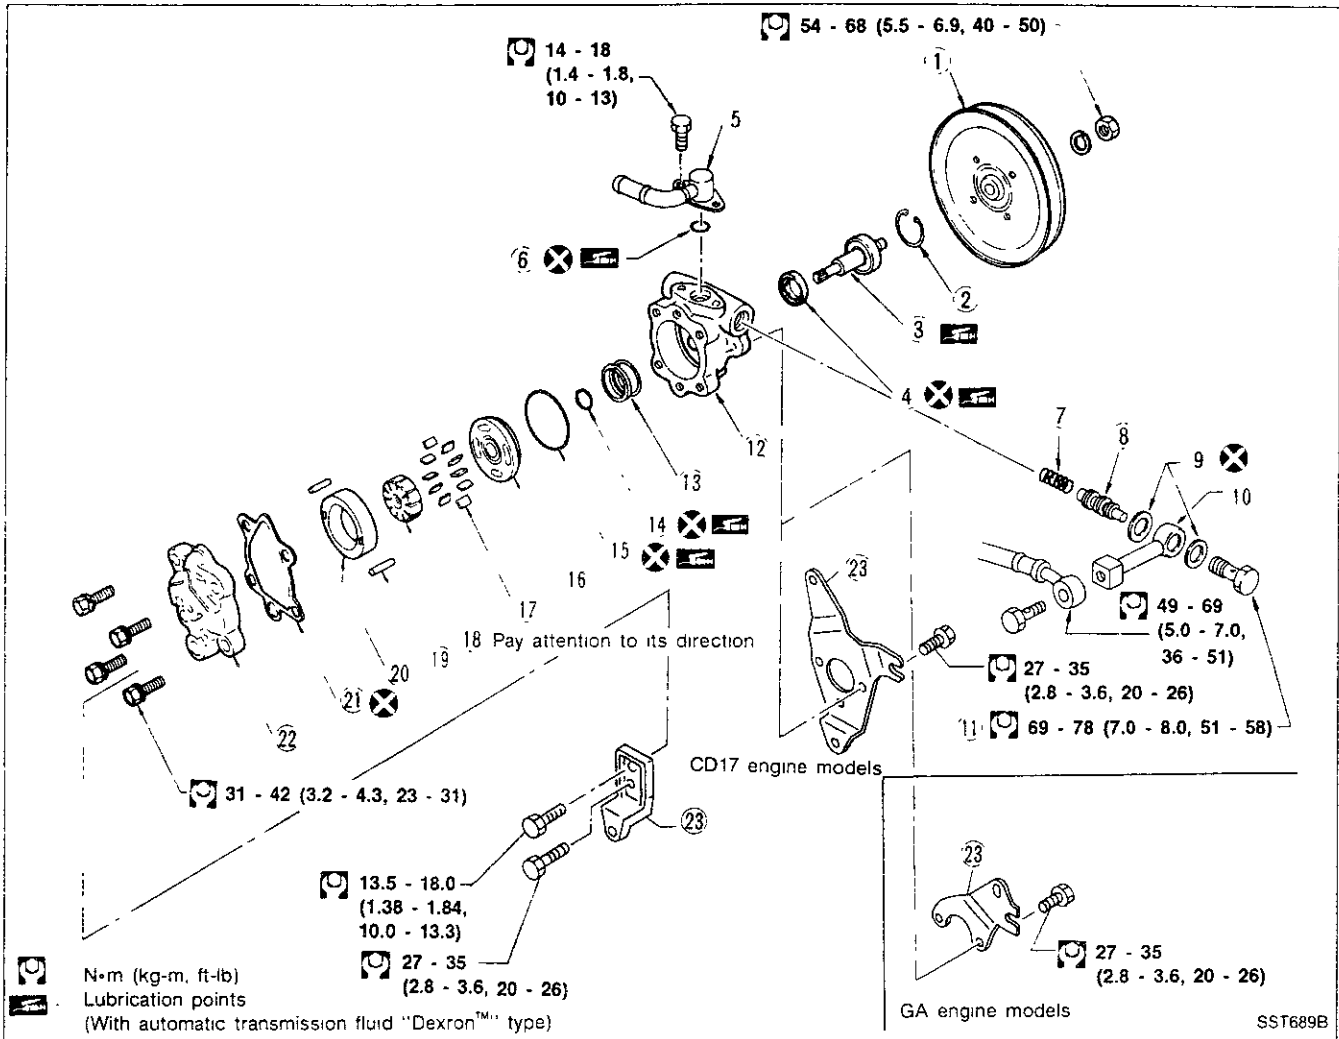

- | | | |
|-----------------|--------------------|--------------------|
| ① Pulley | ⑨ Washer | ⑰ Vane |
| ② Snap ring | ⑩ Joint | ⑱ Rotor |
| ③ Drive shaft | ⑪ Connector bolt | ⑲ Pin |
| ④ Oil seal | ⑫ Front housing | ⑳ Cam ring |
| ⑤ Suction pipe | ⑬ Spring | ㉑ Gasket |
| ⑥ O-ring | ⑭ O-ring | ㉒ Rear housing |
| ⑦ Spring | ⑮ O-ring | ㉓ Mounting bracket |
| ⑧ Control valve | ⑯ Front side plate | |

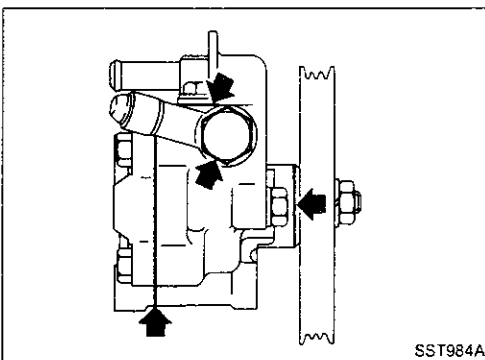

Pre-disassembly Inspection

Disassemble the power steering oil pump only if the following items are found.


- Oil leak from any point shown in the figure.
- Deformed or damaged pulley.

POWER STEERING OIL PUMP


Disassembly

CAUTION:


- Parts which can be disassembled are strictly limited. Never disassemble parts other than those specified.
- Disassemble in as clean a place as possible.
- Clean your hands before disassembly.
- Do not use rags; use nylon cloths or paper towels.
- Follow the procedures and cautions in the Service Manual.
- When disassembling and reassembling, do not let foreign matter enter or contact the parts.

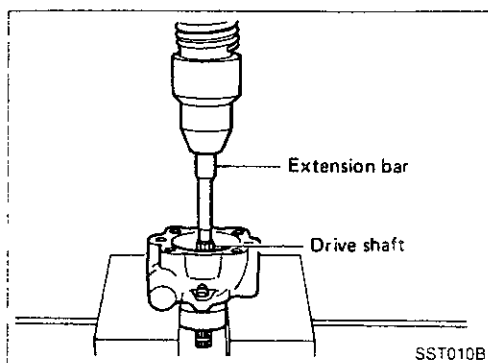

- Remove snap ring, then draw drive shaft out.
Be careful not to drop drive shaft.

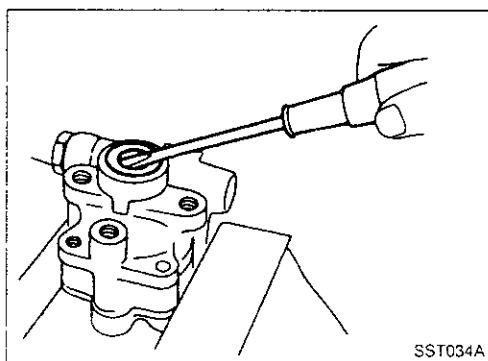


- Remove oil seal.
Be careful not to damage front housing.

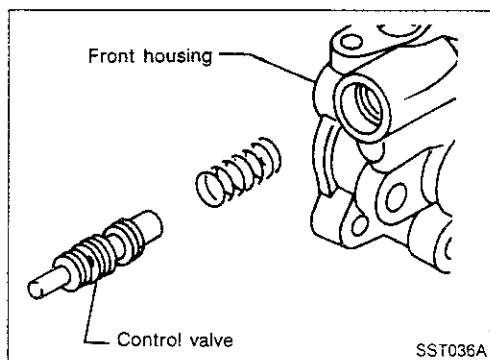

- Remove connector.
Be careful not to drop control valve.

Inspection


Inspect each component part for wear, deformation, scratches, and cracks. If damage is found, replace the part.

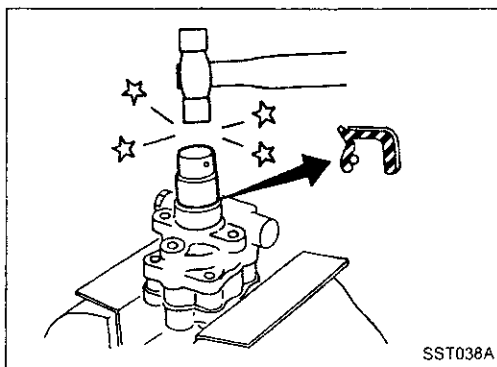


Assembly

Assemble oil pump, noting the following instructions.


- Make sure O-rings and oil seal are properly installed.
- Always install new O-rings and oil seal.
- Be careful of oil seal direction.
- Cam ring, rotor and vanes must be replaced as a set if necessary.
- Coat each part with A.T.F. when assembling.

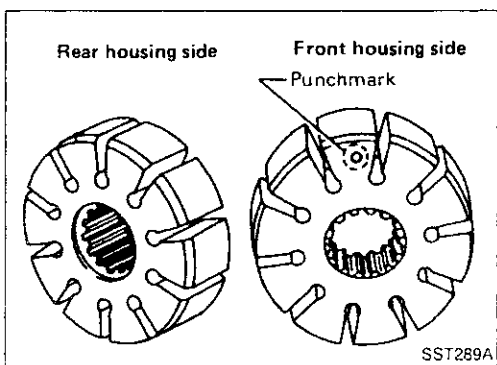

- Pay attention to the direction of rotor.

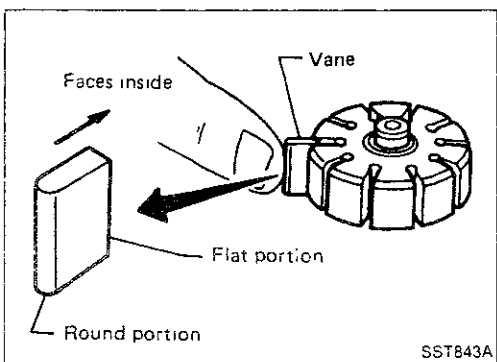

- When assembling vanes to rotor, rounded surfaces of vanes must face cam ring side.

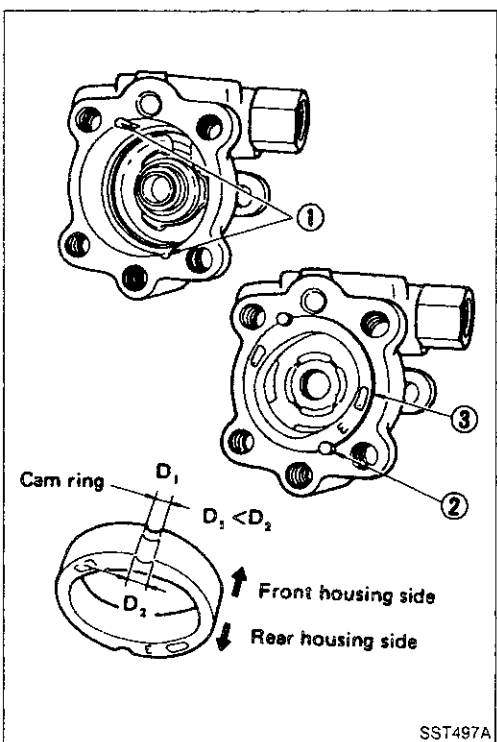

- Insert pin ② into pin groove ① of front housing and front side plate. Then install cam ring ③ as shown at left.

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications

Applied model	Except Europe			Europe		
Steering model	Manual steering	Power steering		Manual steering	Power steering	
Steering gear type	R24S	PR24SC		R24N	PR24SC	
Turns of steering wheel (Lock to lock)	3.75*1 4.01*2 4 21*3	R.H.D. 2.97*1 3 17*2, 3.33*3	L.H.D. 2.74*1, 2 93*2 3.07*3	3.75*1 4 21*3	2WD	4WD
					3.33*3 3.17*2 2.97*1 (Except SR20DE) 2.93*1 (SR20DE)	2.83*3 2 72*1 (GA16DS) 2.69*1 (SR20DET)
Steering column type	Collapsible, tilt					

*1: Models equipped with 14-inch tires

*2: Diesel engine models equipped with 13-inch tires

*3: Gasoline engine models equipped with 13-inch tires


Inspection and Adjustment

GENERAL

Steering wheel axial play mm (in)	0 (0)
Steering wheel play limit mm (in)	35 (1.38)
Maximum movement of gear housing mm (in)	± 2 (± 0.08)

STEERING COLUMN


Steering column length "L" mm (in)	536 2 - 537 8 (21.11 - 21.17)
---------------------------------------	-------------------------------

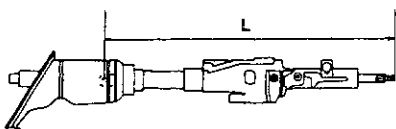

SST125B

STEERING GEAR AND LINKAGE

Steering gear type	R24S, R24N	PR24SC
Side rod outer ball joint Swinging force at cotter pin hole N (kg, lb)	6.9 - 64.7 (0.7 - 6.6, 1.5 - 14.6)	
Rotating torque N·m (kg-cm, in-lb)	0.3 - 2.9 (3 - 30, 2.6 - 26.0)	
Axial end play limit mm (in)	Less than 0.5 (0.020)	
Side rod inner ball joint Swinging force* N (kg, lb)	14.7 - 21.6 (1.5 - 2.2, 3.3 - 4.9)	
Axial end play limit mm (in)	0 (0)	
Side rod standard length "L" mm (in)	184 (7.24)	

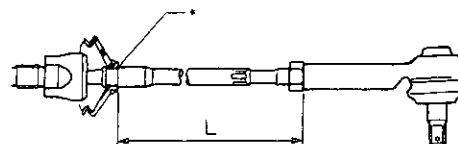

SST304B

*: Measuring point

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment (Cont'd)


STEERING GEAR AND LINKAGE (Cont'd)

	2WD	4WD
Rack stroke "L"	65.5 (2.579)*1	60.0*1
mm (in)	70.0 (2.756)*2, 73.5 (2.894)*3	62.5*3

*1: Models equipped with 14-inch tires

*2: Diesel engine models equipped with 13-inch tires

*3: Gasoline engine models equipped with 13-inch tires

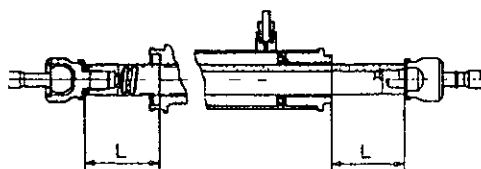

SST086B

Steering gear type	R24S, R24N	PR24SC
Retainer adjustment		
Adjusting screw		
N m (kg-cm, in-lb)		
Initial tightening torque	2.9 (30, 26)	4.9 (50, 43)
Retightening torque after loosening	0.2 (2, 1.7)	0.2 (2, 1.7)
Tightening torque after gear has settled	2.9 (30, 26)	4.9 (50, 43)
Returning angle degree	50° - 70°	40° - 60°
Pinion gear preload without gear oil		
N m (kg-cm, in-lb)		
Within ± 100° from the neutral position		
Average rotating torque	0.7 - 1.2 (7 - 12, 6.1 - 10.4)	0.8 - 1.3 (8 - 13, 6.9 - 11.3)
Maximum torque deviation	0.3 (3, 2.6)	0.4 (4, 3.5)
Except above range		
Maximum rotating torque	1.5 (15, 13)	1.9 (19, 16)
Maximum torque deviation	0.5 (5, 4.3)	0.6 (6, 5.2)

POWER STEERING

Steering gear type	PR24SC
Rack sliding force N (kg, lb)	
Under normal operating oil pressure	
Range within ± 11.5 mm (± 0.453 in) from the neutral position	Less than 226 (23, 51)
Except above range	Not more than 39 (4, 9) beyond above value
Steering wheel turning force (Measured at one full turn from the neutral position) N (kg, lb)	39 (4, 9) or less
Fluid capacity (Approximate) ℓ (imp qt)	1 (7/8)
Oil pump maximum pressure kPa (bar, kg/cm ² , psi)	Except CD17 engine 7 649 - 8,238 (76.5 - 82.4, 78 - 84, 1,109 - 1,194) CD17 engine 6 669 - 7,257 (66.7 - 72.6, 68 - 74, 96.7 - 1,052)

SECTION **BF**

CONTENTS

GENERAL SERVICING	
(Including "Clip and Fastener")	BF- 2
BODY END	BF- 6
DOOR	
(Including "Power Window" and "Power Door Lock")	BF- 18
INSTRUMENT PANEL	BF- 59
INTERIOR AND EXTERIOR	
(In EXTERIOR, including "Weatherstrips")	BF- 63
SEAT	BF- 96
SUN ROOF	BF-104
T-BAR ROOF	BF-108
WINDSHIELD AND WINDOWS	BF-110
MIRROR — Door Mirror	BF-119
REAR AIR SPOILER	BF-122
BODY ALIGNMENT	BF-125

When you read wiring diagrams:


- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

☆ For seat belt, refer to MA section.

GENERAL SERVICING

Precautions

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installation. Be careful not to soil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

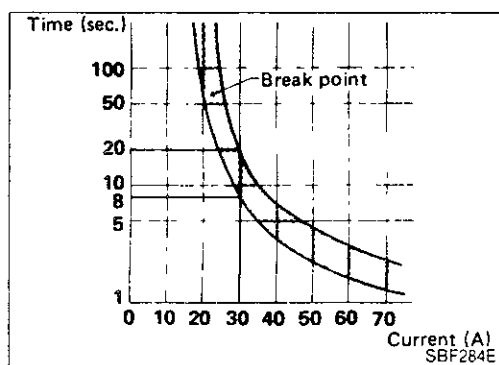

Circuit Breaker Inspection



 

 

For example, when current is 30A, the circuit is broken within 8 to 20 seconds.

Circuit breakers are used in the following systems.

- Power window & power door lock
- Power sun roof

















Clip and Fastener

- Clips and fasteners in BF section correspond to the following numbers and symbols.
- Replace any clips and/or fasteners which are damaged during removal or installation.

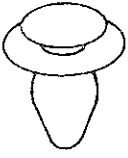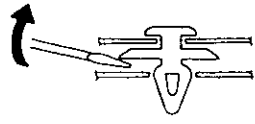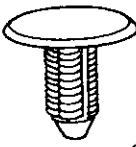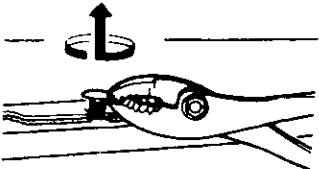No.	Symbol	Shape	Removal & Installation
C101	 SBF092B	 SBF109B	Removal: Remove by bending up with a flat-bladed screwdriver.  SBF094B
C102	 SBF113B	 SBF114B  SBF137B	 Removal: Pull up while rotating. SBF115B











GENERAL SERVICING

    Clip and Fastener (Cont'd)

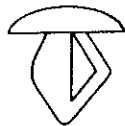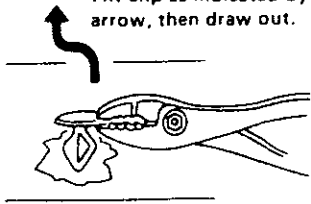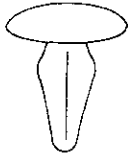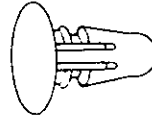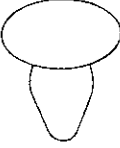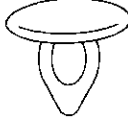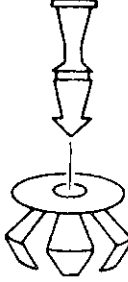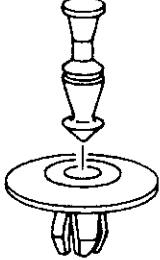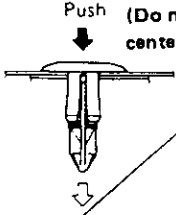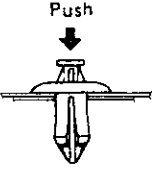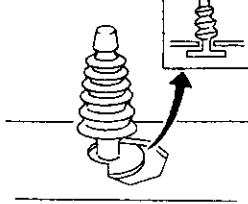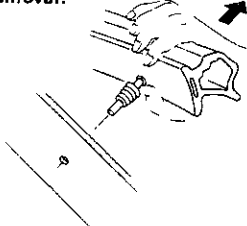No.	Symbol	Shape	Removal & Installation
C105			Removal: Tilt clip as indicated by arrow, then draw out.  SBF141B SBF142B SBF143B
C106		  	Removal: Remove with flat-bladed screwdriver or pliers.   SBF089B SBF090B SBF091B
C110			Removal: Remove with a flat-bladed screwdriver or pliers.   SBF290C SBF291C SBF292C
C203			Push center pin to catching position. (Do not remove center pin by hitting it.)   Installation: SBF708E
CE103			Removal:  SBF103B SBF104B SBF147B



GENERAL SERVICING

  Clip and Fastener (Cont'd)

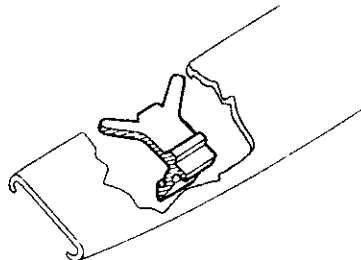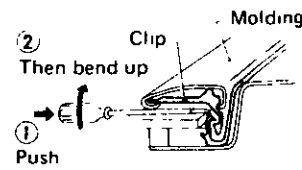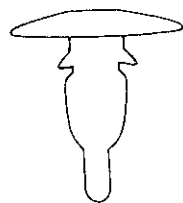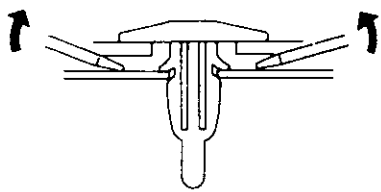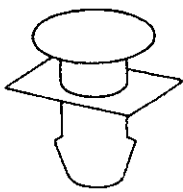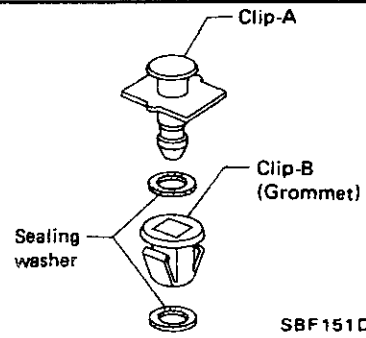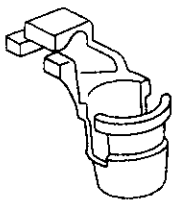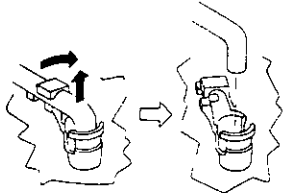No.	Symbol	Shape	Removal & Installation
CE106		SBF653B	Removal:  SBF654B
CE117		SBF173D	Removal: Remove with a flat-bladed screwdriver or pliers.  SBF174D SBF175D
CF118		SBF150D	Removal:  SBF151D SBF652B
CG101		SBF144B	Removal:  Installation:  SBF145B SBF085B
CR103		SBF768B	Removal: Holder portion of clip must be spread out to remove rod.  SBF770B

GENERAL SERVICING

 Clip and Fastener (Cont'd)

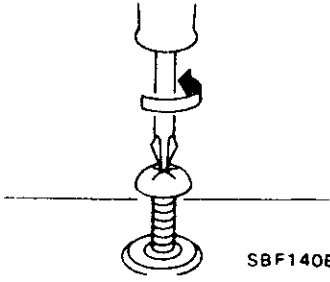No.	Symbol	Shape	Removal & Installation
CS102	 SBF138B	 SBF139B	Removal: Screw out with a Phillips screwdriver.  SBF140B

BODY END



- When removing or installing hood, trunk lid or back door, place a cloth or other padding on hood, trunk lid or back door corners to avoid scratching vehicle body.
- Bumper fascia: It is made of plastic, so do not use excessive force and take care to keep oil away from it.
- Hood adjustment: Adjust at hinge portion.
- Hood lock adjustment: After adjusting, check hood lock control operation. Apply a coat of grease to hood locks engaging mechanism.
- Hood opener: Do not attempt to bend cable forcibly. Doing so increases effort required to unlock hood.

Body Front End

B13 SEDAN

REMOVAL — Front bumper assembly

- ① Remove left and right engine undercovers.
- ② Remove bolts securing left and right fender protectors to bumper fascia.
- ③ Remove left and right fender protectors.
- ④ Remove clips (CS102) from lower side of apron at bumper fascia opening.
- ⑤ Remove screws located at wheel opening.
- ⑥ Remove the two bolts securing left fender bracket. Similarly, remove right fender bracket.
- ⑦ Extract bumper assembly.
- ⑧ Disassemble fascia and reinforcement.

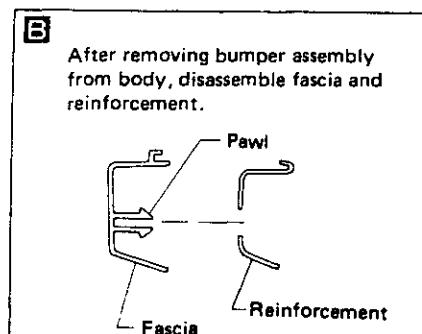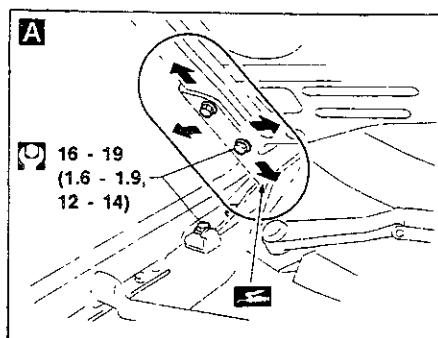

BODY END


Body Front End (Cont'd)

Hood lock adjustment

- Adjust hood so that hood primary lock meshes at a position 1 to 1.5 mm (0.039 to 0.059 in) lower than fender.
- After hood lock adjustment, adjust bumper rubber.
- When securing hood lock, ensure it does not tilt. Striker must be positioned at the center of hood primary lock
- After adjustment, ensure that hood primary and secondary lock operate properly.


Hood lock secondary latch hooking length

More than 5.0 mm (0.197 in)

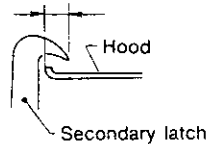

Bumper rubber adjustment

- Adjust so that hood is aligned with fender. At that time deflection is approx. 2 mm (0.08 in)
- [Bumper rubber free height is approx 13 mm (0.51 in)]

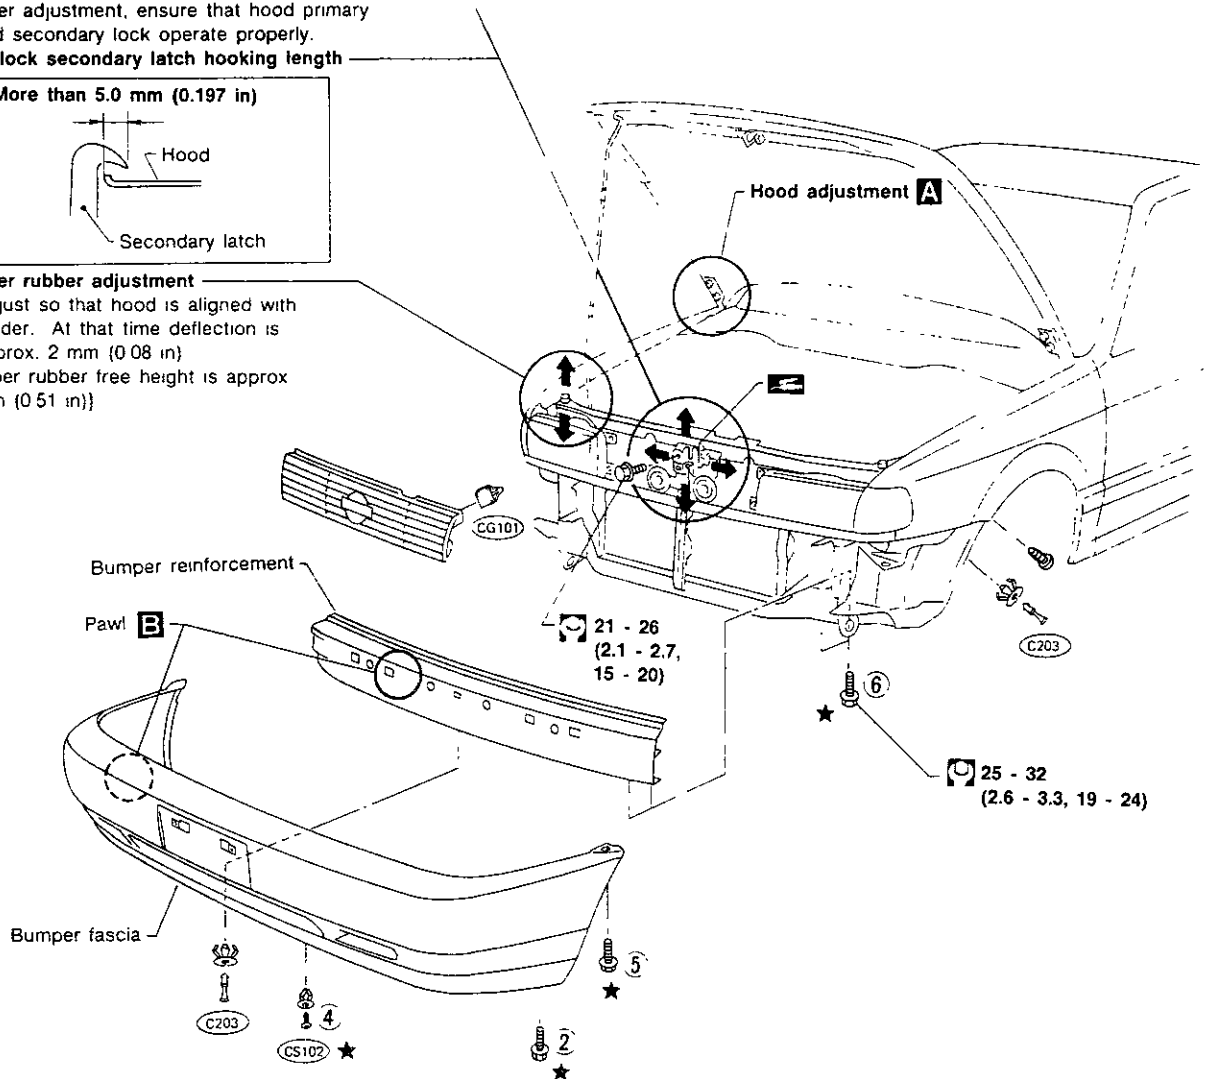

★ Bumper assembly mounting bolts & clips

⊗ · N·m (kg-m, ft-lb)

MBF267A


BODY END

Body Front End (Cont'd)

B13 COUPE

REMOVAL — Front bumper assembly

- ① Remove left and right engine undercovers.
- ② Remove left and right fender protectors.
- ③ Remove the nine clips (CS102) from front spoiler lower side; remove the four screws (two on each side) from left and right fender lower sides.
- ④ Remove the eight bolts through spoiler opening.
- ⑤ Disconnect left and right fog lamp harness connectors.
- ⑥ Remove front spoiler.
- ⑦ Remove the ten nuts (five on each side) from left and right bumper sides.
- ⑧ Remove the six bolts from bumper upper side.
- ⑨ Extract bumper fascia.
- ⑩ Remove bumper reinforcement.

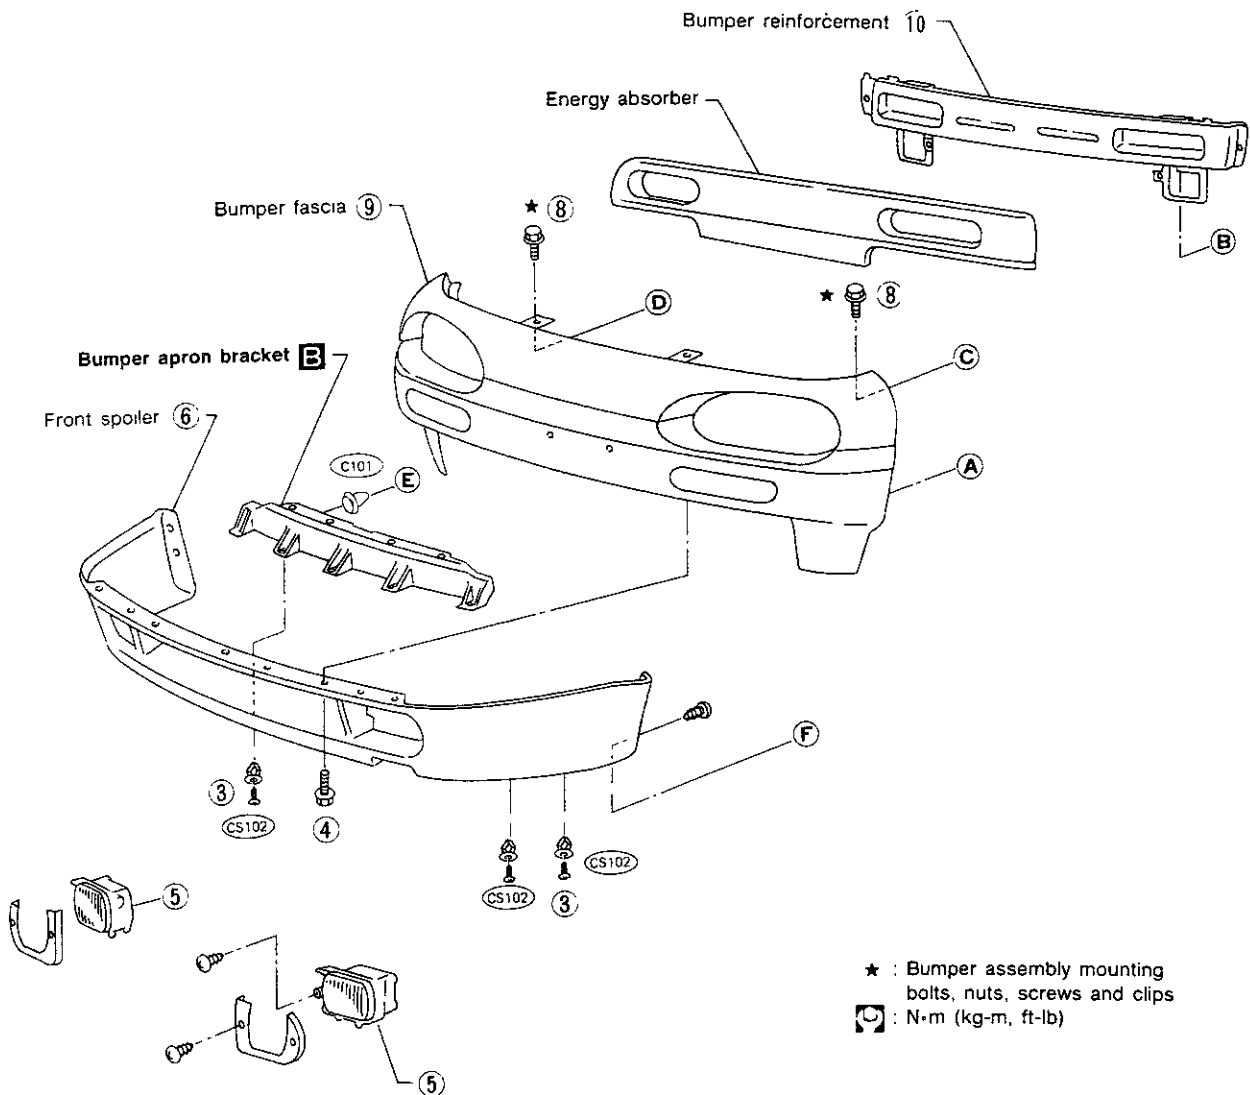


BODY END

Body Front End (Cont'd)

Hood lock adjustment




- Adjust hood so that hood primary lock meshes at a position 1 to 15 mm (0.039 to 0.059 in) lower than fender
- After hood lock adjustment, adjust bumper rubber
- When securing hood lock, ensure it does not tilt. Striker must be positioned at the center of hood primary lock
- After adjustment, ensure that hood primary and secondary lock operate properly

Hood lock secondary latch hooking length

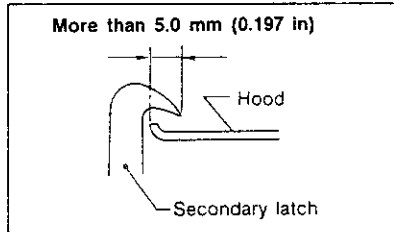

Bumper rubber adjustment

- Adjust so that hood is aligned with fender. At that time deflection is approx 2 mm (0.08 in).
- [Bumper rubber free height is approx. 13 mm (0.51 in)]

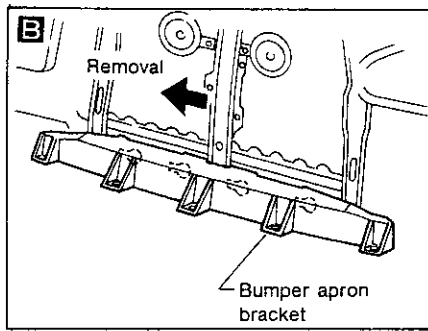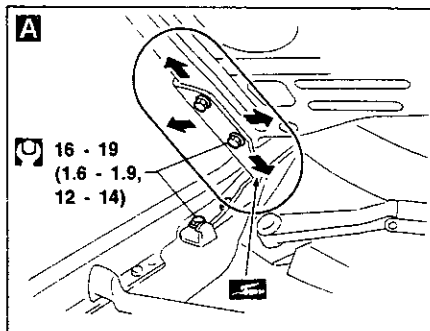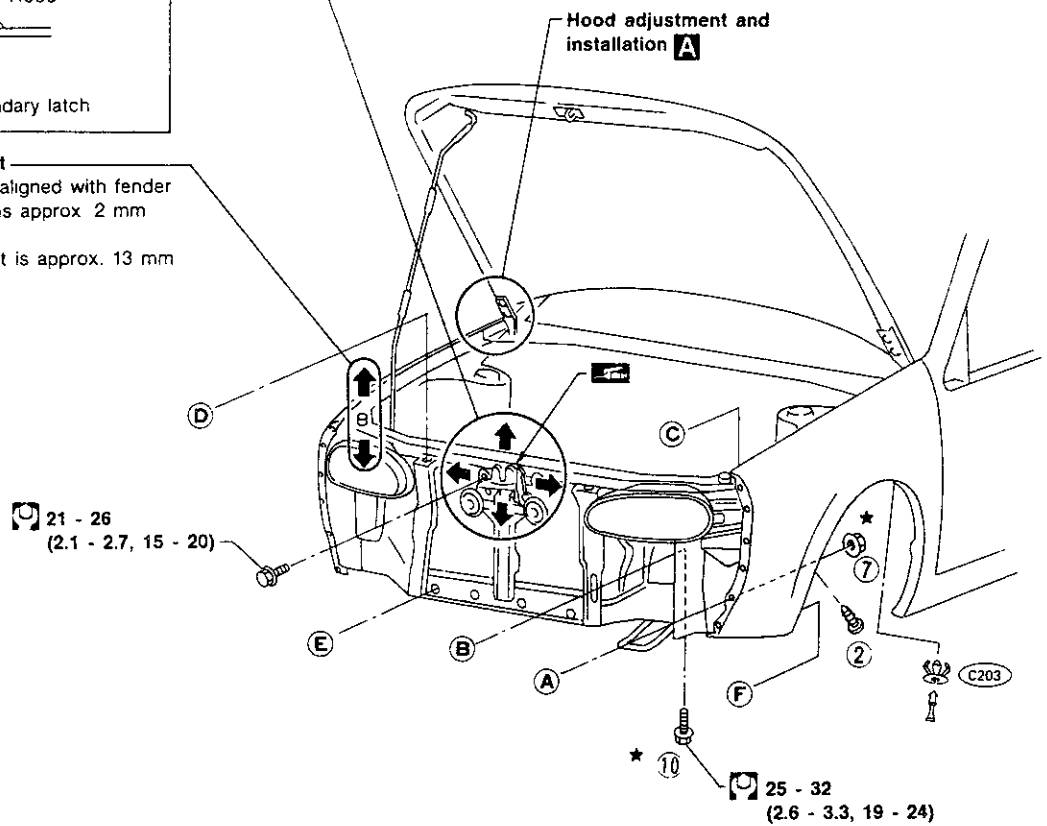

Body Front End (Cont'd)

REMOVAL — Front bumper assembly

-
- Diagram illustrating the front bumper assembly components and hardware:
- A**: Crossbar
 - B**: Bumper
 - C**: Pawl
 - D**: Pawl
 - E**: Pawl
 - F**: Pawl
 - G**: Pawl
 - H**: Pawl
 - I**: Pawl
 - J**: Pawl
 - K**: Pawl
 - L**: Pawl
 - M**: Pawl
 - N**: Pawl
 - O**: Pawl
 - P**: Pawl
 - Q**: Pawl
 - R**: Pawl
 - S**: Pawl
 - T**: Pawl
 - U**: Pawl
 - V**: Pawl
 - W**: Pawl
 - X**: Pawl
 - Y**: Pawl
 - Z**: Pawl
- Hardware callouts:
- CG101**: Screw
 - CS102**: Screw
 - ★**: Bumper assembly mounting bolts, nuts, screws and clips
- C**: N.m (kg-m, ft-lb)

BODY END


Body Front End (Cont'd)

Hood lock adjustment

- Adjust hood so that hood primary lock meshes at a position 1 to 1.5 mm (0.039 to 0.059 in) lower than fender.
- After hood lock adjustment, adjust bumper rubber
- When securing hood lock, ensure it does not tilt. Striker must be positioned at the center of hood primary lock
- After adjustment, ensure that hood primary and secondary lock operate properly



Hood lock secondary latch hooking length

More than 5.0 mm (0.197 in)

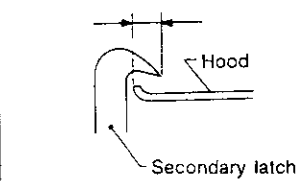


Bumper rubber adjustment

- Adjust so that hood is aligned with fender. At that time deflection is approx. 2 mm (0.08 in)
- [Bumper rubber free height is approx 13 mm (0.51 in)]

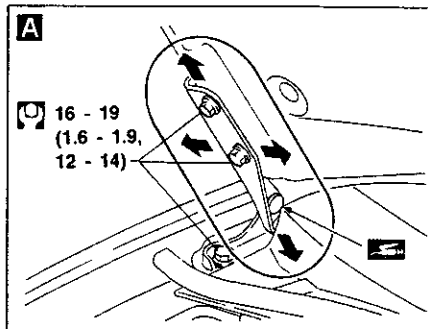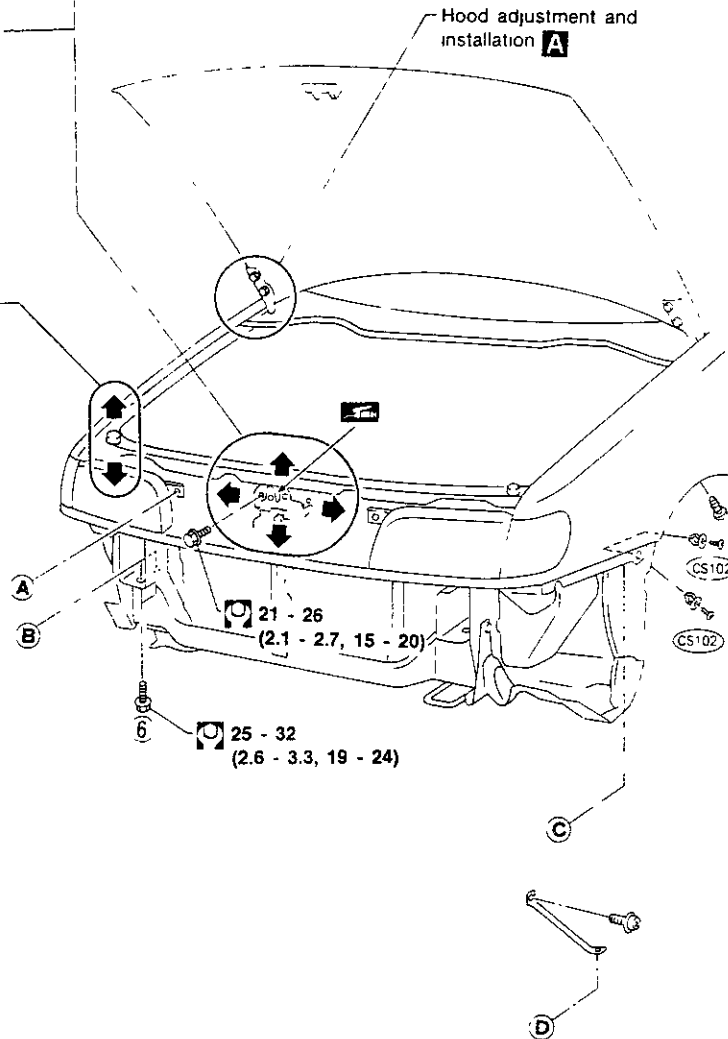

B After removing bumper assembly from body, disassemble fascia and reinforcement.

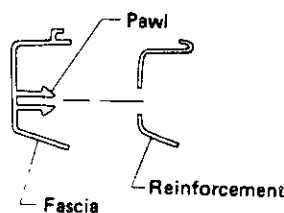

Body Rear End and Opener


B13 SEDAN

N14 SEDAN

- Trunk lid adjustment: Adjust at hinge-trunk lid portion for proper trunk lid fit.
- Trunk lid lock system adjustment: Adjust striker so that it is in the center of the lock. After adjustment, check trunk lid lock operation.
- Opener cable: Do not attempt to bend cable using excessive force.
- After installing/adjusting opener, make sure that trunk lid and fuel filler lid open








REMOVAL — Rear bumper assembly

- ① Remove trunk trim. Refer to "LUGGAGE COMPARTMENT TRIM" in "Interior" for details.
- ② Remove the two screws from lower side of each side bumper.
- ③ Remove screws securing wheelarch to each side bumper.
- ④ Working inside trunk, remove left and right plugs from floor, then remove the four bolts.
- ⑤ Extract bumper assembly.
- ⑥ Disassemble fascia and reinforcement.

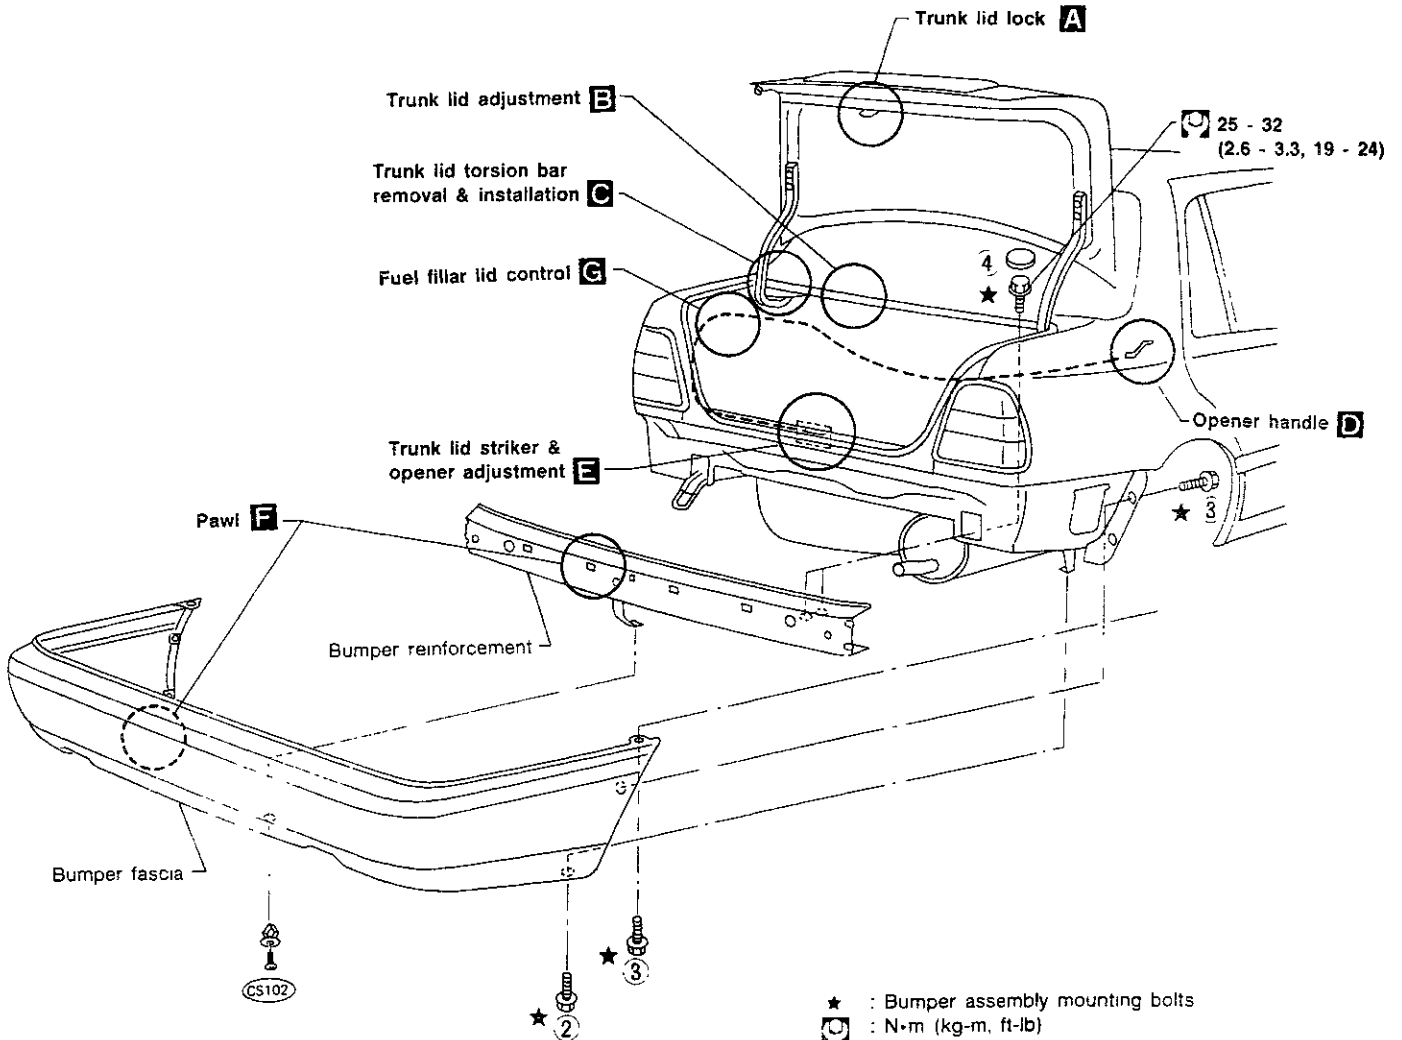

BODY END

Body Rear End and Opener (Cont'd)

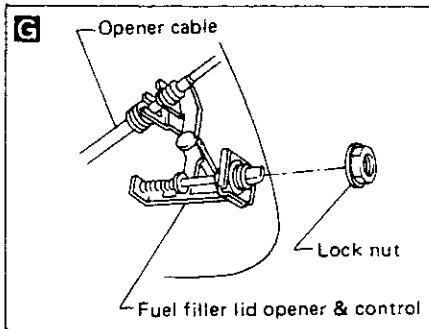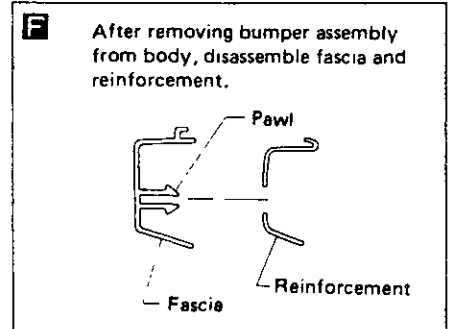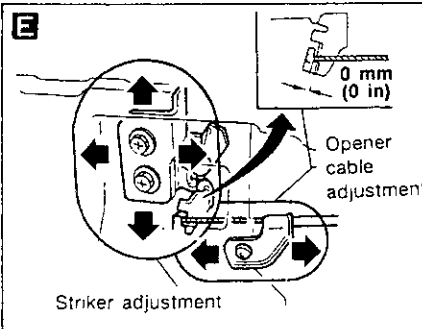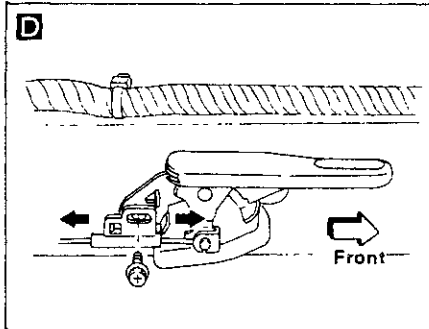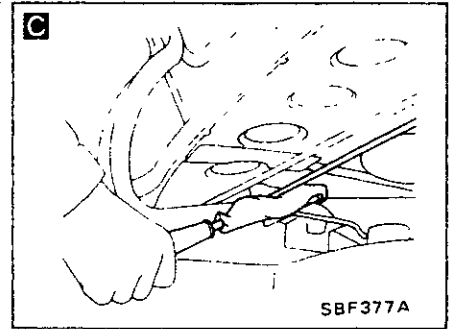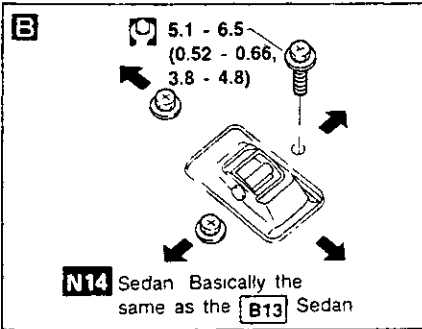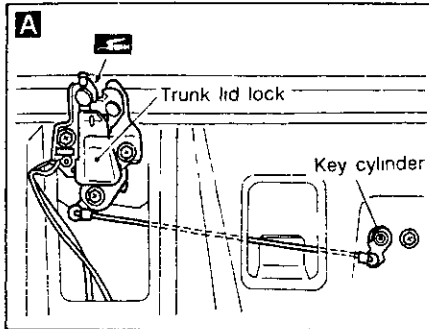


Trunk lid and fuel filler lid opener installation

Installation (Refer to figure below)

- ① Temporarily route cable and secure fuel lock to vehicle body.
- ② Lightly pull stopper A (at cable end) in direction A to eliminate clearance b between stopper B and casing end.
- ③ Secure bracket A to vehicle body so that clearance a between stopper A and trunk striker is 0 mm (0 in). (At this point, do not pull striker lever.)
- ④ Attach stopper C to handle. While lightly pushing cable in direction B shown by arrow (do not allow any clearance c at fuel lock casing end to occur), secure handle to vehicle body.

Ensure that clearances a and b are eliminated after installation.

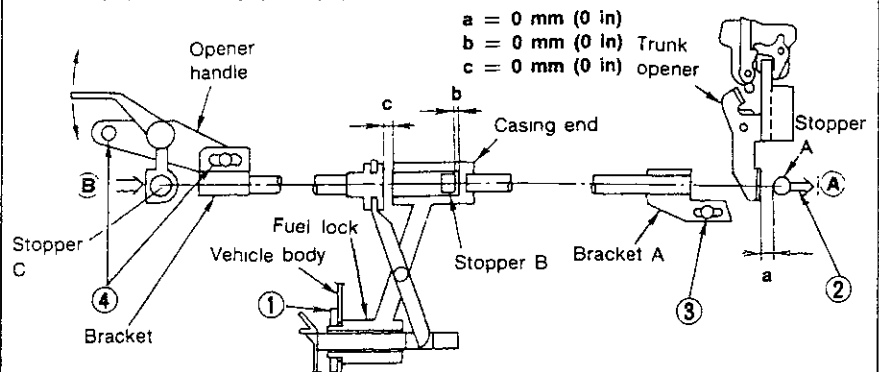

Adjustment procedures are the same for both B13 Sedan and N14.

Body Rear End and Opener (Cont'd)

B13 COUPE


- Back door adjustment: Adjust at hinge-body portion for proper back door fit.
- Back door lock system adjustment: Adjust lock & striker so that they are in the center. After adjustment, check back door lock operation.

WARNING:

- Be careful not to scratch back door stay when installing back door. A scratched stay may cause gas leakage.**
 - The contents of the back door stay are under pressure. Do not take apart, puncture, apply heat or allow fire near it.**
- Opener cable: Do not attempt to bend cable using excessive force.
 - After installation, make sure that trunk lid/back door and fuel filler lid open smoothly.


REMOVAL — Rear bumper assembly

- ① Remove license plate and license plate bracket **A**.
- ② Remove screw and clip **CS102** from lower side of each side bumper.
- ③ Remove luggage room trim. Refer to "SIDE, LUGGAGE AND FLOOR TRIM" in "Interior" for details.
- ④ Working inside luggage room, remove bolt securing each bumper side to fender.
- ⑤ Working inside luggage room, remove the seven nuts from center of luggage compartment.
- ⑥ Also remove left and right plugs from floor, then remove bolts.
- ⑦ Pull bumper fascia out, remove license lamp harness connector.

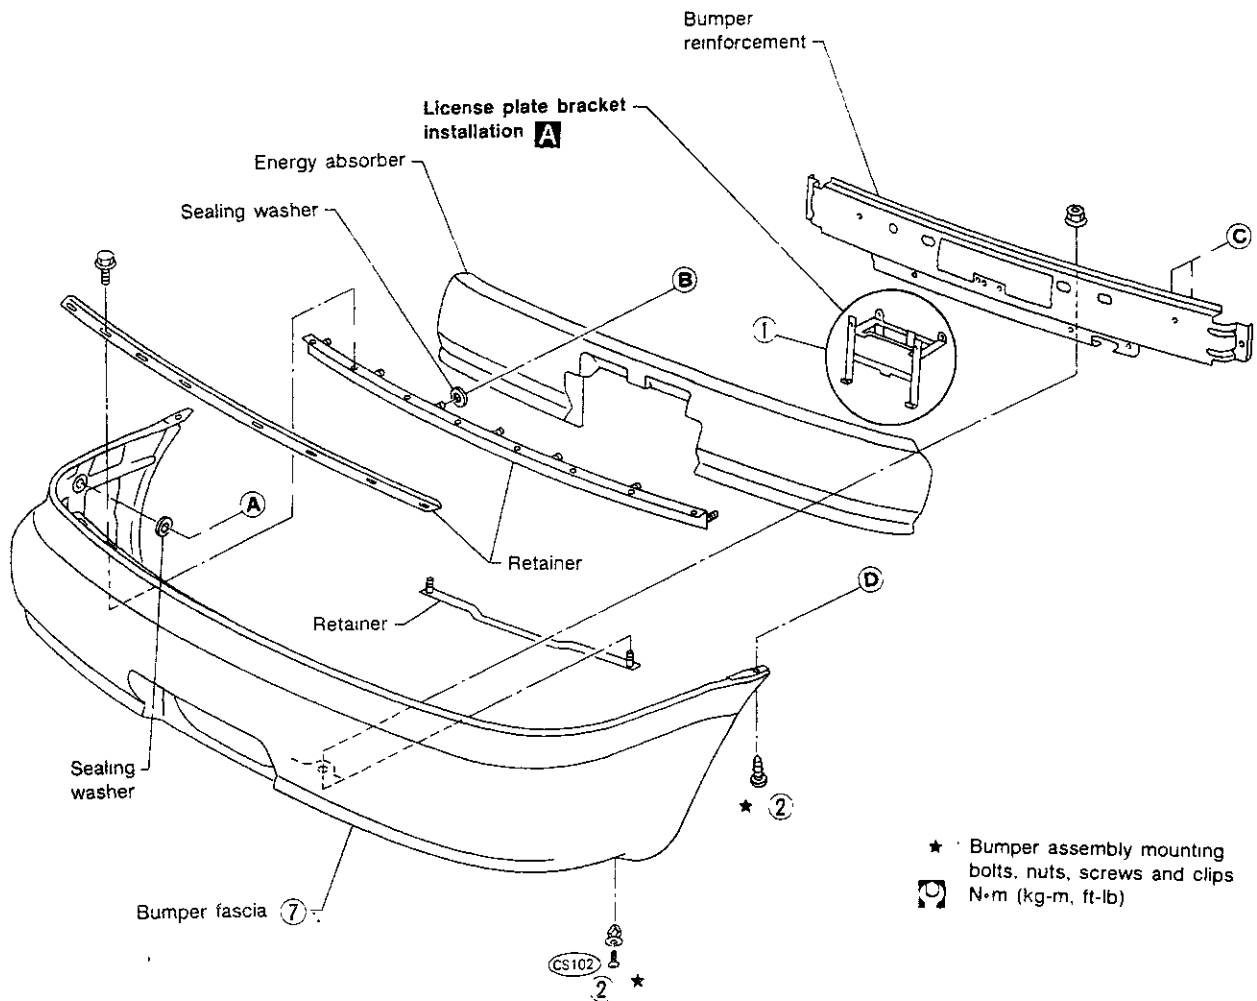

BODY END

Body Rear End and Opener (Cont'd)

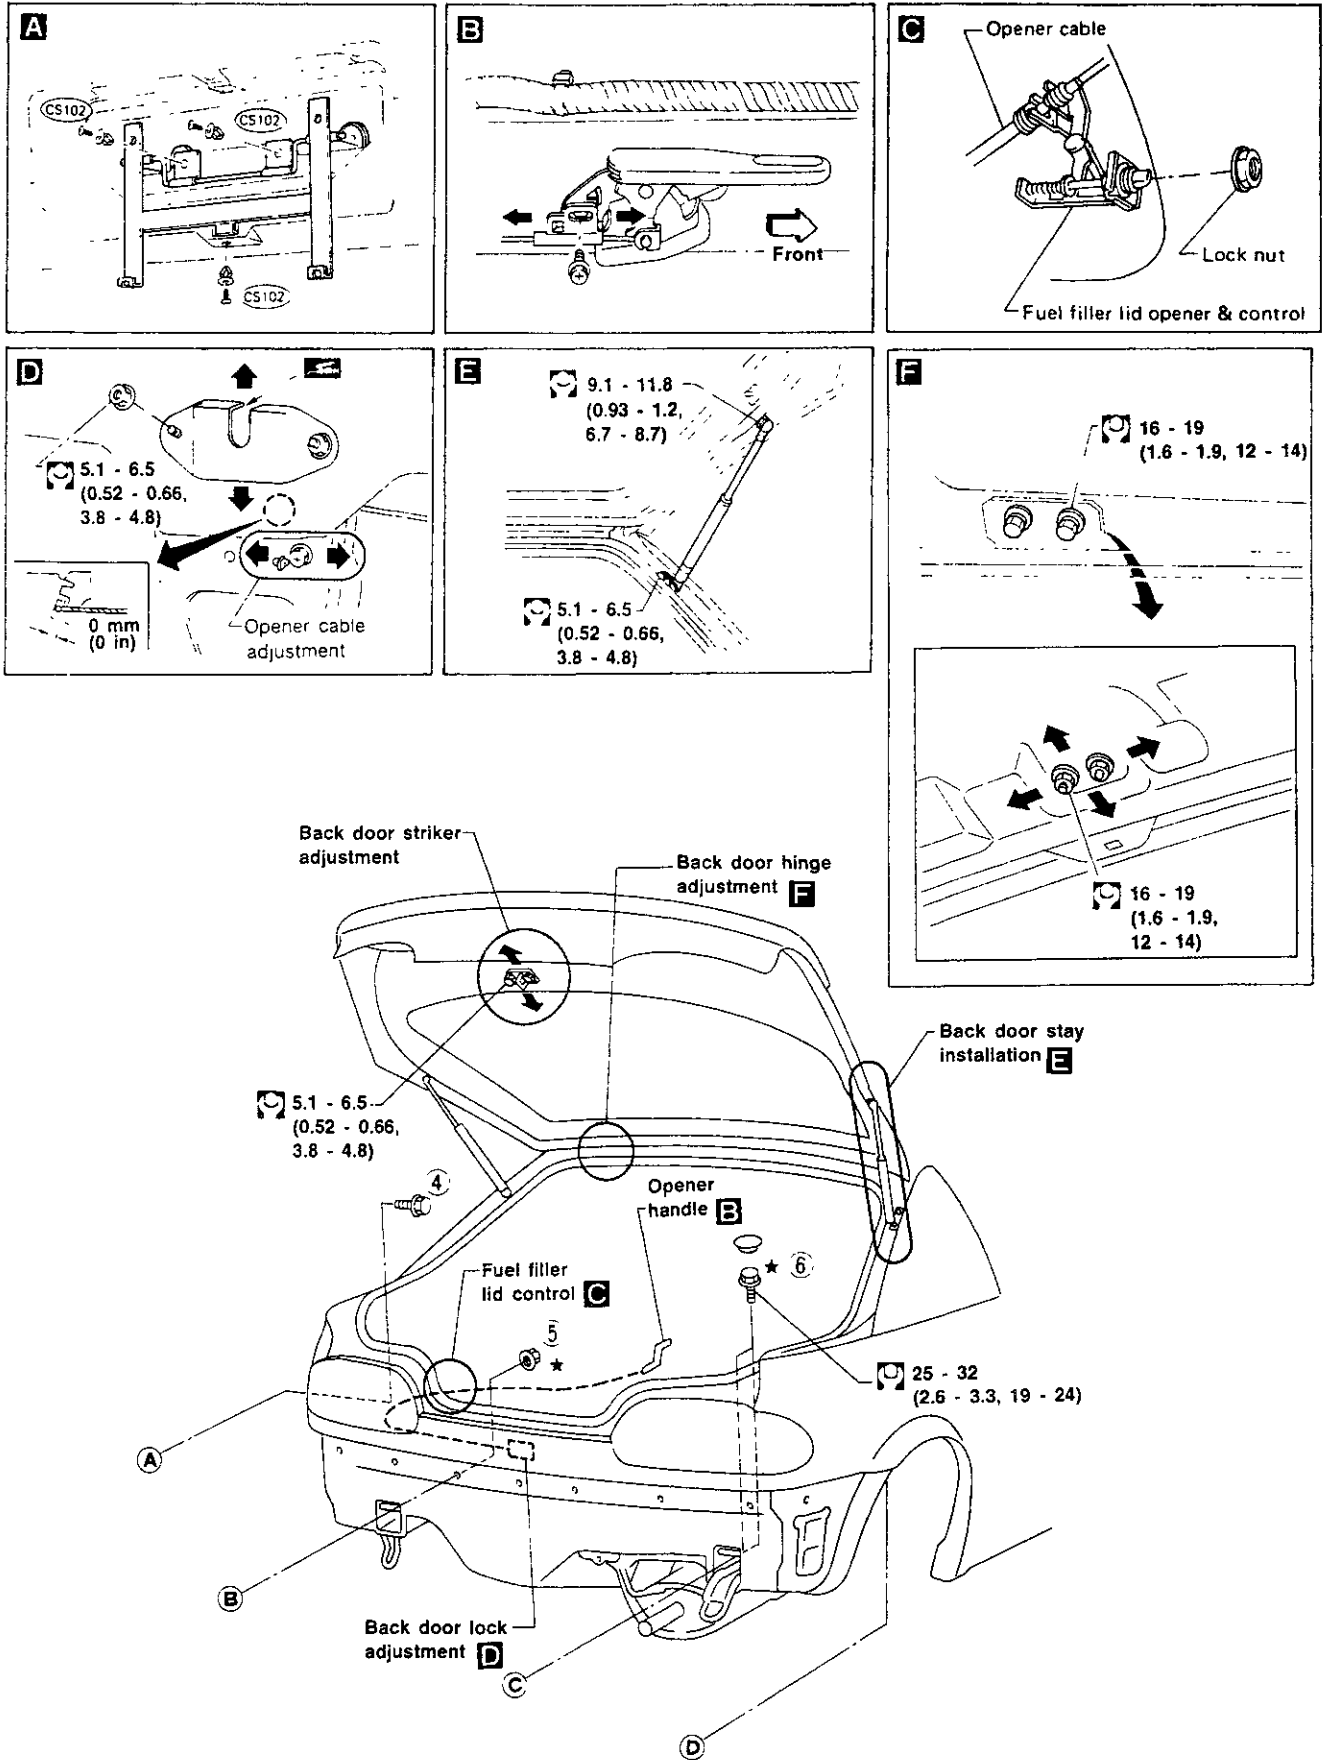

MBF271A








BODY END

Body Rear End and Opener (Cont'd)

N14 5-DOOR HATCHBACK AND 3-DOOR HATCHBACK


REMOVAL — Rear bumper assembly

- ① Remove the two screws from lower side of each side bumper.
- ② Remove screws securing wheelarch to each side bumper.
- ③ Working inside luggage room, remove left and right plugs from floor, then remove the four bolts.
- ④ Extract bumper assembly.
- ⑤ Disassemble fascia and reinforcement.

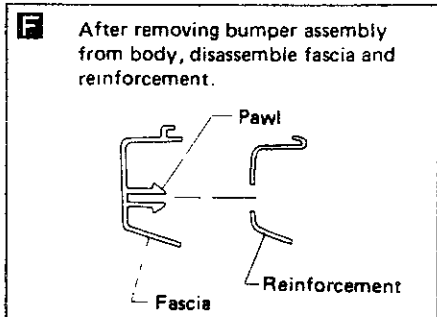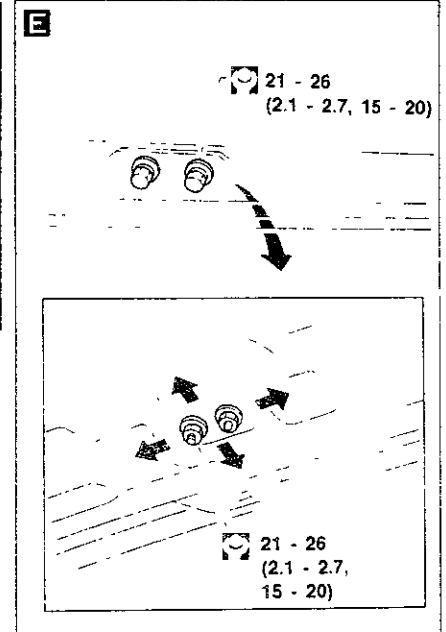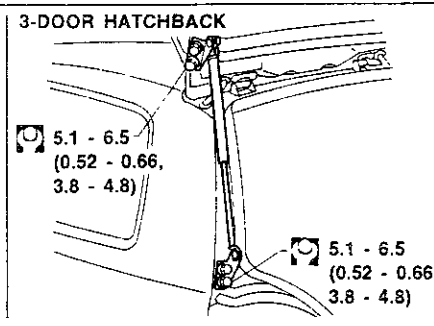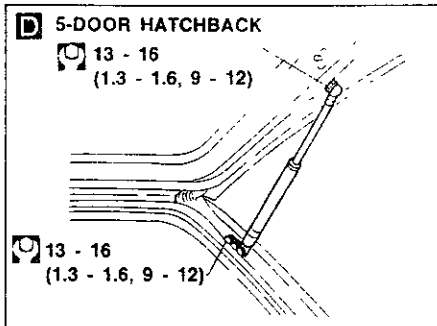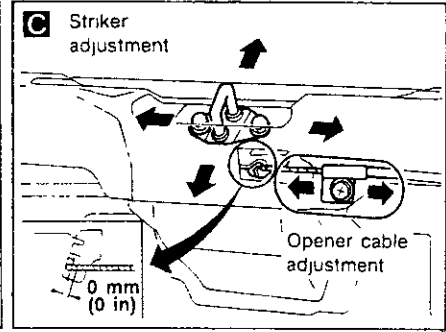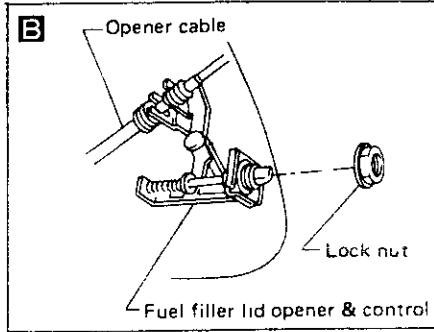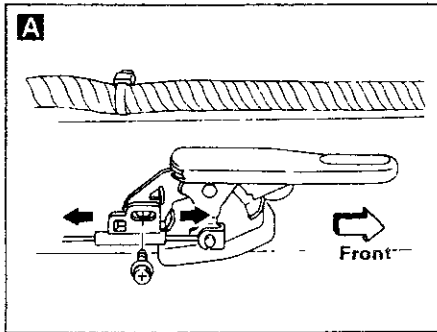

BODY END

Body Rear End and Opener (Cont'd)

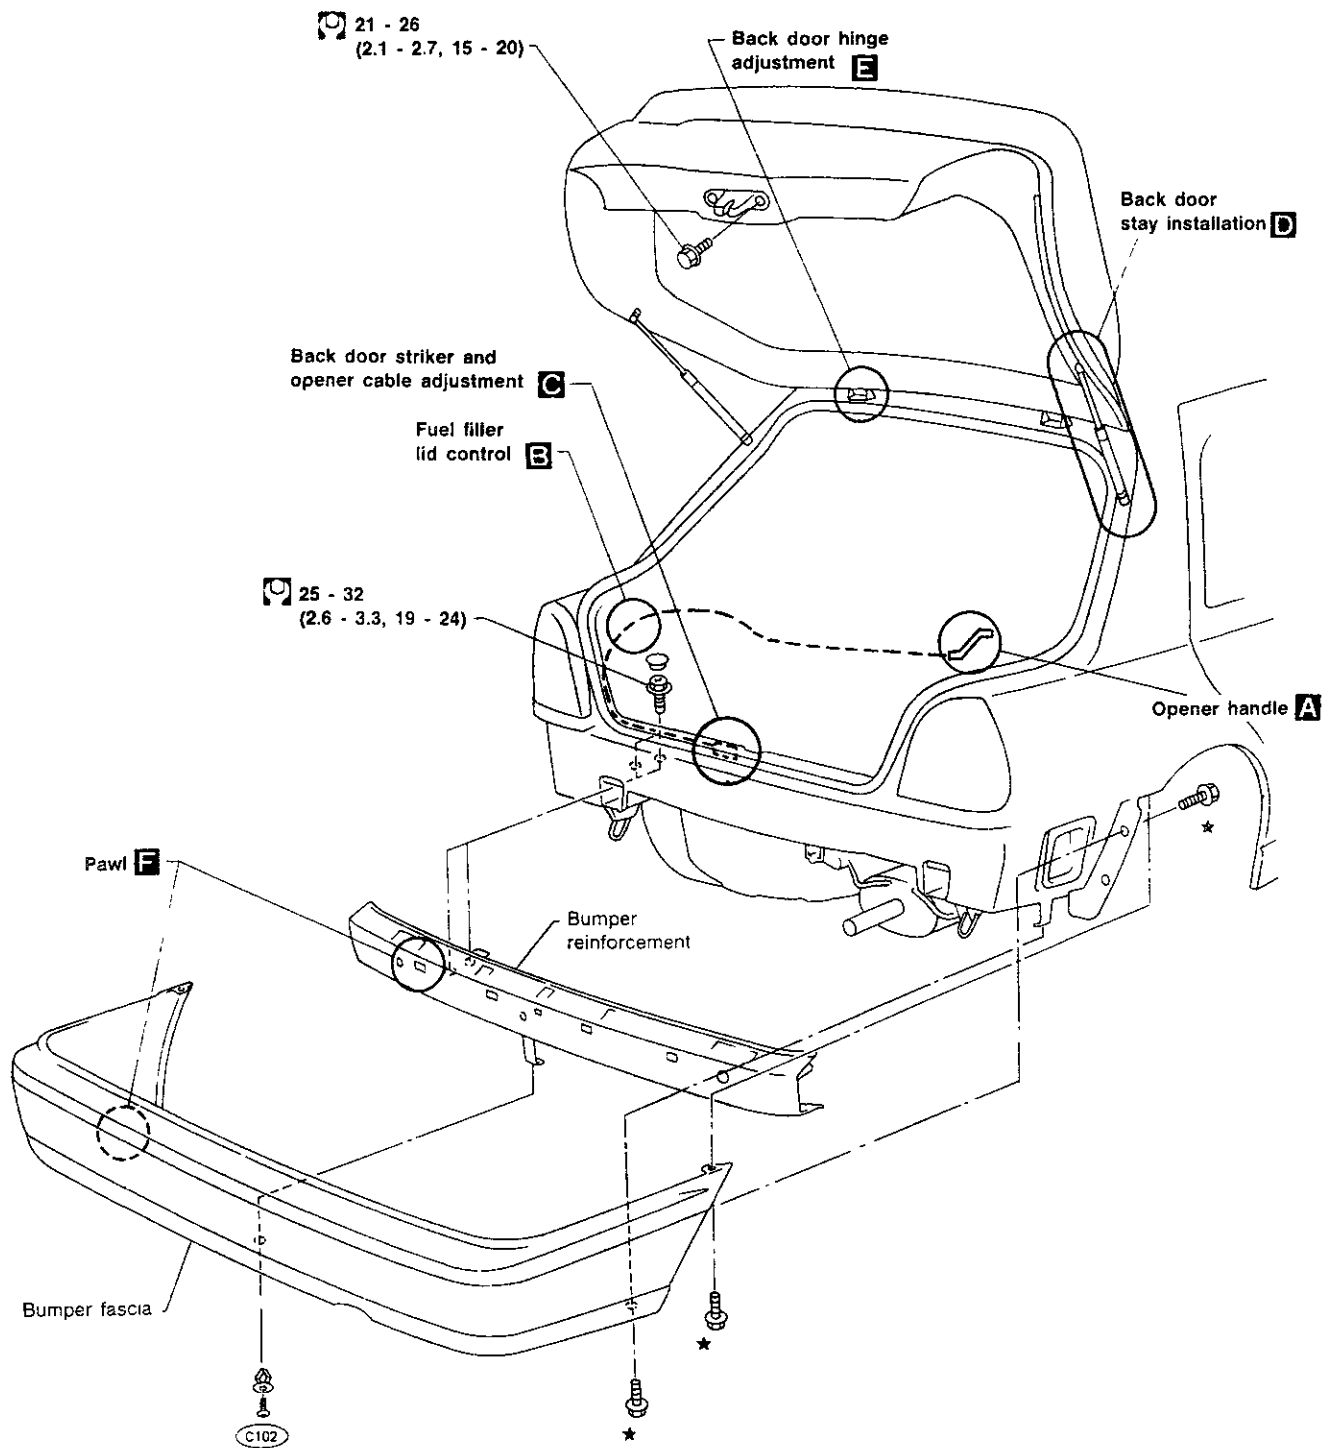

: N•m (kg-m, ft-lb)




MBF272A

Front Door



B13 SEDAN

N14 SEDAN AND 5-DOOR HATCHBACK

- When removing door, be sure not to scratch vehicle body.
- After adjusting door or door lock, check door lock operation.

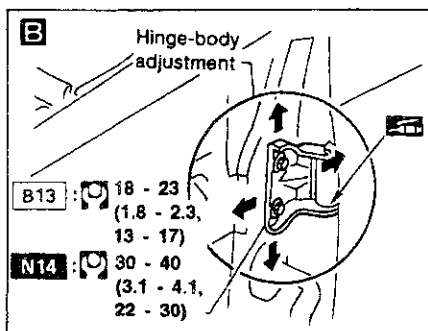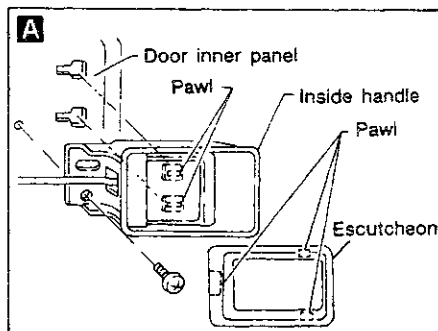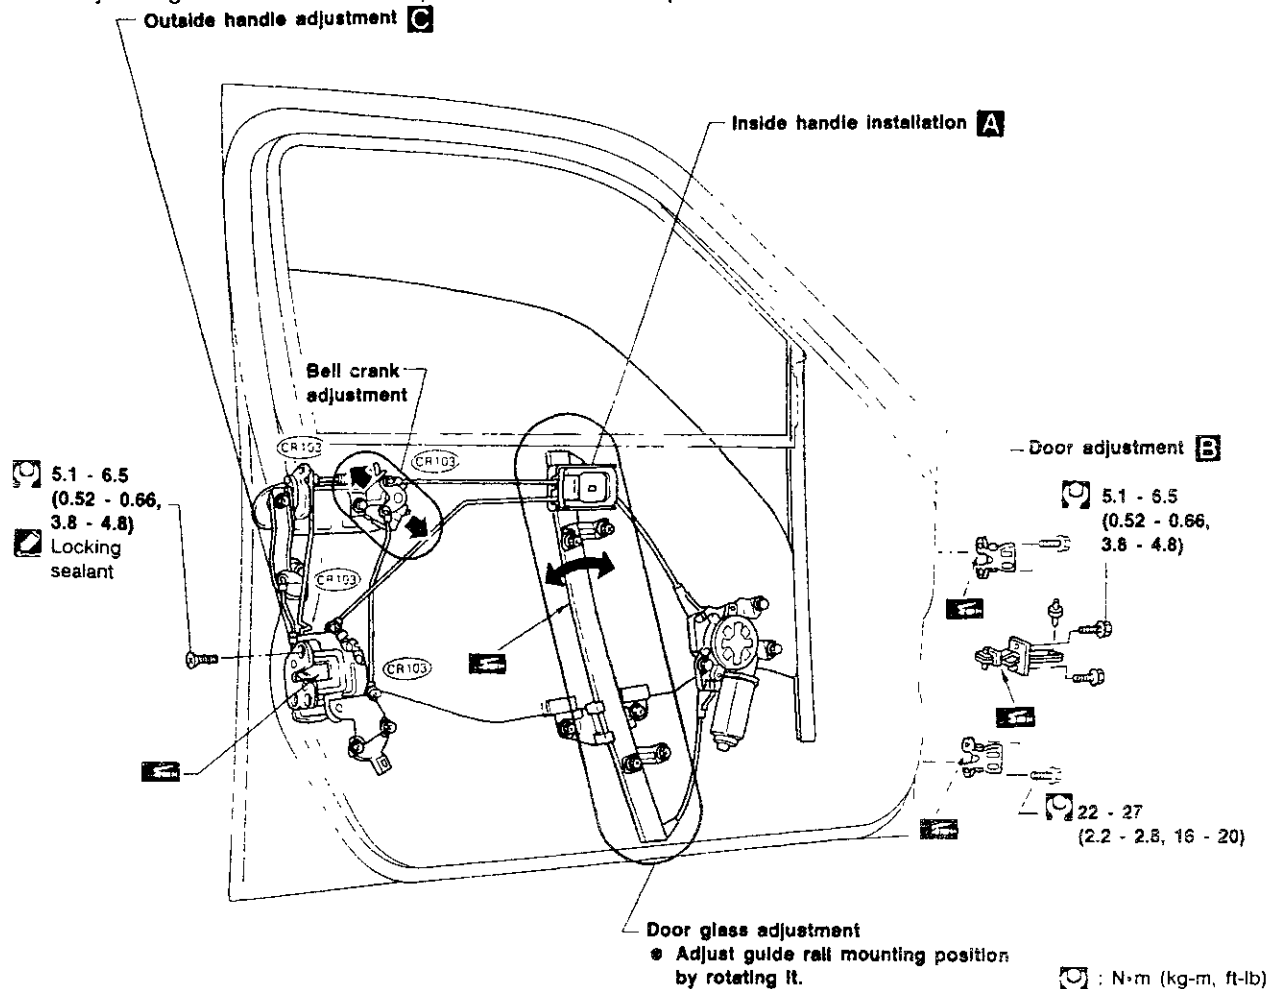

Striker adjustment


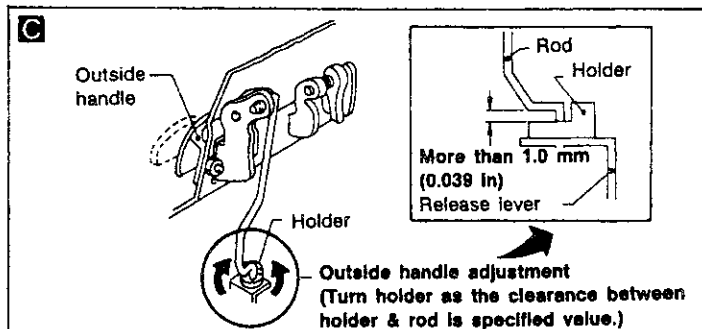
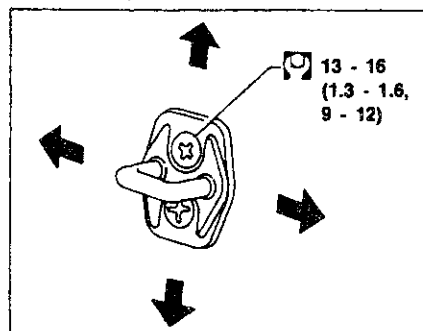


DOOR




Rear Door

B13 SEDAN

N14 SEDAN AND 5-DOOR HATCHBACK

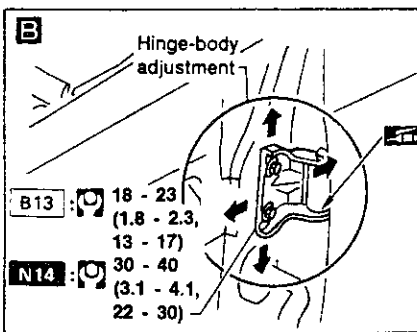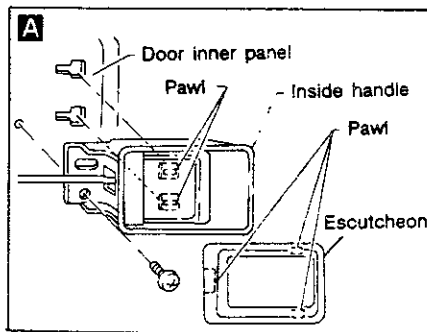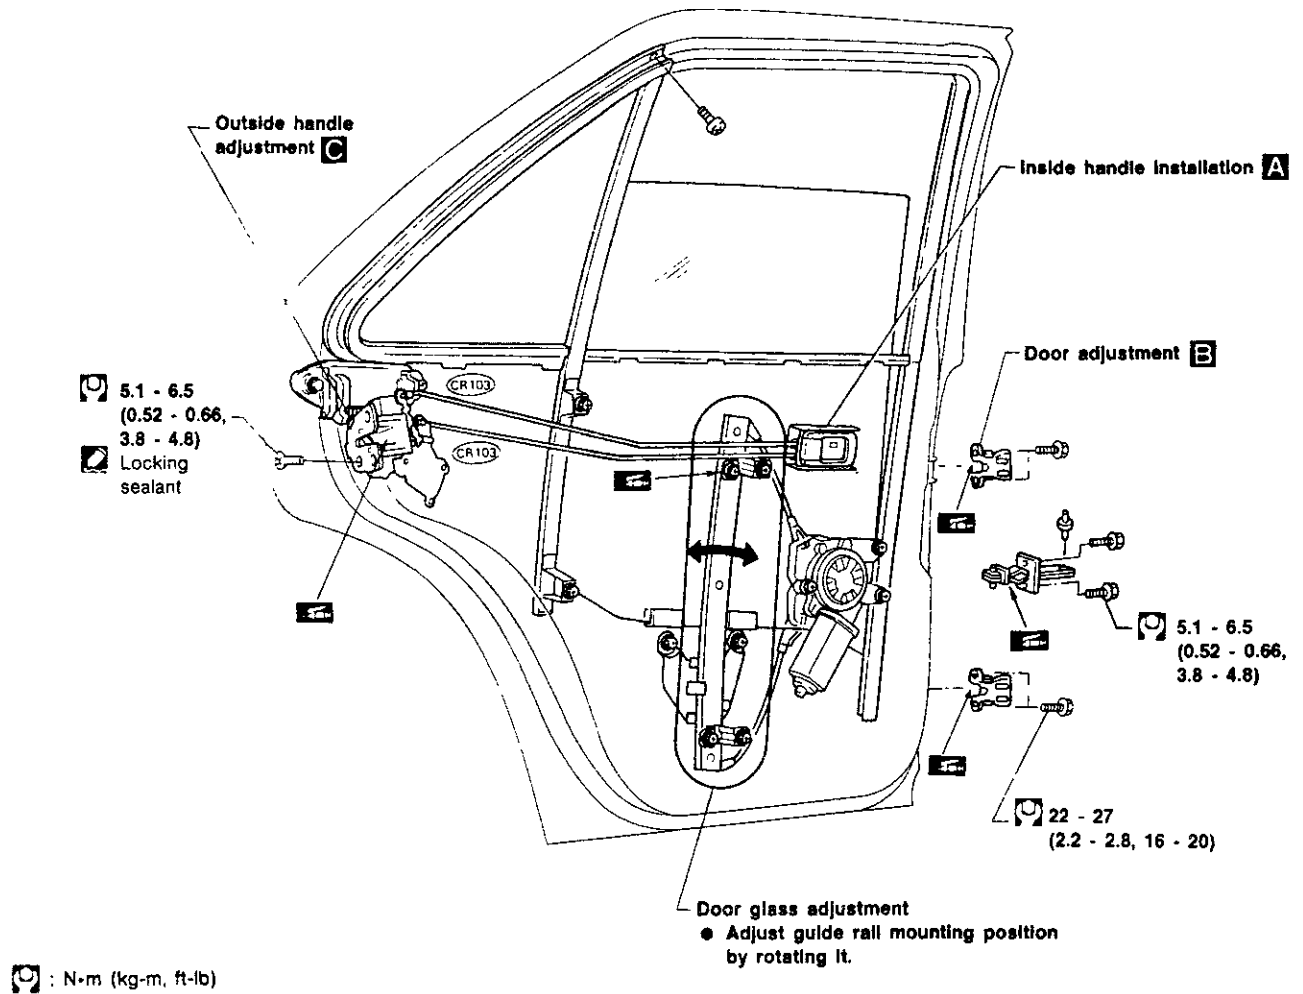

Striker adjustment

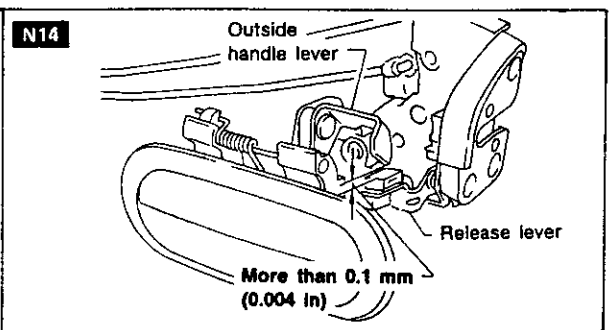
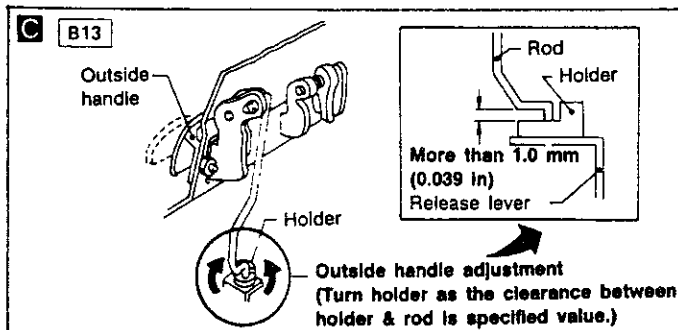
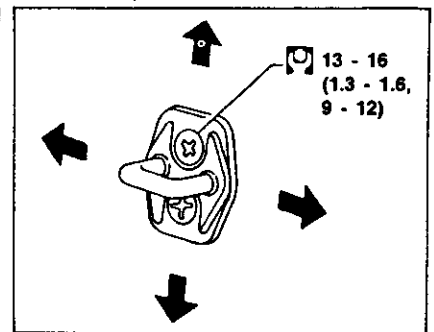


MBF274AB



DOOR

Front Door

N14 3-DOOR HATCHBACK

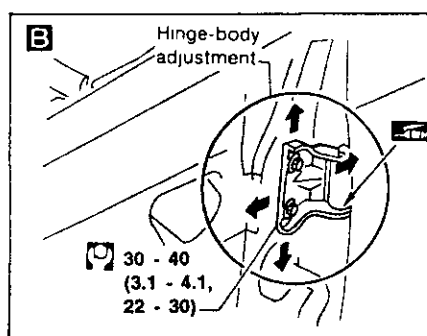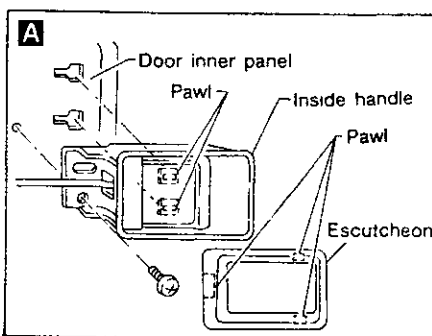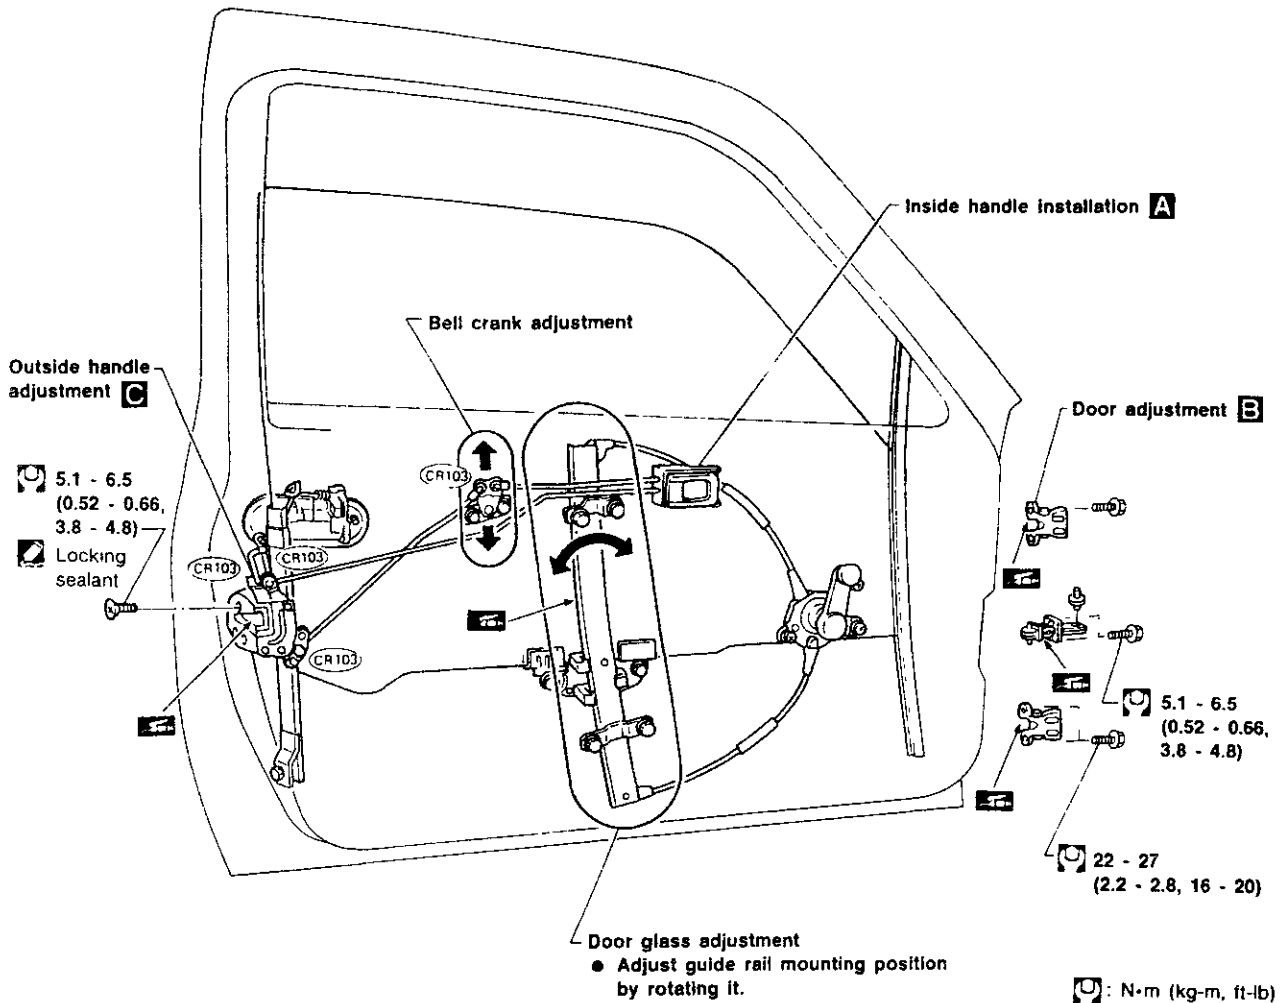

Striker adjustment

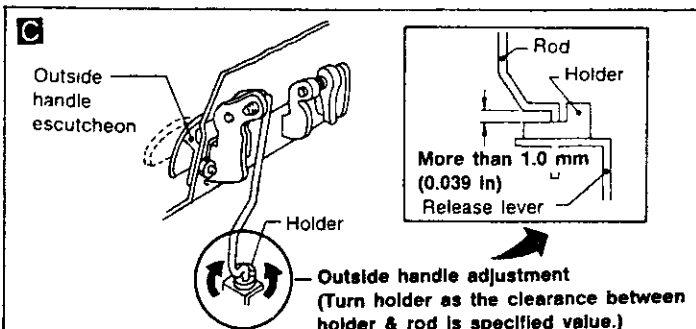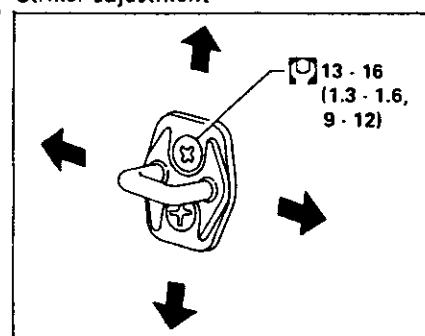


MBF276AA



DOOR

Front Door (Cont'd)



B13 COUPE

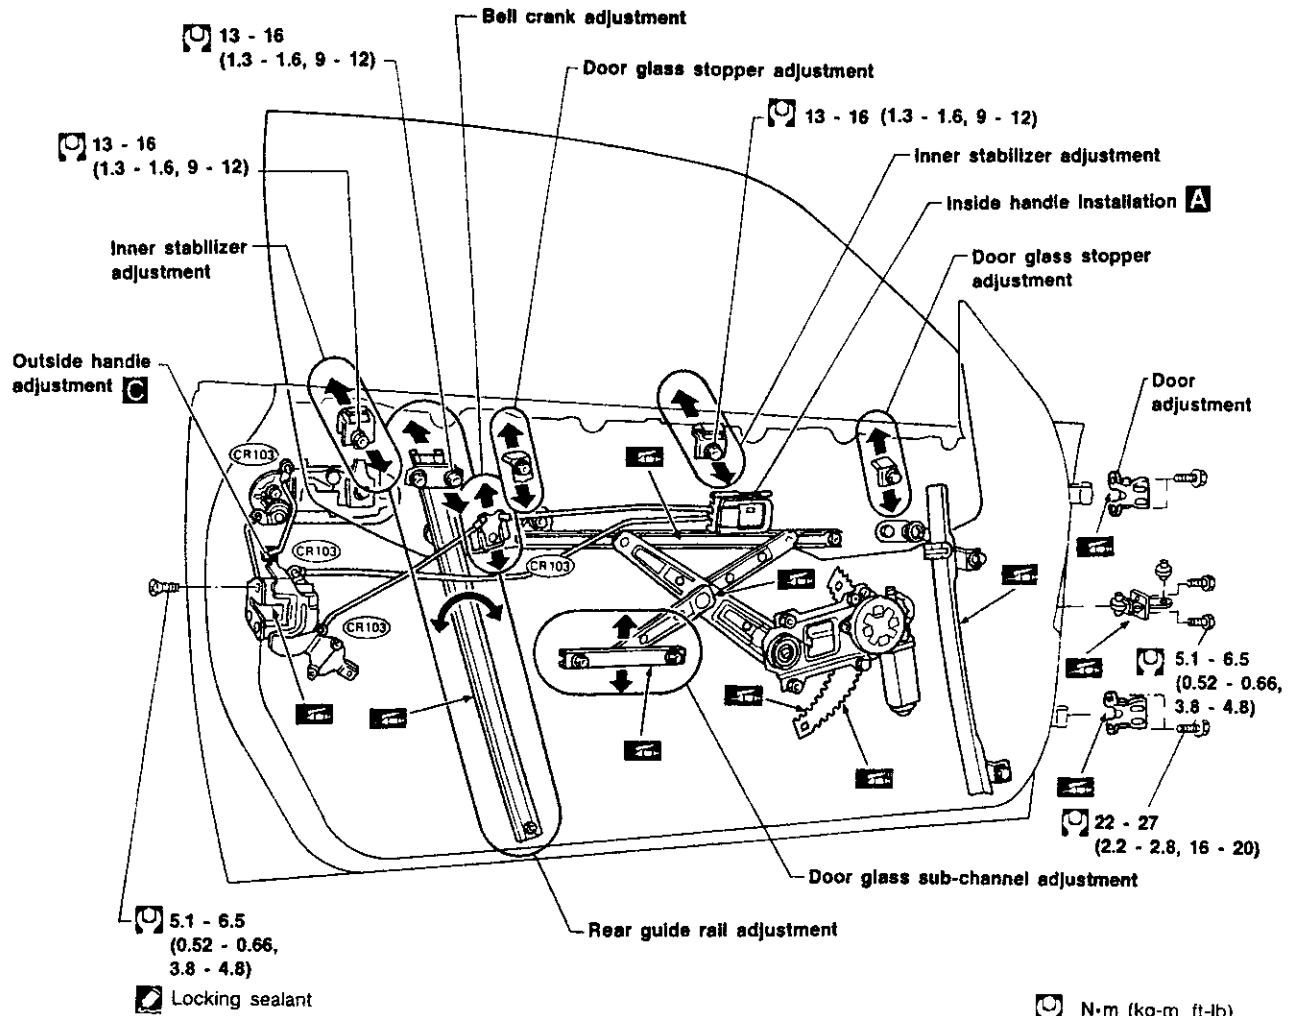

N·m (kg·m, ft·lb)

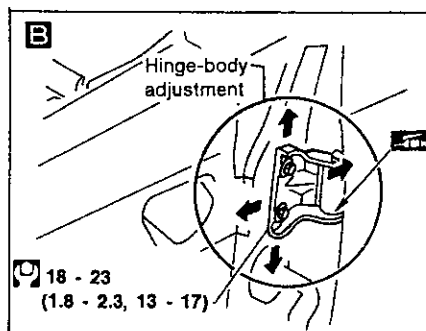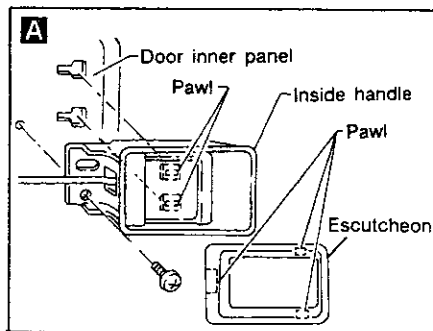

Striker adjustment

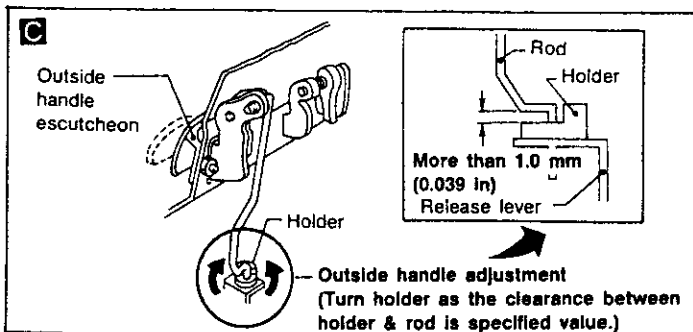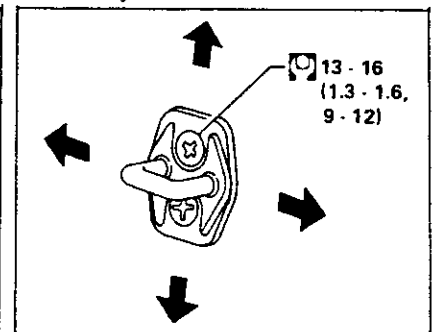


MBF275AA

DOOR

Front Door (Cont'd)

- When removing and installing the door glass, remove the door outside molding. (For the removal and installation procedure, refer to "Exterior".)
- When adjusting the door glass, it is not necessary to remove the door outside molding.
- The outer stabilizer is an integral part of the door outside molding. It can neither be removed nor adjusted.

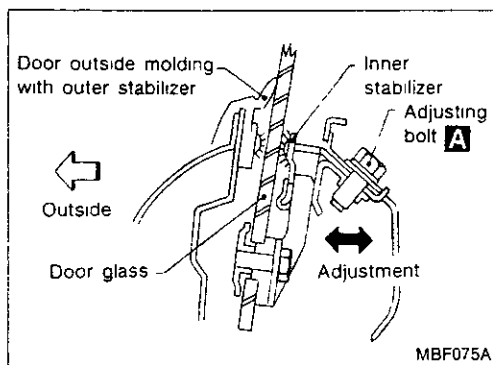


DOOR GLASS ADJUSTMENT

1. Inner stabilizer adjustment

- a. Set door glass in fully raised (closed) position.
- b. Lightly press door glass upper end outward so that glass outer surface contacts outer stabilizer. With glass held in that position, press inner stabilizer to glass inner surface and tighten adjusting bolt **A**.

CAUTION:

Make sure nap portions of stabilizers are clean and free from oil, grease, etc.

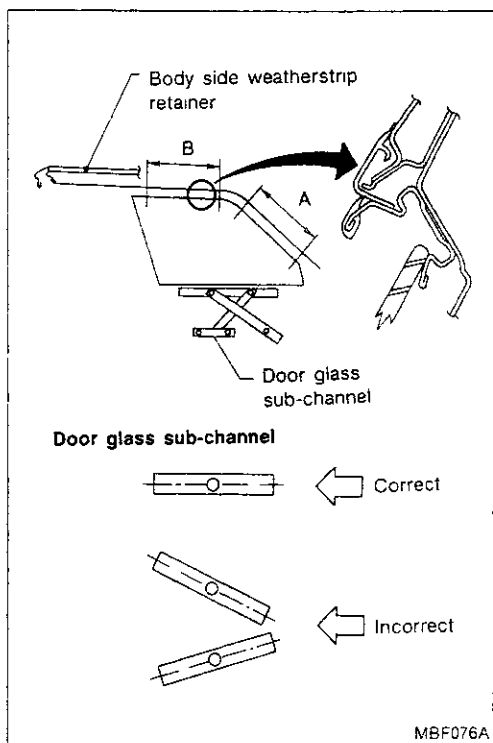

2. Door glass sub-channel adjustment

Adjust door glass sub-channel until clearances A and B match body side weatherstrip retainer.

CAUTION:

- Make sure door glass sub-channel is horizontal.
- Adjust clearances A and B simultaneously when adjusting guide rail (described under "5. Guide Rail Adjustment").

DOOR

Front Door (Cont'd)

3. Guide rail adjustment


- Adjust rear adjusting bolt until door glass lightly contacts body side weatherstrip retainer at "A". From that position, turn adjusting bolt approximately two rotations counter-clockwise.

CAUTION:

- Turn adjusting bolt clockwise to move door glass upper end outward.
 - Turn adjusting bolt counterclockwise to move door glass upper end inward.
- After adjusting guide rail, turn front adjusting bolt until its flange lightly contacts inner panel and tighten lock nut.

CAUTION:

Make sure both adjusting bolts protrude equally ($A = B$).

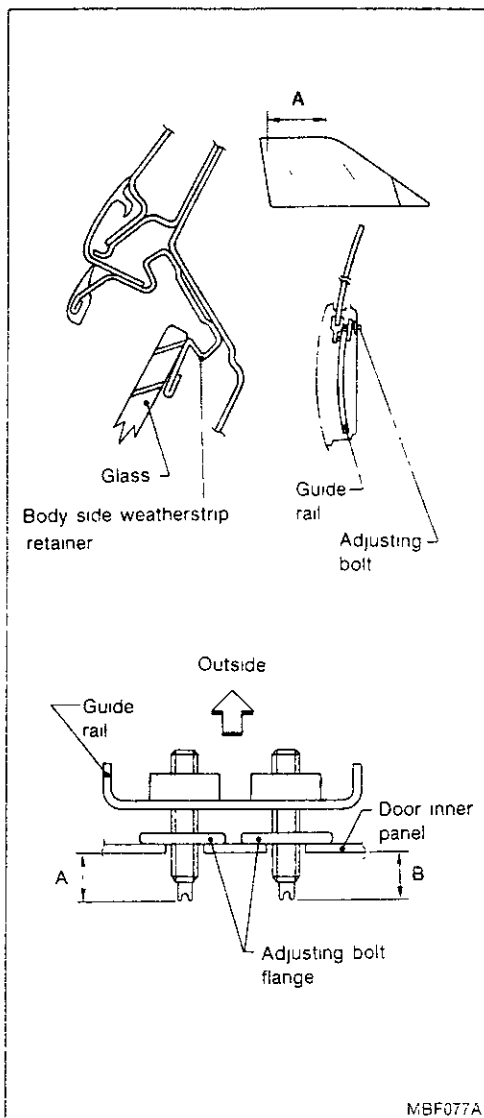


4. Glass upper end adjustment

- Adjust inner stabilizer stopper height until door glass upper end clearance is as shown in figure at left, and tighten lock nut.
- Make sure door glass stopper is in contact with door panel stopper during adjustment.


CAUTION:

Make sure front and rear stoppers are in contact with their mating stoppers when body side weatherstrip is parallel to door glass upper end. If not, adjust door glass sub-channel. (Refer to "2. Door glass sub-channel adjustment".)

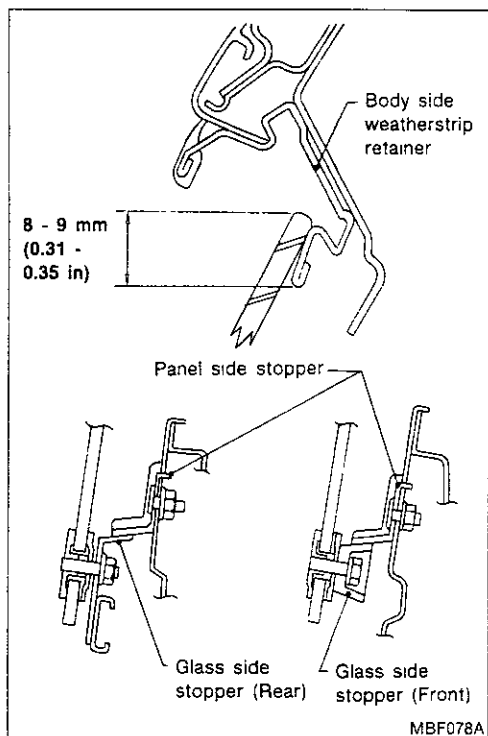

DOOR

Front Door (Cont'd)

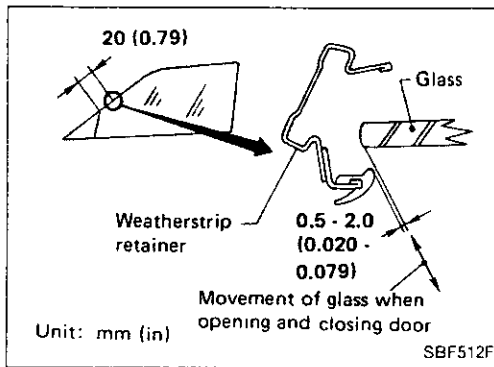


5. Guide rail adjustment ②

- Adjust the guide rail so that the clearance between the upper end of the glass and weatherstrip retainer is 0.5 to 2.0 mm (0.020 to 0.079 in), 20 mm (0.79 in) from the end of the weatherstrip in the door corner.
- After adjustment, open and close the door several times to confirm that the outer periphery of the glass will not contact the weatherstrip retainer. If any contact occurs, perform the adjustment as mentioned in "2. Door glass sub-channel adjustment" again.

CAUTION:


Do not allow the adjusting bolt to rotate when loosening the guide rail lock nut.

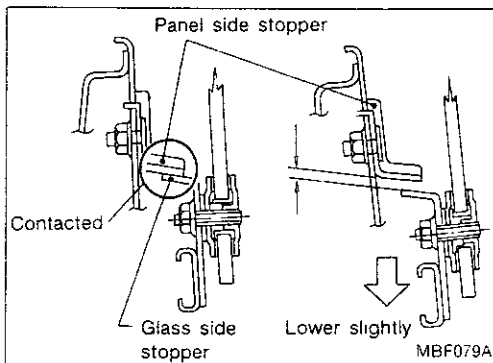

- Lower the glass slightly until the glass side stopper comes off the panel side stopper.

CAUTION:

Do not lower the glass excessively.

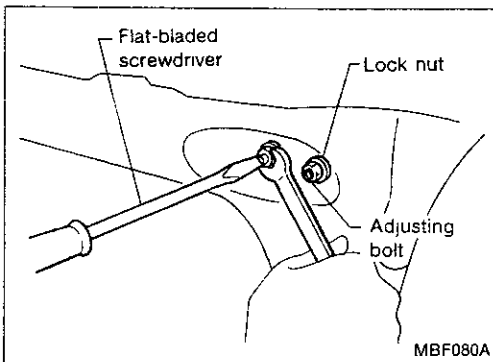

- After completing door glass adjustment, retighten all lock nuts.

CAUTION:

While tightening lock nuts, hold adjusting bolts using a standard screwdriver to prevent them from turning.

DOOR


NOTE

DOOR

Power Window and Power Door Lock


WIRING DIAGRAM

B13 SEDAN L.H. drive models

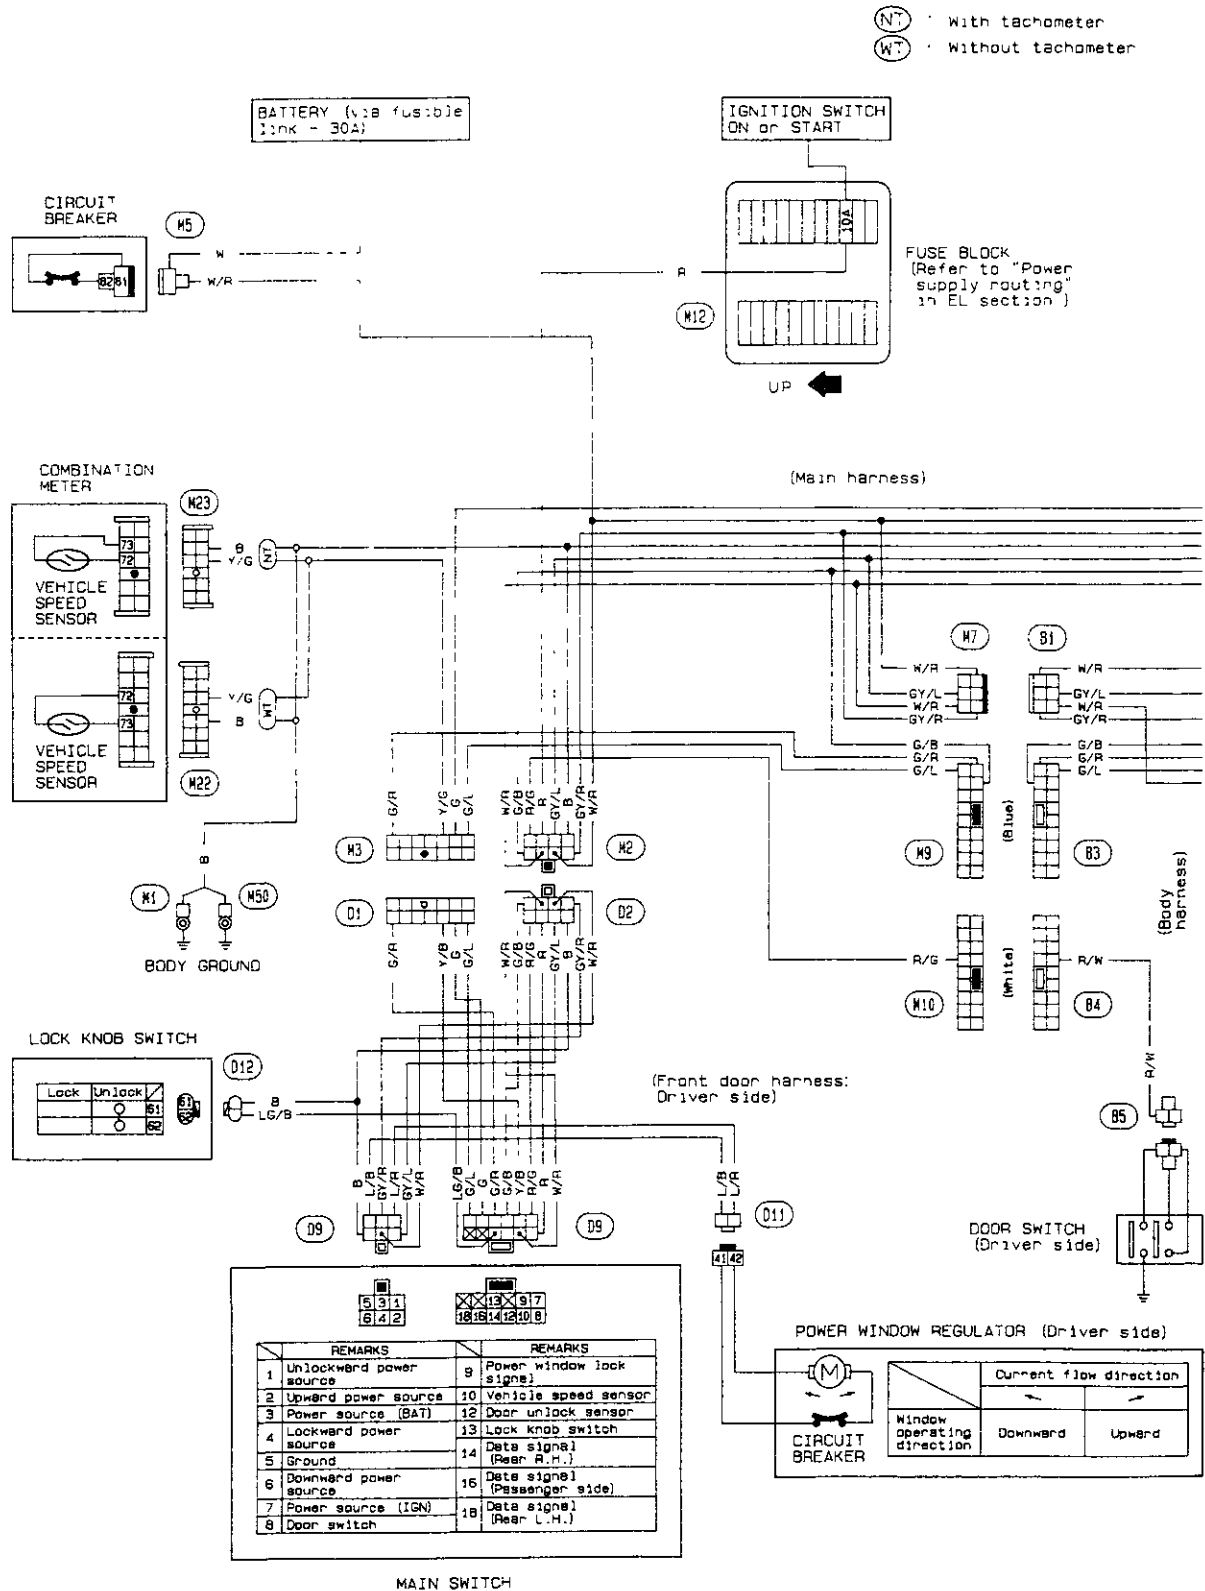

DOOR

Power Window and Power Door Lock (Cont'd)

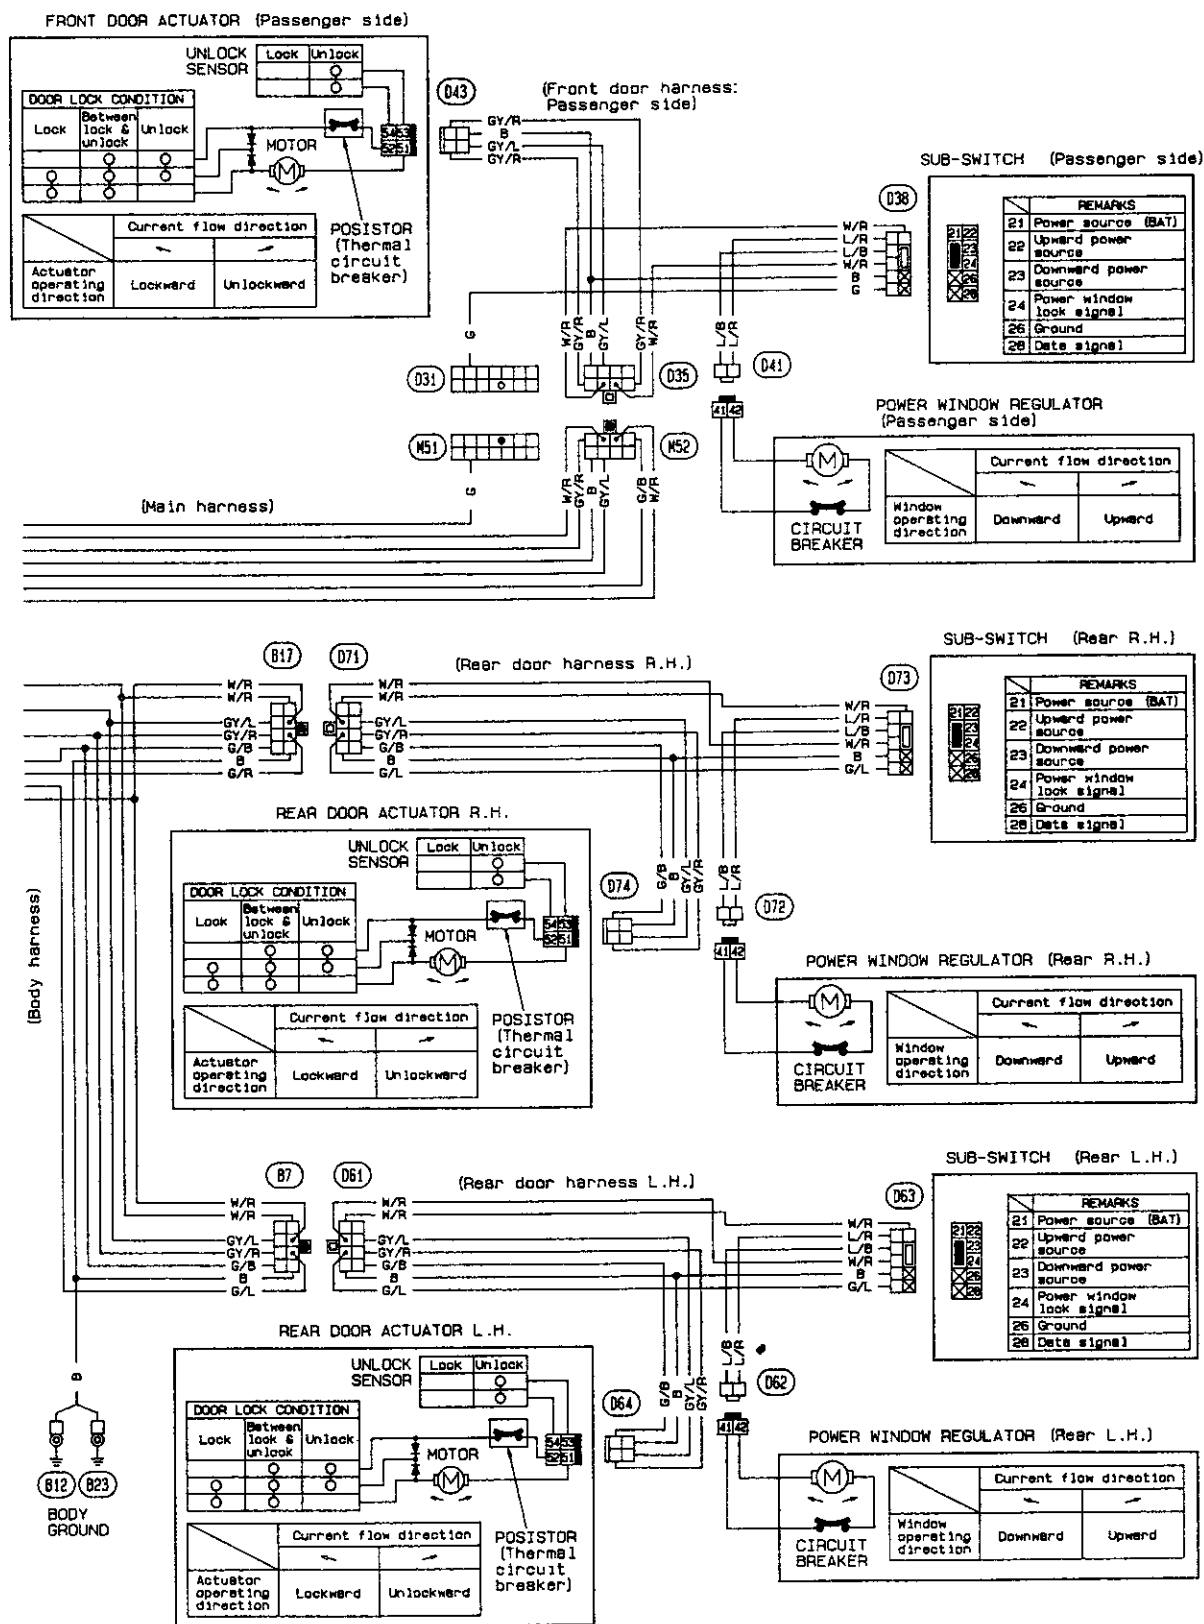


SBF075G

DOOR

Power Window and Power Door Lock (Cont'd)


WIRING DIAGRAM

B13 SEDAN R.H. drive models

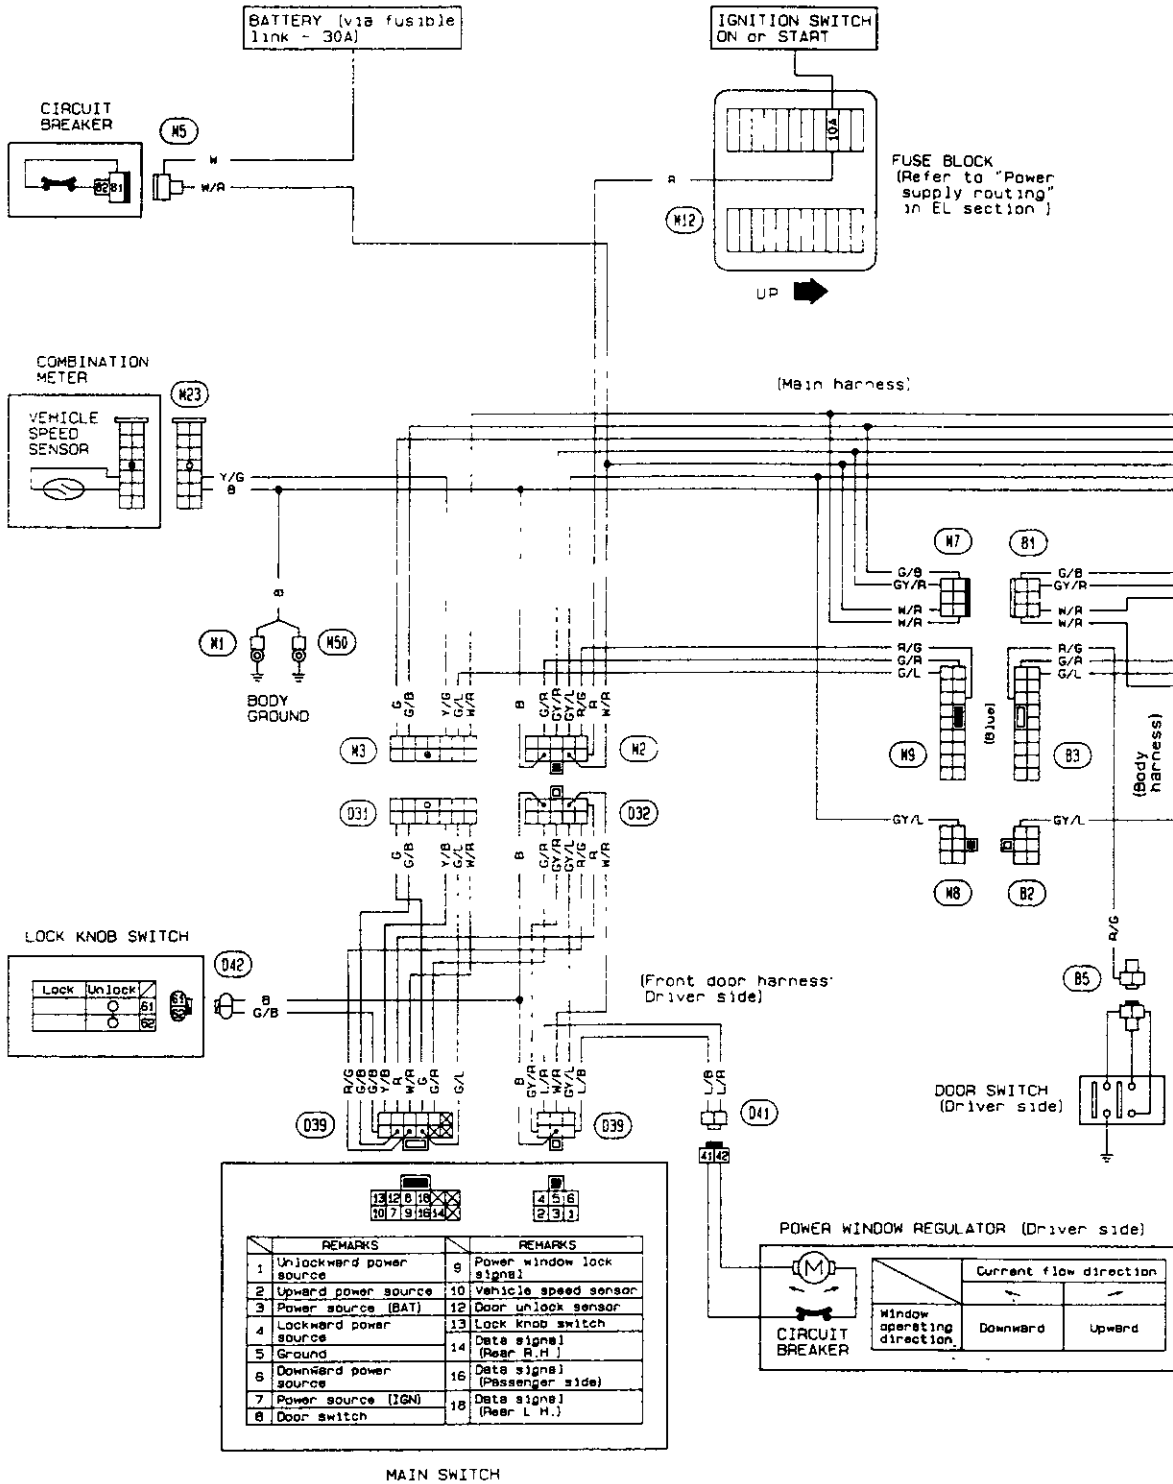

DOOR

Power Window and Power Door Lock (Cont'd)

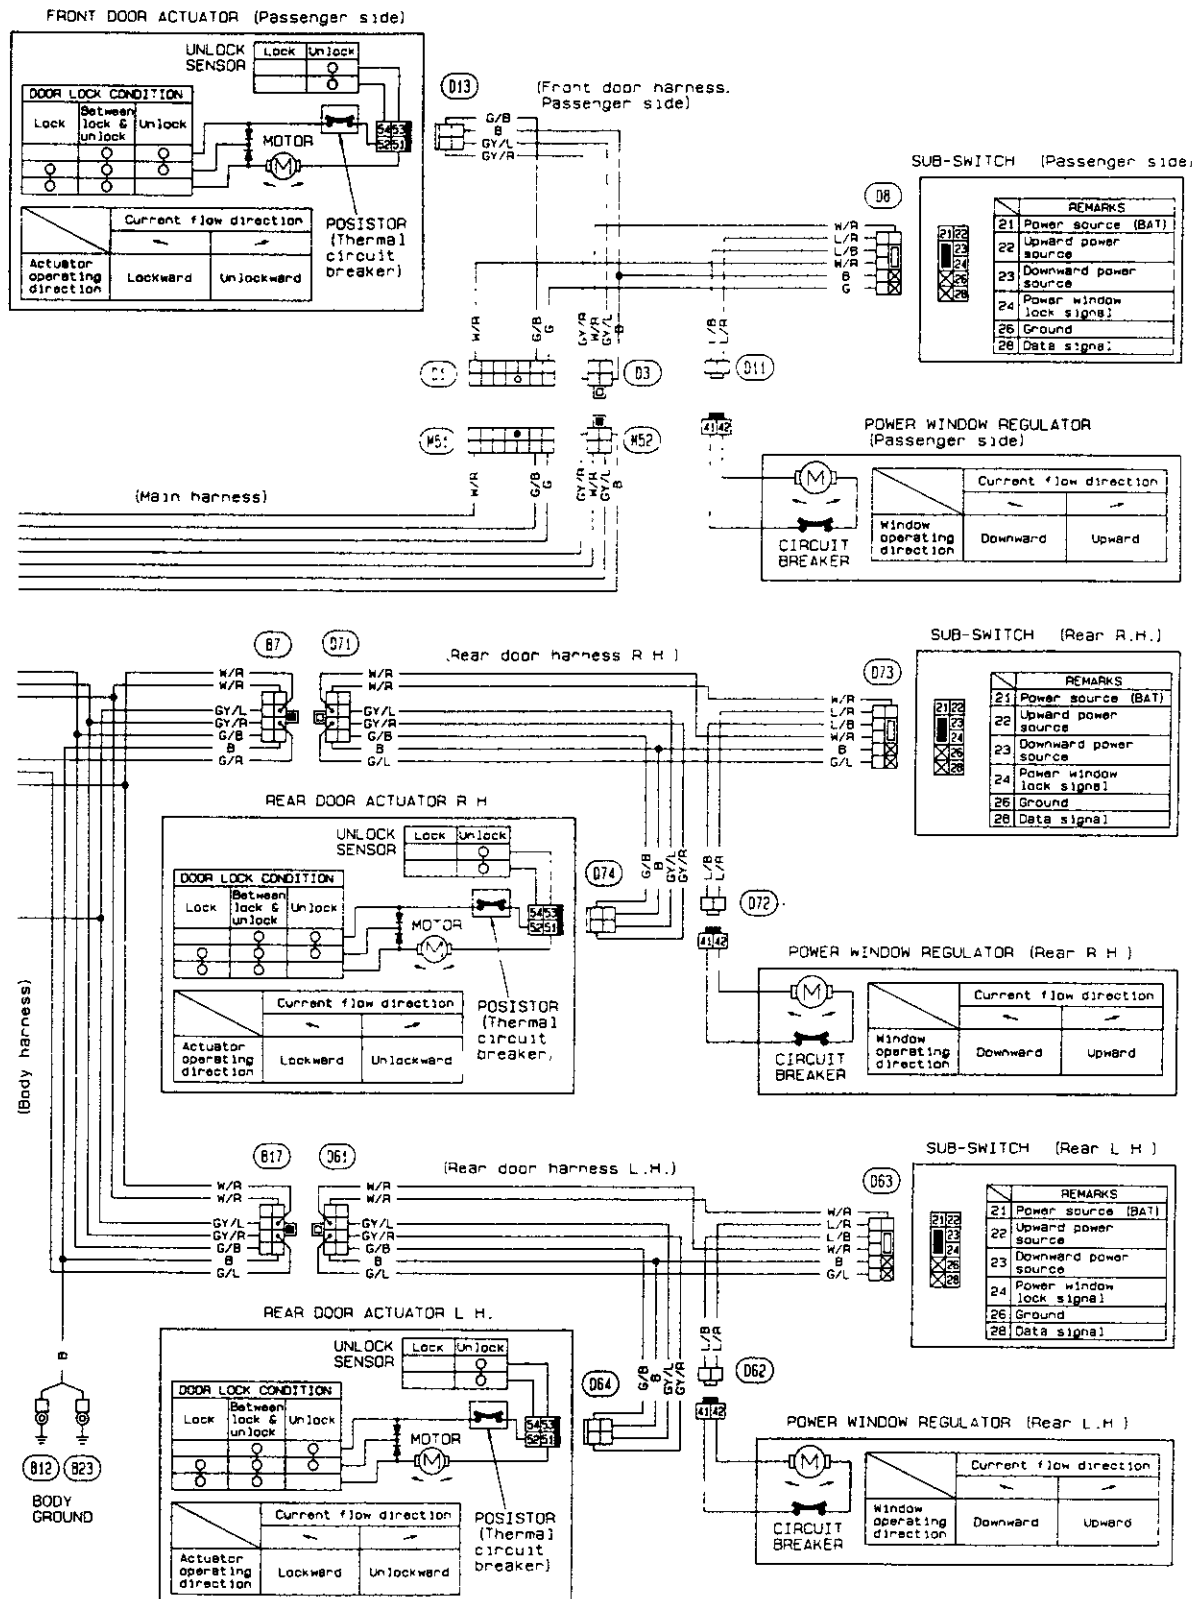


SBF688F

DOOR

Power Window and Power Door Lock (Cont'd)


WIRING DIAGRAM

B13 COUPE L.H. drive models

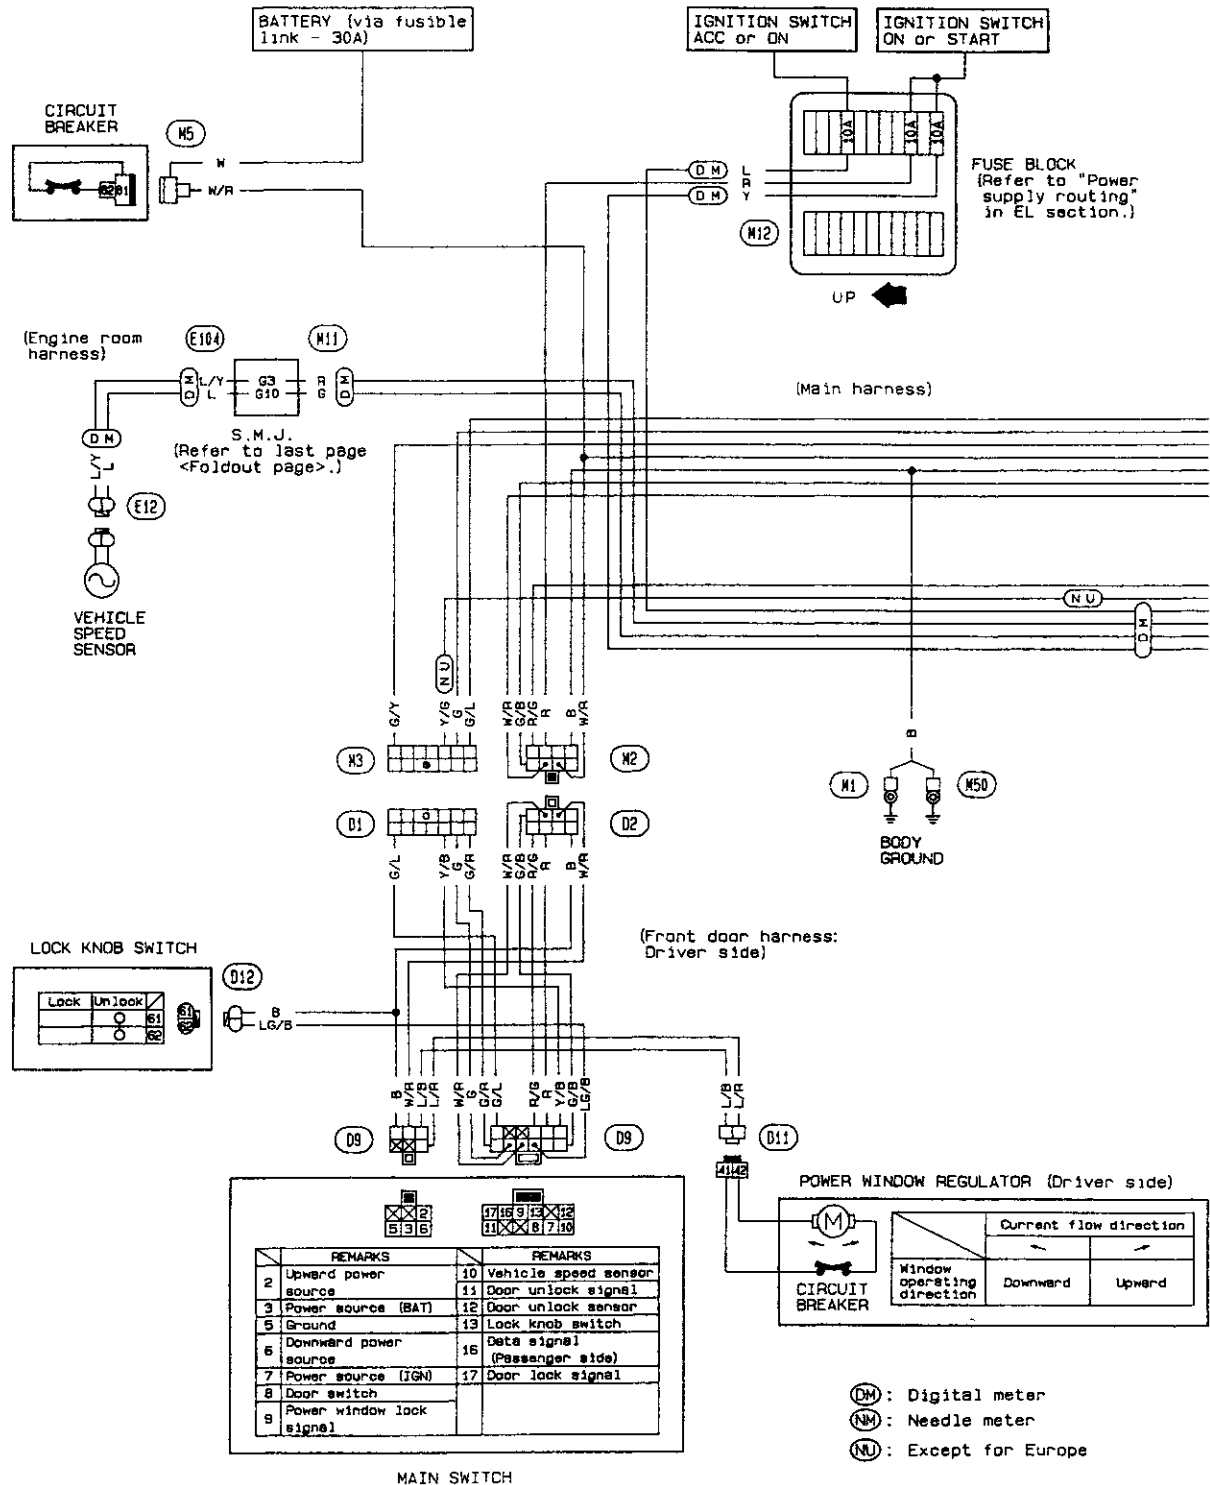

DOOR

Power Window and Power Door Lock (Cont'd)

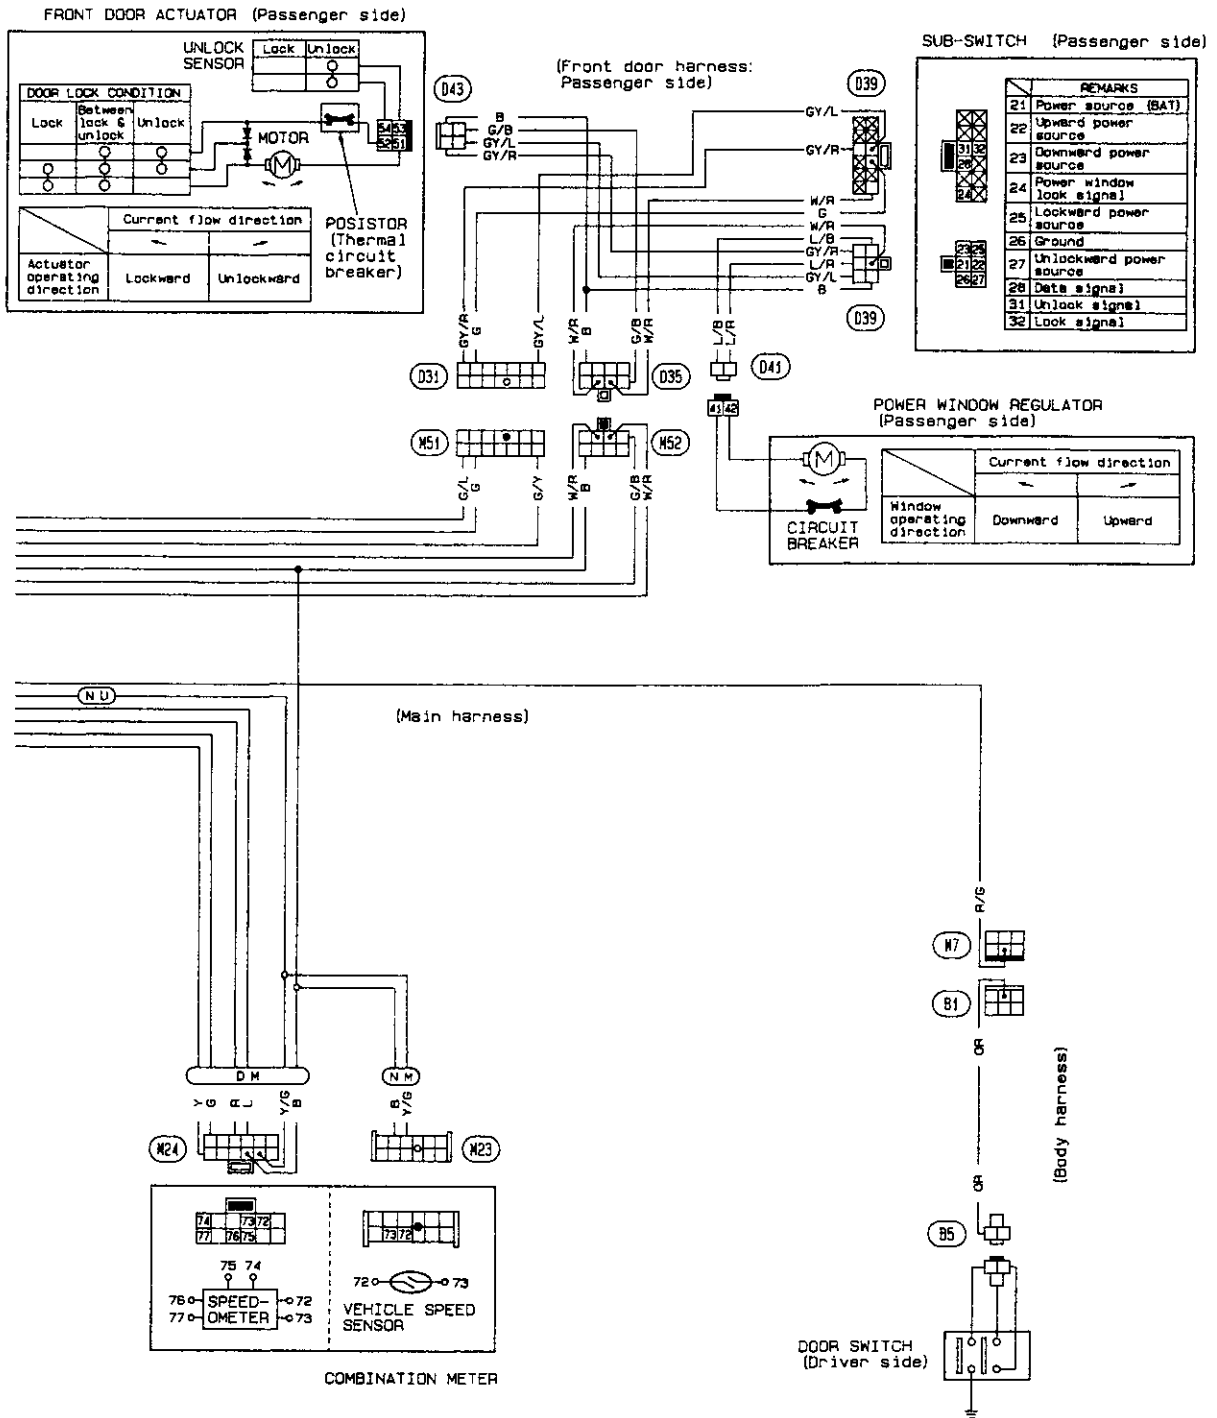


DOOR

Power Window and Power Door Lock (Cont'd)


WIRING DIAGRAM

B13 COUPE R.H. drive models.

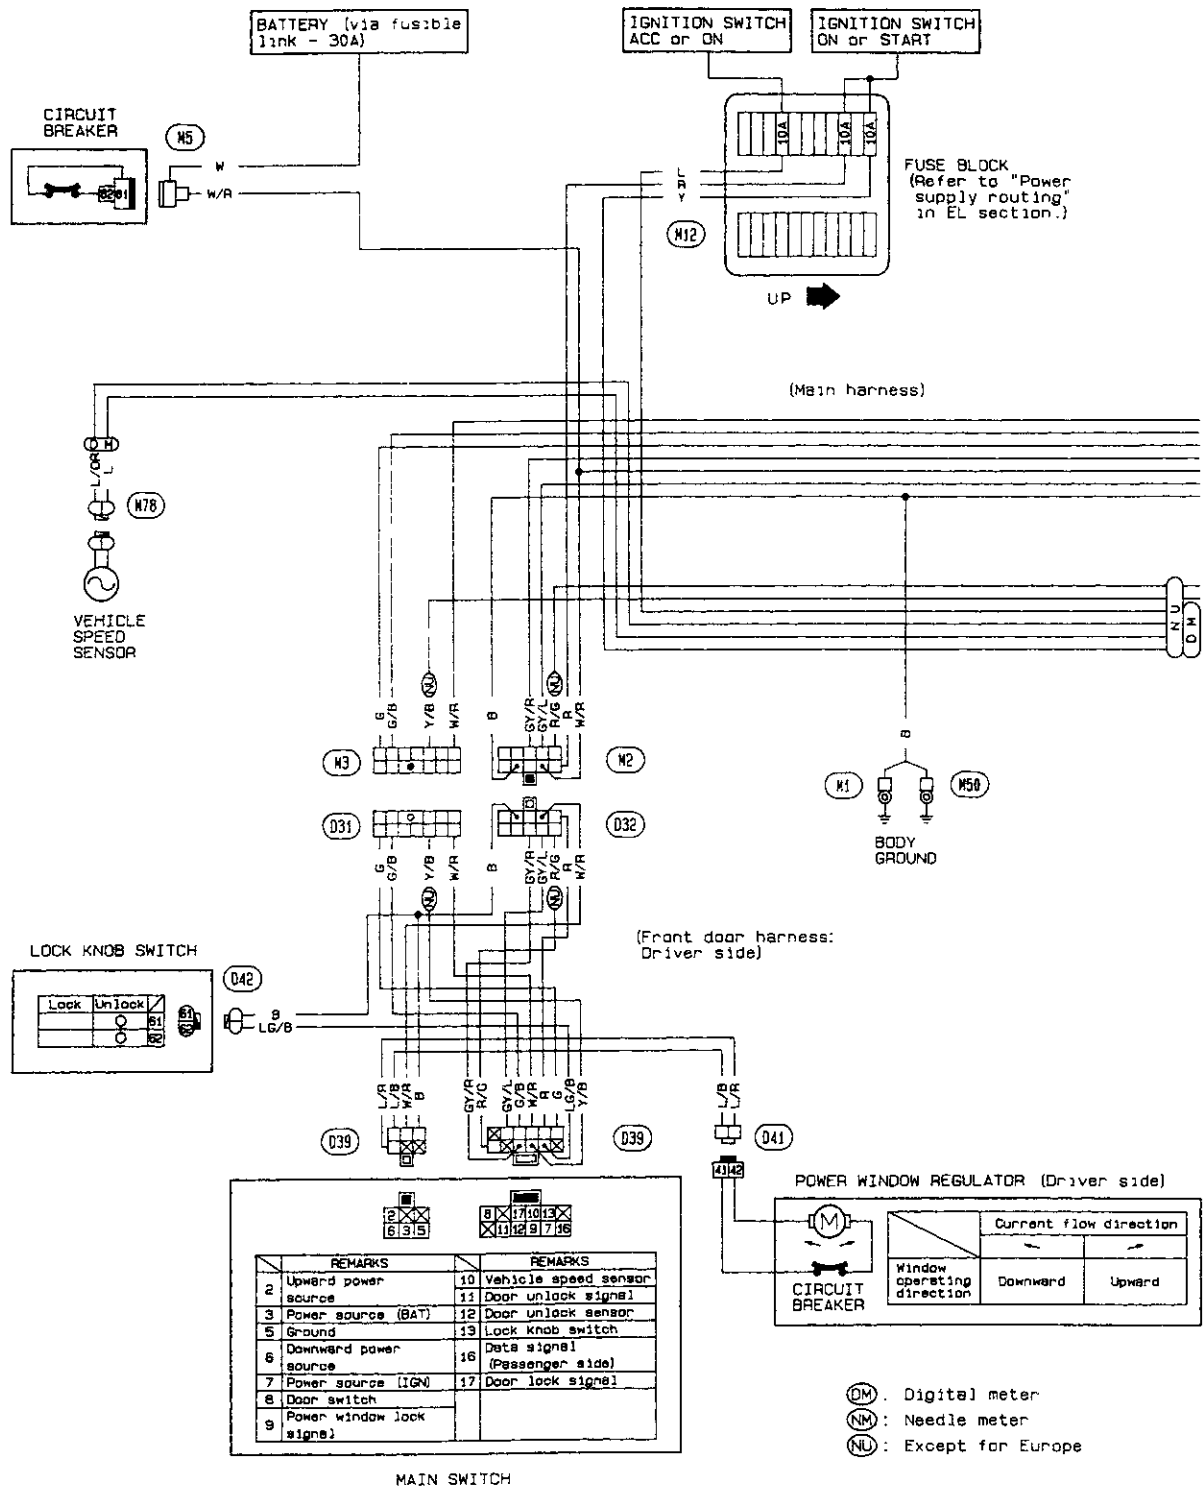

DOOR

Power Window and Power Door Lock (Cont'd)

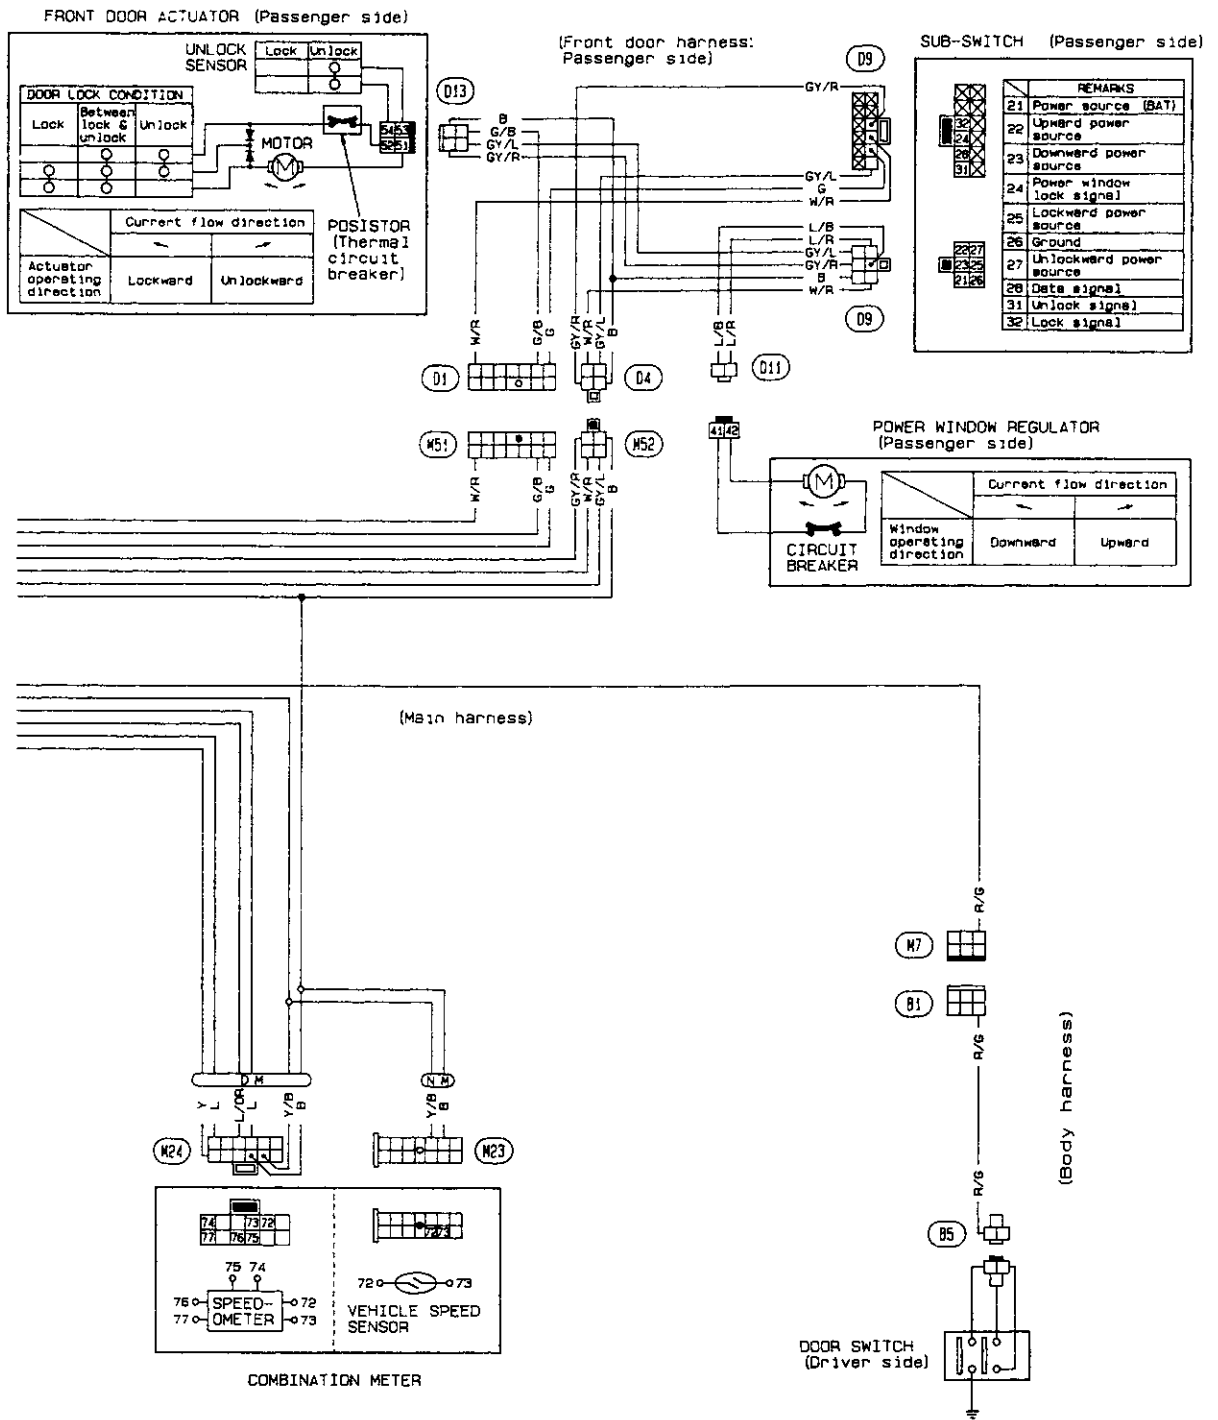

Power Window and Power Door Lock (Cont'd)

N14



Power Window and Power Door Lock (Cont'd)



Contents

Symptom Chart	BF-37
Main Power Supply and Ground Circuit Check	BF-38
Harness Layout	BF-39
Circuit Diagram for Quick Pinpoint Check	BF-40
Diagnostic Procedure 1 (Except Coupe)	
41(Check door lock operation circuit.)	BF-43
Diagnostic Procedure 2 (Coupe)	
(Check door lock operation circuit.)	BF-44
Diagnostic Procedure 3	
(Check lock knob switch circuit.)	BF-47
Diagnostic Procedure 4 (Except Coupe)	
(Check door lock actuator circuit.)	BF-49
Diagnostic Procedure 5	
(Check driver's side window motor circuit.)	BF-50
Diagnostic Procedure 6	
(Check passenger power window circuit.)	BF-51
Diagnostic Procedure 7	
(Check power window lock signal circuit.)	BF-52
Diagnostic Procedure 8	
(Check data line signal circuit.)	BF-53
Diagnostic Procedure 9 (Vehicles equipped with vehicle speed sensor system)	
(Check detecting switch circuit.)	BF-54
Diagnostic Procedure 10 (Vehicles equipped with timer control system)	
(Check driver's side door switch circuit.)	BF-56
Electrical Components Inspection	BF-58

Since left and right component parts are basically the same, harness layout and methods for electrical components inspection are shown for one side only.

Although methods for checking component parts on both sides are described in the flow chart, making it easier to troubleshoot, apply checking procedures to either side that have malfunction during trouble diagnoses.

The following ABBREVIATIONS are used in this Trouble Diagnoses.


- ① : Left-hand drive models
- ② : Right-hand drive models
- ③ : N14 models
- LB : B13 Left-hand drive models
- RB : B13 Right-hand drive models
- LN : N14 Left-hand drive models
- RN : N14 Right-hand drive models
- ④ : B13 Sedan
- ⑤ : B13 Coupe
- LS : B13 Sedan Left-hand drive models
- RS : B13 Sedan Right-hand drive models
- LC : B13 Coupe Left-hand drive models
- RC : B13 Coupe Right-hand drive models
- EC : Except B13 Coupe

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

Symptom Chart

Procedure	Main Power Supply and Ground Circuit Check			Diagnostic Procedure										Electrical Components Inspection			Remarks
	BF-38	BF-38	BF-38	BF-43	BF-44	BF-47	BF-49	BF-50	BF-51	BF-52	BF-53	BF-54	BF-56	BF-58	BF-58	BF-58	
Reference Page	All	All	All	(EC)	(C)	All	(EC)	All	All	All	All	All	All	BF-58	BF-58	BF-58	—
Applicable models	All	All	All	(EC)	(C)	All	(EC)	All	All	All	All	All	All	Lock knob switch	Door lock actuator(s)	Power window motor(s)	—
SYMPTOM	Procedure 1	Procedure 2	Procedure 3	Procedure 1	Procedure 2	Procedure 3	Procedure 4	Procedure 5	Procedure 6	Procedure 7	Procedure 8	Procedure 9	Procedure 10	Lock knob switch	Door lock actuator(s)	Power window motor(s)	—
Power windows and power door locks cannot be operated.	(C)			(EC)	(C)	(C)	(EC)	(C)	(C)	(C)	(C)			(C)	(C)	(C)	—
Power door locks and passenger power window cannot be operated.		(C)		(EC)	(C)	(C)	(EC)		(C)	(C)	(C)			(C)	(C)	(C)	—
Power door locks cannot be operated by either the main or lock knob switches but power windows can be operated.				(EC)	(C)	(C)	(EC)							(C)	(C)		—
Power door locks cannot be operated by lock knob switch but can be operated by main switch.						(EC)								(EC)			—
One or two door locks cannot be operated.							(EC)								(C)		—
Power windows cannot be operated but power door locks can be operated.			(C)					(C)	(C)	(C)	(C)					(C)	—
Driver side power window cannot be operated but other windows can be operated.								(C)								(C)	—
Passenger power windows cannot be operated but door locks can be operated.		(EC)							(C)		(C)					(C)	—
Passenger power windows cannot be operated by main switch but can be operated by passenger's switches.										(C)	(C)						—
Power window lock cannot be operated.										(C)							—
Vehicle speed sensor system for power door locks cannot be operated.												(C)					Models equipped with the system.
Timer control system for power windows cannot be operated.													(C)				

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

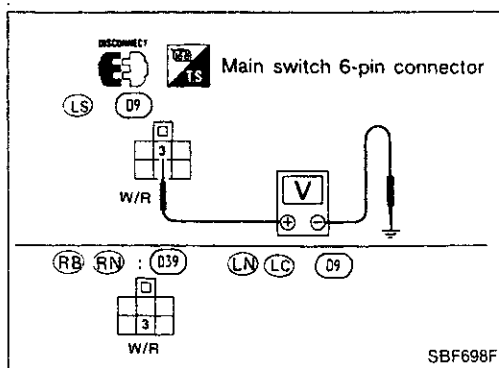

Main Power Supply and Ground Circuit Check


PROCEDURE 1

Main power supply

Terminals	Battery voltage exists
③ - Ground	Yes

Ground circuit


Terminals	Continuity
⑤ - Ground	Yes

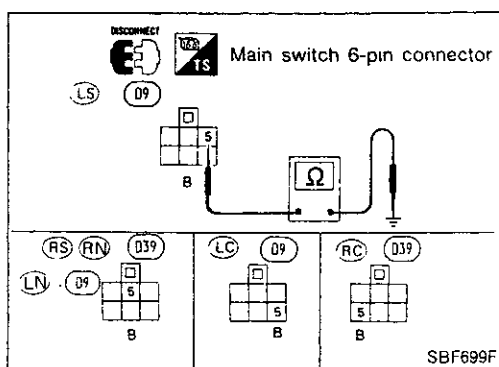

PROCEDURE 2


Power supply for sub-switch (passenger)

Terminals	Battery voltage exists
②① - Ground	Yes

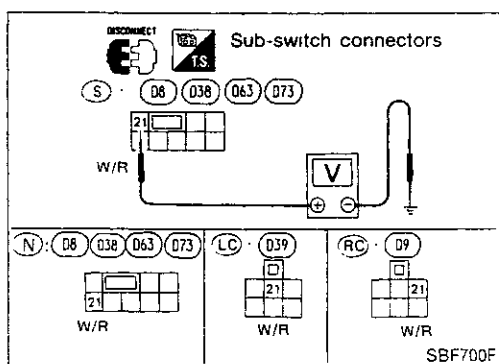

Ground circuit for sub-switch (passenger)


Terminals	Continuity
②⑥ - Ground	Yes

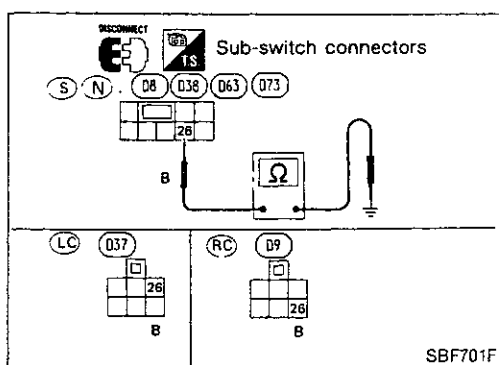

PROCEDURE 3











Power supply for ignition signal

Terminals	Ignition switch	Battery voltage exists
⑦ - Ground	ON	Yes

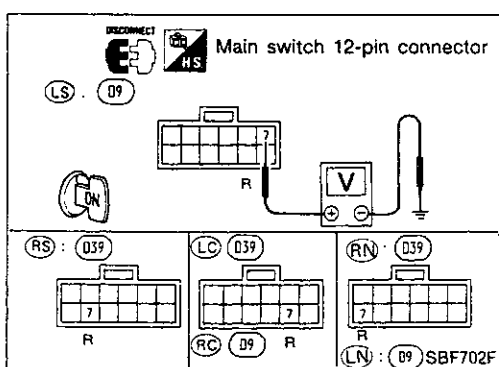


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

Harness Layout

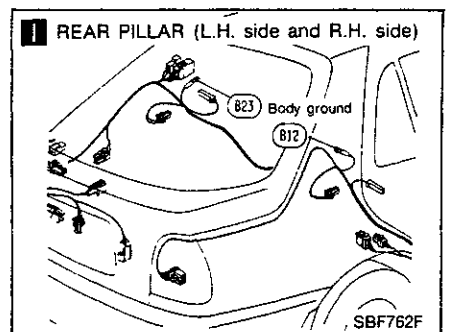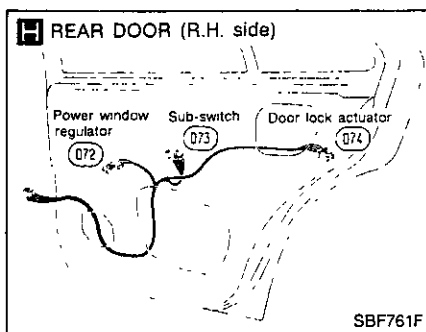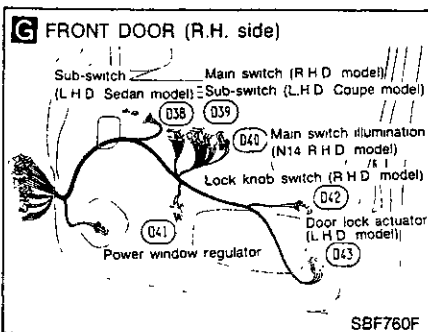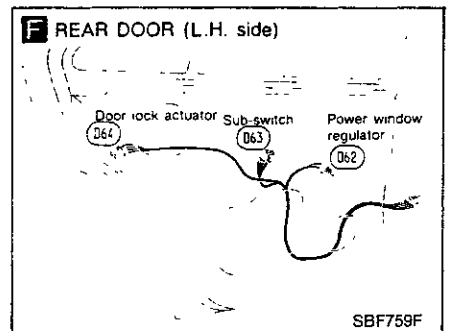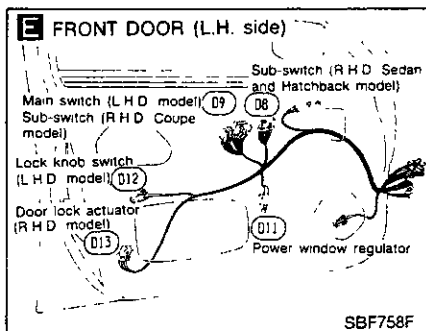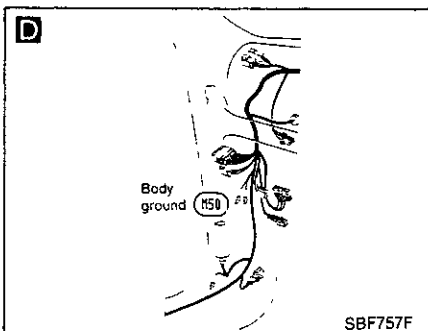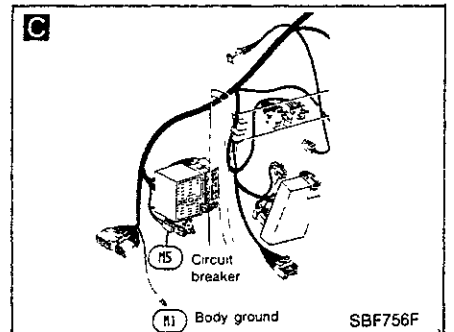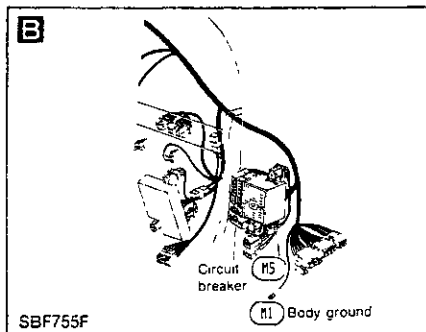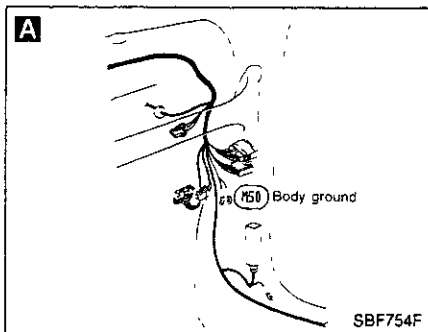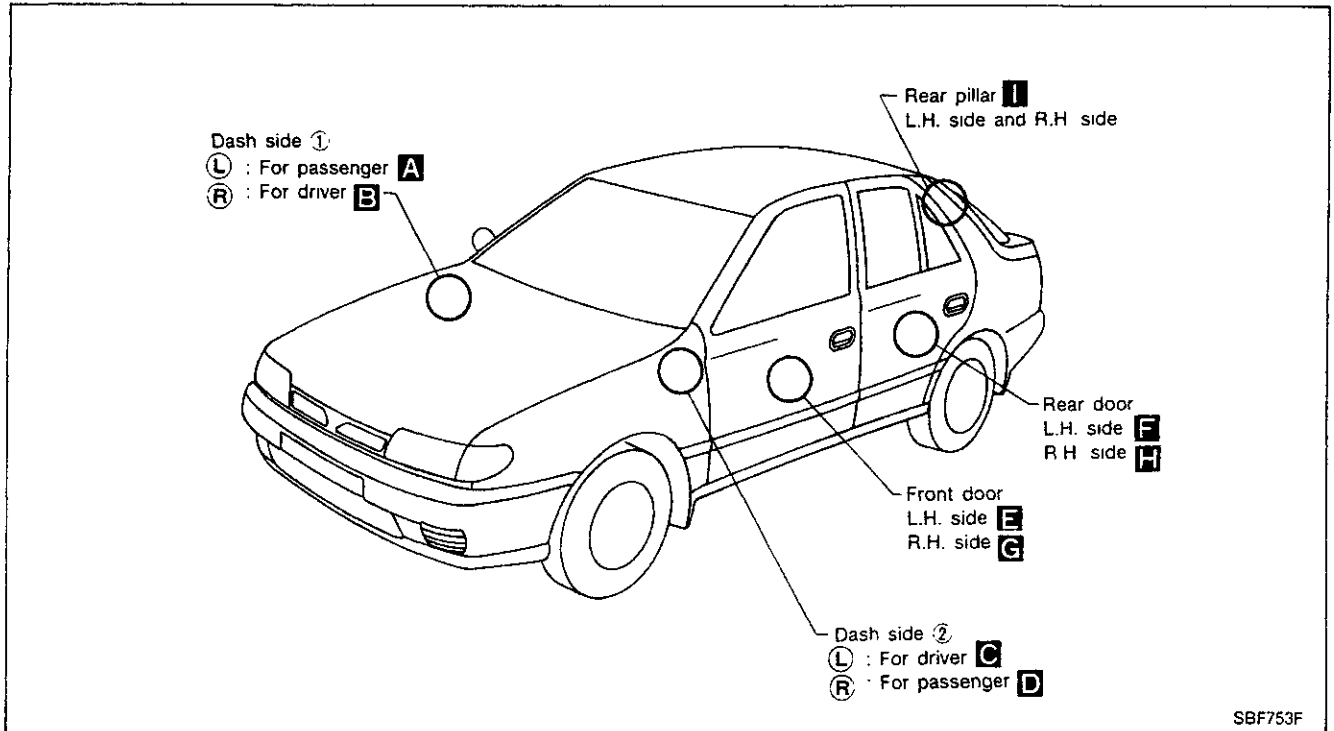

Circuit Diagram for Quick Pinpoint Check


B13 SEDAN

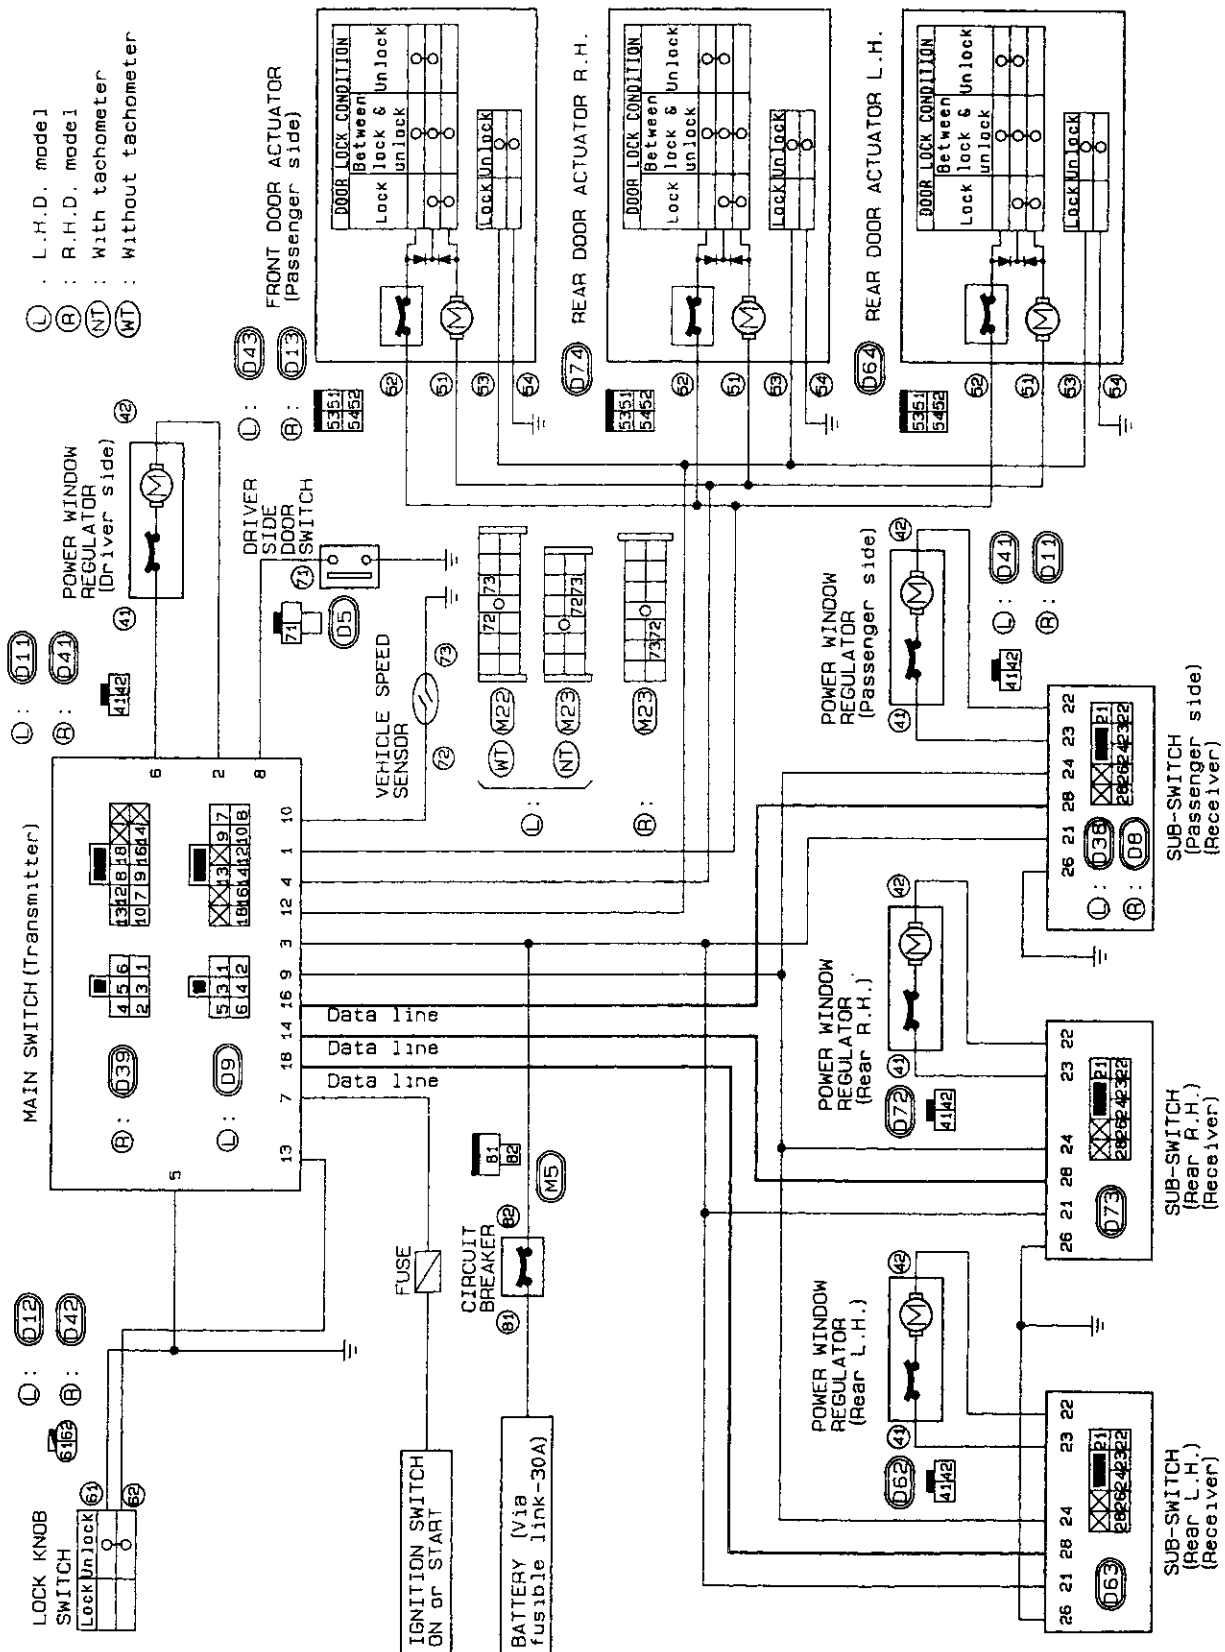

SBF080G

Circuit Diagram for Quick Pinpoint Check (Cont'd)


B13 COUPE

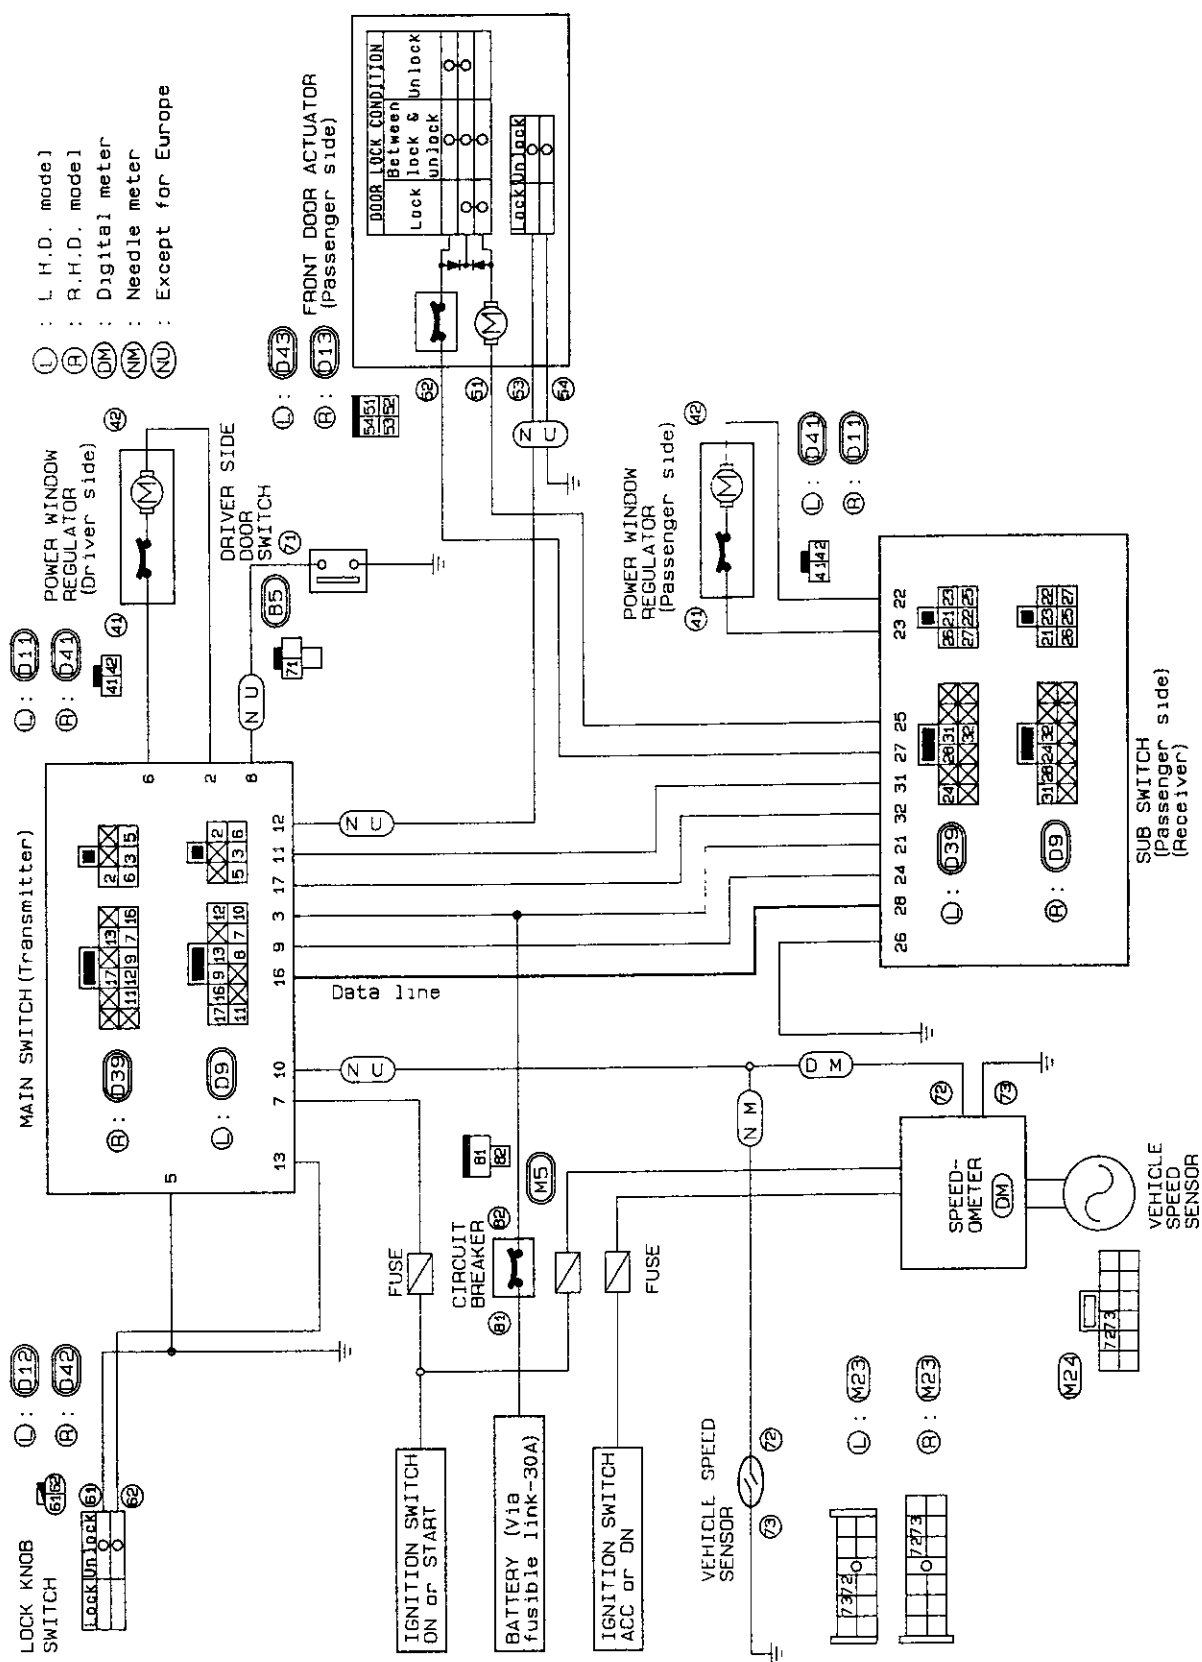

DOOR — Trouble Diagnoses for Power Window and Power Door Lock


Circuit Diagram for Quick Pinpoint Check (Cont'd)

N14

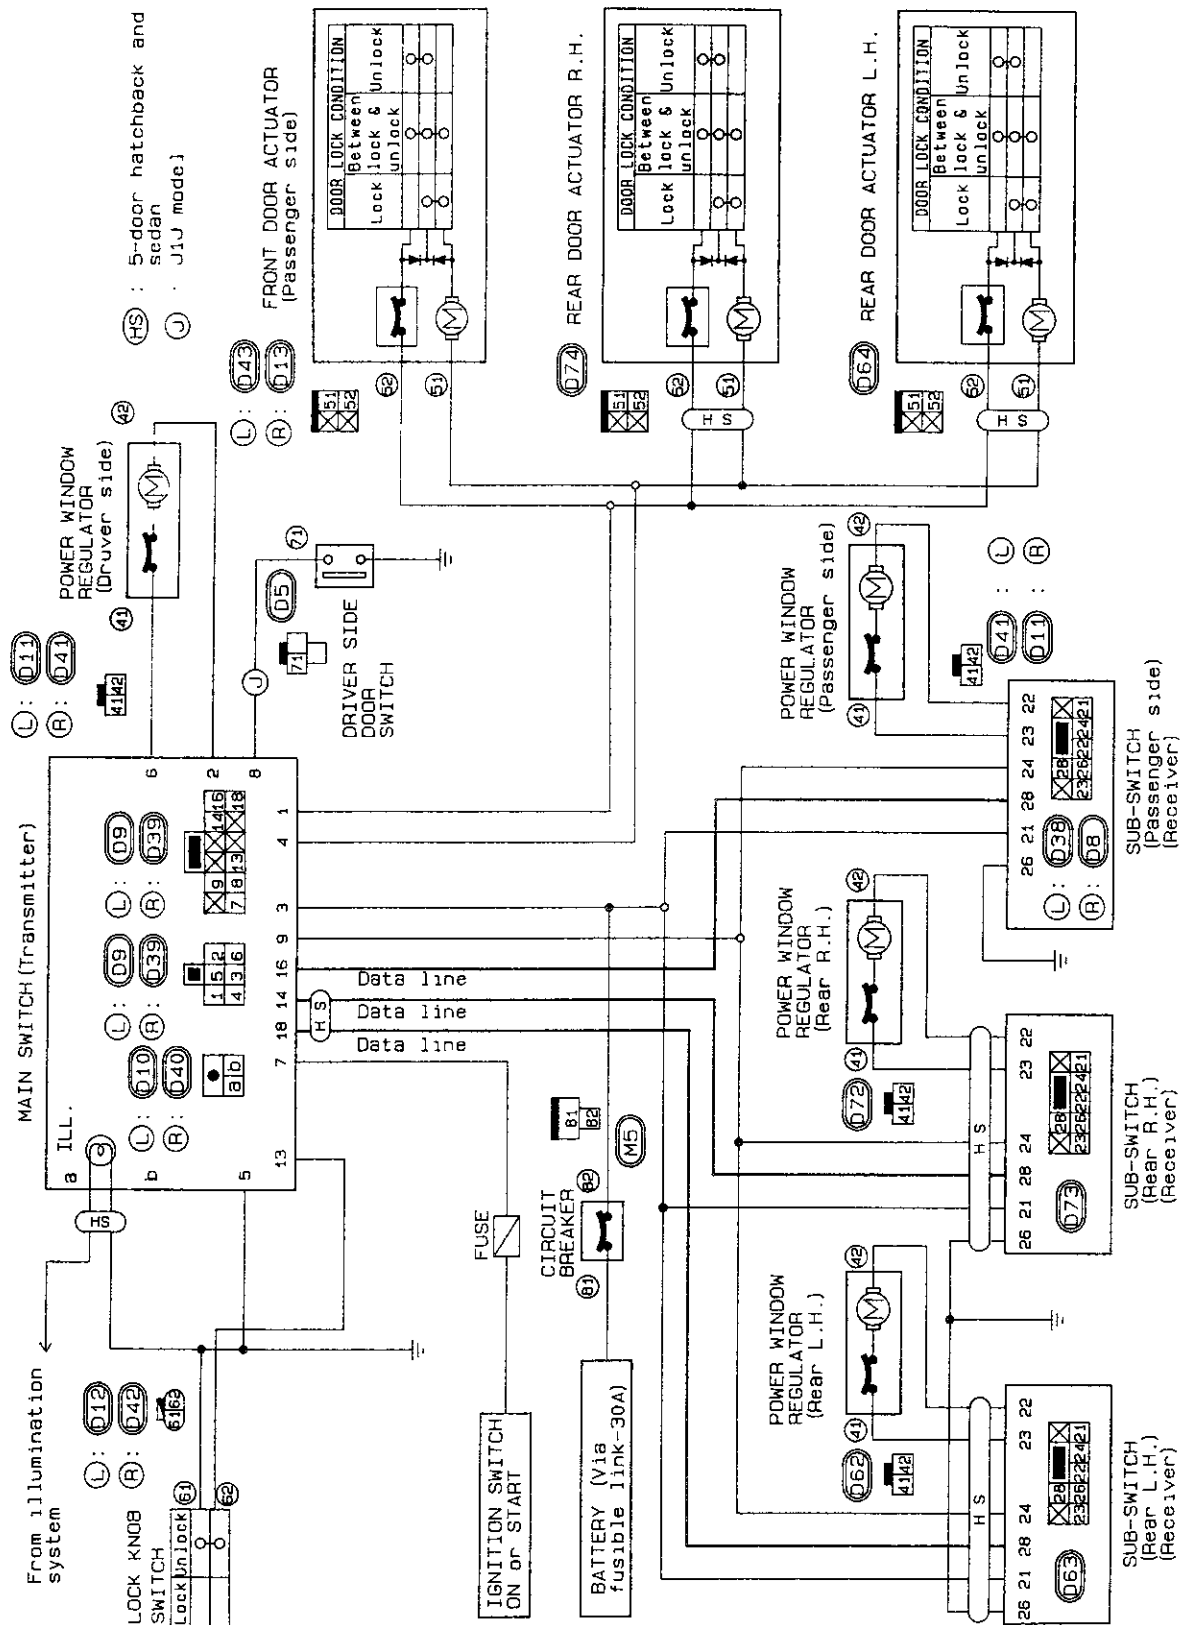

SBF082G

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

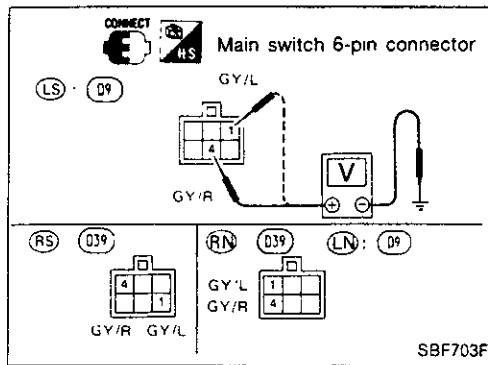

Diagnostic Procedure 1 (Except Coupe)

SYMPTOM:

Power door locks cannot be operated by either the main or door lock knob switches but power windows can be operated.

CHECK DOOR LOCK OPERATION CIRCUIT.
Check voltage for main switch 6-pin connector.




Terminals	Main switch operation	Voltage
1 - Ground	Unlock	0V → 12V → 0V
4 - Ground	Lock	0V → 12V → 0V

N.G. → Replace main switch.

O.K.

Go to Diagnostic Procedure 4.
(See page BF-49.)

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

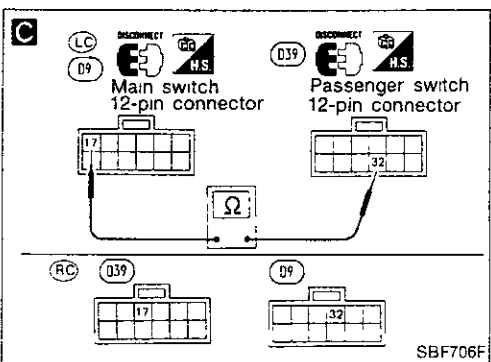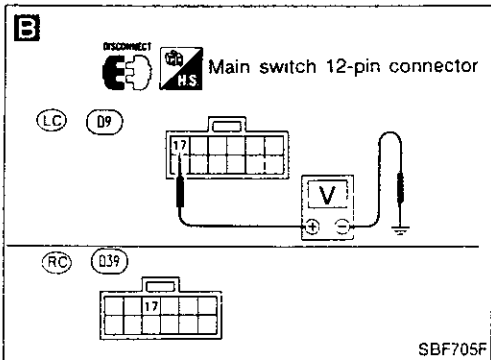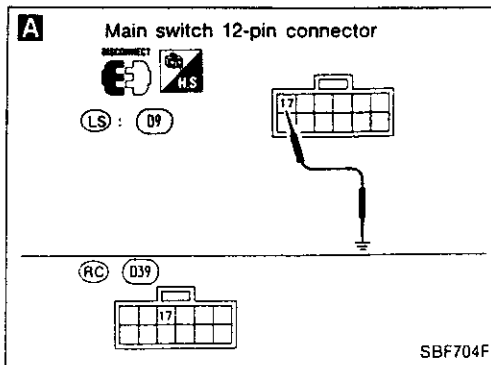

Diagnostic Procedure 2 (Coupe)

SYMPTOM:

Power door locks cannot be operated.

A CHECK DOOR LOCK OPERATION CIRCUIT.

O.K. → (Go to **A** on next page.)

- 1) Disconnect 12-pin connector from main switch.
- 2) Check door lock actuators by grounding terminal ①7.

Terminals	Result
①7 - Ground	Should be locked

B Check battery voltage existence.

O.K. → (Go to **B** on next page.)

Terminals	Battery voltage exists
①7 - Ground	Yes

C 1) Disconnect connector from passenger switch.








N.G. → Repair harness.

Terminals	Continuity
①7 - ③2	Yes


O.K. → Replace passenger switch.

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

Diagnostic Procedure 2 (Coupe) (Cont'd)

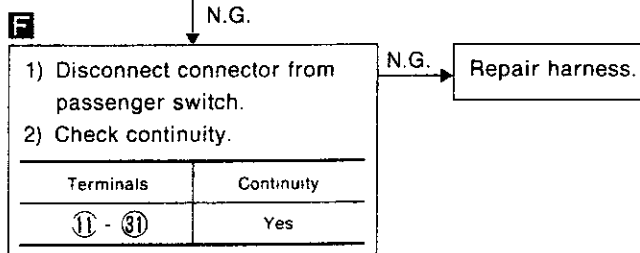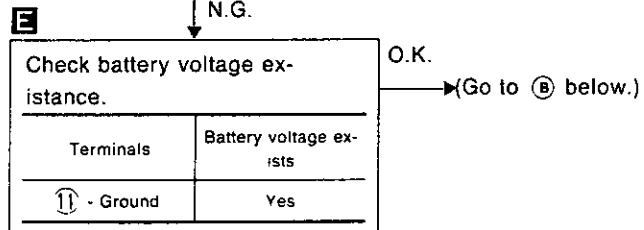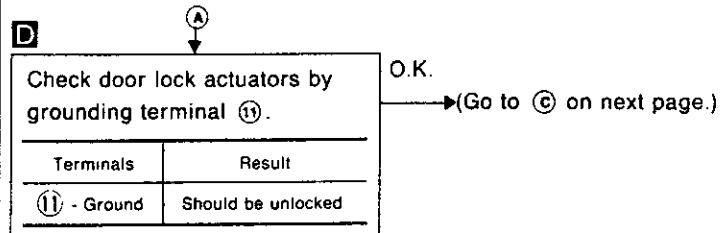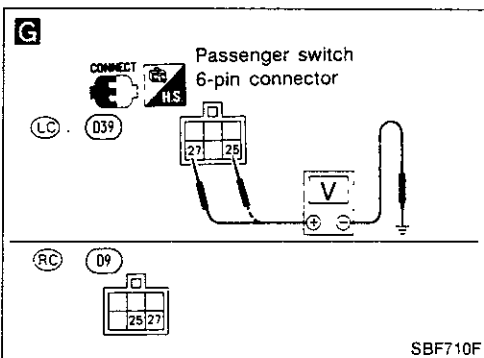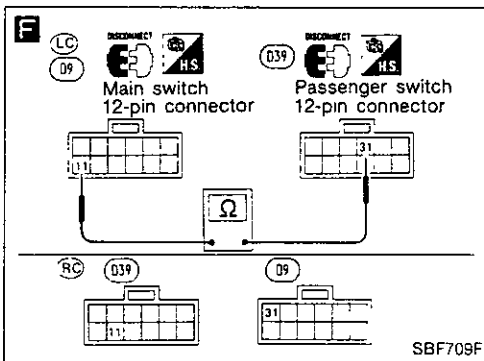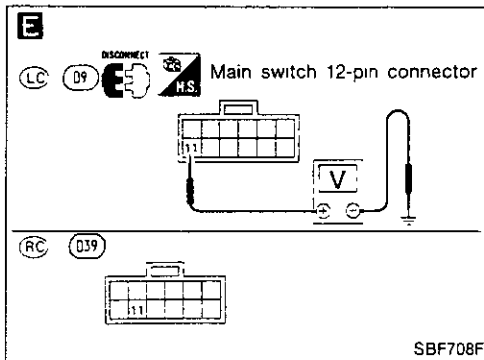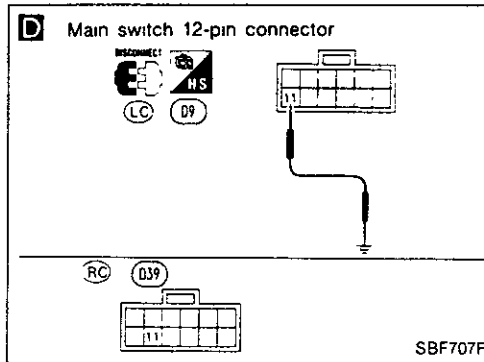




Replace front passenger switch.

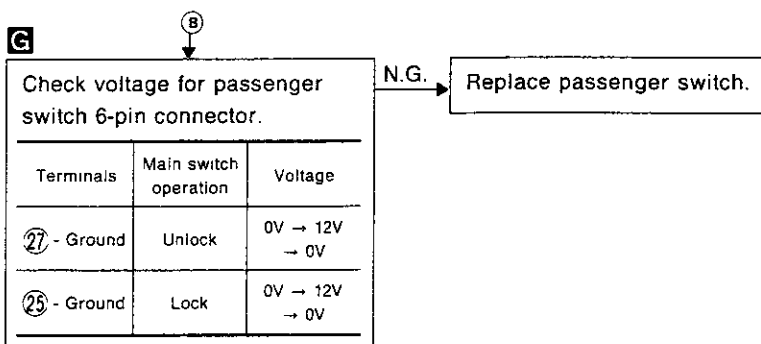


(Go to ③ on next page.)

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

Diagnostic Procedure 2 (Coupe) (Cont'd)

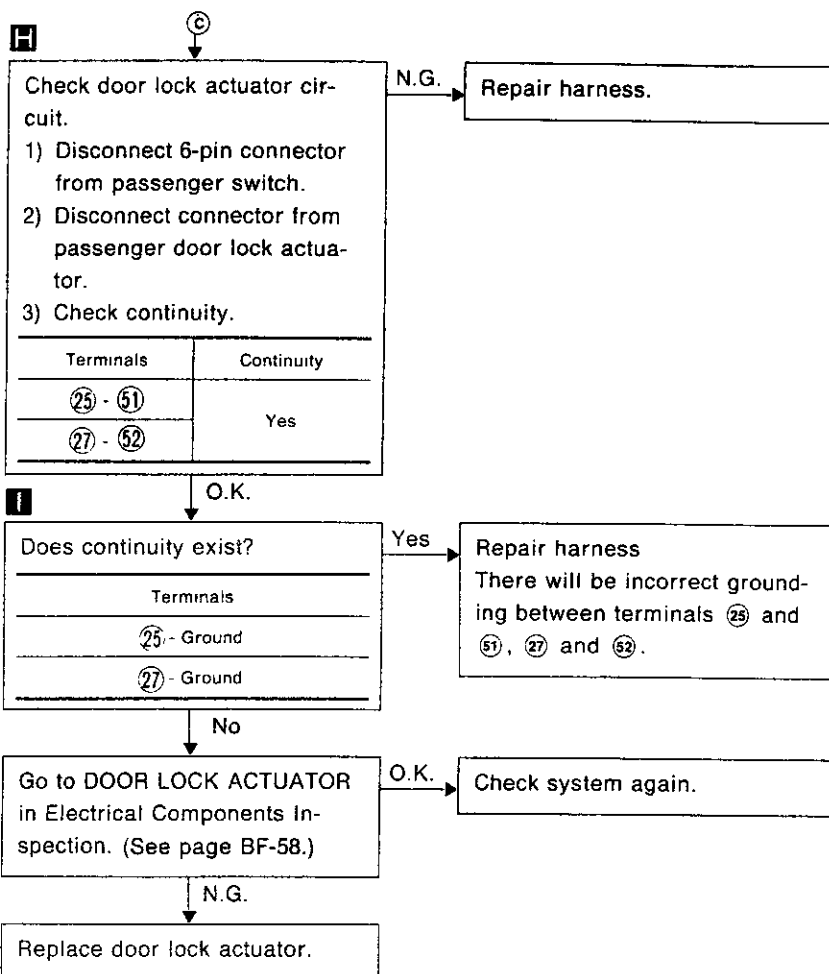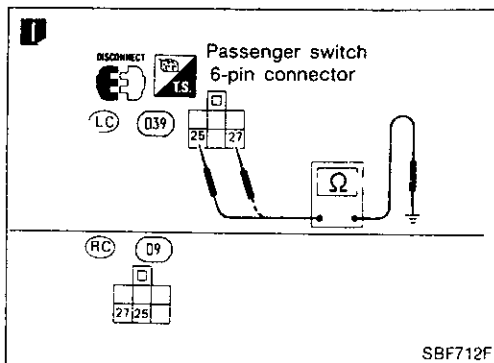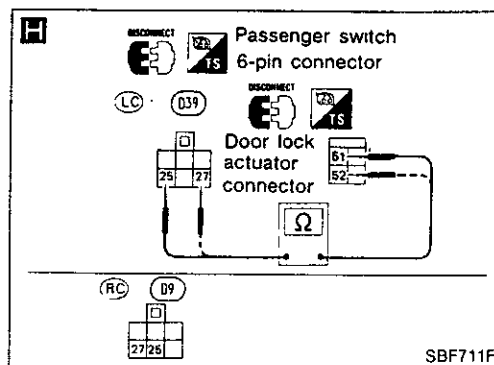

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

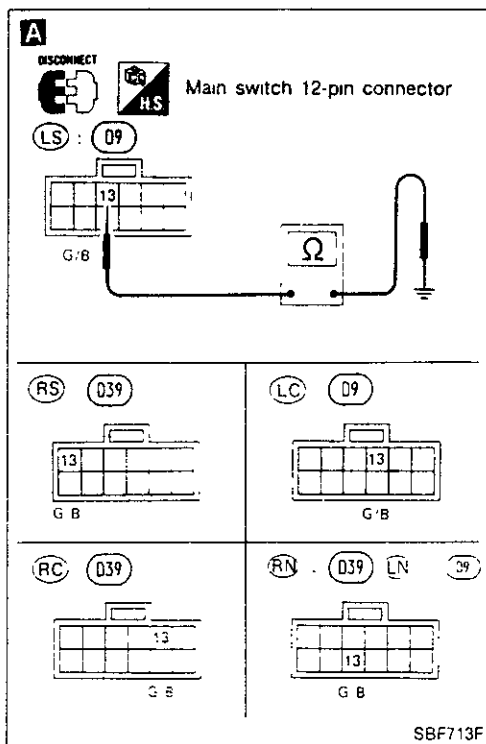

Diagnostic Procedure 3

(EXCEPT COUPE)



SYMPTOM:

Door locks cannot be operated by lock knob switch but can be operated by main switch.

(COUPE)



SYMPTOM:

Door locks cannot be operated by lock knob switch.

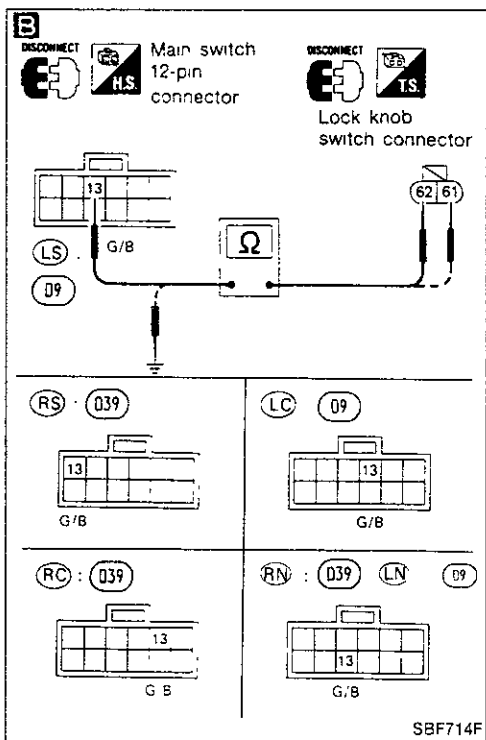
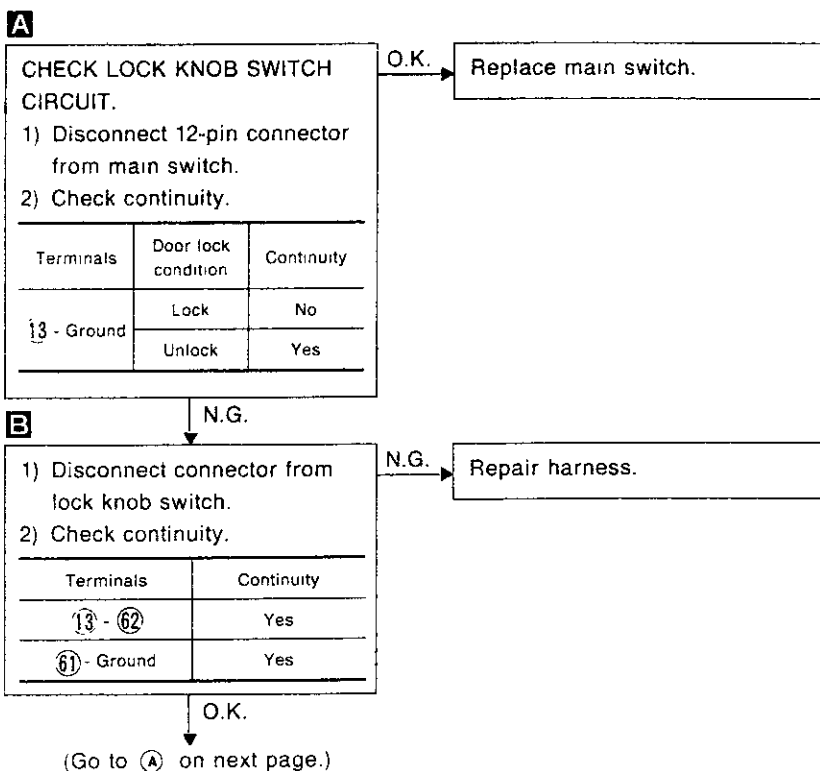


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

Diagnostic Procedure 3 (Cont'd)

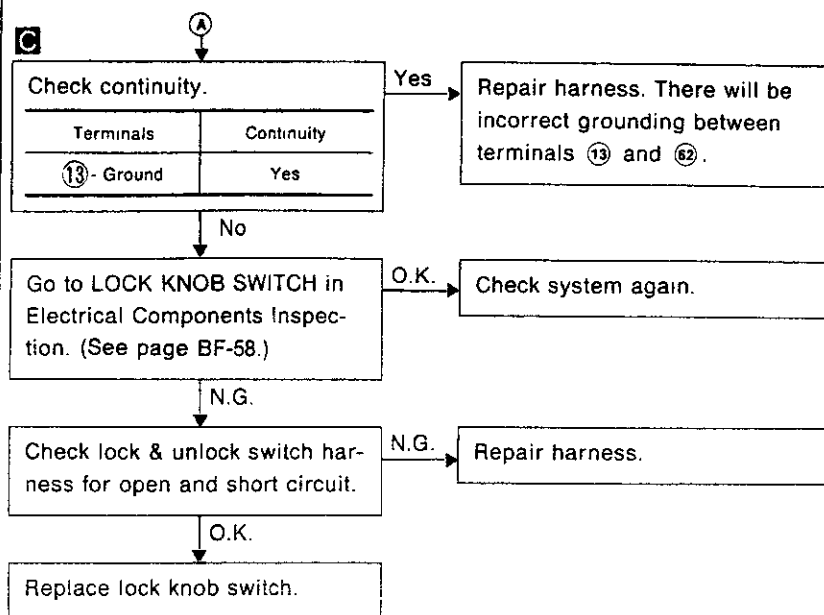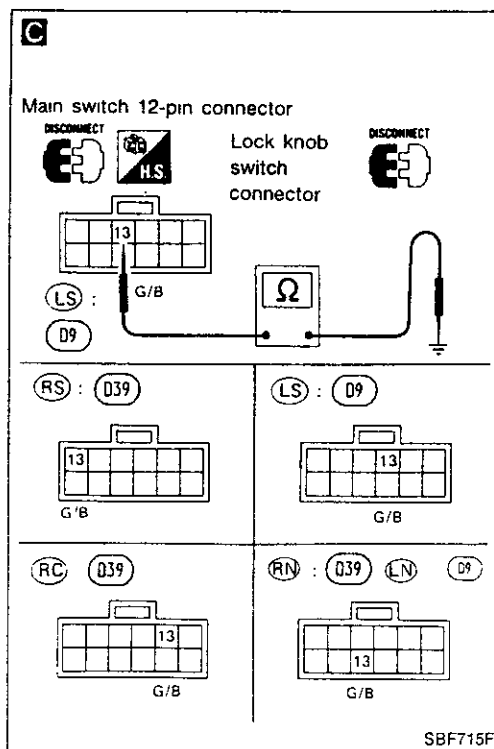

DOOR — Trouble Diagnoses for Power Window and Power Door Lock

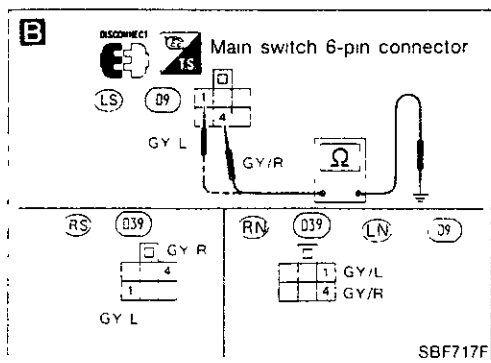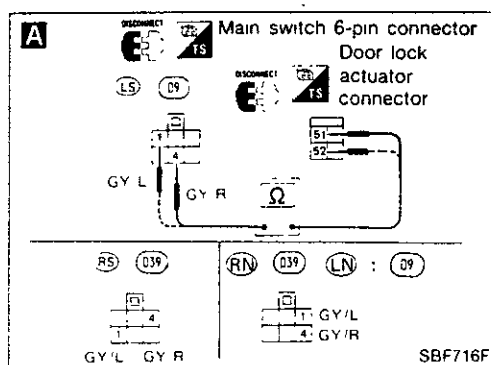

Diagnostic Procedure 4 (Except Coupe)

SYMPTOM:

One or two door locks cannot be operated.

A

CHECK DOOR LOCK ACTUATOR CIRCUIT.

- 1) Disconnect 6-pin connector from main switch.
- 2) Disconnect connector from inoperative door lock actuator(s).
- 3) Check continuity.

Terminals	Continuity
④ - ⑤①	Yes
① - ⑤②	Yes

N.G.

Repair harness

B

O.K.

Does continuity exist?

Terminals
④ - Ground
① - Ground

Yes

Repair harness.
There will be incorrect grounding between terminals ④ and ⑤①, ① and ⑤②.

No

Go to DOOR LOCK ACTUATOR in Electrical Components Inspection. (See page BF-58.)




O.K.

Check system again.

N.G.

Replace door lock actuator.


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

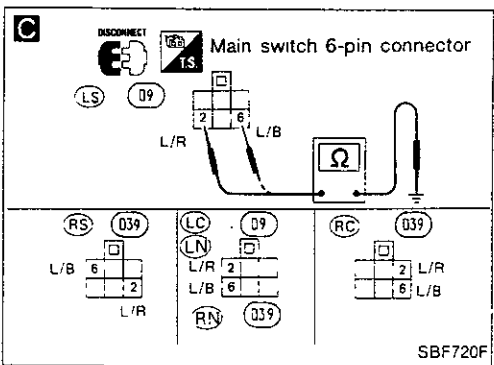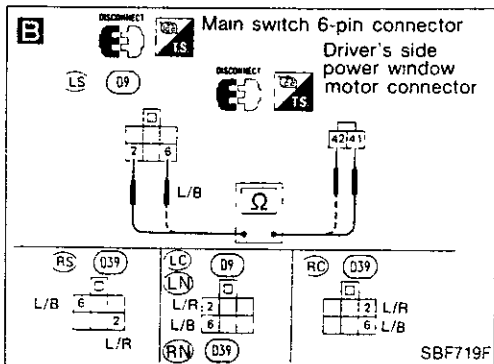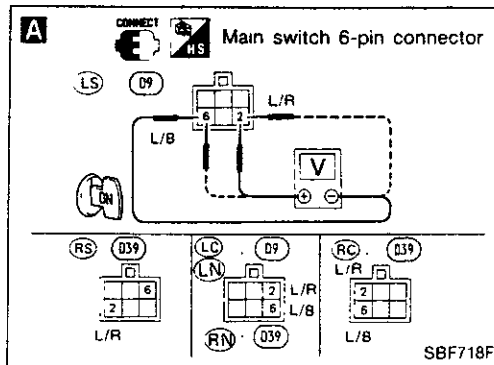




Diagnostic Procedure 5

SYMPTOM:

Driver's side power window cannot be operated but other power windows can be operated.

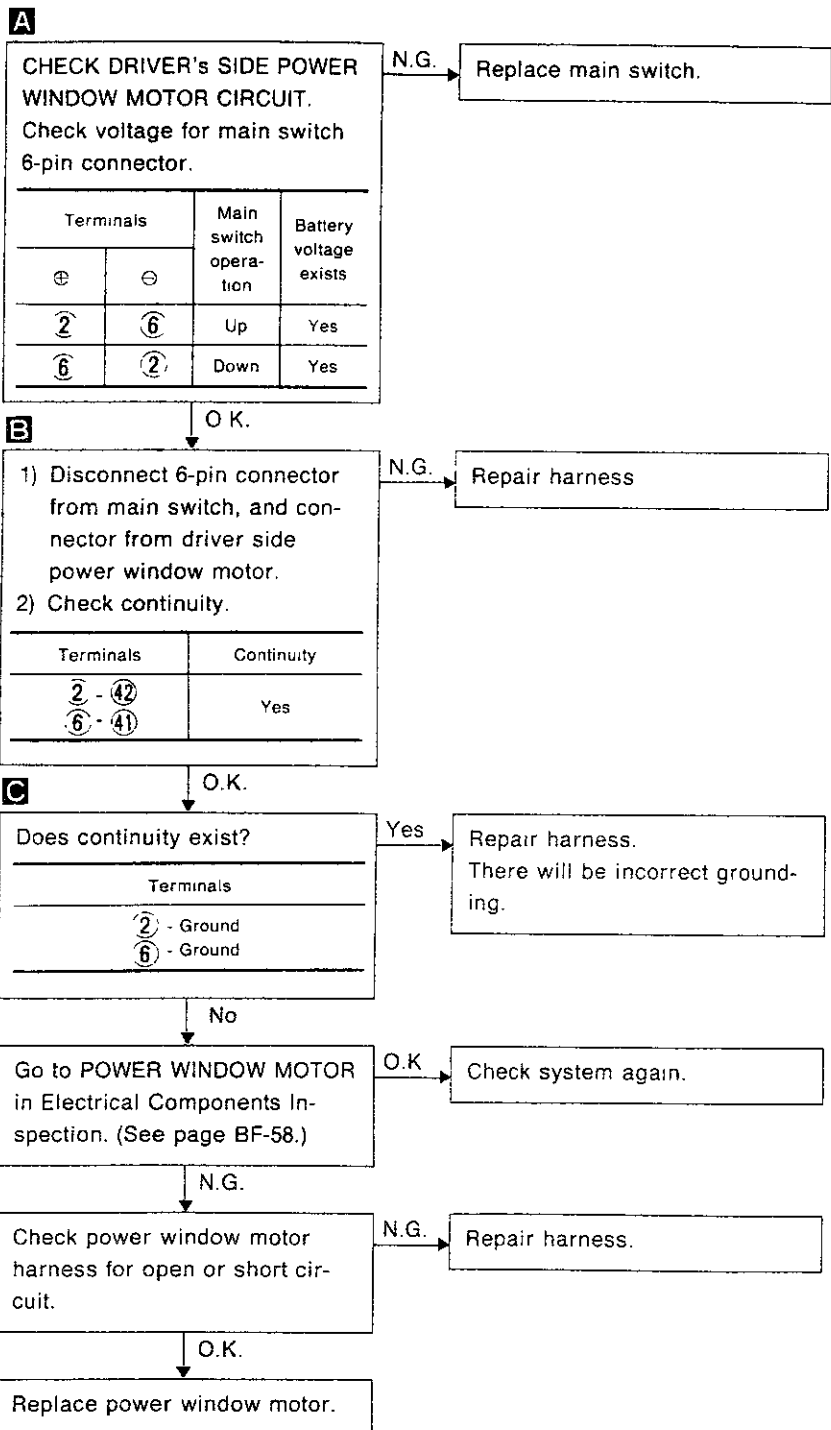


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

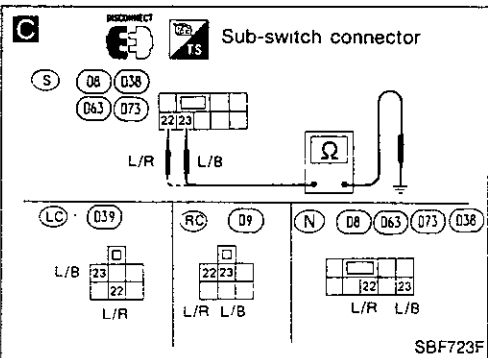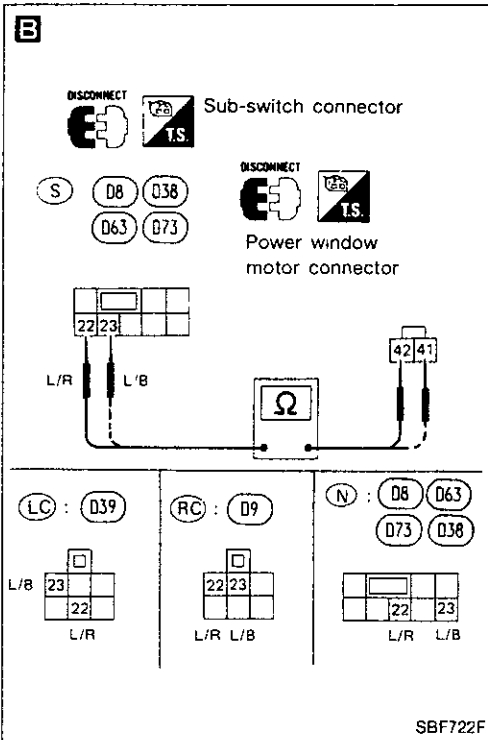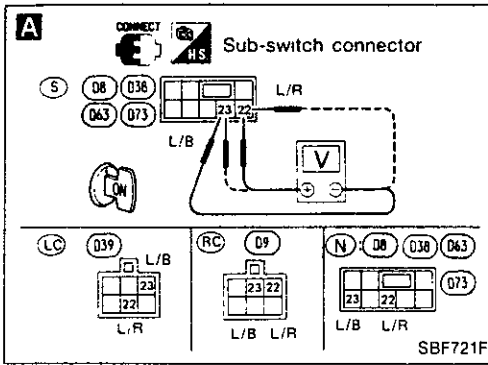




Diagnostic Procedure 6

SYMPTOM:

Passenger power windows cannot be operated but door locks can be operated.

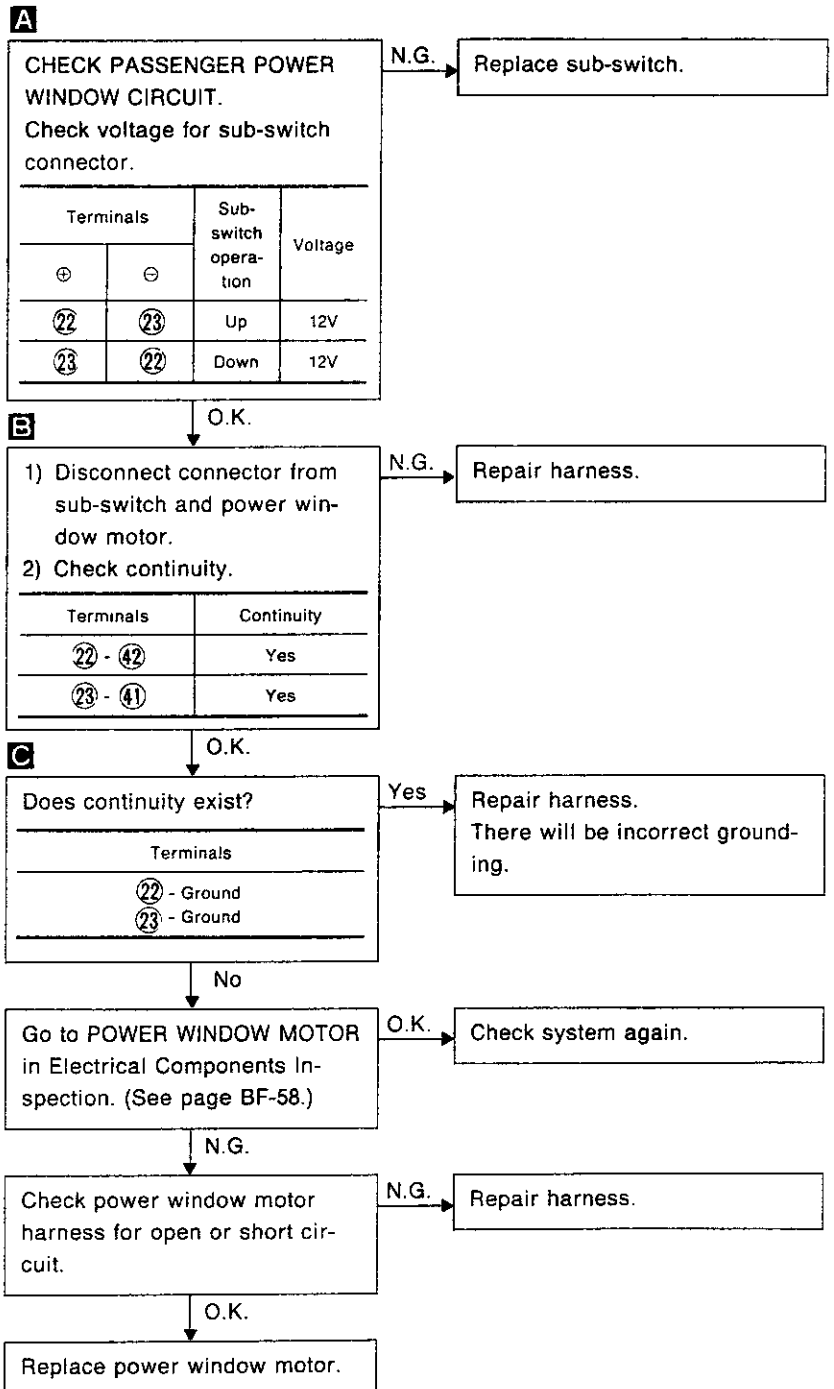


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

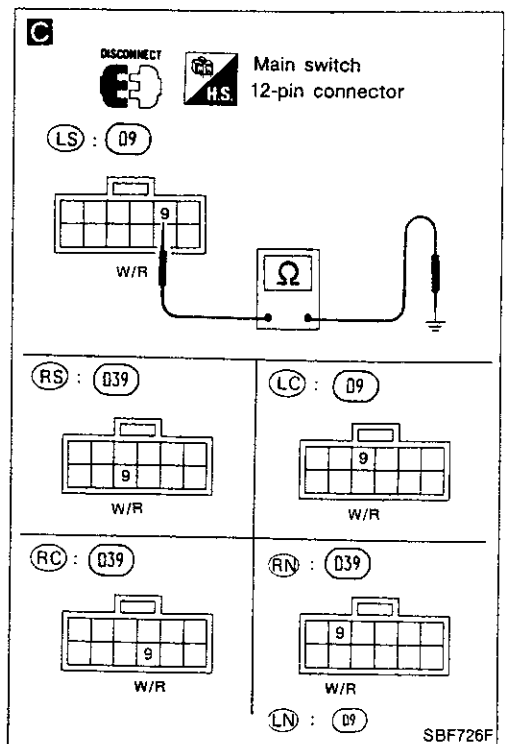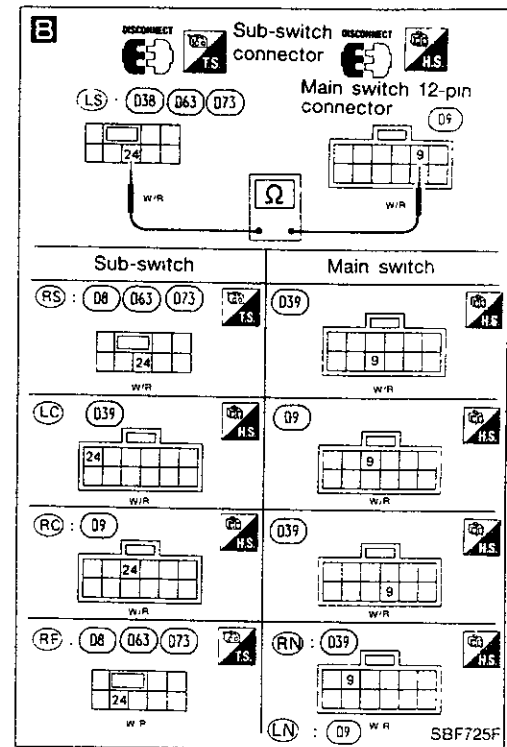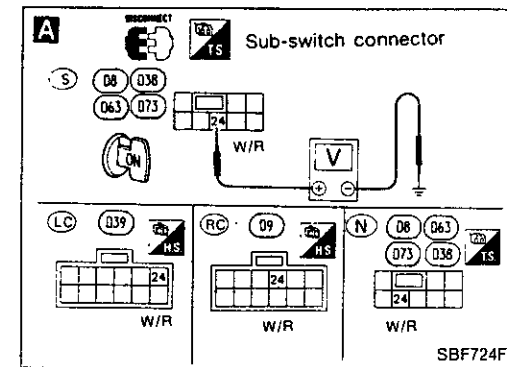

Diagnostic Procedure 7

SYMPTOM:

Passenger power windows cannot be operated by either the passenger's switches or main switch.



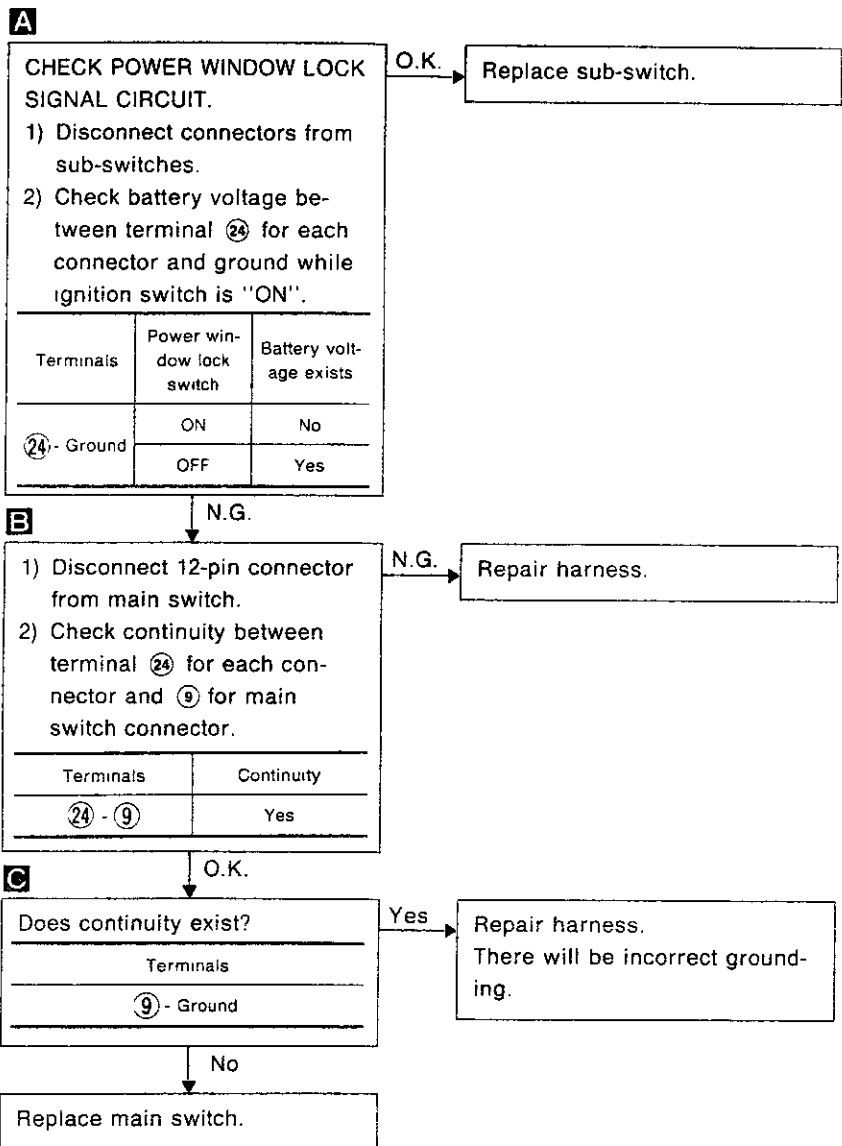


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

Diagnostic Procedure 8

SYMPTOM:

Passenger power windows cannot be operated by main switch but can be operated by passenger's switches.

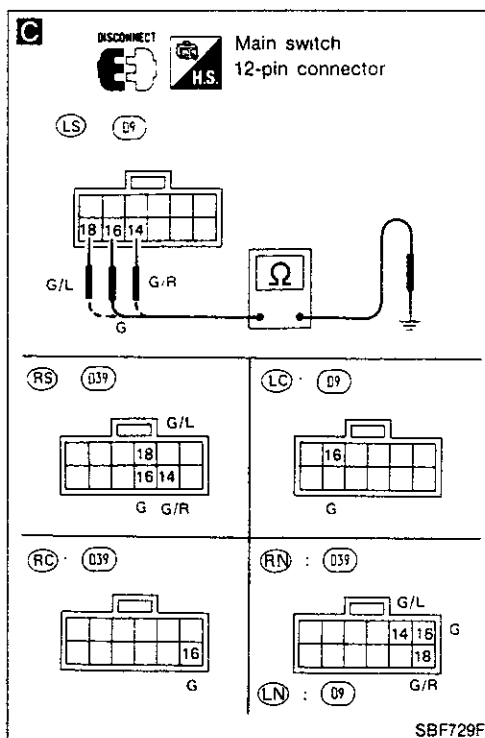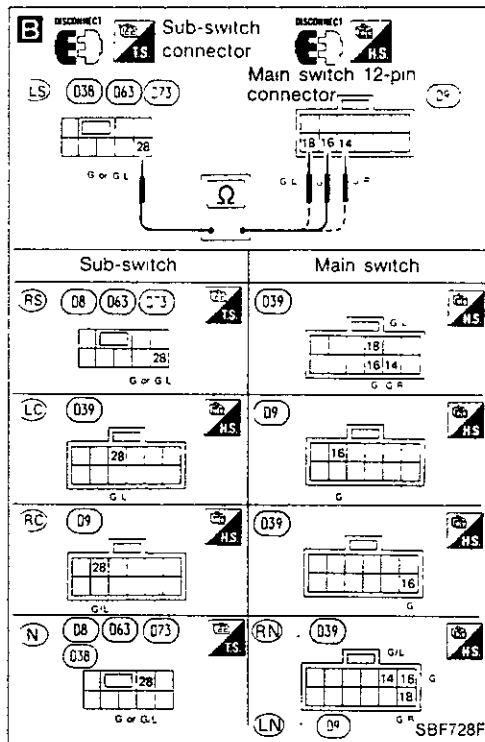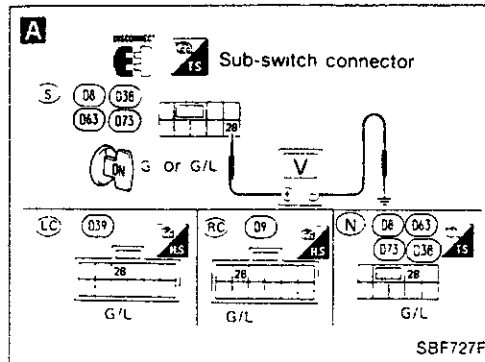

CHECK DATA LINE SIGNAL CIRCUIT.

- 1) Disconnect connectors from all switches except main switch.
- 2) Check voltage while power window lock switch is "OFF".

Terminals	Main switch operation	Voltage
28 - Ground	Up	Above 12V
	Down	Approx. 4V
	No operation	Approx. 0V

O.K. → Replace Main switch.

N.G.

- 1) Disconnect 12-pin connector from main switch.
- 2) Check continuity.

	Terminals
Passenger	16 - 28
Rear left	18 - 28
Rear right	14 - 28

Continuity should exist.

N.G. → Repair harness.

O.K.





Does continuity exist?

	Terminals
Passenger	16 - Ground
Rear left	18 - Ground
Rear right	14 - Ground

Yes → Repair harness. There will be incorrect grounding.

No

Replace main switch.

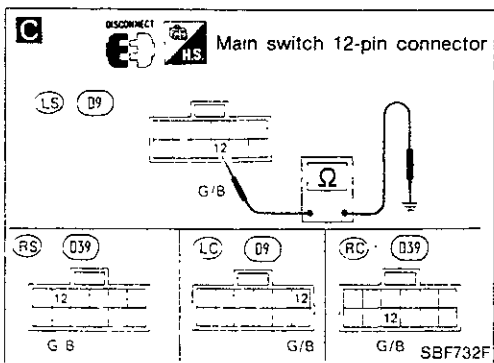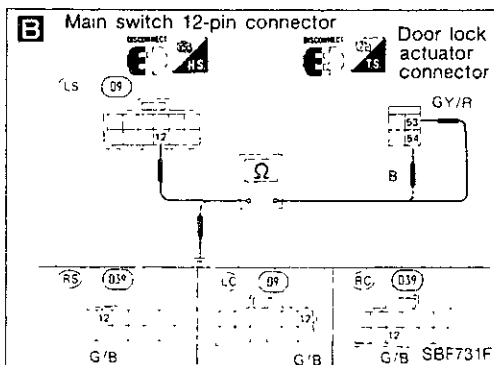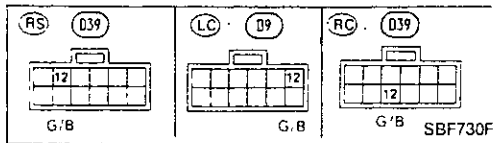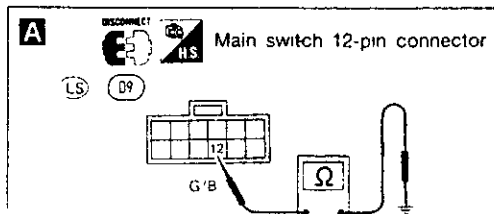

Diagnostic Procedure 9

SYMPTOM:

Power door locks cannot be operated by vehicle speed sensor system.

A

CHECK DETECTING SWITCH CIRCUIT.

- 1) Disconnect 12-pin connector from main switch.
- 2) Check continuity between terminal 12 and body ground.

Condition	Continuity
All doors except driver's are locked	No
One of passenger doors is unlocked	Yes

O.K.

→ (Go to **A** on next page.)

N.G.

Disconnect door lock actuator connector.

B

Check continuity between terminals 12 and 53, 54 and body ground.

N.G.

Repair harness.

O.K.

C

Does continuity exist?

Terminals
12 - Ground






Yes

Repair harness.
There will be incorrect grounding.


No

Replace detecting switch.

Diagnostic Procedure 9 (Cont'd)

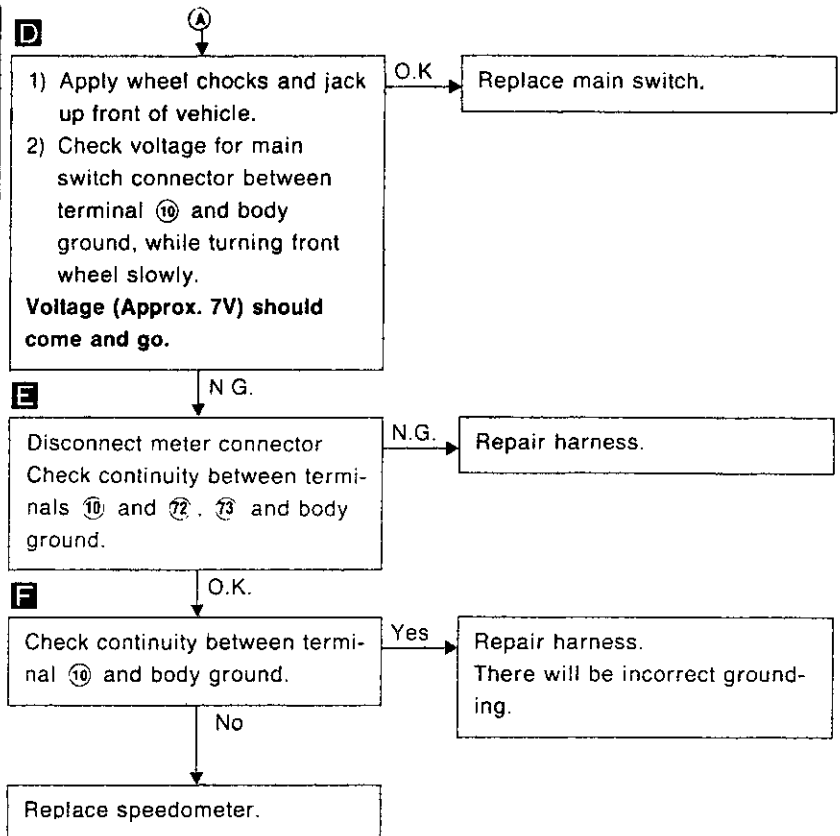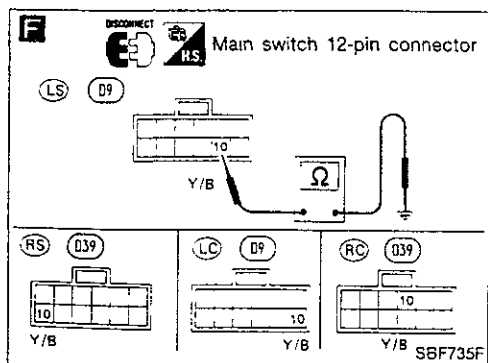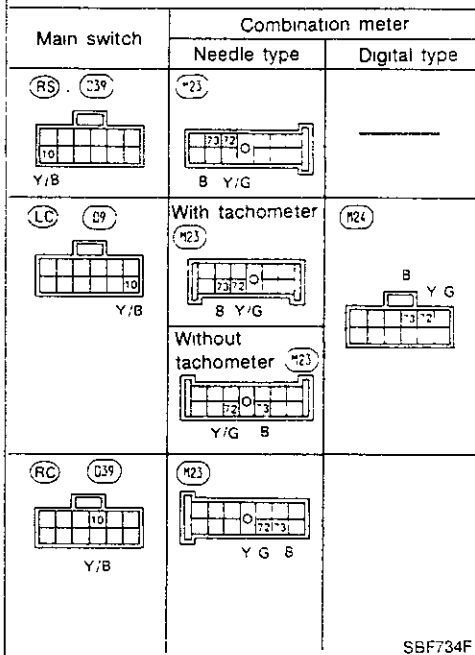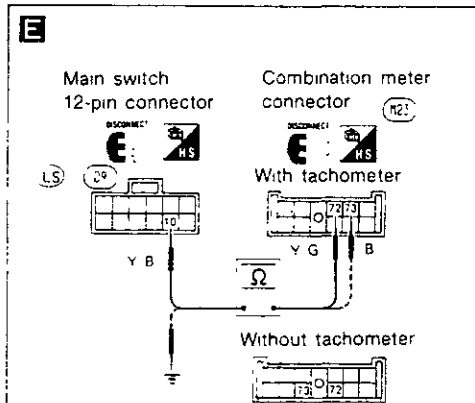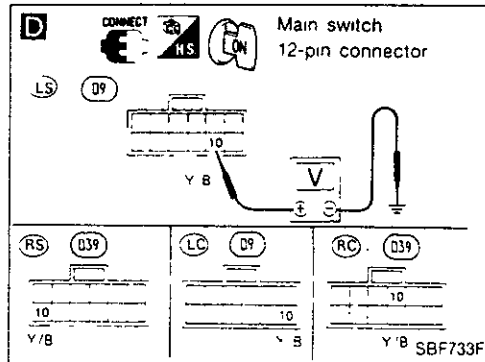



DOOR — Trouble Diagnoses for Power Window and Power Door Lock

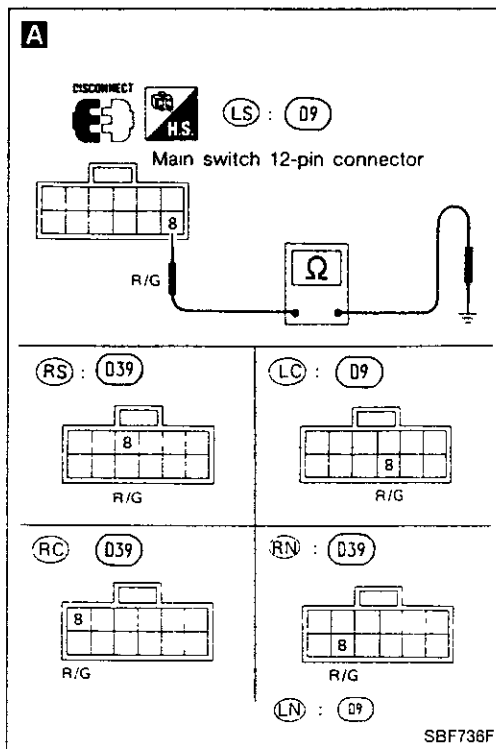

Diagnostic Procedure 10



SYMPTOM:

Power window cannot be operated by timer control system.

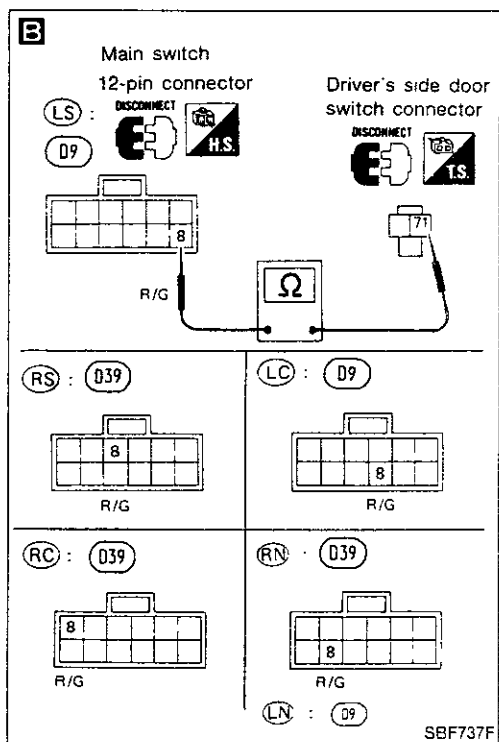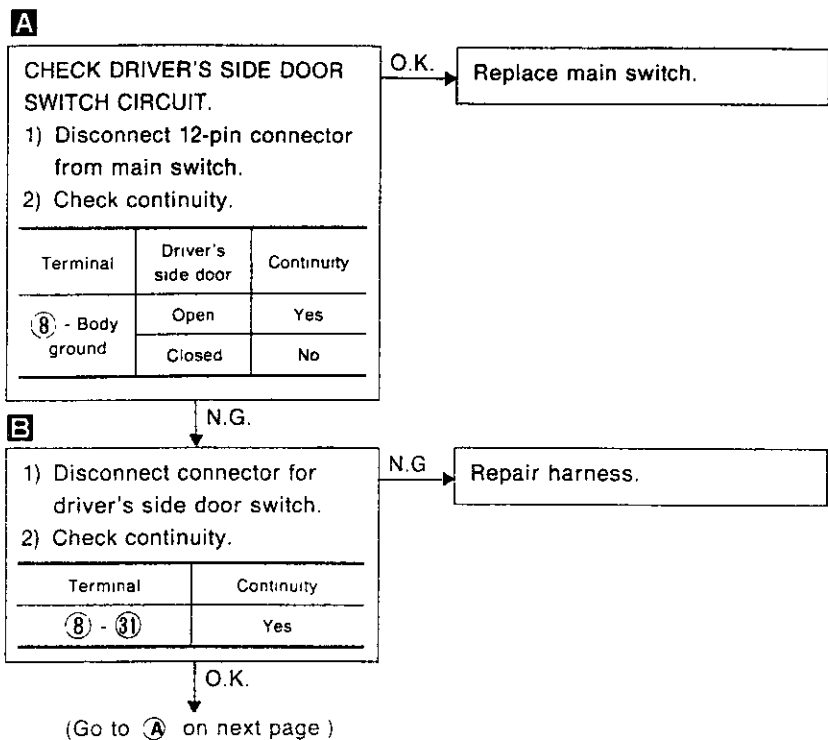


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

Diagnostic Procedure 10 (Cont'd)

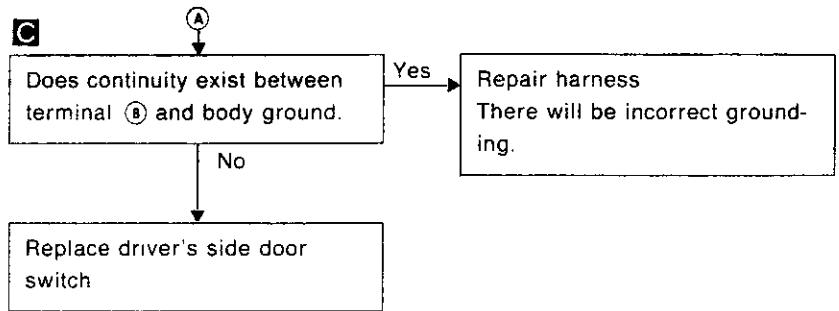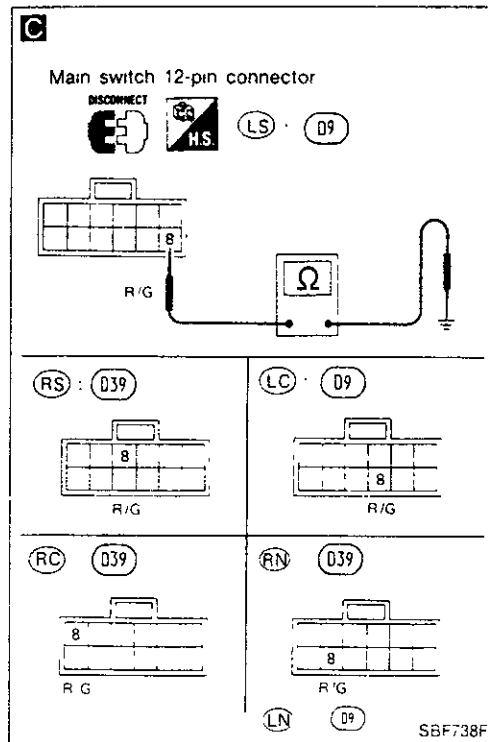


DOOR — Trouble Diagnoses for Power Window and Power Door Lock

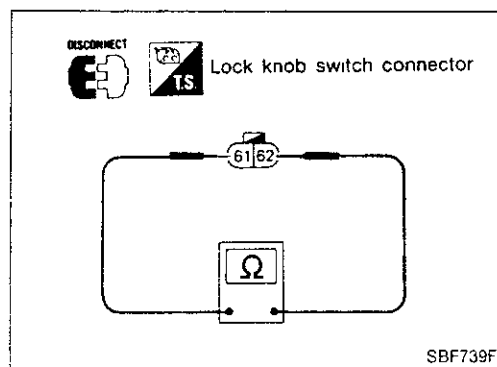

Electrical Components Inspection


LOCK KNOB SWITCH

Terminals	Condition	Continuity
⑥1 - ⑥2	Locked	No
	Unlocked	Yes

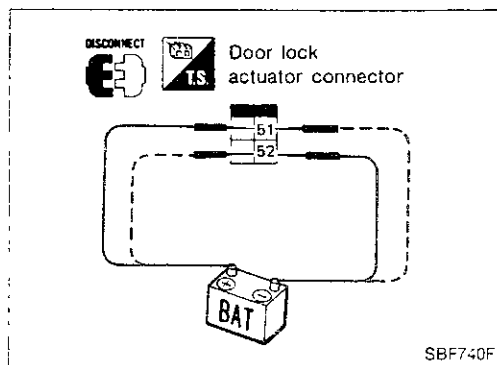

DOOR LOCK ACTUATOR

	Terminals		Operation
	⊕	⊖	
Passenger (Front and rear)	⑤1	⑤2	Lock
	⑤2	⑤1	Unlock

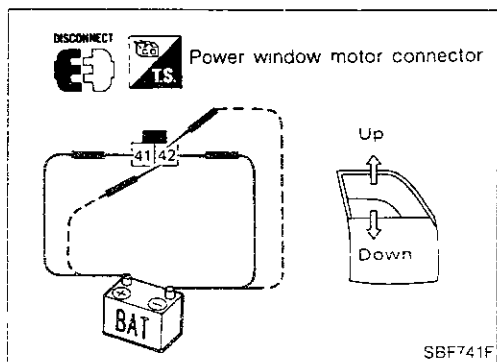

POWER WINDOW MOTOR

Terminals		Operation
⊕	⊖	
④1	④2	Downward
④2	④1	Upward

INSTRUMENT PANEL







B13

CAUTION:


- a. Disconnect ground terminal from battery in advance.
- b. Be careful not to scratch pad and other parts.

REMOVAL — Instrument panel assembly




- ① Remove steering wheel. (Refer to ST section.)
- ② Remove steering column cover and combination switch.
- ③ Remove instrument lower cover on driver's side. **A**
- ④ Remove A/T finisher or shift lever boot. **B**
- ⑤ Remove instrument lower center cover. **C**
- ⑥ Remove console mask. **D**
- ⑦ Remove console box.
- ⑧ Remove cluster lid C. **E**
- ⑨ Remove cluster lid A.
- ⑩ Remove combination meter.
(When removing needle type combination meter, disconnect speedometer cable from A/T or M/T transaxle inside engine compartment.)
- ⑪ Remove radio.
- ⑫ Remove A/C or heater control.
- ⑬ Remove cassette deck.
- ⑭ Remove cup holder.
- ⑮ Remove glove box.
- ⑯ Remove instrument lower cover on passenger side. **F**
- ⑰ Remove instrument panel reinforcement.
- ⑱ Remove instrument lower panel center.
- ⑲ Remove instrument lower cover.
- ⑳ Remove instrument upper mask.
- ㉑ Remove instrument panel and pads.

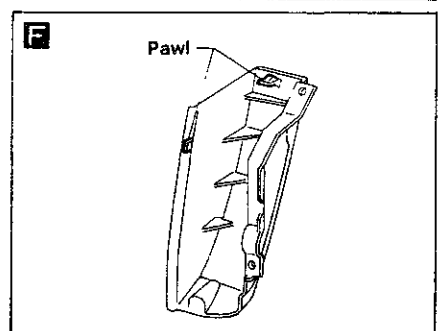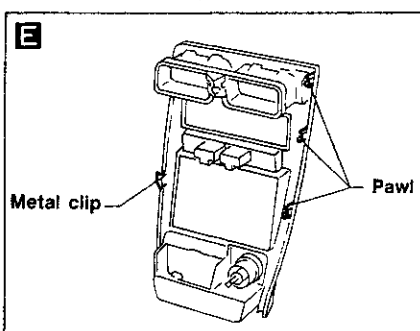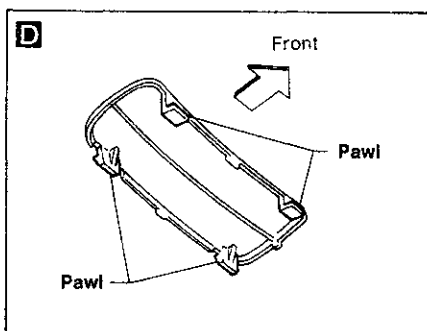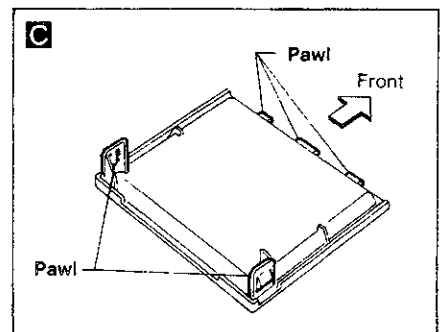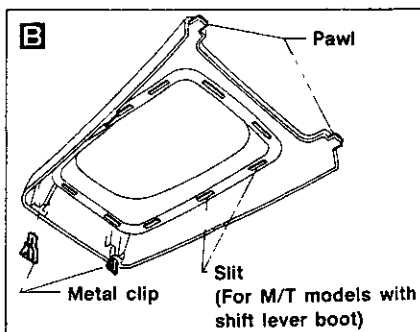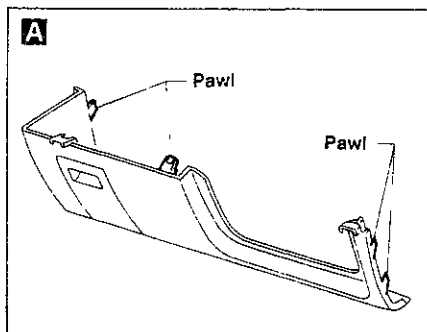

INSTRUMENT PANEL

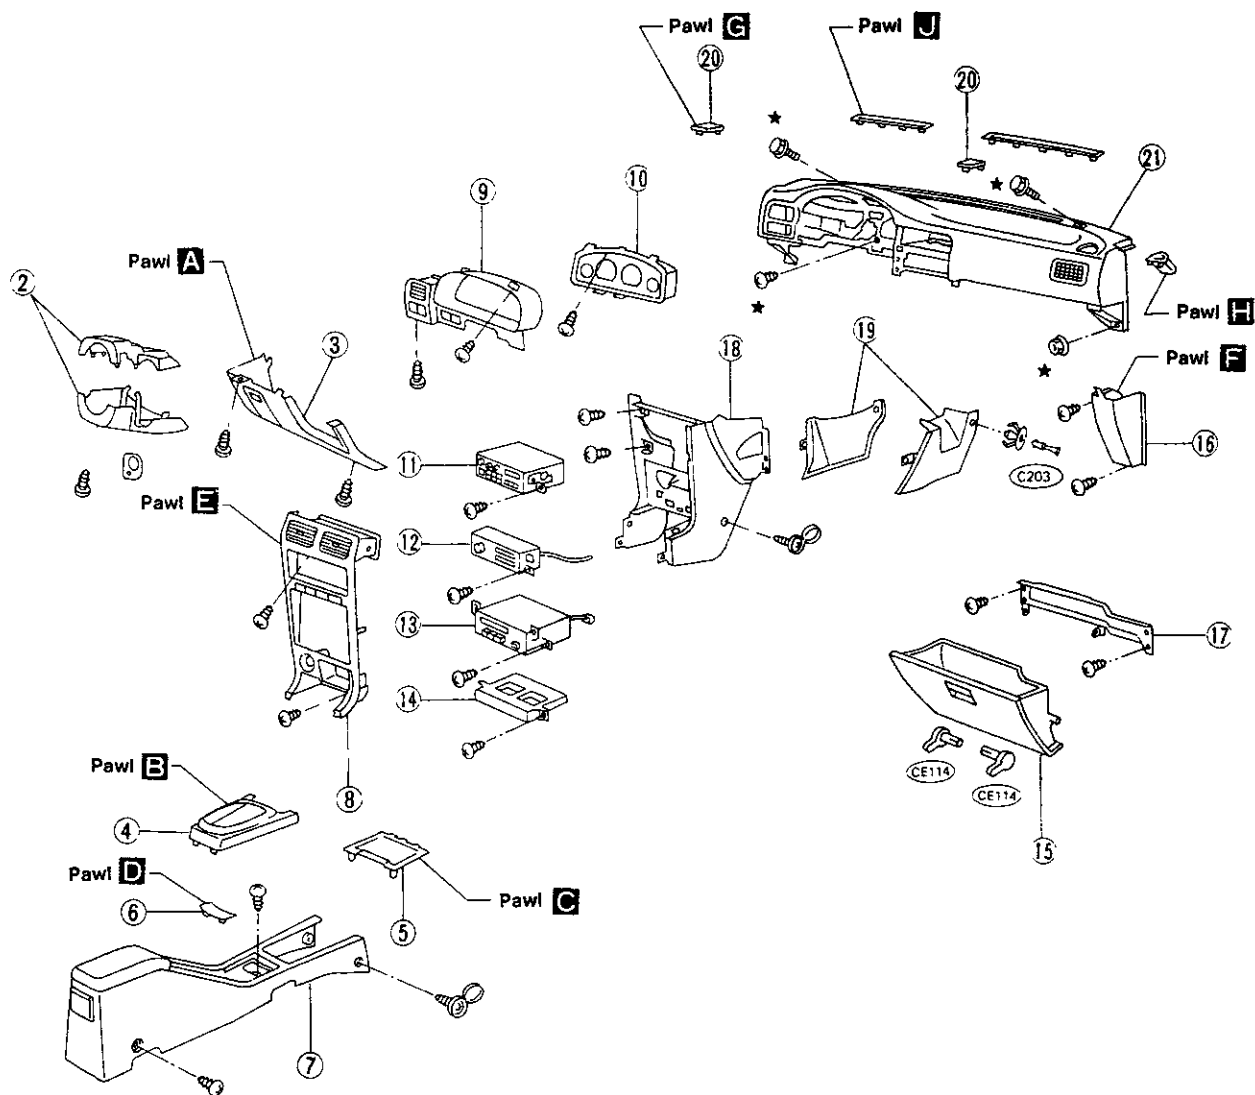

★: Instrument panel assembly mounting bolts and nuts

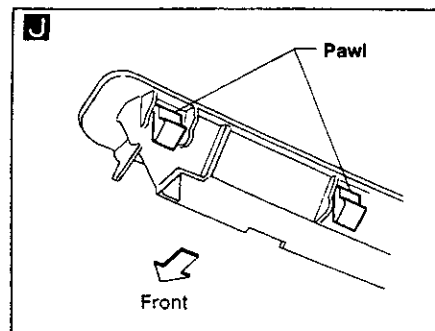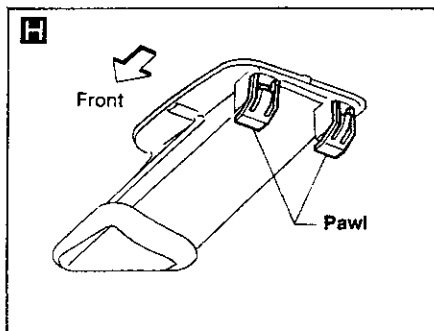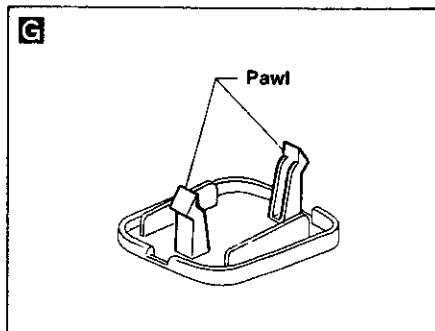

MBF081A







BF-60

INSTRUMENT PANEL






N14

REMOVAL — Instrument panel assembly

- ① Remove steering wheel. (Refer to ST section.)
- ② Remove steering column cover and combination switch.
- ③ Remove instrument lower cover on driver's side. **A**
- ④ Remove A/T finisher or shift lever bolt. **B**
- ⑤ Remove instrument lower center cover. **C**
- ⑥ Remove console mask. **D**
- ⑦ Remove console box.
- ⑧ Remove cluster lid C. **E**
- ⑨ Remove cluster lid A. **F**
- ⑩ Remove combination meter.
(Disconnect speedometer cable from A/T or M/T transaxle inside engine compartment.)
- ⑪ Remove radio with cassette deck.
- ⑫ Remove center ventilator.
- ⑬ Remove A/C or heater control.
- ⑭ Remove deck pocket.
- ⑮ Remove glove box.
- ⑯ Remove instrument lower cover on passenger side. **G**
- ⑰ Remove instrument panel reinforcement.
- ⑱ Remove instrument lower panel center.
- ⑲ Remove instrument lower cover.
- ⑳ Remove instrument upper mask.
- ㉑ Remove instrument panel and pads.

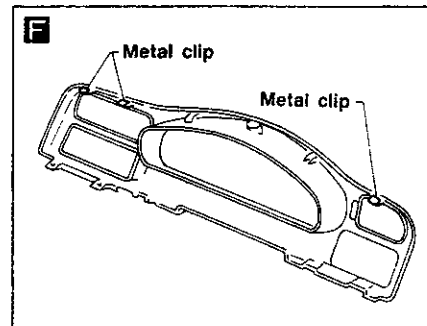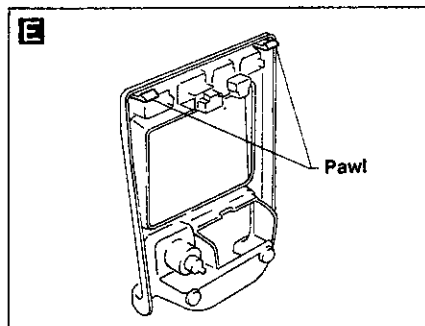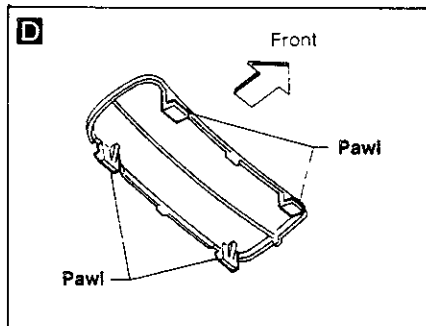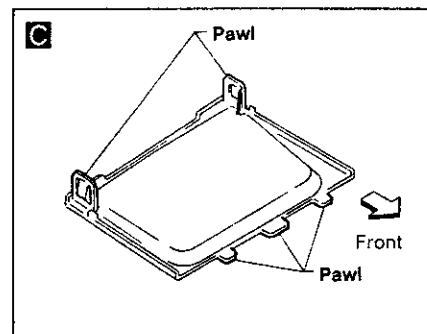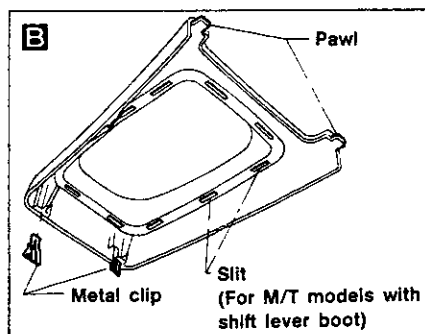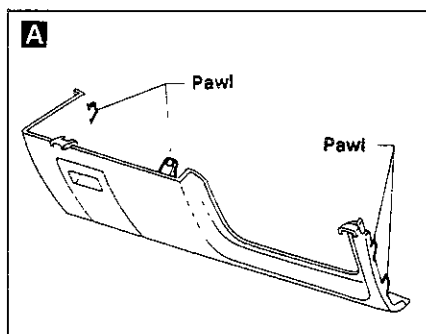

INSTRUMENT PANEL

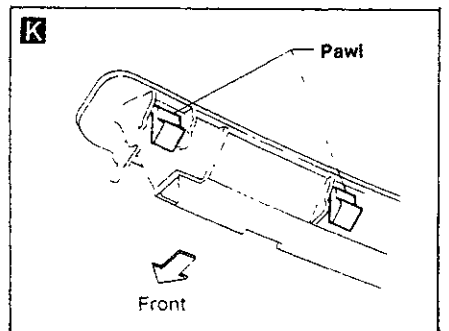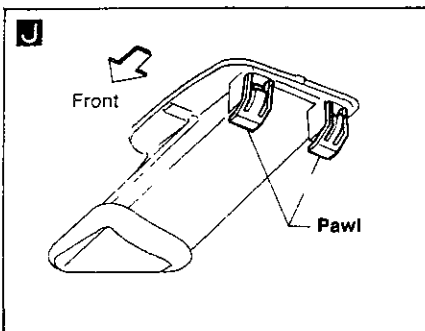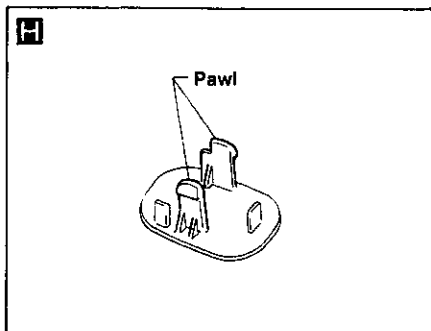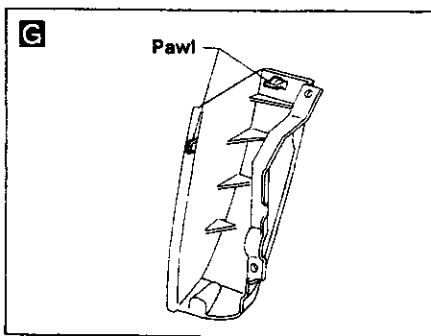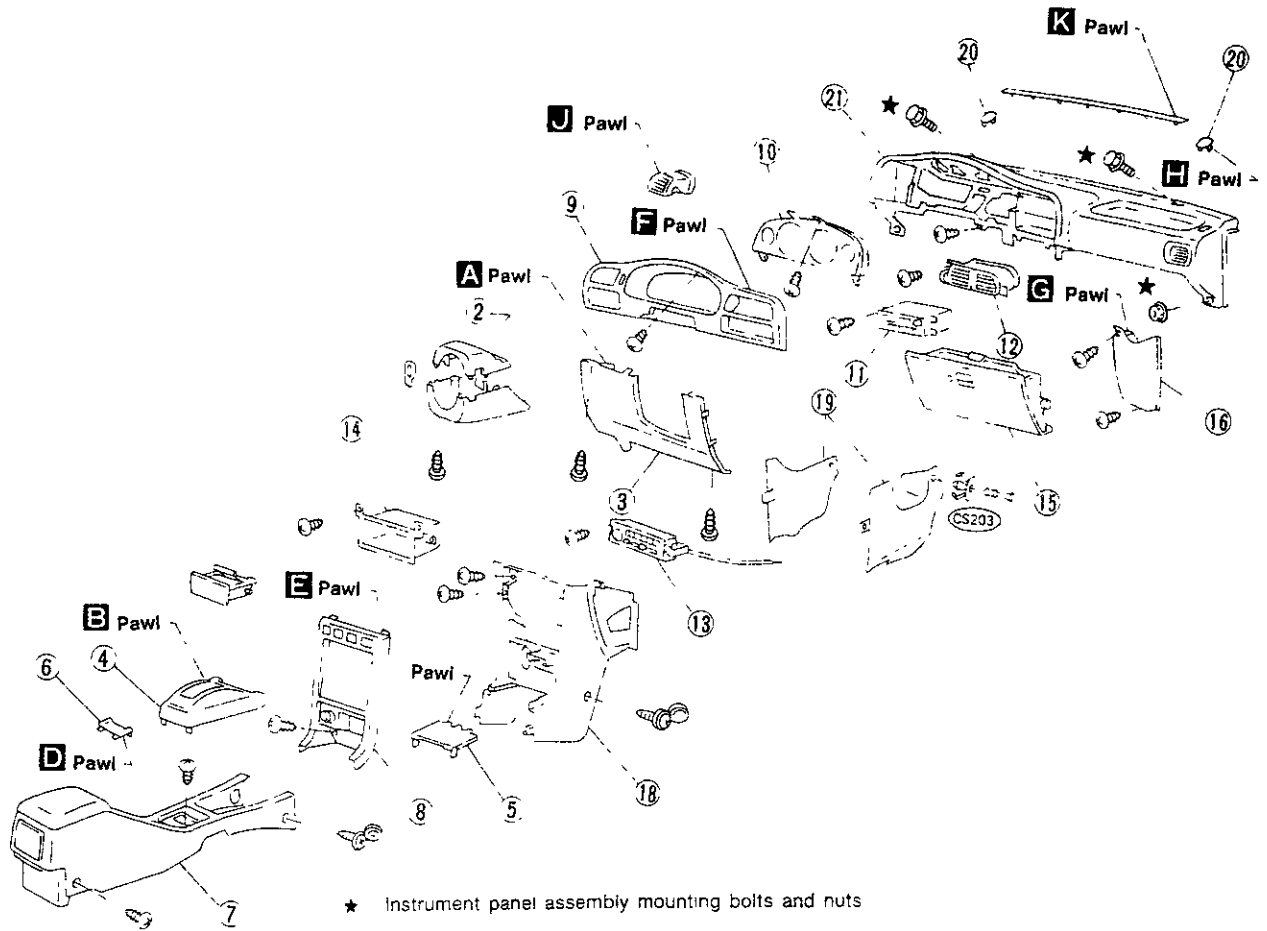

BF-62

MBF276A

INTERIOR AND EXTERIOR


Interior

B13 SEDAN


SIDE AND FLOOR TRIM

CAUTION:


Warp the tip of a flat-bladed screwdriver with a cloth when removing metal clips from garnishes.

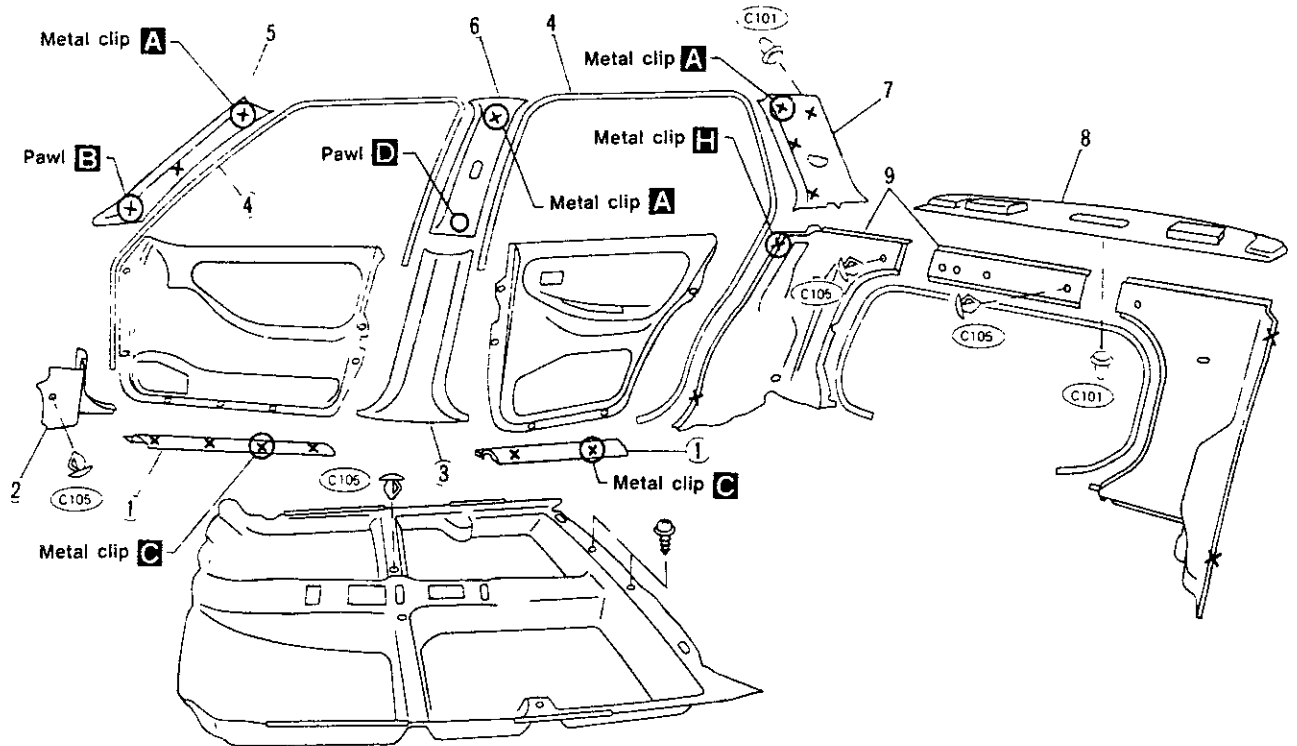

Front door

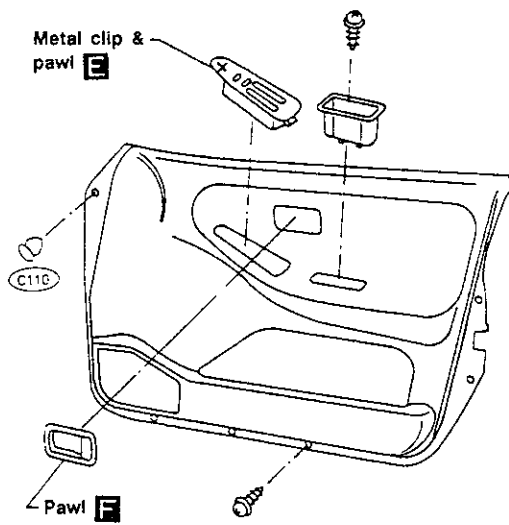

Rear door








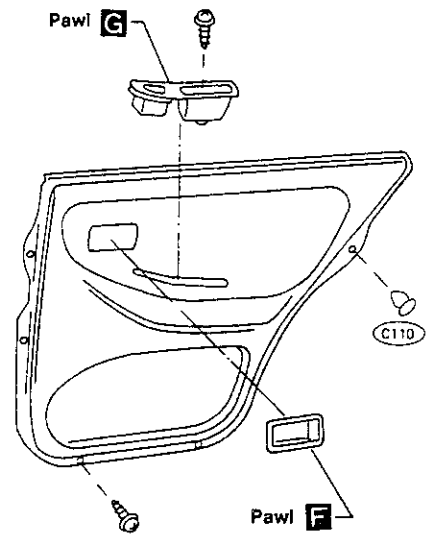


INTERIOR AND EXTERIOR

Interior (Cont'd)

REMOVAL — Body side trim

- ① Remove front and rear kicking plates.
- ② Remove dash side finisher.
- ③ Remove center pillar lower garnish.
- ④ Remove front and rear body side welts.
- ⑤ Remove front pillar garnish.
- ⑥ Remove center pillar upper garnish.
- ⑦ Remove rear pillar garnish.
- ⑧ Remove rear parcel shelf.
- ⑨ Remove rear seatback finisher.

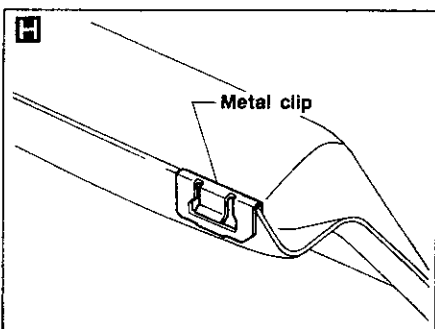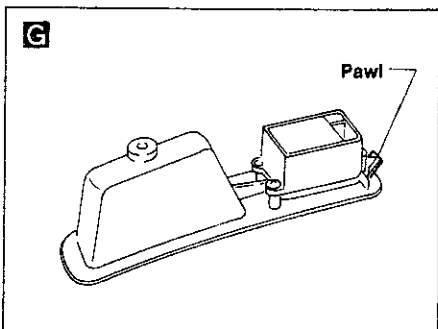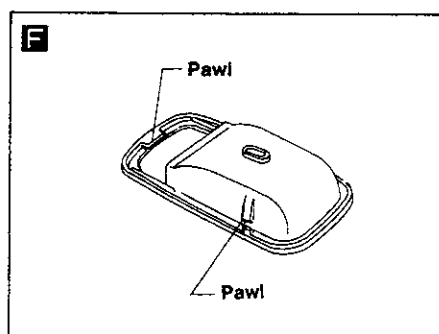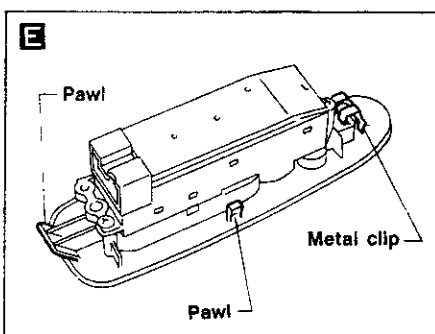
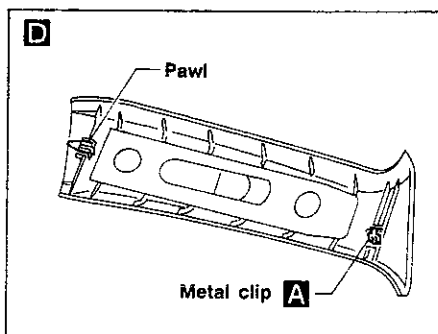
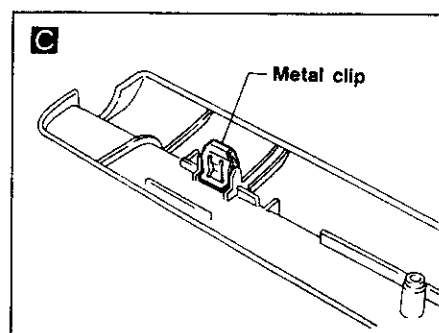
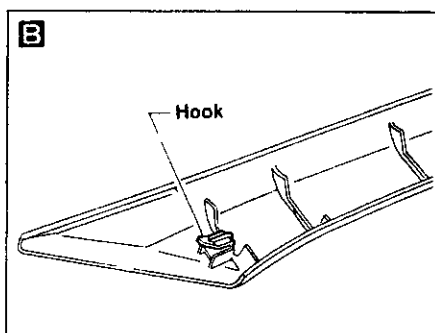
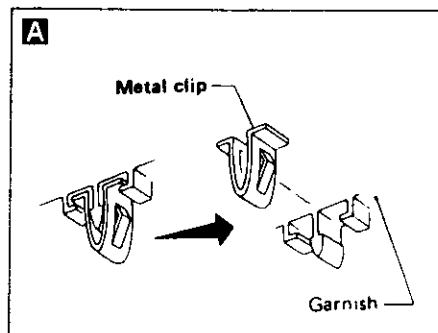


Interior

B13 SEDAN ROOM TRIM

REMOVAL — Headlining


- ① Remove body side trim. Refer to "REMOVAL — Body side trim" for details.
- ② Remove assist grips.
- ③ Remove interior lamp.
- ④ Remove sunroof switch. (Models equipped with sunroof)
- ⑤ Remove sunroof welt. (Models equipped with sunroof)
- ⑥ Remove clip **D**.
- ⑦ Remove sunvisors.
- ⑧ Remove rear-view mirror.
- ⑨ Remove headlining.

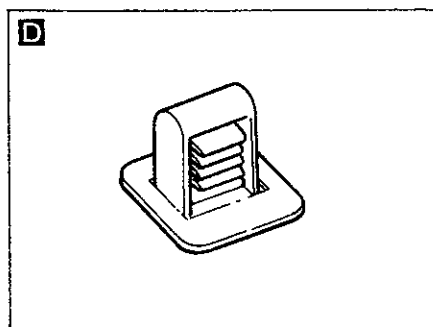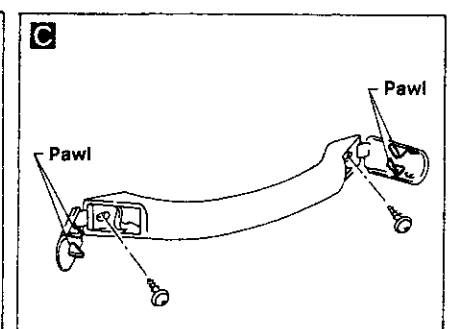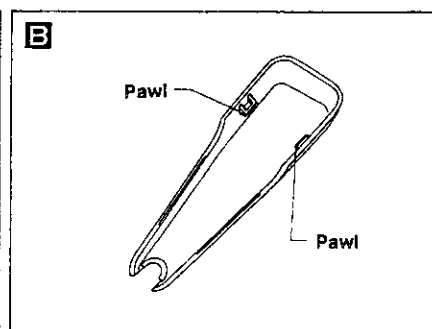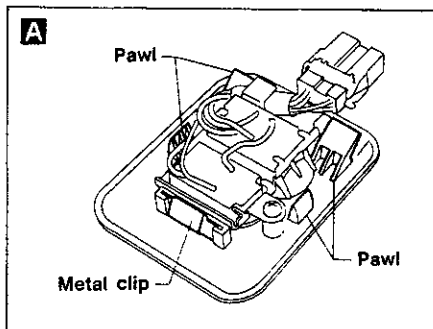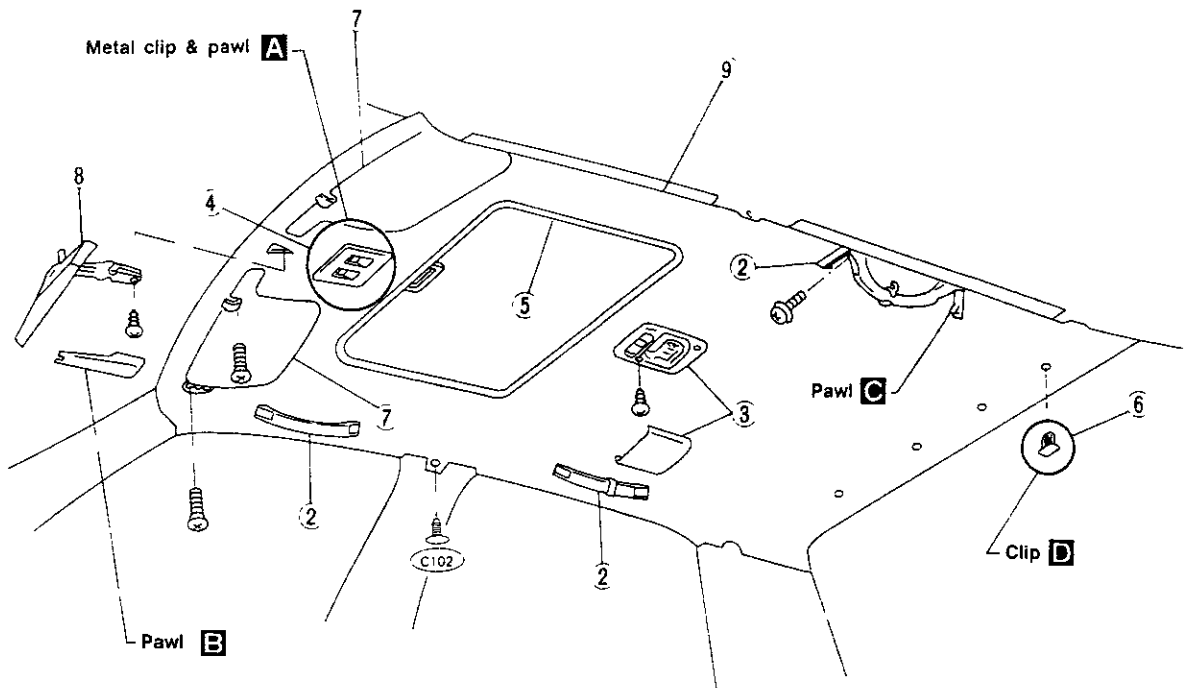

INTERIOR AND EXTERIOR

Interior (Cont'd)

LUGGAGE ROOM TRIM

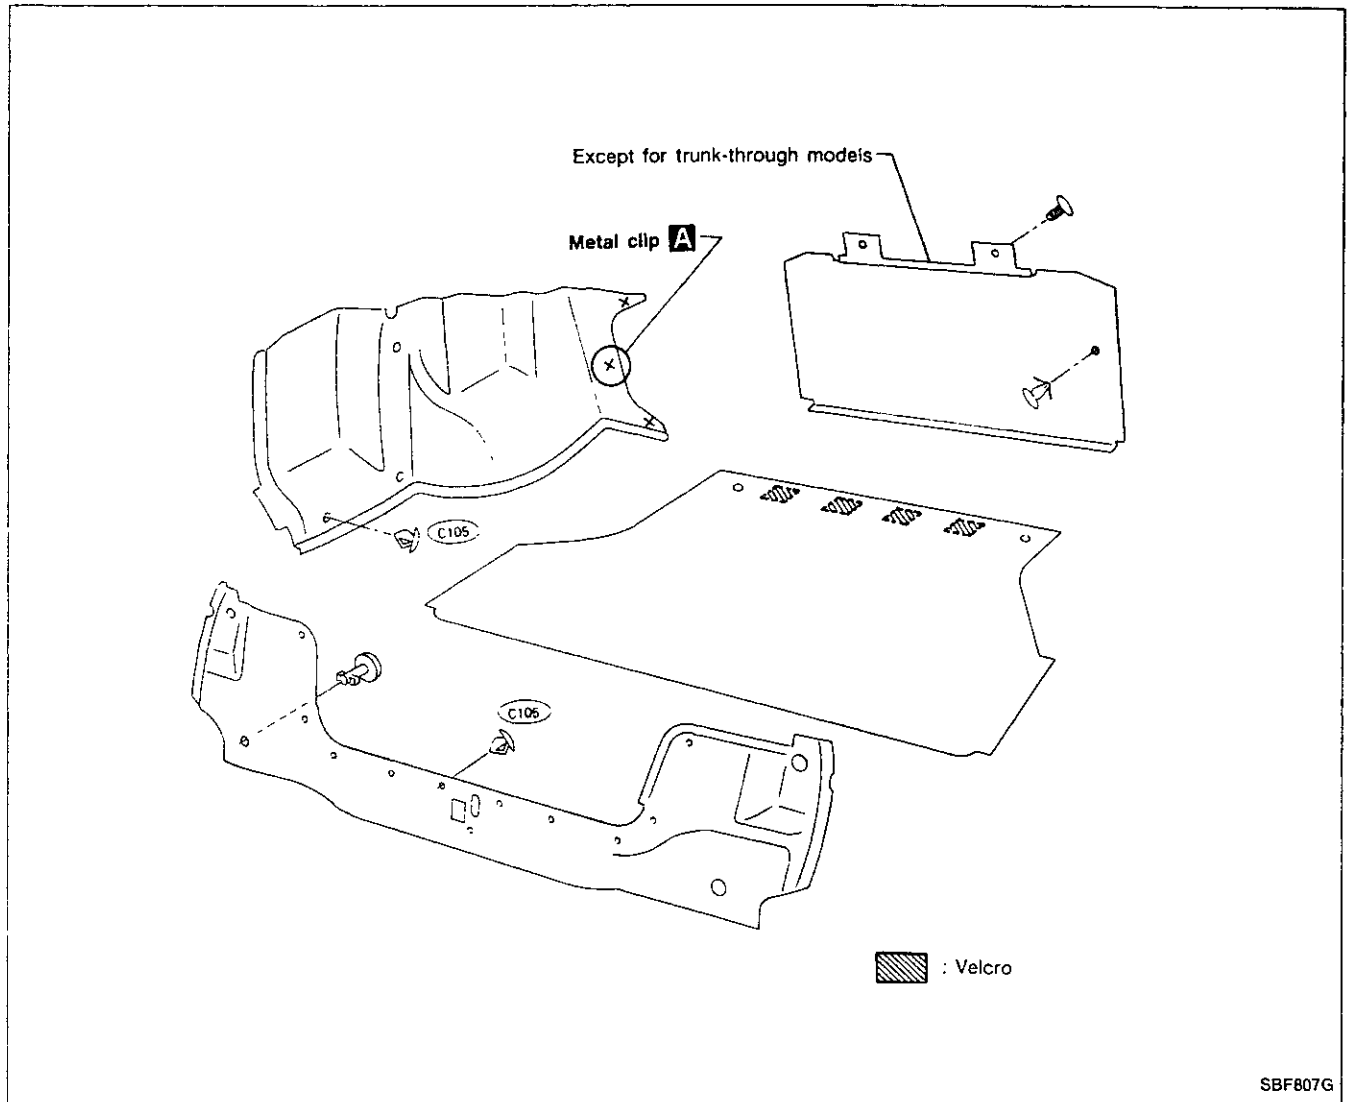

SBF807G

INTERIOR AND EXTERIOR

Interior (Cont'd)

B13 COUPE







SIDE, LUGGAGE AND FLOOR TRIM

CAUTION:

- a. Be sure to remove front pillar, luggage side upper garnish, luggage side lower garnish and luggage room rear upper garnish by pulling them straight out.
- b. Wrap the tip of flat-bladed screwdriver with a cloth when removing metal clips from garnishes.


REMOVAL — Body side trim

- ① Remove kicking plate.
- ② Remove dash side finisher.
- ③ Remove body side welt.
- ④ Remove front pillar garnish.
- ⑤ Remove luggage room side upper finisher.
- ⑥ Remove luggage side lower finisher.
- ⑦ Remove luggage side upper finisher.
- ⑧ Remove luggage room rear upper finisher.
- ⑨ Remove luggage room rear finisher.
- ⑩ Remove luggage room side finisher.

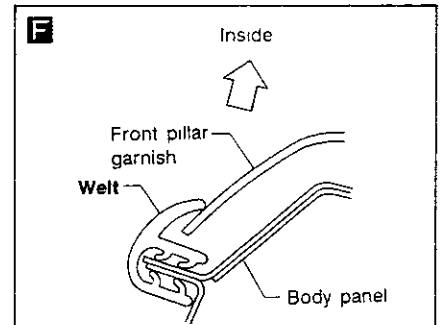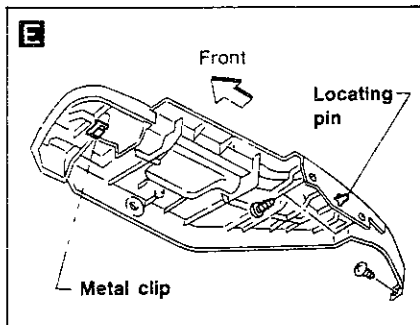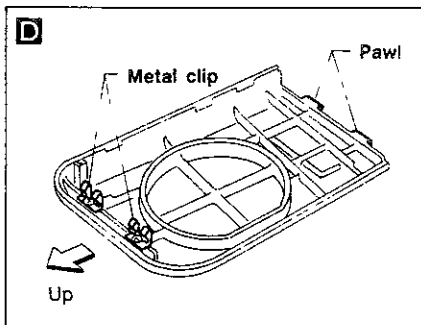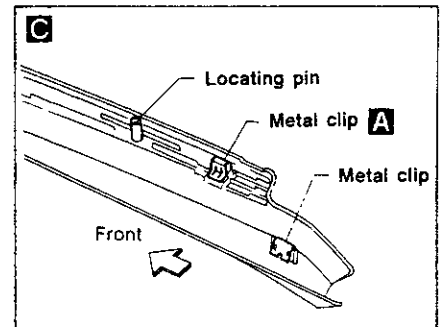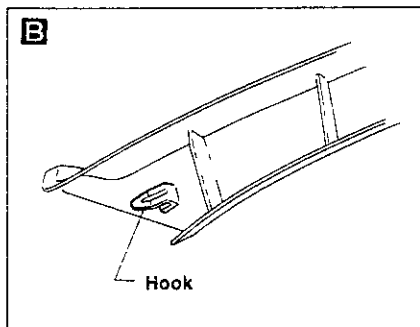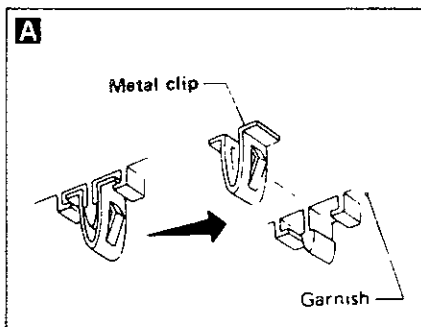

INTERIOR AND EXTERIOR

Interior (Cont'd)

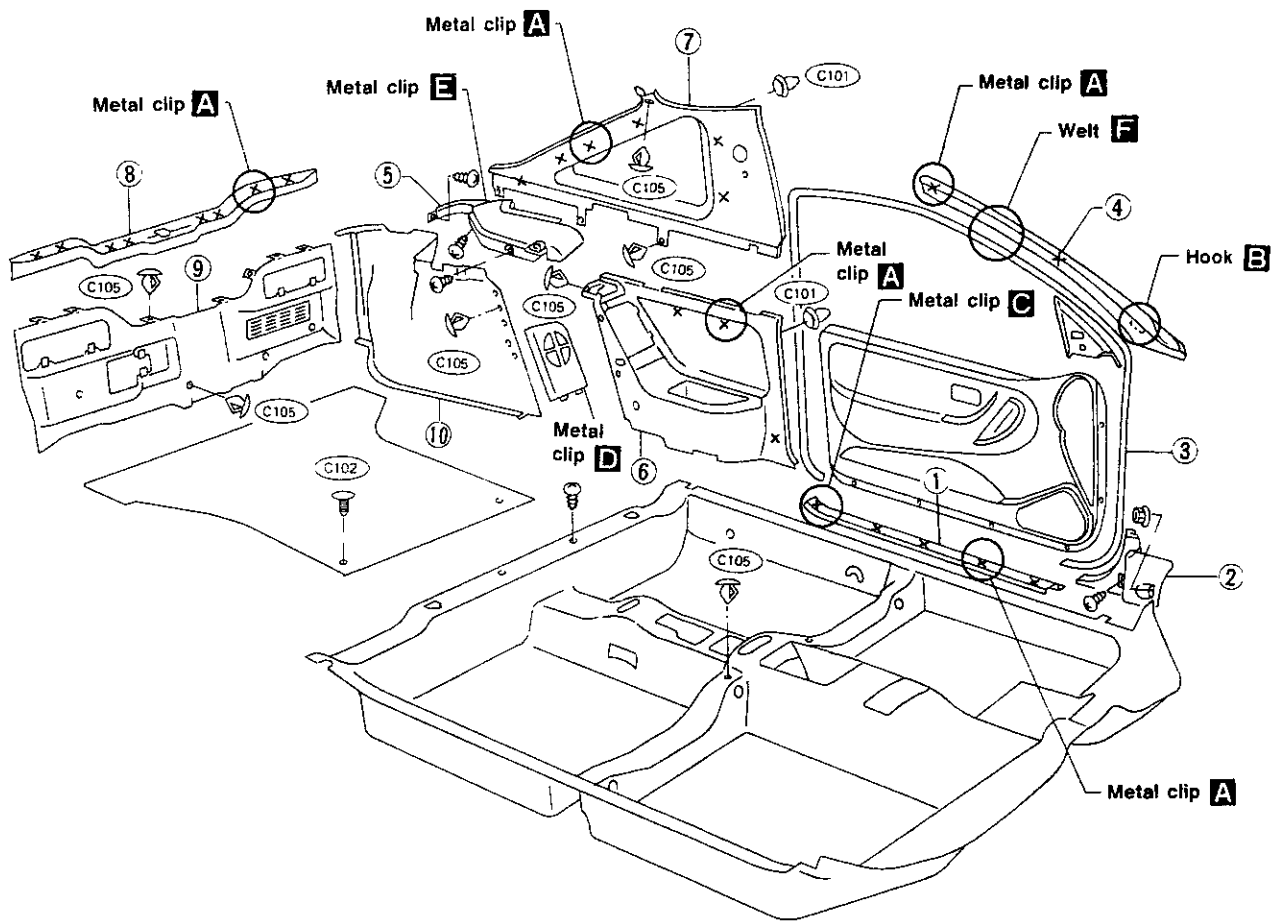


INTERIOR AND EXTERIOR

Interior (Cont'd)

DOOR TRIM

REMOVAL — Door trim

- ① Remove inside handle escutcheon. (Refer to "DOOR".)
- ② Remove door grip escutcheon.
- ③ Remove the seven screws.
- ④ Remove clips securing door finisher.
- ⑤ Lift out door finisher. Disconnect main and door harness.

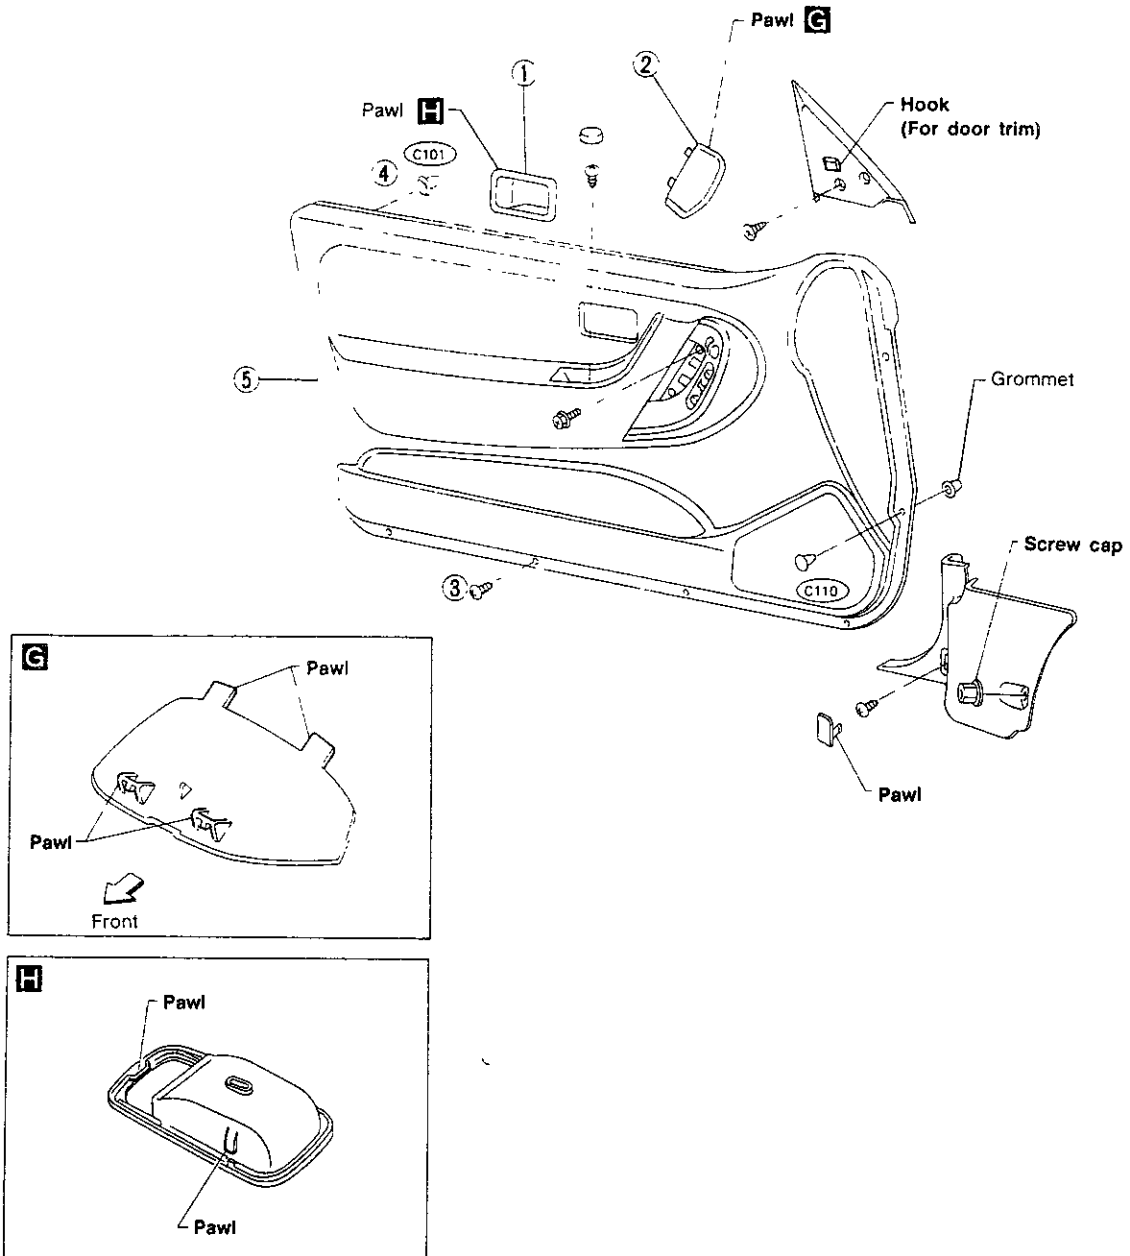

MBF282A

INTERIOR AND EXTERIOR

Interior (Cont'd)




BACK DOOR TRIM

CAUTION:

Wrap the tip of flat-bladed screwdriver with a cloth when removing metal clips from garnishes.

REMOVAL — Back door trim

- ① Remove back door window welt.
- ② Remove back door lower finisher.
- ③ Remove back door upper finisher.
- ④ Remove parcel shelf hook.
- ⑤ Remove back door side finisher.

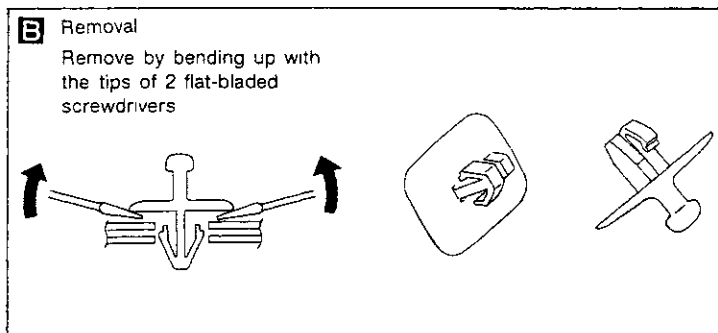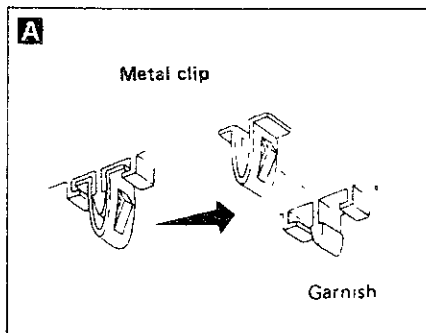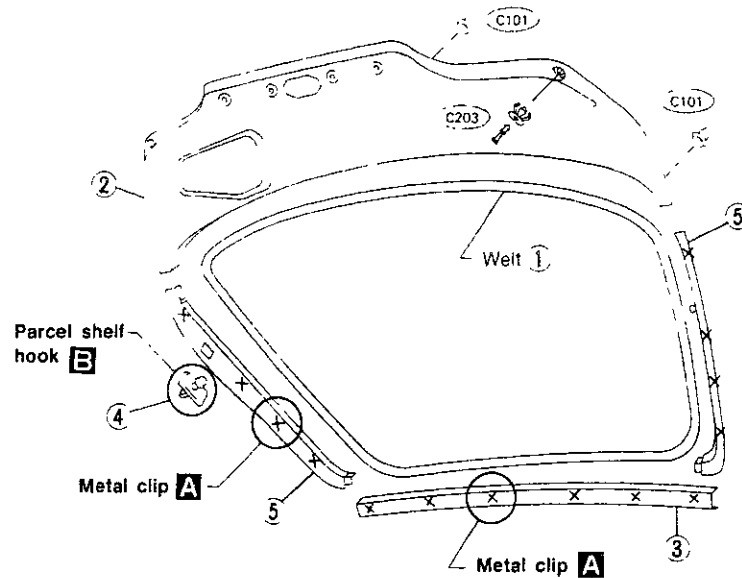

MBF084A

Interior (Cont'd)







ROOF TRIM

CAUTION:

Wrap the tip of long flat-bladed screwdriver with cloth when removing metal clips from roof garnish.

REMOVAL — Headlining

- ① Remove body side trim. Refer to "REMOVAL — Body side trim" for details.
- ② Remove welt.
- ③ Remove interior lamp assembly.
- ④ Remove left and right sunvisors.
- ⑤ Remove rear-view mirror.
- ⑥ Remove roof rear garnish.
- ⑦ Remove headlining.

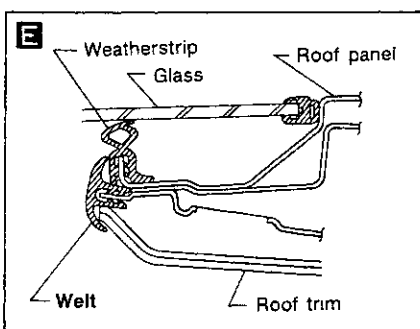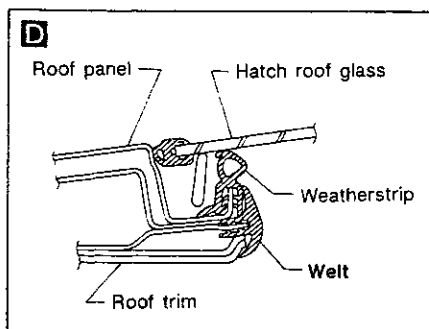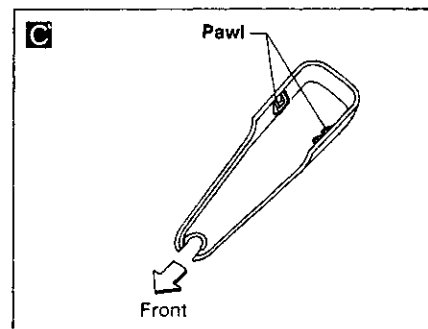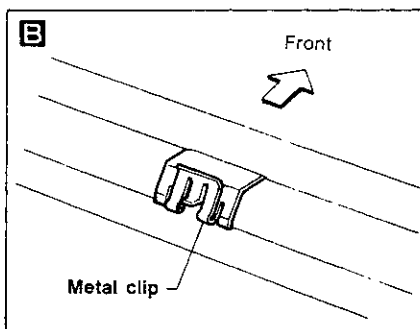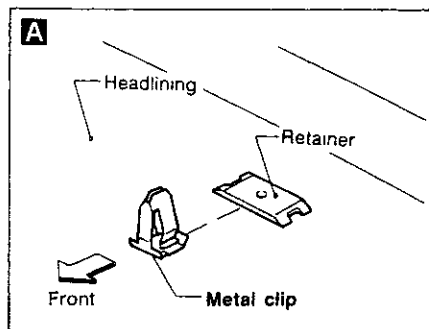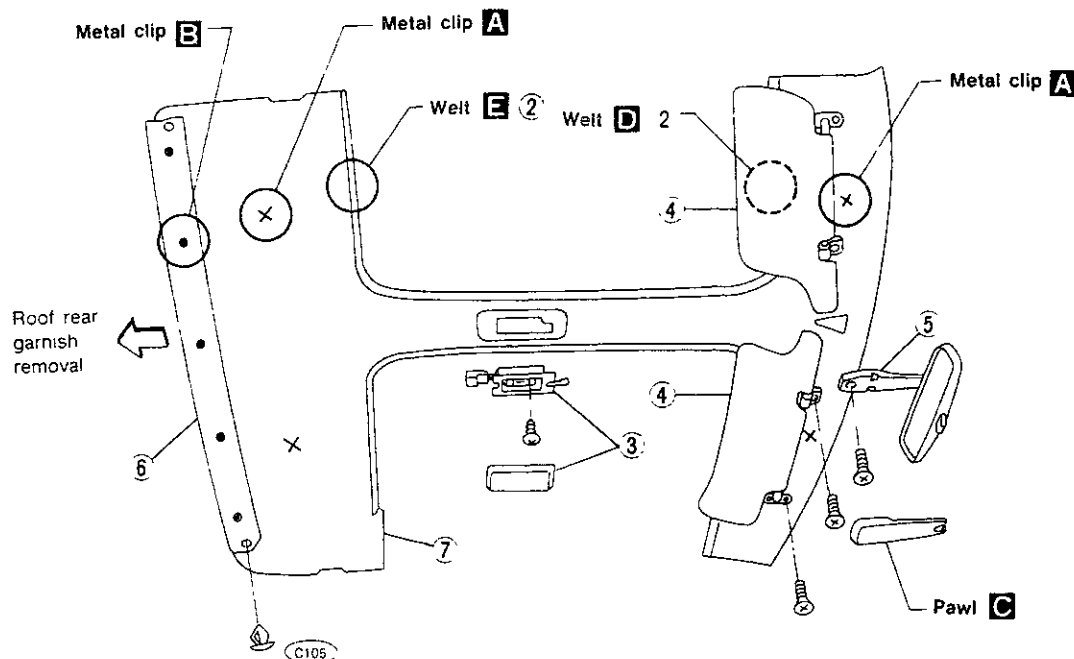

INTERIOR AND EXTERIOR







Interior (Cont'd)

N14 SEDAN

SIDE AND FLOOR TRIM


REMOVAL — Body side trim

- ① Remove front and rear kicking plates.
- ② Remove dash side finisher.
- ③ Remove center pillar lower garnish.
- ④ Remove front and rear body side welts.
- ⑤ Remove front pillar garnish.
- ⑥ Remove center pillar upper garnish.
- ⑦ Remove rear pillar finisher.
- ⑧ Remove rear parcel shelf.
- ⑨ Rear seatback finisher.

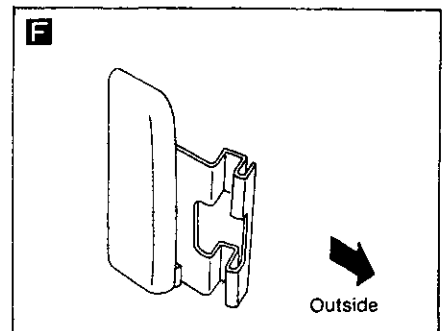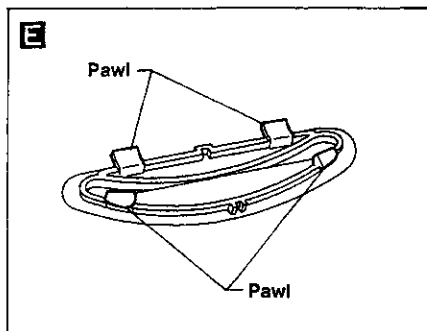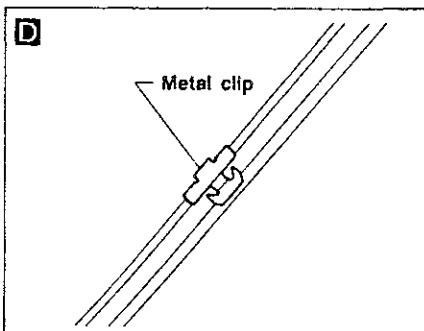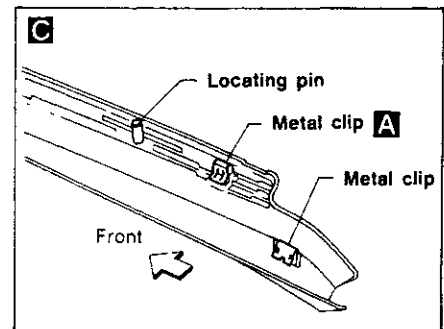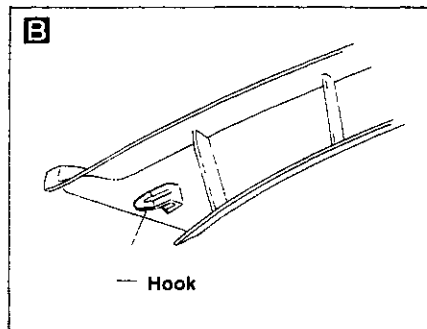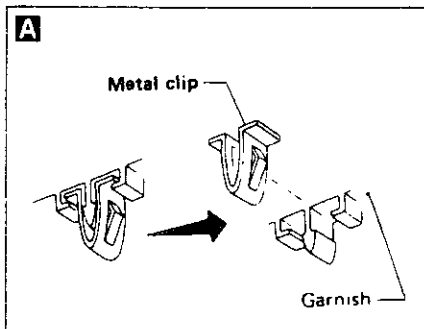

INTERIOR AND EXTERIOR

Interior (Cont'd)

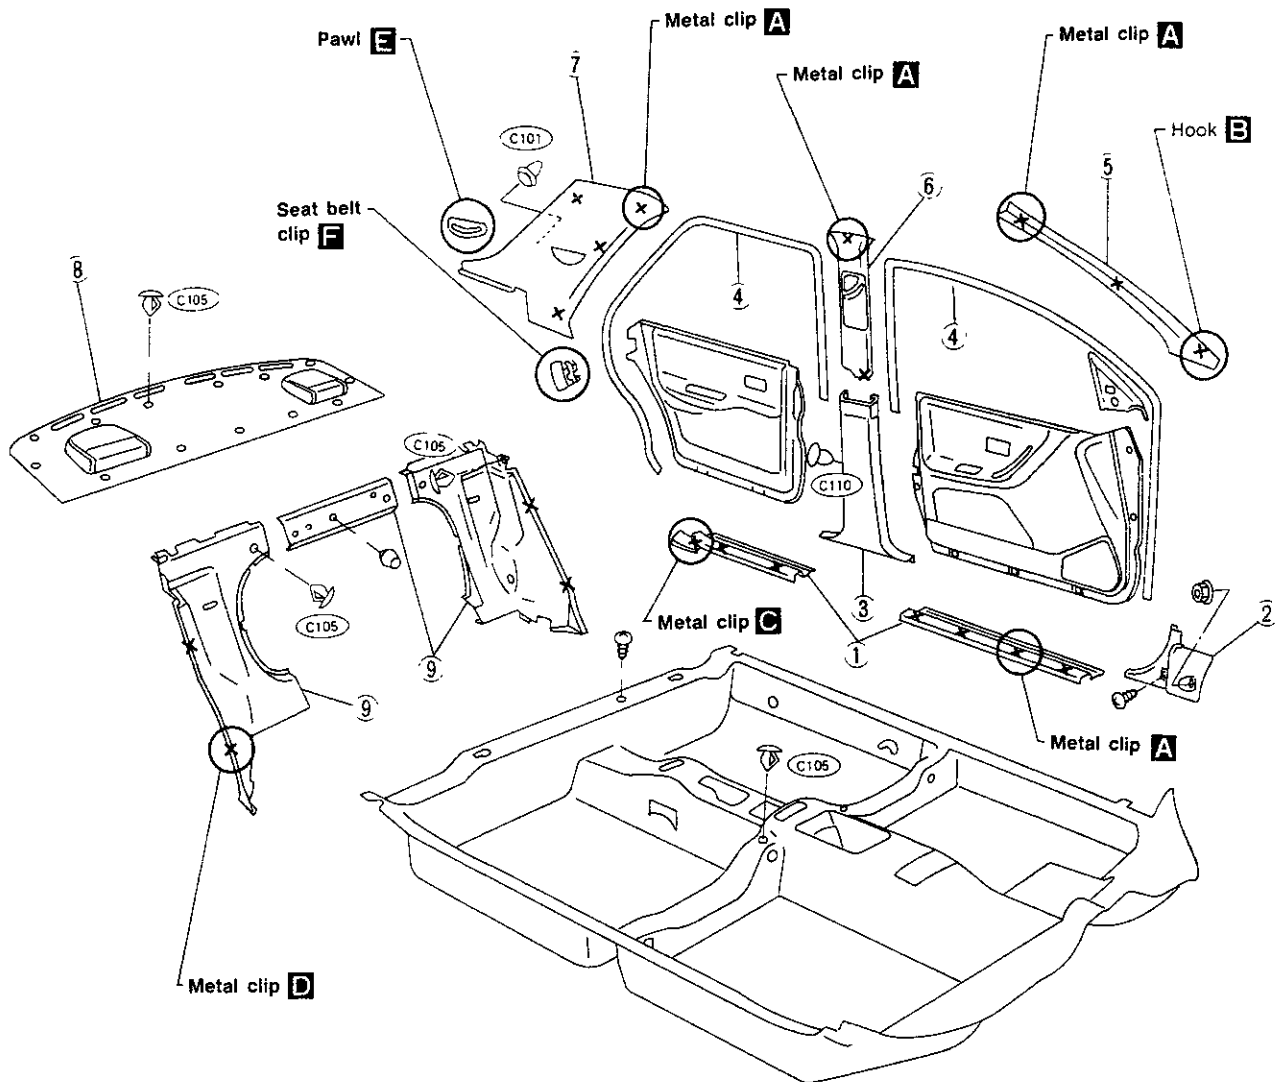


INTERIOR AND EXTERIOR

Interior (Cont'd)

DOOR TRIM REMOVAL — Door trim

- ① Remove inside handle escutcheon.
(Refer to "DOOR".)
- ② Remove power window switch finisher.
- ③ Remove door grip escutcheon.
- ④ Remove screws.
- ⑤ Remove clips securing door finisher.
- ⑥ Lift out door finisher. Disconnect main and door harnesses.

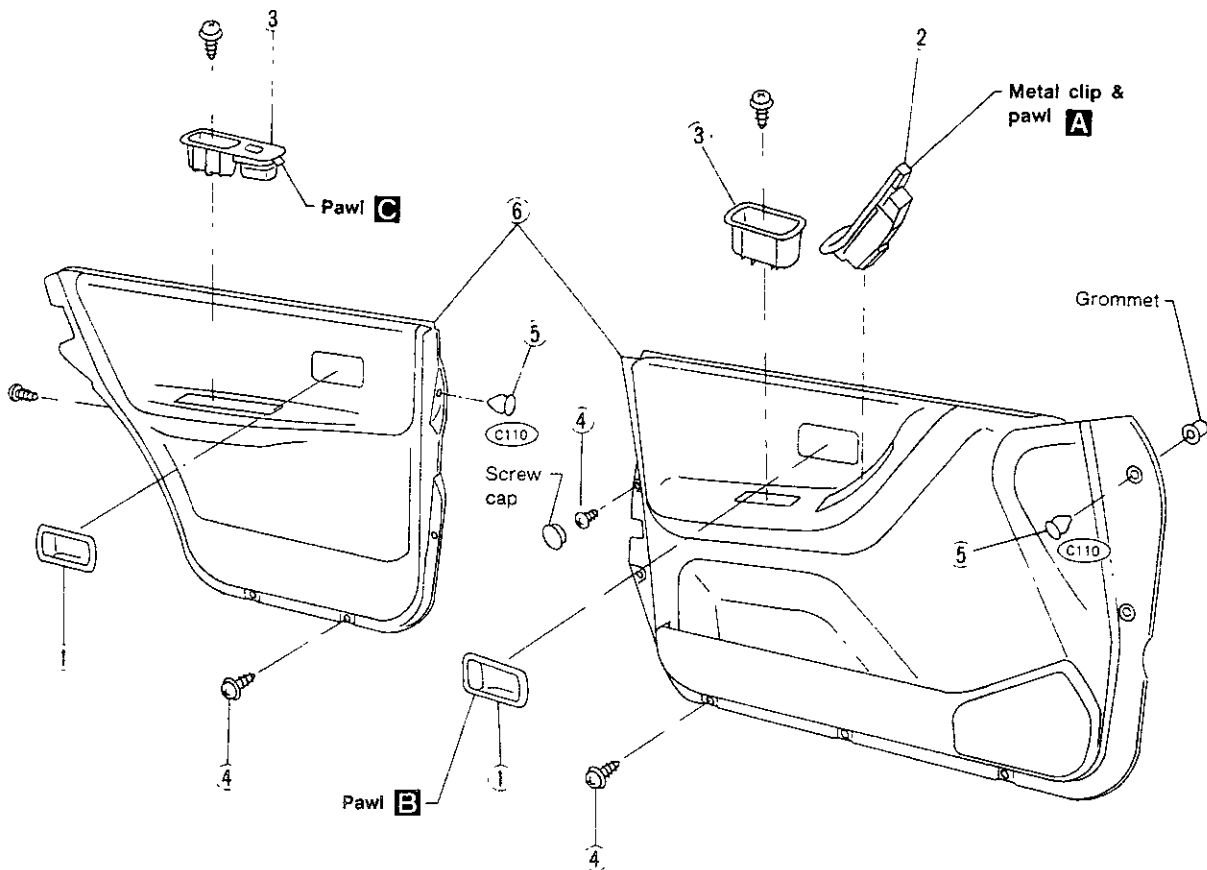






MBF284A

N14 5-DOOR HATCHBACK

SIDE, LUGGAGE AND FLOOR TRIM


REMOVAL — Body side trim

- ① Remove front and rear kicking plates.
- ② Remove dash side finisher.
- ③ Remove center pillar lower garnish.
- ④ Remove front and rear body side welts.
- ⑤ Remove front pillar garnish.
- ⑥ Remove center pillar garnish.
- ⑦ Remove rear parcel shelf side finisher.
- ⑧ Remove rear pillar finisher.
- ⑨ Remove rear wheelhouse finisher.
- ⑩ Remove luggage room rear plate.
- ⑪ Remove luggage room rear finisher.
- ⑫ Remove luggage room side lower finisher.

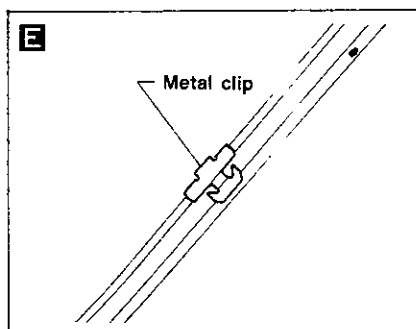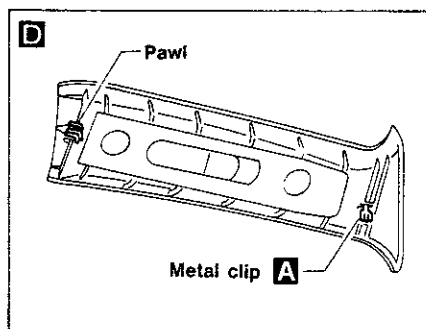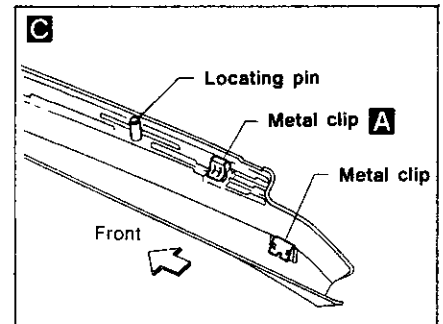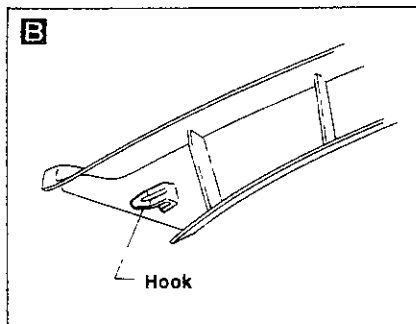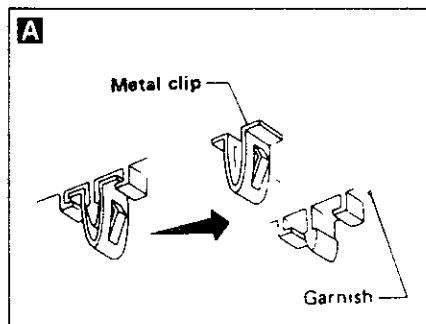

INTERIOR AND EXTERIOR

Interior (Cont'd)





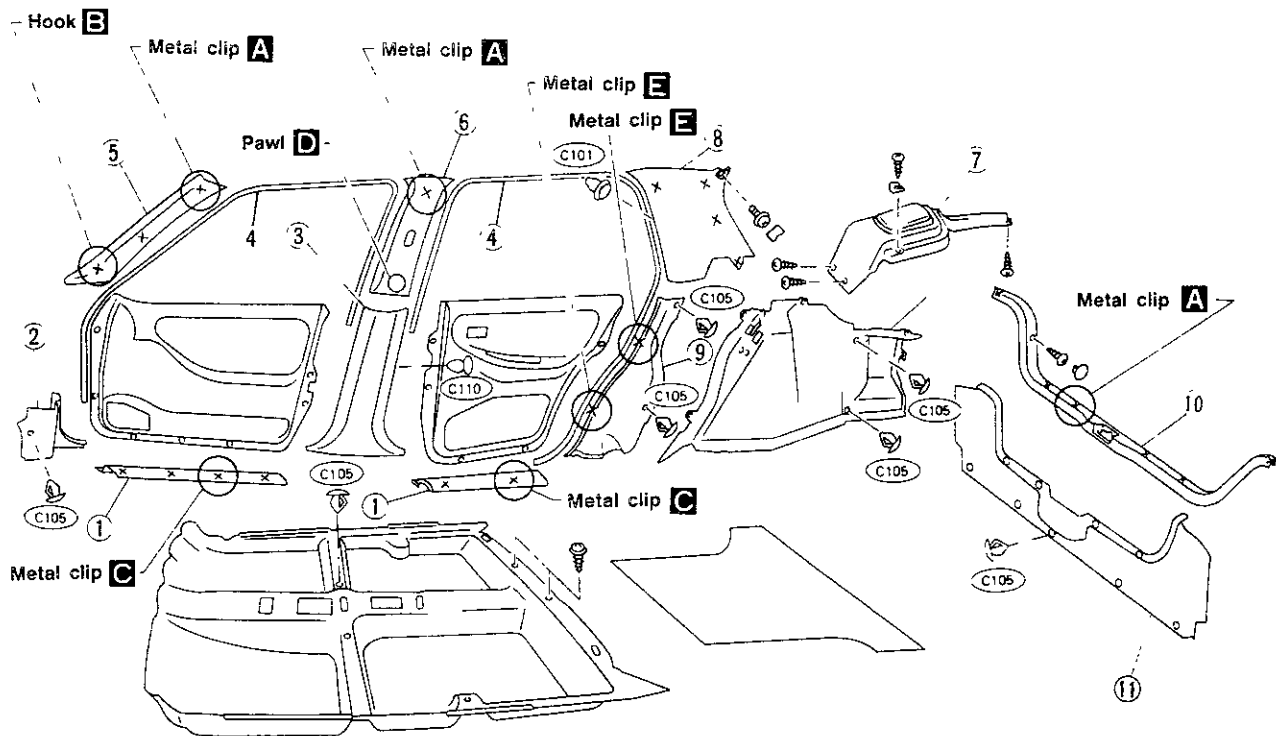


N14 3-DOOR HATCHBACK

SIDE, LUGGAGE AND FLOOR TRIM


REMOVAL — Body side trim

- ① Remove kicking plate.
- ② Remove dash side finisher.
- ③ Remove body side welt.
- ④ Remove rear parcel shelf side finisher.
- ⑤ Remove luggage rear plate.
- ⑥ Remove luggage rear finisher.
- ⑦ Remove rear side finisher.
- ⑧ Remove luggage side lower finisher.
- ⑨ Remove rear pillar finisher.

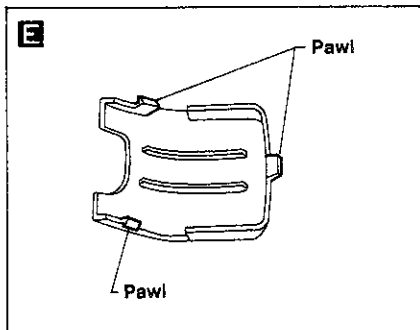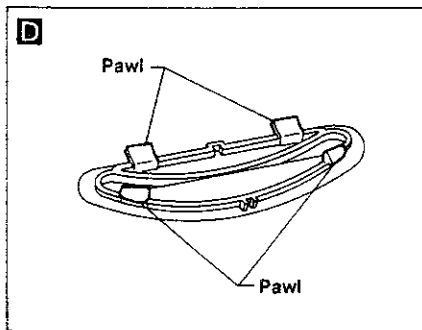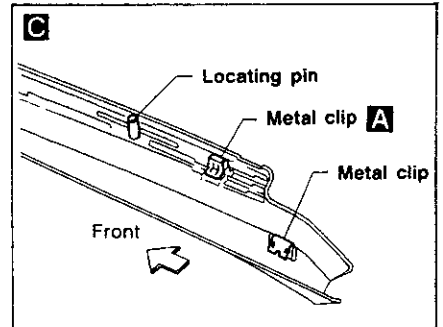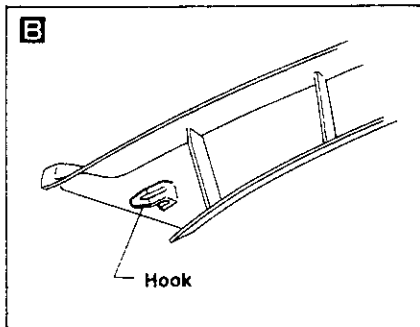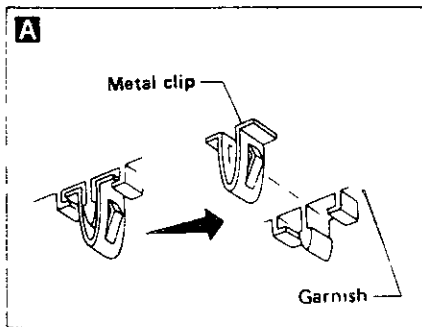

INTERIOR AND EXTERIOR

Interior (Cont'd)

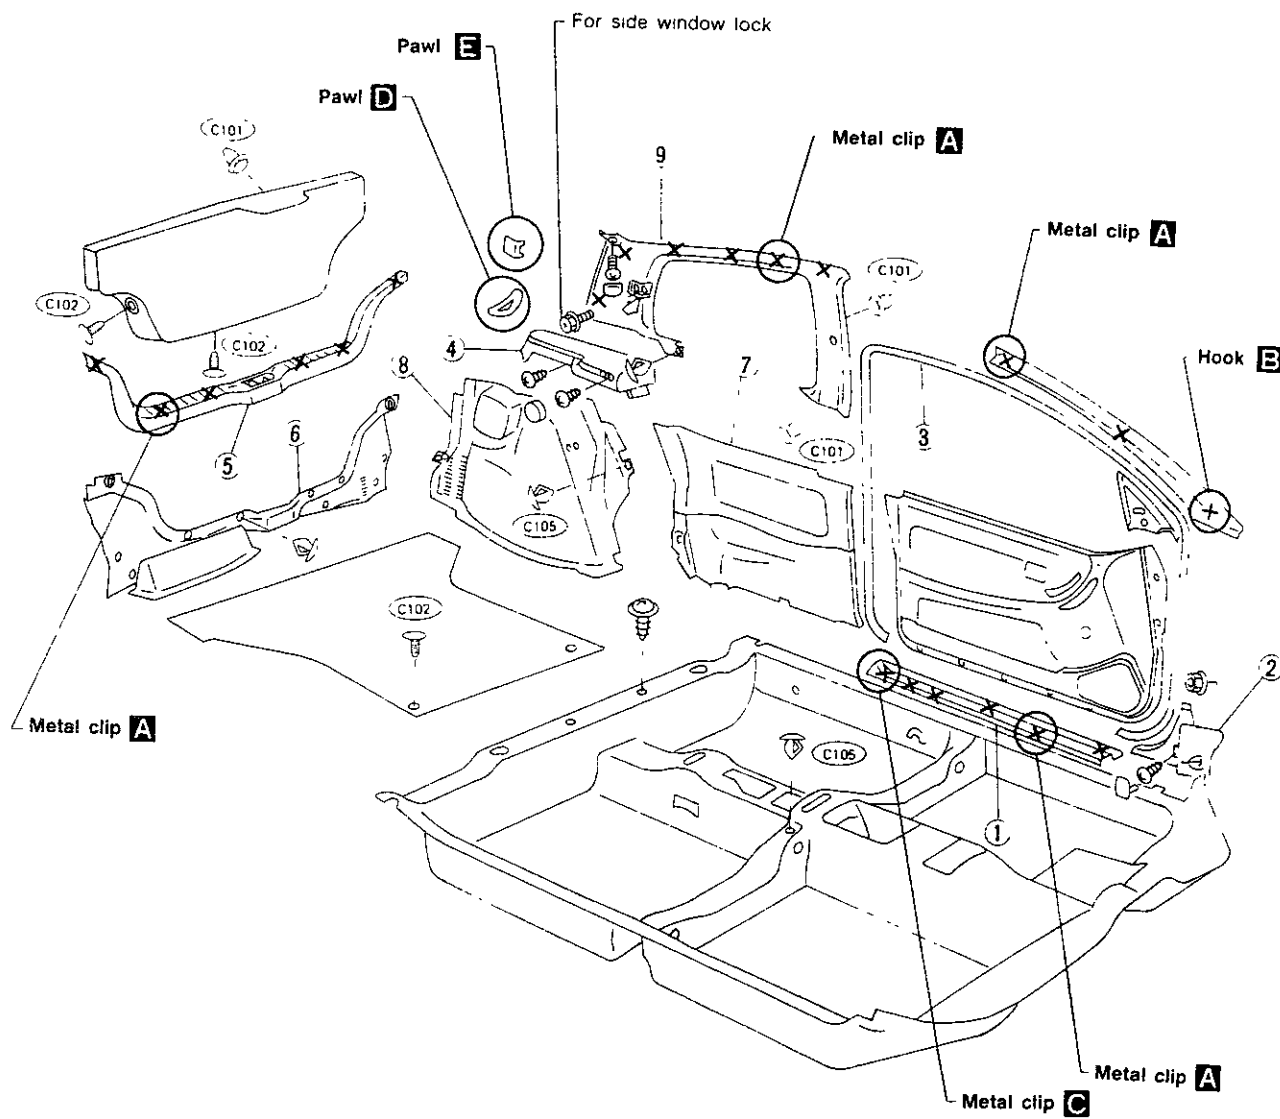


INTERIOR AND EXTERIOR

Interior (Cont'd)

DOOR TRIM REMOVAL — Door trim REMOVAL — Door trim

- ① Remove inside handle escutcheon. (Refer to "DOOR".)
- ② Remove window regulator handle (Manual window models).
- ③ Remove door grip escutcheon.
- ④ Remove the four screws.
- ⑤ Remove clips securing door finisher.
- ⑥ Lift out door finisher.

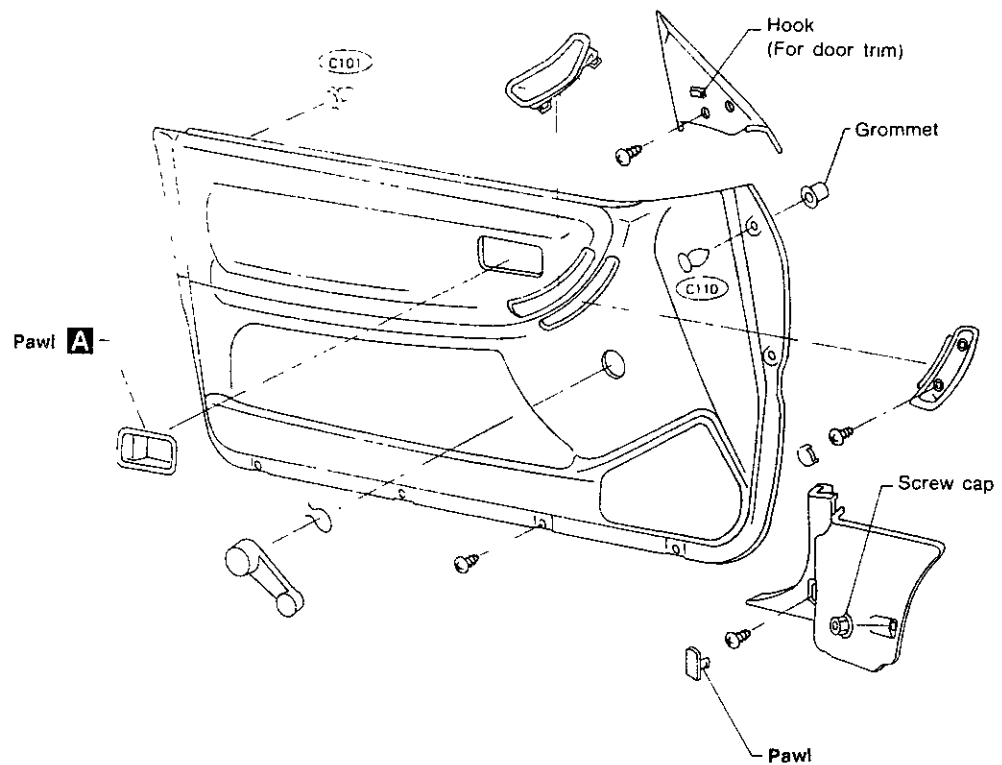

MBF287A

INTERIOR AND EXTERIOR





Interior (Cont'd)

N14 5-DOOR HATCHBACK AND 3-DOOR HATCHBACK

ROOM TRIM

REMOVAL — Headlining

- ① Remove body side trim. Refer to "REMOVAL — Body side trim" for details.
- ② Remove assist grip.
- ③ Remove interior lamp.
- ④ Remove rear roof garnish.
- ⑤ Remove sunvisors.
- ⑥ Remove rear-view mirror.
- ⑦ Remove headlining.

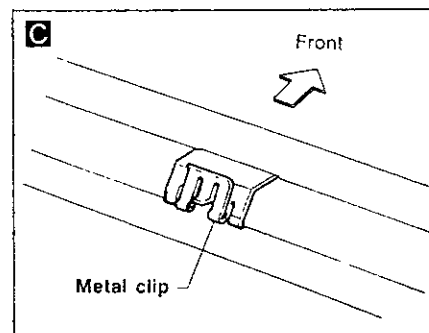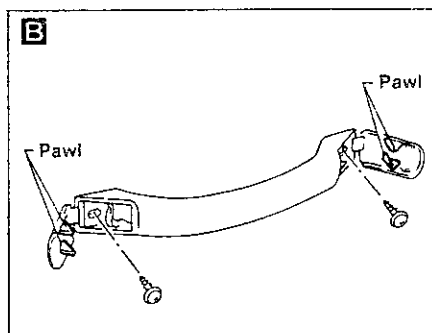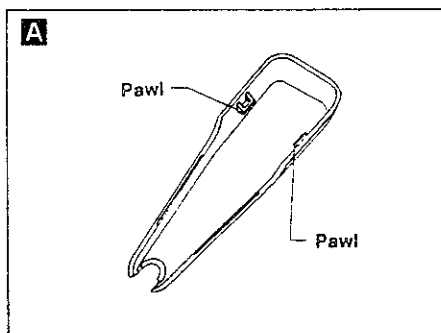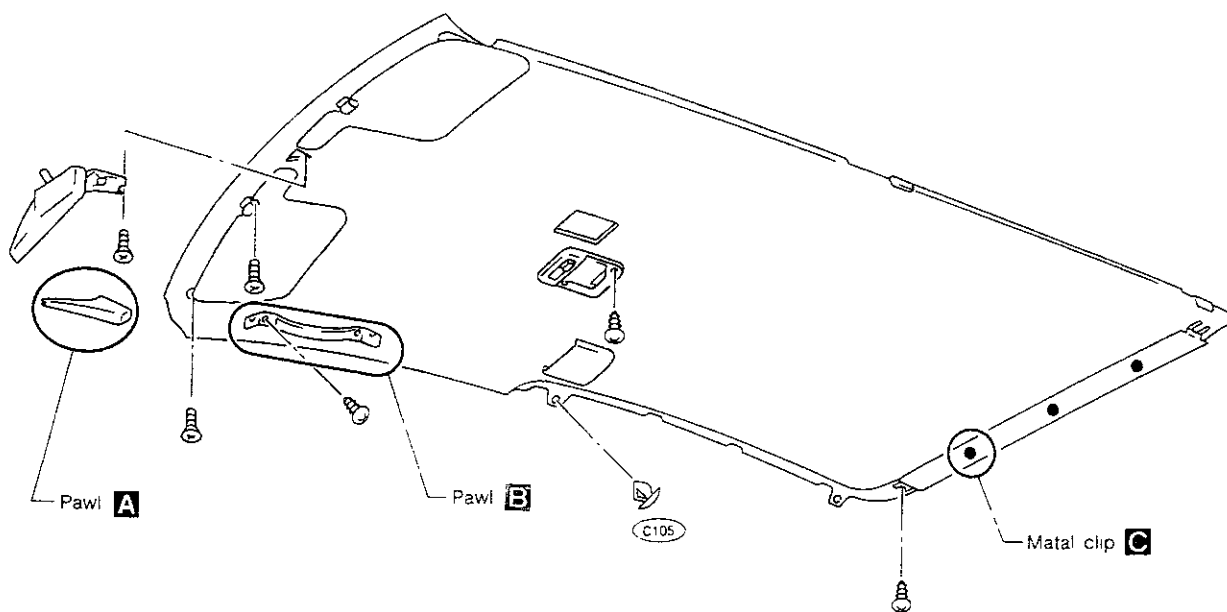

MBF341A

INTERIOR AND EXTERIOR

Interior (Cont'd)





N14 5-DOOR HATCHBACK BACK DOOR TRIM

CAUTION:

Warp the tip of a flat-bladed screwdriver with a cloth when removing metal clips from garnishes.

REMOVAL — Back door window welt.



- ① Remove back door window welt.
- ② Remove back door lower finisher.
- ③ Remove back door upper finisher.
- ④ Remove parcel shelf hook.
- ⑤ Remove back door side finisher.

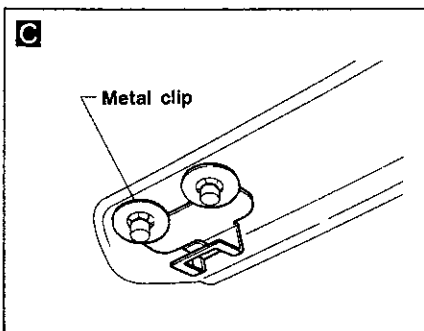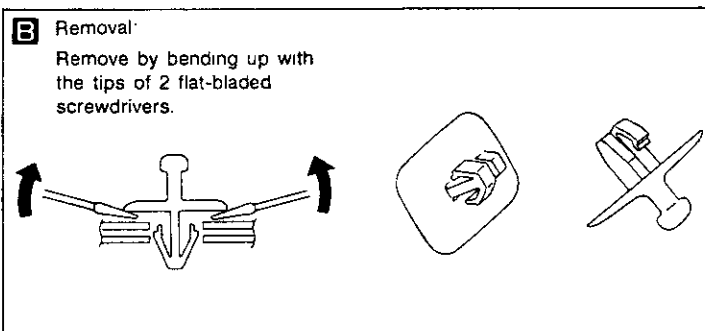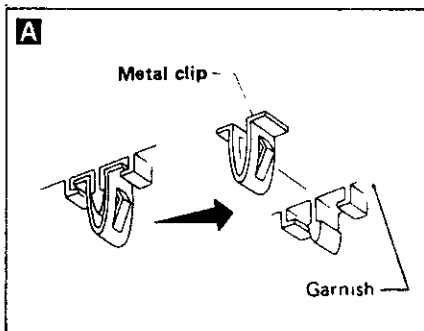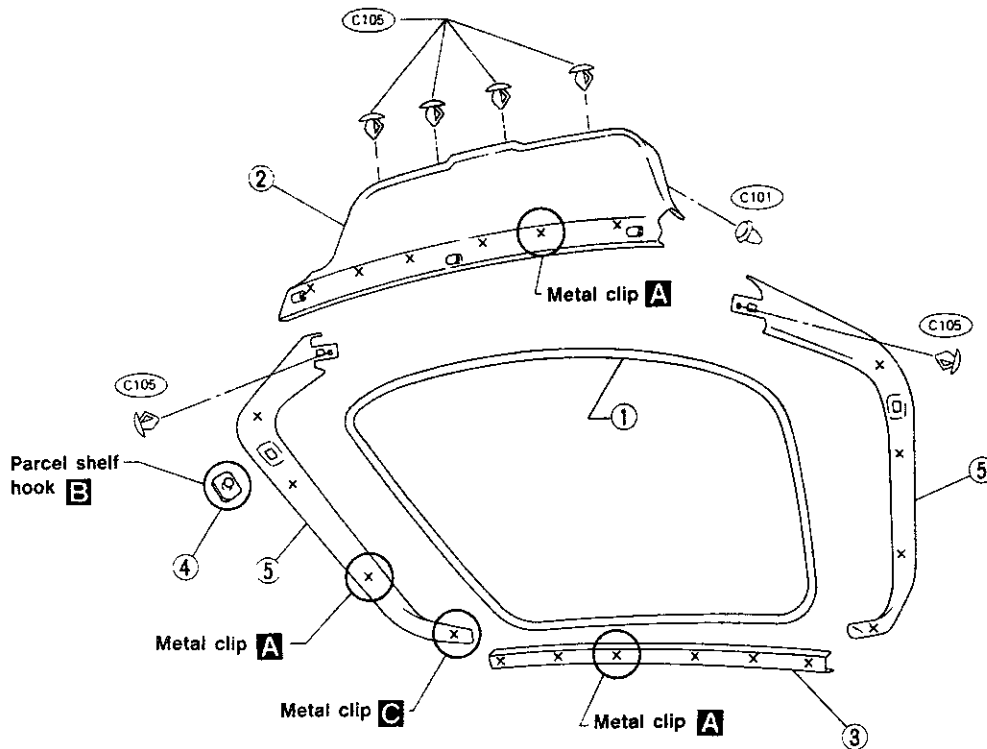

MBF166A

Exterior





B13

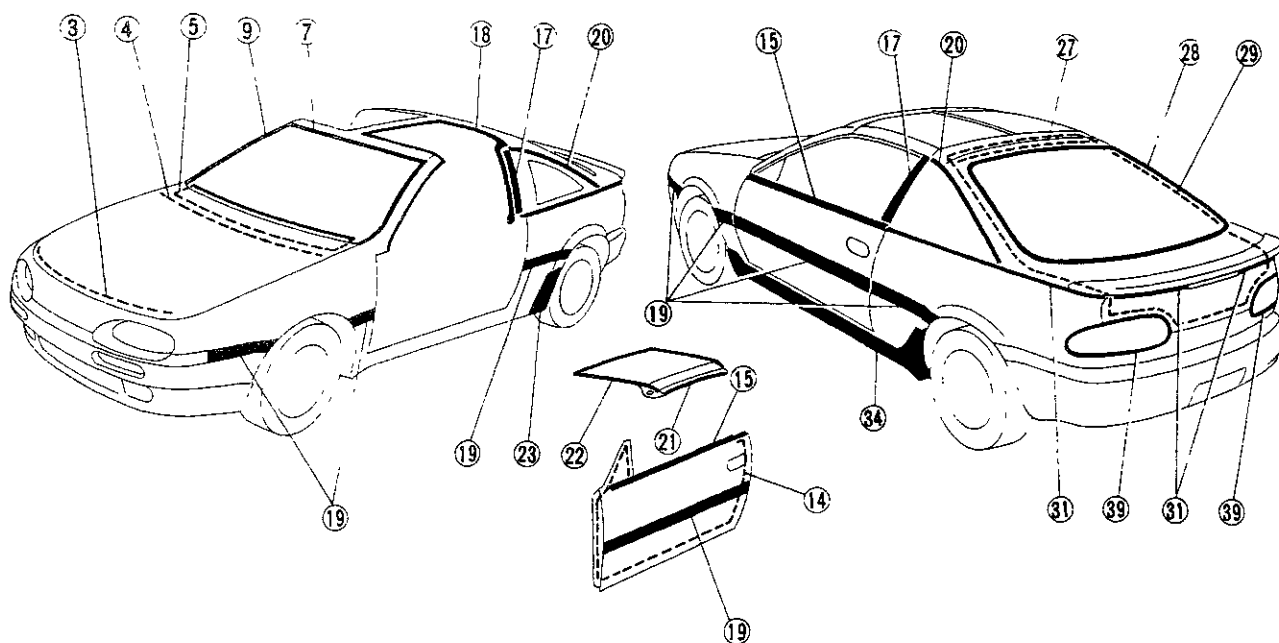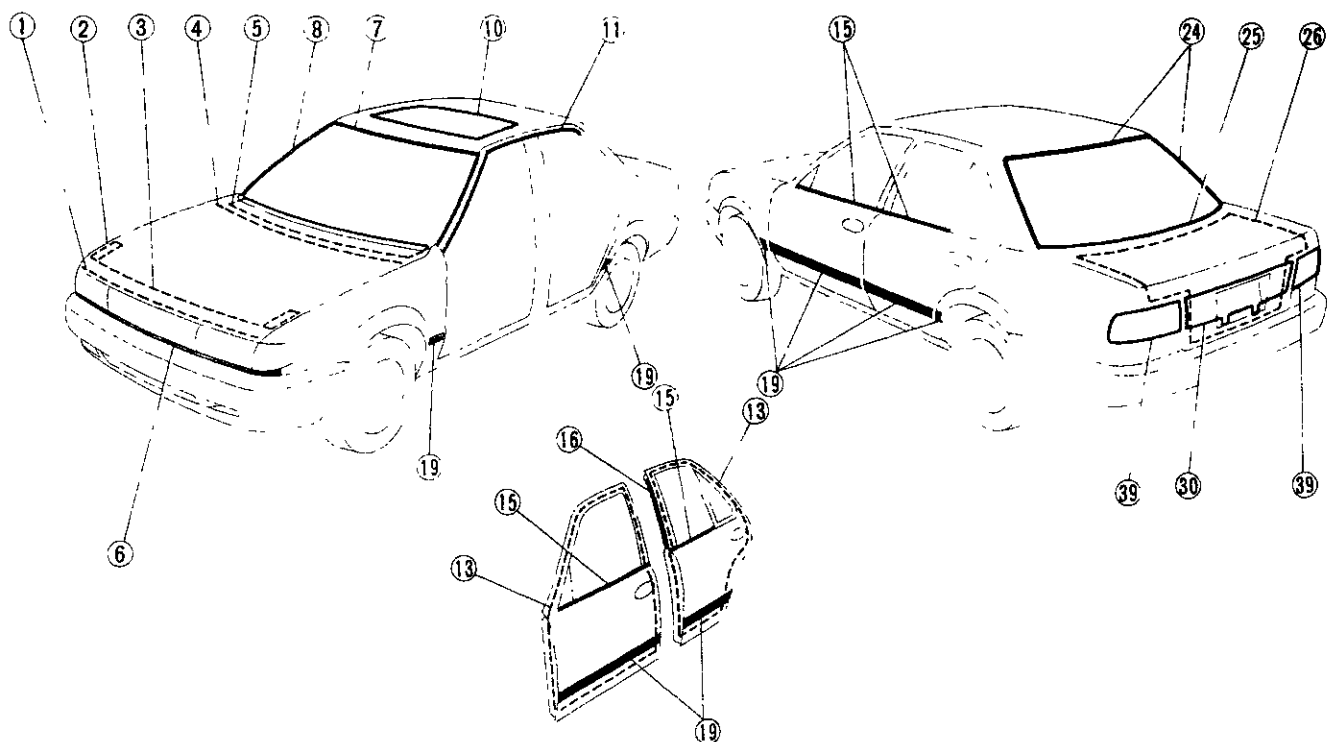

INTERIOR AND EXTERIOR


Exterior (Cont'd)

N14

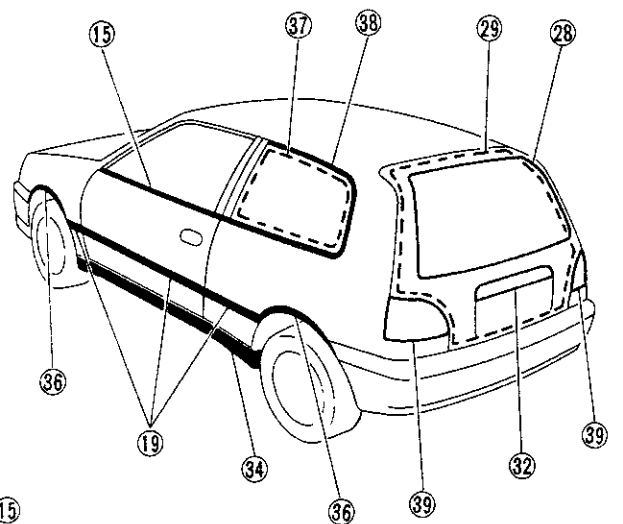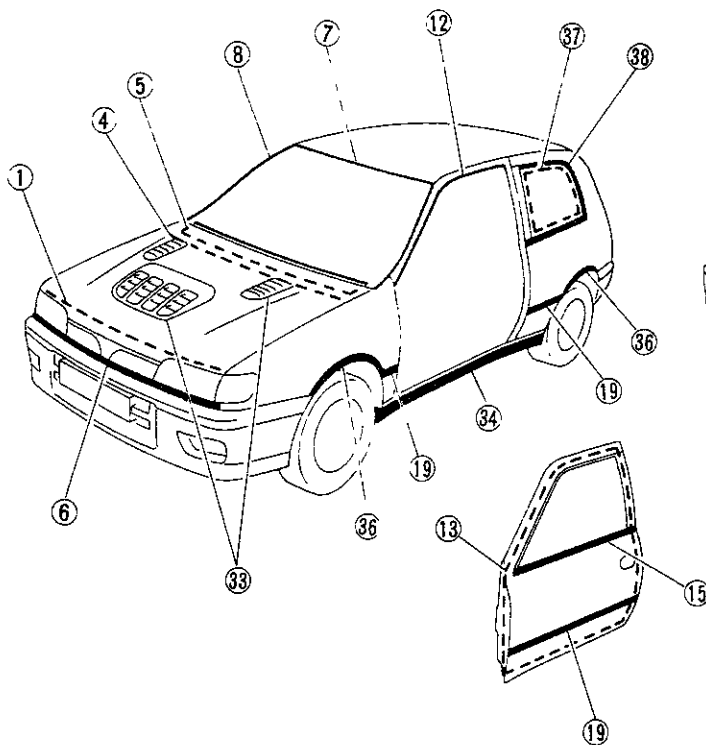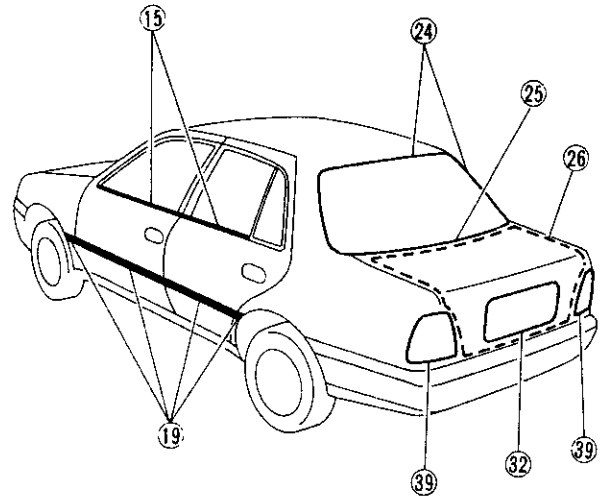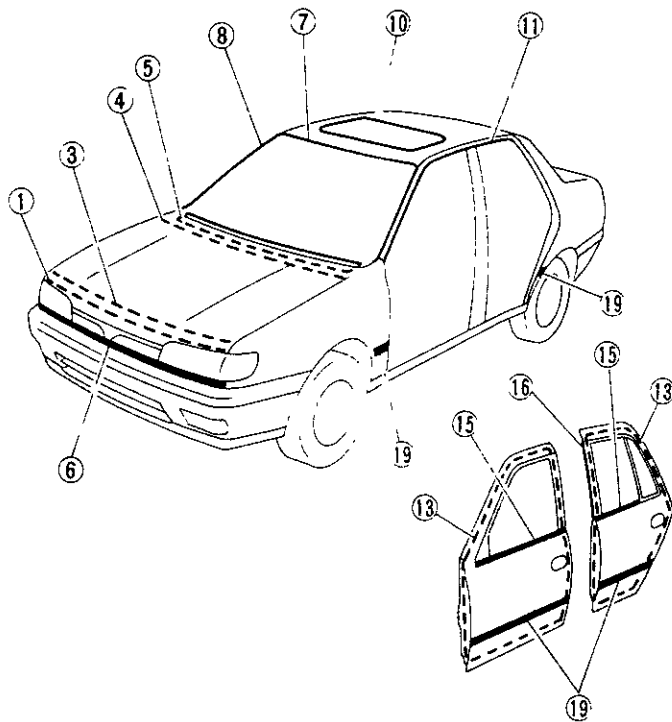

INTERIOR AND EXTERIOR


Exterior (Cont'd)

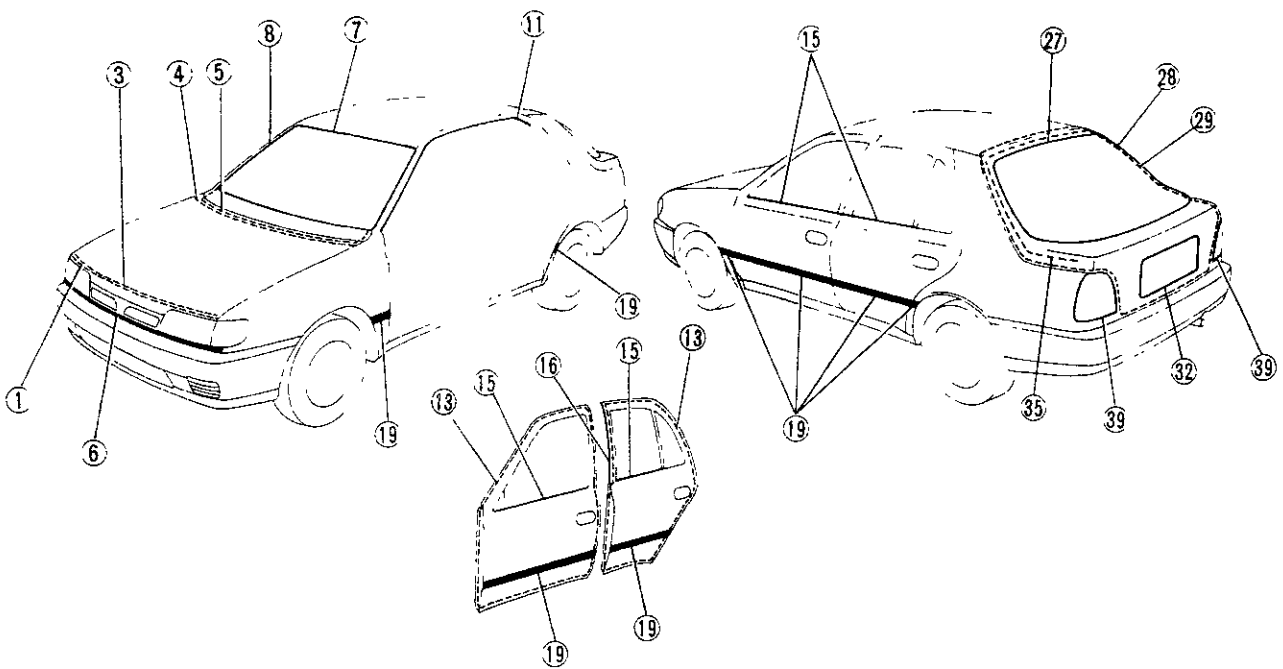


INTERIOR AND EXTERIOR

Exterior (Cont'd)


① ② ③ Hood front sealing rubber

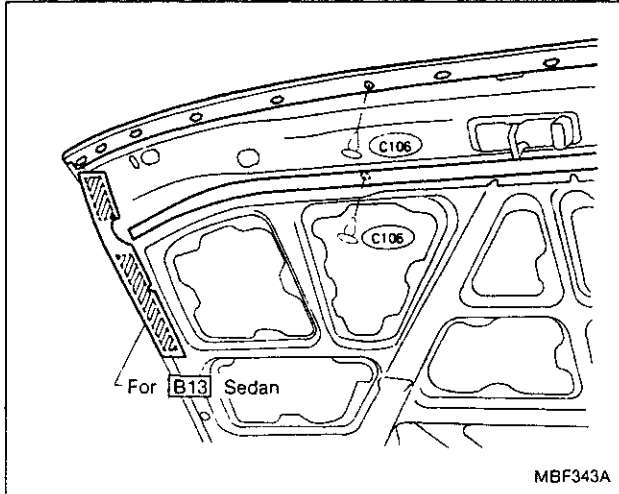


N14

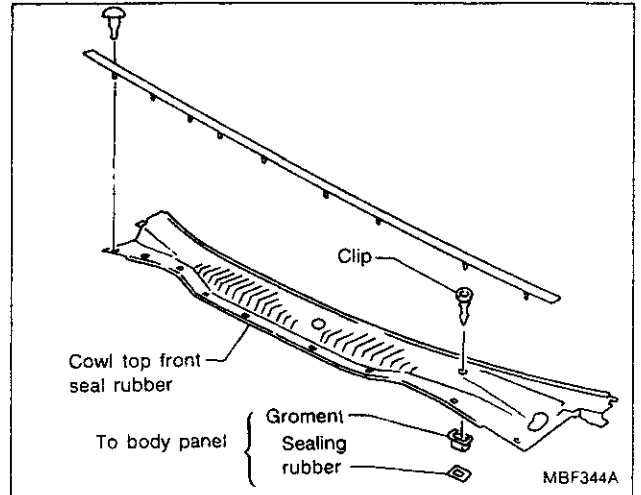


④ ⑤ B13 Cowl top grille and cowl top front sealing rubber

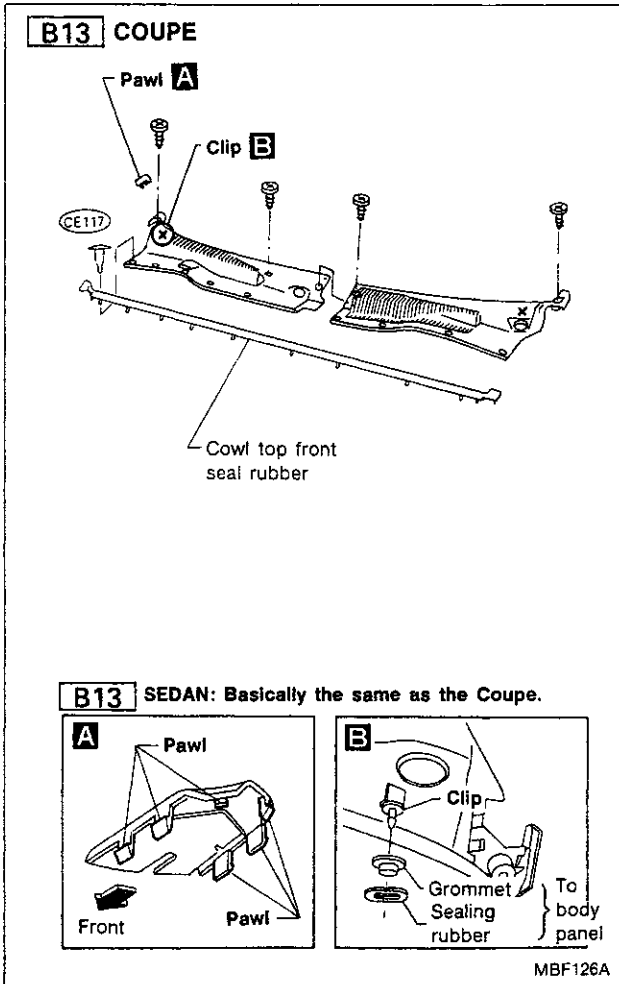


B13 SEDAN: Basically the same as the Coupe.

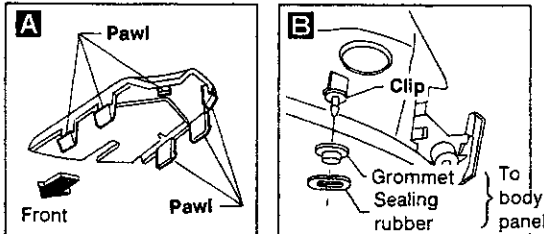

⑥ B13 Front bumper apron

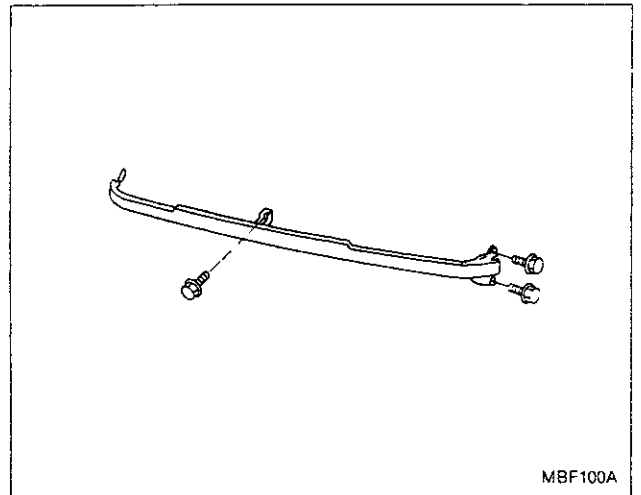

N14

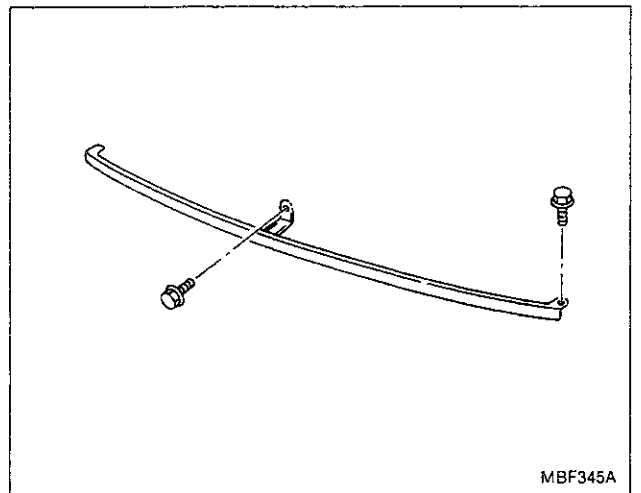


Exterior (Cont'd)

⑦ Windshield upper molding

Method 1

Cut off top portion of molding and clean glass and panel surfaces.

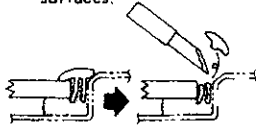

Apply sealant to top portion of molding.




Cut off lower portion of new molding.



Finish well to give it a good appearance.

Method 2

1. Cut off sealant at glass end.
2. Clean the side on which panel was mounted.
3. Set molding fastener and apply sealant to body panel, and apply primer to molding and body.

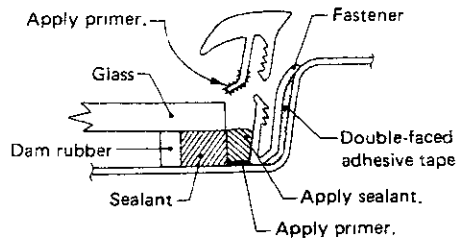


4. Install molding by aligning the molding mark located on center with vehicle center. Be sure to install tightly so that there is no gap around the corner.

SBF161E

⑧ Windshield side molding (B13 SEDAN and N14)


It is mounted with screws.

⑨ Windshield side molding

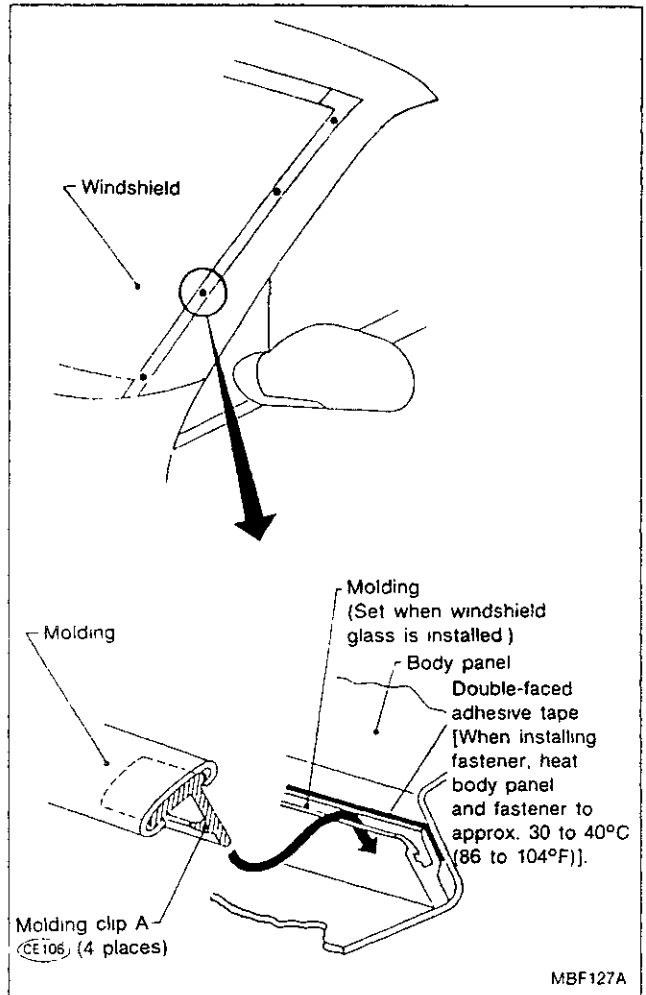

MBF127A

⑩ Sunroof lid weatherstrip

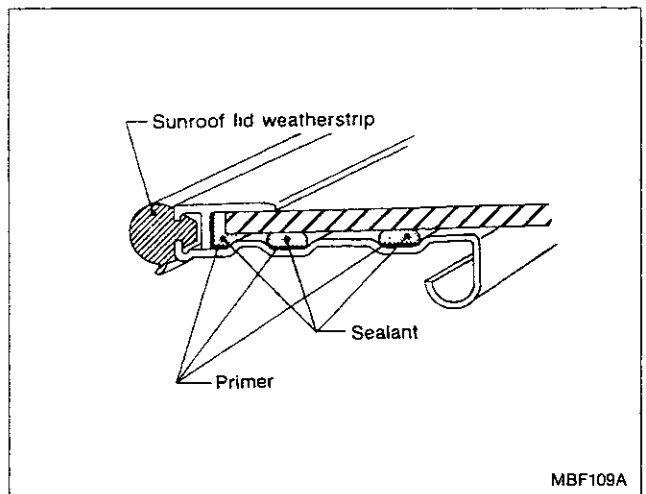


MBF109A


INTERIOR AND EXTERIOR

Exterior (Cont'd)


⑪ Body side drip weatherstrip

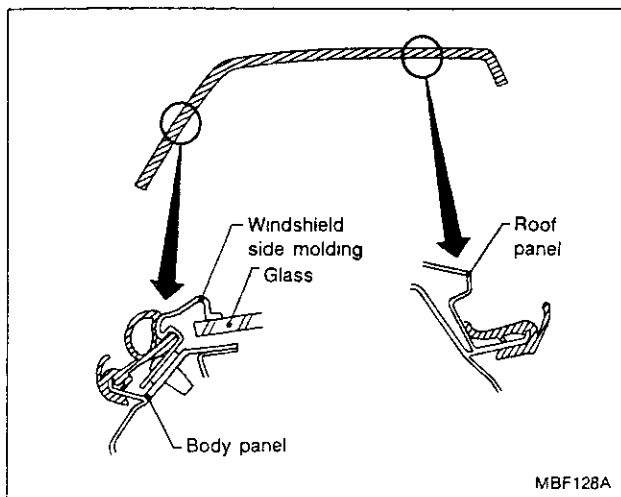


⑫ Body side drip weatherstrip

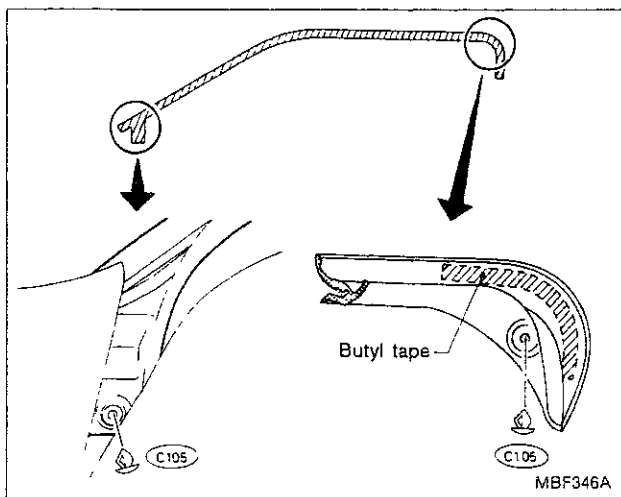


⑬ Door weatherstrip

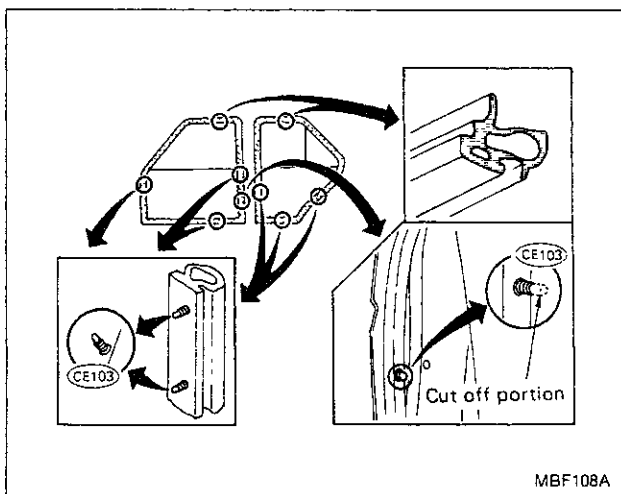

⑭ Door weatherstrip

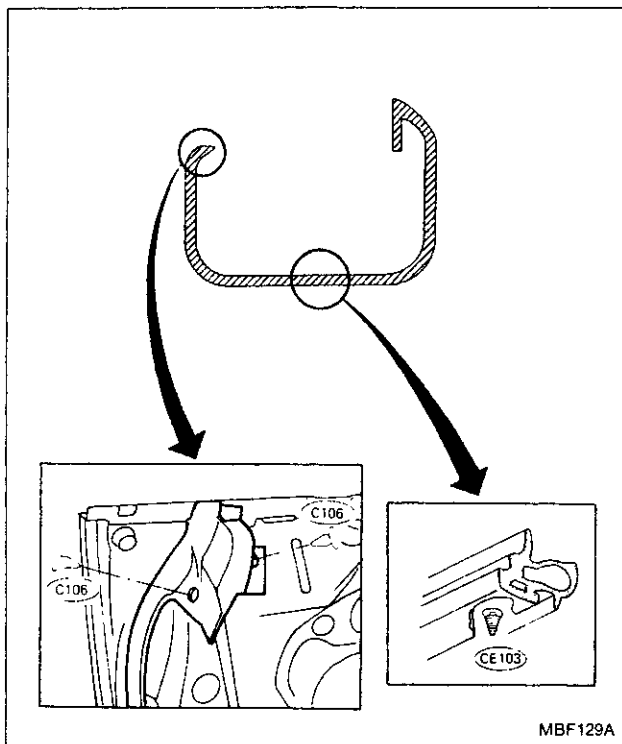


⑮ Door waist outside molding

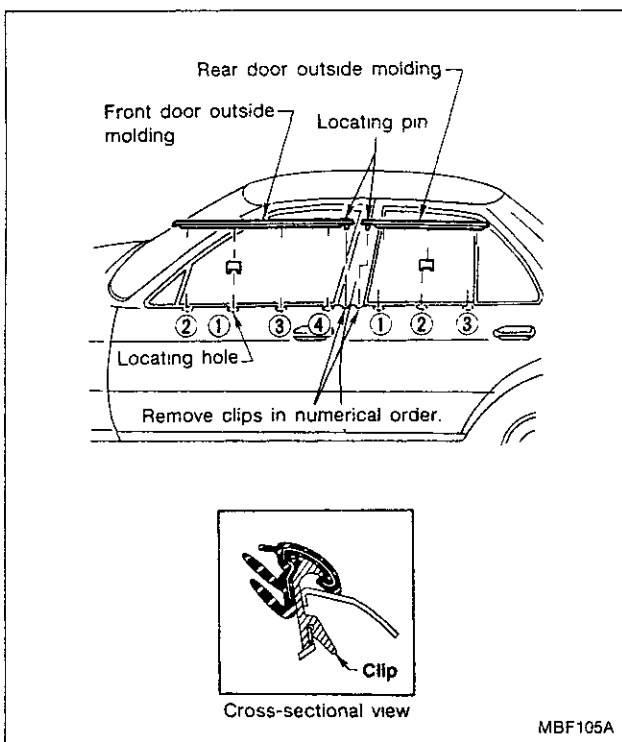


INTERIOR AND EXTERIOR

Exterior (Cont'd)

16 Rear door parting seal

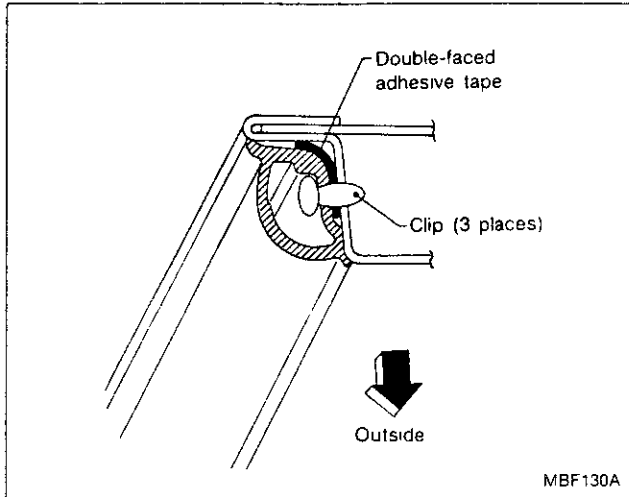


17 Lock pillar finisher

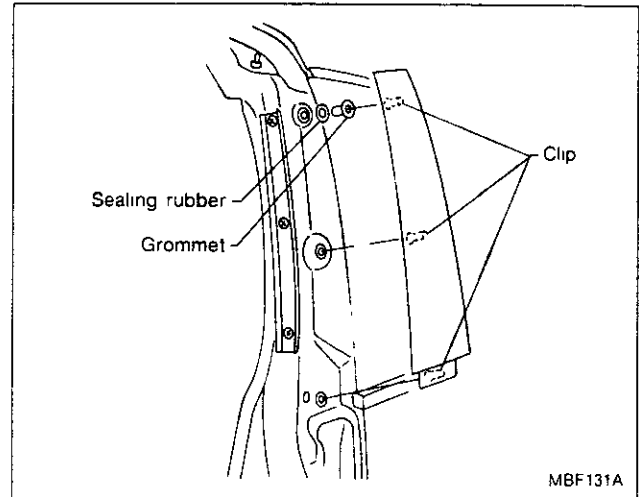

18 Body side weatherstrip (COUPE)

T-bar roof model
Basically the same as the
standard roof model

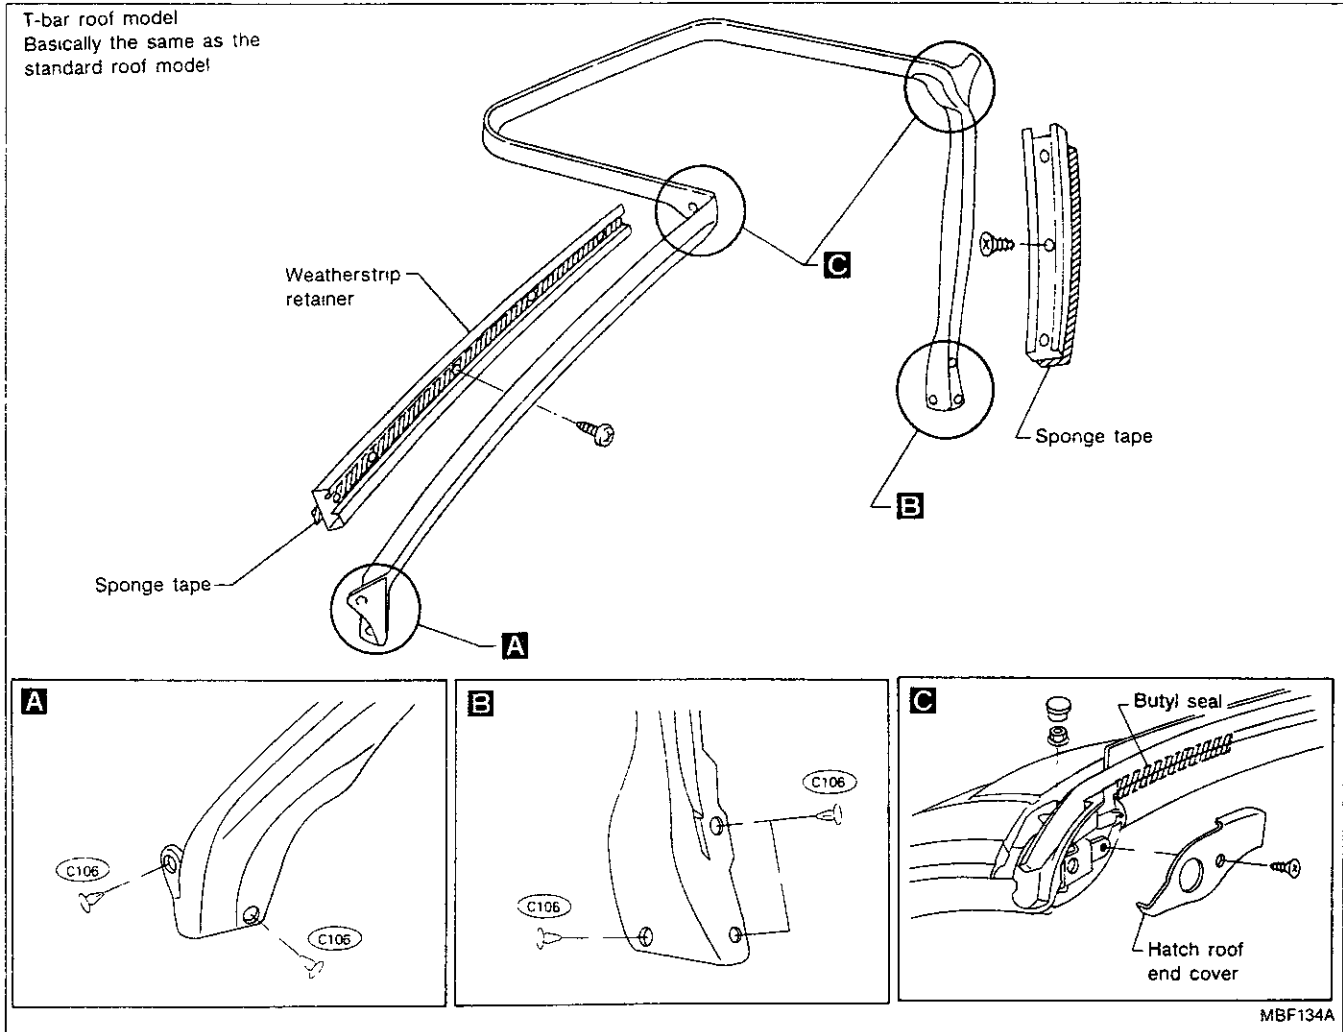


INTERIOR AND EXTERIOR


Exterior (Cont'd)

19 Side guard molding


B13 SEDAN

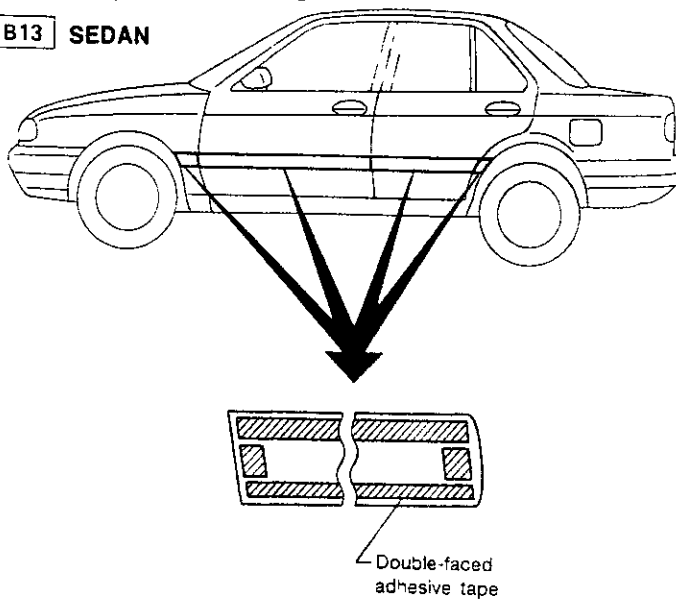


B13 COUPE

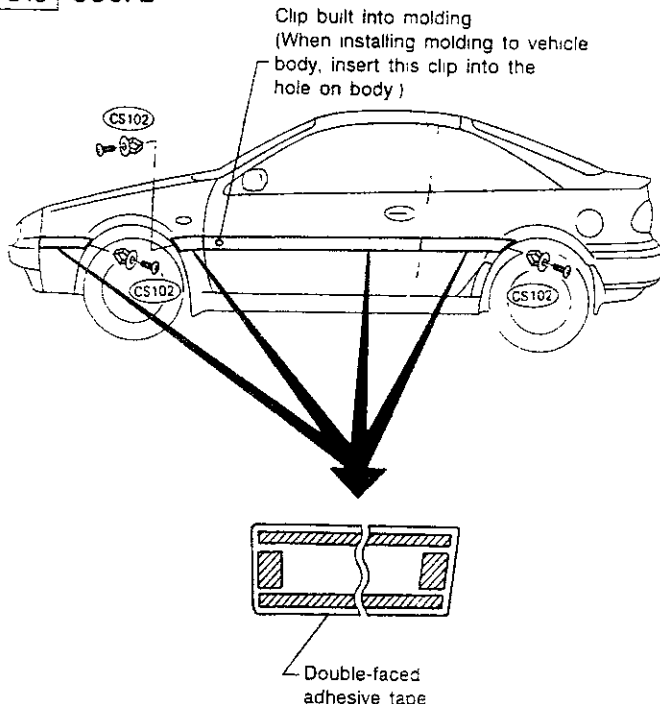

N14 SEDAN and 5-DOOR HATCHBACK

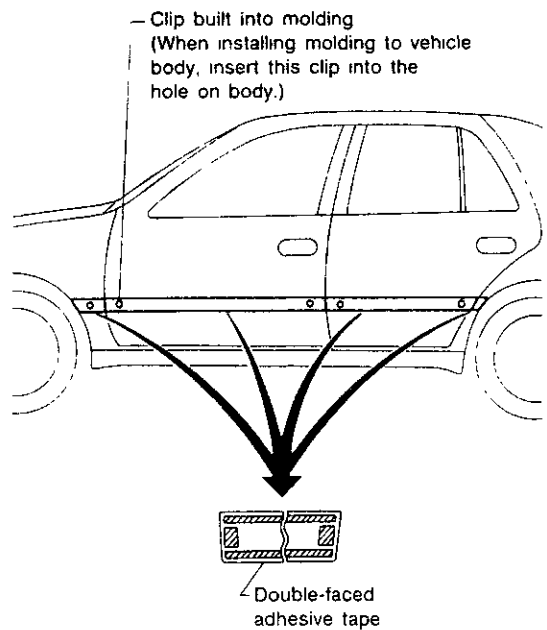


N14 3-DOOR HATCHBACK

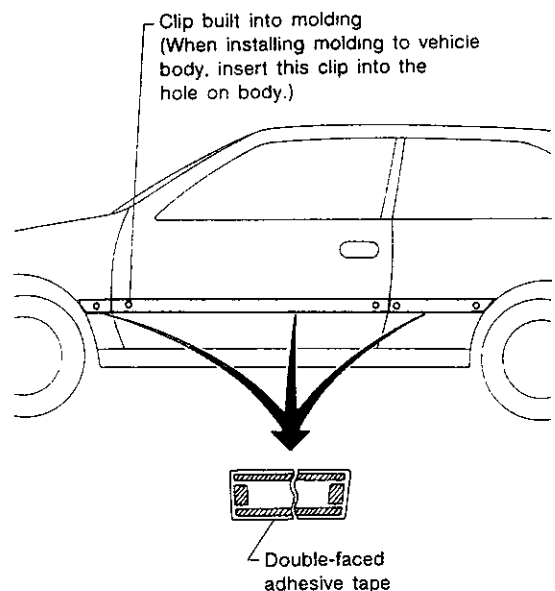

- Original side guard molding is affixed to body panel with double-faced adhesive tape, sealant and clips.
- The repair parts are also affixed with double-faced adhesive tape and clips.

- Removal:
 1. Heat molding portion to 30 to 40°C (86 to 104°F) with a heat gun.

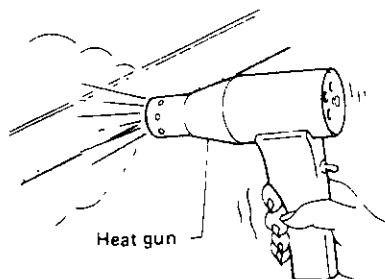

2. Raise end of molding and, while cutting off bonding agent, detach molding.

• Installation:

1. Remove all traces of bonding agent from body panel. Then clean contact face of body.
2. Heat body panel and molding to 30 to 40°C (86 to 104°F) with a heat gun. Then install molding.


SBF455A

MBF347A


INTERIOR AND EXTERIOR

Exterior (Cont'd)

20 Side window upper molding

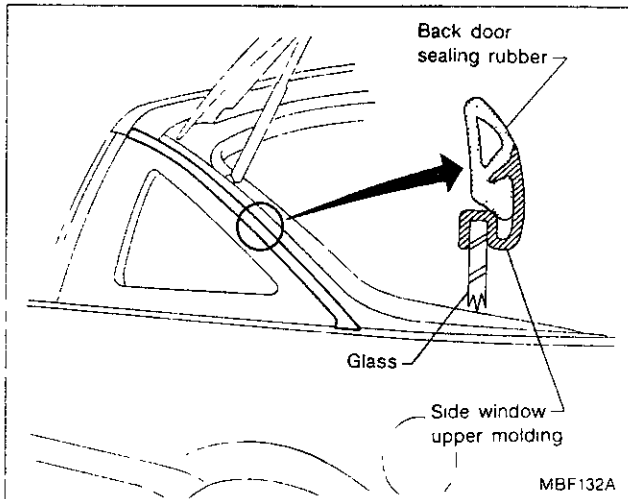


21 T-bar roof side weatherstrip

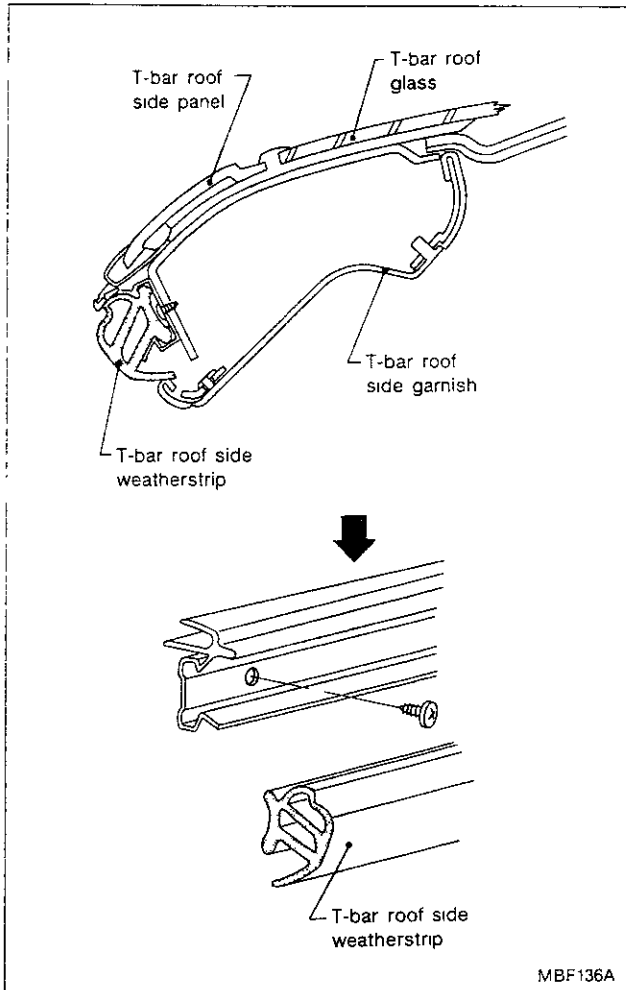

22 T-bar roof sash and T-bar roof weather-strip

These are part of the T-bar roof glass and cannot be removed. (Refer to "T-BAR ROOF".) If they are damaged, replace entire T-bar roof glass assembly.


23 Fillet molding

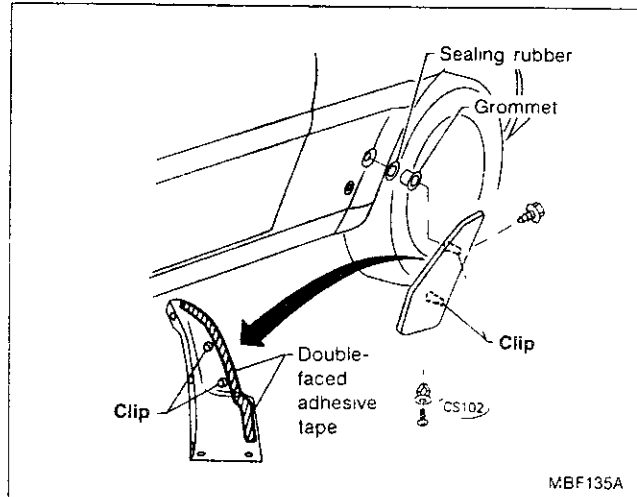

24 Rear window upper and side molding

Basically the same as windshield upper molding. Refer to "⑥ Windshield upper molding".


25 Rear window lower molding

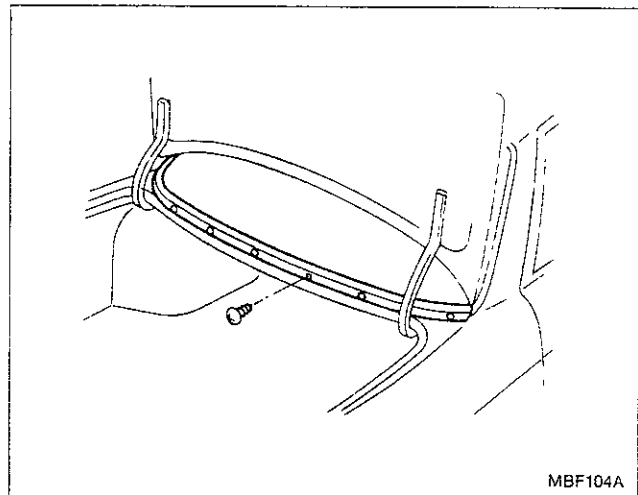


INTERIOR AND EXTERIOR

Exterior (Cont'd)


26 Trunk lid weatherstrip

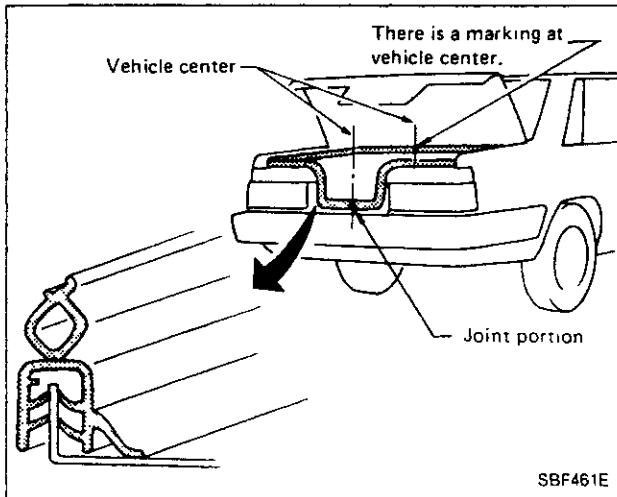

29 Back door weatherstrip

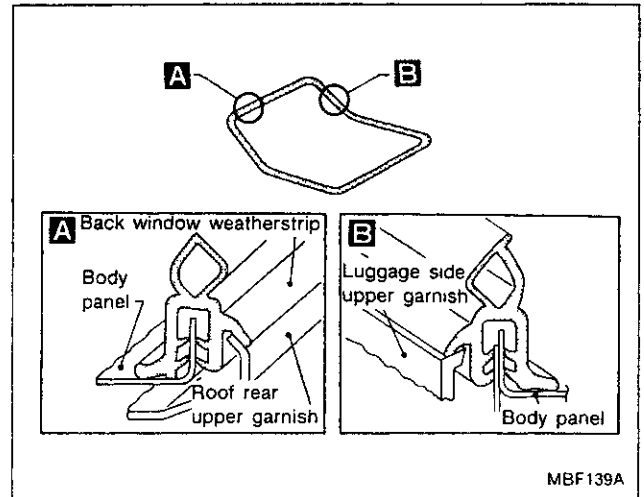


27 Back door sealing rubber

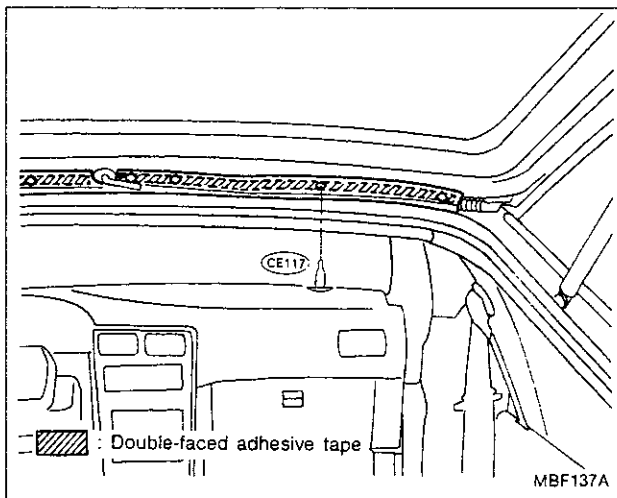


30 Trunk lid finisher


Type 1

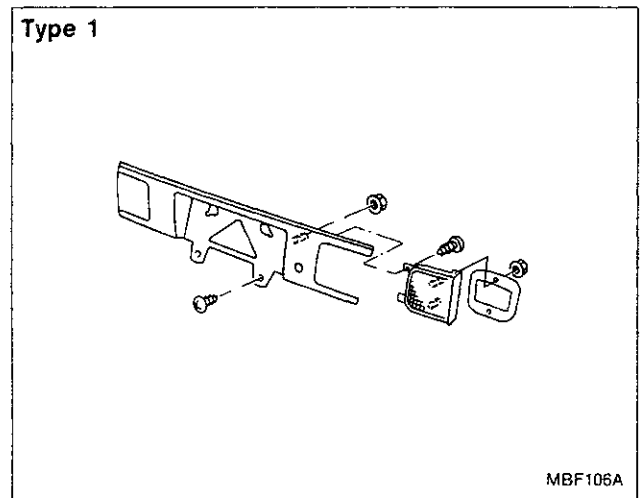

28 Back door window molding

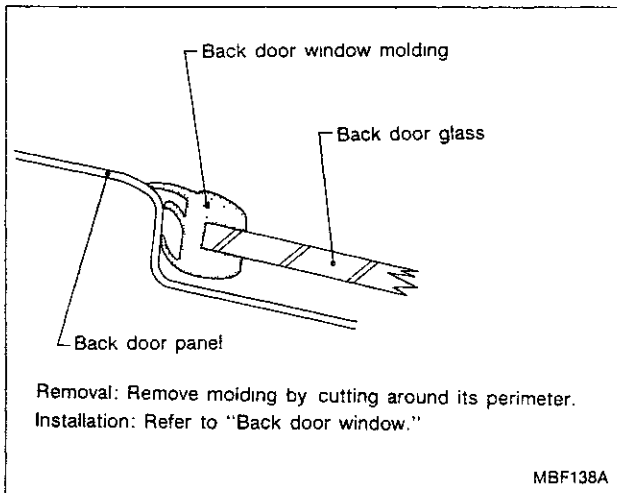


Type 2

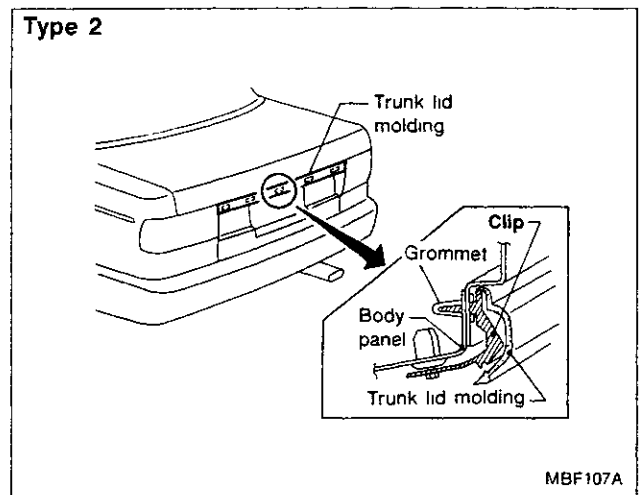


INTERIOR AND EXTERIOR

Exterior (Cont'd)


31 Side window lower molding and back door molding

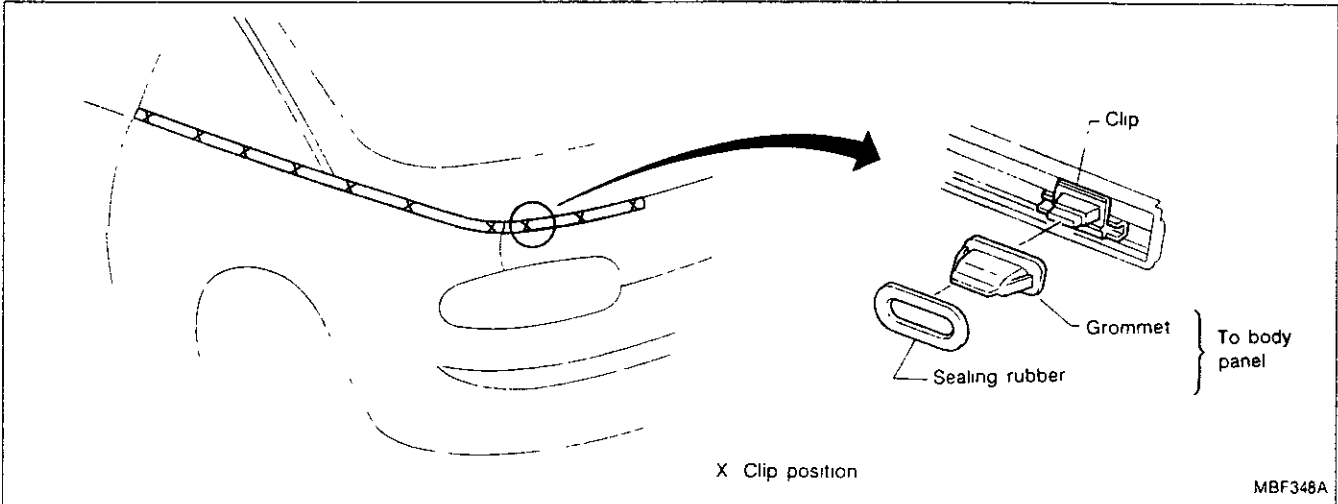

32 Trunk lid finisher and back door finisher

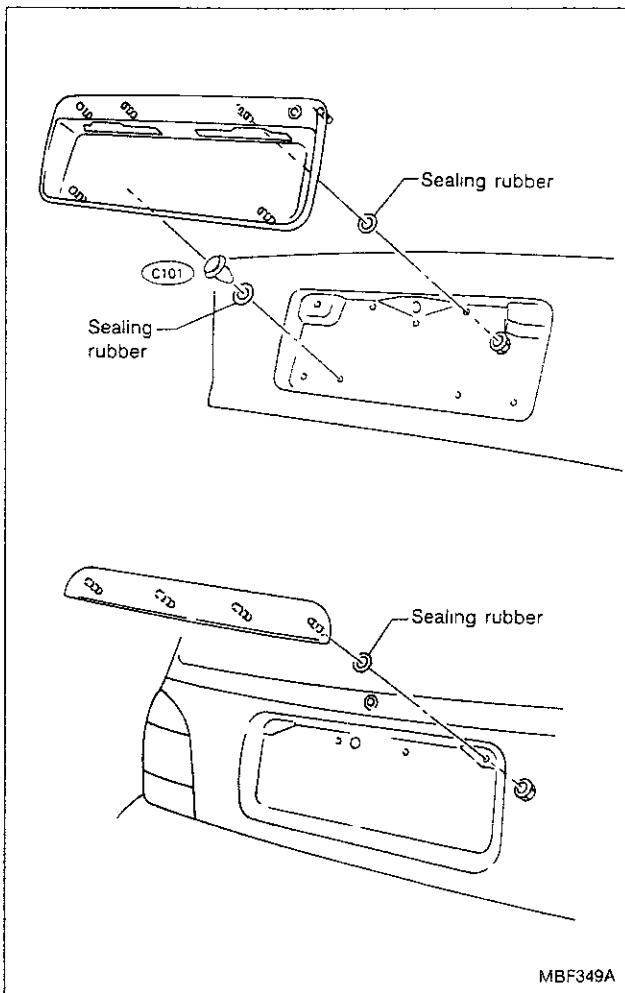


33 Air intake

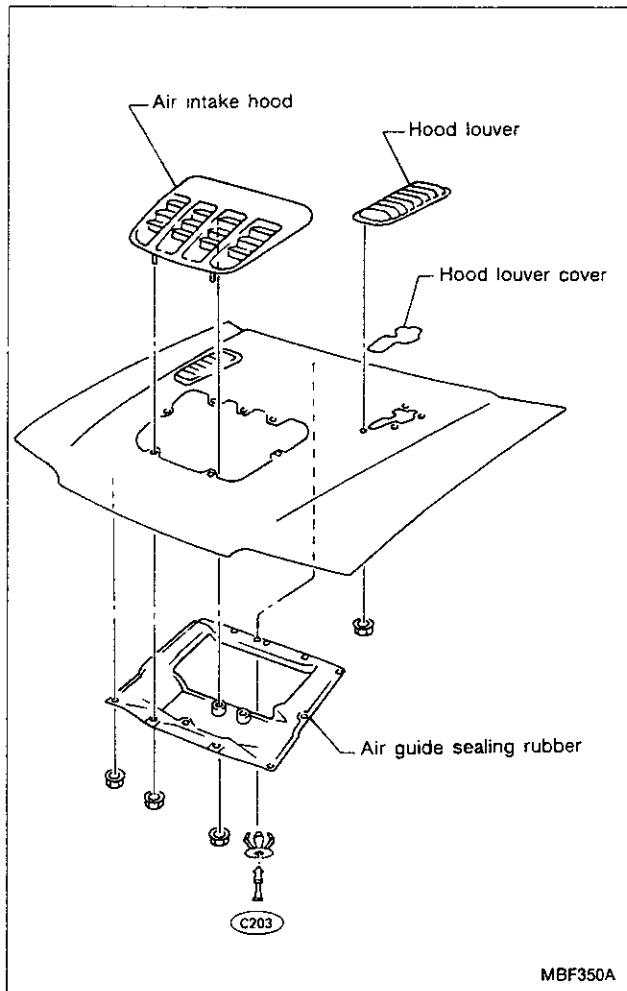


INTERIOR AND EXTERIOR

Exterior (Cont'd)

34 Side mudguard **B13**

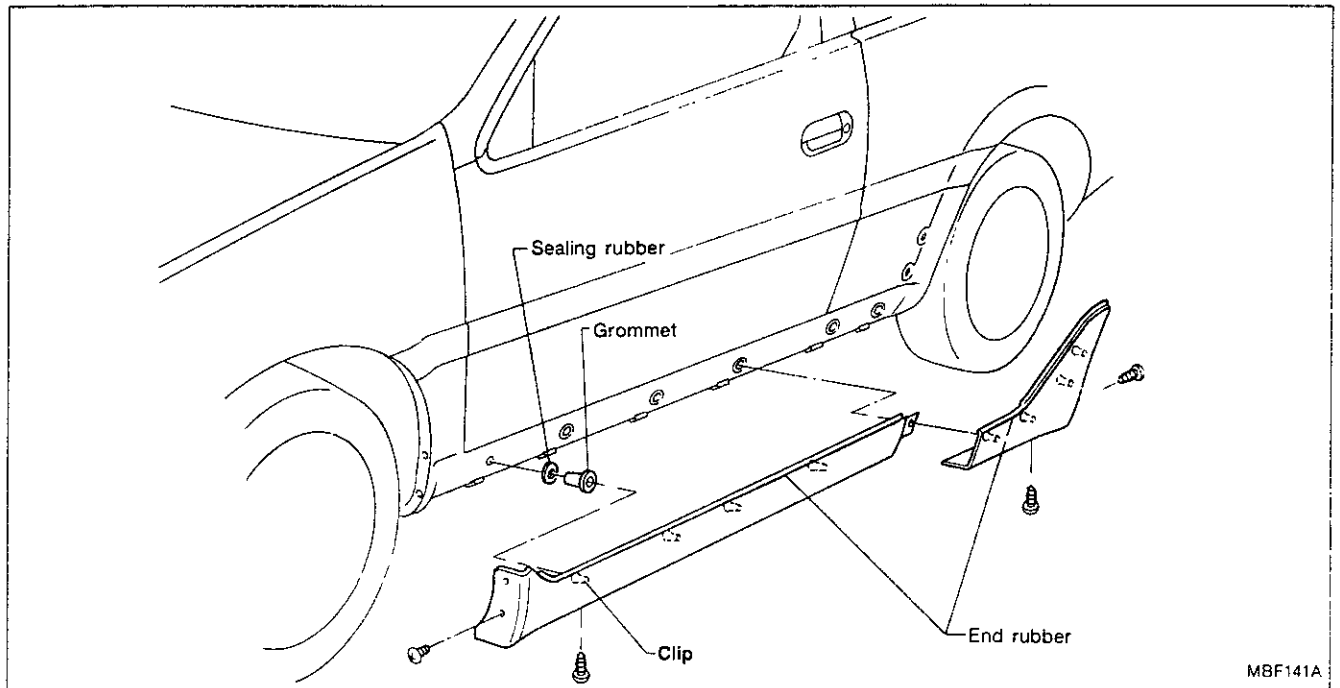


N14

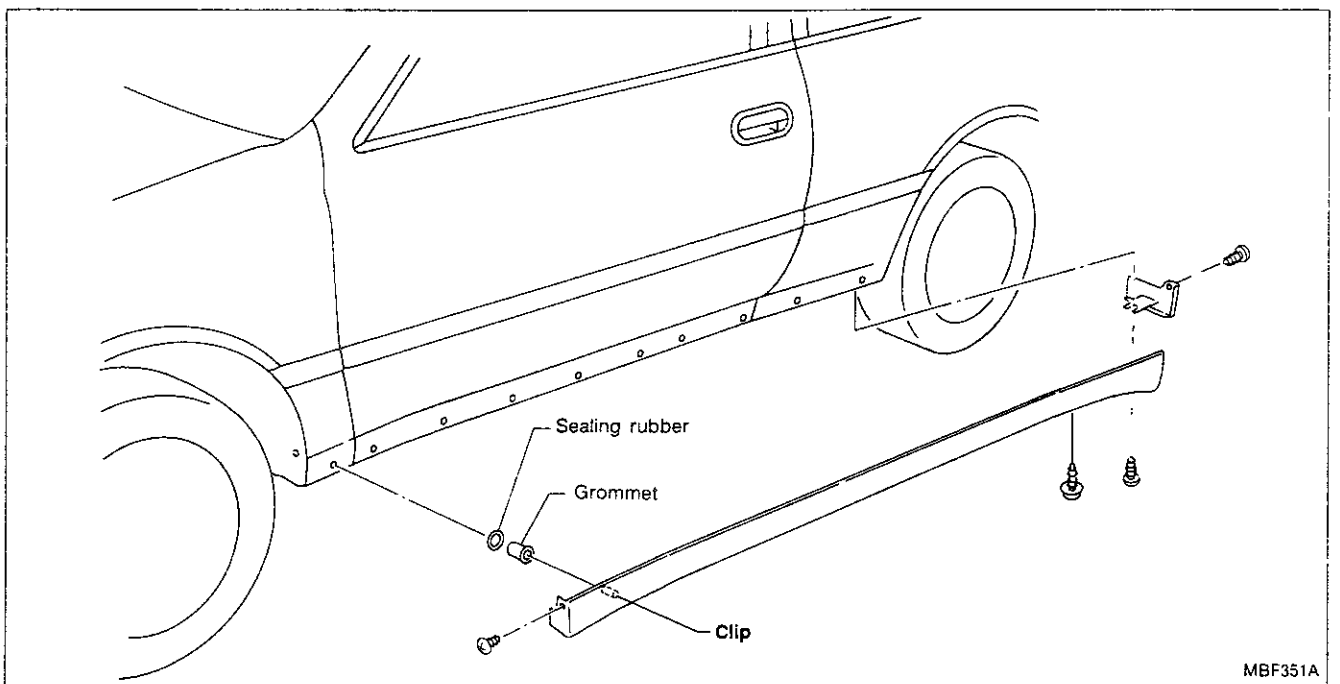


INTERIOR AND EXTERIOR

Exterior (Cont'd)


35 Back door side sealing rubber

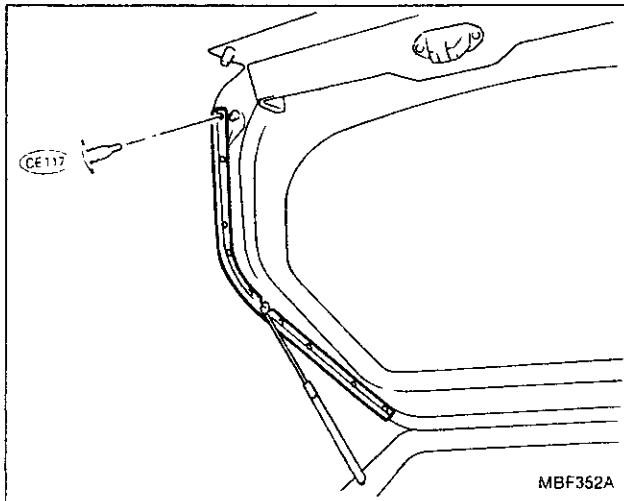


36 Fillet molding

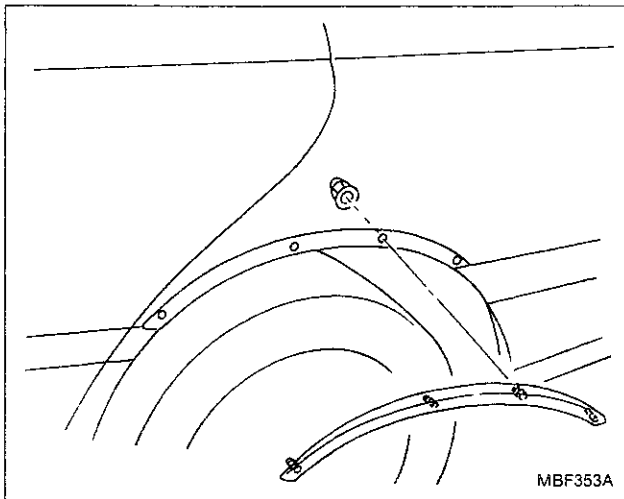

37 Side window weatherstrip

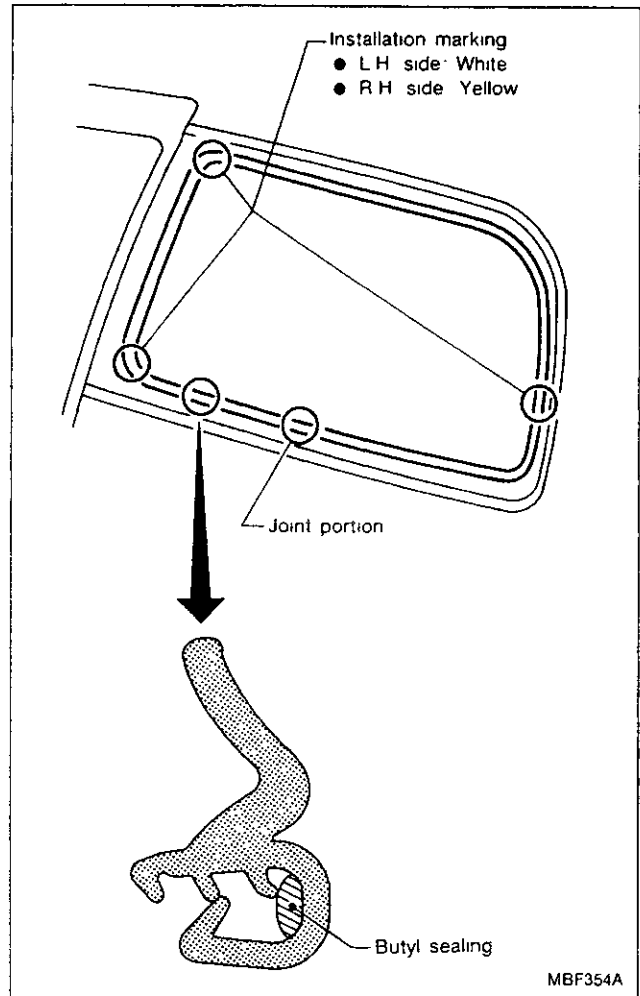

38 Side window weatherstrip

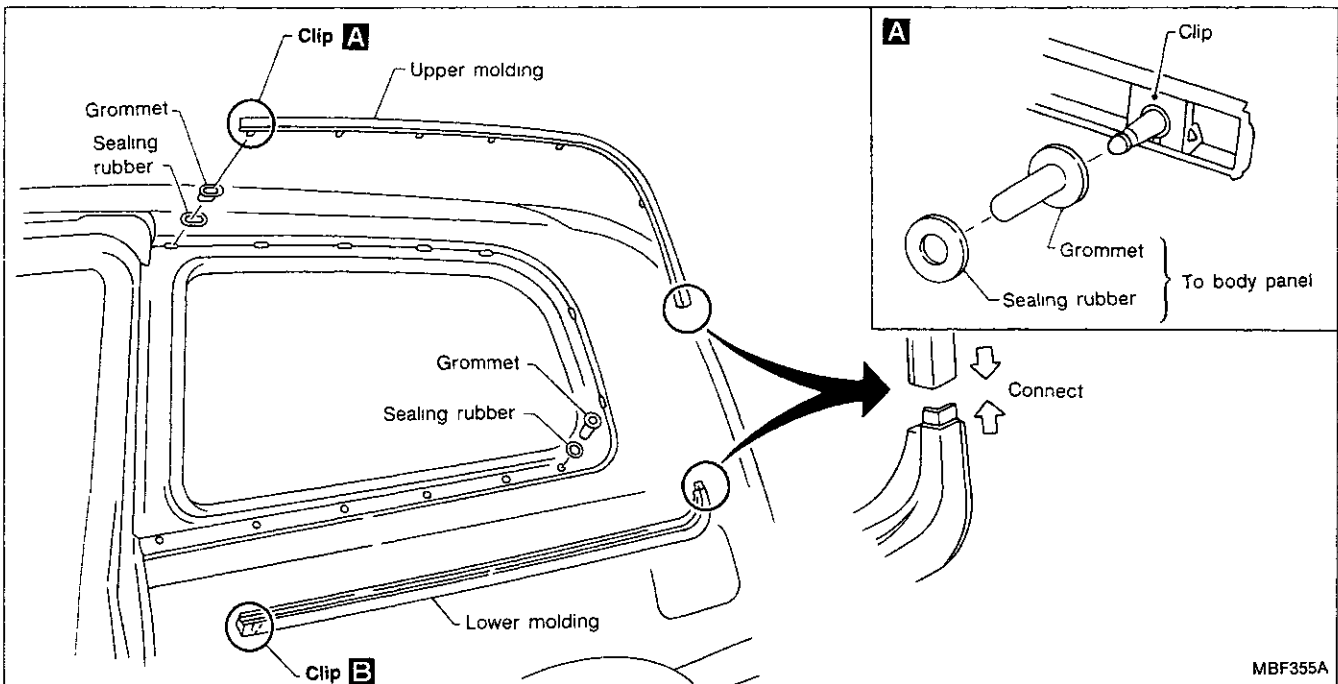


INTERIOR AND EXTERIOR

Exterior (Cont'd)

39 Rear combination lamp


- Rear combination lamps are installed with nuts and butyl seal

Removal

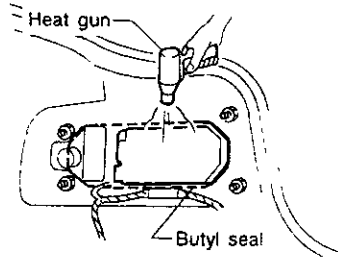

- Warm up lamp assembly area to a temperature slightly below 60°C (140°F)

Installation

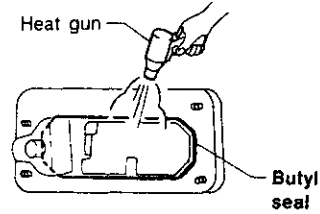

- Apply butyl seal evenly as it tends to become thin in the corners
- Warm up lamp assembly area to a temperature slightly below 60°C (140°C)


MBF120A

SEAT

- When removing or installing the seat trim, carefully handle it to keep dirt out and avoid damage.



Front Seat

B13

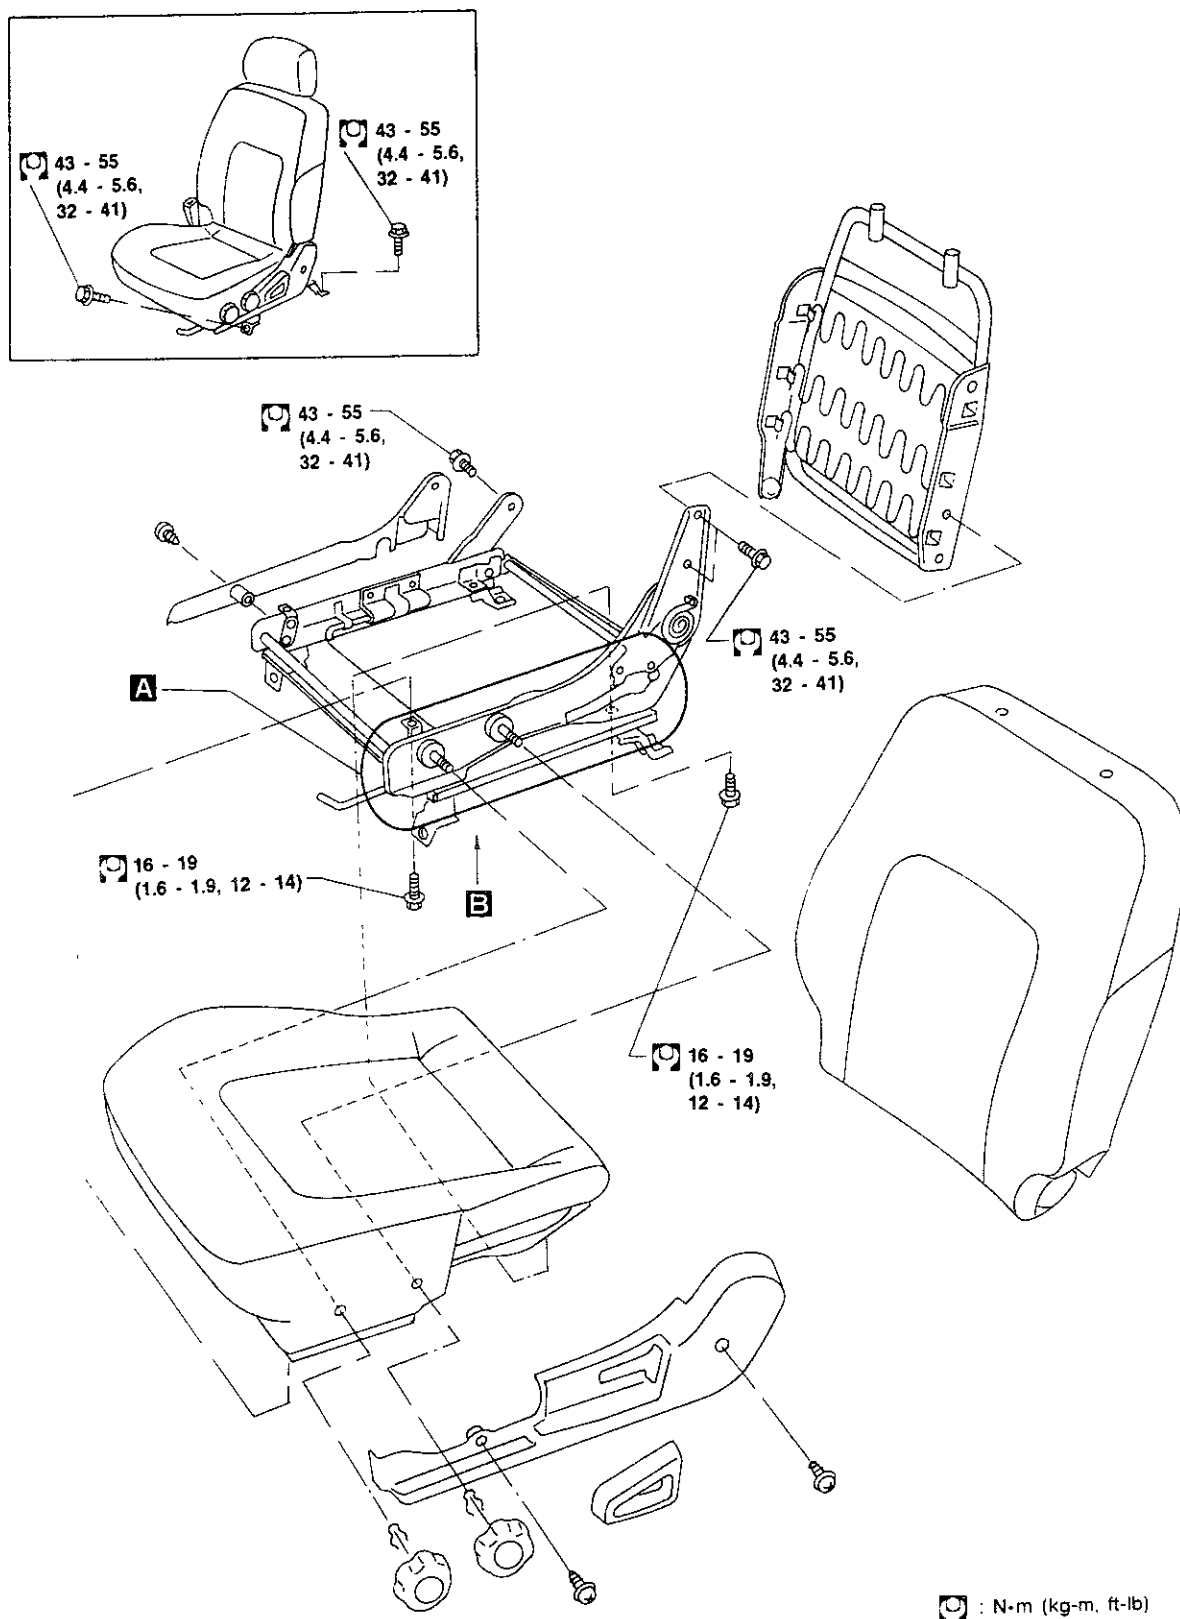

SEAT


Front Seat (Cont'd)

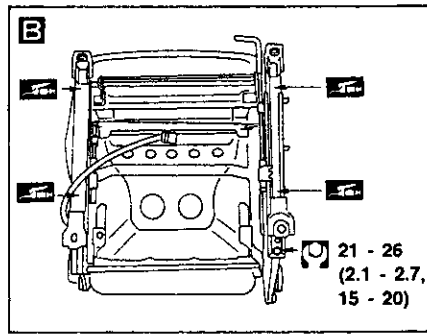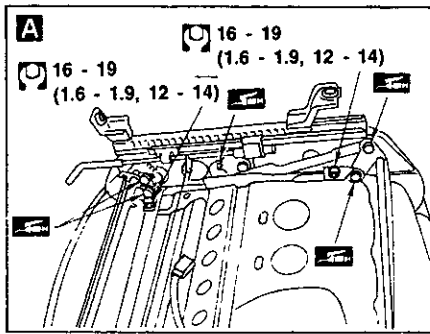

SEAT

Front Seat (Cont'd)

N14

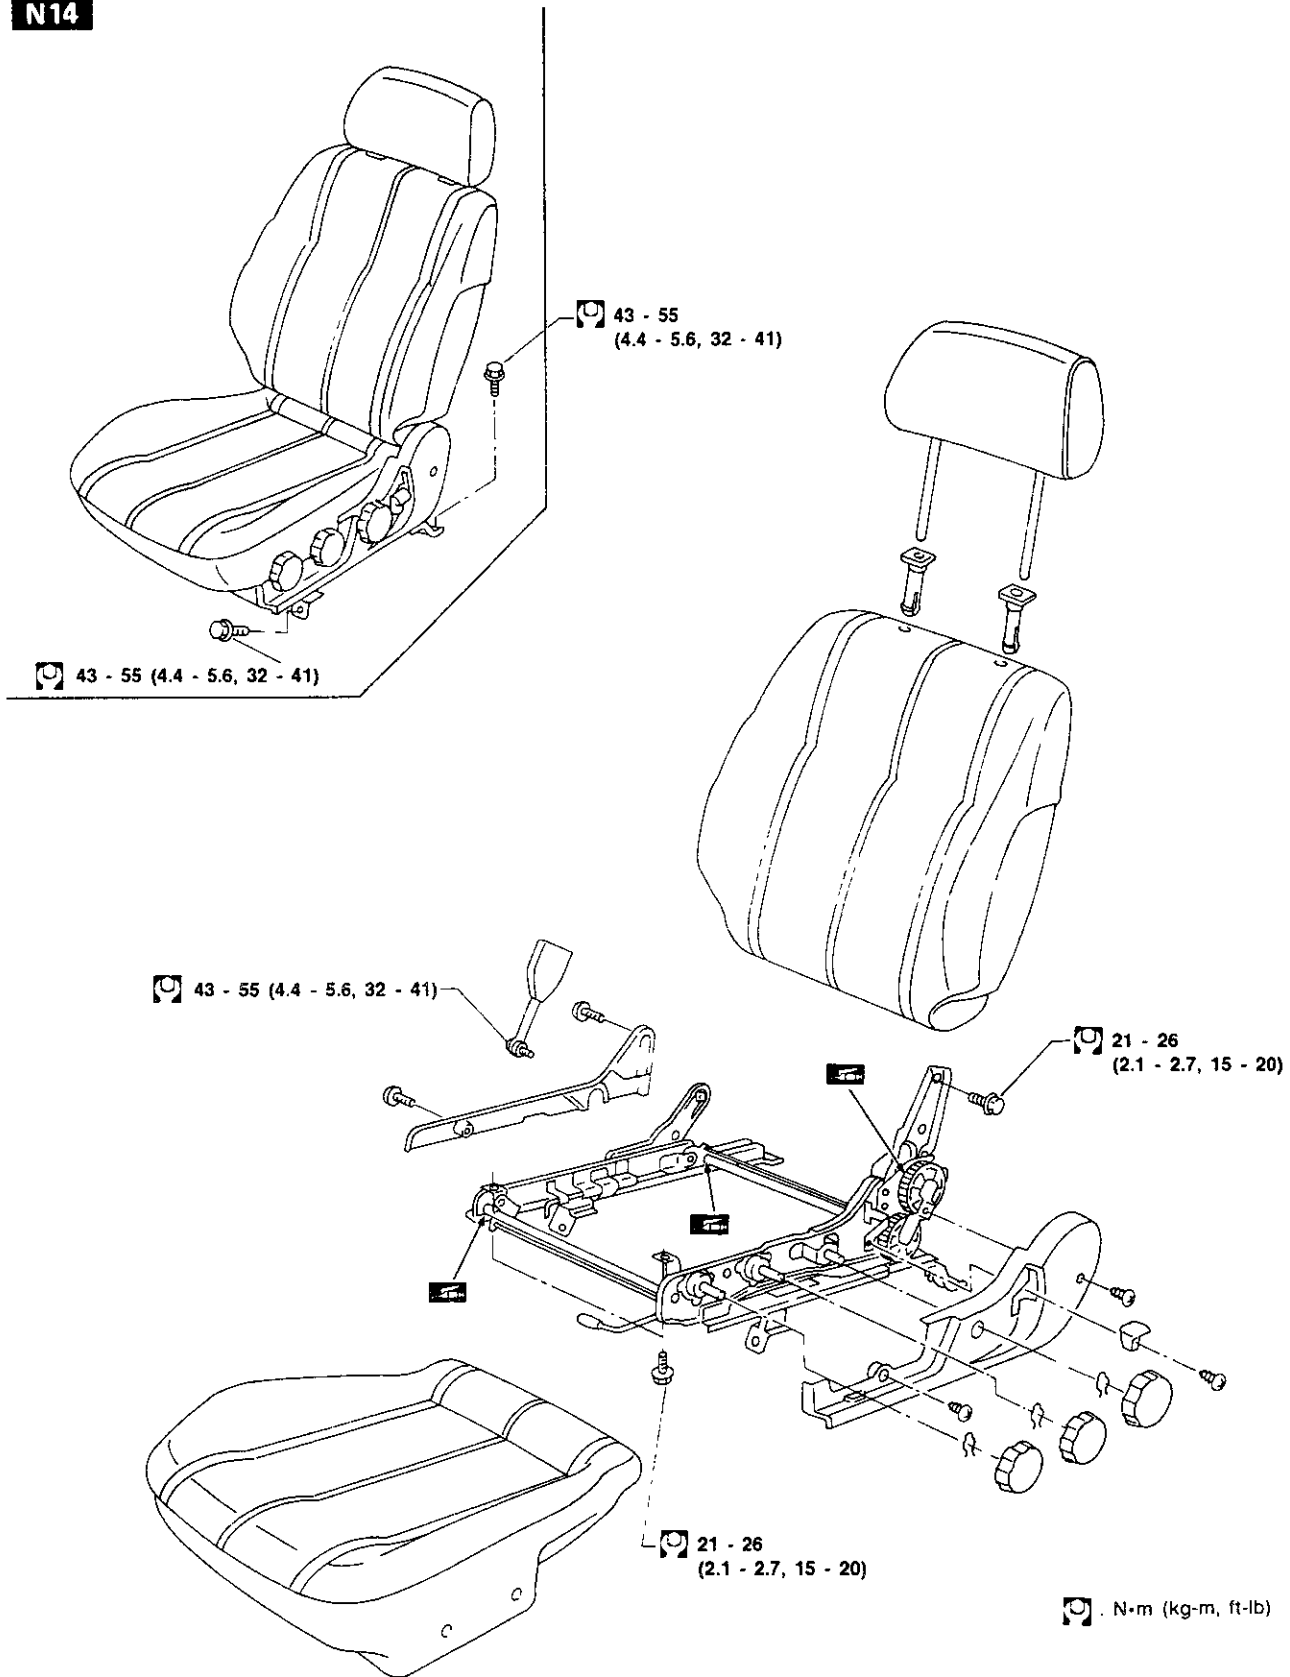


MBF308A

BF-98


SEAT

Front Seat (Cont'd)

- Heating unit is unitized with trim. When handling trim, be extremely careful not to scratch heating unit.
- Do not use any organic solvent, such as thinner, benzene, alcohol, gasoline, etc. to clean trim.
- Always replace heating unit and trim as a unit.

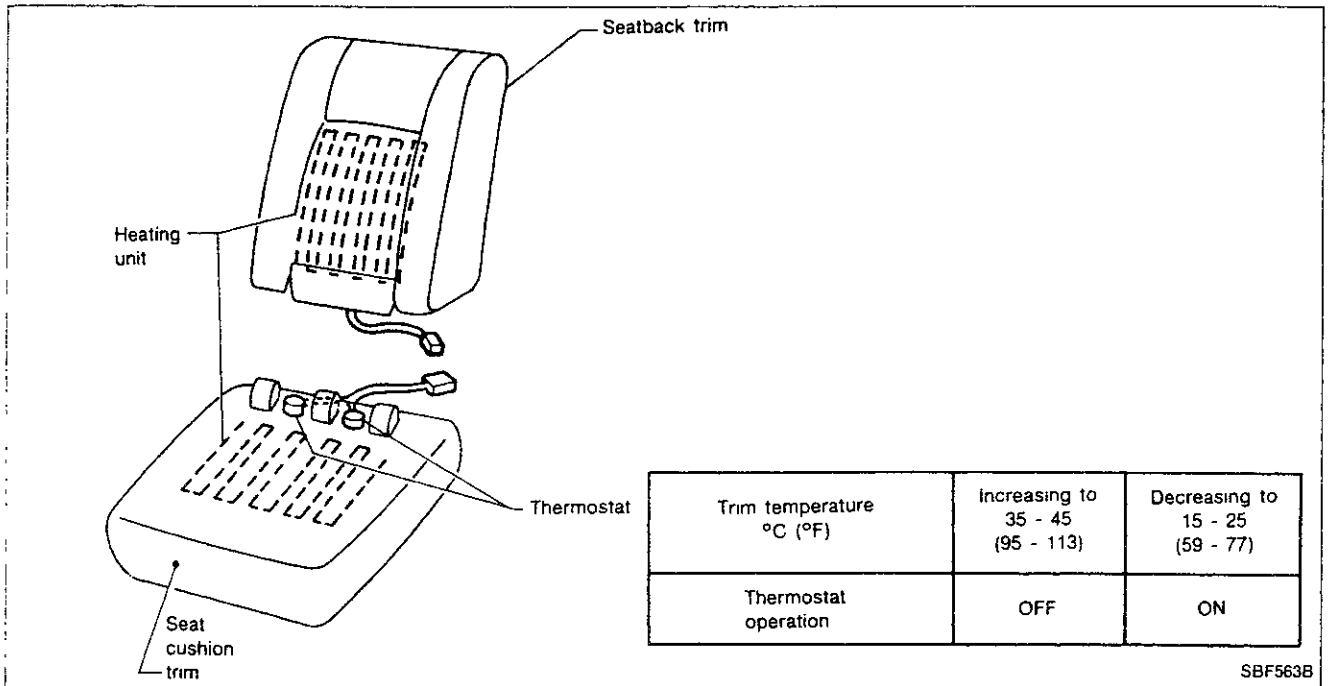




Wiring diagram/Heated seat

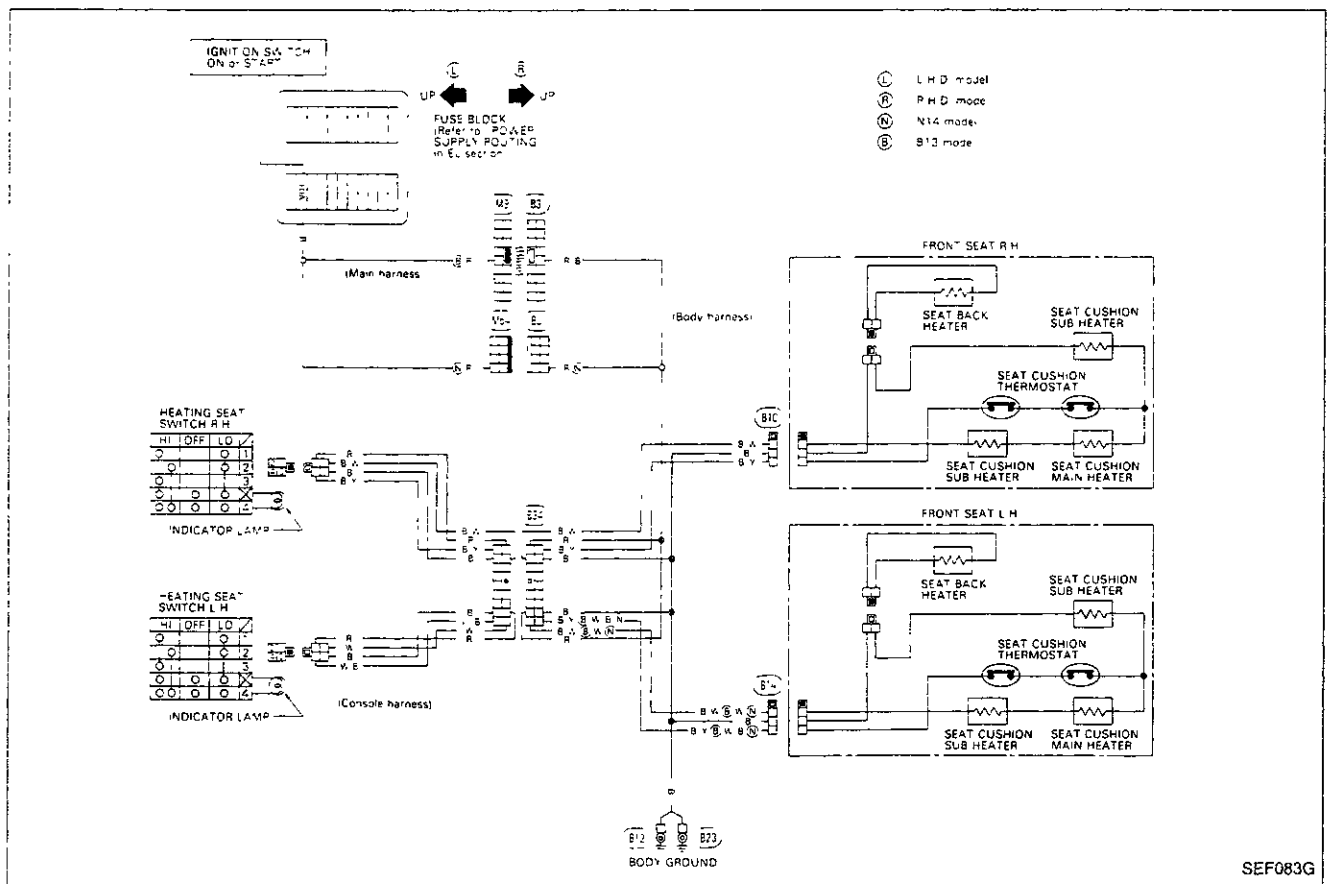




Rear Seat

B13 Sedan

N14 Sedan

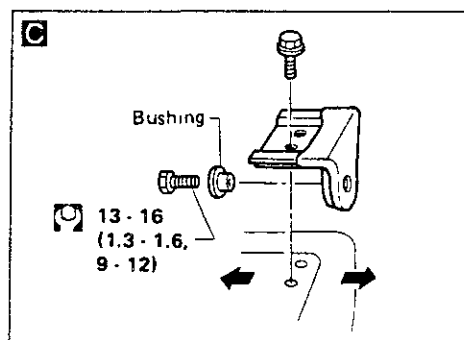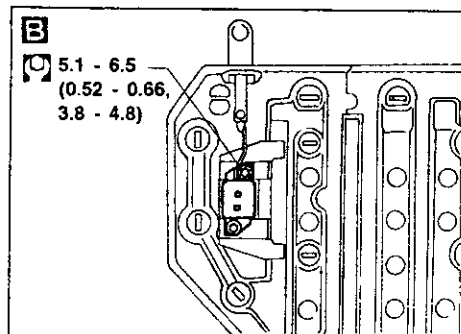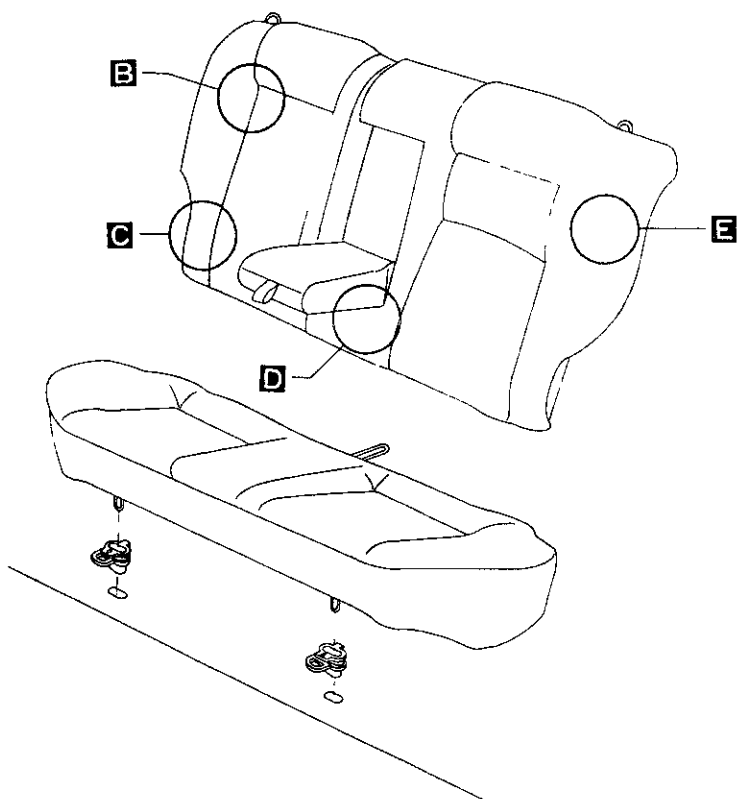


: N·m (kg·m, ft·lb)

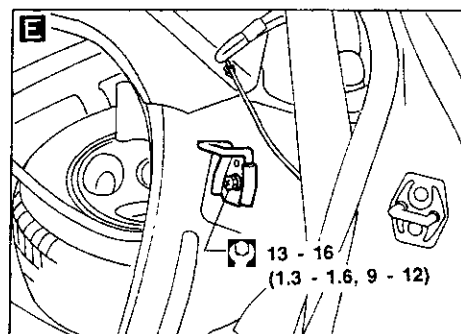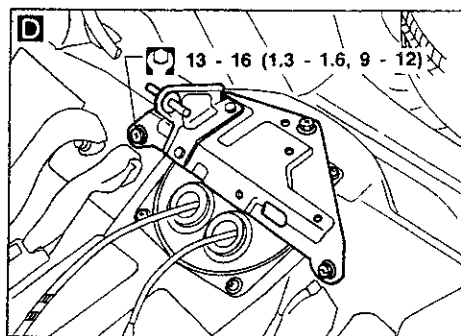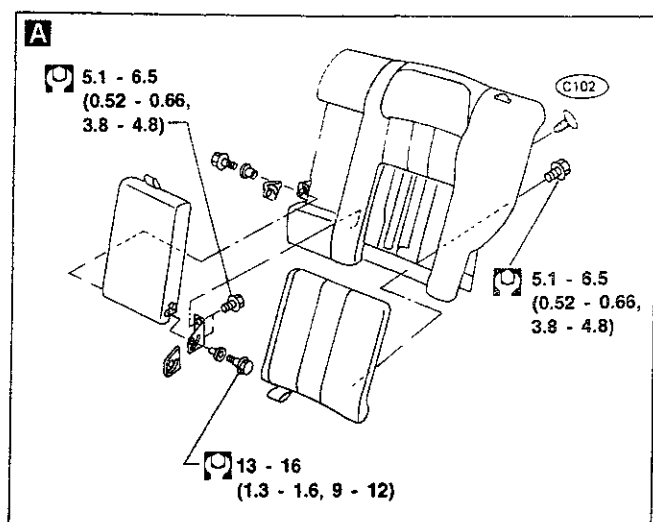

SEAT

Rear Seat (Cont'd)


N14 Sedan rear seatback lock

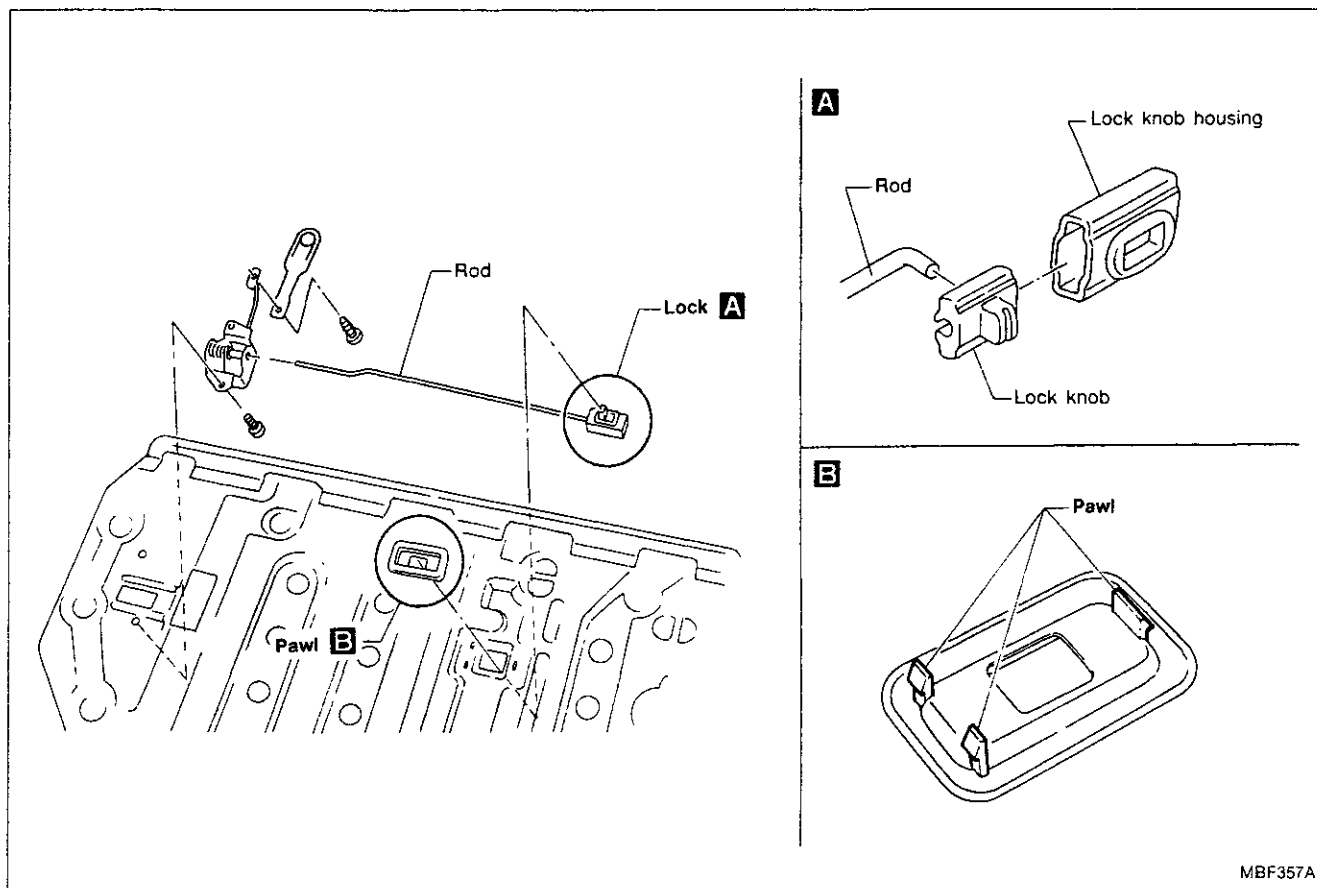



SEAT

Rear Seat (Cont'd)

B13 Coupe

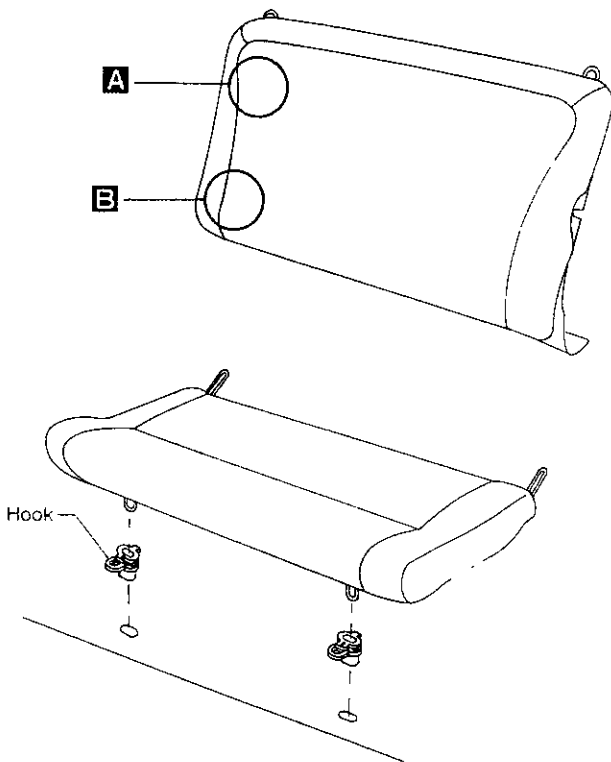

N·m (kg-m, ft-lb)

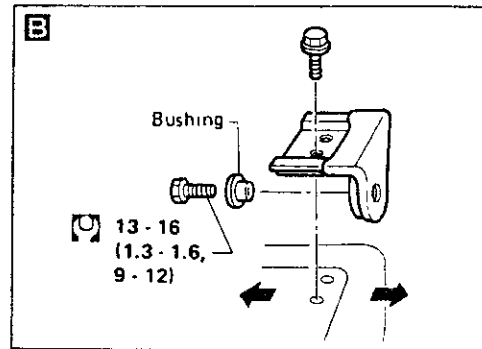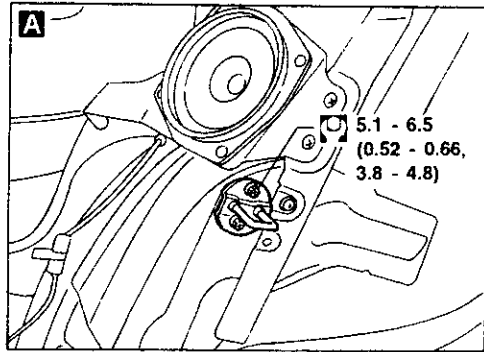


MBF358A


N14 5-DOOR HATCHBACK

N14 3-DOOR HATCHBACK: Basically the same as the 5-DOOR HATCHBACK


Center bracket installation

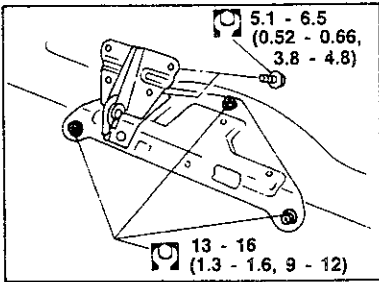


Striker installation

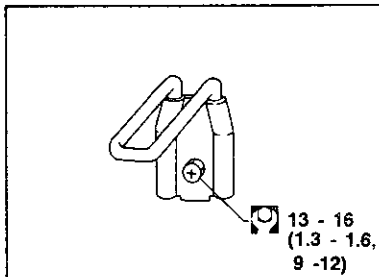

: N·m (kg-m, ft-lb)


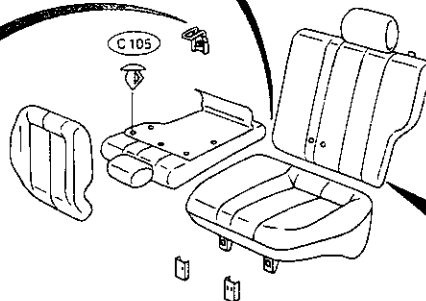


Seat back adjustment

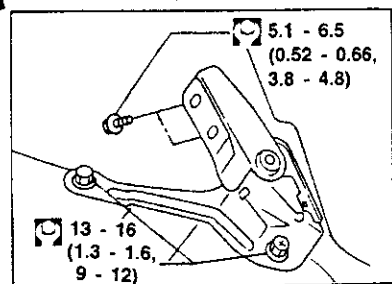

MBF359A

TENSION RELEASE MECHANISM WIRING DIAGRAM

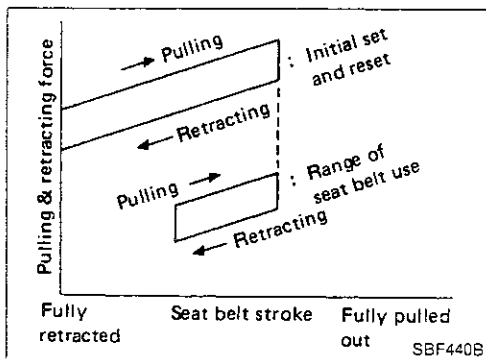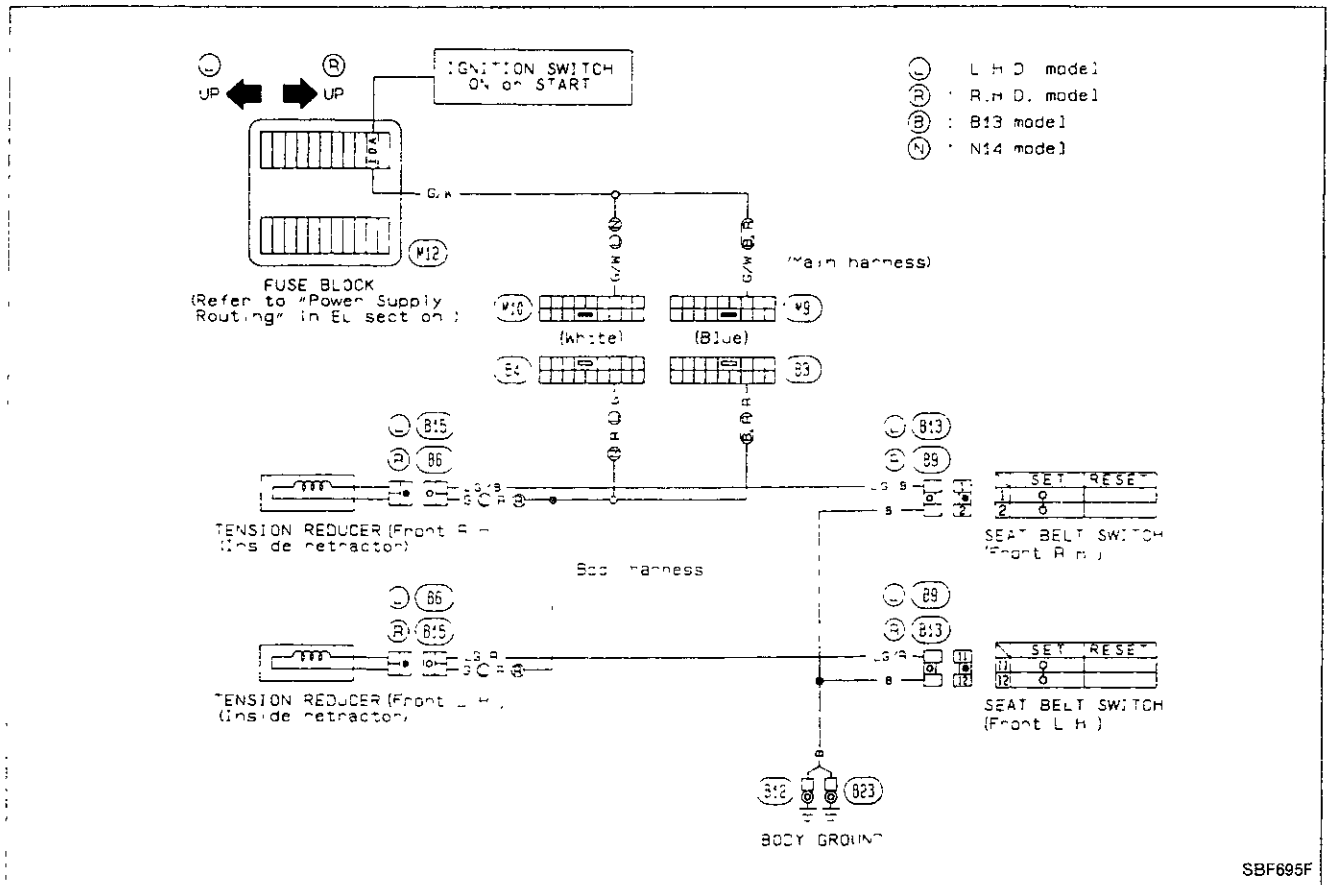

TENSION RELEASE MECHANISM OPERATION

SUNROOF

- After any adjustment, check sunroof operation and lid alignment.
- Handle finisher plate and glass lid with care so not to damage it.
- It is desirable for easy installation to mark each point before removal.

CAUTION:

- a. Always work with a helper.
- b. Remove sunroof frame from rear door opening.

REMOVAL — Sunroof lid assembly

- ① Open sunroof shade.
- ② Close sunroof lid.
- ③ Remove side trim clips.
- ④ Remove the six nuts securing sunroof lid assembly to link assembly.

REMOVAL — Shade assembly


- ⑤ After removing sunroof lid assembly, remove screws securing rear drains to roof.
- ⑥ Remove rear drain.
- ⑦ Remove shade assembly.

REMOVAL — Sunroof assembly


- ⑧ Remove headlining. For details, refer to "ROOF TRIM" in "Interior".
- ⑨ Disconnect interior lamp harness.
- ⑩ Disconnect front and rear drain hoses.
- ⑪ Remove nuts and bolts securing sunroof rail and motor to roof.
- ⑫ Remove sunroof assembly.

REMOVAL — Link & wire assembly

- ⑬ After removing shade assembly and sunroof assembly, remove the two screws securing holders to sunroof rail.
- ⑭ Remove the two screws securing window deflector to sunroof rail.
- ⑮ Remove window deflector.
- ⑯ Remove the two screws securing guide stoppers to sunroof rail.

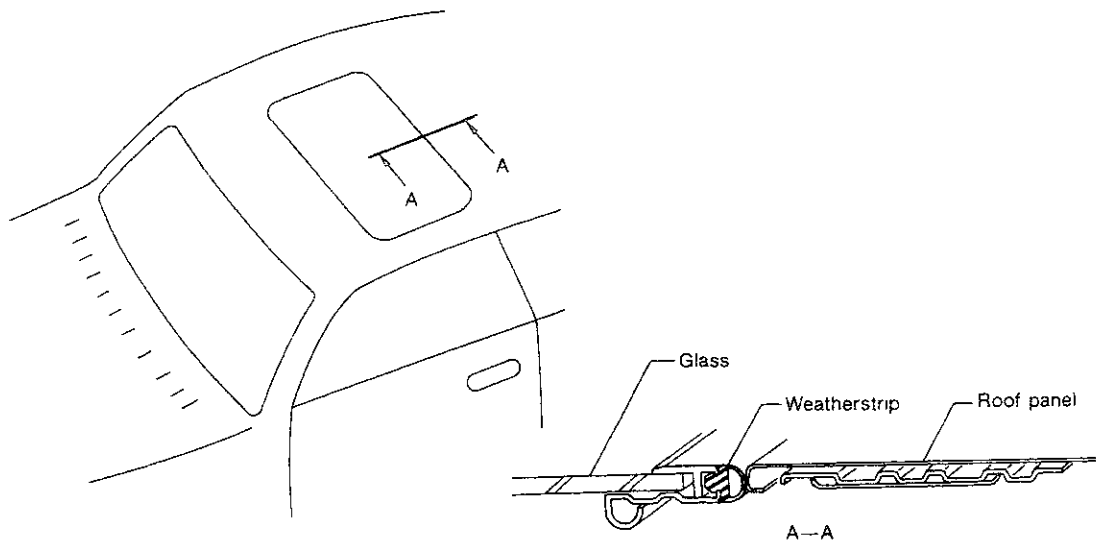

SUNROOF

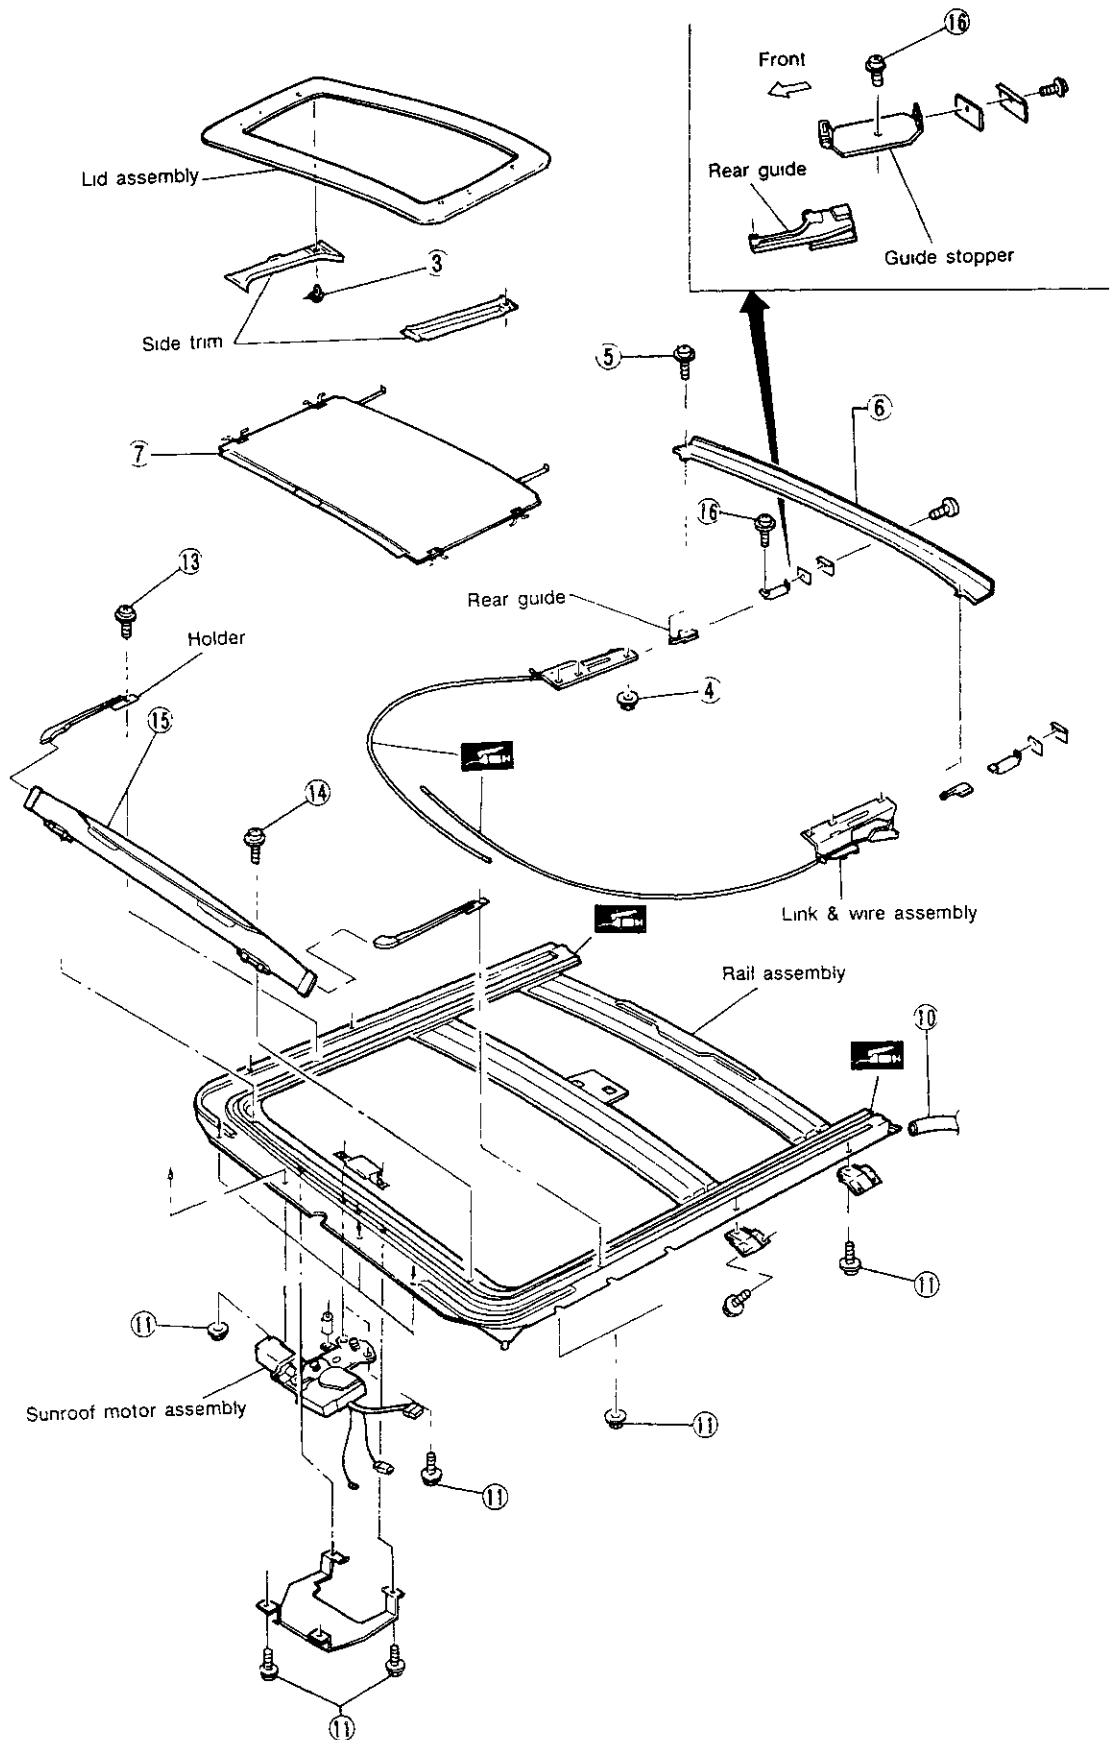

SBF919F


BF-105

SUNROOF


ADJUSTMENT

When motor & limit SW assembly and sunroof rail assembly are being installed, perform operations in the following sequence:

1. Make sure that link and wire assemblies are arranged in lateral symmetry.
2. Connect sunroof connector to sunroof switch and positive (+) power supply.
3. Set lid assembly to fully closed position **A** by operating CLOSE switch and TILT switch.
4. Fit outer side of lid assembly to the surface of roof on body outer panel.
5. Remove motor, and keep CLOSE switch pressed until motor pinion gear reaches the end of its rotating range.
6. Install motor.
7. Check that motor drive gear fits snugly in wires.
8. Press TILT-UP switch to check lid assembly for normal tilting.
9. Check sunroof lid assembly for normal operations (tilt-up, tilt-down, open, and close).

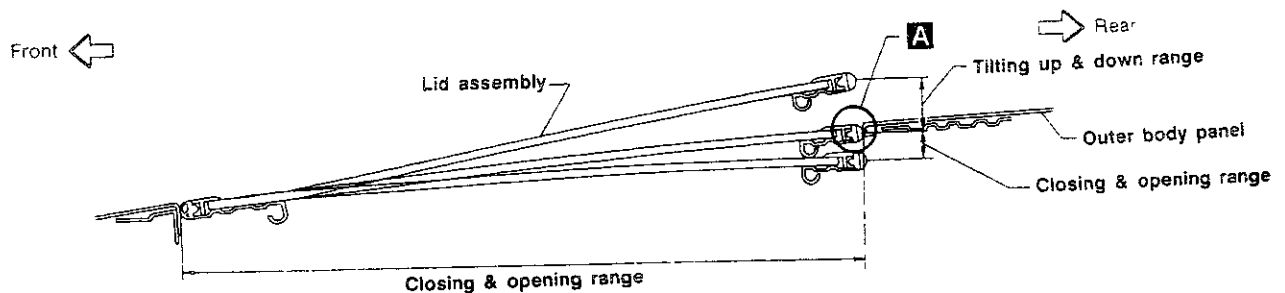


Wiring Diagram

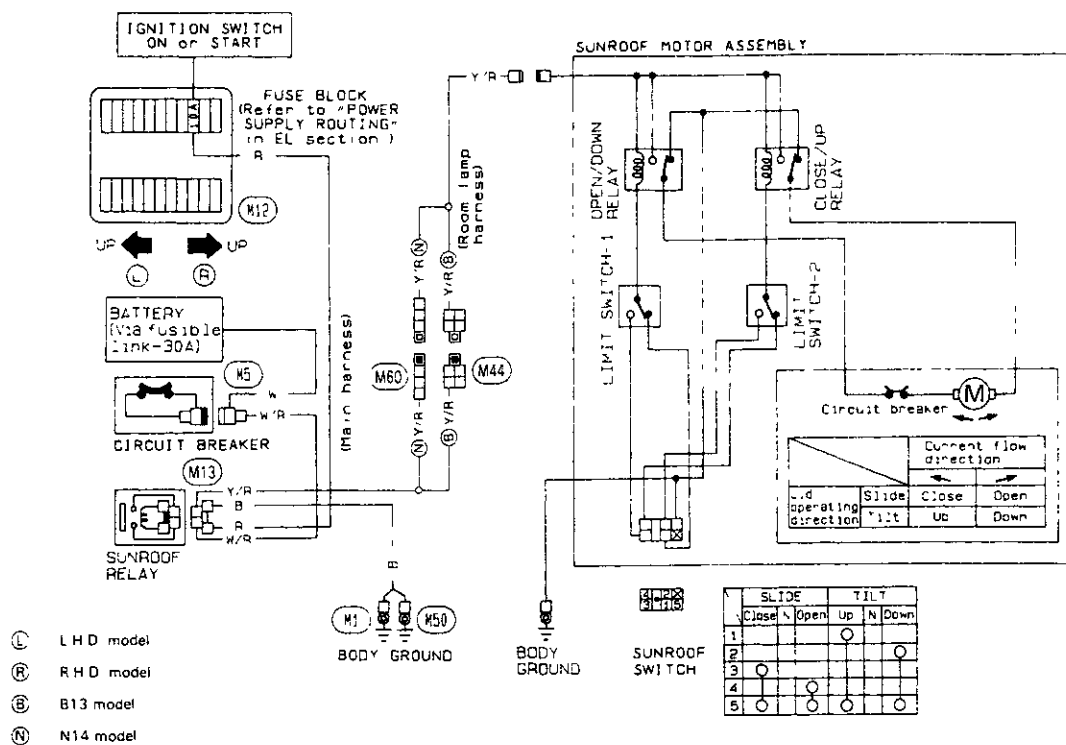




SBF084G

T-BAR ROOF



- Handle T-bar roof glass with care so not to damage it.
- Apply sealant to portions susceptible to water leakage if necessary.
- Side molding, sash, lock basement and glass of T-bar roof constitute one unit and cannot be disassembled.

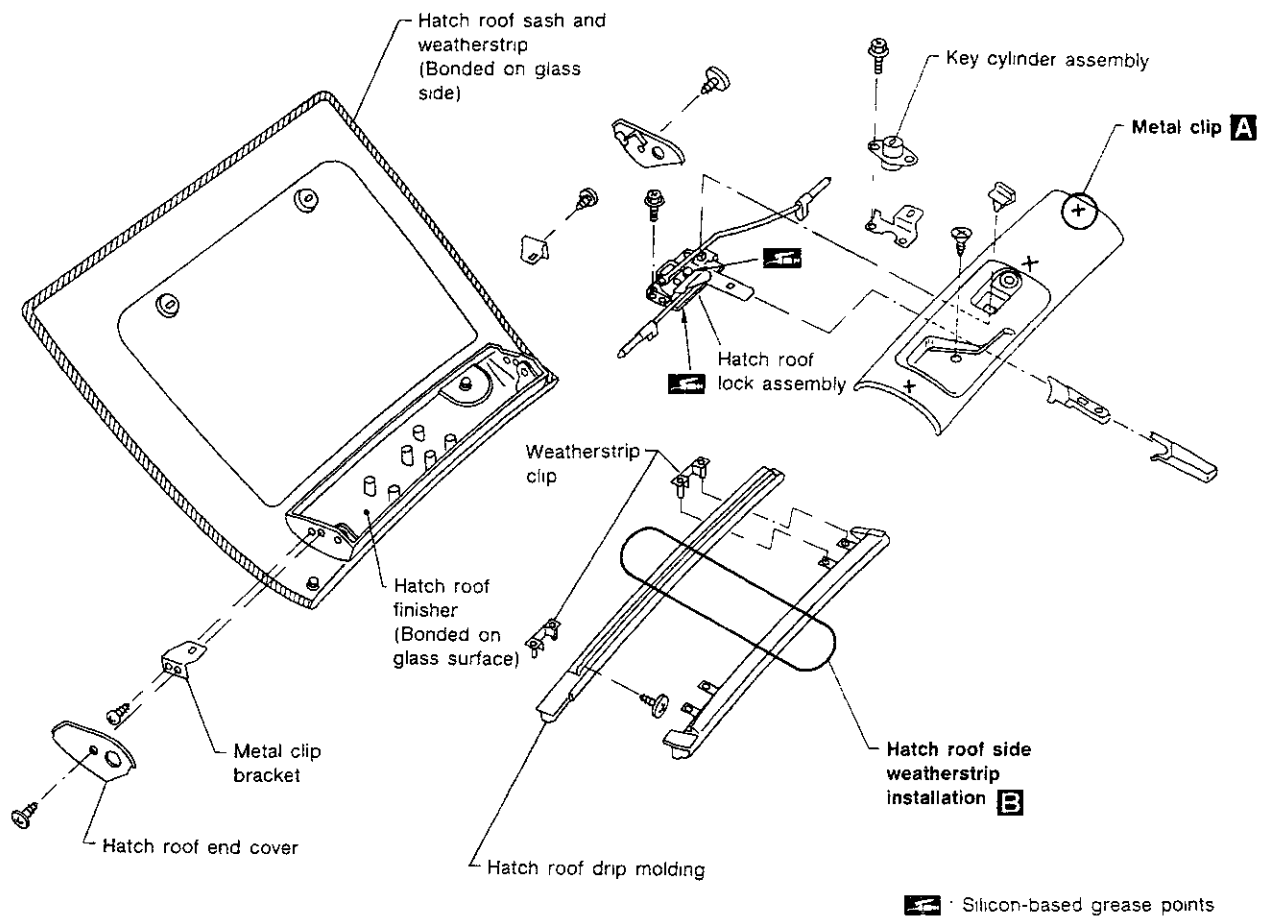

T-BAR ROOF

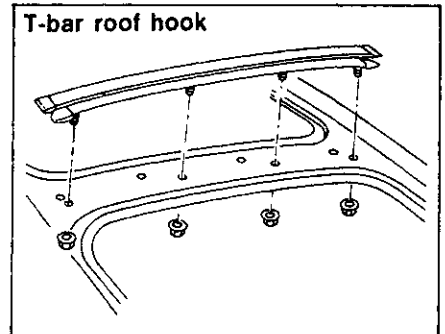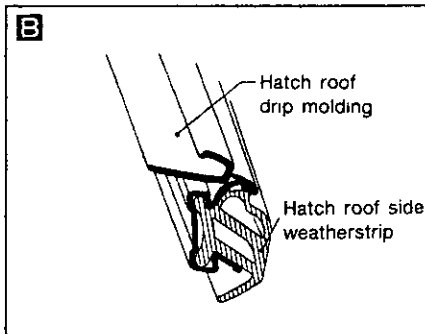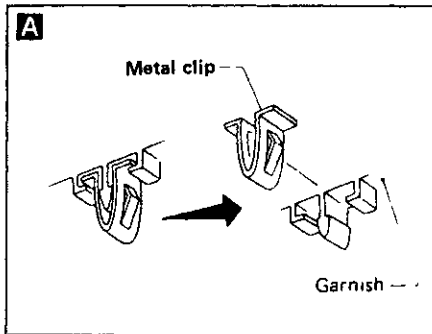


T-bar roof female lock adjustment

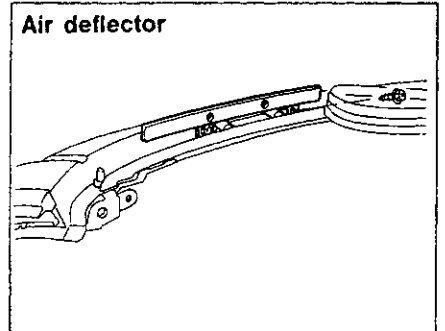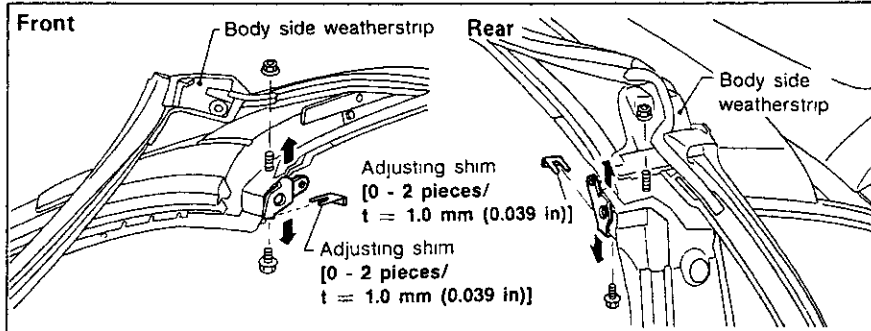

Windshield and Rear Window

REMOVAL

After removing moldings, remove glass.

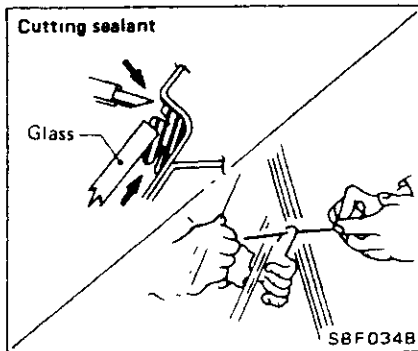


CAUTION:

Be careful not to scratch glass when removing.


INSTALLATION

- Use genuine Nissan Sealant kit or equivalent. Follow instructions furnished with it.
- After installation, the vehicle should remain stationary for about 24 hours.
- Do not use sealant which is more than 12 months past its production date.
- Do not leave cartridge unattended with its cap open.
- Keep primers and sealant in a cool, dry place. Ideally, they should be stored in a refrigerator.

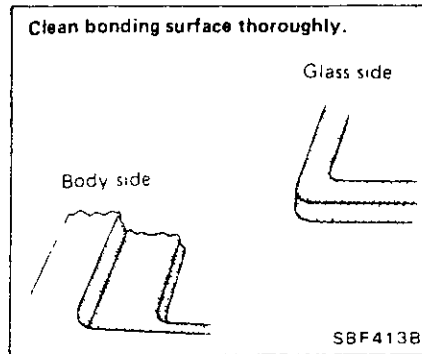

WARNING:

Keep heat or open flames away as primers are flammable.

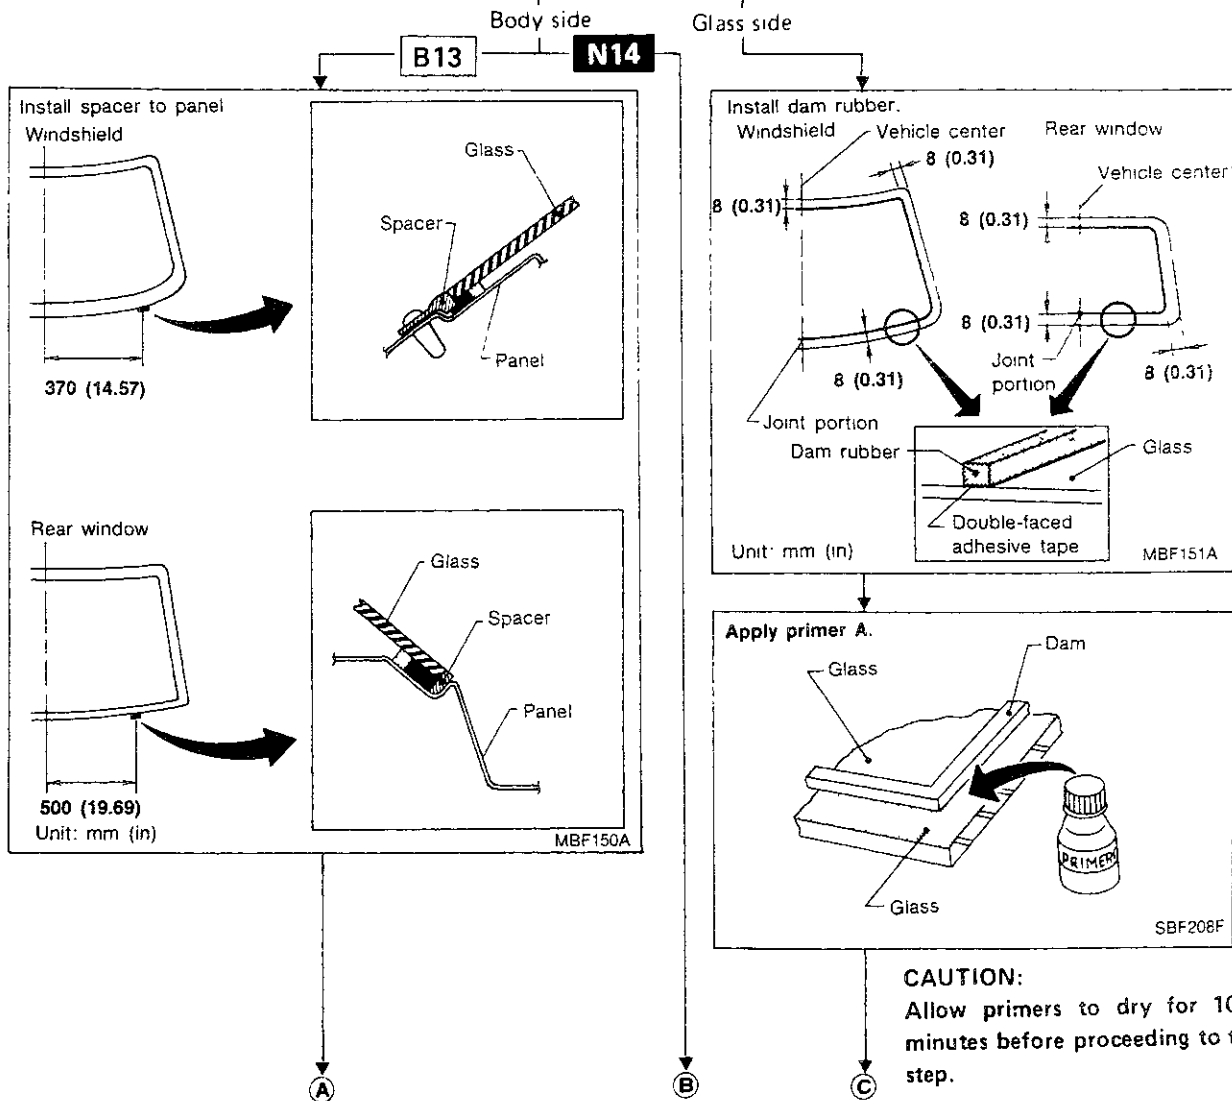


CAUTION:

Allow primers to dry for 10 to 15 minutes before proceeding to the next step.


WINDSHIELD AND WINDOWS

Windshield and Rear Window (Cont'd)

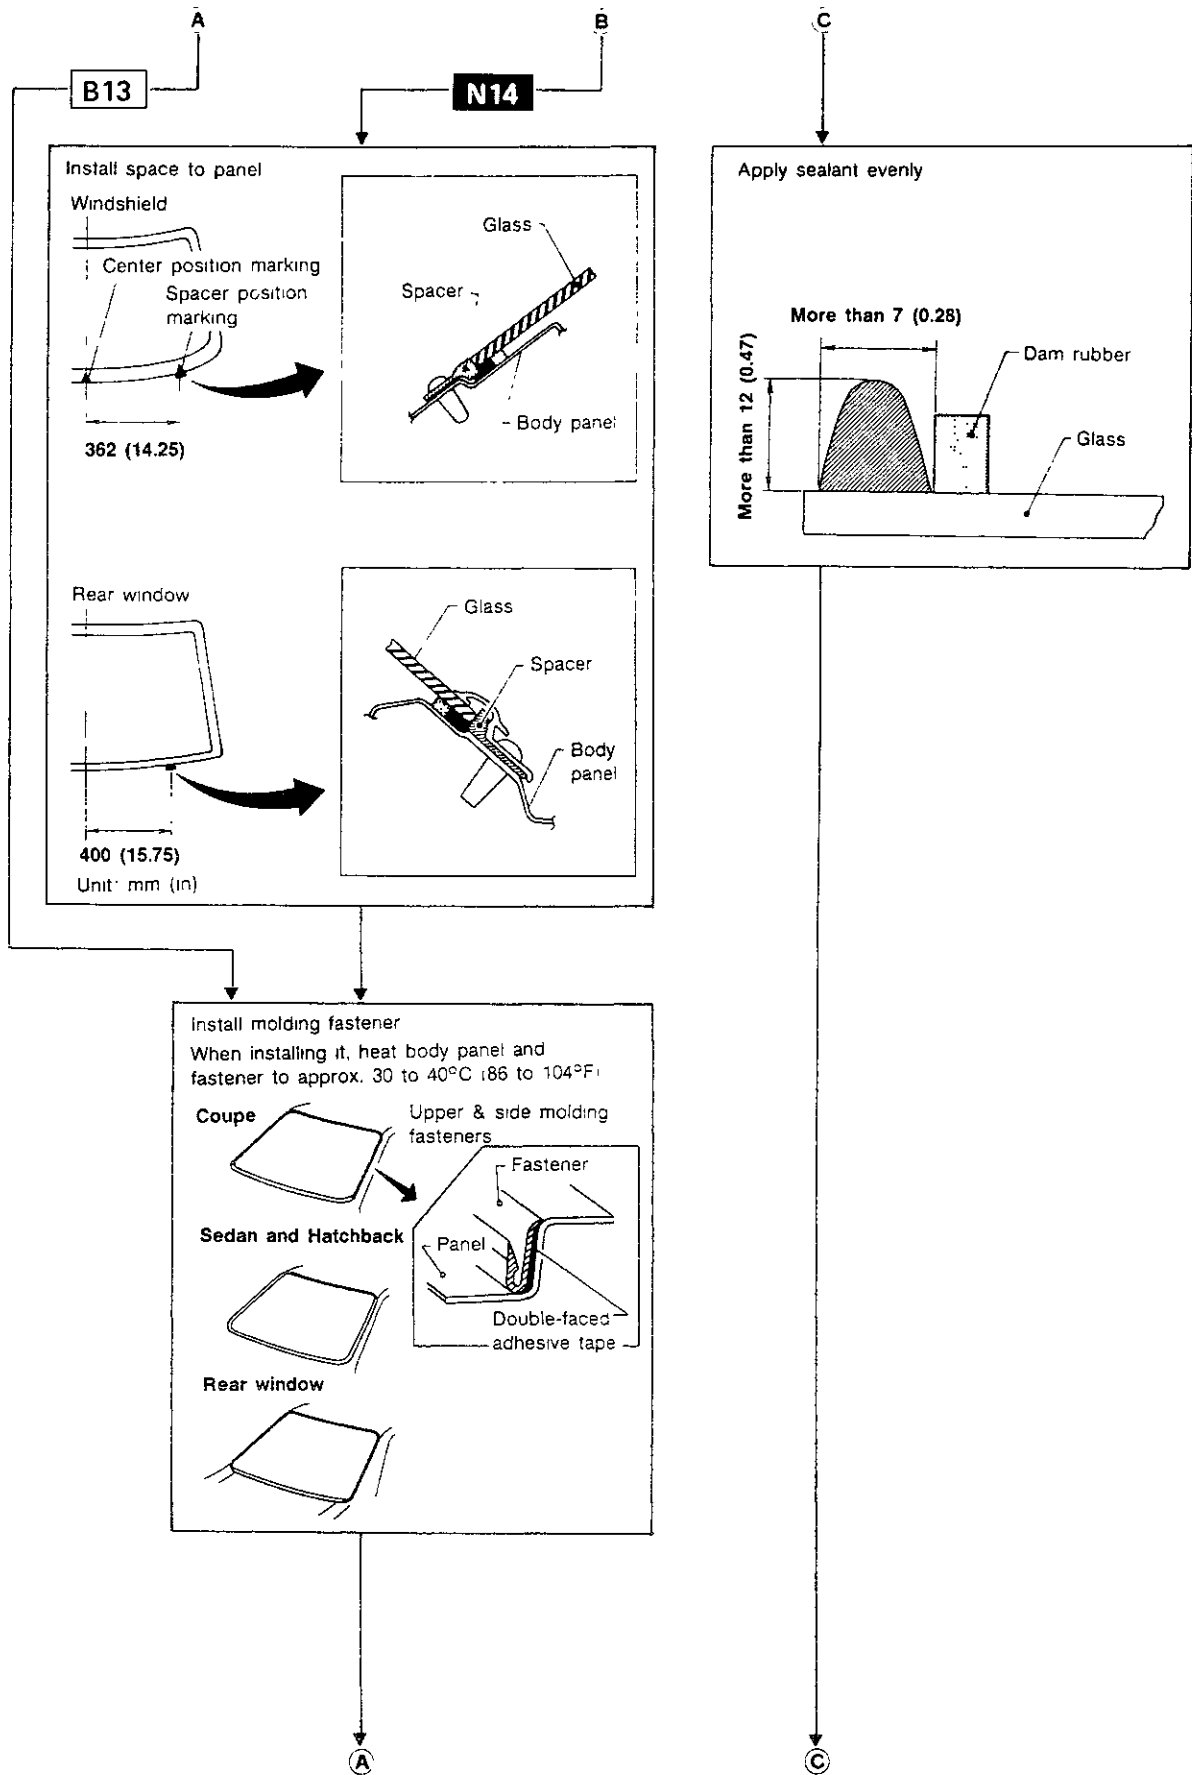

WINDSHIELD AND WINDOWS

Windshield and Rear Window (Cont'd)

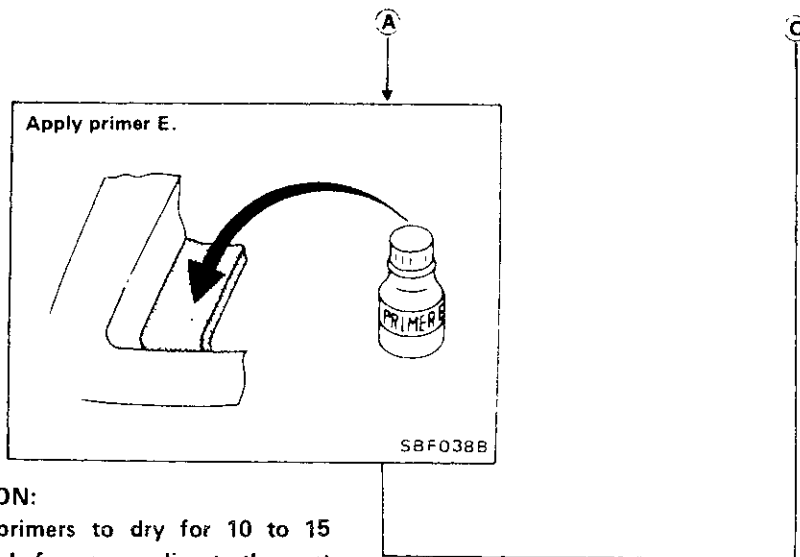

CAUTION:
Allow primers to dry for 10 to 15 minutes before proceeding to the next step.

Set glass in position and press glass lightly and evenly.

CAUTION:
Windshield glass should be installed within 15 minutes of applying sealant: sealant starts to harden 15 minutes after it is applied.

Check for water leakage.


Install moldings.

CAUTION:
Molding must be installed securely so that it is in position and leaves no gap.


Back Door Window

COUPE


- Construction and removal/reinstallation method of back door window are basically the same as those of windshield.
- For sealant drying time, refer to "Drying Time for Sealant".

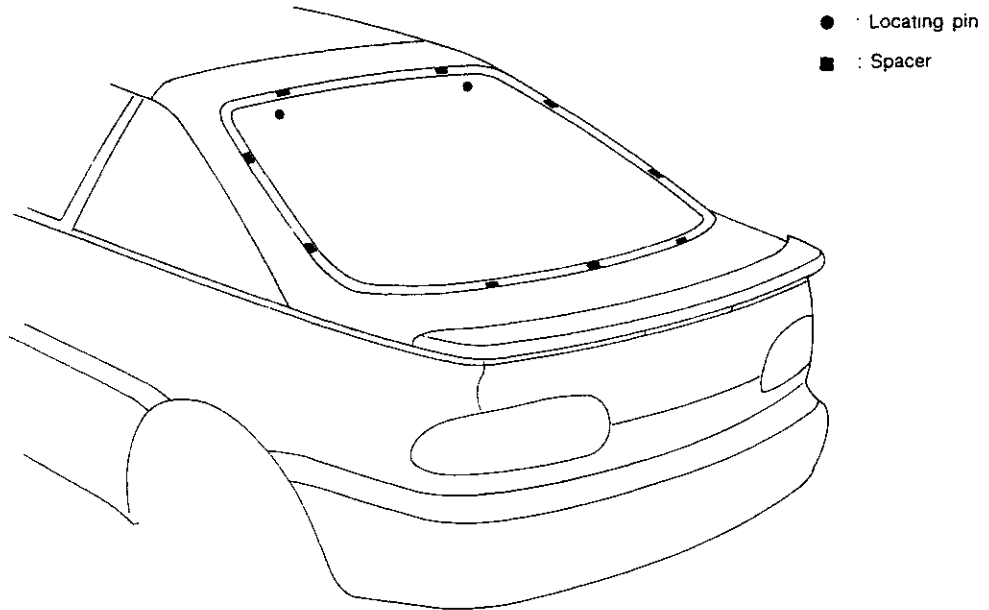


Spacer portion

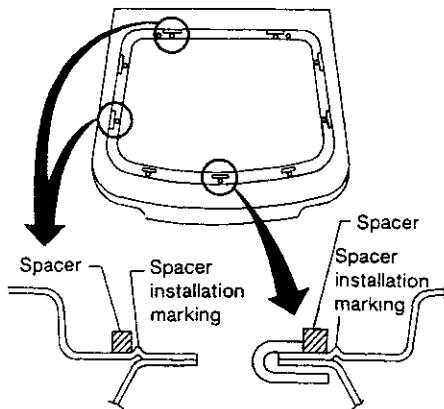


Primer portion (Body side)

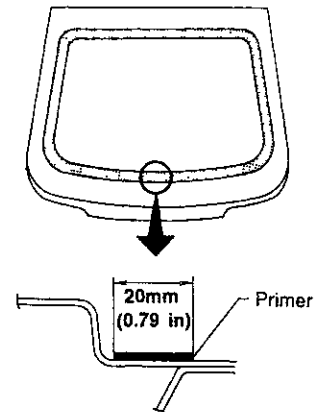


Back door molding installation

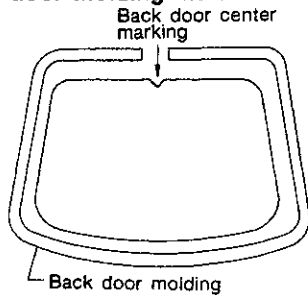

Primer portion (Glass side)

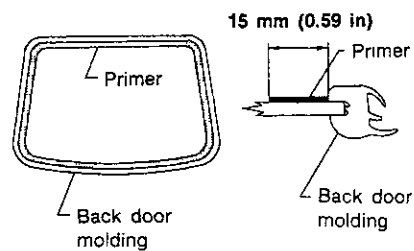

Apply sealant evenly. More than 7 (0.28)

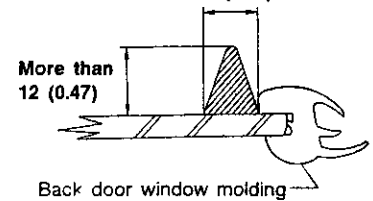


Unit: mm (in)

WINDSHIELD AND WINDOWS


Back Door Window (Cont'd)

N14 5-DOOR HATCHBACK





- : Locating pin
- : Spacer

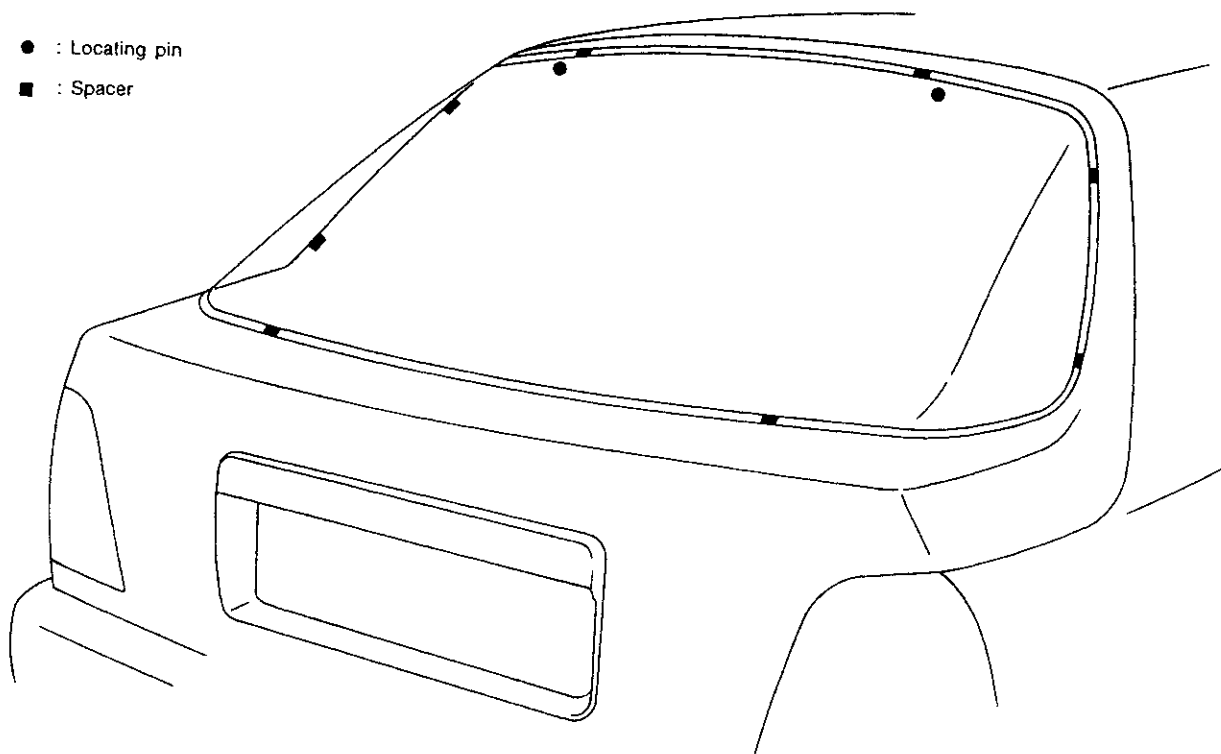

Spacer portion

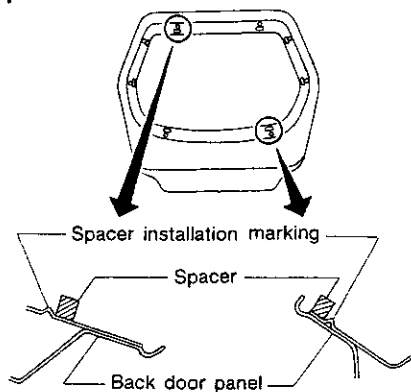

Primer portion (Body side)

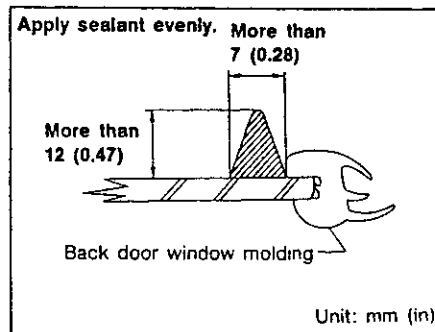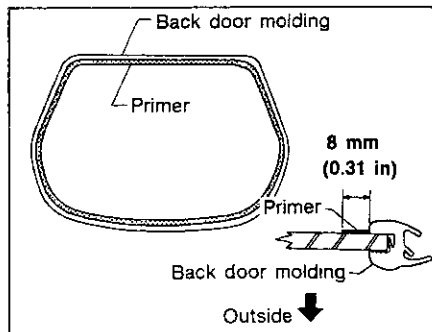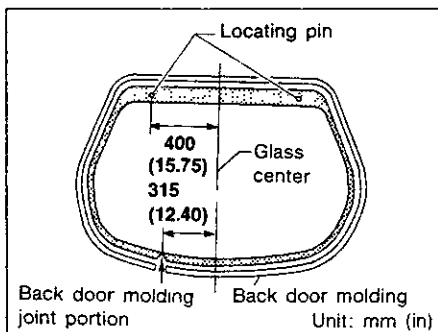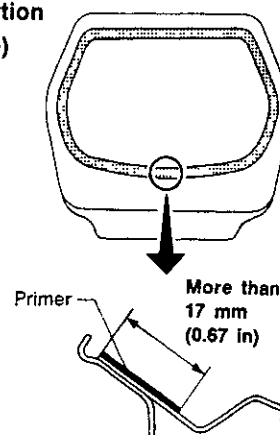


MBF365A

WINDSHIELD AND WINDOWS


Back Door Window (Cont'd)

N14 3-DOOR HATCHBACK





- Locating pin
- Spacer

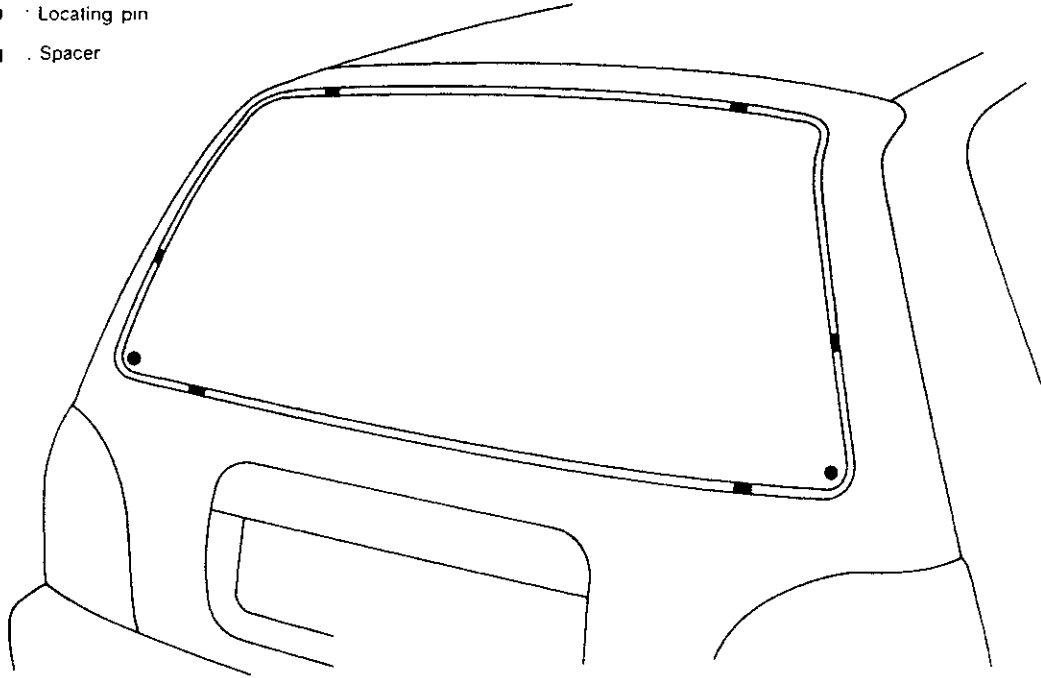

Spacer portion

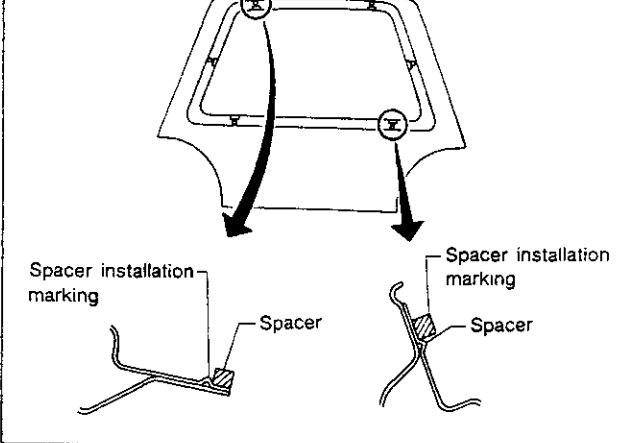



Primer portion (Body side)

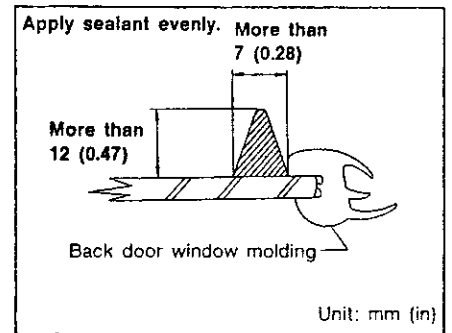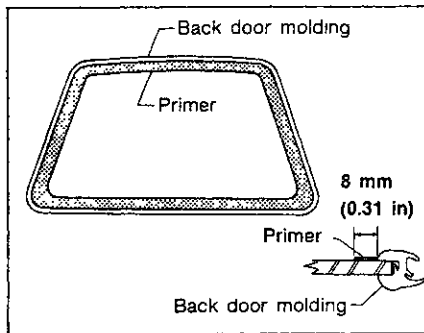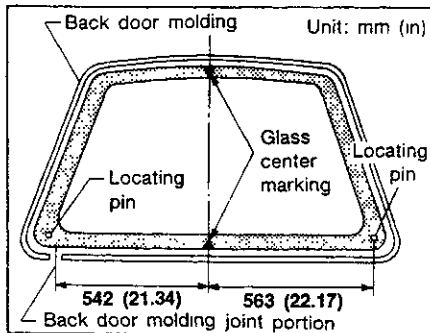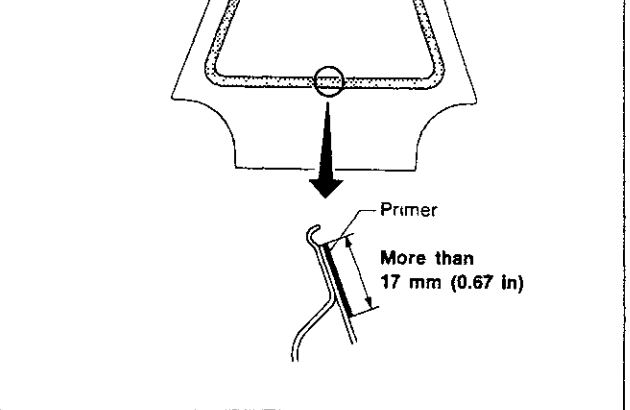


WINDSHIELD AND WINDOWS

Side Window

COUPE

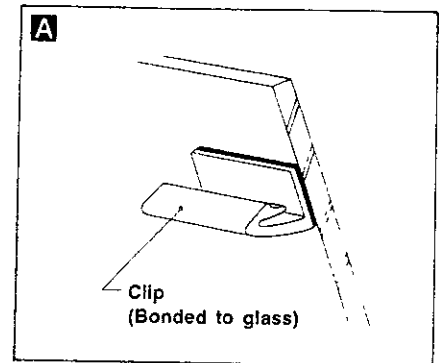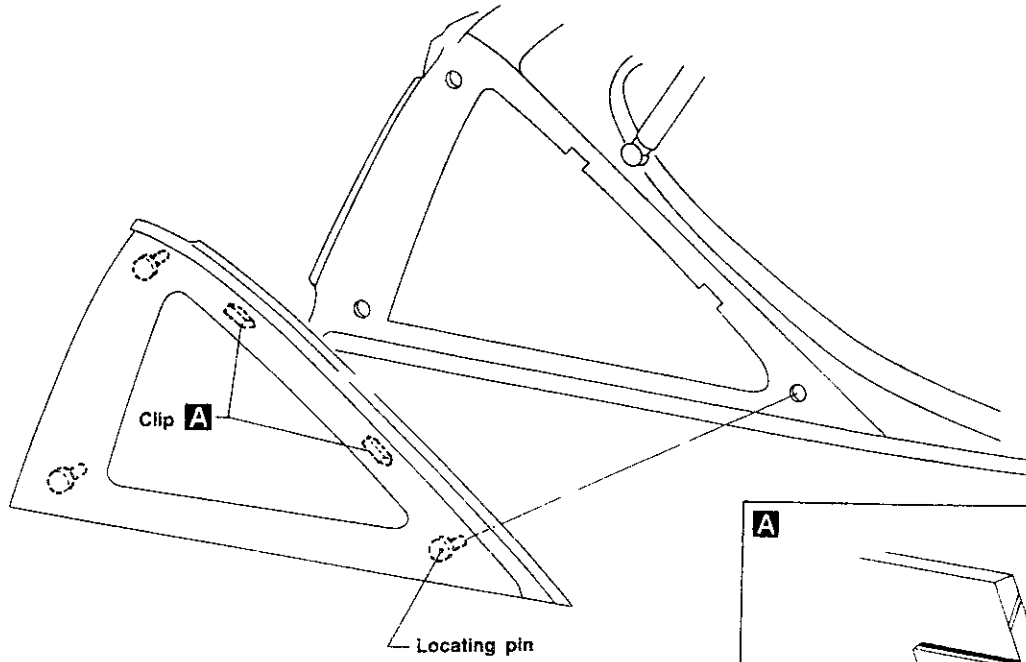


Primer portion (Body side)

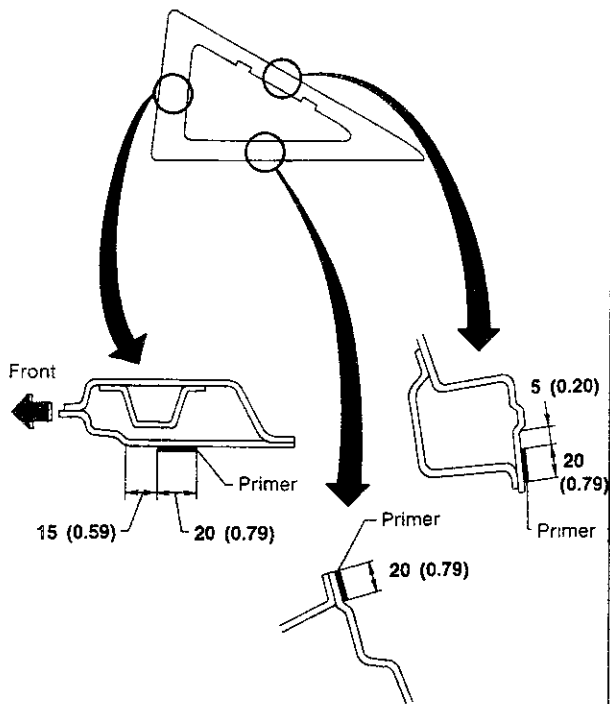


Unit: mm (in)

Primer portion (Glass side)

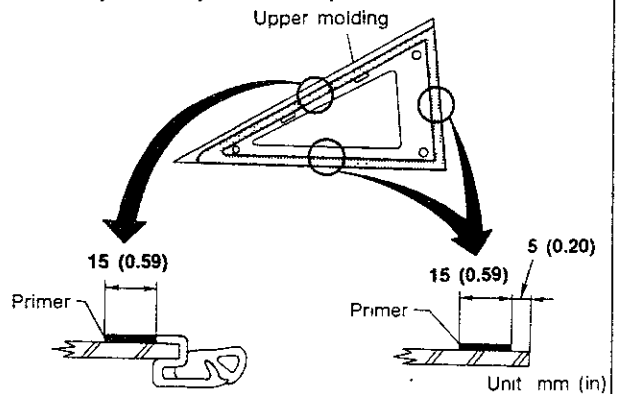

Unit: mm (in)

Apply sealant evenly.

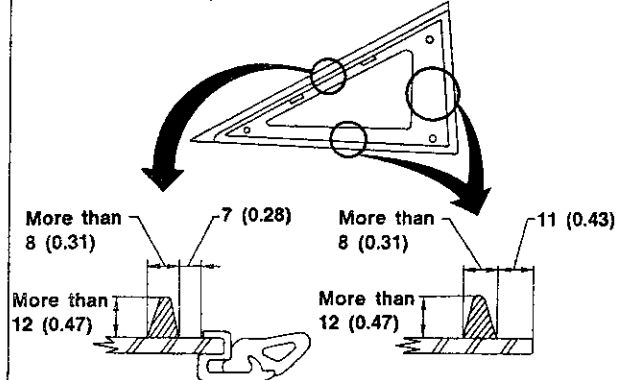

Unit: mm (in)


MBF143A

BF-116

WINDSHIELD AND WINDOWS

Side Window (Cont'd)

N14 3-DOOR HATCHBACK

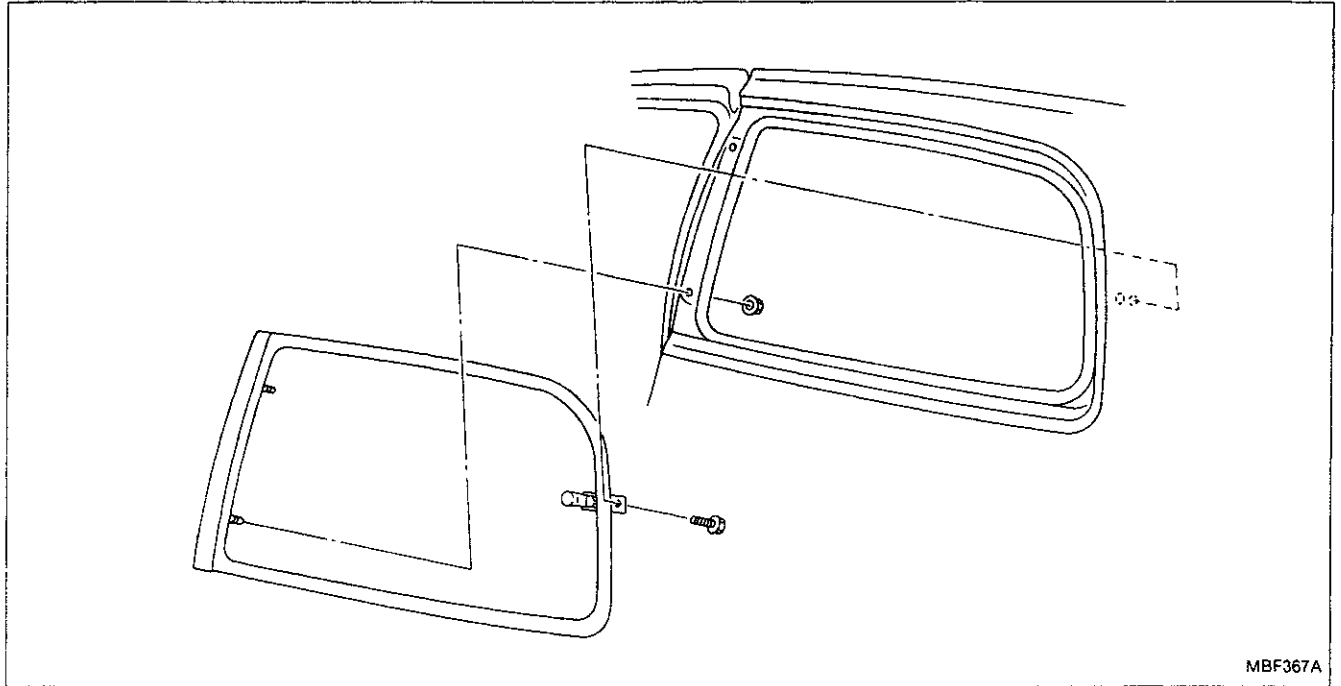

WINDSHIELD AND WINDOWS

Drying Time for Sealant

Reference: Time required for sealant to dry to desired hardness.

B13

Unit: days

Relative humidity % Temperature °C (°F)	Windshield and rear window			Side window			Back door window		
	90	50	25	90	50	25	90	50	25
40 (104)	1.5	2.5	5.0	1.0	2.0	4.0	2.0	3.0	6.0
25 (77)	2.5	4.0	7.5	2.0	3.0	5.5	3.0	5.0	9.0
5 (41)	5.0	13.0	21.0	3.5	9.5	15.0	6.0	15.5	24.5

N14

Unit: days

Relative humidity % Temperature °C (°F)	Windshield			Rear window			Back door window		
	90	50	25	90	50	25	90	50	25
40 (104)	1.5	2.5	5.0	1.5	2.5	4.5	2.0	3.0	6.0
25 (77)	2.5	4.0	7.5	2.0	4.0	7.0	3.0	5.0	9.5
5 (41)	5.0	13.0	21.0	4.5	12.0	19.0	6.0	16.0	25.0

CAUTION:


Advise the user of the fact that vehicle should not be driven on rough roads or surfaces until sealant has properly vulcanized.

Repairing Water Leaks for Windshield and Rear Window

Leaks can be repaired without removing and reinstalling glass.

If water is leaking between caulking material and body or between glass and caulking material, determine the extent of the leak by applying water while pushing glass outward.

To stop the leak, apply primer and then sealant to the leak point.

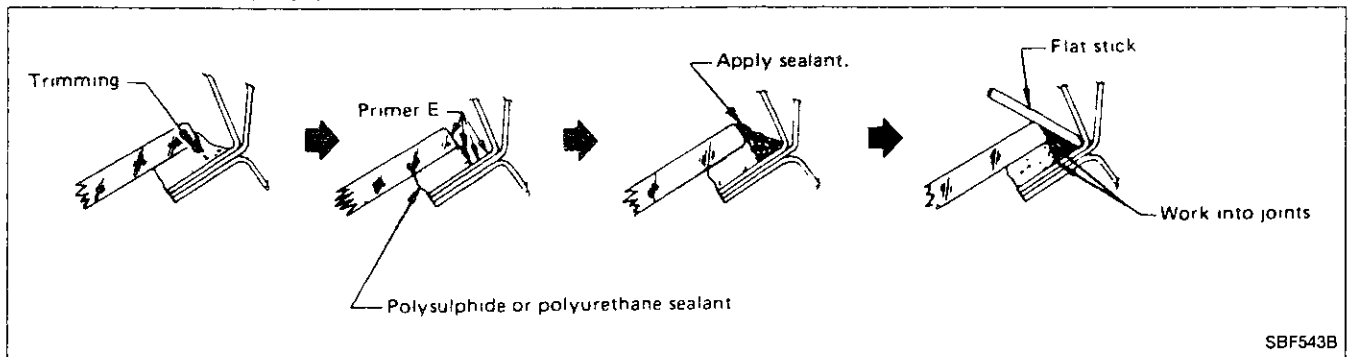


Afterwards, install molding securely.

MIRROR

Door Mirror

REMOVAL


- Wrap flat-bladed screwdriver with a cloth to prevent scratching rear of door mirror. Do not insert screwdriver too far.

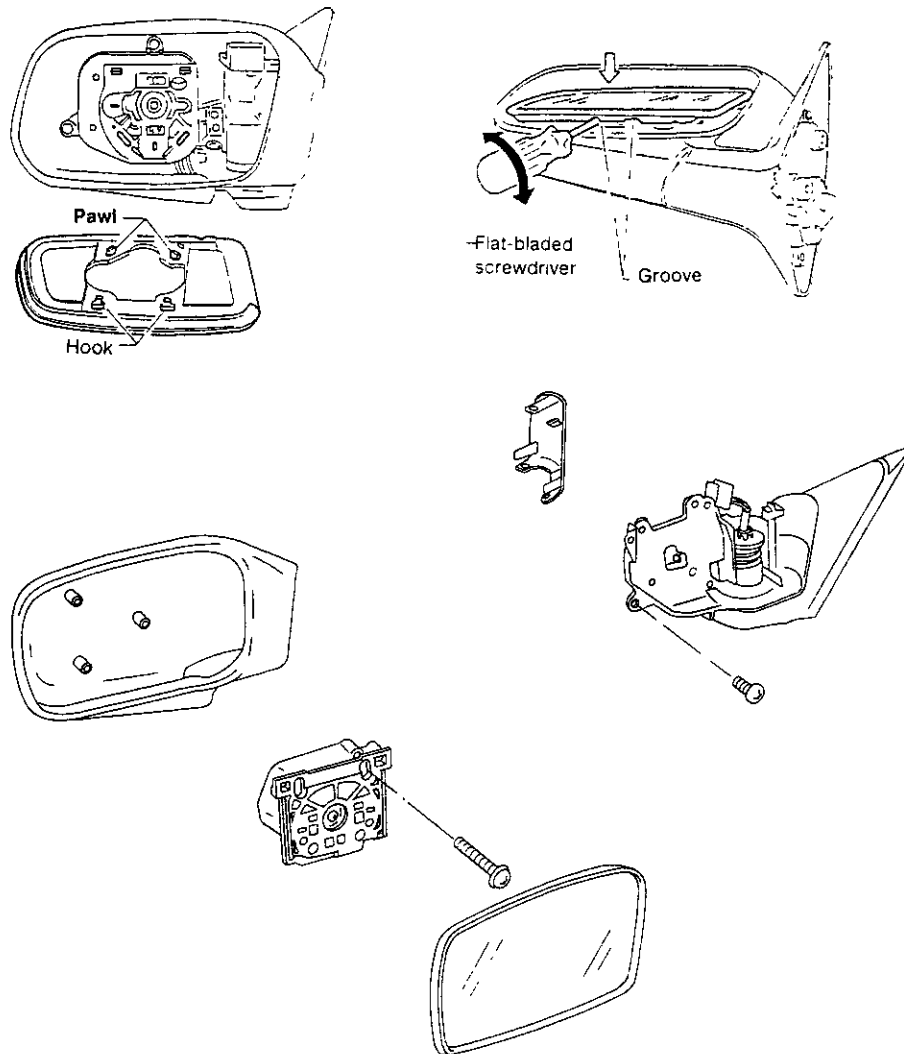

MIRROR

Door Mirror/Wiring Diagram


Without heated mirror

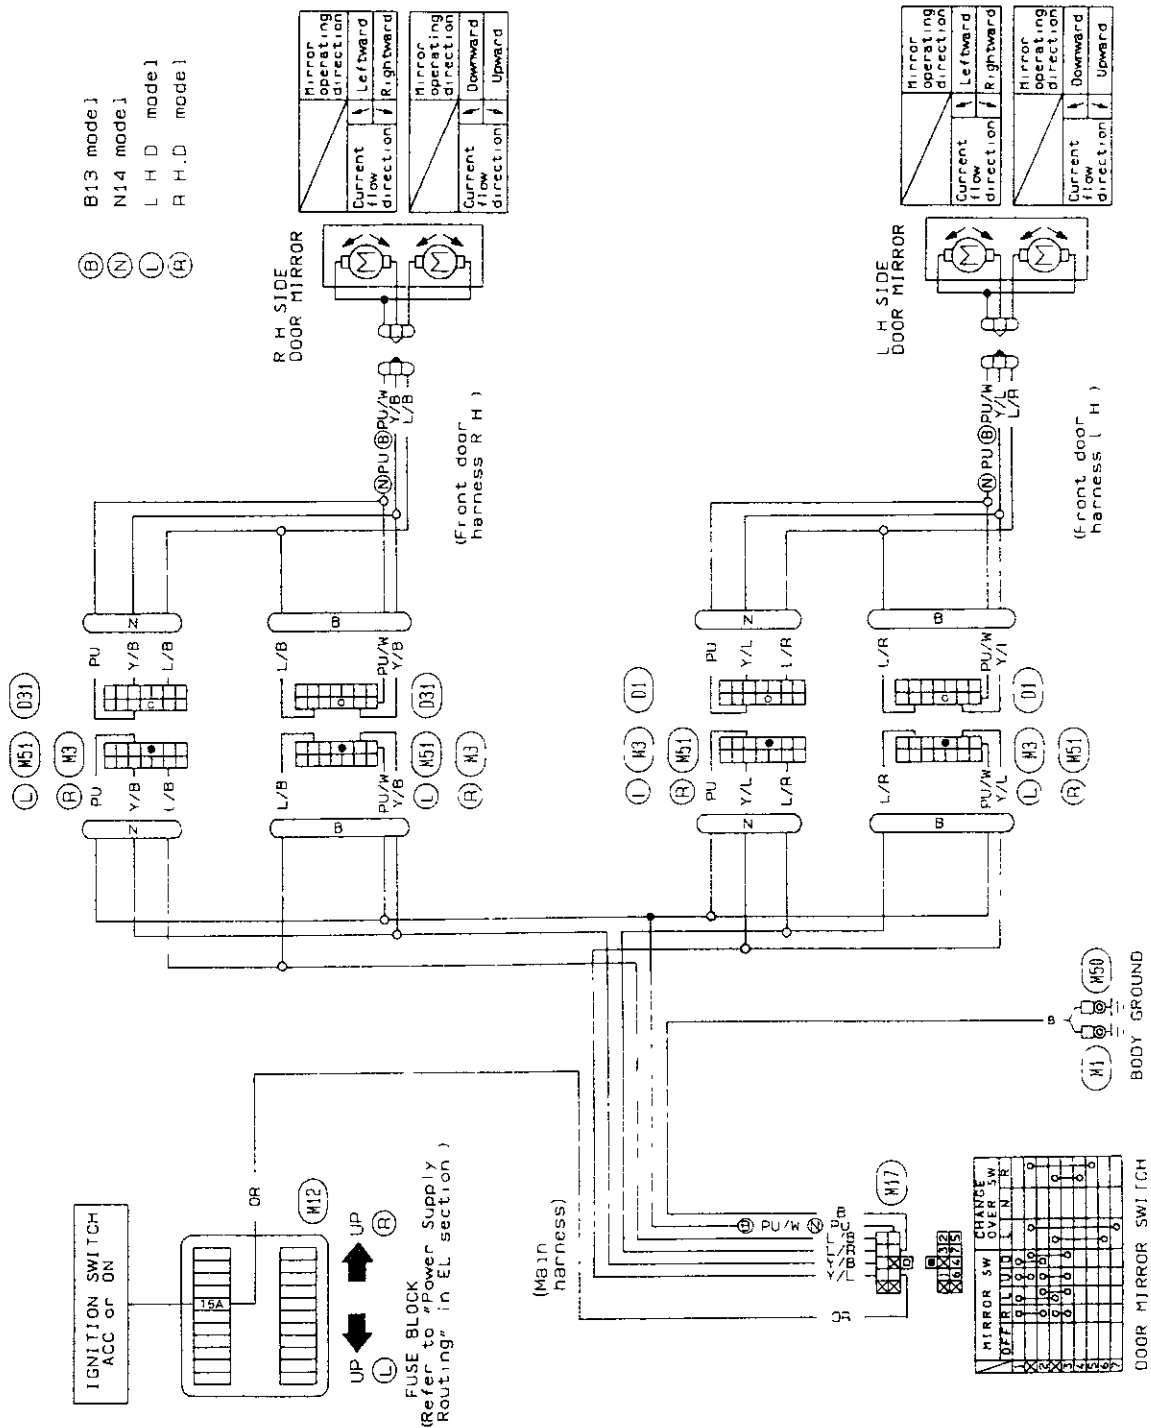

MIRROR

Door Mirror/Wiring Diagram (Cont'd)

With heated mirror

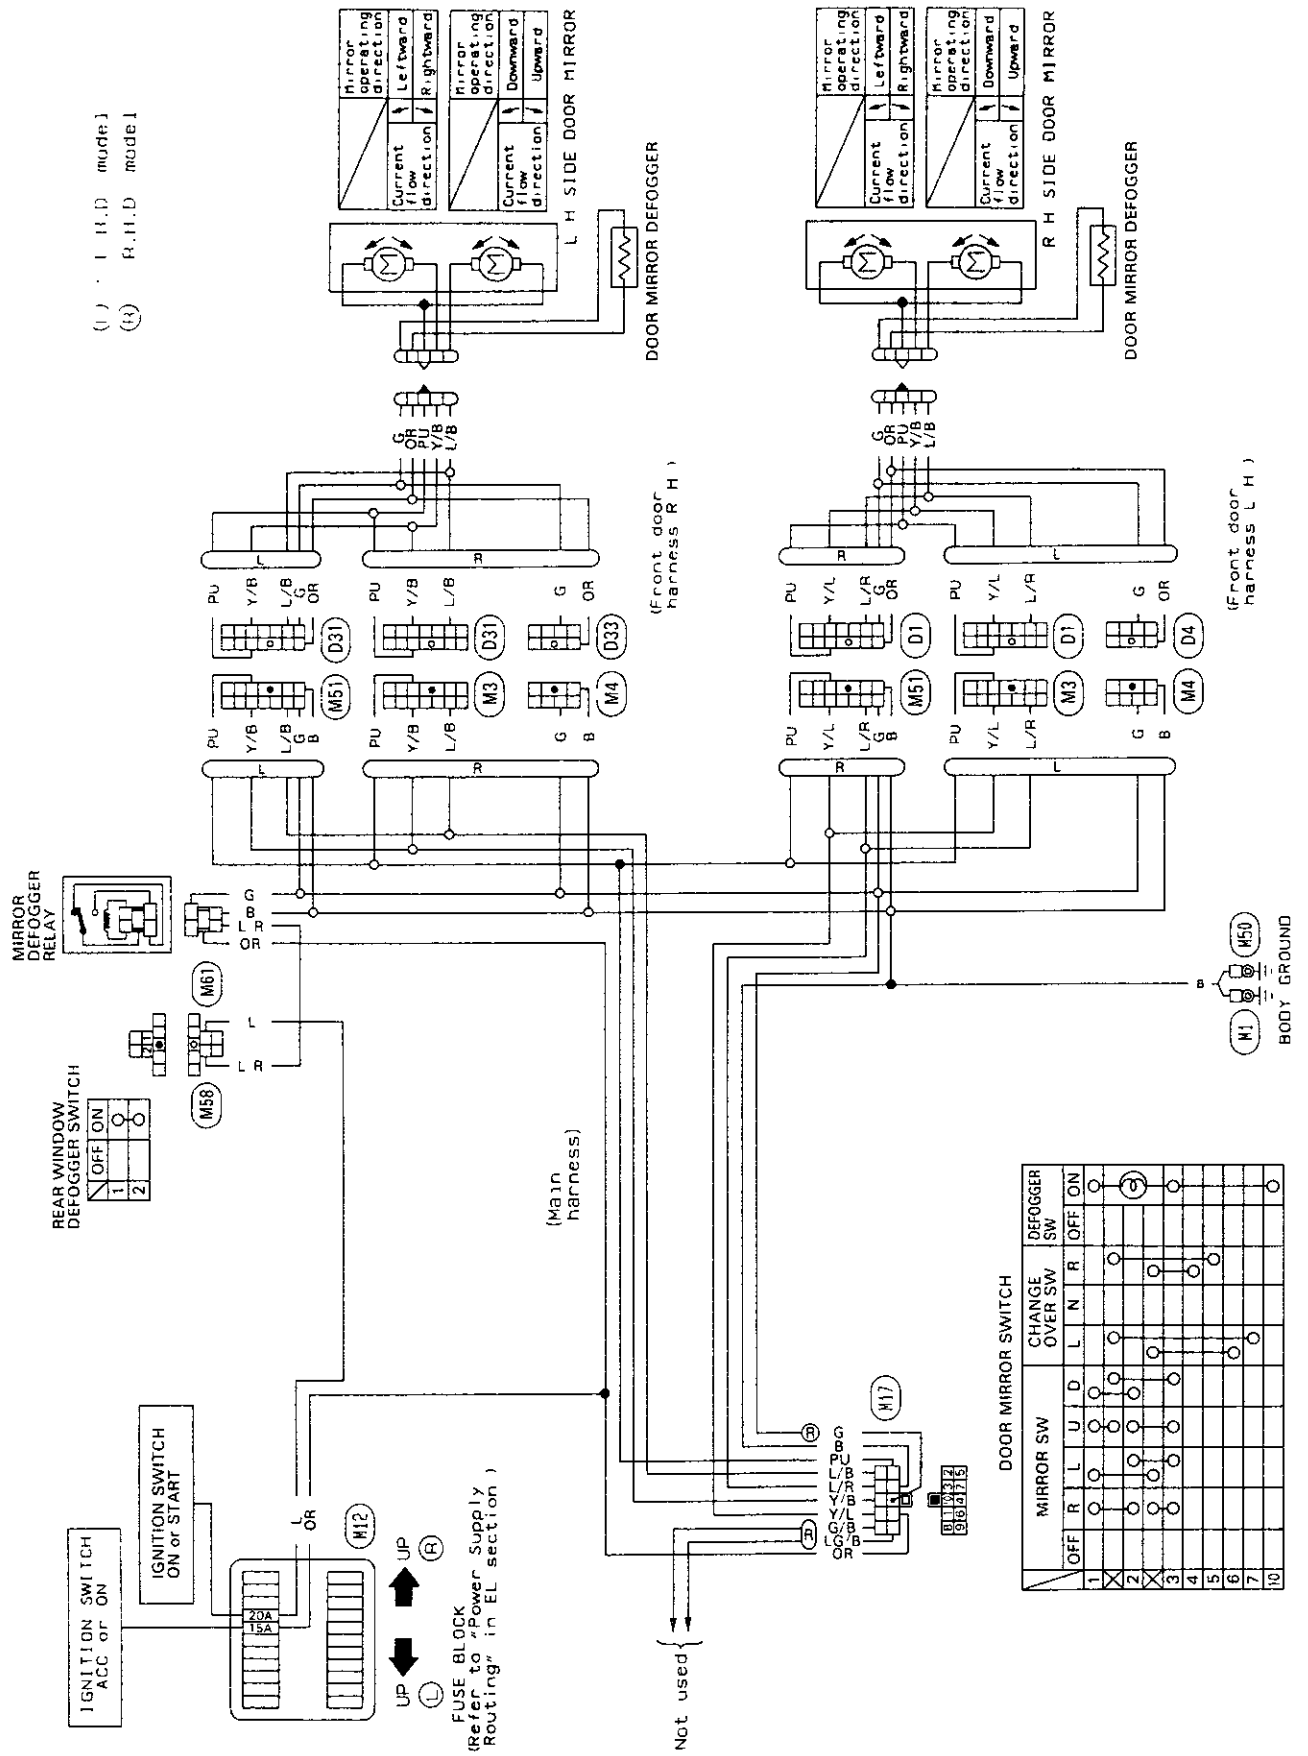


REAR AIR SPOILER

- When installing, make sure that there are not gaps or waves at ends of air spoiler.
- Before installing spoiler, clean and remove oil from surface where spoiler will be mounted.

B13 COUPE




REAR AIR SPOILER

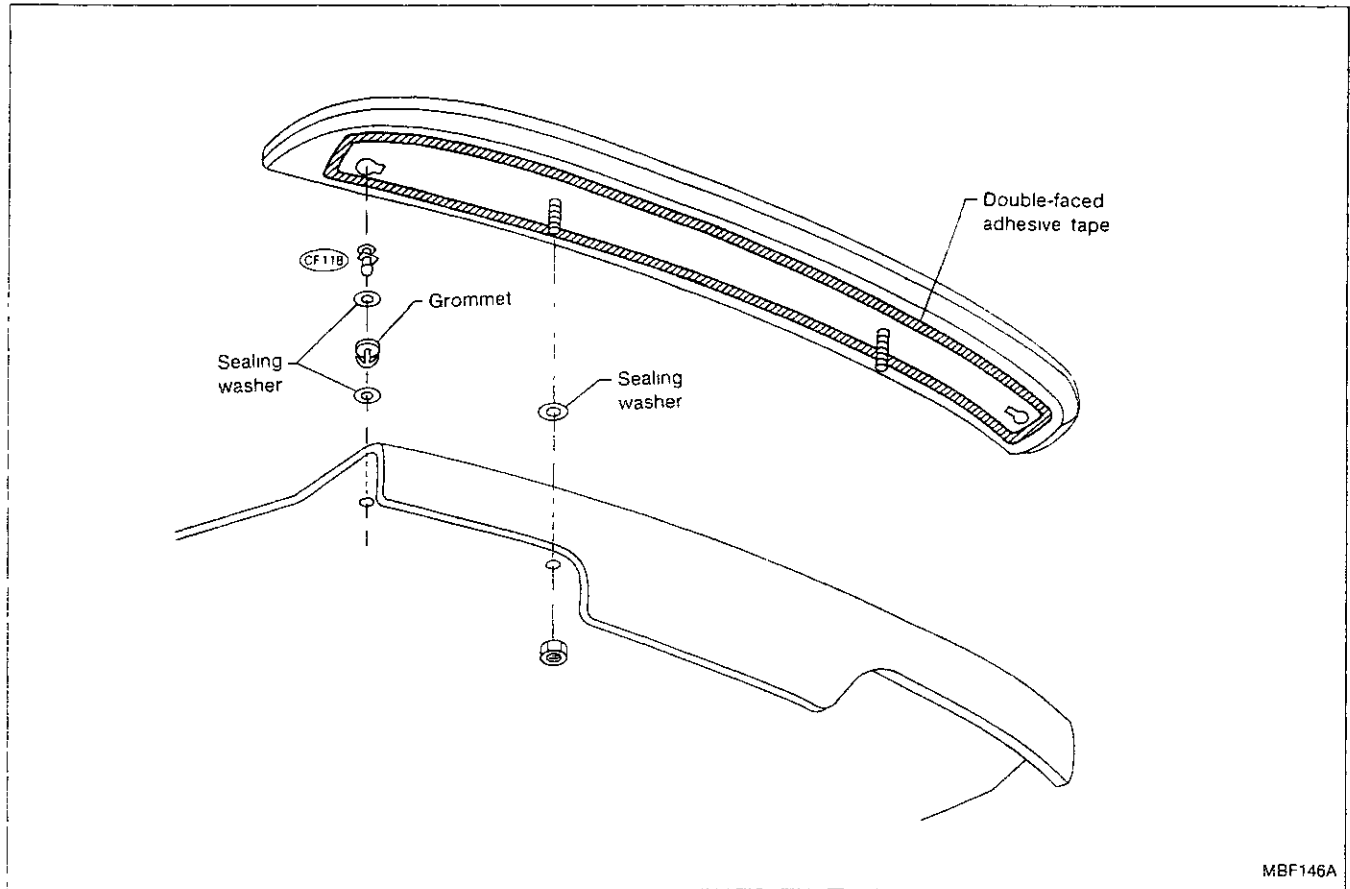

MBF146A

REAR AIR SPOILER

N14 5-DOOR HATCHBACK REAR AIR SPOILER

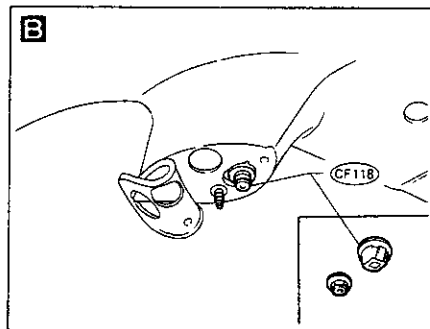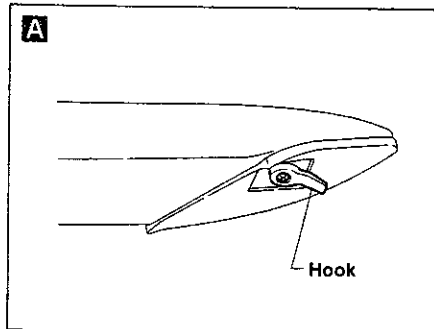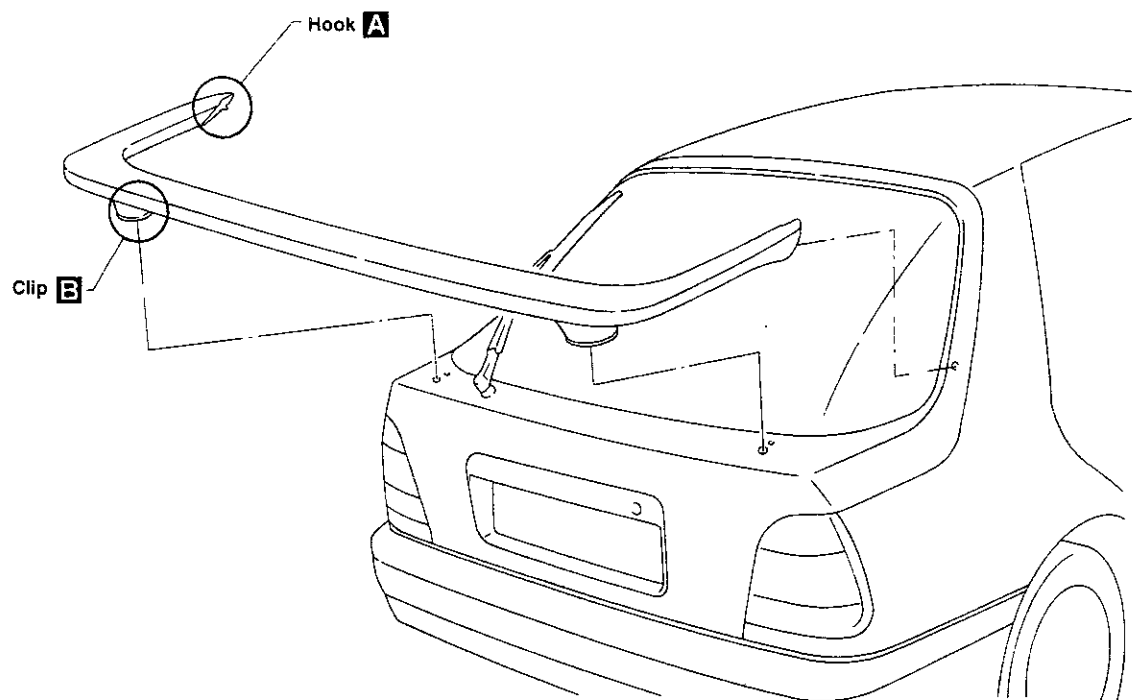


MBF169A

REAR AIR SPOILER


N14 3-DOOR HATCHBACK REAR AIR SPOILER

Type 1

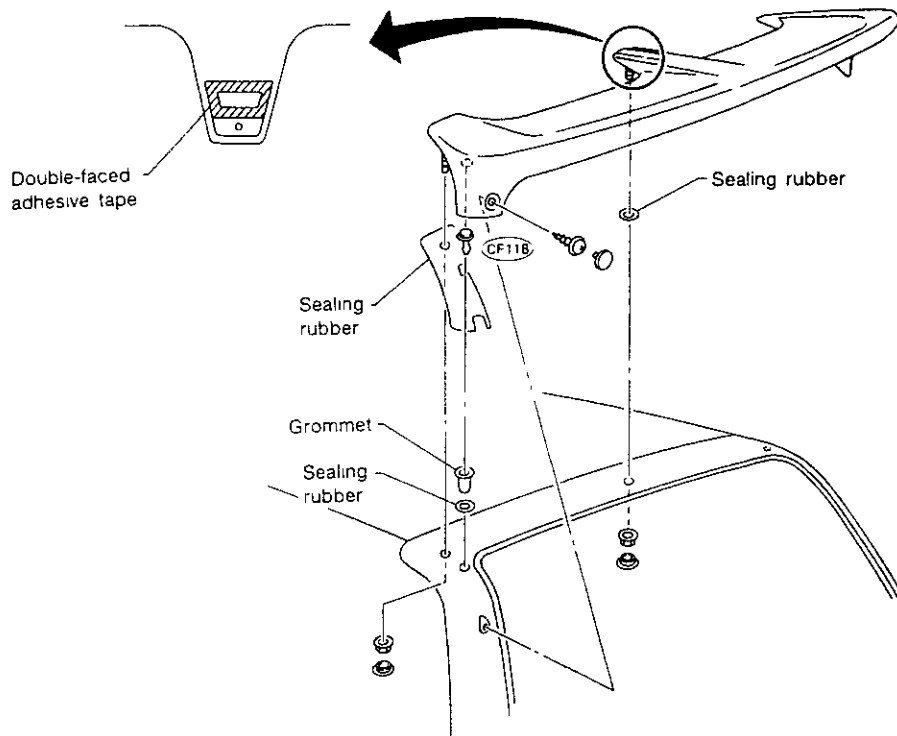

MBF368A


Type 2

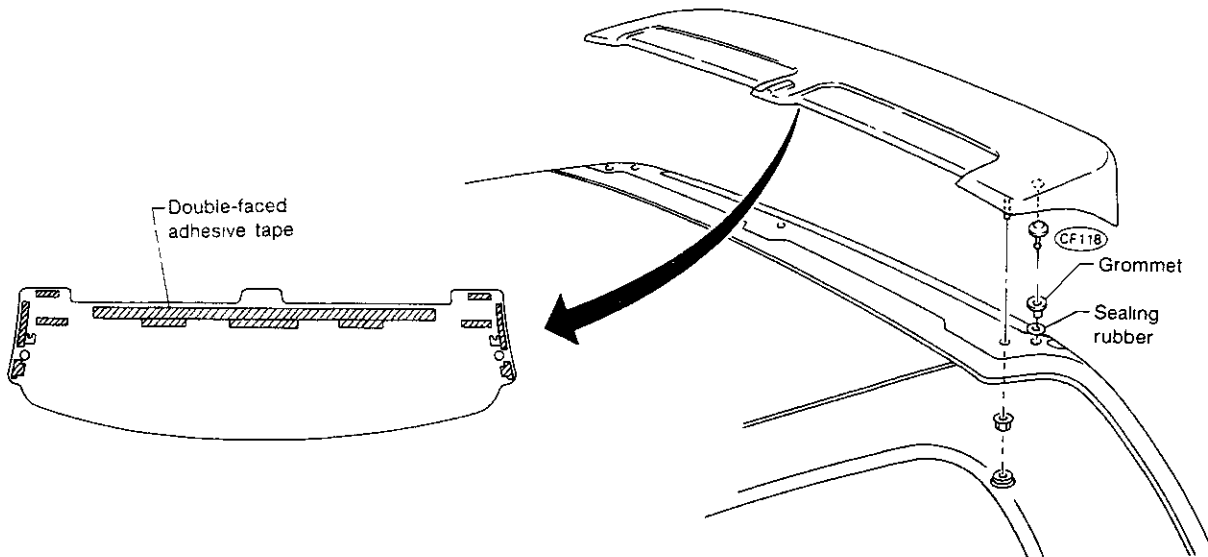

MBF369A


BODY ALIGNMENT

- All dimensions indicated in figures are actual ones.
- When a tram tracking gauge is used, adjust both pointers to equal length and check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes.
- An asterisk (*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- The coordinates of the measurement points are the distances measured from the standard line of "X", "Y" and "Z".

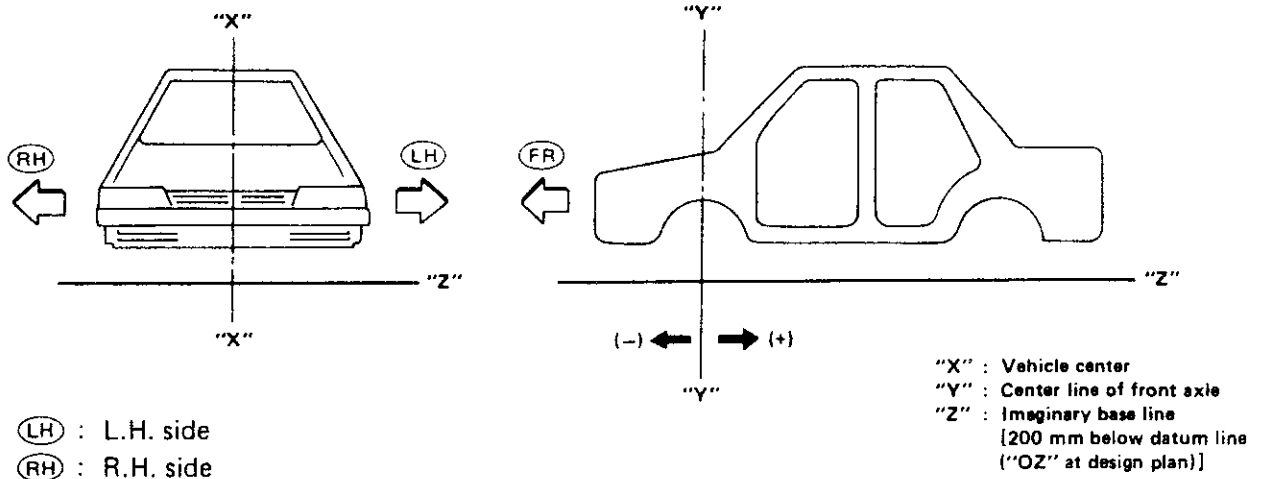

Engine Compartment

MEASUREMENT B13 Sedan

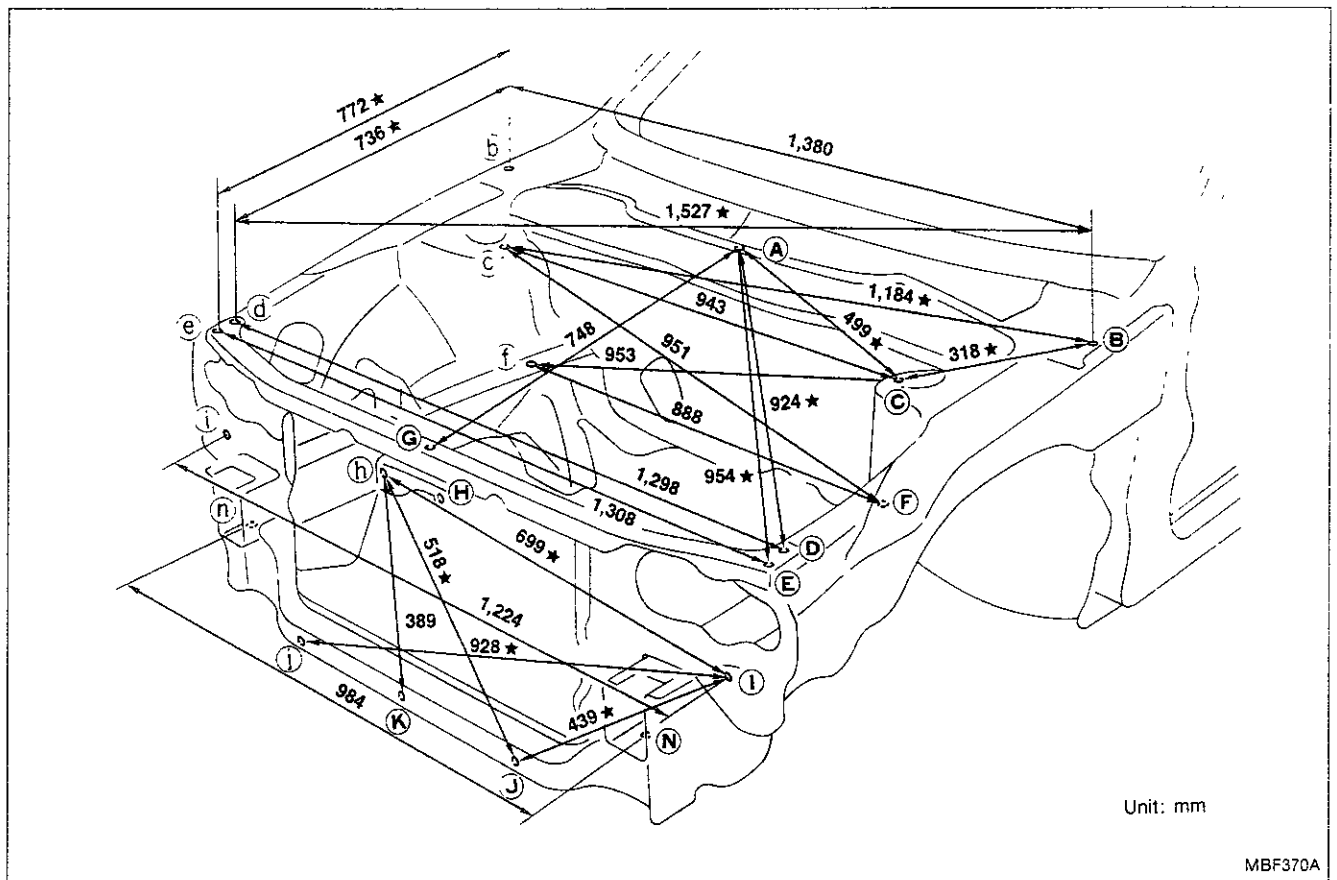

Engine Compartment (Cont'd)

Technical drawing of a vehicle chassis showing suspension and steering components with dimensions in mm. The drawing includes a top view of the chassis with various points labeled (A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, r, s, t, u, v, w, x, y, z) and dimensions in mm. A detailed view of the steering rack mounting points is shown in the bottom right corner.

Unit: mm

Steering rack mounting points (4WD models only)








MBF372A

BODY ALIGNMENT

Engine Compartment (Cont'd)

MEASUREMENT POINTS

Unit: mm

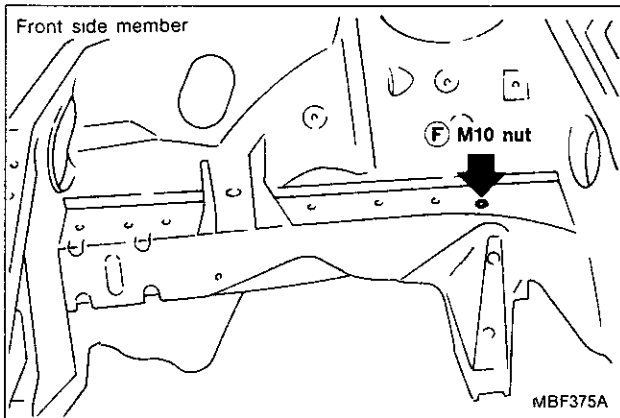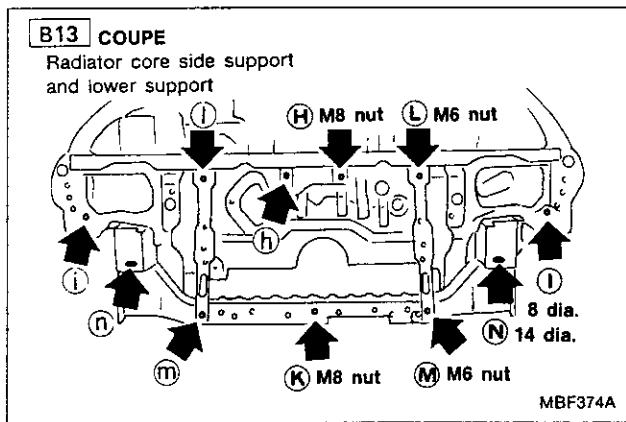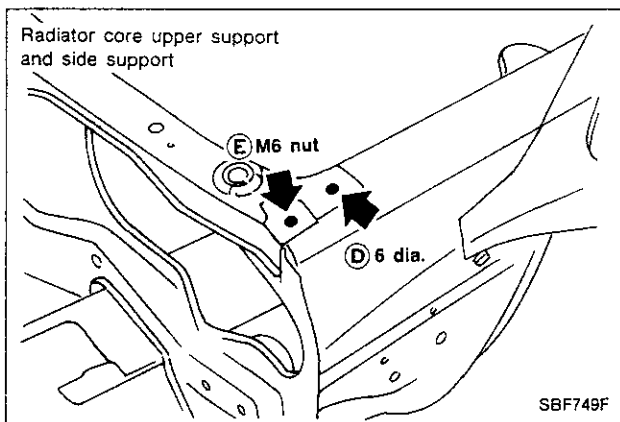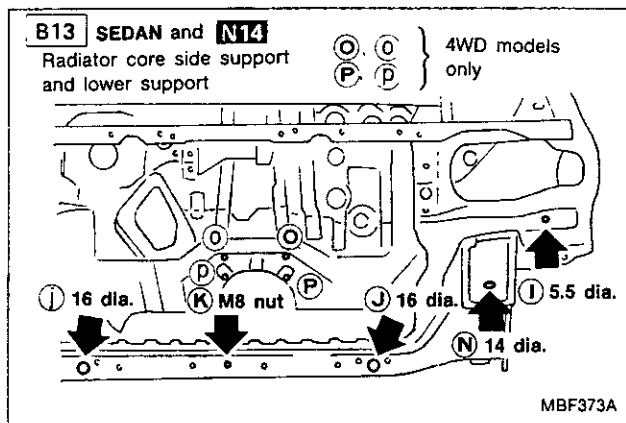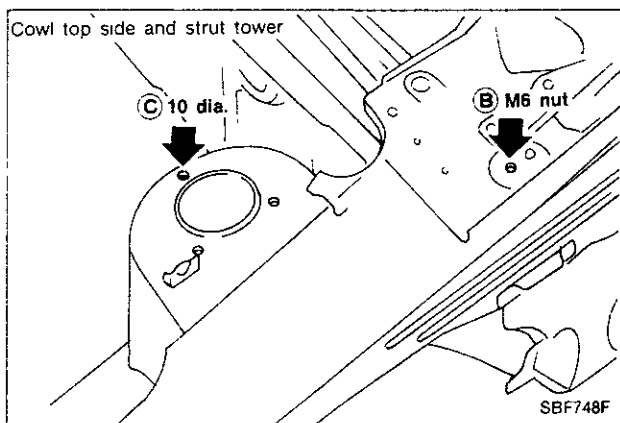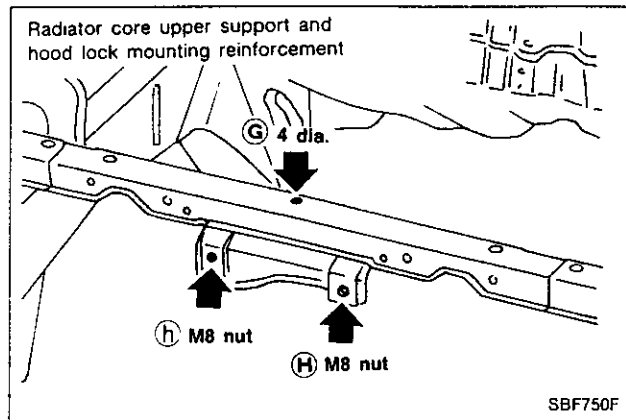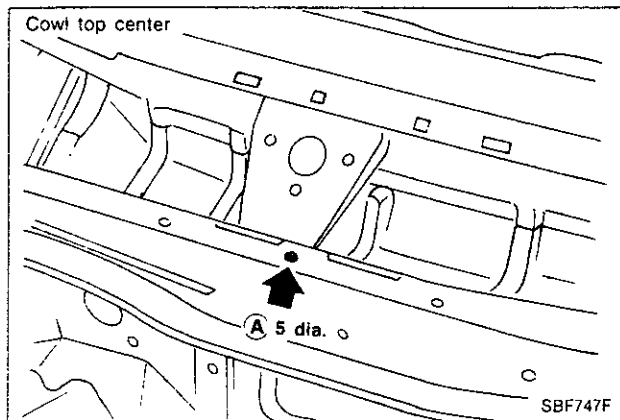


BODY ALIGNMENT

Underbody

MEASUREMENT

2WD models

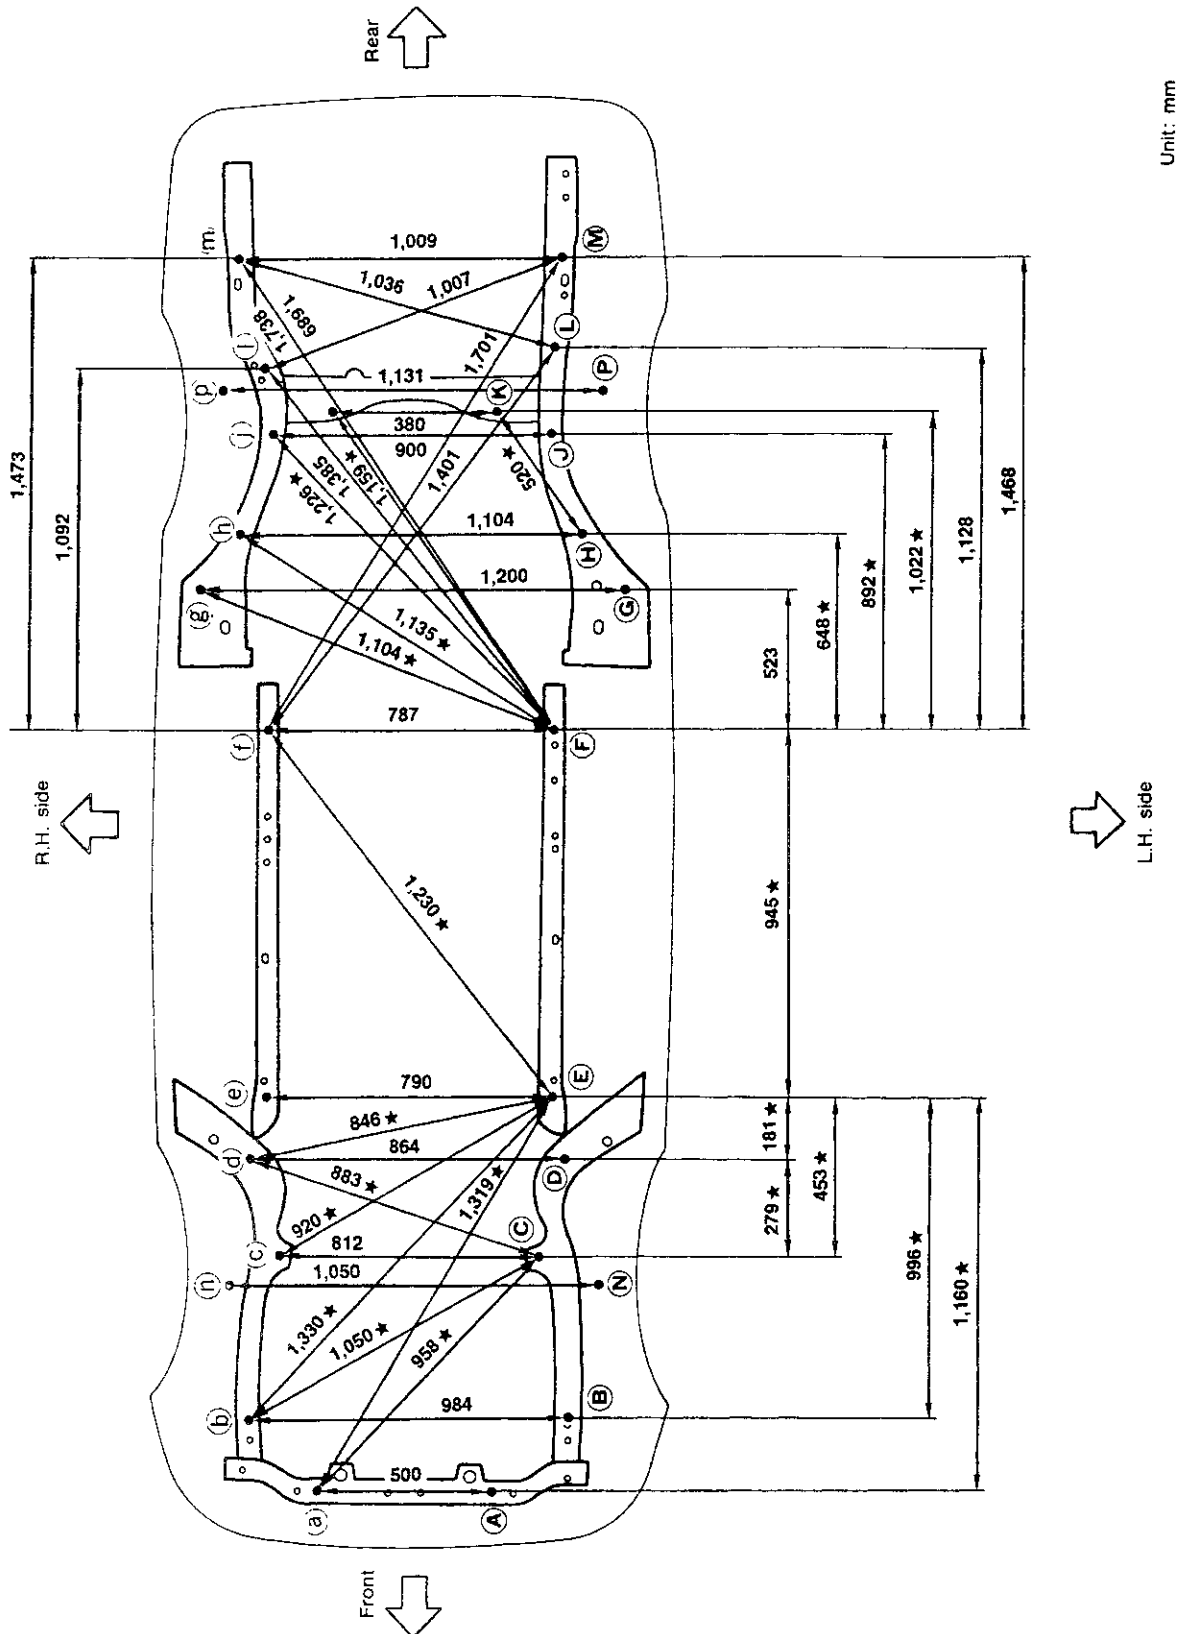


BODY ALIGNMENT

Underbody (Cont'd)

MEASUREMENT POINTS

2WD models




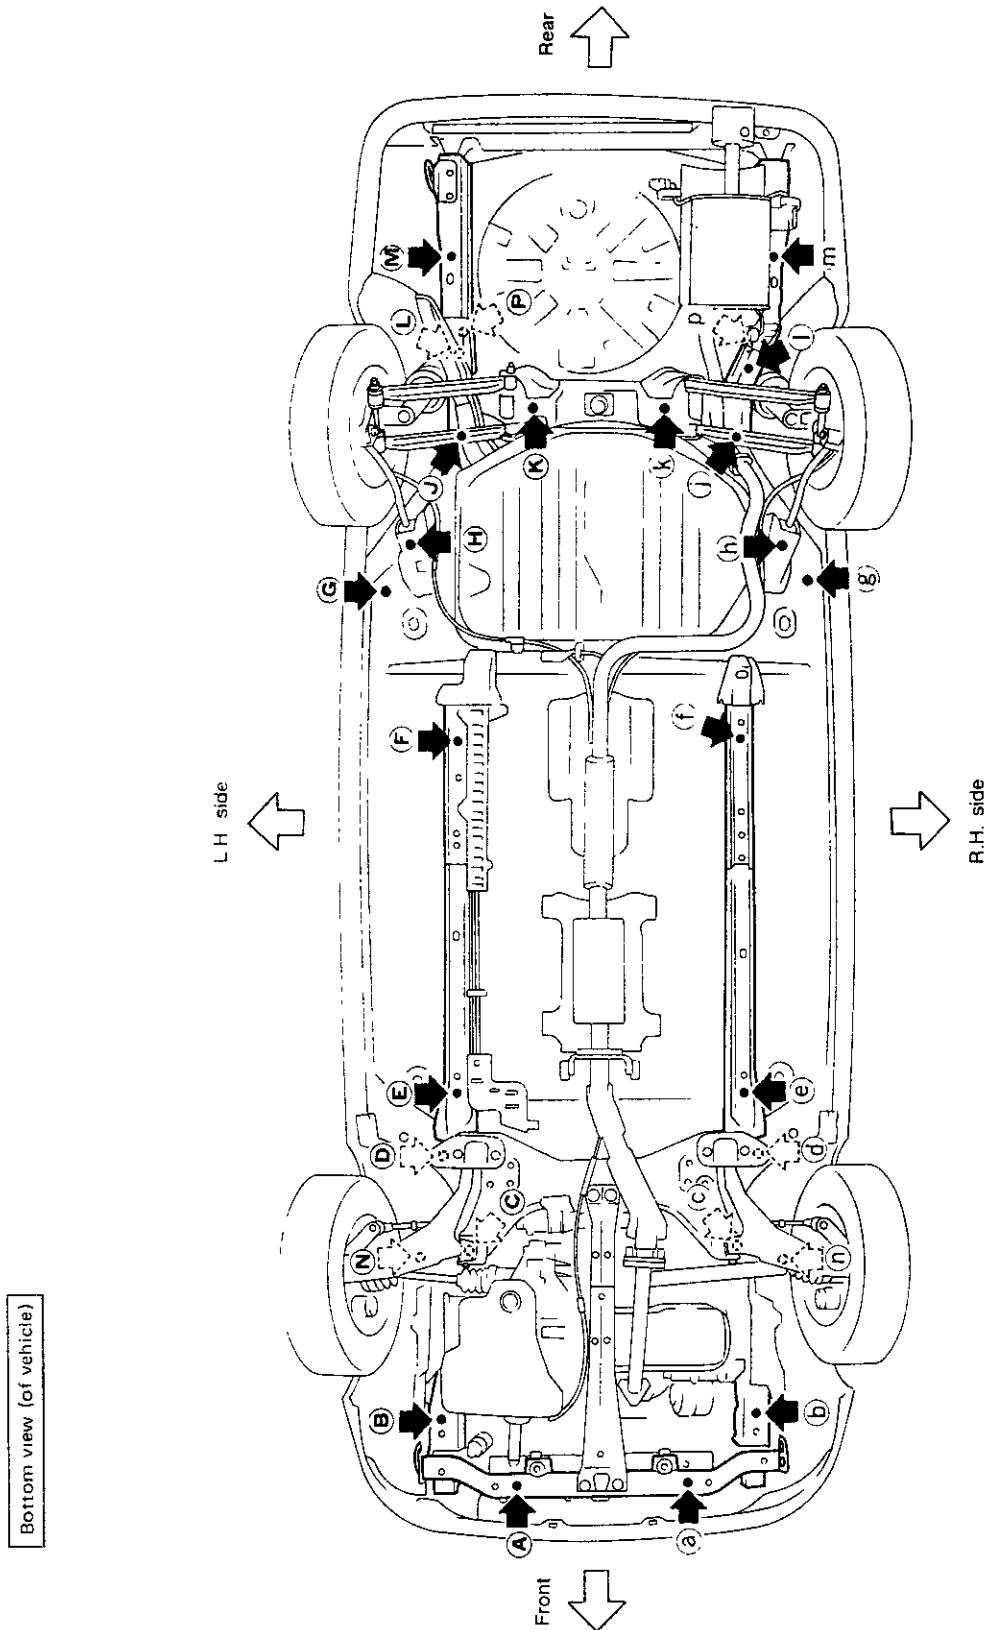


BODY ALIGNMENT

Underbody (Cont'd)

2WD models

Unit: mm

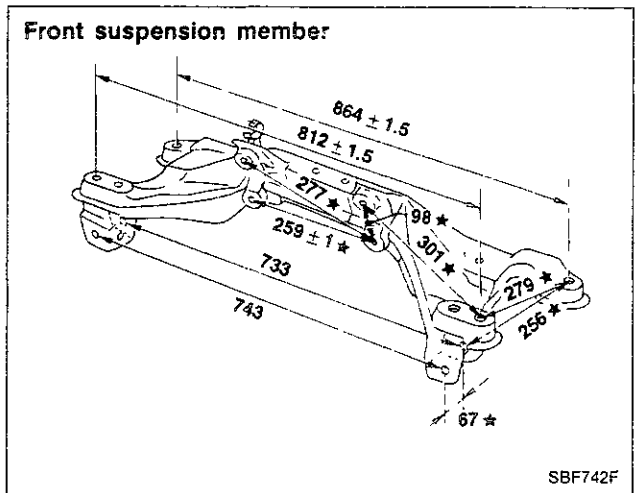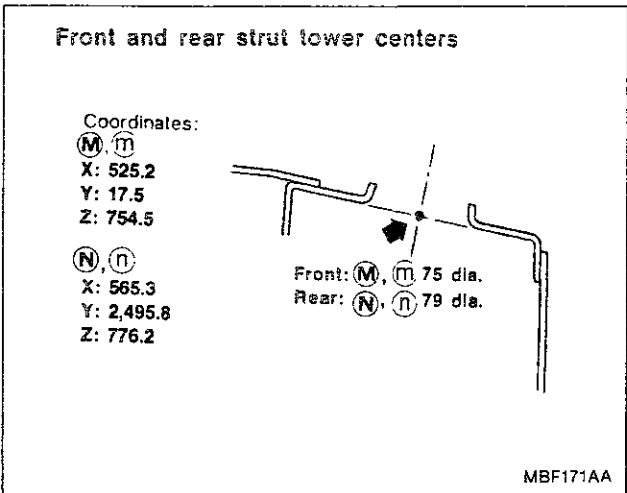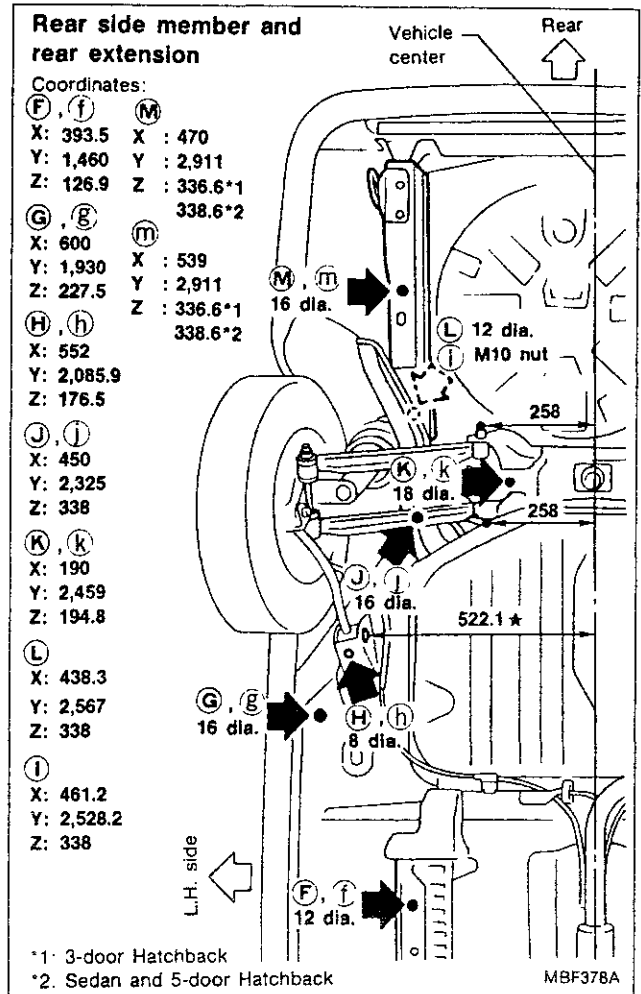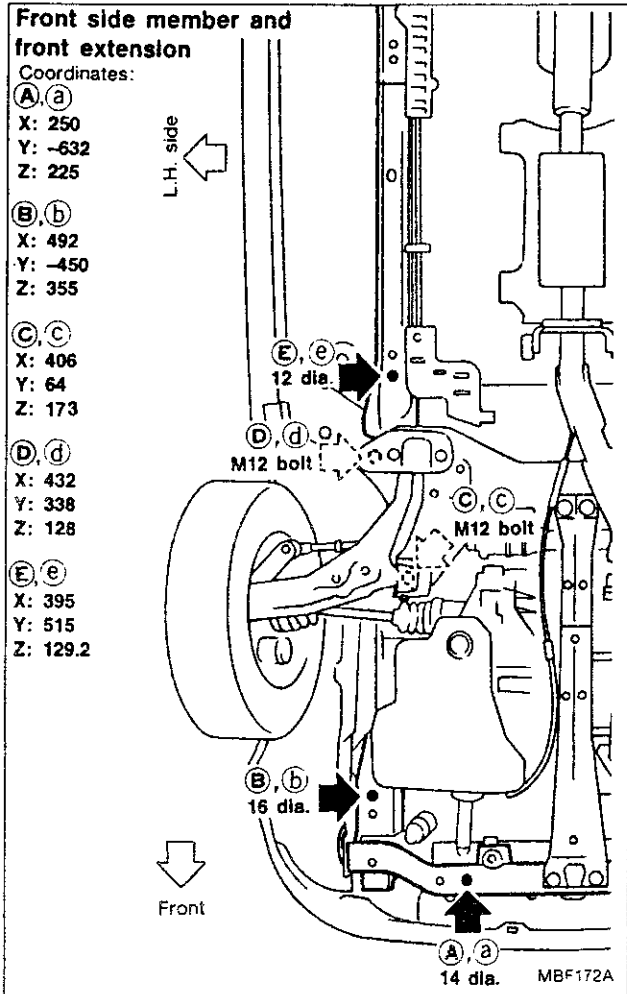


BODY ALIGNMENT

Underbody (Cont'd)

MEASUREMENT

4WD models

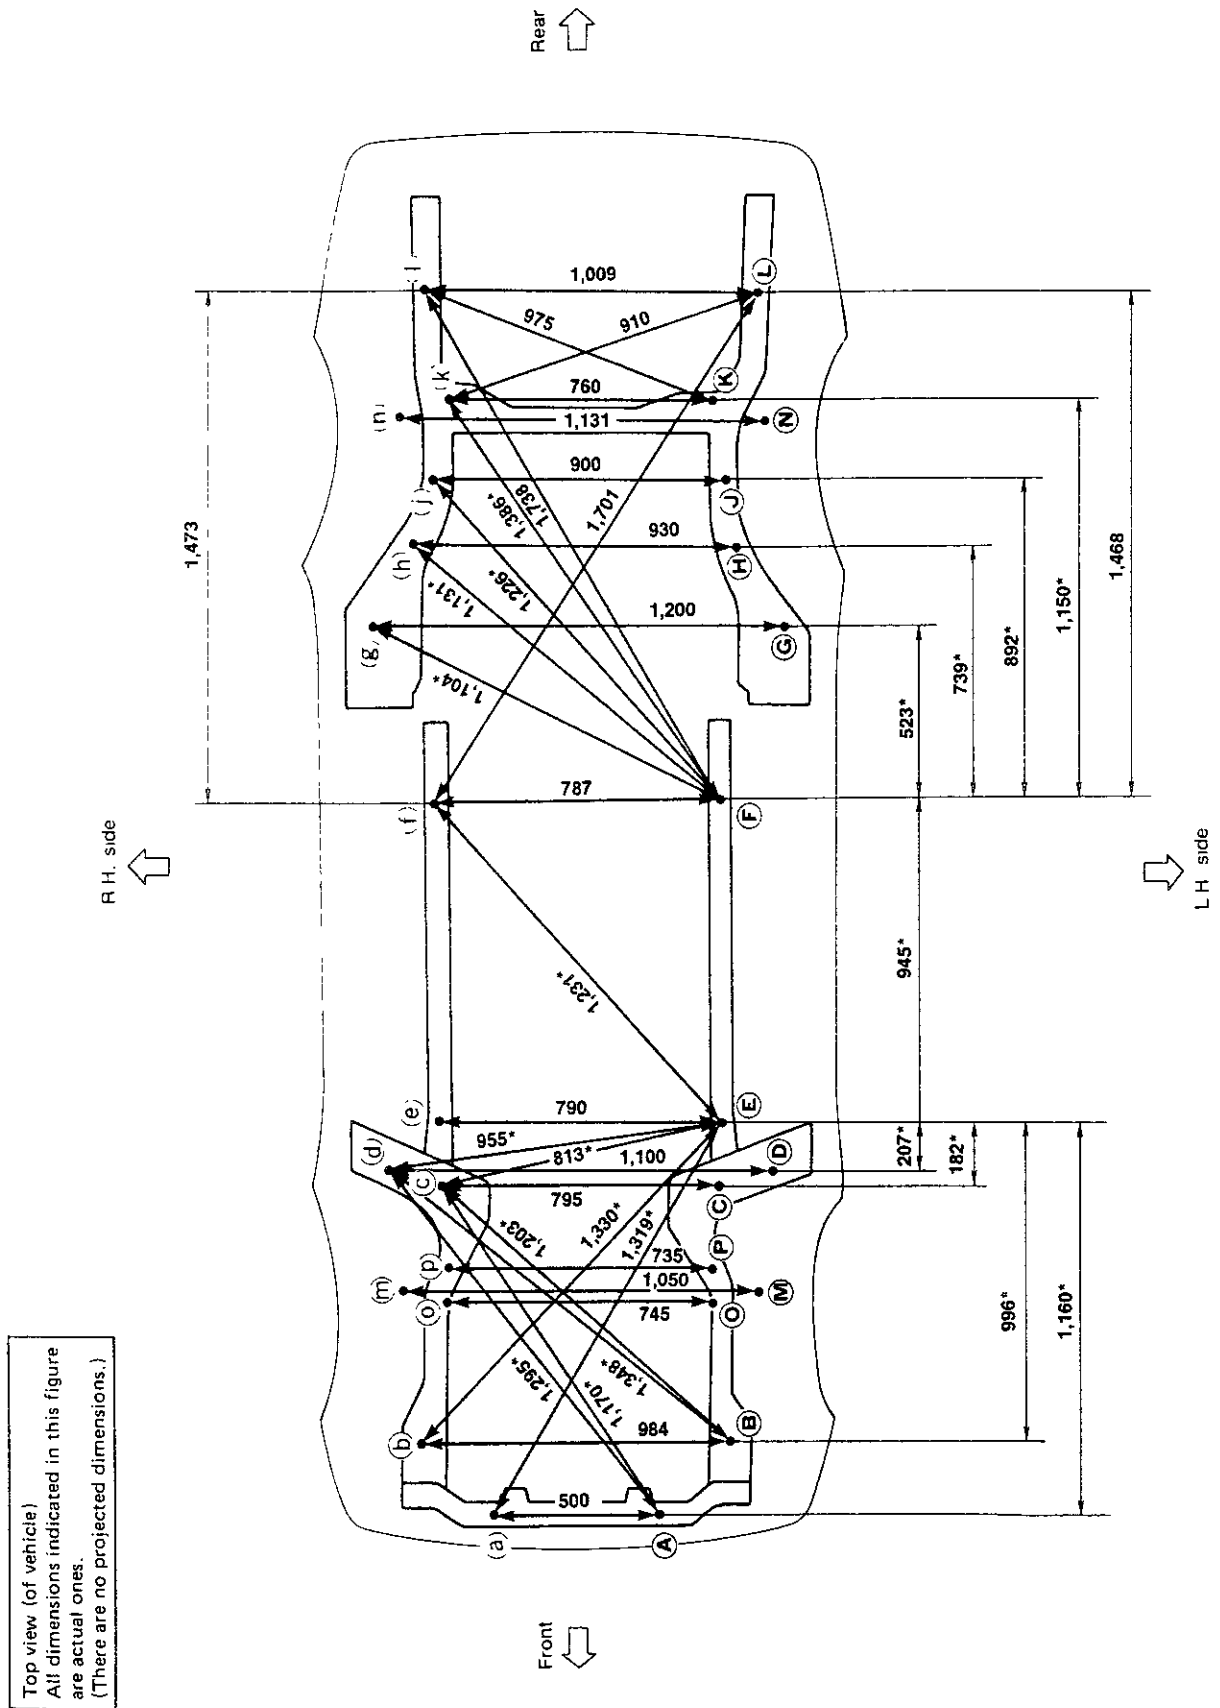


BODY ALIGNMENT

Underbody (Cont'd)

MEASUREMENT POINTS

4WD models



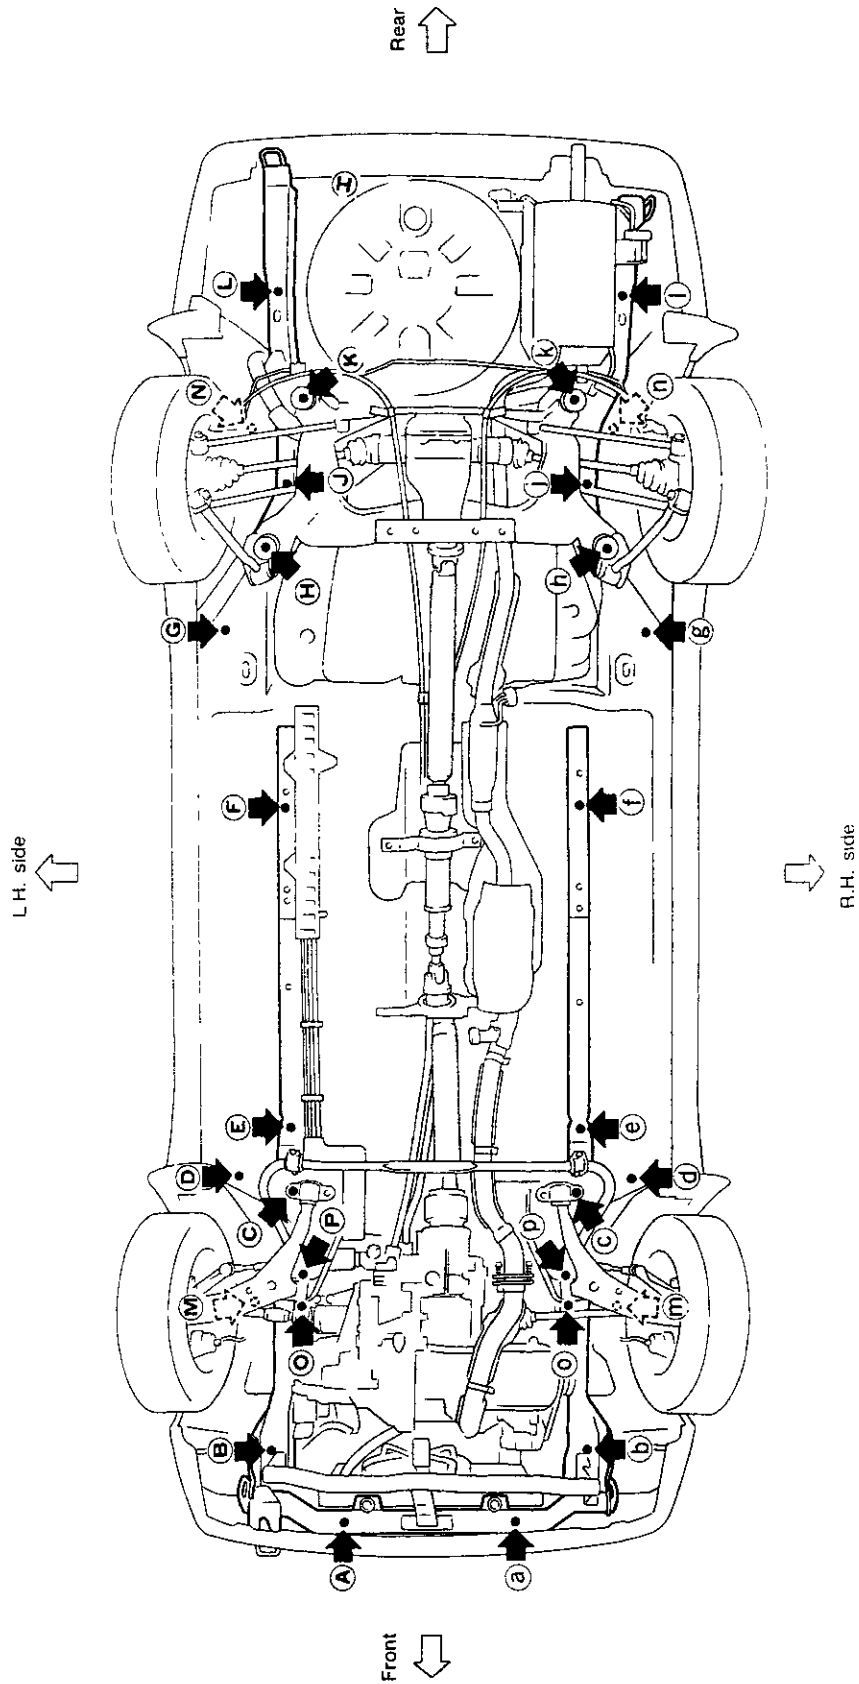


Bottom view (of vehicle)

BODY ALIGNMENT **Underbody (Cont'd)**

4WD models

Unit: mm

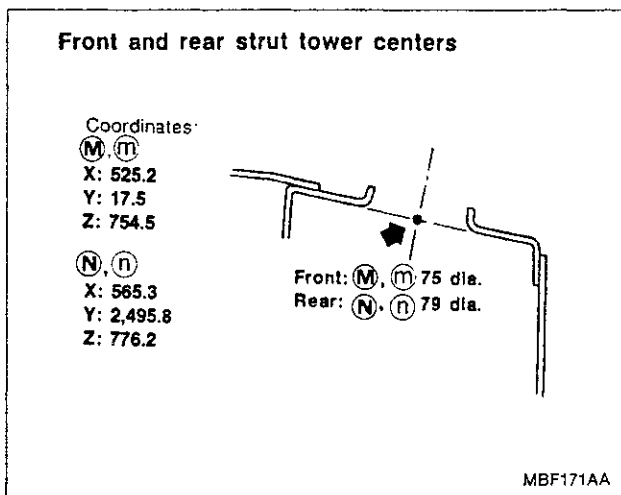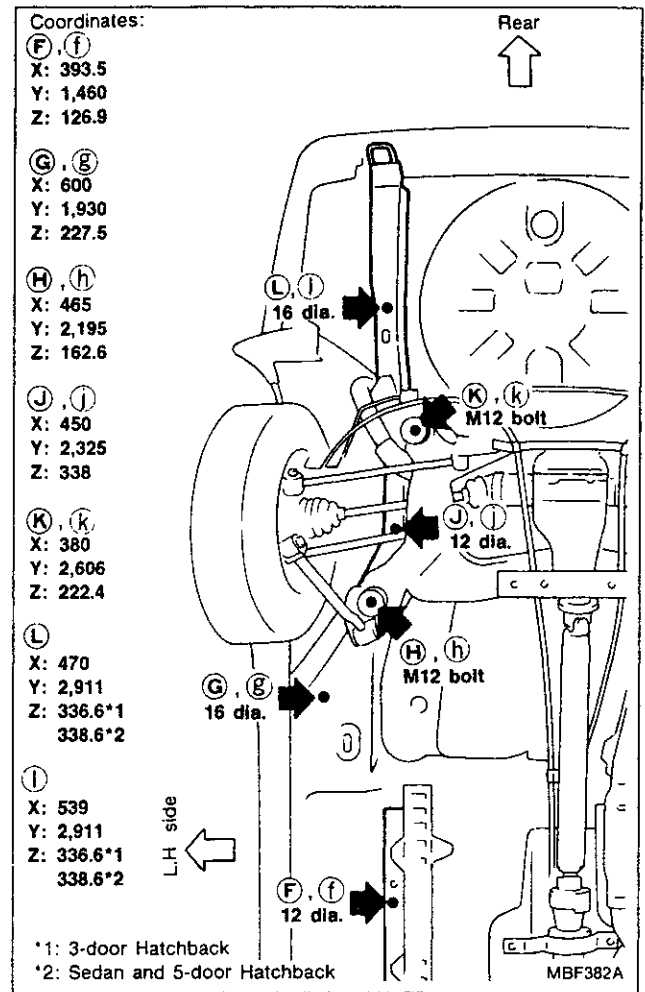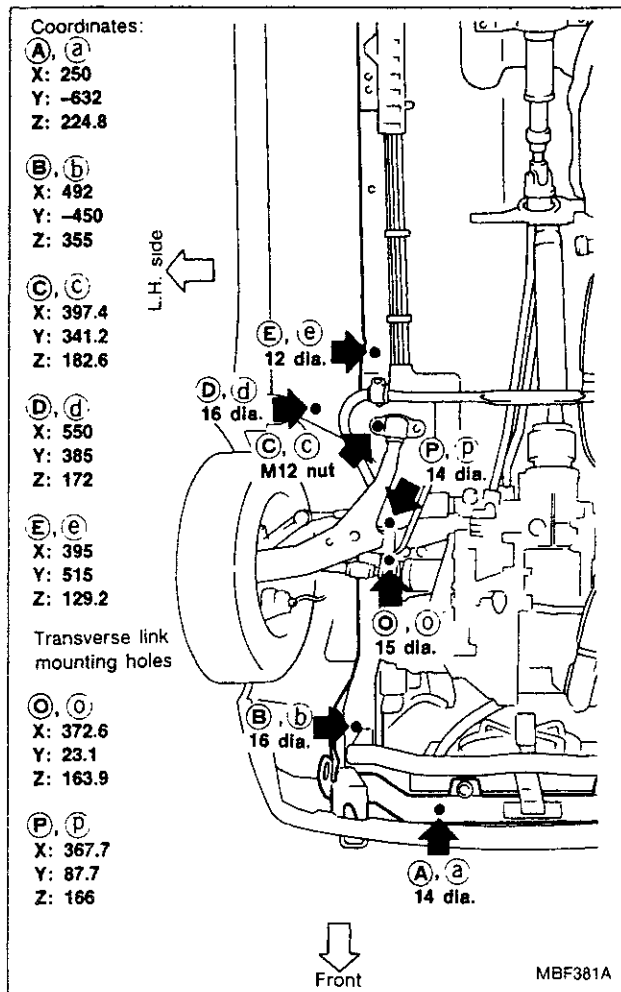

HEATER & AIR CONDITIONER

SECTION **HA**

CONTENTS

DESCRIPTION — Overall System	HA- 1
OPERATIONAL CHECK	HA- 3
DESCRIPTION — Refrigeration System	HA- 8
DIAGNOSES — Overall System	HA- 13
PRECAUTIONS FOR REFRIGERANT CONNECTIONS	HA- 23
EVACUATING, CHARGING AND CHECKING	HA- 24
SERVICE PROCEDURES	HA- 39
COMPRESSOR OIL — Checking and Adjusting	HA- 45
COMPRESSOR — Model NVR 140S (ATSUGI make)	HA- 47
COMPRESSOR — Model DKV-14D (ZEXEL make)	HA- 51
COMPRESSOR — Model DKV-14C (ZEXEL make)	HA- 52
COMPRESSOR — Model MGS130 (HITACHI make)	HA- 55
TROUBLE DIAGNOSES	HA- 61
DOOR CONTROL	HA-121
DESCRIPTION — Push Control	HA-124
PUSH CONTROL UNIT	HA-128
PREPARATION	HA-131
SERVICE DATA AND SPECIFICATIONS (S.D.S.)	HA-140

When you read wiring diagrams:

- o Read G1 section, "HOW TO READ WIRING DIAGRAMS".
- o See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

When you perform trouble diagnoses, read G1 section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".

DESCRIPTION — Overall System


Introduction

Besides a lever control system, a push control system is newly applied to B13/N14 models.

Features

The push control system operates the intake and mode door motors to activate the doors corresponding to each button. When the MODE switch is pushed at "DEF" or "F/D", the push control amplifier automatically sets the intake door to "FRE" to prevent windshield fogging.

Control Operation

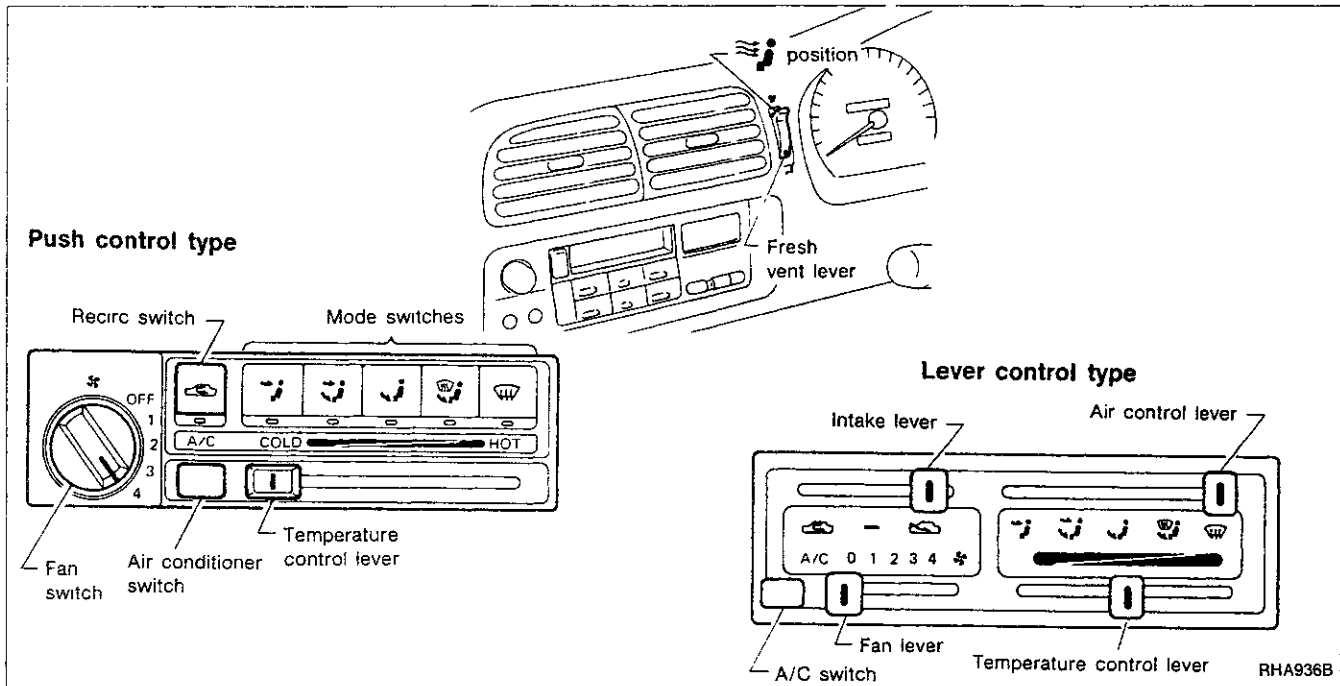

FAN SWITCH OR FAN LEVER

This switch or lever turns the fan ON and OFF, and controls fan speed.

MODE SWITCHES OR AIR CONTROL LEVER

These switches or air control lever allow you to select the outlet air flow.

TEMPERATURE CONTROL LEVER

This lever allows you to adjust the temperature of the outlet air.

RECIRC SWITCH OR INTAKE LEVER

OFF position or slide to  :

Outside air is drawn into the passenger compartment when this switch is OFF.

ON position or slide to  :

Interior air is recirculated inside the vehicle.

AIR CONDITIONER SWITCH

Start the engine, move the fan control lever to the desired (1 to 4) position and push the air conditioner switch to turn ON the air conditioner. The indicator light will come on when the air conditioner is ON. To stop the air conditioner, push the switch again to return it to the original position.

The air conditioner cooling function operates only when the engine is running.


DESCRIPTION — Overall System

Fresh Vent Lever (Except Europe models)

In order to prevent unpleasant hot air in the heater mode, or especially in the FOOT, FOOT/DEF or DEF modes, this system can provide cold air flow to the ventilator ducts directly (bypassing the heater core) by means of a fresh vent lever beside the center vent duct.

DESCRIPTION — Overall System



Component Layout

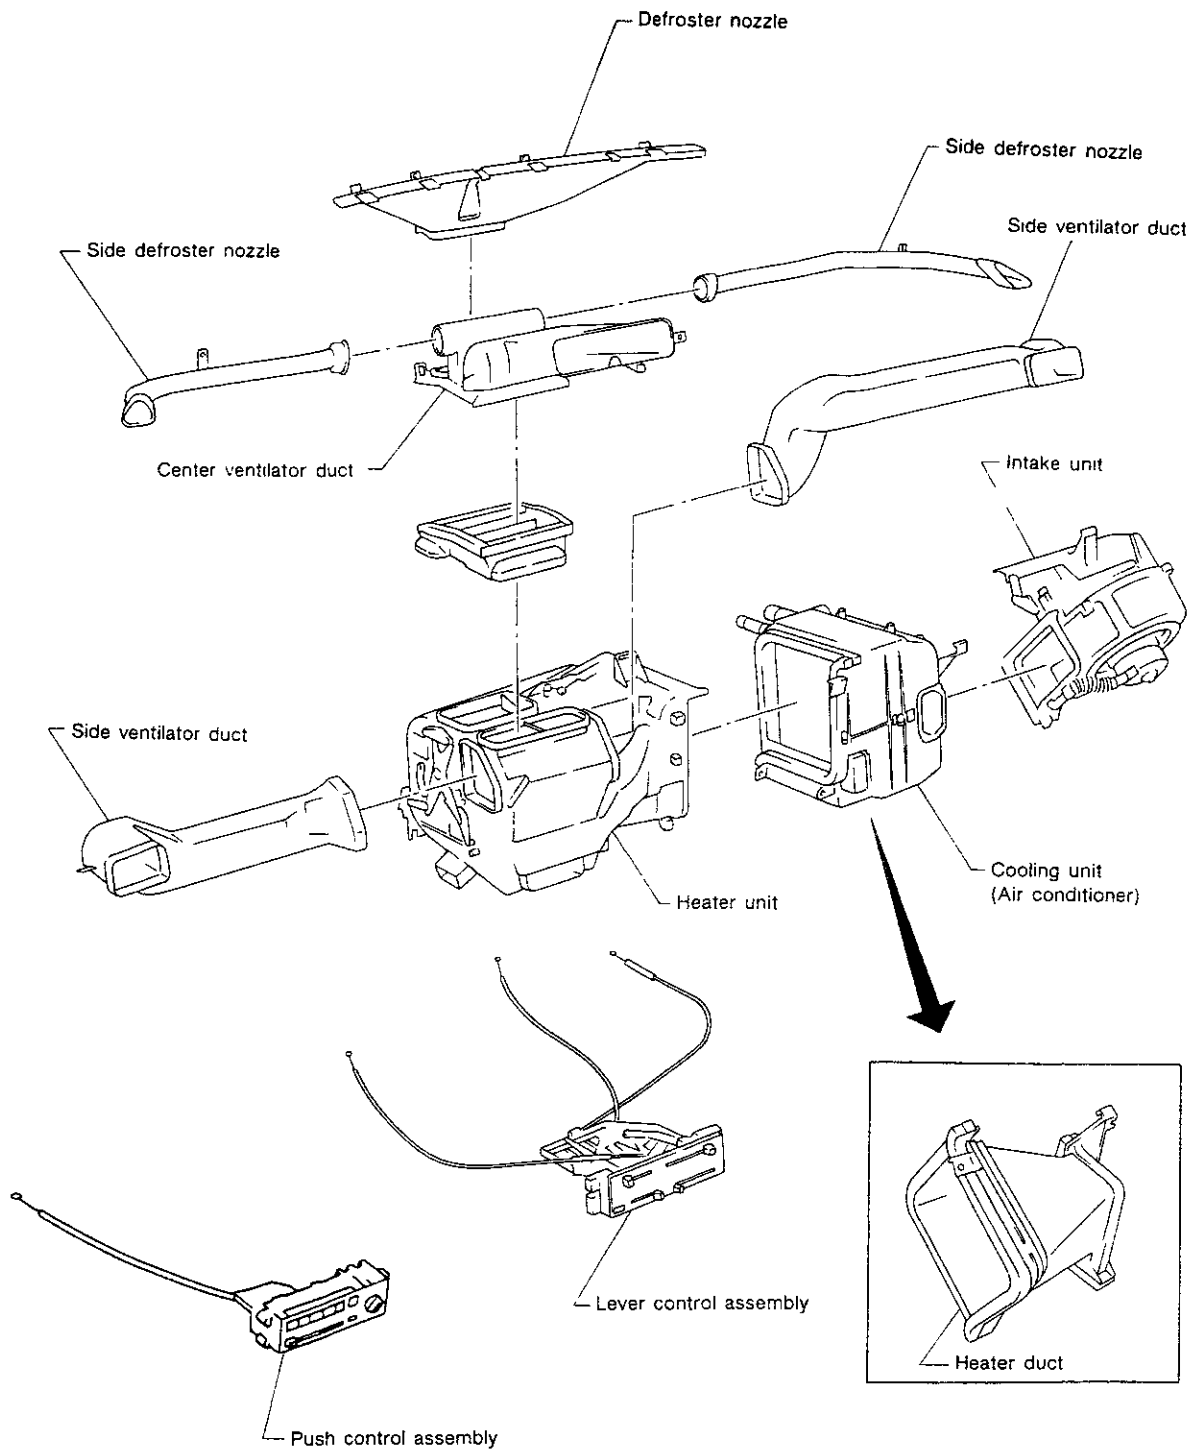


This illustration is for L.H. drive models.
R.H. drive models are basically the same.

DESCRIPTION — Overall System


Air Flow

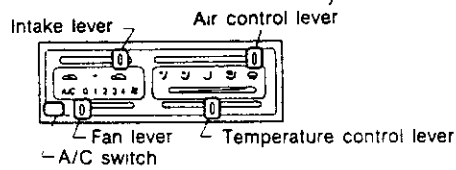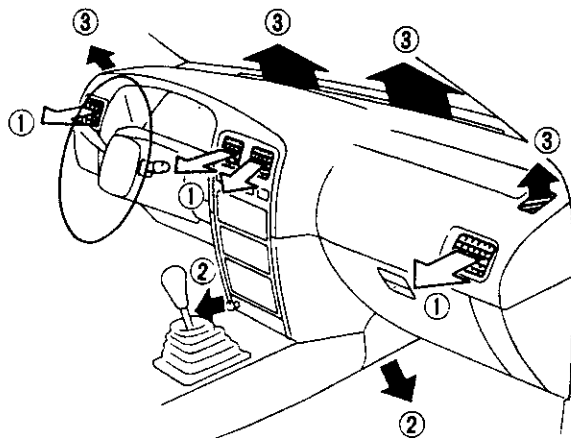

Ventilation

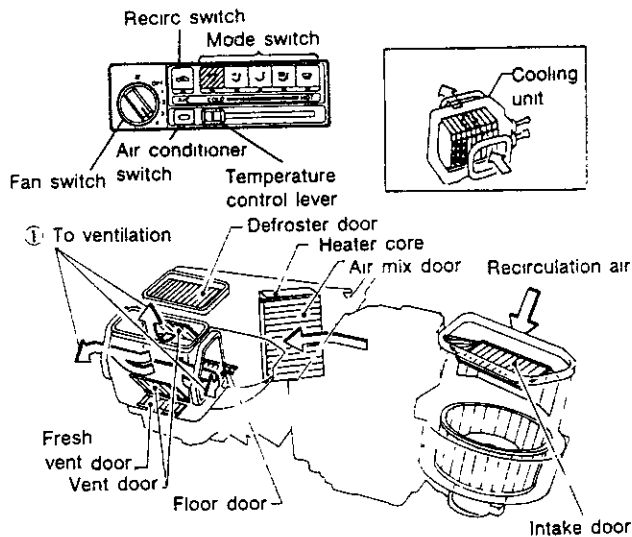


Bi-level

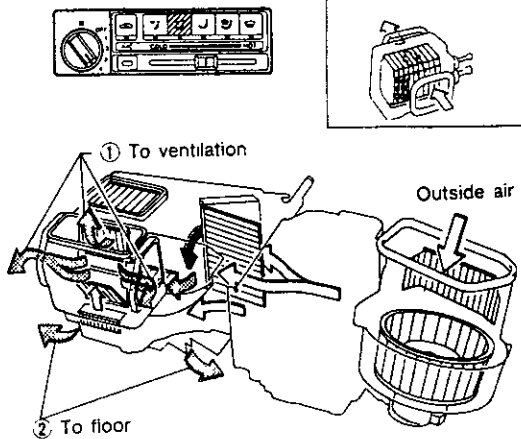


These illustrations are for L.H. drive models.
R.H. drive models are basically the same.


Floor

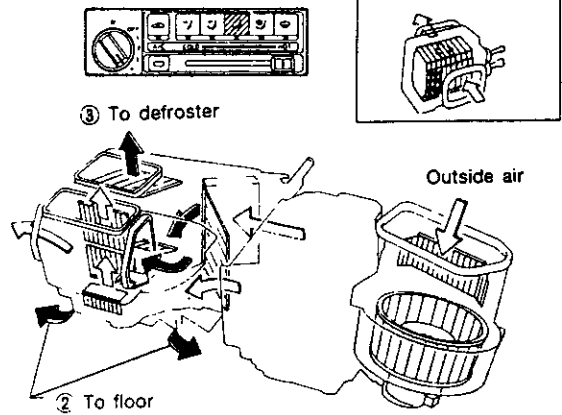

Floor and defroster

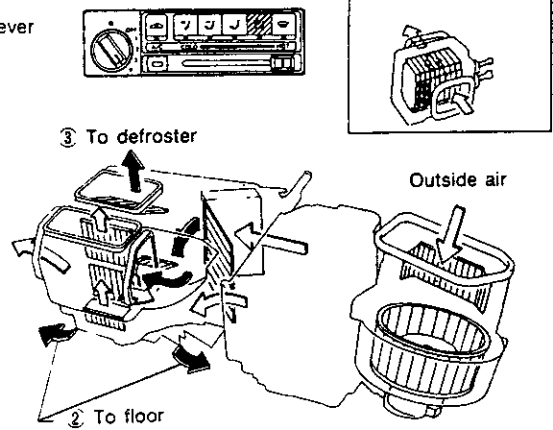

Defroster

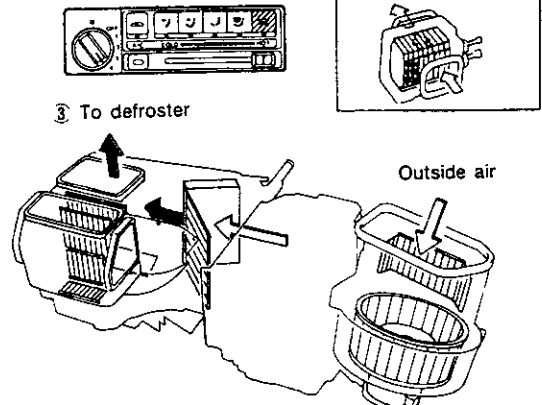

- ➡ : Air passed through heater core
- ➡ : Mixed air (➡ + ➡)
- ➡ : Air not passed through heater core

OPERATIONAL CHECK

Operational Check

The purpose of the operational check is to confirm that the system operates as it should. The systems which are checked are the blower, mode (discharge air), intake air, temperature decrease, temperature increase.

CONDITIONS:


Engine running at normal operating temperature.

Fresh vent "OFF"

PROCEDURE:


1. Check blower

- 1) Turn or slide fan lever to 1-speed.
Blower should operate on 1-speed.
- 2) Then turn or slide fan lever to 2-speed.
- 3) Continue checking blower speed until all four speeds are checked.
- 4) Leave blower on 4-speed.

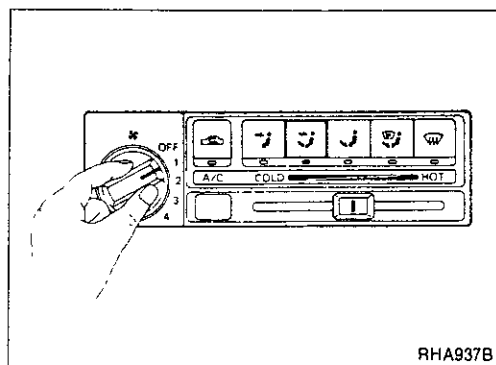


2. Check discharge air

- 1) Press the VENT button or slide air control lever to VENT.
VENT indicator should light. (Push control type only)
- 2) Confirm that all discharge air comes out of face vents.
- 3) Press the B/L button or slide air control lever to B/L.
B/L indicator should light. (Push control type only)
- 4) Confirm that discharge air comes out of face vents and foot vents.
- 5) Press the FOOT button or slide air control lever to FOOT.
FOOT indicator should light. (Push control system only)
- 6) Confirm that discharge air comes out of foot vents, with some air from defroster vents.
- 7) Press the F/D button or slide air control lever to F/D.
F/D indicator should light. (Push control type only)
- 8) Confirm that discharge air comes out of foot vents, with some air from defroster vents. Intake door position is at FRE. (L.H.D. models push control type only)
- 9) Press the DEF button or slide air control lever to DEF.
DEF indicator should light. (Push control type only)
- 10) The discharge air should be coming only from defroster vents. At the same time the intake door position should be at FRE. (L.H.D. models push control type only)

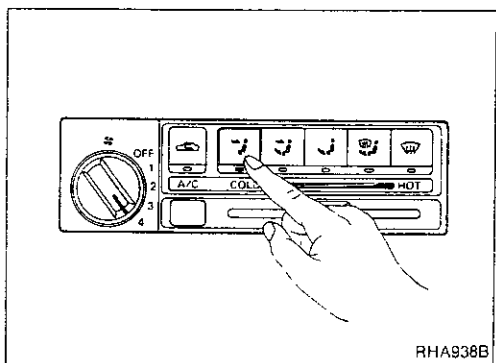

3. Check RECIRC

- 1) Press RECIRC button or slide intake lever to RECIRC.
RECIRC indicator should light. (Push control type only)
- 2) Listen for intake door position change (you should hear blower sound change slightly).

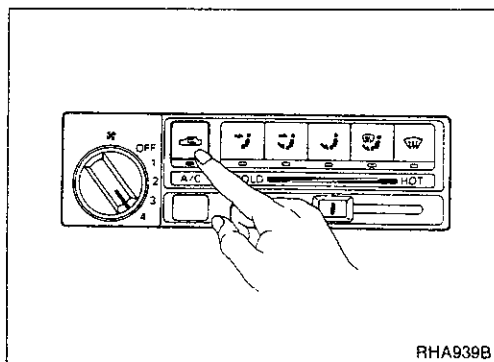


OPERATIONAL CHECK

Operational Check (Cont'd)


4. Check temperature decrease

- 1) Slide temperature control lever to full cold.
- 2) Check for cold air at discharge air outlets.

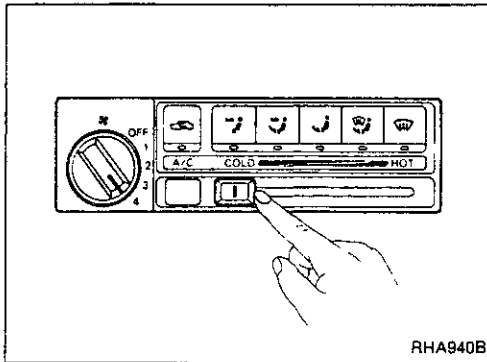

5. Check temperature increase


- 1) Slide temperature control lever to full hot.
- 2) Check for hot air at discharge air outlets.

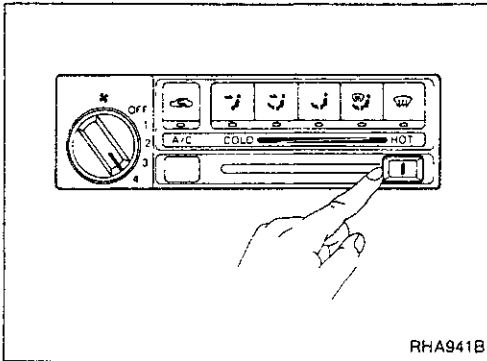

6. Check air conditioner switch

Move the fan control lever to the desired (1 to 4-speed) position and push the air conditioner button to turn ON the air conditioner.

The indicator light should come on when air conditioner is ON.

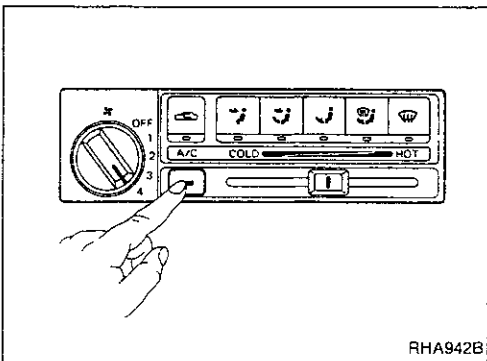

DESCRIPTION — Refrigeration System

Refrigeration Cycle

REFRIGERANT FLOW

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser, the receiver drier, through the evaporator, and back to the compressor.

The refrigerant evaporation through the evaporator coil is controlled by an externally equalized expansion valve, located inside the evaporator case.

FREEZE PROTECTION

The compressor cycles on and off to maintain the evaporator temperature within a specified range. When the evaporator coil temperature falls below a specified point, the thermo control amplifier interrupts the compressor operation. When the evaporator coil temperature rises above the specification, the thermo control amplifier allows compressor operation.


REFRIGERANT SYSTEM PROTECTION

Dual-pressure switch

The refrigerant system is protected against excessively high or low pressures by the dual-pressure switch, located on the receiver drier. If the system pressure rises above, or falls below the specifications, the dual-pressure switch opens to interrupt the compressor operation.


Fusible plug

Open at temperature above 105°C (221°F), thereby discharging refrigerant to the atmosphere. If this plug is melted and opened, check the refrigerant line and replace receiver drier.

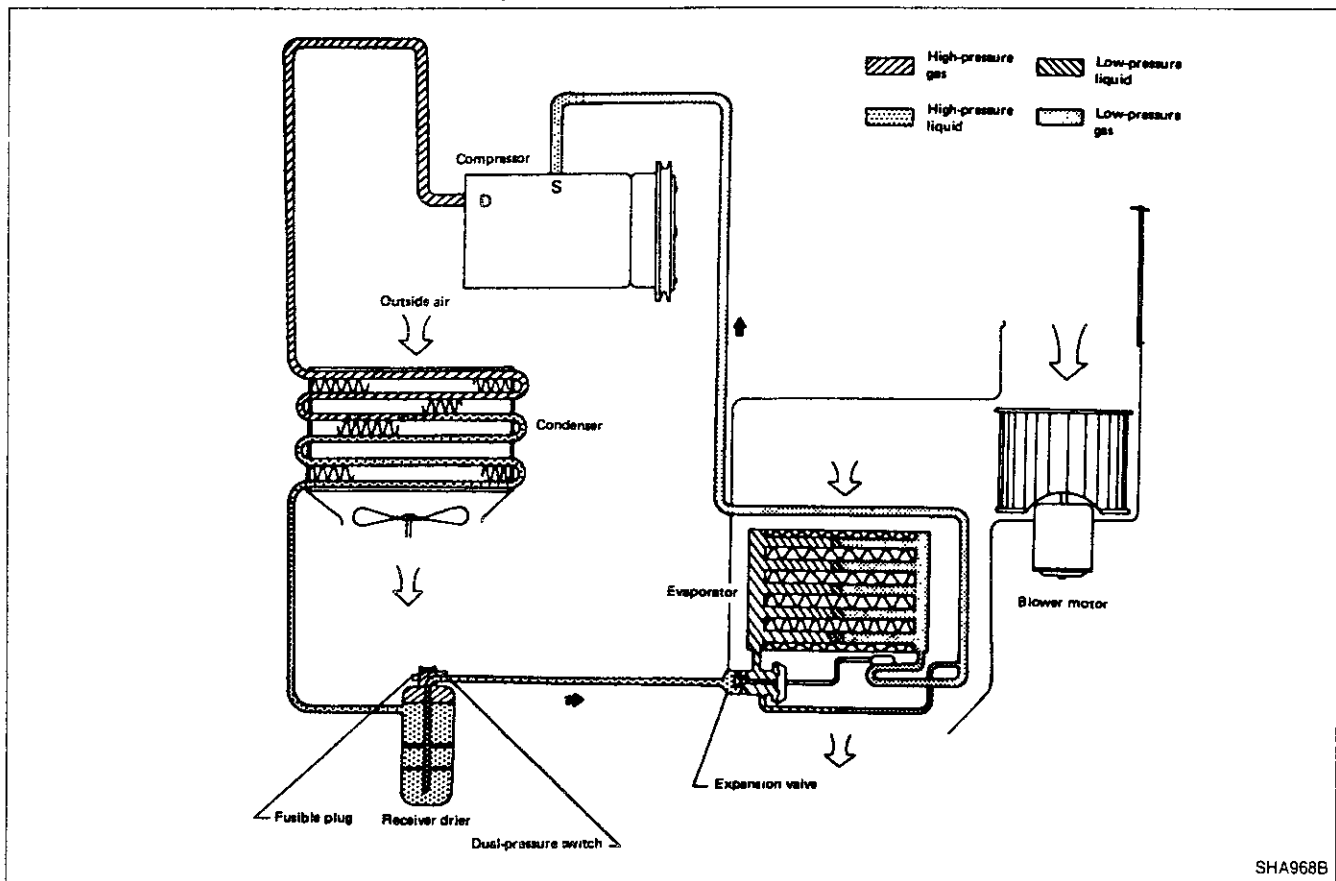

Refrigerant System


EXCEPT FOR SR20DE ENGINE — L.H.D. MODELS

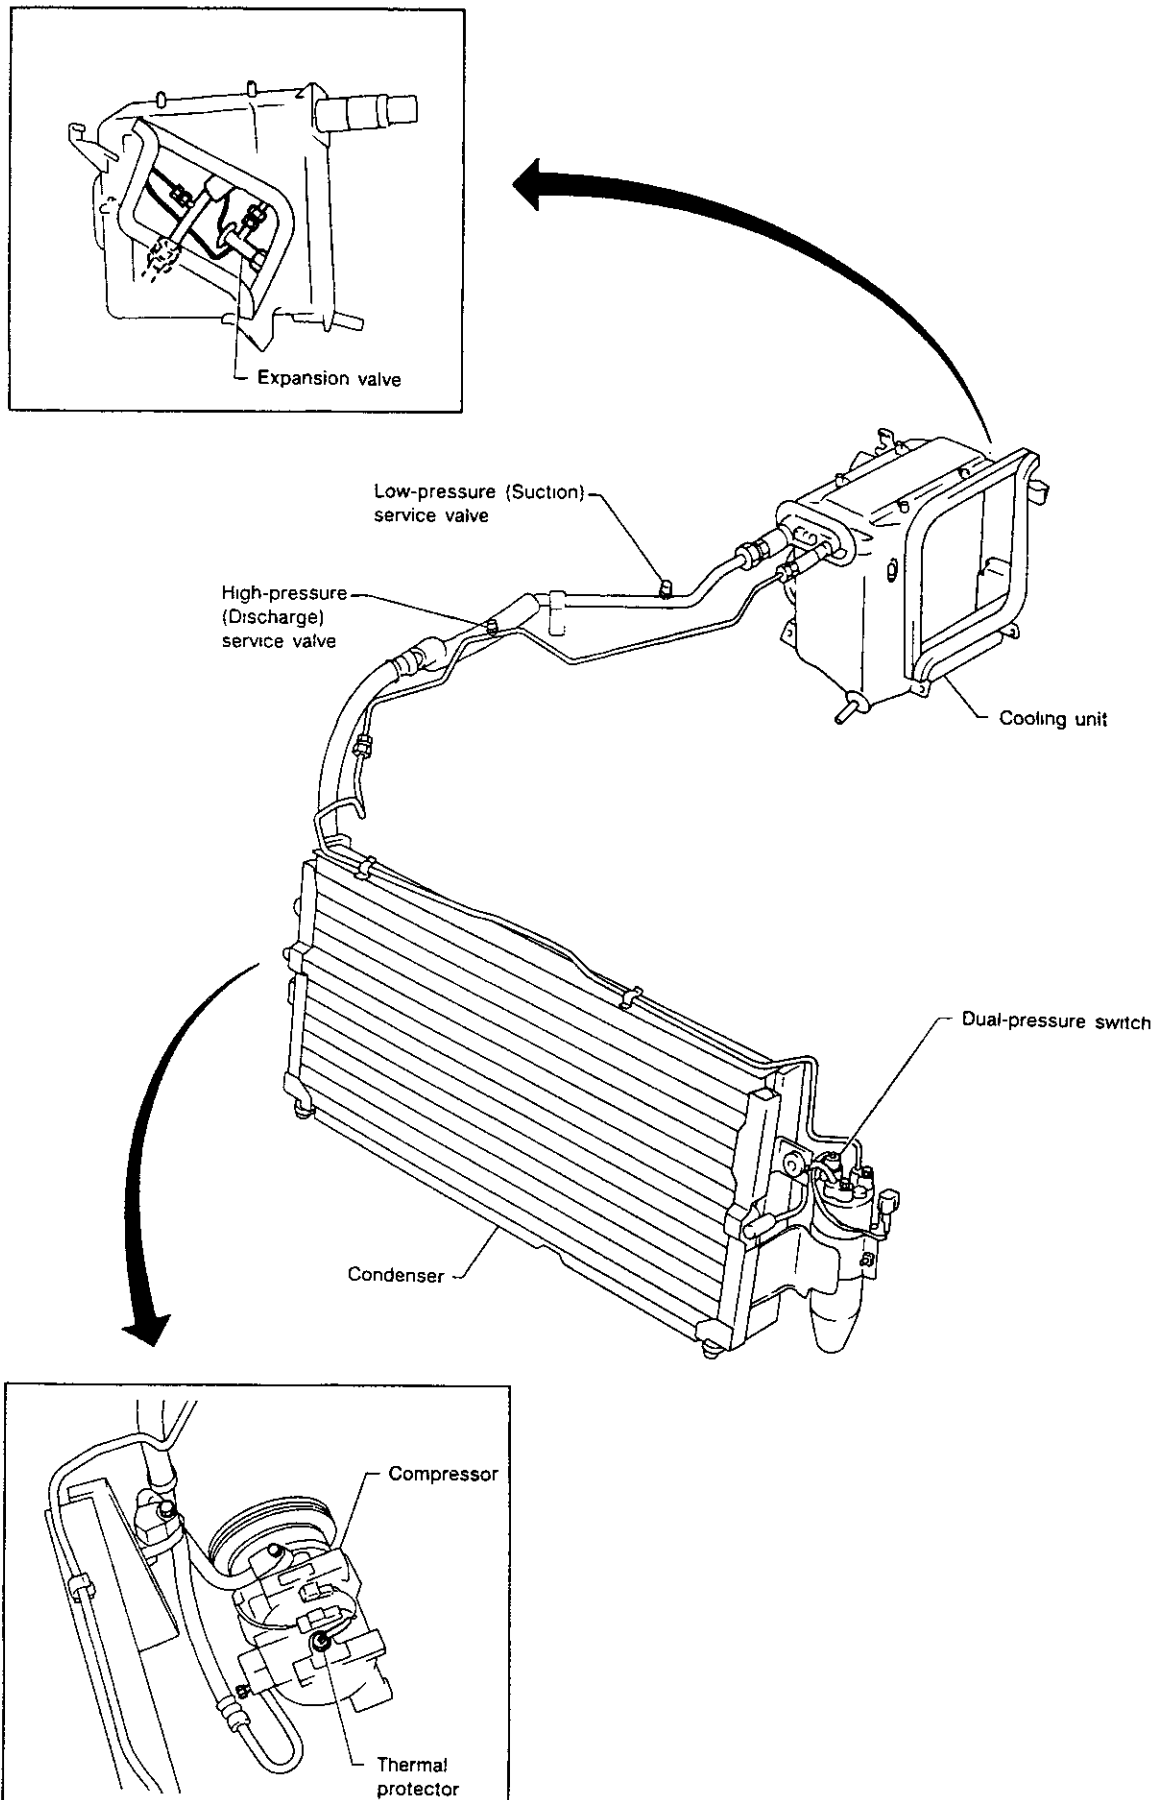

DESCRIPTION — Refrigeration System

Refrigerant System (Cont'd)

SR20DE ENGINE — L.H.D. MODELS

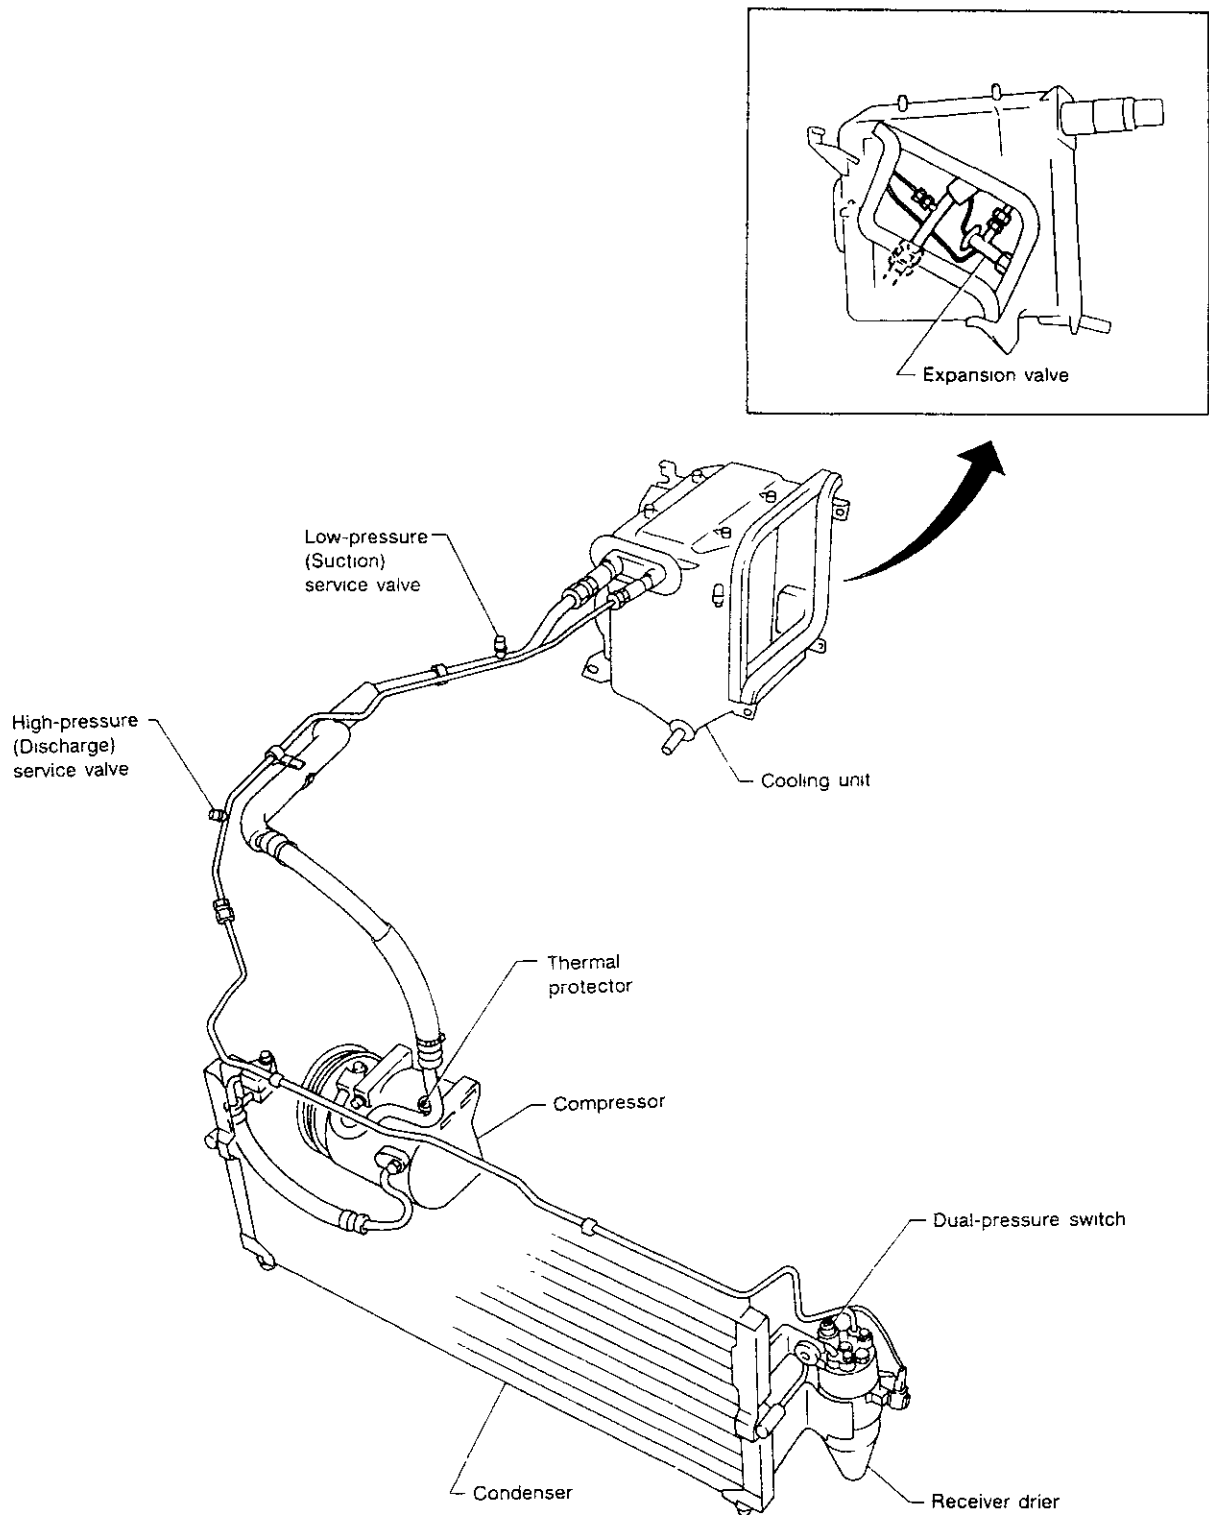


SHA869C

DESCRIPTION — Refrigeration System

Refrigerant System (Cont'd)

EXCEPT FOR SR20DE ENGINE — R.H.D. MODELS




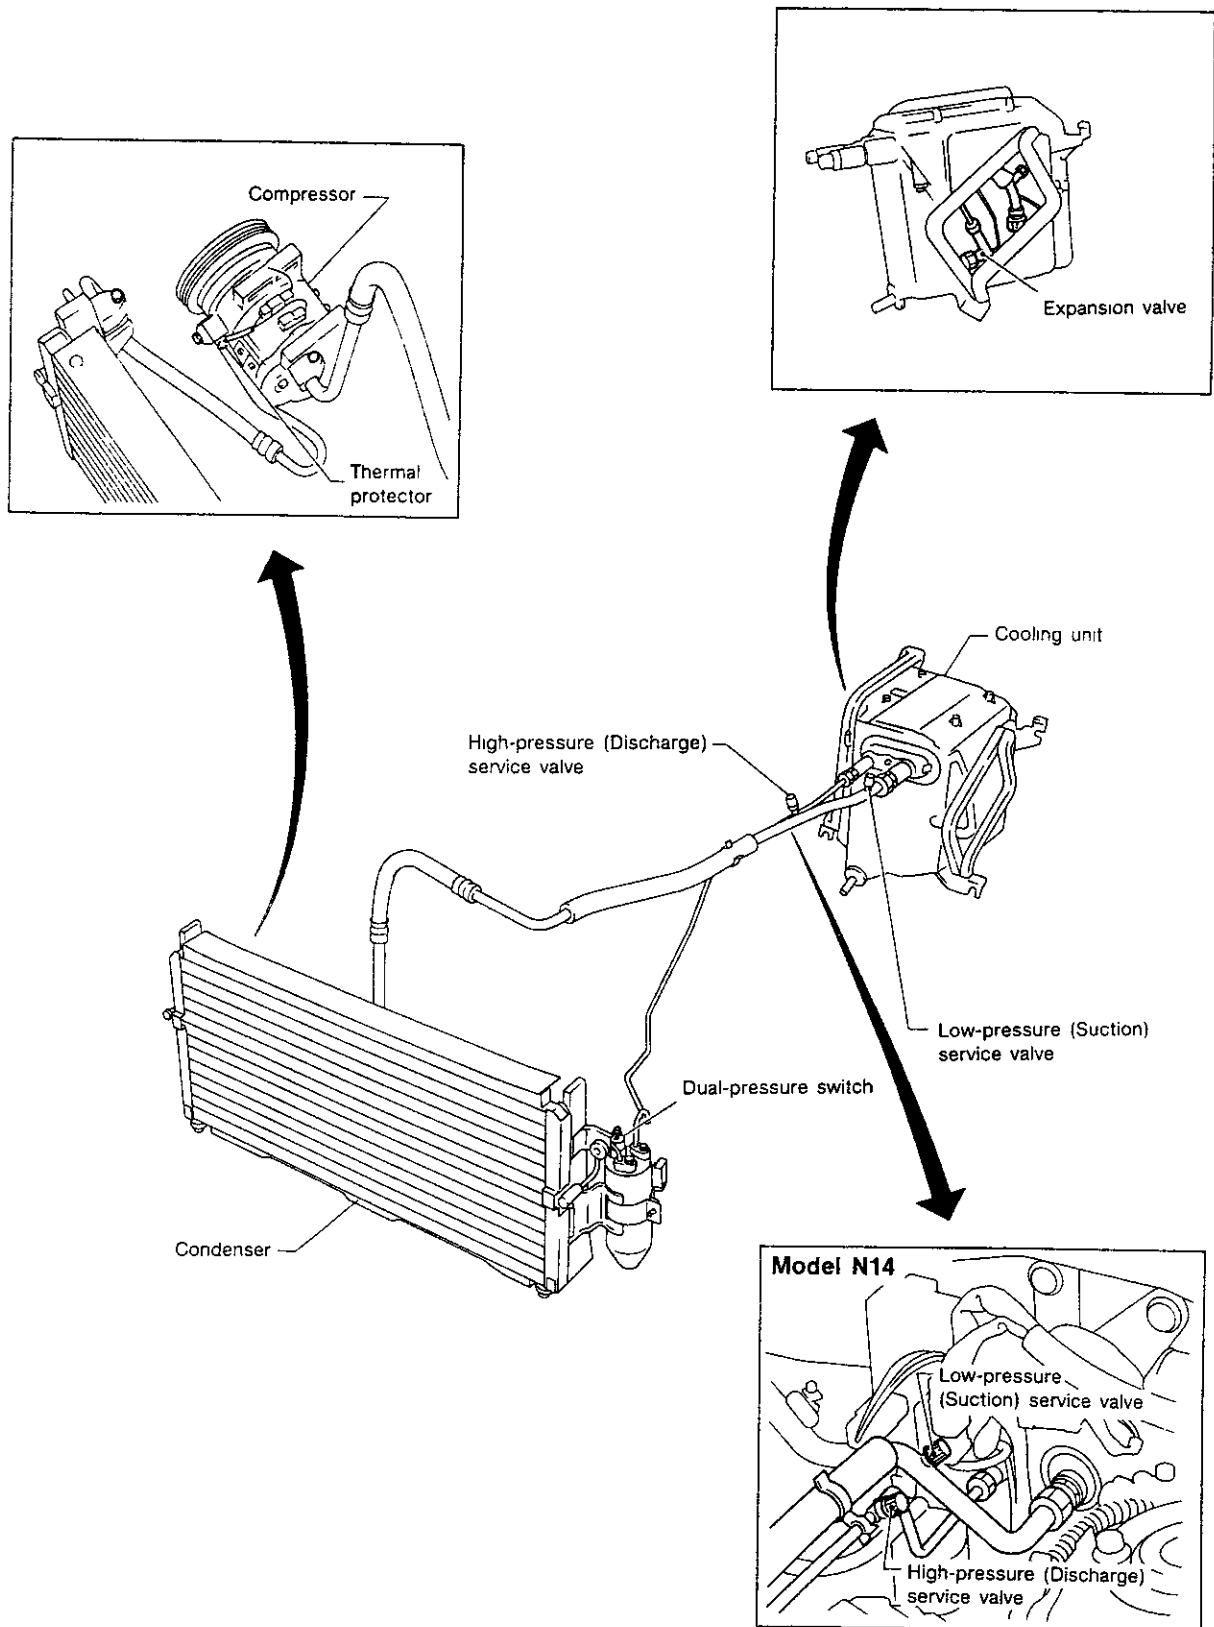


RHA944B

DESCRIPTION — Refrigeration System

Refrigerant System (Cont'd)


SR20DE ENGINE — R.H.D. MODELS

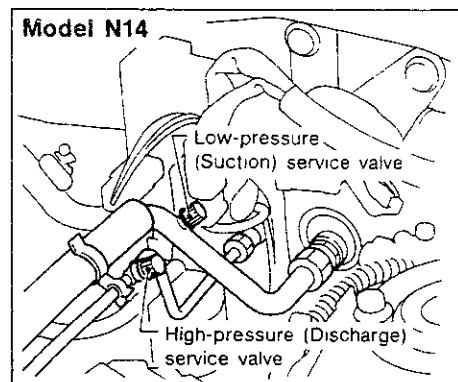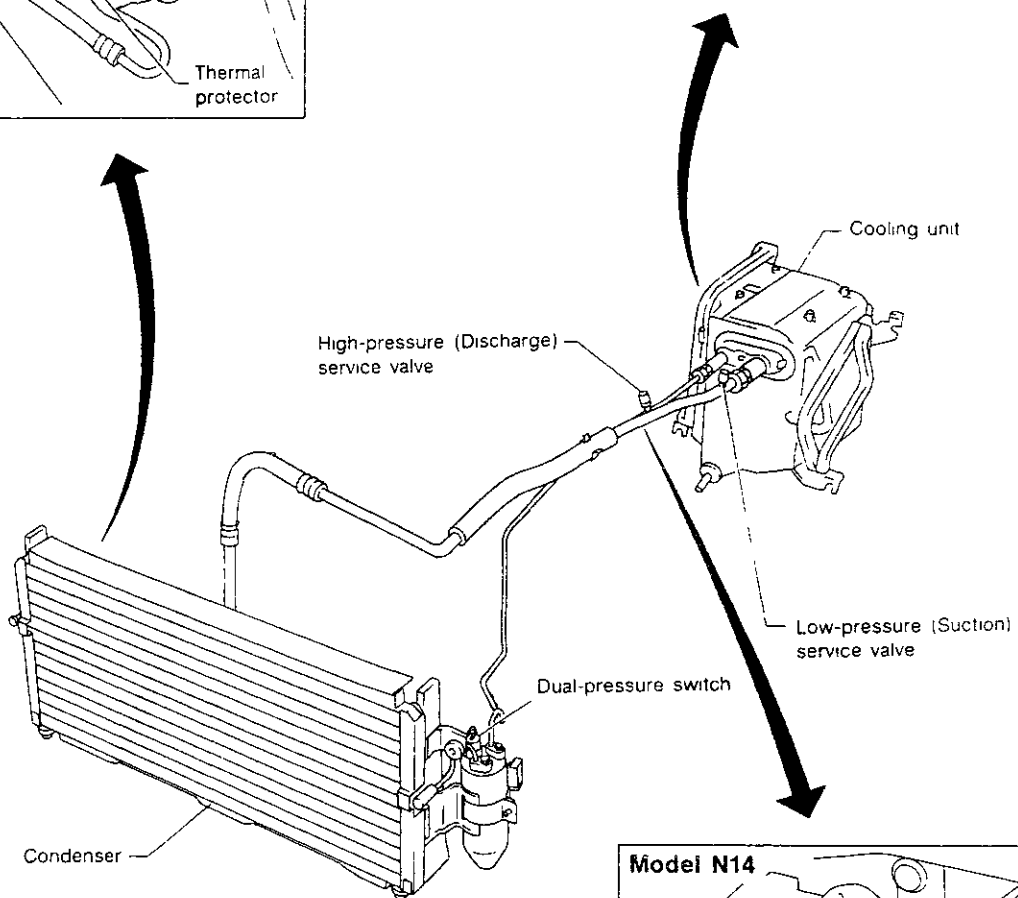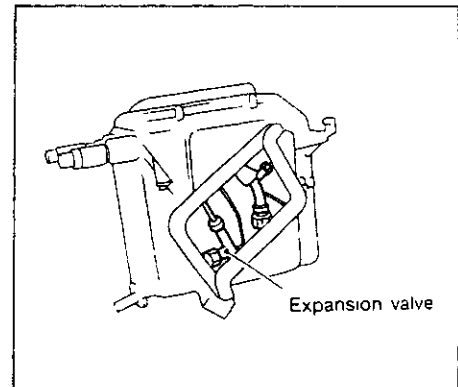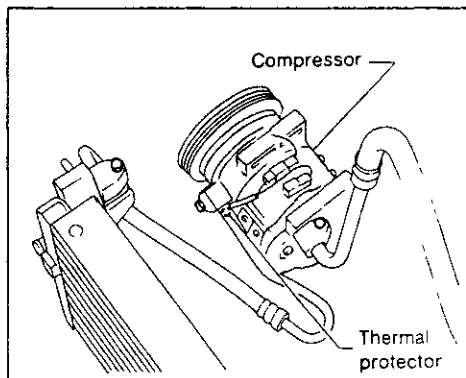

RHA273C


How to Perform Trouble Diagnoses for Quick and Accurate Repair

WORK FLOW

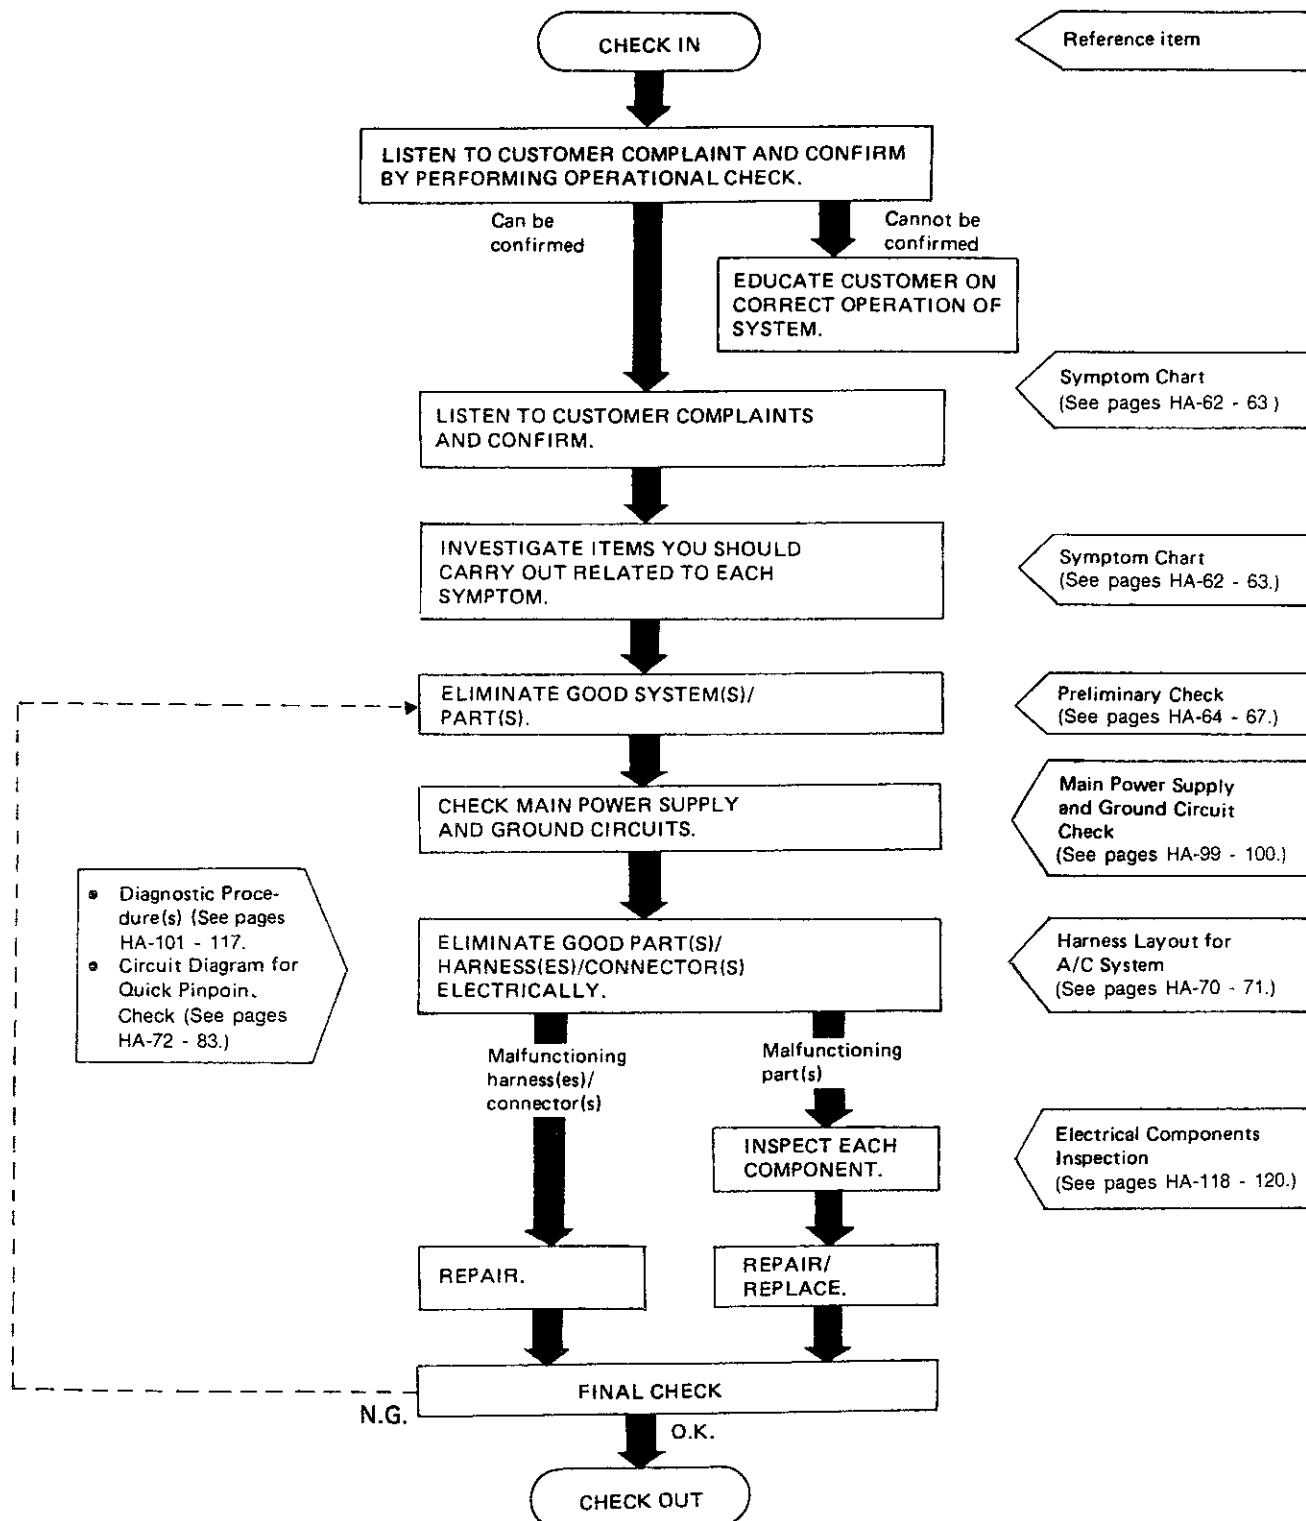

DIAGNOSES — Overall System

Goggles

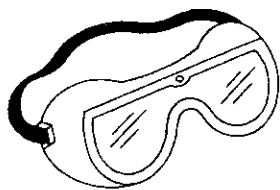


RHA260B

Gloves




RHA261B

Avoid Open Flame

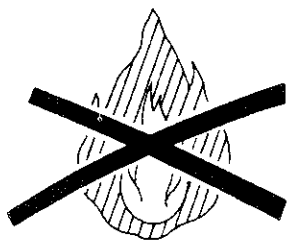

RHA262B

 No Direct Heat
on Container



RHA263B


PRECAUTIONS FOR THE HANDLING OF REFRIGERANT

- Always wear eye protection when working around the system.
- Always be careful that refrigerant does not come in contact with your skin.
- Keep refrigerant containers stored below 40°C (104°F) and never drop from high places.
- Work in well-ventilated area because refrigerant gas evaporates quickly and breathing may become difficult due to the lack of oxygen.
- Keep refrigerant away from open flames because poisonous gas will be produced if it burns.
- Do not increase can temperature beyond 40°C (104°F) in charging.
- Do not heat refrigerant container with an open flame. There is a danger that container will explode.

CAUTION:


- Do not use steam to clean surface of condenser or evaporator. Be sure to use cold water or compressed air.
- Compressed air must never be used to clean a dirty line.

- Do not release refrigerant into the atmosphere.

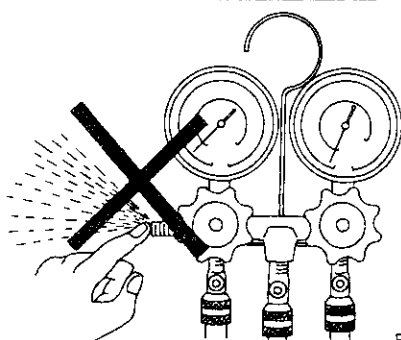

RHA676B

DIAGNOSES — Overall System

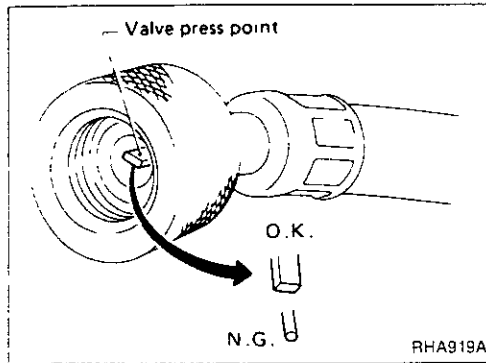

- Do not use manifold gauge whose press point shape is different from that shown. Otherwise, insufficient evacuating may occur.
- Do not over-tighten service valve cap.
- Do not allow refrigerant to rush out. Otherwise, compressor oil will be discharged along with refrigerant.

DIAGNOSES — Overall System

Performance Chart

TEST CONDITION

Testing must be performed as follows:

Vehicle location: In doors or in the shade (in a well ventilated place)

Doors: Closed

Door window: Open

Hood: Open

TEMP. lever position: Max. COLD

Air control lever position or mode switch:  (Ventilation)

INTAKE lever position :  (Recirculation)

FAN lever position or recirc switch: Max. position

Engine speed: 1,500 rpm

Time required before starting testing after air conditioner starts operating: More than 10 minutes

TEST READING (Model B13 L.H.D.)

Recirculating-to-discharge air temperature table

Inside air(Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	5.9 - 7.8 (43 - 46)
	25 (77)	8.0 - 10.7 (46 - 51)
	30 (86)	11.0 - 14.4 (52 - 58)
	35 (95)	14.8 - 19.4 (59 - 67)
60 - 70	20 (68)	7.8 - 9.9 (46 - 50)
	25 (77)	10.7 - 13.6 (51 - 56)
	30 (86)	14.4 - 18.2 (58 - 65)
	35 (95)	19.4 - 24.8 (67 - 77)

Ambient air temperature-to-compressor pressure table

Ambient air		High-pressure (Discharge side) kPa(bar, kg/cm ² , psi)	Low-pressure (Suction side) kPa (bar, kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	608 - 912 (6.08 - 9.12, 6.2 - 9.3, 88 - 132)	177 - 245 (1.77 - 2.45, 1.8 - 2.5, 26 - 36)
	25 (77)	814 - 1,147 (8.14 - 11.47, 8.3 - 11.7, 118 - 166)	186 - 255 (1.86 - 2.55, 1.9 - 2.6, 27 - 37)
	30 (86)	1,020 - 1,402 (10.20 - 14.02, 10.4 - 14.3, 148 - 203)	196 - 265 (1.96 - 2.65, 2.0 - 2.7, 28 - 38)
	35 (95)	1,236 - 1,638 (12.36 - 16.38, 12.6 - 16.7, 179 - 237)	226 - 314 (2.26 - 3.14, 2.3 - 3.2, 33 - 46)

DIAGNOSES — Overall System

Performance Chart (Cont'd)

TEST READING (Model B13 R.H.D.)

Recirculating-to-discharge air temperature table

Inside air(Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
40 - 60	20 (68)	3.5 - 5.2 (38 - 41)
	25 (77)	5.8 - 8.6 (42 - 47)
	30 (86)	9.2 - 13.2 (49 - 56)
	35 (95)	13.4 - 19.0 (56 - 66)
60 - 80	20 (68)	5.2 - 7.6 (41 - 46)
	25 (77)	8.6 - 12.0 (47 - 54)
	30 (86)	13.2 - 18.0 (56 - 64)
	35 (95)	19.0 - 24.5 (66 - 76)

Ambient air temperature-to-compressor pressure table

Ambient air		High-pressure (Discharge side) kPa(bar, kg/cm ² , psi)	Low-pressure (Suction side) kPa (bar, kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
40 - 80	20 (68)	785 - 1,020 (7.85 - 10.20, 8.0 - 10.4, 114 - 148)	137 - 196 (1.37 - 1.96, 1.4 - 2.0, 20 - 28)
	25 (77)	932 - 1,216 (9.32 - 12.16, 9.5 - 12.4, 135 - 176)	147 - 216 (1.47 - 2.16, 1.5 - 2.2, 21 - 31)
	30 (86)	1,108 - 1,432 (11.08 - 14.32, 11.3 - 14.6, 161 - 208)	157 - 255 (1.57 - 2.55, 1.6 - 2.6, 23 - 37)
	35 (95)	1,304 - 1,716 (13.04 - 17.16, 13.3 - 17.5, 189 - 249)	177 - 294 (1.77 - 2.94, 1.8 - 3.0, 26 - 43)

DIAGNOSES — Overall System

Performance Chart (Cont'd)

TEST READING (Model N14)

Recirculating-to-discharge air temperature table

Inside air(Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
40 - 60	20 (68)	3.4 - 5.0 (38 - 41)
	25 (77)	5.5 - 8.1 (42 - 47)
	30 (86)	8.4 - 12.2 (47 - 54)
	35 (95)	11.9 - 17.1 (53 - 63)
60 - 80	20 (68)	5.0 - 7.0 (41 - 45)
	25 (77)	8.1 - 11.1 (47 - 52)
	30 (86)	12.2 - 16.4 (54 - 62)
	35 (95)	17.1 - 23.5 (63 - 74)

Ambient air temperature-to-compressor pressure table

Ambient air		High-pressure (Discharge side) kPa(bar, kg/cm ² , psi)	Low-pressure (Suction side) kPa (bar, kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
40 - 80	20 (68)	834 - 1,098 (8.34 - 10.98, 8.5 - 11.2, 121 - 159)	127 - 186 (1.27 - 1.86, 1.3 - 1.9, 18 - 27)
	25 (77)	1,000 - 1,314 (10.00 - 13.14, 10.2 - 13.4, 145 - 191)	137 - 216 (1.37 - 2.16, 1.4 - 2.2, 20 - 31)
	30 (86)	1,177 - 1,540 (11.77 - 15.40, 12.0 - 15.7, 171 - 223)	147 - 245 (1.47 - 2.45, 1.5 - 2.5, 21 - 36)
	35 (95)	1,353 - 1,804 (13.53 - 18.04, 13.8 - 18.4, 196 - 262)	167 - 294 (1.67 - 2.94, 1.7 - 3.0, 24 - 43)




DIAGNOSES — Overall System

Performance Test Diagnoses

Characteristics revealed by the manifold gauge readings for the air conditioning system are shown in the following.





For how to do the performance test, refer to the item "Performance Chart".

In the following table, the portion smeared with ink on each gauge scale indicates the range showing that the air conditioning system is in good order. This range is described in Performance Chart.

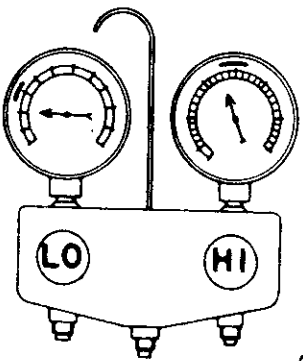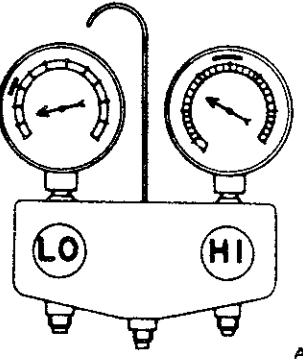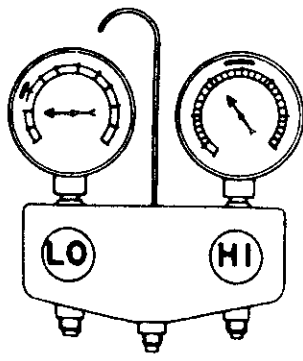Condition	Probable cause	Corrective action
INSUFFICIENT REFRIGERANT CHARGE  AC352A	Insufficient cooling. Bubbles appear in sight glass. Refrigerant is low, or leaking slightly.	1. Leak test. 2. Repair leak. 3. Charge system. Evacuate, as necessary, and recharge system.
ALMOST NO REFRIGERANT  AC353A	No cooling action. A lot of bubbles or something like mist appears in sight glass.	Stop compressor immediately. 1. Leak test. 2. Discharge system. 3. Repair leak(s). 4. Replace receiver drier if necessary. 5. Check oil level. 6. Evacuate and recharge system.
MALFUNCTIONING EXPANSION VALVE  AC354A	Slight cooling. Sweat or frosting on expansion valve inlet. Expansion valve restricts refrigerant flow. • Expansion valve is clogged. • Expansion valve is inoperative. Valve stuck closed. Thermal bulb has lost charge.	If valve inlet reveals sweat or frost: 1. Discharge system. 2. Remove valve and clean it. Replace it if necessary. 3. Evacuate system. 4. Charge system. If valve does not operate: 1. Discharge system. 2. Replace valve. 3. Evacuate and charge system.




DIAGNOSES — Overall System

Performance Test Diagnoses (Cont'd)

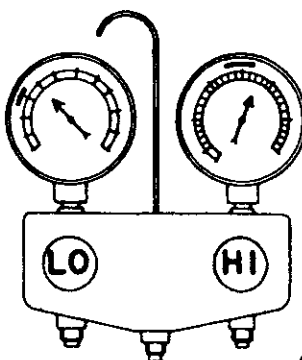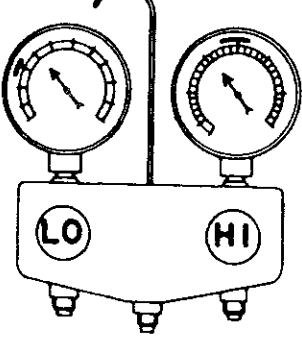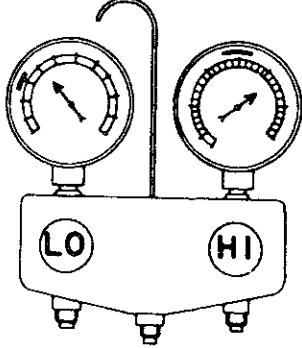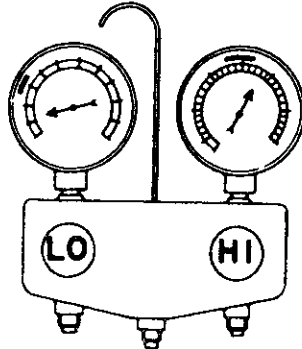Condition	Probable cause	Corrective action
 AC355A	Insufficient cooling. Sweat on suction line.	Expansion valve allows too much refrigerant through evaporator. Check valve for operation. If suction side does not show a pressure decrease, replace valve.
 AC356A	No cooling. Sweat or frosting on suction line.	Malfunctioning expansion valve. 1. Discharge system. 2. Replace valve. 3. Evacuate and charge system
AIR IN SYSTEM  AC359A	Insufficient cooling. Sight glass shows occasional bubbles.	Air mixed with refrigerant in system. 1. Discharge system. 2. Replace receiver drier. 3. Evacuate and charge system.
MOISTURE IN SYSTEM  AC360A	After short operation, suction side may show vacuum pressure reading. During this condition, discharge air will be warm. As a warning of this, reading vibrates around 39 kPa (0.39 bar, 0.4 kg/cm², 6 psi).	Drier is saturated with moisture. Moisture has frozen in expansion valve. Refrigerant flow is restricted. 1. Discharge system. 2. Replace receiver drier (twice if necessary). 3. Evacuate system completely. (Repeat 30-minutes evacuating three times.) 4. Recharge system.


DIAGNOSES — Overall System

Performance Test Diagnoses (Cont'd)


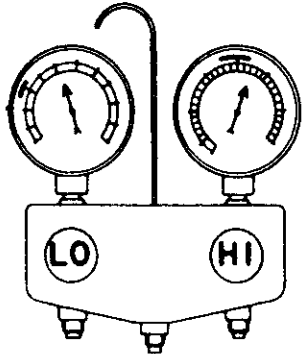
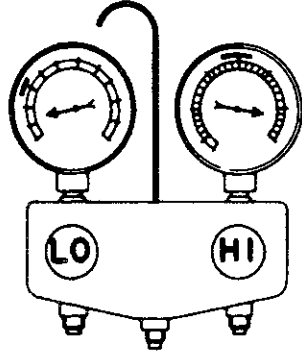
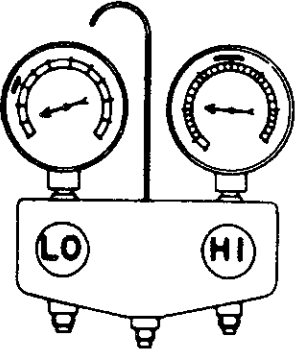
Condition	Probable cause	Corrective action
MALFUNCTIONING CONDENSER  AC361A	No cooling action: engine may overheat. Bubbles appear in sight glass of drier. Suction line is very hot. Usually a malfunctioning condenser.	• Check radiator fan motors. • Check condenser for dirt accumulation. • Check engine cooling system for overheating. • Check for refrigerant overcharging. If pressure remains high in spite of all above actions taken, remove and inspect the condenser for possible oil clogging.
HIGH PRESSURE LINE BLOCKED  AC362A	Insufficient cooling. Frosted high pressure liquid line. Drier clogged, or restriction in high pressure line.	1. Discharge system. 2. Remove receiver drier or strainer and replace it. 3. Evacuate and charge system.
MALFUNCTIONING COMPRESSOR  AC363A	Insufficient cooling. Internal problem in compressor, or damaged gasket and valve.	1. Discharge system. 2. Remove and check compressor. 3. Repair or replace compressor. 4. Check oil level. 5. Replace receiver drier. 6. Evacuate and charge system.

DIAGNOSES — Overall System

Performance Test Diagnoses (Cont'd)

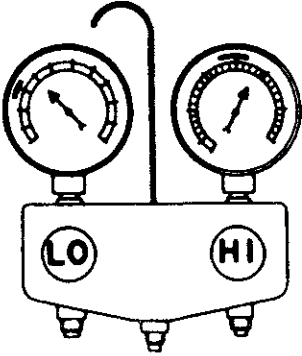Condition	Probable cause	Corrective action
TOO MUCH OIL IN SYSTEM (Excessive)  AC354A	Insufficient cooling. Too much oil circulates with refrigerant, causing the cooling capacity of the system to be reduced.	Refer to COMPRESSOR OIL for correcting oil level.

PRECAUTIONS FOR REFRIGERANT CONNECTIONS

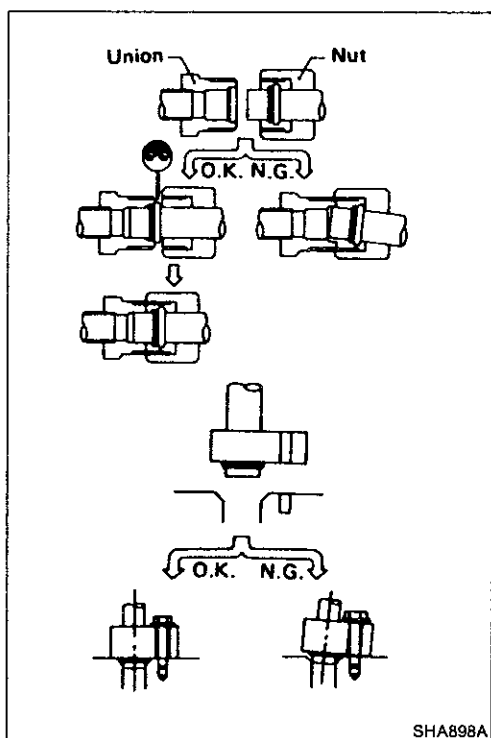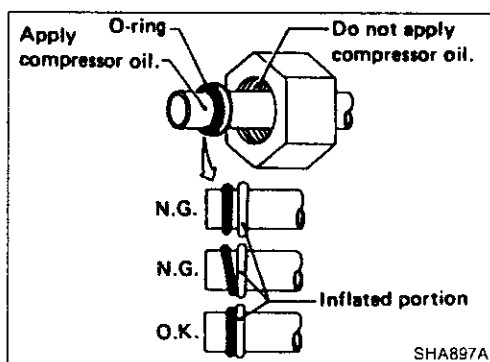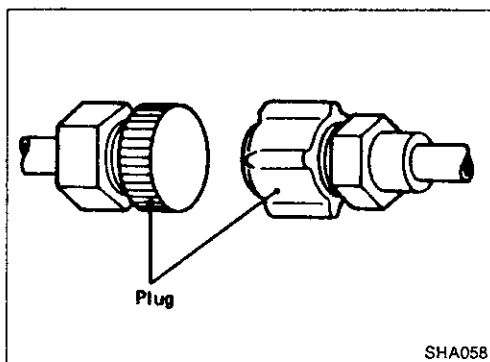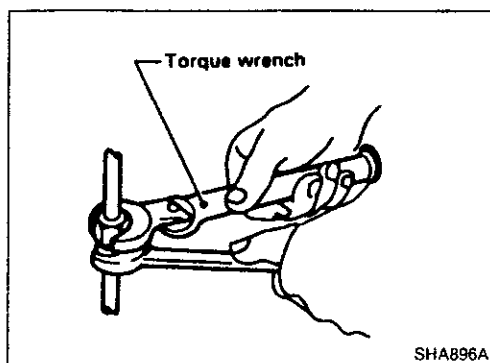

WARNING:

Gradually loosen discharge side hose fitting, and remove it after remaining pressure has been released.

CAUTION:

When replacing or cleaning refrigerant cycle components, observe the following.

- Do not leave compressor on its side or upside down for more than 10 minutes, as compressor oil will enter low pressure chamber.
- When connecting tubes, always use a torque wrench and a back-up wrench.
- After disconnecting tubes, plug all openings immediately to prevent entrance of dirt and moisture.


- Always replace used O-rings.
- When connecting tube, apply compressor oil to portions shown in illustration. Be careful not to apply oil to threaded portion.
- O-ring must be closely attached to inflated portion of tube.

- After inserting tube into union until O-ring is no longer visible, tighten nut to specified torque.
- After connecting line, conduct leak test and make sure that there is no leakage from connections. When the gas leaking point is found, disconnect that line and replace the O-ring. Then tighten connections of seal seat to the specified torque.

EVACUATING, CHARGING AND CHECKING

Refrigerant Charging Procedure

WORK PROCEDURE

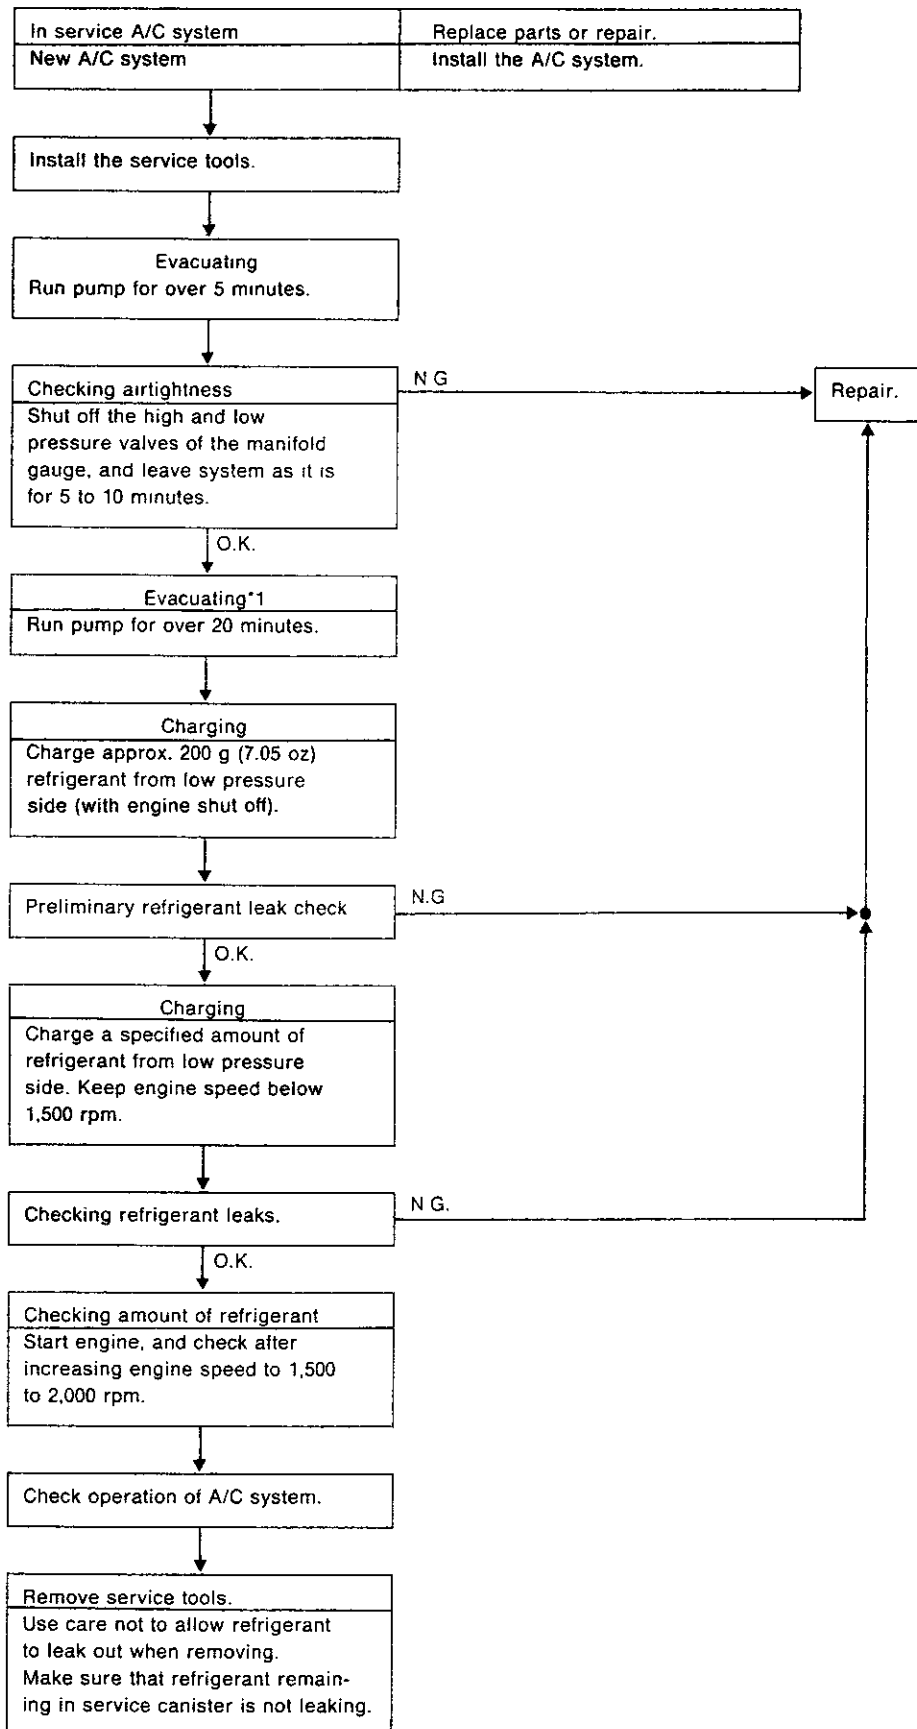


*1: Working operation depends upon the performance of the pump and the weather.

EVACUATING, CHARGING AND CHECKING

Refrigerant Charging Procedure (Cont'd)

SETTING OF SERVICE TOOLS

Make sure that the service tools are set as indicated below and that no refrigerant is leaking.

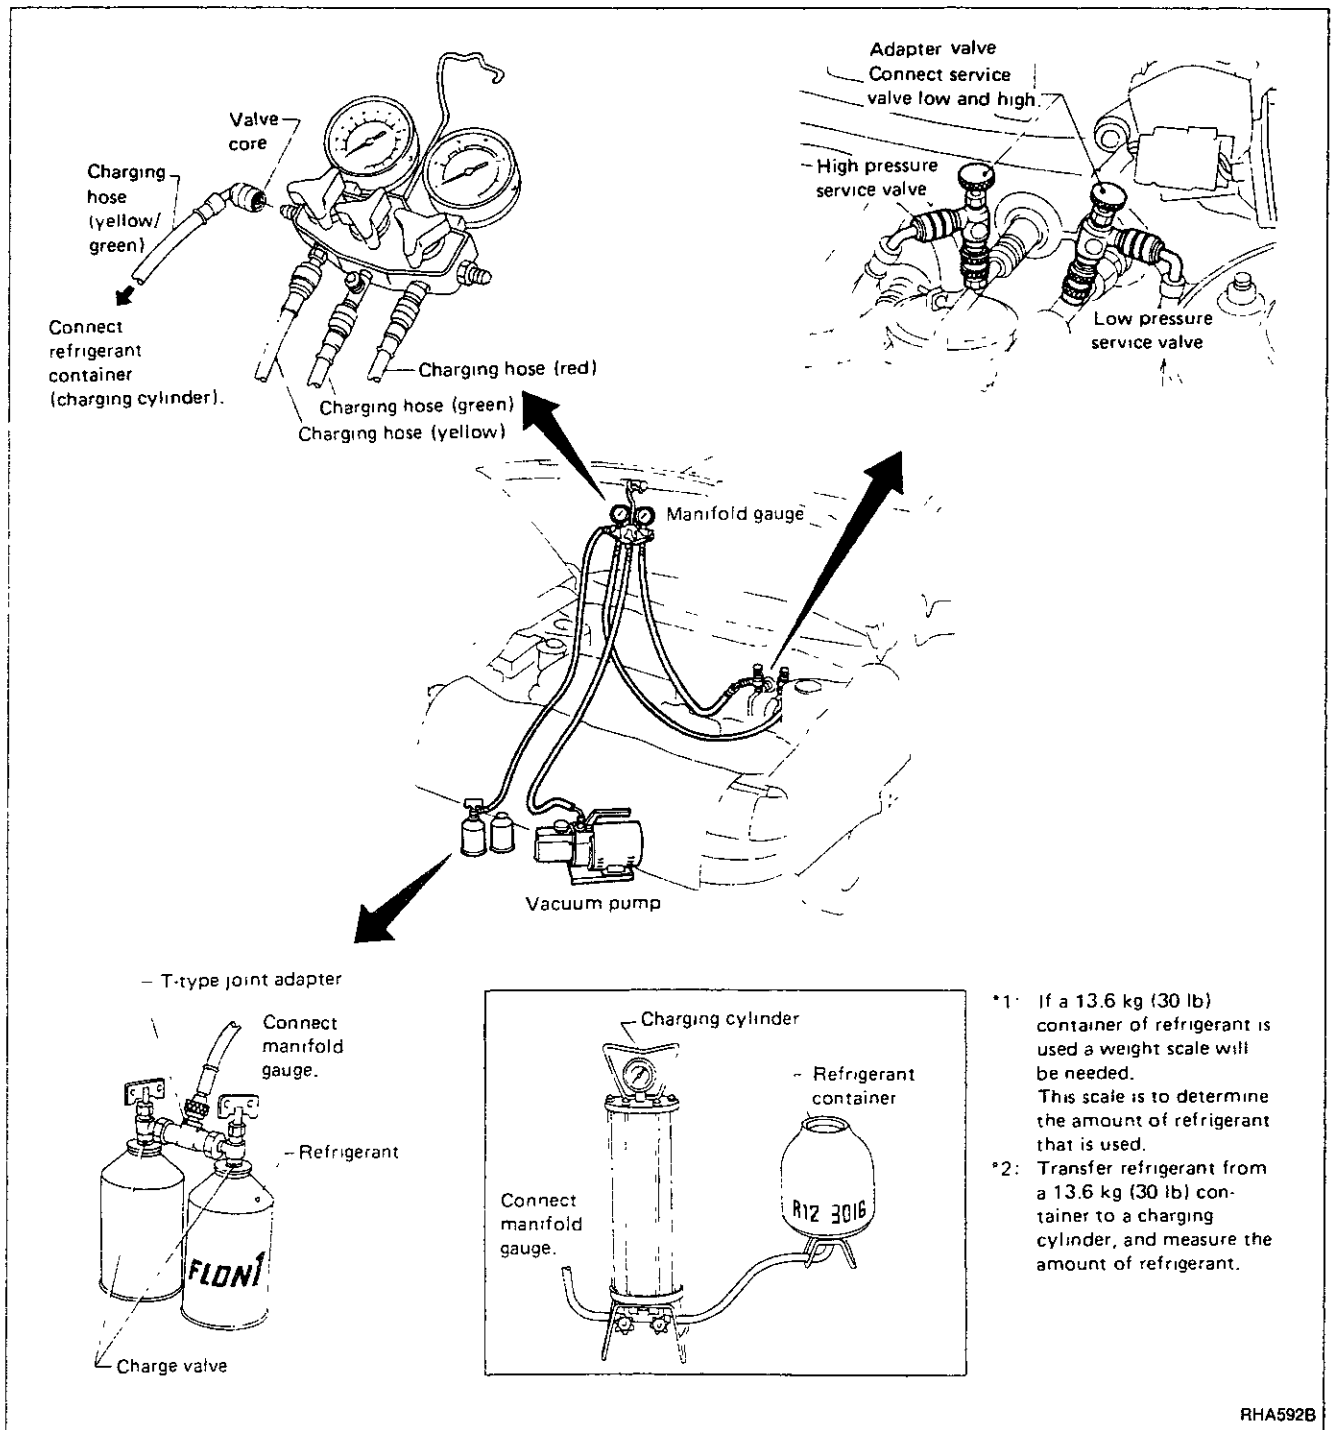


EVACUATING, CHARGING AND CHECKING

Evacuation

Why evacuation is needed


When installing a car air conditioner, it is essential to completely remove air and water from the inside of the refrigeration system beforehand. This process is called evacuation. If the air conditioner is operated without completely removing these substances, the following abnormalities may result.

- Poor cooling due to reduction in the thermal exchange rate in condenser
- Moisture recirculating together with the refrigerant through the refrigeration system freezes at the port of the cold expansion valve. This impedes the normal refrigerant flow, thus lowering the cooling efficiency.
- The refrigerant reacts with water chemically, generating corrosive hydrochloric acid thus causing corrosion to the refrigeration system components.

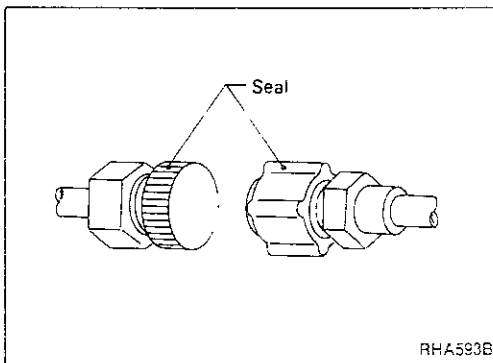

CAUTION:

- When installing an air conditioner in the vehicle, the pipes must be connected as the final stage of the operation. The seal caps of the pipes and other components must not be removed until their removal is required for connection.
- Before installing any air conditioner component that has been stored in a cool location to a vehicle that has been exposed to the hot sun, leave the component as it is for some time in a hot location with its seal cap unremoved. This step is necessary to prevent condensation of moisture inside the cold component.
- Thoroughly remove moisture from the refrigeration system before charging the refrigerant.

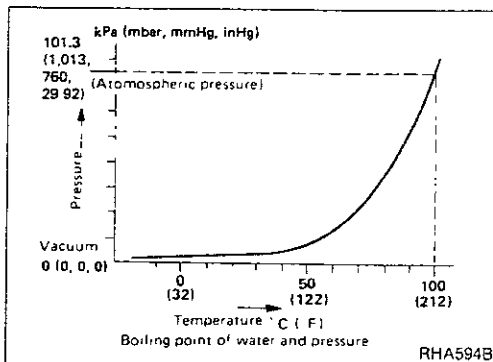

Relation between boiling point of water and atmospheric pressure

Water boils at 100°C (212°F) under normal atmospheric pressure. The boiling point lowers with the atmospheric pressure. This characteristic of water is utilized to purge it from the system. The pressure inside the refrigeration system is lowered by a vacuum pump so that water can evaporate at a normal temperature. The water vapor is then discharged to the outside together with the air.




EVACUATING, CHARGING AND CHECKING

Evacuation (Cont'd)

Vacuum pump

The degree of evacuation greatly affects the cooling capacity of the air conditioner and the service life of the refrigeration system components. However, use of a vacuum pump having insufficient capacity results in prolonged evacuation. It is necessary to use a vacuum pump with a sufficiently large capacity and also to maintain the pump to ensure its original pumping capacity.

EVACUATION PROCEDURE

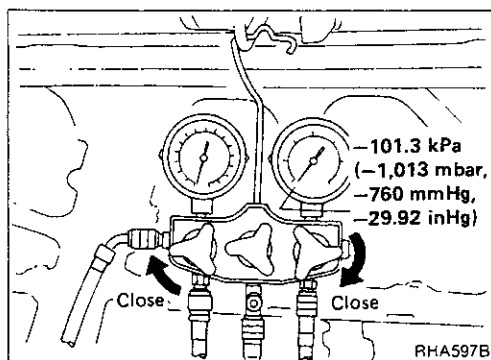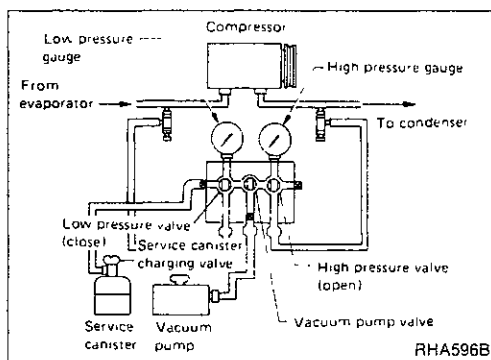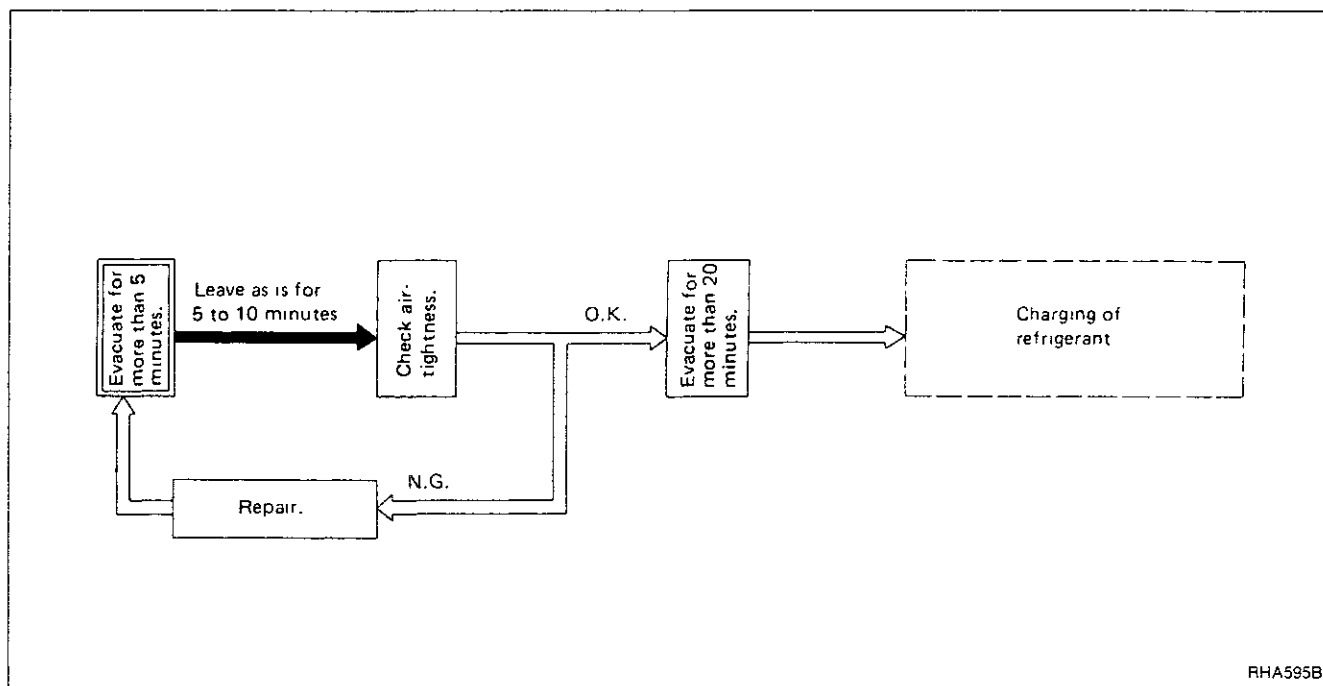

1. Completely tighten the low pressure and high pressure adapter valves.

Tightening of the valves opens the service canister valve.

2. Open the high and low pressure valves and vacuum pump valve of the gauge manifold.
3. Run the vacuum pump.

4. Perform evacuation for more than five minutes to stabilize the vacuum inside the system. Check to ensure that the low pressure gauge indicates -98.6 to -101.3 kPa (-986 to -1,013 mbar, -740 to -760 mmHg, -29.13 to -29.92 inHg).
5. Shut off the high and low pressure valves and vacuum pump valve of the gauge manifold.


EVACUATING, CHARGING AND CHECKING

Evacuation (Cont'd)

CHECKING AIRTIGHTNESS

1. Shut off the high and low pressure valves and vacuum pump valve of the gauge manifold, and leave the system as it is for 5 to 10 minutes.
2. Make sure that the needle of the low pressure gauge will not move back toward the atmospheric pressure side (gauge pressure 0).

If any reverse movement is noted, it indicates poor system airtightness. Service the system until airtightness is complete. If pressure changes approx. 13.3 kPa (133 mbar, 100 mmHg, 3.94 inHg) in 10 minutes, the refrigerant in the system will be exhausted in about one month.

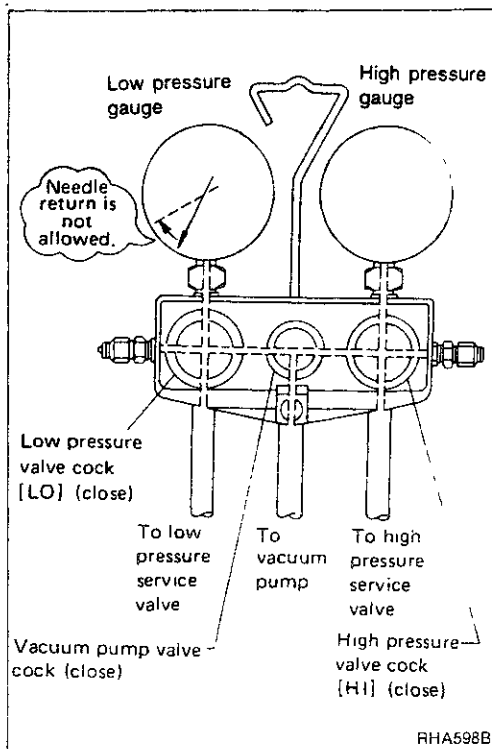

MAINTENANCE

If inadequate airtightness is detected, check and service the following portions:



Leak from pipe joints	Leak from gauge manifold
● Contaminated, damaged, or deformed O-ring ● No oil applied when connecting pipe ● Excessive or insufficient tightening of pipe joint	● Malfunctioning hose ● Improper installation of gauge ● Malfunctioning valve ● Malfunctioning packing

EVACUATION

If no abnormality is found during the airtightness check, perform evacuation again for more than 20 minutes.

1. Run the vacuum pump.
2. Open the high and low pressure valve and vacuum pump valve of the gauge manifold.
3. Evacuate for more than 20 minutes.
4. Close the high and low pressure valves and vacuum pump valve of the gauge manifold.

Charging Refrigerant WORK PROCEDURE

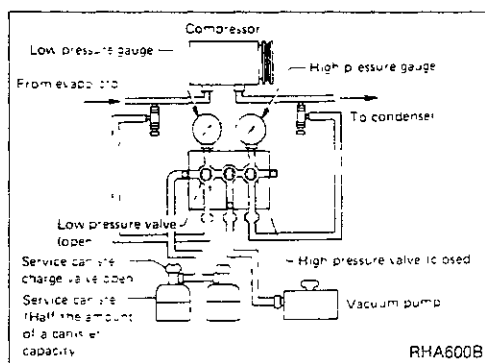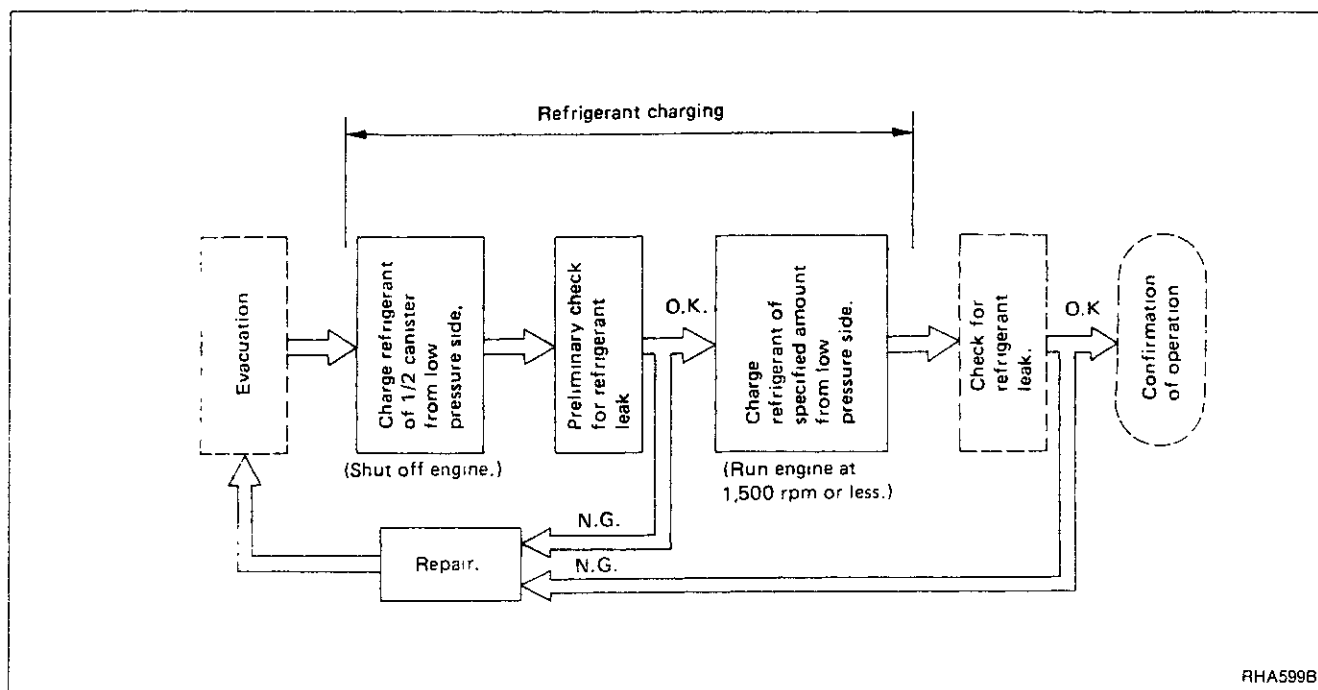

PRELIMINARY CHARGING PROCEDURE

This operation is performed to check the refrigerant leakage and to protect the compressor.

1. Turn the charge valve handle to open a hole in the service canister to allow the refrigerant to flow through the gauge manifold.
2. Open the low pressure valve of the gauge manifold, and charge the refrigerant into the system from the low pressure side.
3. After charging approx. 200 g (7.05 oz) of refrigerant, shut off the low pressure valve.

CAUTION:

- The refrigerant charging operation must be performed after shutting off the engine. If the compressor is operated with an insufficient amount of refrigerant, the compressor may seize up due to a lack of return of the compressor oil.
- Do not shake nor hold the refrigerant canister upside down.



EVACUATING, CHARGING AND CHECKING

Charging Refrigerant (Cont'd)

PRELIMINARY CHECK FOR REFRIGERANT LEAKS

1. Make sure that the gauge manifold valve is closed.
2. Check for refrigerant leak from each connector in the system using the leak detector.

At this point, the pressure in the system is not high. Only large amounts of refrigerant leak due to loose pipe joints, etc. can be detected.

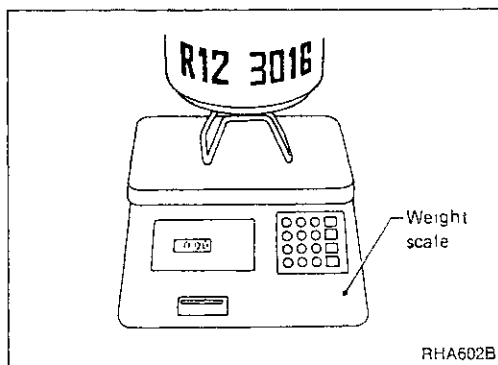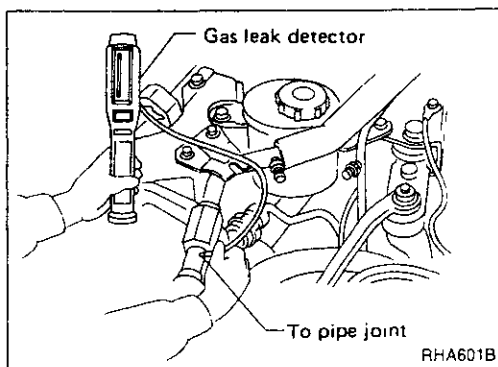

CHARGING REFRIGERANT

1. Make sure that the valves of the gauge manifold are closed.
2. Start the engine, and run the compressor.
3. Slowly open the low pressure valve of the gauge manifold.
4. Charge the specified amount of refrigerant.

The charged amount of refrigerant can be determined by subtracting the weight of the canister measured after charging from its weight measured before charging.

WARNING:

Never attempt to open the high pressure valve while the engine is running. If opened, the pressure in the refrigerant canister will increase, thus causing an explosion.



CHARGING REFRIGERANT WITHOUT USING T-JOINT ADAPTER

If the service canister used for charging is empty, replace the canister with a new one, and proceed as follows:


1. Make sure by shaking the canister that no refrigerant is left inside.
2. Shut off all the valves of the gauge manifold.
3. Disconnect the charge valve from the emptied canister, and attach it to a new service canister.
4. Run the vacuum pump, and open the vacuum valve (center) of the gauge manifold to purge air from the inside of the hose.
5. Run the vacuum pump for approx. 30 seconds.
6. Shut off the vacuum valve (center) and stop the vacuum pump.
7. Unseal the new canister, and open the charge valve.
8. Open the low pressure valve to charge the refrigerant into the system.

EVACUATING, CHARGING AND CHECKING

Charging Refrigerant — Charging cylinder WORK PROCEDURE

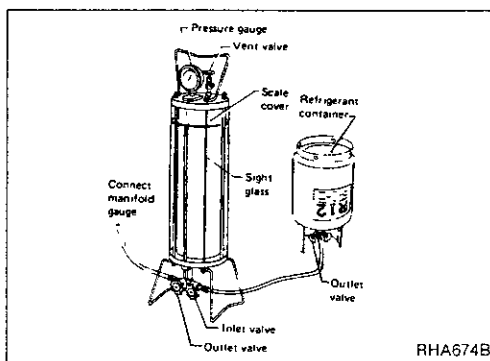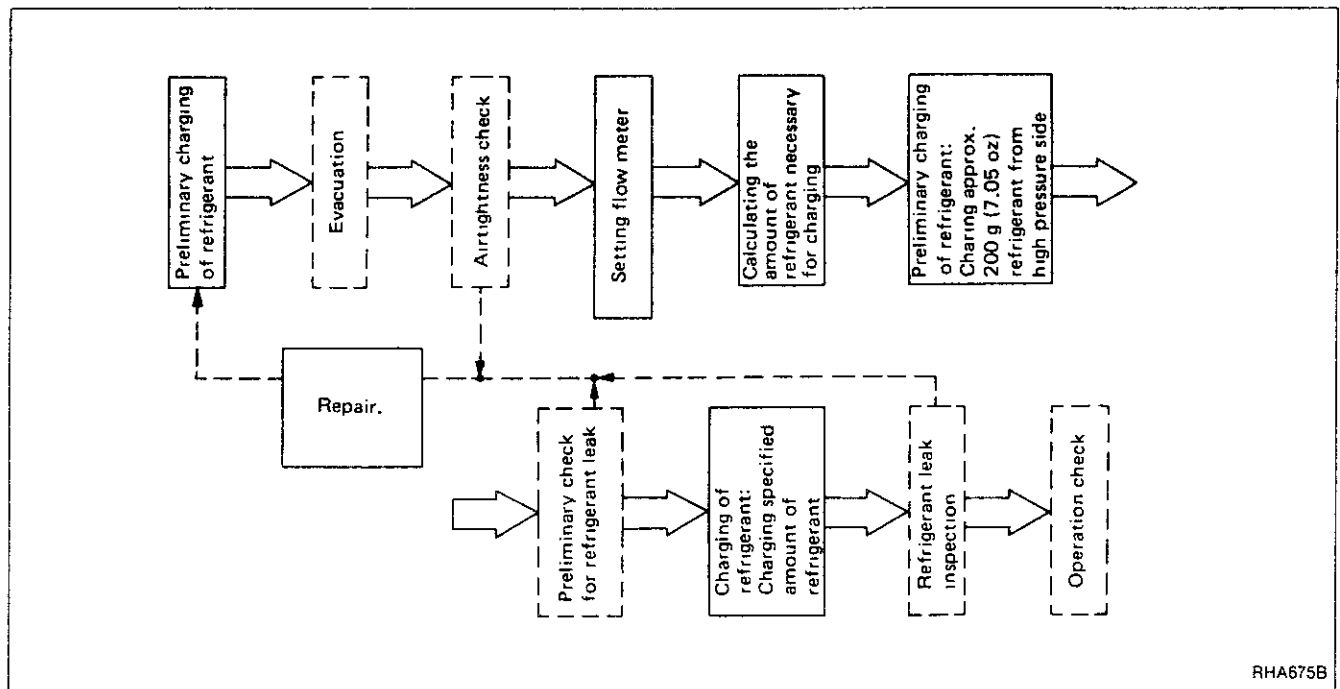

Install the charging cylinder correctly to the vehicle. Refer to "SETTING OF SERVICE TOOLS" in "Refrigerant Charging Procedure".

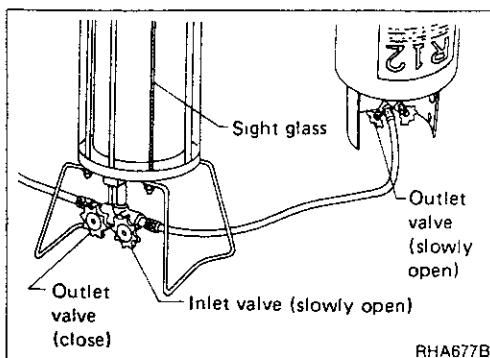


PRELIMINARY CHARGING OF REFRIGERANT-1

1. Make sure that the inlet and outlet valves of the charging cylinder are closed.
2. Slowly open the outlet valve of a refrigerant container [13.6 kg (30 lb)].
3. Slowly open the inlet valve of the charging cylinder.

The refrigerant will flow into the sight glass of the charging cylinder as the valve is opened.

EVACUATING, CHARGING AND CHECKING


Charging Refrigerant — Charging cylinder (Cont'd)

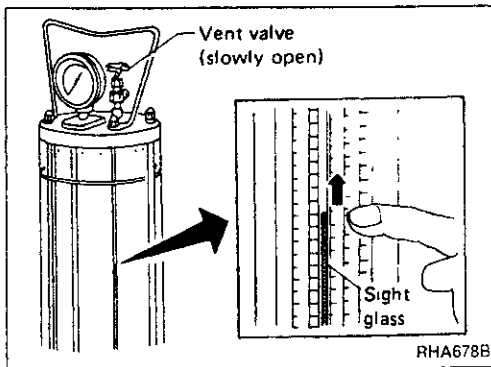

4. Slowly open the upper vent valve to release pressure from the charging cylinder. While doing so, continue charging until the required amount of refrigerant is reached.

The refrigerant volume changes with the temperature and pressure. It is necessary to charge refrigerant with a little more than the required amount (indicated on the sight glass). Refer to the CAUTION label attached on the vehicle, or to the Service Manual.

5. Close the inlet valve and upper vent valve of the charging cylinder.

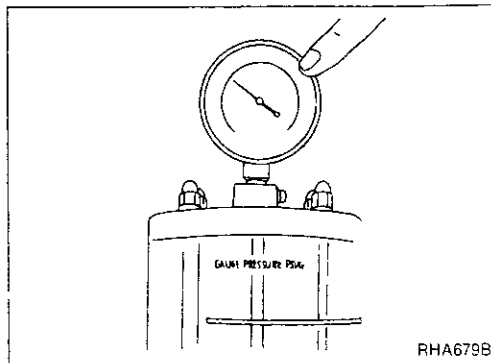


6. Turn on the heater switch (the charging cylinder is provided with a heater.)

The refrigerant charging time can be reduced by heating the refrigerant to increase its pressure. In this case, do not allow the pressure in the cylinder to rise higher than 1,030 kPa (10.30 bar, 10.5 kg/cm², 150 psi). (If pressure rises above this level, turn off the heater.)

The pressure in the charging cylinder can be measured by the upper pressure gauge.

EVACUATION AND AIRTIGHTNESS CHECK

Refer to "EVACUATION" and "CHECKING AIRTIGHTNESS" in "Evacuation".

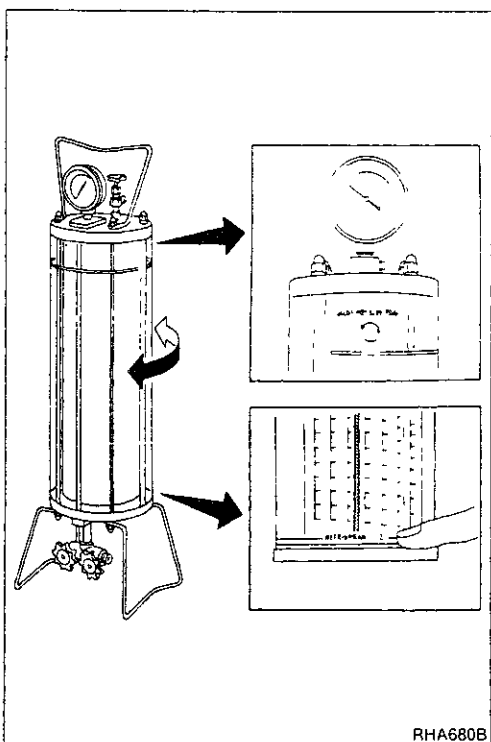


SETTING OF FLOW METER

1. Rotate the charging cylinder main body until the scale for R12 is at the correct position on the sight glass.
2. Read the charging cylinder pressure gauge.
3. Rotate the charging cylinder so that the scale of the charging cylinder agrees with the pressure value indicated on the pressure gauge.
4. Open the outlet valve of the charging cylinder.

EVACUATING, CHARGING AND CHECKING

Charging Refrigerant — Charging cylinder (Cont'd)

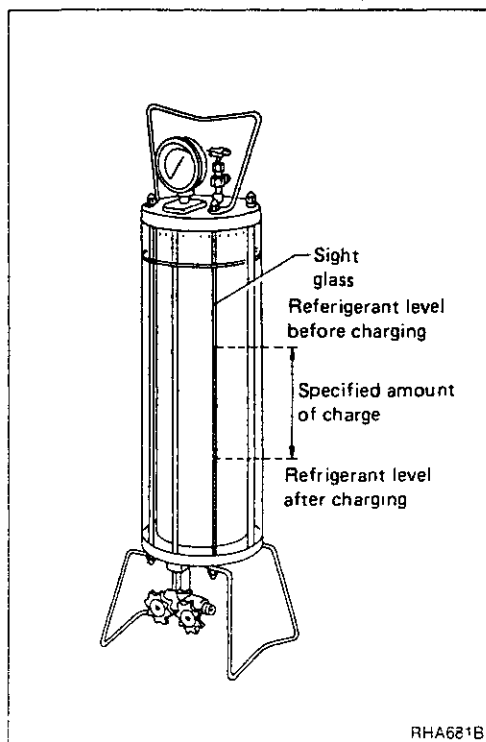

CALCULATING CHARGING AMOUNT OF REFRIGERANT

1. Record the amount of refrigerant in the sight glass before charging.
2. Subtract the required amount of refrigerant (charge quantity specified for the vehicle) from the amount of refrigerant recorded in step 1. Charge refrigerant into the system until the remaining value equals to the value indicated on the sight glass.


Example:

Level in sight glass: 3 lb 8 oz

Charge specification (from S.D.S.) 2.0 - 2.4 lb.

Calculate charge quantity into lb and oz as follows: 1 lb = 16 oz, and 0.1 lb = 1.6 oz, so that 2.0 lb = 32 oz, 2.4 lb = 32 + (4 x 1.6) = 32 + 6.4 = 38.4, round off to 38. Therefore our charge quantity will be between 32 and 38 oz, or 2 lb 0 oz to 2 lb 6 oz. Subtract 2 lb 6 oz from the level in the sight glass (3 lb 8 oz) = 1 lb 2 oz.

This will be our ending point.

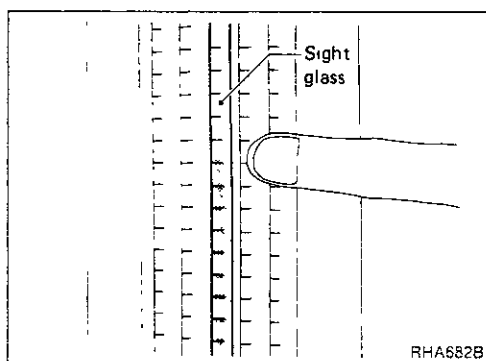

PRELIMINARY CHARGING OF REFRIGERANT-2

1. Slowly open the high pressure side valve of the manifold gauge to charge refrigerant from the high pressure side.
2. Close the high pressure valve after charging approx. 200 g (7.05 oz) refrigerant.

CAUTION:

The refrigerant in the charging cylinder is kept in the liquid state, so the refrigerant should be charged from high pressure side. Do not start the engine with the high pressure valve kept open.

PRELIMINARY CHECK FOR REFRIGERANT LEAKS

Refer to "PRELIMINARY CHECK FOR REFRIGERANT LEAKS" in "Charging Refrigerant".

CHARGING REFRIGERANT

1. Slowly open the high pressure valve of the manifold gauge, and charge the calculated amount of refrigerant in "CALCULATING CHARGING AMOUNT OF REFRIGERANT".


CAUTION:

The refrigerant in the charging cylinder is kept in the liquid state, so the refrigerant should be charged from high pressure side. Do not start the engine with the high pressure valve kept open.

2. Close the high pressure valve of the manifold gauge.
3. Make sure that the calculated amount of refrigerant is in the sight glass.
4. Close the charging cylinder outlet valve.
5. Turn off the heater if it is on (when using heater equipped type).


EVACUATING, CHARGING AND CHECKING

Inspection for Refrigerant Leaks WORK PROCEDURE

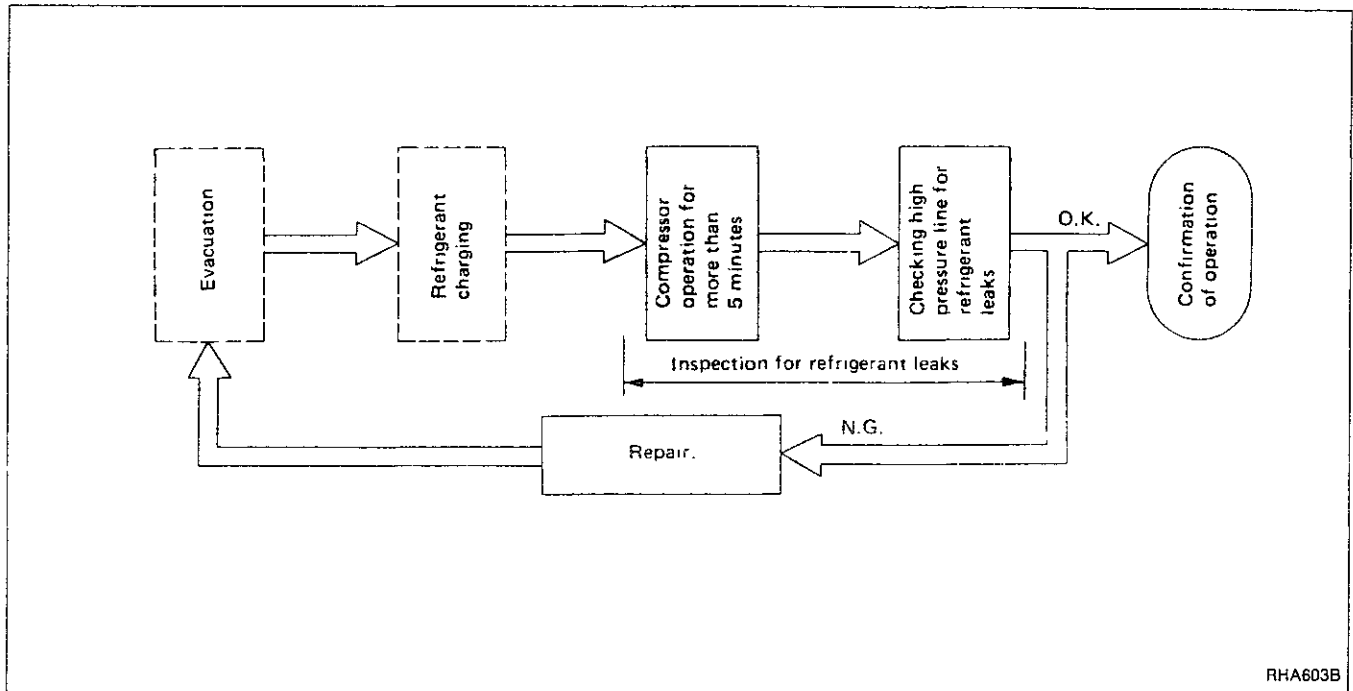

To facilitate inspection for refrigerant leaks, establish the following conditions:


- Start the engine.
- Run the air conditioner.
- Set the blower fan control to MAX.
- Set the temperature control to FULL COLD.
- Run the refrigerant system for more than 5 minutes after setting the above-mentioned conditions (to circulate the refrigerant through the system).

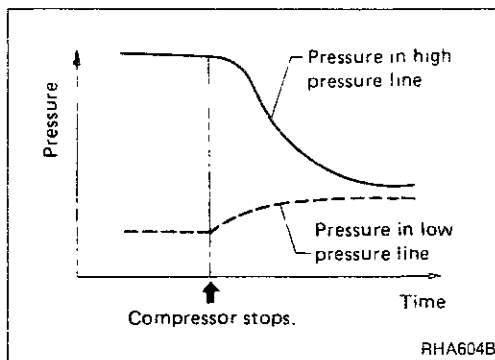


Refrigerant leaks should be checked immediately after stopping the engine, beginning with the high pressure line, using a gas leak tester. This is because the pressure in the high pressure line drops gradually after the refrigerant circulation stops while the pressure in the low pressure line rises gradually as shown in the graph. Leaks can be detected easily when pressure is high.

EVACUATING, CHARGING AND CHECKING

Inspection for Refrigerant Leaks (Cont'd) INSPECTION PROCEDURE

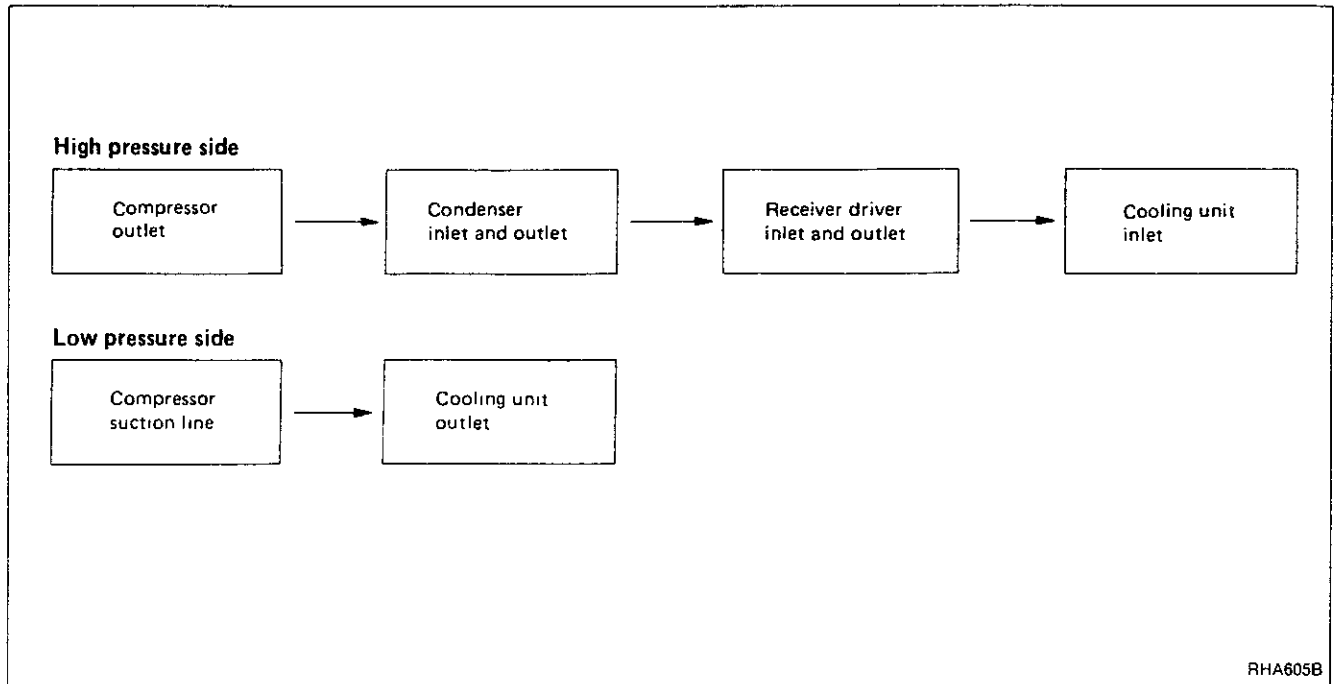

To prevent detecting errors, make sure that there is no refrigerant vapor or tobacco smoke in the vicinity of the vehicle. It is also necessary to shield the vehicle from the wind so that the leaking refrigerant is not blown away.

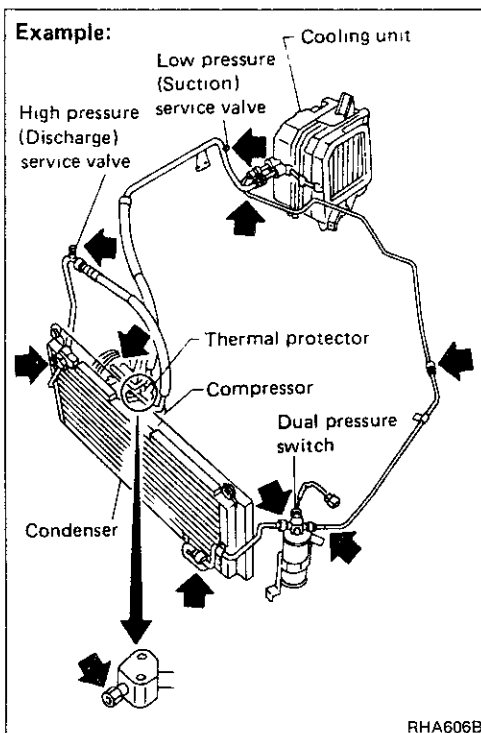

INSPECTION POINTS

Check carefully each of the pipe joints. To check, wipe the portion to be checked with waste cloth, and move the tester probe all around the joint.

Compressor

Check the shaft seals and bolt holes, and also around the magnet clutch.

Receiver drier

Check the pressure valve, safety valve and the fusible plug mounts.

Service valves

Check all around the service valves.

Ensure that each valve core is not loose.

The service valve cap must be attached to the valve (to prevent leak).

Also check that there are no foreign objects inside the cap.

Inside of cooling unit

To check, insert the leak tester probe into the drain hose immediately after stopping the engine. (Keep the probe inserted for more than 10 seconds.)

EVACUATING, CHARGING AND CHECKING


Confirmation of Amount of Charged Refrigerant

The amount of refrigerant charged into the system can be observed through the sight glass by watching the flow of the refrigerant and by reading the high pressure and low pressure manifold gauges under the following conditions:

CONDITIONS




- Doors:
Close completely.
- Window glasses:
Close completely.
- Intake door position:
RECIRC
- Mode door position:
VENT
- Blower fan:
HI
- TEMP control:
Optional (Set so that intake air temperature is 30 to 35°C (86 to 95°F).
- AIR CON switch:
ON
- Engine speed:
Approx. 1,500 rpm

WORK PROCEDURE

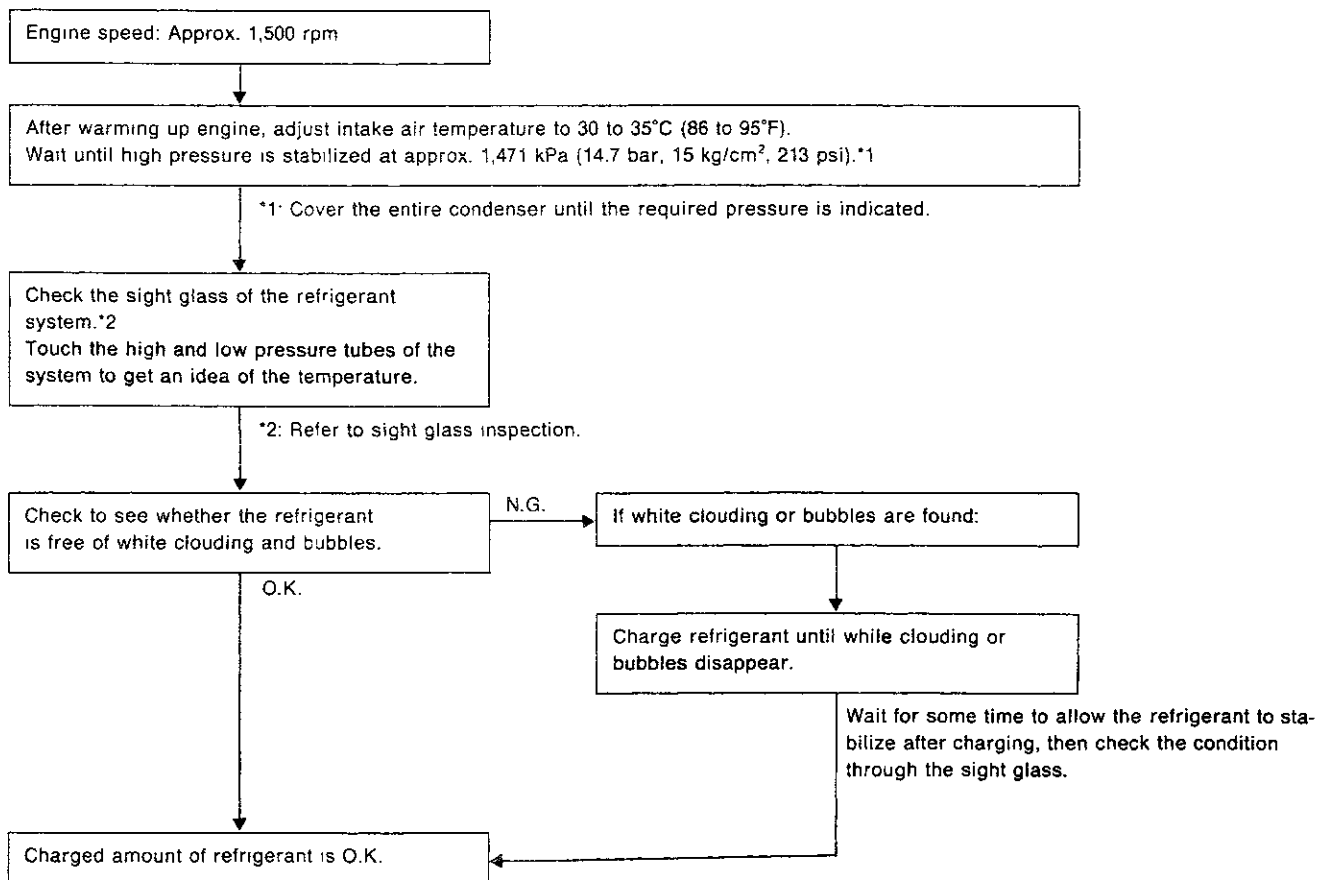

EVACUATING, CHARGING AND CHECKING


Confirmation of Amount of Charged Refrigerant (Cont'd)

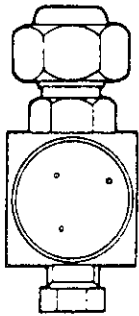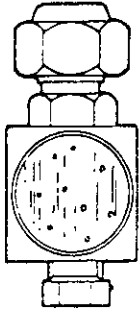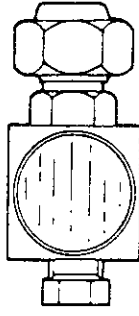Check item	Amount of charge	Appropriate	Refrigerant is insufficient	Almost no refrigerant	Overcharged, or air in system
Temperature of high and low pressure pipes		High pressure side is hot while low pressure side is cold.	High pressure side is warm and low pressure side is somewhat cold.	No difference is felt between high and low pressure sides.	High pressure side is very hot.
Flow of refrigerant viewed through sight glass		Mostly transparent. Occasionally some bubbles are seen when engine rpm is increased or decreased. 	Bubbles are always flowing. Refrigerant is cloudy. 	Nothing is visible. 	If overcharged, no bubbles are seen. If there is air in the system, large bubbles are seen.
Pressure		Normal high pressure: 1.373 - 1.765 kPa (13.7 - 17.7 bar, 14 - 18 kg/cm², 199 - 256 psi) Normal low pressure: 147 - 294 kPa (1.47 - 2.94 bar, 1.5 - 3 kg/cm², 21 - 43 psi)	Both high and low pressure values are insufficient.	High pressure value is very small.	Both high and low pressure values are excessive.
Action to take		Bubbles may be generated when the receiver drier strainer is clogged, or when the expansion valve is opened excessively.	Add refrigerant after checking for leaks.	Check the refrigerant system.	Stop the compressor and extract excessive refrigerant. If air is found, perform evacuation, then charge the specified amount of refrigerant.

CAUTION:

The condition of bubbles seen through the sight glass as well as the intake and discharge pressures are influenced by the ambient temperature, wind velocity, weather, and by the air temperature in front of the condenser, etc.

EVACUATING, CHARGING AND CHECKING

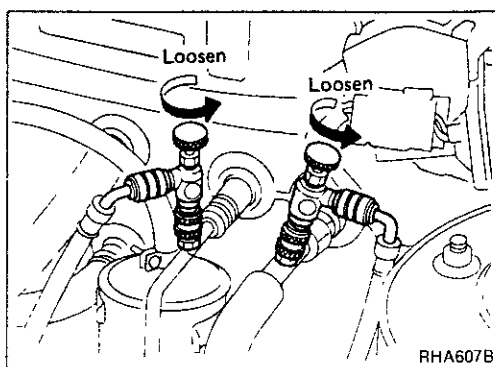

Recovery Procedure

REMOVAL OF REFRIGERANT CHARGING DEVICE


1. Completely loosen the adapter valves of the low pressure and high pressure lines.

The inner valve of the adapter valve will prevent the refrigerant from leaking out.

2. Remove both the high-pressure and low-pressure side adapter valves from the on-vehicle service valve.

If adapter valve is not used for charging, proceed as follows to minimize the refrigerant discharge into the atmosphere.

3. Loosen the nut of the low pressure charging hose while pressing it against the service valve to prevent refrigerant leakage.
4. After loosening the nut, quickly remove the charge valve from the service valve.
5. Wait until the high pressure gauge indication drops to below 981 kPa (9.8 bar, 10 kg/cm², 142 psi), then similarly disconnect the high pressure charging hose.

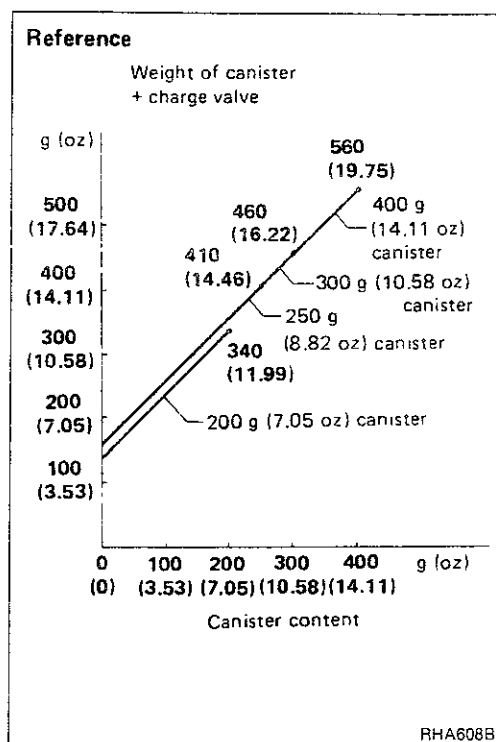

DISPOSAL OF RESIDUAL REFRIGERANT

Securely shut off each of the charge valves, adapter valves and manifold gauge valves to prevent the residual refrigerant from leaking out. Keep these valves in a safe location for the next charging.


The amount of refrigerant remaining in a service canister can be estimated from the Table shown here. It is recommended that a label be attached indicating the remaining amount in the canister.

SERVICE PROCEDURES

Refrigerant Lines

- Refer to "Precautions for Refrigerant Connection" on page HA-23.


EXCEPT FOR SR20DE ENGINE — L.H.D. MODELS

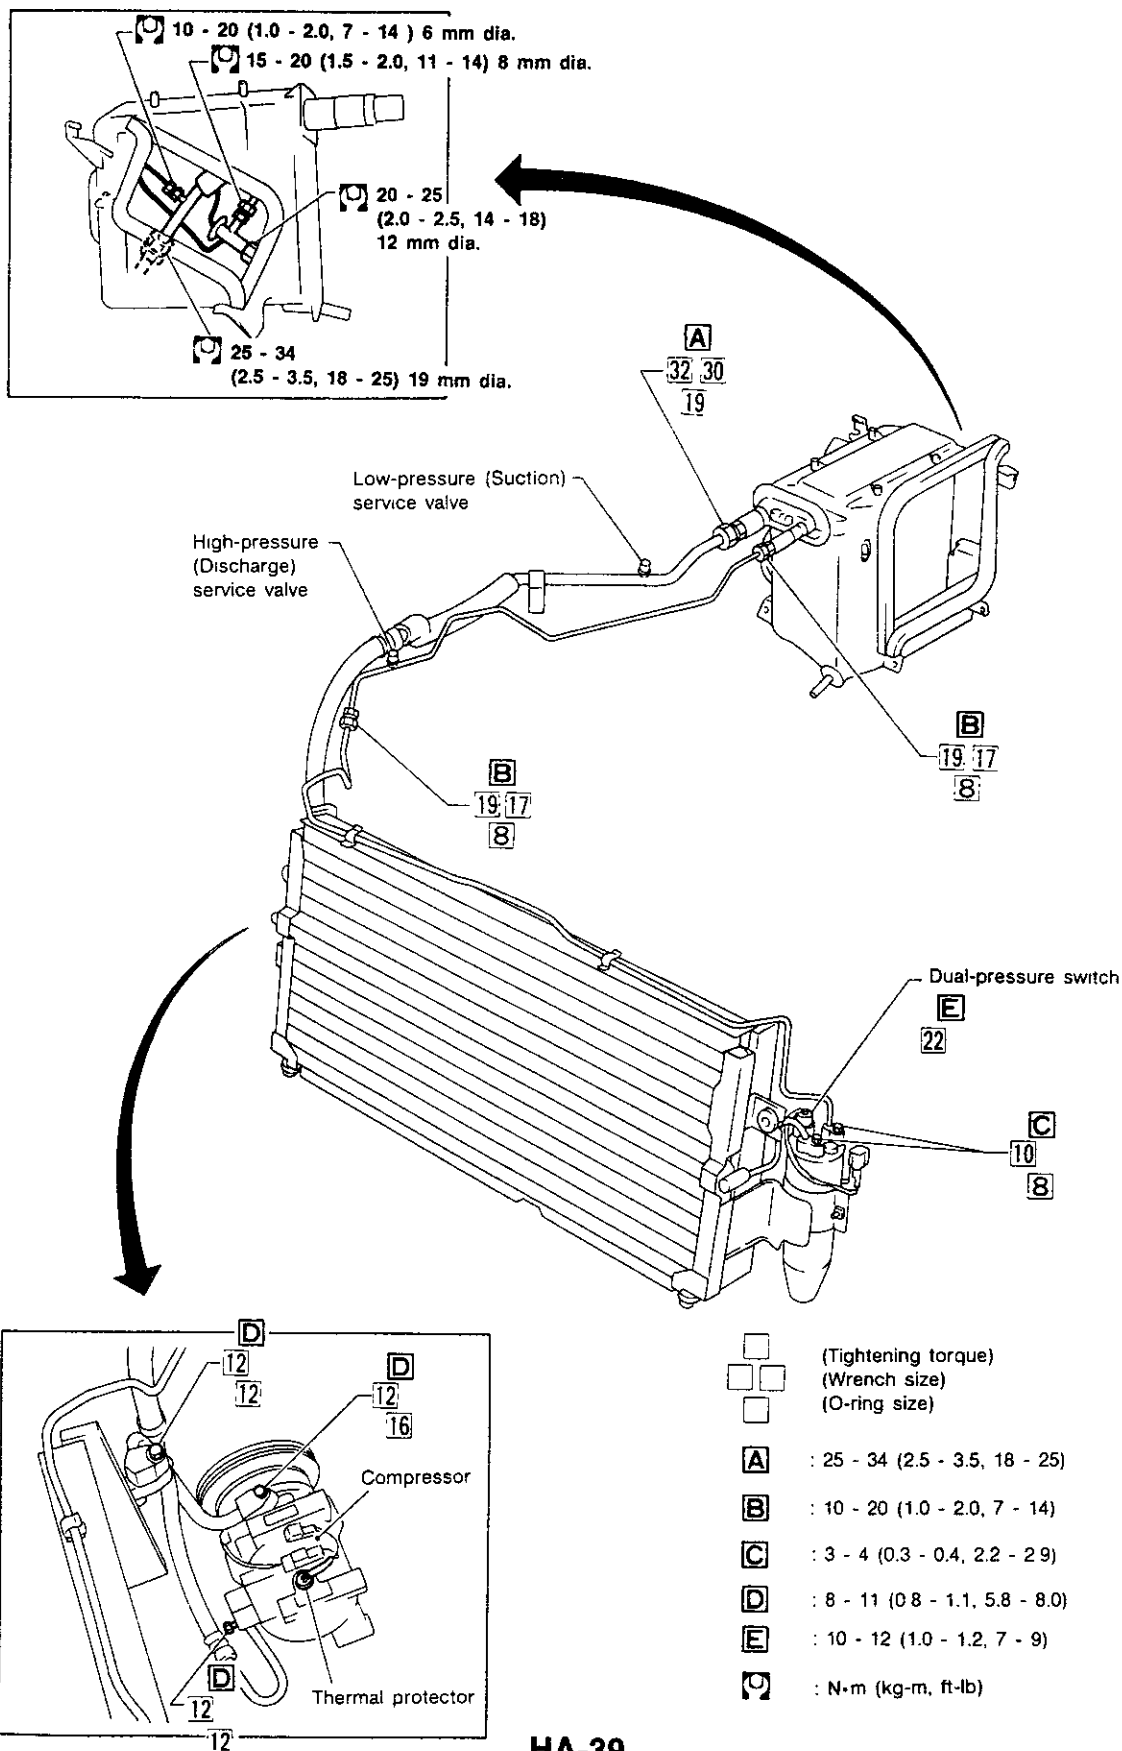

SERVICE PROCEDURES

Refrigerant Lines (Cont'd)

SR20DE ENGINE — L.H.D. MODELS



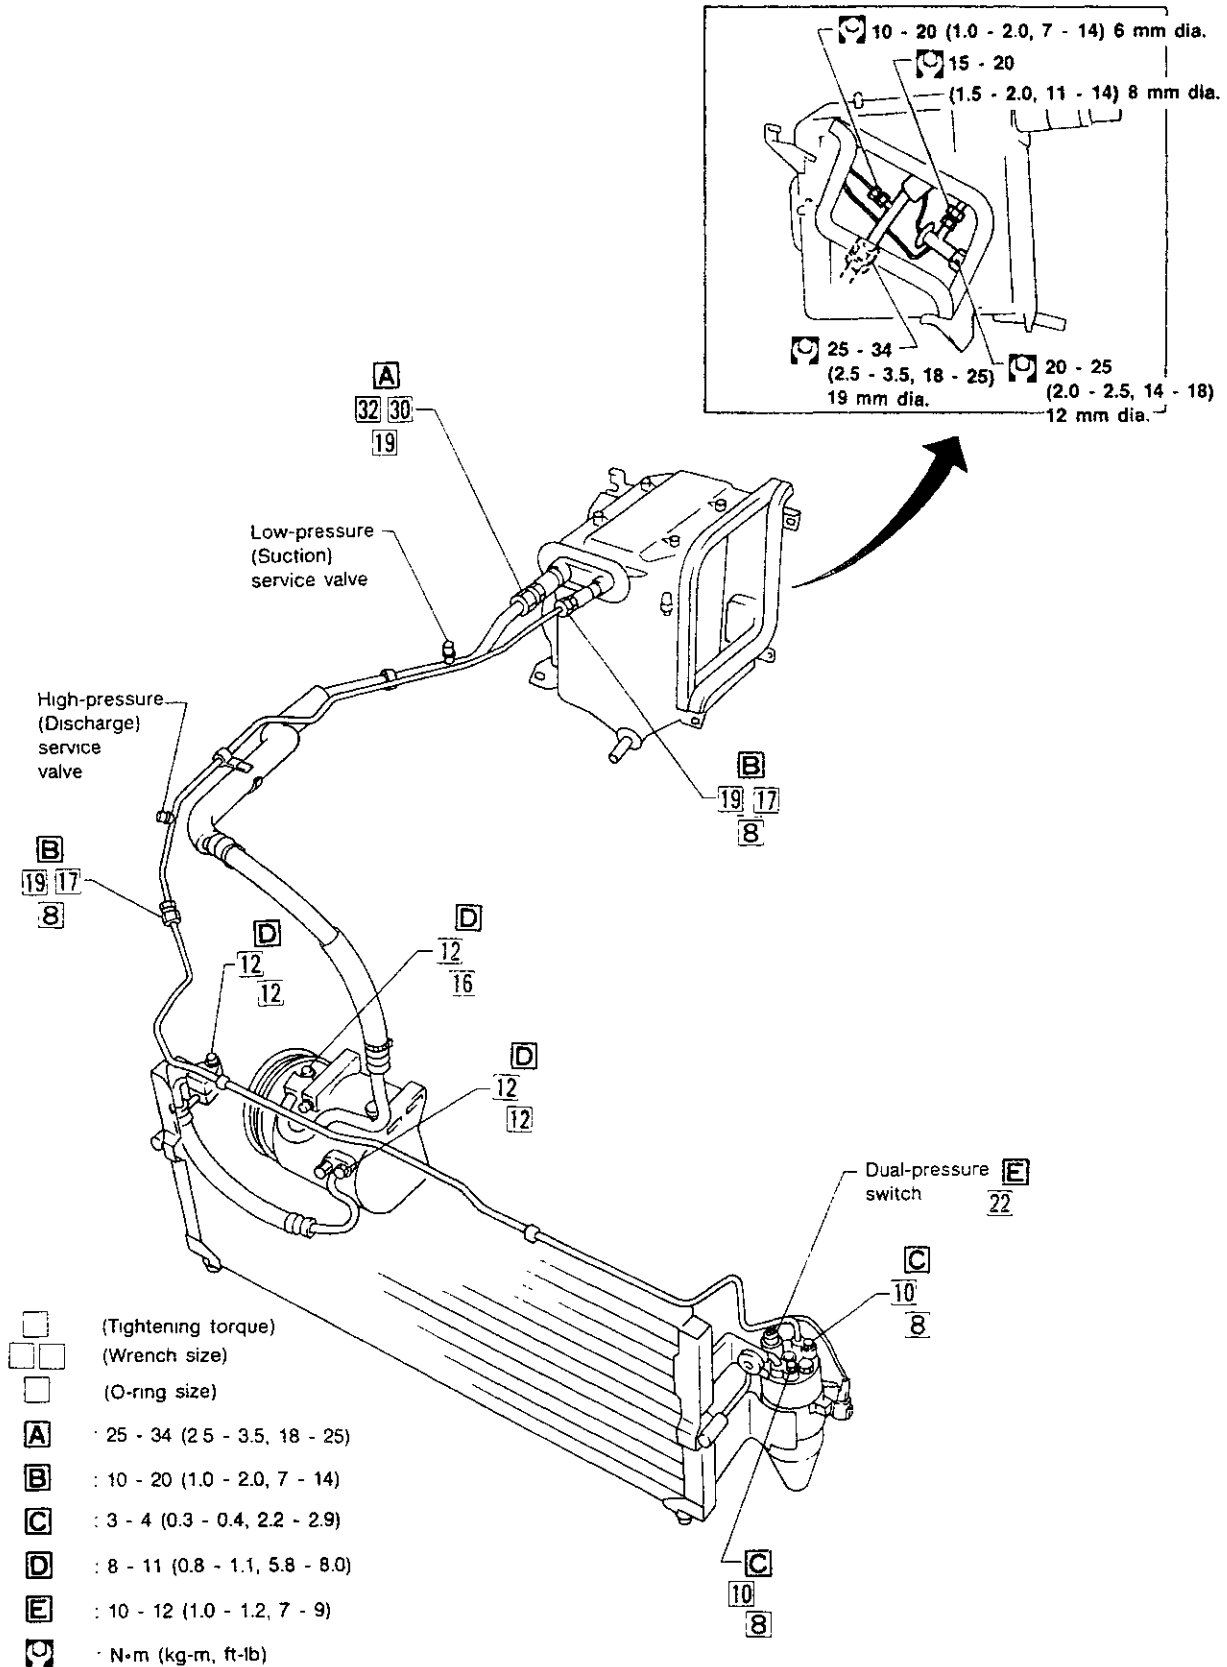


RHA066C

SERVICE PROCEDURES


Refrigerant Lines (Cont'd)

EXCEPT FOR SR20DE ENGINE — R.H.D. MODELS

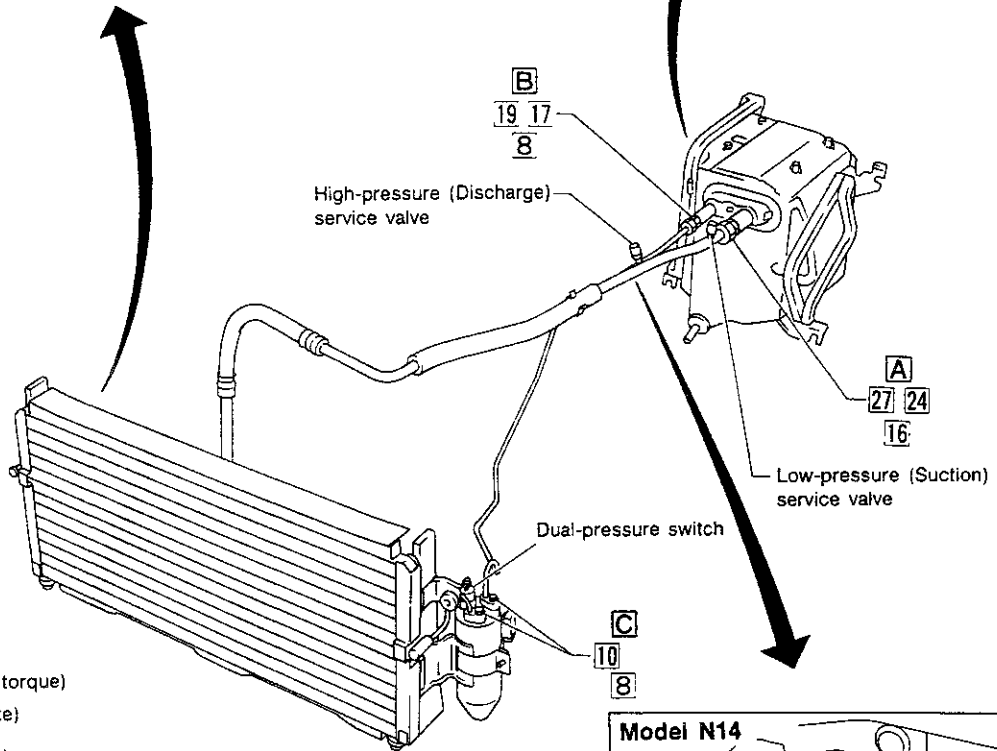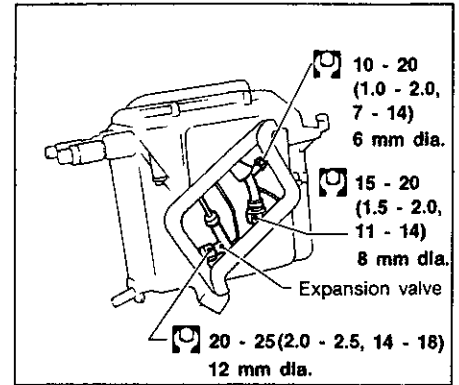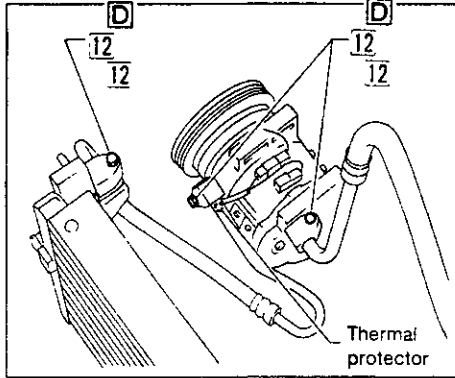

- (Tightening torque)
- (Wrench size)
- (O-ring size)
- A 25 - 34 (2.5 - 3.5, 18 - 25)
- B 10 - 20 (1.0 - 2.0, 7 - 14)
- C 3 - 4 (0.3 - 0.4, 2.2 - 2.9)
- D 8 - 11 (0.8 - 1.1, 5.8 - 8.0)




⊗ : N·m (kg-m, ft-lb)

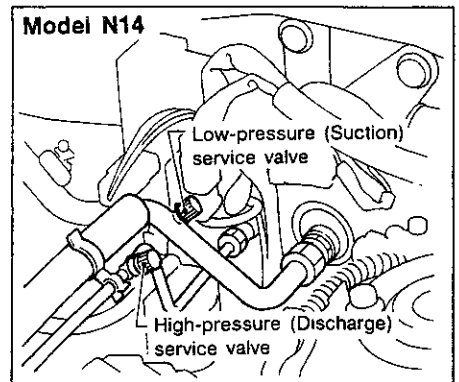

SERVICE PROCEDURES


Refrigerant Lines (Cont'd)

SR20DE ENGINE — R.H.D. MODELS

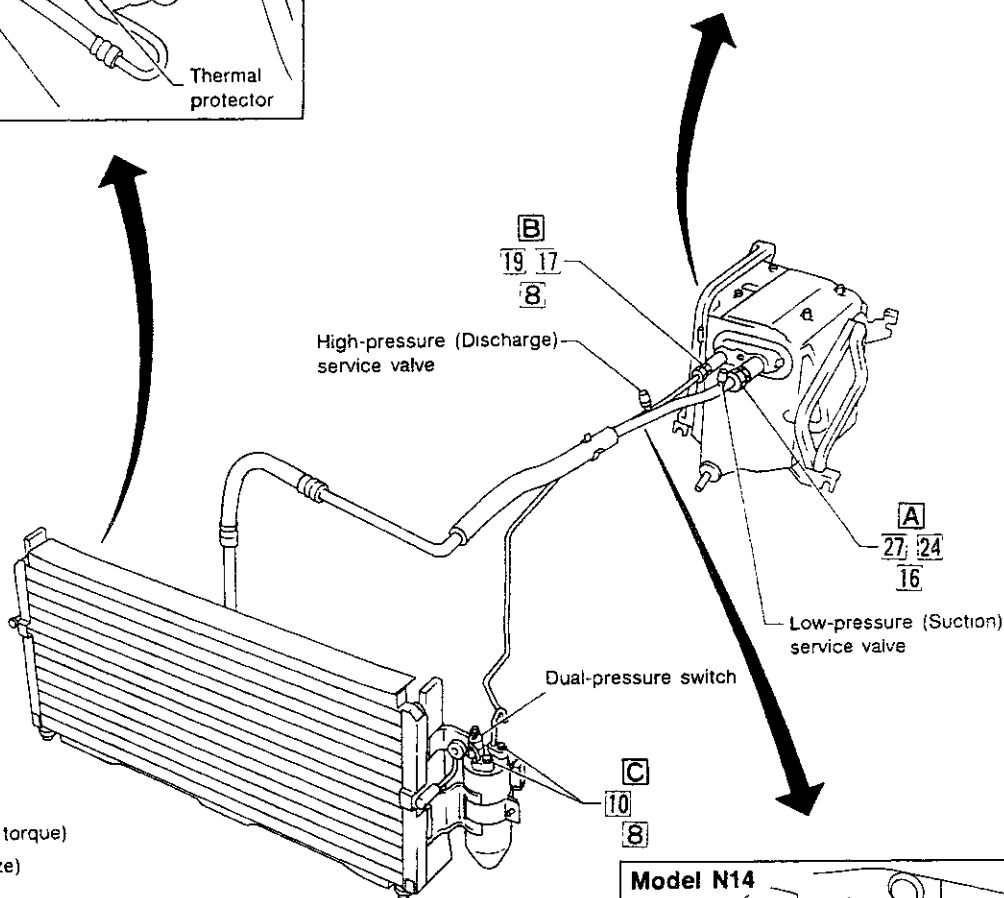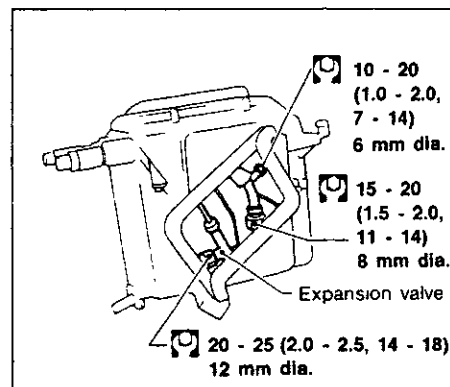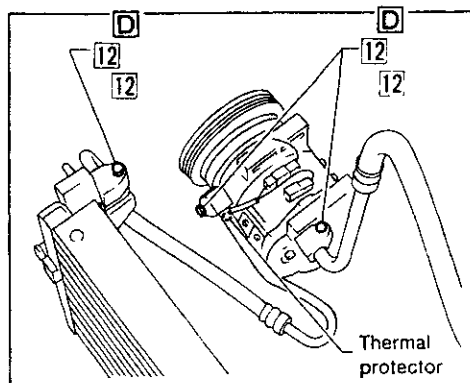

- ☐ (Tightening torque)
☐ (Wrench size)
☐ (O-ring size)
- A** 25 - 34 (2.5 - 3.5, 18 - 25)
B 10 - 20 (1.0 - 2.0, 7 - 14)
C 3 - 4 (0.3 - 0.4, 2.2 - 2.9)
D 8 - 11 (0.8 - 1.1, 5.8 - 8.0)

: N·m (kg-m, ft-lb)

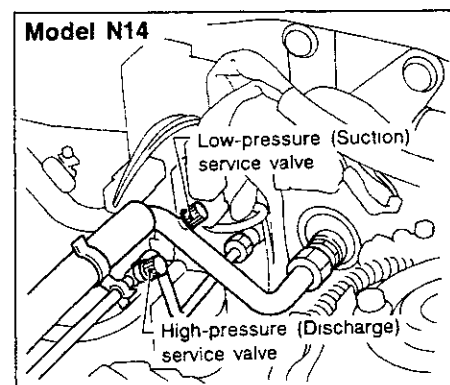


RHA274C

SERVICE PROCEDURES


Compressor Mounting

Except for SR20DE engine models

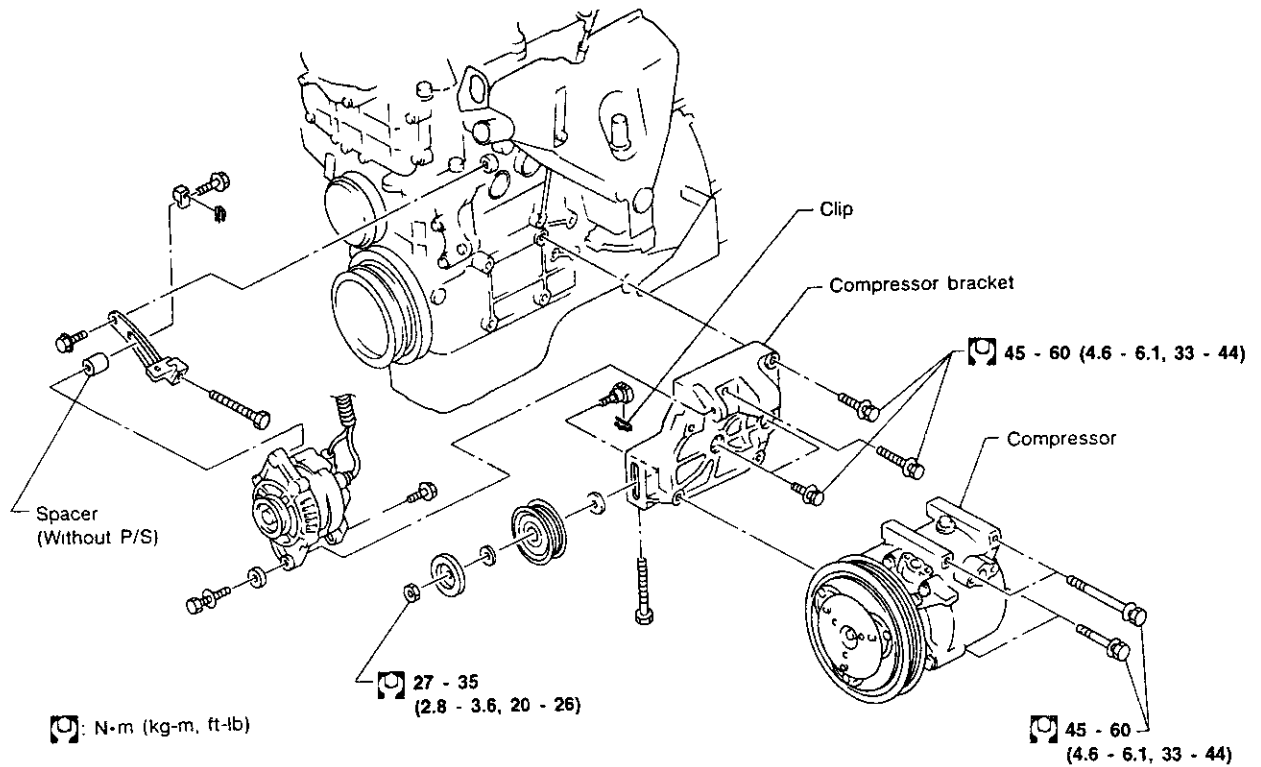


RHA067C

SR20DE engine models

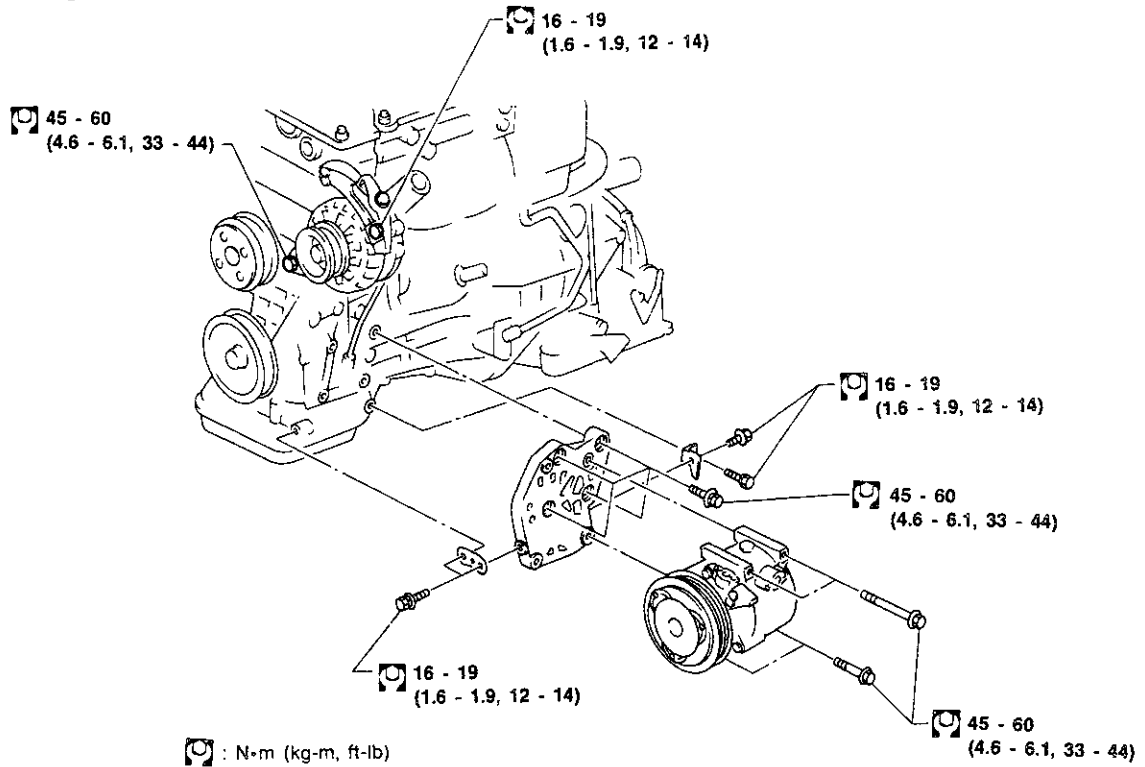

RHA068C

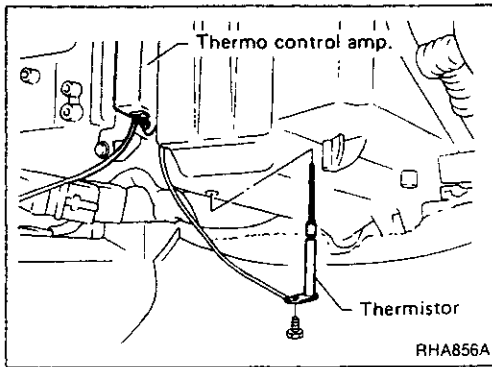

Thermo Control Amp.

REPLACEMENT

Remove screws, which secure thermistor locating stay, from front of cooling unit. Replace thermo control amp. assembly with a new one. (Cooling unit need not be removed during the replacement.)

Belt Tension

- Refer to MA section.


Fast Idle Control Device (F.I.C.D.)

- Refer to EF & EC section.

Maintenance of Oil Quantity in Compressor




The oil used to lubricate the compressor circulates through the system with the refrigerant. Whenever any component of the system is replaced or a large amount of gas leakage occurs, add oil to the compressor to maintain the specified amount. If oil quantity is not maintained properly, the following malfunctions may result:

- Lack of oil: May lead to a seized compressor
- Excessive oil: Inadequate cooling (thermal exchange impeded)

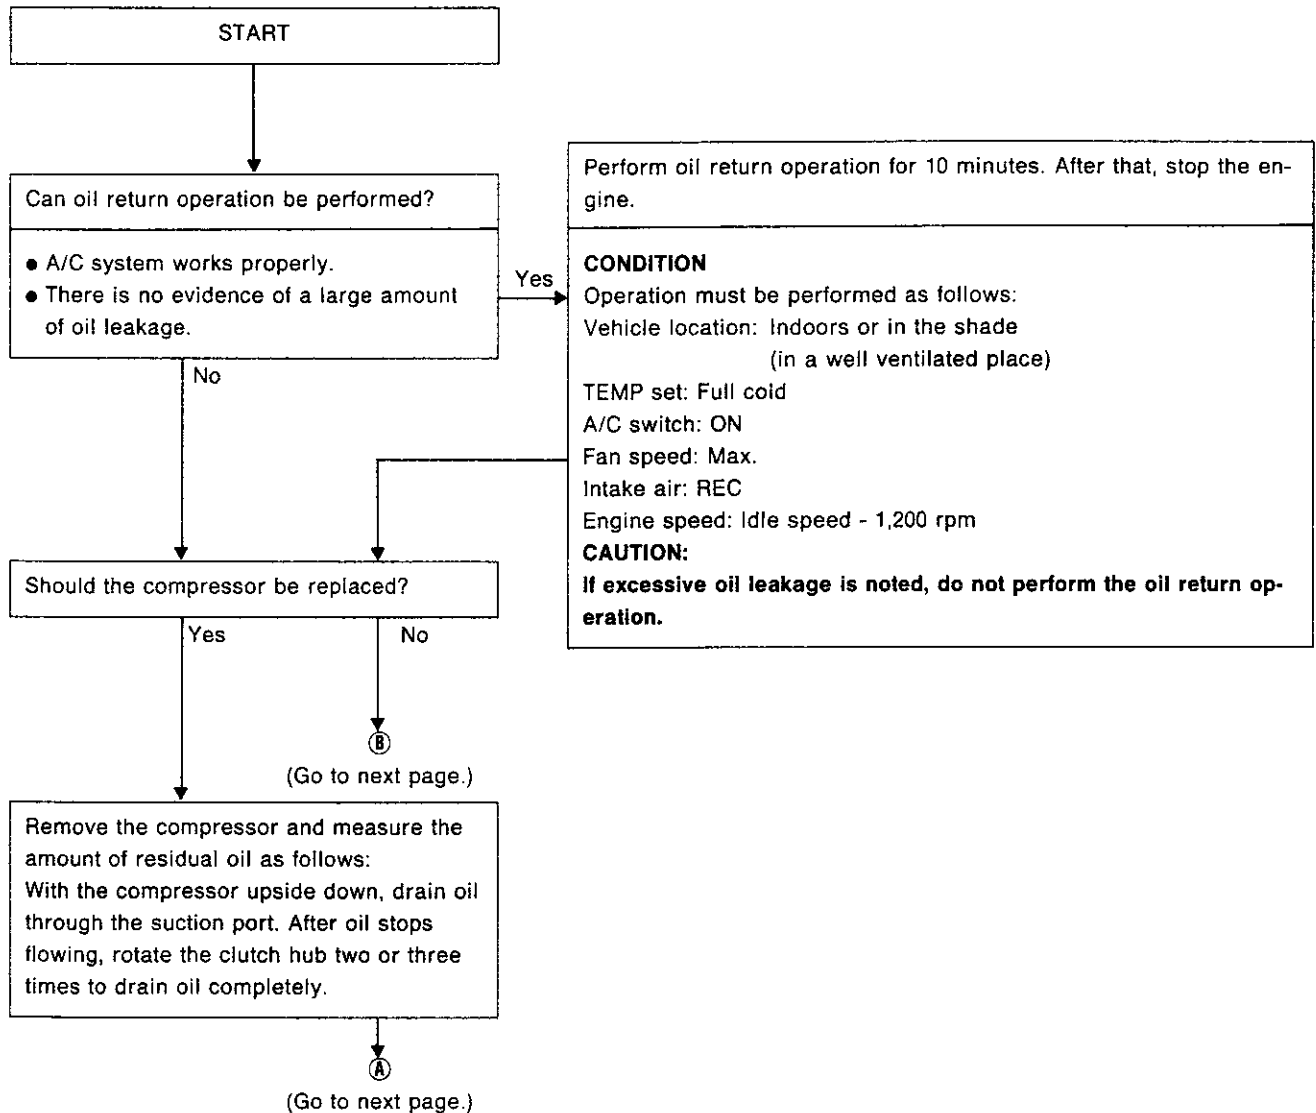

COMPRESSOR OIL — Checking and Adjusting

Maintenance of Oil Quantity in Compressor (Cont'd)

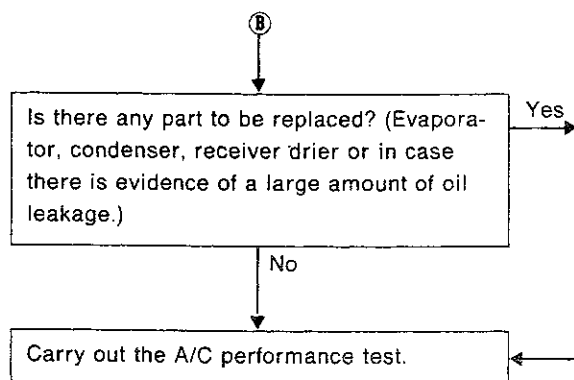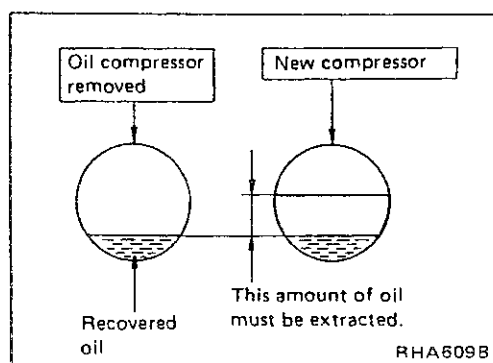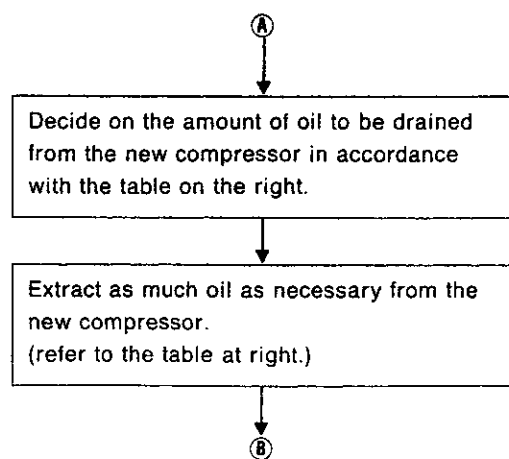

A new compressor is charged with the specified amount of oil (the overall amount needed in the system). So some oil needs to be drained from a new compressor to ensure that the amount of oil in the compressor is the same as was in the old compressor.

Amount of oil to be extracted from new compressor

Unit: ml (Imp fl oz)

Type	Pre-charged amount of oil in new compressor	Recovered amount of oil from old compressor	Amount of oil to be drained from new compressor
DKV14B DKV14C DKV14D	200 (7.0)	Less than 70 (2.5)	110 (3.9)
		Greater than 70 (2.5)	200 (7.0) - [Recovered amount + 20 (0.7)]
NVR140 NVR140S	200 (7.0)	Less than 90 (3.2)	90 (3.2)
		Greater than 90 (3.2)	200 (7.0) - [Recovered amount + 20 (0.7)]
DKS16H DKS16N	200 (7.0)	Less than 130 (4.6)	70 (2.5)
		Greater than 130 (4.6)	200 (7.0) - [Recovered amount + 20 (0.7, 0.7)]
MJS130 MJS170	150 (5.3)	—	80 (2.8)

Pre-charged amount of oil for some models differs from figures listed above. Refer to S.D.S. for each model when servicing compressor oil.

After replacing any of the following major components of the system, be sure to add the correct amount of oil to the system.

Amount of oil to be added

Part replaced	Oil to be added to system		Remarks
	Amount of oil ml (Imp fl oz)	Ratio (%)	
Evaporator	45 - 75 (1.6 - 2.6)	30	—
Condenser	30 - 50 (1.1 - 1.8)	20	—
Receiver drier	15 - 25 (0.5 - 0.9)	10	—
In case of refrigerant leak	30 - 50 (1.1 - 1.8)	—	Large leak
	—	—	Small leak*


*: If refrigerant leak is small, no addition of oil is needed.

"Ratio" in this table indicates the ratio of added oil to the overall amount of oil needed in the system.

Precautions


- Plug all openings to prevent moisture and foreign matter from entering.
- Do not leave compressor on its side or upside down for more than 10 minutes.
- When replacing or repairing compressor, check compressor oil level in system.
- When replacing with a new compressor, drain specified oil from new compressor. Refer to COMPRESSOR OIL.
- Be sure there is no oil or dirt on frictional surface of clutch disc and pulley.
- When replacing compressor clutch, be careful not to scratch shaft or bend pulley.
- When replacing compressor clutch assembly, do not forget BREAK-IN OPERATION.

COMPRESSOR — Model NVR 140S (ATSUGI make)

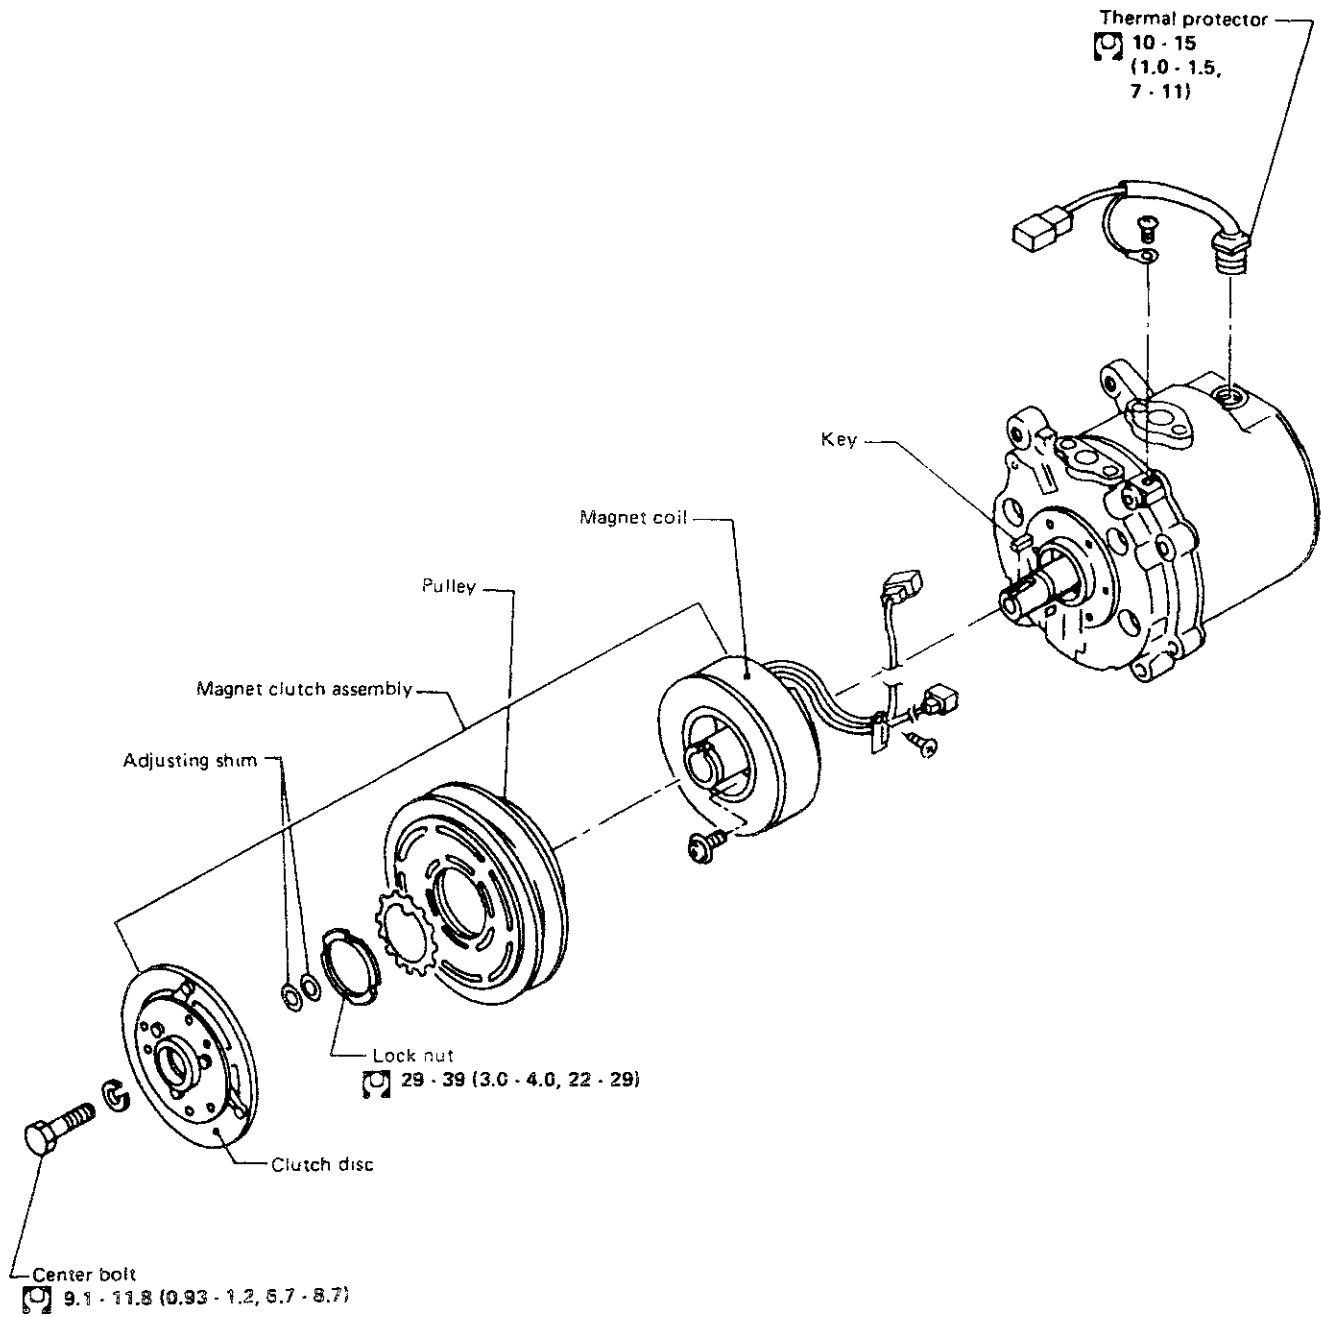

: N·m (kg-m, ft-lb)


RHA283

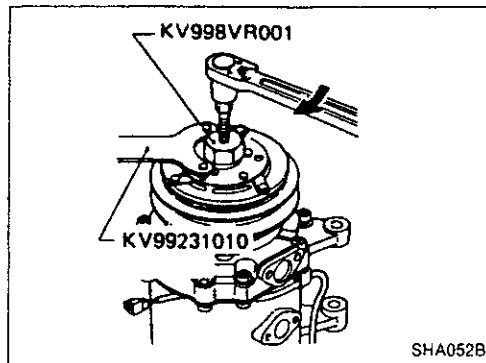


Compressor Clutch

REPLACEMENT

- When removing center bolt, hold clutch disc with clutch disc wrench.
- Using clutch disc puller, clutch disc can be removed.

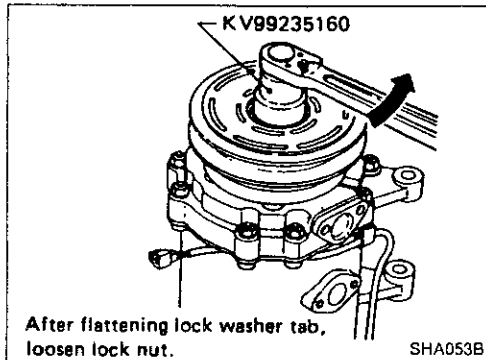

- Bend down pawl of lock washer.
- When removing pulley, remove lock nut with nut wrench.

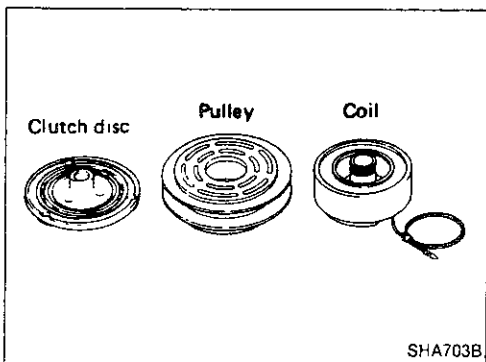

INSPECTION

Clutch disc

If the contact surface shows signs of damage due to excessive heat, the drive plate and pulley should be replaced.

Pulley

Check the appearance of the pulley assembly. If the contact surface of the pulley shows signs of excessive grooving due to slippage, both the pulley and drive plate should be replaced. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

Coil

Check coil for loose connection or cracked insulation.

COMPRESSOR — Model NVR 140S (ATSUGI make)

Compressor Clutch (Cont'd)



ADJUSTMENT

- When assembling clutch disc, adjust disc-to-pulley clearance with shims.

BREAK-IN OPERATION

When replacing compressor clutch assembly, do not forget break-in operation, accomplished by engaging and disengaging the clutch about thirty times.



Break-in operation raises the level of transmitted torque.

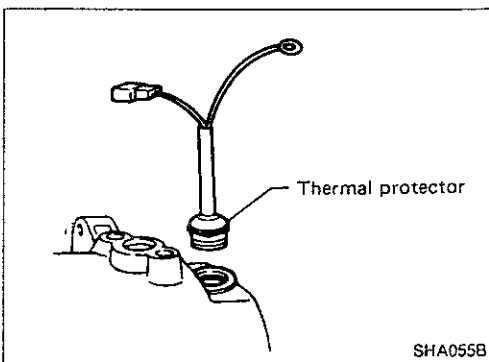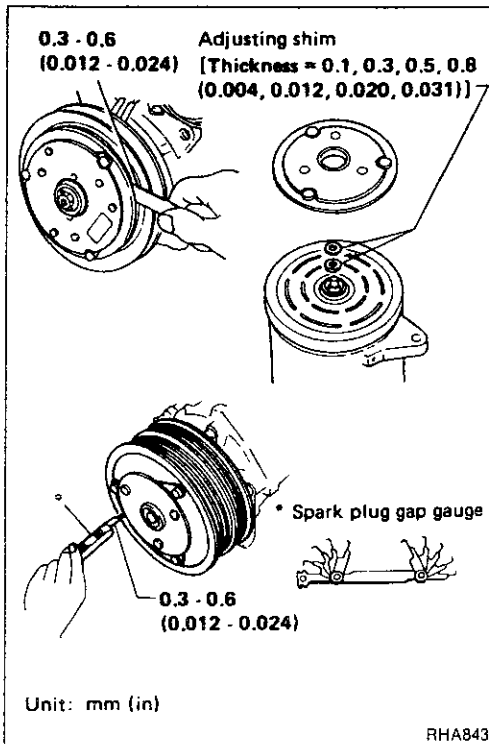

Thermal Protector

- When servicing, do not allow foreign matter to get into compressor.
- Check continuity between two terminals.


COMPRESSOR — Model DKV-14D (ZEXEL make)

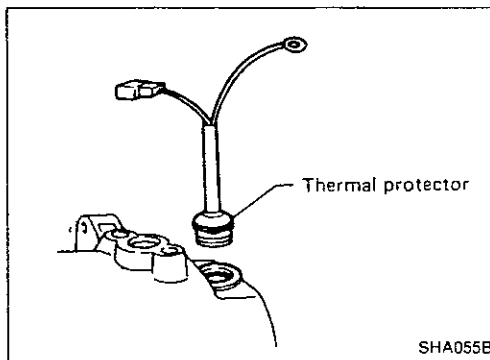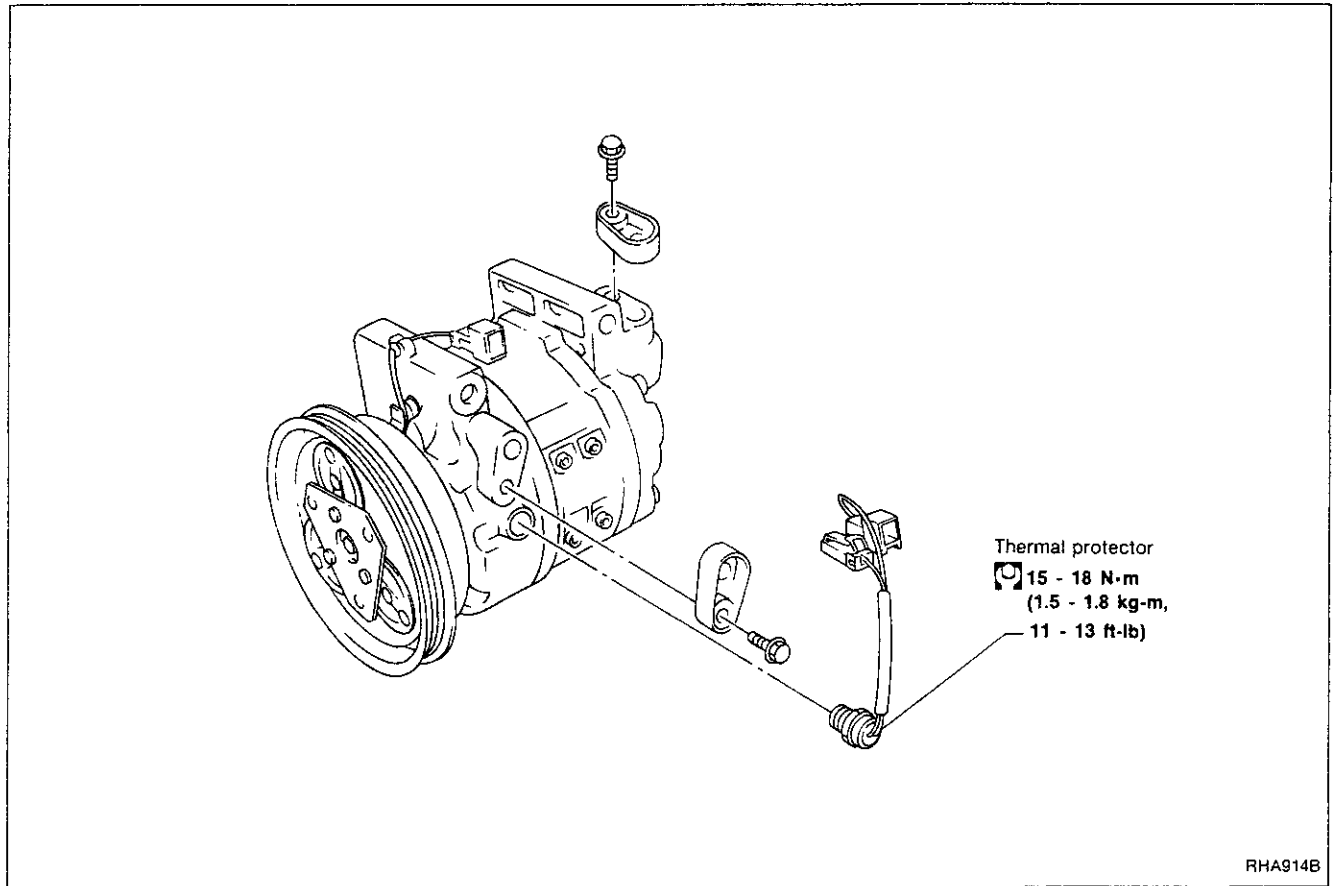


Thermal Protector

- When servicing, do not allow foreign matter to get into compressor.
- Check continuity between two terminals.

COMPRESSOR — Model DKV-14C (ZEXEL make)

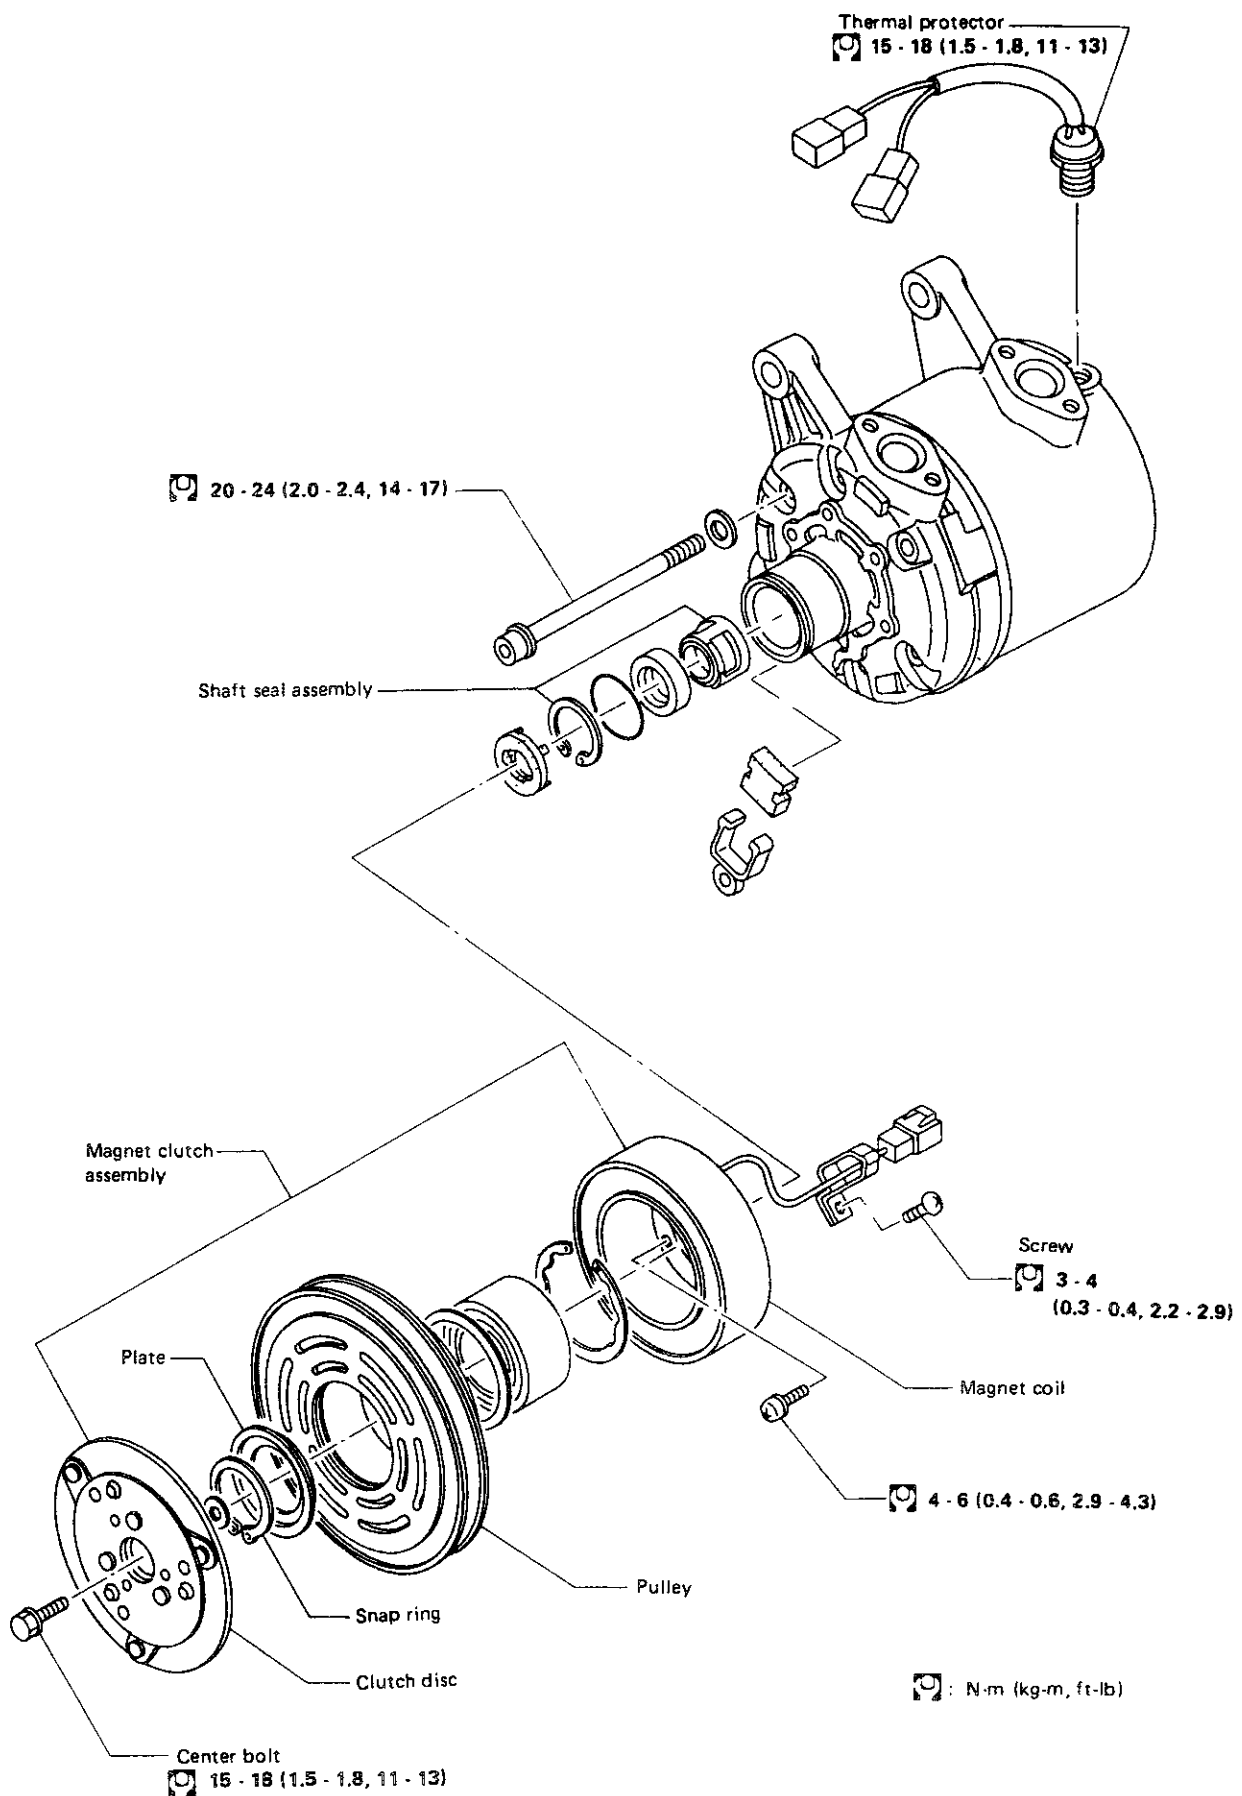


RHA402

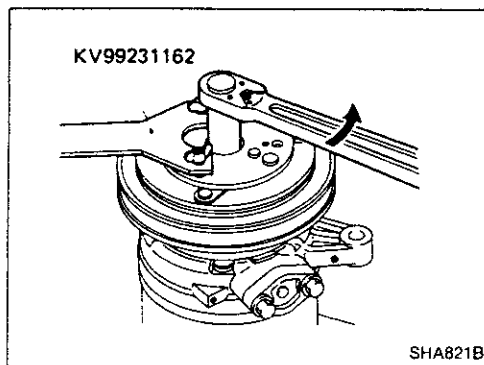


Compressor Clutch

REMOVAL

- When removing center bolt, hold clutch disc with clutch disc wrench.

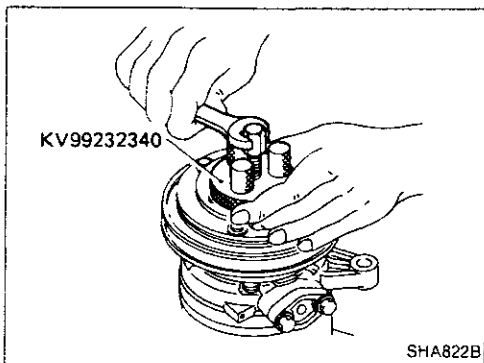

- Using clutch disc puller clutch disc can be removed easily.

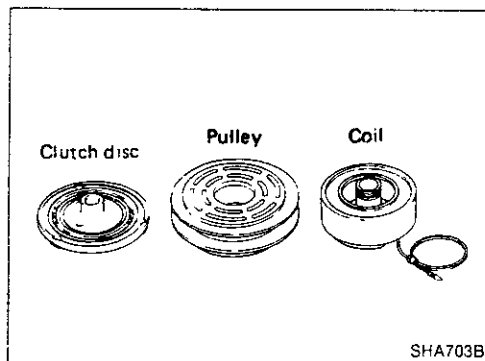

INSPECTION

Clutch disc

If the contact surface shows signs of damage due to excessive heat, the clutch disc and pulley should be replaced.

Pulley

Check the appearance of the pulley assembly. If the contact surface of the pulley shows signs of excessive grooving due to slippage, both the pulley and clutch disc should be replaced. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

Coil


Check coil for loose connection or cracked insulation.

INSTALLATION

- Position coil assembly on compressor body. Be sure that the electrical terminals are reassembled in the original position. Install and tighten coil mounting screws evenly.


COMPRESSOR — Model DKV-14C (ZEXEL make)

Compressor Clutch (Cont'd)

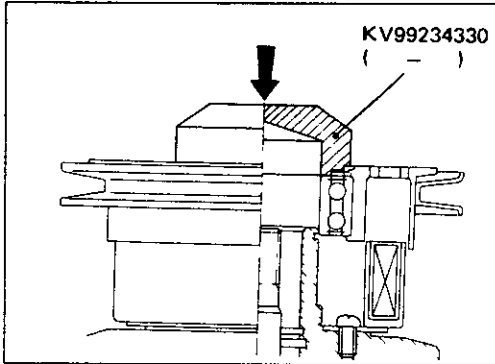


- Press pulley assembly onto the neck of coil assembly using pulley installer.
- Wipe oil thoroughly off the clutch surface.

ADJUSTMENT

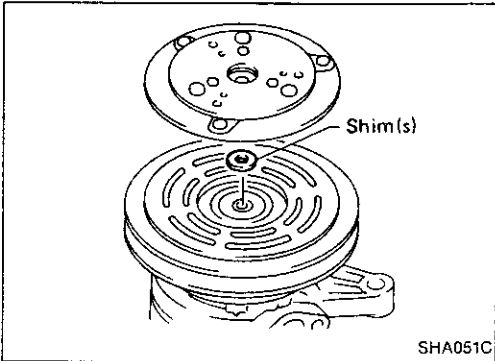

- Select adjusting shim(s) which give(s) the correct clearance between pulley and clutch disc.
- Using a plastic mallet, tape clutch disc in place on drive shaft.
- Do not use excessive force with a plastic mallet or in a press, or internal damages may result.
- Place spring washer and center bolt onto drive shaft. Tighten center bolt to drive clutch wheel onto drive shaft.

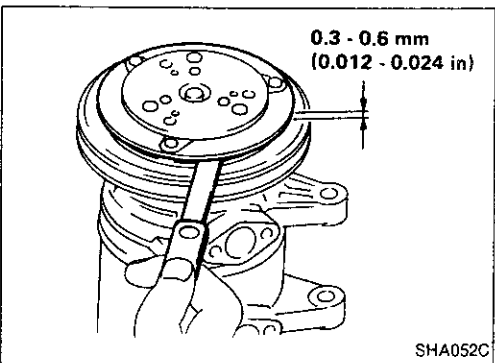

- Check clearance around the entire periphery of clutch disc.
Disc-to-pulley clearance:
0.3 - 0.6 mm (0.012 - 0.024 in)
If the specified clearance is not obtained, replace adjusting spacer and readjust.


BREAK-IN OPERATION

When replacing compressor clutch assembly, do not forget break-in operation, accomplished by engaging and disengaging the clutch about thirty times. Break-in operation raises the level of transmitted torque.


Thermal Protector

INSPECTION

- When servicing, do not allow foreign matter to get into compressor.
- Check continuity between two terminals.

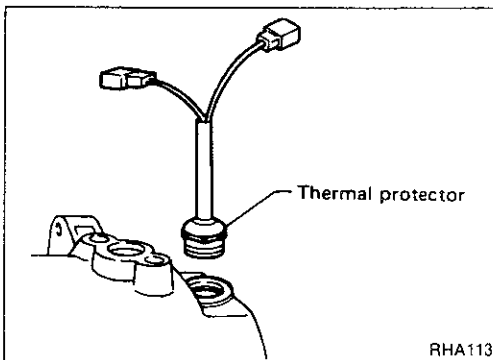

COMPRESSOR — Model MJS130 (HITACHI make)


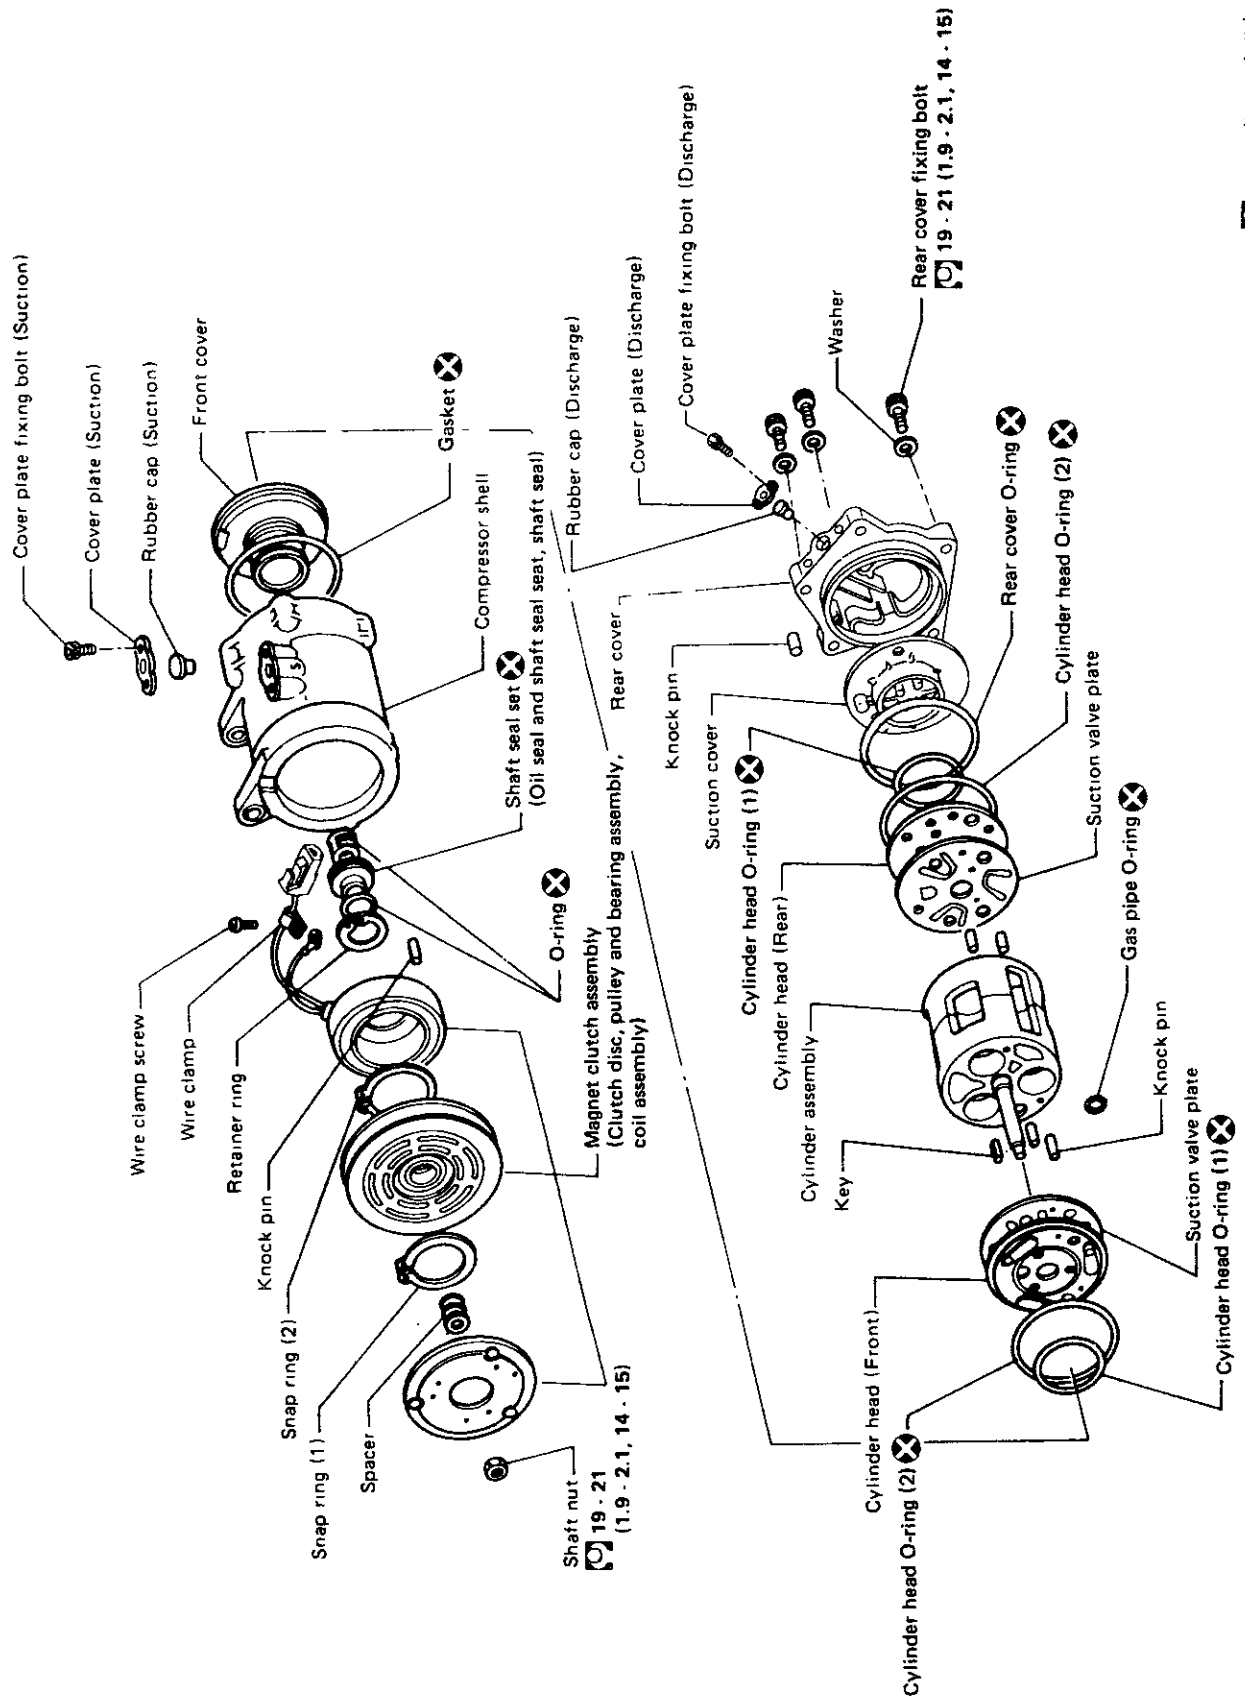


□ : N·m (kg·m, ft·lb)

Compressor Clutch

REMOVAL

- When removing shaft nut, hold clutch disc with clutch disc wrench.
- Using clutch disc puller, clutch disc can be removed easily.

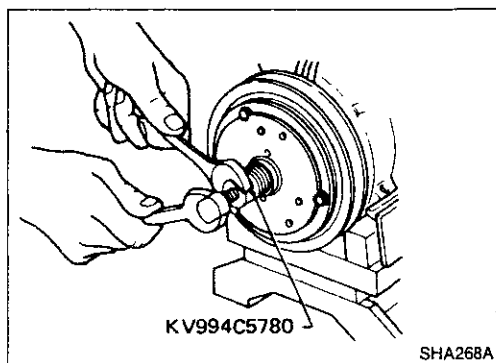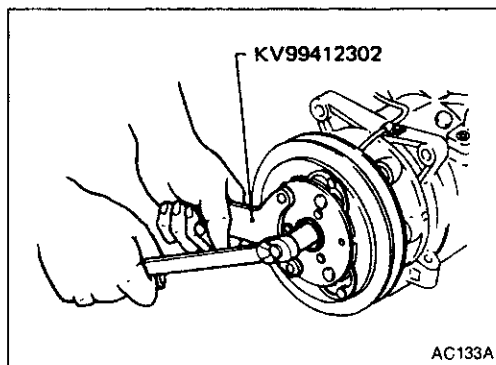

INSPECTION

Clutch disc


If the contact surface shows signs of damage due to excessive heat, the drive plate and pulley should be replaced.

Pulley

Check the appearance of the pulley assembly. If the contact surface of the pulley shows signs of excessive grooving due to slippage, both the pulley and drive plate should be replaced. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

Coil

Check coil for loose connection or cracked insulation.

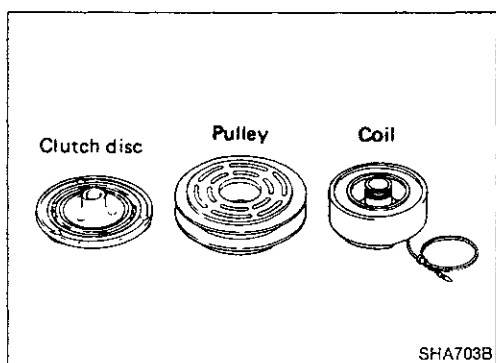


ADJUSTMENT


- When assembling clutch disc, adjust disc-to-pulley clearance with shims.

BREAK-IN OPERATION

When replacing compressor clutch assembly, do not forget break-in operation, accomplished by engaging and disengaging the clutch about thirty times. Break-in operation raises the level of transmitted torque.

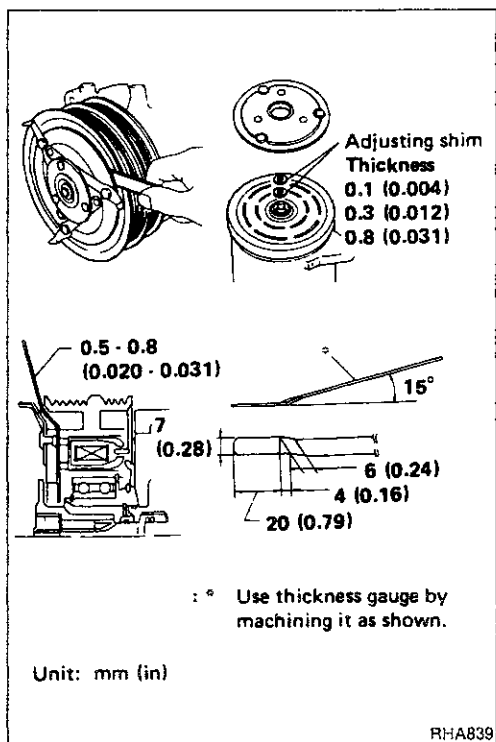

COMPRESSOR — Model MJS130 (HITACHI make)

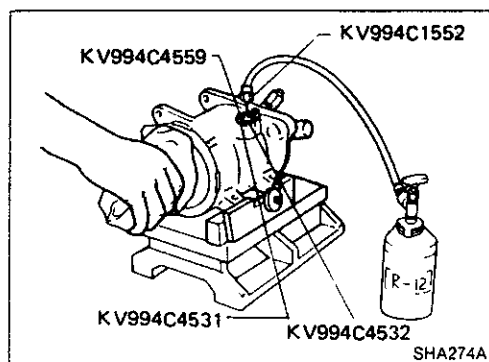


Shaft Seal

REMOVAL


- Before disassembling, be sure to measure the amount of oil. After assembling, charge with the same amount of new oil.
- When removing seal, apply pressure with refrigerant.

CAUTION:

Do not use air to prevent entry of moisture, dust, etc.

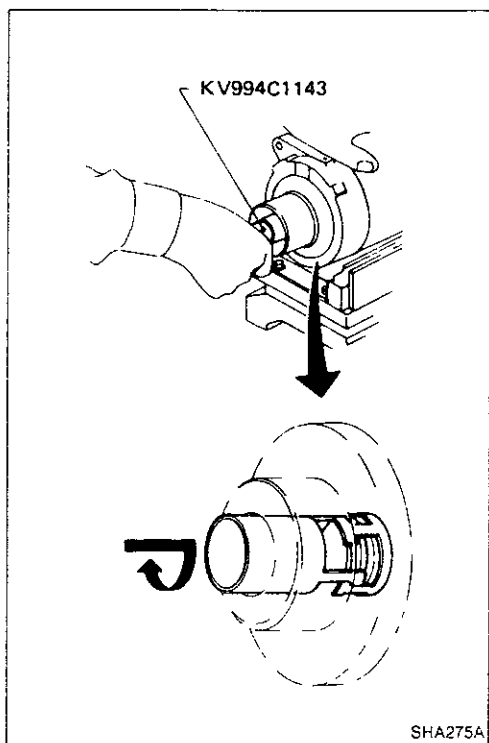


- Using shaft seal remover and installer, depress carbon seal and hook the case of shaft seal.

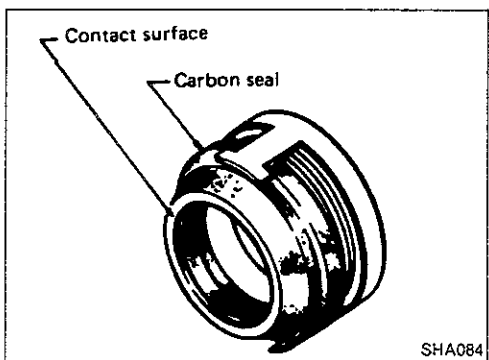

INSPECTION

- Check the carbon seal surface of shaft seal for damage.

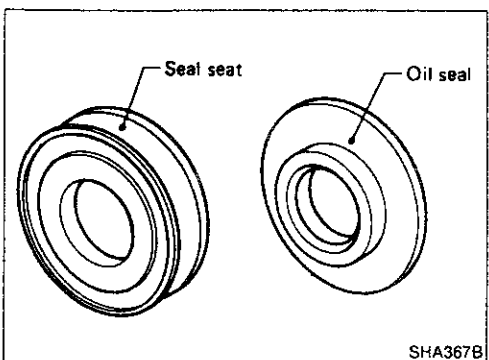


- Check O-ring and the carbon seal contact surface of shaft seal seat for damage. Make sure the O-ring contact surface at front cover is not damaged.

Shaft Seal (Cont'd)

INSTALLATION


- When installing shaft seal;
 - 1) Cap shaft seal pilot to the top end of compressor shaft.
 - 2) Using shaft seal remover and installer, insert shaft seal with shaft seal case and shaft cutout aligned.Apply force to turn the seal somewhat to the left and right. Insure that shaft seal seats properly in the shaft cutout.

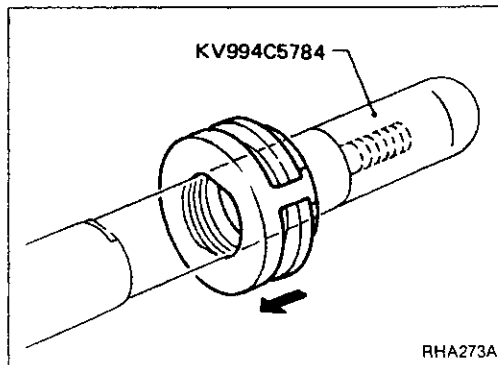

Cylinder Head, Valve and Cylinder

REMOVAL (Rear)


- Using Allen socket, remove rear cover.

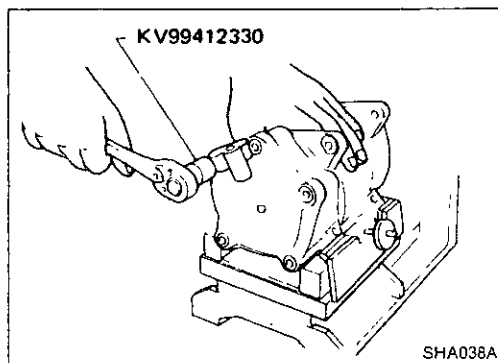

- Using cylinder head remover, remove rear cylinder head.

INSPECTION

- Check suction valve plate and cylinder head for signs of damage.

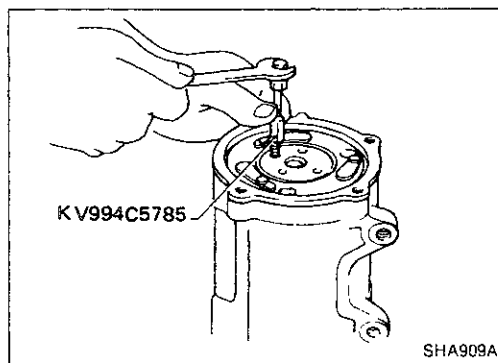


REMOVAL (Front)

- With the front facing downward, support compressor shell. Using a plastic mallet, tap at the rear end of the shell flange, driving shell straight downward.
- Detach front cover from cylinder assembly.

INSPECTION



- Check suction valve plate and cylinder head for signs of damage.
- Check to make sure contact surfaces of cylinders, compressor shaft and compressor shell are free from any sign of scratches.

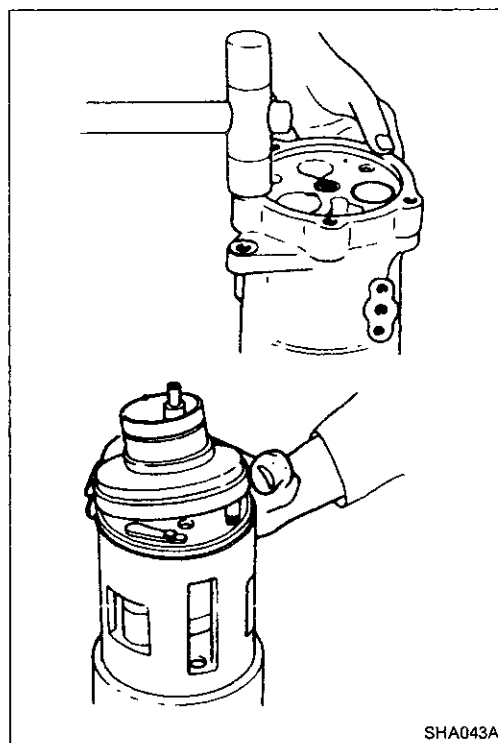


Cylinder Head, Valve and Cylinder (Cont'd)

INSTALLATION

1. Front cover must be installed so that the cutout portions of front cover and shell are aligned.
For this purpose, install front cover on cylinder head so that angle between threaded hole in front cover and low-pressure side refrigerant passage in cylinder head is about 60°.

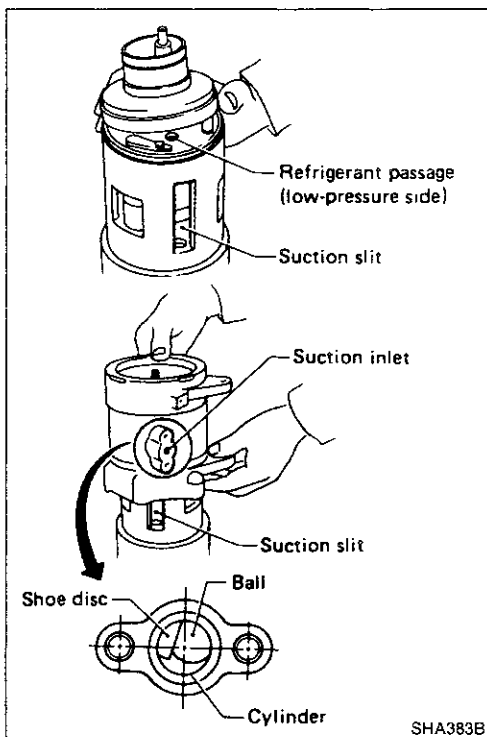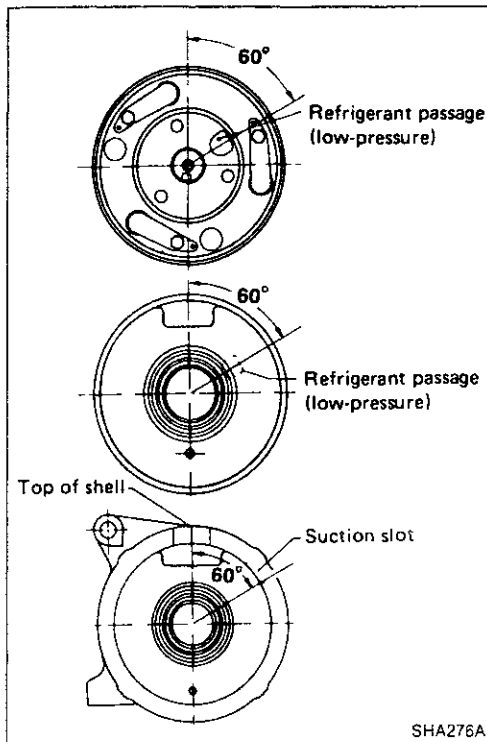



2. When installing shell on cylinder, adjust position of shell so that suction inlet of shell opens in the same direction as suction slit of cylinder visible in suction inlet by removing suction valve.

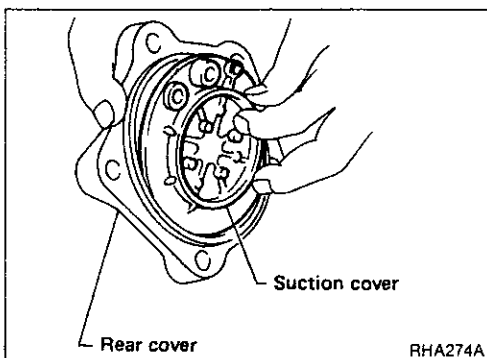

- When installing suction cover to rear cover, align knock pin.

Cylinder Head, Valve and Cylinder (Cont'd)

- Using Allen socket, install rear cover.

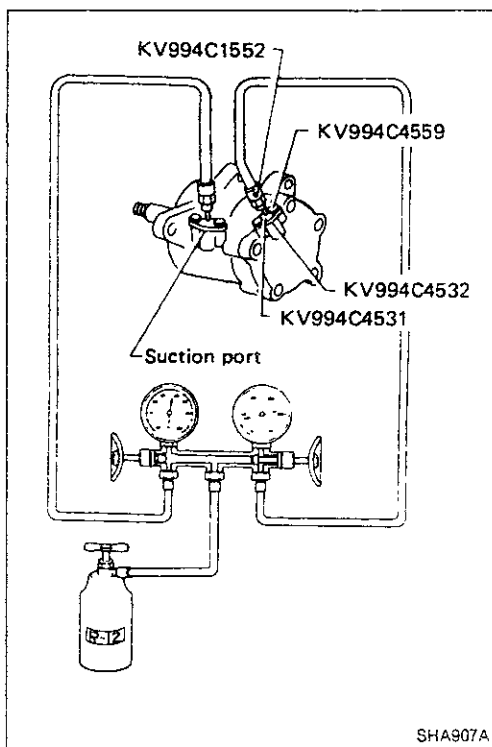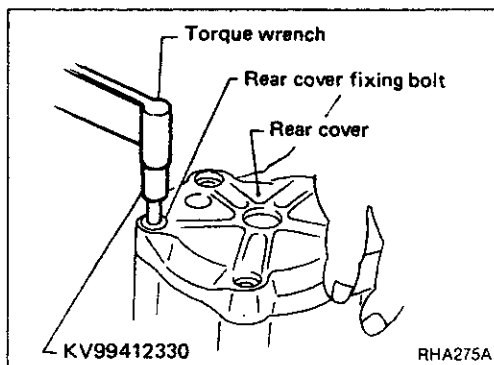

Leak Test

- Charge refrigerant from suction side and evacuate air from discharge side. Then conduct leak test.

TROUBLE DIAGNOSES

Contents

Symptom Chart	HA- 62
Preliminary Check	HA- 64
PRELIMINARY CHECK 1: FOR L.H.D. MODEL ONLY (Intake door is not set at "FRESH" in DEF or F/D mode.)	HA- 64
PRELIMINARY CHECK 2 (A/C does not blow cold air.)	HA- 65
PRELIMINARY CHECK 3 (Air outlet does not change.)	HA- 66
PRELIMINARY CHECK 4 (Noise)	HA- 67
A/C Component Layout	HA- 68
Harness Layout for A/C System	HA- 70
Circuit Diagram for Quick Pinpoint Check	HA- 72
Wiring Diagram	HA- 84
Main Power Supply and Ground Circuit Check	HA- 99
Diagnostic Procedure 1 (SYMPTOM: Blower motor does not rotate.)	HA-101
Diagnostic Procedure 2 (SYMPTOM: Air outlet does not change. — For push control type)	HA-103
Diagnostic Procedure 3 (SYMPTOM: Intake door does not change. — For push control type)	HA-105
Diagnostic Procedure 4 (SYMPTOM: Magnet clutch does not operate when A/C switch and fan switch are ON. — GA16DE and SR20DE engine models)	HA-106
Diagnostic Procedure 5 (SYMPTOM: Magnet clutch does not operate when A/C switch and fan switch are ON. — Except for GA16DE and SR20DE engine models)	HA-110
Diagnostic Procedure 6 (SYMPTOM: Illumination or indicators of push control unit do not come on. — For push control type)	HA-114
Electrical Components Inspection	HA-118

TROUBLE DIAGNOSES

Symptom Chart

DIAGNOSTIC TABLE

PROCEDURE	Preliminary Check				Diagnostic Procedure						Main Power Supply and Ground Circuit Check				
REFERENCE PAGE	HA-64	HA-65	HA-66	HA-67	HA-101	HA-103	HA-105	HA-106	HA-110	HA-114	HA-99	HA-99	HA-99	HA-100	HA-99
SYMPTOM	Preliminary check 1: For L.H.D. model only	Preliminary check 2	Preliminary check 3	Preliminary check 4	Diagnostic procedure 1	Diagnostic procedure 2: For push control type	Diagnostic procedure 3: For push control type	Diagnostic procedure 4: For GA16DE and SR20DE engine models	Diagnostic procedure 5: Except for GA16DE and SR20DE engine models	Diagnostic procedure 6: For push control type	20A Fuses: For L.H.D. model only	15A Fuses: For R.H.D. model only	10A Fuse	Push control unit	Thermo control amp.
A/C does not blow cold air.		①			○			○	○		○	○	○		○
Blower motor does not rotate.		①			②						○	○			
Air outlet does not change.			①			②							○	○	
Intake door does not change.							①						○	○	
Intake door is not set at "FRESH" in DEF or F/D mode. (L.H.D. model only)	①						○						○	○	
Magnet clutch does not operate when A/C switch and fan switch are ON.		①						②	②				○		○
Illumination or indicators of push control unit do not come on.										①			○		
Noise				①											

① , ② : The number means checking order.

○: As for checking order, refer to each flow chart. (It depends on malfunctioning portion.)

TROUBLE DIAGNOSES

Symptom Chart (Cont'd)


Electrical Components Inspection

										Blower motor	HA-120
										Resistor	HA-120
										A/C switch	HA-118
										Push control unit	—
											—
											—
											—
											—
											—
										Fan switch	HA-120
										Mode door motor	—
										Intake door motor	—
										A/C relay	HA-119
										Thermo control amp.	HA-119
										Dual-pressure switch	HA-118
										Compressor	—
											HA-119
										Thermal protector	Refer to EF & EC section
										E.C.C.S. control unit	Refer to EL section
										Illumination system	—
										Knob illumination	—
										Harness	—

Preliminary Check

PRELIMINARY CHECK 1: FOR L.H.D. MODEL ONLY

Intake door is not set at "FRESH" in DEF or F/D mode.

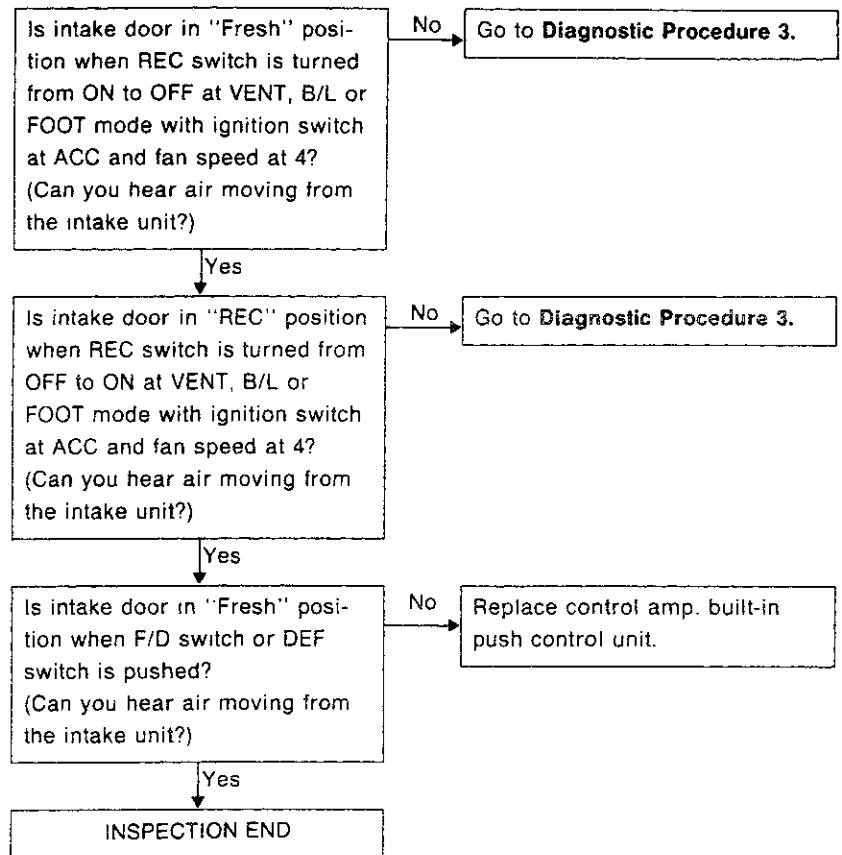


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

PRELIMINARY CHECK 2

A/C does not blow cold air.

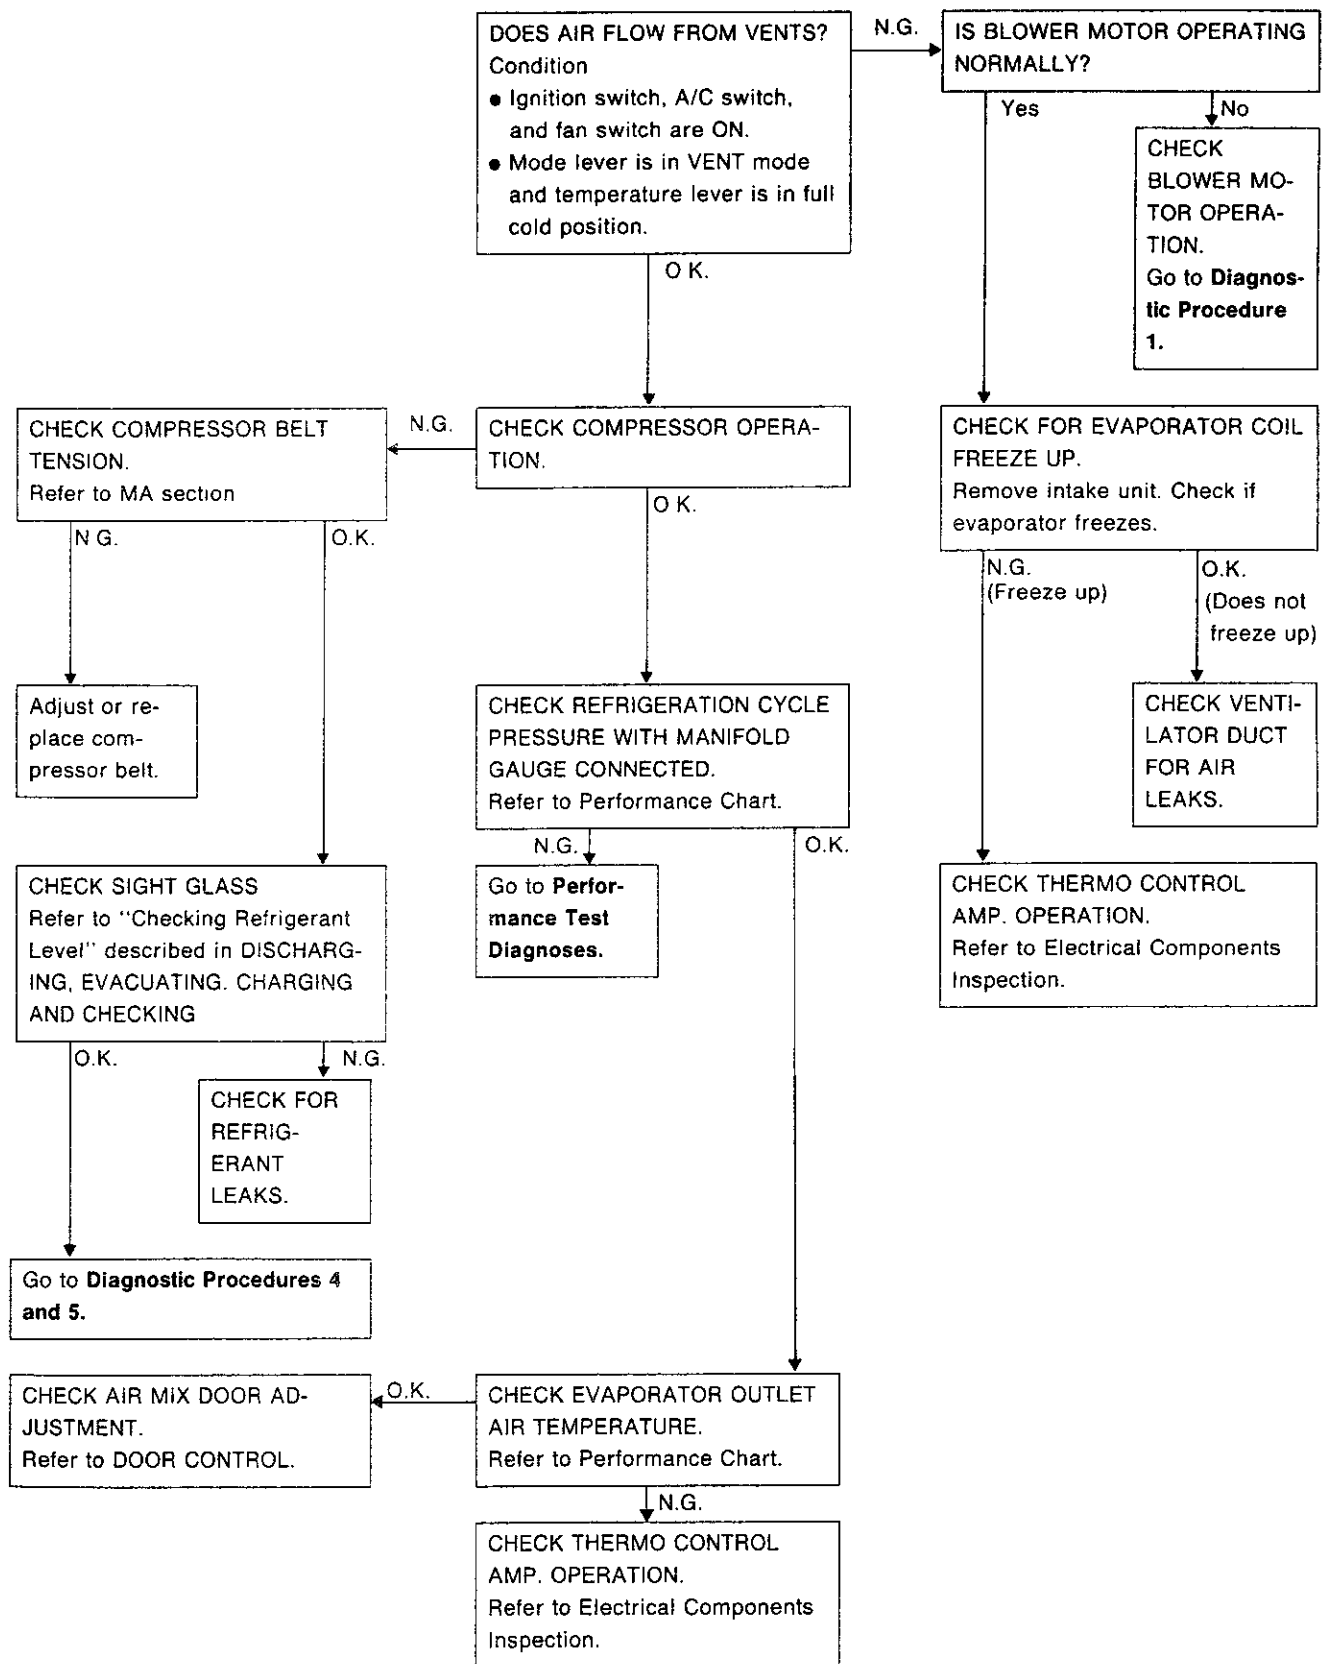

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

PRELIMINARY CHECK 3

Air outlet does not change.

DOES AIR COME OUT FROM EACH DUCT NORMALLY WHEN EACH MODE SWITCH IS PUSHED WITH IGNITION SWITCH AT ACC?


No

Go to **Diagnostic Procedure 2.**


		Indicator illuminates					Air outlet
							
Mode		○					VENT
			○				FOOT & VENT
				○			FOOT & DEF
					○		FOOT & DEF
						○	DEF

Air distribution ratios

Except Europe models

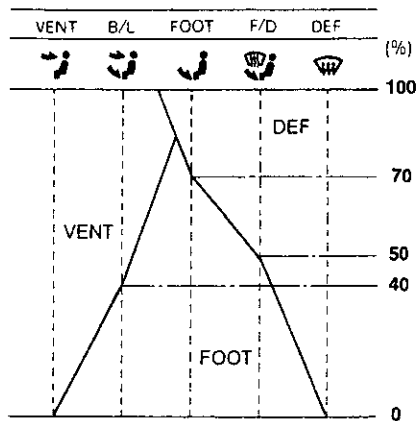

Europe models

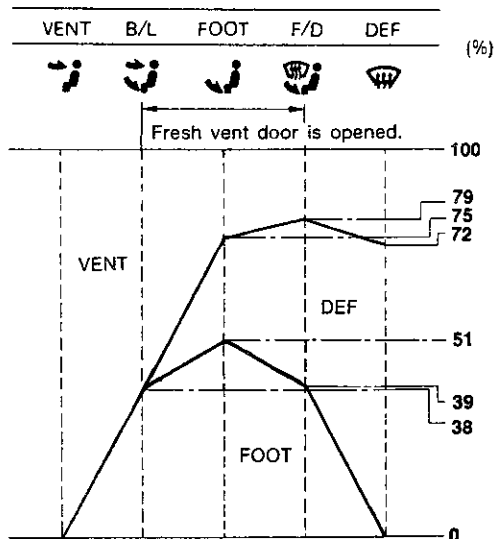

Yes


INSPECTION END

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

PRELIMINARY CHECK 4

Noise

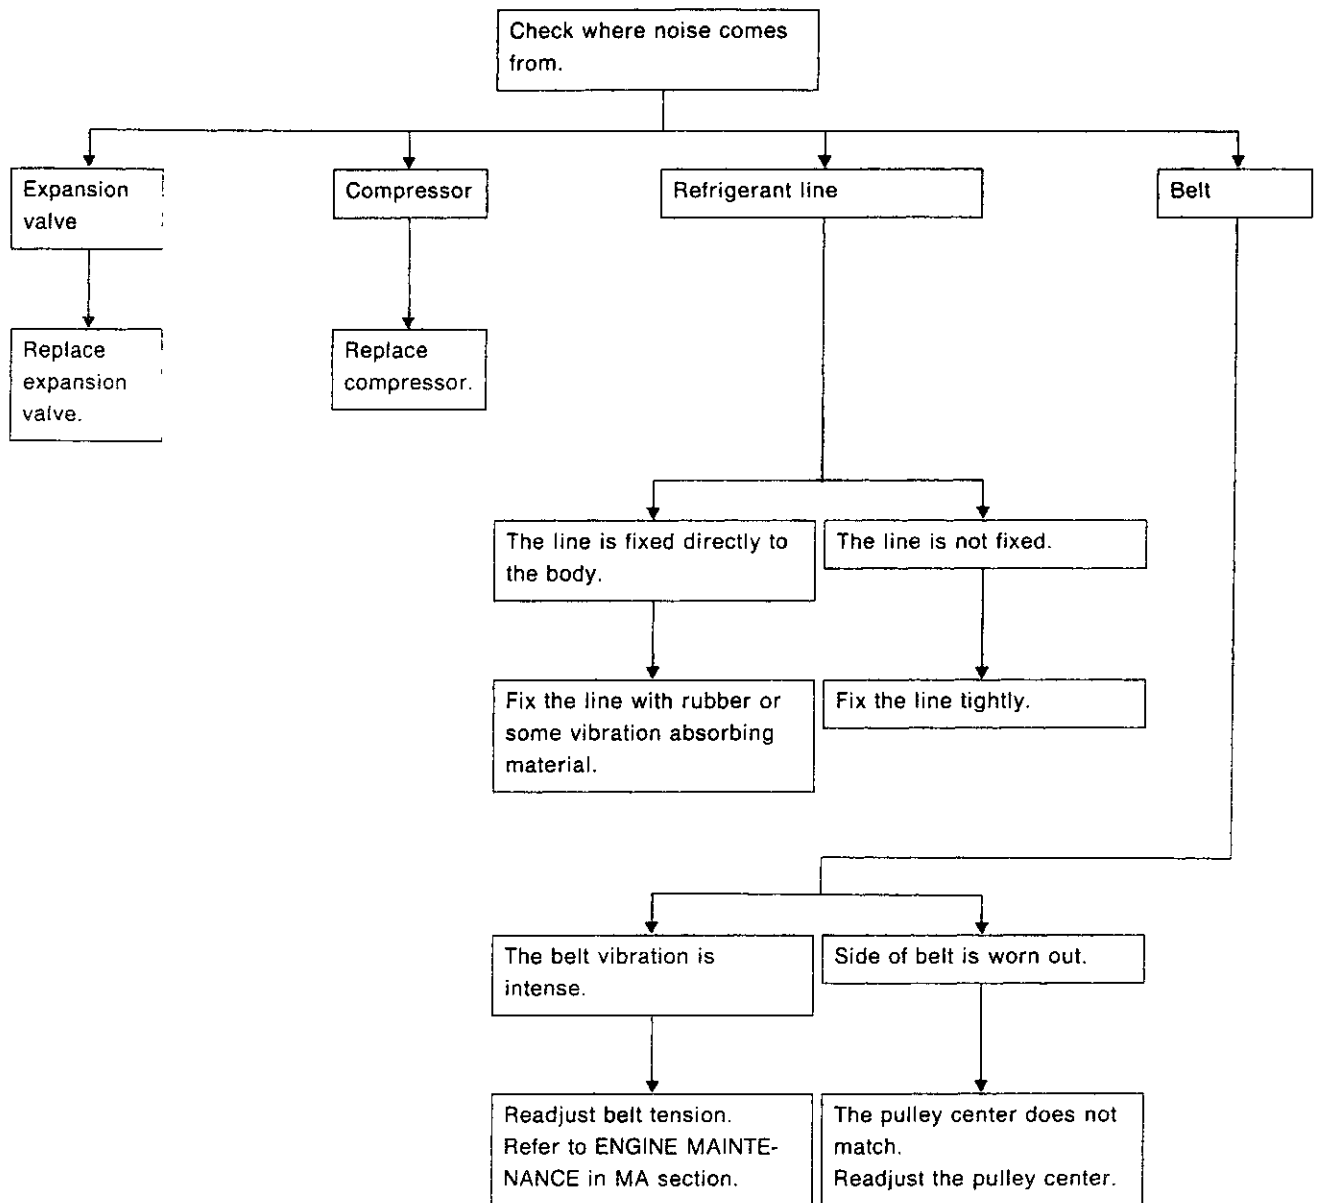


TROUBLE DIAGNOSES


A/C Component Layout

ENGINE COMPARTMENT






Model B13

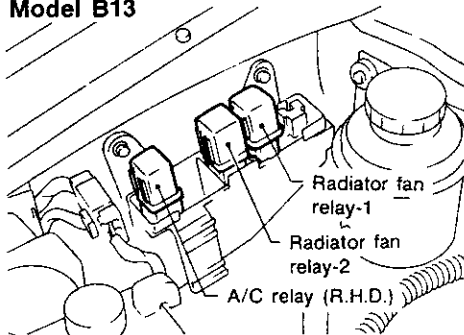

Model B13

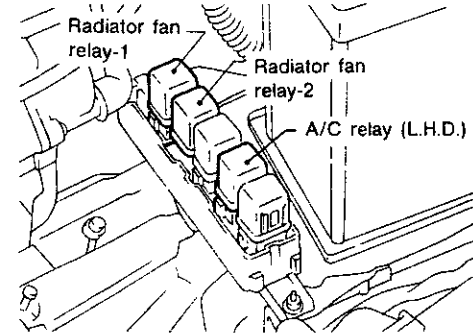

Model N14

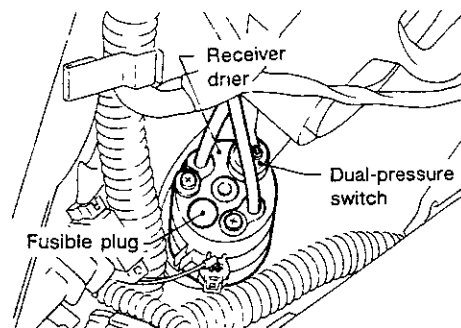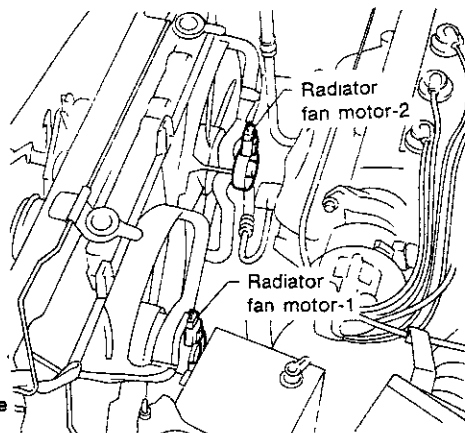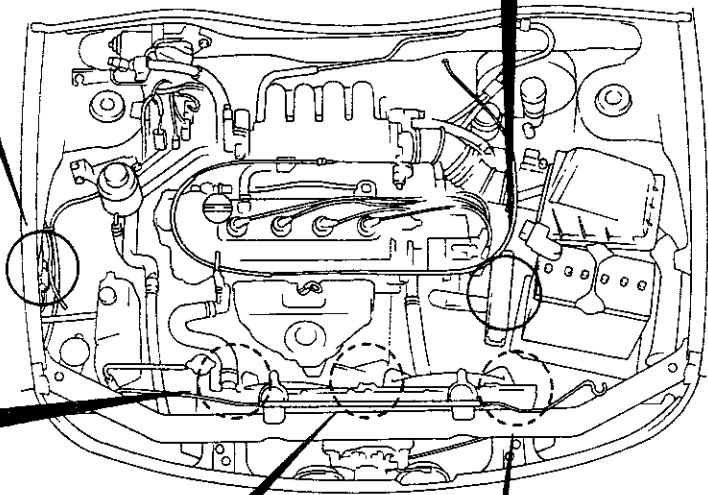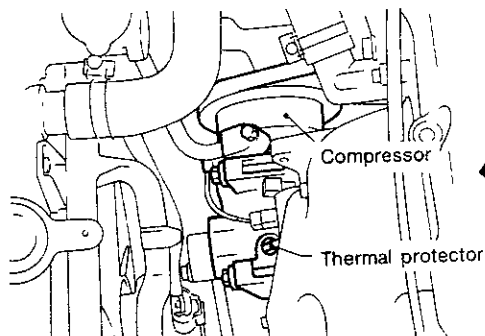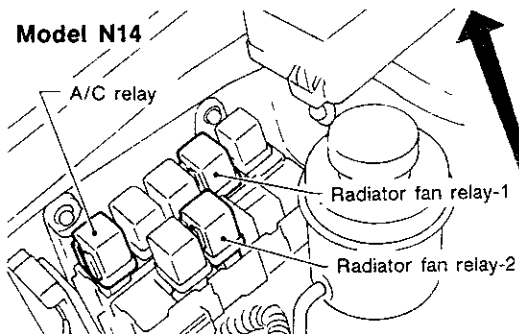


This illustration is for L.H. drive models.
R.H. drive models are basically the same.

TROUBLE DIAGNOSES

A/C Component Layout (Cont'd)


PASSENGER COMPARTMENT

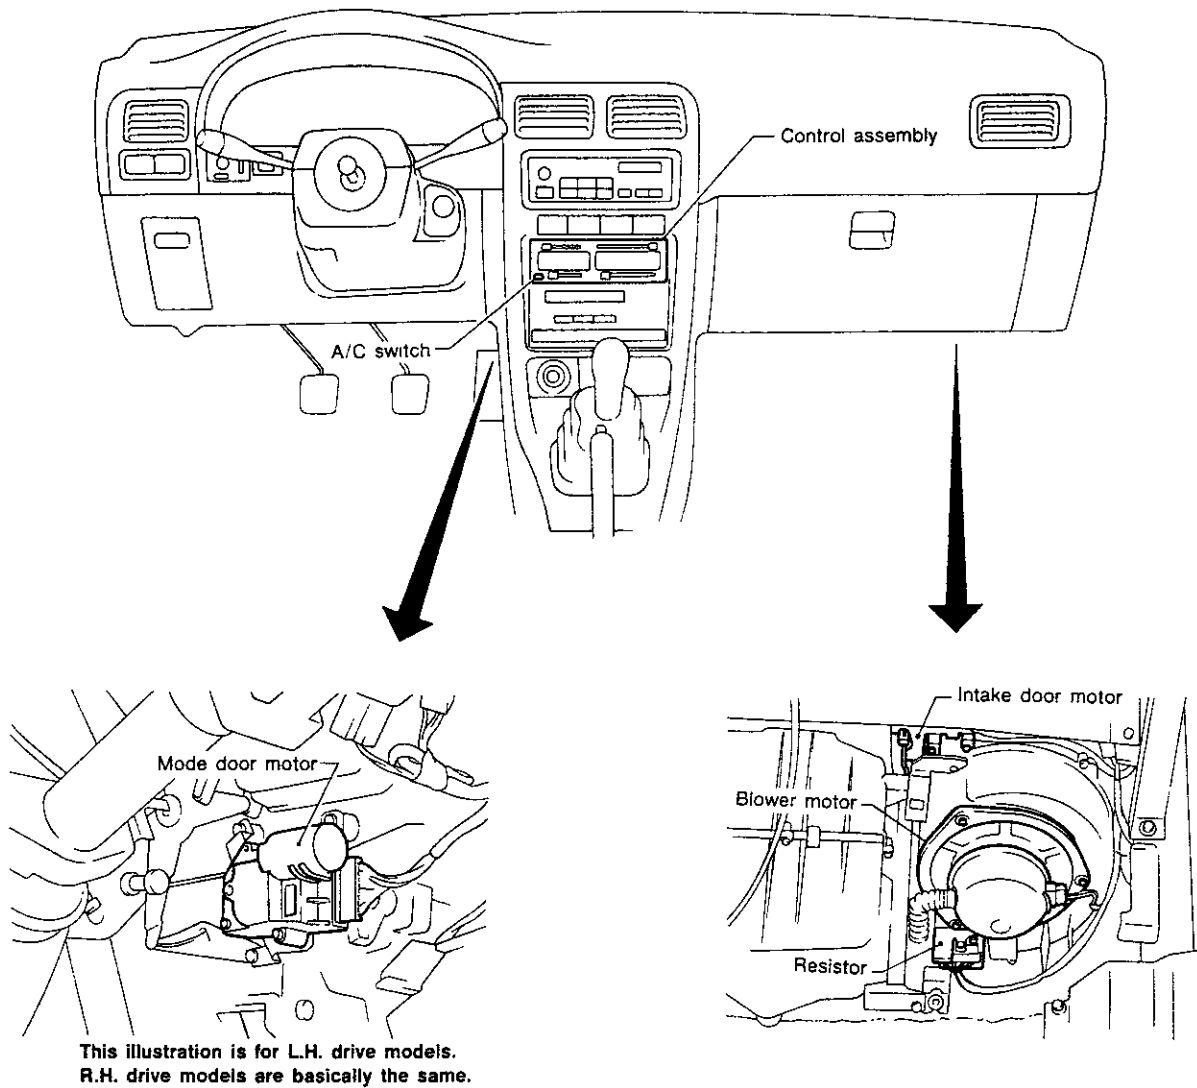


TROUBLE DIAGNOSES

Harness Layout for A/C System






Model B13

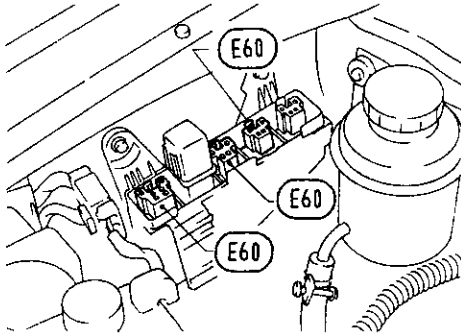

Model B13

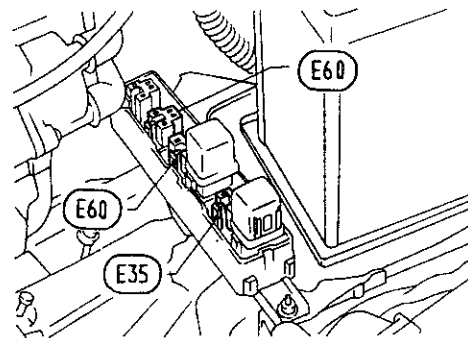


Model N14

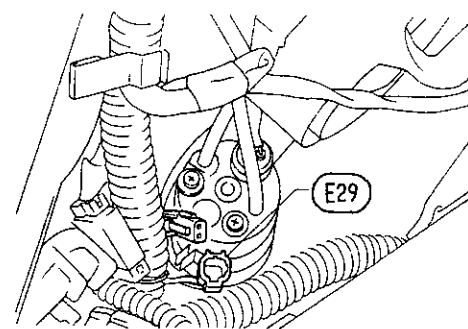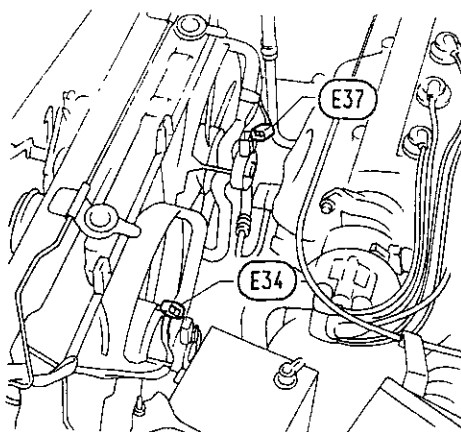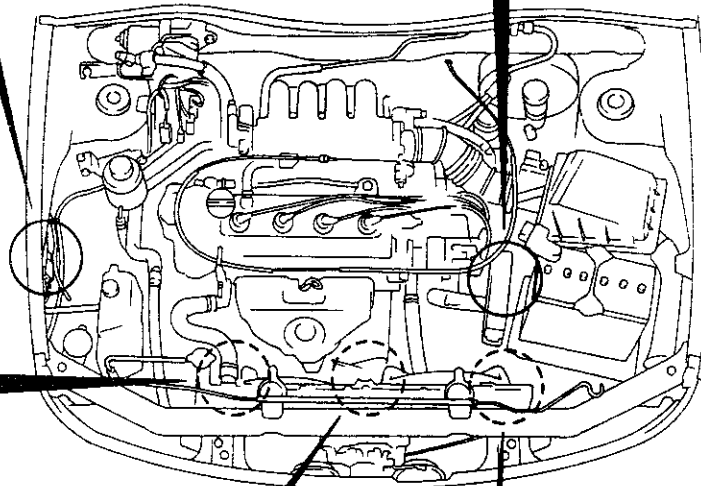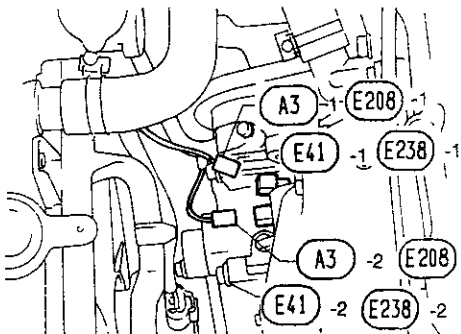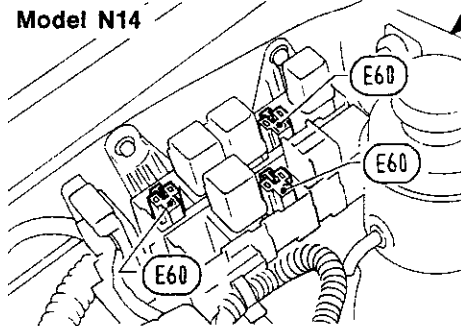

TROUBLE DIAGNOSES

Harness Layout for A/C System (Cont'd)

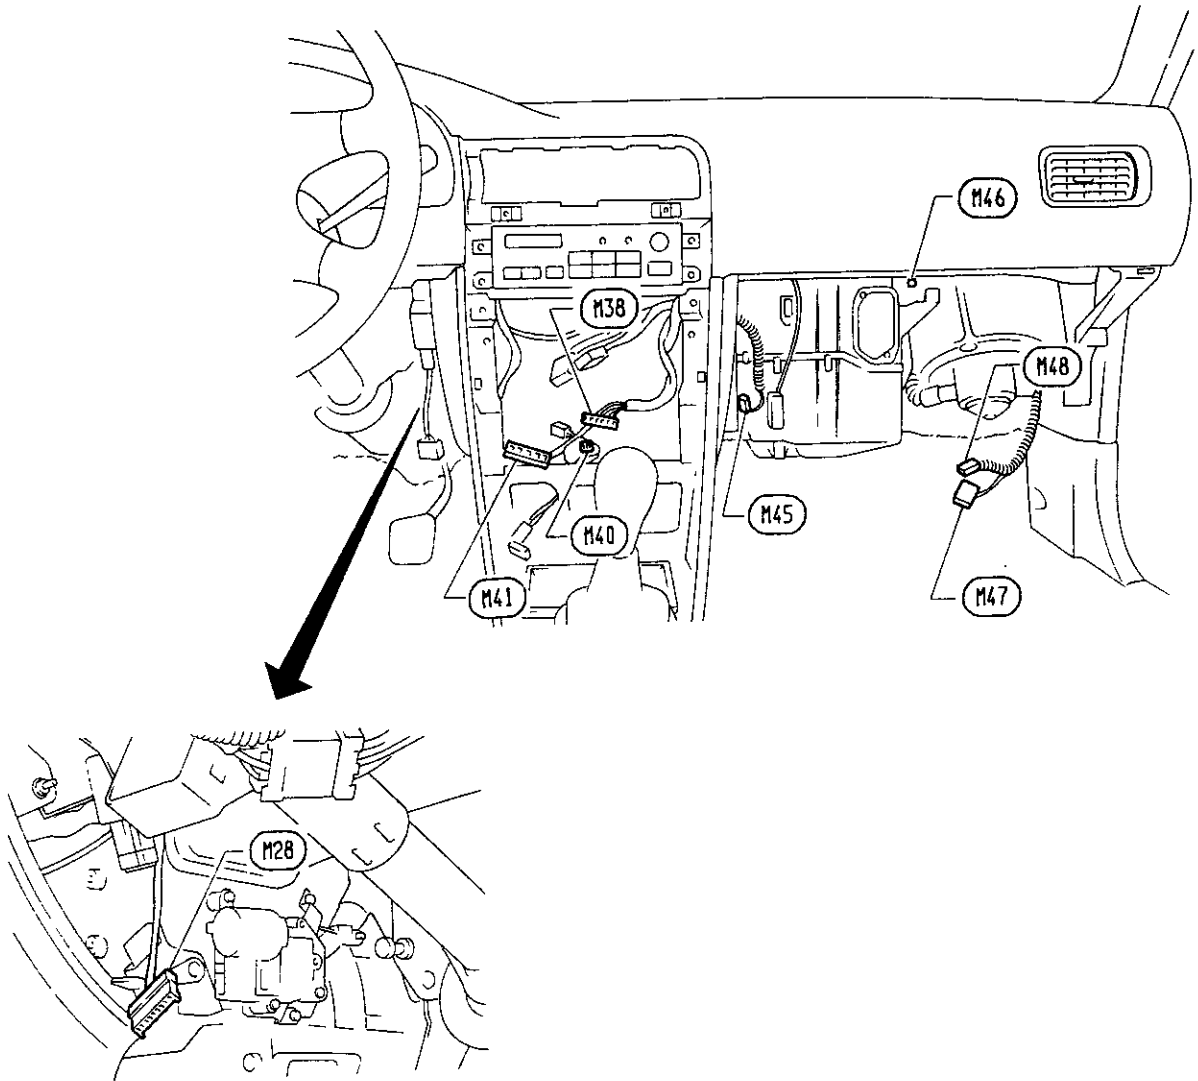

RHA922B

Main harness

- (M28) : Mode door motor
- (M38) : Push control unit
- (M40) : A/C switch
- (M41) : Fan switch
- (M45) : Thermo control amp.
- (M46) : Intake door motor
- (M47) : Fan resistor
- (M48) : Blower motor

Engine room harness


- (E29) : Dual-pressure switch
- (E34) : Radiator fan motor-1
- (E35) : A/C relay (B13 L.H.D. models)

- (E37) : Radiator fan motor-2
- (E60) : Radiator fan relay-1 and -2, A/C relay (Except for B13 L.H.D. models)
- (E41) -1 : Compressor (E10S engine)
- (E208) -1 : Compressor (SR20DET engine)
- (E238) -1 : Compressor (GA engine with catalyzer without E.G.R.)
- (A3) -1 : Compressor (Other engine models)
- (E41) -2 : Thermal protector (E10S engine)
- (E208) -2 : Thermal protector (SR20DET engine)
- (E238) -2 : Thermal protector (GA engine with catalyzer without E.G.R.)
- (A3) -2 : Thermal protector (Other engine models)

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check


L.H.D. MODELS (Push control type)

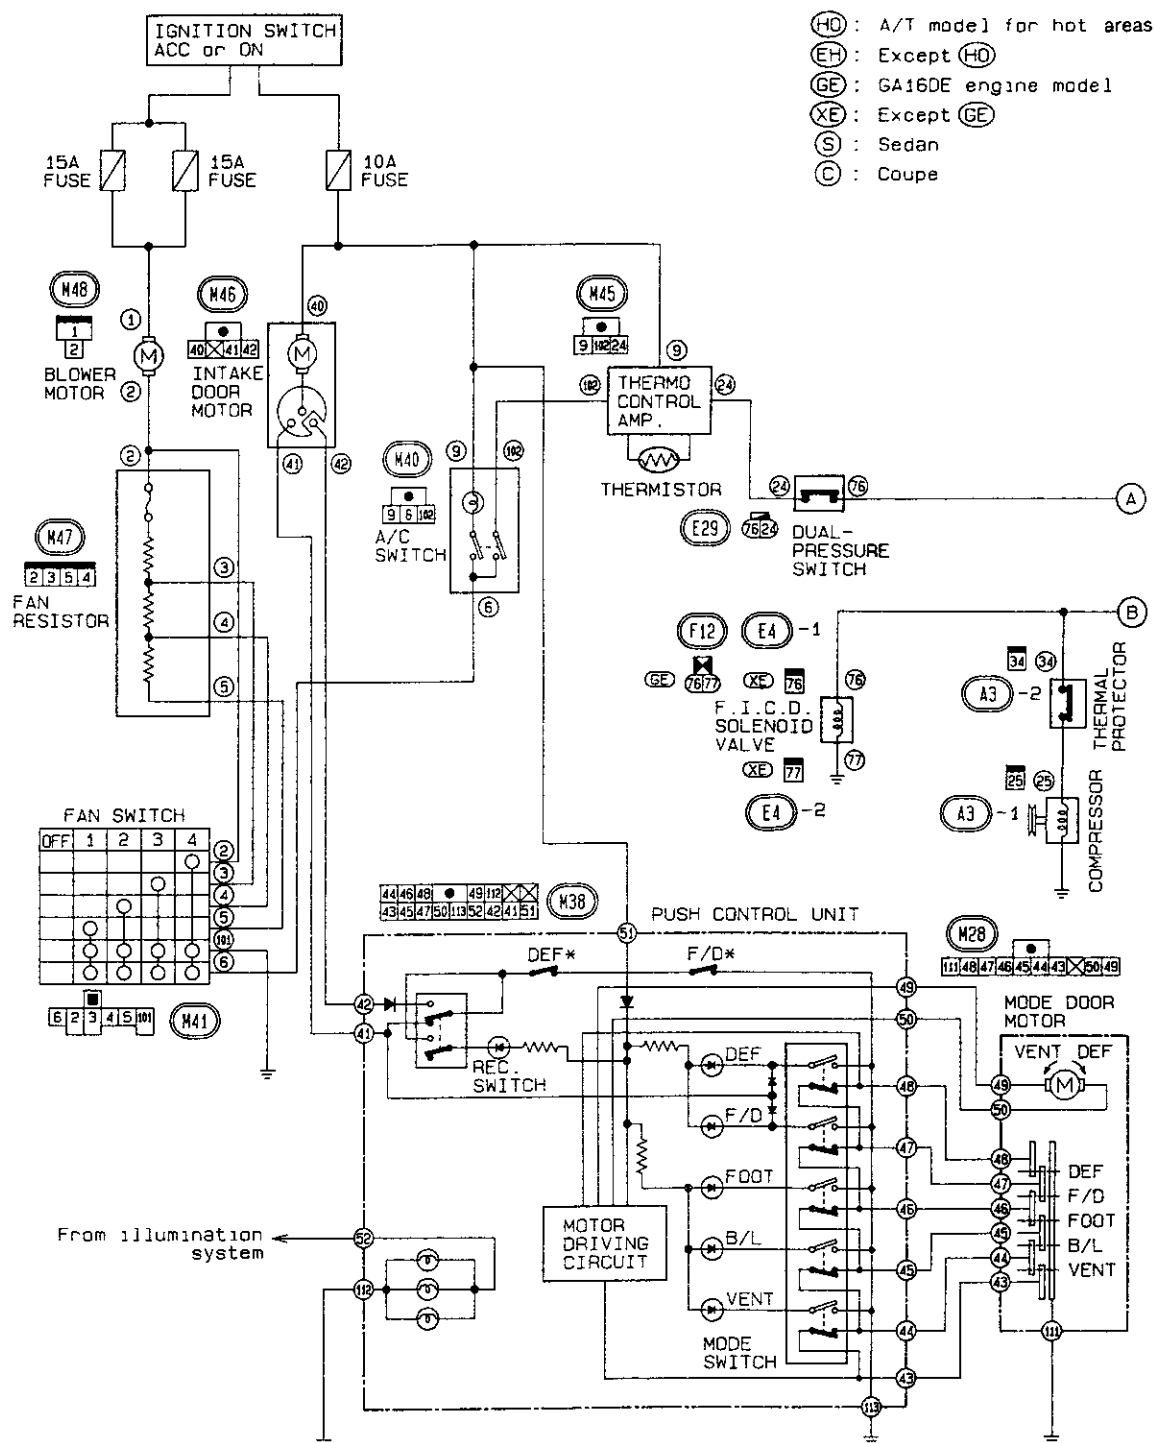

- All connectors shown in this illustration are unit side connectors.
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".
- The unit side connectors with a double circle "⊖" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-70, HA-71.)
- *: These switches are built into push control unit and mechanically linked to corresponding switches.

TROUBLE DIAGNOSES


Circuit Diagram for Quick Pinpoint Check (Cont'd)

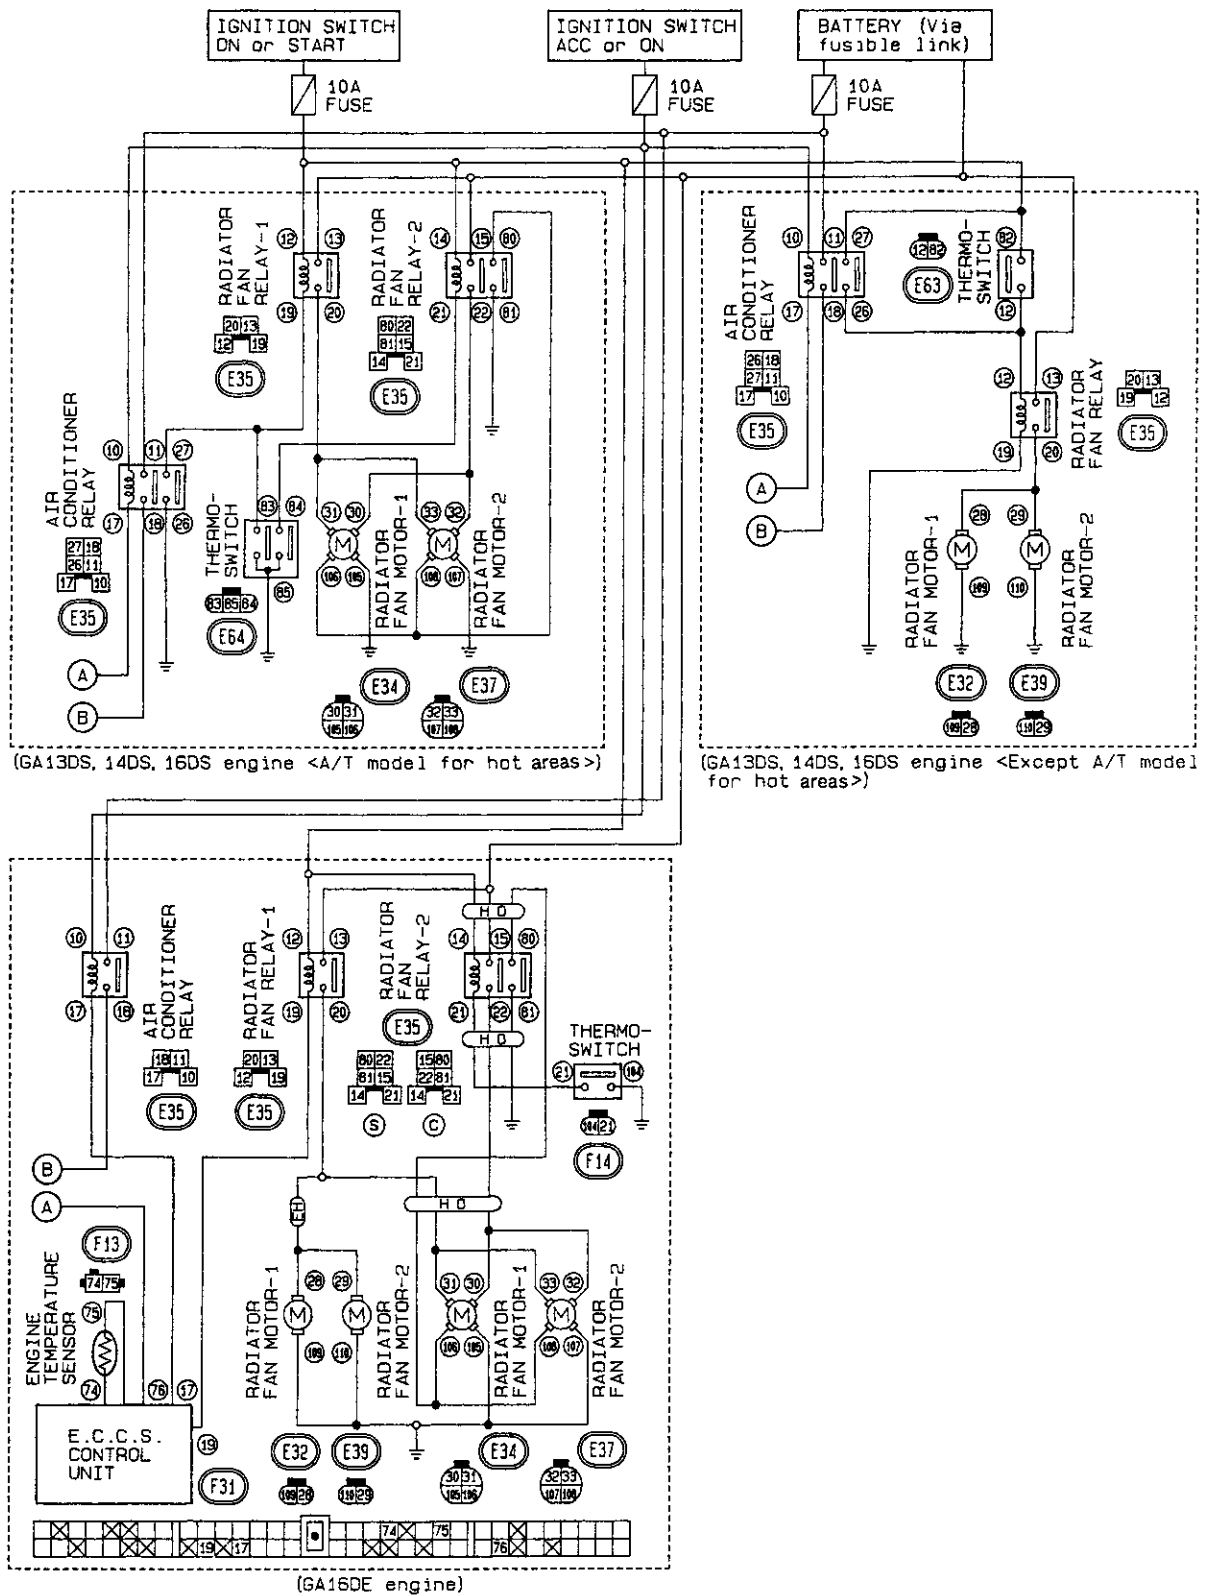

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)


R.H.D. MODELS (Push control type)

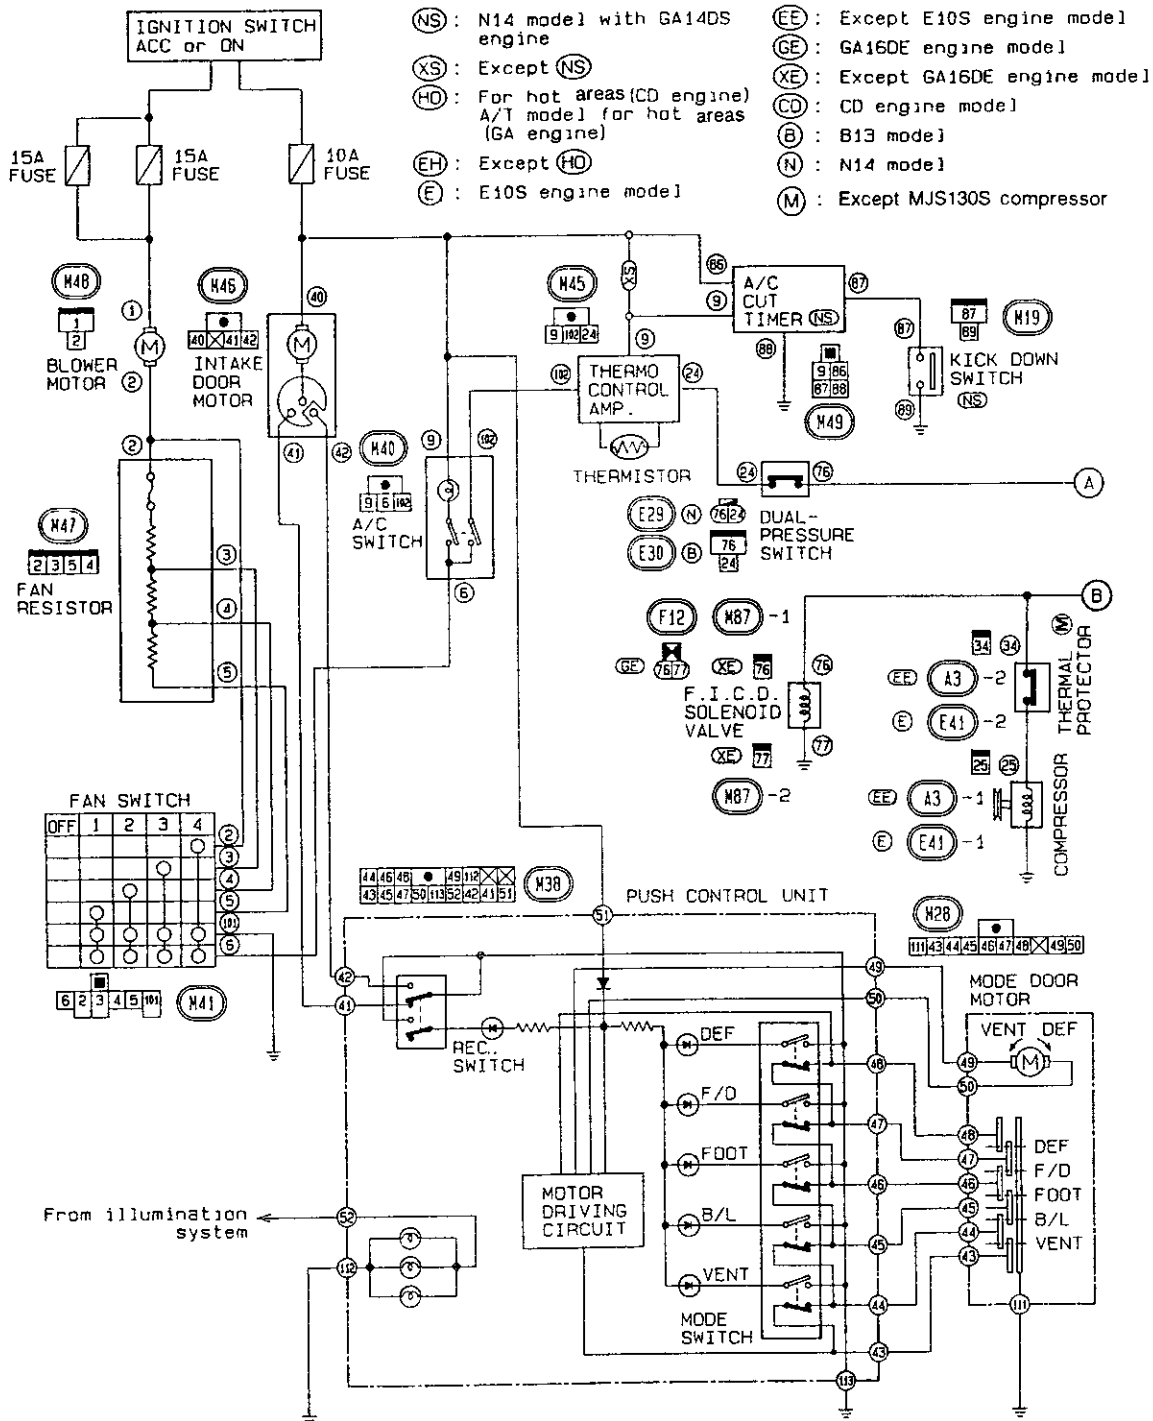

- All connectors shown in this illustration are unit side connectors.
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".
- The unit side connectors with a double circle "⊖" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-70, HA-71.)

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)

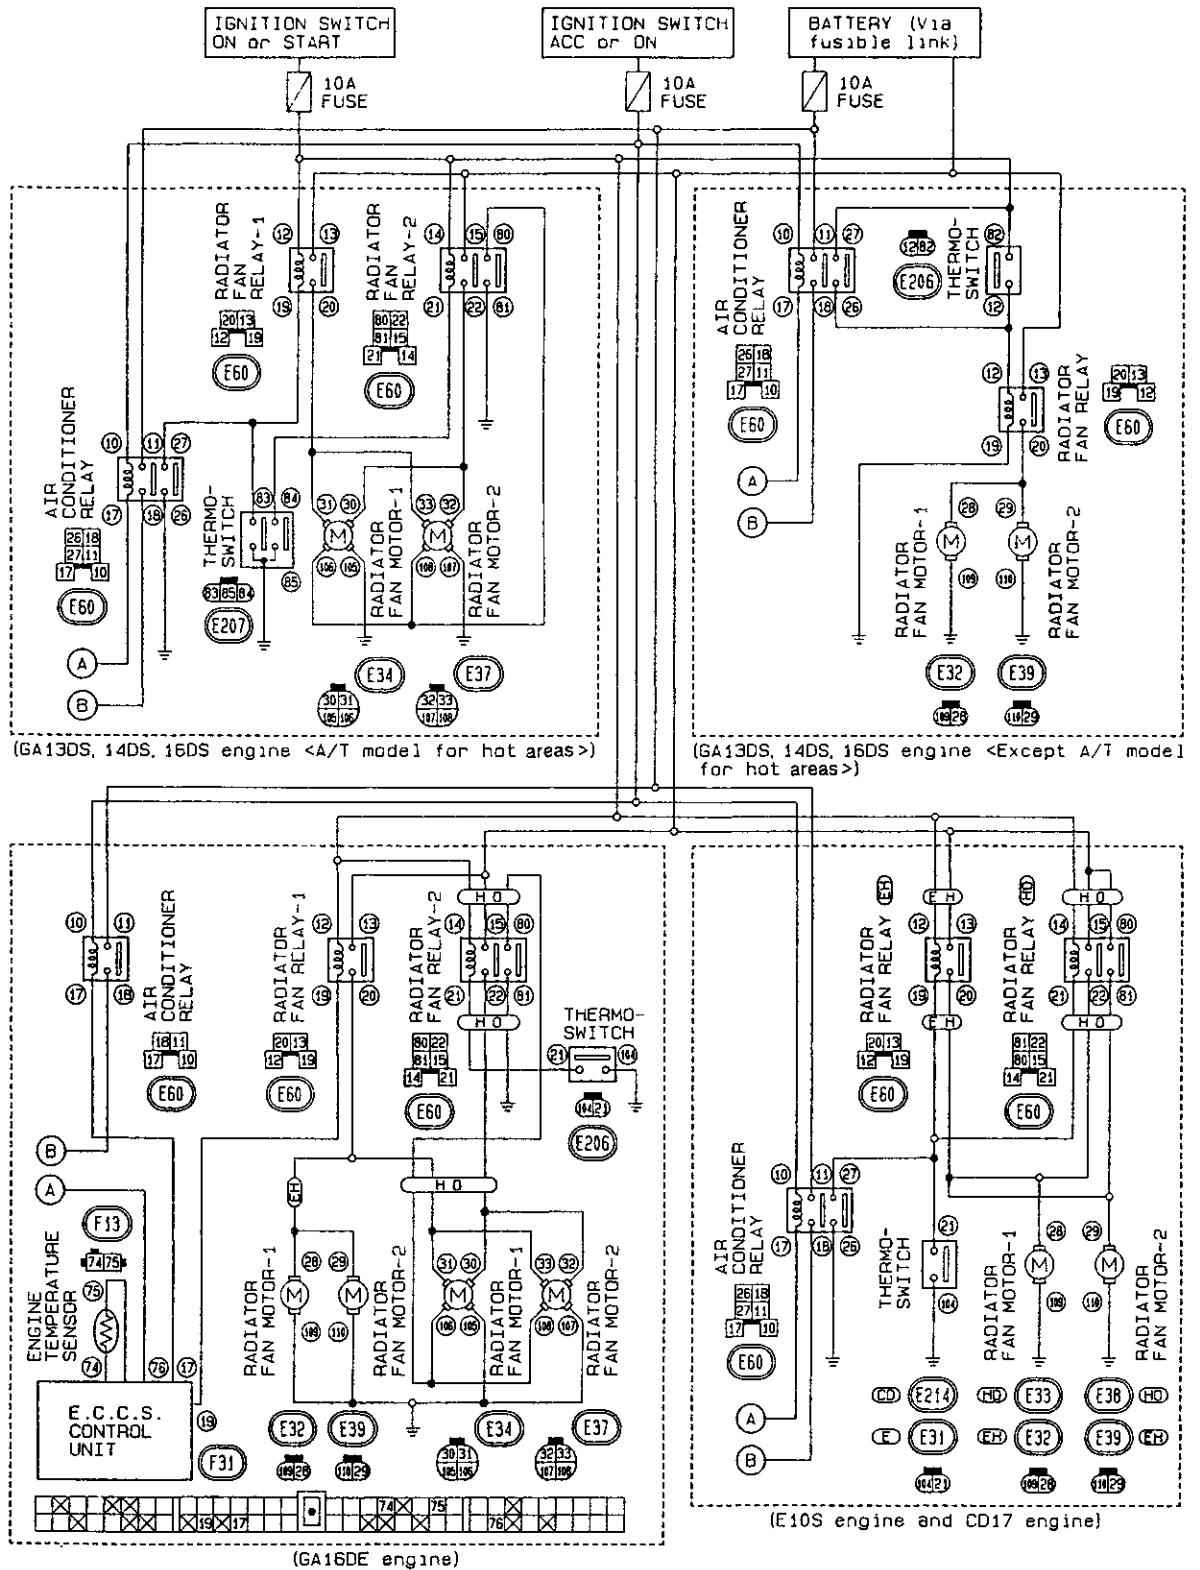


TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)

L.H.D. MODELS (Lever control type)

GA engine A/T models for Middle East,
and non-GA-S engine models


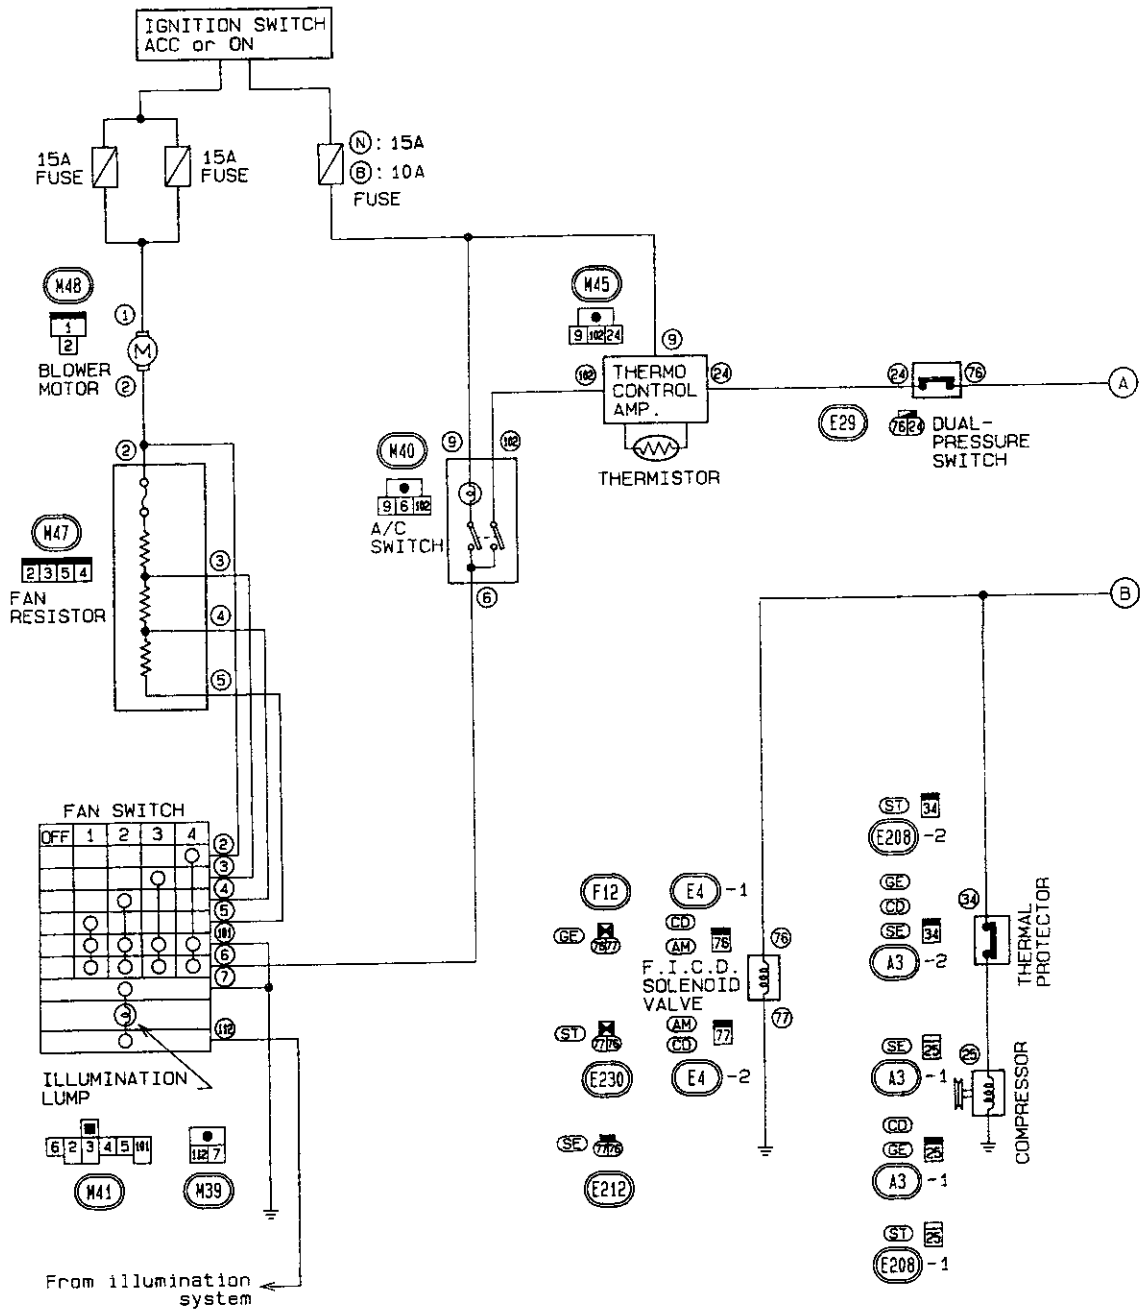


- | | |
|-----------------|---|
| (B) : B13 model | (GE) : GA16DE engine model |
| (N) : N14 model | (HO) : CD17 engine for hot areas and
CD20 engine (CD engine) |
| (C) : Sedan | A/T model for hot areas (GA engine) |
| (C) : Coupe | (EH) : Except (HO) |
| | (SE) : SR20DE engine model |
| | (ST) : SR20DET engine model |
| | (AM) : A/T model for Middle East |

- All connectors shown in this illustration are unit side connectors.
- The unit side connectors with a double circle "⊖" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-70, HA-71.)
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".

TROUBLE DIAGNOSES


Circuit Diagram for Quick Pinpoint Check (Cont'd)

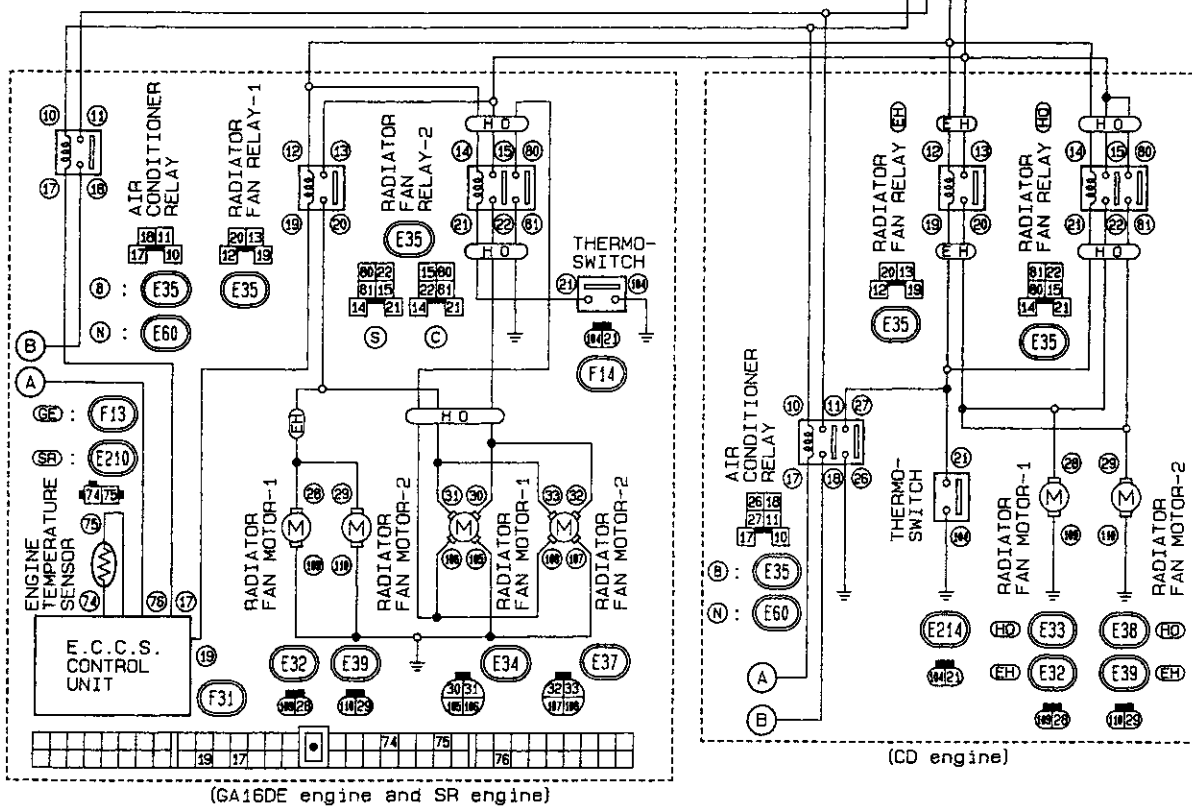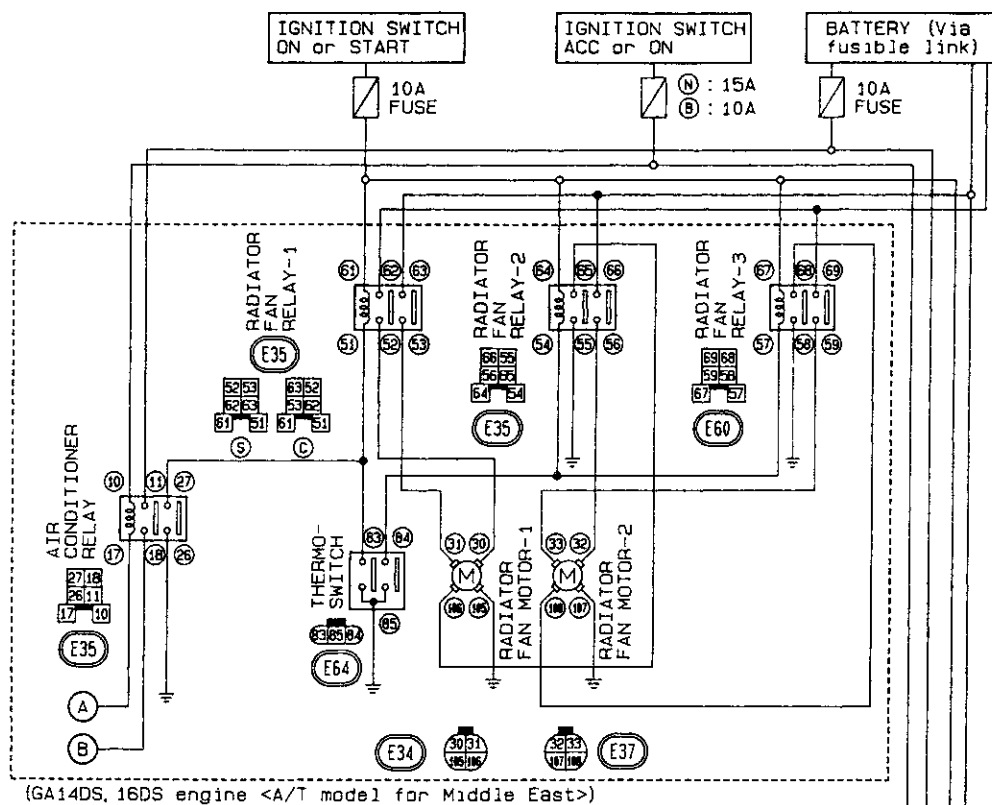

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)


GA-S engine models

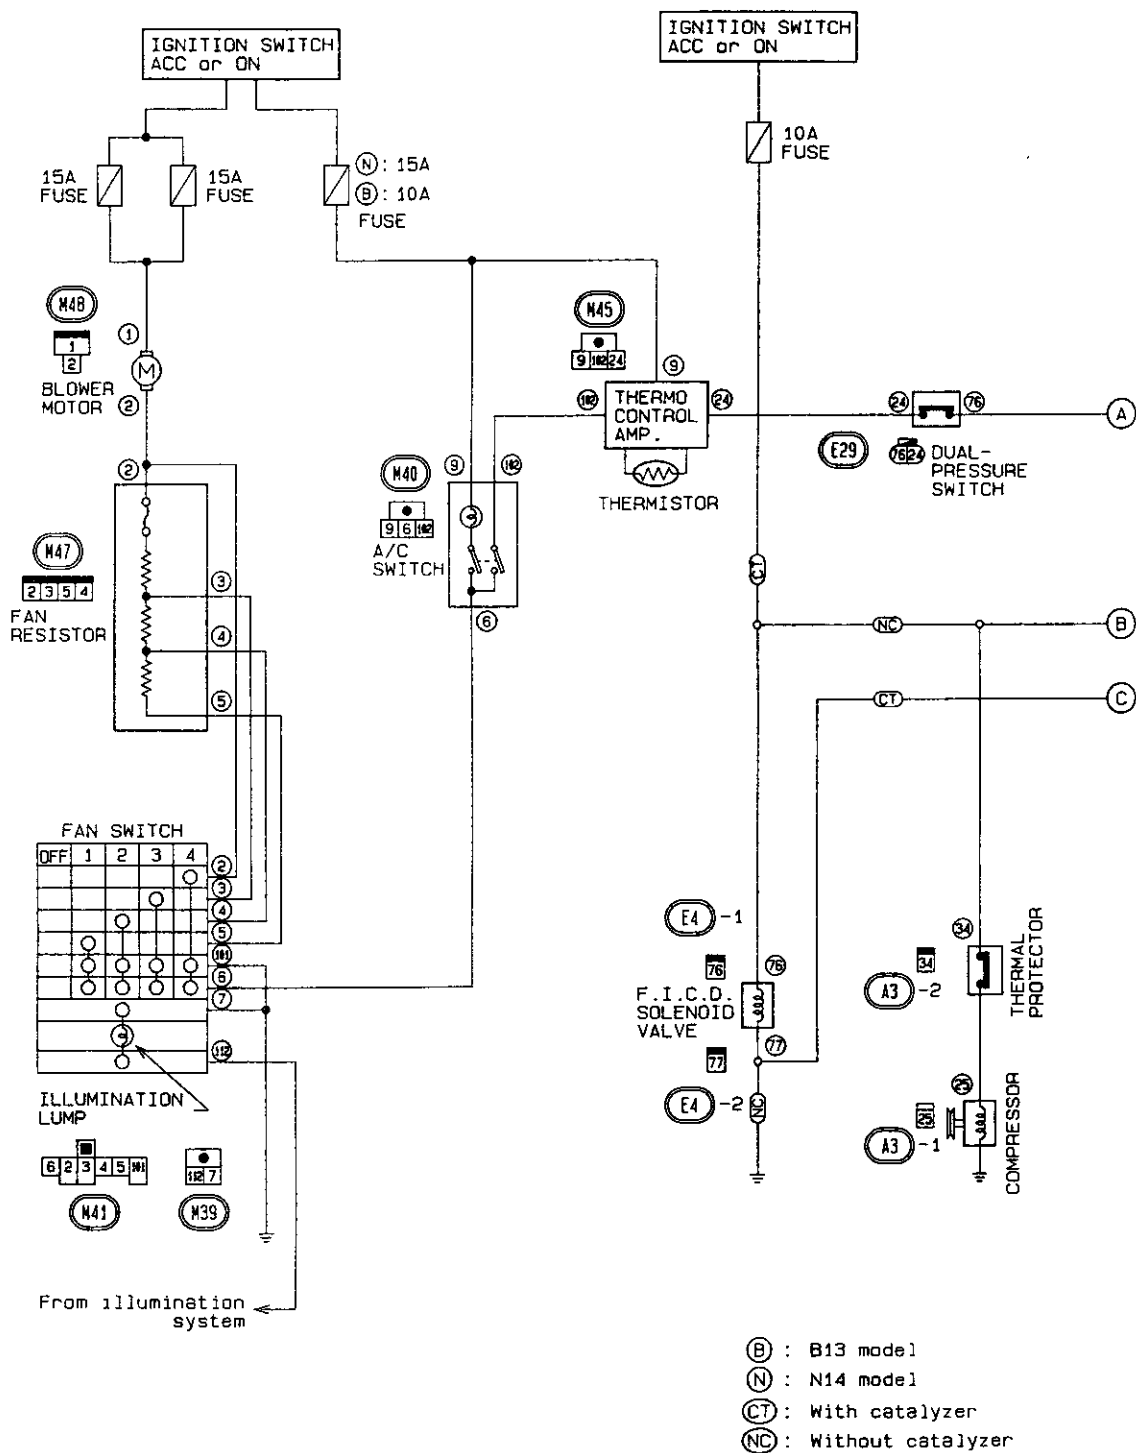

- All connectors shown in this illustration are unit side connectors.
- The unit side connectors with a double circle "⊖" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-70, HA-71.)
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)

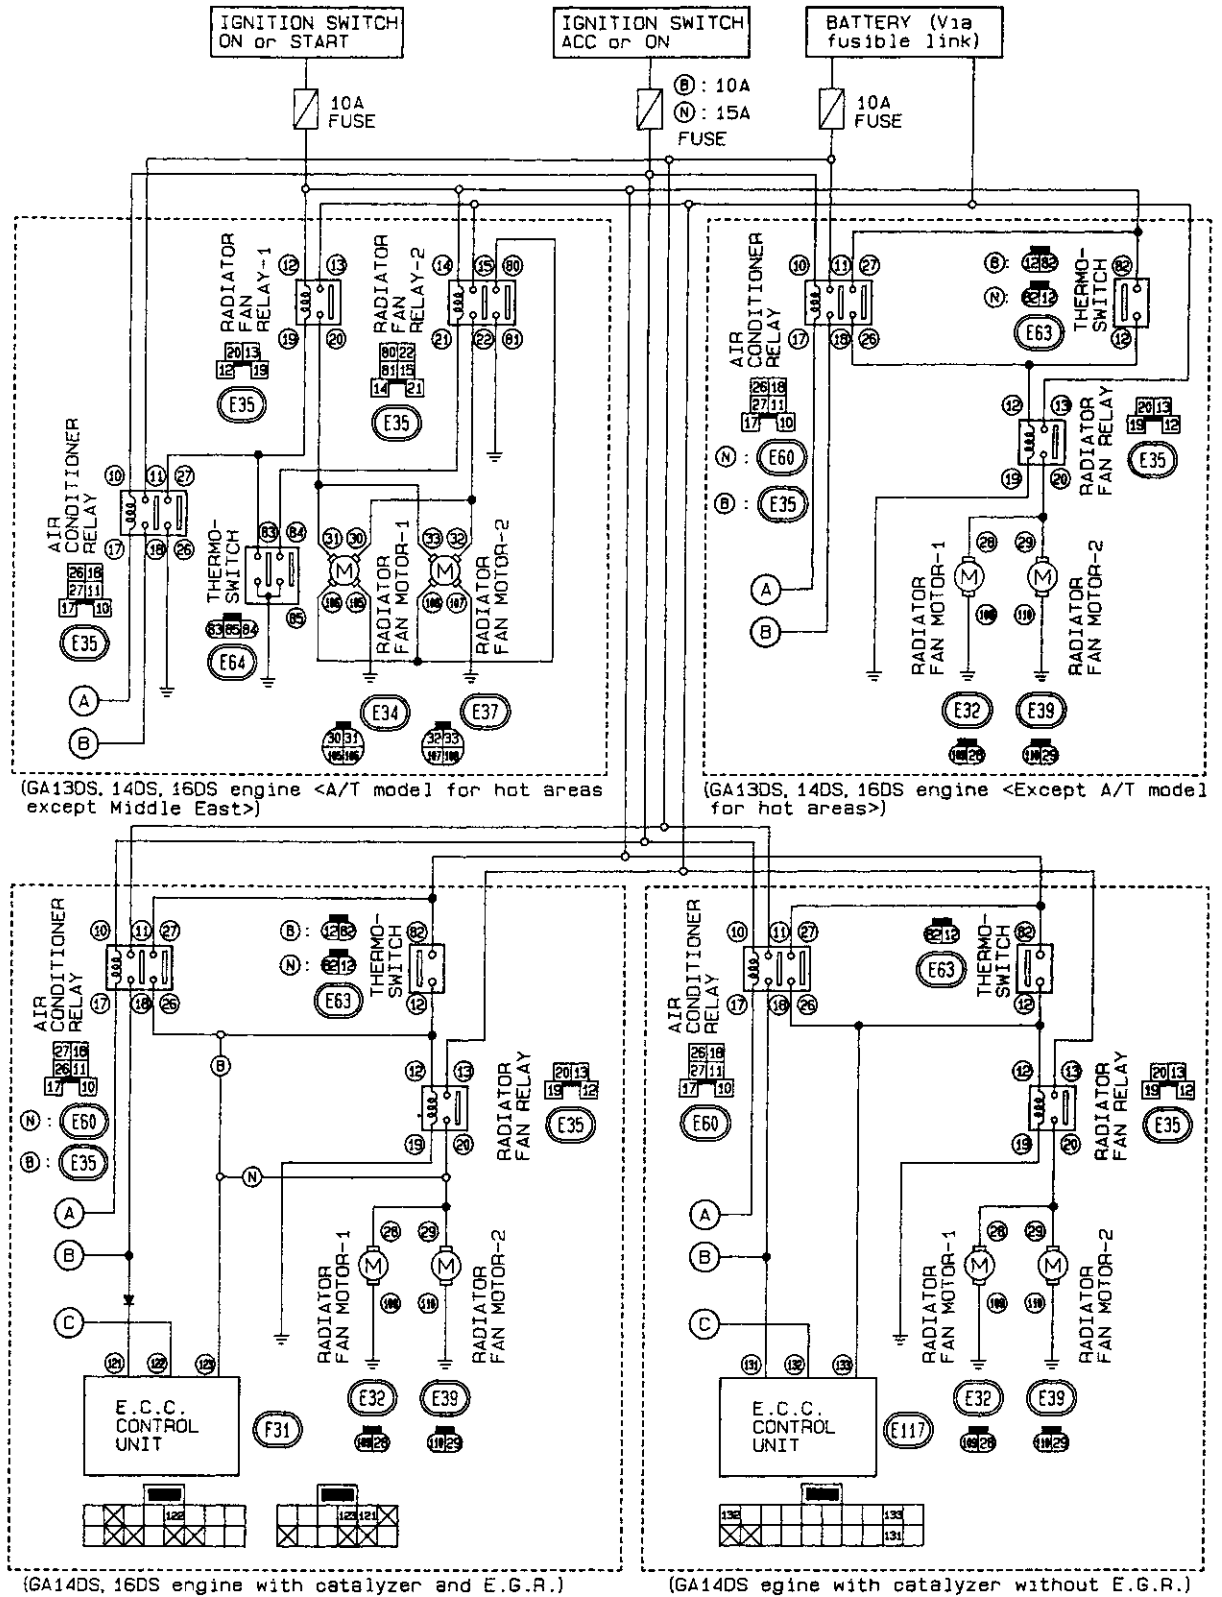


TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)

R.H.D. MODELS (Lever control type)


GA engine A/T models for Middle East, and non-GA-S engine models

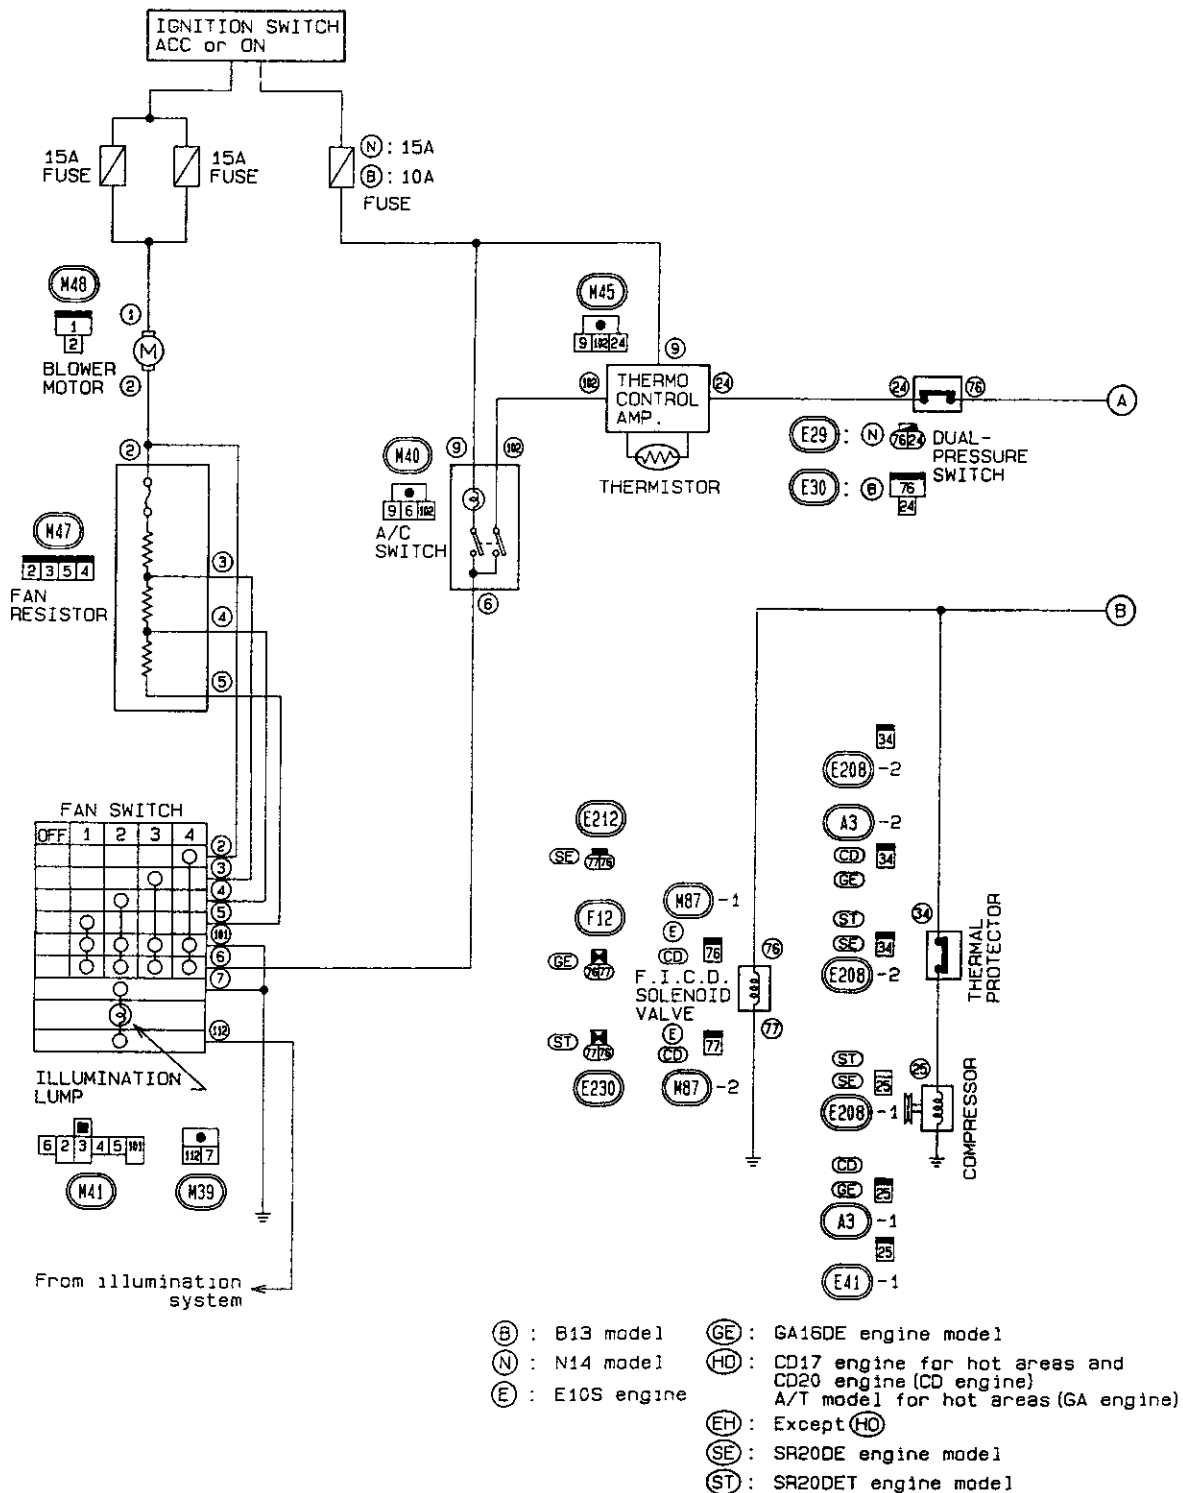

- All connectors shown in this illustration are unit side connectors.
- The unit side connectors with a double circle "⊖" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-70, HA-71.)
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)

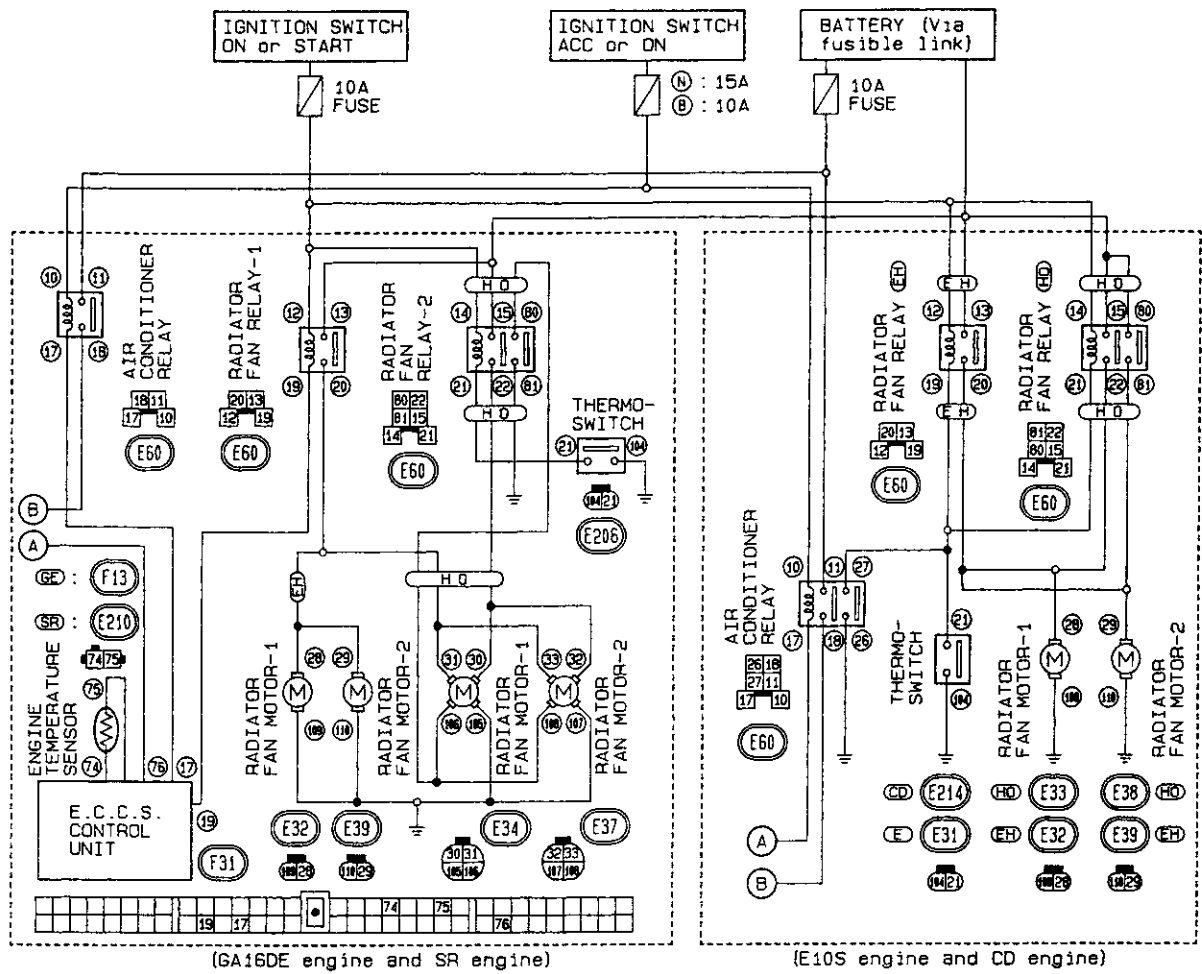

Circuit Diagram for Quick Pinpoint Check (Cont'd)

The diagram illustrates the electrical system for a vehicle, featuring two ignition switches and a complex network of fuses, relays, and sensors.

Ignition Switches:

- Left Ignition Switch:** Labeled "IGNITION SWITCH ACC or ON". It controls the Blower Motor and Fan Resistor through a 15A fuse.
- Right Ignition Switch:** Labeled "IGNITION SWITCH ACC or ON". It controls the Thermo Control Amp and other components through a 10A fuse.

Blower Motor and Fan Resistor:

- The **Blower Motor** (M48) is connected to the left ignition switch via a 15A fuse.
- The **Fan Resistor** (M47) is connected to the left ignition switch via a 15A fuse.

Fan Switch:

- The **FAN SWITCH** is a 4-position switch (OFF, 1, 2, 3, 4) that controls the Blower Motor and Fan Resistor.

Illumination Lump:

- The **ILLUMINATION LUMP** is connected to the Fan Switch and provides power to the Blower Motor and Fan Resistor.

Thermo Control Amp and Thermistor:

- The **THERMO CONTROL AMP.** (M45) is connected to the right ignition switch via a 10A fuse.
- The **THERMISTOR** is connected to the Thermo Control Amp.

Other Components:

- A/C SWITCH:** (M40) is connected to the right ignition switch via a 10A fuse.
- DUAL-PRESSURE SWITCH:** (E29, E30) is connected to the right ignition switch via a 10A fuse.
- F.I.C.D. SOLENOID VALVE:** (M87) is connected to the right ignition switch via a 10A fuse.
- THERMAL PROTECTOR:** (A3) is connected to the right ignition switch via a 10A fuse.
- COMPRESSOR:** (E238) is connected to the right ignition switch via a 10A fuse.

Wiring Details:


- The diagram shows various fuses (15A, 10A) and relays (M48, M47, M45, M40, M87, A3, E238).
- Wiring paths are indicated by lines connecting components to their respective power sources.
- Grounding points are marked with "G" and "E".

- (B) : B13 model
- (N) : N14 model
- (CT) : With catalyzer
- (NC) : Without catalyzer
- (CN) : GA engine with catalyzer
without E.G.R.
- (EN) : Except (CN)
- (M) : Except MJS130S compressor

- All connectors shown in this illustration are unit side connectors.
- The unit side connectors with a double circle "⊙" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-70 - HA-71.)
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check (Cont'd)

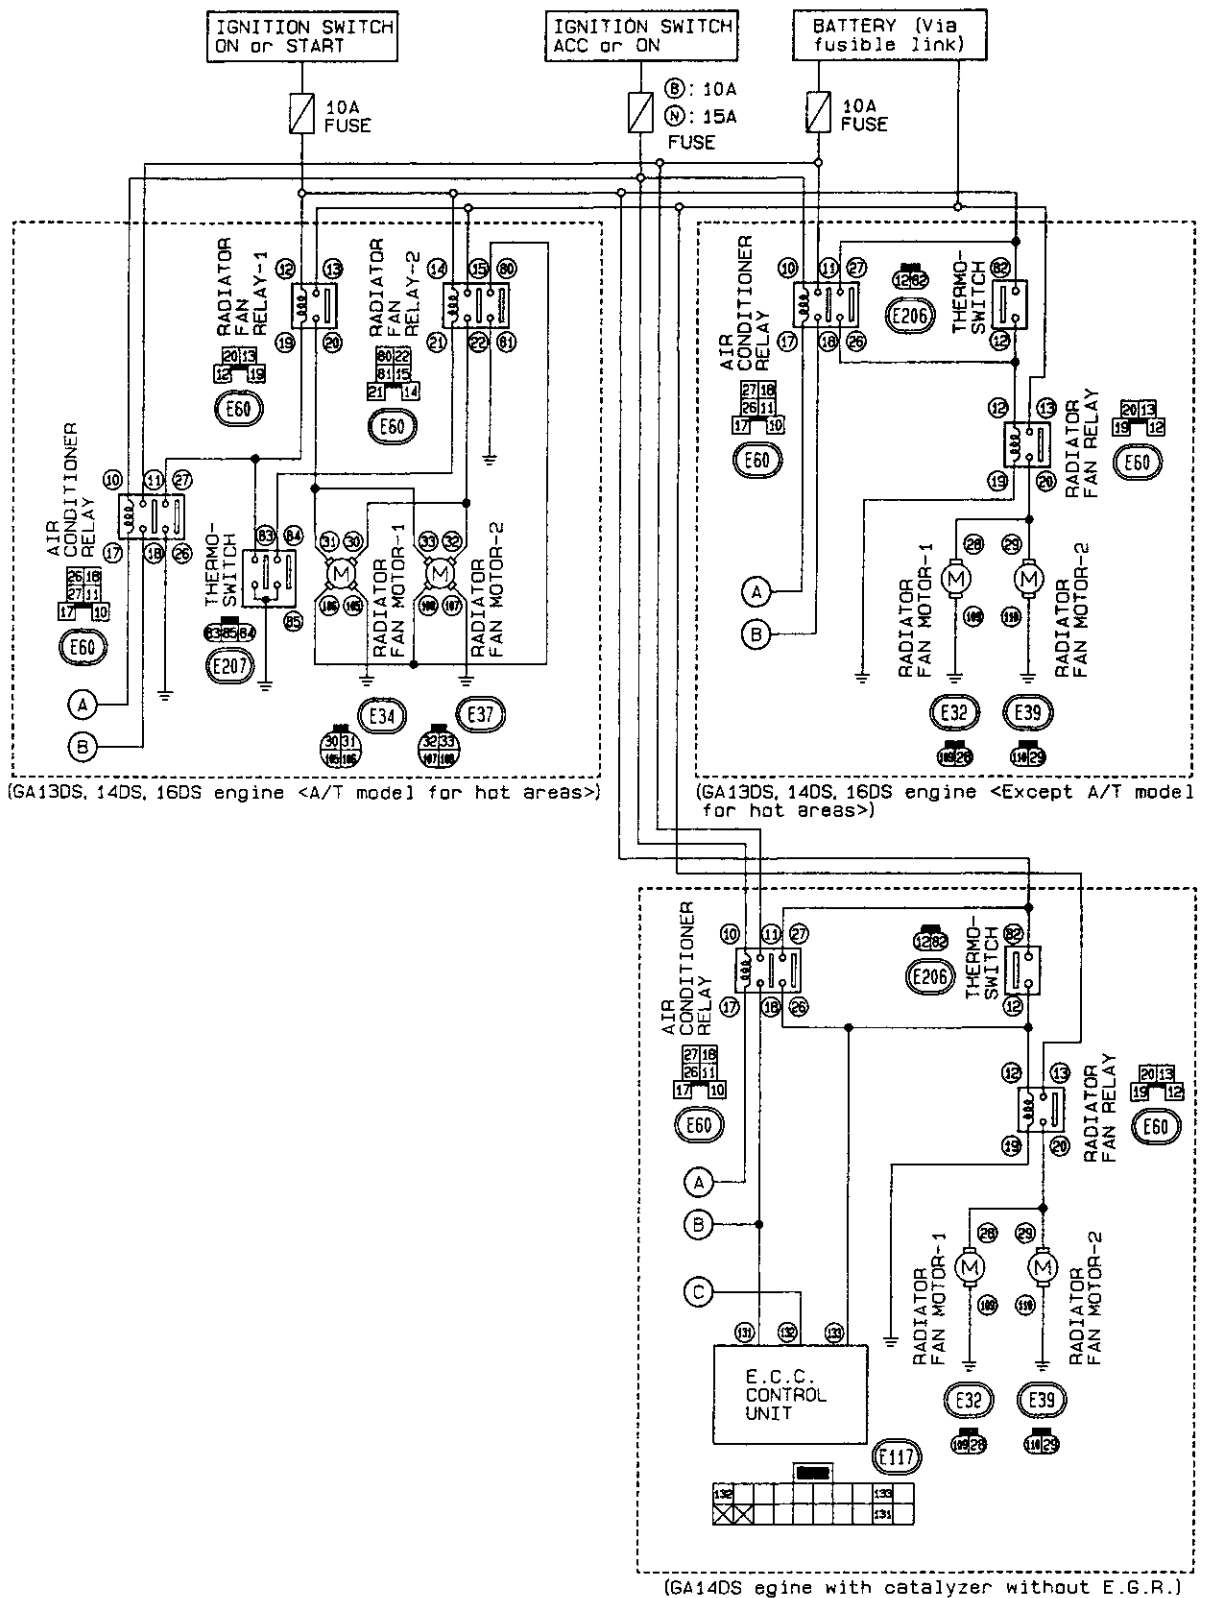


Wiring Diagram — Heater



TROUBLE DIAGNOSES

Wiring Diagram — Heater (Cont'd)

LEVER CONTROL TYPE

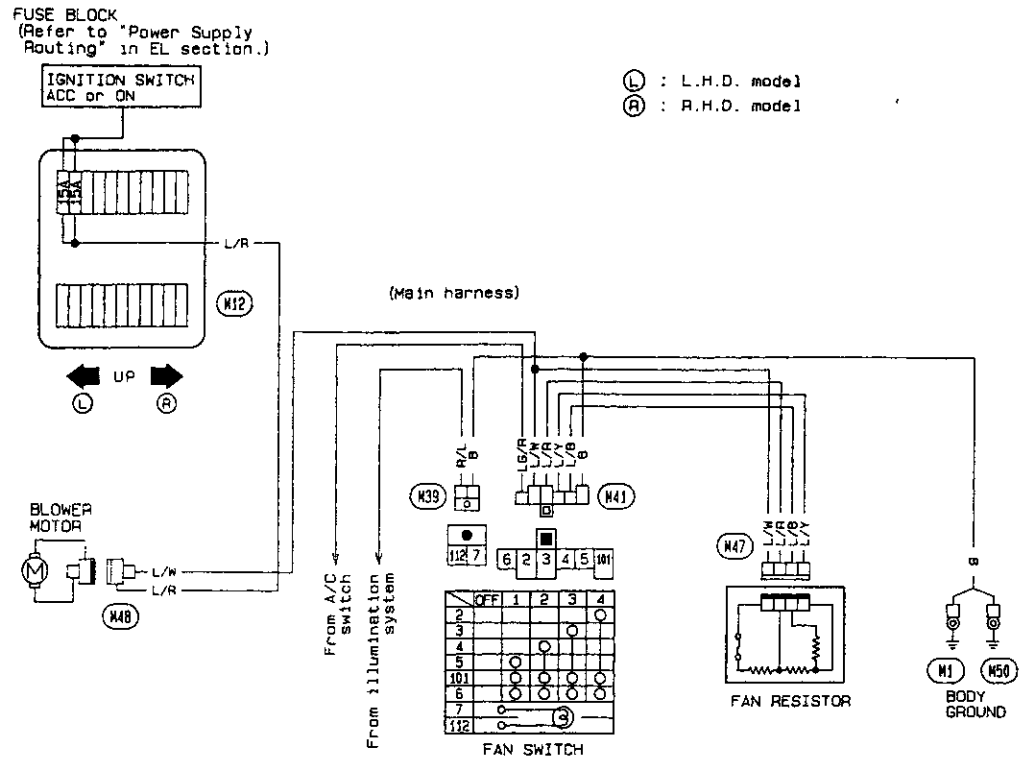

Wiring Diagram — Air conditioner

MODE DOOR MOTOR

BLOWER MOTOR

IGNITION SWITCH ON or START

IGNITION SWITCH ACC or ON

BATTERY (Via fusible link)

RADIATOR FAN RELAY-1

RADIATOR FAN RELAY-2

AIR CONDITIONER RELAY

THERMAL PROTECTOR

COMPRESSOR

DUAL-PRESSURE SWITCH

INTAKE DOOR MOTOR

POSITION SWITCH

THERMO CONTROL AMP

THERMISTOR

PUSH CONTROL UNIT

From illumination system

(Main harness)

(Engine room harness)

(E.F.I. harness)

E.C.C.S. CONTROL UNIT

ENGINE TEMPERATURE SENSOR

SOLENOID VALVE

THERMO SWITCH

A/C SWITCH

FAN SWITCH

FAN RESISTOR

BODY GROUND

ENGINE GROUND

RADIATOR FAN MOTOR-1

RADIATOR FAN MOTOR-2


LEGEND:

- : Sedan
- ⊙ : Coupe
- ⊕ : A/T model for hot areas
- ⊖ : Except

TROUBLE DIAGNOSES

Wiring Diagram — Air conditioner (Cont'd)

PUSH CONTROL TYPE (L.H.D.) — GA-S engine models

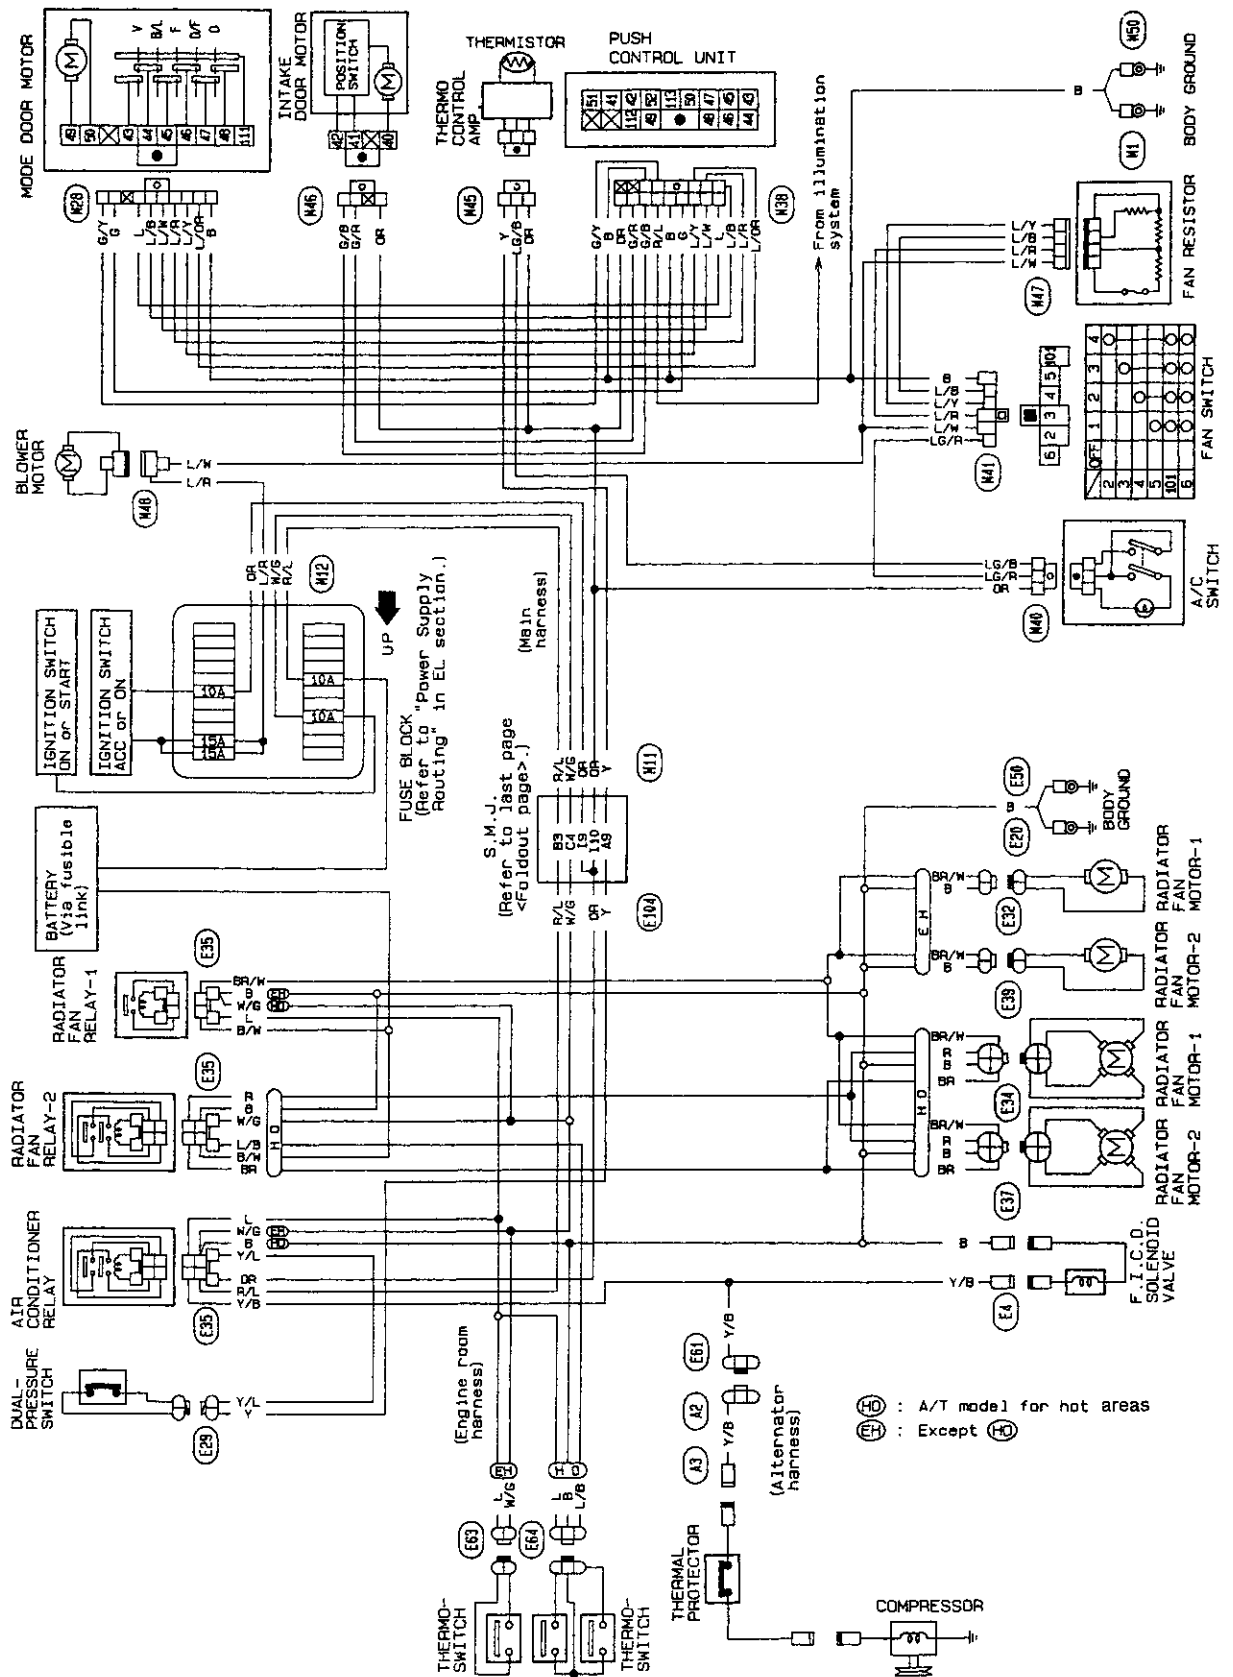


Wiring Diagram — Air conditioner (Cont'd)

[illegible]**HA-88**

TROUBLE DIAGNOSES

Wiring Diagram — Air conditioner (Cont'd)


PUSH CONTROL TYPE (R.H.D.) — GA-S engine models

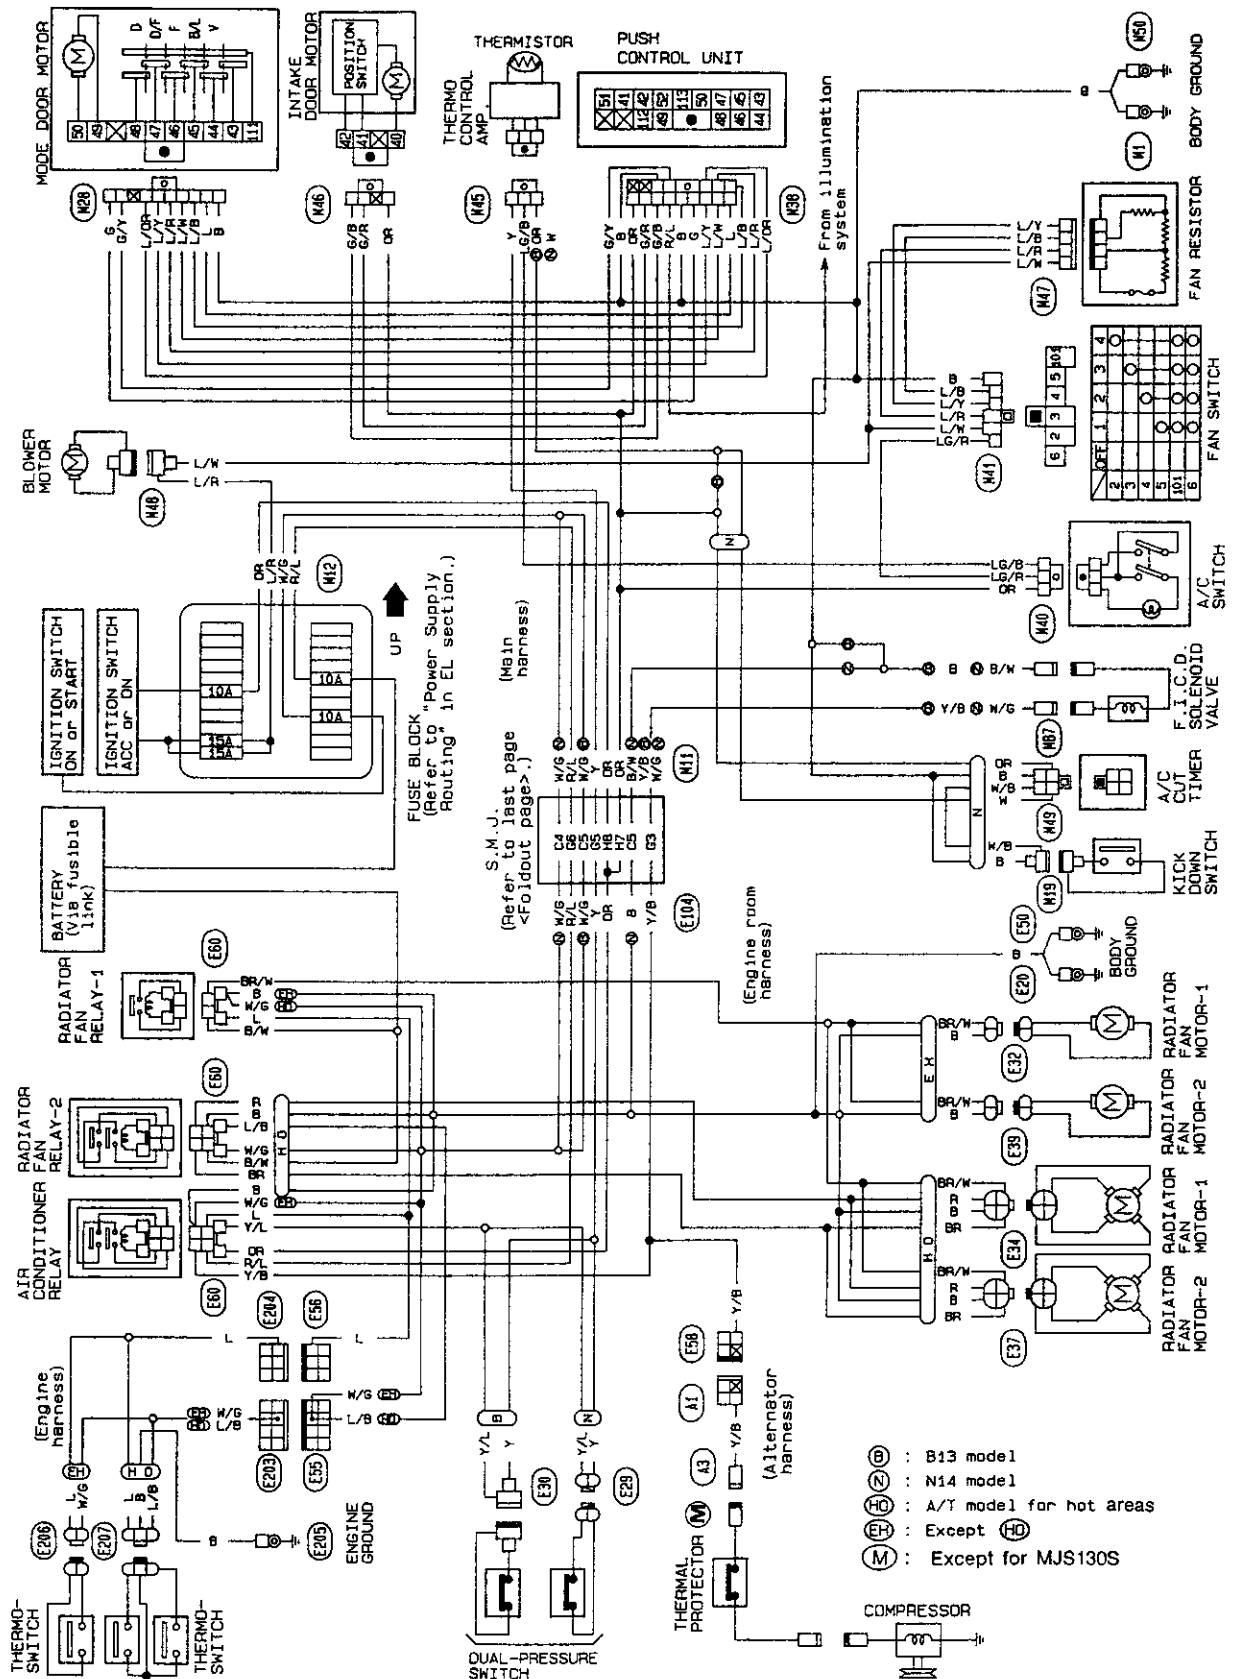

TROUBLE DIAGNOSES


Wiring Diagram — Air conditioner (Cont'd)

PUSH CONTROL TYPE (R.H.D.) — E10S and CD17 engine models

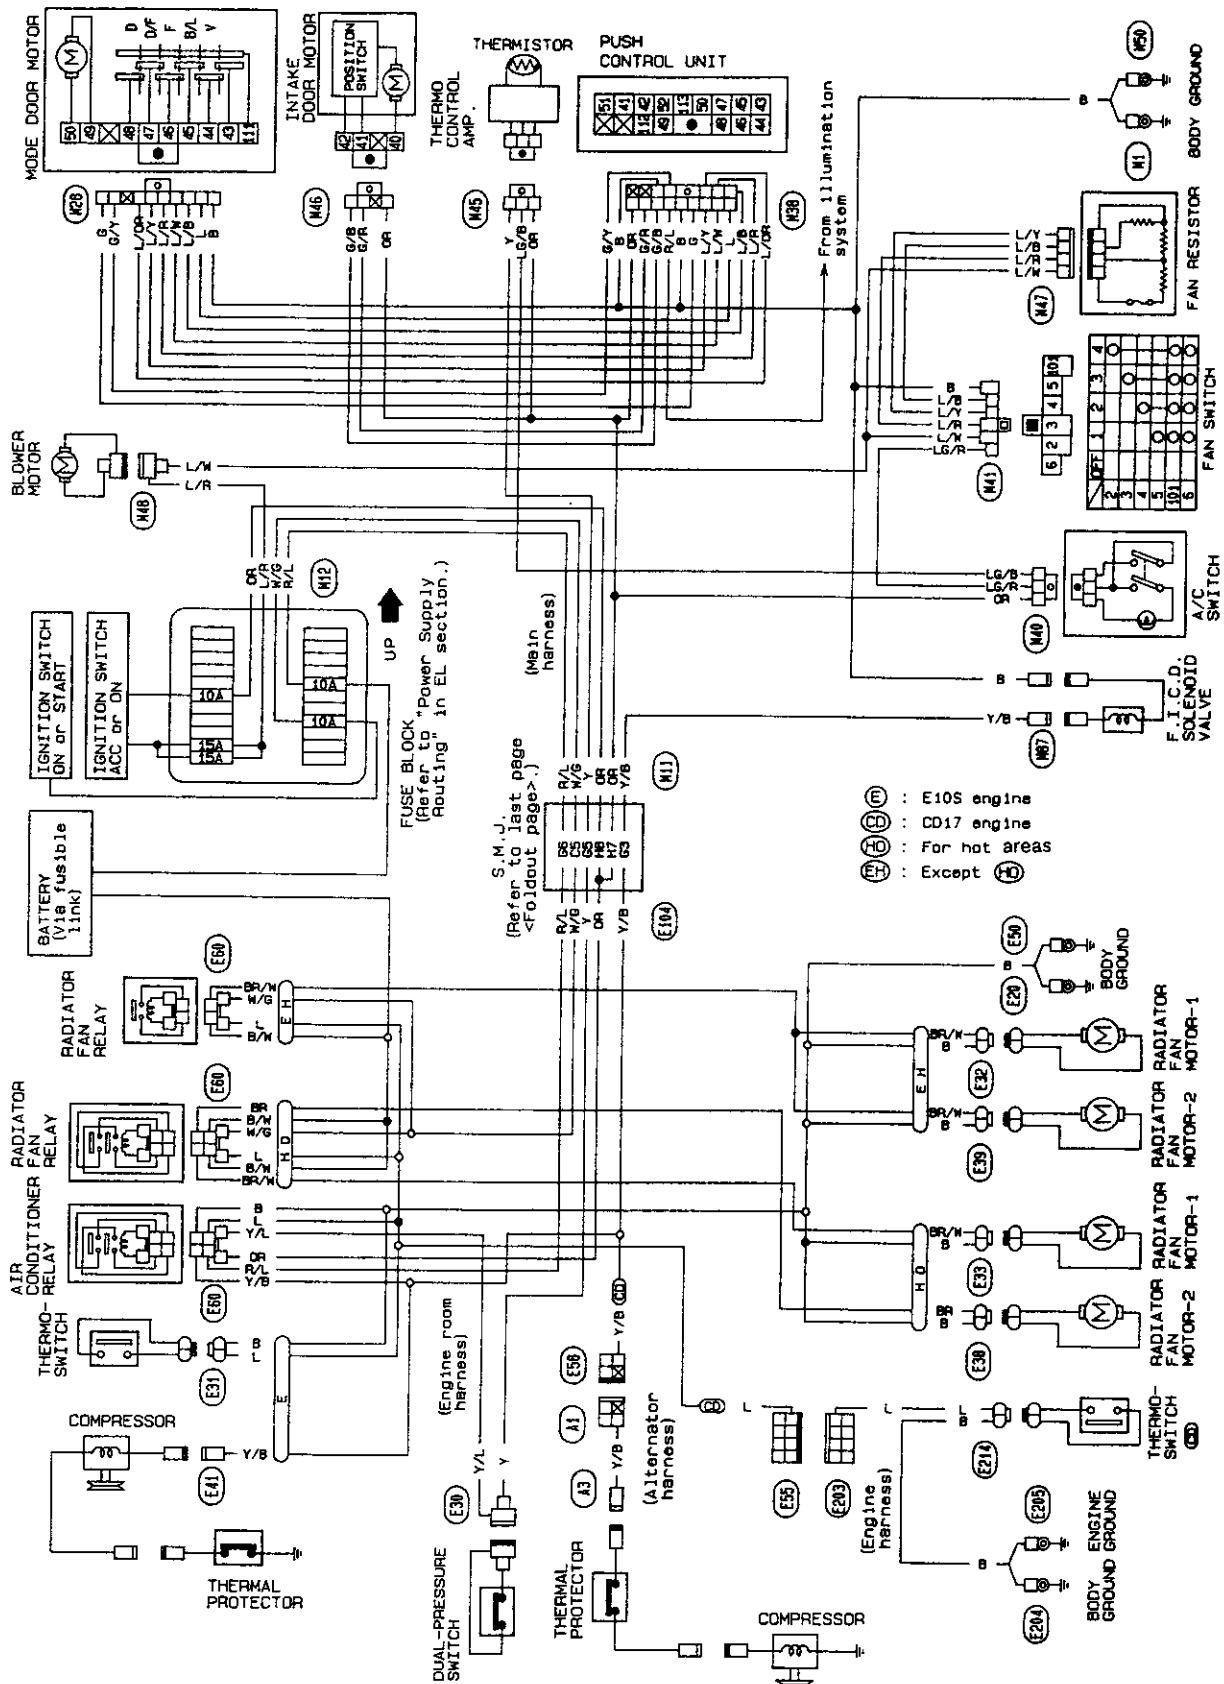

Wiring Diagram — Air conditioner (Cont'd)


(S) : Sedan
(C) : Coupe
(H0) : A/T model for hot areas
(EH) : Except (H0)

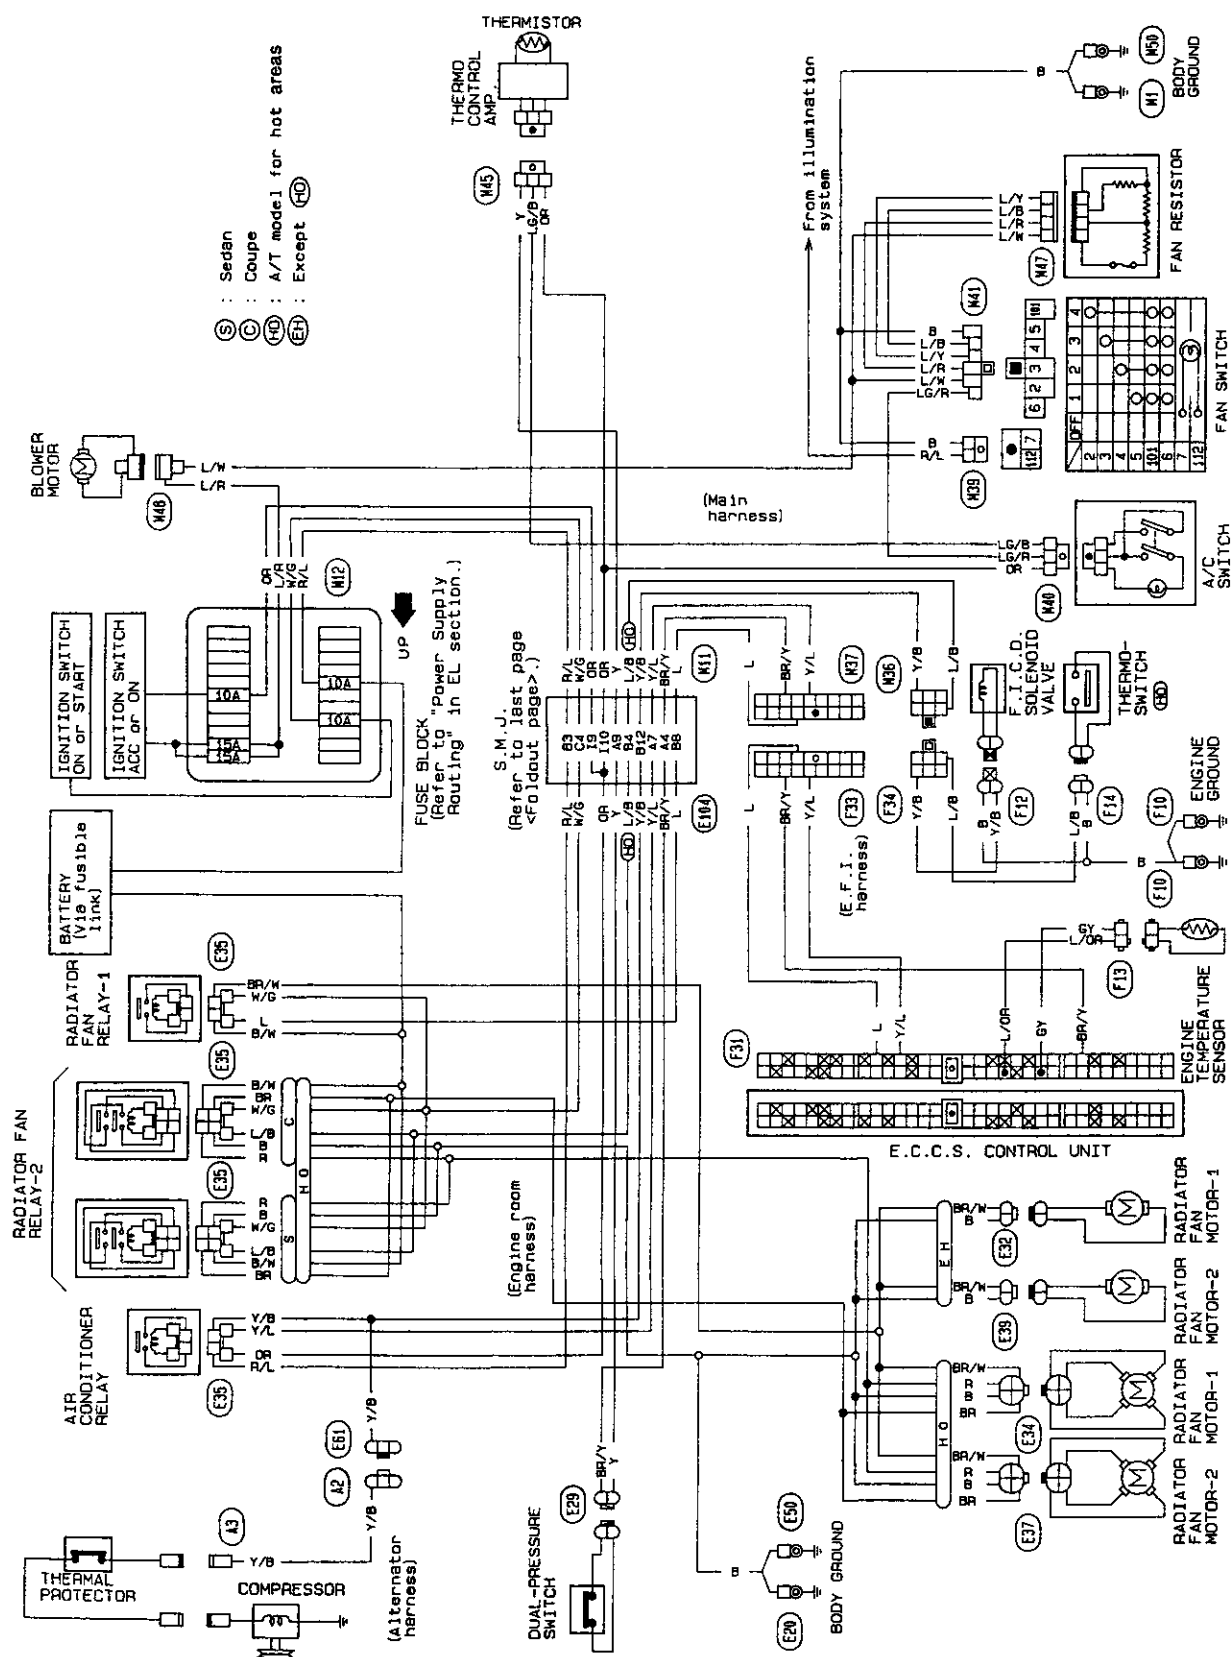

TROUBLE DIAGNOSES

Wiring Diagram — Air conditioner (Cont'd)

LEVER CONTROL TYPE (R.H.D.) — GA16DE engine models

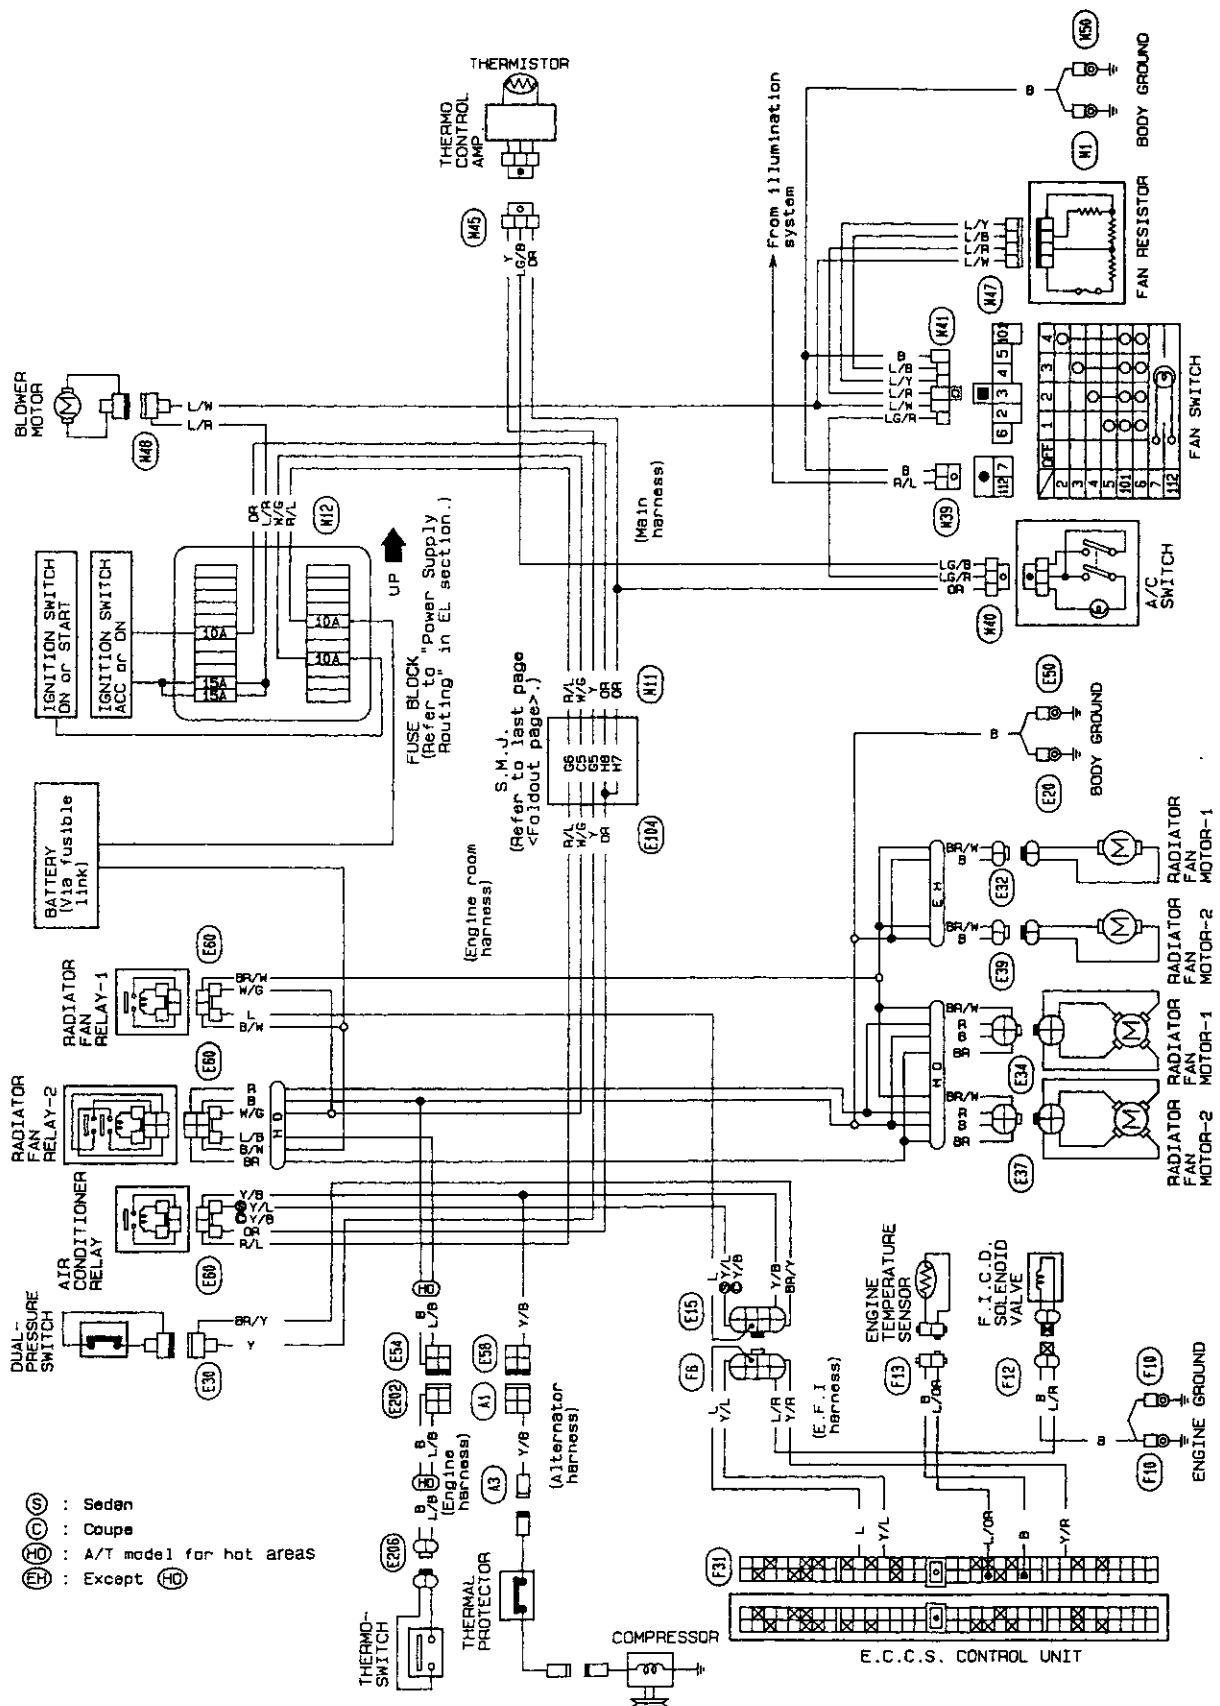

Wiring Diagram — Air conditioner (Cont'd)

[illegible]

Wiring Diagram — Air conditioner (Cont'd)

[illegible]

Wiring Diagram — Air conditioner (Cont'd)

[illegible]

Wiring Diagram — Air conditioner (Cont'd)

- Ⓑ . B13 model
- Ⓐ : N14 model
- Ⓓ : With daytime light system
- Ⓔ : Without daytime light system
- * : 10A...B13 model
15A...N14 model




Wiring Diagram — Air conditioner (Cont'd)

[illegible]

TROUBLE DIAGNOSES

Wiring Diagram — Air conditioner (Cont'd)

LEVER CONTROL TYPE — E10S and CD engine models

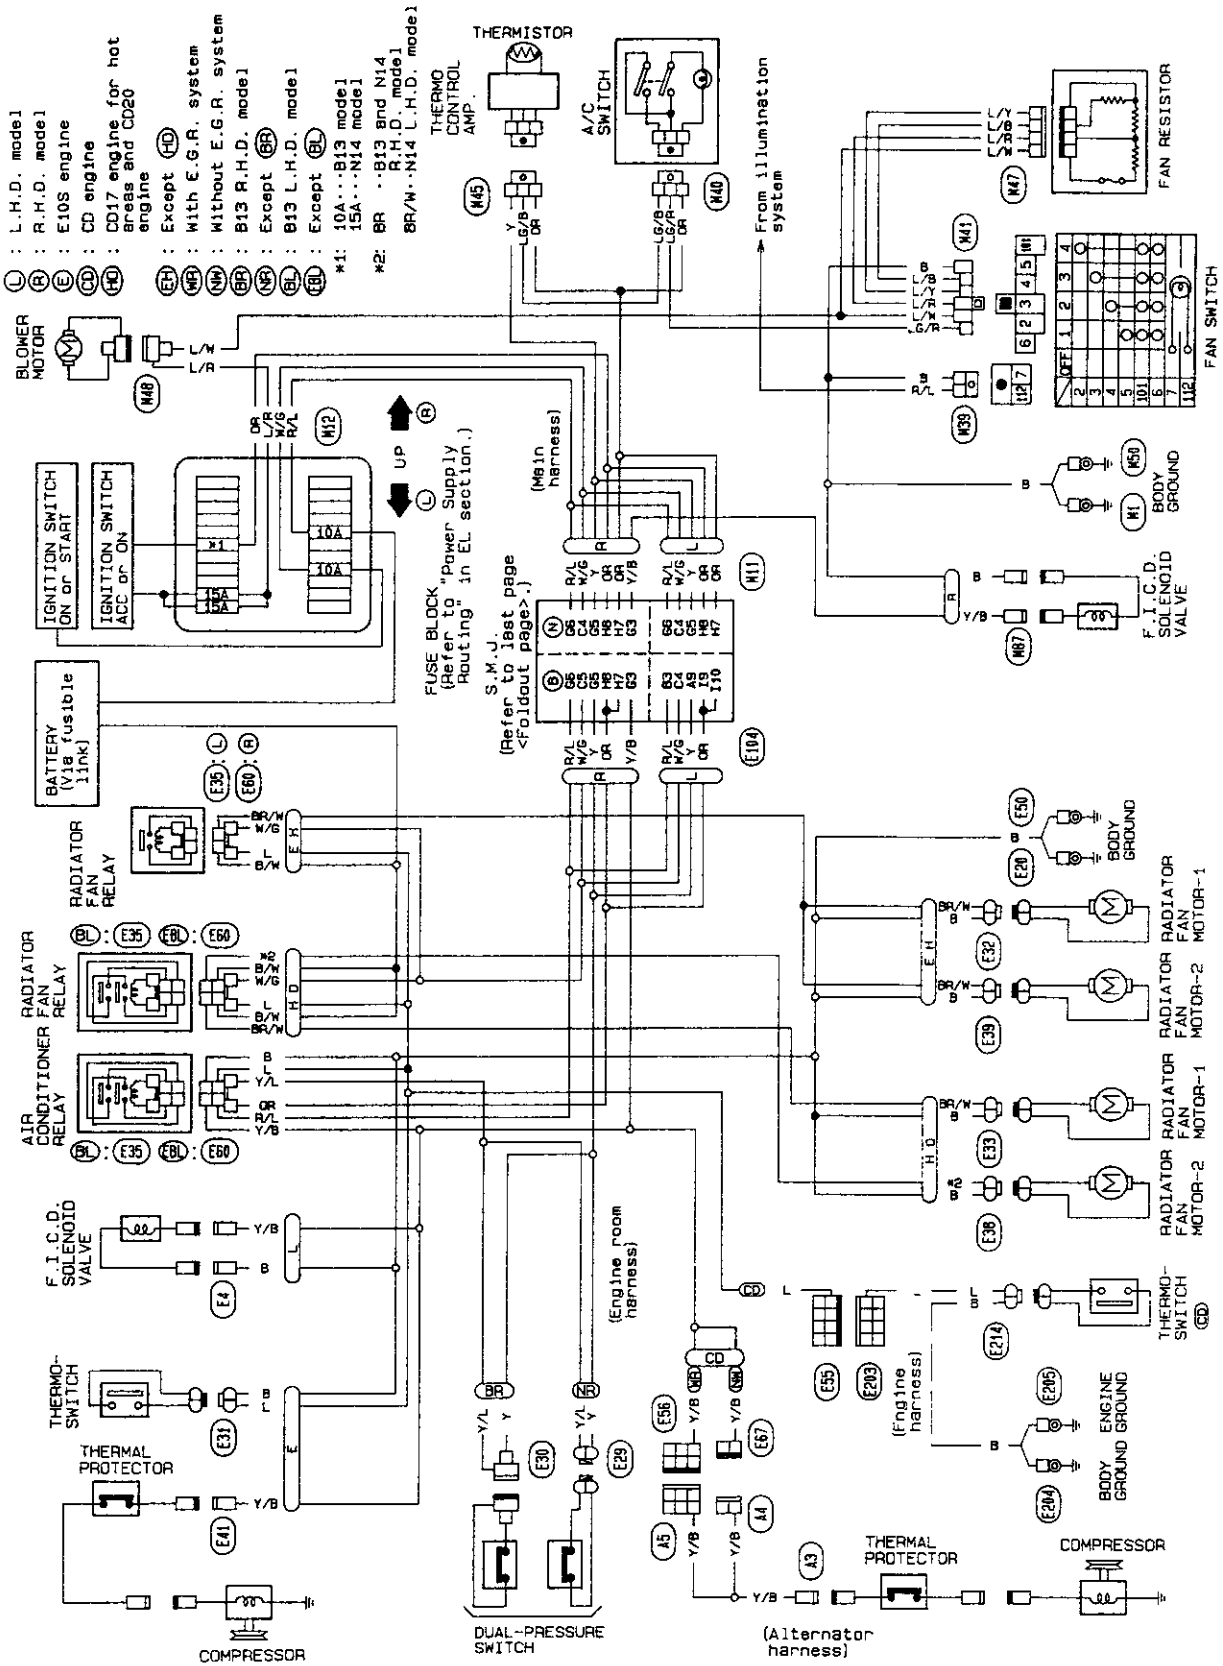


TROUBLE DIAGNOSES

Main Power Supply and Ground Circuit Check

POWER SUPPLY CIRCUIT CHECK FOR A/C SYSTEM

Check power supply circuit for air conditioning system.

Refer to "POWER SUPPLY ROUTING" in EL section and A/C ELECTRICAL CIRCUIT.

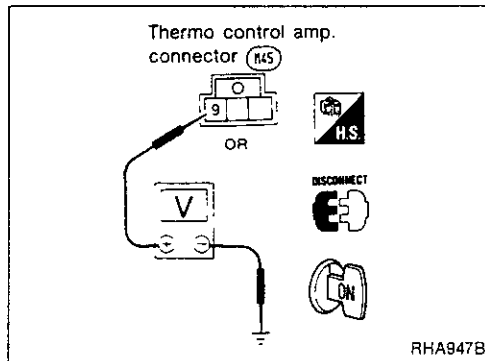


THERMO CONTROL AMP. CHECK

Check power supply circuit for thermo control amp. with ignition switch ON.

1. Disconnect thermo control amp. harness connector.
2. Connect voltmeter from harness side.
3. Measure voltage across terminal No. ⑨ and body ground.

Voltmeter terminal		Voltage
+	-	
⑨	Body ground	Approx. 12V

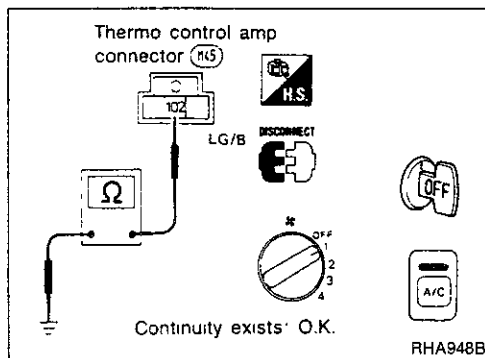


Check body ground circuit for thermo control amp. with ignition switch OFF, A/C switch ON and fan switch ON.

1. Disconnect thermo control amp. harness connector.
2. Connect ohmmeter from harness side.
3. Check for continuity between terminal No. ⑩② and body ground.

Ohmmeter terminal		Continuity
+	-	
⑩②	Body ground	Yes

TROUBLE DIAGNOSES

Main Power Supply and Ground Circuit Check (Cont'd)

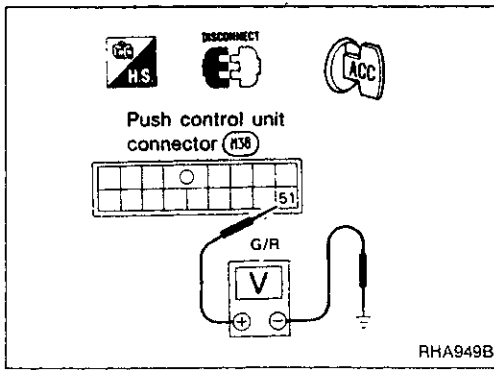


PUSH CONTROL UNIT CHECK

Check power supply circuit for push control unit with ignition switch at ACC.

1. Disconnect push control unit harness connector.
2. Connect voltmeter from harness side.
3. Measure voltage across terminal No. ⑤① and body ground.

Voltmeter terminal		Voltage
⊕	⊖	
⑤①	Body ground	Approx. 12V

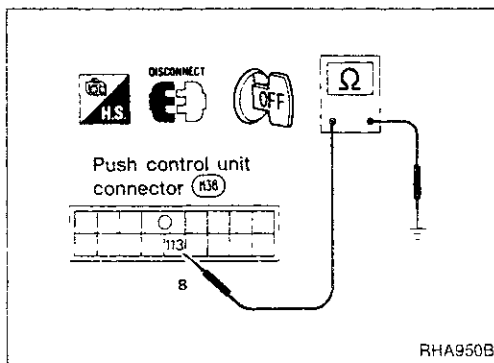

Check body ground circuit for push control unit with ignition switch OFF.

1. Disconnect push control unit harness connector.
2. Connect ohmmeter from harness side.
3. Check for continuity between terminal No. ①①③ and body ground.

Ohmmeter terminal		Continuity
⊕	⊖	
①①③	Body ground	Yes





TROUBLE DIAGNOSES

	INCIDENT	Flow chart No.
1	Fan fails to rotate.	①
2	Fan does not rotate at 1-speed.	②
3	Fan does not rotate at 2-speed.	③
4	Fan does not rotate at 3-speed.	④
5	Fan does not rotate at 4-speed.	⑤


Diagnostic Procedure 1

SYMPTOM: Blower motor does not rotate.

- Perform **PRELIMINARY CHECK 2** before referring to the following flow chart.

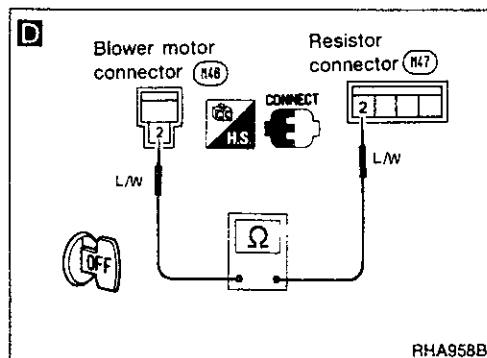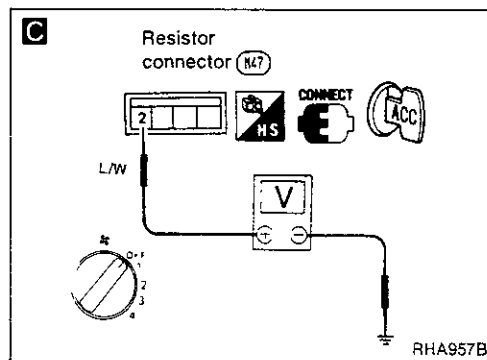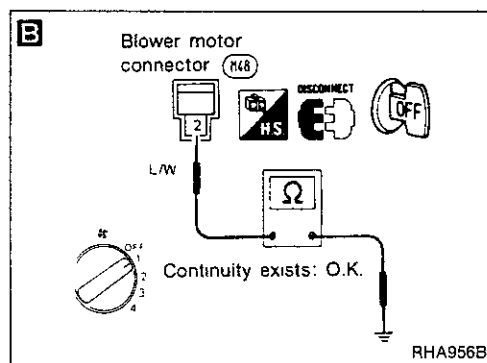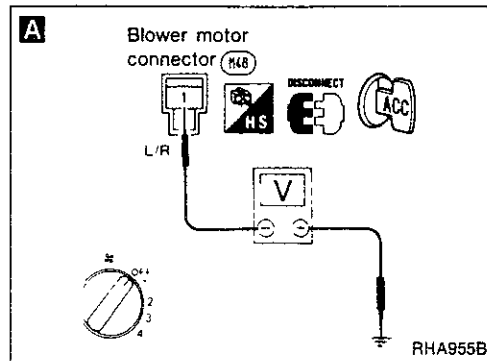




Check if blower motor rotates properly at each fan speed. Conduct check as per flow chart at left.

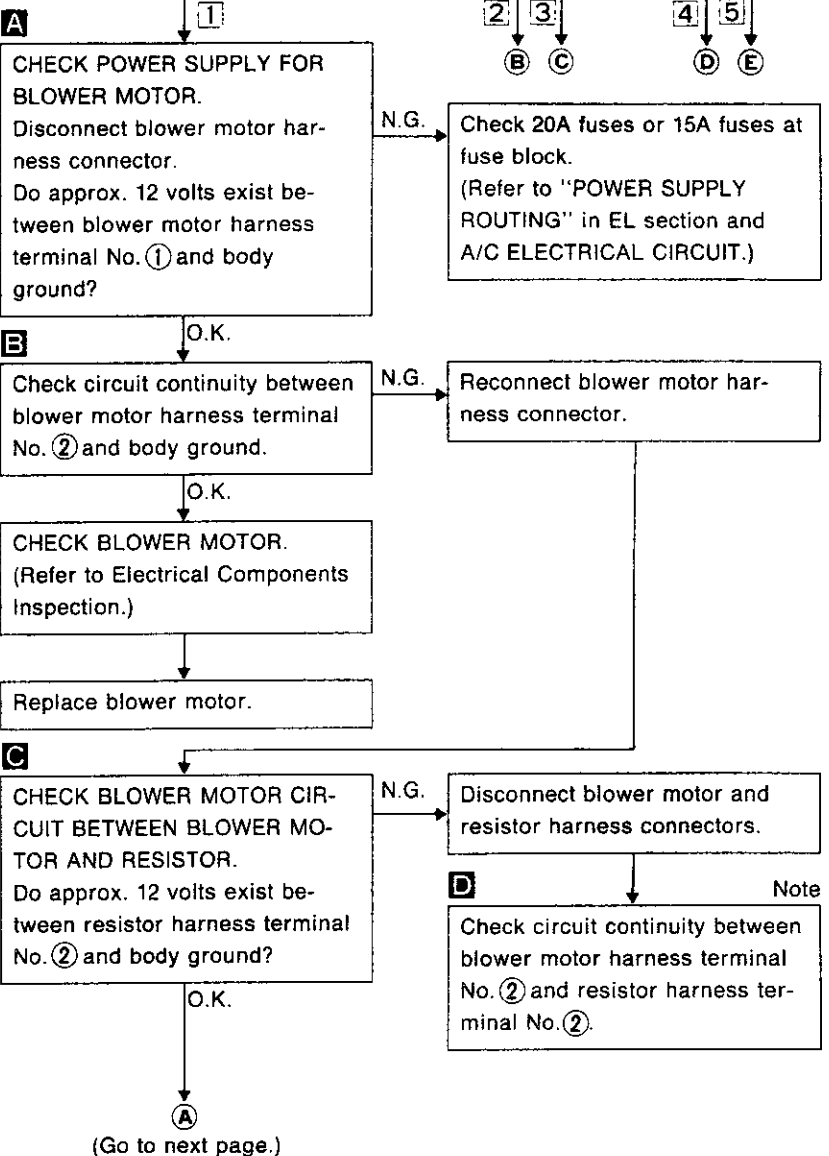



Note:
If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

Diagnostic Procedure 1 (Cont'd)

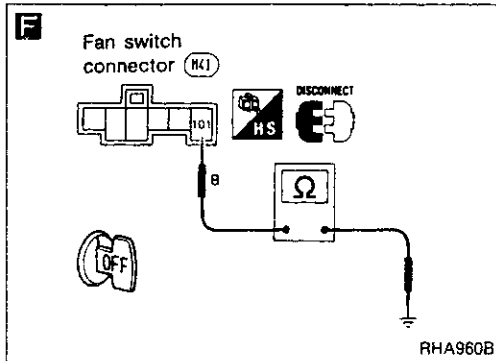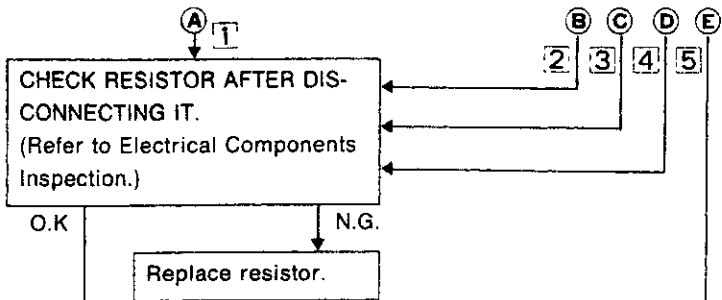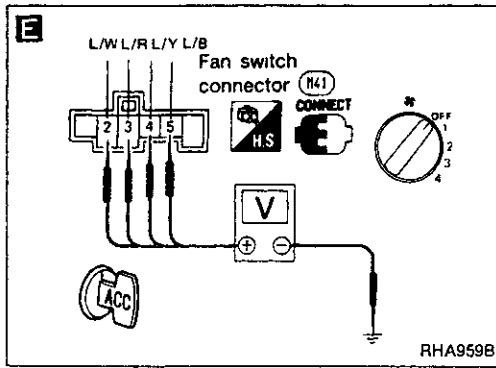

Reconnect resistor harness connector.

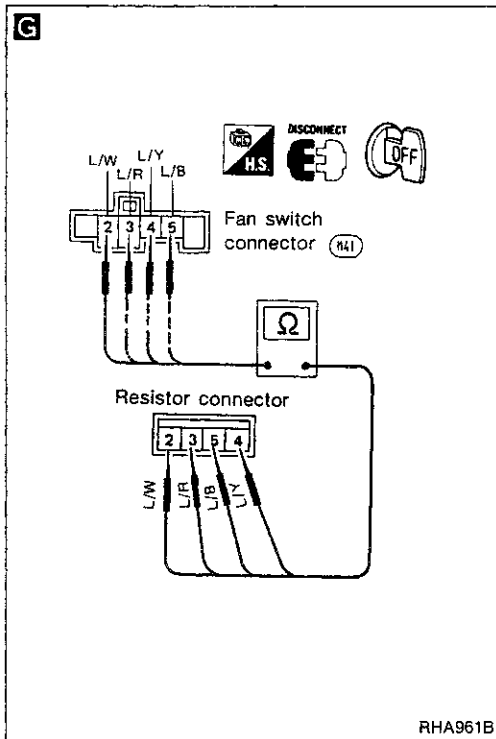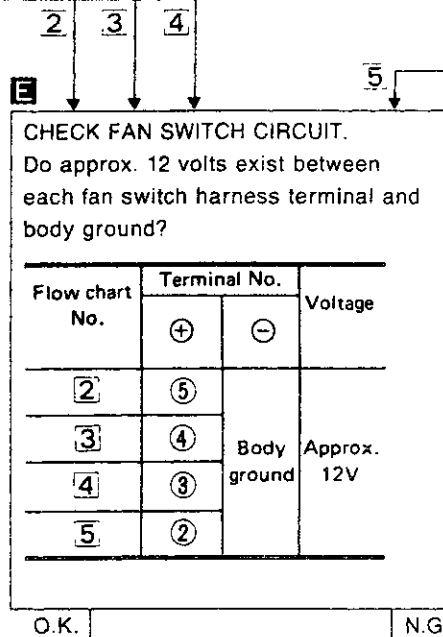

G

Note

Check circuit continuity between fan switch and resistor.

CHECK FAN SWITCH AFTER DISCONNECTING IT.
(Refer to Electrical Components Inspection.)

N.G. → Replace fan switch.

O.K. →

F

Note

Check circuit continuity between fan switch harness terminal No. **101** and body ground.



O.K. → Replace blower motor.

Note:


If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

Diagnostic Procedure 2 (Cont'd)

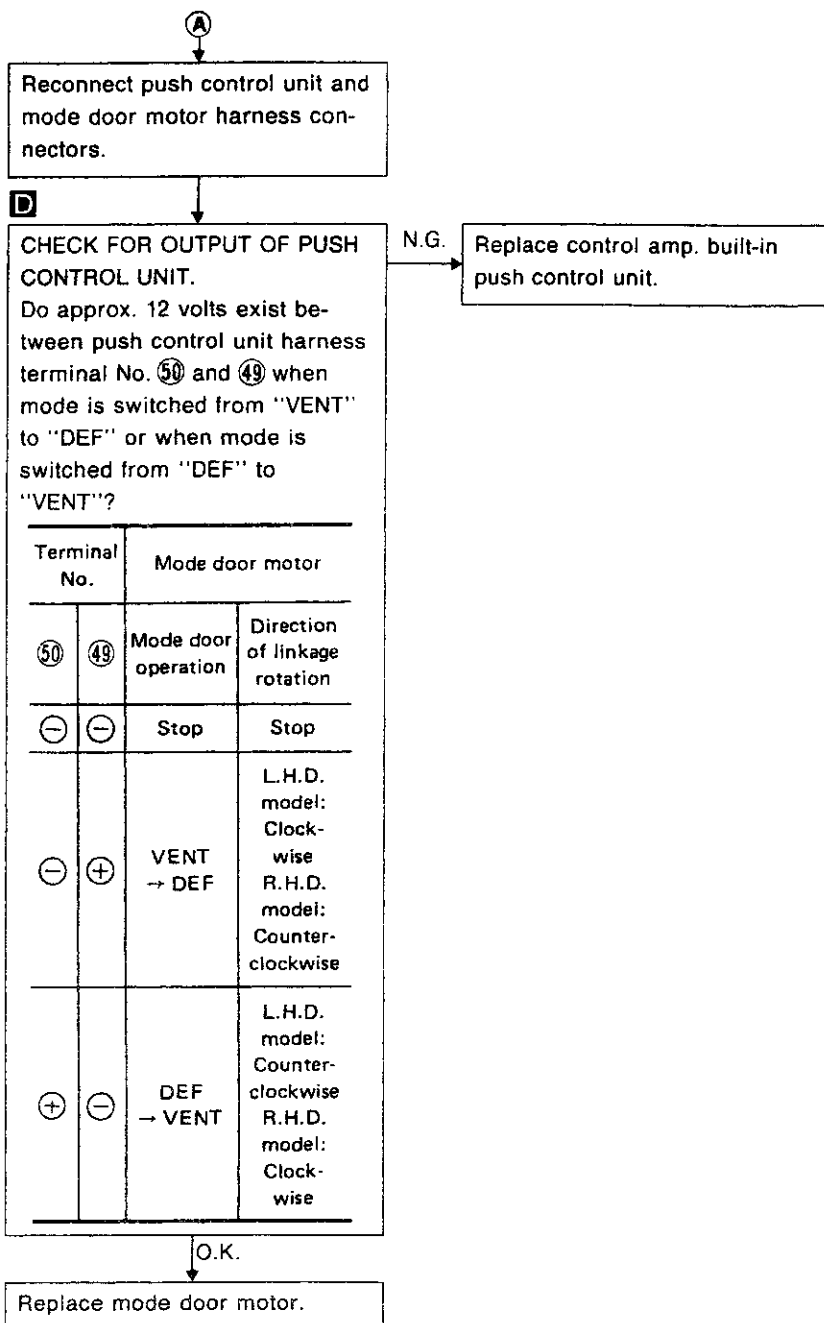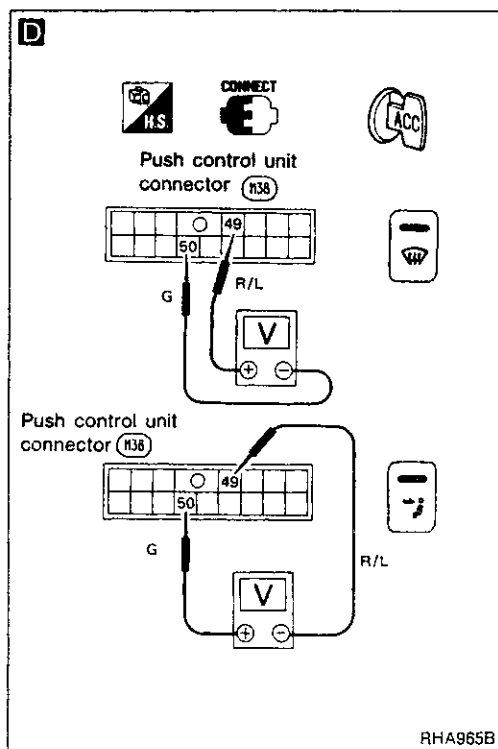


TROUBLE DIAGNOSES

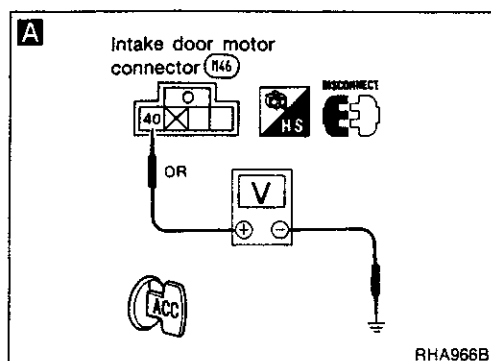

Diagnostic Procedure 3

SYMPTOM: Intake door does not change. — For push control type

- Perform **PRELIMINARY CHECK 1 (FOR L.H.D. MODEL ONLY)** and **Main Power Supply and Ground Circuit Check** before referring to the following flow chart.

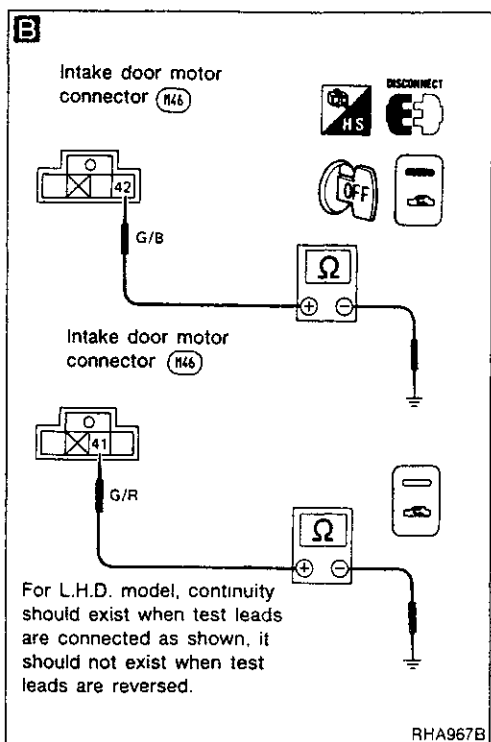

A

CHECK POWER SUPPLY FOR INTAKE DOOR MOTOR.
Disconnect intake door motor harness connector.
Do approx. 12 volts exist between intake door motor harness terminal No. ④① and body ground?

N.G. Check 10A fuses at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and A/C ELECTRICAL CIRCUIT.)

B

CHECK BODY GROUND CIRCUIT FOR INTAKE DOOR MOTOR.
Does continuity exist between intake door motor harness terminal No. ④② and body ground when REC switch is ON?
Does continuity exist between intake door motor harness terminal No. ④① and body ground when REC switch is OFF?


N.G. Disconnect push control unit harness connector.

C Note

Check circuit continuity between push control unit harness terminal No. ④② (④①) and intake door motor harness terminal No. ④② (④①)?




O.K. Replace control amp. built-in push control unit.

O.K. Replace intake door motor.

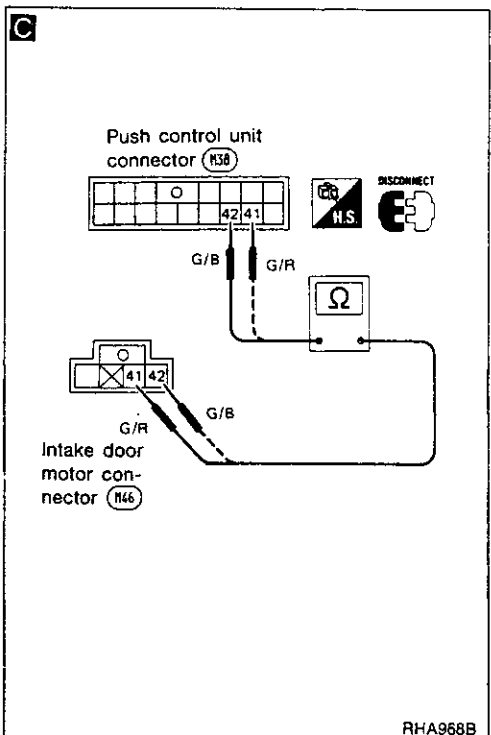

Note:


If the result is N.G. after checking circuit continuity, repair harness or connector.

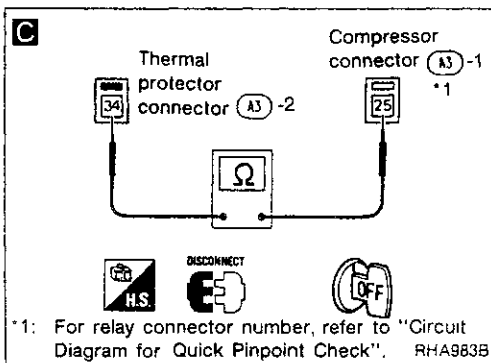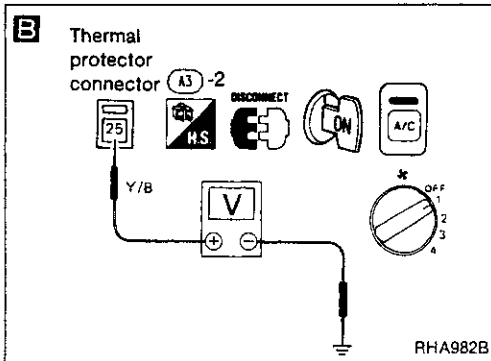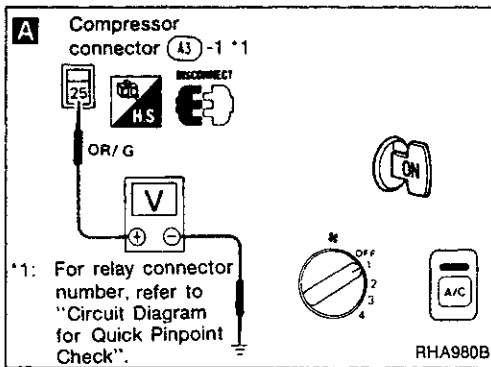

Diagnostic Procedure 4

SYMPTOM: Magnet clutch does not operate when A/C switch and fan switch are ON. — GA16DE and SR20DE engine models

- Perform PRELIMINARY CHECK 2 before referring to the following flow chart.






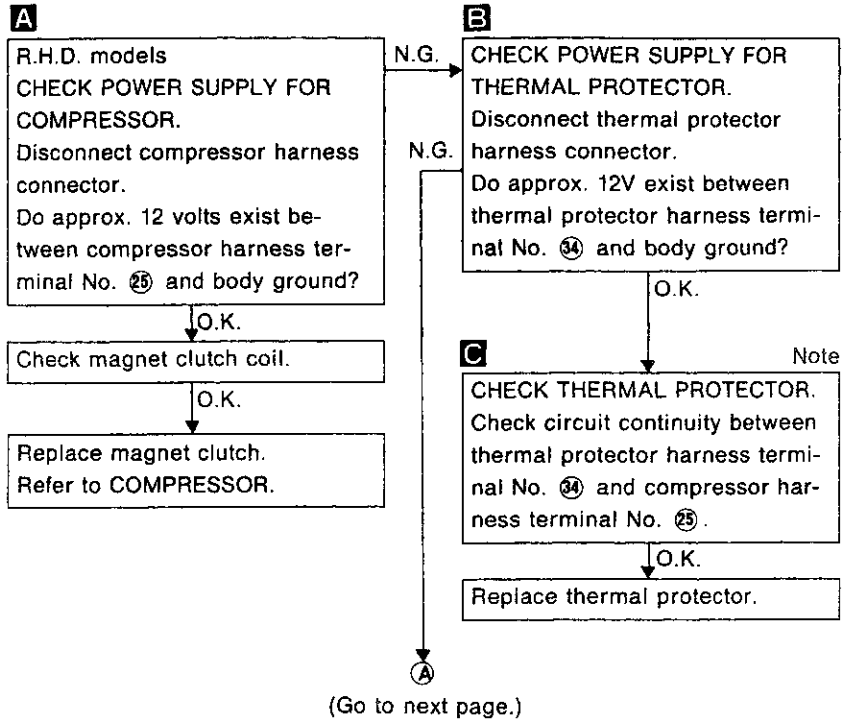


Note:

If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

Diagnostic Procedure 4 (Cont'd)











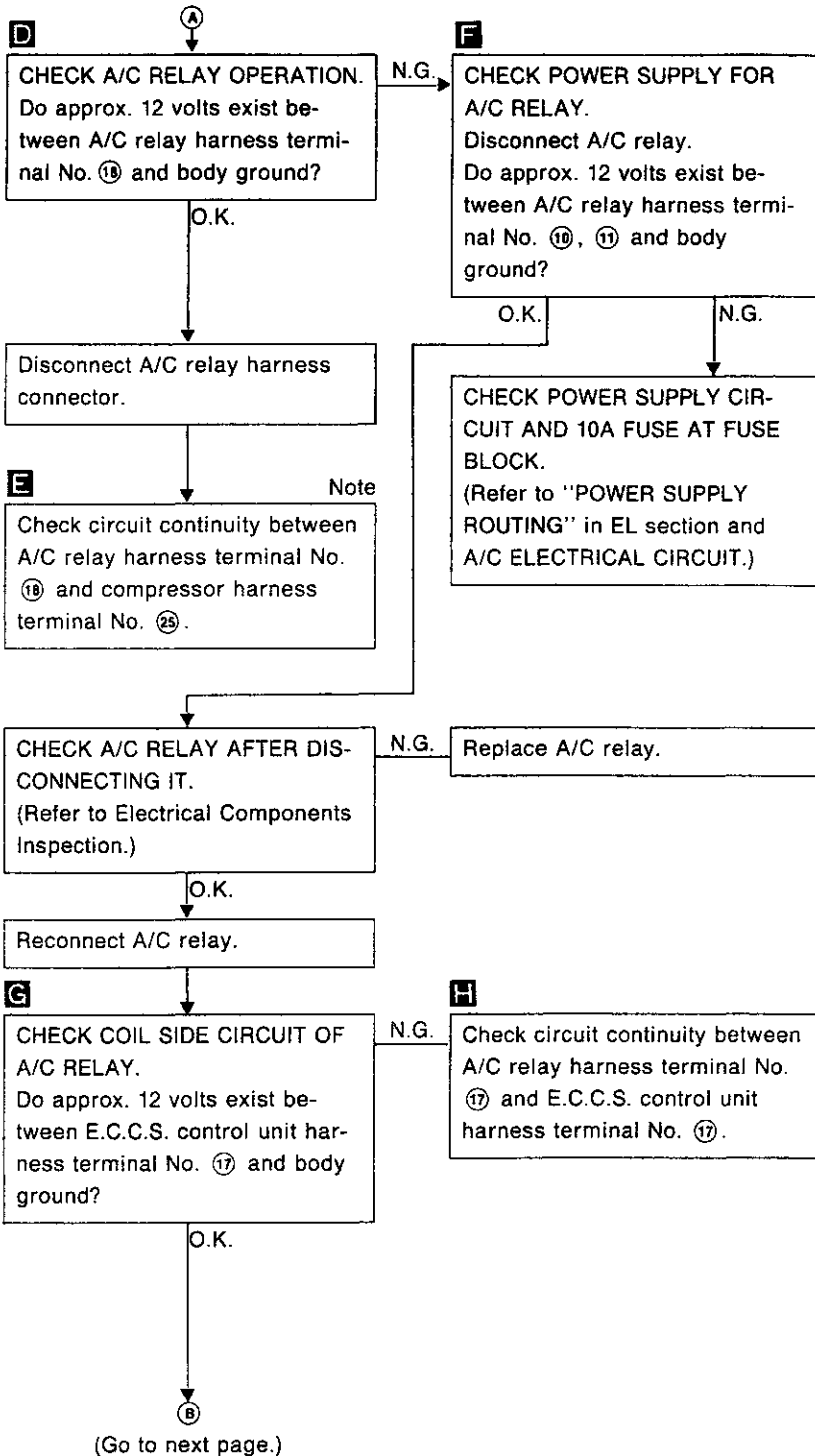
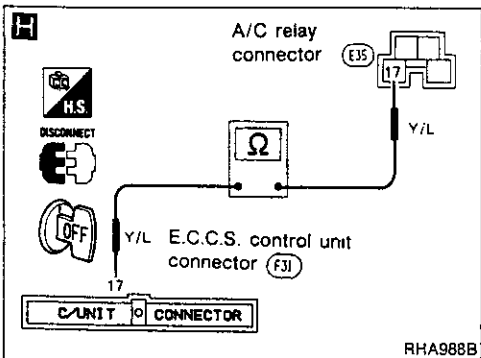
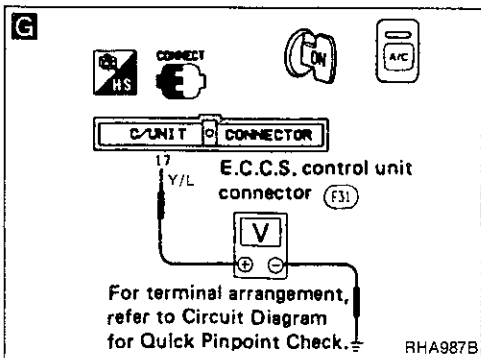
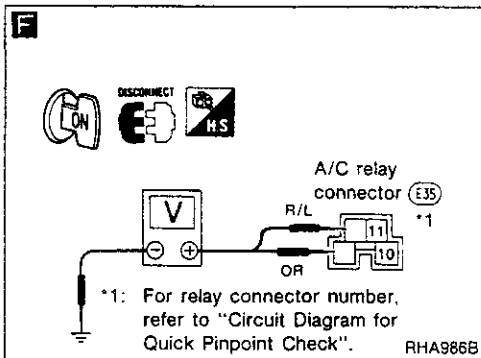
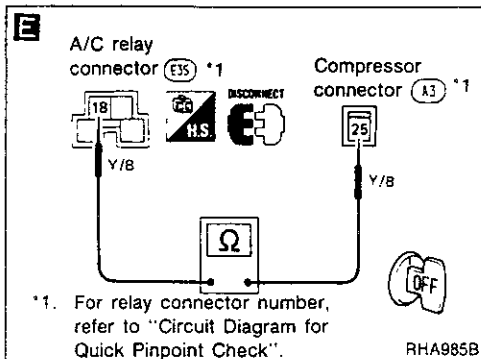
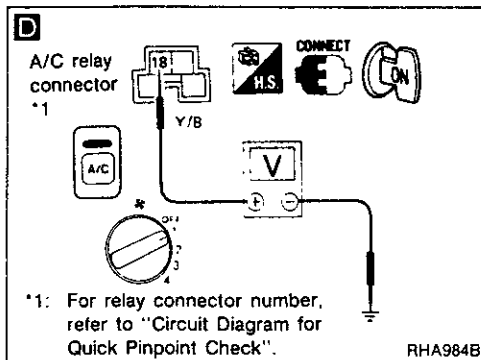


Note:


If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

    Diagnostic Procedure 4 (Cont'd)

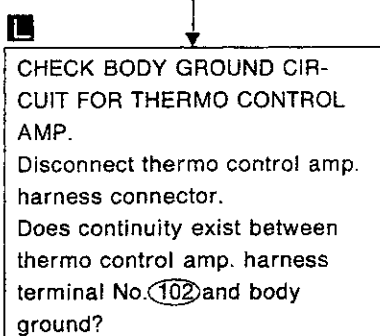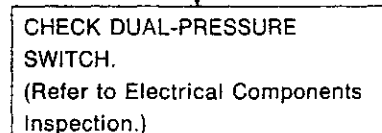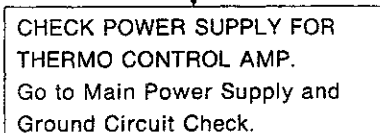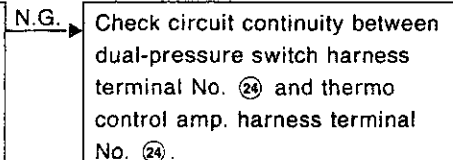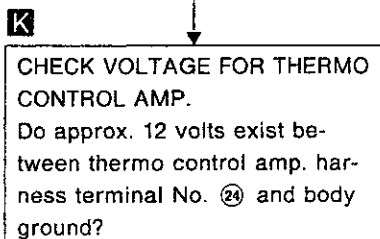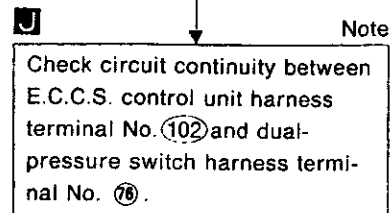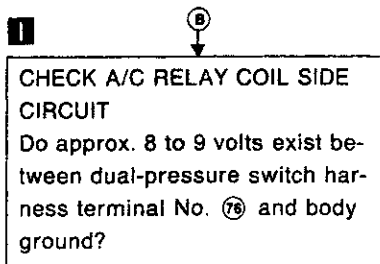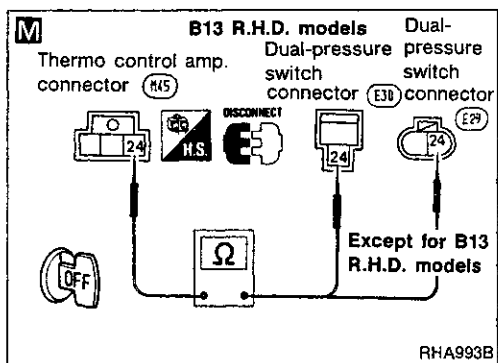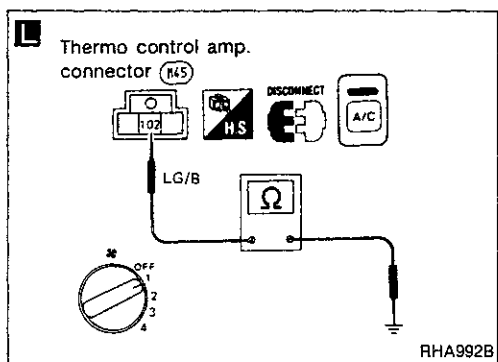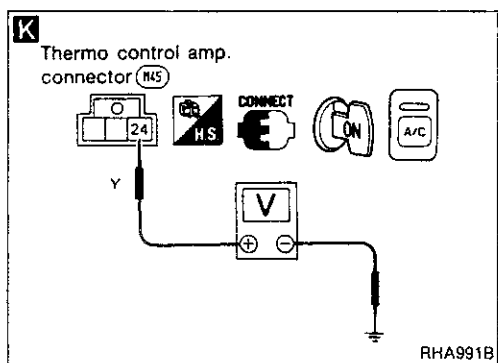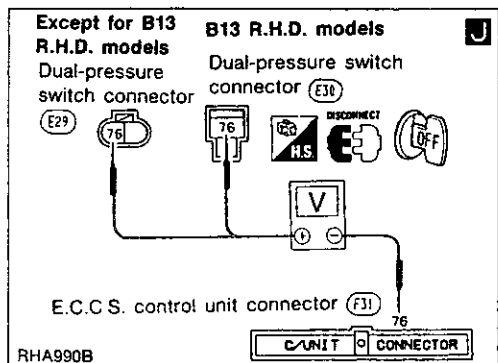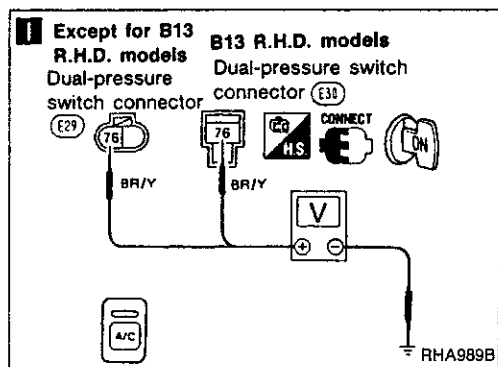




(Go to next page.)

 







Note:
If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

 Diagnostic Procedure 4 (Cont'd)

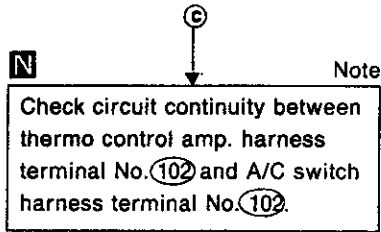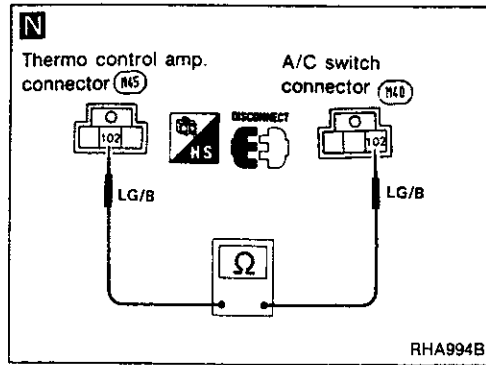




Replace A/C switch.

 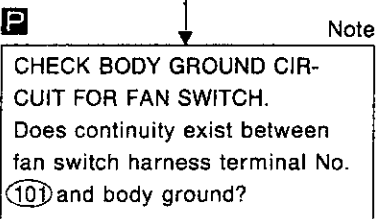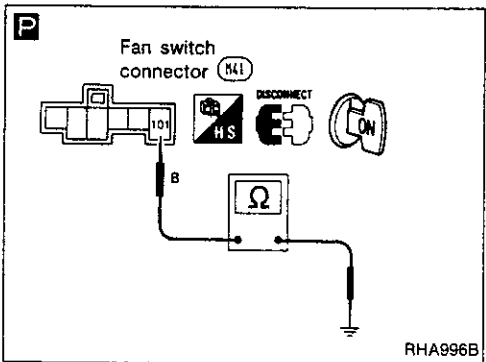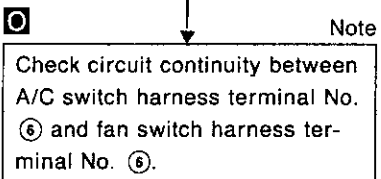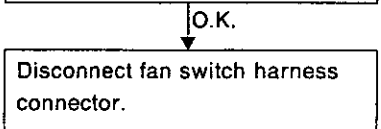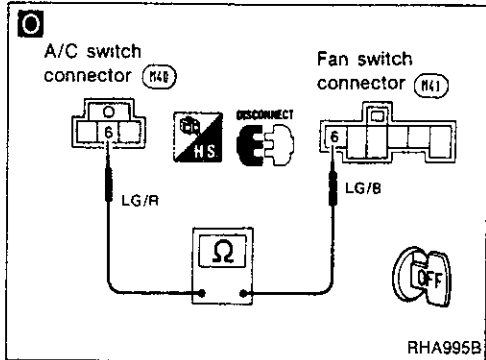

Replace fan switch.

Note:


If the result is N.G. after checking circuit continuity, repair harness or connector.

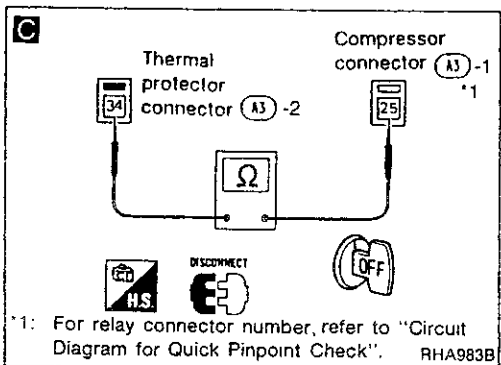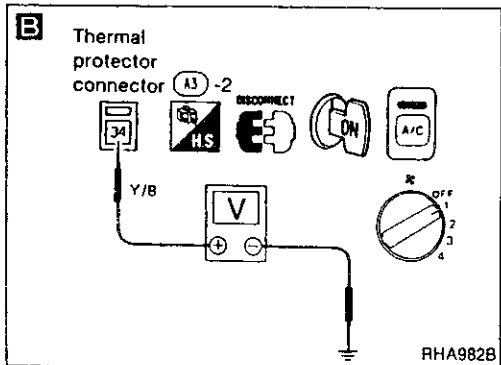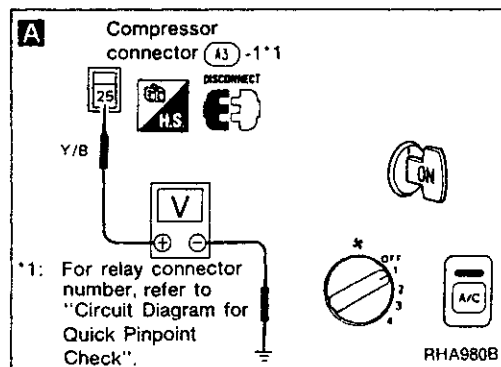

Diagnostic Procedure 5

SYMPTOM: Magnet clutch does not operate when A/C switch and fan switch are ON. — Except for GA16DE and SR20DE engine models

- Perform PRELIMINARY CHECK 2 before referring to the following flow chart.






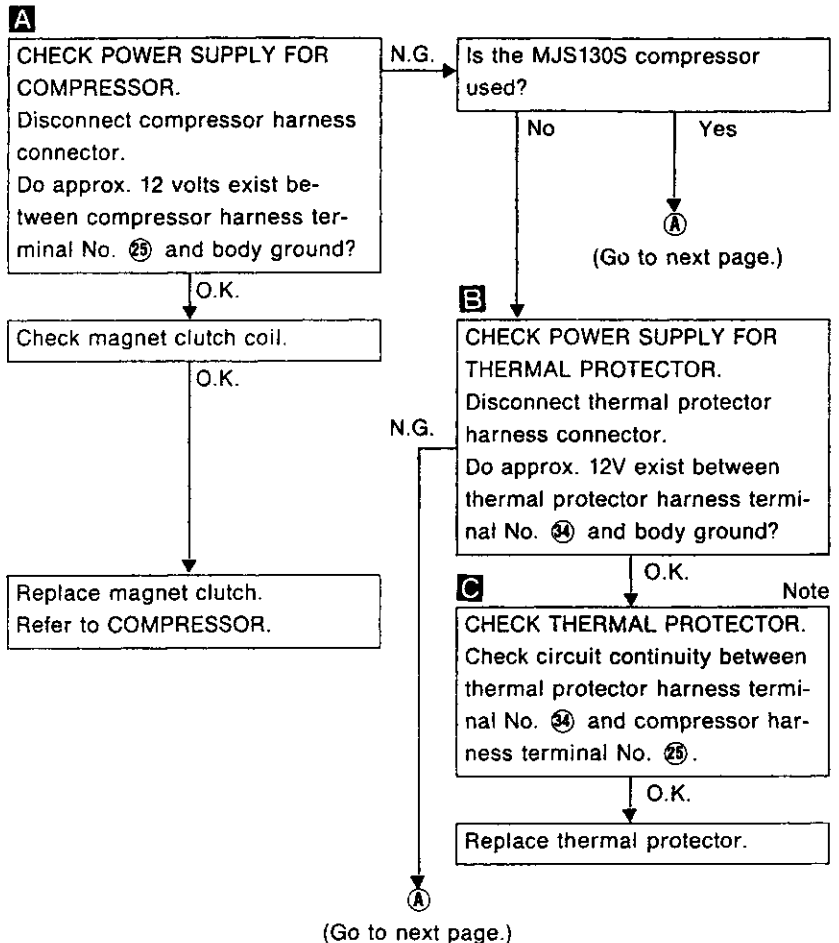


Note:

If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES







Diagnostic Procedure 5 (Cont'd)

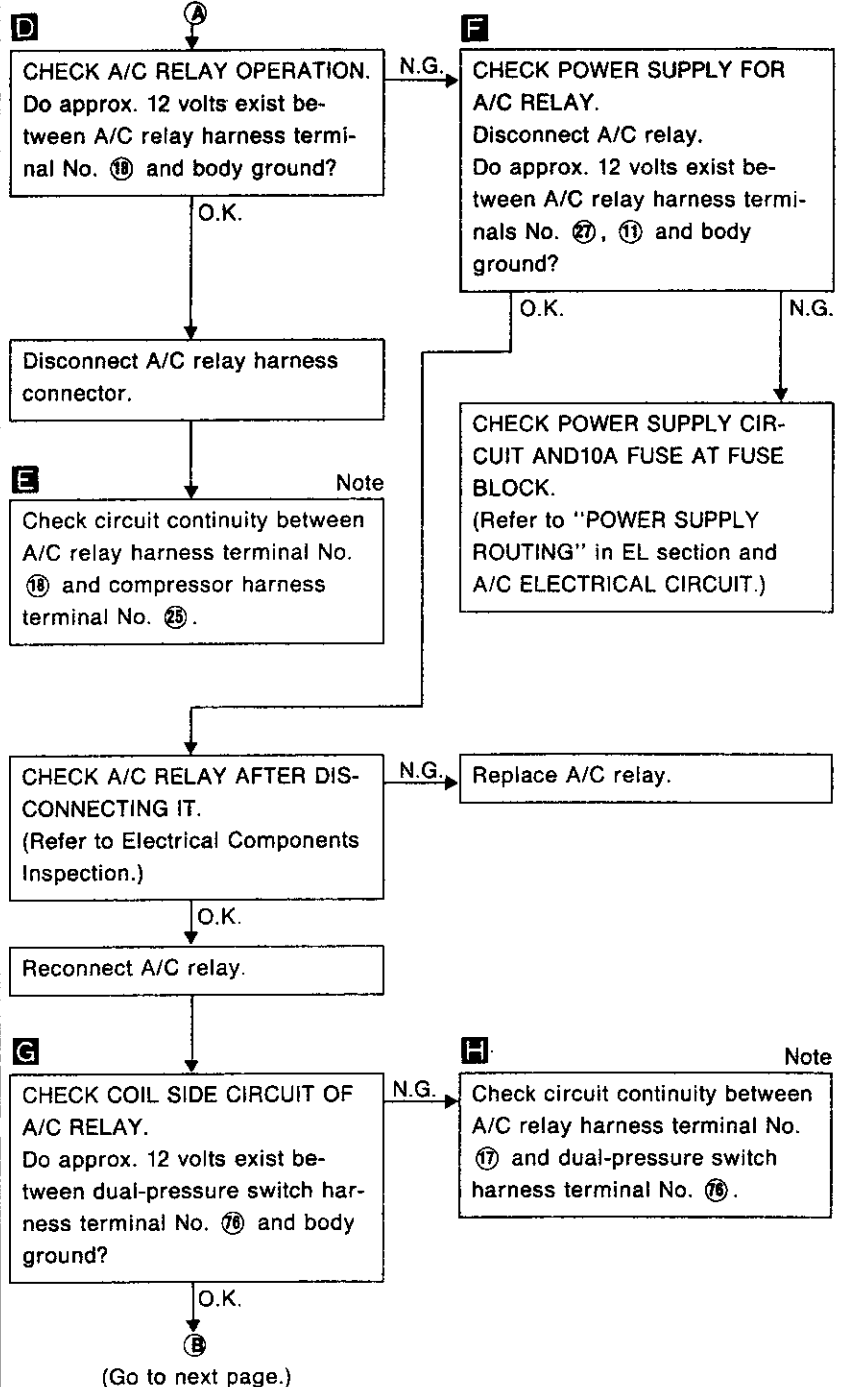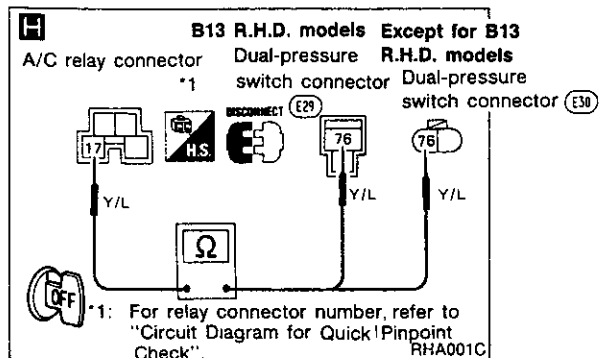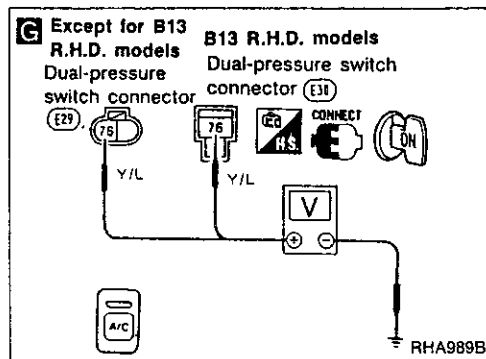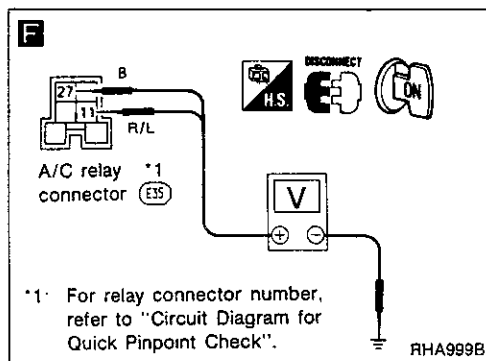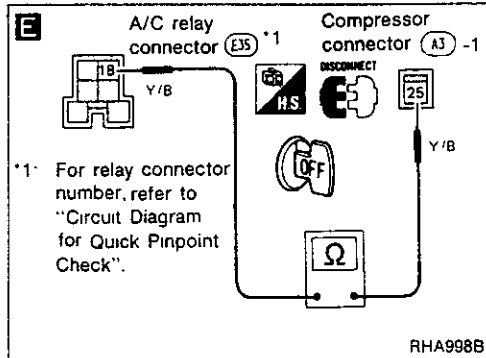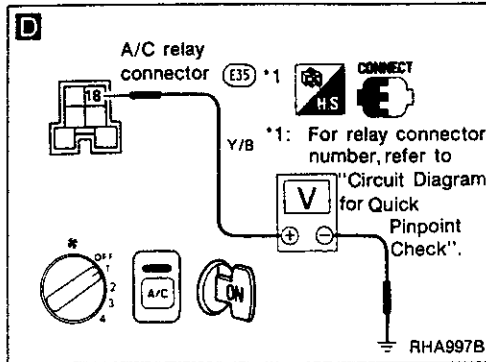

Note:
If the result is N.G. after checking circuit continuity, repair harness or connector.



TROUBLE DIAGNOSES

Diagnostic Procedure 5 (Cont'd)

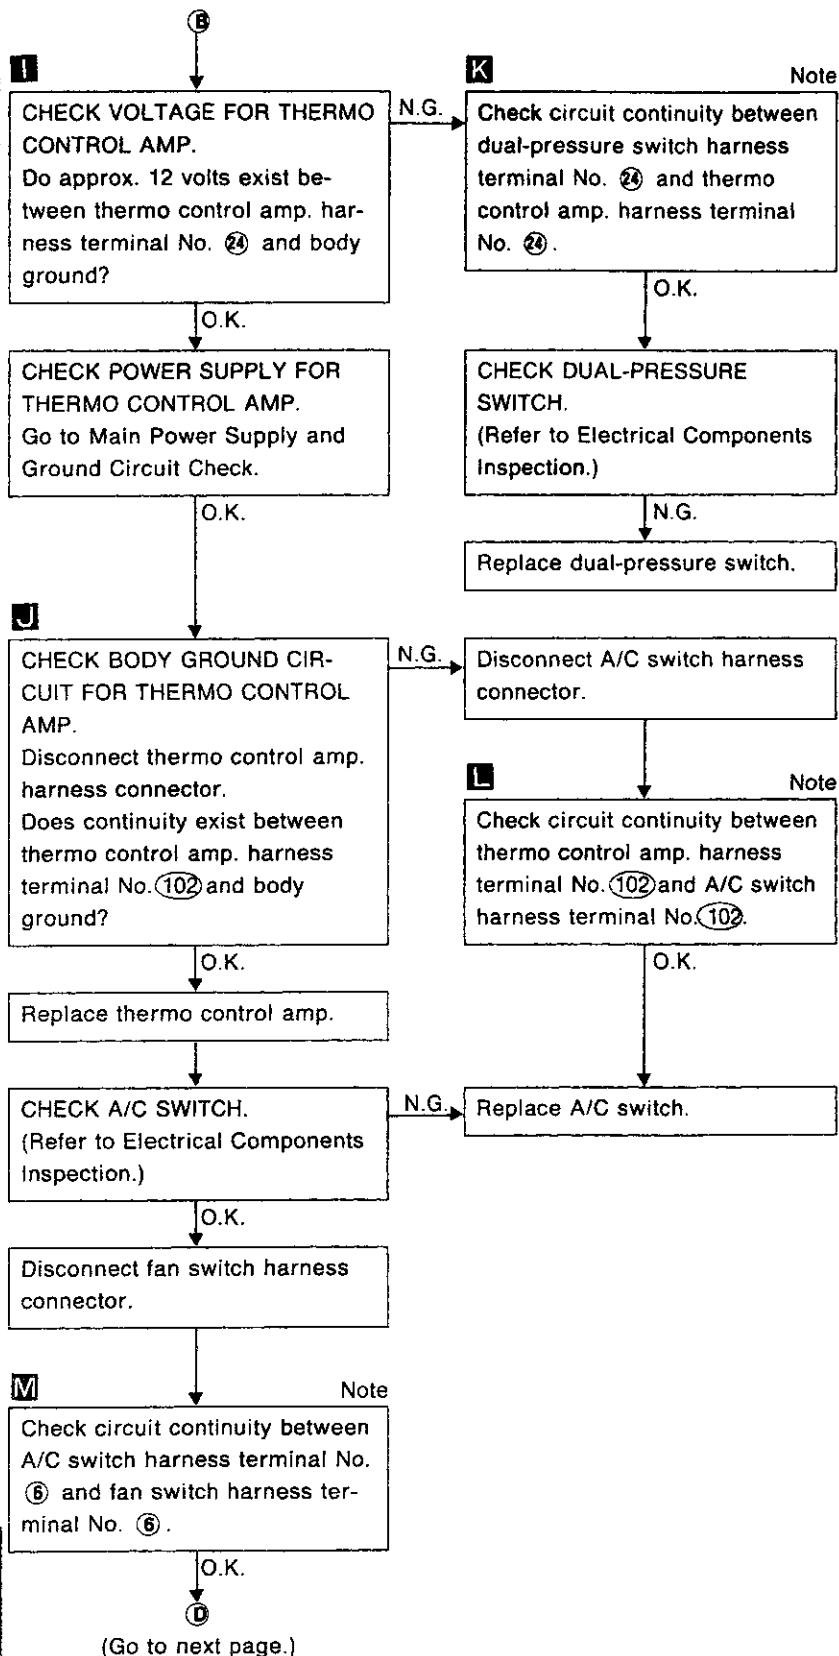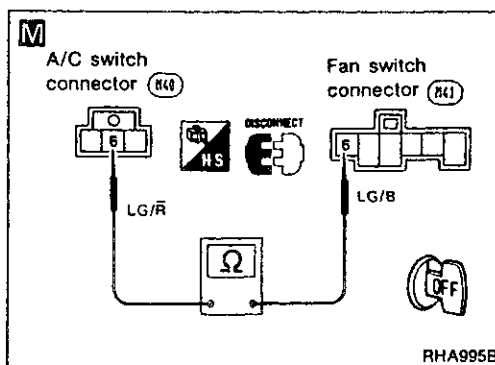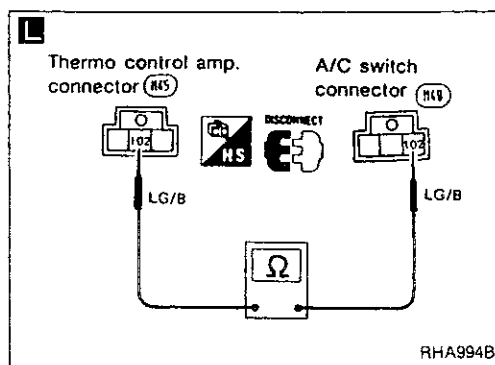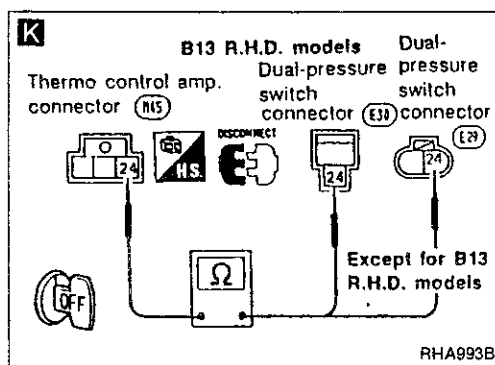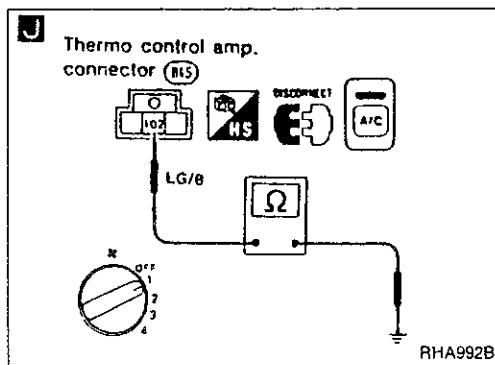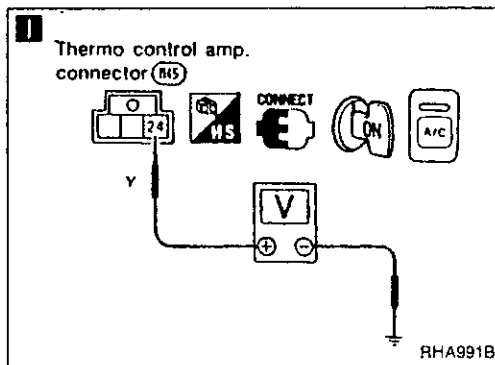

TROUBLE DIAGNOSES

Diagnostic Procedure 5 (Cont'd)

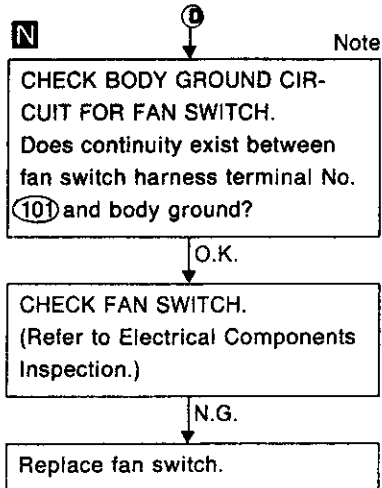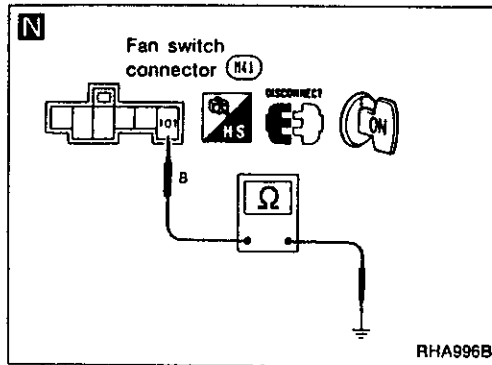

Note:

If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

Diagnostic Procedure 6

SYMPTOM: Illumination or indicators of push control unit do not come on. — For push control type

- Perform Main Power Supply and Ground Circuit Check before referring to the following flow chart.

Turn ignition switch and lighting switch ON.

CHECK ILLUMINATION AND INDICATORS.

- Turn A/C, REC and fan switches ON.
- Push VENT, B/L, FOOT, F/D and DEF switches in order.
- Check for incidents and follow the repairing methods as shown:

INCIDENTS								"How to repair"
ILL.	VENT	B/L	FOOT	F/D	DEF	REC	A/C	
X	○	○	○	○	○	○	△	Go to DIAGNOSTIC PROCEDURE 6-1.
△	○	○	○	○	○	○	X	Go to DIAGNOSTIC PROCEDURE 6-2.
○	X	X	X	X	X	X	△	Go to DIAGNOSTIC PROCEDURE 6-3.
△	△						△	Replace control amp. built-in push control unit.
○	X	X	X	X	X	X	○	Replace control amp. built-in push control nit.

○ : Illumination or indicator comes on.

X : Illumination or indicator does not come on.

△ : Some indicators for VENT, B/L, FOOT, F/D, DEF or REC come on.

DIAGNOSTIC PROCEDURE 6-1

CHECK OTHER ILLUMINATION SYSTEMS EXCEPT FOR A/C SYSTEM.

Does other illumination come on with ignition switch and lighting switch ON?

N.G.

CHECK ILLUMINATION SYSTEM. Refer to illumination/Wiring Diagram in EL section.

O.K.

Turn ignition switch and lighting switch OFF.

A



CHECK ILLUMINATION BULB. Remove push control unit and disconnect harness connectors. Remove illumination bulb(s) and check them.

N.G.

Replace illumination bulb(s).


O.K.

(Go to next page.)

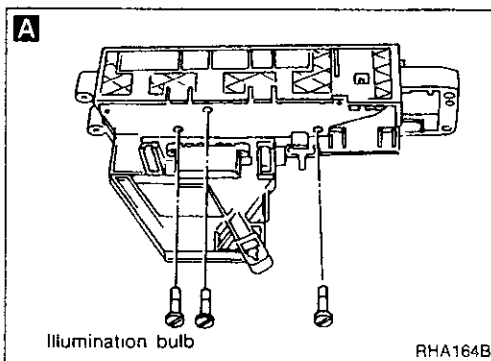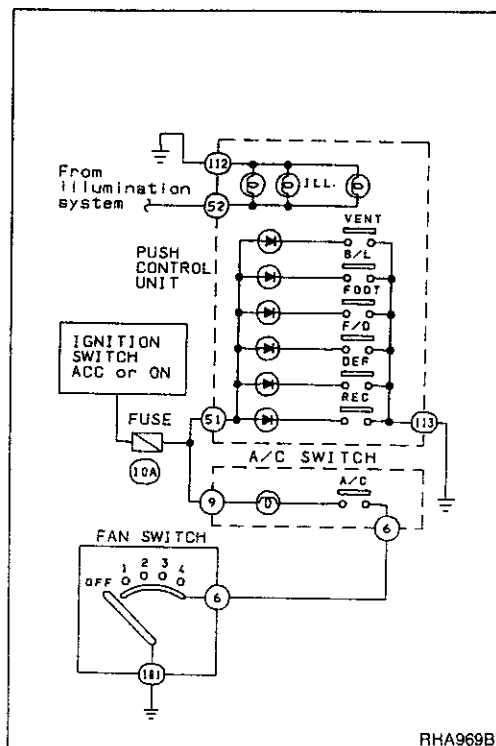

TROUBLE DIAGNOSES

Diagnostic Procedure 6 (Cont'd)

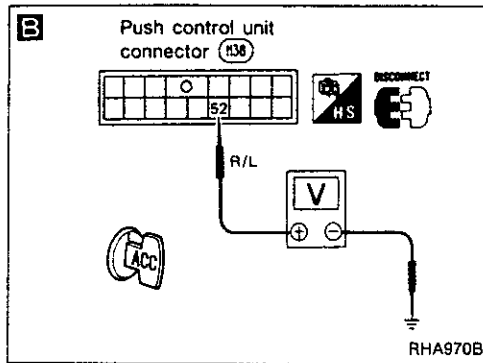


B

CHECK POWER SUPPLY FOR ILLUMINATION WITH LIGHTING SWITCH ON.
Do approx. 12 volts exist between push control unit harness terminal No. ⑤② and body ground?

N.G. → **CHECK POWER SUPPLY FOR A/C ILLUMINATION SYSTEM.**
Refer to Illumination/Wiring Diagram in EL section.

O.K.

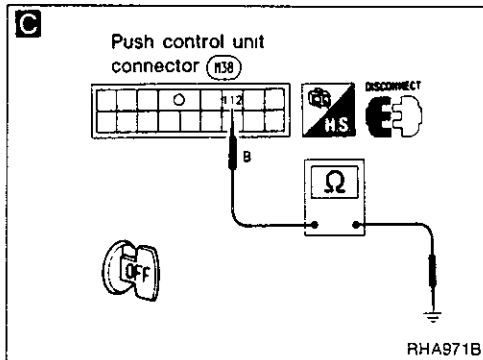

C

CHECK BODY GROUND CIRCUIT FOR ILLUMINATION.
Does continuity exist between push control unit harness terminal No. ①①② and body ground?

Note

O.K.

Replace control amp. built-in push control unit.






Note:

If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

Diagnostic Procedure 6 (Cont'd)

DIAGNOSTIC PROCEDURE 6-2

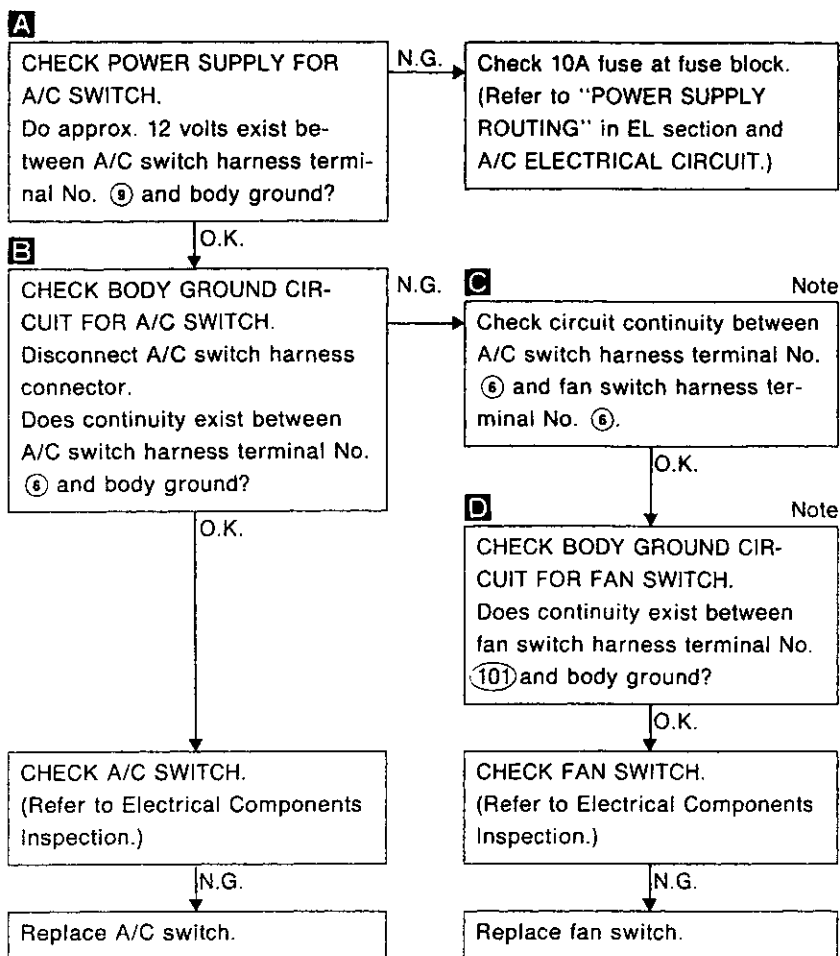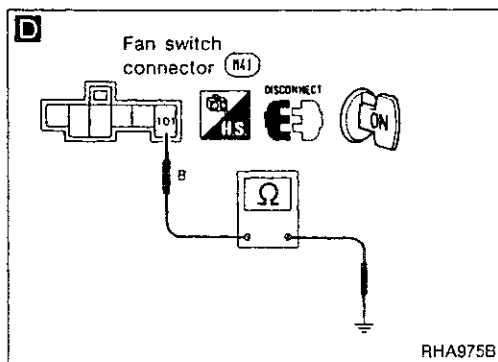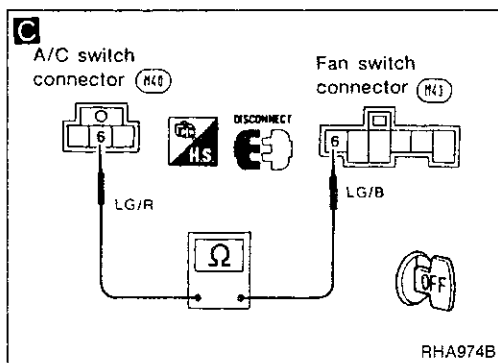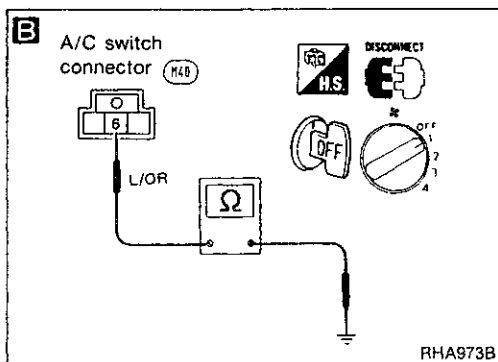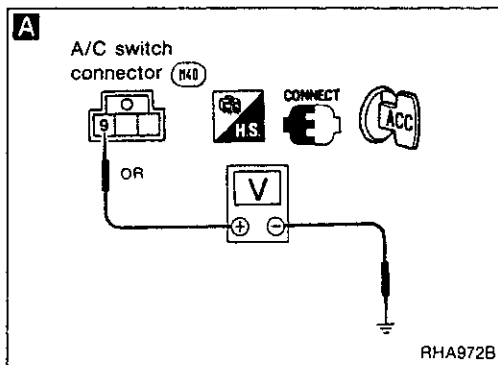



Note:

If the result is N.G. after checking circuit continuity, repair harness or connector.

TROUBLE DIAGNOSES

Diagnostic Procedure 6 (Cont'd)

DIAGNOSTIC PROCEDURE 6-3

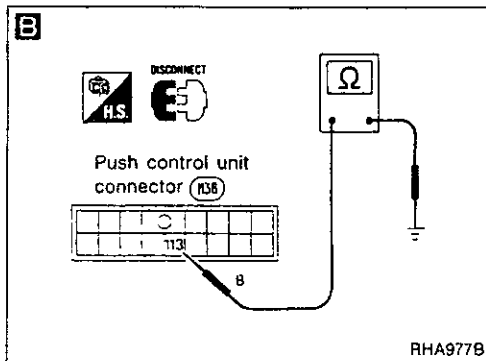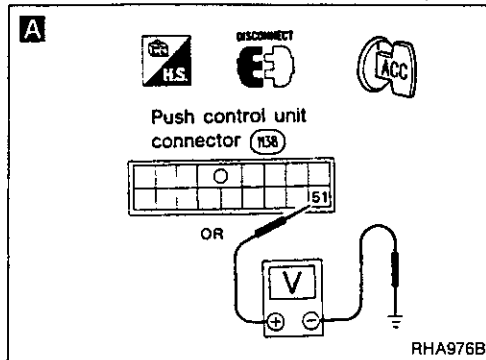

Turn ignition switch and lighting switch OFF.

Disconnect push control unit harness connector.

A

CHECK POWER SUPPLY FOR PUSH CONTROL UNIT.
Do approx. 12 volts exist between push control unit harness terminal No. ⑤1 and body ground?

N.G. → Check 10A fuse at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and A/C ELECTRICAL CIRCUIT.)

O.K.

B

CHECK BODY GROUND CIRCUIT FOR PUSH CONTROL UNIT.
Does continuity exist between push control unit harness terminal No. ①13 and body ground?


Note

O.K.

Replace control amp. built-in push control unit.

Note:

If the result is N.G. after checking circuit continuity, repair harness or connector.

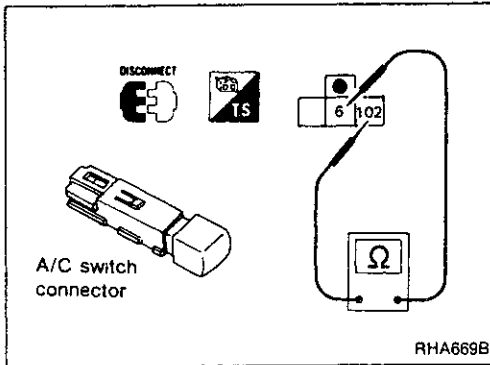


Electrical Components Inspection

A/C SWITCH

Check continuity between terminals at each switch position.

Switch condition	Terminal No.		Continuity
	⊕	⊖	
A/C			
ON			Yes
OFF	⑩②	⑥	ON

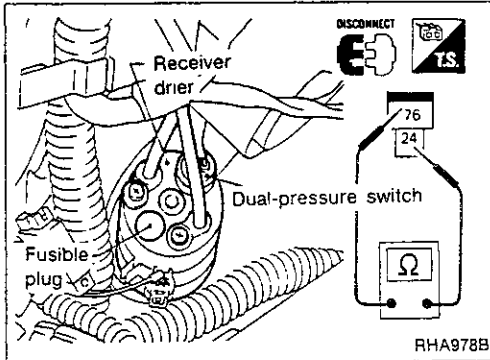


DUAL-PRESSURE SWITCH

High-pressure side line pressure kPa (bar, kg/cm ² ,psi)	Operation	Continuity
Decreasing to 177 - 216 (1.77- 2.16, 1.8 - 2.2, 26 - 31) Increasing to 2,452 - 2,844 (24.5 -28.4, 25 - 29, 356 - 412)	Turn OFF	Does not exist
Increasing to 177 - 235 (1.77 - 2.35, 1.8 - 2.4, 26 - 34) Decreasing to 1,863 - 2,256 (18.6 - 22.6, 19 - 23, 270 - 327)	Turn ON	Exists


TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

THERMAL PROTECTOR

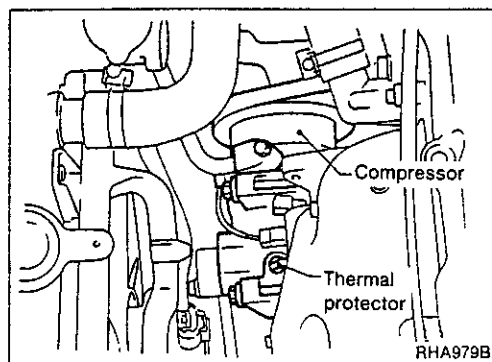


Temperature of compressor °C (°F)		Operation
NVR 140S	Increasing to approx. 135 - 145 (275 - 293)	Turn OFF
	Decreasing to approx. 120 - 130 (248 - 266)	Turn ON
DKV-14C & DKV-14D	Increasing to approx. 145 - 155 (293 - 311)	Turn OFF
	Decreasing to approx. 130 - 140 (266 - 284)	Turn ON

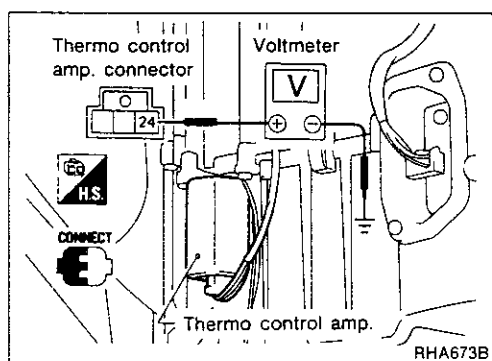

THERMO CONTROL AMP.

1. Run engine, and operate A/C system.
2. Connect the voltmeter from harness side.
3. Check thermo control amp. operation shown in the table.

Evaporator outlet air temperature °C (°F)	Thermo amp. operation	Tester
Decreasing to 2.5 - 3.5 (37 - 38)	Turn OFF	Approx. 12V
Increasing to 4.0 - 5.0 (39 - 41)	Turn ON	Approx. 0V

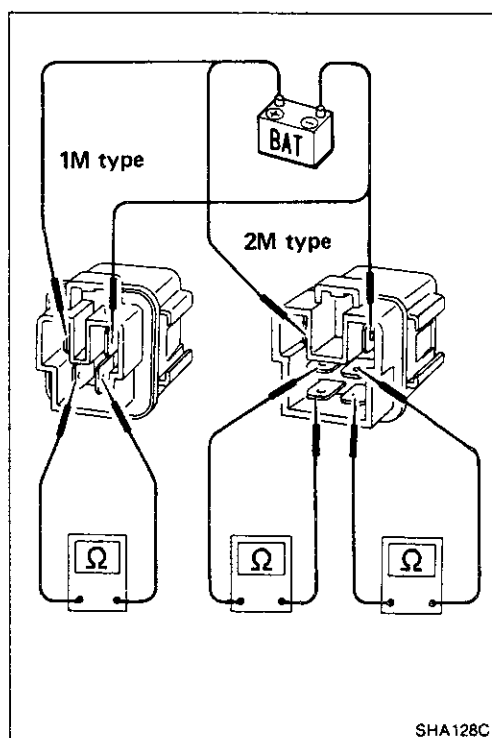

A/C RELAY



Check circuit continuity between terminals by supplying 12 volts to coil side terminal of A/C relay.

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

FAN SWITCH


Check continuity between terminals as each switch position.

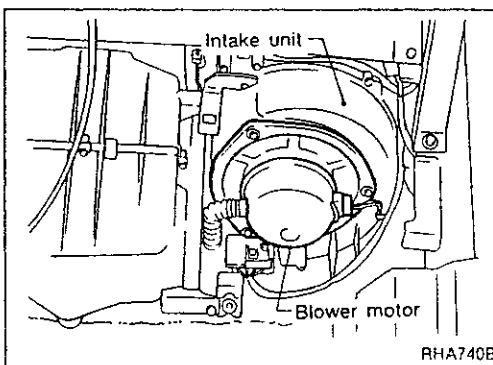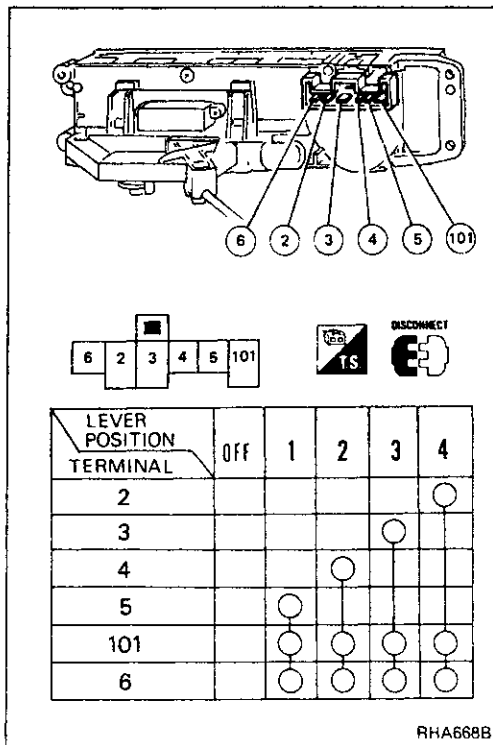

BLOWER MOTOR

Confirm smooth rotation of the blower motor.


- Ensure that there are no foreign particles inside the intake unit.

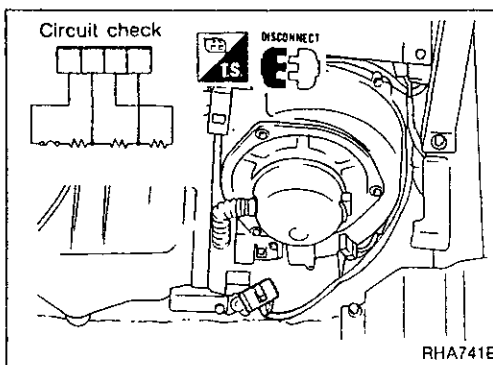

BLOWER RESISTOR


Check continuity between terminals.

DOOR CONTROL

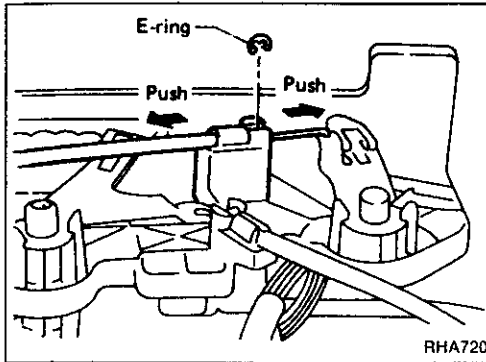

Control Cable and Rod Adjustment — Lever control type

- When disconnecting the control cable, remove the E-ring and take off the cable while pushing the cable outer in the direction of the arrow.

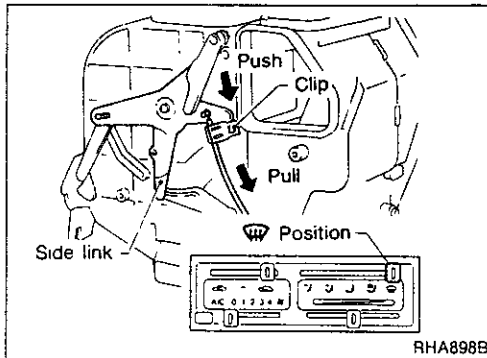

AIR CONTROL CABLE


- Clamp the cable while pushing cable outer and side link in DEF mode.

After positioning control cable, check it operates properly.

- For R.H.D. models, set side link in VENT mode.


WATER COCK CONTROL ROD

- When adjusting water cock control rod, first disconnect temperature control cable from air mix door lever. Reconnect and readjust temperature control cable.

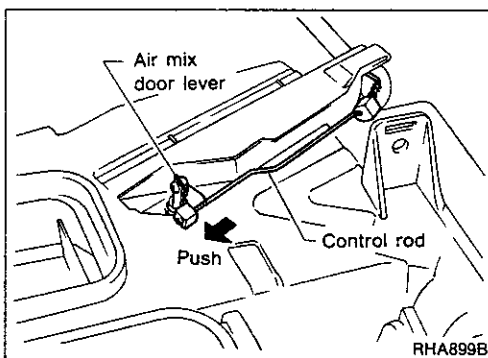

1. Push air mix door lever in direction of arrow.
2. Pull control rod of water cock in direction of arrow so as to make clearance of about 2 mm (0.08 in) between ends of rod and link lever and connect the rod to door lever.

After connecting control rod, check it operates properly.

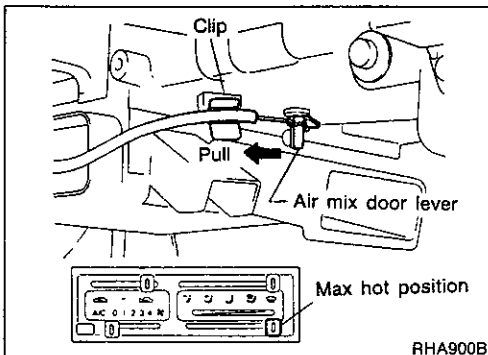

TEMPERATURE CONTROL CABLE


- Clamp the cable while pushing cable outer and air mix door lever in full hot position.

After positioning control cable, check it operates properly.

- For R.H.D. models, set air mix door lever in full cold position.

DOOR CONTROL

Control Cable and Rod Adjustment — Lever control type (Cont'd)

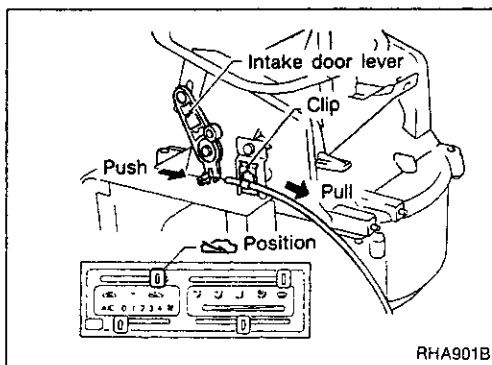


INTAKE DOOR CONTROL CABLE

- Clamp the cable while pushing cable outer and intake door lever at FRE position.

After positioning control cable, check it operates properly.


- For R.H.D. models, set intake door lever at REC position.

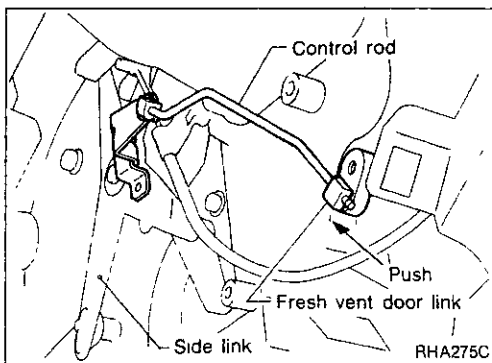

FRESH VENT DOOR — For Europe models

1. Set air control cable at VENT.
2. Push fresh vent door link in direction of arrow.
3. Clamp fresh vent door control rod.


After connecting control rod, check fresh vent door is shut tightly in both VENT mode and DEF mode.

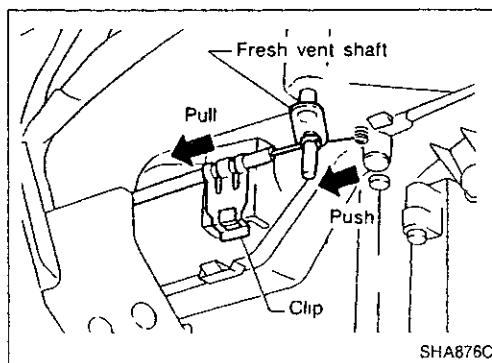

FRESH VENT DOOR — Except Europe models

1. Set fresh vent lever at  position.
2. Set fresh vent shaft in direction of arrow. Pull on outer cable and then clamp it.

After positioning control cable, check it operates properly.

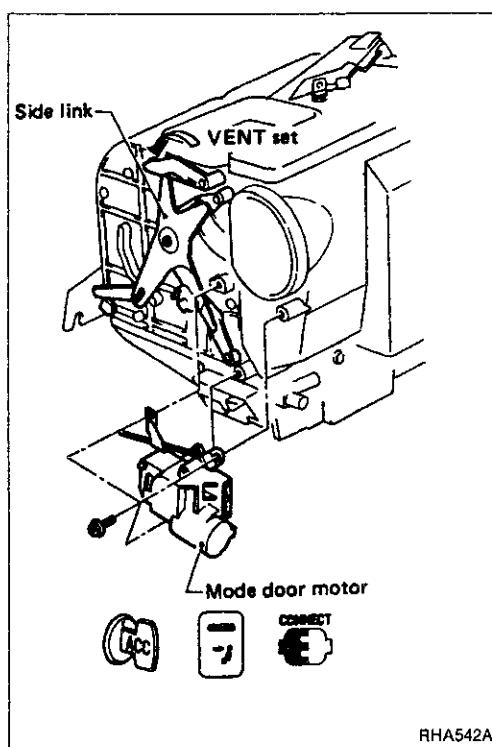

Control Cable and Rod Adjustment — Push control type

MODE DOOR


1. Move side link with hand and hold mode door in VENT mode.
2. Install mode door motor on heater unit and connect it to body harness.
3. Turn ignition switch to ACC.
4. Turn VENT switch ON.
5. Attach mode door motor rod to side link rod holder.
6. Turn DEF switch ON. Check that side link operates at the fully-open position. Also turn VENT switch ON to check that side link operates at the fully-open position.

DOOR CONTROL

Control Cable and Rod Adjustment — Push control type (Cont'd)

TEMPERATURE CONTROL CABLE

Refer to "TEMPERATURE CONTROL CABLE" section in "Control Cable and Rod Adjustment — Lever control type" on page HA-121.

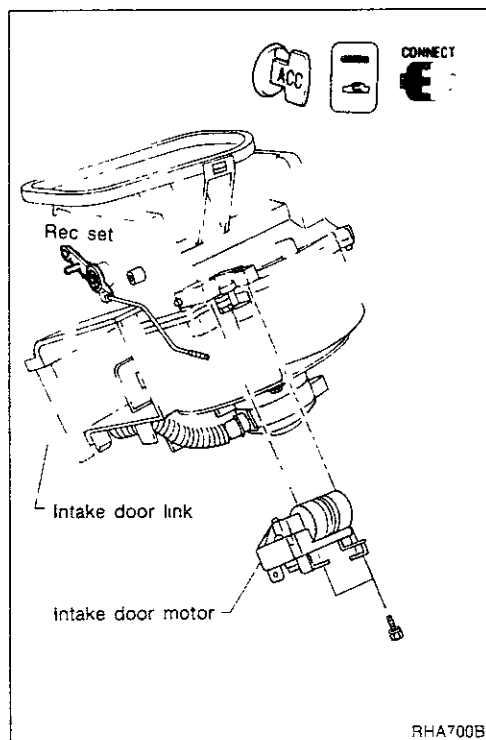

INTAKE DOOR


1. Connect the intake door motor harness connector before installing to the intake door motor.
2. Turn ignition switch to ACC.
3. Turn REC switch ON.
4. Install intake door motor on intake unit.
5. Install intake door lever.
6. Set intake door rod in REC position and fasten door rod to holder on intake door lever.
7. Check that intake door operates properly when REC switch is turned ON and OFF.

FRESH VENT DOOR

Refer to "FRESH VENT DOOR" section in "Control Cable and Rod Adjustment — Lever control type" on page HA-122.

Push Control System

L.H.D. MODELS

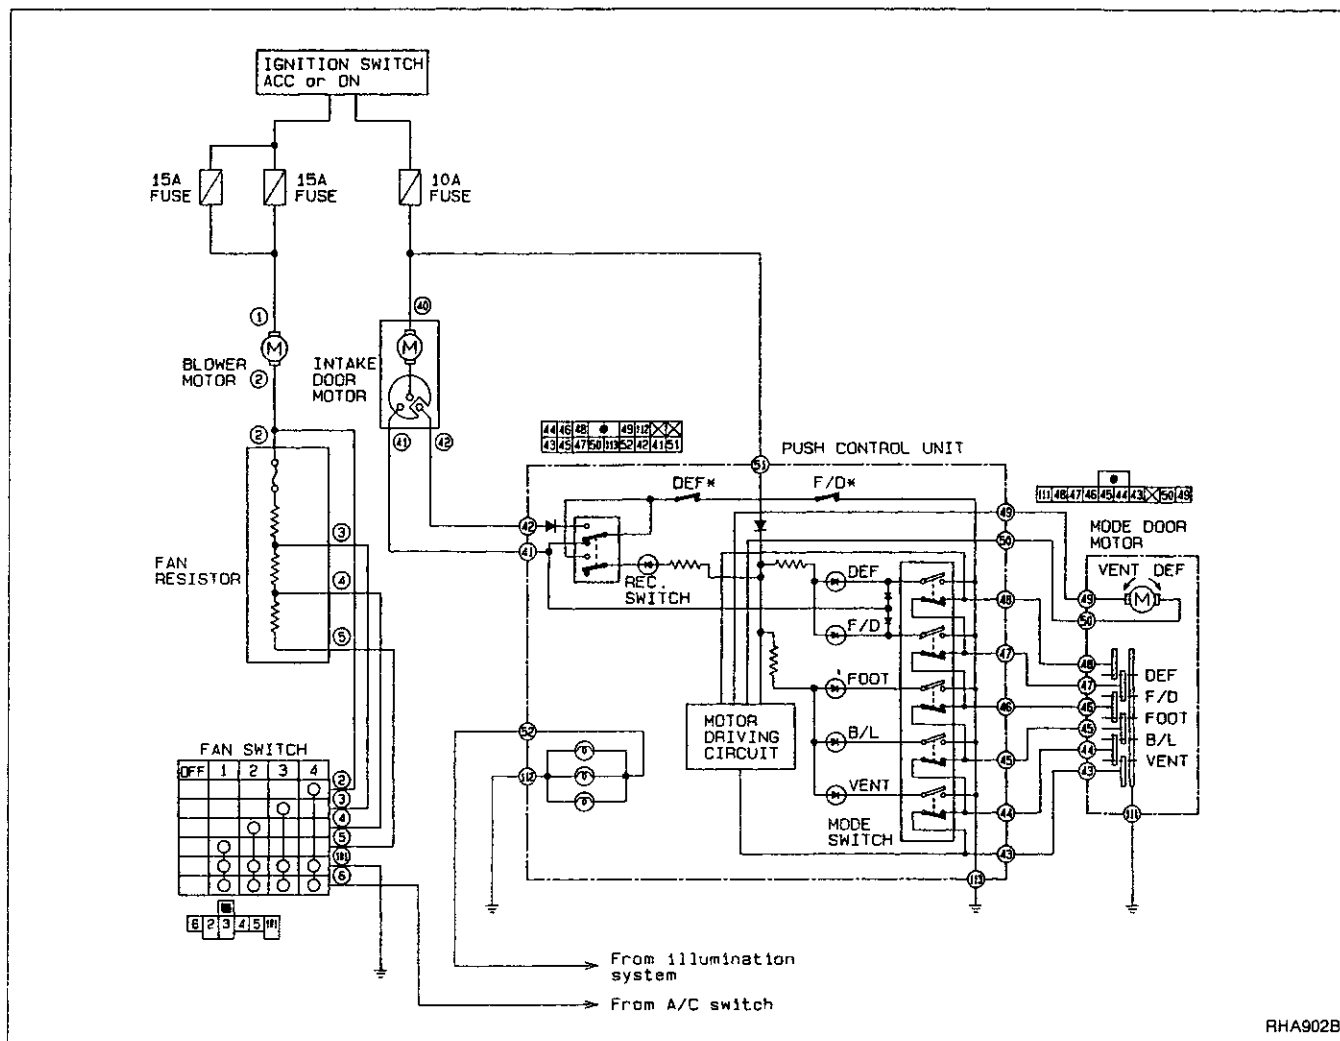

RHA902B

This push control system operates the intake and mode door motors to activate their corresponding doors.

Switches and their control functions

Switch	Indicator illuminates							Air outlet	Intake air	Compressor
	A/C									
A/C	○									ON*1
Mode		○						VENT		
			○					B/L		
				○				FOOT		
					○			F/D	FRE	
						○		DEF	FRE	
							○*2		REC*2	


*1: Compressor is operated by thermo control amp.

*2: Depending on mode switch position

DESCRIPTION — Push Control

Push Control System (Cont'd)

R.H.D. MODELS


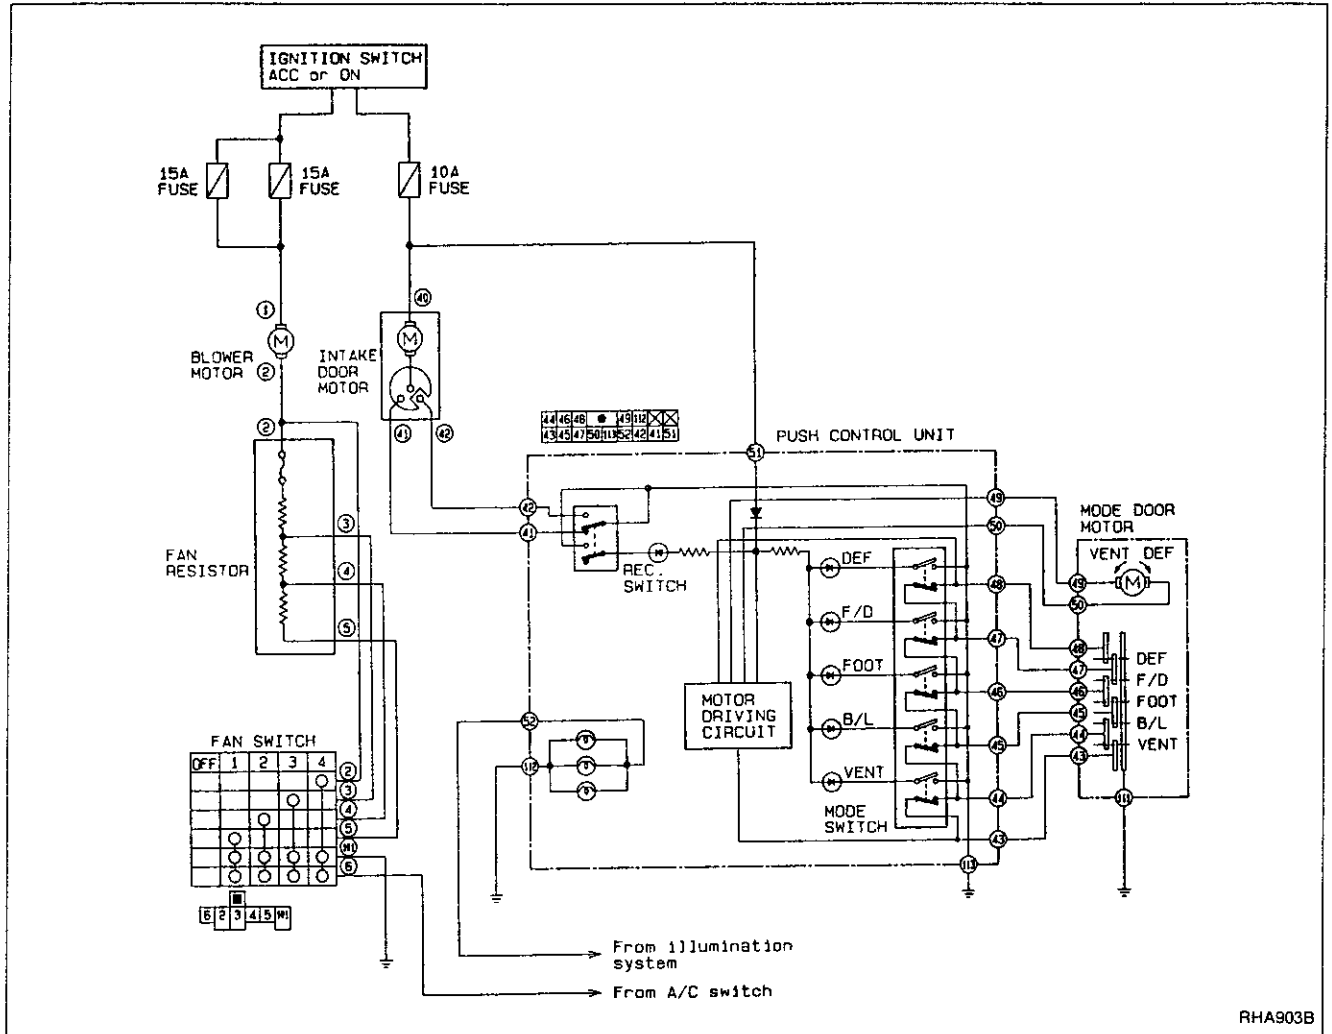


This push control system operates the intake and mode door motors to activate their corresponding doors.

Switches and their control functions

Switch	Indicator illuminates							Air outlet	Intake air	Compressor
	A/C									
A/C	○									ON*
Mode		○						VENT		
			○					B/L		
				○				FOOT		
					○			F/D		
						○		DEF		
							○		REC	

*: Compressor is operated by thermo control amp.

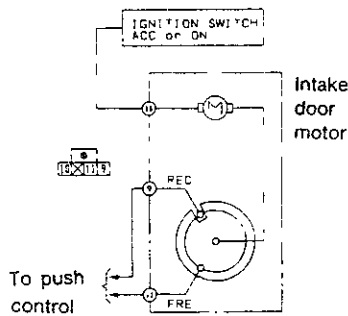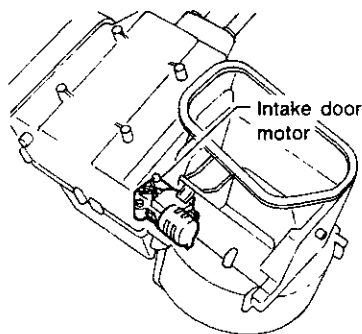


RHA703B


Intake Door Motor

The intake door motor is installed on the front portion of the intake unit. Using a rod and link it opens and closes the intake door.

When the REC switch is ON (OFF), the ground line of the intake door motor is switched from terminal ⑪ to ⑨ (⑨ to ⑪). This causes the motor to start because the position switch contacts built into it are set to the current flow position. The contacts turn along with the motor. When they reach the non-current flow position, the motor will stop. The motor always turns in the same direction.

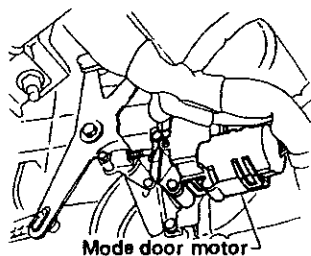

Mode door motor

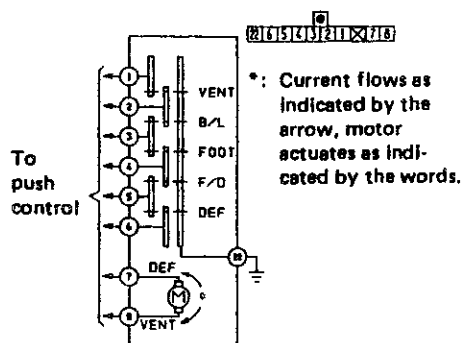

Terminal No.		Mode door motor	
⑦	⑧	Mode door operation	Direction of linkage rotation
⊖	⊖	Stop	Stop
⊖	⊕	VENT → DEF	Clockwise
⊕	⊖	DEF → VENT	Counter-clockwise

RHA547A

Mode Door Motor

L.H.D. MODELS

The mode door motor is located on the left side of the heater unit. Through the side link it opens and closes the vent, foot and defroster door.

When one mode switch is pushed, the position switch built into it reads the corresponding mode to determine the direction of the motor rotation. As soon as the desired mode is set, the position switch stops the motor.


DESCRIPTION — Push Control

Mode Door Motor (Cont'd)





R.H.D. MODELS

The mode door motor is located on the right side of the heater unit. Through the side link it opens and closes the vent, foot and defroster door.

When one mode switch is pushed, the position switch built into it reads the corresponding mode to determine the direction of the motor rotation. As soon as the desired mode is set, the position switch stops the motor.

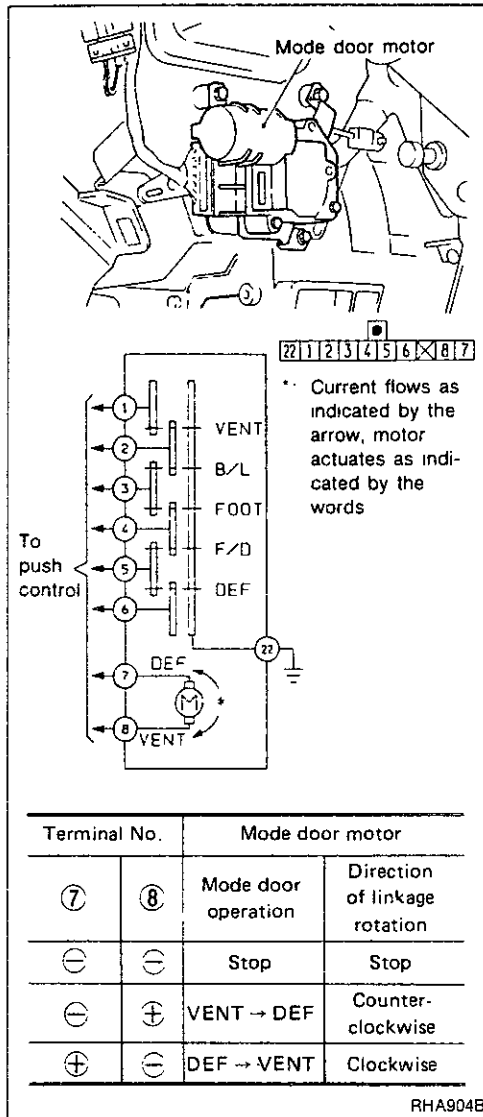

PUSH CONTROL UNIT

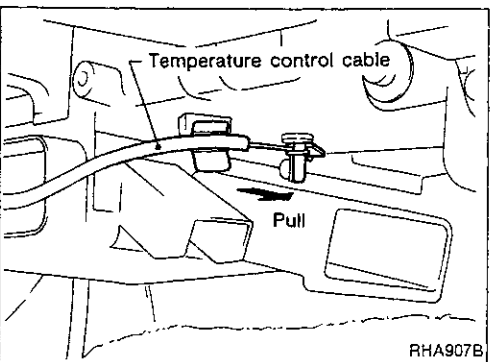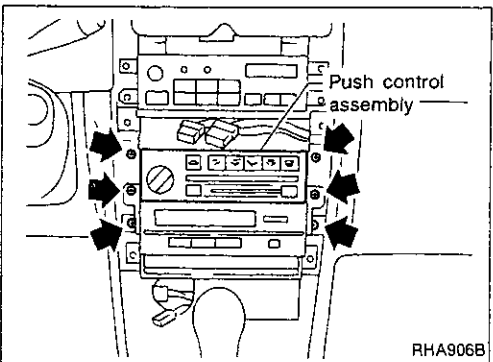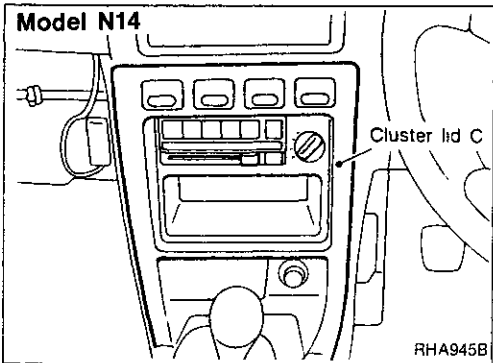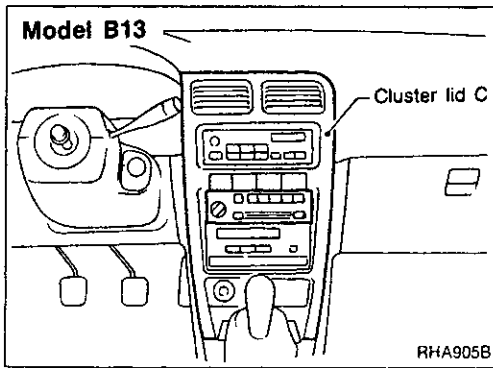

Removal and Installation

1. Remove cluster lid C.

2. Remove the 6 bracket screws.

3. Disconnect temperature control cable at heater unit side.

4. Remove cassette deck.

5. Disconnect push control unit harness connectors.

6. Remove lower instrument panel with push control unit.



7. Remove push control unit.

8. Installation is in the reverse order of removal.

Refer to "Control Cable and Rod Adjustment" for temperature control cable.


PUSH CONTROL UNIT

Removal and Installation (Cont'd)

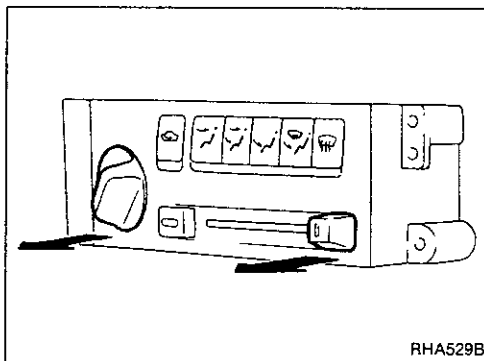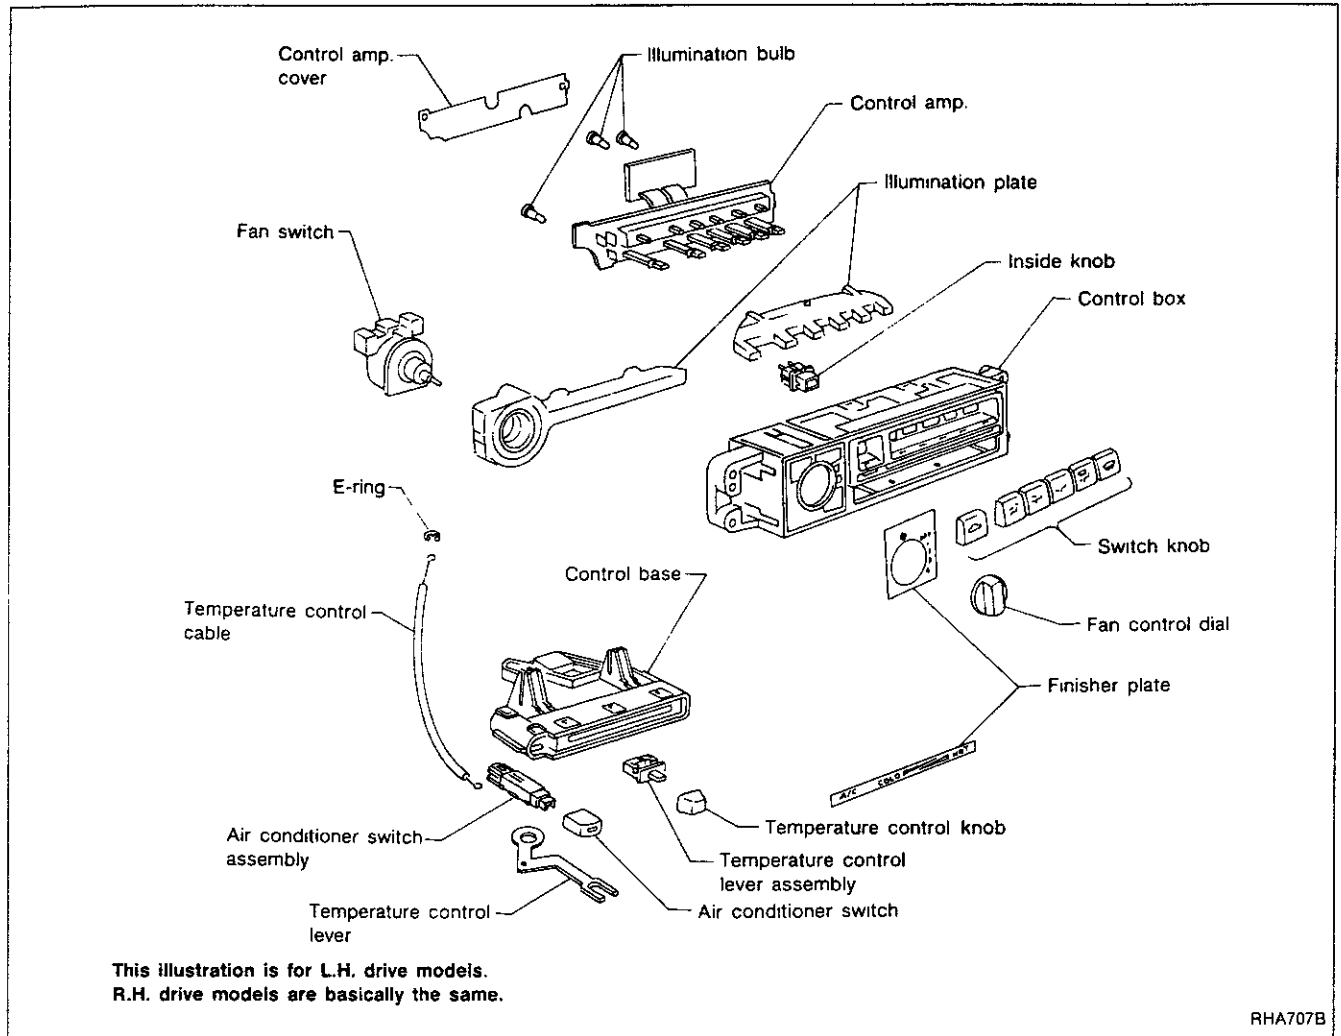

Disassembly

1. Remove temperature control knob & fan control dial.
Wrap temperature knob & fan control dial with a cloth and pull in direction indicated by arrow as shown in figure at left. Be careful not to scratch knobs during removal.

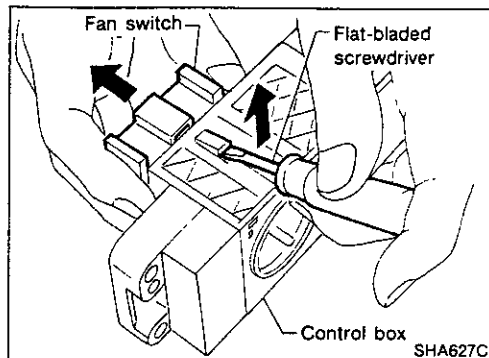


2. Remove fan switch.

PUSH CONTROL UNIT


Disassembly (Cont'd)

3. Remove control base & control amp. cover.

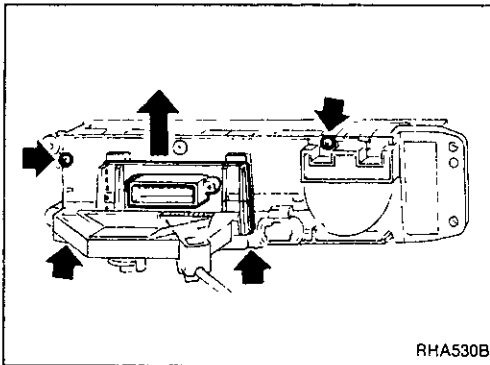


4. Remove control knobs.

Wrap finisher with a cloth and remove knobs using flat-bladed screwdriver or similar tool. Be careful not to scratch finisher surface.

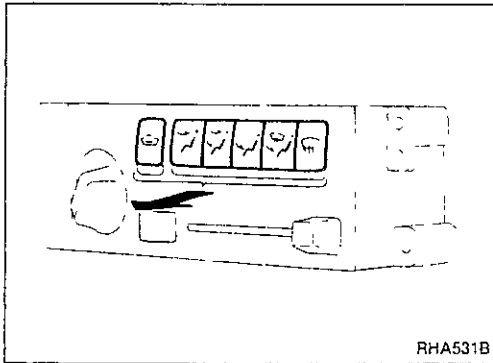

5. Remove illumination bulbs.

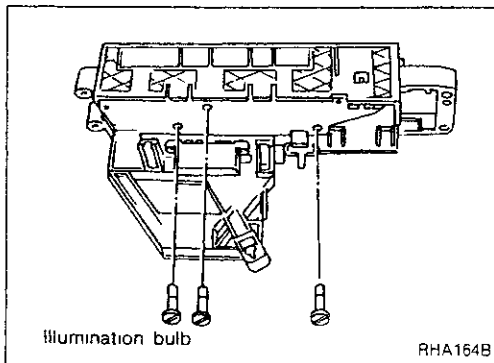

6. Remove control amp.

Be careful not to damage substrate when removing.

7. Remove illumination plate.

8. Remove finisher plate.

9. Disconnect temperature control cable.

10. Assembly is in reverse order of disassembly.

PREPARATION





SPECIAL SERVICE TOOLS

NVR 140S model

*: Special tool or commercial equivalent

Tool number Tool name	Description
KV998VR001 Clutch disc puller	 Removing clutch disc
KV99231010* Clutch disc wrench	 Removing shaft nut and clutch disc
KV99235160* Nut wrench	 Removing lock nut






DKV 14C model

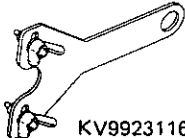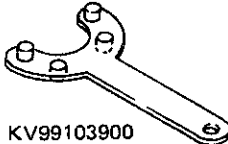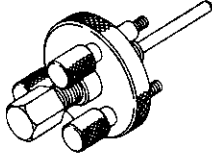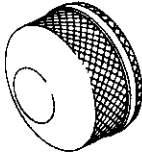Tool number Tool name	Description
KV99231162 or KV99103900	  Removing shaft nut and clutch disc
KV99232340 Clutch disc puller	 Removing clutch disc
KV99234330 Pulley installer	 Installing pulley

PREPARATION








MJS130 model

  *: Special tool or commercial equivalent

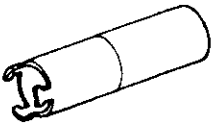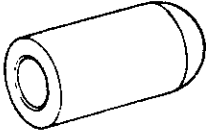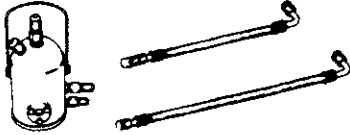Tool number Tool name	Description
KV99412302* Clutch disc wrench	 Removing shaft nut and clutch disc
KV994C5780 Clutch disc puller	 Removing clutch disc
KV994C1143 Shaft seal remover and installer	 Removing and installing shaft seal
KV994C5784* Shaft seal pilot	 Installing shaft seal
KV99412330* Allen socket	 Removing rear cover
KV994C5785* Cylinder head remover	 Removing rear cylinder head
KV994A9690 Oil separator kit	 Separating oil from refrigerant



PREPARATION

Service Tools

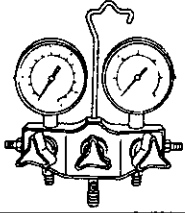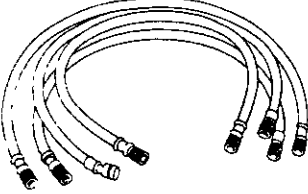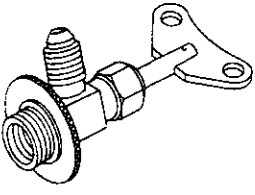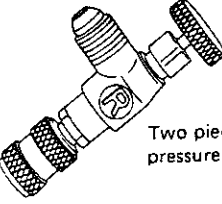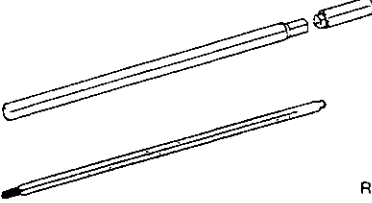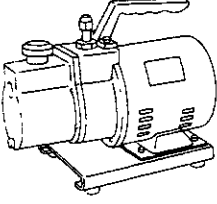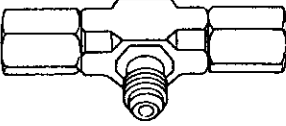Tool name	Description
Manifold gauge (3-valve type)	 Discharging, evacuating and charging refrigerant RHA570B
Charging hose (Four)	 Discharging, evacuating and checking refrigerant RHA571B
Charge valve	 Charging refrigerant RHA572B
Adapter valve	 Evacuating and charging Two pieces on each high pressure and low pressure line RHA573B
Thermometer	 Checking temperature RHA574B
Vacuum pump	 Evacuating refrigerant RHA575B
Joint adapter (T-type)	 Charging refrigerant RHA576B

PREPARATION

Service Tools (Cont'd)

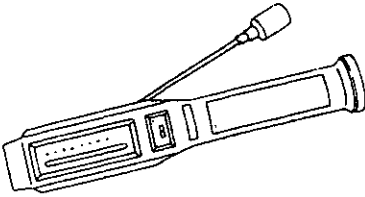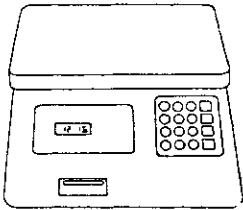Tool name	Description
Gas leak detector	 Checking refrigerant leaks RHA577B
Charging cylinder	 Checking amount of refrigerant and charging refrigerant RHA578B
Weight scale	 Checking amount of refrigerant RHA579B

For details of such handling methods, refer to the Instruction Manual attached to each of the service tools.

PREPARATION

Service Tools (Cont'd)

HANDLING METHOD AND STRUCTURE


Manifold gauge

The manifold gauge is used to measure the operating pressure accurately in the high pressure and low pressure lines of the refrigerating system.

The high pressure gauge measures from -101.3 kPa ($-1,013 \text{ mbar}$, -760 mmHg , -29.92 inHg) to $2,942 \text{ kPa}$ (29.4 bar , 30 kg/cm^2 , 427 psi), and the low pressure gauge measures generally from -101.3 kPa ($-1,013 \text{ mbar}$, -760 mmHg , -29.92 inHg) to $1,471 \text{ kPa}$ (14.7 bar , 15 kg/cm^2 , 213 psi).

CAUTION:

- When installing the gauge to the refrigerating system, use utmost care not to mistake high pressure and low pressure line connections. (Wrong connections will lead to a damaged gauge.)
- Before evacuating, confirm that the gauge has a negative pressure scale. (If not, the gauge will be damaged.)

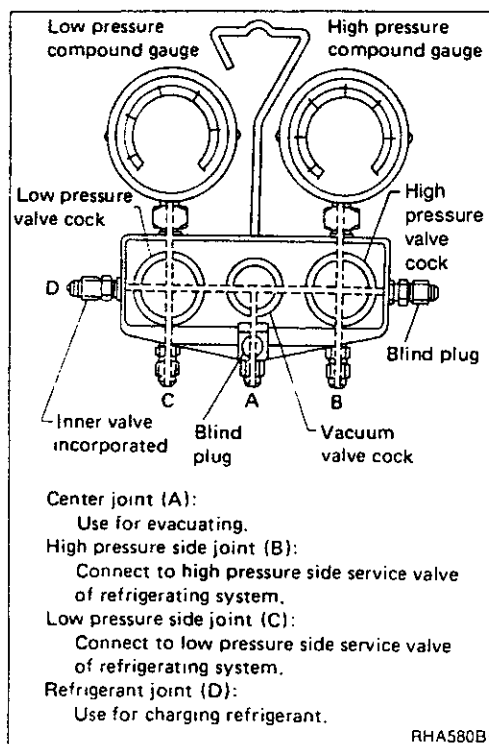


Charging hose

1. Completely tighten the high pressure valve, low pressure valve and vacuum pump valve cocks of the gauge manifold.
2. Connect the charging hoses to the high and low pressure lines.
3. Connect the charging hose fitted with a valve core to the refrigerant canister.
4. Connect the charging hose to the vacuum pump.

The high and low pressure hoses are color coded to prevent wrong connection.

High pressure line hose	Red
Low pressure line hose	Yellow
Refrigerant canister hose	Blue or green (with valve core)
Vacuum pump hose	Blue or green

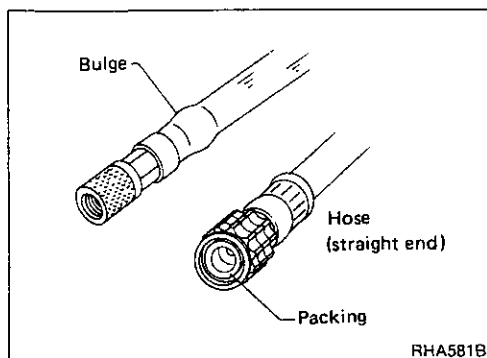

CAUTION:

- Check each hose for cracks. If found, discard the hose.
- Do not use any hose if bulges are found.
- Check the rubber packing. If any deterioration or cracks are found, replace it with a new one.

PREPARATION

Service Tools (Cont'd)




Charge valve

The charge valve is used to charge the refrigerant into the system from the service canister through the gauge manifold. Attach this valve to the head of a service canister by screwing it on. Then turn the handle clockwise to pierce the canister to allow the refrigerant to flow into the refrigerating system.

CAUTION:

Check the packing for any sign of deterioration or cracks. If any abnormalities are found, replace it with a new one.

1. Turn the charge valve handle counterclockwise to fully retract the needle, and then attach the charge valve to the service canister. Note that leakage will occur if the charge valve is attached to the canister without retracting the needle.
2. Securely fit the charge valve to the head of the service canister by turning it. Then turn the handle slowly clockwise to make a hole in the canister with the needle.
3. Turn the handle counterclockwise to retract the needle, and the refrigerant will flow into the gauge manifold through the hole. To stop the flow of the refrigerant, turn the handle clockwise to close the hole with the needle.

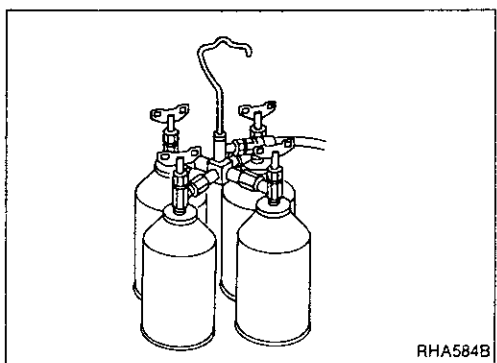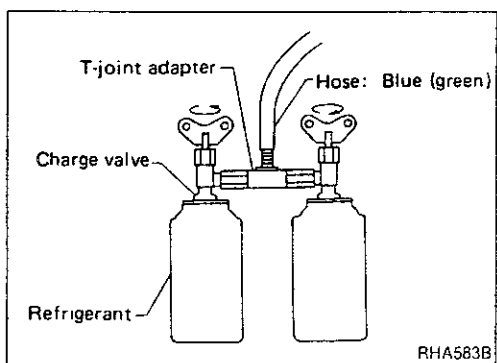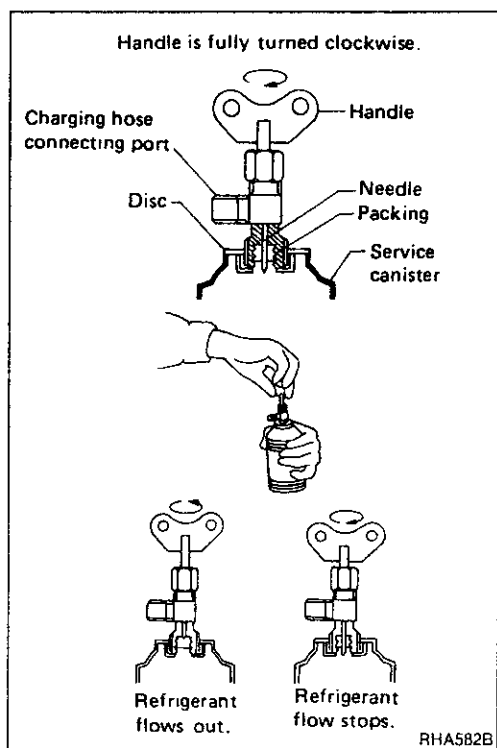

Connecting T-joint adapter

The T-joint adapter is used to connect two refrigerant canisters so that air purging and the accompanying discharge of refrigerant into the atmosphere can be eliminated when recharging the refrigerant. If only one service canister is sufficient to charge the refrigeration system, do not use this T-joint adapter.

1. Turn the handle of each charge valve fully counterclockwise, and attach the valve to a refrigerant canister.
2. Connect the T-joint adapter to both charge valves so that two refrigerant canisters are connected as shown.
3. Connect the charging hose with valve core to the T-joint adapter. Connect the valve core end of the charging hose to the manifold gauge.

If more than three service canisters are needed for charging, use a cross joint adapter to connect four service canisters.

PREPARATION

Service Tools (Cont'd)

Installing the adapter valve

Install the adapter valve to each of the high pressure and low pressure service valves so that air purging from the charging hose can be omitted. This also ensures that refrigerant leakage upon disconnection of the hose can be prevented.

1. Before connecting the adapter valve to the on-vehicle service valve, turn the adapter valve handle fully counterclockwise to retract the pin.




CAUTION:

Check the packing for any sign of deterioration or cracks. If any abnormality is found, replace it with a new one.

2. Connect the charging hose to the adapter valve.

Turning the handle clockwise will cause the on-vehicle service valve pin to be pushed open by the adapter valve pin, thus opening the refrigerant passage.


Turning the handle counterclockwise will close the passage. Before removing the adapter valve from the on-vehicle service valve, be sure to fully turn the handle counterclockwise to shut off the refrigerant passage.

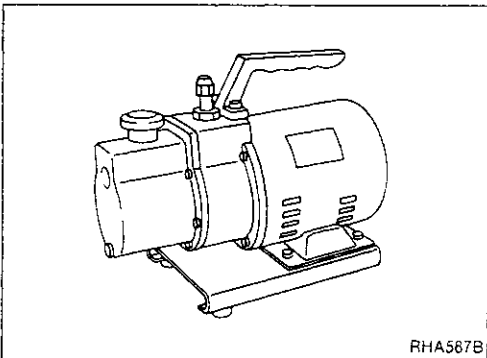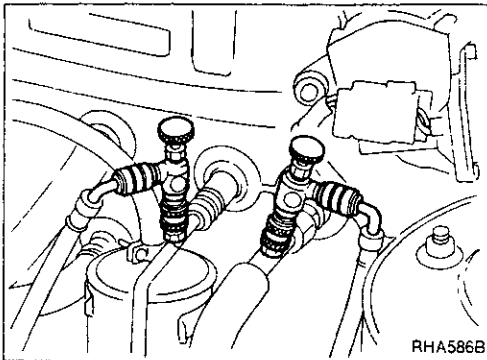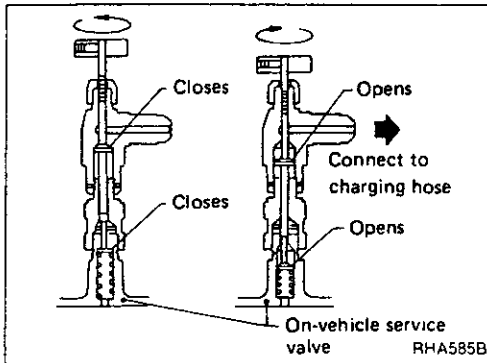

Vacuum pump


The vacuum pump is used to purge air and moisture from the inside of the refrigeration system by evacuation, thereby ensuring proper functioning of the air conditioner system.

Check the vacuum pump to see that the vacuum pump capacity is greater than -100.0 kPa (-1,000 mbar, -750 mmHg, -29.53 inHg).

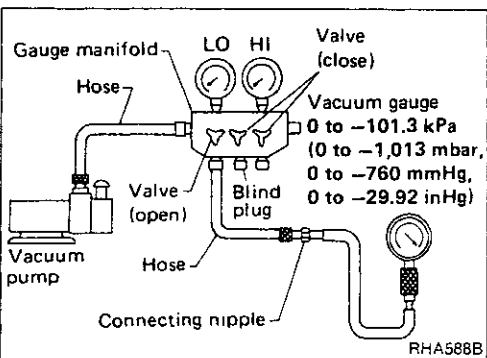

Vacuum pump performance check procedure

1. Connect the vacuum gauge to the system.
2. Run the vacuum pump, and check to see that the needle pointers of the gauge manifold and vacuum gauge move smoothly, indicating a similar value.
3. After running the vacuum pump for two or three minutes, read the vacuum gauge. The measured value indicates the capacity of the vacuum pump.

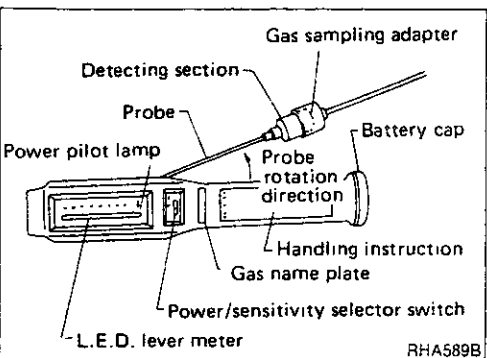

Gas leak detector


The gas leak detector is used to check whether the refrigeration system is leaking. The detector is available in two types; halide torch or electrical. The features of these gas leak detectors are listed on the next page.

PREPARATION

Service Tools (Cont'd)


Type		Detection ability	Features
Halide torch		200 g (7.05 oz)/year (thin green)	● Low price ● Low sensitivity ● Less safe because of the use of flame for detection
Electrical	Discharge type (Suction type)	3 - 50 g (0.11 - 1.76 oz)/year	● Easy handling ● Medium sensitivity ● Each point needs two or more seconds for detection.
	Positive ion emission type (Suction type)	2 g (0.07 oz)/year	● High sensitivity ● High price ● Warm-up time is needed because a heater is incorporated.
Other simple checking method: Change in vacuum when evacuating		1 kg (2 lb)/month; if 13.3 kPa (133 mbar, 100 mmHg, 3.94 inHg) change in vacuum is detected in 10 minutes.	● Can be used easily in refrigerant charging operation. ● Detection ability is very low with vacuum gauge in gauge manifold.

- Leakage inspection of a refrigeration system needs a sensitivity greater than 20 g (0.71 oz)/year.
- The actual amount of leak is estimated at 5 to 10 times the detected amount.
- Insufficient cooling may be felt if leakage exceeds 150 to 200 g (5.29 to 7.05 oz).

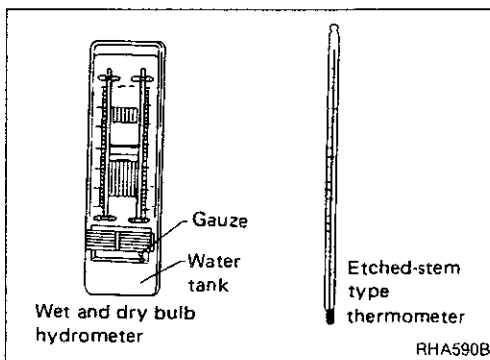

Temperature gauge

Use to check the air conditioner performance. An etched stem type thermometer may be used. A hygrometer must also be used because the air conditioner performance depends on the humidity.

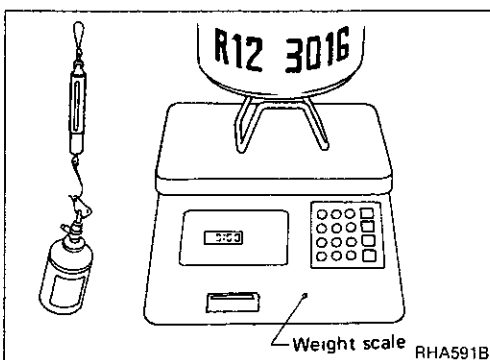

Scale

Measure the weight of the refrigerant to determine how much the refrigerant is charged.

PREPARATION

Service Tools (Cont'd)

Charging cylinder


The charging cylinder is used to correctly measure the amount of refrigerant to be charged.

Features

- With the charging cylinder, the operator can measure correctly the amount of refrigerant to be charged into the system.
- Change in the refrigerant volume due to a change in temperature and pressure can be supplemented, and this ensures correct charging of refrigerant.

CAUTION:

- Never attempt to carry the charging cylinder containing refrigerant.
- Do not put the charging cylinder in a hot place. If the temperature and pressure of the refrigerant in the cylinder increase, the safety valve will be pushed open and the refrigerant will be released into the atmosphere.
- Do not expose the cylinder to the direct sunlight.
- Do not over-charge the refrigerant so that it exceeds the maximum limit of the cylinder.
- Do not charge the cylinder with more refrigerant than is needed.

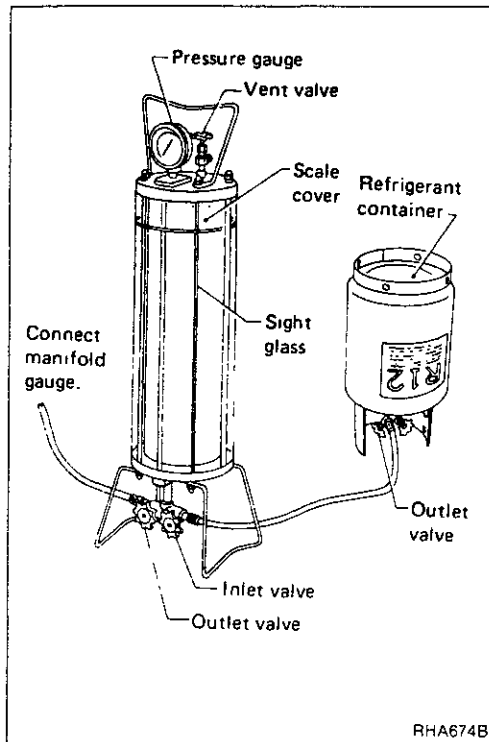

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications

COMPRESSOR

Model	L.H.D. model	R.H.D. model			
		For Singapore		Except Singapore	
		GA16DE	GA14DS	CD17 and E10S	Except for CD17 and E10S
		ATSUGI make NVR140S	HITACHI make MJS130	ZEXEL make DKV-14C	ZEXEL make DKV-14D
Type	Vane rotary		Swash plate	Vane rotary	
Displacement cm ³ (cu in)/Rev.	140 (8.54)		130 (7.93)	142 (8.66)	140 (8.54)
Cylinder bore × stroke mm (in)	—		32.7 × 19.9 (1.287 × 0.783)	—	
Direction of rotation	Clockwise (Viewed from drive end)				
Drive belt	Poly V				

LUBRICATION OIL

Model	ATSUGI make NVR 140S	ZEXEL make DKV-14D	ZEXEL make DKV-14C	HITACHI make MJS130
Type	SUNISO 5GS or equivalent			
Capacity mℓ (Imp fl oz)				
Total in system	200 (7.0)			150 (5.1)
Compressor (Service part) charging amount	200 (7.0)			150 (5.1)

REFRIGERANT (Except Europe and Middle East models)

Type	R12
Capacity kg (lb)	
Model B13	
L.H.D.	0.65 - 0.75 (1.43 - 1.65)
R.H.D.	0.55 - 0.65 (1.21 - 1.43)
Model N14	0.60 - 0.70 (1.32 - 1.54)

REFRIGERANT (Europe and Middle East models)

Type	R12
Capacity kg (lb)	
L.H.D.	0.65 - 0.75 (1.43 - 1.65)
R.H.D.	0.60 - 0.70 (1.32 - 1.54)

Inspection and Adjustment

ENGINE IDLING SPEED (When A/C is ON.)

- Refer to EF & EC section.

BELT TENSION

- Refer to Checking Drive Belts (MA section).

COMPRESSOR

Model	NVR 140S/DKV-14D/DKV-14C	MJS130
Clutch disc-pulley clearance mm (in)	0.3 - 0.6 (0.012 - 0.024)	0.5 - 0.8 (0.020 - 0.031)

ELECTRICAL SYSTEM

SECTION **EL**

When you read wiring diagrams:

- Read GI section, "HOW TO READ WIRING DIAGRAMS" and EL-5, "How to Identify Type I and Type II Vehicles".

CONTENTS

HARNESS CONNECTOR	EL- 2
STANDARDIZED RELAY	EL- 3
POWER SUPPLY ROUTING	EL- 5
BATTERY	EL- 11
STARTING SYSTEM	EL- 20
STARTING SYSTEM — Starter —	EL- 23
CHARGING SYSTEM	EL- 46
CHARGING SYSTEM — Alternator —	EL- 49
COMBINATION SWITCH	EL- 62
HEADLAMP — Without Daytime Light System and Dim-dip Lamp System —	EL- 64
HEADLAMP — Daytime Light System —	EL- 66
HEADLAMP — Dim-dip Lamp System —	EL- 70
HEADLAMP — Headlamp Aiming Control —	EL- 75
HEADLAMP	EL- 81
EXTERIOR LAMP	EL- 83
INTERIOR LAMP	EL-103
METER AND GAUGES — Needle Type —	EL-109
METER AND GAUGES — Digital Type —	EL-125
WARNING LAMPS AND BUZZER	EL-137
WIPER AND WASHER	EL-151
HORN AND CIGARETTE LIGHTER	EL-162
CLOCK	EL-163
REAR WINDOW DEFOGGER	EL-164
AUDIO AND POWER ANTENNA	EL-167
LOCATION OF ELECTRICAL UNITS	EL-176
HARNESS LAYOUT	EL-180
SUPER MULTIPLE JUNCTION (S.M.J.)	EL-217

WIRING DIAGRAM REFERENCE CHART

RADIATOR FAN	LC SECTION
ENGINE CONTROL SYSTEM, IGNITION SYSTEM	EF & EC SECTION
O/D CONTROL SYSTEM, SHIFT LOCK SYSTEM	AT SECTION
ANTI-LOCK BRAKING SYSTEM	BR SECTION
POWER WINDOW AND POWER DOOR LOCK, SEAT BELT, HEATING SEAT, SUN ROOF, DOOR MIRROR	BF SECTION
HEATER AND AIR CONDITIONER	HA SECTION

EL

HARNESS CONNECTOR

Description


HARNESS CONNECTOR

- All harness connectors have been modified to prevent accidental looseness or disconnection.
- The connector can be disconnected by pushing or lifting the locking section.

CAUTION:

Do not pull the harness when disconnecting the connector.

[Example]

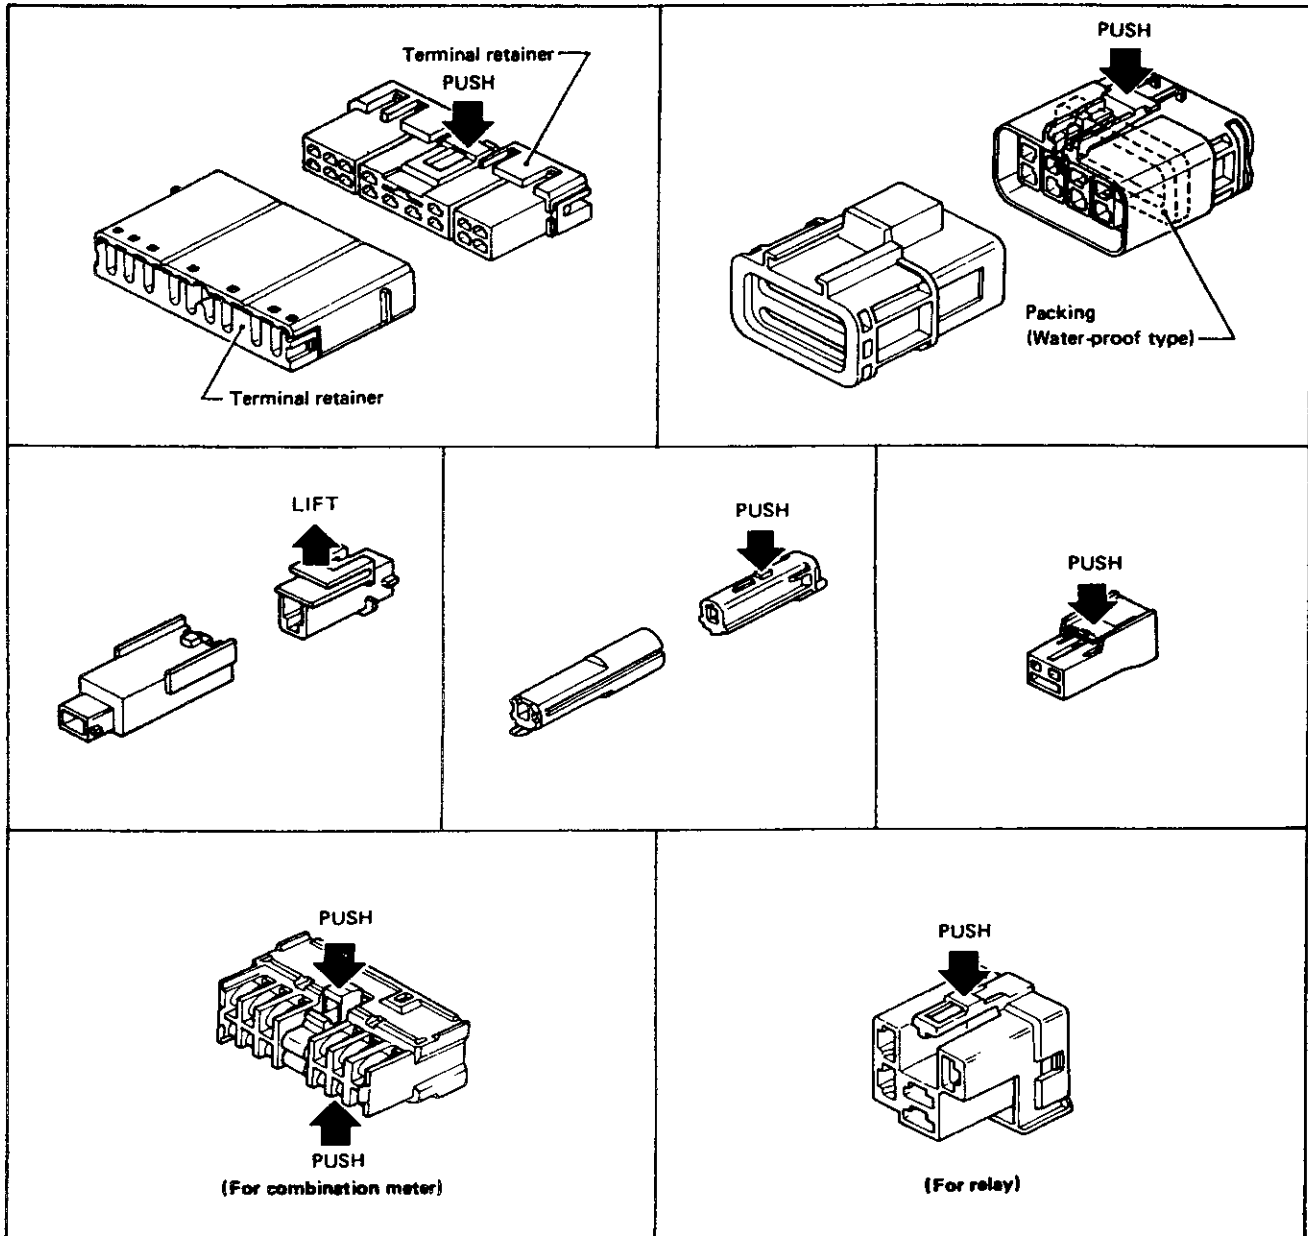


STANDARDIZED RELAY

Description

NORMAL OPEN, NORMAL CLOSED AND MIXED TYPE RELAYS


Relays can mainly be divided into three types: normal open, normal closed and mixed type relays.

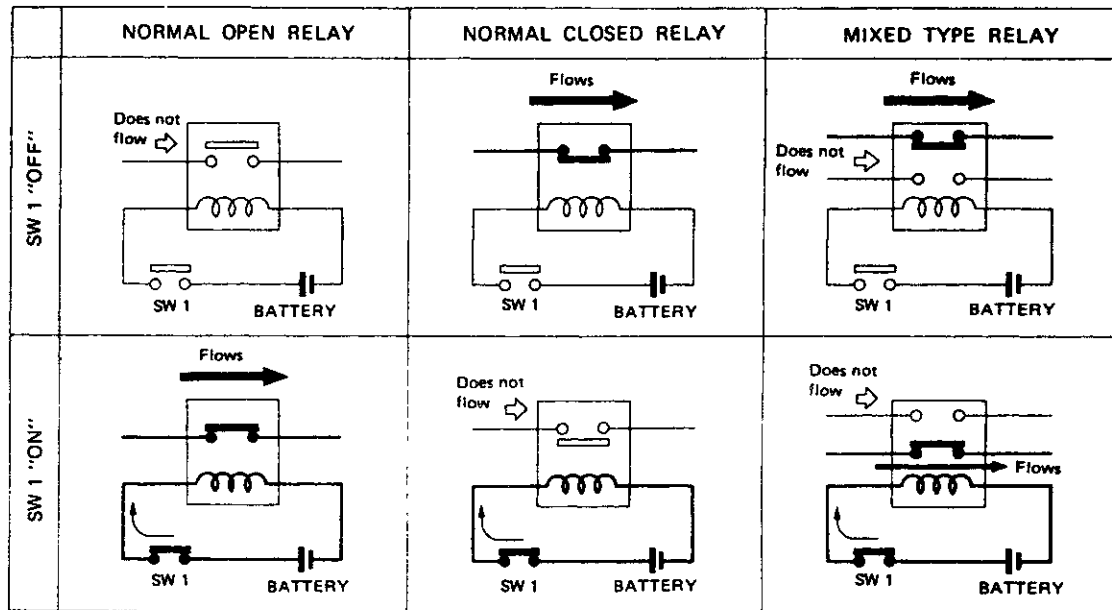

SEL881H

TYPE OF STANDARDIZED RELAYS













1M 1 Make 2M 2 Make
 1T 1 Transfer 1M-1B 1 Make 1 Break

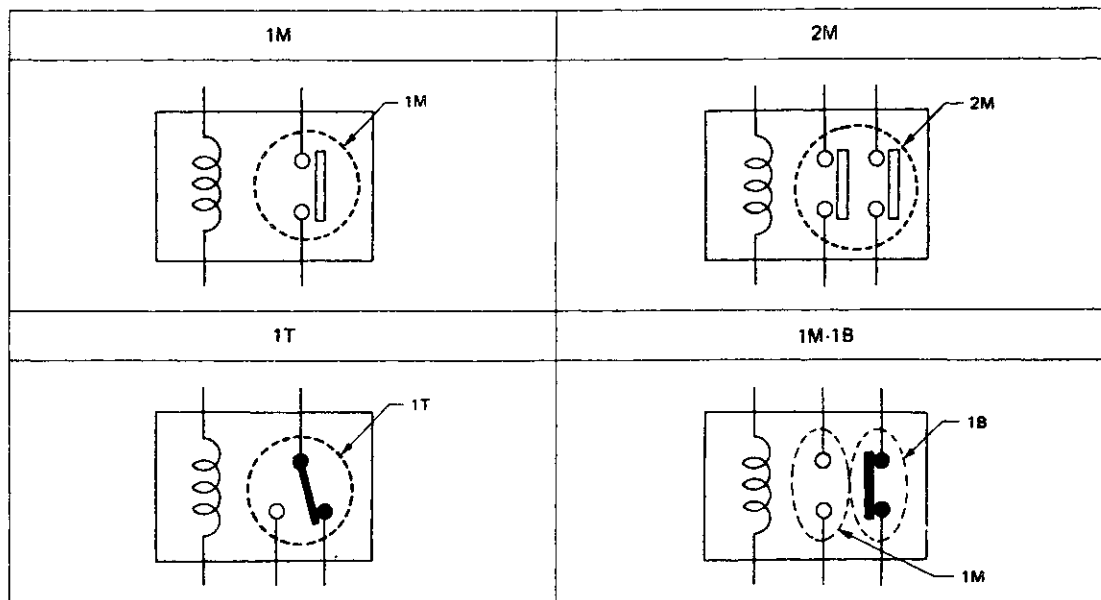

SEL882H

STANDARDIZED RELAY


Description (Cont'd)

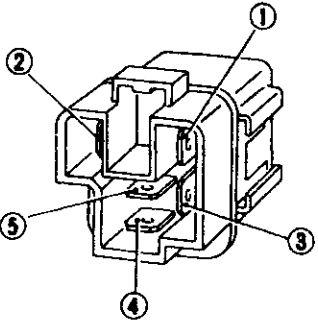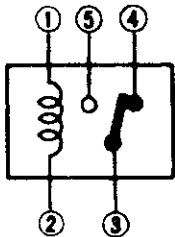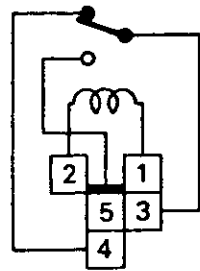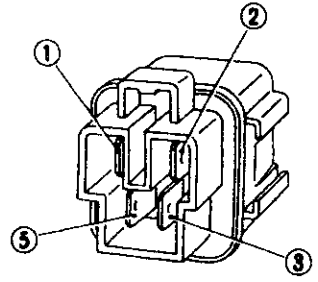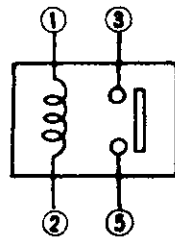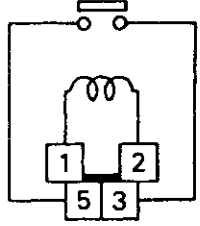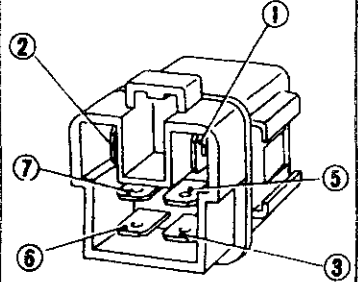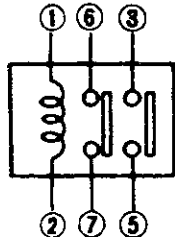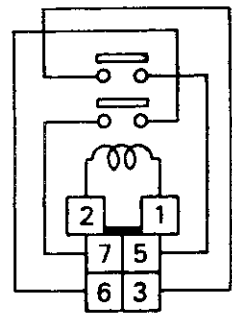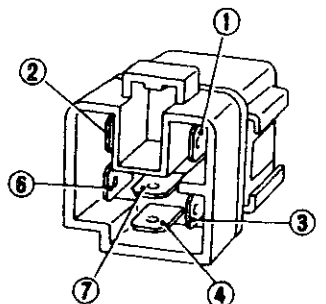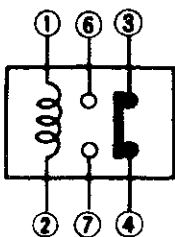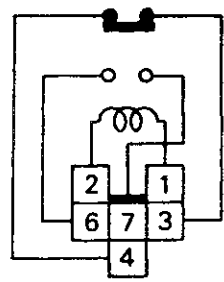Type	Outer view	Circuit	Connector symbol and connection	Case color
1T				BLACK
1M				BLUE or GREEN
2M				BROWN
1M-1B				GRAY

POWER SUPPLY ROUTING

How to Identify Type I and Type II Vehicles

The vehicles are classified into two types (Type I and Type II) according to the difference in the electrical system. Before starting any trouble diagnoses, be sure to identify whether a Type I or Type II wiring diagram matches the vehicle by comparing the vehicle's fuse block with the diagram below.

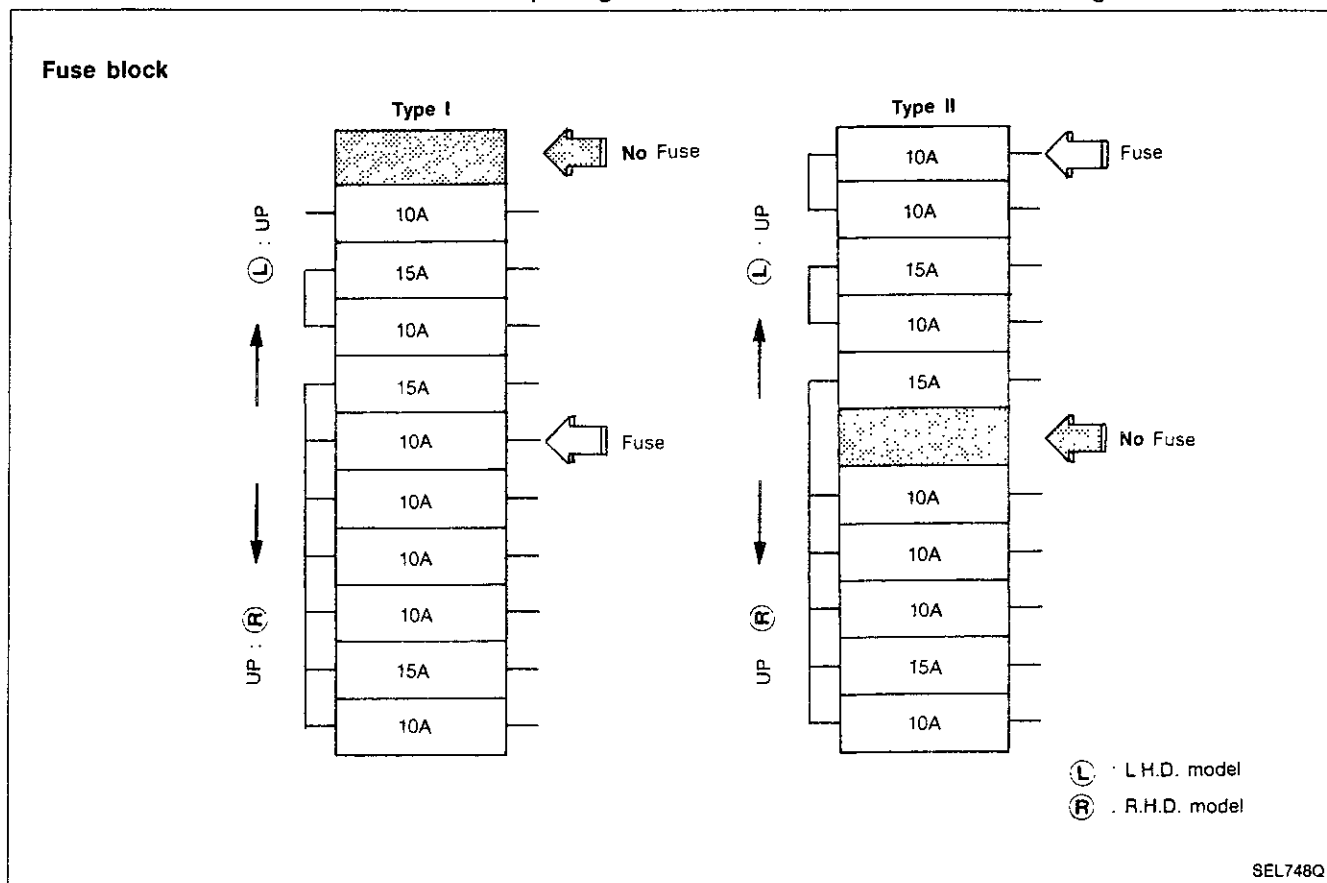

POWER SUPPLY ROUTING

Wiring Diagram


TYPE-I

*1: B.....E10S engine GA13DS, 14DS, 16DS engine except for Europe and N14 model with GA engine for Europe

GY.....B13 model with GA engine for Europe and Middle East, N14 model with GA16DE engine, CD20 engine and R.H.D. model with CD17 engine


L.....SR engine and L.H.D. model with CD17 engine

*2: 10A...B13 model
15A...N14 model

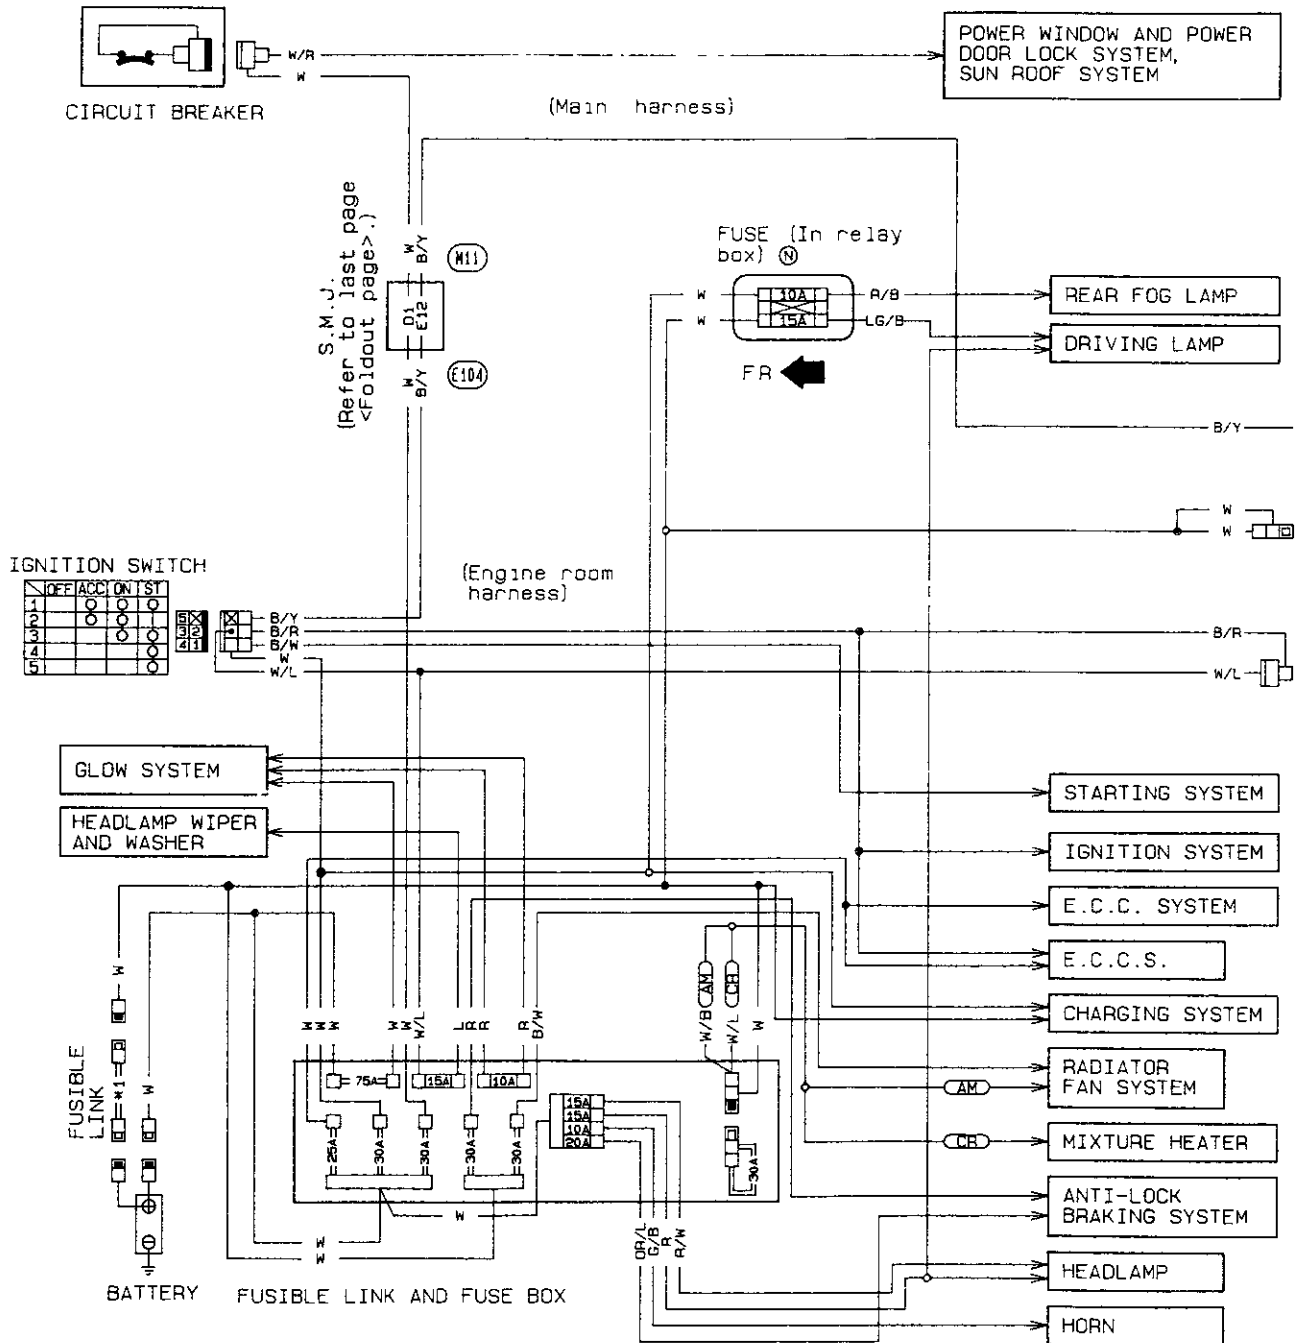

POWER SUPPLY ROUTING

Wiring Diagram (Cont'd)

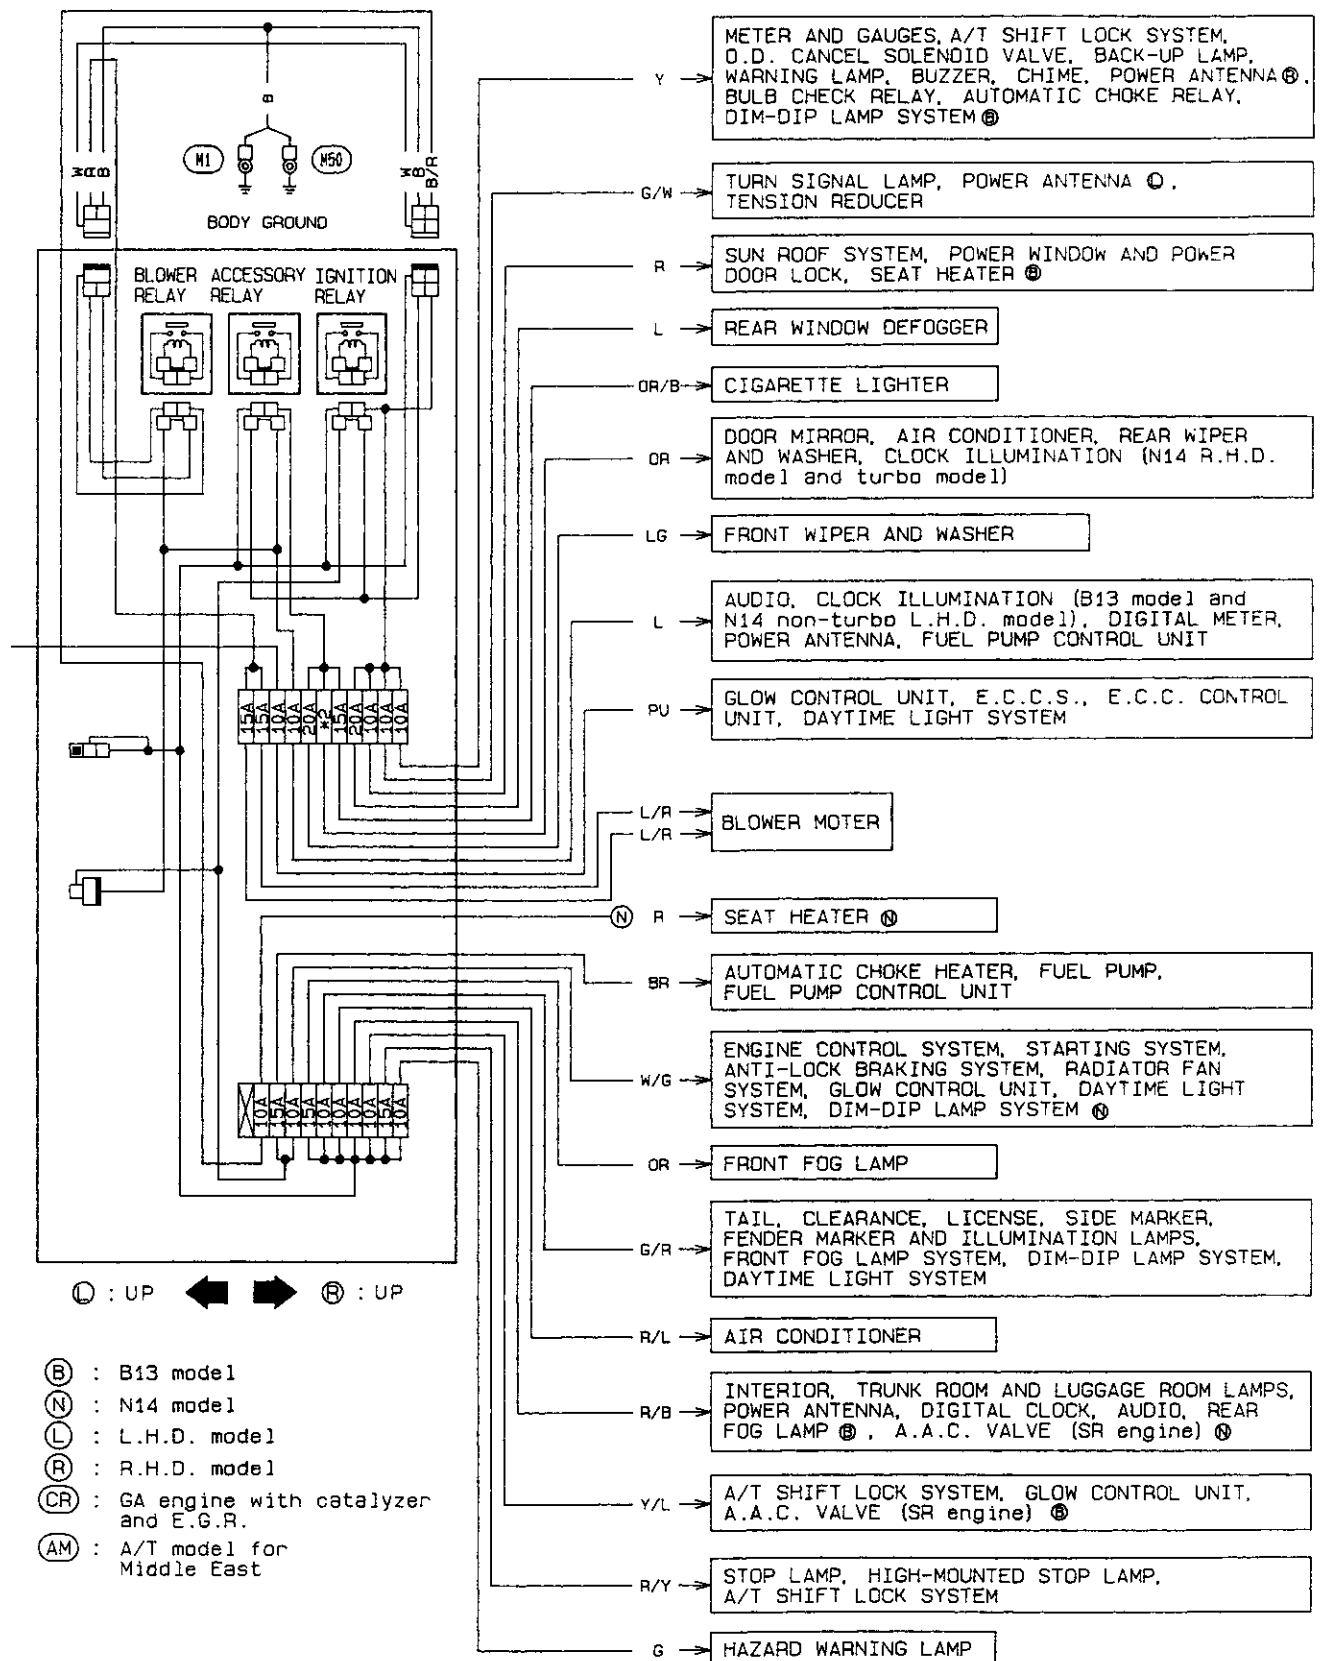


SEF262Q

POWER SUPPLY ROUTING

Wiring Diagram (Cont'd)


TYPE-II

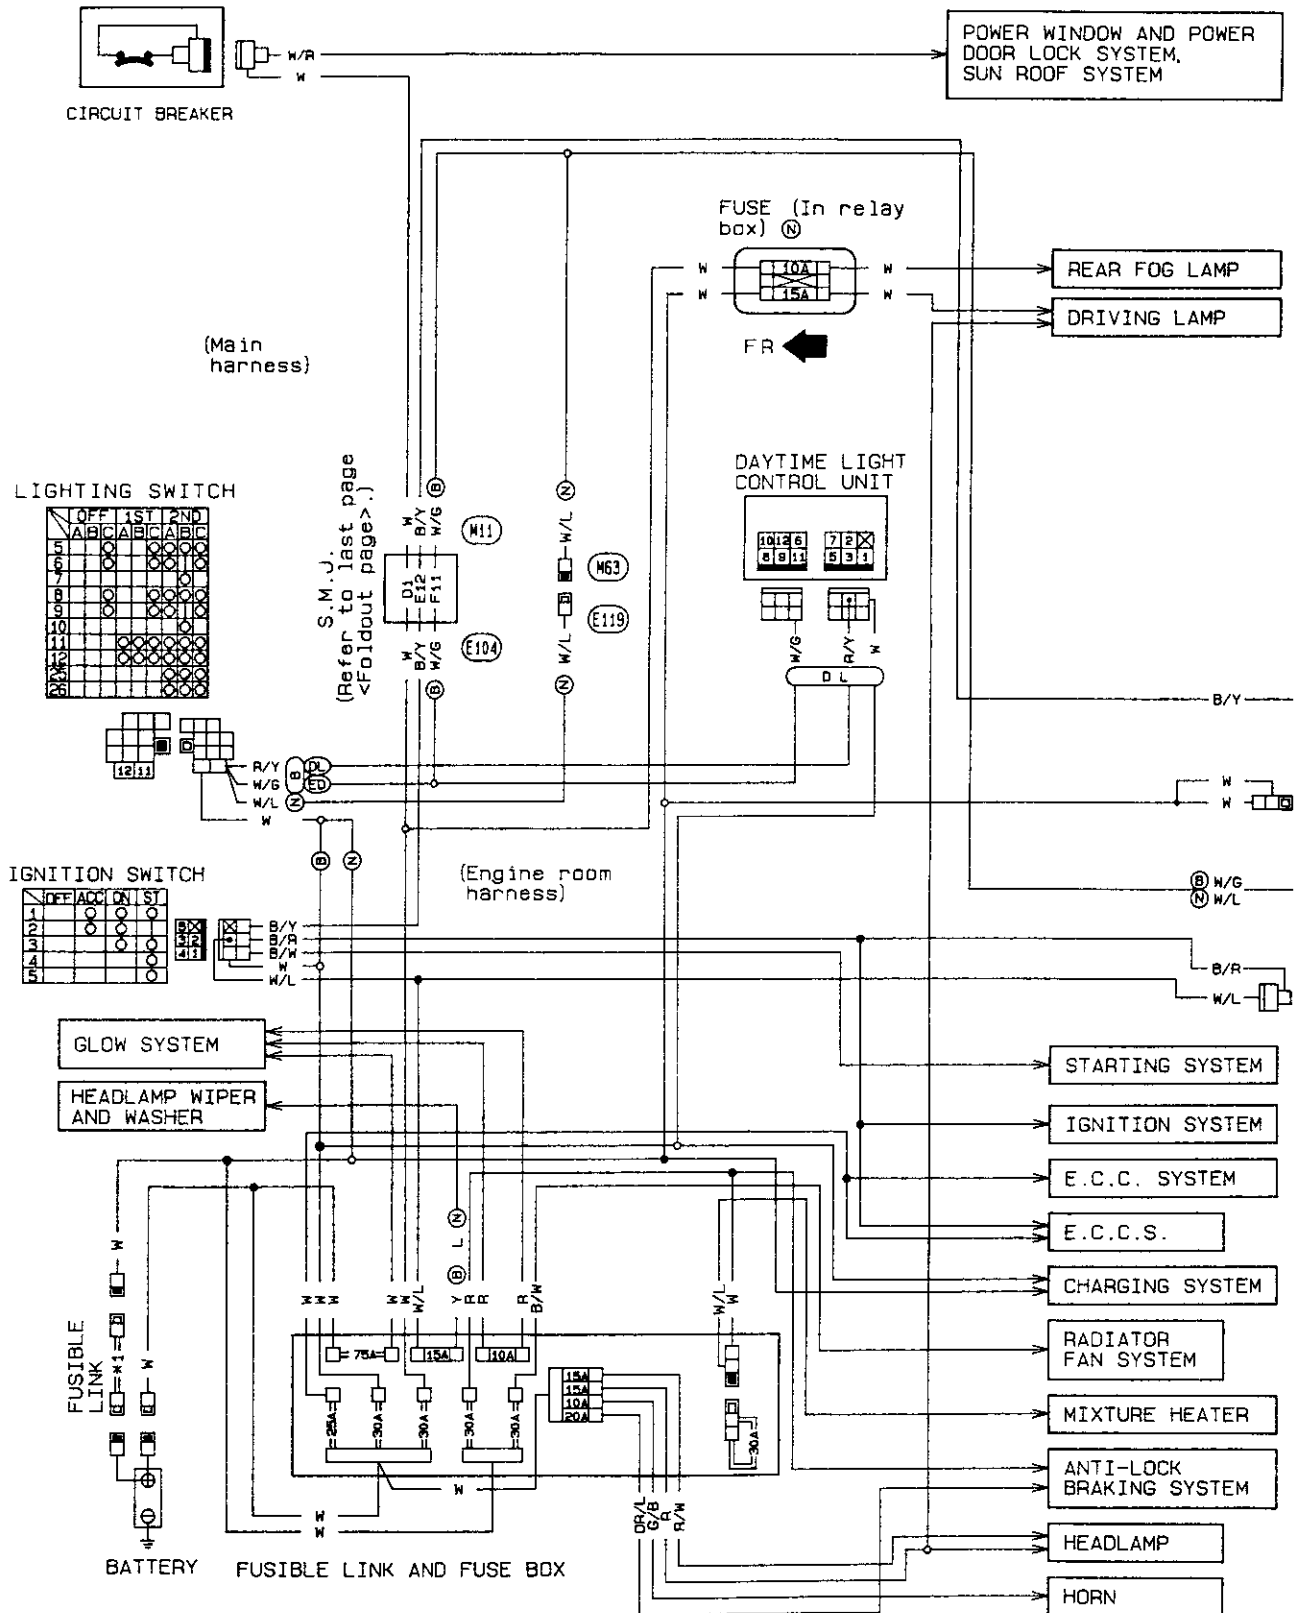


- *1: B.....N14 model with GA engine
GY.....CD engine and B13 model with GA engine
L.....SR engine
- *2: 10A...B13 model
15A...N14 model

POWER SUPPLY ROUTING

Wiring Diagram (Cont'd)

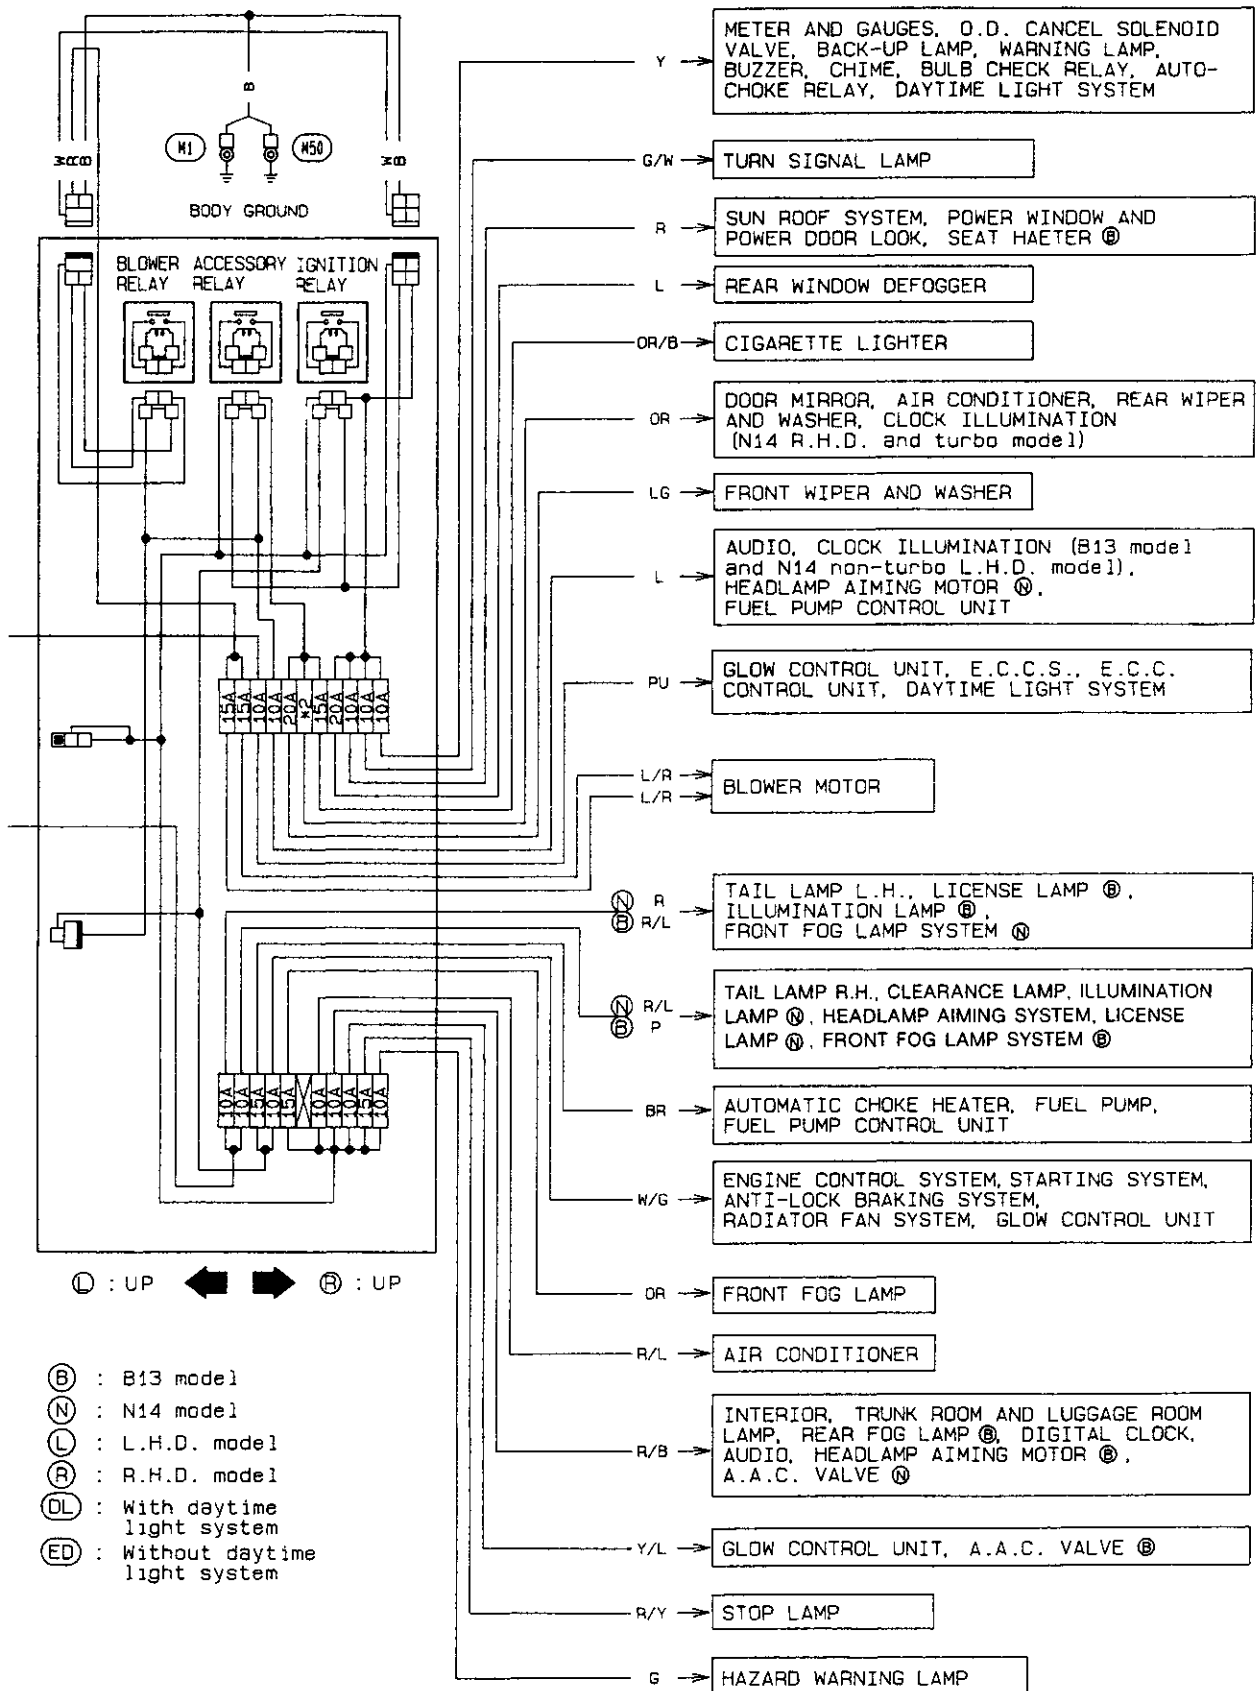


POWER SUPPLY ROUTING

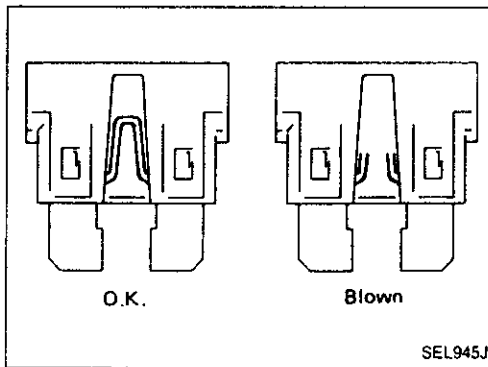

Fuse

- If fuse is blown, be sure to eliminate cause of problem before installing new fuse.
- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not install fuse in oblique direction; always insert it into fuse holder properly.
- Remove fuse for clock if vehicle is not used for a long period of time.

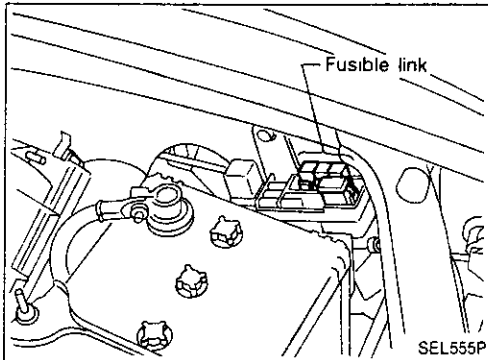

Fusible Link

A melted fusible link can be detected by visual inspection. If its condition is questionable, use circuit tester or test lamp.




CAUTION:

- If fusible link should melt, it is possible that critical circuit (power supply or large current carrying circuit) is shorted. In such a case, carefully check and eliminate cause of problem.
- Never wrap periphery of fusible link with vinyl tape. Extreme care should be taken with this link to ensure that it does not come into contact with any other wiring harness or vinyl or rubber parts.

BATTERY

CAUTION:

- If it becomes necessary to start the engine with a booster battery and jumper cables, use a 12-volt booster battery.
- After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- Never add distilled water through the hole used to check specific gravity.

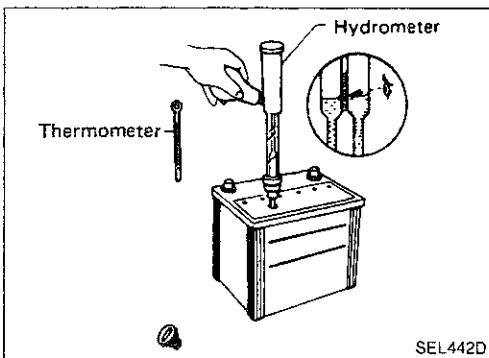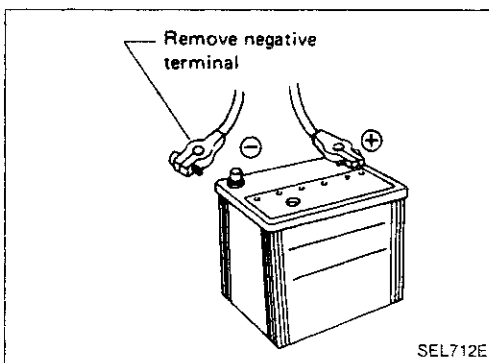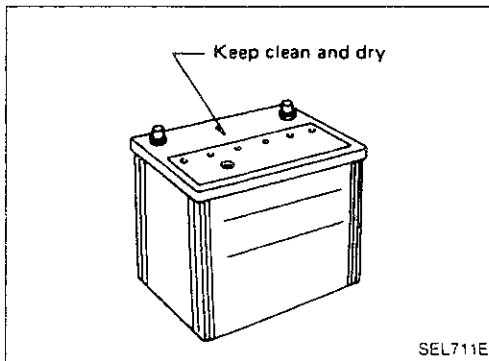

How to Handle Battery

METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.

- The battery surface (particularly its top) should always be kept clean and dry.
If the top surface of a battery is wet with electrolyte or water, leakage current will cause the battery to discharge. Always keep the battery clean and dry.
- When the vehicle is not going to be used over a long period of time, disconnect the negative battery terminal. (If the vehicle has an extended storage switch, turn it off.)
- Check the charge condition of the battery.
Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

BATTERY


How to Handle Battery (Cont'd)

CHECKING ELECTROLYTE LEVEL


WARNING:

Do not allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, do not touch or rub your eyes until you have thoroughly washed your hands. If the acid contacts the eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention.

Normally the battery does not require additional water. However, when the battery is used under severe conditions, adding distilled water may be necessary during the battery life.

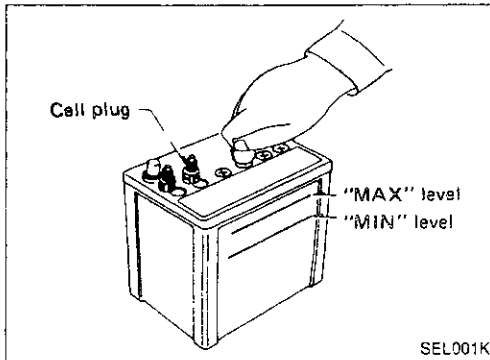


- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

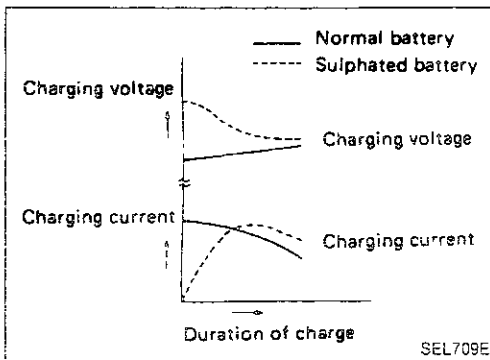

SULPHATION


When a battery has been left unattended for a long period of time and has a specific gravity of less than 1.100, it will be completely discharged, resulting in sulphation on the cell plates.

Compared with a battery discharged under normal conditions, the current flow in a "sulphated" battery is not as smooth although its voltage is high during the initial stage of charging, as shown in the figure at the left.

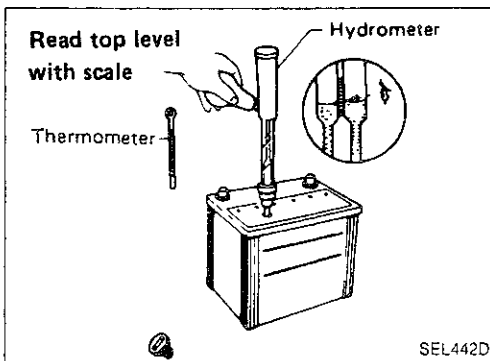

SPECIFIC GRAVITY CHECK

1. Read hydrometer and thermometer indications at eye level.

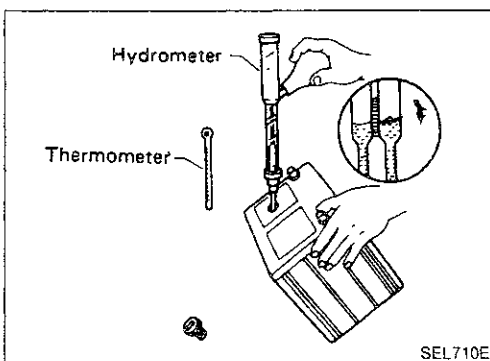

2. When electrolyte level is too low, tilt battery case to raise it for easy measurement.


BATTERY

How to Handle Battery (Cont'd)

2. Convert into specific gravity at 20°C (68°F).

Example:

- When electrolyte temperature is 35°C (95°F) and specific gravity of electrolyte is 1.230, converted specific gravity at 20°C (68°F) is 1.240.
- When electrolyte temperature is 0°C (32°F) and specific gravity of electrolyte is 1.210, converted specific gravity at 20°C (68°F) is 1.196.

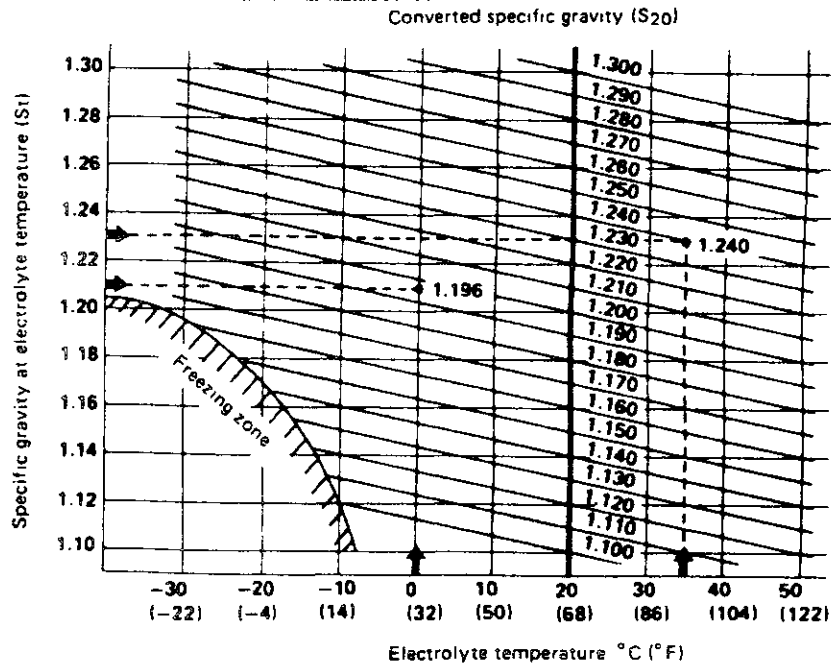


SEL042D

BATTERY

Battery Test and Charging Chart

Chart I

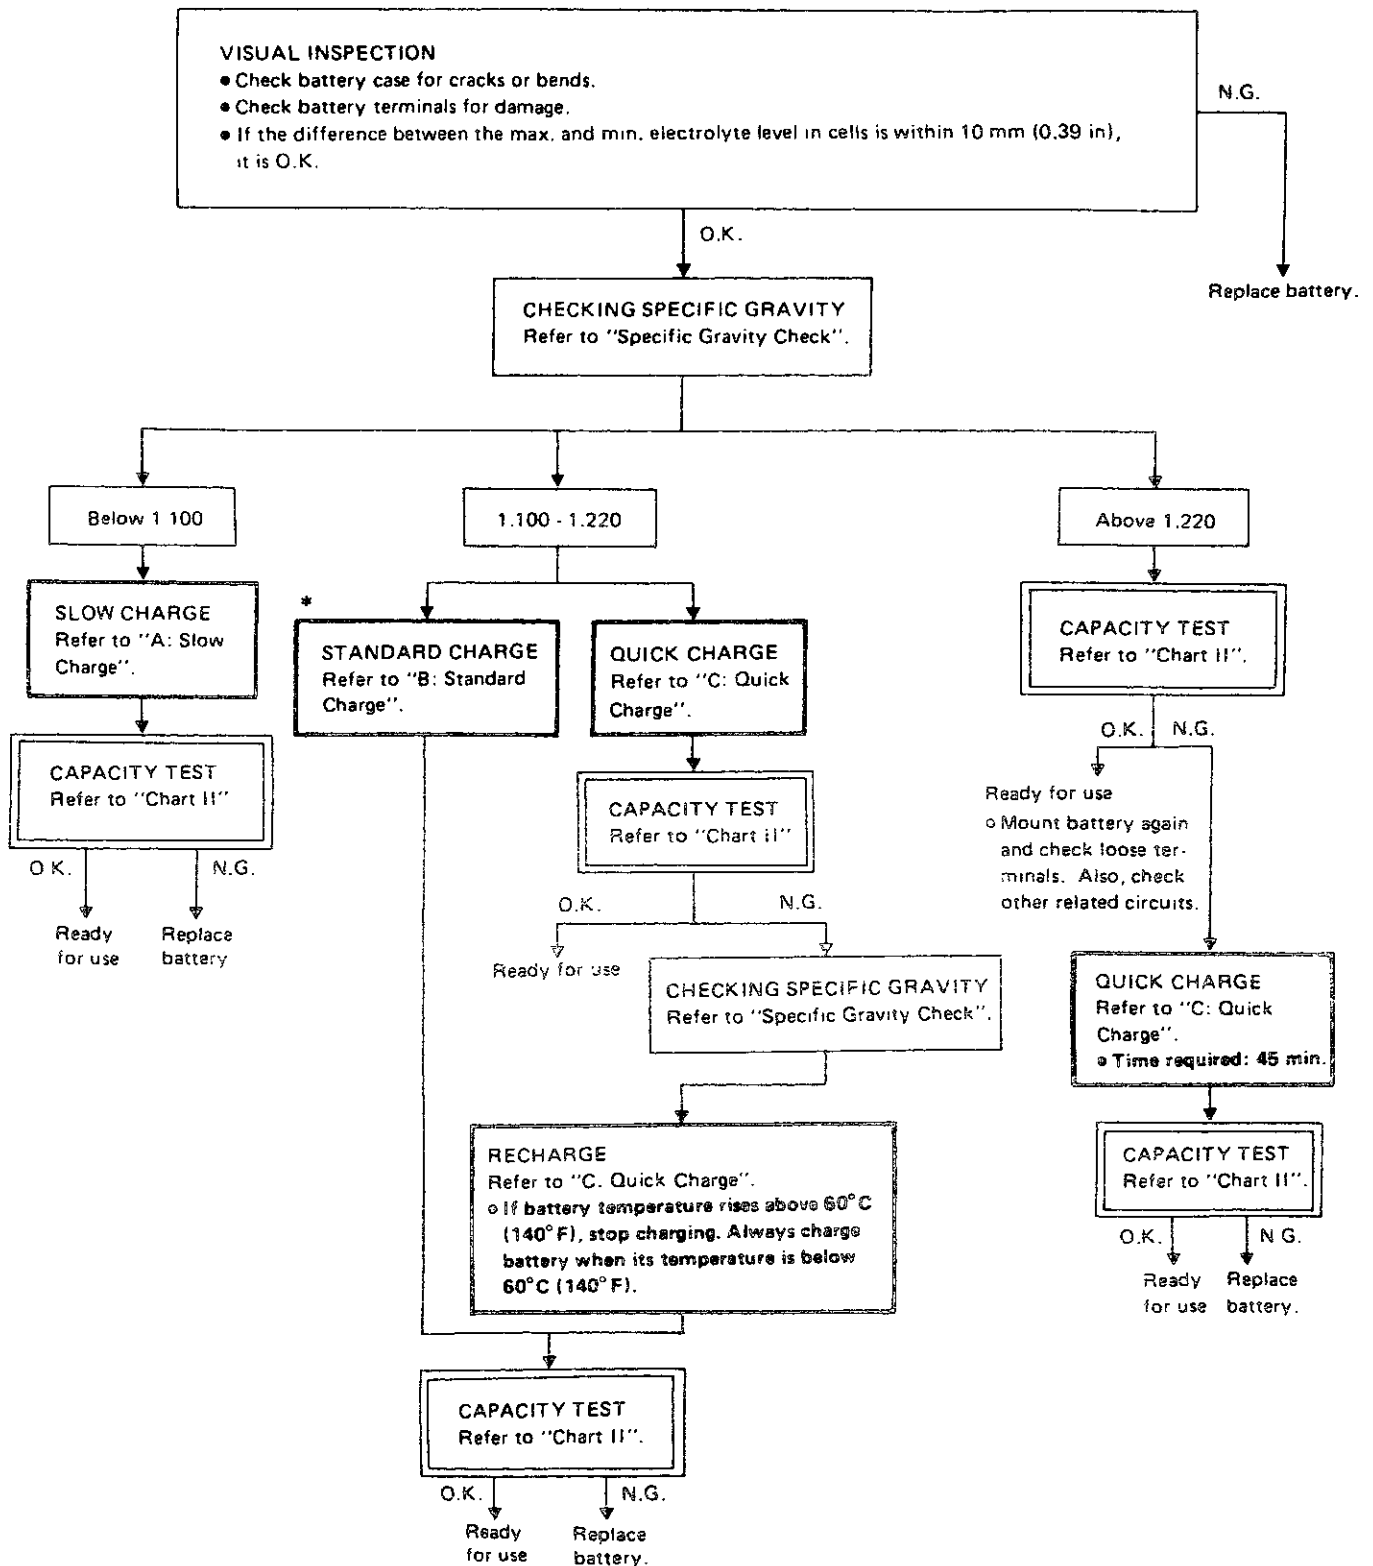


* "STANDARD CHARGE" is recommended in case that the vehicle is in storage after charging.

BATTERY

Battery Test and Charging Chart (Cont'd)


Chart II

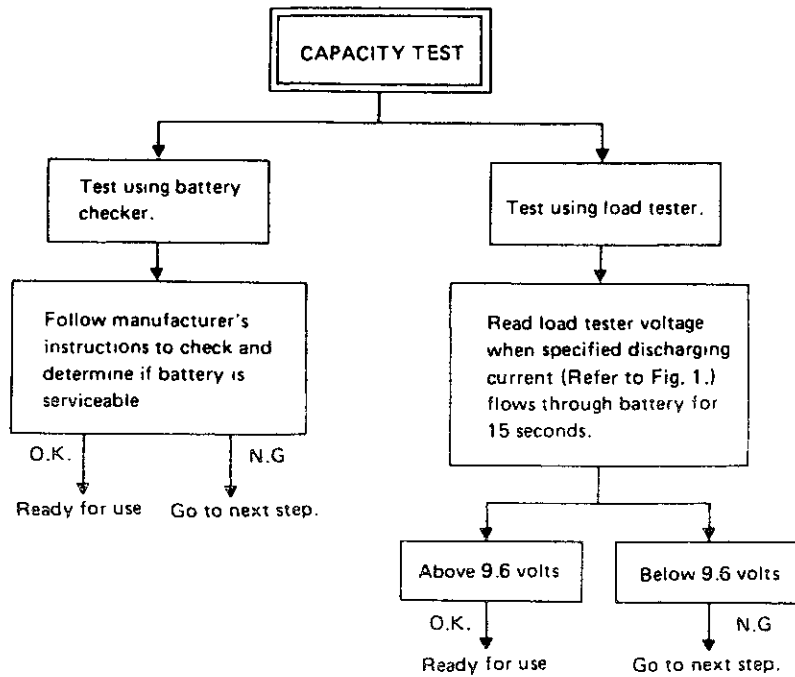

- Check battery type and determine the specified current using the following table.

Fig. 1 DISCHARGING CURRENT (Load tester)

Type	Current (A)
28B19R(L)	90
34B19R(L)	99
46B24R(L)	135
55B24R(L)	135
50D23R(L)	150
55D23R(L)	180
65D26R(L)	195
80D26R(L)	195
75D31R(L)	210
95D31R(L)	240
95E41R(L)	300
130E41R(L)	330

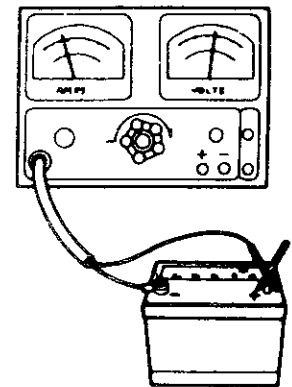

SEL697B

BATTERY

Battery Test and Charging Chart (Cont'd)

A: SLOW CHARGE


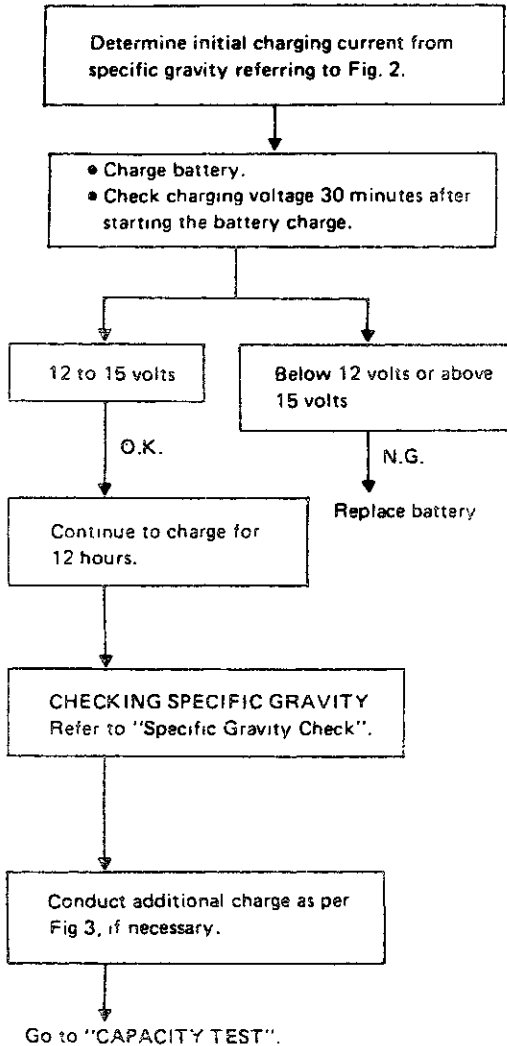


Fig. 2 INITIAL CHARGING CURRENT SETTING (Slow charge)

BATTERY TYPE CON- VERTED SPECIFIC GRAVITY	28B19R(L) 34B19R(L)	46B24R(L) 55B24R(L)	50D23R(L) 55D23R(L)	65D26R(L) 80D26R(L)	75D31R(L)	95D31R(L) 95E41R(L)	130E41R(L)
Below 1.100	4.0 (A)	5.0 (A)	7.0 (A)	8.0 (A)	9.0 (A)	10.0 (A)	14.0 (A)

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

Fig. 3 ADDITIONAL CHARGE (Slow charge)

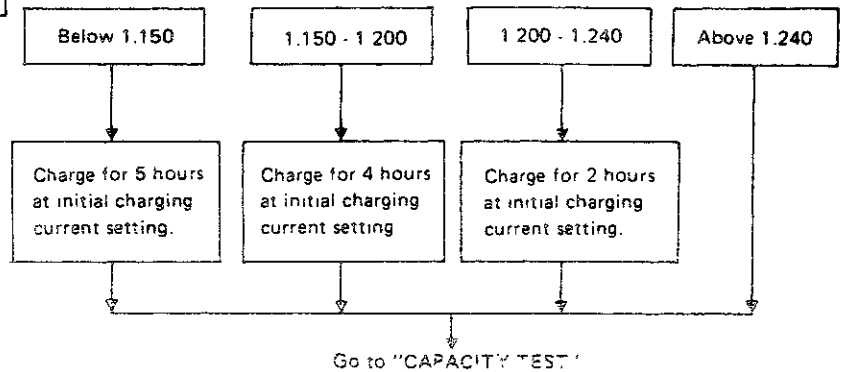

CAUTION:

- Set charging current to value specified in Fig. 2. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).

BATTERY

Battery Test and Charging Chart (Cont'd)

B: STANDARD CHARGE


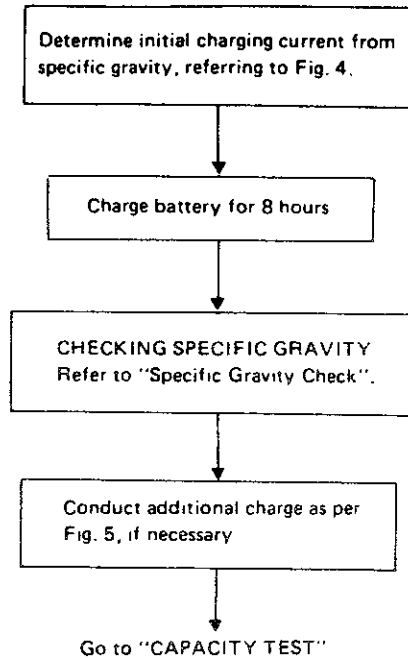


Fig. 4 INITIAL CHARGING CURRENT SETTING
(Standard charge)

BATTERY TYPE CON- VERTED SPECIFIC GRAVITY	28B19R(L) 34B19R(L)	46B24R(L) 55B24R(L)	50D23R(L) 55D23R(L)	65D26R(L) 80D26R(L)	75D31R(L)	95D31R(L) 95E41R(L)	130E41R(L)
1.100 - 1.130	4.0 (A)	5.0 (A)	6.0 (A)	7.0 (A)	8.0 (A)	9.0 (A)	13.0 (A)
1.130 - 1.160	3.0 (A)	4.0 (A)	5.0 (A)	6.0 (A)	7.0 (A)	8.0 (A)	11.0 (A)
1.160 - 1.190	2.0 (A)	3.0 (A)	4.0 (A)	5.0 (A)	6.0 (A)	7.0 (A)	9.0 (A)
1.190 - 1.220	2.0 (A)	2.0 (A)	3.0 (A)	4.0 (A)	5.0 (A)	5.0 (A)	7.0 (A)

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

Fig 5 ADDITIONAL CHARGE (Standard charge)

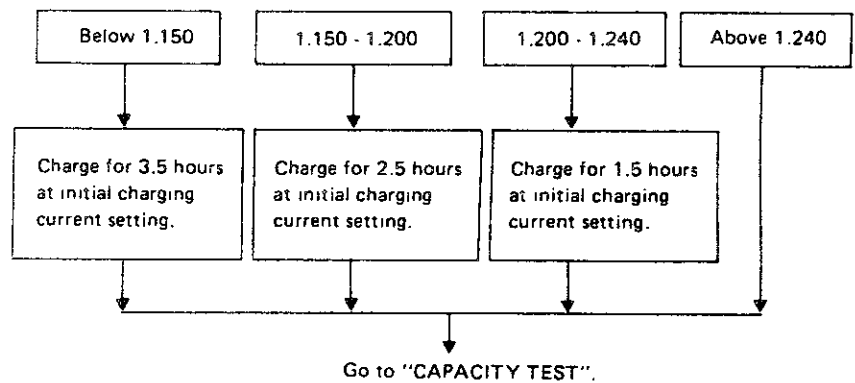

CAUTION:

- Do not use standard charge method on a battery whose specific gravity is less than 1.100.
- Set charging current to value specified in Fig. 4. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).

BATTERY

Battery Test and Charging Chart (Cont'd)

C: QUICK CHARGE

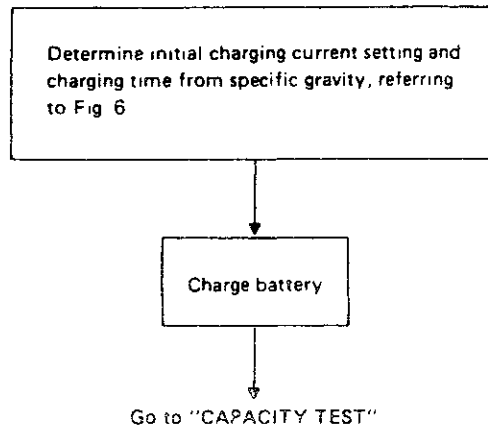


Fig. 6 INITIAL CHARGING CURRENT SETTING AND CHARGING TIME (Quick charge)

CON- VERTED SPECIFIC GRAVITY	BATTERY TYPE		CUR- RENT [A]	28B19R(L) 34B19R(L)	46B24R(L) 55B24R(L) 50D23R(L)	55D23R(L) 65D26R(L) 80D26R(L)	75D31R(L) 95D31R(L) 95E41R(L)	130E41R(L)
			10 (A)	15 (A)	20 (A)	30 (A)	40 (A)	
1.100 - 1.130			2.5 hours					
1.130 - 1.160			2.0 hours					
1.160 - 1.190			1.5 hours					
1.190 - 1.220			1.0 hours					
Above 1.220			0.75 hours (45 min.)					

- ▷ Check battery type and determine the specified current using the table shown above.
- ▷ After starting charging, adjustment of charging current is not necessary.

CAUTION:

- Do not use quick charge method on a battery whose specific gravity is less than 1.100.
- Set initial charging current to value specified in Fig. 6. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- Be careful of a rise in battery temperature because a large current flow is required during quick-charge operation.
If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).
- Do not exceed the charging time specified in Fig. 6, because charging battery over the charging time can cause deterioration of the battery.

BATTERY

Service Data and Specifications (S.D.S.)

N14


Model		Except Europe			Europe				
					—	North	Except North	—	
		GA14D	GA16D		CD20	SR20D		GA16D and GA14D	
		—	M/T	A/T	—	—	—	Standard	Option
Type		55D23L		65D26L	95D31L	80D26L	55D23L		80D26L
Capacity	V-AH	12-60		12-65	12-80	12-65	12-60		12-65

B13

Model	Except Middle East and Europe					Middle East	Europe		
							North		Except North
	CD17		Except CD17			—	GA16D	SR20D	—
	Standard	Option	Standard	Option for M/T	Option for A/T	—	—	—	—
Type	75D31L	95D31L	46B24L	55D23L	65D26L	46B24L	65D26L	80D26L	55D23L
Capacity V-AH	12-70	12-80	12-45	12-60	12-65	12-45	12-65	12-65	12-60


Wiring Diagram

M/T MODELS

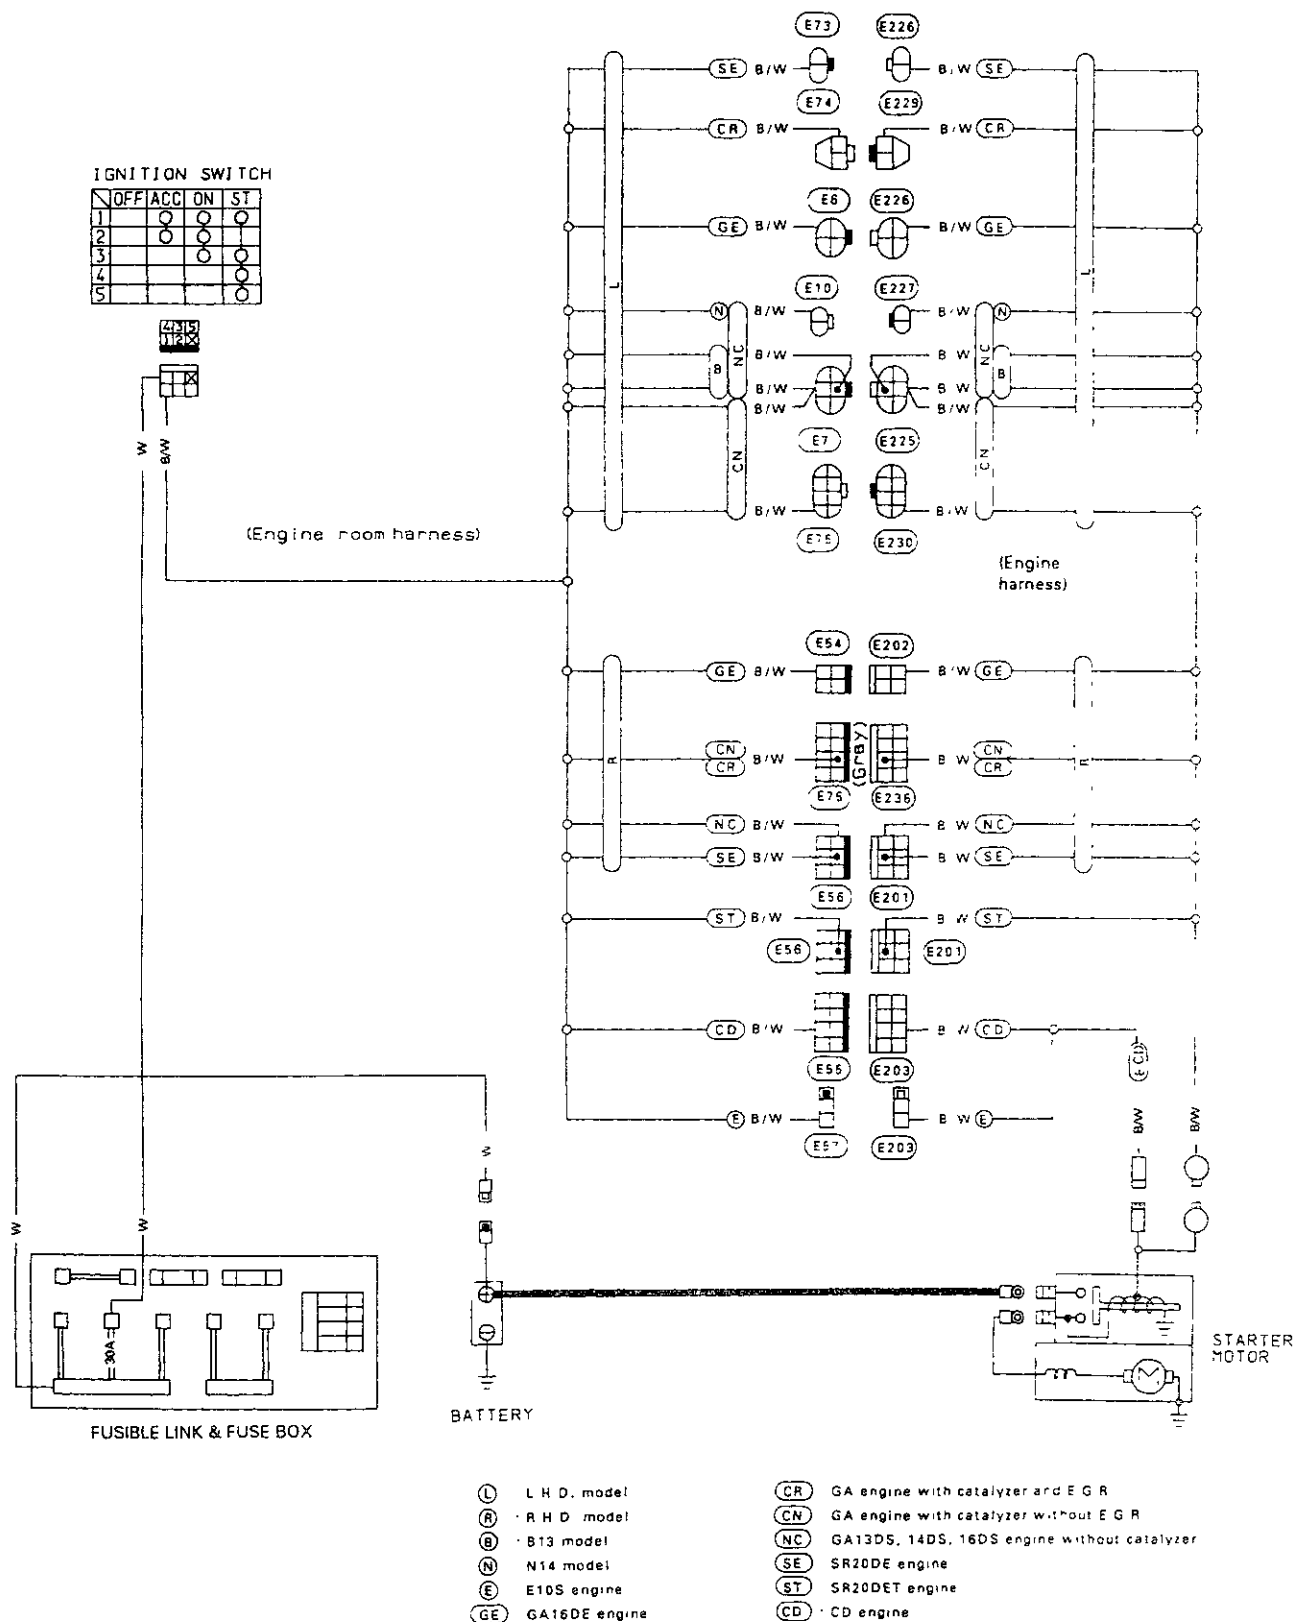


Wiring Diagram (Cont'd)

A/T MODELS

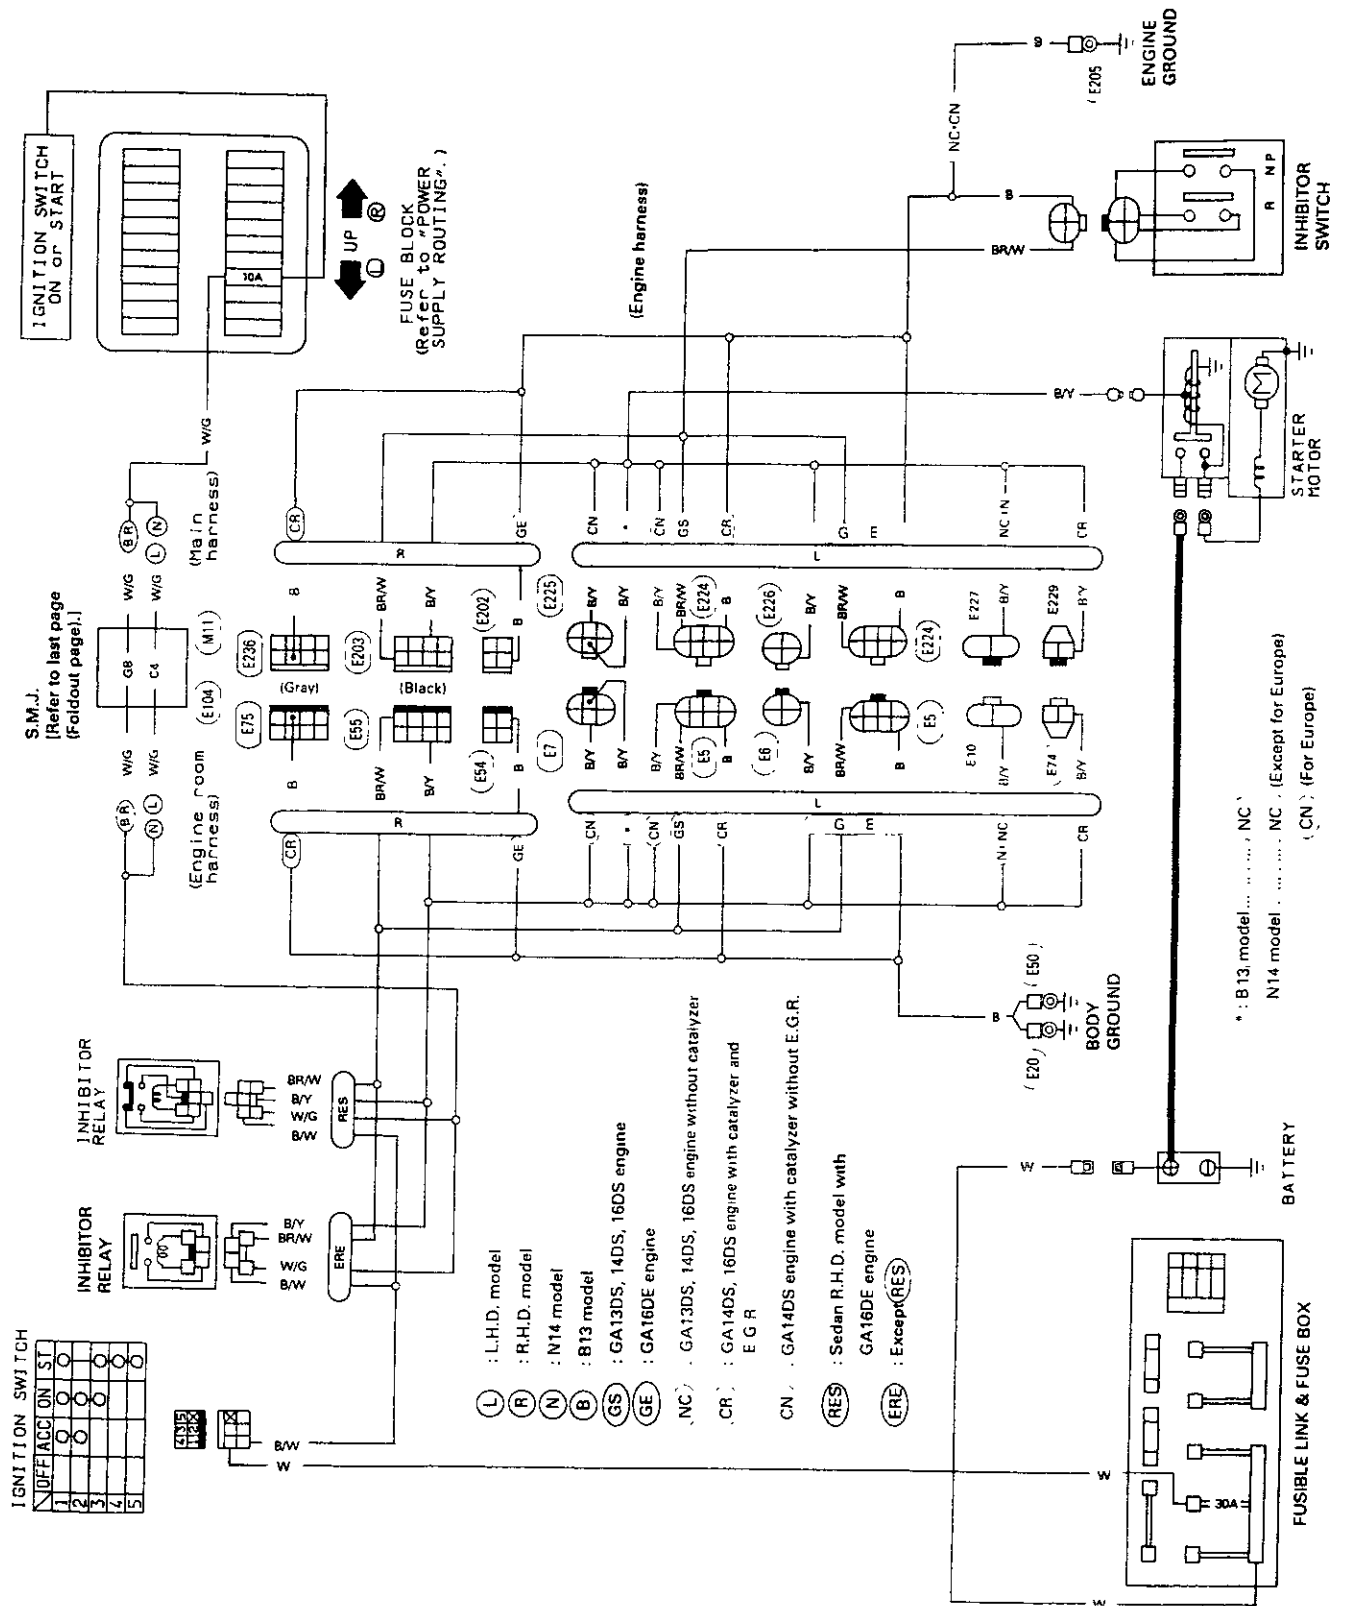


STARTING SYSTEM

Trouble-shooting

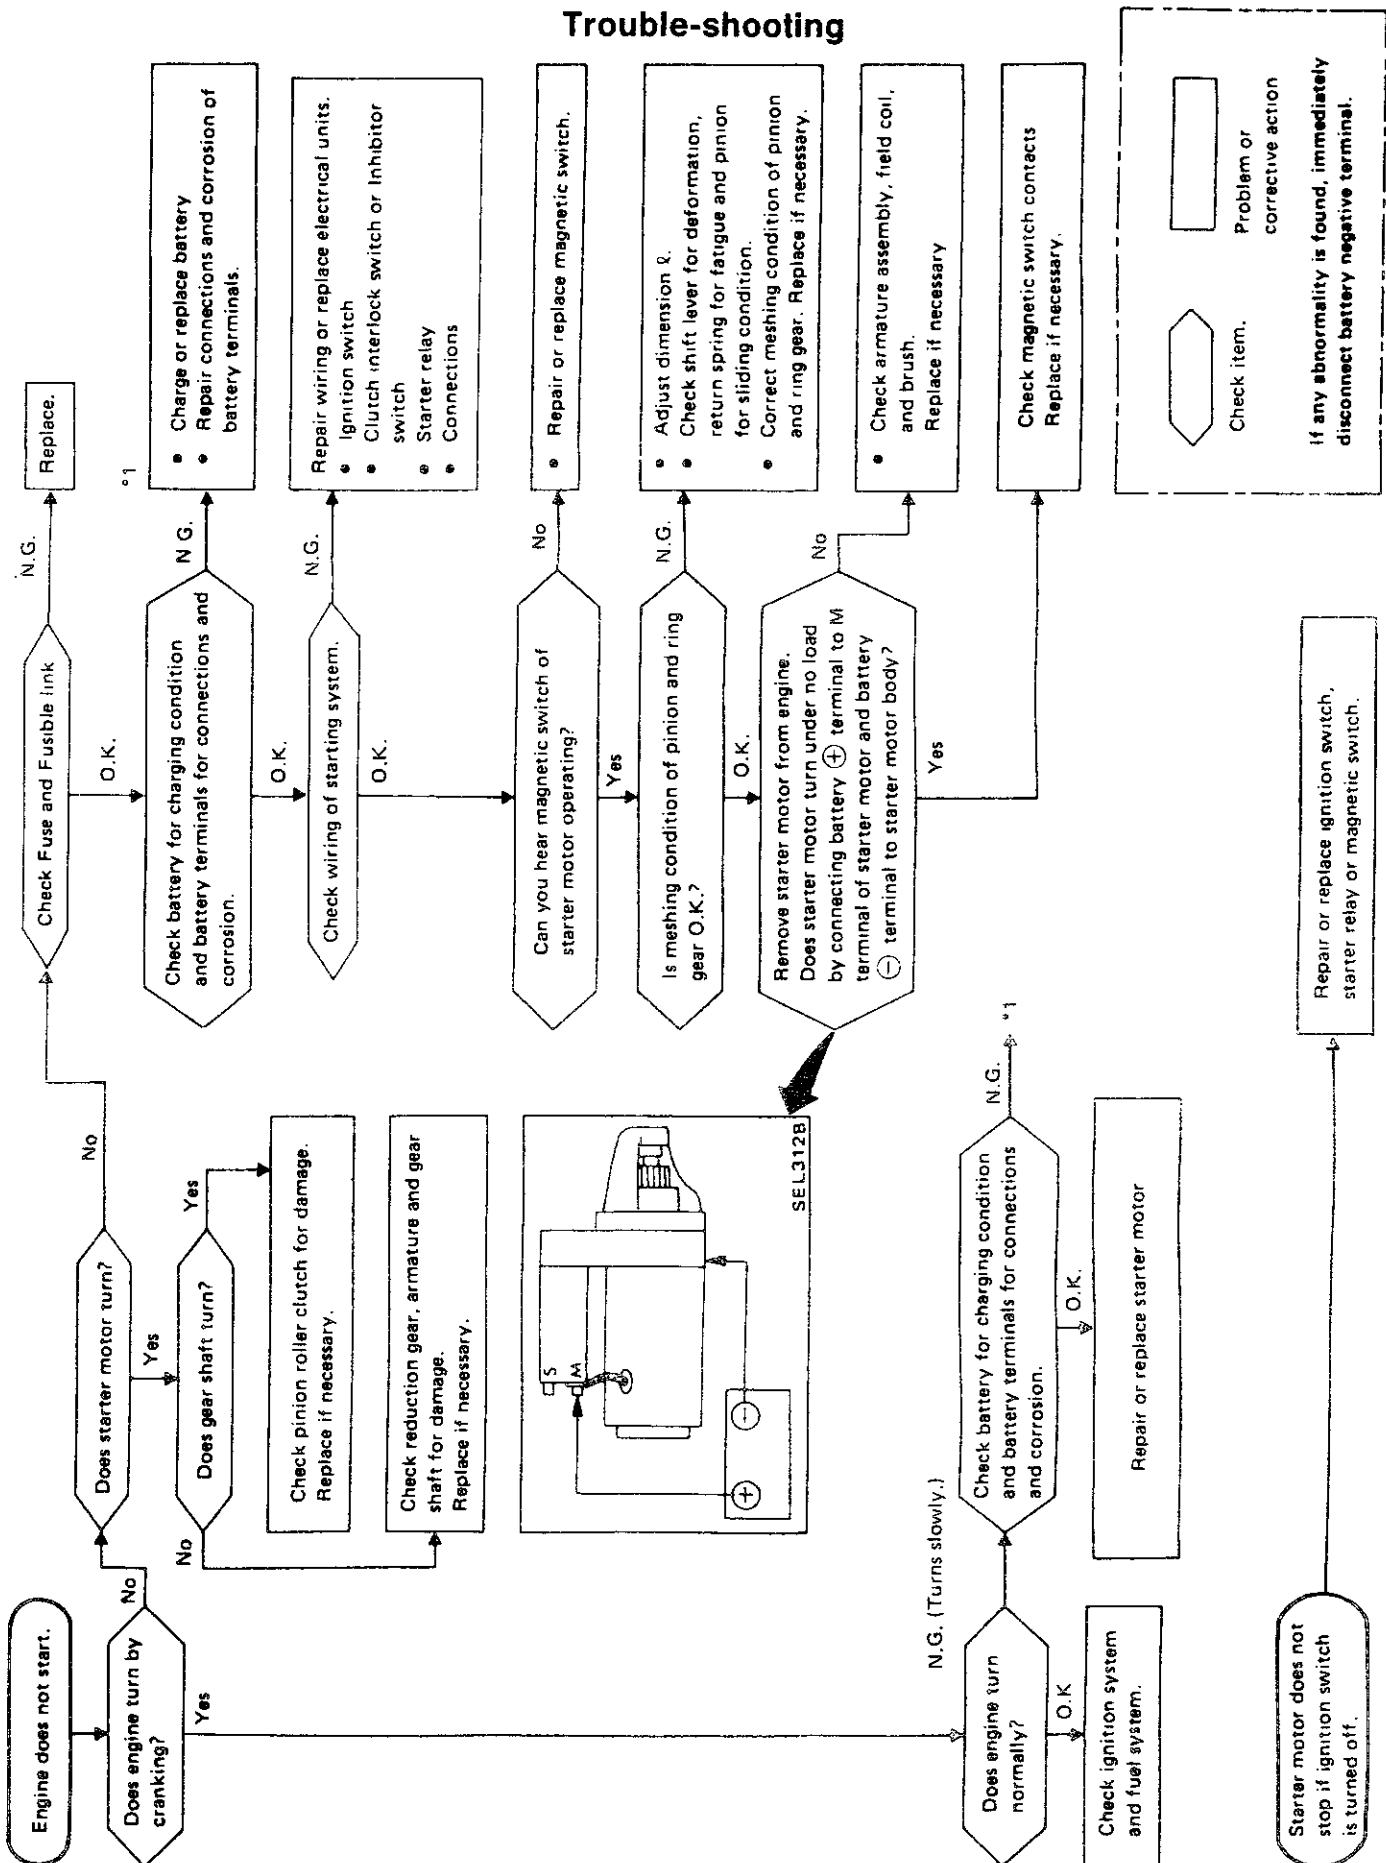


Construction

S114-630

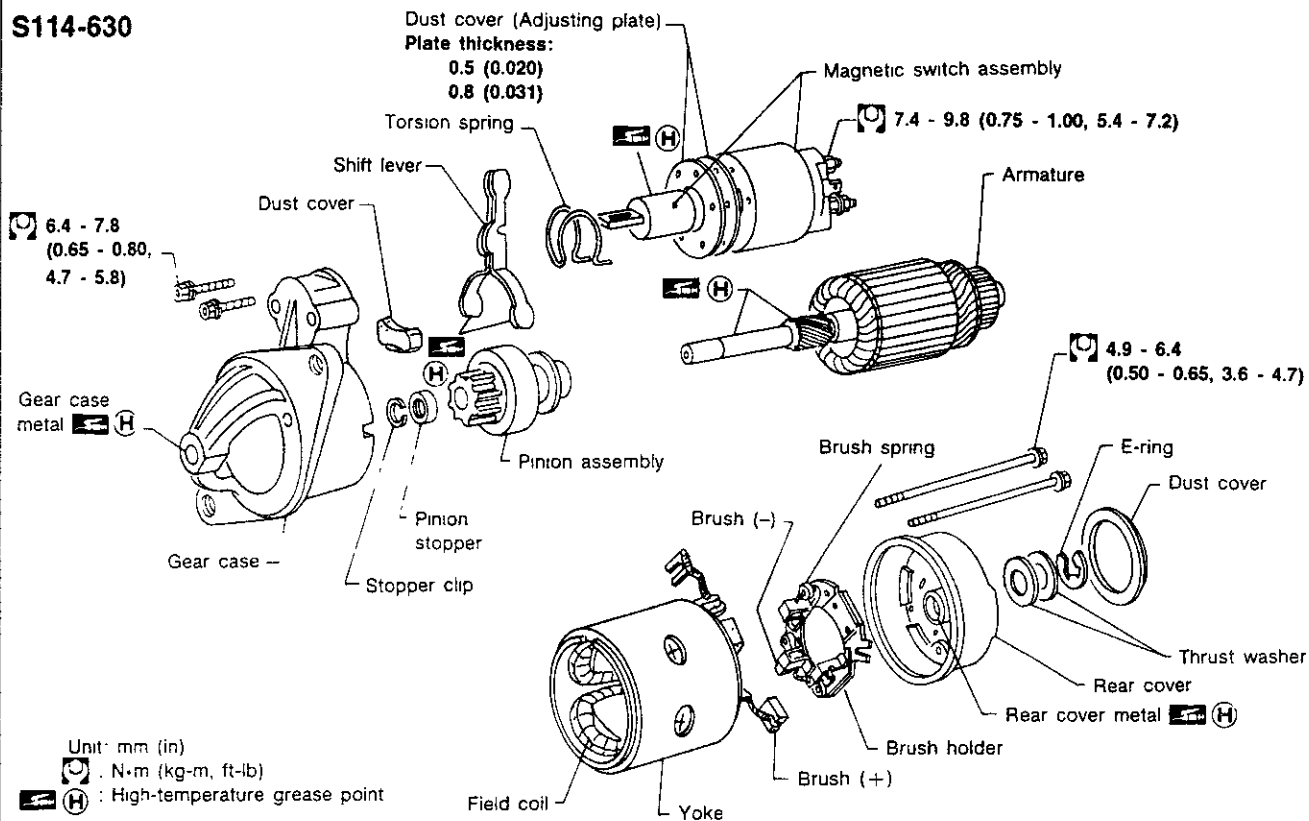

SEL463P

M3T37783

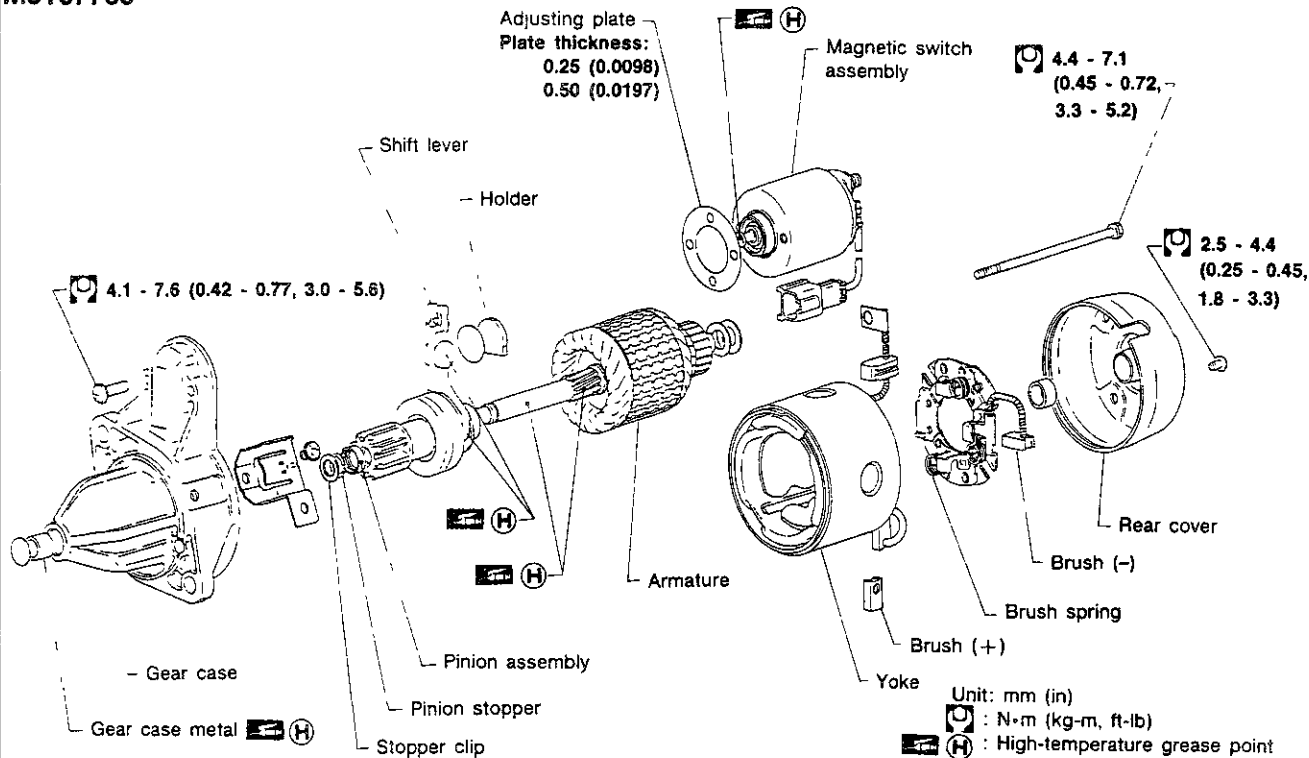


SEL464P


STARTING SYSTEM — Starter —

Construction (Cont'd)

**S114-530,
S114-533,
S114-535**

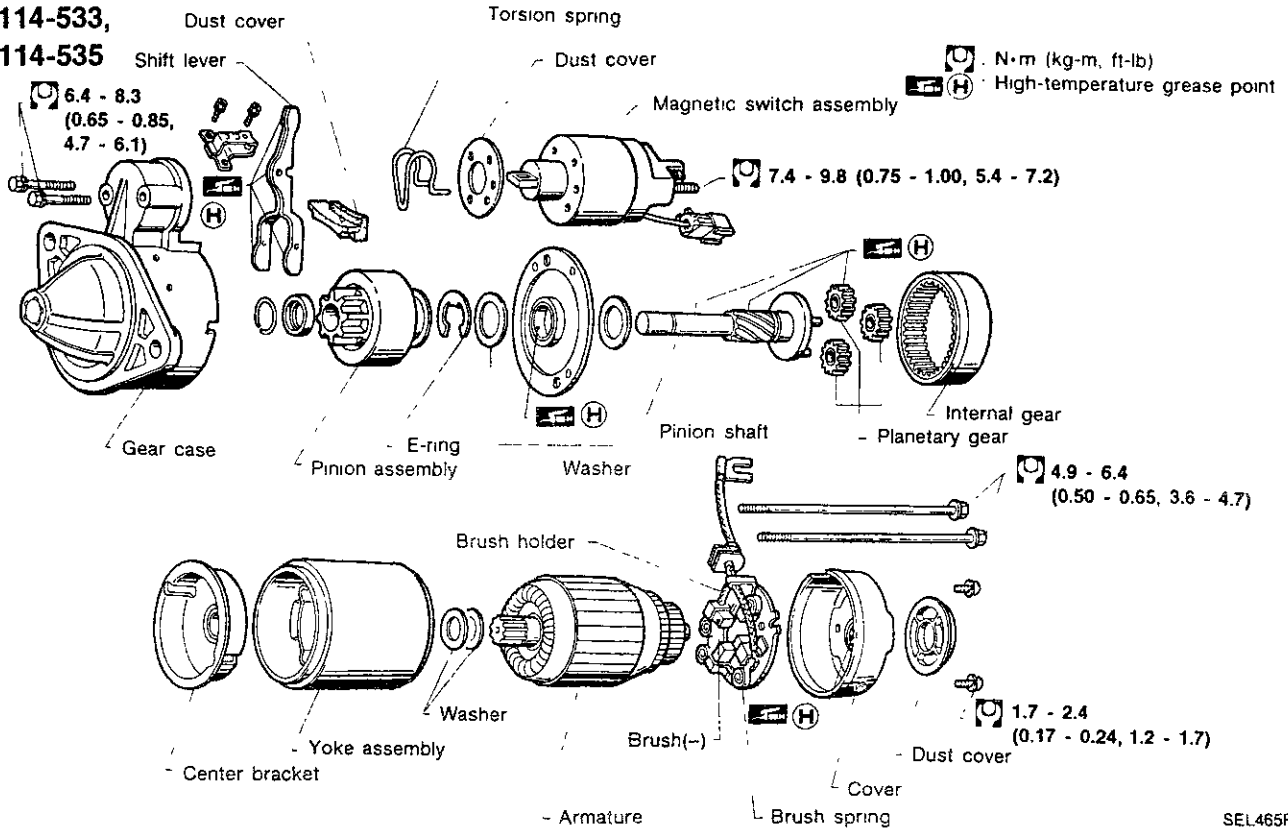


**M1T72086A,
M1T72087A**

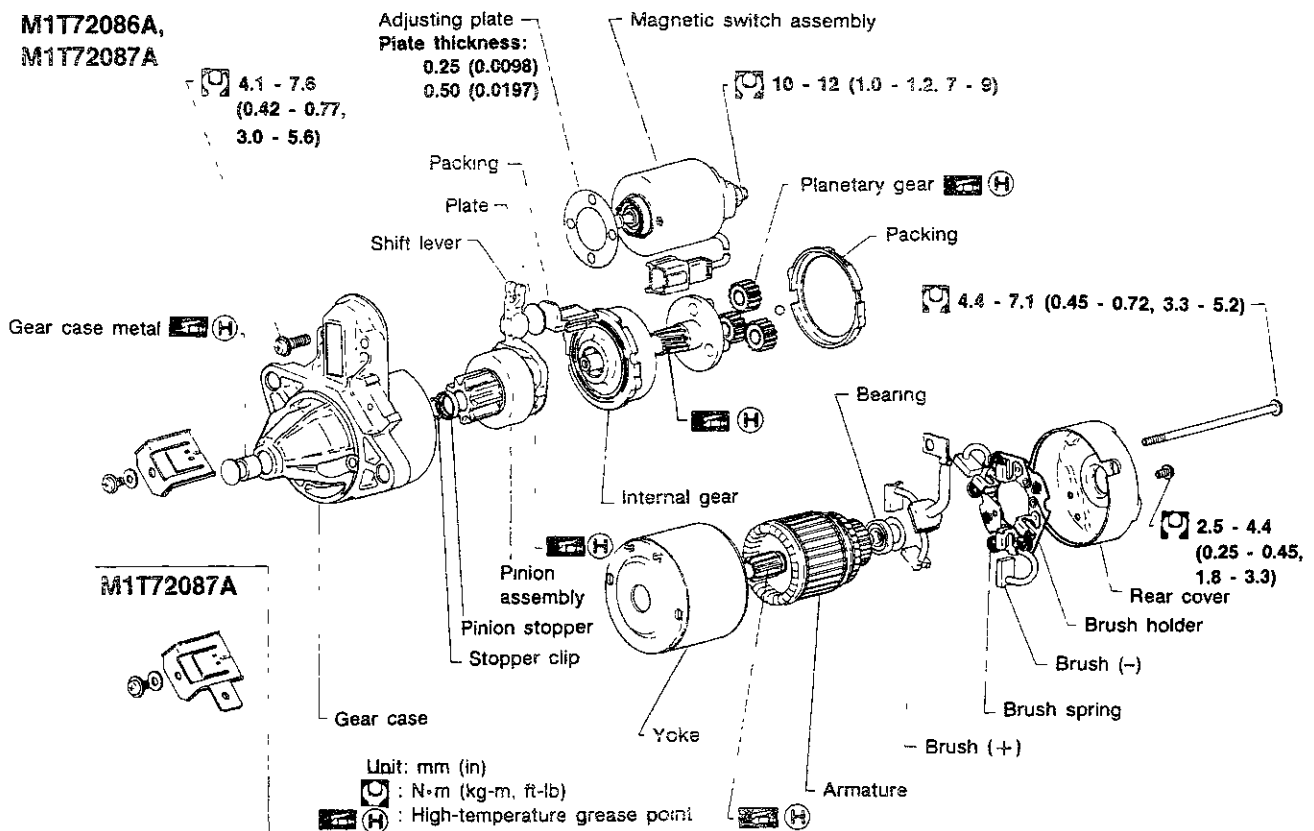

STARTING SYSTEM — Starter —


Construction (Cont'd)

S114-617A

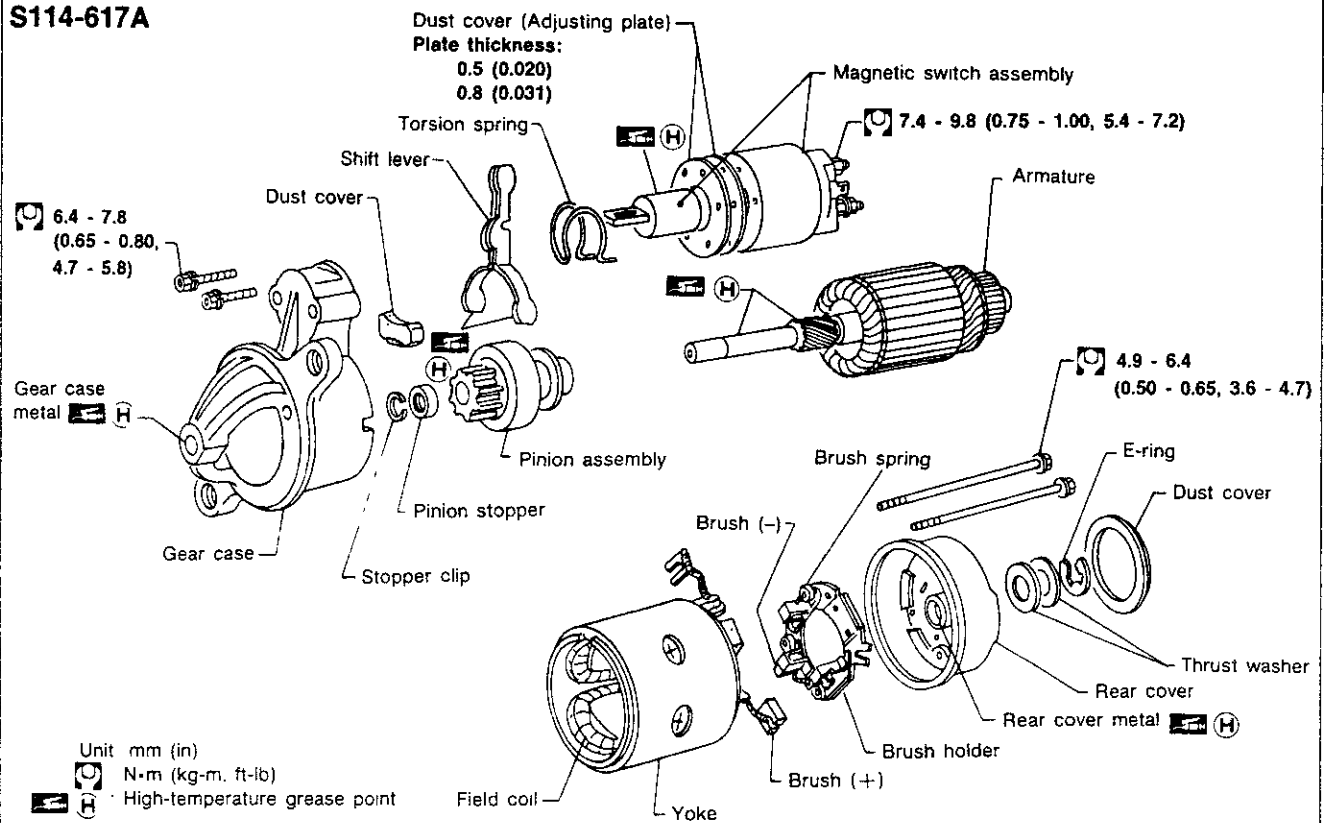

SEL467P


M3T37782

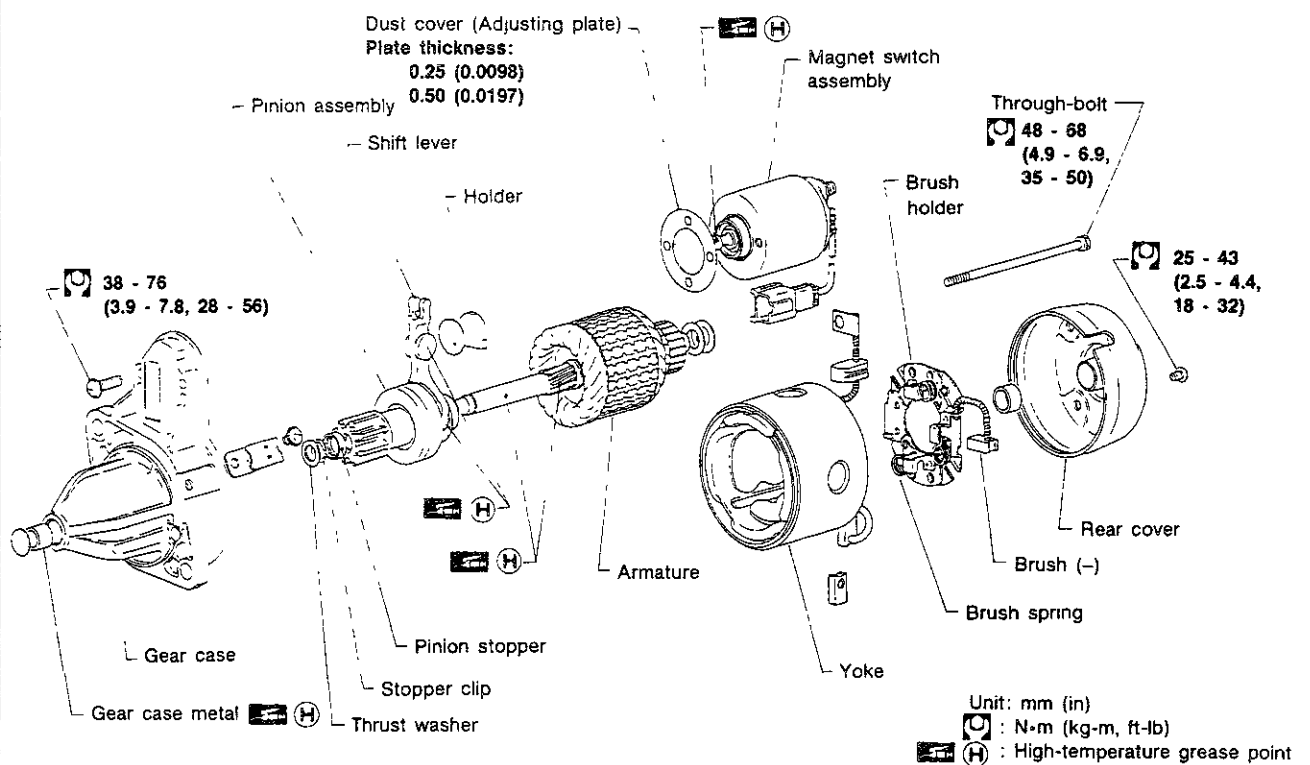

SEL468P

STARTING SYSTEM — Starter — Construction (Cont'd)

S114-357B

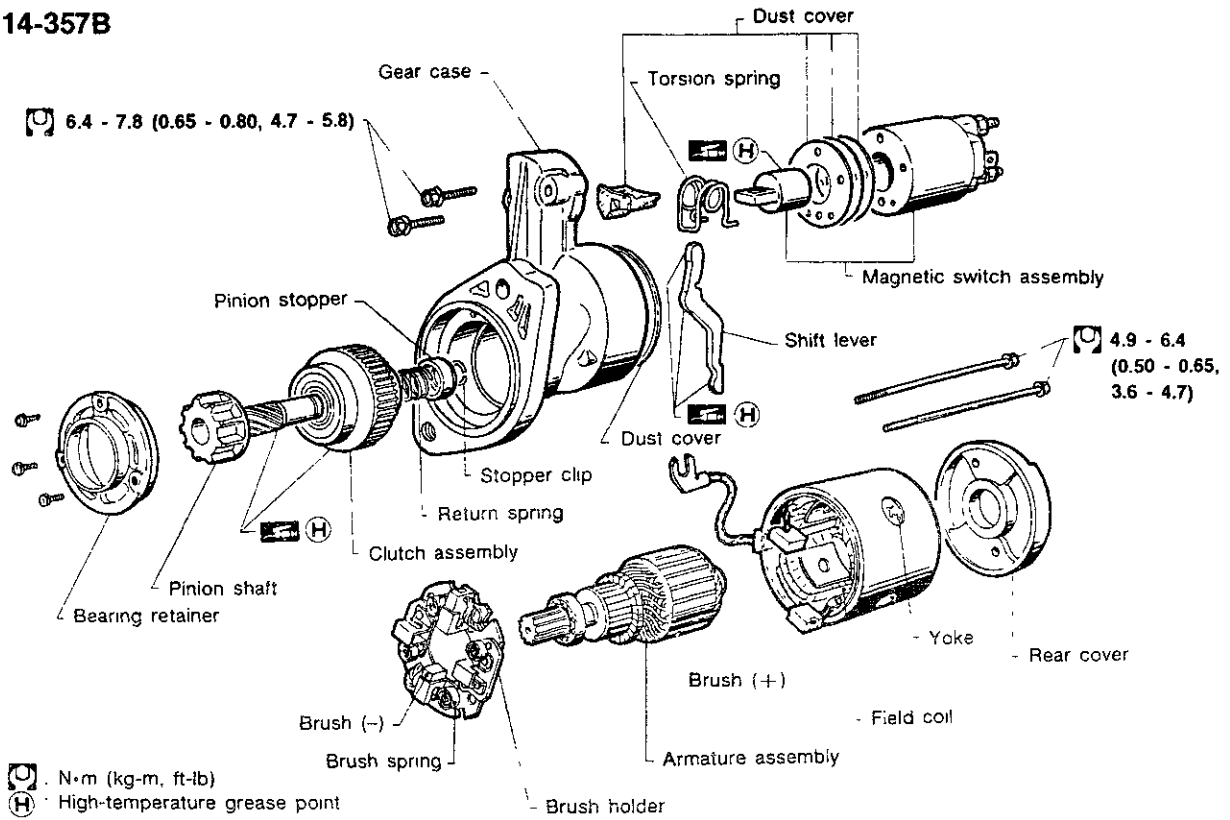


SEL469P

STARTING SYSTEM — Starter —

Construction (Cont'd)

S13-131, S13-105A

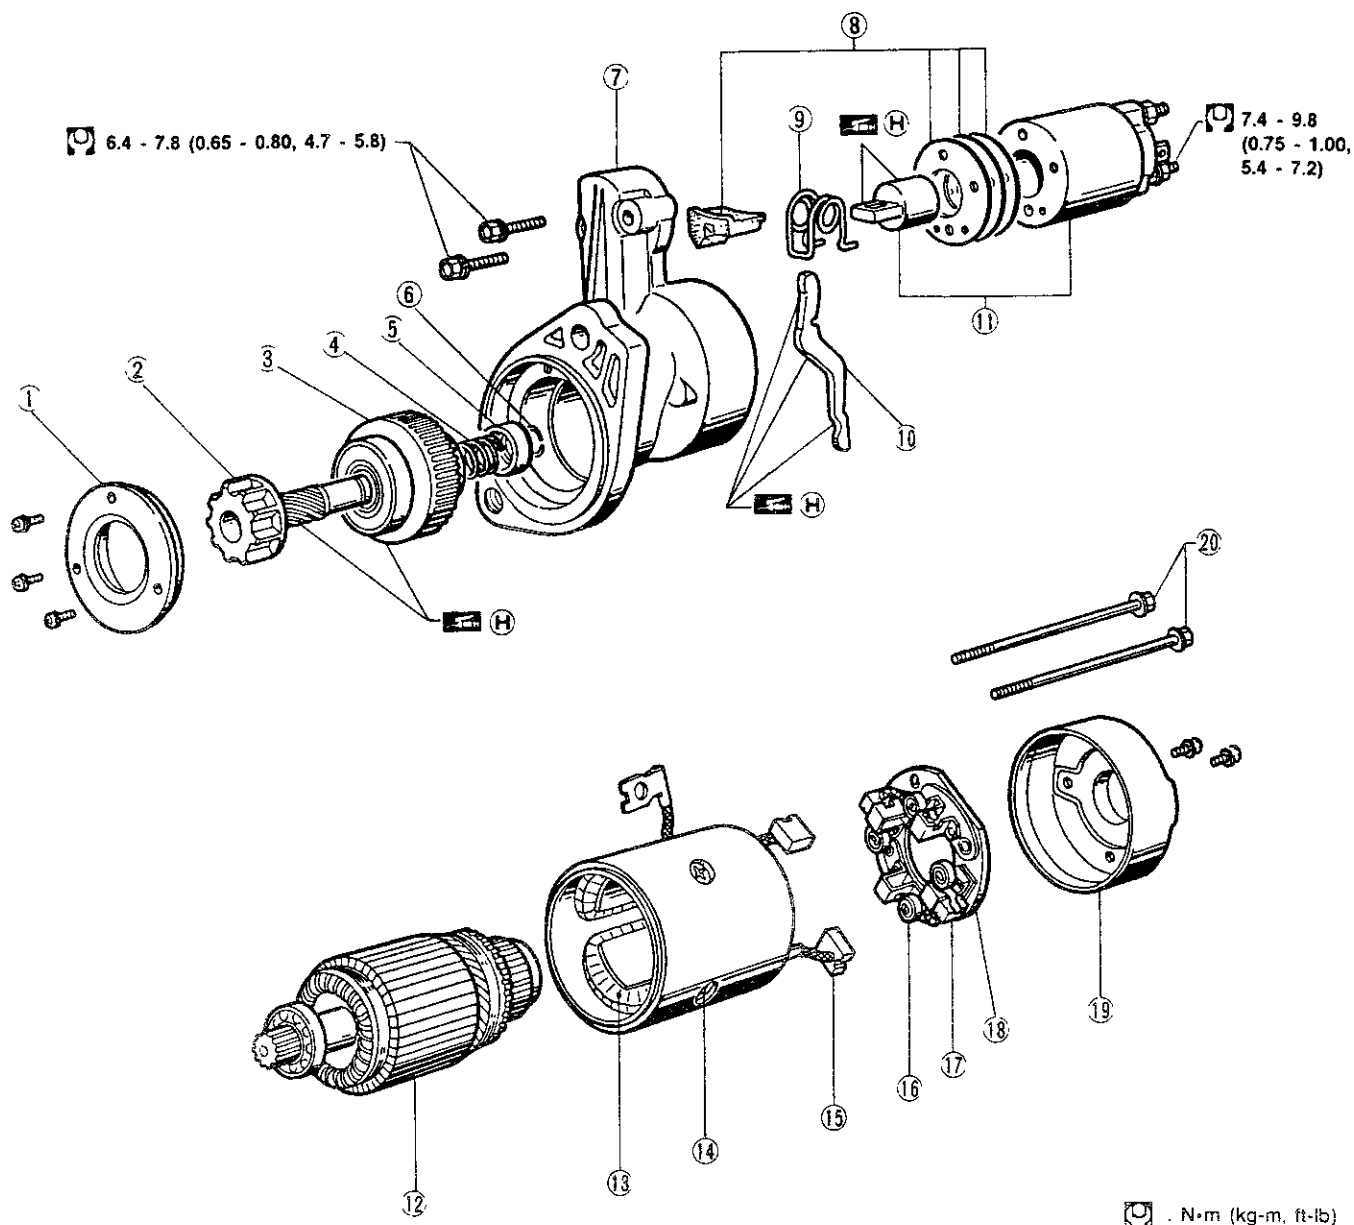

- ① Bearing retainer
- ② Pinion shaft
- ③ Clutch assembly
- ④ Return spring
- ⑤ Pinion stopper
- ⑥ Stopper clip
- ⑦ Gear case


- ⑧ Dust cover
- ⑨ Torsion spring
- ⑩ Shift lever
- ⑪ Magnetic switch assembly
- ⑫ Armature assembly
- ⑬ Field coil
- ⑭ Yoke

- ⑮ Brush (+)
- ⑯ Brush spring
- ⑰ Brush (-)
- ⑱ Brush holder
- ⑲ Rear cover
- ⑳ Through-bolt

SEL553P

STARTING SYSTEM — Starter — Construction (Cont'd)

M2T61871A

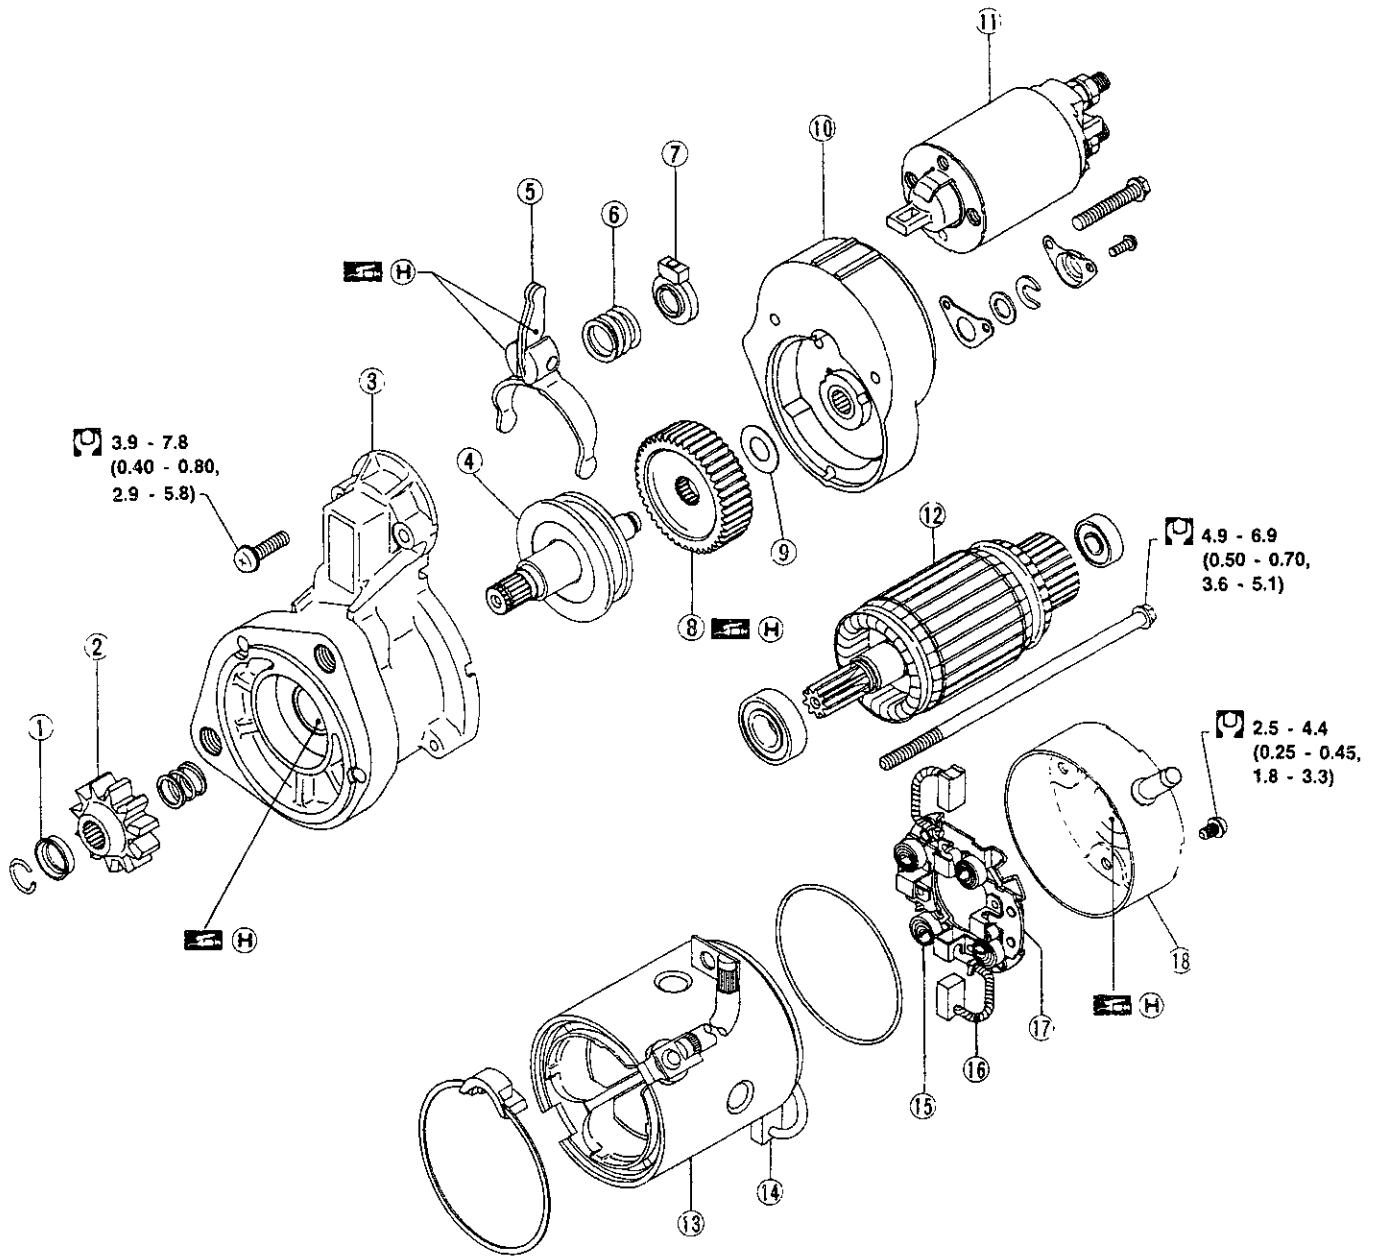


: N·m (kg·m, ft·lb)

SEL554P

- | | | |
|-------------------------|----------------------------|----------------|
| ① Pinion stopper | ⑦ Holder | ⑬ Yoke |
| ② Pinion assembly | ⑧ Reduction gear | ⑭ Brush (+) |
| ③ Gear case | ⑨ Washer | ⑮ Brush spring |
| ④ Pinion shaft assembly | ⑩ Center bracket | ⑯ Brush (-) |
| ⑤ Shift lever | ⑪ Magnetic switch assembly | ⑰ Brush holder |
| ⑥ Spring | ⑫ Armature | ⑱ Rear cover |


Construction (Cont'd)

**S114-315,
S114-316**

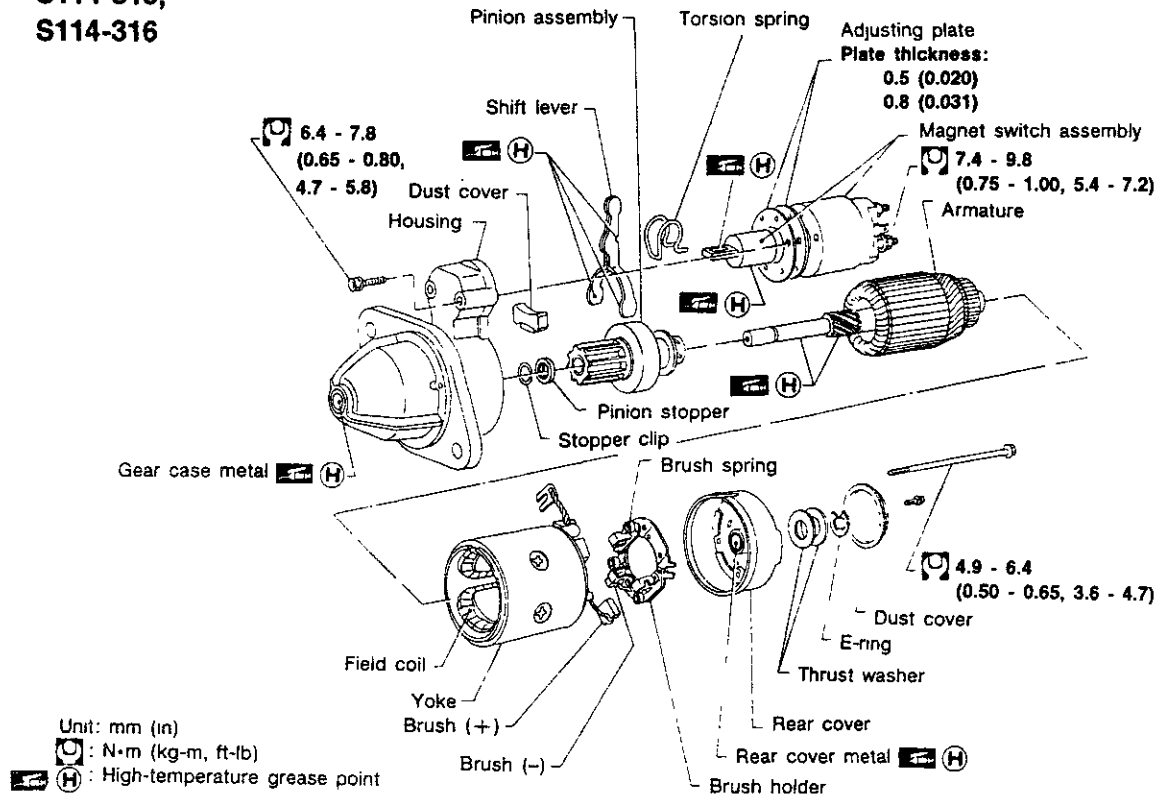

SEL470P


M2T37081

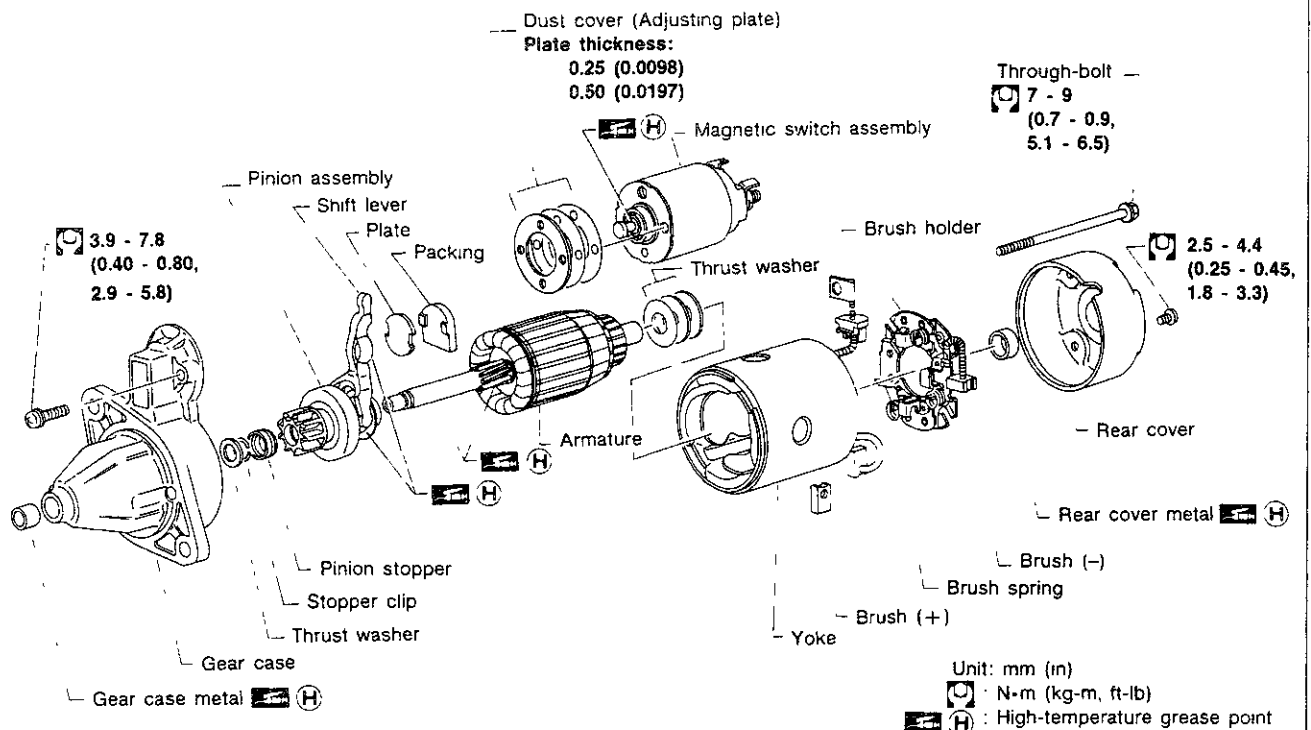

SEL471P

STARTING SYSTEM — Starter — Construction (Cont'd)


S114-486

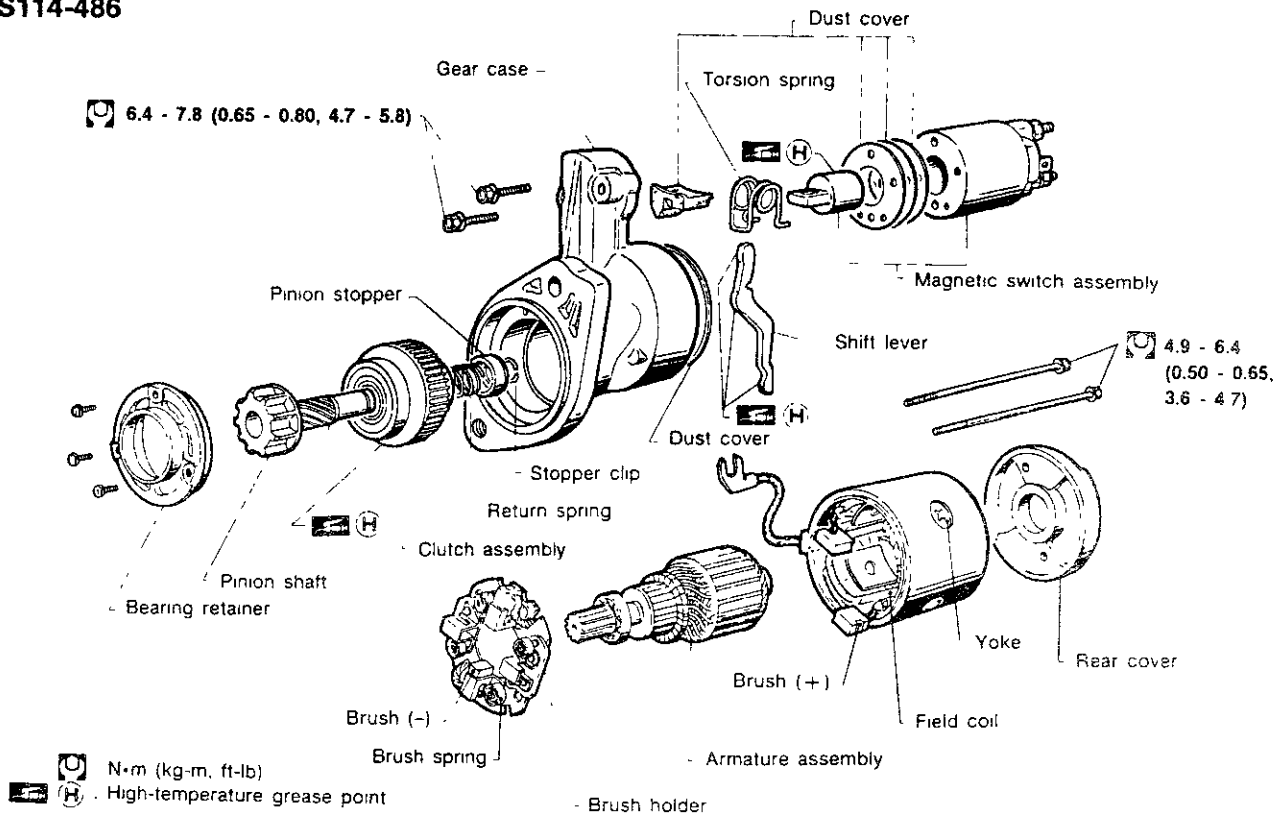

SEL469P

STARTING SYSTEM — Starter — Construction (Cont'd)

M2T53883

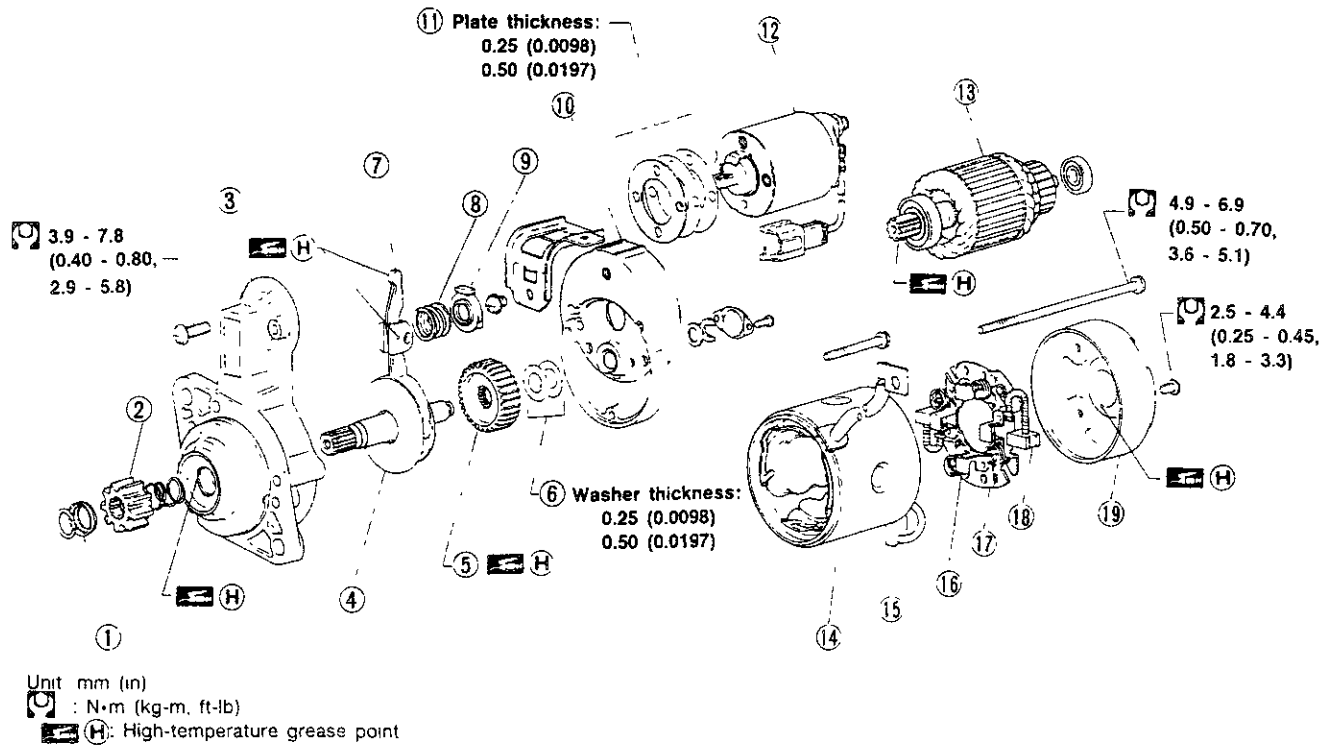

- ① Pinion stopper
- ② Pinion assembly
- ③ Gear case
- ④ Pinion shaft assembly
- ⑤ Reduction gear
- ⑥ Washer
- ⑦ Shift lever

- ⑧ Spring
- ⑨ Holder
- ⑩ Center bracket
- ⑪ Adjusting plate
- ⑫ Magnetic switch assembly
- ⑬ Armature

- ⑭ Yoke
- ⑮ Brush (—)
- ⑯ Brush spring
- ⑰ Brush holder
- ⑱ Brush (—)
- ⑲ Rear cover

SEL484P


STARTING SYSTEM — Starter —

Construction (Cont'd)

S114-701A

6.4 - 8.3
(0.65 - 0.85, 4.7 - 6.1)

N-m (kg-m, ft-lb)
High-temperature grease point

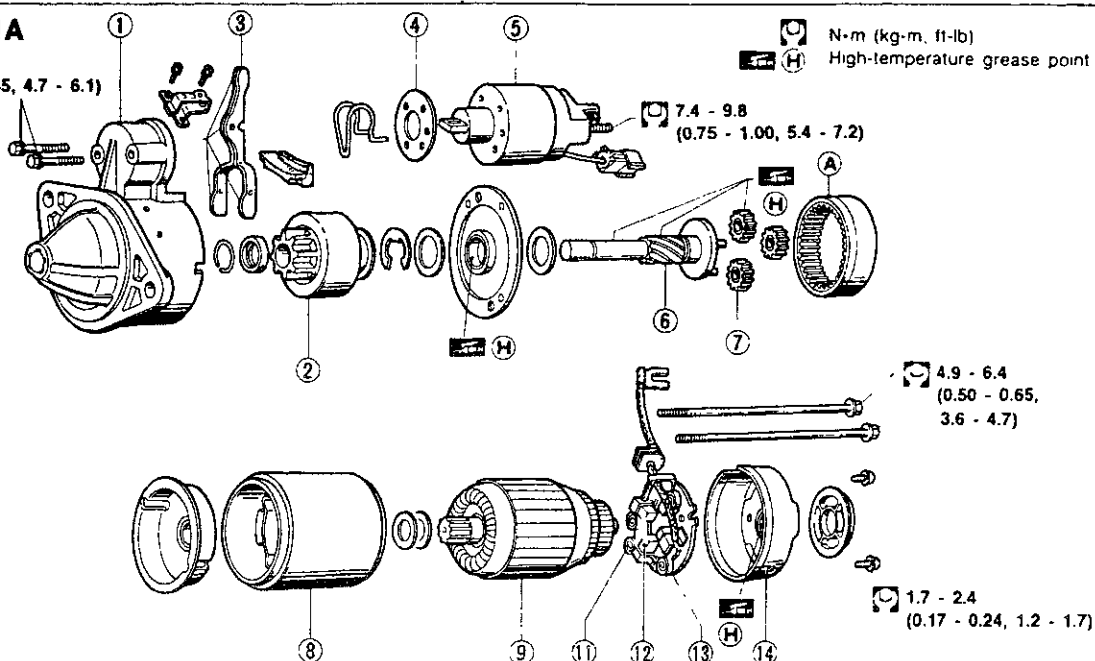

SEL736P

M1T72985


4.1 - 7.6
(0.42 - 0.77,
3.0 - 5.6)

10 - 12
(1.0 - 1.2, 7 - 9)

4.4 - 7.1
(0.45 - 0.72, 3.3 - 5.2)

2.5 - 4.4
(0.25 - 0.45,
1.8 - 3.3)

N-m (kg-m, ft-lb)
High-temperature grease point

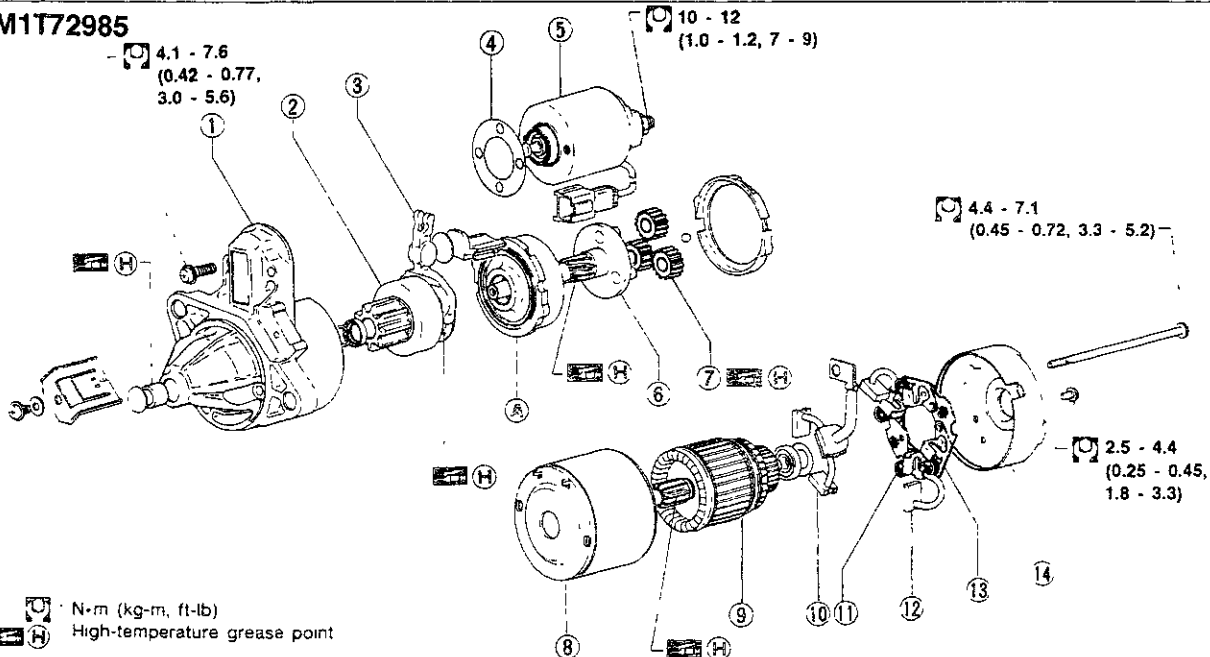


SEL737P

- ① Gear case
- ② Pinion assembly
- ③ Shift lever
- ④ Adjusting plate
- ⑤ Magnetic switch assembly

- ⑥ Pinion shaft
- Ⓐ Internal gear
- ⑦ Planetary gear
- ⑧ Yoke
- ⑨ Armature

- ⑩ Brush (+)
- ⑪ Brush spring
- ⑫ Brush (-)
- ⑬ Brush holder
- ⑭ Rear cover


M3T27781D

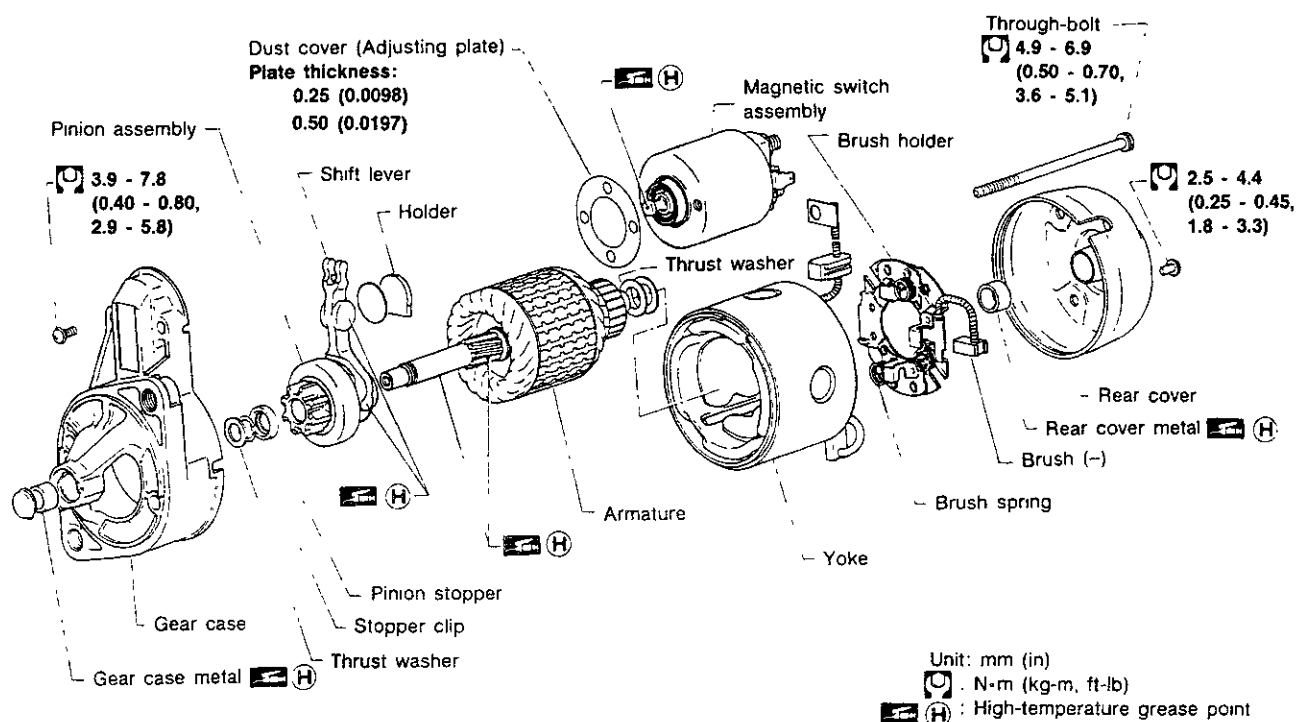

SEL472P

STARTING SYSTEM — Starter — Construction (Cont'd)


M1T60185

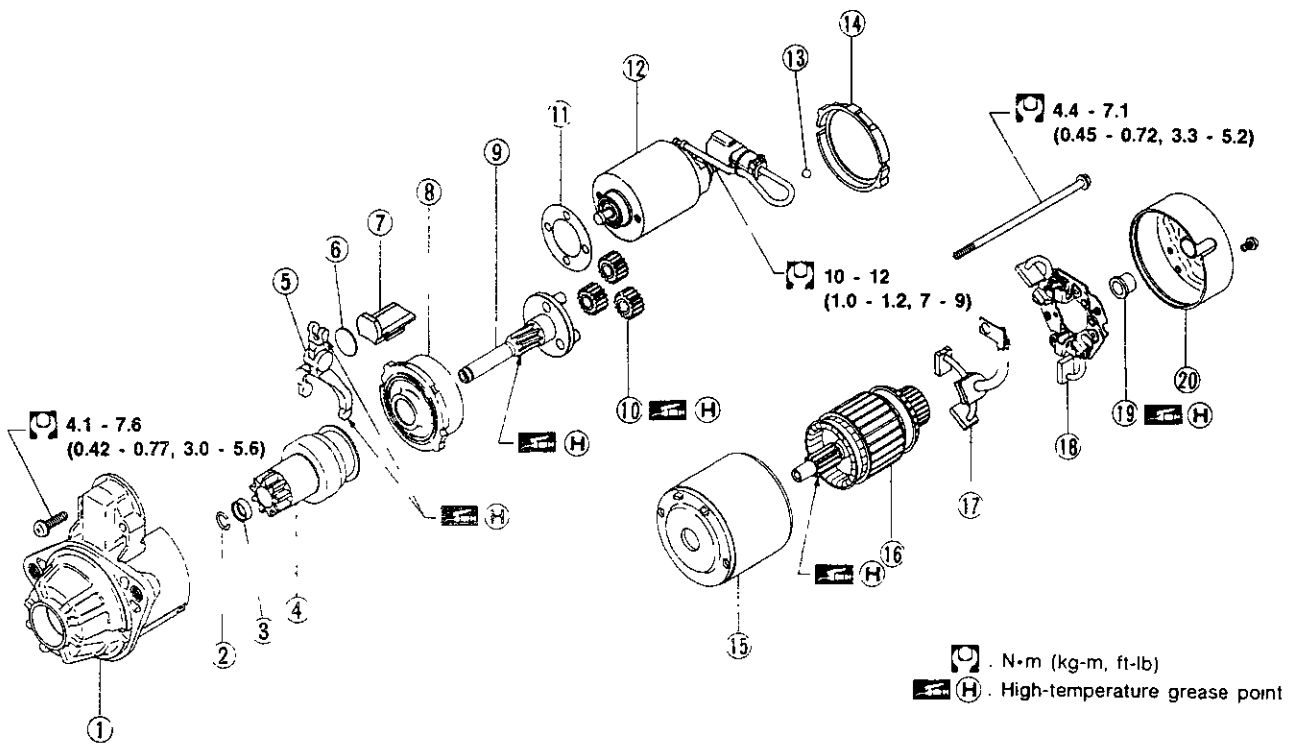

SEL230Q

- | | | |
|-------------------|----------------------------|--------------------|
| ① Gear case | ⑧ Internal gear | ⑮ Yoke |
| ② Stopper clip | ⑨ Shaft | ⑯ Armature |
| ③ Pinion stopper | ⑩ Planetary gear | ⑰ Brush (+) |
| ④ Pinion assembly | ⑪ Adjusting plate | ⑱ Brush (-) |
| ⑤ Shift lever | ⑫ Magnetic switch assembly | ⑲ Rear cover metal |
| ⑥ Plate | ⑬ Ball | ⑳ Rear cover |
| ⑦ Packing | ⑭ Packing | |

2WD GA engine (M/T) and E10S engine

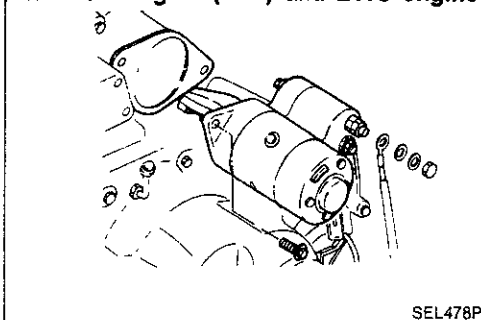

SEL478P

Removal and Installation

REMOVAL

2WD with GA (M/T) and E10S engines

- Remove starter from transaxle side (from engine compartment upper side.)

GA engine (A/T)



SEL479P


GA (A/T) and CD engines

- Remove starter from engine side (from engine compartment underside.)

CD engines




SEL480P

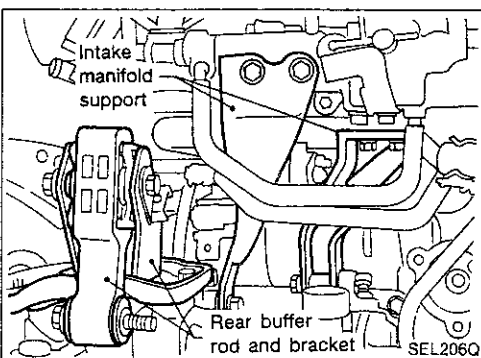

SEL206Q

4WD with GA engines

1. Remove battery, air cleaner, intake air duct, EFI harness, vacuum hoses and speedometer cable from transfer.
2. Remove rear buffer rod, buffer rod bracket and intake manifold supports.
3. Remove starter from transaxle side (from engine compartment upper side).

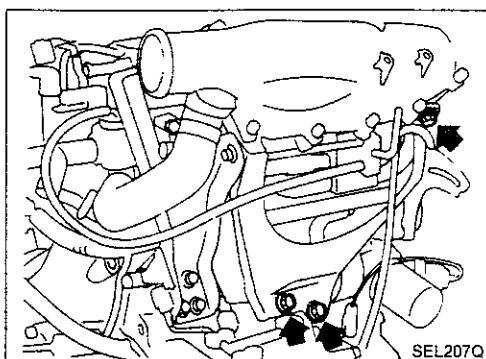


SEL207Q


4WD with SR20DET engine

1. Remove battery, air cleaner and intercooler.
2. Remove power steering hose mounting bracket from intake collector.
3. Remove vacuum hose from brake booster (R.H.D. only).
4. Remove front exhaust tube.
5. Remove intake manifold support mounting bolts.

Removal and Installation (Cont'd)

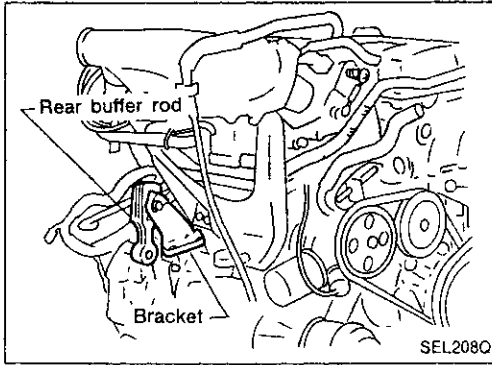


6. Remove vacuum hoses and EFI harness.
7. Remove rear buffer rod and bracket.

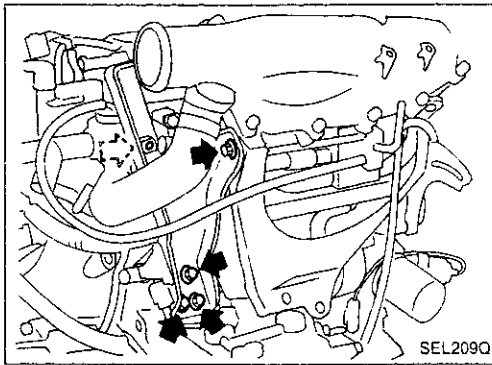

8. Remove intercooler support and rear intake manifold support.
9. Move intake manifold support to engine compartment rear side as much as possible, then remove starter from trans-axle side (from engine compartment upper side).


INSTALLATION

Installation procedure is the reverse order of removal.

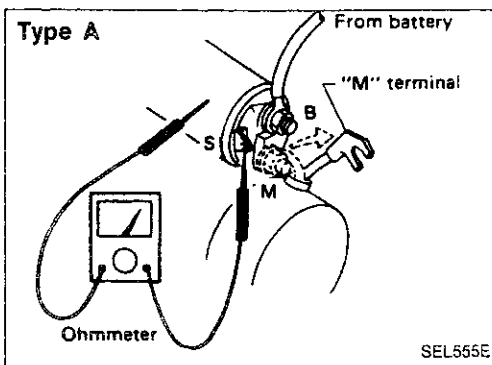


Magnetic Switch Check

- Before starting to check, disconnect battery ground cable.
 - Disconnect "M" terminal of starter motor.
1. Continuity test (between "S" terminal and switch body).
- ⊗ No continuity ... Replace.

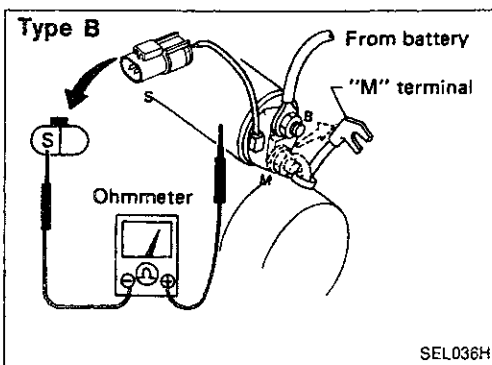


STARTING SYSTEM — Starter —


Magnetic Switch Check (Cont'd)

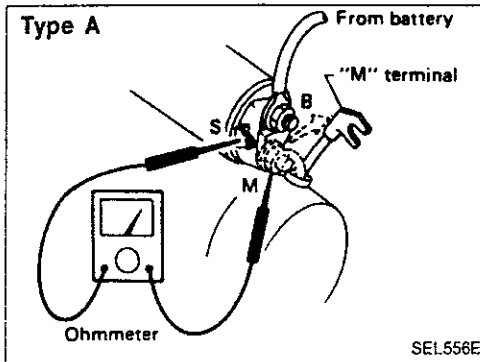

2. Continuity test (between "S" terminal and "M" terminal).
- No continuity ... Replace.

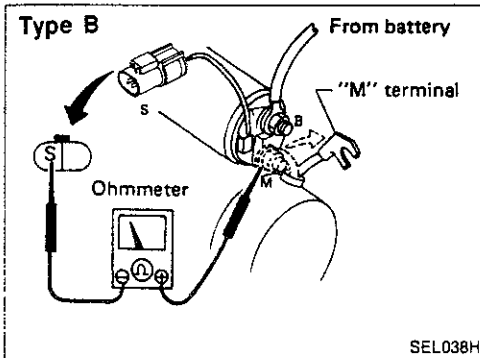


Except S114-357B, S13-131, M2T61871A, S114-486, M2T53883, S13-105A

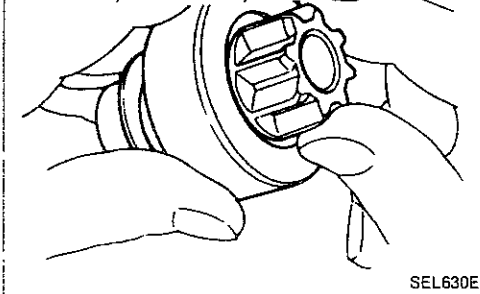


Pinion/Clutch Check

1. Inspect pinion teeth.
- Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)
2. Check to see if pinion locks in one direction and rotates smoothly in the opposite direction.
- If it does not lock (or locks) in either direction or unusual resistance is evident. ... Replace.

S114-357B, S13-131, S114-486, S13-105A

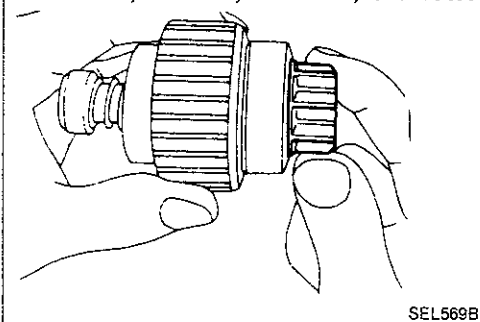

M2T61871A, M2T53883

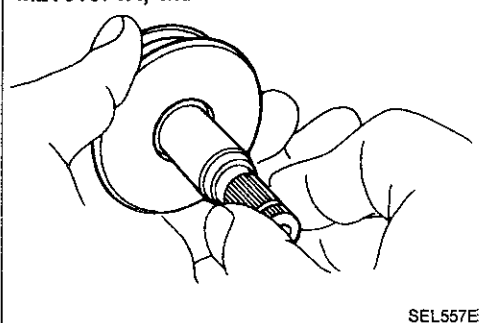


Pinion/Clutch Check (Cont'd)

REDUCTION GEAR TYPE

3. Inspect reduction gear teeth.
 - Replace reduction gear if teeth are worn or damaged. (Also check condition of armature shaft gear teeth.)


S114-357B, S13-131,
S114-486,
S13-105A

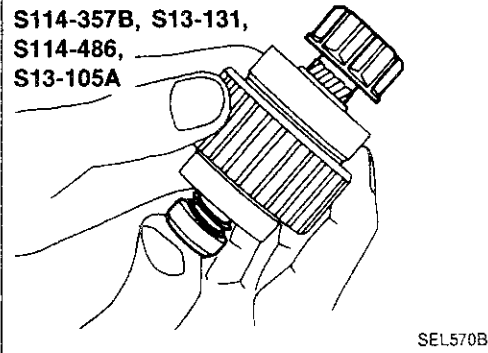

[S114-357B, S13-131, S114-486, S13-105A]


4. Check pinion movement.
 - If it is hard to move, apply high-temperature grease or, if necessary, replace.

S114-357B, S13-131, S114-486, S13-105A

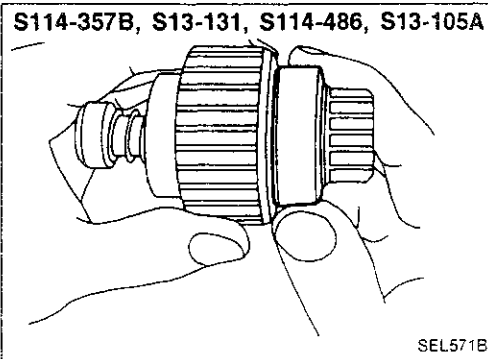

[S114-357B, S13-131, S114-486, S13-105A]

5. Check ball bearing.
 - Spin outer race of ball bearing to ensure that it turns smoothly without binding.
 - Abnormal resistance ... Replace.

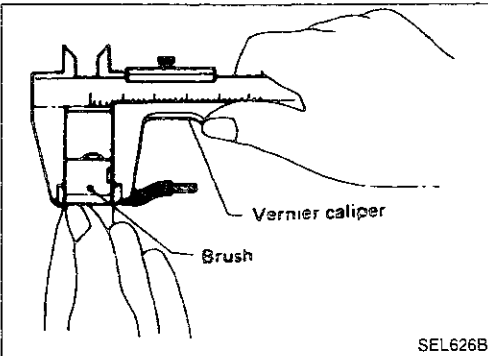

Brush Check


BRUSH

Check wear of brush.

Wear limit length:

Refer to S.D.S.

- Excessive wear ... Replace.

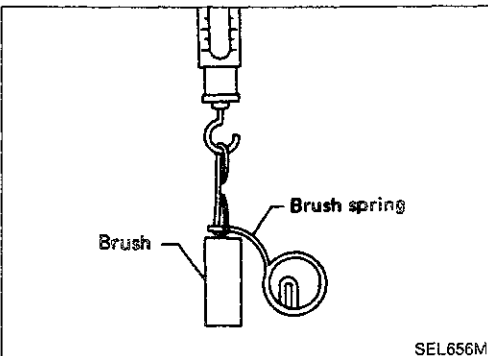

BRUSH SPRING PRESSURE


Check brush spring pressure with brush spring detached from brush.

Spring pressure (with new brush):


Refer to S.D.S.

- Not within the specified values ... Replace.



**S114-357B, S13-131, S114-486,
M2T53883, S13-105A, M1T72985,
M1T60185**

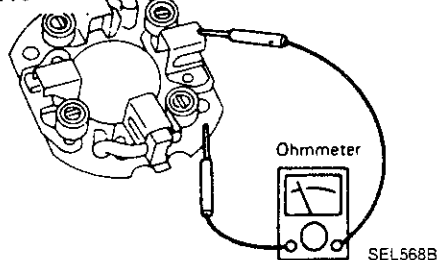

**S114-530,
S114-533,
S114-535**

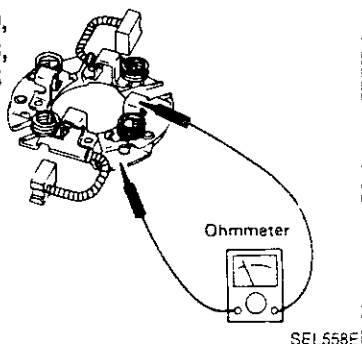


**Except
S114-357B,
-530, -533,
-535,
S13-131**

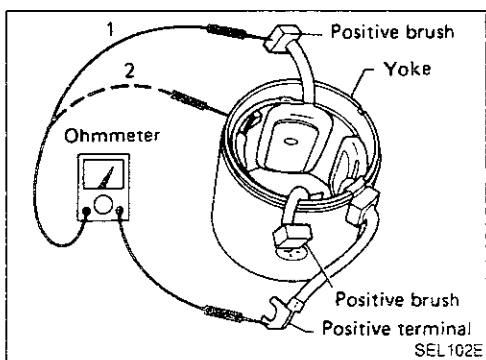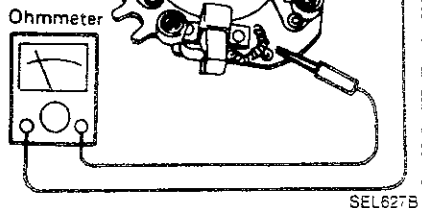

Field Coil Check [Non-reduction gear type, S114-357B, S13-131, M2T61871A, S13-105A, S114-486, M2T53883]

1. Continuity test (between field coil positive terminal and positive brushes).
 - No continuity ... Replace field coil.
2. Insulation test (between field coil positive terminal and yoke).
 - Continuity exists. ... Replace field coil.

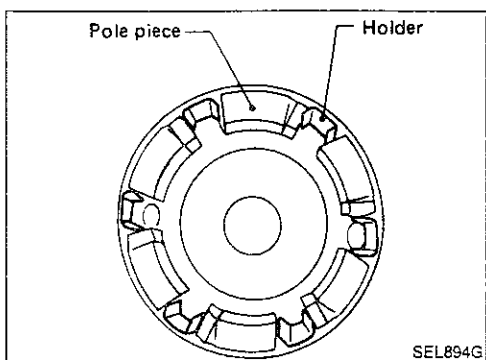


Pole Piece Check [M1T72086A, M1T72087A, M1T72985, M1T60185]

Pole piece is secured to yoke by bonding agent. Check pole piece to see that it is secured to yoke and for any cracks. Replace malfunctioning parts as an assembly.

Holder may move slightly as it is only inserted and not bonded.


CAUTION:

Do not clamp yoke in a vice or strike it with a hammer.

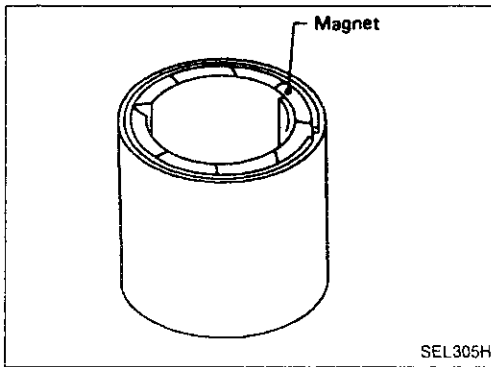


Yoke Assembly Check [S114-530, -533, -535, -701A]

Check magnet for cracks. If there is any crack, replace malfunctioning parts as an assembly.

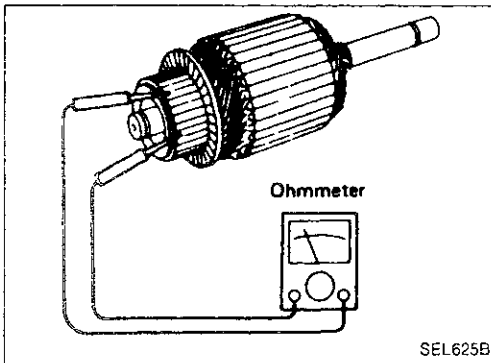


Armature Check


1. Continuity test (between two segments side by side).
 - No continuity ... Replace.

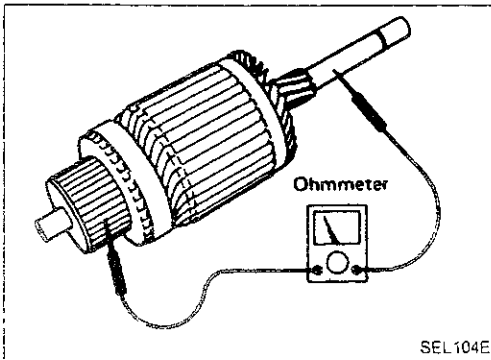

2. Insulation test (between each commutator bar and shaft).
 - Continuity exists. ... Replace.

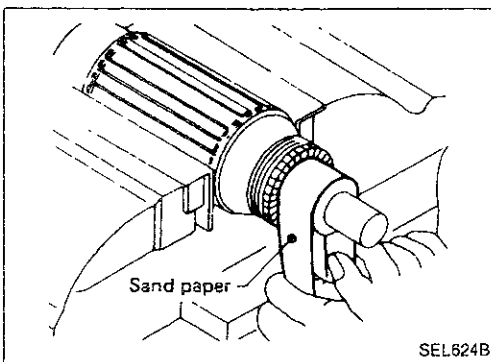


3. Check commutator surface.
 - Rough ... Sand lightly with No. 500 - 600 sandpaper.

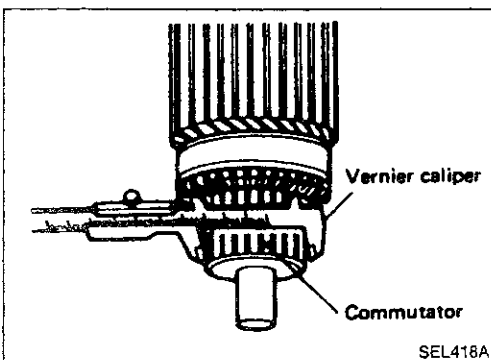

4. Check diameter of commutator.
Commutator minimum diameter:
Refer to S.D.S.
 - Less than specified value ... Replace.


Armature Check (Cont'd)

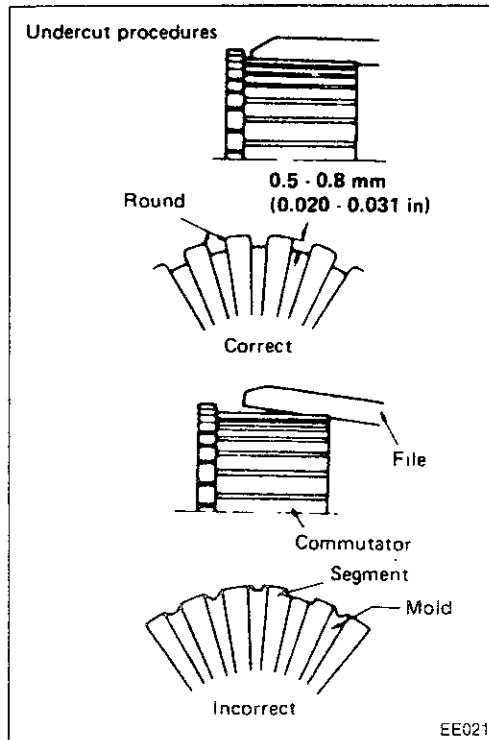

5. Check depth of insulating mold from commutator surface.
 - Less than 0.2 mm (0.008 in) ... Undercut to 0.5 to 0.8 mm (0.020 to 0.031 in)

Assembly


Apply high-temperature grease to lubricate the bearing, gears and frictional surface when assembling the starter. Carefully observe the following instructions.

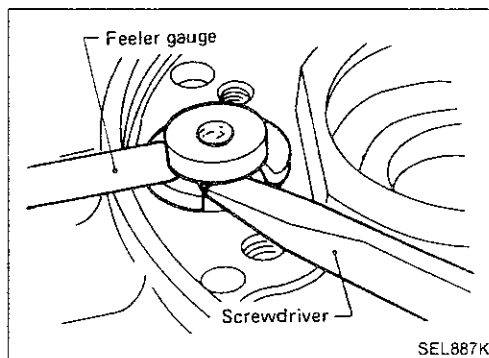

PINION SHAFT THRUST GAP ADJUSTMENT [M2T61871A]

Check thrust gap with a gap gauge by pulling pinion shaft in the axial direction with a screwdriver.

Maximum of thrust gap:
0.5 mm (0.020 in)

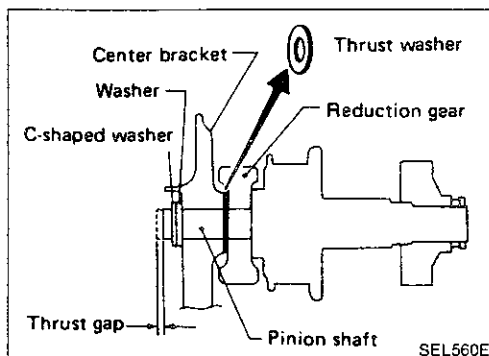

- If thrust gap is over the specified value, adjust it with adjusting plate.

Assembly (Cont'd)



PINION PROTRUSION LENGTH ADJUSTMENT

[Except S114-357B, S13-131, M2T61871A, S114-486, M2T53883, S13-105A, M1T60185]

With pinion driven out by magnetic switch, push pinion back to remove slack and measure clearance "ℓ" between the front edge of the pinion and the pinion stopper.

Clearance "ℓ":

Refer to S.D.S.

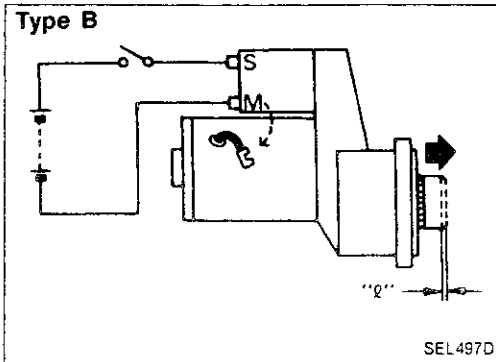
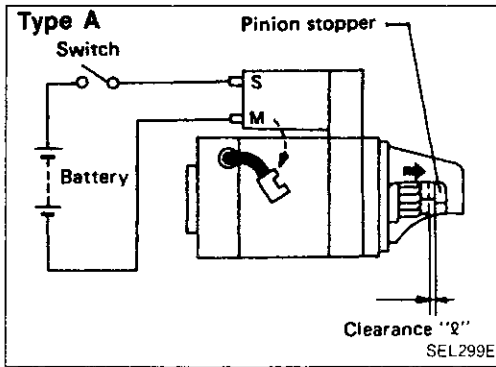


[S114-357B, S13-131, M2T61871A, S114-486, M2T53883, S13-105A, M1T60185]

Compare movement "ℓ" in height of pinion when it is pushed out with magnetic switch energized and when it is pulled out by hand until it touches stopper.

Movement "ℓ":

Refer to S.D.S.

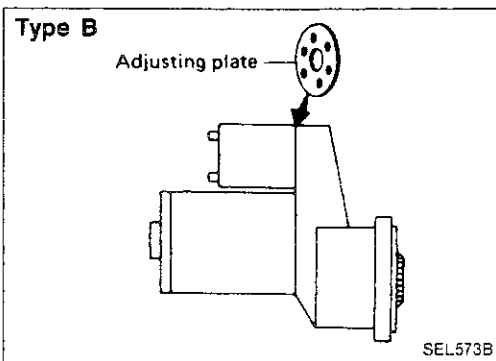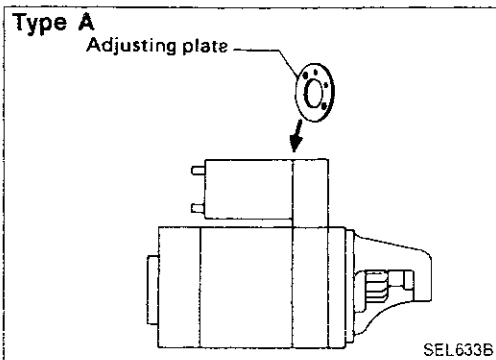

⊗ Not in the specified value ... Adjust by adjusting plate.

Service Data and Specifications (S.D.S.)

STARTER

Type	S114-630	M3T37783	S114-533	M1T72087A	S114-617A	M3T37782	S114-530	M1T72086A	S114-357B	S13-131	M2T61871A
	Non-reduction gear type		Reduction gear type		Non-reduction gear type		Reduction gear type		Reduction gear type		
	HITACHI	MITSUBISHI	HITACHI	MITSUBISHI	HITACHI	MITSUBISHI	HITACHI	MITSUBISHI	HITACHI		MITSUBISHI
Applied model	A		B		C		D		E		F
System voltage	12										
No-load											
Terminal voltage	11.5		11.0		11.5		11.0		11.0		
Current	Less than 60		Less than 90		Less than 60		Less than 90		Less than 100		Less than 100
Revolution	More than 7,000		More than 2,950		More than 7,500		More than 2,950		More than 3,900		More than 4,100
Minimum diameter of commutator	39.0 (1.535)		32.0 (1.260)		39.0 (1.535)		32.0 (1.260)		29.0 (1.142)		31.4 (1.236)
Minimum length of brush	11.0 (0.433)		11.0 (0.433)		11.0 (0.433)		11.0 (0.433)		11.0 (0.433)		11.5 (0.453)
Brush spring tension	17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)		17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)		17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)		17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)		15.7 - 19.6 (1.6 - 2.0, 3.5 - 4.4)		13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)
Clearance between bearing metal and armature shaft	Less than 0.2 (0.008)		0.2 (0.008)		0.2 (0.008)		0.2 (0.008)		—		—
Clearance "ℓ" between pinion front edge and pinion stopper	0.3 - 2.5 (0.012 - 0.098)		0.3 - 1.5 (0.012 - 0.059)		0.3 - 2.5 (0.012 - 0.098)		0.3 - 1.5 (0.012 - 0.059)		—		—
Movement "ℓ" in height of pinion assembly	—		—		—		—		0.3 - 1.5 (0.012 - 0.059)		

STARTING SYSTEM — Starter —

Service Data and Specifications (S.D.S.) (Cont'd)

Type	S114-315	M2T37081	S114-316	M3T27781D	S114-701A	S114-535	M1T72985	S114-486	M2T53883	S13-105A	MIT60185
	Non-reduction gear type				Reduction type						
	HITACHI	MITSUBISHI	HITACHI	MITSUBISHI	HITACHI		MITSUBISHI	HITACHI	MITSUBISHI	HITACHI	MITSUBISHI
	G		H			I		J		K	L
Applied model	12										
System voltage	V										
No-load	11.5										
Terminal voltage	11.0										
Current	Less than 60	Less than 55	Less than 60		Less than 90	Less than 85	50 - 75	Less than 100		Less than 140	50 - 75
Revolution	rpm										
Minimum diameter of commutator	32 (1.26)	31 (1.22)	39 (1.54)	31.4 (1.236)	32.0 (1.260)		28.8 (1.134)	More than 3,900	More than 2,900	More than 3,900	3,000 - 4,000
Minimum length of brush	11.0 (0.433)	11.5 (0.453)	11.0 (0.433)	11.5 (0.453)	11.0 (0.433)		12.0 (0.472)	11.5 (0.453)		10.5 (0.413)	12.0 (0.472)
Brush spring tension	17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)	13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)	17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)	13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)	17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)		13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)	15.7 - 19.6 (1.6 - 2.0, 3.5 - 4.4)	13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)	26.5 - 32.4 (2.7 - 3.3, 6.0 - 7.3)	13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)
Clearance between bearing metal and armature shaft	Less than 0.2 (0.008)	—	Less than 0.2 (0.008)	—	0.03 - 0.3 (0.0012 - 0.0118)		0.2 (0.008)	—		—	—
Clearance "ℓ" between pinion front edge and pinion stopper	0.3 - 2.5 (0.012 - 0.098)	0.5 - 2.0 (0.020 - 0.079)	0.3 - 2.5 (0.012 - 0.098)	0.5 - 2.0 (0.020 - 0.079)	0.05 - 1.5 (0.0020 - 0.0591)	0.3 - 1.5 (0.012 - 0.059)	0.5 - 2.0 (0.020 - 0.079)	—		—	—
Movement "ℓ" in height of pinion assembly	—	—	—	—	—		—	0.3 - 1.5 (0.012 - 0.059)		0.3 - 1.5 (0.012 - 0.059)	0.5 - 2.0 (0.020 - 0.079)

Service Data and Specifications (S.D.S.) (Cont'd)


Model series	N14								B13				
Traction system	2WD						4WD		2WD				
Destination	Except Europe			Europe					Except Europe				
				R H.D. and South		Central and North	North	Except North					
	Standard		Option						Standard		Option		
Engine	GA14DS		GA16DE		GA14DS and GA16DS		SR20DE	CD20	GA16DS	SR20DET	E10S	GA13DS	
Transaxle	M/T	A/T	M/T	A/T	M/T		A/T	M/T	M/T	M/T	M/T	M/T	
	A	B	A	D	A	I	B	J	K	F	G	H	A

EL-45

CHARGING SYSTEM

Wiring Diagram


L.H.D. MODELS

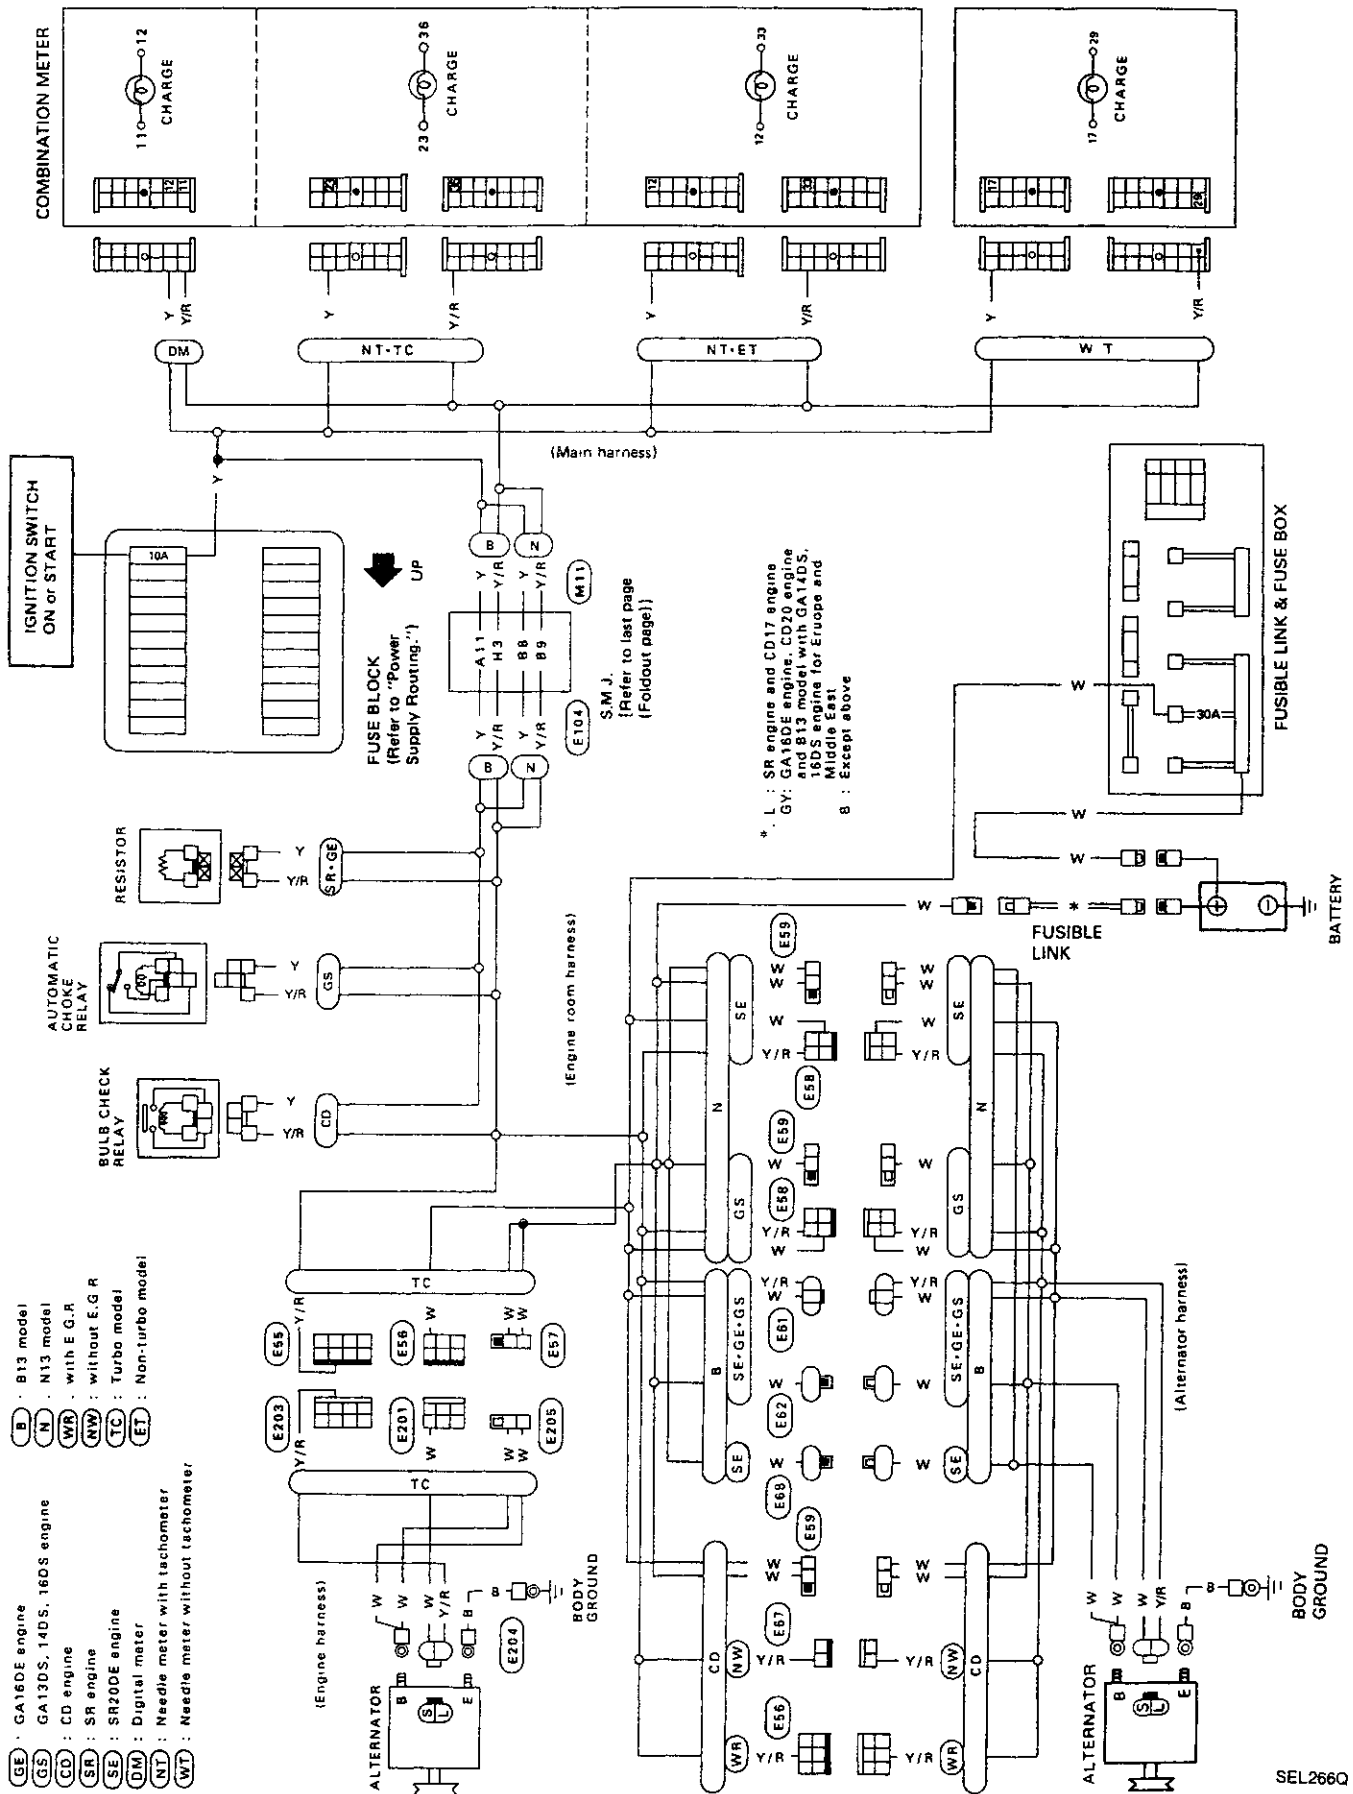

CHARGING SYSTEM

Wiring Diagram (Cont'd)

R.H.D. MODELS

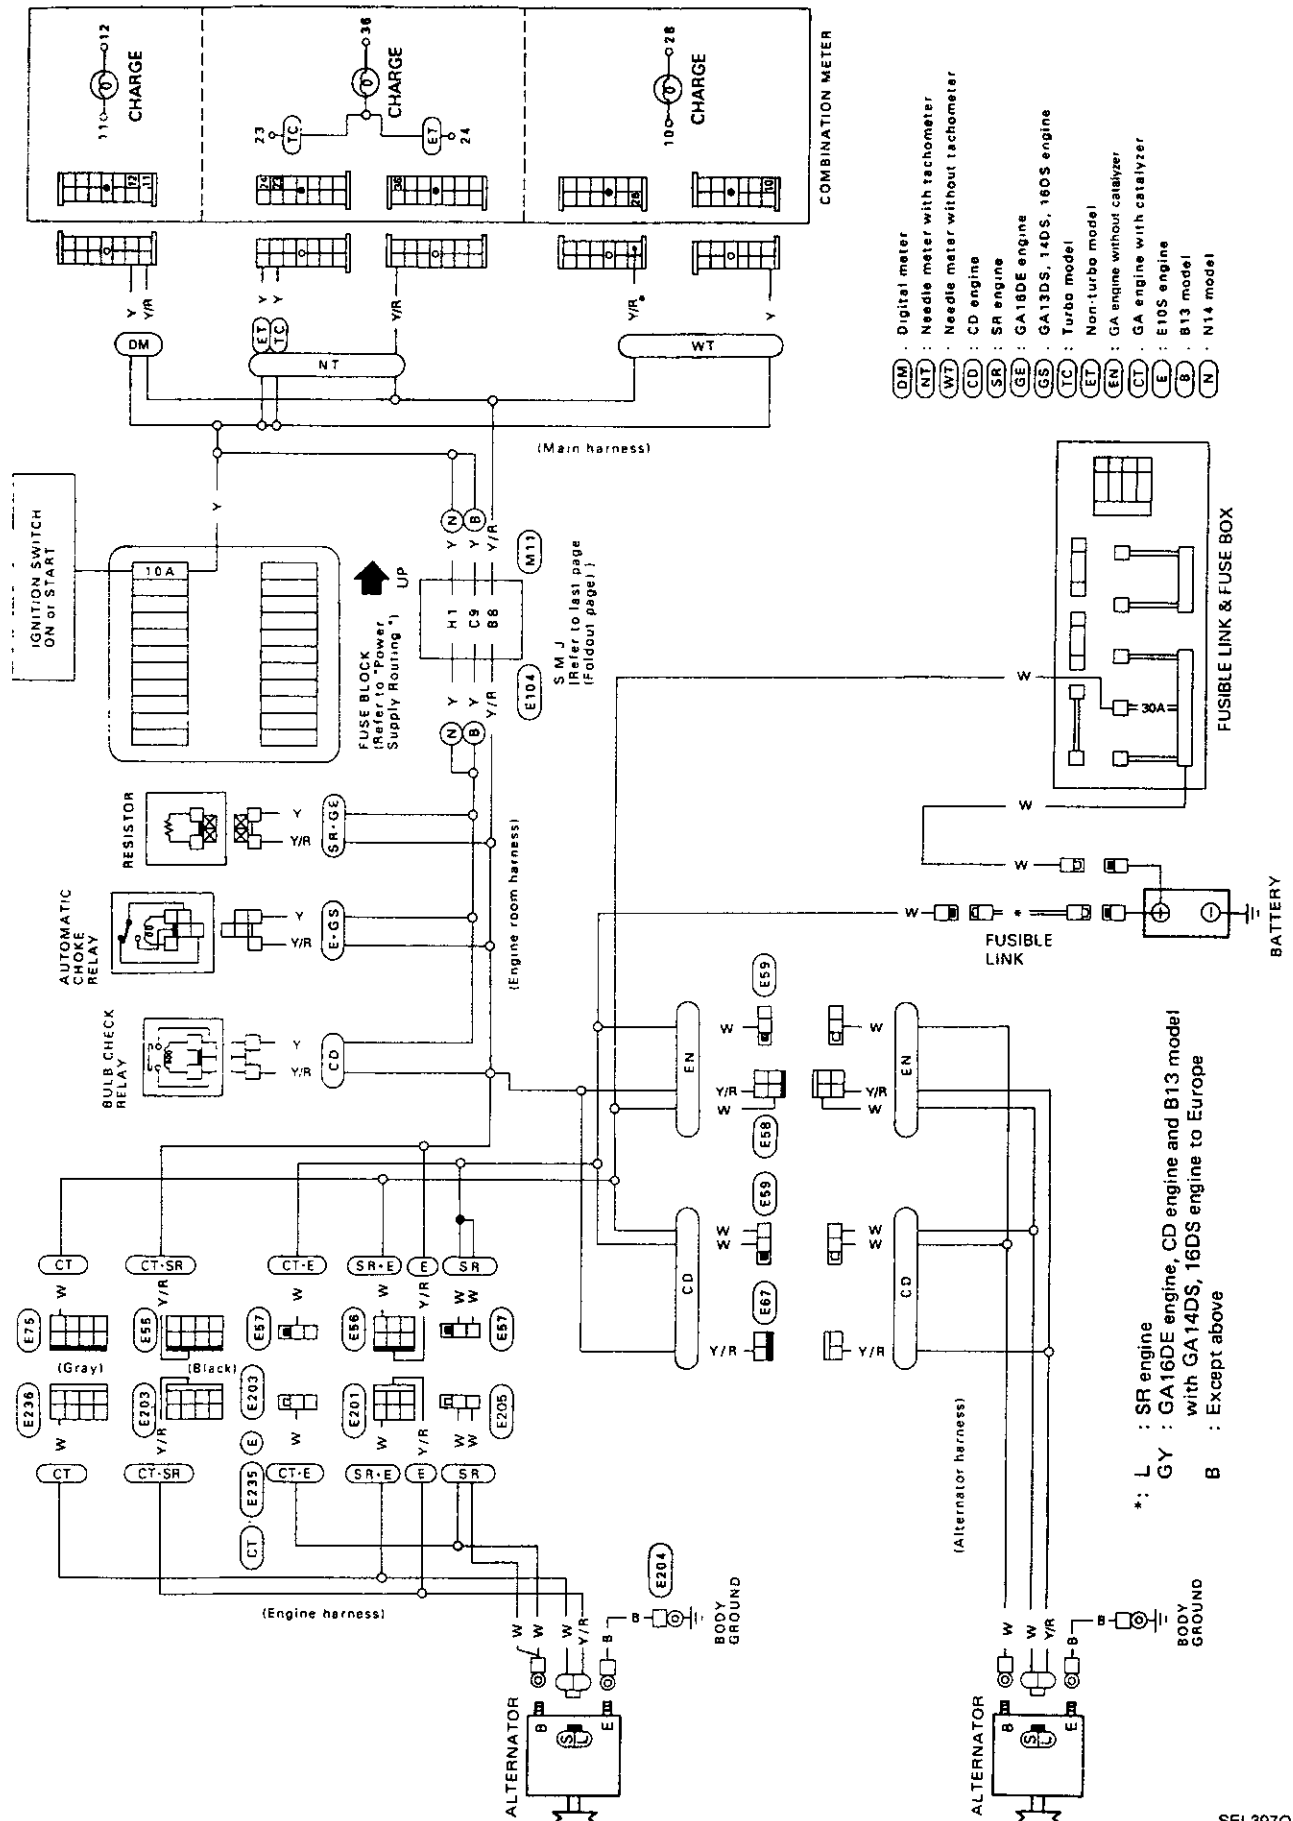


CHARGING SYSTEM

Trouble-shooting

Before conducting an alternator test, make sure that the battery is fully charged. A 30-volt voltmeter and suitable test probes are necessary for the test. The alternator can be checked easily by referring to the Inspection Table.

Before starting trouble-shooting, inspect the fusible link.

WITH IC REGULATOR

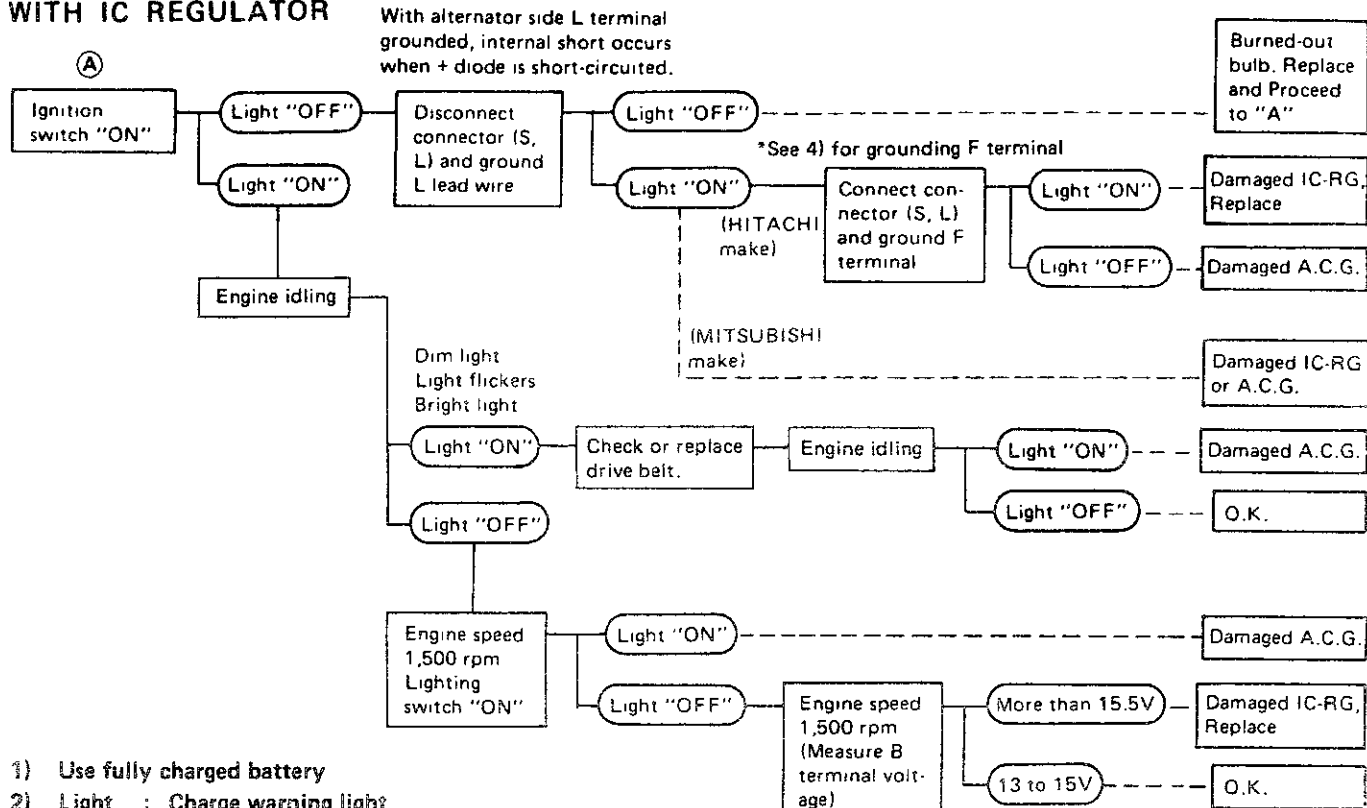


Make sure connector (S, L) is connected correctly.

- 1) Use fully charged battery
- 2) Light : Charge warning light
A.C.G. : Alternator parts except IC regulator
IC-RG : IC regulator
O.K. : IC-alternator is in good condition
- 3) When reaching "Damaged A.C.G.", remove alternator from vehicle and disassemble, inspect and correct or replace faulty parts
- 4) *Method of grounding F terminal (HITACHI make only)


Gasoline engine model

Connect tip of wire to brush and attach wire to alternator body.

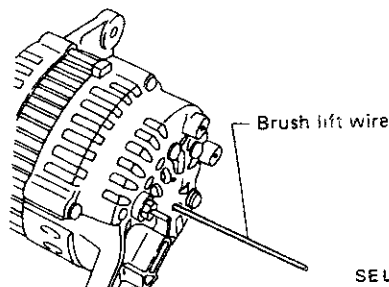

Diesel engine model


Remove vacuum pump and connect tip of wire to brush and attach wire to alternator body.

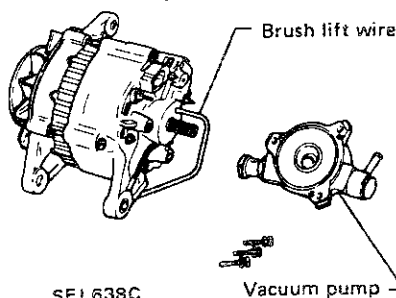

- 5) Terminals "S", "L", "B" and "E" are marked on rear cover of alternator.


Construction

**LR165-708B,
LR170-738B**

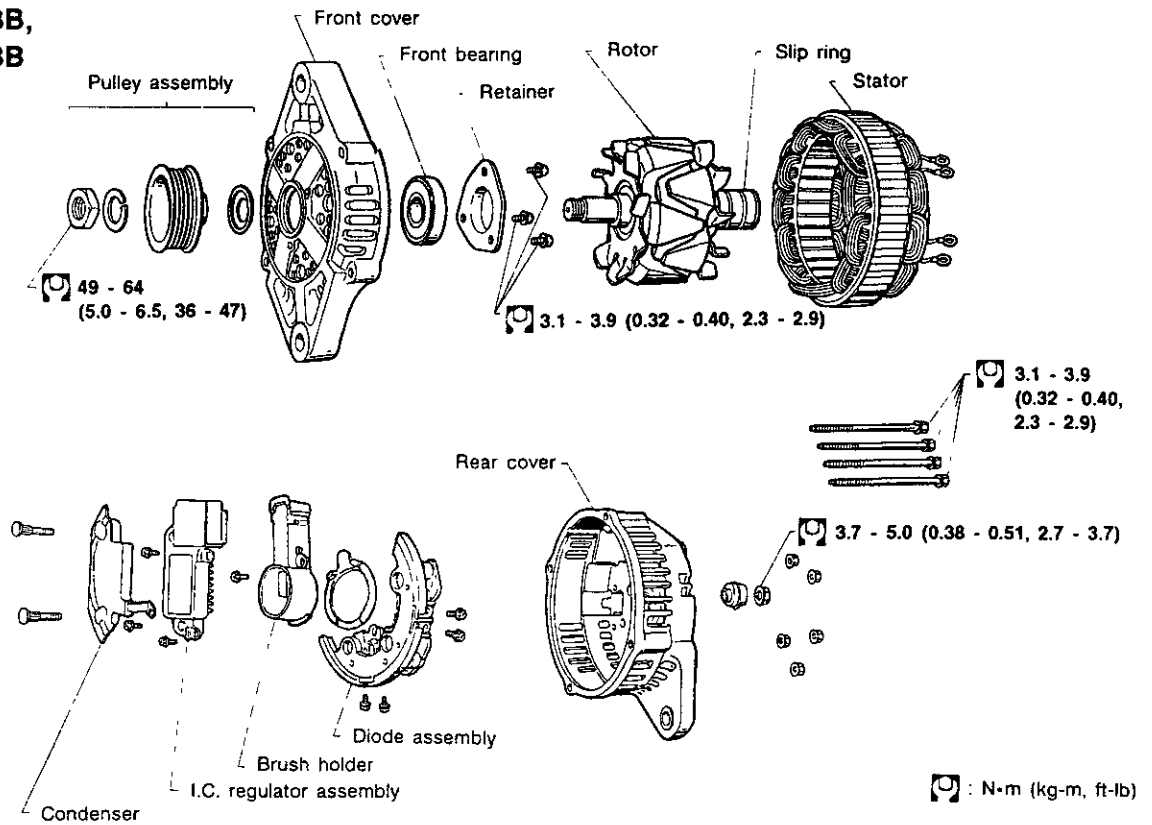

SEL473P

**A5T03092,
A5T03192**

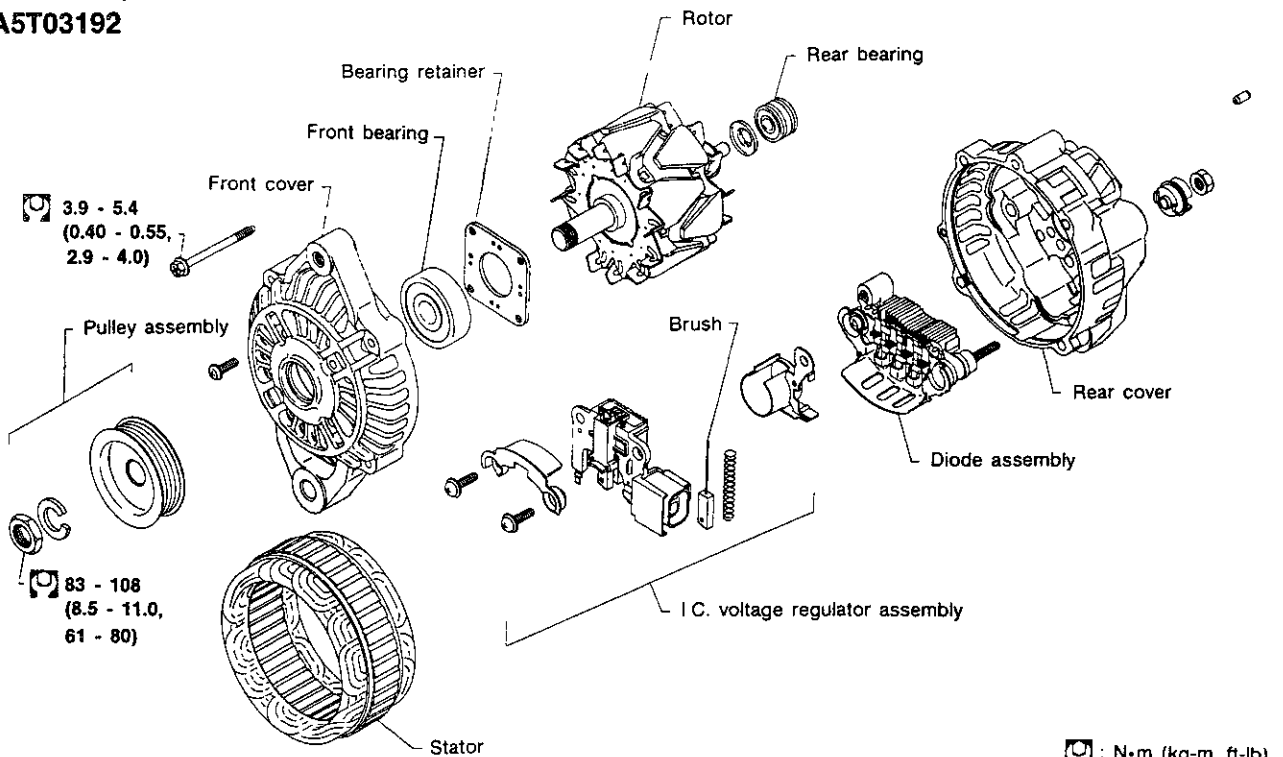


SEL474P

CHARGING SYSTEM — Alternator —

Construction (Cont'd)


LR160-715

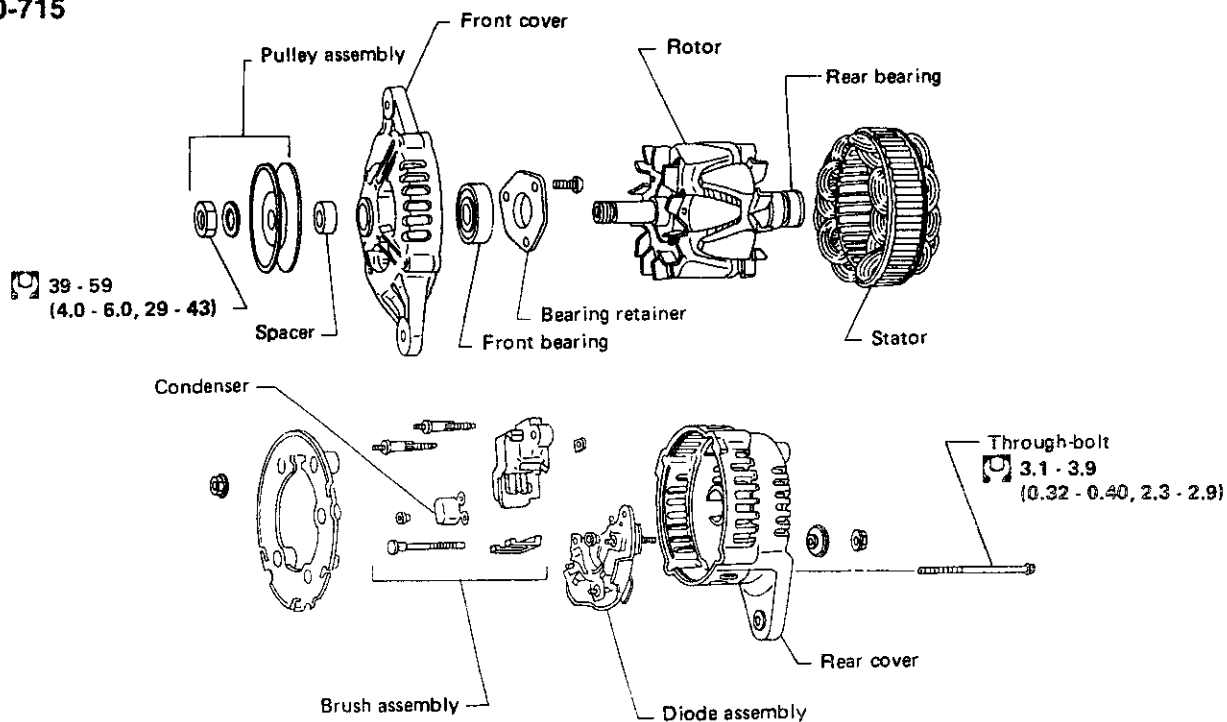

: N·m (kg·m, ft·lb)

SEL834H

A5T41592

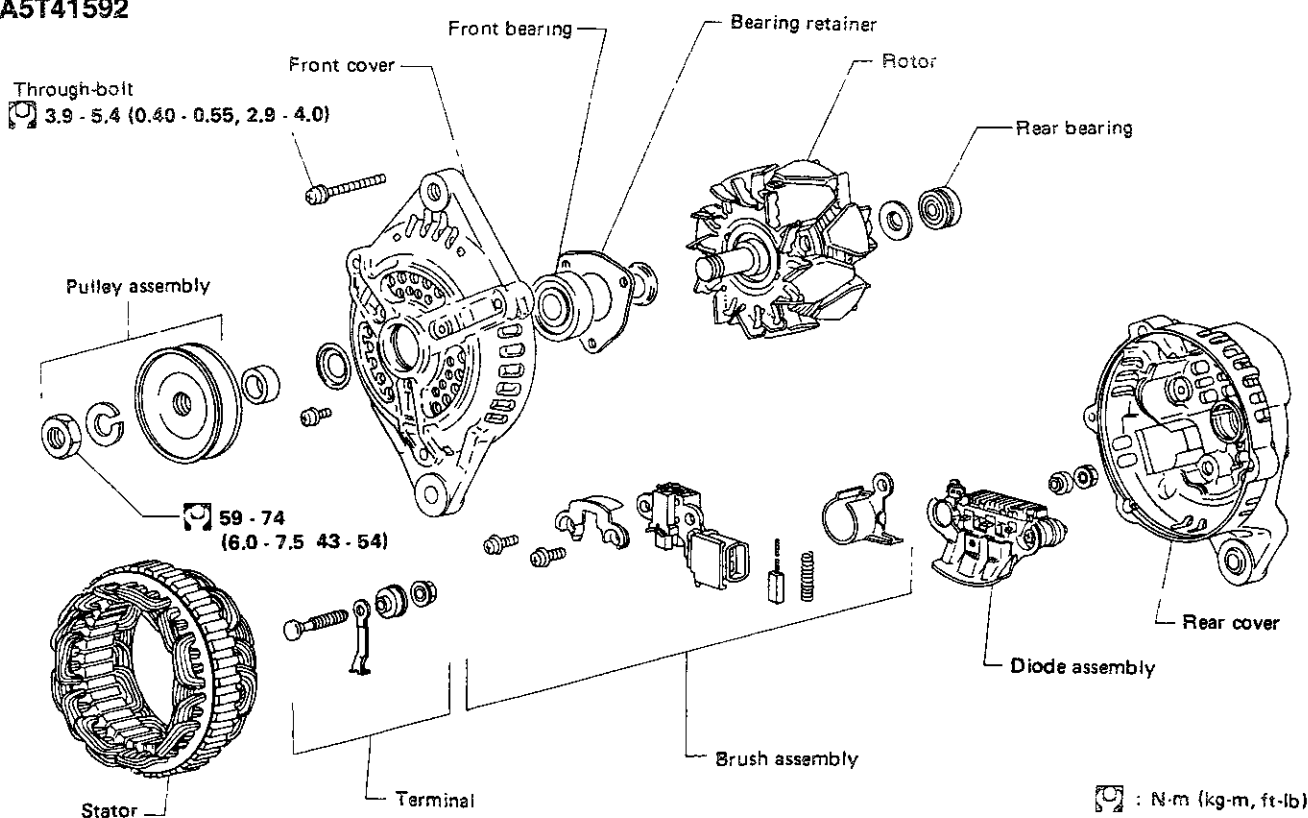


: N·m (kg·m, ft·lb)

SEL835H

CHARGING SYSTEM — Alternator —

Construction (Cont'd)

LR170-404B

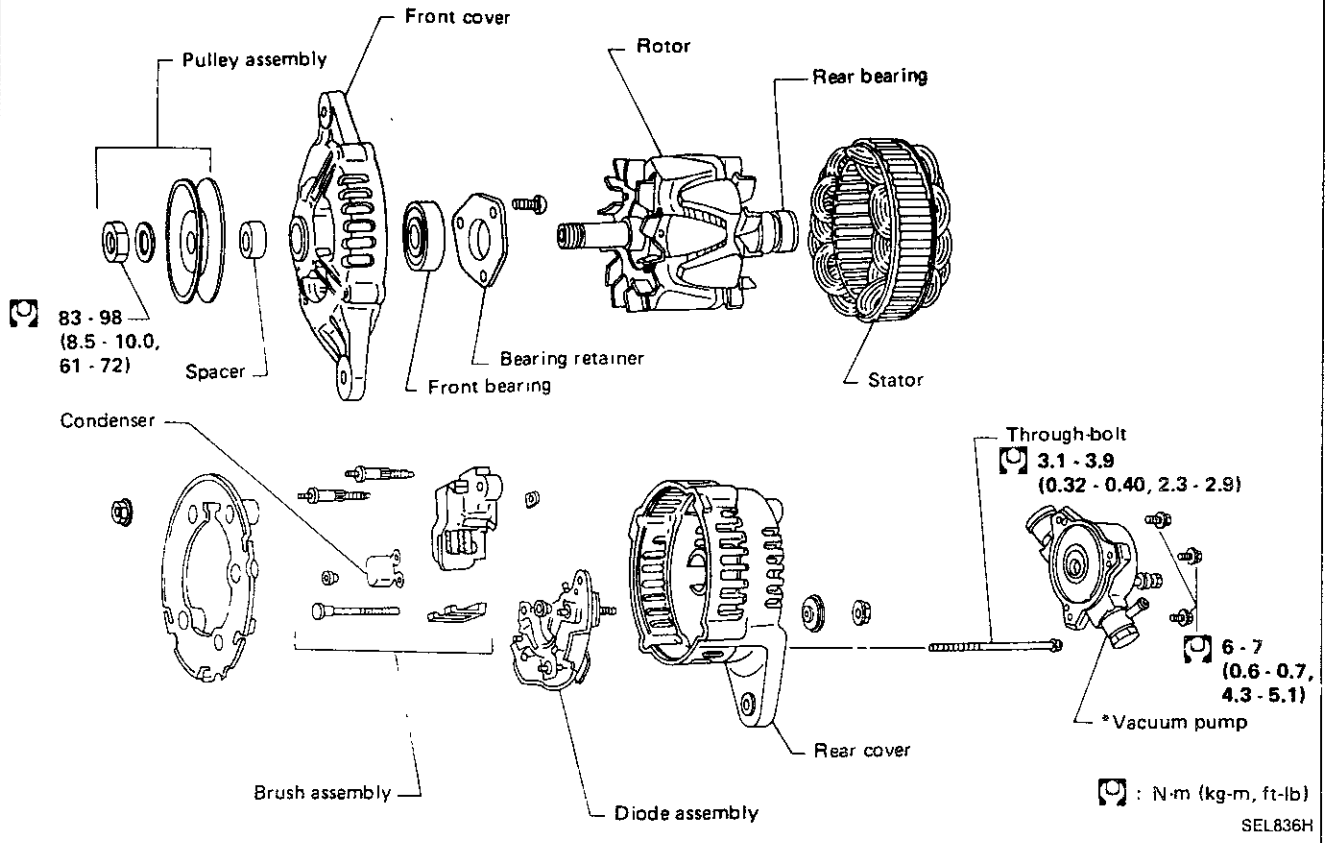


* Refer to BR section for vacuum pump service information.

CHARGING SYSTEM — Alternator —


Construction (Cont'd)

LR180-725

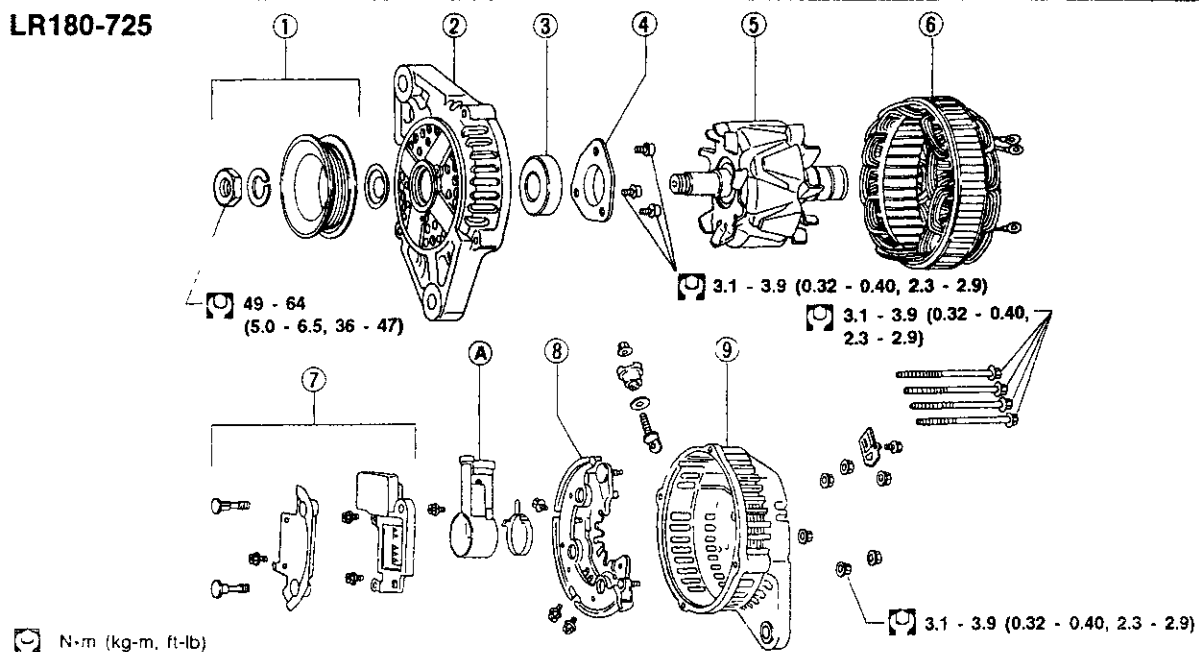

SEL739P

A2T13894

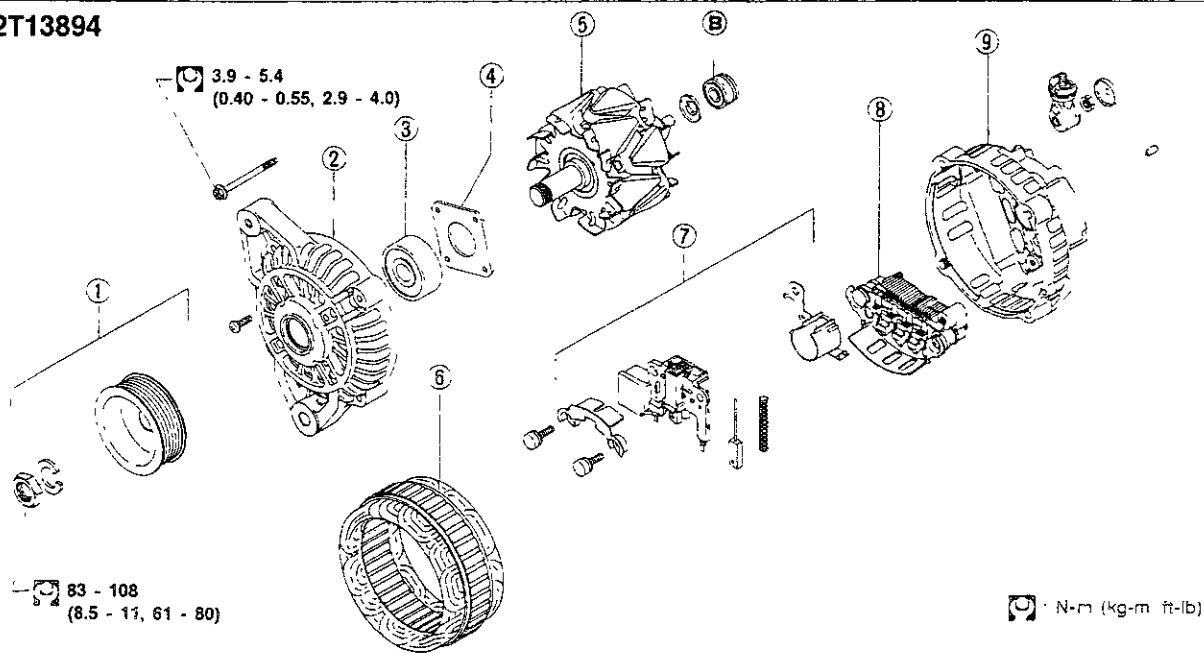

SEL740P


- ① Pulley assembly
- ② Front cover
- ③ Bearing
- ④ Bearing retainer

- ⑤ Rotor
- ⑥ Stator
- ⑦ I.C. regulator assembly
- ⑧ Diode assembly

- ⑨ Rear cover
- A Brush holder
- B Rear bearing

CHARGING SYSTEM — Alternator —

Construction (Cont'd)

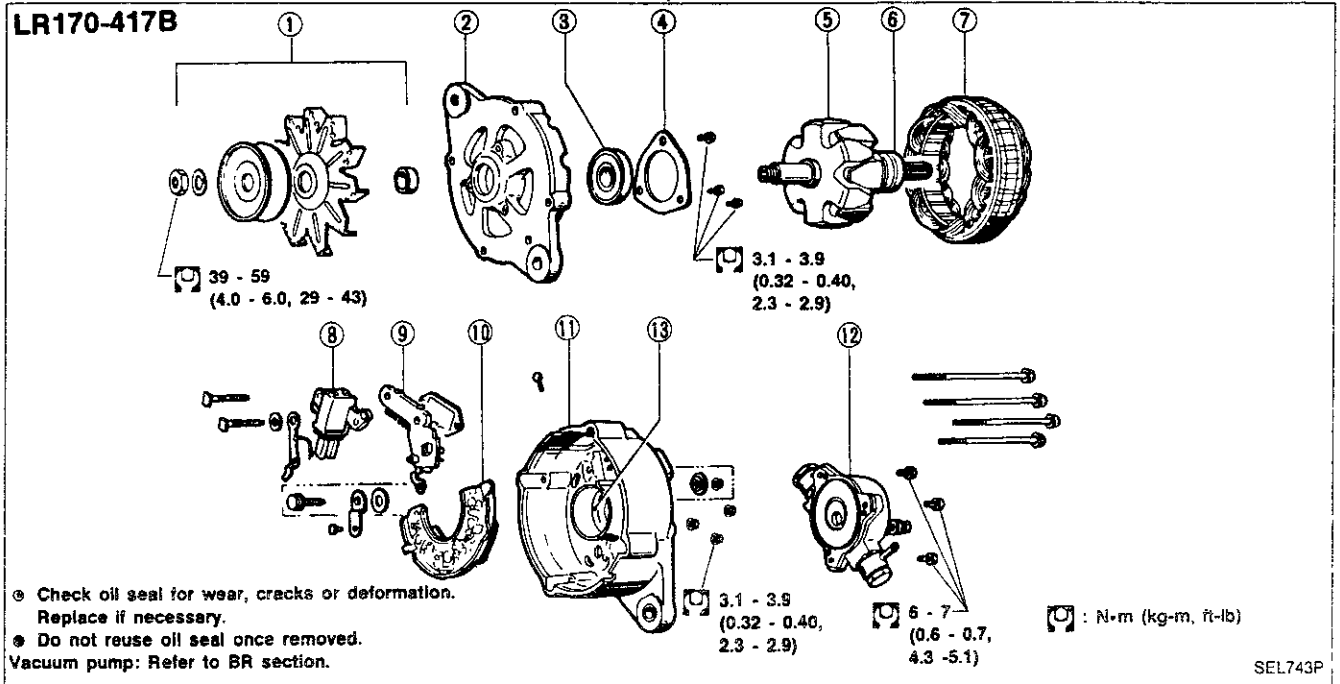

- ① Pulley assembly
- ② Front cover
- ③ Front bearing
- ④ Bearing retainer
- ⑤ Rotor
- ⑥ Rear bearing


- ⑦ Stator
- ⑧ Brush holder assembly
- ⑨ I.C. regulator assembly
- ⑩ Diode assembly
- ⑪ Rear cover
- ⑫ Vacuum pump

- ⑬ Oil seal

Rear Bearing



CAUTION:

- Do not reuse rear bearing after removal. Replace with a new one.
- Do not lubricate rear bearing outer race.

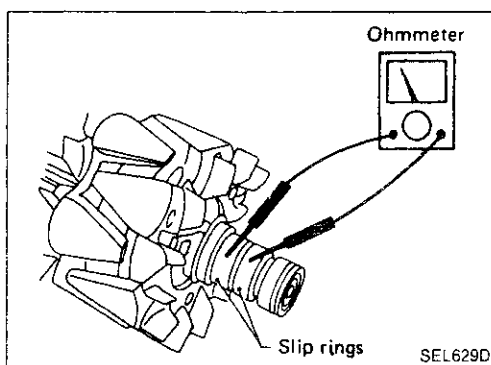


Rotor Slip Ring Check

1. Continuity test
 - No continuity ... Replace rotor.
2. Insulator test
 - Continuity exists ... Replace rotor.
3. Check slip ring for wear.
 - Slip ring minimum outer diameter:**
Refer to S.D.S.

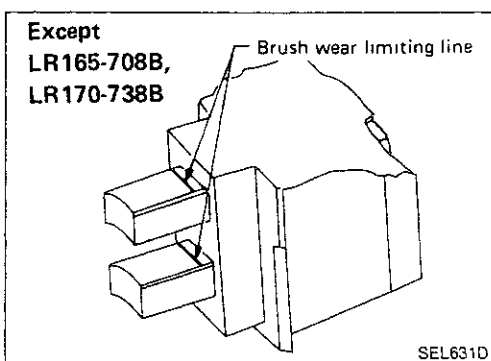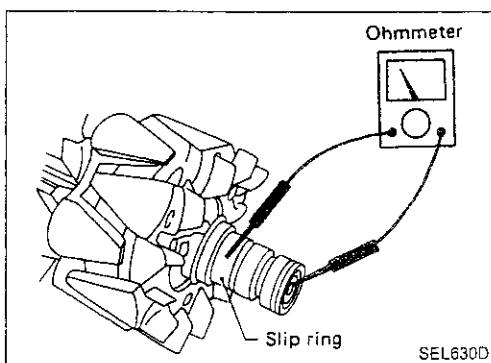


Brush Check

1. Check smooth movement of brush.
 - Not smooth ... Check brush holder and clean.
2. Check brush for wear.
 - Replace brush if it is worn down to the limit line.

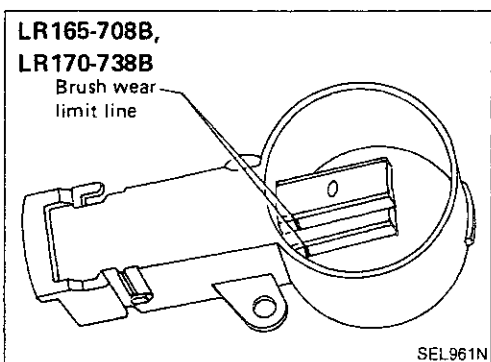

Brush Check (Cont'd)

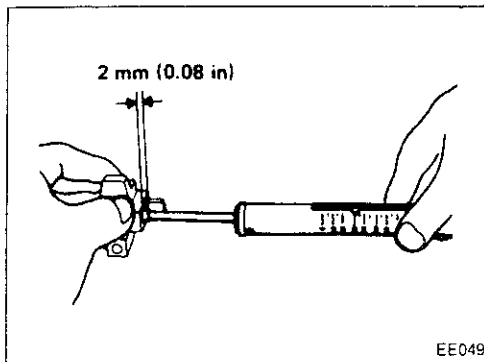

3. Check brush lead wire for damage.

- Damaged ... Replace.


4. Check brush spring pressure.

Measure brush spring pressure with brush projected approximately 2 mm (0.08 in) from brush holder.

Spring pressure:

Refer to S.D.S.

- Not within the specified values ... Replace.


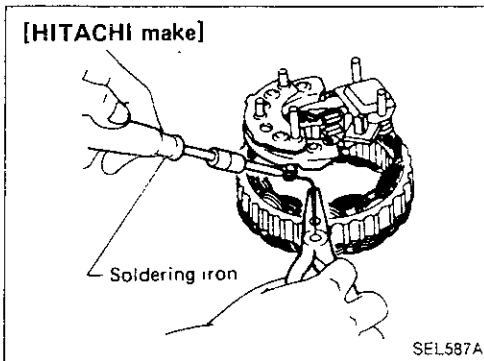


Stator Check (Except LR165-708B, LR170-738B)

To test the stator or diode, separate them by unsoldering the connecting wires.


CAUTION:

Use only as much heat as required to melt solder. Otherwise, diodes will be damaged by excessive heat.

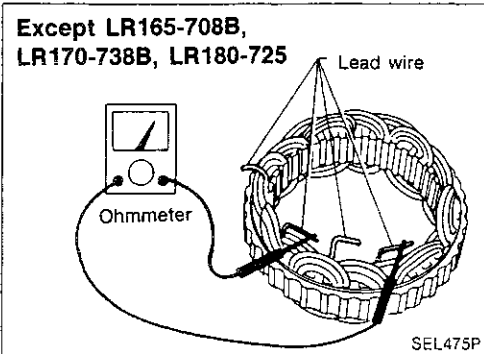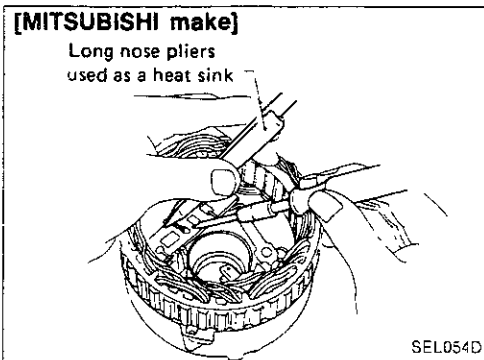

1. Continuity test


- No continuity ... Replace stator.

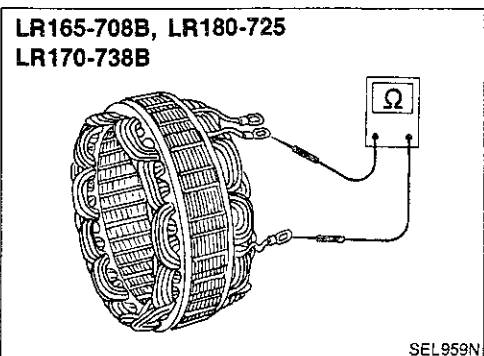

CHARGING SYSTEM — Alternator —

Stator Check (Except LR165-708B, LR170-738B) (Cont'd)


Except LR165-708B, LR180-725,
LR170-738B

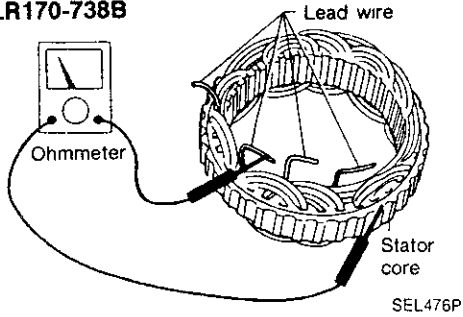

2. Ground test

- Continuity exists ... Replace stator.

LR165-708B, LR180-725,
LR170-738B

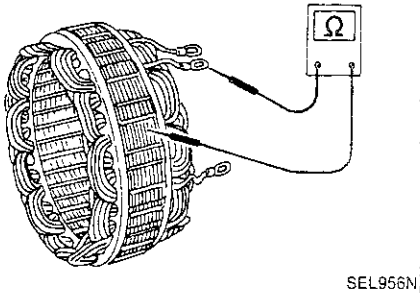

Diode Check


MAIN DIODES

- Use an ohmmeter to check condition of diodes as indicated in chart below.
- If any of the test results is not satisfactory, replace diode assembly.

	Ohmmeter probes		Continuity
	Positive $\oplus$	Negative $\ominus$	
Diodes check (Positive side)	Positive diode plate	Diode terminals	Yes
	Diode terminals	Positive diode plate	No
Diodes check (Negative side)	Negative diode plate	Diode terminals	No
	Diode terminals	Negative diode plate	Yes


[HITACHI make]

LR165-768B, LR170-738B, LR180-725

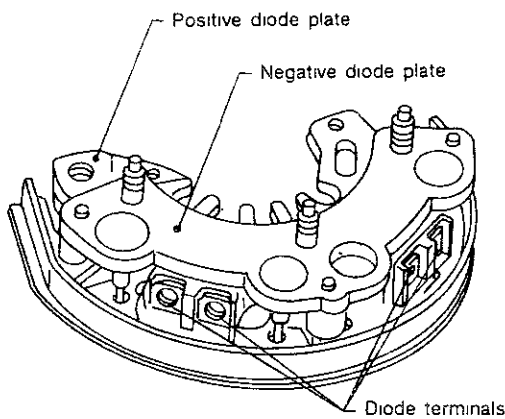

SEL477P


LR160-715, LR170-404B

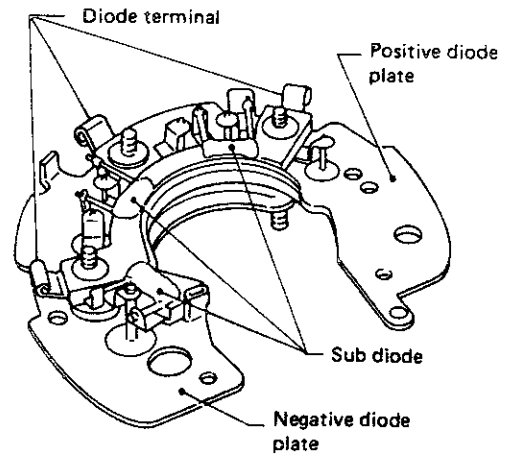

SEL768D


[MITSUBISHI make]

A5T03092, A5T03192

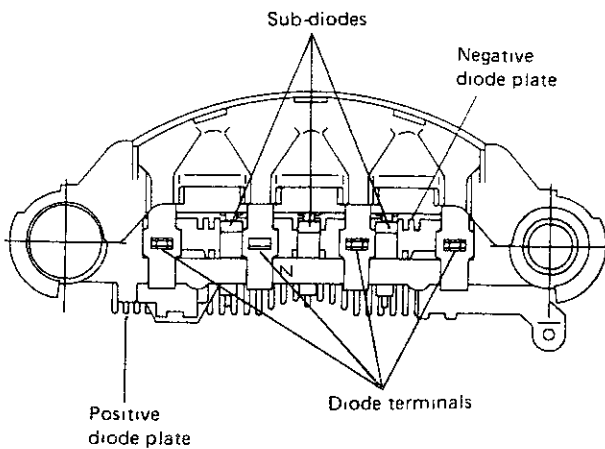

SEL385L

A5T41592

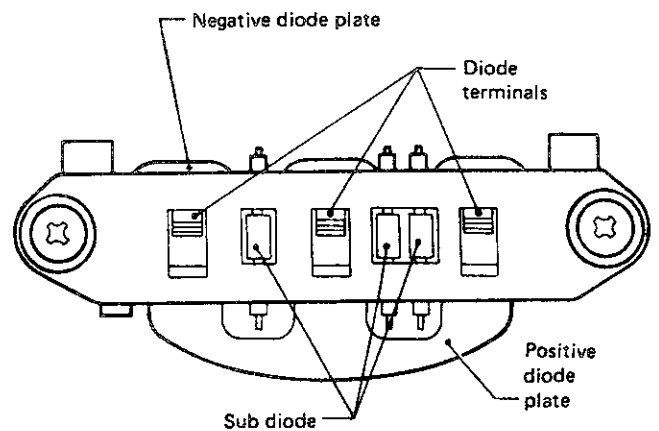

SEL767D


Diode Check (Cont'd)

SUB-DIODES

(Except LR165-768B, LR170-738B, LR180-725)


- Attach ohmmeter's probe to each end of diode to check for continuity.
- Continuity is N.G. ... Replace diode assembly.

[MITSUBISHI make]
Except A5T41592

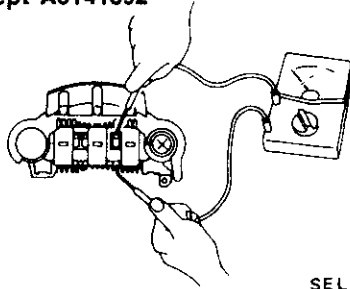


SEL494H

A5T41592

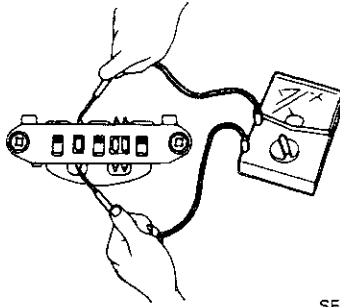

SEL910A

[HITACHI make]

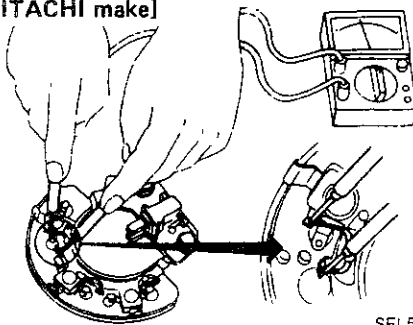


SEL593A

Assembly

Carefully observe the following instructions.

- When soldering each stator coil lead wire to diode assembly terminal, carry out the operation as fast as possible.

[MITSUBISHI make]

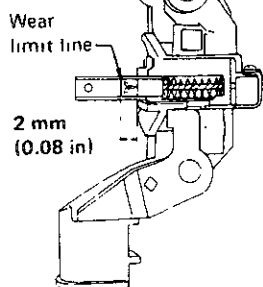

SEL386L


WHEN SOLDERING BRUSH LEAD WIRE

[MITSUBISHI make]

- Position brush so that its wear limit line protrudes 2 mm (0.08 in) beyond end face of brush holder.

Assembly (Cont'd)


[HITACHI make]

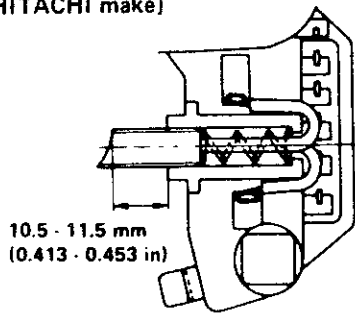

SEL595A

[HITACHI make]


- (1) Position brush so that it extends 10.5 - 11.5 mm (0.413 - 0.453 in) from brush holder.

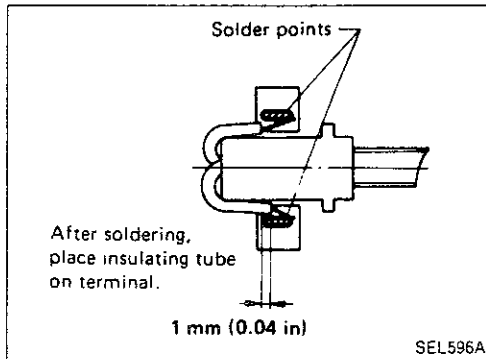

SEL596A

- (2) Coil lead wire 1.5 times around terminal groove. Solder outside of terminal.

When soldering, be careful not to let solder adhere to insulating tube as it will weaken the tube and cause it to break.

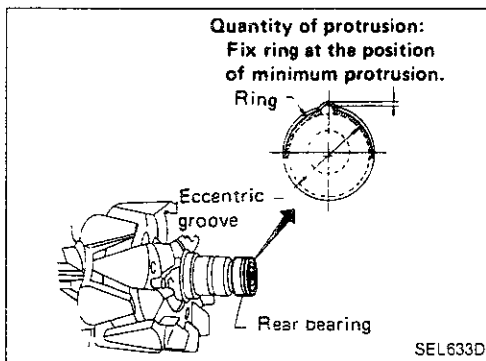

SEL633D


RING FITTING IN REAR BEARING

- Fix ring into groove in rear bearing so that it is as close to the adjacent area as possible.

CAUTION:

Do not reuse rear bearing after removal.

Gasoline engine model

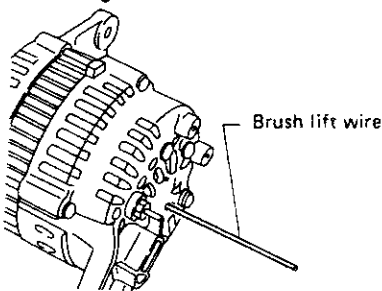

SEL766D


REAR COVER INSTALLATION

(Except LR165-708B, LR170-738B, LR180-725)

- (1) Before installing front cover with pulley and rotor with rear cover, push brush up with fingers and retain brush by inserting brush lift wire into brush lift hole from outside.
- (2) After installing front and rear sides of alternator, pull out brush lift wire.



Diesel engine model

Use serration cap (Attach vinyl tape) to prevent scratching oil seal

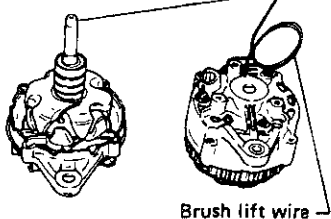


SEL642C

Assembly (Cont'd)

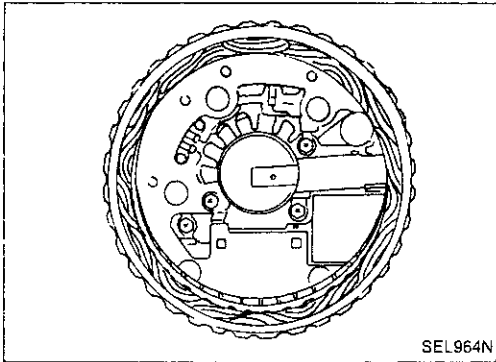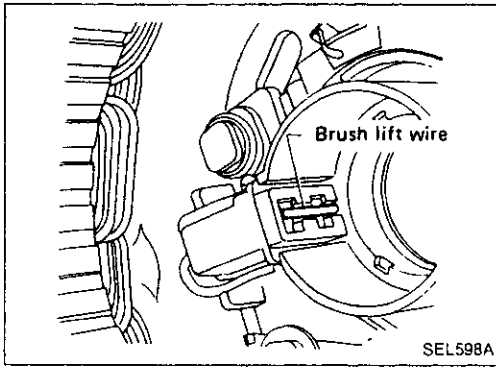

**REAR COVER INSTALLATION
(LR165-708B, LR170-738B, LR180-725)**

- (1) Fit brush assembly, diode assembly, regulator assembly and stator.
 - (2) Push brushes up with fingers and install them to rotor.
- Take care not to damage slip ring sliding surface.**

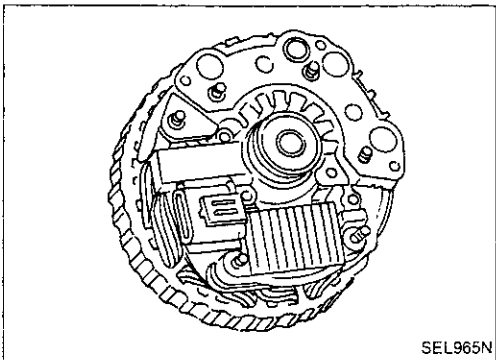

CHARGING SYSTEM — Alternator —

Service Data and Specifications (S.D.S.)

ALTERNATOR

Type		LR165-708B	A5T03092	LR170-738B	A5T03192	LR170-404B	LR160-715	A5T41592
		HITACHI	MITSUBISHI	HITACHI	MITSUBISHI	HITACHI	HITACHI	MITSUBISHI
Applied model		A		B		C	D	
Nominal rating	V-A	12-65		12-70		12-70	12-60	
Ground polarity		Negative						
Minimum revolutions under no-load (when 13.5 volts is applied)	rpm	Less than 950	Less than 1,300	Less than 950	Less than 1,300	Less than 900	Less than 950	Less than 1,100
Hot output current (when 13.5 volts is applied)	A/rpm	More than 17/1,300 More than 48/2,500 More than 62/5,000	More than 16/1,300 More than 50/2,500	More than 22/1,300 More than 50/2,500 More than 67/5,000	More than 21/1,300 More than 50/2,500	More than 26/1,300 More than 56/2,500 More than 66/5,500	More than 17/1,300 More than 48/2,500 More than 57/5,000	More than 16/1,300 More than 50/2,500 More than 60/5,000 (when 14 volts is applied)
Regulated output voltage	V	14.1 - 14.7						
Minimum length of brush	mm (in)	6.0 (0.236)	8.0 (0.315)	6.0 (0.236)	8.0 (0.315)	6.0 (0.236)	7.0 (0.276)	8.0 (0.315)
Brush spring pressure	N (g, oz)	1.079 - 3.432 (110 - 350, 3.88 - 12.34)	3.138 - 4.315 (320 - 440, 11.29 - 15.52)	1.079 - 3.432 (110 - 350, 3.88 - 12.34)	3.138 - 4.315 (320 - 440, 11.29 - 15.52)	1.765 - 3.531 (180 - 360, 6.35 - 12.70)	2.746 - 3.923 (280 - 400, 9.88 - 14.11)	3.040 - 4.217 (310 - 430, 10.93 - 15.17)
Slip ring minimum diameter	mm (in)	26.0 (1.024)	22.1 (0.870)	26.0 (1.024)	22.1 (0.870)	30.6 (1.205)	30.6 (1.205)	22.2 (0.874)


Type		LR180-725	A2T13894	LR170-417B
		HITACHI	MITSUBISHI	HITACHI
Applied model		F	E	G
Nominal rating	V-A	12 - 80		12 - 70
Ground polarity		Negative		
Minimum revolution under no-load (When 13.5 volts is applied)	rpm	950		1,000 (at 14 volts)
Hot output current (When 13.5 volts is applied)	A/rpm	More than 23/1,300 More than 63/2,500 More than 77/5,000		More than 26/1,300 More than 56/2,500 More than 66/5,000
Regulated output voltage	V	14.1 - 14.7		
Minimum length of brush	mm (in)	6.0 (0.236)		6.0 (0.236)
Brush spring pressure	N (g, oz)	1.000 - 3.432 (102 - 350, 3.60 - 12.34)		1.569 - 3.334 (160 - 340, 5.64 - 11.99)
Slip ring minimum outer diameter	mm (in)	26.0 (1.024)		33.6 (1.323)

Applied model

Engine	E10	CD17	CD20	GA13D, GA14D and GA16D			SR20D	
Traction system	2WD	2WD	2WD	2WD	2WD option	4WD	2WD	4WD
	D	C	G	A	B		E	F

COMBINATION SWITCH

Combination Switch/Check

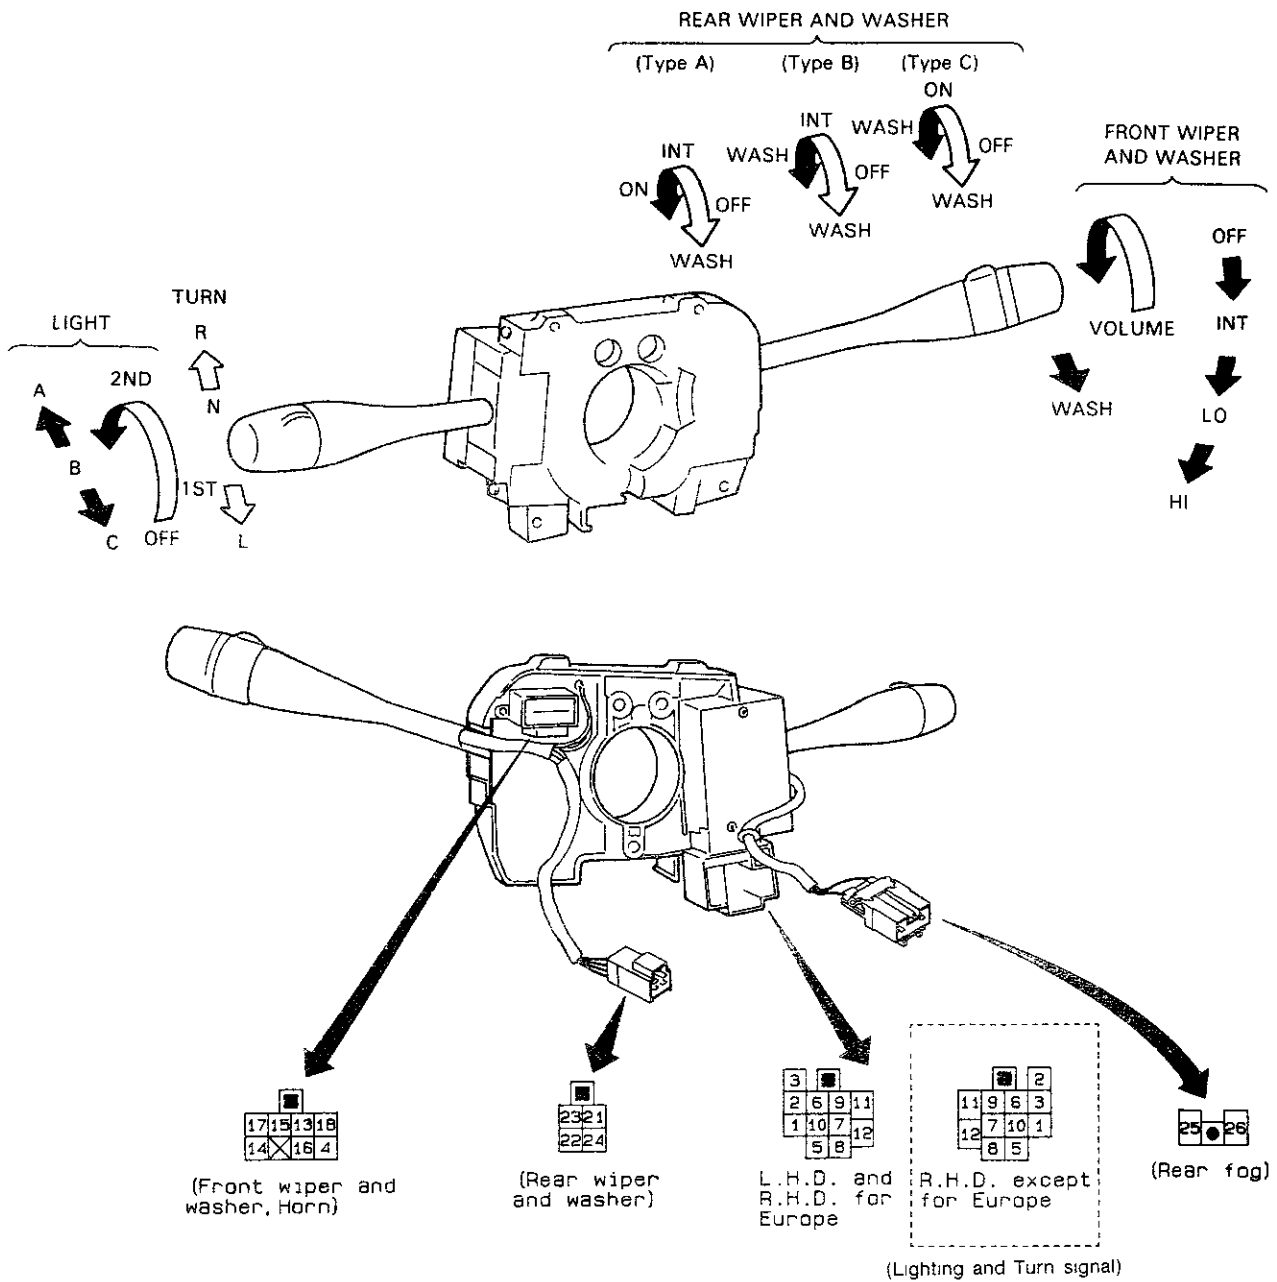

LIGHTING SWITCH

	OFF	1ST	2ND
A	○	○	○
B	○	○	○
C	○	○	○
1	○	○	○
2	○	○	○
3	○	○	○
4	○	○	○
5	○	○	○
6	○	○	○
7	○	○	○
8	○	○	○
9	○	○	○
10	○	○	○
11	○	○	○
12	○	○	○
13	○	○	○
14	○	○	○
15	○	○	○
16	○	○	○
17	○	○	○
18	○	○	○

TURN SIGNAL SWITCH

	OFF	INT
1	○	○
2	○	○
3	○	○

WIPER SWITCH


	OFF	INT	LO	HI	WASH
13	○	○	○	○	○
14	○	○	○	○	○
15	○	○	○	○	○
16	○	○	○	○	○
17	○	○	○	○	○
18	○	○	○	○	○

(With intermittent)

	OFF	LO	HI	WASH
13	○	○	○	○
14	○	○	○	○
15	○	○	○	○
16	○	○	○	○
17	○	○	○	○
18	○	○	○	○

(Without intermittent)

 HORN SWITCH



REAR WIPER SWITCH

	WASH	OFF	INT	ON
21	○	○	○	○
22	○	○	○	○
23	○	○	○	○
24	○	○	○	○

(TYPE A)


	WASH	OFF	INT	WASH
21	○	○	○	○
22	○	○	○	○
23	○	○	○	○
24	○	○	○	○

(TYPE B)

	WASH	OFF	ON	WASH
21	○	○	○	○
22	○	○	○	○
23	○	○	○	○
24	○	○	○	○


(TYPE C)

COMBINATION SWITCH

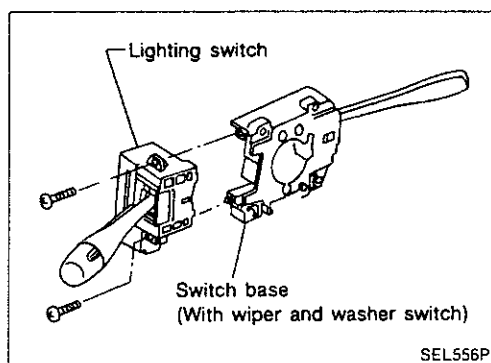

Replacement

- Lighting switch can be replaced without removing combination switch base.

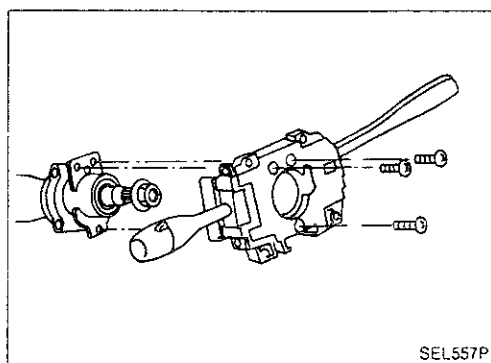

- To remove combination switch base, remove base attaching screw.

Wiring Diagram


L.H.D. MODELS

LIGHTING SWITCH

OFF	1ST	2ND
A	B	C
D	E	F
G	H	I
J	K	L
M	N	O
P	Q	R
S	T	U
V	W	X
Y	Z	


B13 model
 N14 model
 Sedan
 Coupe
 Turbo model
 Non-turbo model
 Sedan for Middle East
 Except (SM)

(BS) B13 sedan model
 (EB) Except (BS)
 (SH) Sedan and hatchback
 (DM) Digital meter
 (NT) Needle meter with tachometer
 (WT) Needle meter without tachometer

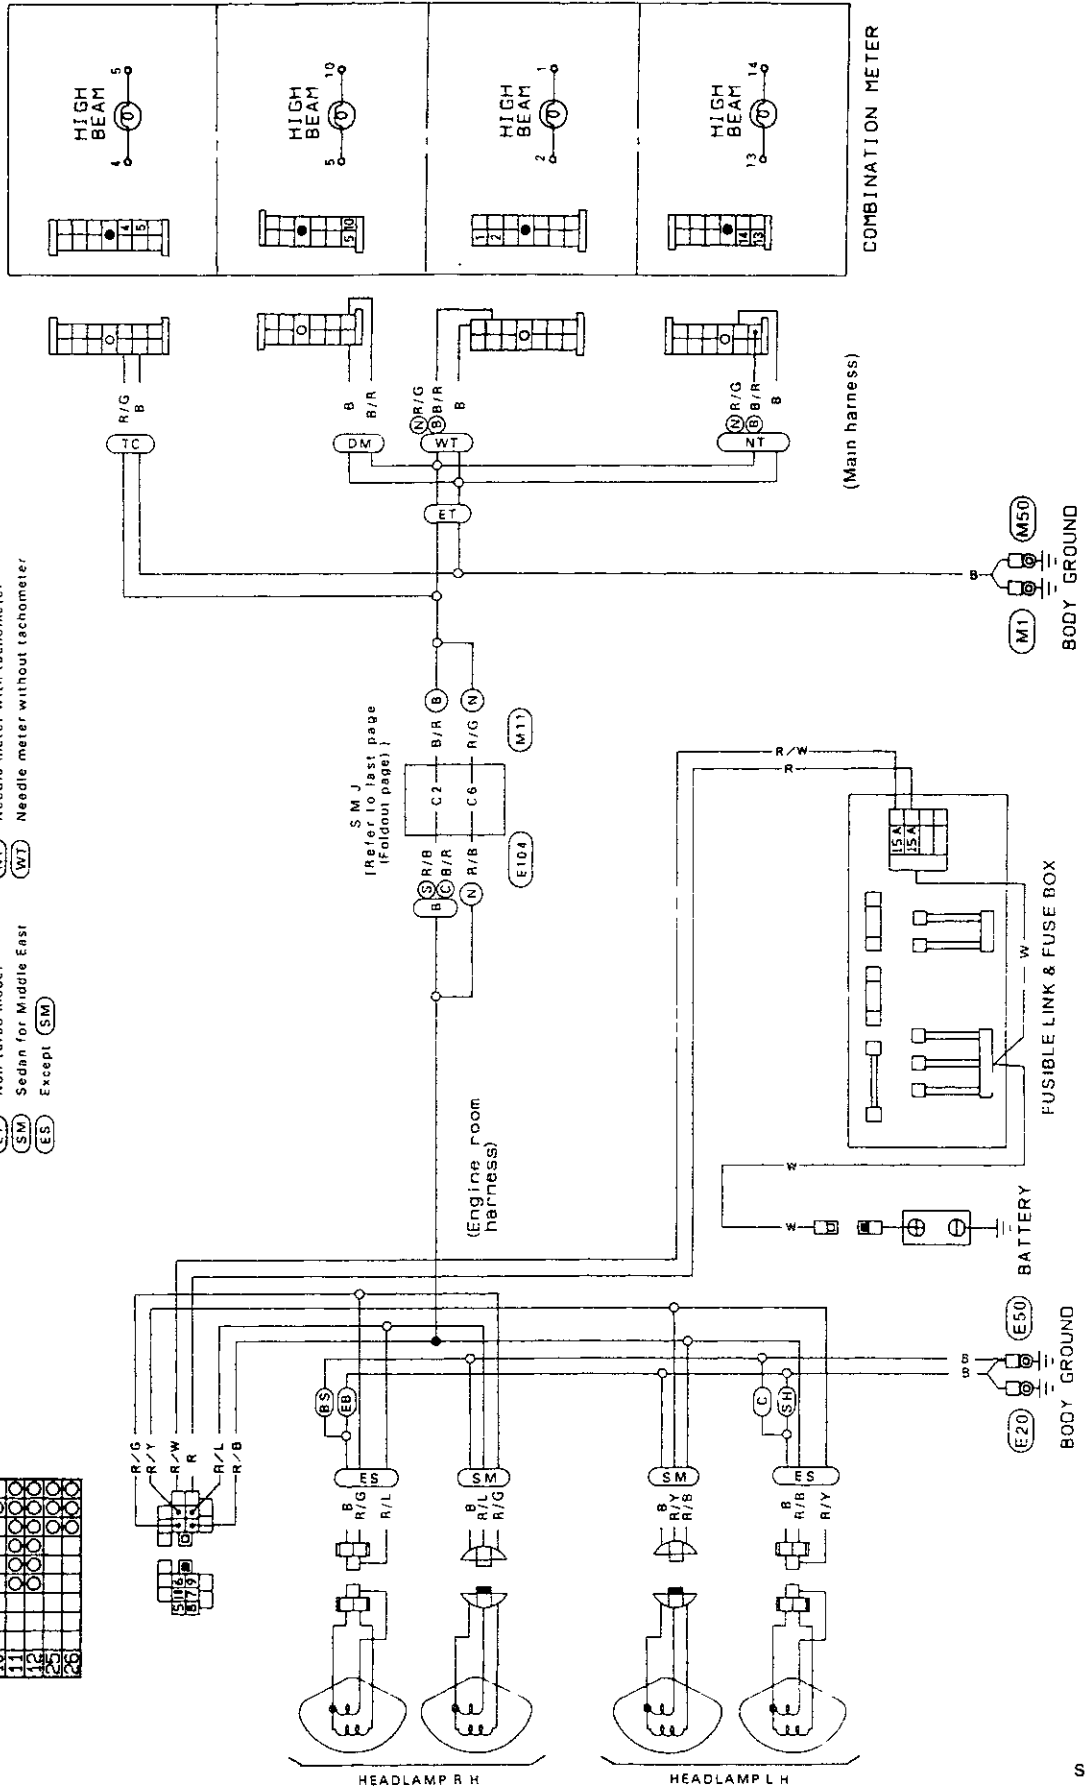

Wiring Diagram (Cont'd)

R.H.D. MODELS

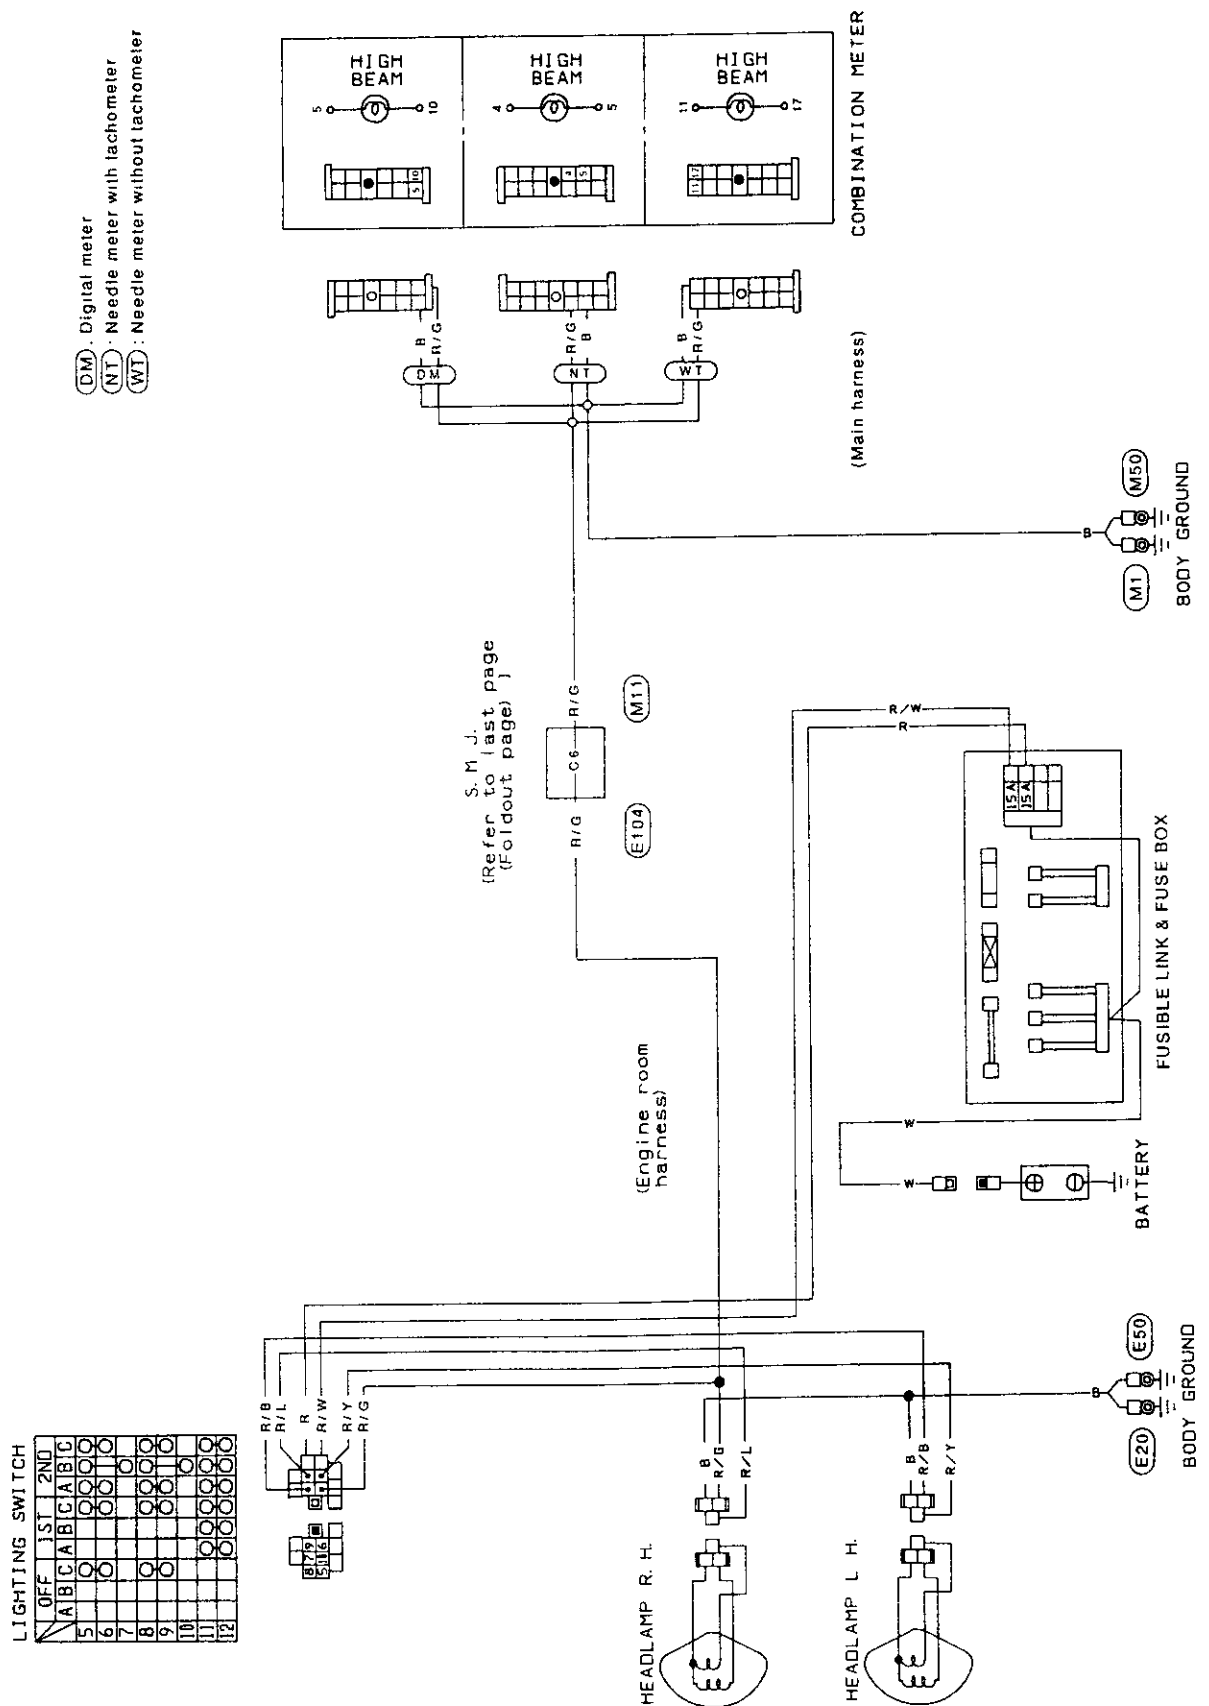

HEADLAMP — Daytime Light System —

Operation

After starting the engine with the lighting switch in the "OFF" position, the headlamp low beam and clearance, tail, license and instrument illumination lamps automatically turn on. Lighting switch operations other than the above are the same as conventional light systems.

Engine		With engine stopped									With engine running								
Lighting switch		OFF			1ST			2ND			OFF			1ST			2ND		
		A	B	C	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C
Headlamp	High beam	X	X	O	X	X	O	O	X	O	X	X	O	X	X	O	O	X	O
	Low beam	X	X	X	X	X	X	X	O	X	O	O	O	X	X	X	X	O	X
Clearance and tail lamp		X	X	X	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O
License and instrument illumination lamp		X	X	X	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O

O : Lamp "ON"

X : Lamp "OFF"


■ : Added functions

[illegible]

HEADLAMP — Daytime Light System —

Wiring Diagram (Cont'd)

N14

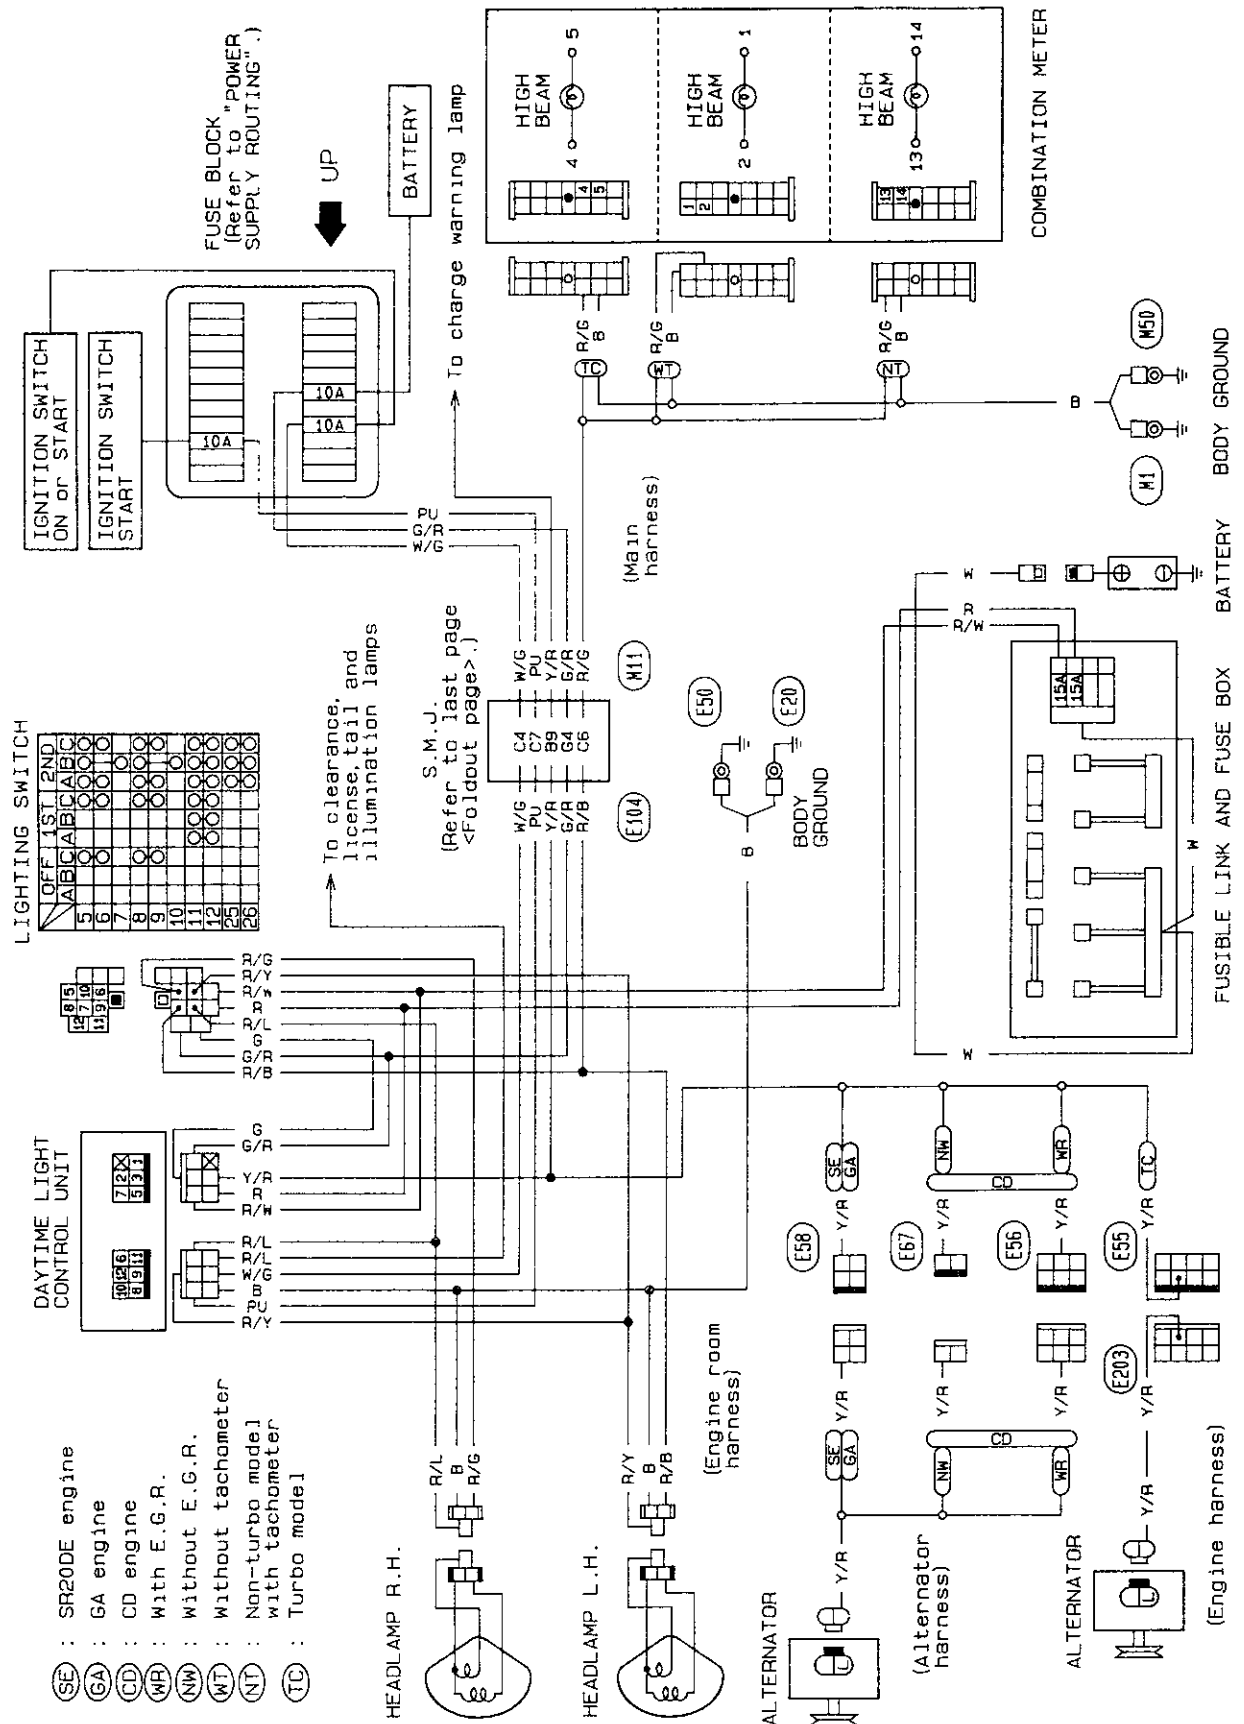

HEADLAMP — Dim-dip Lamp System —

Operation

When ignition switch is in the "ON" position with the lighting switch in the "1ST" position, the headlamp low beam comes on dimly to function as a clearance lamp. Lighting switch operations other than the above are the same as conventional light systems.

Ignition switch		OFF or ACC									ON								
Lighting switch		OFF			1ST			2ND			OFF			1ST			2ND		
		A	B	C	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C
Headlamp	High beam	X	X	O	X	X	O	O	X	O	X	X	O	X	X	O	O	X	O
	Low beam	X	X	X	X	X	X	X	O	X	X	X	X	X	X	X	X	O	X
	Dim-dip (Low beam)	X	X	X	X	X	X	X	X	X	X	X	X	O	O	X	X	X	X
Clearance, tail, license and illumination lamps		X	X	X	O	O	O	O	O	O	X	X	X	O	O	O	O	O	O

O : Lamp "ON"


X : Lamp "OFF"

□ : Added functions

HEADLAMP — Dim-dip Lamp System —

B13

Schematic

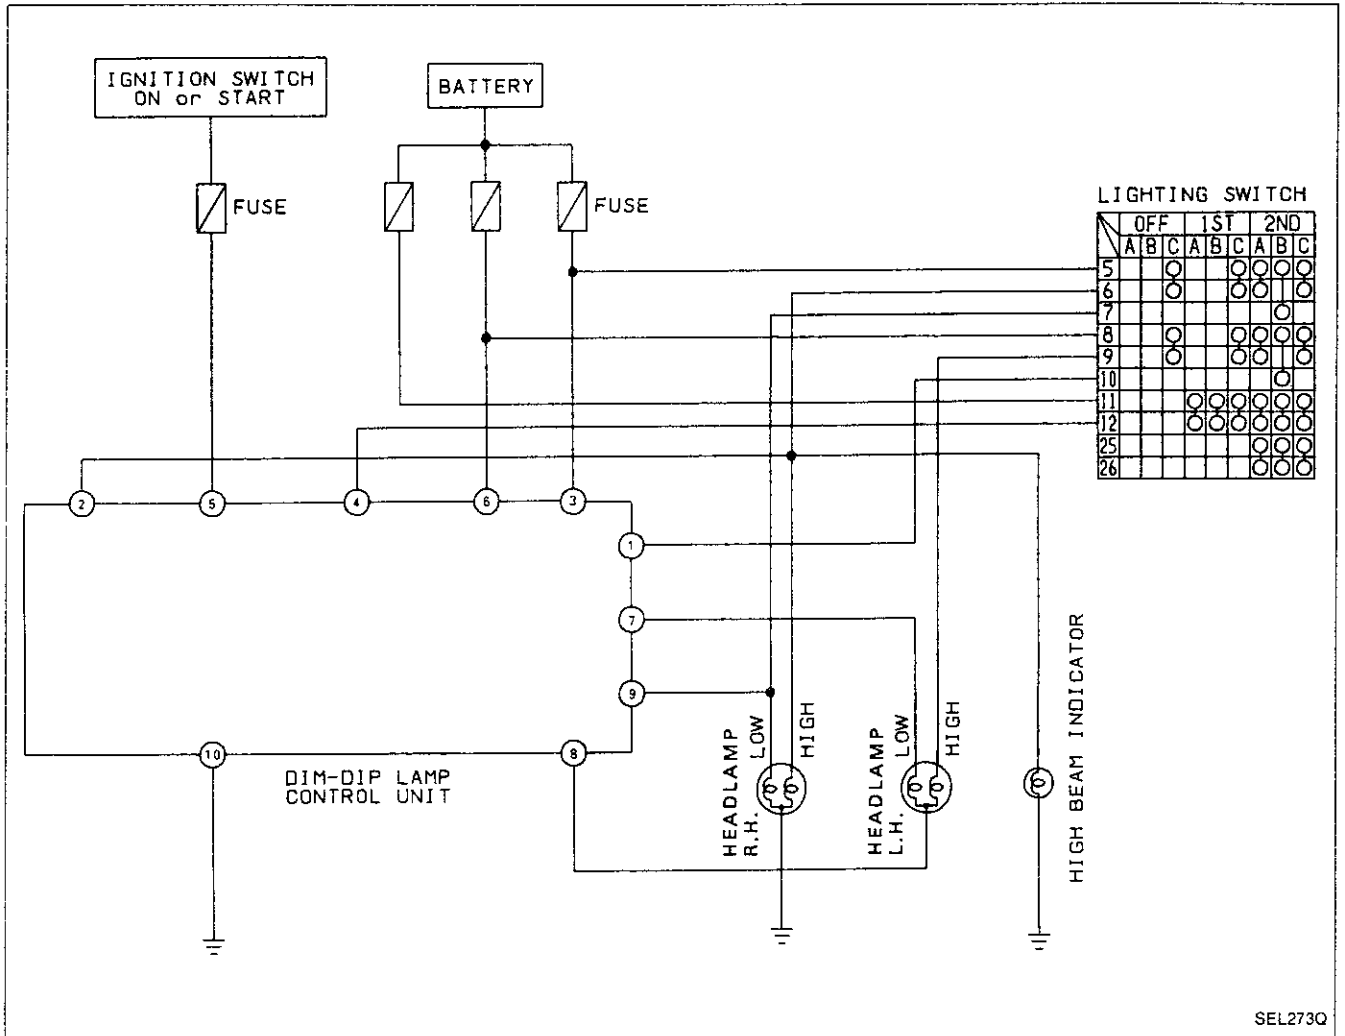


SEL273Q

HEADLAMP — Dim-dip Lamp System —

Schematic (Cont'd)

N14

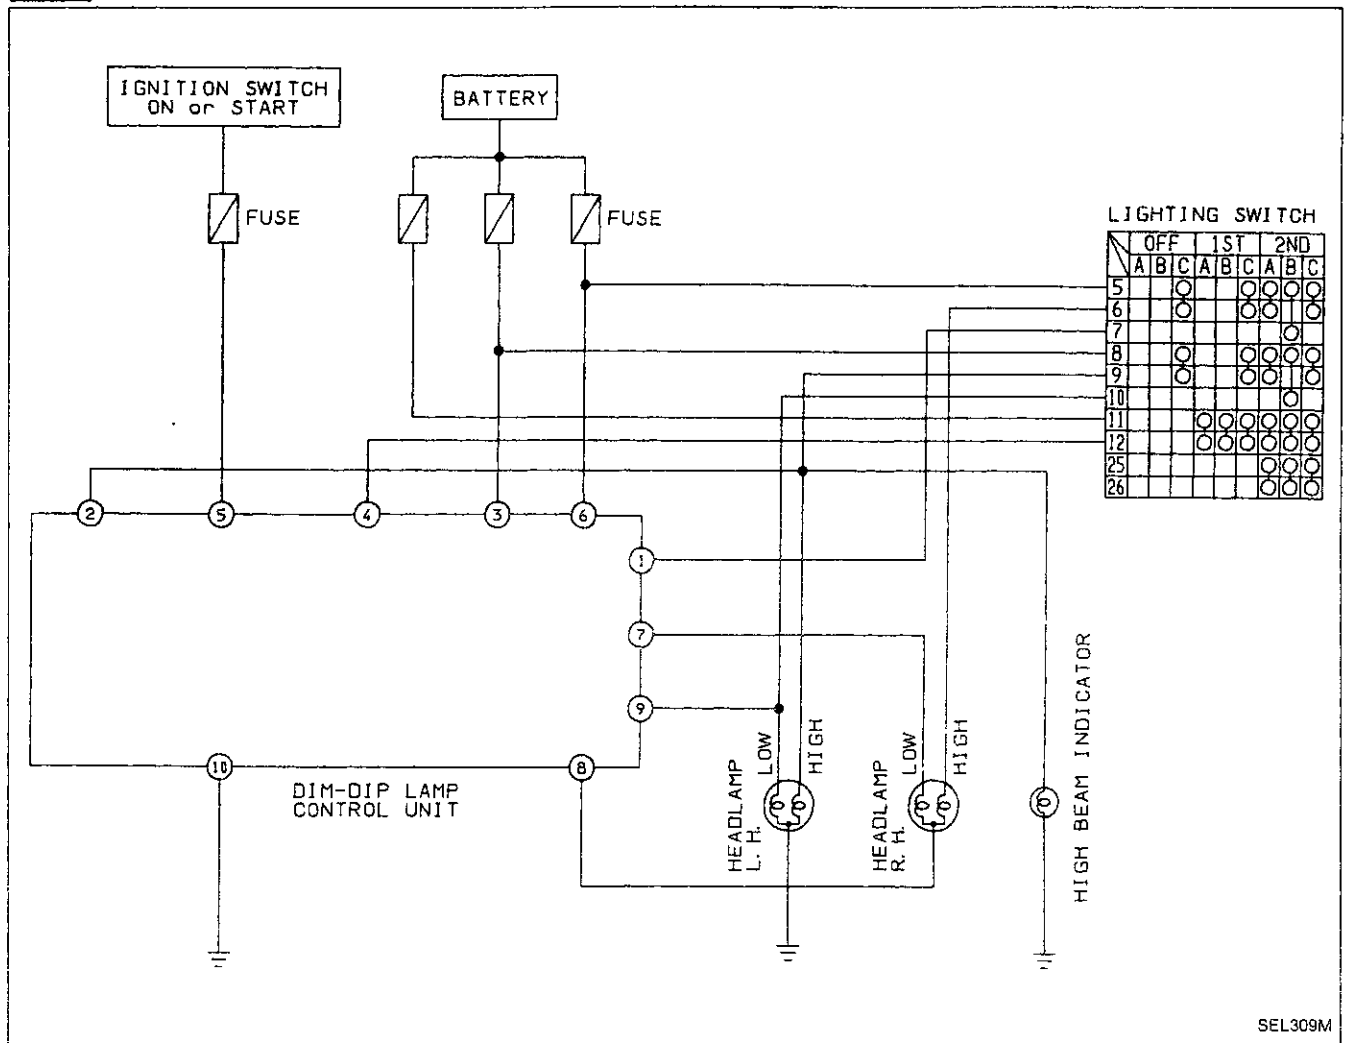


SEL309M

HEADLAMP — Dim-dip Lamp System —


Wiring Diagram

B13

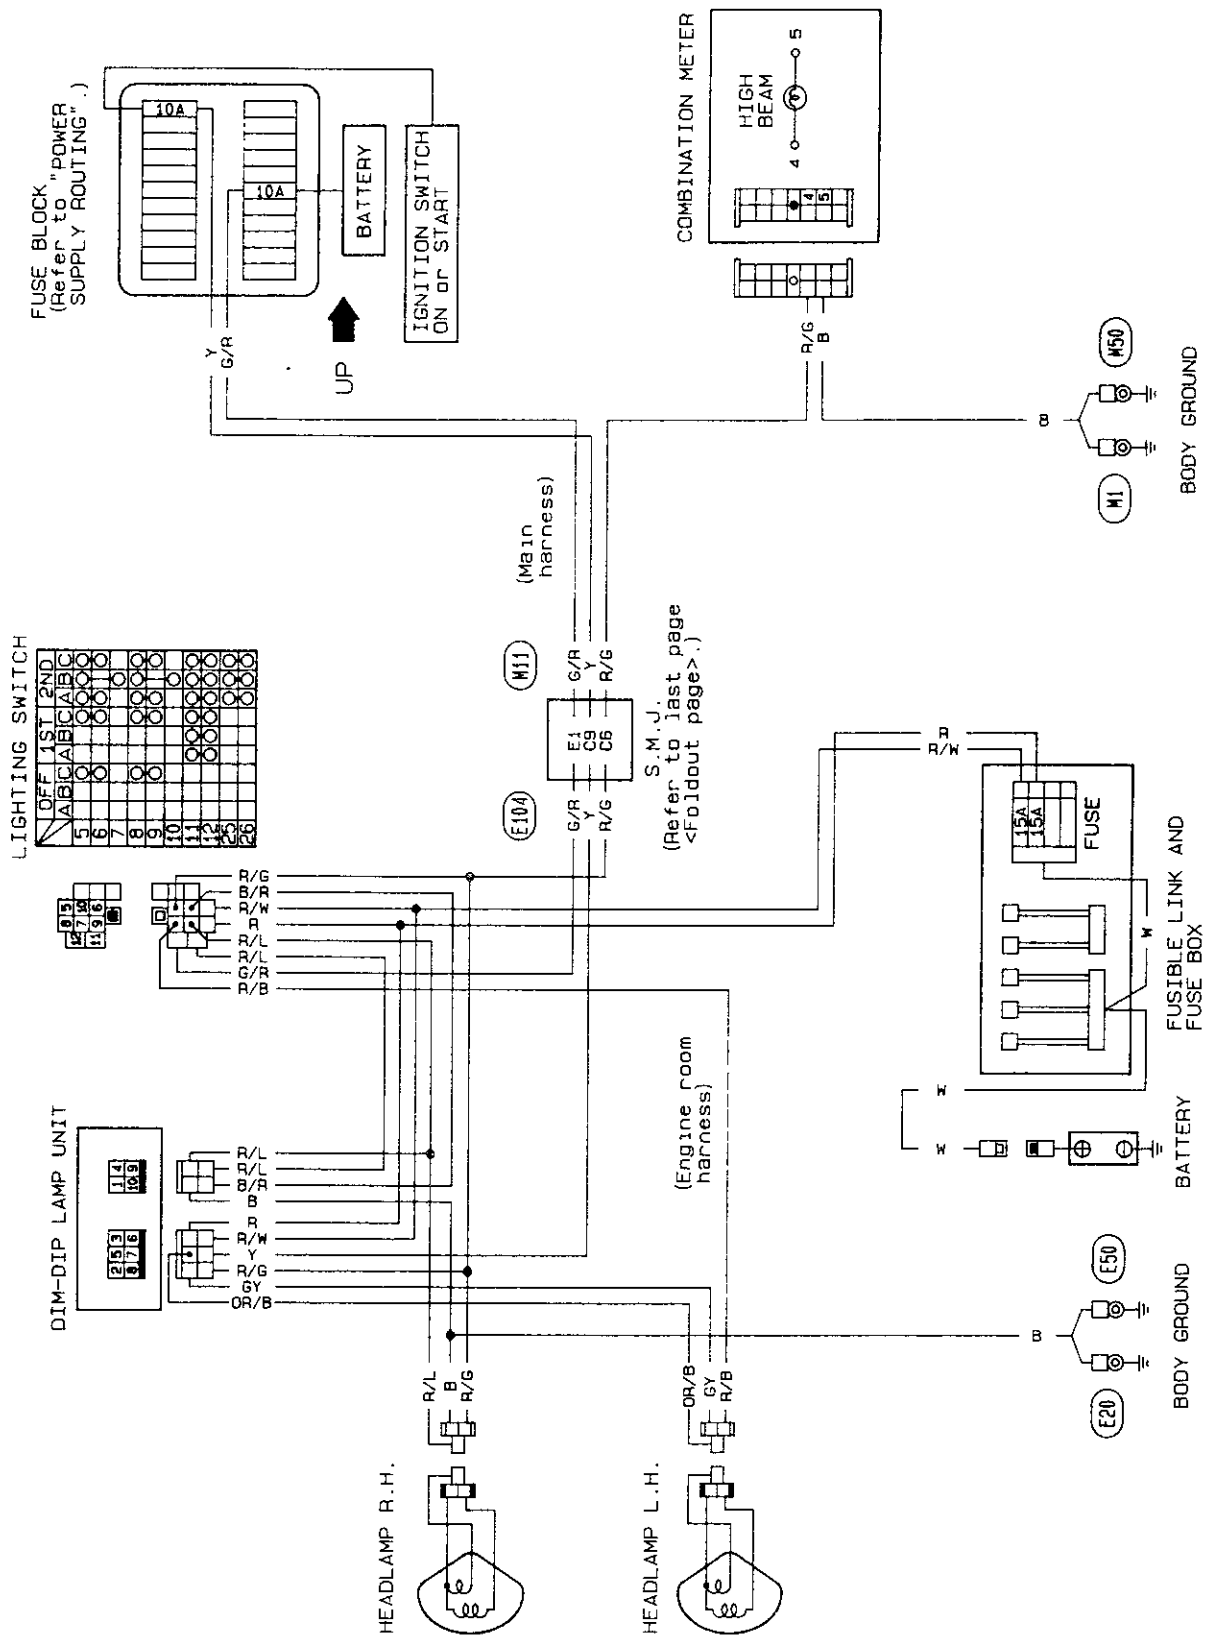


Wiring Diagram (Cont'd)

 N14




Description

- The vertical direction of the headlamp projection can be adjusted from inside the vehicle to prevent the headlight beam axis from facing upward due to a change in the number of occupants and load conditions in the vehicle.

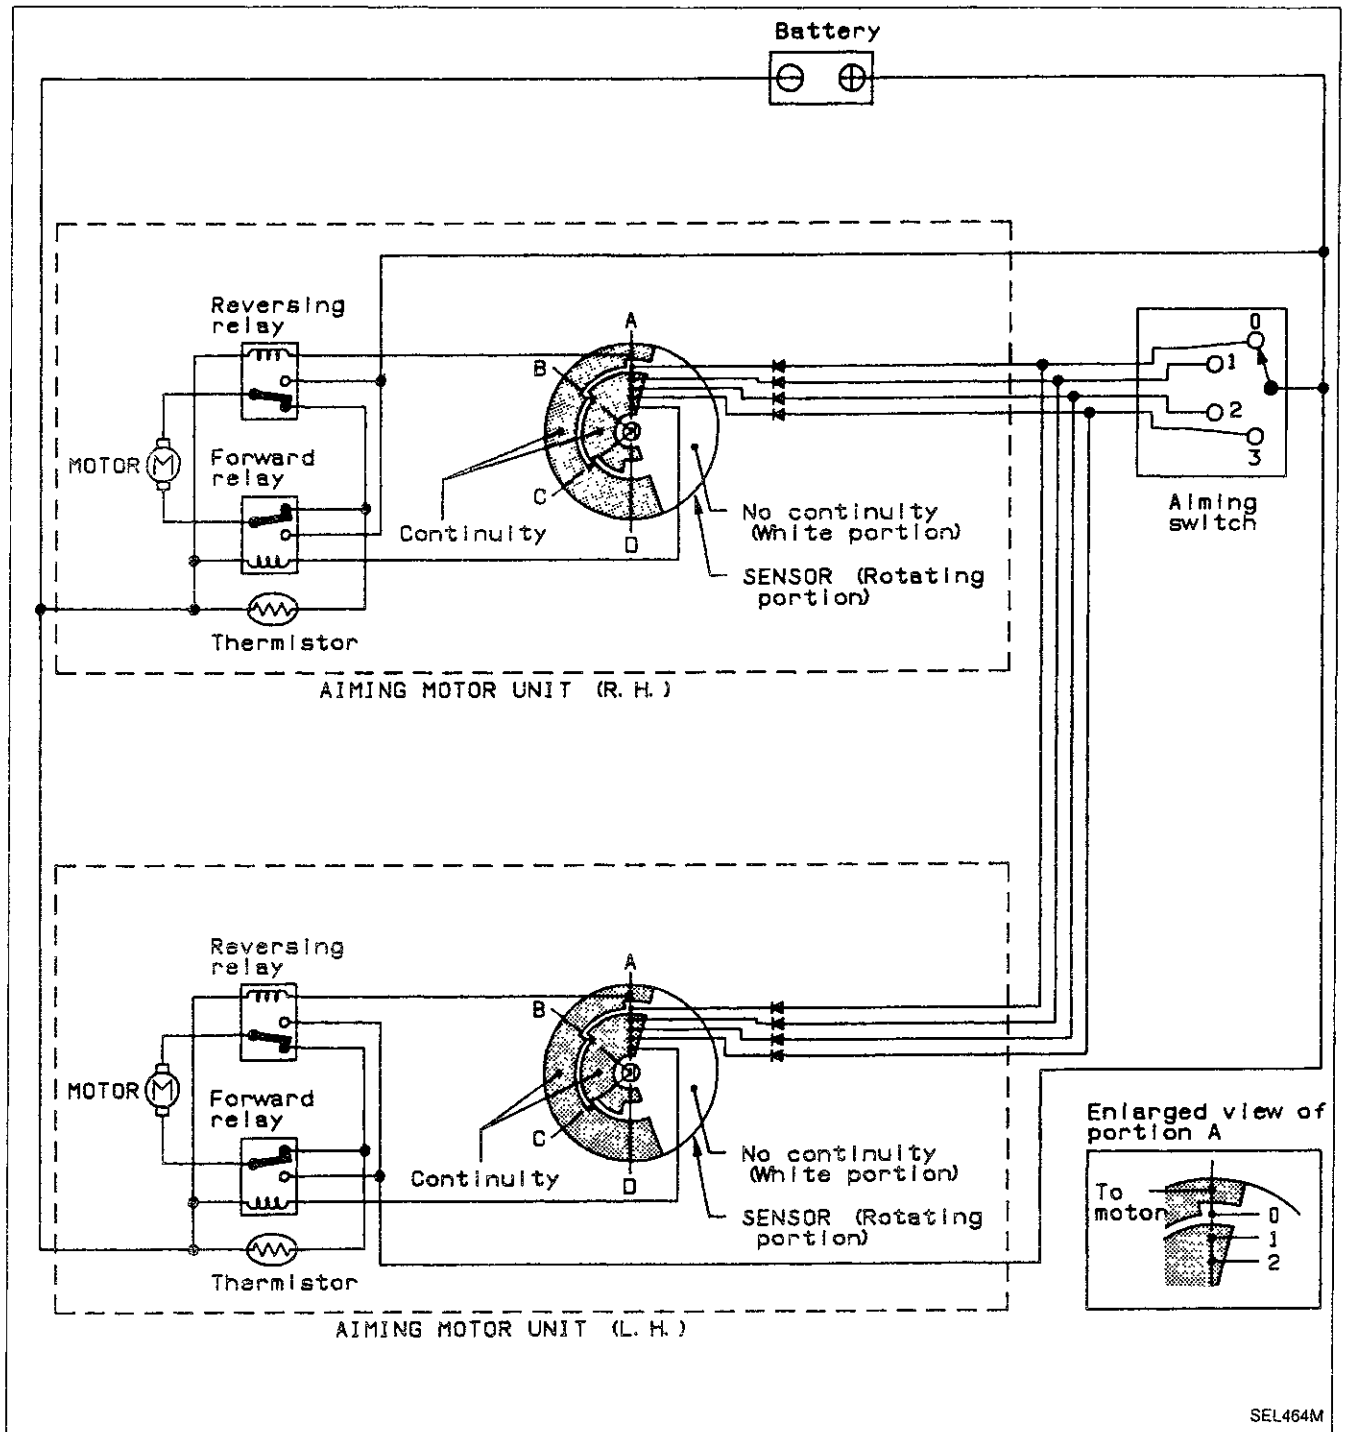

HEADLAMP — Headlamp Aiming Control —

Description (Cont'd)

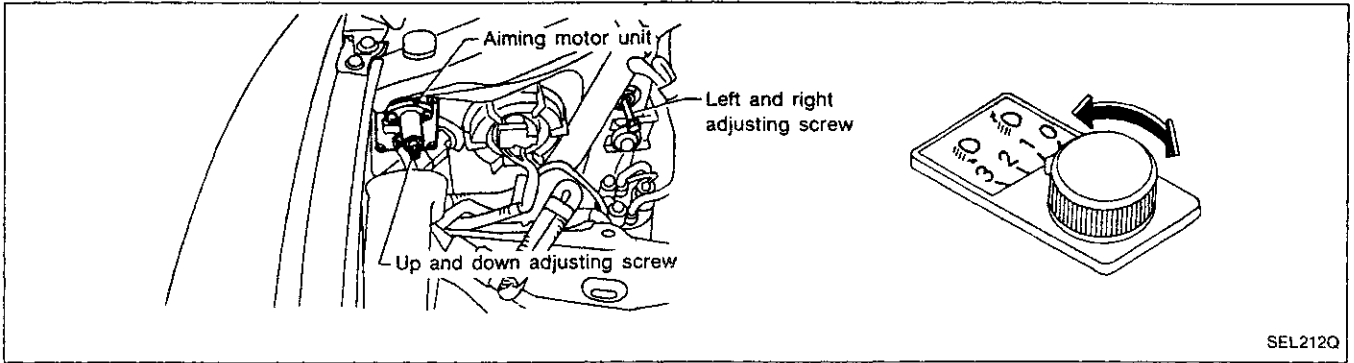


CIRCUIT OPERATION

[Example]


Aiming switch "0"

- When the aiming switch is set to "0", the motor will not start because the power terminals are positioned at the nonconductive section of the sensor's rotary unit.

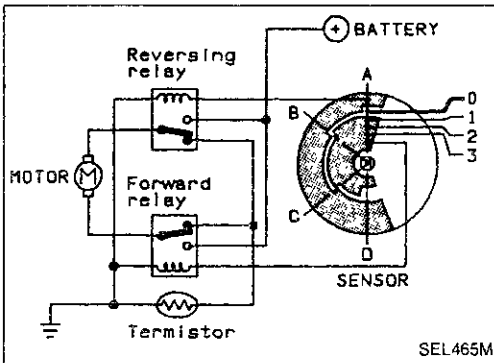


Aiming switch "0" → "1"

- When the aiming switch is moved from "0" to "1", power is applied to the motor through the relay operated by the sensor's conductive section. The headlamps will then move in the "DOWN" direction.
- The motor continues to rotate while the rotary unit of the sensor moves from point A to point B.
- The power terminals will then be positioned at the nonconductive section, disconnecting the power to the motor. Then motor then stops.

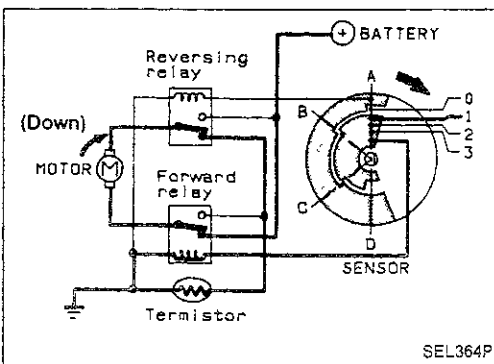


Aiming switch "1" → "0"

- When the aiming switch is moved from "1" to "0", power is applied to the motor through the relay operated by the conductive section of the sensor. The motor will rotate to move the headlamps in the "UP" direction.
- When the rotary unit of the sensor moves from point B to point A, the motor will stop.

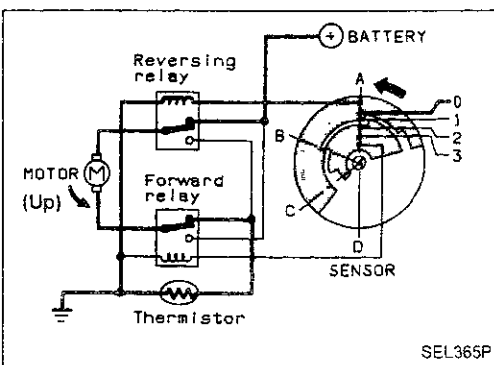


HEADLAMP — Headlamp Aiming Control —

Schematic

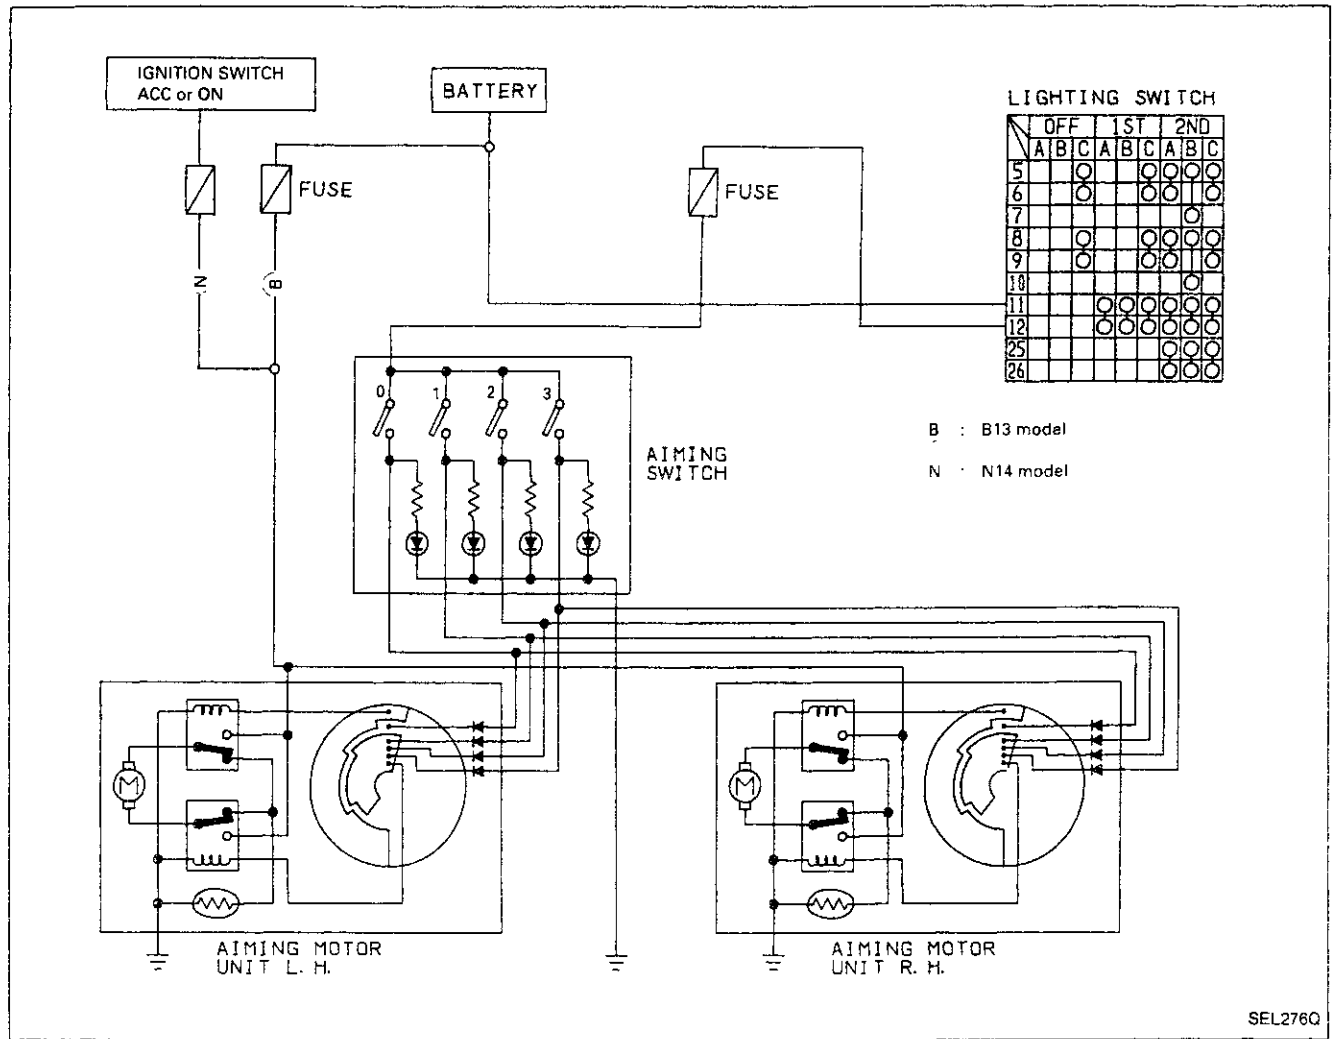


SEL276Q

 
UP 



HEADLAMP — Headlamp Aiming Control — Wiring Diagram (Cont'd)


N14

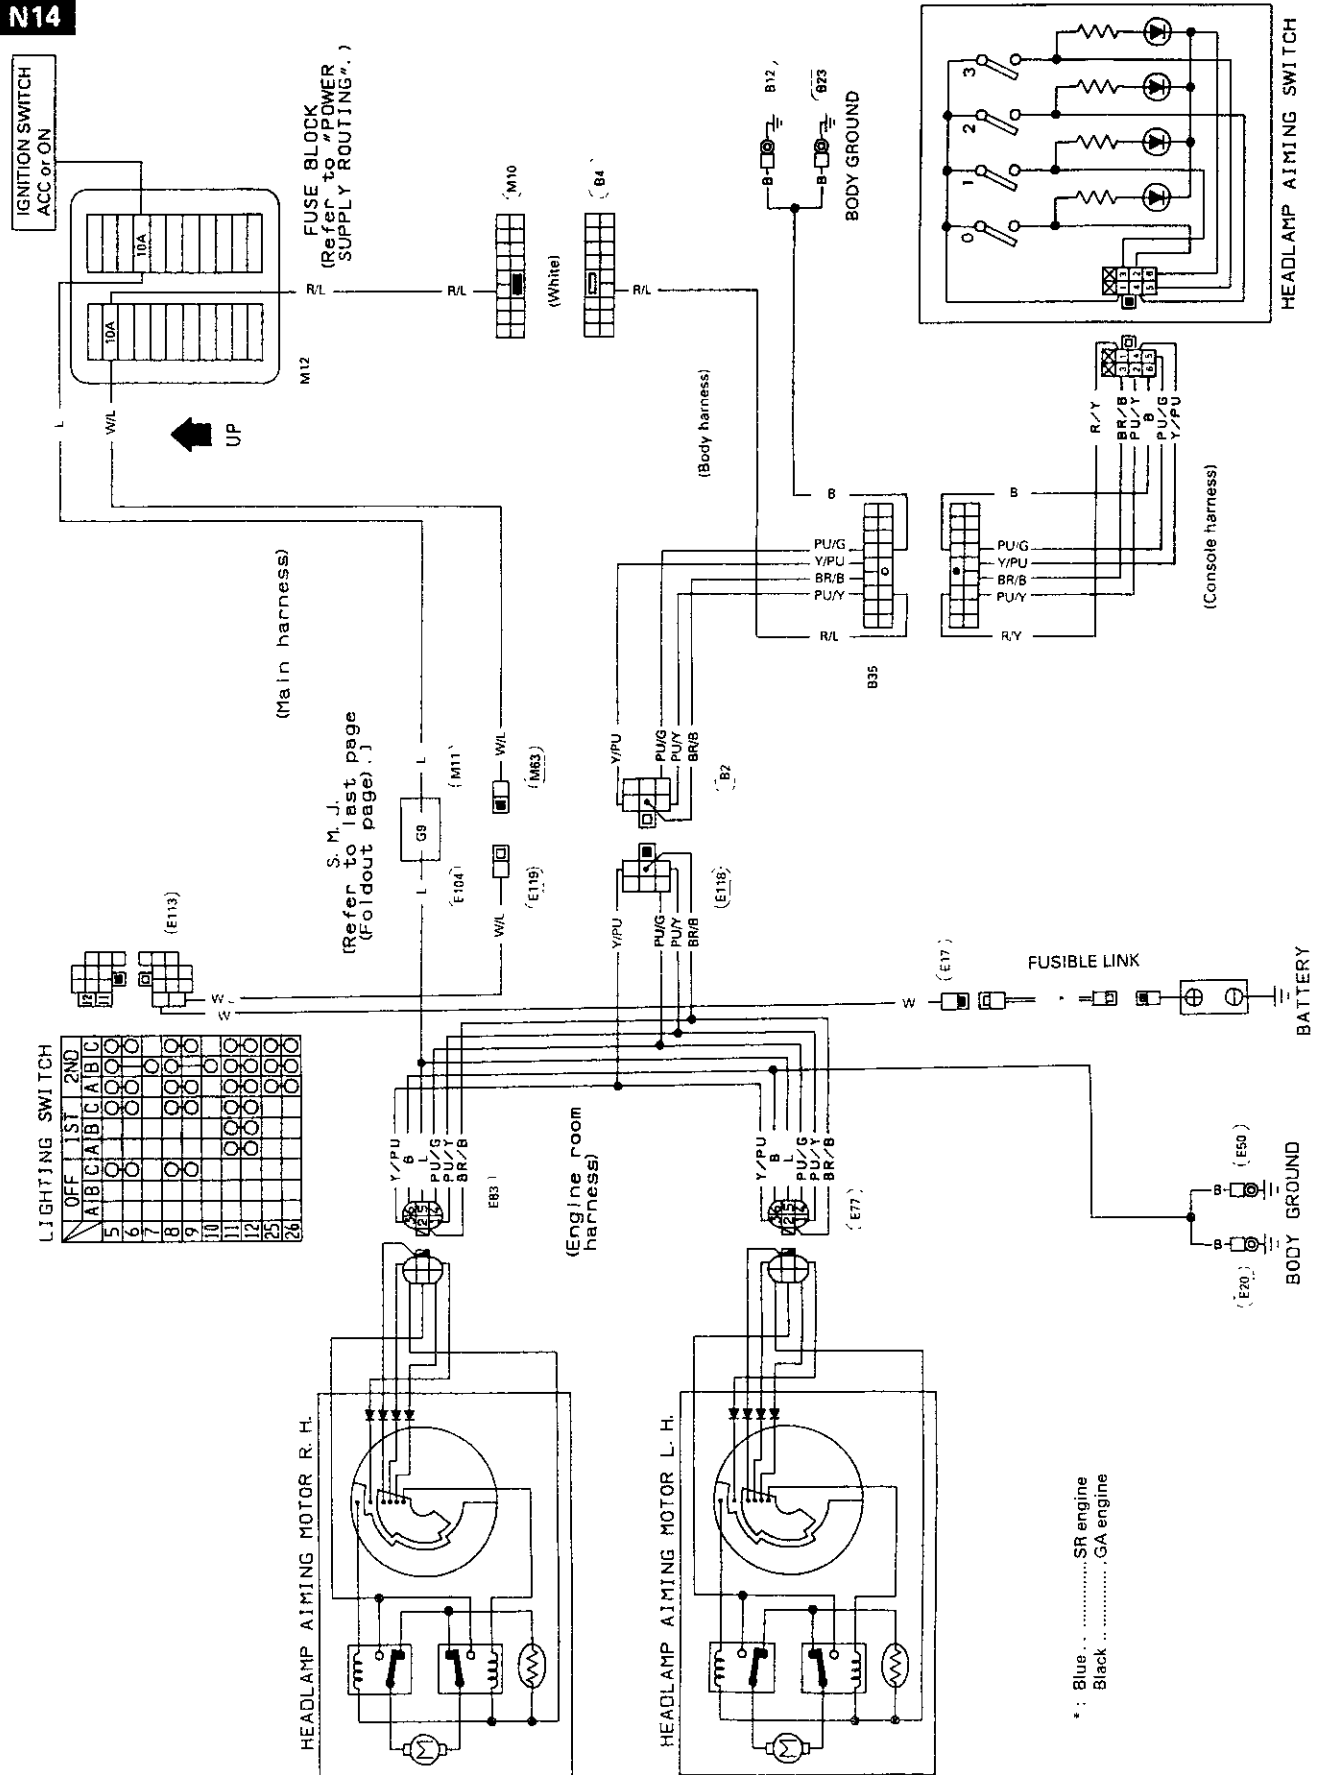


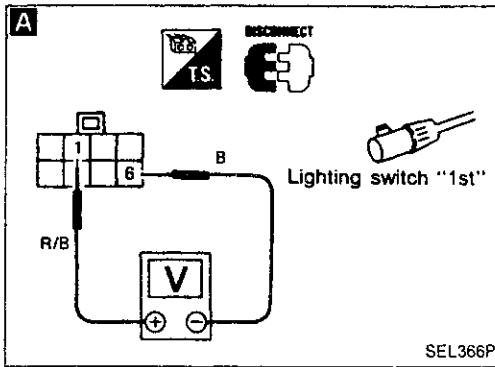


Trouble-diagnosis



SYMPTOM: Headlamp aiming does not operate.

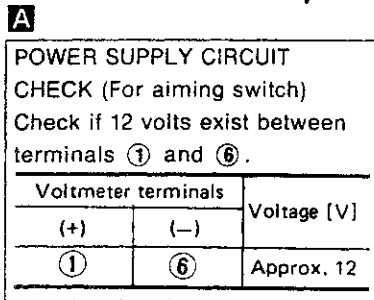



N.G. → Check 10A fuse at fuse block.
(Refer to "POWER SUPPLY ROUTING".)

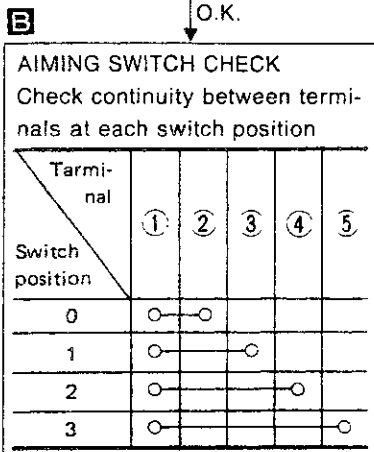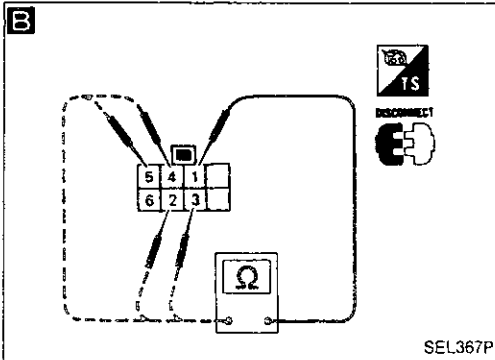

N.G. → Replace aiming switch.

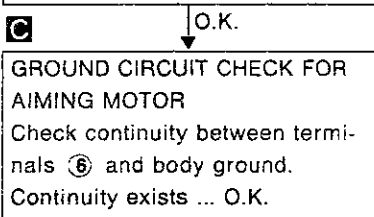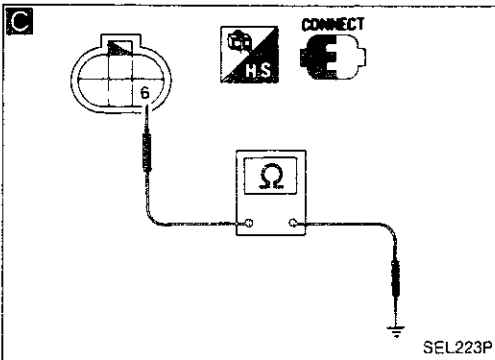


N.G. → Repair harness between aiming motor and body ground.

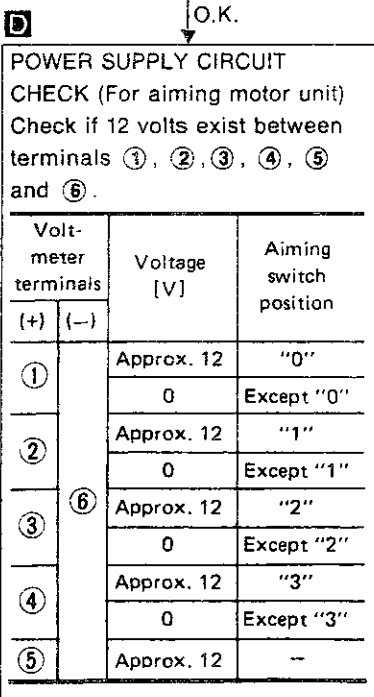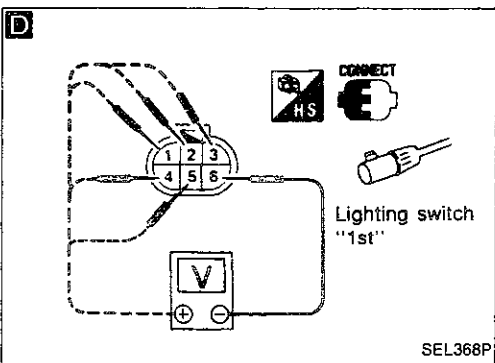

N.G. → Check harness between aiming switch and aiming motor unit

O.K. → Replace aiming motor unit.

HEADLAMP

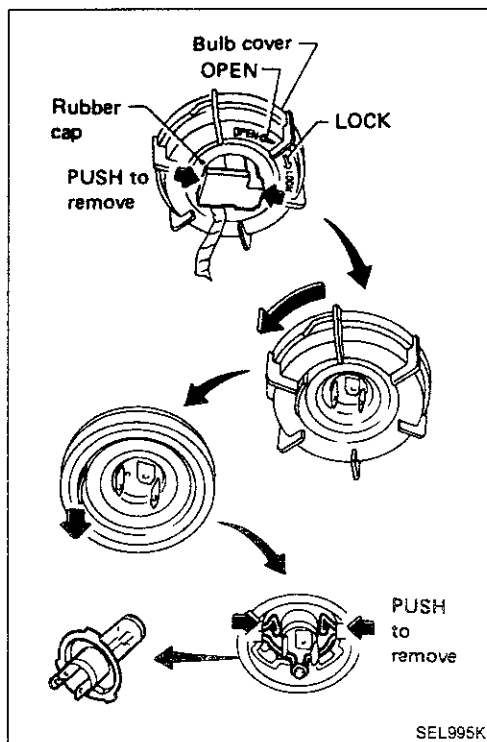

Bulb Replacement

The headlamp is a semi-sealed beam type which uses a replaceable halogen bulb. The bulb can be replaced from the engine compartment side without removing the headlamp body.

- **Grasp only the plastic base when handling the bulb. Never touch the glass envelope.**

1. Disconnect the battery cable.
2. Disconnect the harness connector from the back side of the bulb.
3. Turn the bulb retaining ring counterclockwise until it is free from the headlamp reflector, and then remove it.
4. Pull off the rubber cap.
5. Remove the headlamp bulb carefully. Do not shake or rotate the bulb when removing it.
6. Install in the reverse order of removal.

CAUTION:

- **Do not leave the bulb out of the headlamp reflector for a long period of time as dust, moisture, smoke, etc. may enter the headlamp body and affect the performance of the headlamp. Thus, the headlamp bulb should not be removed from the headlamp reflector until just before a replacement bulb is to be installed.**

Aiming Adjustment


When performing headlamp aiming adjustment, use an aiming machine, aiming wall screen or headlamp tester. For operating instructions of any aimer, it should be in good repair, calibrated and used according to respective operation manuals supplied with the unit.

If any aimer is not available, aiming adjustment can be done as follows:

For details, refer to the regulations in your own country.

CAUTION:

- a. **Keep all tires inflated to correct pressures.**
- b. **Place vehicle and tester on one and same flat surface.**
- c. **See that there is no-load in vehicle (coolant, engine oil filled up to correct level and full fuel tank) other than the driver (or equivalent weight placed in driver's position).**

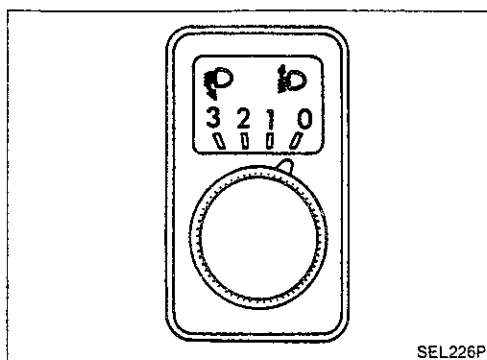

CAUTION:




Be sure aiming switch is set to "0" when performing aiming adjustment on vehicles equipped with headlamp aiming control.

HEADLAMP

Aiming Adjustment (Cont'd)

LOW BEAM

1. Turn headlamp low beam on.
 2. Use adjusting screws to perform aiming adjustment.
- **First tighten the adjusting screw all the way and then make adjustment by loosening the screw.**

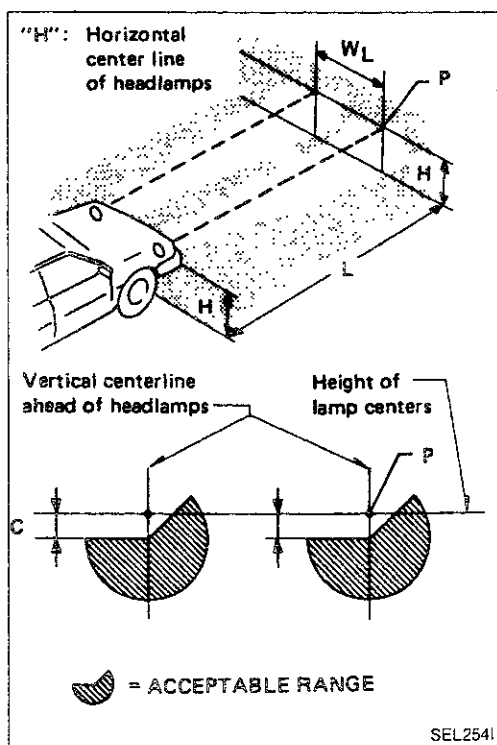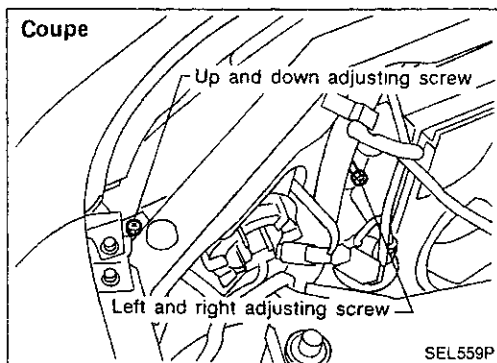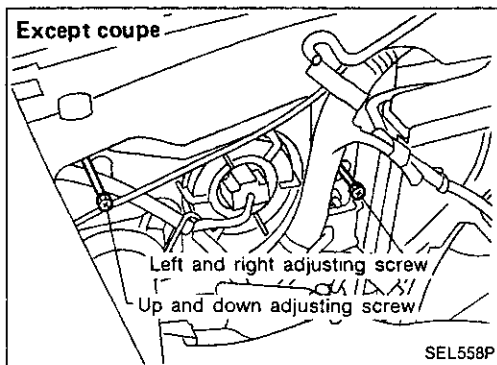


- a. Adjust headlamps so that main axis of light is parallel to center line of body and is aligned with point P shown in illustration.
 - b. Figure to the left shows headlamp aiming pattern for driving on right side of road; for driving on left side of road, aiming pattern is reversed.
 - c. Dotted lines in illustration show center of headlamp.
- "H": Horizontal center line of headlamps
 "W": Distance between each headlamp center
 "L": 5,000 mm (196.85 in)
 "C": 65 mm (2.56 in)

EXTERIOR LAMP

Clearance, License, Tail and Stop Lamps/Wiring Diagram

TYPE-I (Sedan)

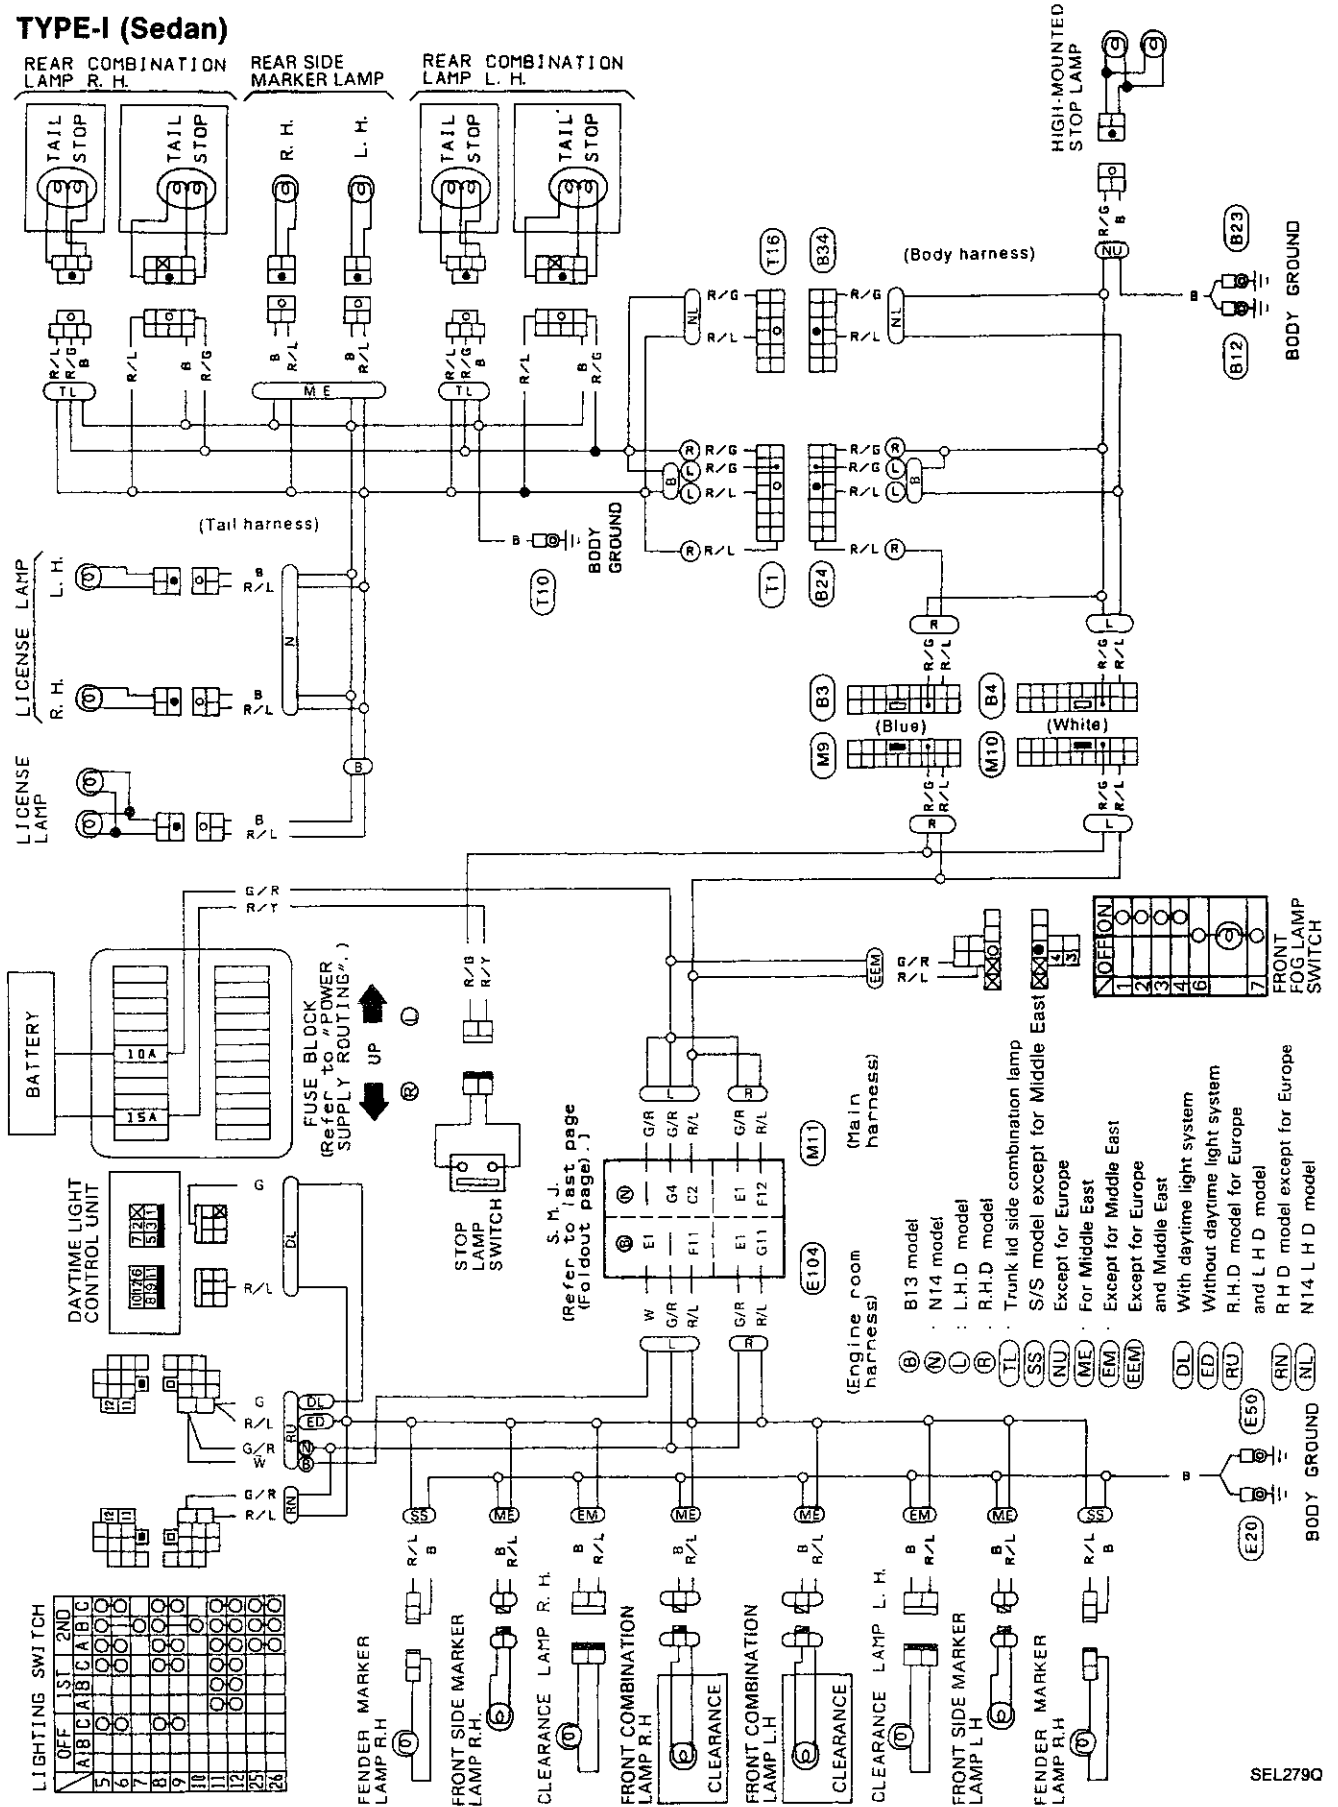

EL-83

SEL279Q

Clearance, License, Tail and Stop Lamps/Wiring Diagram (Cont'd)

Diagram illustrating the wiring for the lighting system, showing connections between the BATTERY, FUSE BLOCK, DAYTIME LIGHT CONTROL UNIT, STOP LAMP SWITCH, and various lamps (CLEARANCE LAMP, LICENSE LAMP, REAR COMBINATION LAMP, STOP LAMP, HIGH MOUNTED STOP LAMP, FOG LAMP).

The diagram includes a table for the DAYTIME LIGHT CONTROL UNIT, showing connections for OFF, 1ST, and 2ND positions across various lamp types (A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z).

Legend for components:

- B13 model
- N14 model
- LH D model
- RHD model
- Coupe
- Hatchback
- Coupe RHD model
- Light on downward type
- License lamp
- Except (LU)
- For Europe
- Except for Europe
- With daytime light system
- Without daytime light system

Legend for connectors:

- (B)
- (N)
- (L)
- (R)
- (C)
- (H)
- (CR)
- (LU)
- (ELU)
- (EU)
- (NU)
- (DL)
- (ED)

Legend for ground points:

- (E20)
- (E50)
- BODY GROUND

Legend for switches:

- STOP LAMP SWITCH
- DAYTIME LIGHT CONTROL UNIT
- FOG LAMP SWITCH

Legend for relays:

- (M9)
- (M10)
- (M11)
- (M12)
- (M13)
- (M14)
- (M15)
- (M16)
- (M17)
- (M18)
- (M19)
- (M20)
- (M21)
- (M22)
- (M23)
- (M24)
- (M25)
- (M26)
- (M27)
- (M28)
- (M29)
- (M30)
- (M31)
- (M32)
- (M33)
- (M34)
- (M35)
- (M36)
- (M37)
- (M38)
- (M39)
- (M40)
- (M41)
- (M42)
- (M43)
- (M44)
- (M45)
- (M46)
- (M47)
- (M48)
- (M49)
- (M50)
- (M51)
- (M52)
- (M53)
- (M54)
- (M55)
- (M56)
- (M57)
- (M58)
- (M59)
- (M60)
- (M61)
- (M62)
- (M63)
- (M64)
- (M65)
- (M66)
- (M67)
- (M68)
- (M69)
- (M70)
- (M71)
- (M72)
- (M73)
- (M74)
- (M75)
- (M76)
- (M77)
- (M78)
- (M79)
- (M80)
- (M81)
- (M82)
- (M83)
- (M84)
- (M85)
- (M86)
- (M87)
- (M88)
- (M89)
- (M90)
- (M91)
- (M92)
- (M93)
- (M94)
- (M95)
- (M96)
- (M97)
- (M98)
- (M99)
- (M100)

Legend for relays:

- (B3)
- (B4)
- (B5)
- (B6)
- (B7)
- (B8)
- (B9)
- (B10)
- (B11)
- (B12)
- (B13)
- (B14)
- (B15)
- (B16)
- (B17)
- (B18)
- (B19)
- (B20)
- (B21)
- (B22)
- (B23)
- (B24)
- (B25)
- (B26)
- (B27)
- (B28)
- (B29)
- (B30)
- (B31)
- (B32)
- (B33)
- (B34)
- (B35)
- (B36)
- (B37)
- (B38)
- (B39)
- (B40)
- (B41)
- (B42)
- (B43)
- (B44)
- (B45)
- (B46)
- (B47)
- (B48)
- (B49)
- (B50)
- (B51)
- (B52)
- (B53)
- (B54)
- (B55)
- (B56)
- (B57)
- (B58)
- (B59)
- (B60)
- (B61)
- (B62)
- (B63)
- (B64)
- (B65)
- (B66)
- (B67)
- (B68)
- (B69)
- (B70)
- (B71)
- (B72)
- (B73)
- (B74)
- (B75)
- (B76)
- (B77)
- (B78)
- (B79)
- (B80)
- (B81)
- (B82)
- (B83)
- (B84)
- (B85)
- (B86)
- (B87)
- (B88)
- (B89)
- (B90)
- (B91)
- (B92)
- (B93)
- (B94)
- (B95)
- (B96)
- (B97)
- (B98)
- (B99)
- (B100)

Legend for relays:

- (D102)
- (D104)
- (D106)
- (D108)
- (D110)
- (D112)
- (D114)
- (D116)
- (D118)
- (D120)
- (D122)
- (D124)
- (D126)
- (D128)
- (D130)
- (D132)
- (D134)
- (D136)
- (D138)
- (D140)
- (D142)
- (D144)
- (D146)
- (D148)
- (D150)
- (D152)
- (D154)
- (D156)
- (D158)
- (D160)
- (D162)
- (D164)
- (D166)
- (D168)
- (D170)
- (D172)
- (D174)
- (D176)
- (D178)
- (D180)
- (D182)
- (D184)
- (D186)
- (D188)
- (D190)
- (D192)
- (D194)
- (D196)
- (D198)
- (D200)

Legend for relays:

- (E104)
- (E106)
- (E108)
- (E110)
- (E112)
- (E114)
- (E116)
- (E118)
- (E120)
- (E122)
- (E124)
- (E126)
- (E128)
- (E130)
- (E132)
- (E134)
- (E136)
- (E138)
- (E140)
- (E142)
- (E144)
- (E146)
- (E148)
- (E150)
- (E152)
- (E154)
- (E156)
- (E158)
- (E160)
- (E162)
- (E164)
- (E166)
- (E168)
- (E170)
- (E172)
- (E174)
- (E176)
- (E178)
- (E180)
- (E182)
- (E184)
- (E186)
- (E188)
- (E190)
- (E192)
- (E194)
- (E196)
- (E198)
- (E200)

Legend for relays:

- (F104)
- (F106)
- (F108)
- (F110)
- (F112)
- (F114)
- (F116)
- (F118)
- (F120)
- (F122)
- (F124)
- (F126)
- (F128)
- (F130)
- (F132)
- (F134)
- (F136)
- (F138)
- (F140)
- (F142)
- (F144)
- (F146)
- (F148)
- (F150)
- (F152)
- (F154)
- (F156)
- (F158)
- (F160)
- (F162)
- (F164)
- (F166)
- (F168)
- (F170)
- (F172)
- (F174)
- (F176)
- (F178)
- (F180)
- (F182)
- (F184)
- (F186)
- (F188)
- (F190)
- (F192)
- (F194)
- (F196)
- (F198)
- (F200)

Legend for relays:


- (G104)
- (G106)
- (G108)
- (G110)
- (G112)
- (G114)
- (G116)
- (G118)
- (G120)
- (G122)
- (G124)
- (G126)
- (G128)
- (G130)
- (G132)
- (G134)
- (G136)
- (G138)
- (G140)
- (G142)
- (G144)
- (G146)
- (G148)
- (G150)
- (G152)
- (G154)
- (G156)
- (G158)
- (G160)
- (G162)
- (G164)
- (G166)
- (G168)
- (G170)
- (G172)
- (G174)
- (G176)
- (G178)
- (G180)
- (G182)
- (G184)
- (G186)
- (G188)
- (G190)
- (G192)
- (G194)
- (G196)
- (G198)
- (G200)

Legend for relays:

- (H104)
- (H106)
- (H108)
- (H110)
- (H112)
- (H114)
- (H116)
- (H118)
- (H120)
- (H122)
- (H124)
- (H126)
- (H128)
- (H130)
- (H132)
- (H134)
- (H136)
- (H138)
- (H140)
- (H142)
- (H144)
- (H146)
- (H148)
- (H150)
- (H152)
- (H154)
- (H156)
- (H158)
- (H160)
- (H162


Clearance, License, Tail and Stop Lamps/Wiring Diagram (Cont'd)

TYPE-II (B13 models)

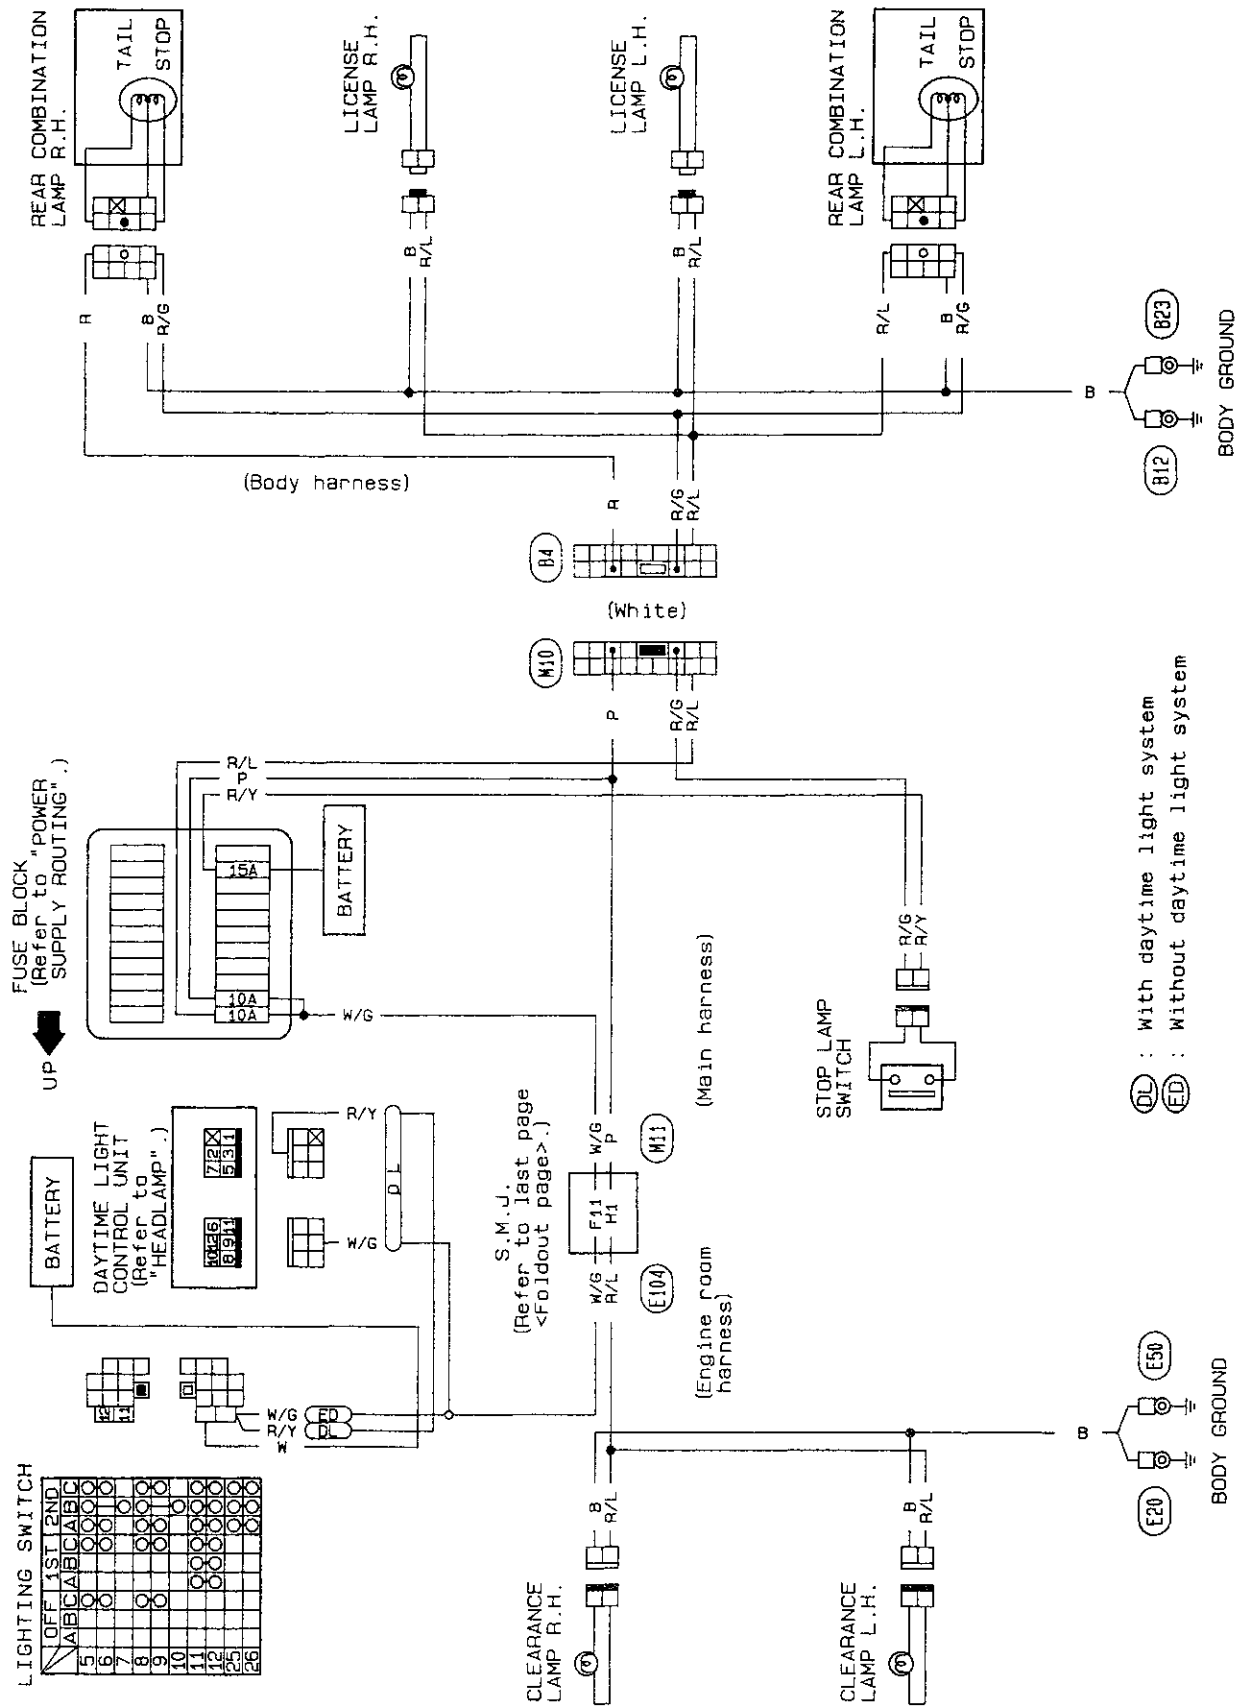

Clearance, License, Tail and Stop Lamps/Wiring Diagram (Cont'd)


TYPE-II (N14 models)

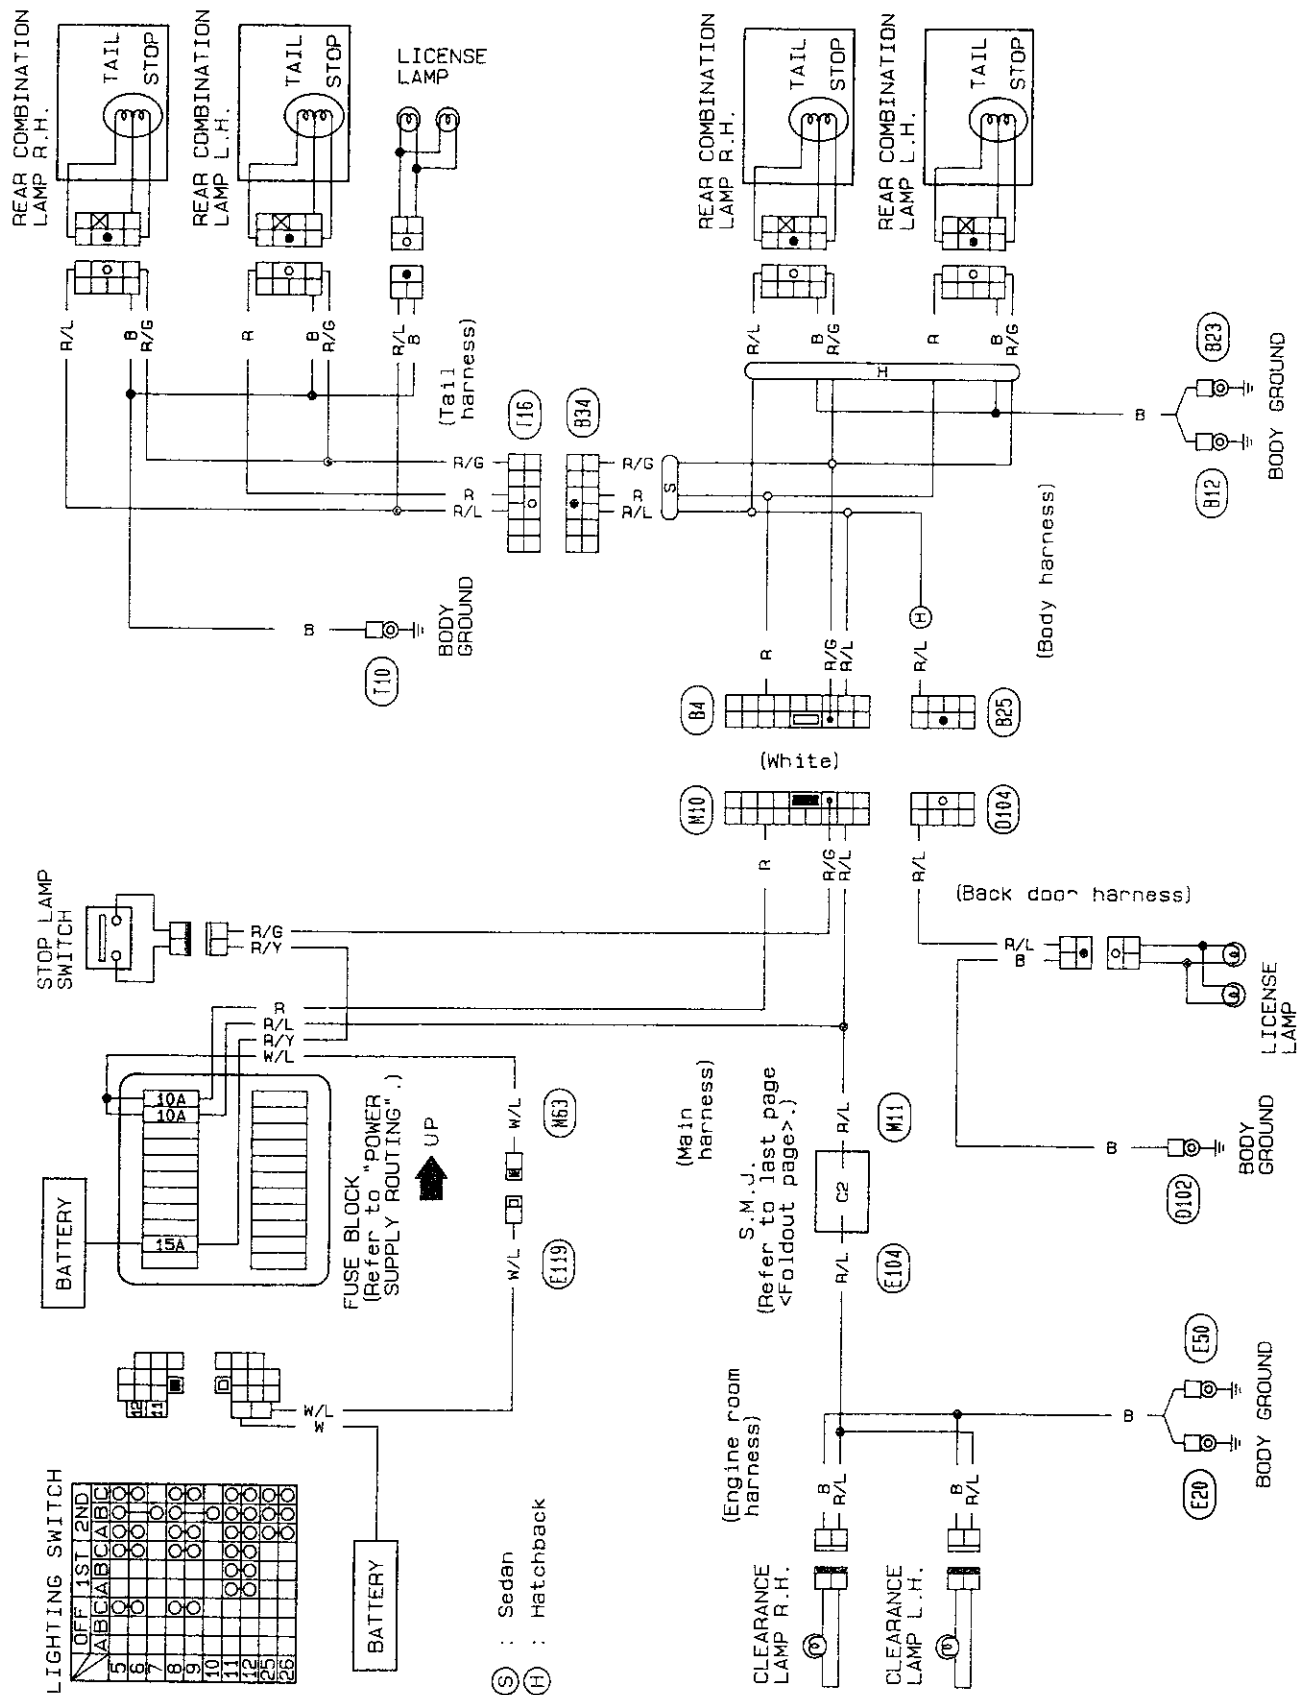

EXTERIOR LAMP

Back-up Lamp/Wiring Diagram


L.H.D MODELS

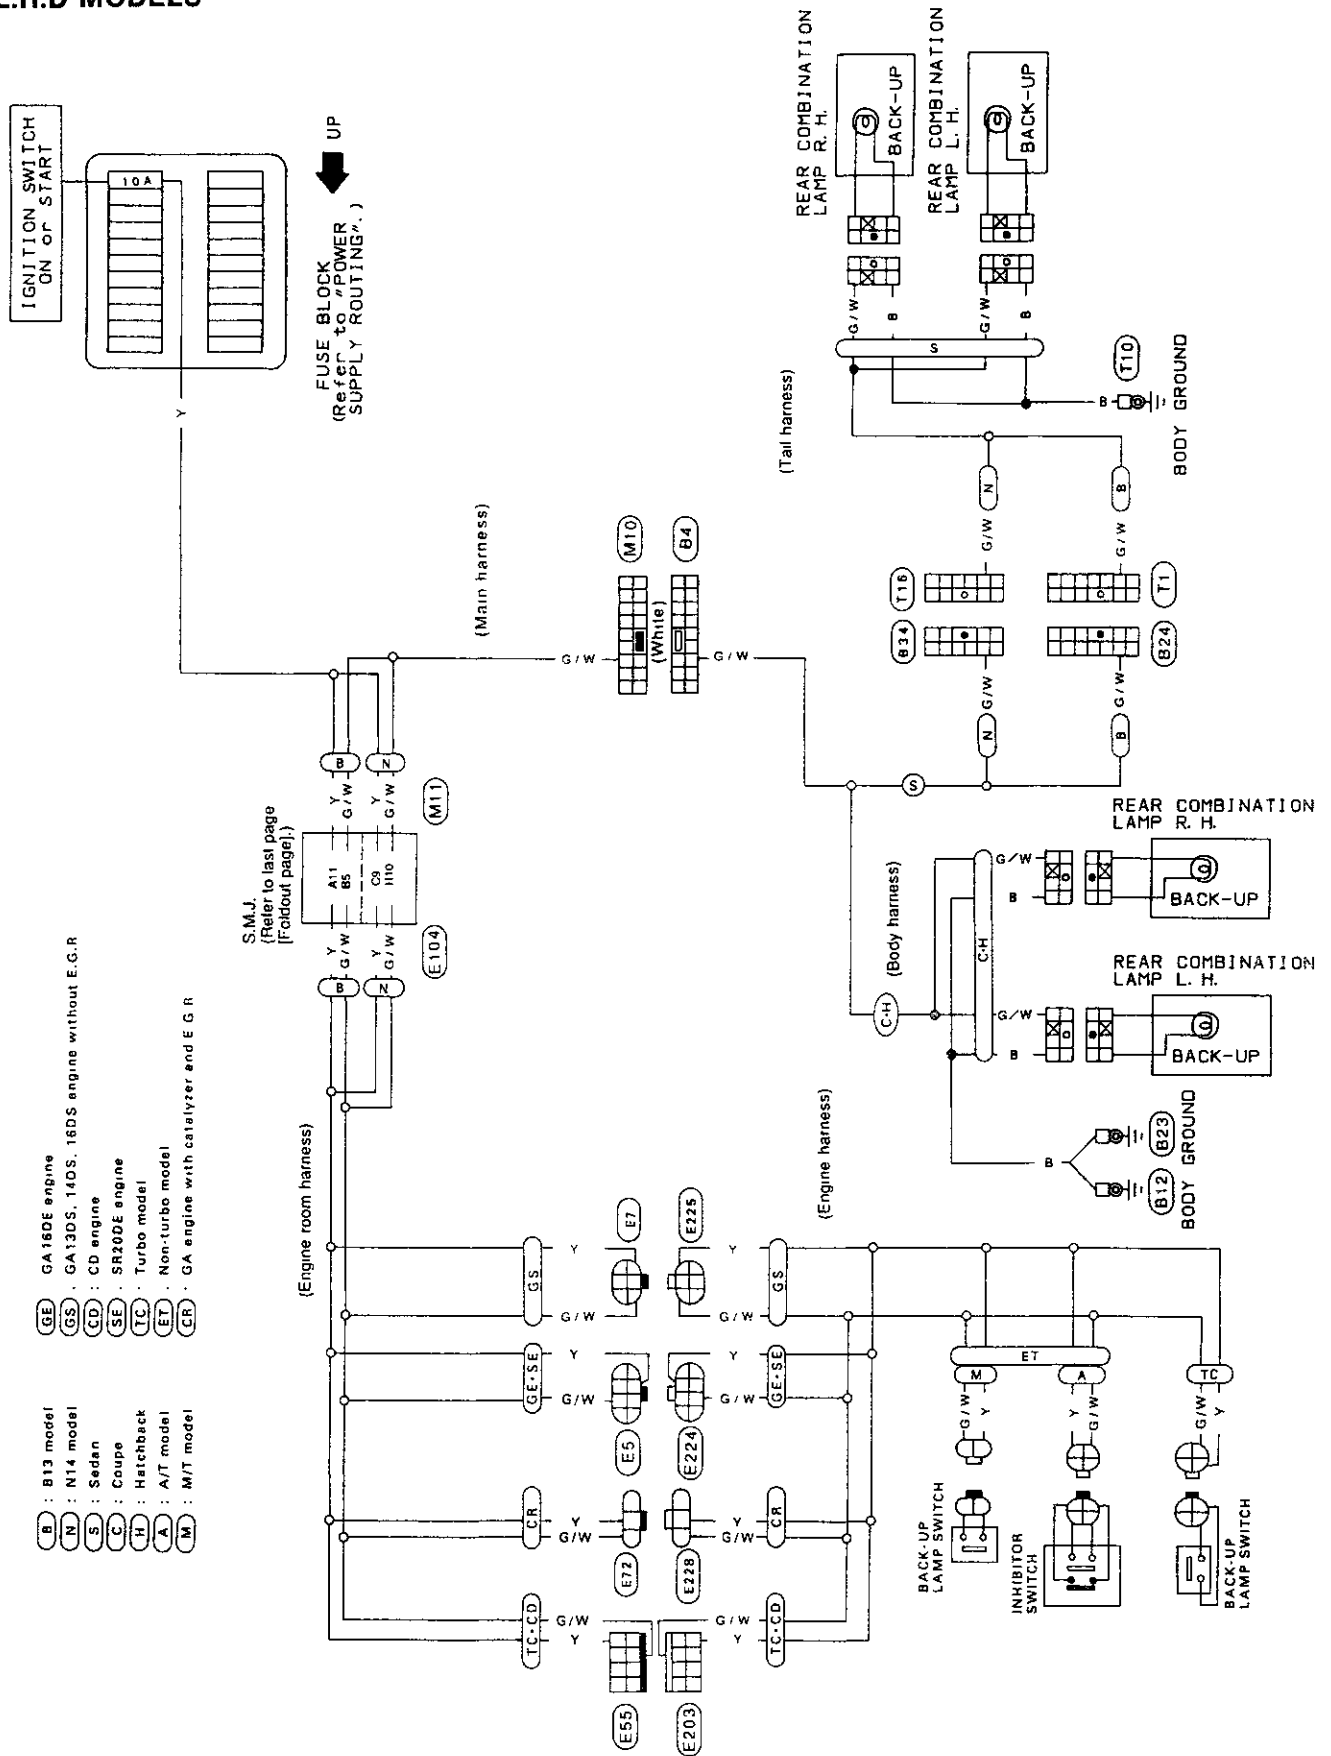

SEL283Q


Back-up Lamp/Wiring Diagram (Cont'd)

IGNITION SWITCH
ON or START

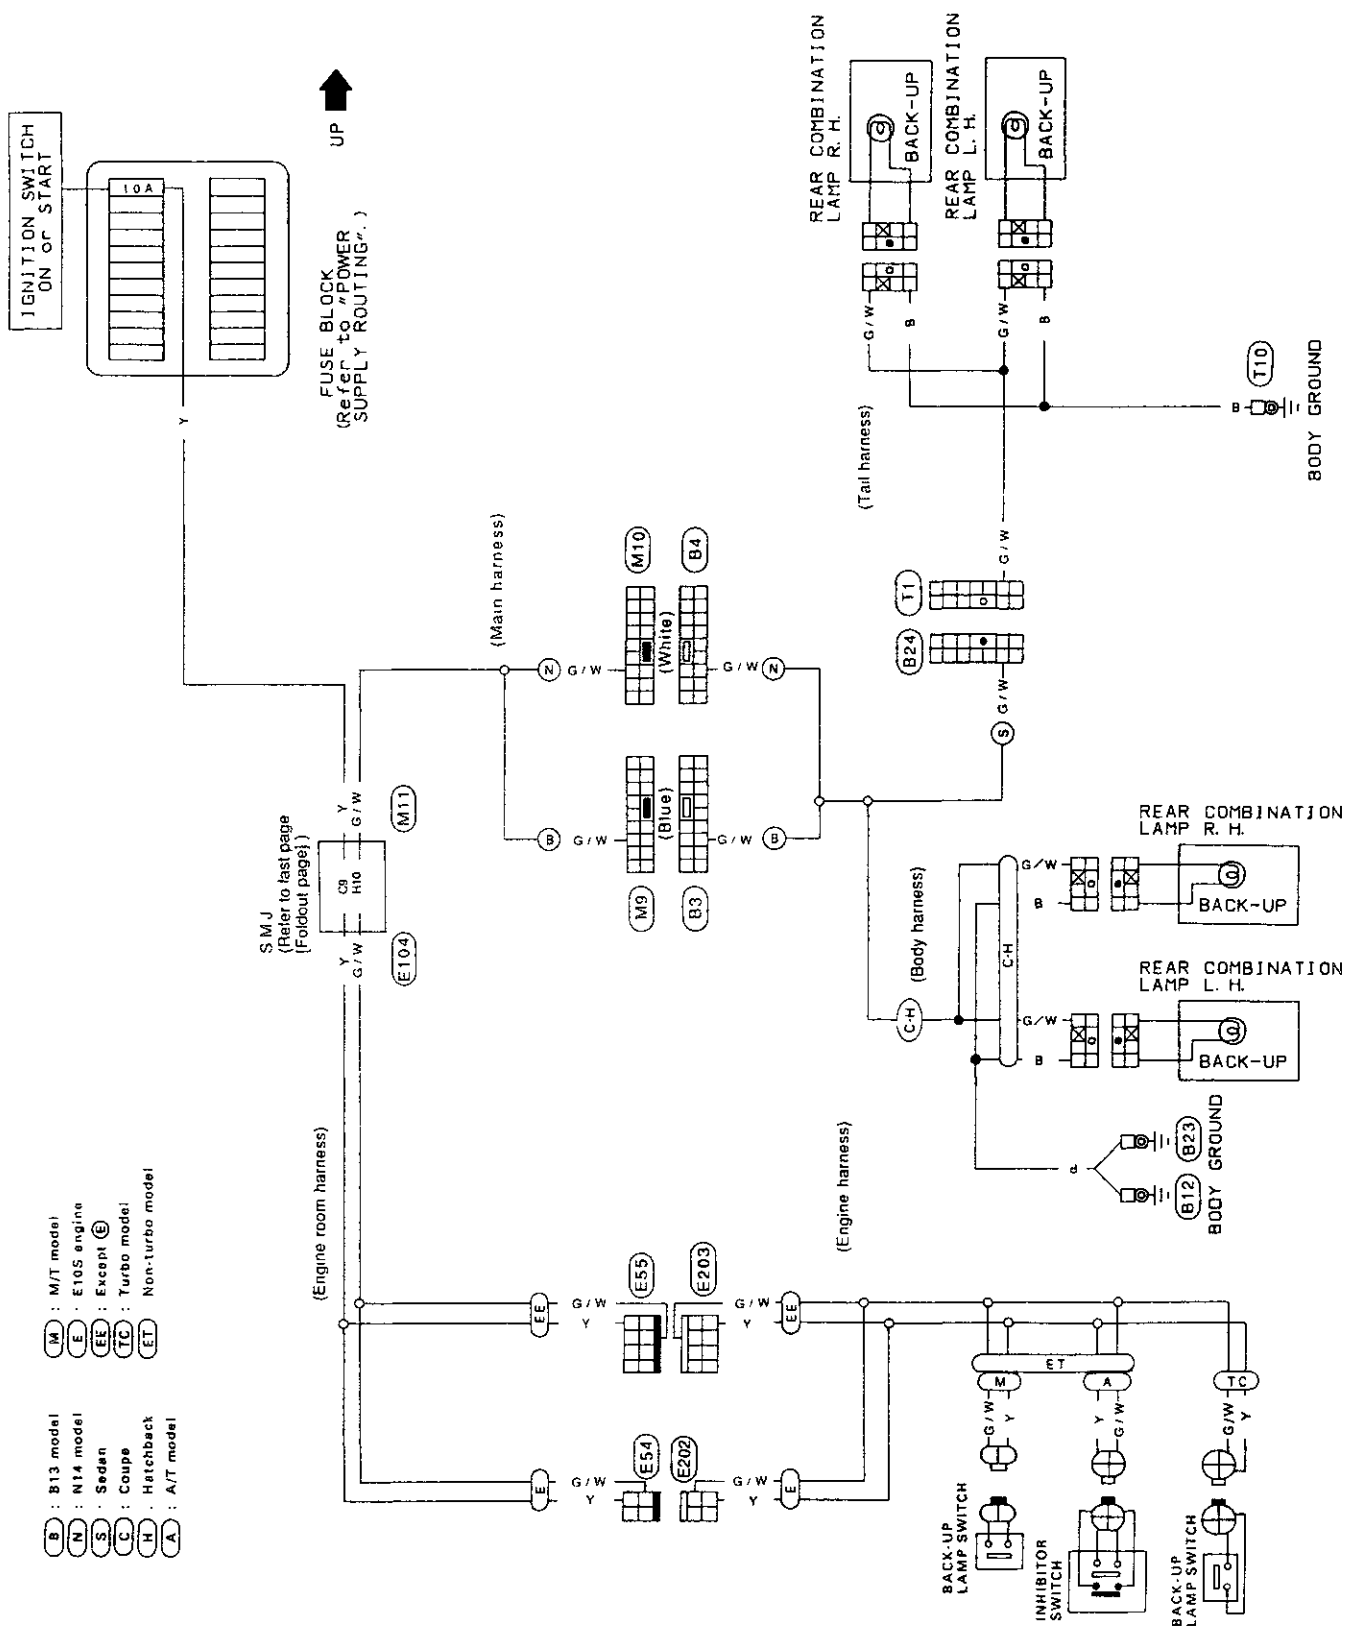

EXTERIOR LAMP

Driving Lamp/Wiring Diagram

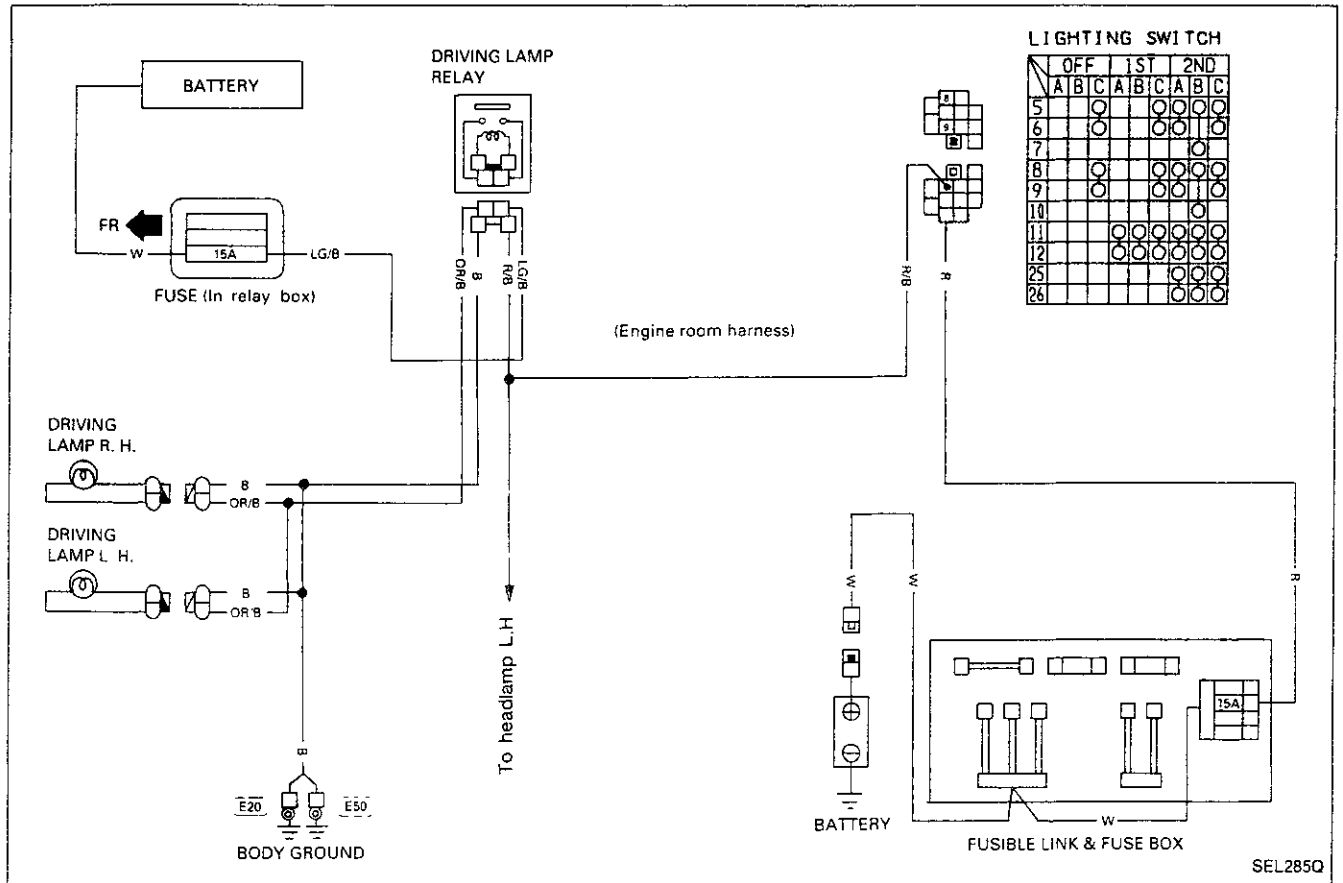

Front Fog Lamp/Wiring Diagram

BATTERY

FUSE BLOCK
(Refer to "POWER SUPPLY ROUTING")

FRONT FOG LAMP SWITCH

LIGHTING SWITCH

FRONT FOG LAMP R. H.

FRONT FOG LAMP L. H.

FRONT FOG LAMP R. H.

FRONT FOG LAMP L. H.

FRONT FOG LAMP RELAY

BODY GROUND

ENGINE ROOM HARNESS

MAIN HARNESS

Sub-harness


Wiring Diagram Details:

- Legend:**
 - UP (arrow pointing up)
 - DOWN (arrow pointing down)
 - RIGHT (arrow pointing right)
 - LEFT (arrow pointing left)
- Model Codes:**
 - B: B13 model
 - N: N14 model
 - L: L.H.D. model
 - R: R.H.D. model
- Wiring Connections:**
 - Battery:** Connected to the fuse block.
 - Fuse Block:** Contains fuses for 15A and 10A.
 - Front Fog Lamp Switch:** Controls the front fog lamps.
 - Lighting Switch:** Controls the lighting system.
 - Front Fog Lamps:** R. H. and L. H. lamps are connected to the front fog lamp relay.
 - Front Fog Lamp Relay:** Controls the front fog lamps.
 - Engine Room Harness:** Connects the battery to the main harness.
 - Main Harness:** Distributes power to the front fog lamps and other components.
 - Sub-harness:** Connects the main harness to the front fog lamps.
 - Body Ground:** Provides a common ground for the system.

EXTERIOR LAMP

Front Fog Lamp/Wiring Diagram (Cont'd)


TYPE-I FOR EUROPE (With daytime light system)

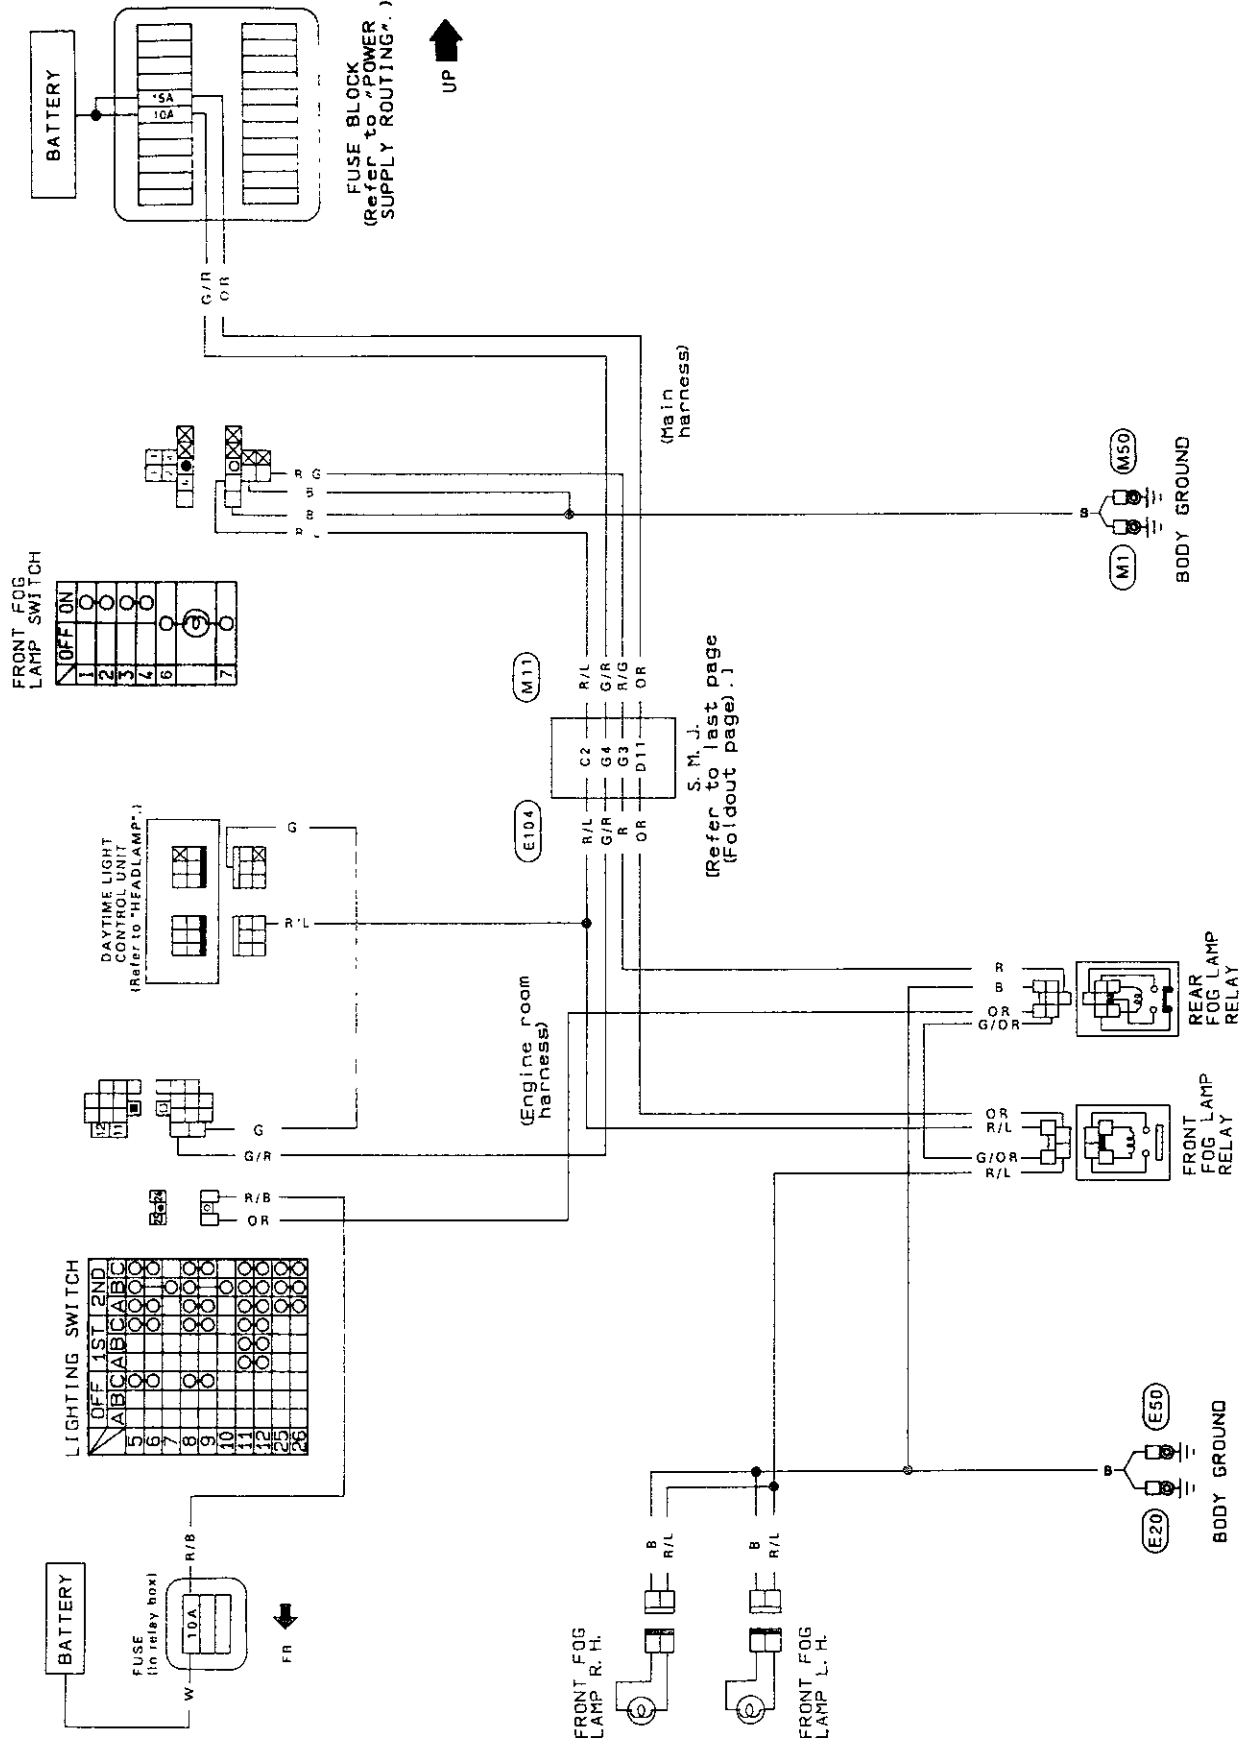

EXTERIOR LAMP

Front Fog Lamp/Wiring Diagram (Cont'd)

TYPE-I EXCEPT FOR EUROPE (B13 models)

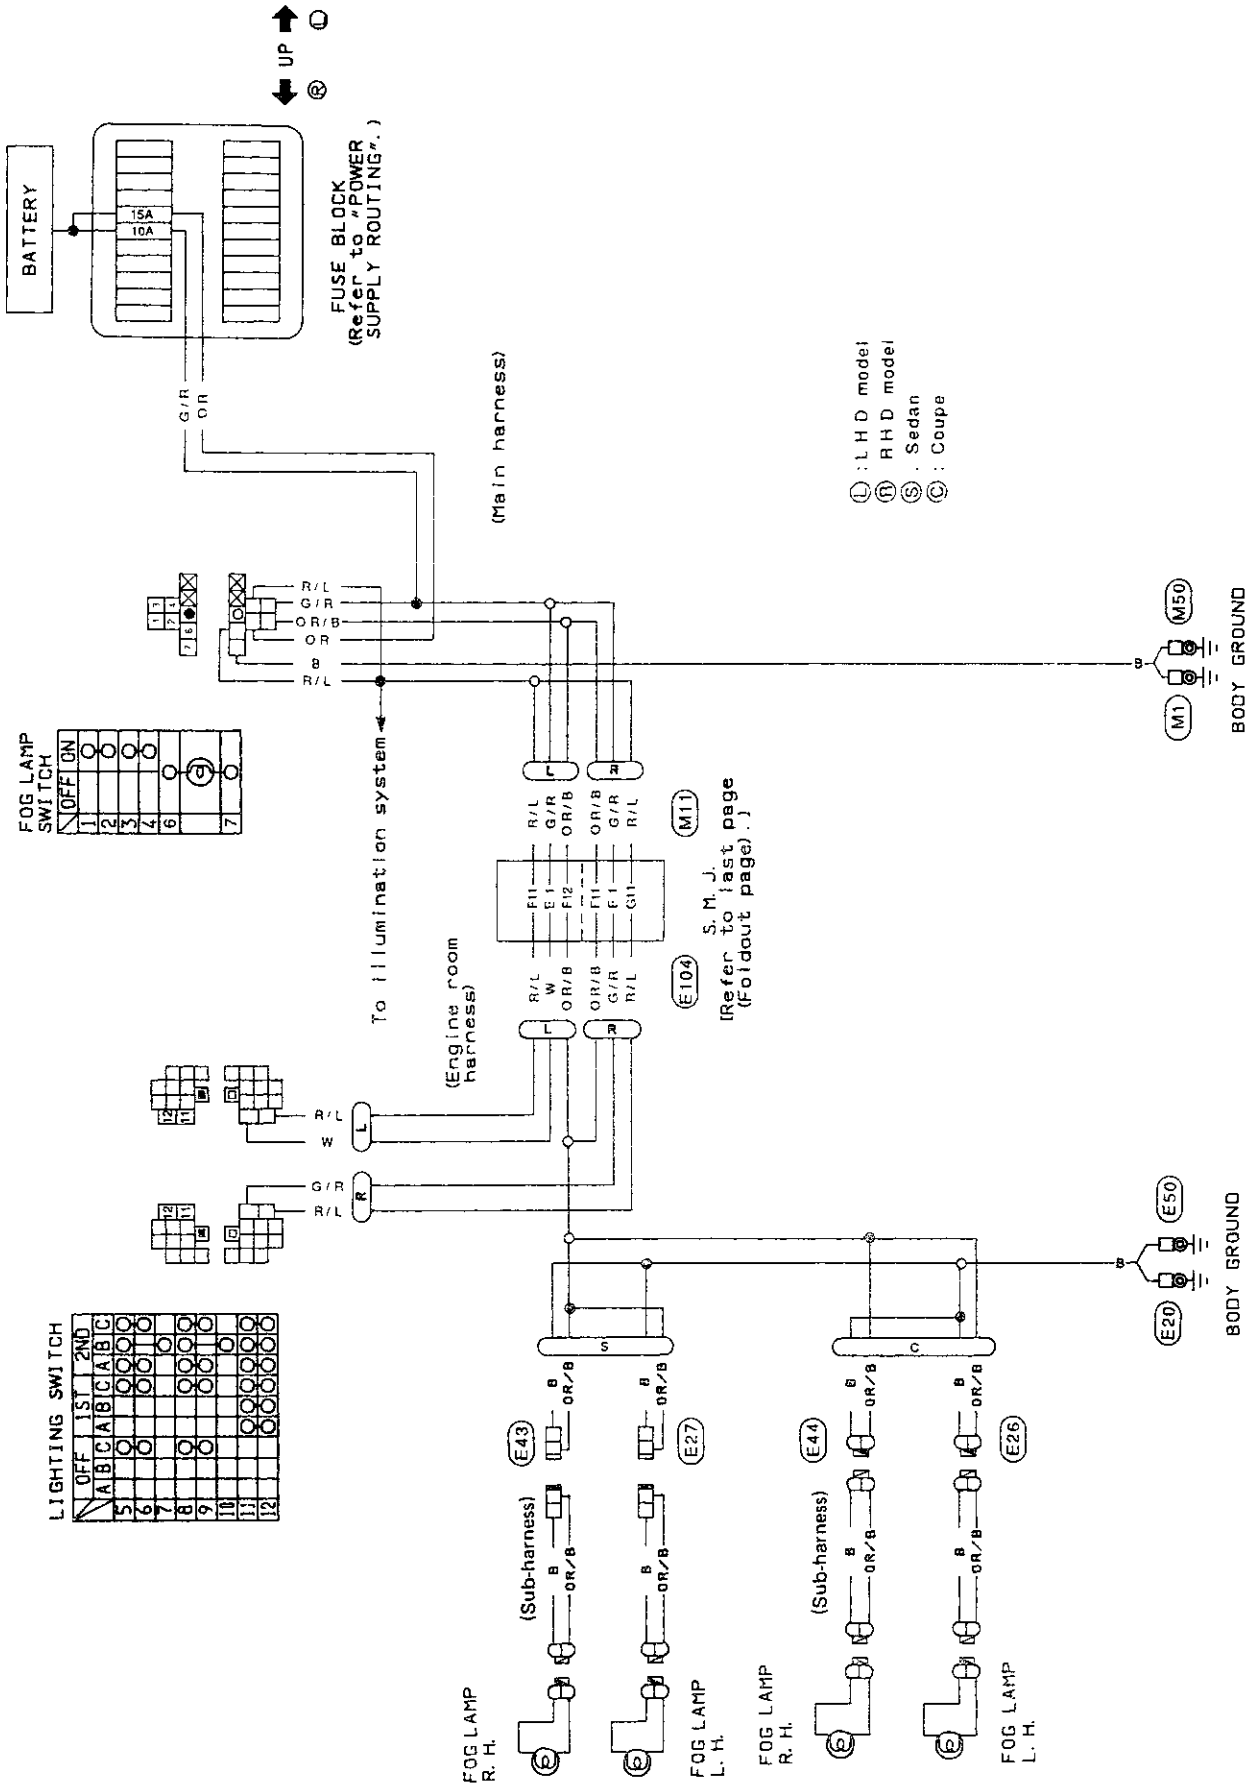

Front Fog Lamp/Wiring Diagram (Cont'd)

LIGHTING SWITCH

	OFF			1ST			2ND		
	A	B	C	A	B	C	A	B	C
5									
6									
7									
8									
9									
10									
11									
12									

FOG LAMP SWITCH

	OFF	ON
1		
2		
3		
4		
5		
6		
7		

FUSE BLOCK
(Refer to "POWER SUPPLY ROUTING".)

BATTERY

UP

FOG LAMP R.H.
(Engine room harness)

FOG LAMP L.H.

TO illumination system

MAIN HARNESS

BODY GROUND

S. M. J.
(Refer to last page (Foldout page).)

Wiring Labels: G/R, OR, R/L, B, OR/B, E104, M11, E20, E50, M1, M50.

Front Fog Lamp/Wiring Diagram (Cont'd)

FRONT FOG LAMP SWITCH

DAYTIME LIGHT CONTROL UNIT (Refer to "HEADLAMP".)

BATTERY

FUSE BLOCK (Refer to "POWER SUPPLY ROUTING".)

UP

W/G R/B OR R R/L

B G/O R B R/L

(Main harness)

(Engine room harness)

S.M.J. (Refer to last page (foldout page).)

DL With daytime light system
ED Without daytime light system

BODY GROUND

FRONT FOG LAMP R. H.

FRONT FOG LAMP L. H.

REAR FOG LAMP RELAY

FRONT FOG LAMP RELAY

BODY GROUND

Lighting Switch Legend:

OFF	1ST	2ND
A	B	C
1	2	3
4	5	6
7	8	9
10	11	12
13	14	15
16	17	18

Front Fog Lamp/Wiring Diagram (Cont'd)

Wiring Diagram for Lighting System


Legend:

- Lighting Switch:** OFF, 1ST, 2ND, 3RD, 4TH, 5TH, 6TH, 7TH, 8TH, 9TH, 10TH, 11TH, 12TH, 13TH, 14TH, 15TH, 16TH, 17TH, 18TH, 19TH, 20TH, 21ST, 22ND, 23RD, 24TH, 25TH, 26TH, 27TH, 28TH, 29TH, 30TH, 31ST, 32ND, 33RD, 34TH, 35TH, 36TH, 37TH, 38TH, 39TH, 40TH, 41ST, 42ND, 43RD, 44TH, 45TH, 46TH, 47TH, 48TH, 49TH, 50TH, 51ST, 52ND, 53RD, 54TH, 55TH, 56TH, 57TH, 58TH, 59TH, 60TH, 61ST, 62ND, 63RD, 64TH, 65TH, 66TH, 67TH, 68TH, 69TH, 70TH, 71ST, 72ND, 73RD, 74TH, 75TH, 76TH, 77TH, 78TH, 79TH, 80TH, 81ST, 82ND, 83RD, 84TH, 85TH, 86TH, 87TH, 88TH, 89TH, 90TH, 91ST, 92ND, 93RD, 94TH, 95TH, 96TH, 97TH, 98TH, 99TH, 100TH, 101ST, 102ND, 103RD, 104TH, 105TH, 106TH, 107TH, 108TH, 109TH, 110TH, 111ST, 112ND, 113RD, 114TH, 115TH, 116TH, 117TH, 118TH, 119TH, 120TH, 121ST, 122ND, 123RD, 124TH, 125TH, 126TH, 127TH, 128TH, 129TH, 130TH, 131ST, 132ND, 133RD, 134TH, 135TH, 136TH, 137TH, 138TH, 139TH, 140TH, 141ST, 142ND, 143RD, 144TH, 145TH, 146TH, 147TH, 148TH, 149TH, 150TH, 151ST, 152ND, 153RD, 154TH, 155TH, 156TH, 157TH, 158TH, 159TH, 160TH, 161ST, 162ND, 163RD, 164TH, 165TH, 166TH, 167TH, 168TH, 169TH, 170TH, 171ST, 172ND, 173RD, 174TH, 175TH, 176TH, 177TH, 178TH, 179TH, 180TH, 181ST, 182ND, 183RD, 184TH, 185TH, 186TH, 187TH, 188TH, 189TH, 190TH, 191ST, 192ND, 193RD, 194TH, 195TH, 196TH, 197TH, 198TH, 199TH, 200TH, 201ST, 202ND, 203RD, 204TH, 205TH, 206TH, 207TH, 208TH, 209TH, 210TH, 211ST, 212ND, 213RD, 214TH, 215TH, 216TH, 217TH, 218TH, 219TH, 220TH, 221ST, 222ND, 223RD, 224TH, 225TH, 226TH, 227TH, 228TH, 229TH, 230TH, 231ST, 232ND, 233RD, 234TH, 235TH, 236TH, 237TH, 238TH, 239TH, 240TH, 241ST, 242ND, 243RD, 244TH, 245TH, 246TH, 247TH, 248TH, 249TH, 250TH, 251ST, 252ND, 253RD, 254TH, 255TH, 256TH, 257TH, 258TH, 259TH, 260TH, 261ST, 262ND, 263RD, 264TH, 265TH, 266TH, 267TH, 268TH, 269TH, 270TH, 271ST, 272ND, 273RD, 274TH, 275TH, 276TH, 277TH, 278TH, 279TH, 280TH, 281ST, 282ND, 283RD, 284TH, 285TH, 286TH, 287TH, 288TH, 289TH, 290TH, 291ST, 292ND, 293RD, 294TH, 295TH, 296TH, 297TH, 298TH, 299TH, 300TH, 301ST, 302ND, 303RD, 304TH, 305TH, 306TH, 307TH, 308TH, 309TH, 310TH, 311ST, 312ND, 313RD, 314TH, 315TH, 316TH, 317TH, 318TH, 319TH, 320TH, 321ST, 322ND, 323RD, 324TH, 325TH, 326TH, 327TH, 328TH, 329TH, 330TH, 331ST, 332ND, 333RD, 334TH, 335TH, 336TH, 337TH, 338TH, 339TH, 340TH, 341ST, 342ND, 343RD, 344TH, 345TH, 346TH, 347TH, 348TH, 349TH, 350TH, 351ST, 352ND, 353RD, 354TH, 355TH, 356TH, 357TH, 358TH, 359TH, 360TH, 361ST, 362ND, 363RD, 364TH, 365TH, 366TH, 367TH, 368TH, 369TH, 370TH, 371ST, 372ND, 373RD, 374TH, 375TH, 376TH, 377TH, 378TH, 379TH, 380TH, 381ST, 382ND, 383RD, 384TH, 385TH, 386TH, 387TH, 388TH, 389TH, 390TH, 391ST, 392ND, 393RD, 394TH, 395TH, 396TH, 397TH, 398TH, 399TH, 400TH, 401ST, 402ND, 403RD, 404TH, 405TH, 406TH, 407TH, 408TH, 409TH, 410TH, 411ST, 412ND, 413RD, 414TH, 415TH, 416TH, 417TH, 418TH, 419TH, 420TH, 421ST, 422ND, 423RD, 424TH, 425TH, 426TH, 427TH, 428TH, 429TH, 430TH, 431ST, 432ND, 433RD, 434TH, 435TH, 436TH, 437TH, 438TH, 439TH, 440TH, 441ST, 442ND, 443RD, 444TH, 445TH, 446TH, 447TH, 448TH, 449TH, 450TH, 451ST, 452ND, 453RD, 454TH, 455TH, 456TH, 457TH, 458TH, 459TH, 460TH, 461ST, 462ND, 463RD, 464TH, 465TH, 466TH, 467TH, 468TH, 469TH, 470TH, 471ST, 472ND, 473RD, 474TH, 475TH, 476TH, 477TH, 478TH, 479TH, 480TH, 481ST, 482ND, 483RD, 484TH, 485TH, 486TH, 487TH, 488TH, 489TH, 490TH, 491ST, 492ND, 493RD, 494TH, 495TH, 496TH, 497TH, 498TH, 499TH, 500TH, 501ST, 502ND, 503RD, 504TH, 505TH, 506TH, 507TH, 508TH, 509TH, 510TH, 511ST, 512ND, 513RD, 514TH, 515TH, 516TH, 517TH, 518TH, 519TH, 520TH, 521ST, 522ND, 523RD, 524TH, 525TH, 526TH, 527TH, 528TH, 529TH, 530TH, 531ST, 532ND, 533RD, 534TH, 535TH, 536TH, 537TH, 538TH, 539TH, 540TH, 541ST, 542ND, 543RD, 544TH, 545TH, 546TH, 547TH, 548TH, 549TH, 550TH, 551ST, 552ND, 553RD, 554TH, 555TH, 556TH, 557TH, 558TH, 559TH, 560TH, 561ST, 562ND, 563RD, 564TH, 565TH, 566TH, 567TH, 568TH, 569TH, 570TH, 571ST, 572ND, 573RD, 574TH, 575TH, 576TH, 577TH, 578TH, 579TH, 580TH, 581ST, 582ND, 583RD, 584TH, 585TH, 586TH, 587TH, 588TH, 589TH, 590TH, 591ST, 592ND, 593RD, 594TH, 595TH, 596TH, 597TH, 598TH, 599TH, 600TH, 601ST, 602ND, 603RD, 604TH, 605TH, 606TH, 607TH, 608TH, 609TH, 610TH, 611ST, 612ND, 613RD, 614TH, 615TH, 616TH, 617TH, 618TH, 619TH, 620TH, 621ST, 622ND, 623RD, 624TH, 625TH, 626TH, 627TH, 628TH, 629TH, 630TH, 631ST, 632ND, 633RD, 634TH, 635TH, 636TH, 637TH, 638TH, 639TH, 640TH, 641ST, 642ND, 643RD, 644TH, 645TH, 646TH, 647TH, 648TH, 649TH, 650TH, 651ST, 652ND, 653RD, 654TH, 655TH, 656TH, 657TH, 658TH, 659TH, 660TH, 661ST, 662ND, 663RD, 664TH, 665TH, 666TH, 667TH, 668TH, 669TH, 670TH, 671ST, 672ND, 673RD, 674TH, 675TH, 676TH, 677TH, 678TH, 679TH, 680TH, 681ST, 682ND, 683RD, 684TH, 685TH, 686TH,

EXTERIOR LAMP


Rear Fog Lamp/Wiring Diagram

B13

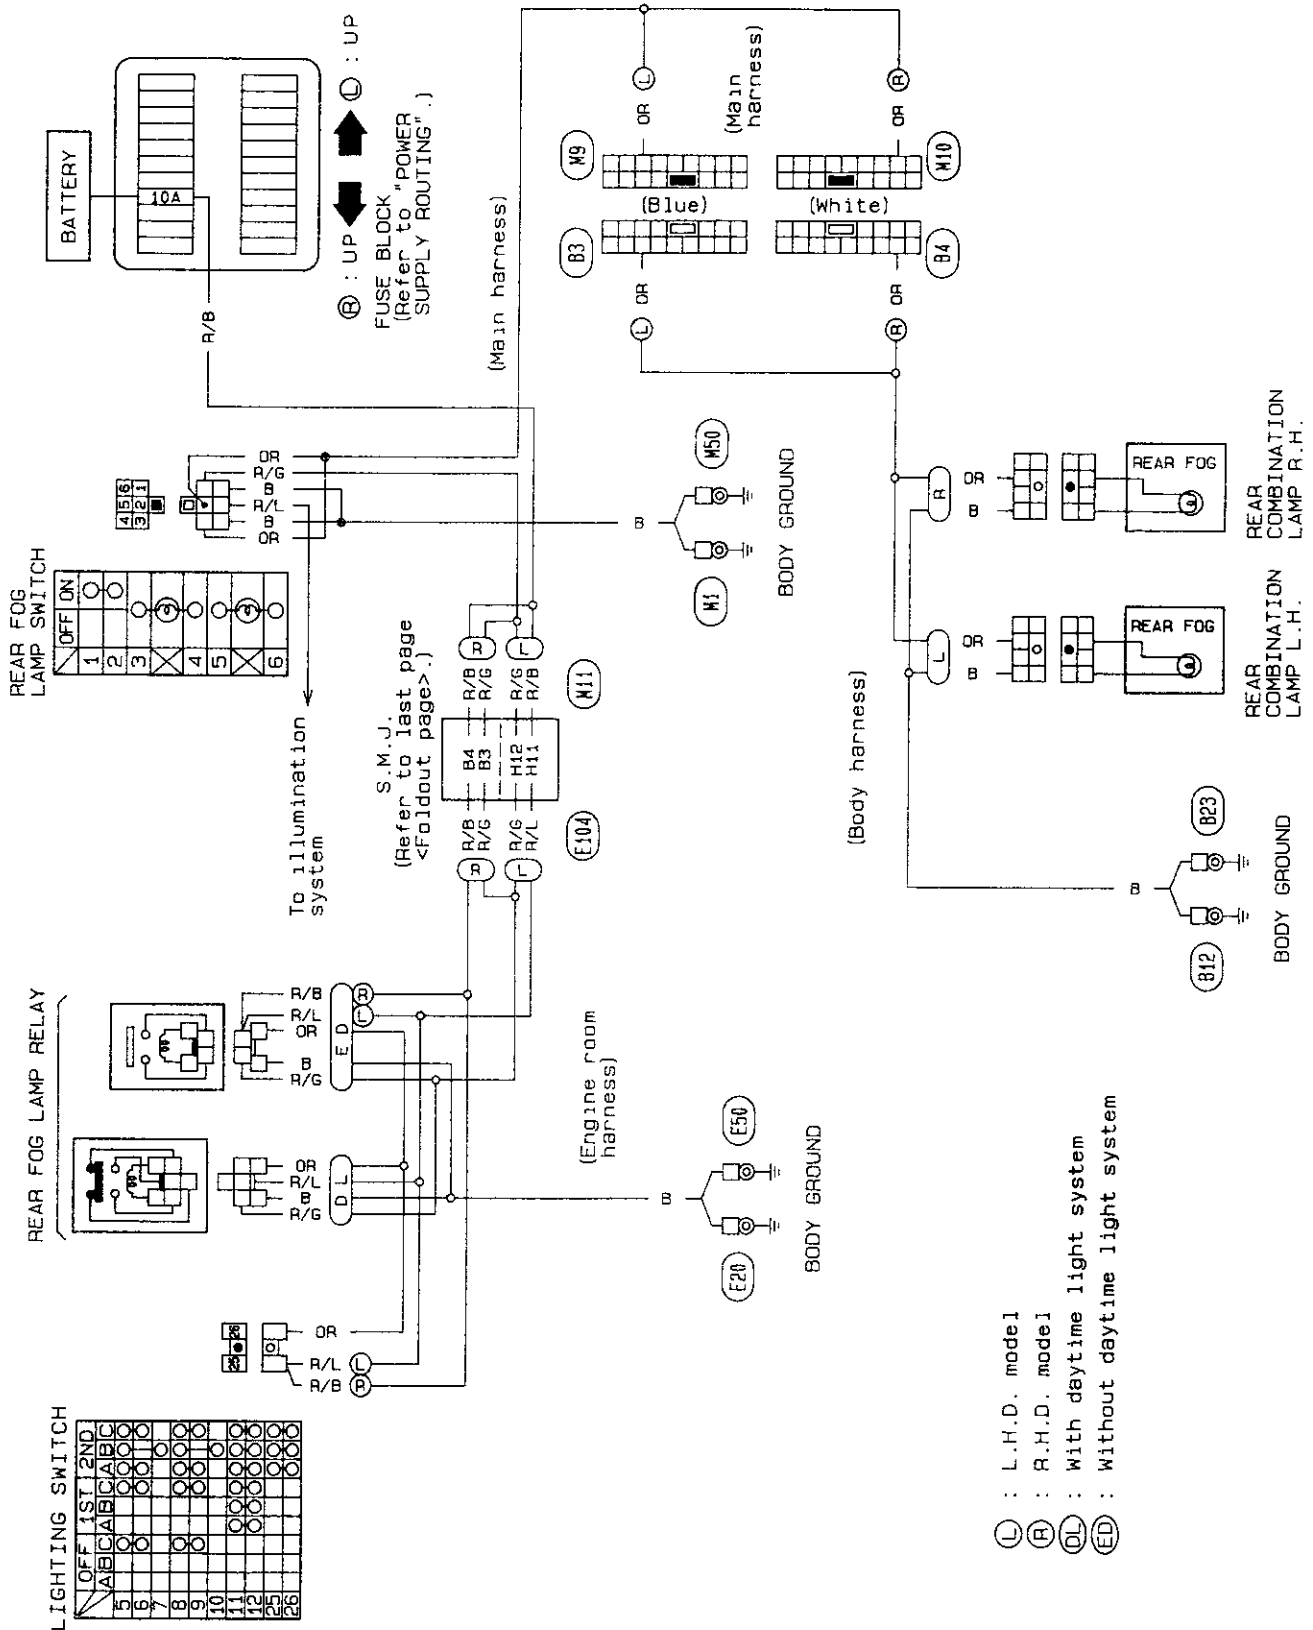

Rear Fog Lamp/Wiring Diagram (Cont'd)

N14

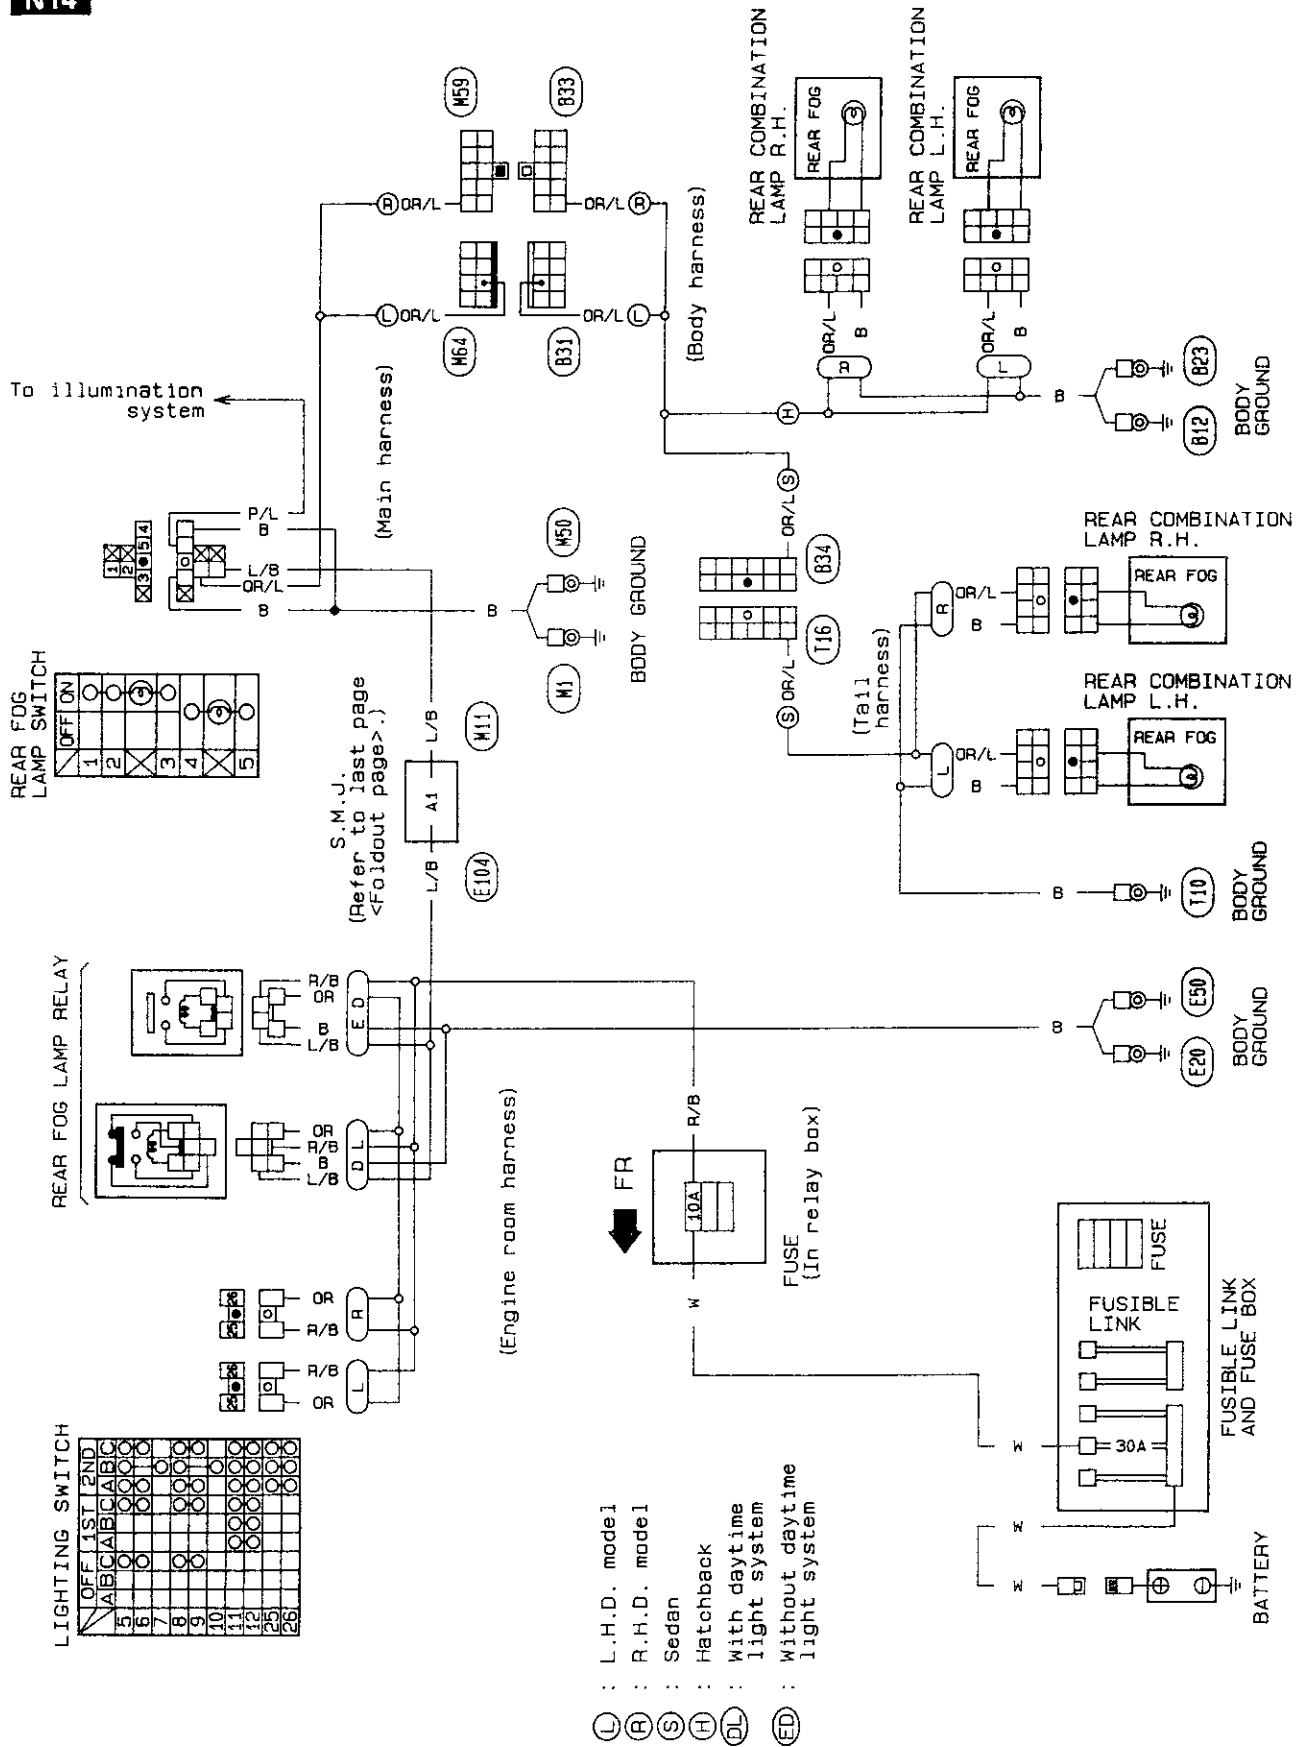

Turn Signal and Hazard Warning Lamps/Wiring Diagram

Wiring Diagram

This diagram illustrates the electrical system for the vehicle, showing the connections between various components and their respective fuses.

Legend:

- (C) : Coupe
- (S) : Sedan
- (DM) : Digital meter
- (NT) : Needle meter with tachometer
- (WT) : Needle meter without tachometer
- (ME) : For Middle East
- (EM) : Except ME

Components and Connections:

- IGNITION SWITCH ON OF START BATTERY:** Connected to the main power source.
- FUSE BLOCK (Refer to "POWER SUPPLY ROUTING"):** Contains fuses for various circuits.
- COMBINATION METER:** Includes gauges for fuel level, engine temperature, oil pressure, and battery charge.
- HAZARD SWITCH:** Controls the hazard warning lights.
- TURN SIGNAL LAMP R. H. / L. H.:** Right and Left Hand Turn Signal Lamps.
- FRONT COMBINATION LAMP R. H. / L. H.:** Front Right and Left Hand Combination Lamps.
- REAR COMBINATION LAMP R. H. / L. H.:** Rear Right and Left Hand Combination Lamps.
- SIDE TURN SIGNAL LAMP R. H. / L. H.:** Side Turn Signal Lamps.
- TAIL LIGHTS:** Located at the rear of the vehicle.
- BRAKE LIGHTS:** Controlled by the brake pedal.
- HORN:** Used for signaling.
- WIPER MOTOR:** Operates the windshield wipers.
- INTERIOR LIGHTS:** Provide illumination inside the cabin.
- EXTERIOR LIGHTS:** Provide illumination outside the vehicle.

The diagram shows the flow of electricity from the battery through various switches and fuses to the lamps and other electrical components. Wire colors are indicated throughout the diagram to identify specific circuits.

Turn Signal and Hazard Warning Lamps/Wiring Diagram (Cont'd)

[illegible]

Turn Signal and Hazard Warning Lamps/Wiring Diagram (Cont'd)


S₁ : Sedan
H₁ : Hatchback
NT : Needle meter with tachometer
WT : Needle meter without tachometer
TC : Turbo model
ET : Non-turbo model



Turn Signal and Hazard Warning Lamps/Wiring Diagram (Cont'd)

[illegible]

EXTERIOR LAMP

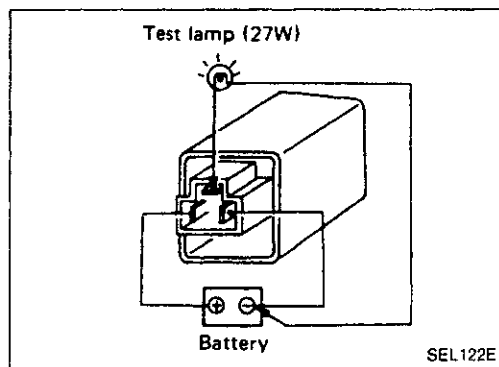

Combination Flasher Unit Check


- Before checking, ensure that bulbs meet specifications.
- Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.

Bulb Specifications

	Wattage (12 volt)	
	Except Sedan for Middle East	Sedan for Middle East
Headlamp (Semi-sealed beam)		
High/Low	60/55	65/45
Driving lamp	55	—
Front fog lamp		
Sedan	35	—
Coupe and Hatchback	55	55
Front turn signal lamp	21	—
Front clearance lamp	5	—
Front combination lamp		
Turn/Clearance	—	27/8
Front side marker lamp	—	3.8
Side turn signal lamp	5	—
Rear combination lamp		
Turn signal	21	27
Stop/Tail	21/5	27/8
Back-up	21	27
Rear fog	21	—
License plate lamp		
B13 model for Europe	10	—
B13 model for Middle East	7.5	5
B13 model except for above	5	—
N14 model	5	—
Rear side marker lamp	—	3.8
High-mounted stop lamp		
Sedan	12	12
Coupe	18	—
Interior lamp	10	10
Trunk room lamp (Sedan)	3.4	3.4
Luggage room lamp		
Coupe and 5-door Hatchback	5	—
3-door Hatchback	3.4	—

Illumination/Wiring Diagram


L.H.D. MODELS (Type-I)

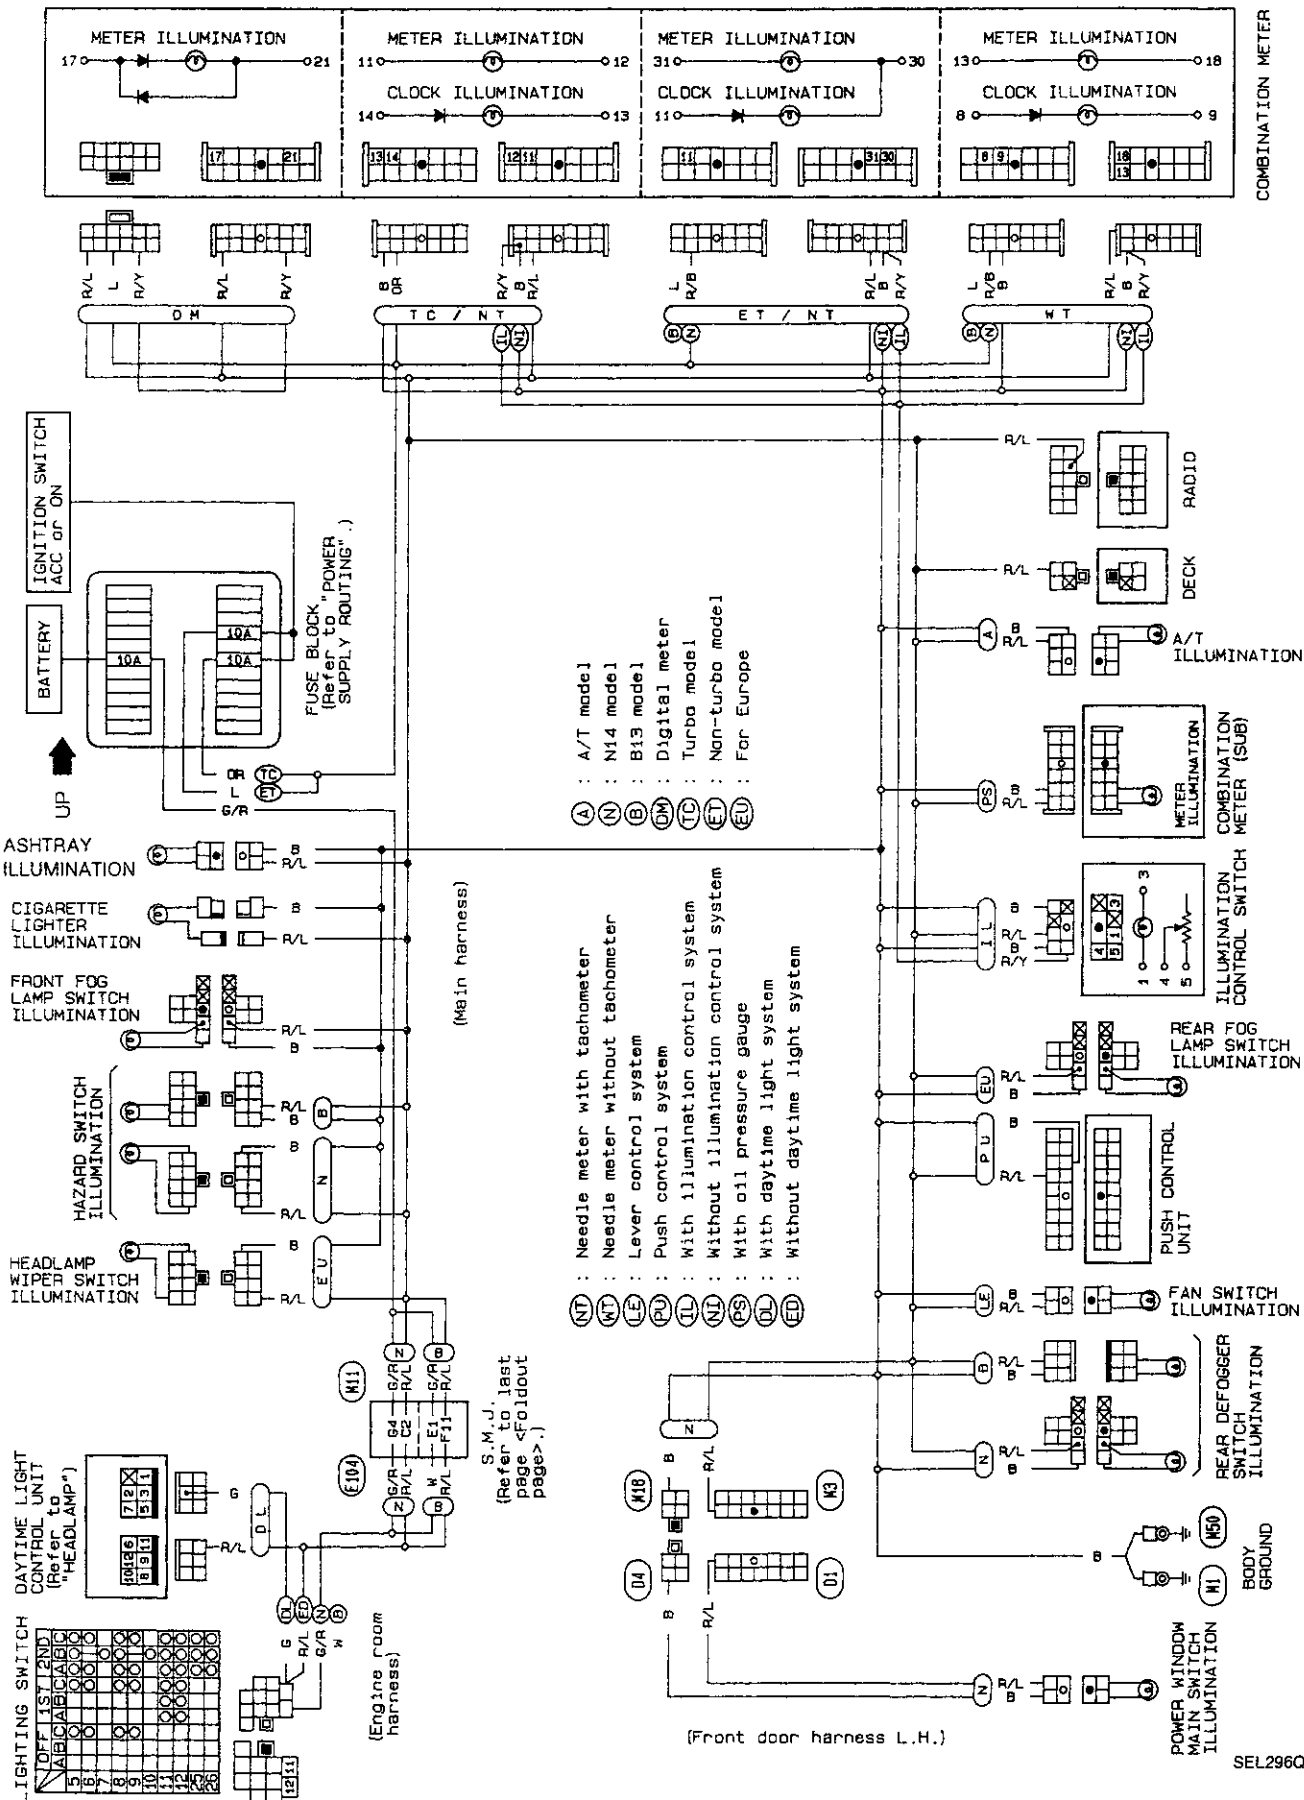

INTERIOR LAMP

Illumination/Wiring Diagram (Cont'd)

L.H.D. MODELS (Type-II)

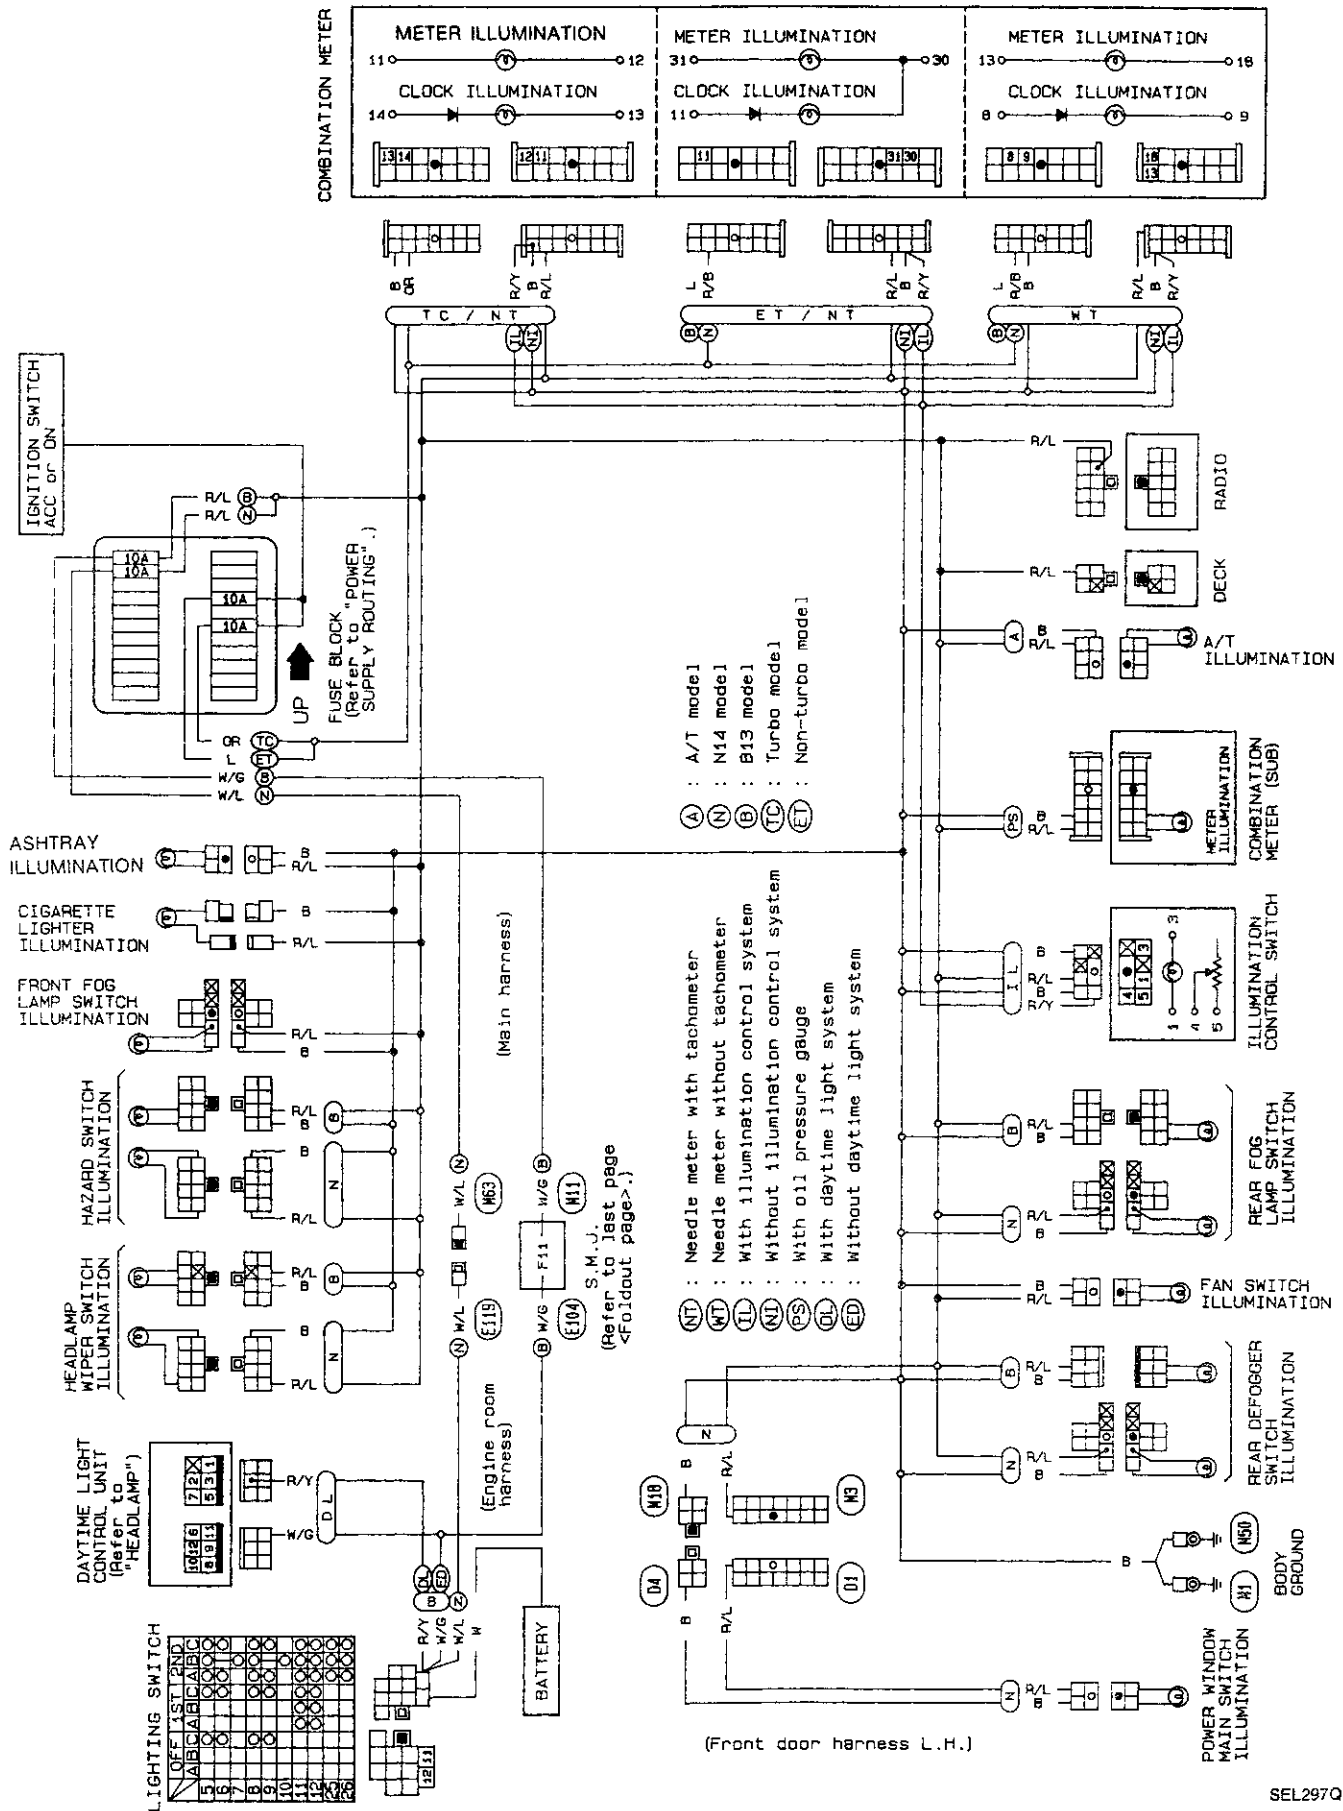

Illumination/Wiring Diagram (Cont'd)

[illegible]

Interior, Trunk Room and Luggage Room Lamps/Wiring Diagram

BATTERY

UP

(Main harness)

(Room lamp harness)

INTERIOR LAMP

OFF

ON

DOOR

FUSE BLOCK
(Refer to "POWER SUPPLY ROUTING")

(Body harness)

(Tail harness)

DIODE

(Rear R.H.)

(Rear L.H.)

(Front passenger side)

(Front driver's side)

TRUNK ROOM LAMP

TRUNK ROOM LAMP SWITCH

DOOR SWITCH

LEGEND:


- Ⓛ L.H.D model
- Ⓡ R.H.D model

EL-106

INTERIOR LAMP

Interior, Trunk Room and Luggage Room Lamps/Wiring Diagram (Cont'd)

B13 COUPE

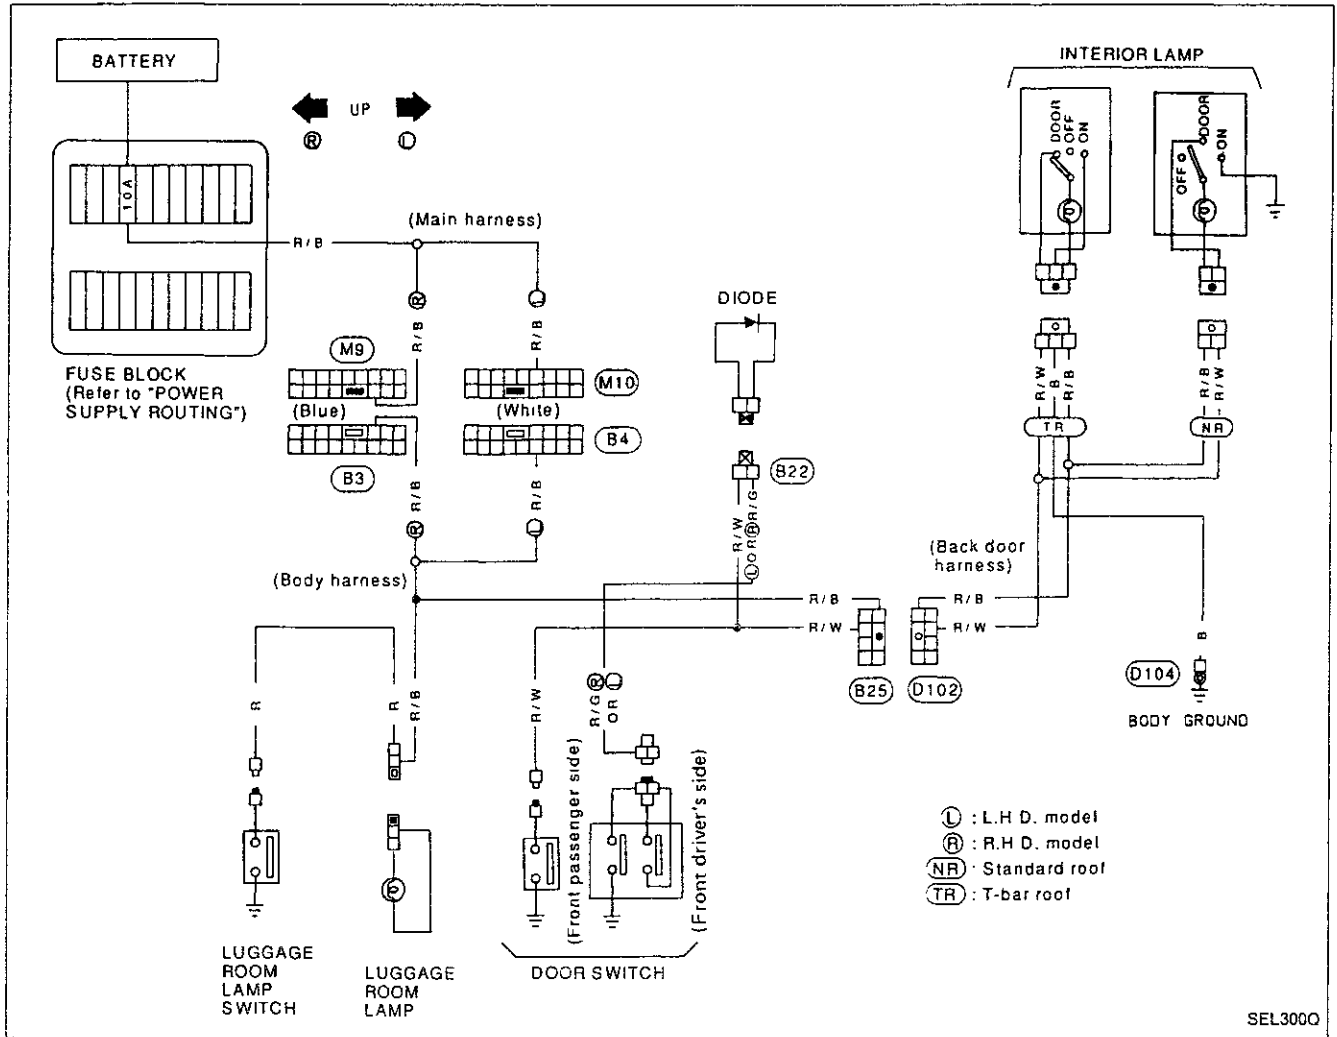


SEL3000

INTERIOR LAMP



Interior, Trunk Room and Luggage Room Lamps/Wiring Diagram (Cont'd)

N14 HATCHBACK

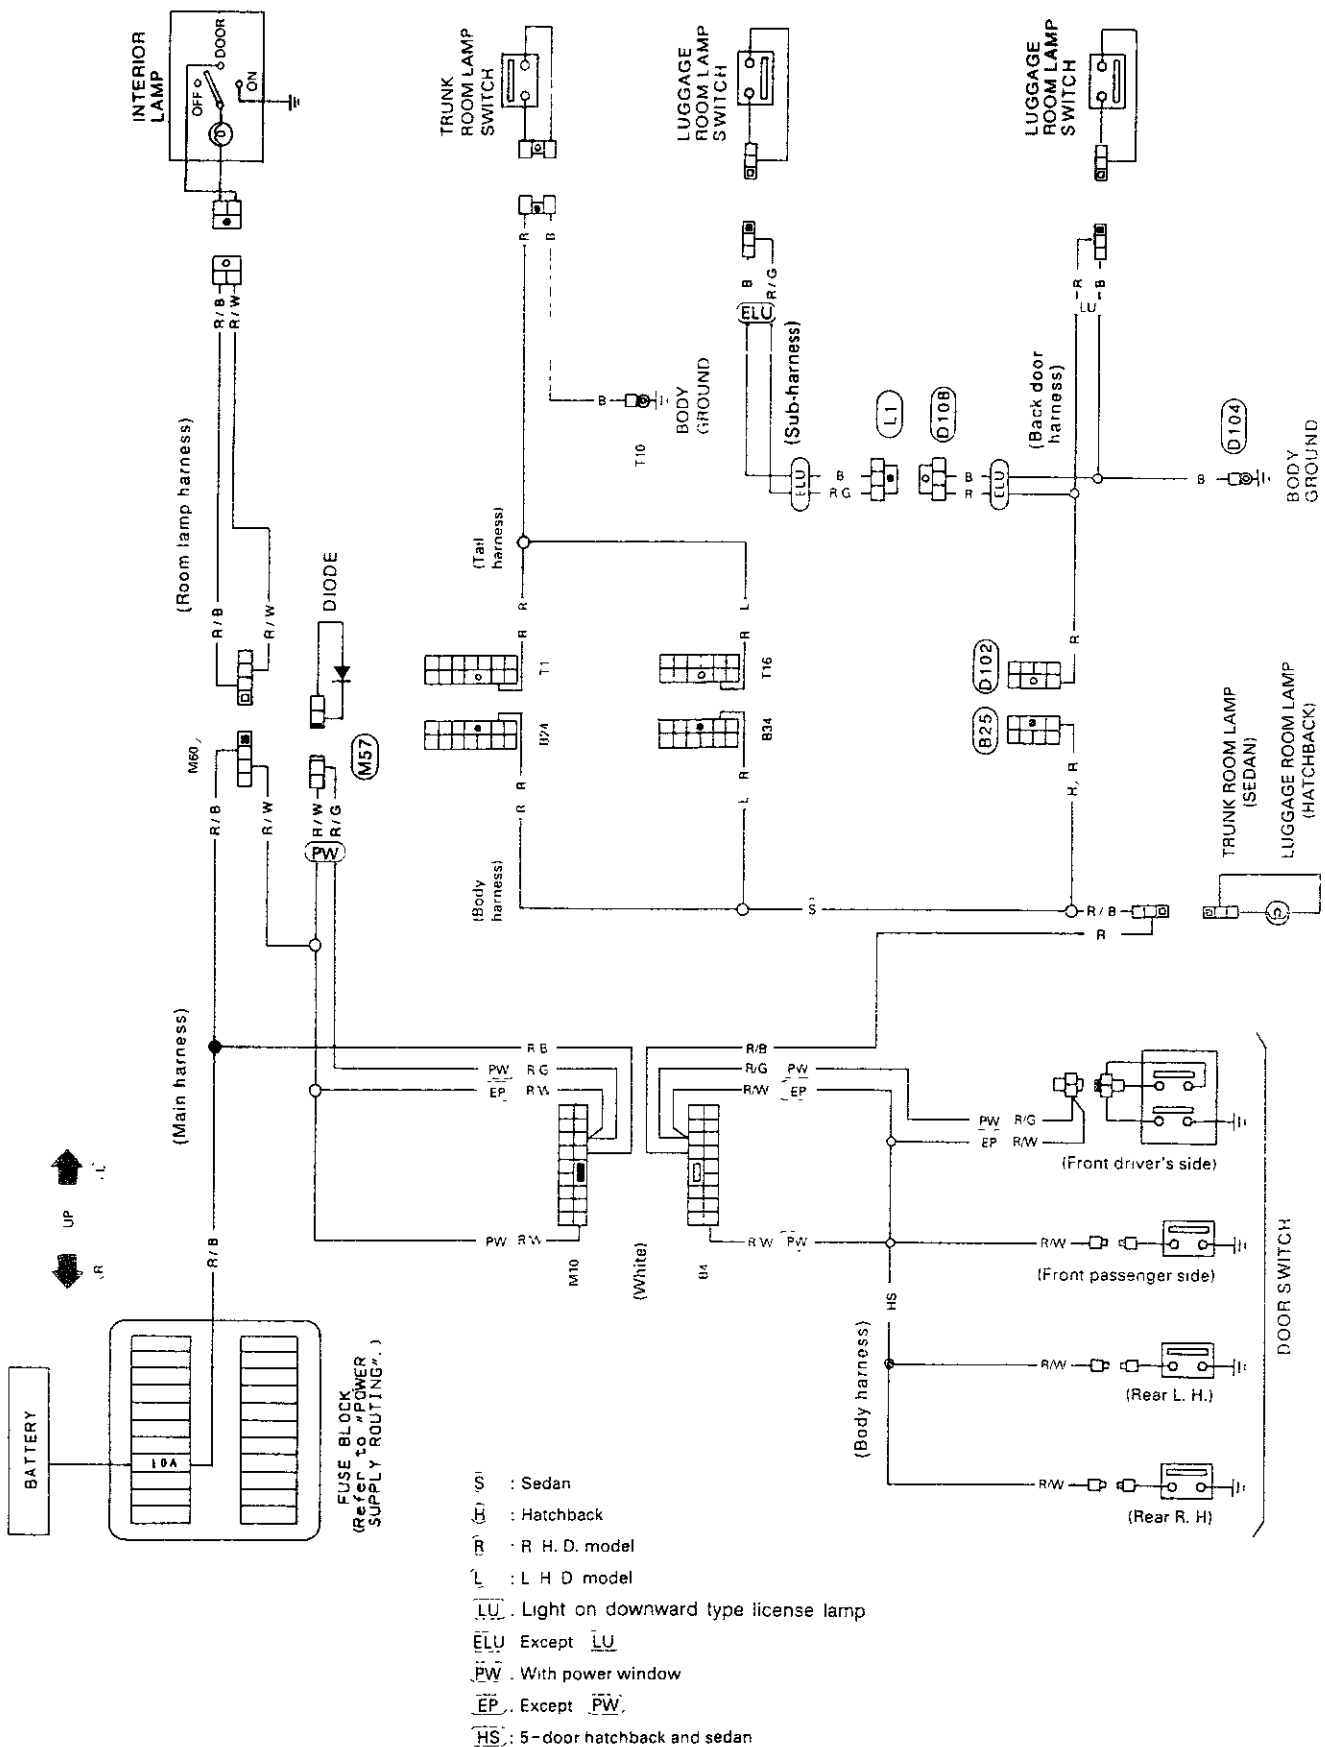

Combination Meter


WITH TACHOMETER (Turbo models)

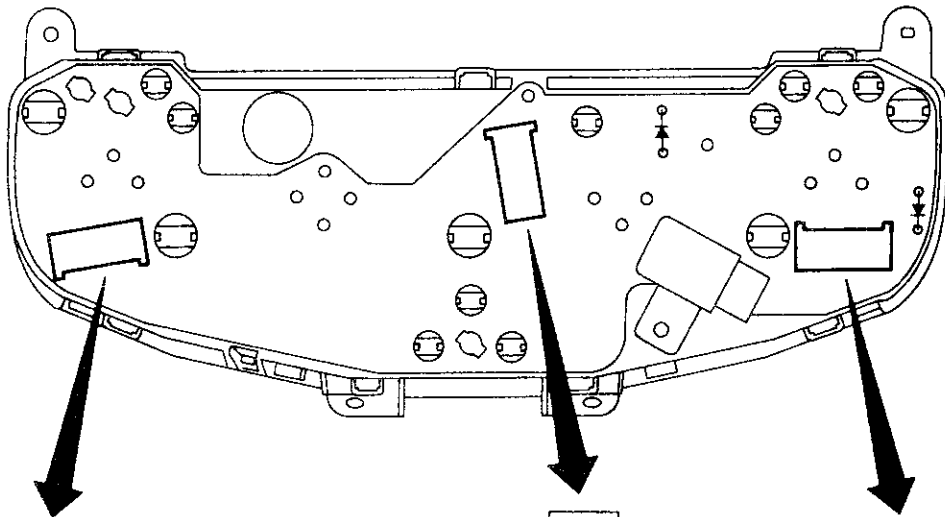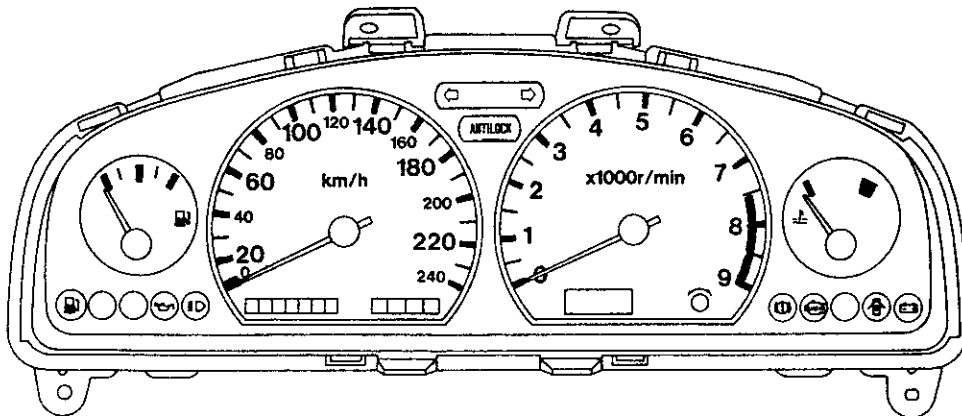

		3	4	5	6
7	9	10	11	12	

19	13
20	14
21	15
	16
23	17


25	26	27	28		
31	32	34	35	36	

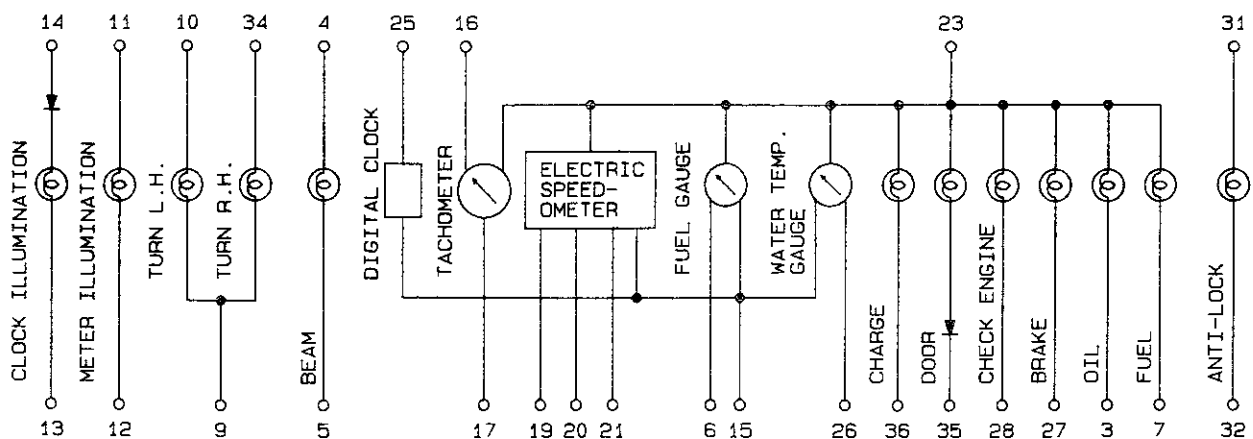


METER AND GAUGES — Needle Type —

Combination Meter (Cont'd)

WITH TACHOMETER (L.H.D. non-turbo models)

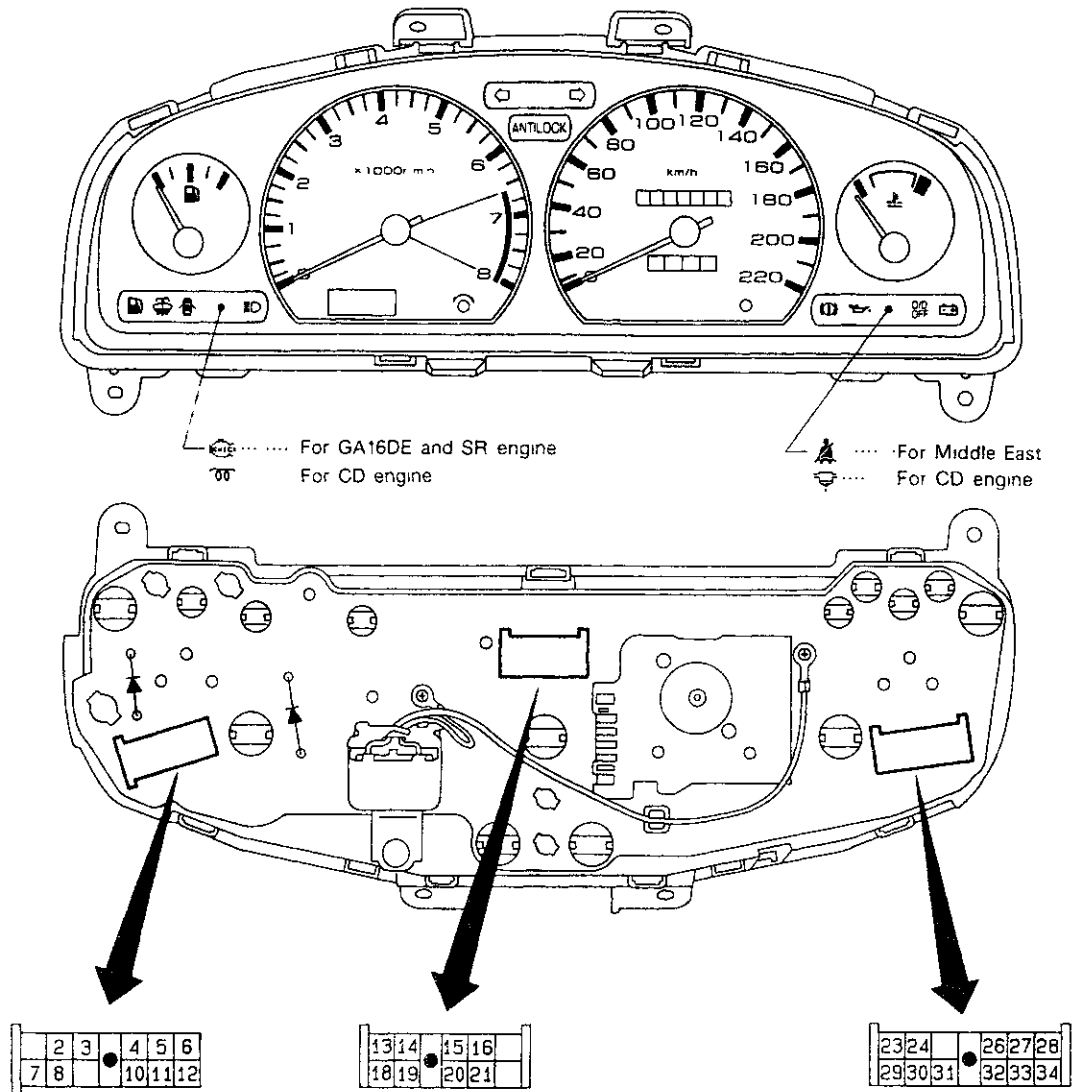

(A) : A/T model (ME) : For Middle East
(E) : With E.C.C.S. (CD) : CD engine


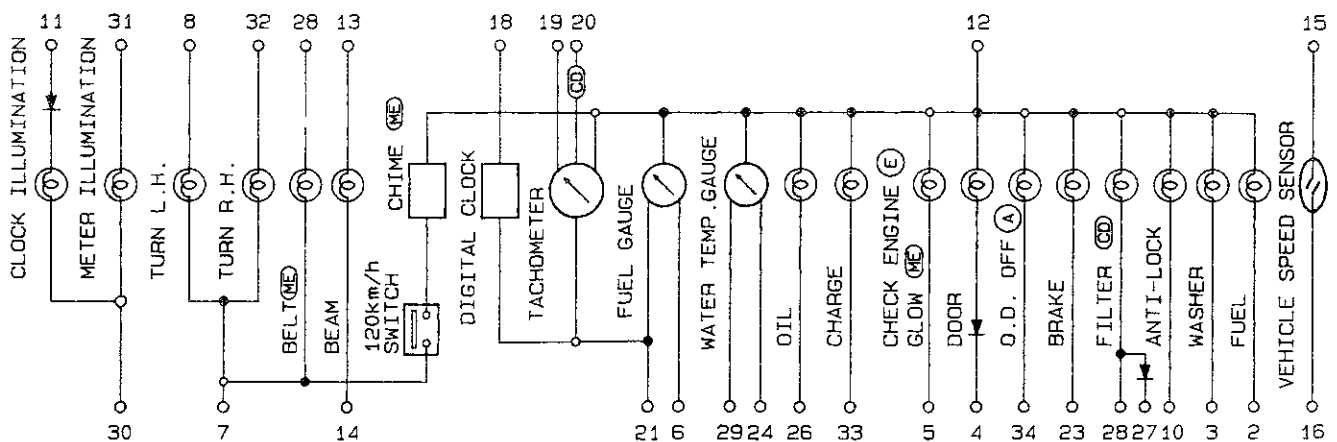


SEL303Q

METER AND GAUGES — Needle Type —

Combination Meter (Cont'd)

WITH TACHOMETER (R.H.D. non-turbo models)

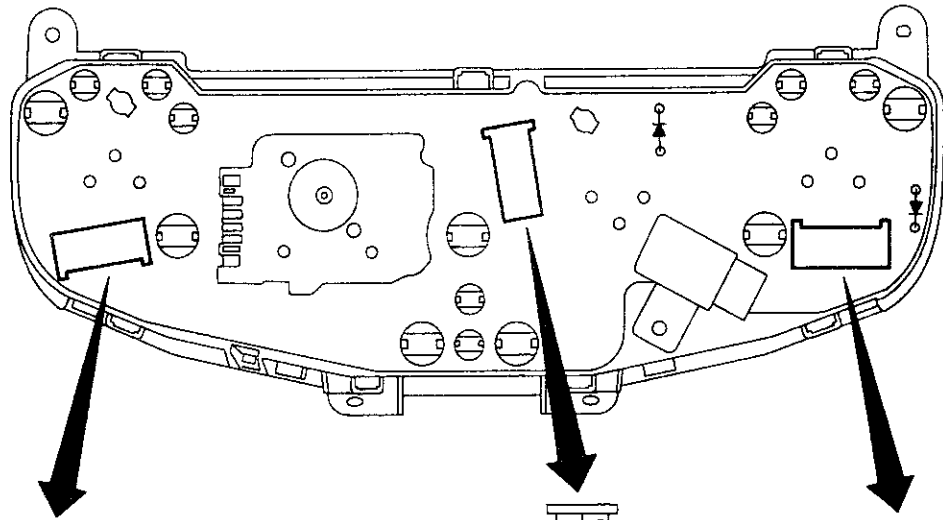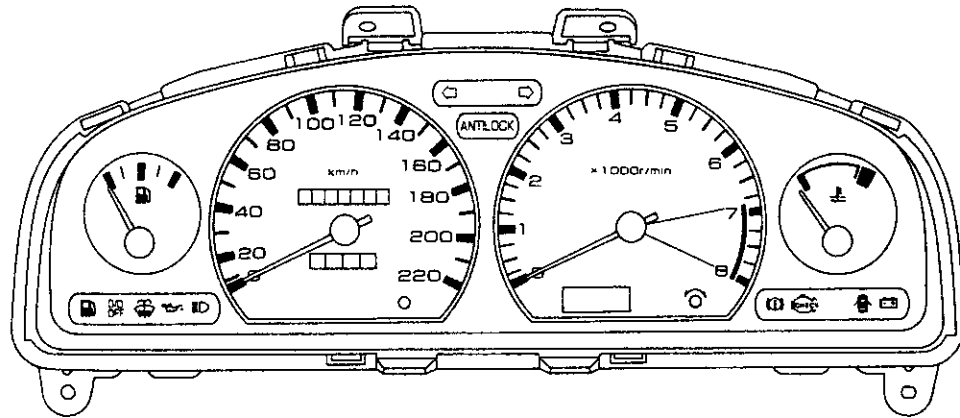


1	2	3	4	5	6
7	9		10	11	12

19	13
14	
15	
22	
23	17
24	18

25	26	27	28
31	33		35



- (A) : A/T model
(E) : With E.C.C.S.

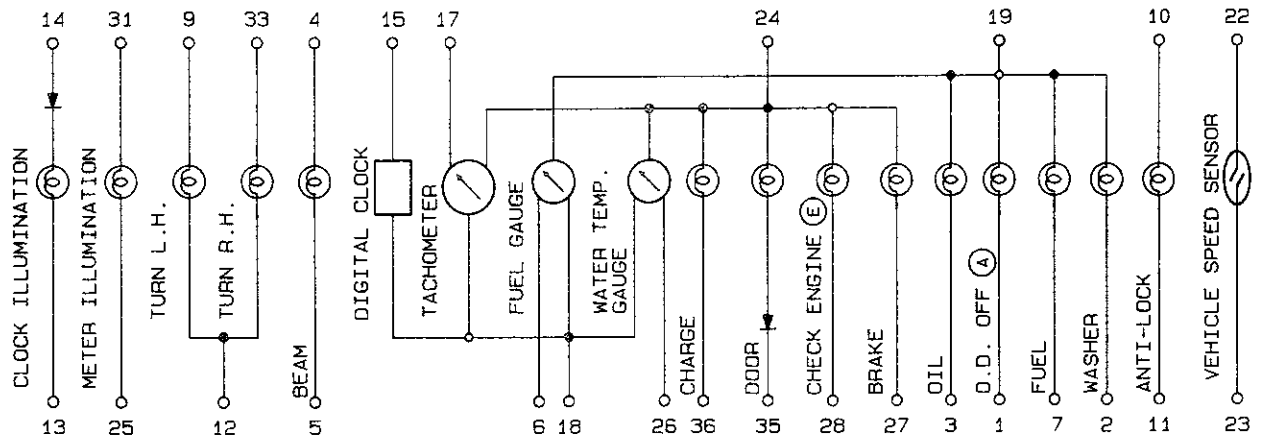


METER AND GAUGES — Needle Type —

Combination Meter (Cont'd)

WITHOUT TACHOMETER (L.H.D. models)

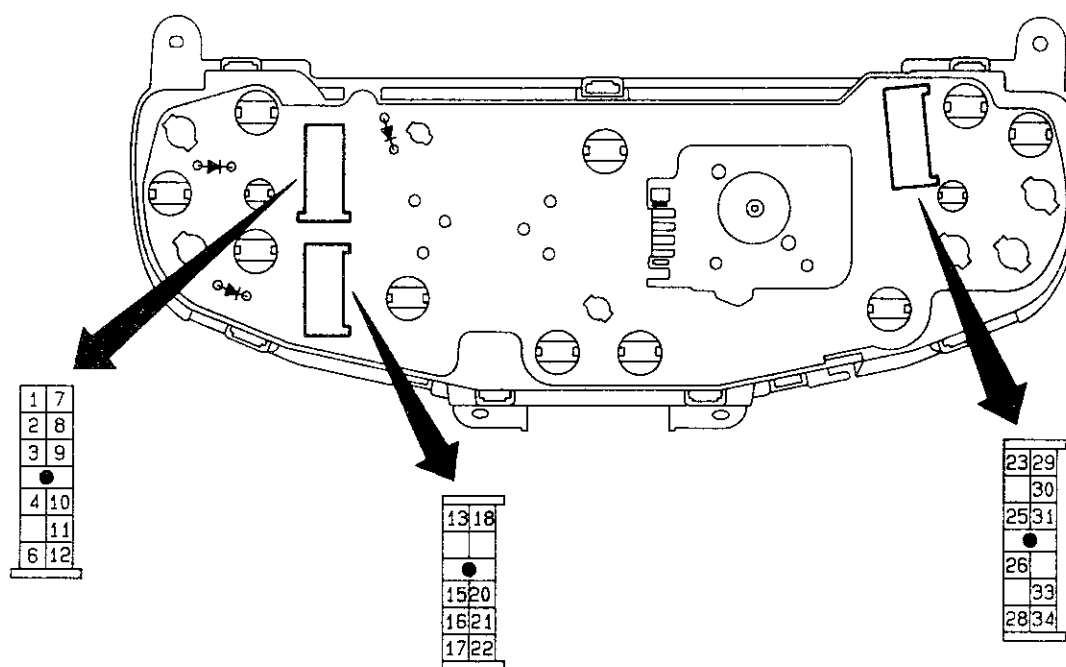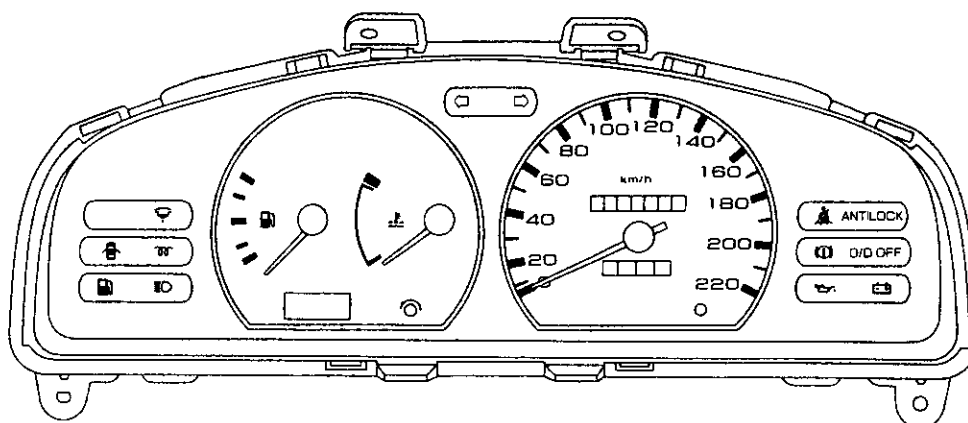

(A) : A/T model (ME) : For Middle East
(CD) : CD engine


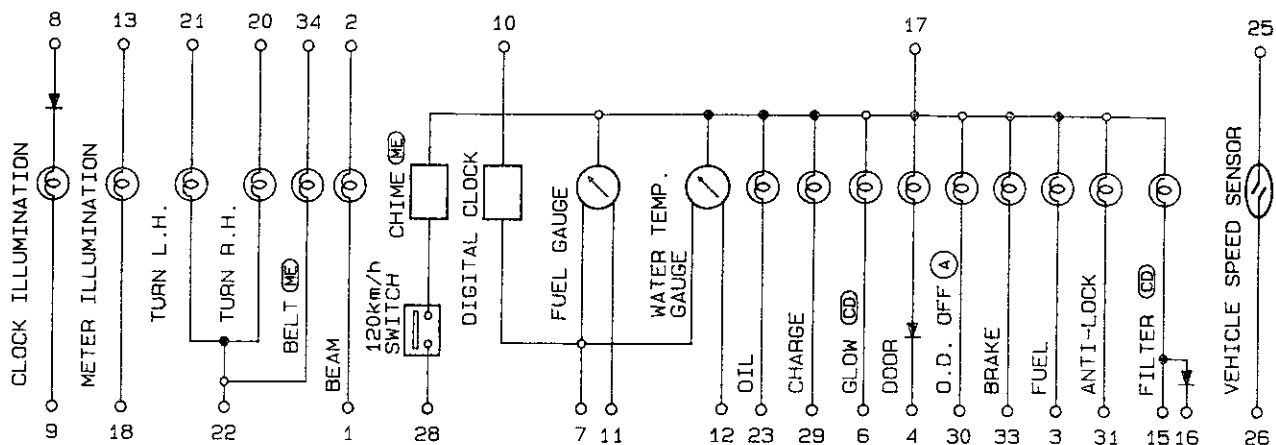


SEL305Q


METER AND GAUGES — Needle Type —

Combination Meter (Cont'd)

WITHOUT TACHOMETER (R.H.D. models)

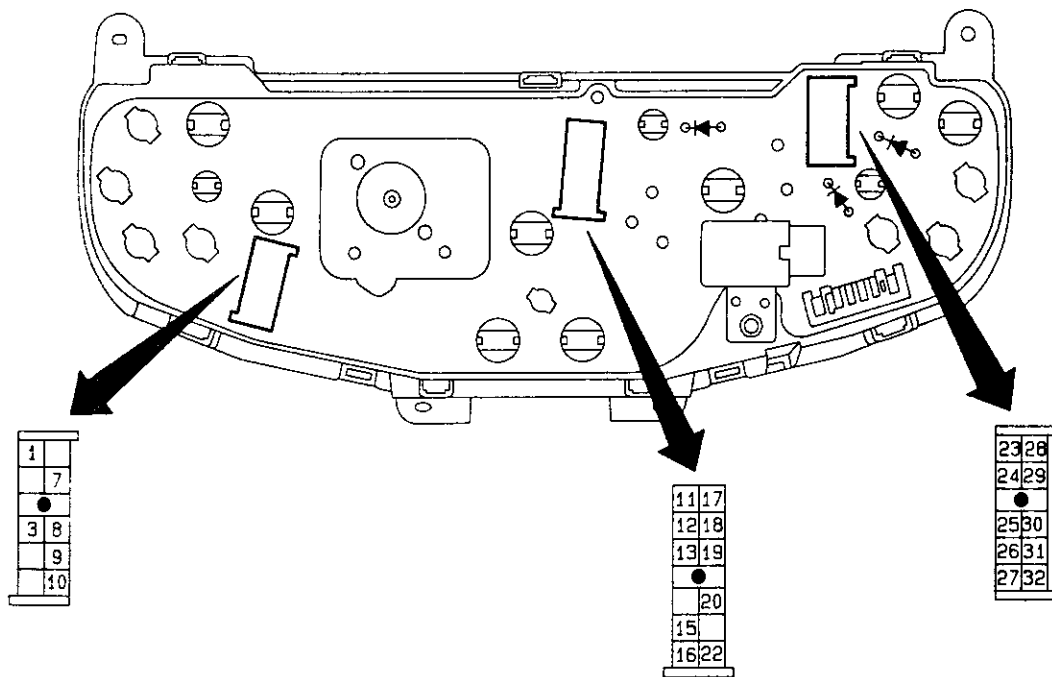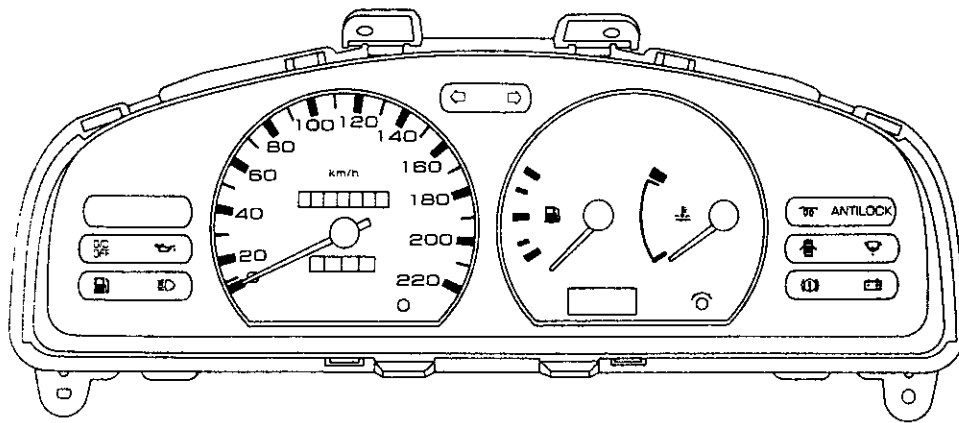

(A) : A/T model
(CD) : CD engine

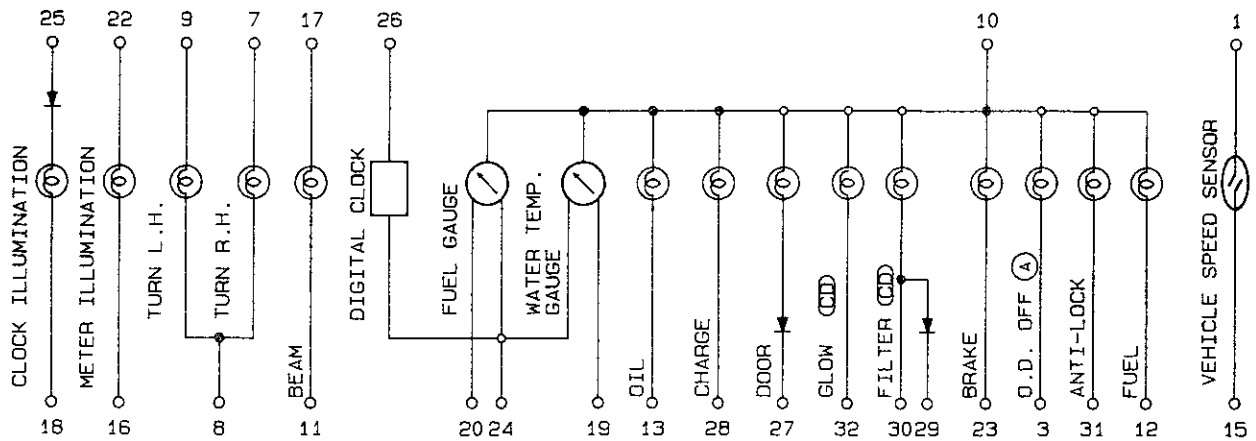


SEL306Q

[illegible]

METER AND GAUGES — Needle Type —

Tachometer, Temp., and Fuel Gauges/Wiring Diagram (Cont'd)

L.H.D. MODELS (Without E.C.C.S)

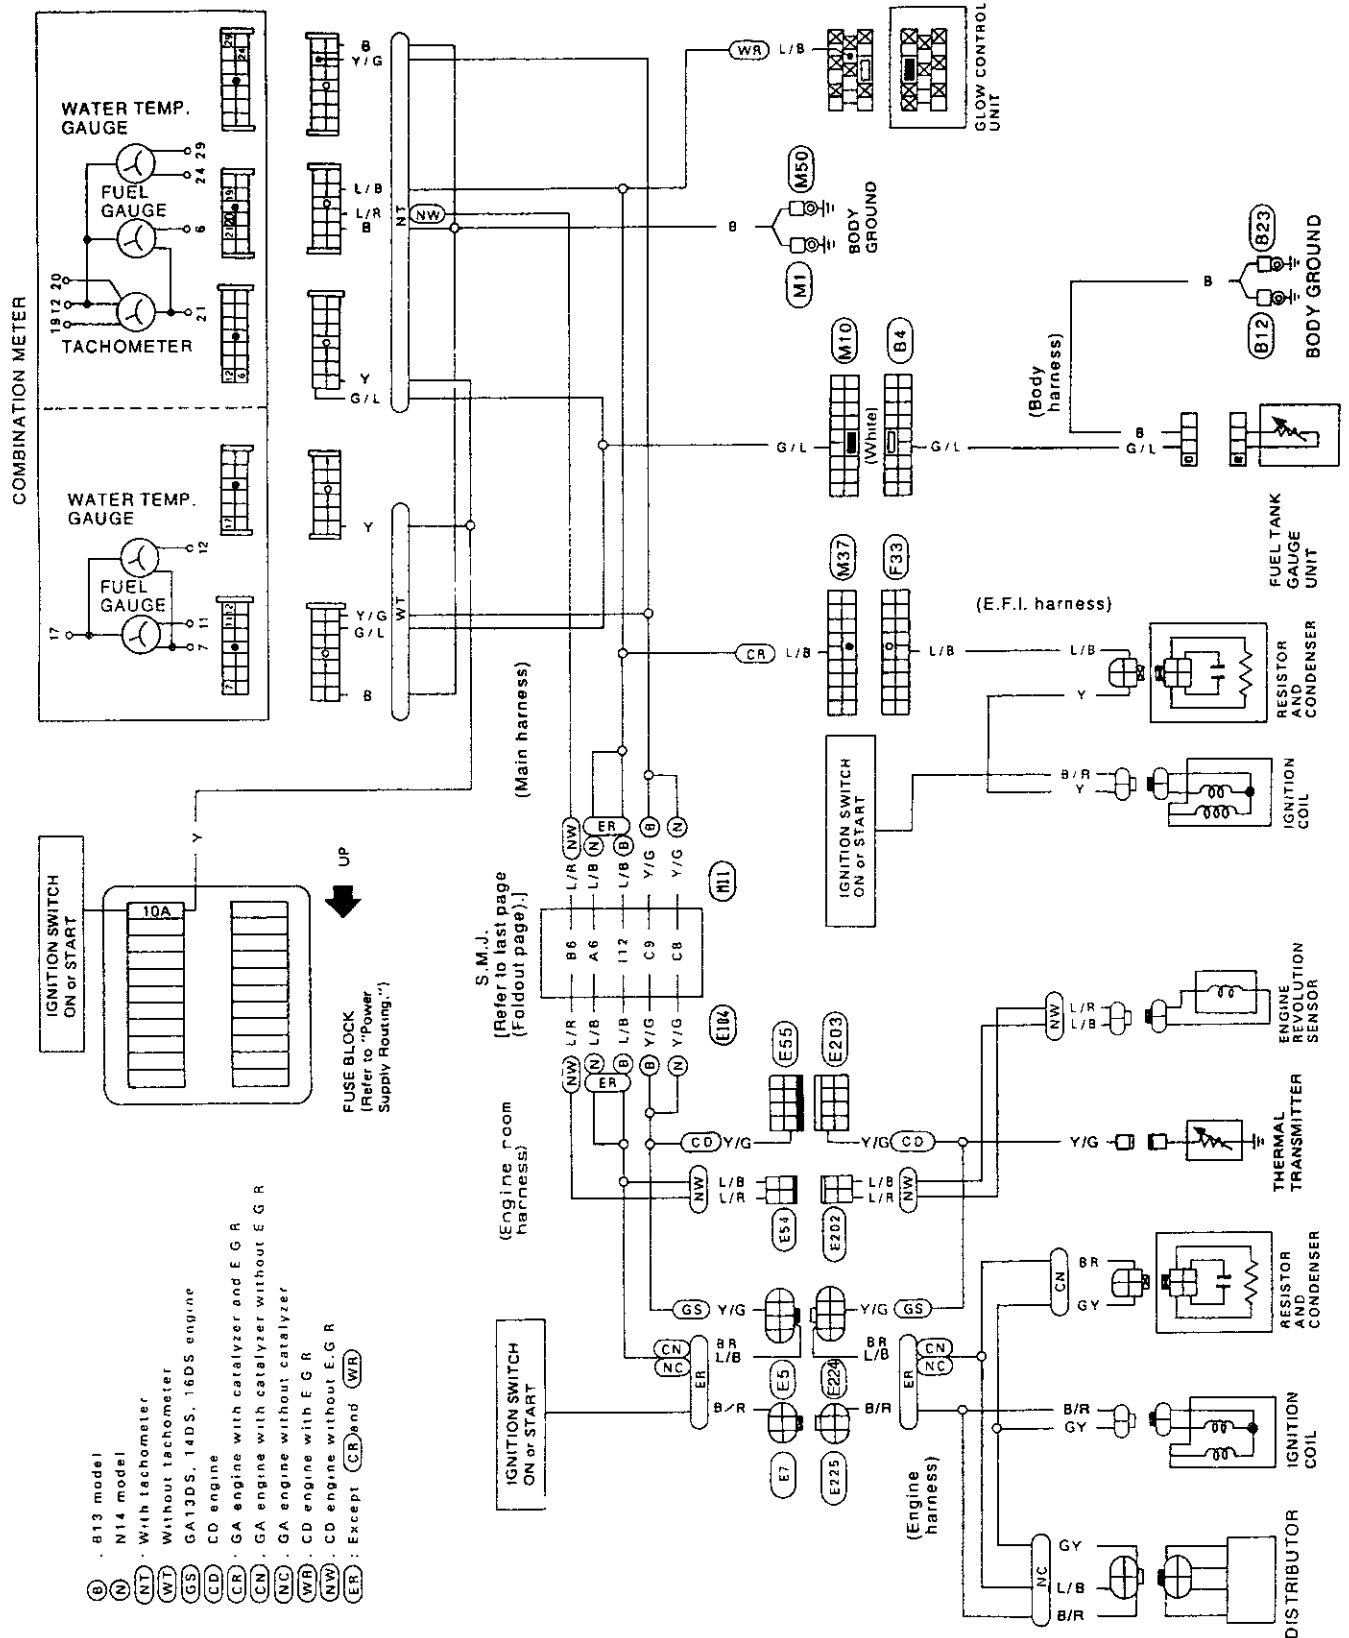

SEL308Q

Tachometer, Temp., and Fuel Gauges/Wiring Diagram (Cont'd)

COMBINATION METER

WATER TEMP. GAUGE
FUEL GAUGE
TACHOMETER

WATER TEMP. GAUGE
FUEL GAUGE
TACHOMETER
SPEEDOMETER

IGNITION SWITCH ON or START

FUSE BLOCK (Refer to "POWER SUPPLY ROUTING")

(Main harness)

(Sub-harness)

(Engine room harness)

(Engine harness)

FUEL TANK GAUGE UNIT

VEHICLE SENSOR

THERMAL TRANSMITTER

E.C.C.S. CONTROL UNIT

Legend:


- B13 model
- N14 model
- Turbo model
- Non-turbo model

Wire Color Legend:


- (B) Blue
- (N) White
- (TC) Yellow
- (ET) Green

Tachometer, Temp., and Fuel Gauges/Wiring Diagram (Cont'd)




R.H.D. MODELS (Without E.C.C.S)

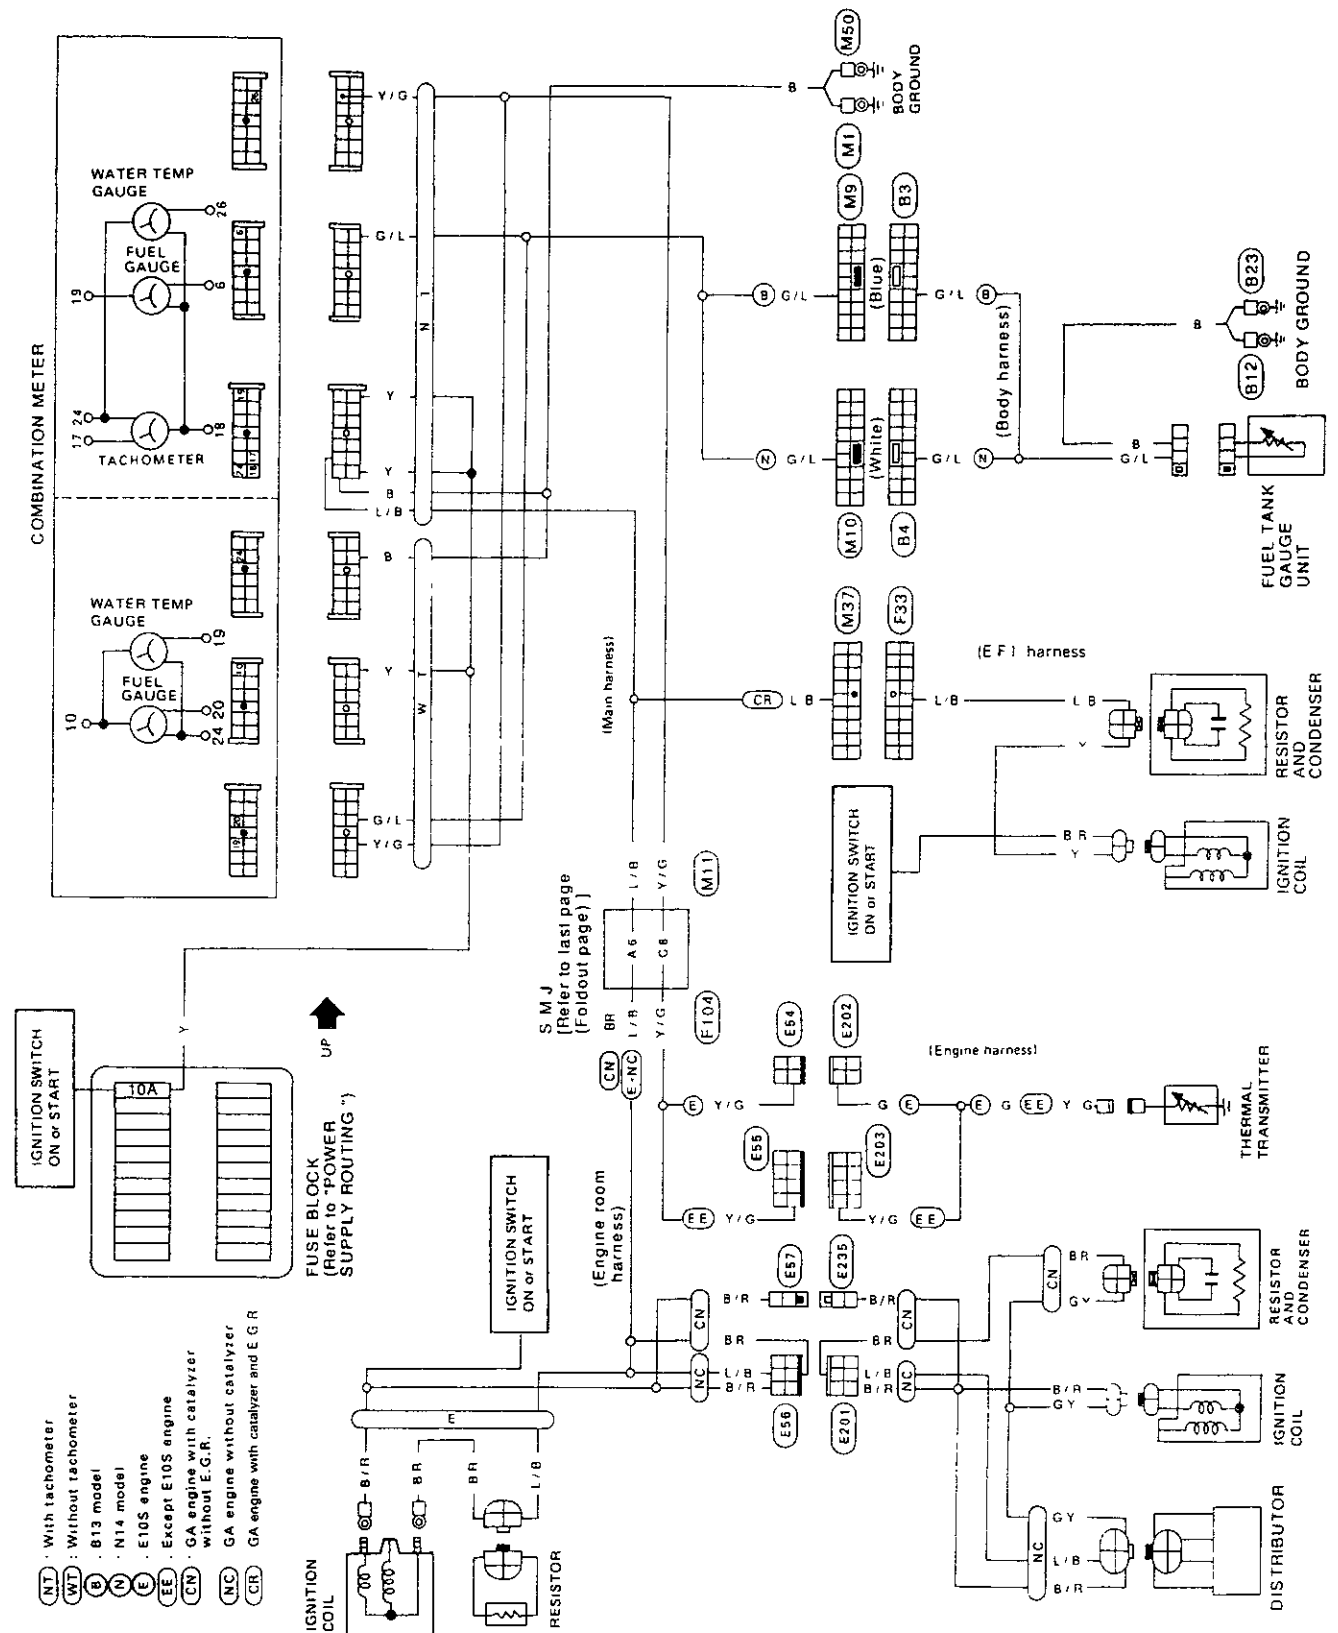




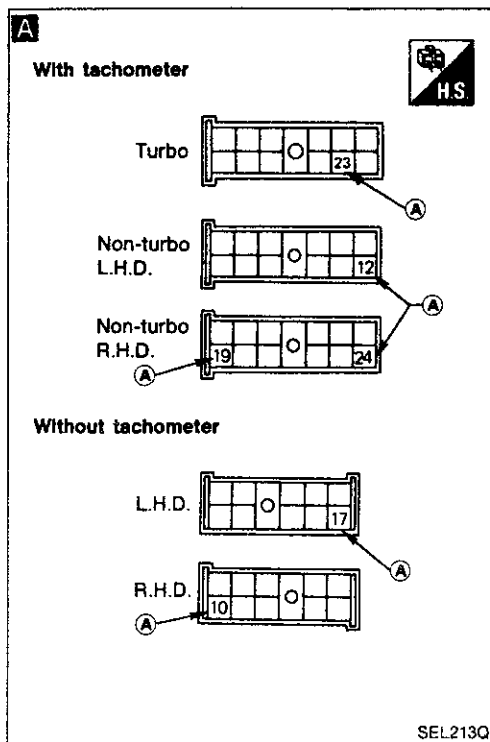

Inspection/Fuel Gauge and Water Temperature Gauge

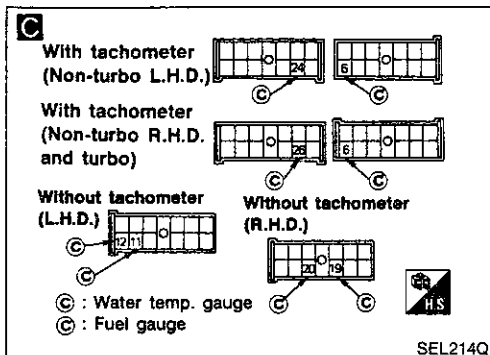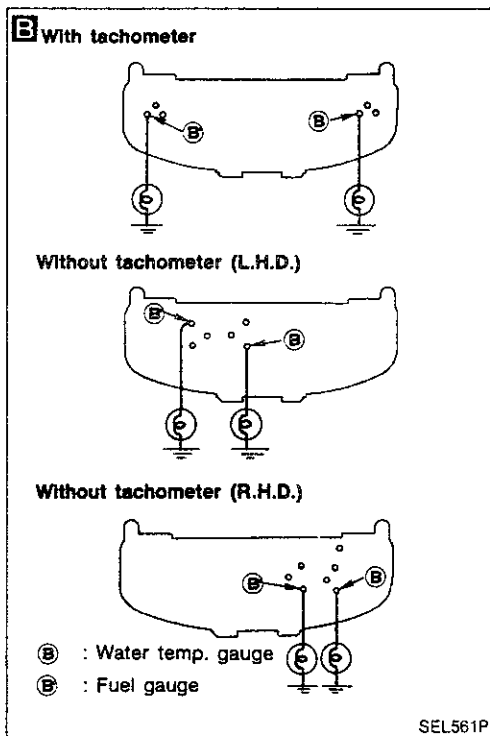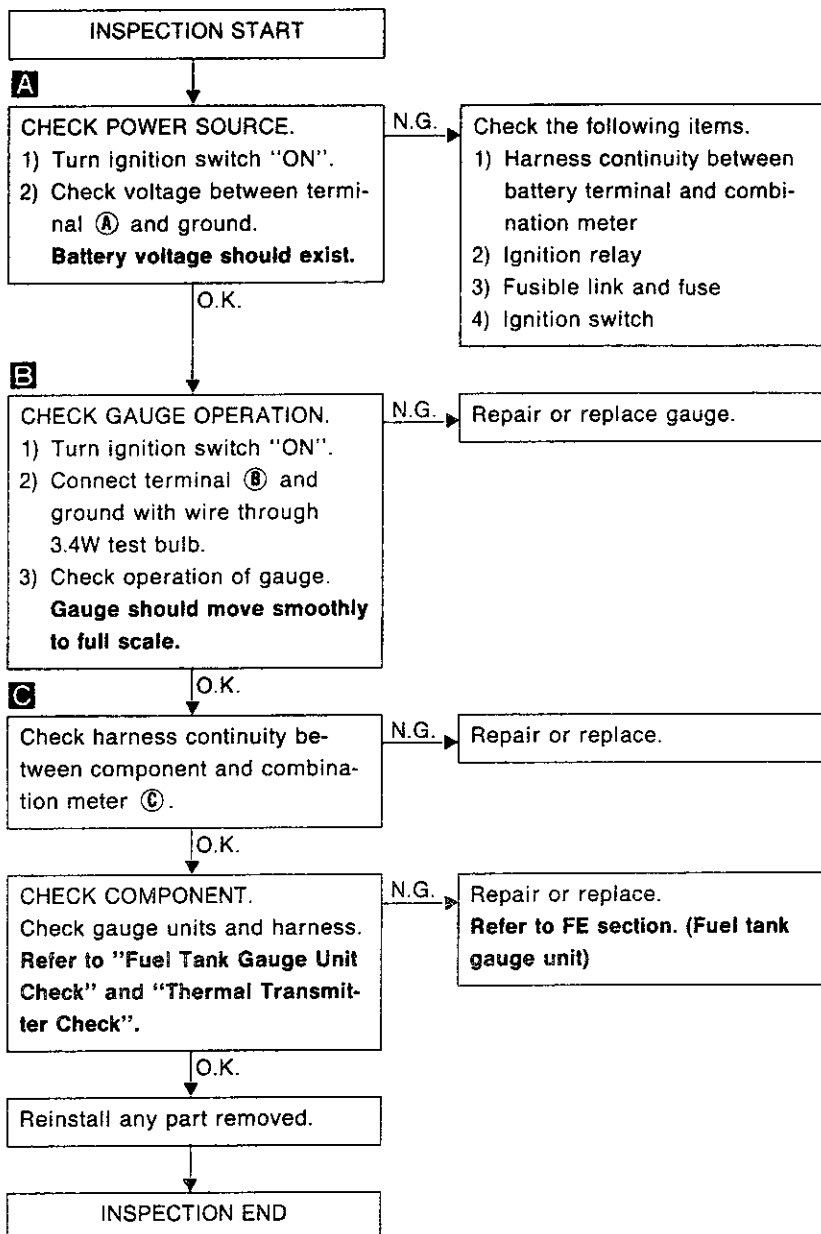

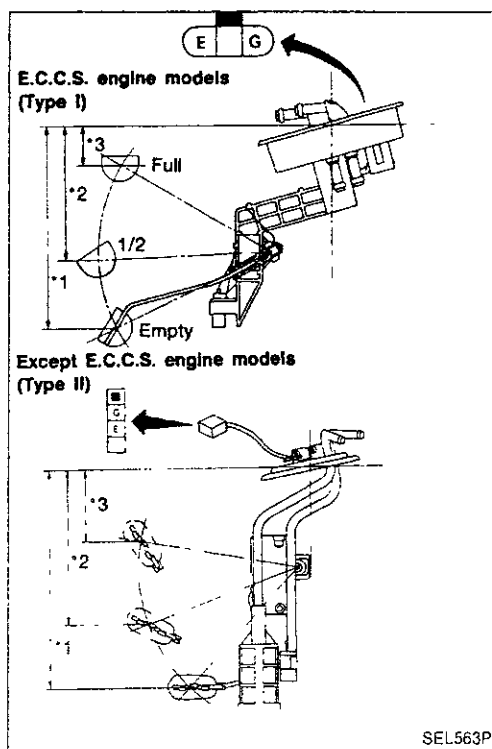

Fuel Tank Gauge Unit Check (2WD)


- For removal, refer to FE section.
- Check the resistance between terminals (G) and (E).

Ohmmeter		Float position mm (in)				Resistance value (Ω)
(+)	(-)			Type-I	Type-II	
G	E	*3	Full	59 (2.32)	58 (2.28)	Approx. 4 - 6
		*2	1/2	110 (4.33)	108 (4.25)	27 - 35
		*1	Empty	166 (6.54)	161 (6.34)	78 - 85

*1 and *3: When float rod is in contact with stopper.

Fuel Tank Gauge Unit Check (4WD)

- For removal, refer to FE section.
- Check the resistance between terminals (G) and (E).

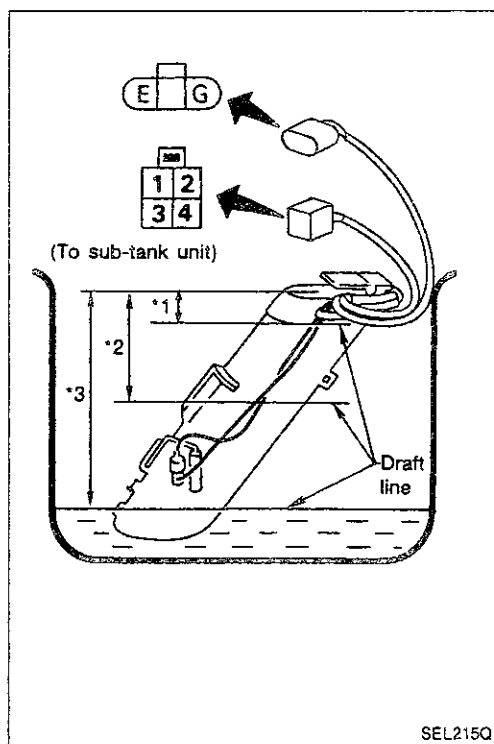


Main tank

Ohmmeter		Draft line mm (in)			Resistance value (Ω)
(+)	(-)				
G	E	*1	Full	13 (0.51)	Approx. 5 - 8
		*2	1/2	81 (3.19)	29 - 33
		*3	Empty	172 (6.77)	92 - 96


Fuel Tank Gauge Unit Check (4WD) (Cont'd)

Sub-tank

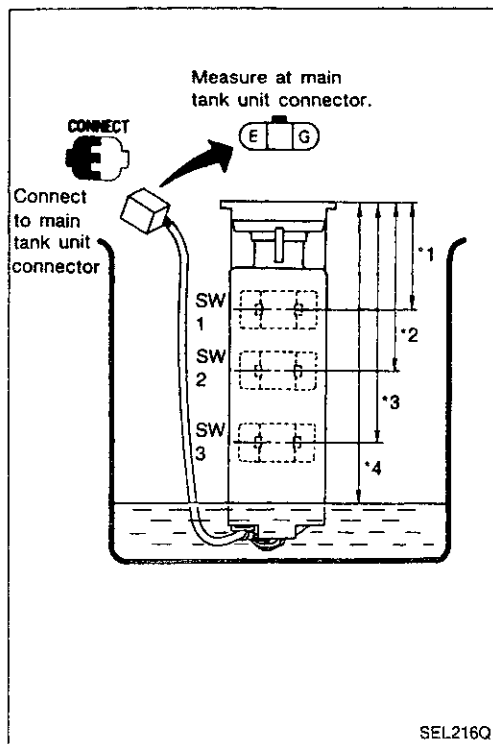


Ohmmeter		Built-in switch			Draft line mm (in)		Resistance value (Ω)
(+)	(-)	SW 1	SW 2	SW 3			
G	E	○	○	○	*1	37 (1.46)	Approx. 3 - 4
		—	○	○	*2	60 (2.36)	8 - 9
		—	—	○	*3	87 (3.43)	12 - 13
		—	—	—	*4	126 (4.96)	12 - 13

○: ON, —: OFF

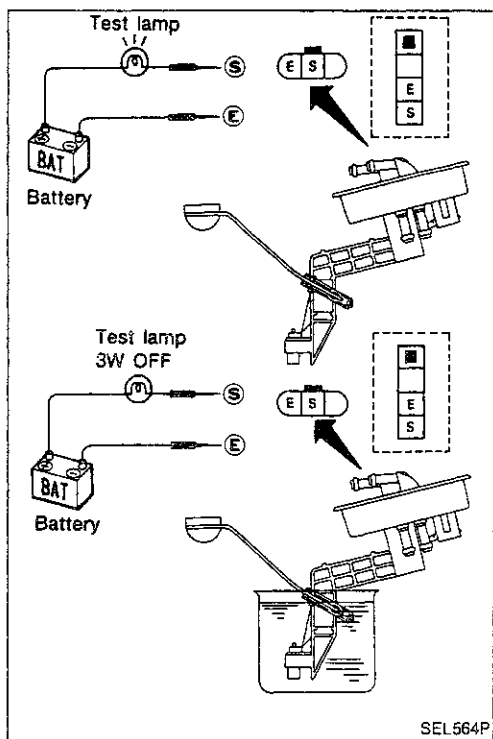

Fuel Warning Lamp Sensor Check


- It will take a short time for the bulb to light.

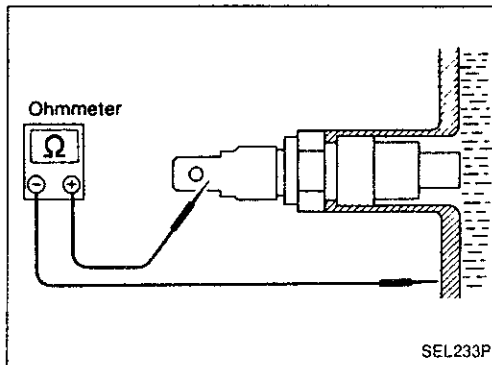

Thermal Transmitter Check

Check the resistance between the terminals of thermal transmitter and body ground.


Water temperature	Resistance
60°C (140°F)	Approx. 70 - 90Ω
100°C (212°F)	Approx. 21 - 24Ω

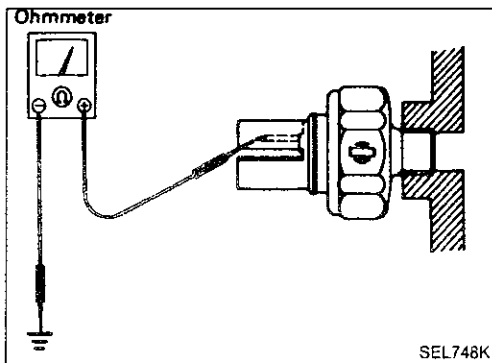

Oil Pressure Switch Check

Check the continuity between the terminals of oil pressure switch and body ground.


	Oil pressure kPa (bar, kg/cm ² , psi)	Continuity
Engine start	More than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1.4 - 2.8)	NO
Engine stop	Less than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1.4 - 2.8)	YES

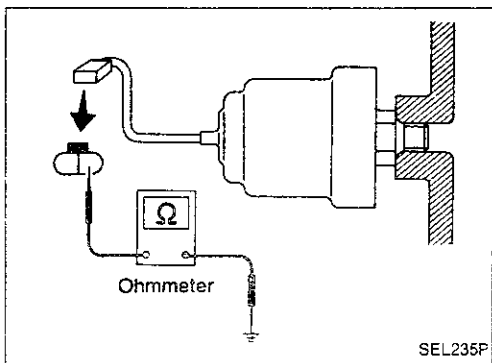

Oil Pressure Sending Unit Check

Check the resistance between the terminals of oil pressure sending unit and body ground.


Oil pressure kPa (bar, kg/cm ² , psi)	Resistance value
0 (0, 0, 0) (Engine is stopped)	∞
392 (3.9, 4, 57)	Approx. 27 - 37Ω
588 (5.9, 6, 85)	Approx. 17 - 27Ω

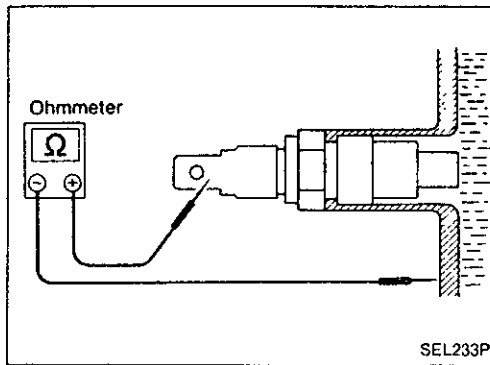

Oil Temperature Sensor Check

Check the resistance between the terminals of oil temperature sensor and body ground.


Water temperature	Resistance
70°C (158°F)	Approx. 87 - 97Ω
110°C (230°F)	Approx. 26 - 29Ω

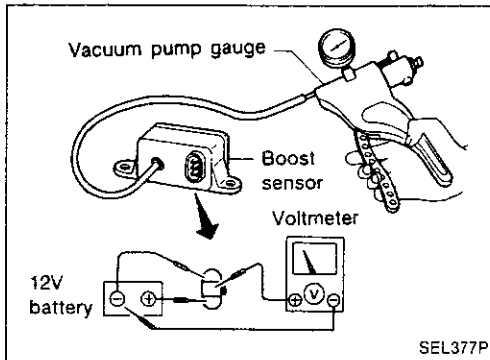

Boost Pressure Sensor Check

1. Connect vacuum pump gauge to boost pressure sensor vacuum hose.
2. Disconnect harness connector from boost pressure sensor and connect battery and voltmeter as shown.
3. Apply vacuum pressure to boost pressure sensor by vacuum pump gauge and measure voltages.

Vacuum pressure kPa (mbar, mmHg, inHg)	Voltage (V)
0 (0, 0, 0)	Approx. 2.2
-53.3 (-533, -400, -5.75)	Approx. 1.3

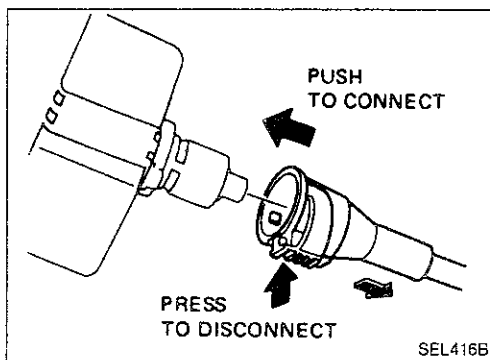



Speedometer Cable Removal and Installation

After disconnecting speedometer cable end from transaxle, push speedometer cable so that combination meter is pushed into passenger compartment. Disconnect speedometer cable end from combination meter as shown in the figure at left.

Speed Sensor Signal Check (Non-turbo models)

- A speed sensor is built into the speedometer.
1. Turn speedometer slowly using a small screwdriver.
 2. Check continuity of speed sensor circuit.


Continuity exists two times for each turn ... O.K.

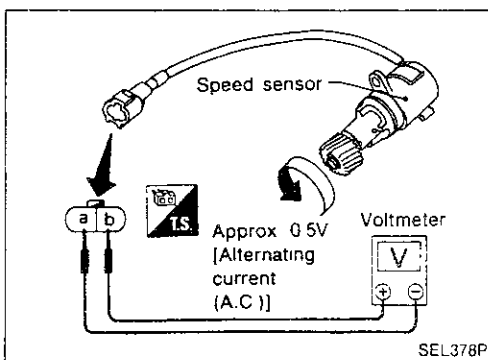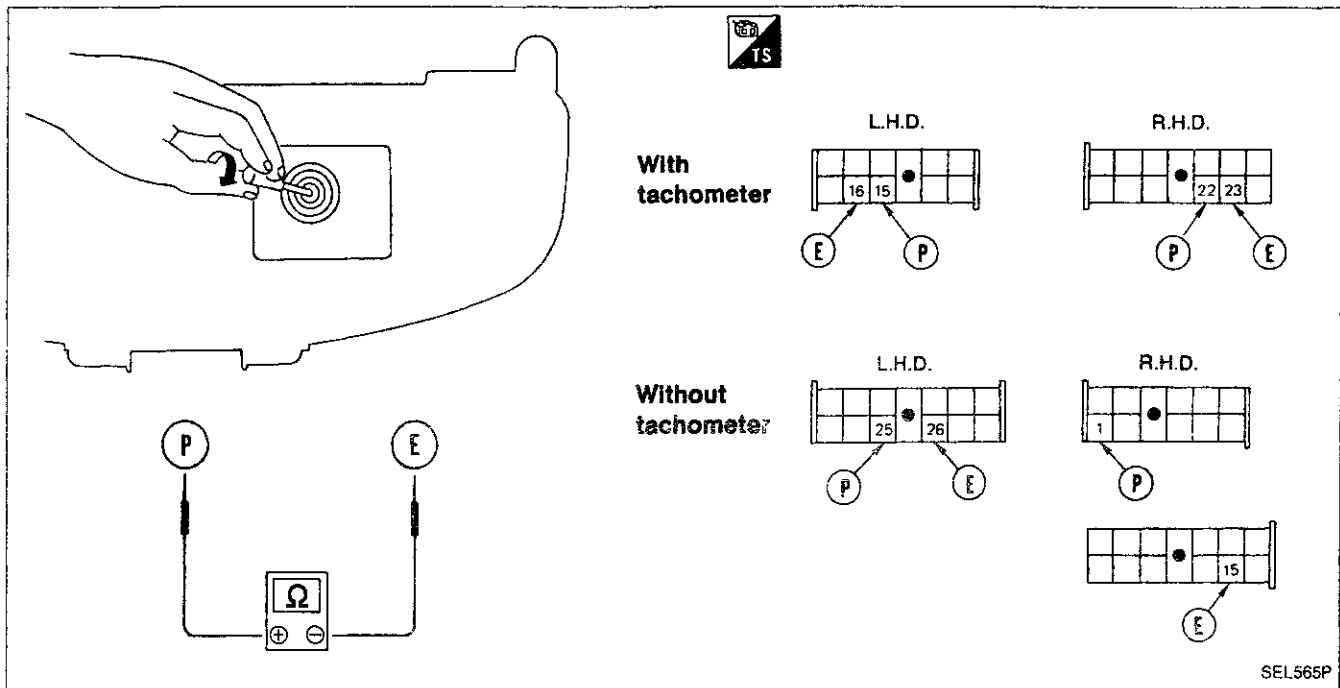

Speed Sensor Signal Check (Turbo models)

1. Remove speed sensor from transaxle.
2. Turn speedometer pinion quickly and measure voltage across **a** and **b**.

Combination Meter



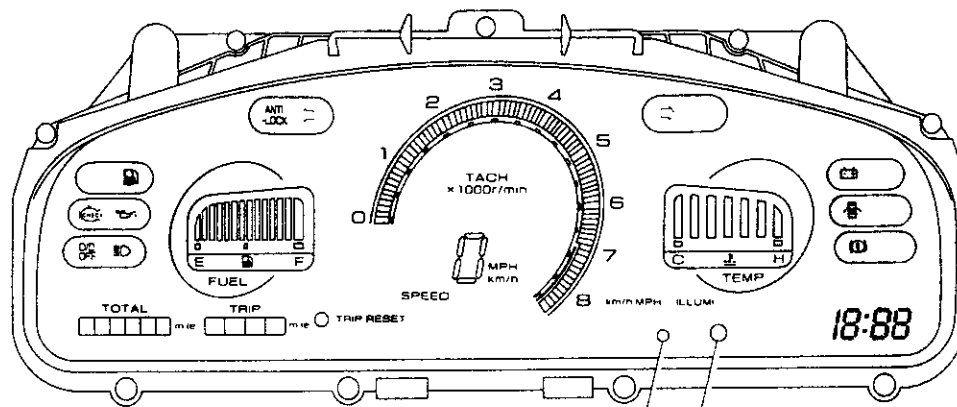


Illumination
control switch

Select switch
(MPH or km/h)


SEL312Q

METER AND GAUGES — Digital Type — Combination Meter (Cont'd)

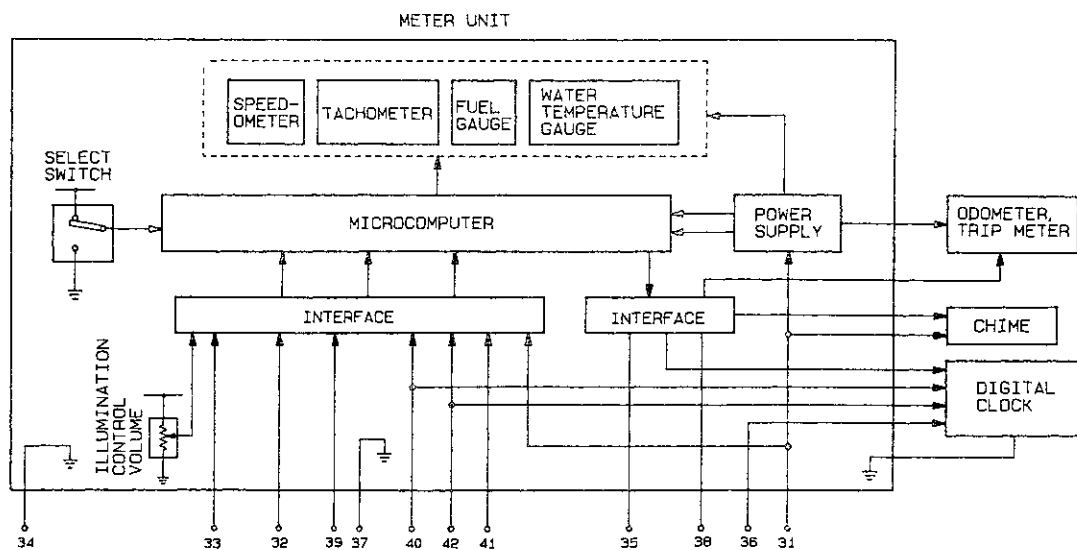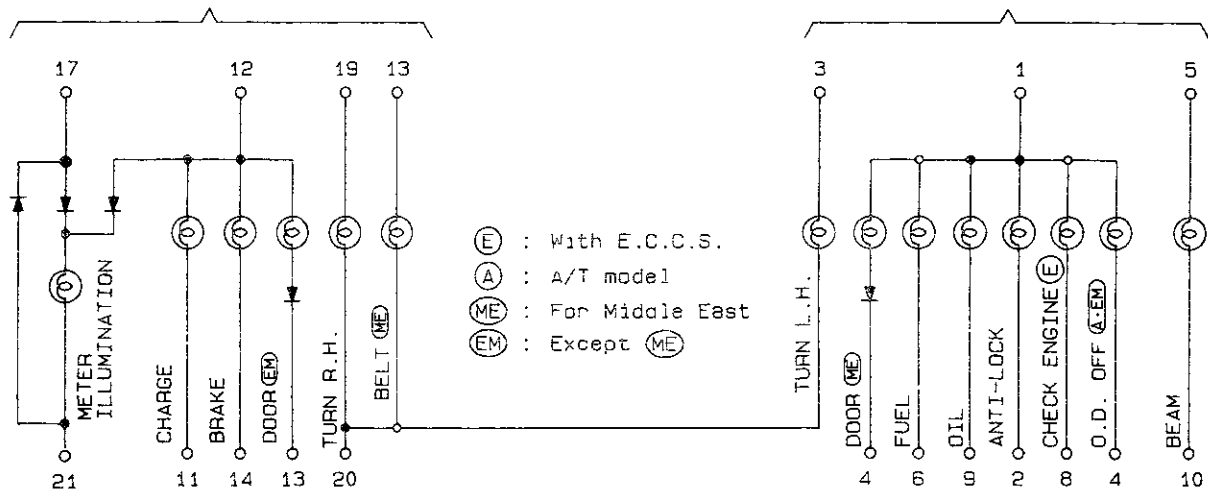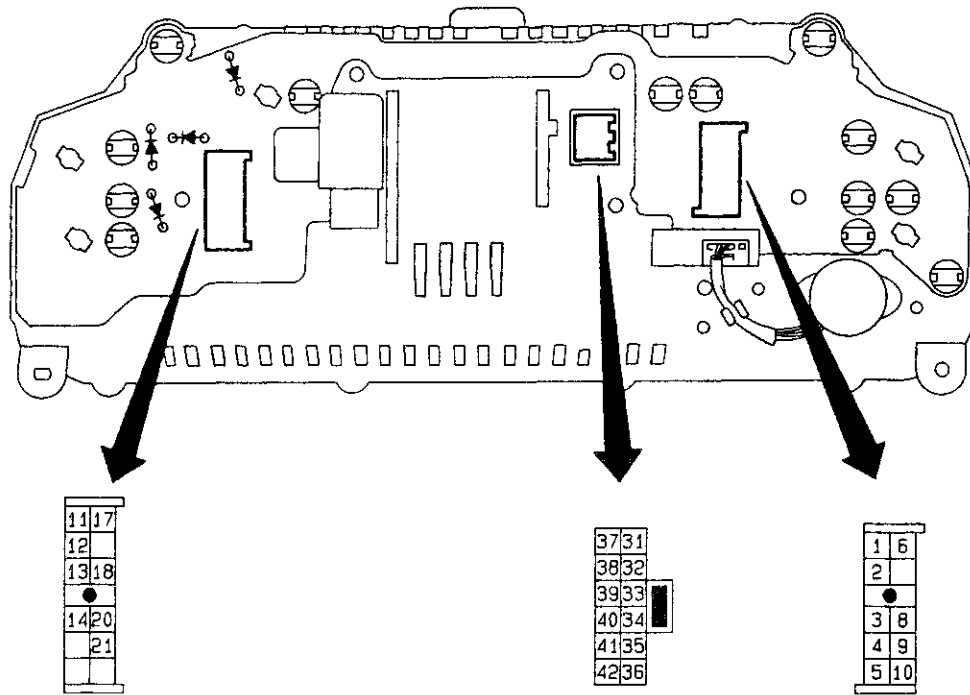


SEL313Q

Schematic

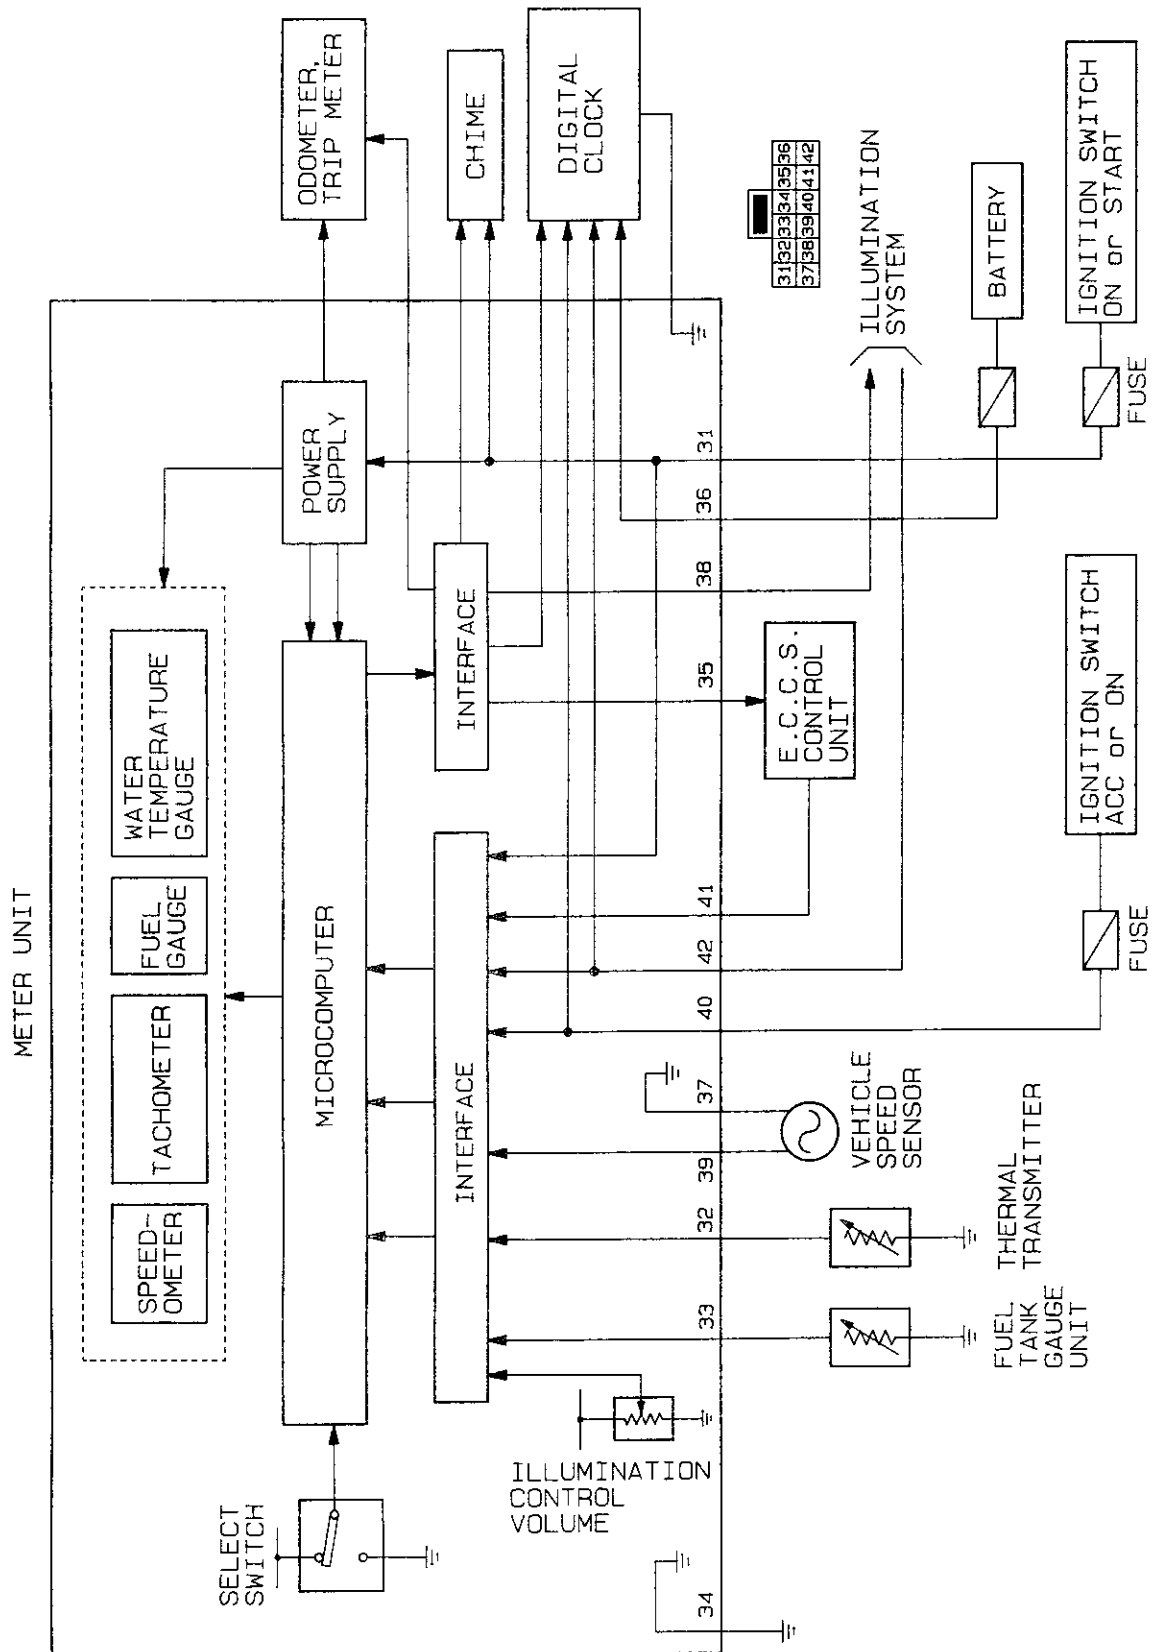


Wiring Diagram

L.H.D. MODELS

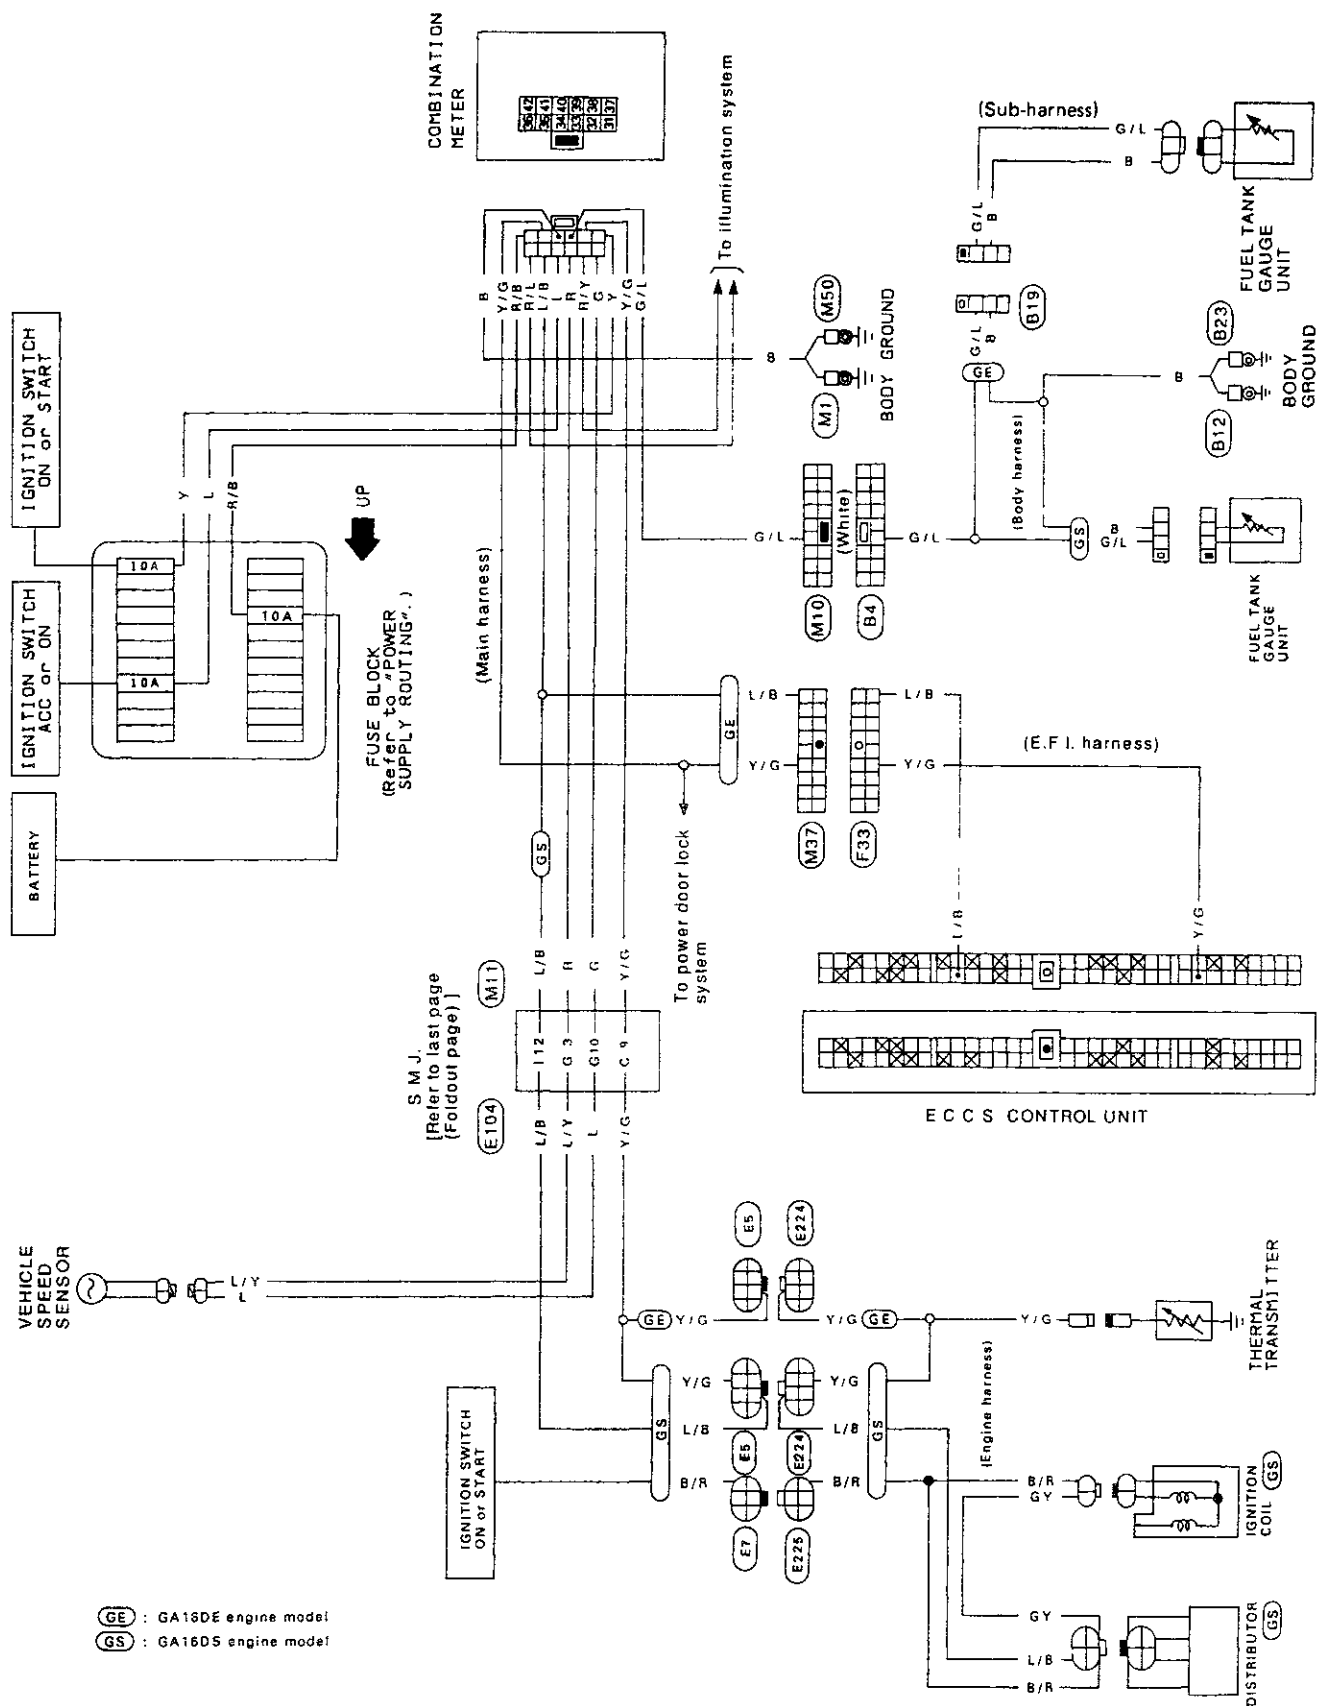


METER AND GAUGES — Digital Type — Wiring Diagram (Cont'd)

R.H.D. MODELS

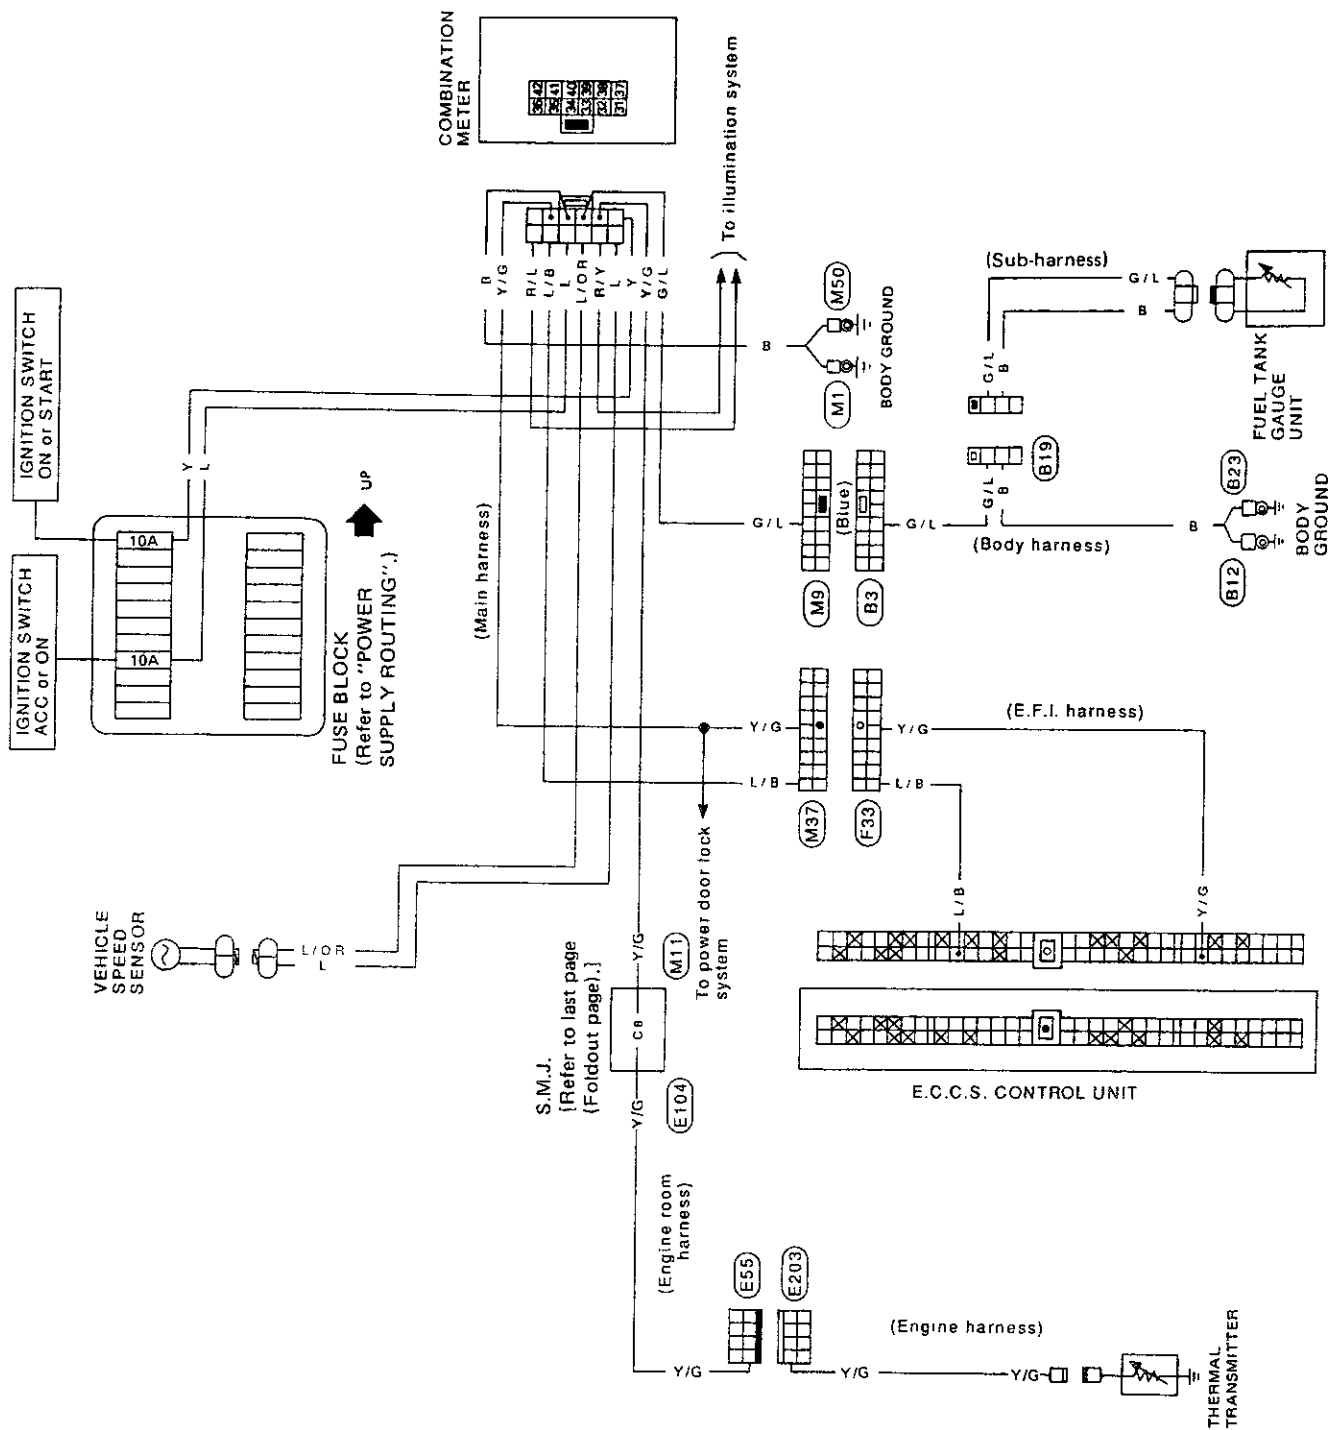


SEL533P

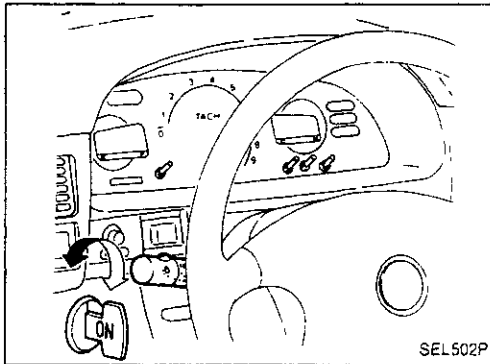

Trouble Diagnoses

SELF-CHECK (SEGMENT CHECK)


1. Turn light switch from "OFF" to "ON" more than 10 times, within 15 seconds after ignition switch is turned from "OFF" to "ON".
2. The display starts self-check automatically. This function operates on speedometer, tachometer, temperature gauge and fuel gauge at the same time.
To stop this function, run engine or turn ignition switch to "OFF".

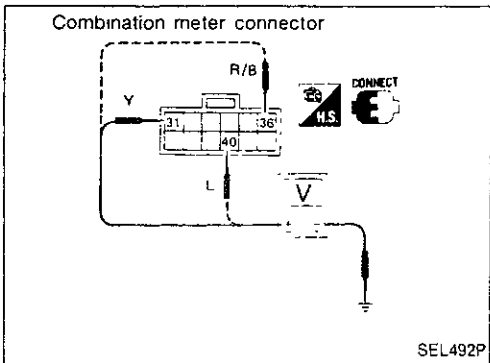

MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK

Main power supply

Terminal No.		Ignition switch		
(+)	(-)	OFF	ACC	ON
31	Ground	0V	0V	Battery voltage
36	Ground	Battery voltage	Battery voltage	Battery voltage
40	Ground	0V	Battery voltage	Battery voltage

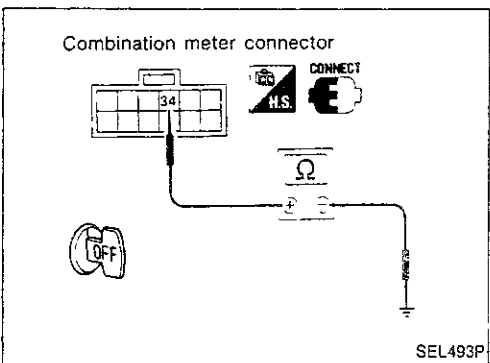



Ground circuit

Terminal No.	Continuity
34	Yes

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE ①

SYMPTOM: Speedometer always indicates zero ("0") when driving.

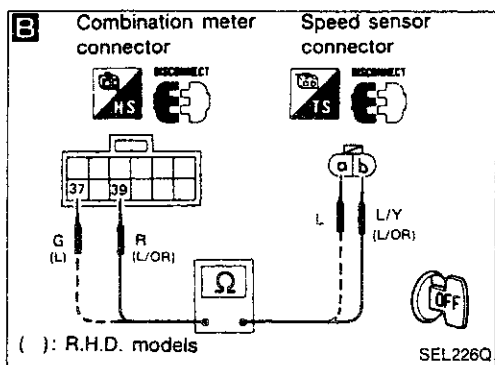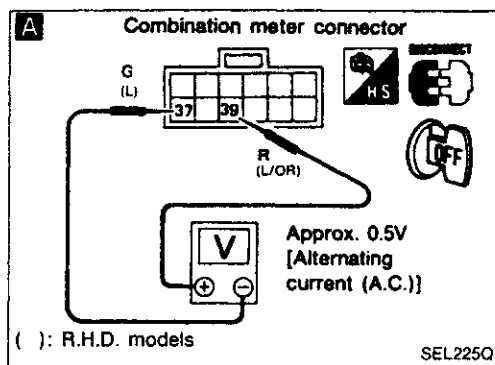

A

SPEED SENSOR INPUT SIGNAL CHECK

1. Apply wheel chocks and jack up front of vehicle.
2. Connect voltmeter between harness terminals No. 37 and No. 39.
3. Turn front wheel slowly.
4. Check deflection of voltmeter pointer.

O.K.

Replace digital meter.

N.G.

SPEED SENSOR CHECK

Refer to "Speed sensor signal check".

N.G.

Replace speed sensor.

O.K.

B

SPEED SENSOR CIRCUIT CHECK

Check continuity between digital meter harness terminals and speed sensor terminals.

Terminal No.		Continuity
Digital meter	Speed sensor	
37	a	Yes
39	b	


N.G.

Repair harness or connector.

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE ②

SYMPTOM: Indicated value of speedometer changes irregularly or is incorrect.

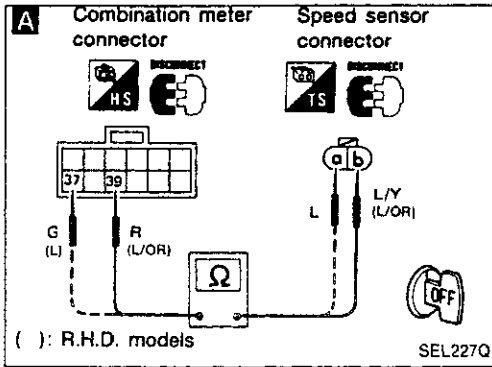

SPEED SENSOR CHECK

Refer to "Speed sensor signal check".

O.K.

Replace speed sensor.

N.G.

A

SPEED SENSOR CIRCUIT CHECK

Check continuity between digital meter harness terminals and speed sensor terminals.


N.G.

Repair harness or connector.

Terminal No.		Continuity
Digital meter	Speed sensor	
37	a	Yes
39	b	

O.K.

Replace digital meter.

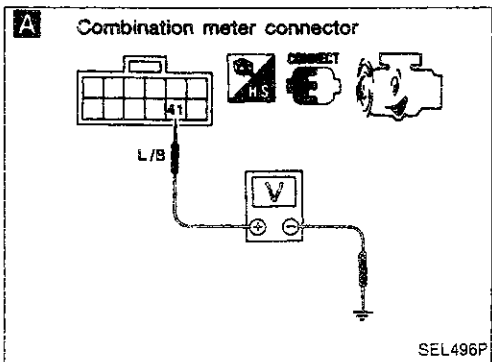

DIAGNOSTIC PROCEDURE ③

SYMPTOM: Indicated value of tachometer is incorrect.

A

TACHOMETER INPUT SIGNAL CHECK

Check voltage between digital meter harness terminal No. 41 and body ground.

O.K.

Replace digital meter.

Terminal No		Voltage (V)
(+)	(-)	
41	Ground	Approx. 1 - 5

N.G.

B

TACHOMETER CIRCUIT CHECK


Check continuity between digital meter terminal No. 41 and E.C.C.S. control unit harness terminal No. 2.

N.G.

Repair harness or connector.

O.K.



Check E.C.C.S. control unit. Refer to EF & EC section.

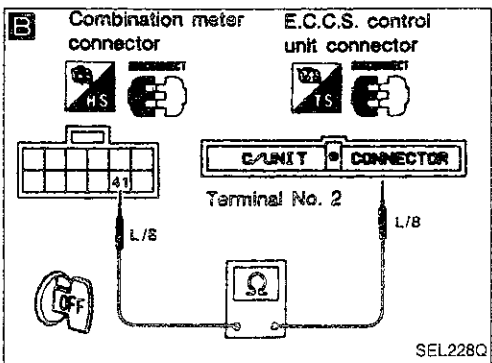

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE ④

SYMPTOM: Indicated value of water temperature gauge is incorrect.

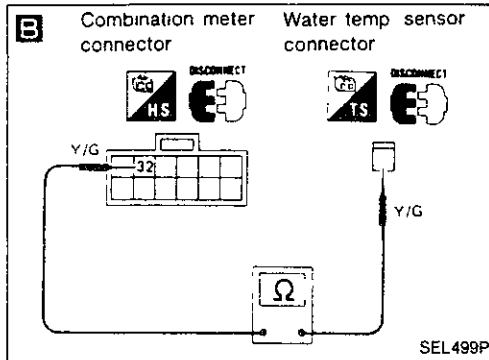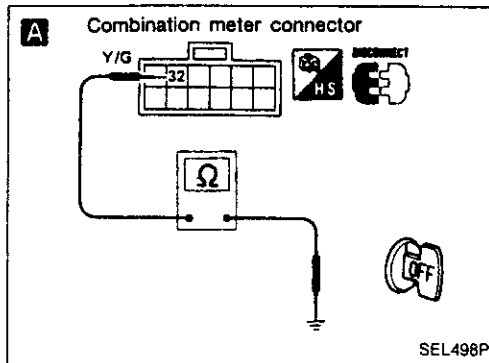

A

WATER TEMPERATURE SENSOR INPUT SIGNAL CHECK
Check resistance between digital meter harness terminal No. 32 and body ground.
Compare measured resistance with indication of gauge segment (before disconnecting connector).
Gauge indication is changed by the water temperature.

Segment	Resistance (Ω)
7	Approx. 14
}	}
4	Approx. 64
}	}
1	Approx. 203

O.K. → Replace digital meter.

N.G.

THERMAL TRANSMITTER CHECK
Refer to "Thermal Transmitter Check".

N.G. → Replace thermal transmitter.

O.K.

B



WATER TEMPERATURE SENSOR CIRCUIT CHECK.
Check continuity between digital meter harness terminal No. 32 and thermal transmitter harness terminal.

Repair harness or connector.

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE ⑤

SYMPTOM: Indicated value of fuel gauge is incorrect.

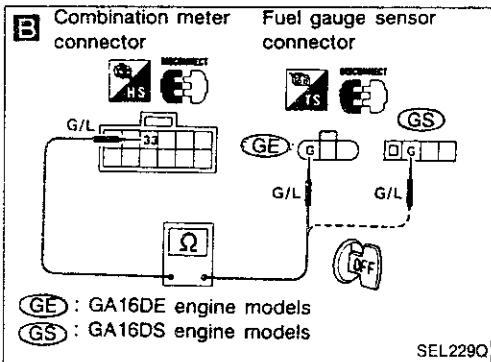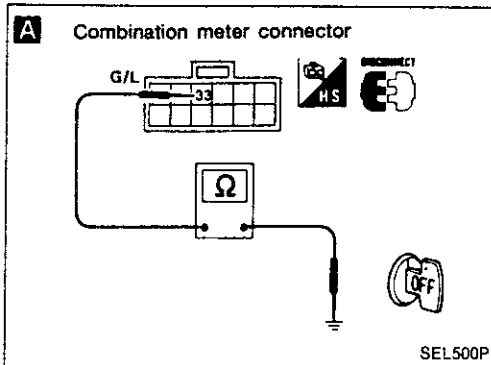

FUEL GAUGE SENSOR INPUT SIGNAL CHECK

Check resistance between digital meter harness terminal No. 33 and body ground. Compare measured resistance with indication of gauge segment (before disconnecting connector). Gauge indication is changed by the amount of fuel.

Segment	Resistance (Ω)
14	Approx. 12
}	}
8	Approx. 33
}	}
1	Approx. 76

O.K. → Replace digital meter.

N.G.

FUEL GAUGE SENSOR CHECK
Refer to "Fuel Tank Gauge Unit Check".


N.G. → Replace fuel tank gauge unit.

O.K.

FUEL GAUGE SENSOR CIRCUIT CHECK
Check continuity between digital meter harness terminal No. 33 and fuel gauge sensor harness terminal ⑧.

N.G.


Repair harness or connector.

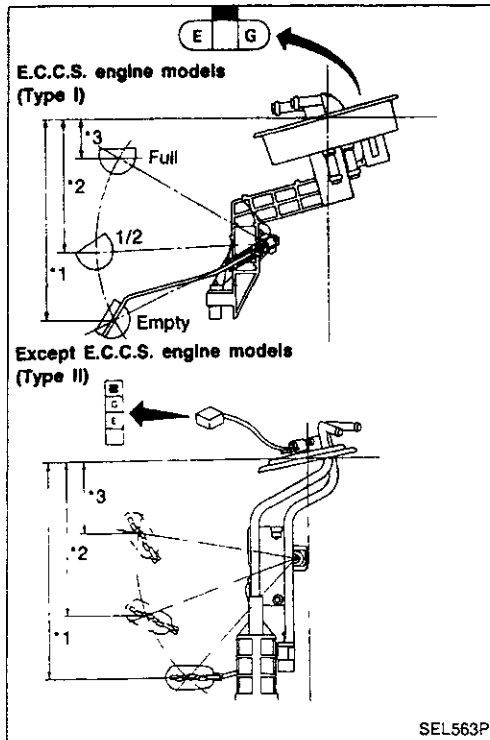

Fuel Tank Gauge Unit Check


- For removal, refer to FE section.
- Check the resistance between terminals (G) and (E).

Ohmmeter		Float position mm (in)				Resistance value (Ω)
(+)	(-)			Type-I	Type-II	
G	E	*3	Full	59 (2.32)	58 (2.28)	Approx. 4 - 6
		*2	1/2	110 (4.33)	108 (4.25)	27 - 35
		*1	Empty	166 (6.54)	161 (6.34)	78 - 85

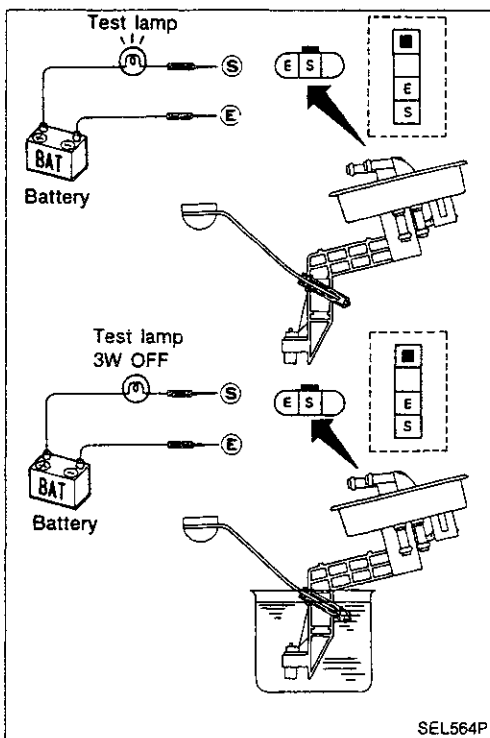

Fuel Warning Lamp Sensor Check


- It will take a short time for the bulb to light.

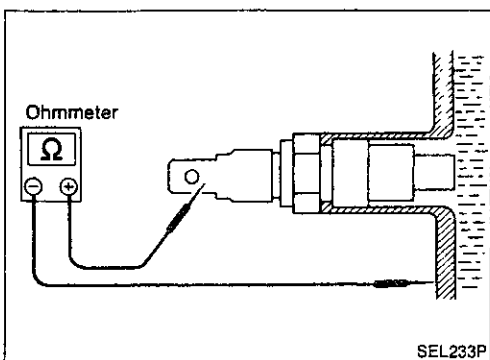

Thermal Transmitter Check

- Check the resistance between the terminals of thermal transmitter and body ground.

Water temperature	Resistance
60°C (140°F)	Approx. 70 - 90Ω
100°C (212°F)	Approx. 21 - 24Ω

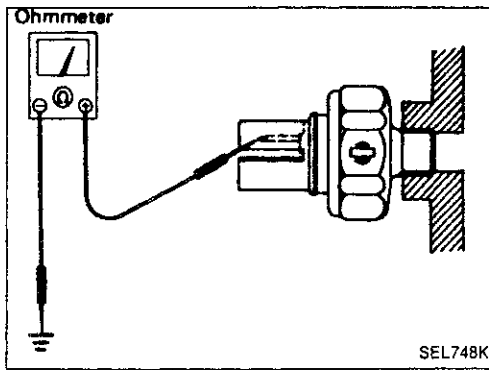


Oil Pressure Switch Check

	Oil pressure kPa (bar, kg/cm ² , psi)	Continuity
Engine start	More than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1.4 - 2.8)	NO
Engine stop	Less than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1.4 - 2.8)	YES

Check the continuity between the terminals of oil pressure switch and body ground.


Speed Sensor Signal Check

1. Remove speed sensor from transaxle.
2. Turn speedometer pinion quickly and measure voltage across **a** and **b**.

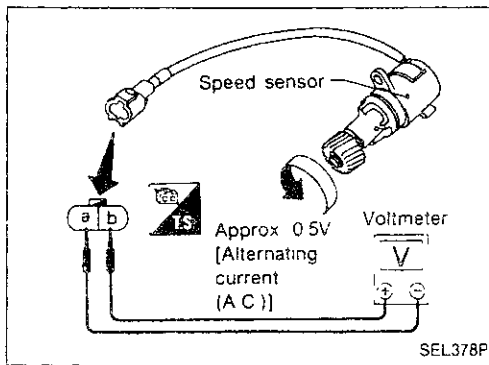

WARNING LAMPS AND BUZZER

Warning Lamps/Schematic

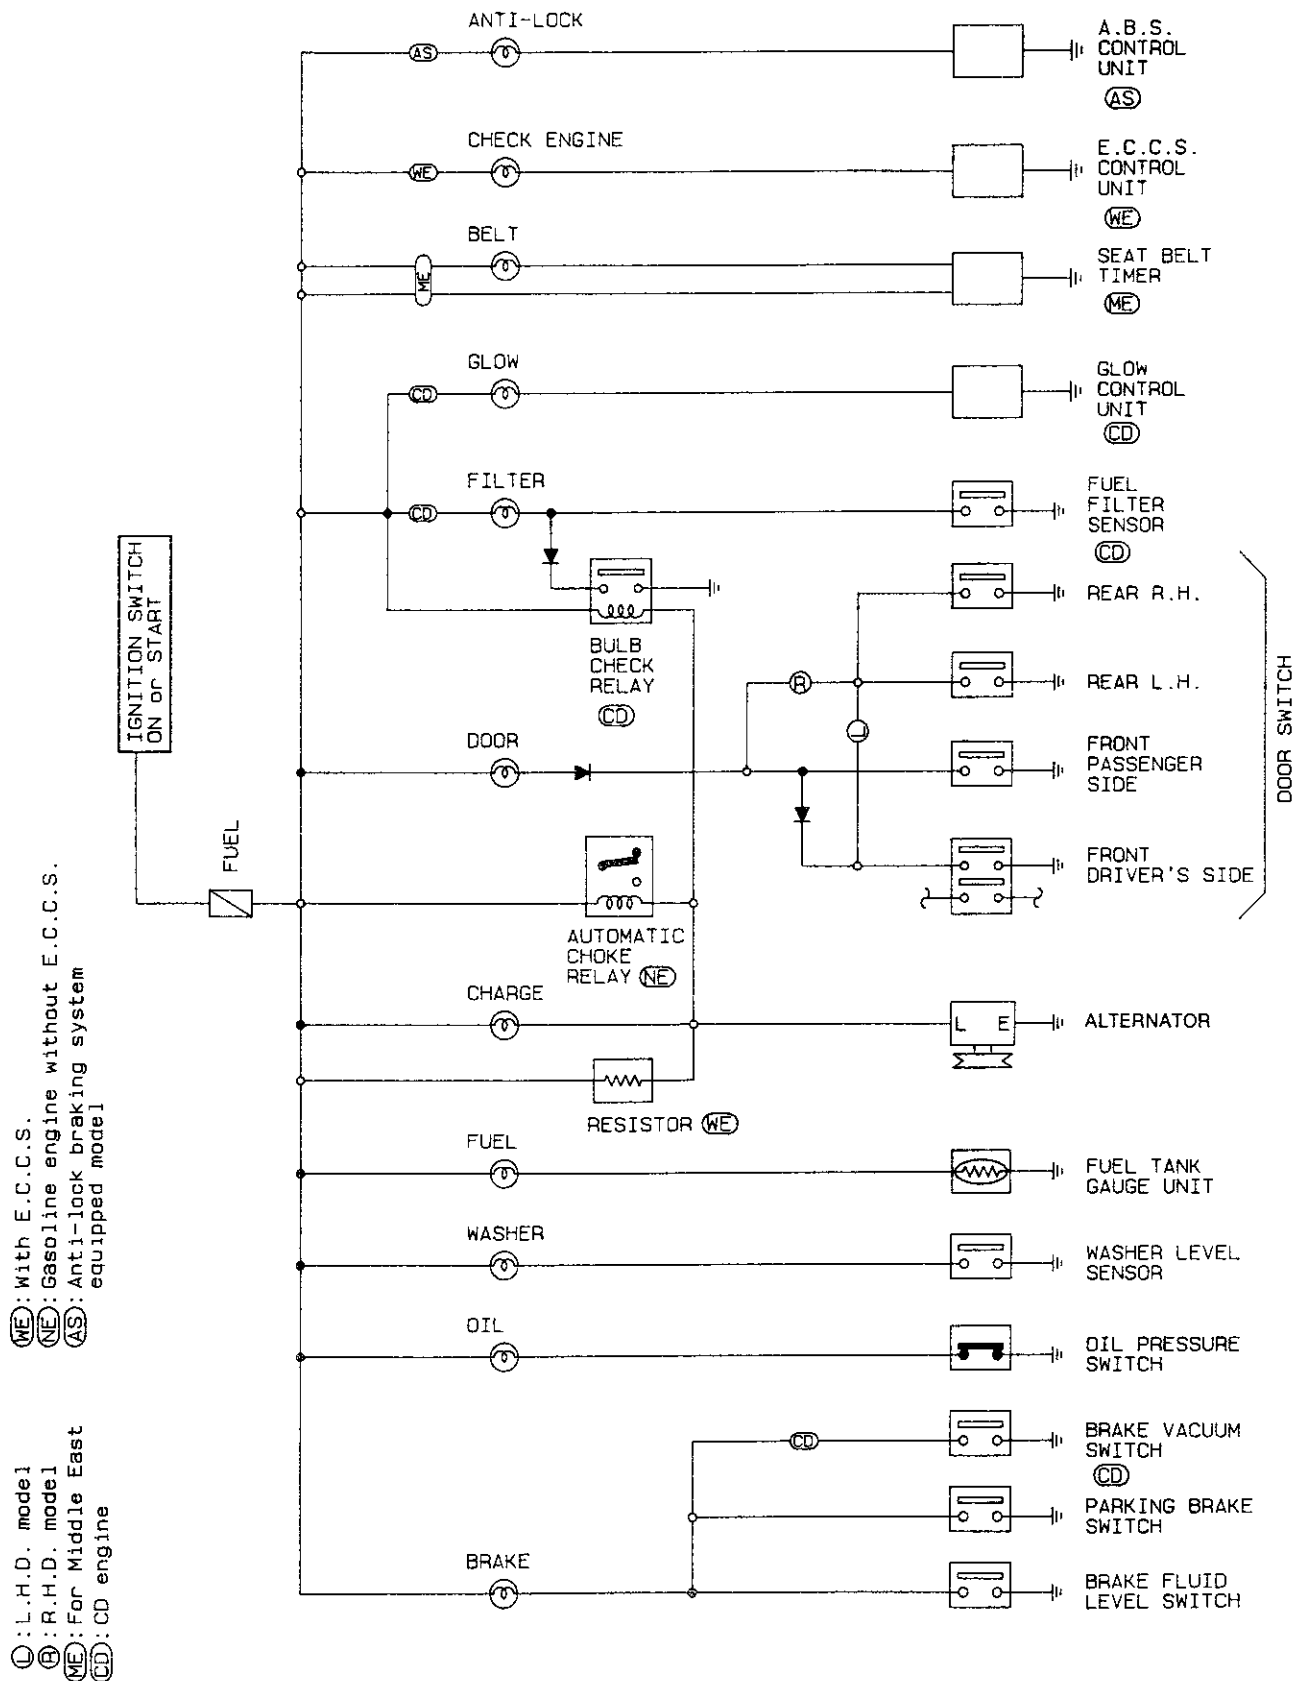

SEL316Q


Warning Lamps/Wiring Diagram

[illegible]

WARNING LAMPS AND BUZZER

Warning Lamps/Wiring Diagram (Cont'd)

NEEDLE TYPE WITH TACHOMETER (Non-turbo B13 L.H.D.)

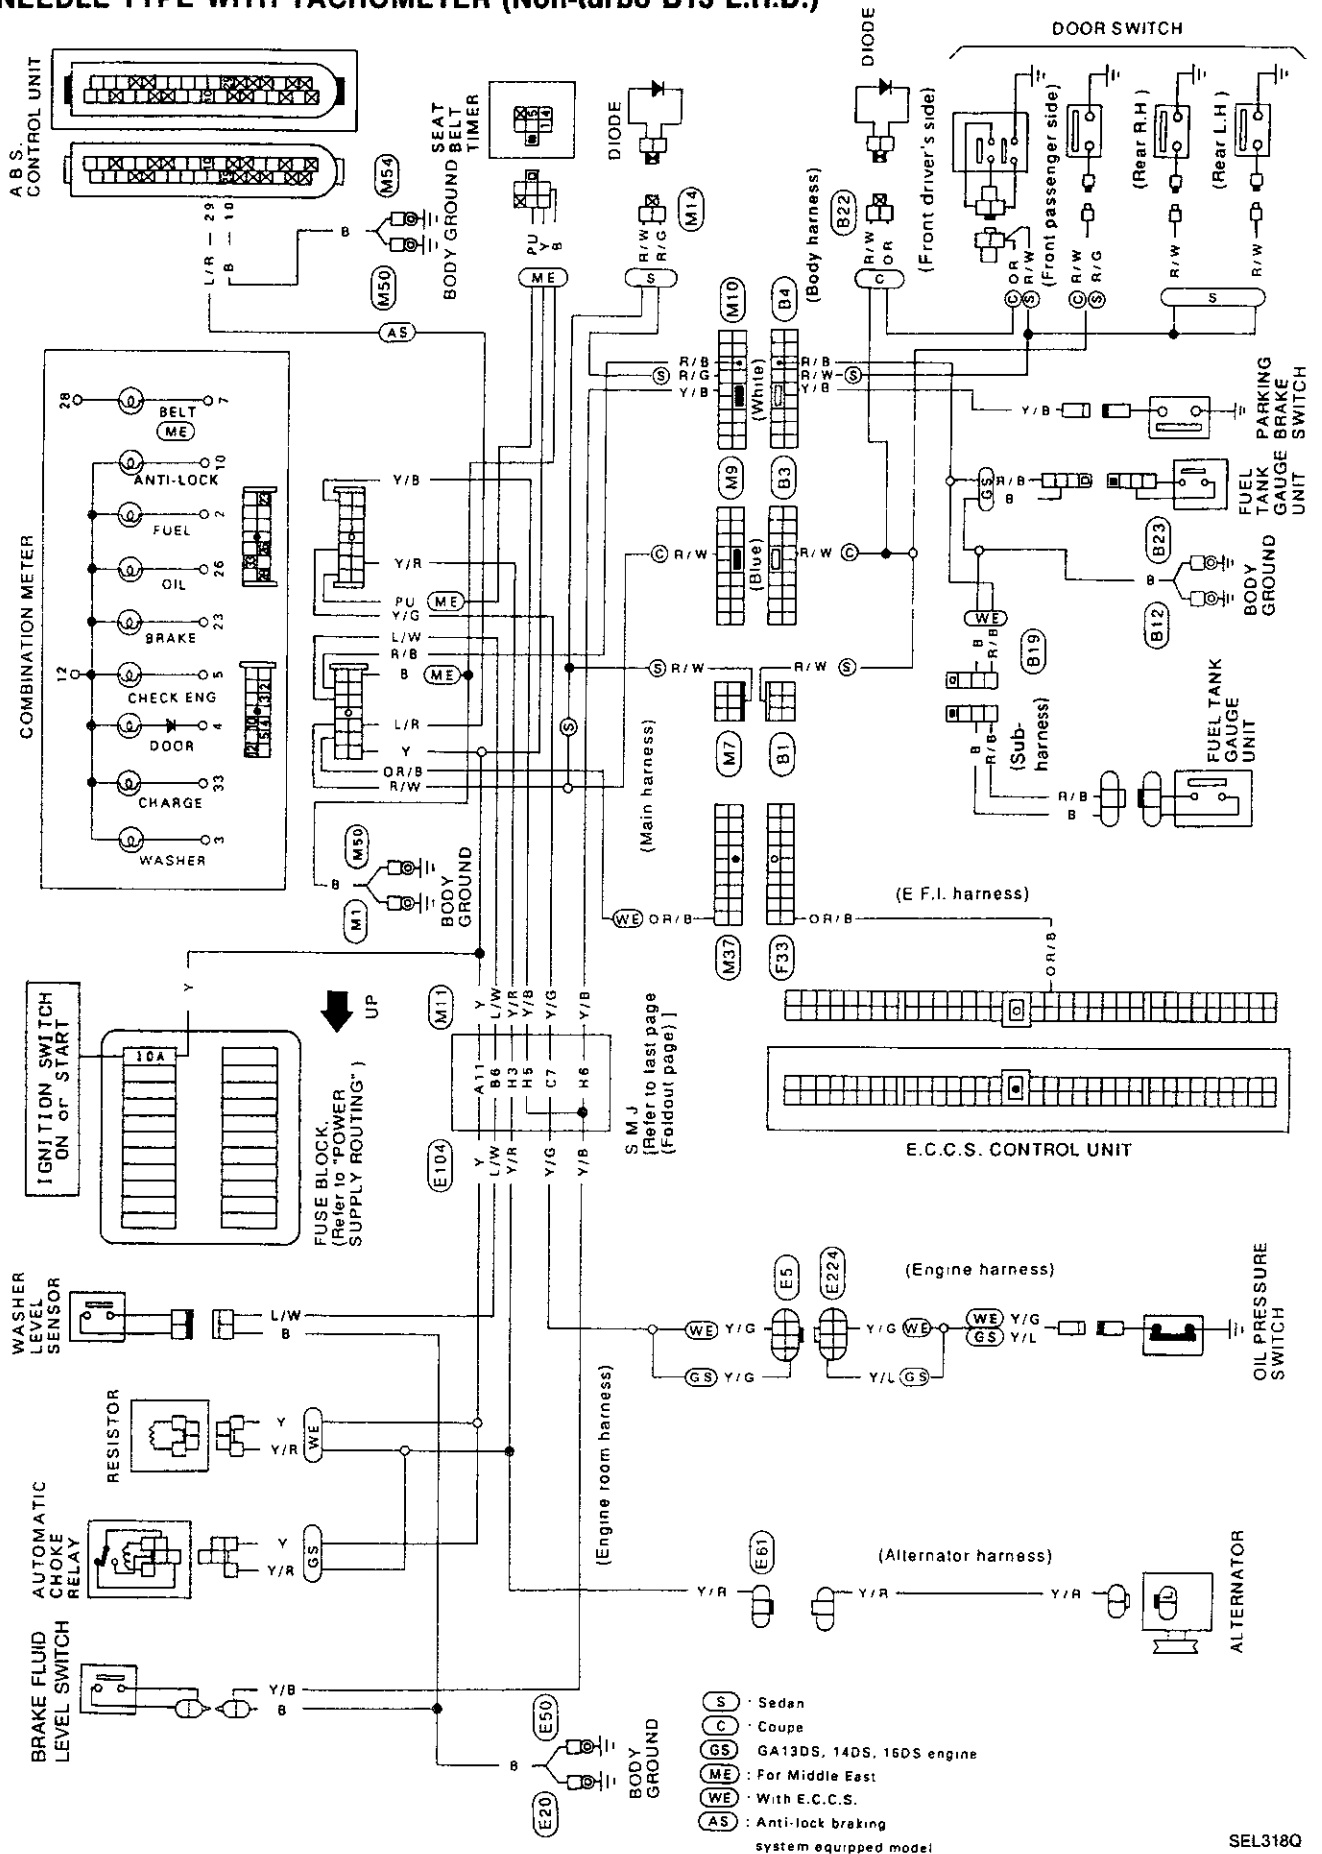

Warning Lamps/Wiring Diagram (Cont'd)


DOOR SWITCH



WARNING LAMPS AND BUZZER

Warning Lamps/Wiring Diagram (Cont'd)

NEEDLE TYPE WITH TACHOMETER (Non-turbo R.H.D.)

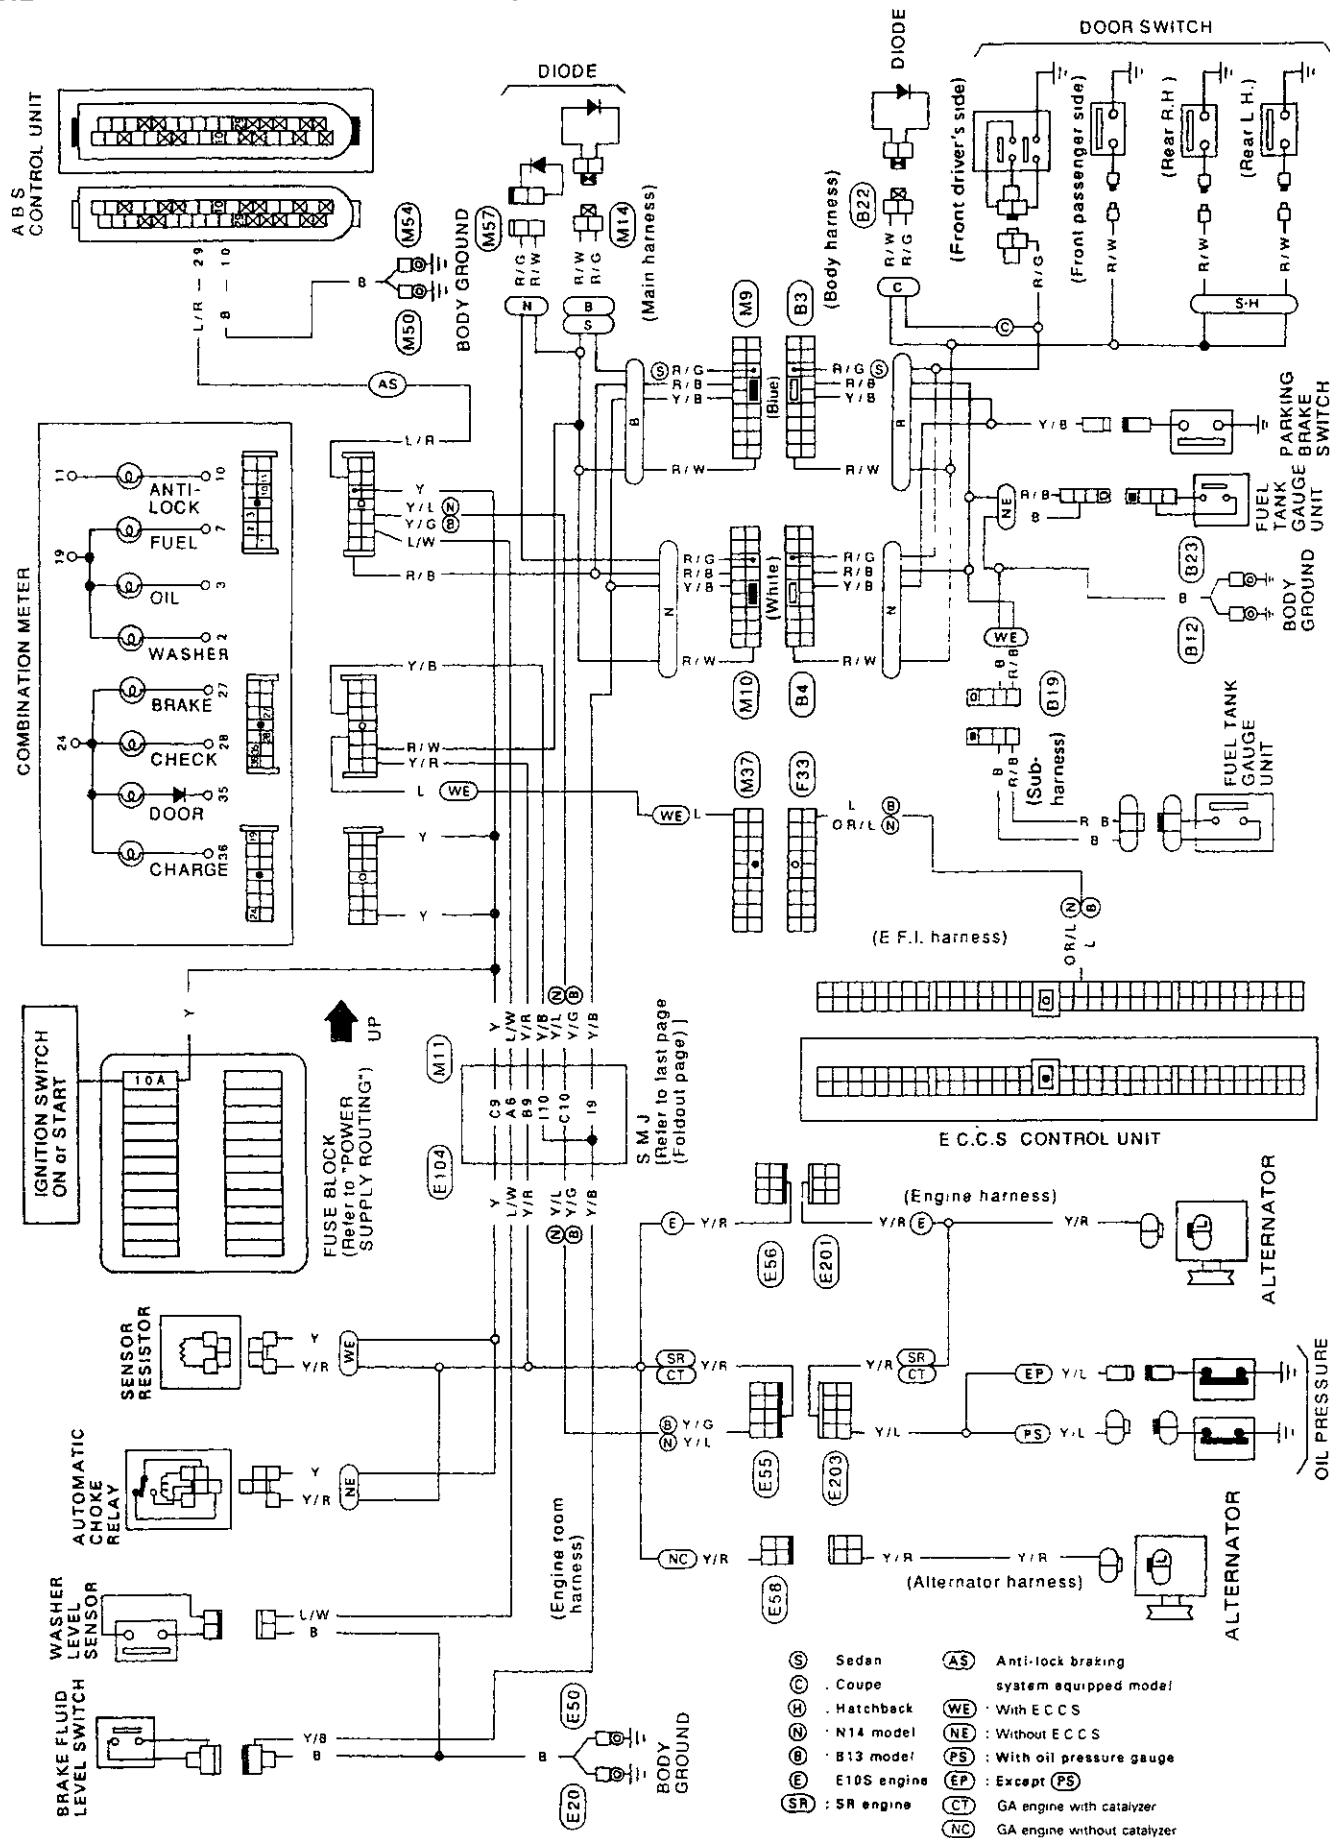

Warning Lamps/Wiring Diagram (Cont'd)

Diagram illustrating the wiring for the 1983-1984 Nissan 2400 SE, showing the connection of various components to the main harness and power supply.

Legend:

- B : B13 model
- N : N14 model
- GS : GA13DS, 14DS, 16DS engine
- CD : CD engine
- ME : For Middle East
- WR : CD engine with E.G.R.
- NW : CD engine without E.G.R.
- PW : N14 model with power window
- EW : N14 model without power window and B13 model

Wiring Components and Connections:

- COMBINATION METER:** Includes gauges for BELT, FILTER, GLOW, OIL, BRAKE, FUEL, DOOR, and CHARGE.
- SEAT BELT TIMER:** Connected to the main harness.
- DIODE:** Connected to the main harness.
- DOOR SWITCH:** Includes switches for Front driver's side, Front passenger side, Rear R.H., and Rear L.H.
- PARKING BRAKE SWITCH:** Connected to the main harness.
- FUEL TANK GAUGE UNIT:** Connected to the main harness.
- IGNITION SWITCH ON OF START:** Connected to the main harness.
- FUSE BLOCK:** Contains fuses for 10A, 15A, 20A, 25A, 30A, 35A, 40A, 45A, 50A, 55A, 60A, 65A, 70A, 75A, 80A, 85A, 90A, 95A, 100A.
- UP:** Upward arrow indicating power supply routing.
- Engine room harness:** Includes components like E104, E105, E106, E107, E108, E109, E110, E111, E112, E113, E114, E115, E116, E117, E118, E119, E120, E121, E122, E123, E124, E125, E126, E127, E128, E129, E130, E131, E132, E133, E134, E135, E136, E137, E138, E139, E140, E141, E142, E143, E144, E145, E146, E147, E148, E149, E150, E151, E152, E153, E154, E155, E156, E157, E158, E159, E160, E161, E162, E163, E164, E165, E166, E167, E168, E169, E170, E171, E172, E173, E174, E175, E176, E177, E178, E179, E180, E181, E182, E183, E184, E185, E186, E187, E188, E189, E190, E191, E192, E193, E194, E195, E196, E197, E198, E199, E200, E201, E202, E203, E204, E205, E206, E207, E208, E209, E210, E211, E212, E213, E214, E215, E216, E217, E218, E219, E220, E221, E222, E223, E224, E225, E226, E227, E228, E229, E230, E231, E232, E233, E234, E235, E236, E237, E238, E239, E240, E241, E242, E243, E244, E245, E246, E247, E248, E249, E250, E251, E252, E253, E254, E255, E256, E257, E258, E259, E260, E261, E262, E263, E264, E265, E266, E267, E268, E269, E270, E271, E272, E273, E274, E275, E276, E277, E278, E279, E280, E281, E282, E283, E284, E285, E286, E287, E288, E289, E290, E291, E292, E293, E294, E295, E296, E297, E298, E299, E300, E301, E302, E303, E304, E305, E306, E307, E308, E309, E310, E311, E312, E313, E314, E315, E316, E317, E318, E319, E320, E321, E322, E323, E324, E325, E326, E327, E328, E329, E330, E331, E332, E333, E334, E335, E336, E337, E338, E339, E340, E341, E342, E343, E344, E345, E346, E347, E348, E349, E350, E351, E352, E353, E354, E355, E356, E357, E358, E359, E360, E361, E362, E363, E364, E365, E366, E367, E368, E369, E370, E371, E372, E373, E374, E375, E376, E377, E378, E379, E380, E381, E382, E383, E384, E385, E386, E387, E388, E389, E390, E391, E392, E393, E394, E395, E396, E397, E398, E399, E400, E401, E402, E403, E404, E405, E406, E407, E408, E409, E410, E411, E412, E413, E414, E415, E416, E417, E418, E419, E420, E421, E422, E423, E424, E425, E426, E427, E428, E429, E430, E431, E432, E433, E434, E435, E436, E437, E438, E439, E440, E441, E442, E443, E444, E445, E446, E447, E448, E449, E450, E451, E452, E453, E454, E455, E456, E457, E458, E459, E460, E461, E462, E463, E464, E465, E466, E467, E468, E469, E470, E471, E472, E473, E474, E475, E476, E477, E478, E479, E480, E481, E482, E483, E484, E485, E486, E487, E488, E489, E490, E491, E492, E493, E494, E495, E496, E497, E498, E499, E500, E501, E502, E503, E504, E505, E506, E507, E508, E509, E510, E511, E512, E513, E514, E515, E516, E517, E518, E519, E520, E521, E522, E523, E524, E525, E526, E527, E528, E529, E530, E531, E532, E533, E534, E535, E536, E537, E538, E539, E540, E541, E542, E543, E544, E545, E546, E547, E548, E549, E550, E551, E552, E553, E554, E555, E556, E557, E558, E559, E560, E561, E562, E563, E564, E565, E566, E567, E568, E569, E570, E571, E572, E573, E574, E575, E576, E577, E578, E579, E580, E581, E582, E583, E584, E585, E586, E587, E588, E589, E590, E591, E592, E593, E594, E595, E596, E597, E598, E599, E600, E601, E602, E603, E604, E605, E606, E607, E608, E609, E610, E611, E612, E613, E614, E615, E616, E617, E618, E619, E620, E621, E622, E623, E624, E625, E626, E627, E628, E629, E630, E631, E632, E633, E634, E635, E636, E637, E638, E639, E640, E641, E642, E643, E644, E645, E646, E647, E648, E649, E650, E651, E652, E653, E654, E655, E656, E657, E658, E659, E660, E661, E662, E663, E664, E665, E666, E667, E668, E669, E670, E671, E672, E673, E674, E675, E676, E677, E678, E679, E680, E681, E682, E683, E684, E685, E686, E687, E688, E689, E690, E691, E692, E693, E694, E695, E696, E697, E698, E699, E700, E701, E702, E703, E704, E705, E706, E707, E708, E709, E710, E711, E712, E713, E714, E715, E716, E717, E718, E719, E720, E721, E722, E723, E724, E725, E726, E727, E728, E729, E730, E731, E732, E733, E734, E735, E736, E737, E738, E739, E740, E741, E742, E743, E744, E745, E746, E747, E748, E749, E750, E751, E752, E753, E754, E755, E756, E757, E758, E759, E760, E761, E762, E763, E764, E765, E766, E767, E768, E769, E770, E771, E772, E773, E774, E775, E776, E777, E778, E779, E780, E781, E782, E783, E784, E785, E786, E787, E788, E789, E790, E791, E792, E793, E794, E795, E796, E797, E798, E799, E800, E801, E802, E803, E804, E805, E806, E807, E808, E809, E810, E811, E812, E813, E814, E815, E816, E817, E818, E819, E820, E82

Warning Lamps/Wiring Diagram (Cont'd)

COMBINATION METER

- 10
- 20
- 30
- 32
- 13
- 23
- 12
- 22
- 28

IGNITION SWITCH ON or START

FUSE BLOCK
(Refer to "POWER SUPPLY ROUTING")

UP

ENGINE ROOM HARNESS

MAIN HARNESS

DIODE

DOOR SWITCH

Body harness

Front driver's side

Front passenger side

Rear R.H.

Rear L.H.

PARKING BRAKE SWITCH

FUEL TANK GAUGE UNIT

BODY GROUND

GLOW CONTROL UNIT

ALTERNATOR

OIL PRESSURE SWITCH

BRake FLUID LEVEL SWITCH

FUEL FILTER

BULB CHECK RELAY


AUTOMATIC CHOKE RELAY

Wiring Labels: Y, B, R, W, G, L, N, CD, M, E, GS, CT, NC, E20, E50, E56, E201, E203, E55, E67, E58, E59, E60, E61, E62, E63, E64, E65, E66, E67, E68, E69, E70, E71, E72, E73, E74, E75, E76, E77, E78, E79, E80, E81, E82, E83, E84, E85, E86, E87, E88, E89, E90, E91, E92, E93, E94, E95, E96, E97, E98, E99, E100, E101, E102, E103, E104, E105, E106, E107, E108, E109, E110, E111, E112, E113, E114, E115, E116, E117, E118, E119, E120, E121, E122, E123, E124, E125, E126, E127, E128, E129, E130, E131, E132, E133, E134, E135, E136, E137, E138, E139, E140, E141, E142, E143, E144, E145, E146, E147, E148, E149, E150, E151, E152, E153, E154, E155, E156, E157, E158, E159, E160, E161, E162, E163, E164, E165, E166, E167, E168, E169, E170, E171, E172, E173, E174, E175, E176, E177, E178, E179, E180, E181, E182, E183, E184, E185, E186, E187, E188, E189, E190, E191, E192, E193, E194, E195, E196, E197, E198, E199, E200, E201, E202, E203, E204, E205, E206, E207, E208, E209, E210, E211, E212, E213, E214, E215, E216, E217, E218, E219, E220, E221, E222, E223, E224, E225, E226, E227, E228, E229, E230, E231, E232, E233, E234, E235, E236, E237, E238, E239, E240, E241, E242, E243, E244, E245, E246, E247, E248, E249, E250, E251, E252, E253, E254, E255, E256, E257, E258, E259, E260, E261, E262, E263, E264, E265, E266, E267, E268, E269, E270, E271, E272, E273, E274, E275, E276, E277, E278, E279, E280, E281, E282, E283, E284, E285, E286, E287, E288, E289, E290, E291, E292, E293, E294, E295, E296, E297, E298, E299, E300, E301, E302, E303, E304, E305, E306, E307, E308, E309, E310, E311, E312, E313, E314, E315, E316, E317, E318, E319, E320, E321, E322, E323, E324, E325, E326, E327, E328, E329, E330, E331, E332, E333, E334, E335, E336, E337, E338, E339, E340, E341, E342, E343, E344, E345, E346, E347, E348, E349, E350, E351, E352, E353, E354, E355, E356, E357, E358, E359, E360, E361, E362, E363, E364, E365, E366, E367, E368, E369, E370, E371, E372, E373, E374, E375, E376, E377, E378, E379, E380, E381, E382, E383, E384, E385, E386, E387, E388, E389, E390, E391, E392, E393, E394, E395, E396, E397, E398, E399, E400, E401, E402, E403, E404, E405, E406, E407, E408, E409, E410, E411, E412, E413, E414, E415, E416, E417, E418, E419, E420, E421, E422, E423, E424, E425, E426, E427, E428, E429, E430, E431, E432, E433, E434, E435, E436, E437, E438, E439, E440, E441, E442, E443, E444, E445, E446, E447, E448, E449, E450, E451, E452, E453, E454, E455, E456, E457, E458, E459, E460, E461, E462, E463, E464, E465, E466, E467, E468, E469, E470, E471, E472, E473, E474, E475, E476, E477, E478, E479, E480, E481, E482, E483, E484, E485, E486, E487, E488, E489, E490, E491, E492, E493, E494, E495, E496, E497, E498, E499, E500, E501, E502, E503, E504, E505, E506, E507, E508, E509, E510, E511, E512, E513, E514, E515, E516, E517, E518, E519, E520, E521, E522, E523, E524, E525, E526, E527, E528, E529, E530, E531, E532, E533, E534, E535, E536, E537, E538, E539, E540, E541, E542, E543, E544, E545, E546, E547, E548, E549, E550, E551, E552, E553, E554, E555, E556, E557, E558, E559, E560, E561, E562, E563, E564, E565, E566, E567, E568, E569, E570, E571, E572, E573, E574, E575, E576, E577, E578, E579, E580, E581, E582, E583, E584, E585, E586, E587, E588, E589, E590, E591, E592, E593, E594, E595, E596, E597, E598, E599, E600, E601, E602, E603, E604, E605, E606, E607, E608, E609, E610, E611, E612, E613, E614, E615, E616, E617, E618, E619, E620, E621, E622, E623, E624, E625, E626, E627, E628, E629, E630, E631, E632, E633, E634, E635, E636, E637, E638, E639, E640, E641, E642, E643, E644, E645, E646, E647, E648, E649, E650, E651, E652, E653, E654, E655, E656, E657, E658, E659, E660, E661, E662, E663, E664, E665, E666, E667, E668, E669, E670, E671, E672, E673, E674, E675, E676, E677, E678, E679, E680, E681, E682, E683, E684, E685, E686, E687, E688, E689, E690, E691, E692, E693, E694, E695, E696, E697, E698, E699, E700, E701, E702, E703, E704, E705, E706, E707, E708, E709, E710, E711, E712, E713, E714, E715, E716, E717, E718, E719, E720, E721, E722, E723, E724, E725, E726, E727, E728, E729, E730, E731, E732, E733, E734, E735, E736, E737, E738, E739, E740, E741, E742, E743, E744, E745, E746, E747, E748, E749, E750, E751, E752, E753, E754, E755, E756, E757, E758, E759, E760, E761, E762, E763, E764, E765, E766, E767, E768, E769, E770, E771, E772, E773, E774, E775, E776, E777, E778, E779

WARNING LAMPS AND BUZZER

Warning Lamps/Wiring Diagram (Cont'd)


DIGITAL TYPE (L.H.D.)

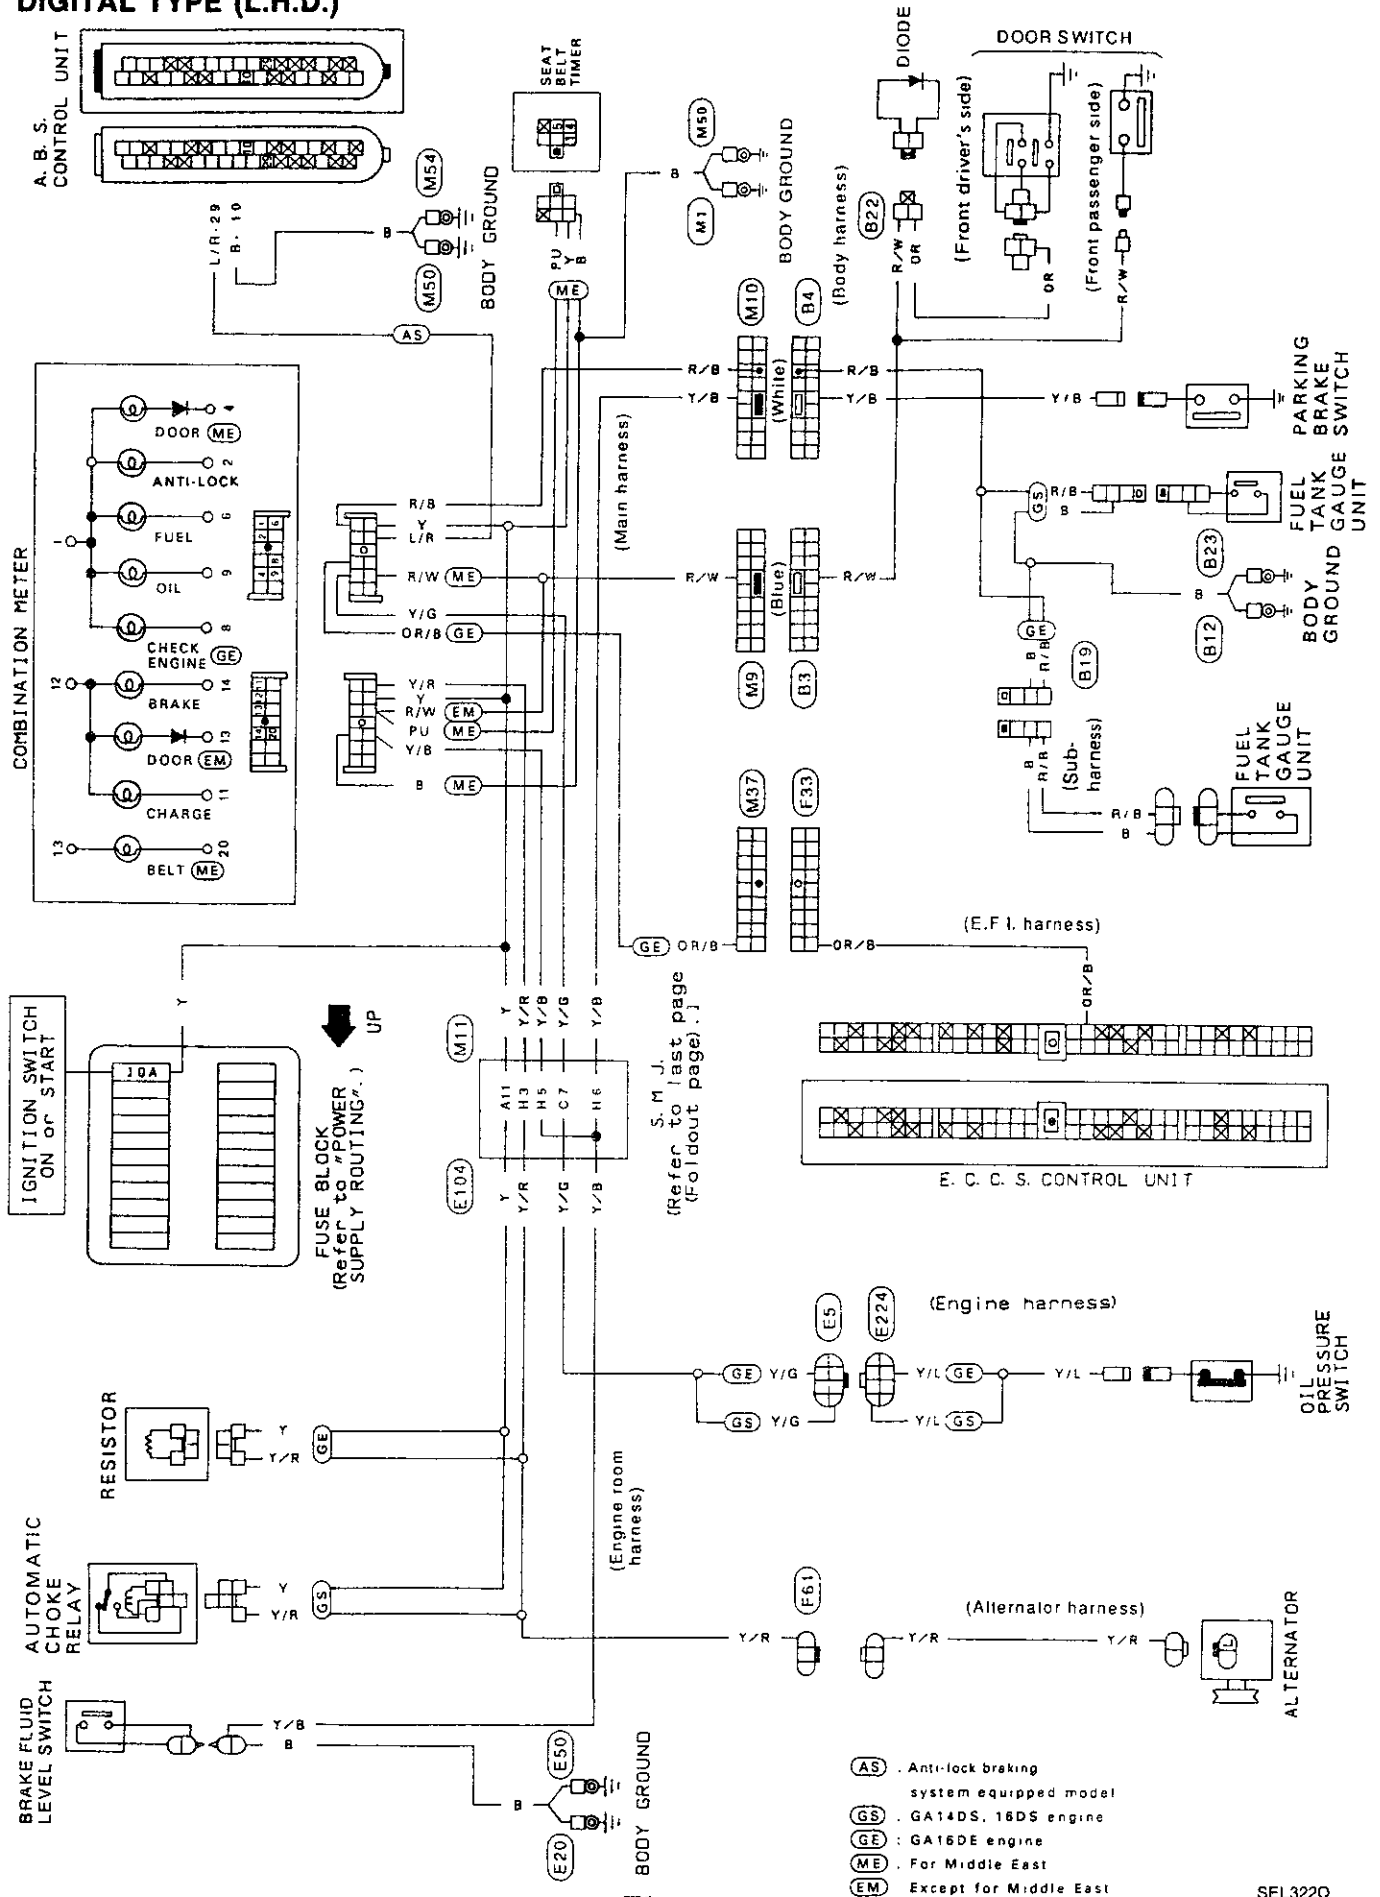

WARNING LAMPS AND BUZZER

Warning Lamps/Wiring Diagram (Cont'd)


DIGITAL TYPE (R.H.D.)

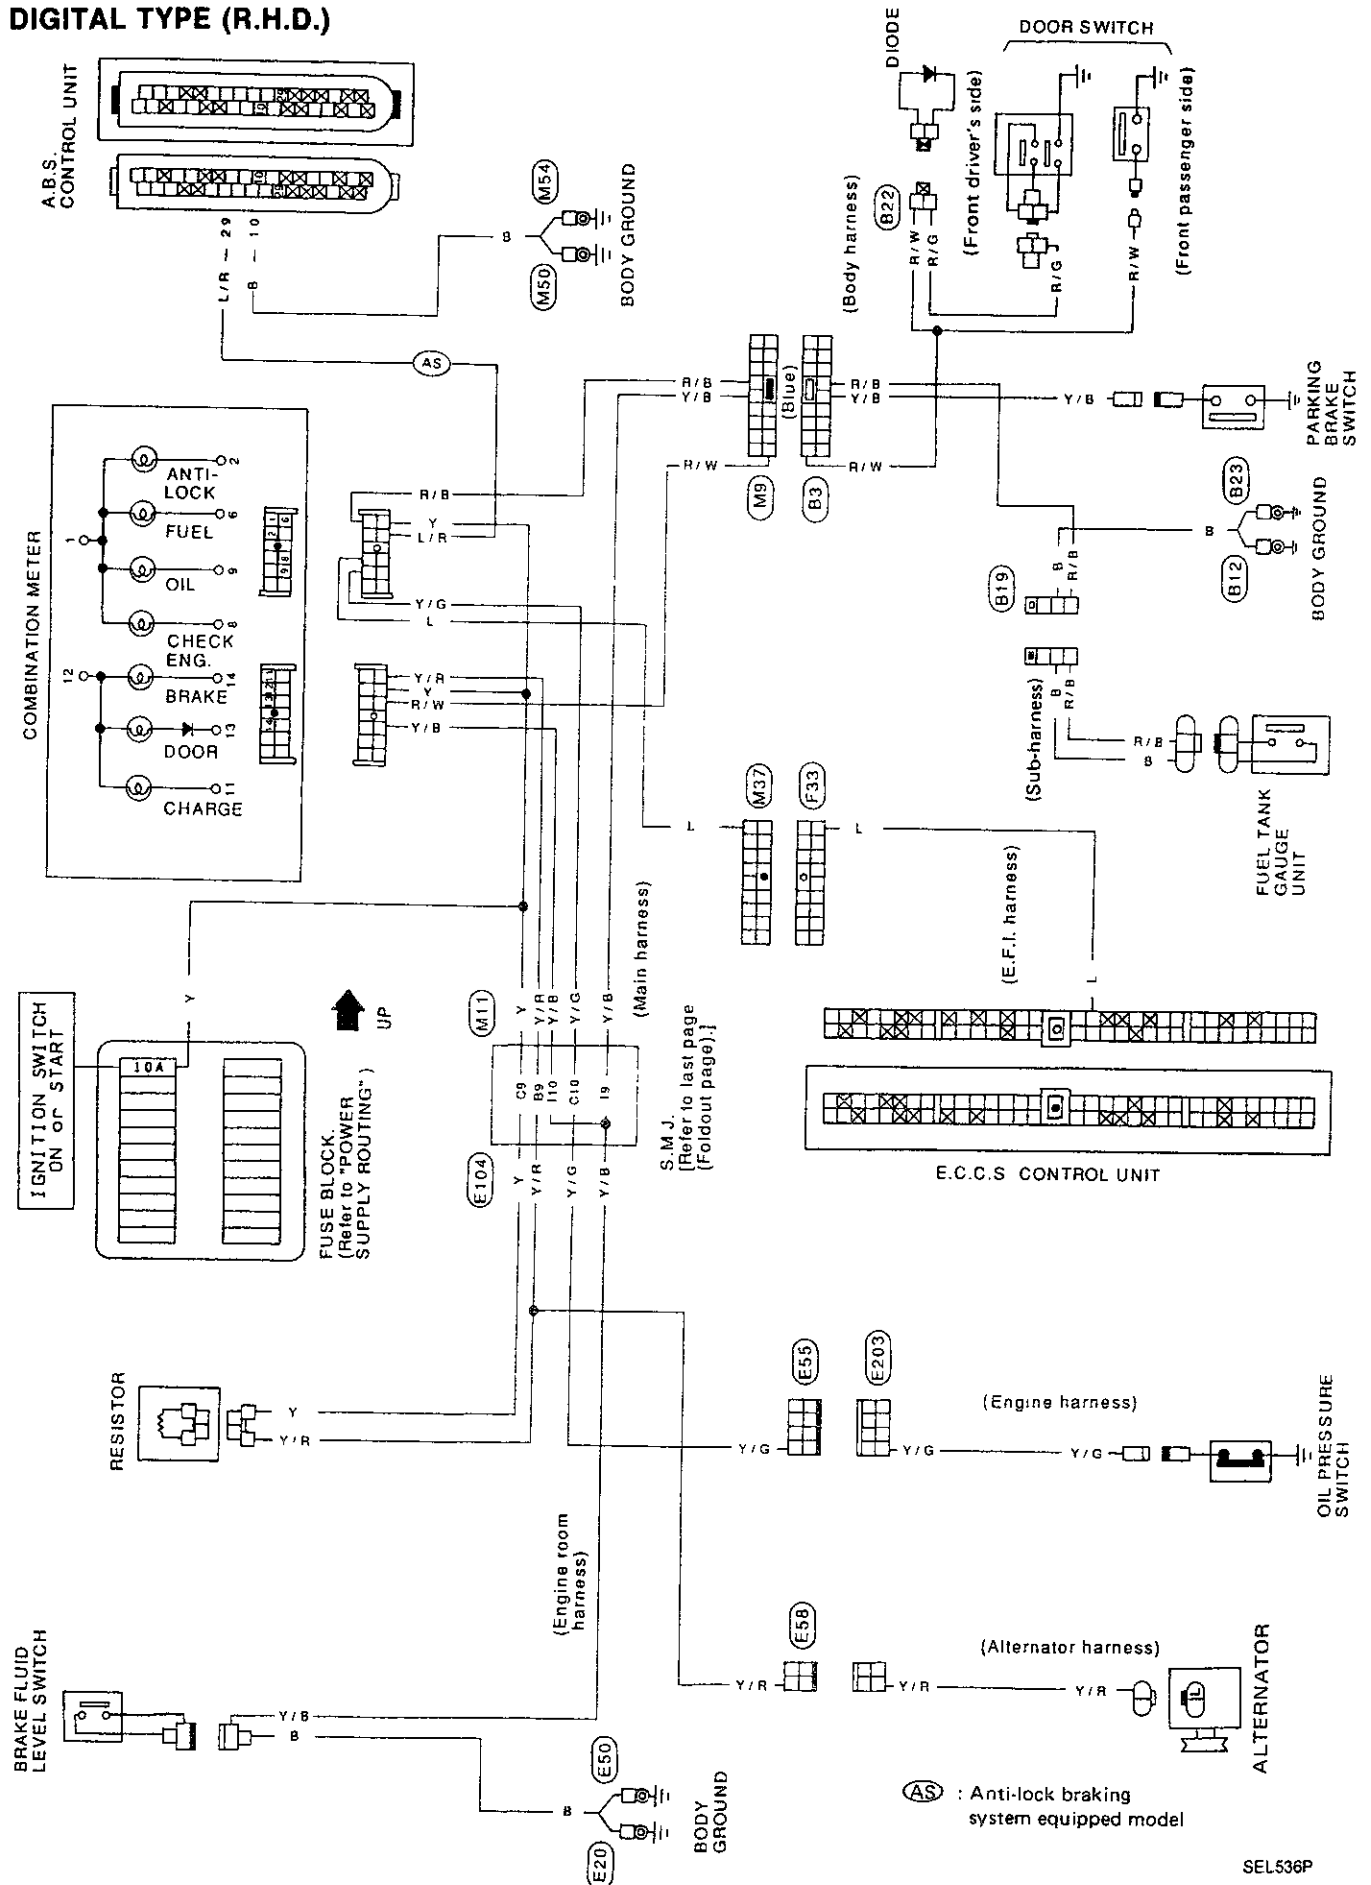

WARNING LAMPS AND BUZZER

Warning Buzzer/Wiring Diagram

LIGHT WARNING (Type-I)

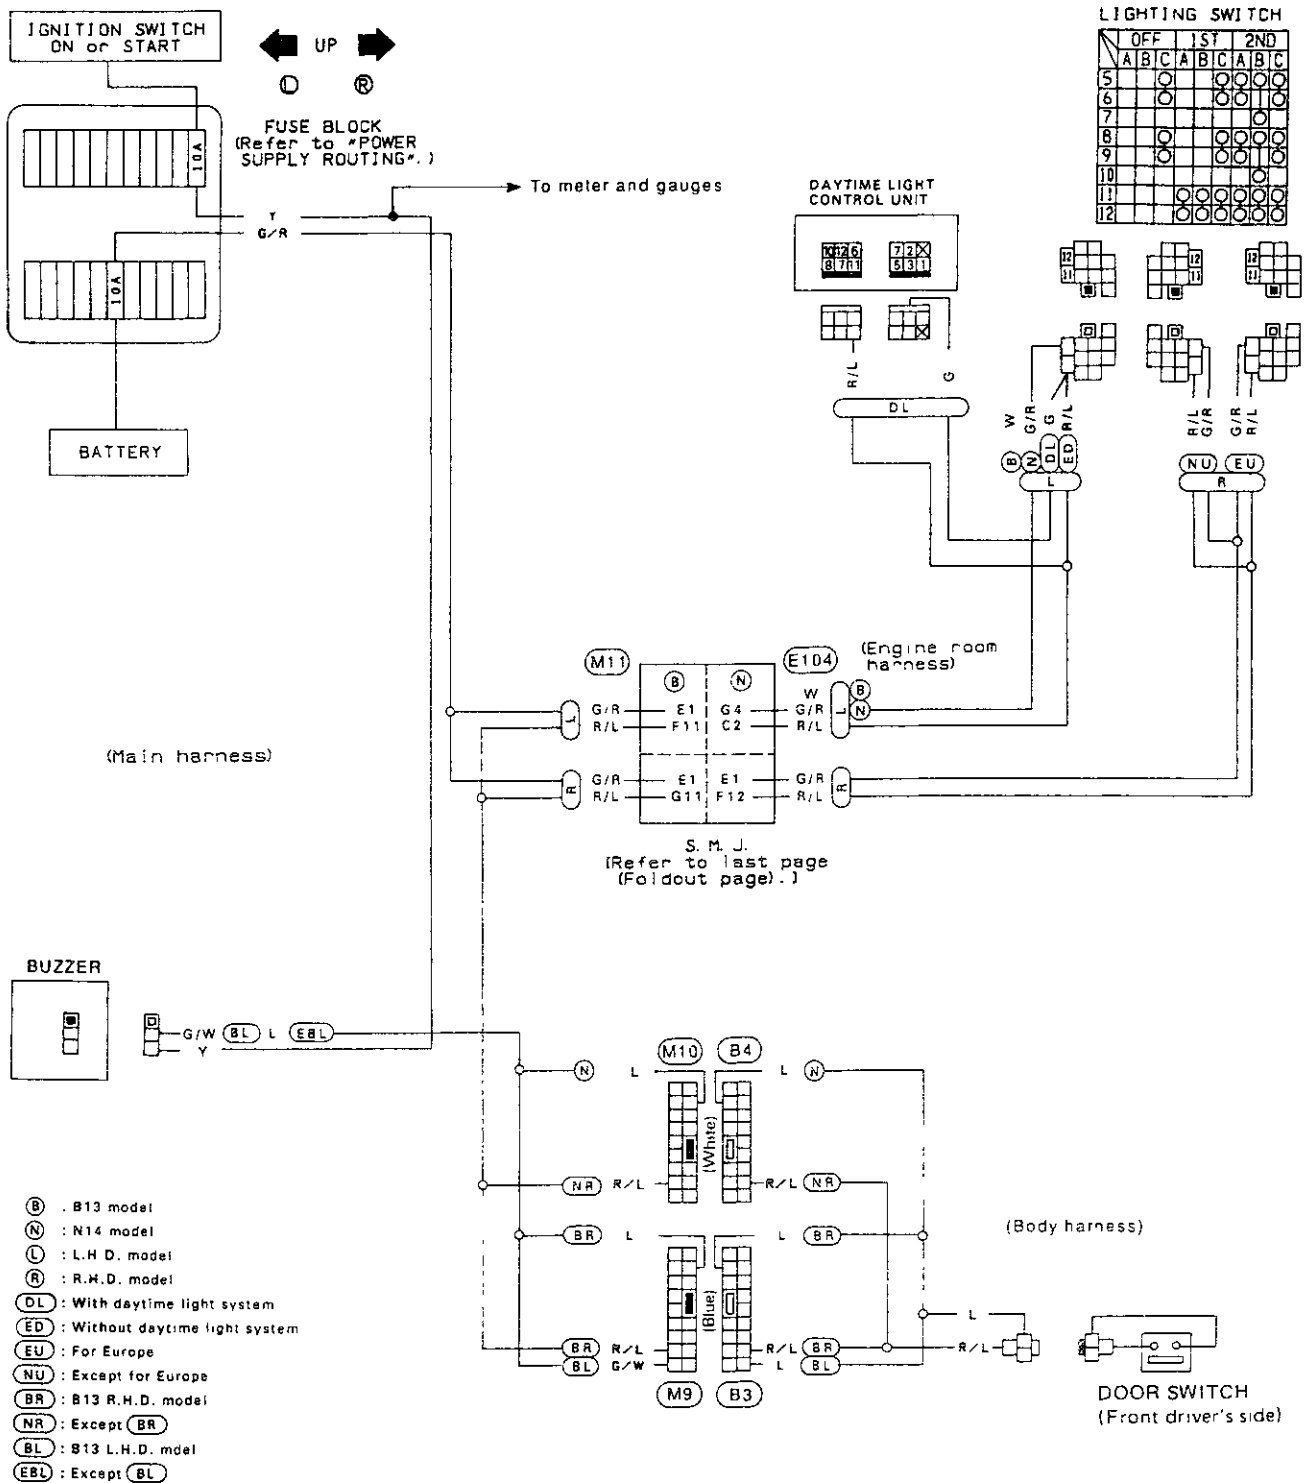


SEL323Q

WARNING LAMPS AND BUZZER

Warning Buzzer/Wiring Diagram (Cont'd)


LIGHT WARNING (Type-II)

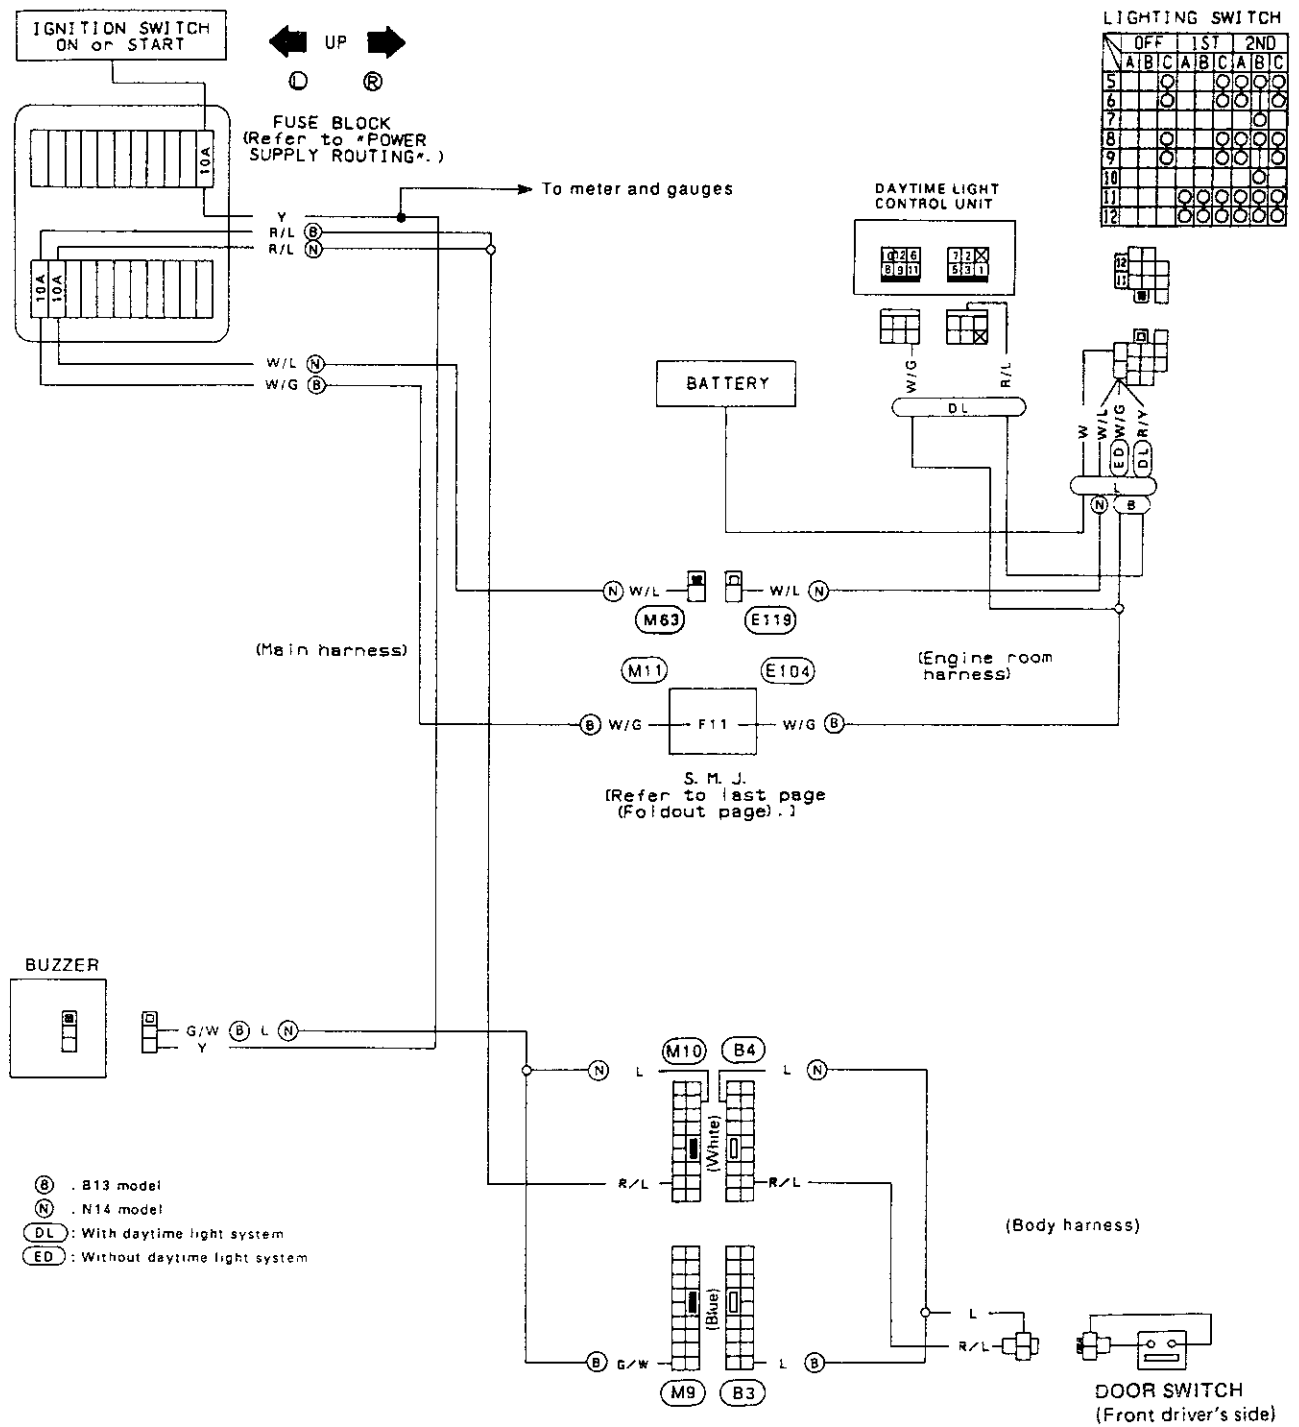

WARNING LAMPS AND BUZZER

Warning Chime/Wiring Diagram


SEAT BELT WARNING

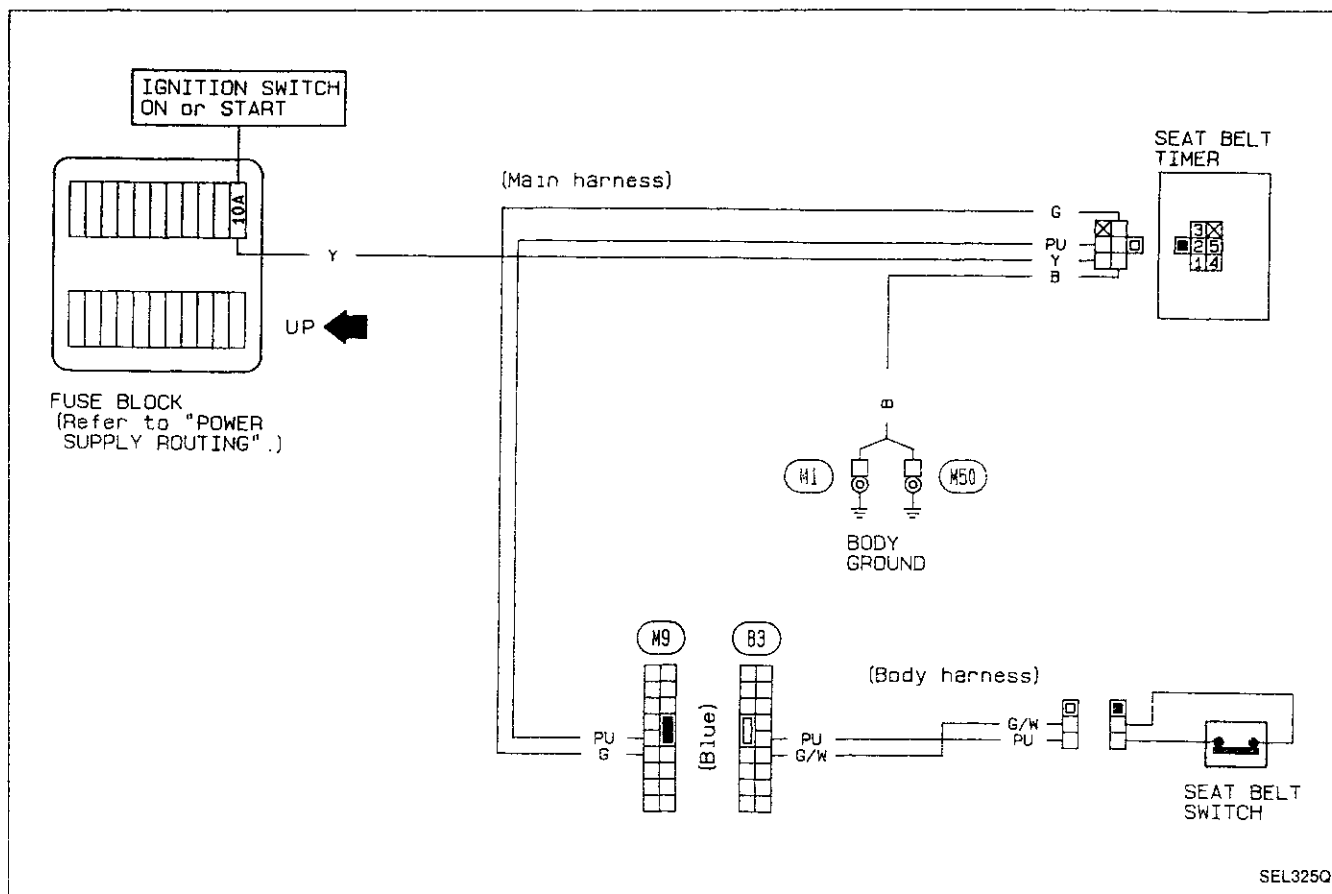


WARNING LAMPS AND BUZZER

Warning Chime/Wiring Diagram (Cont'd)

SPEED WARNING

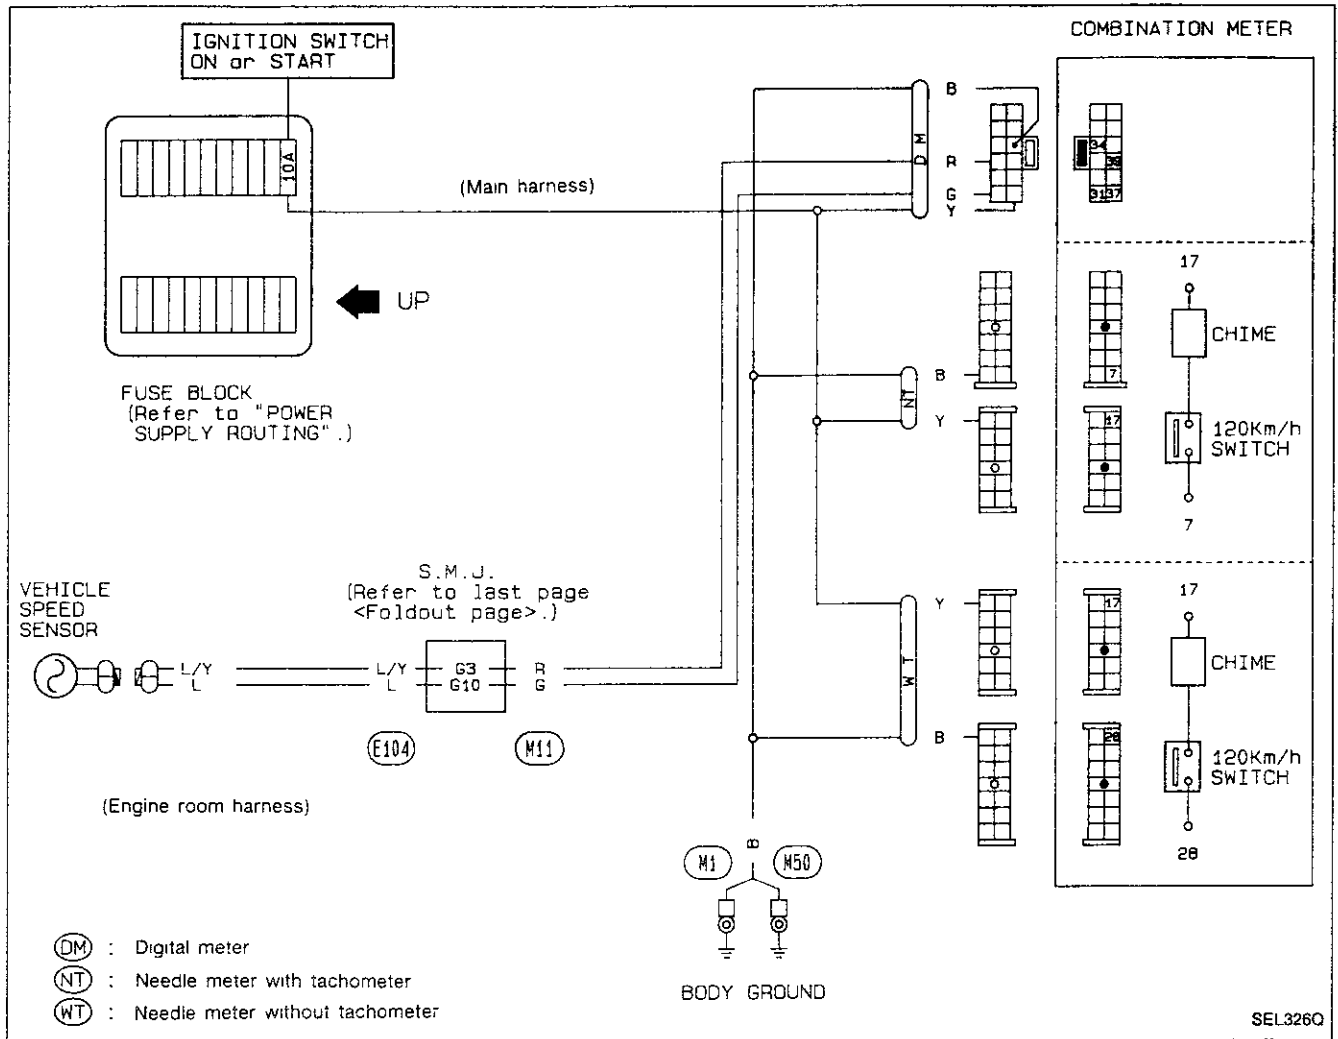

WARNING LAMPS AND BUZZER

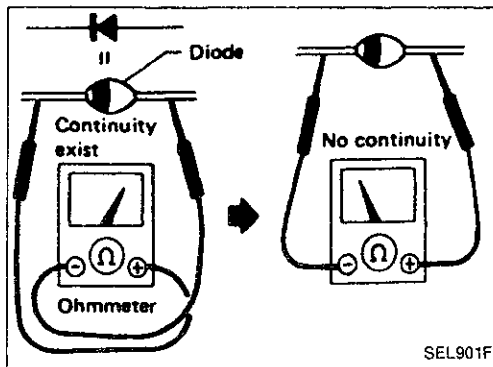


Diode Check


- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure at left.

- Diodes for warning lamps are built into the combination meter printed circuit.

Refer to "Combination Meter".

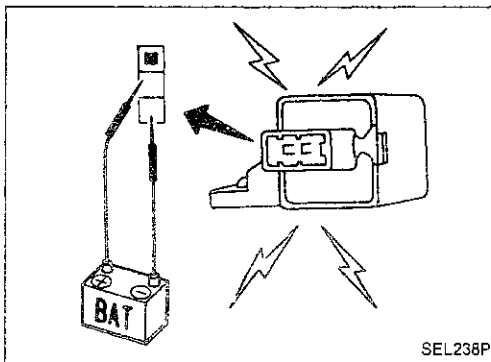

Warning Buzzer Check

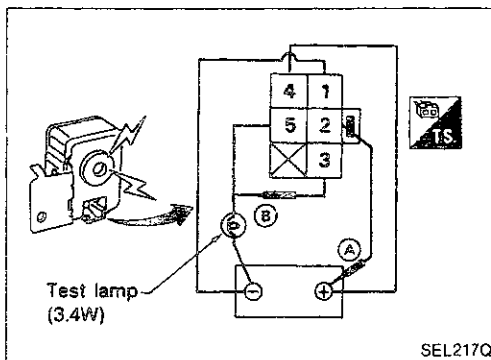


Seat Belt Timer Check

Connect as shown in the figure.

- Ⓐ ... Test lamp comes on about 6 seconds.
- Ⓐ and Ⓑ ... Test lamp comes on about 6 seconds and chime rings.


Front Wiper and Washer/Wiring Diagram

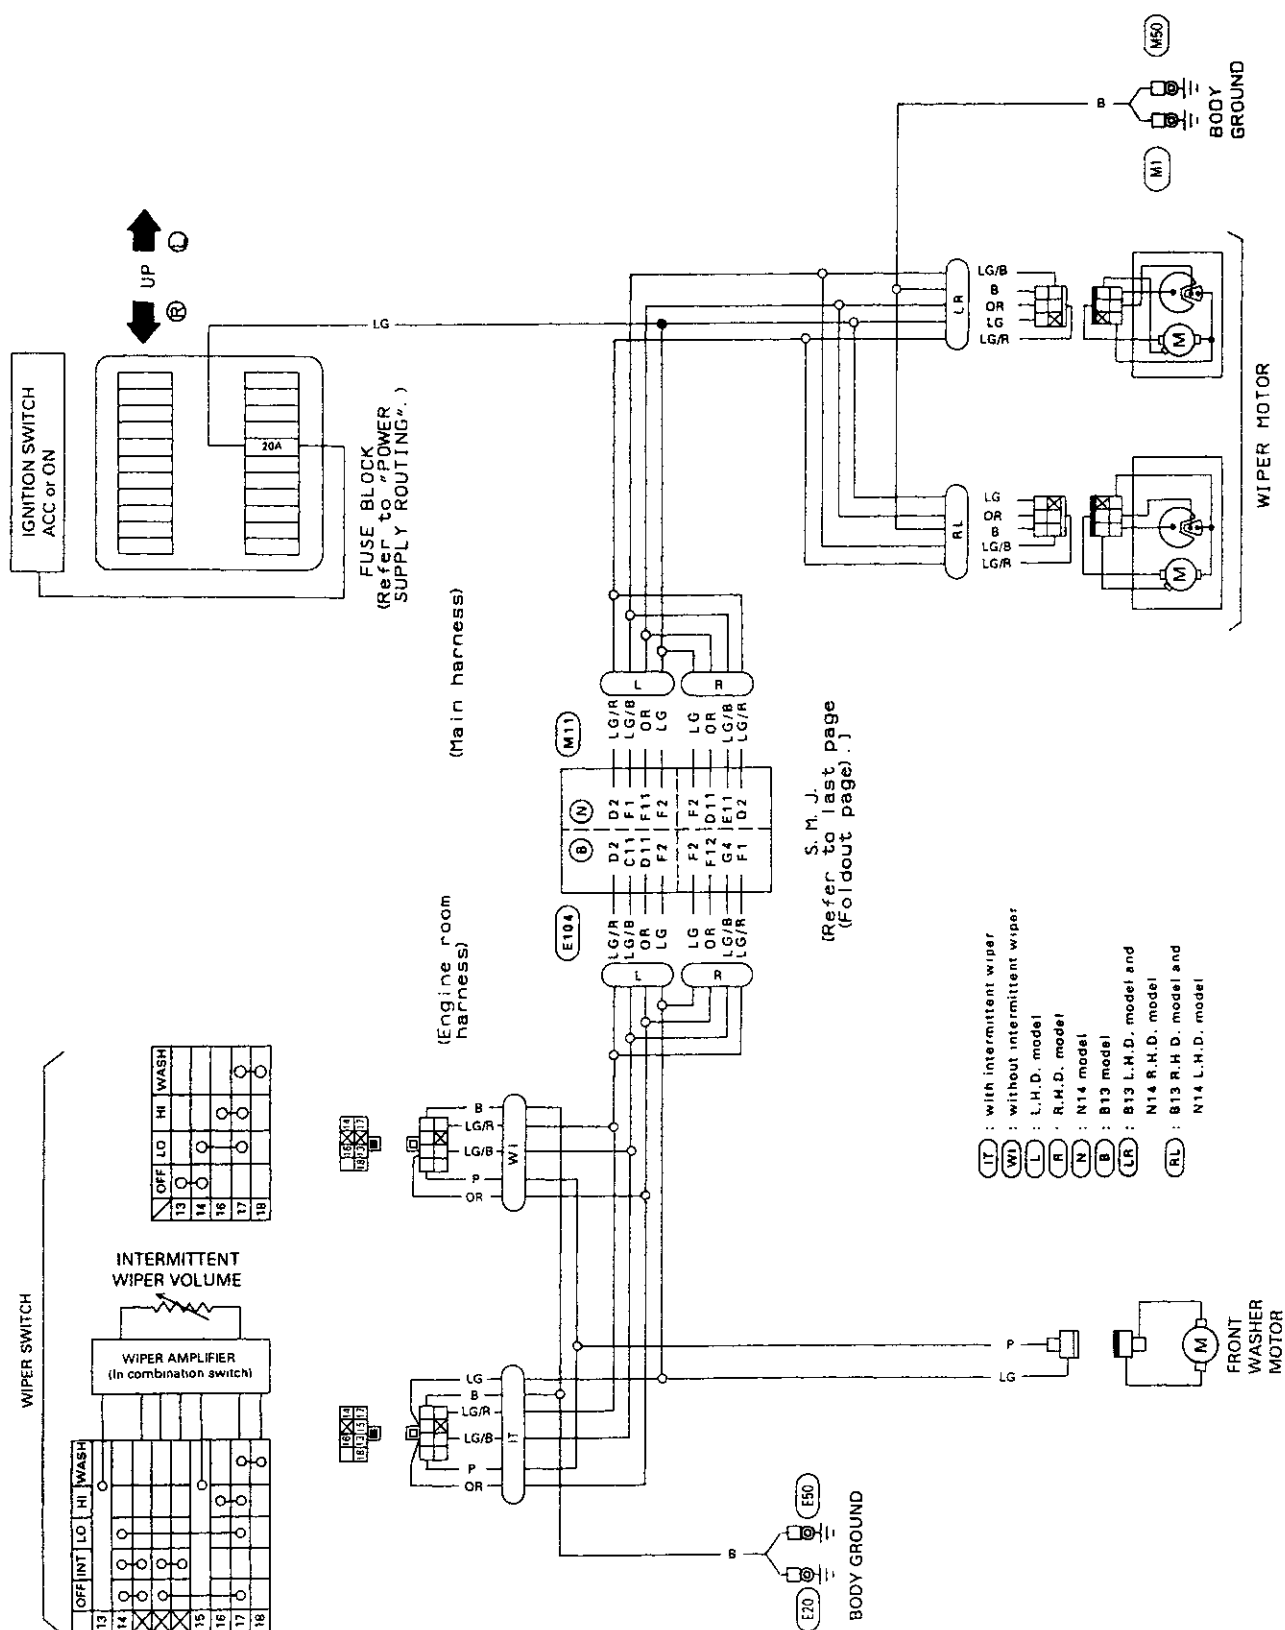

WIPER AND WASHER


Rear Wiper and Washer/Wiring Diagram

B13 L.H.D. MODELS

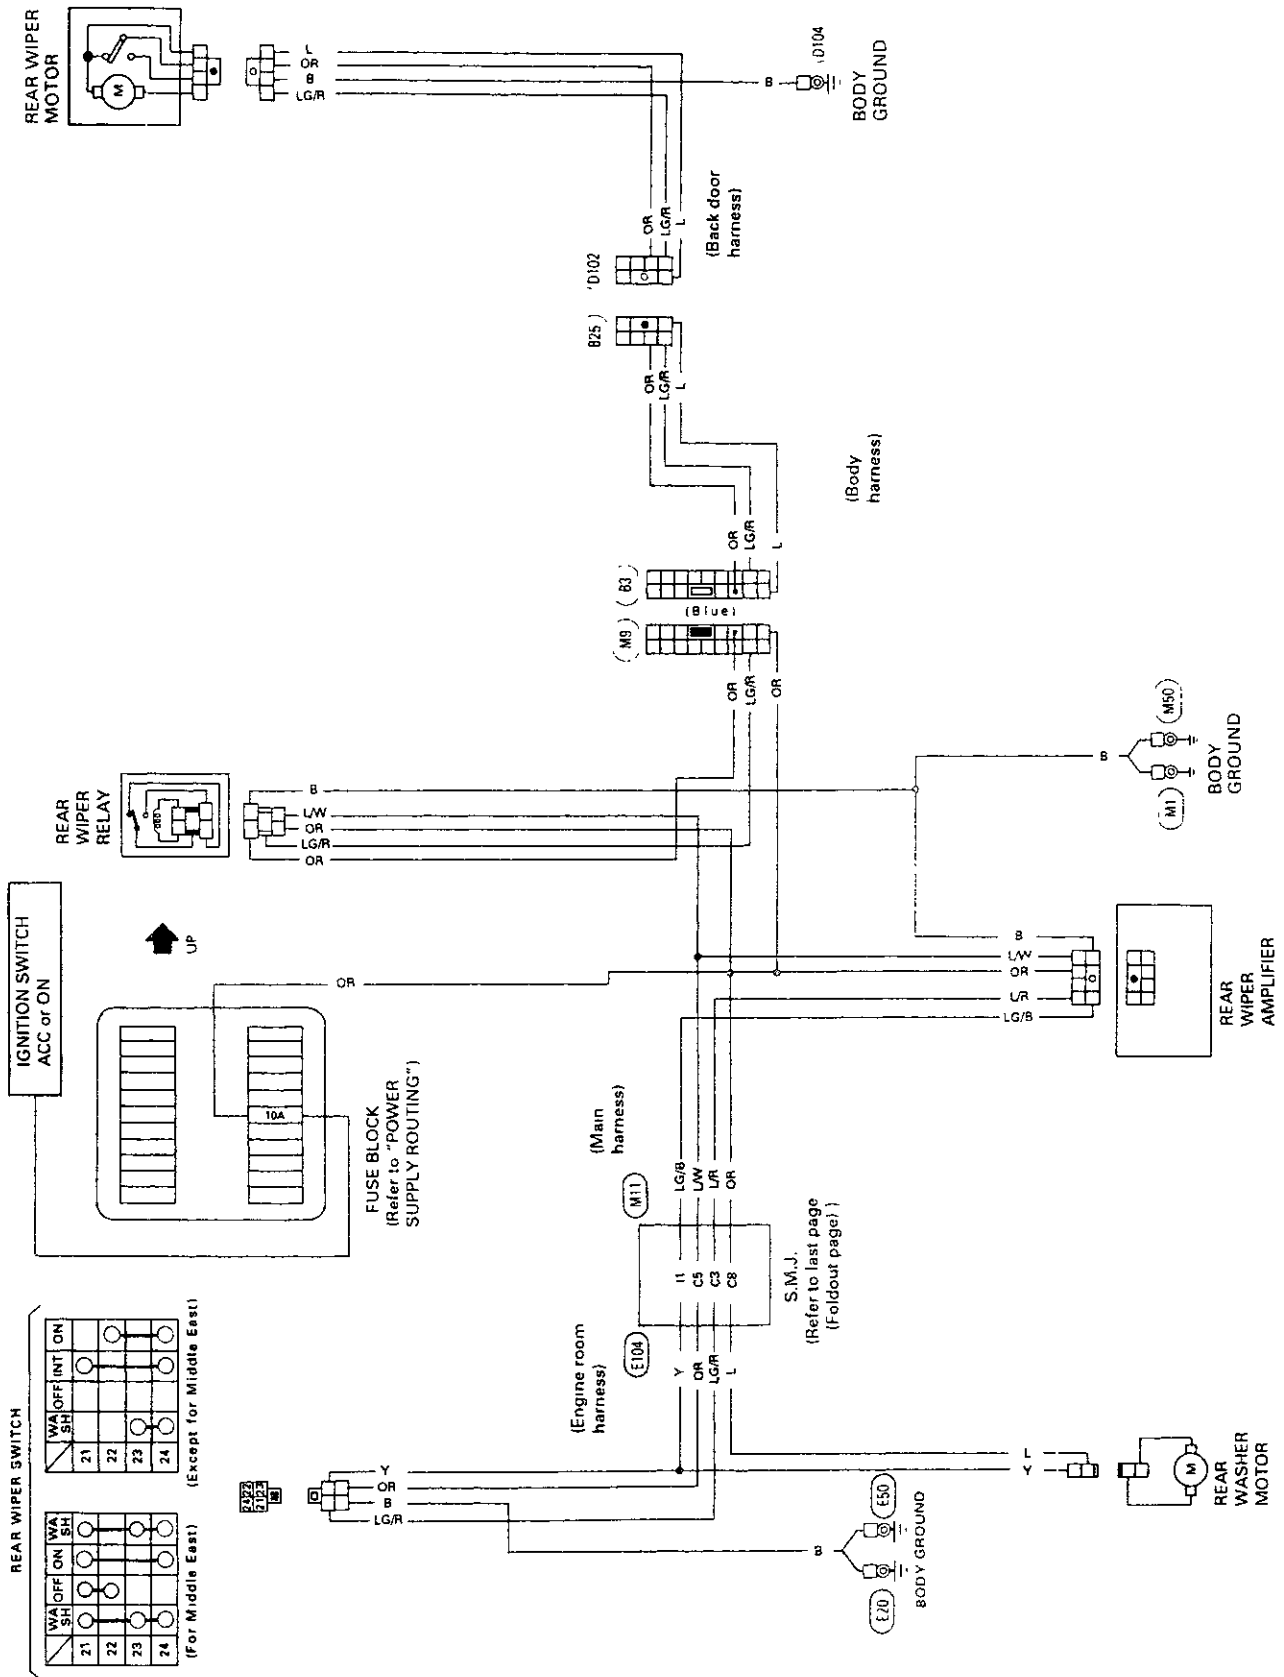

SEL328Q


Rear Wiper and Washer/Wiring Diagram (Cont'd)

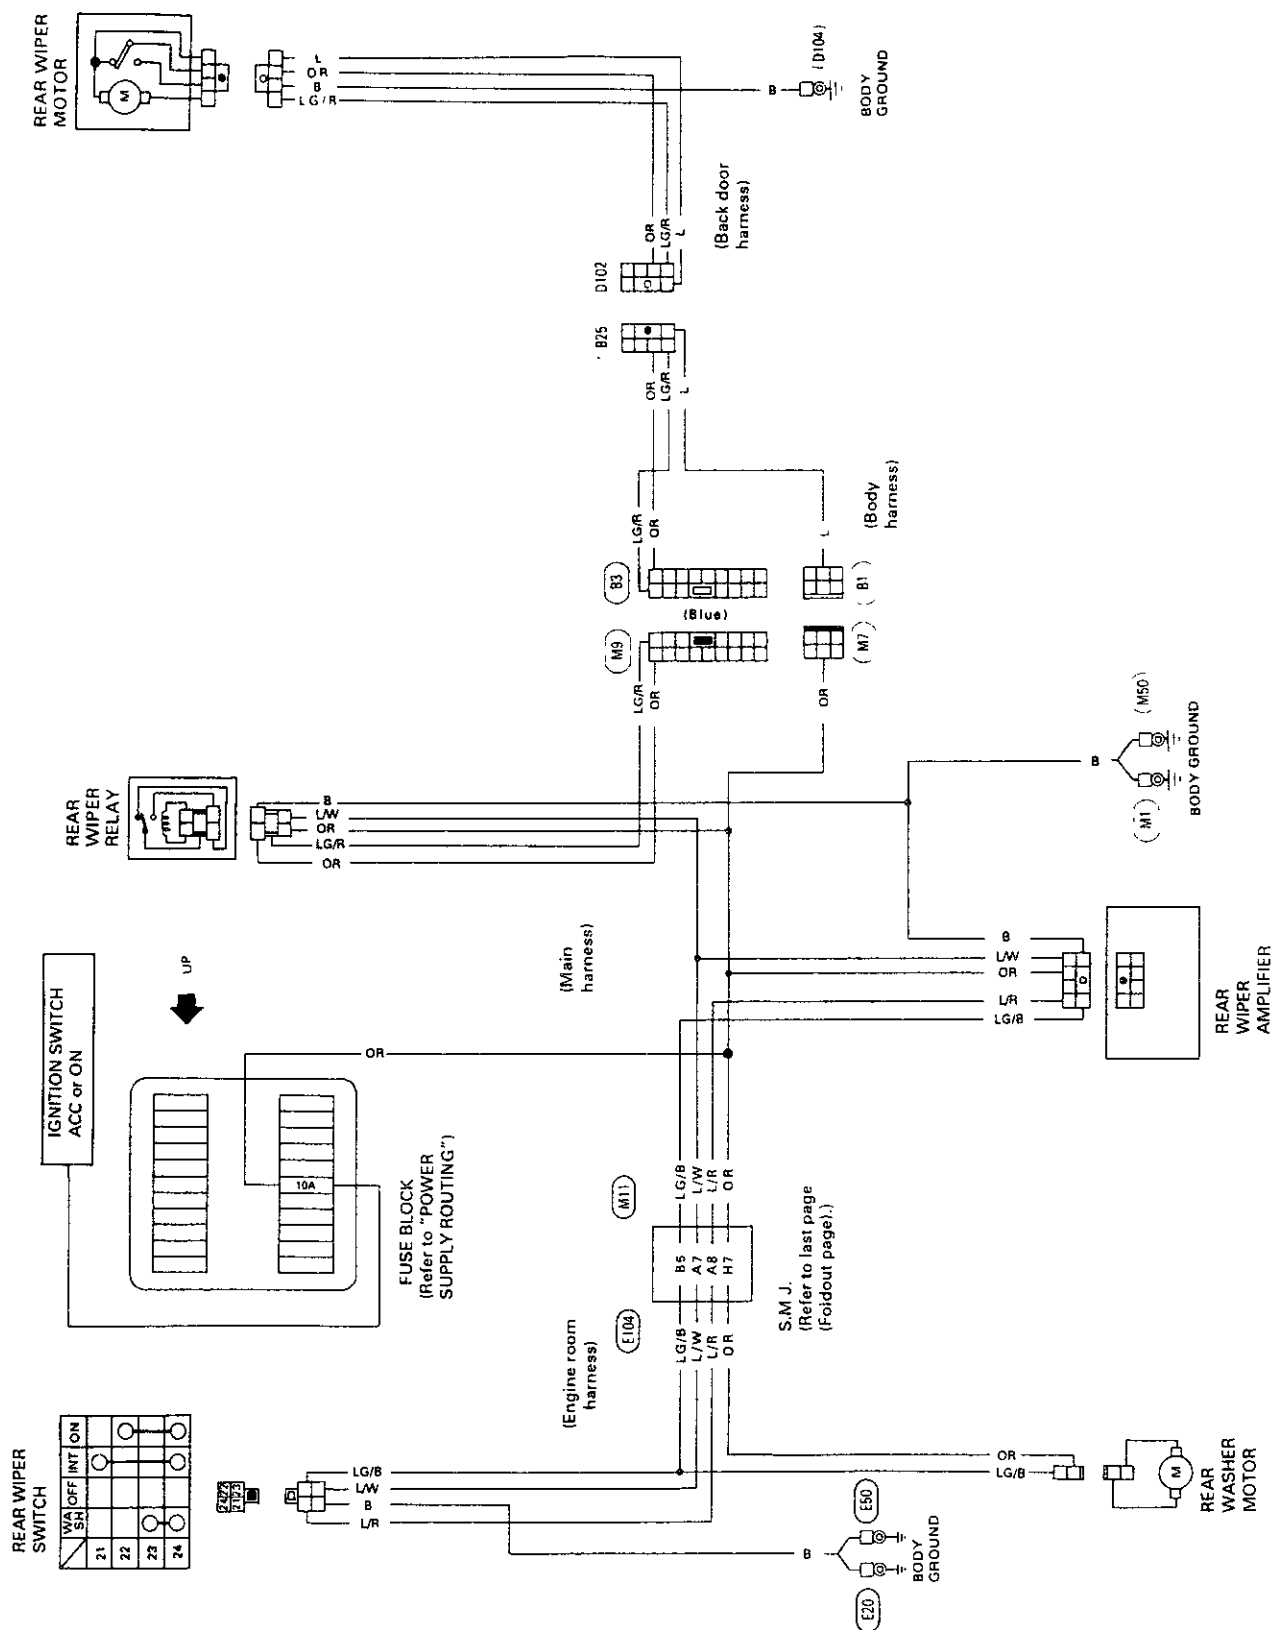B13 R.H.D. MODELS

WIPER AND WASHER

Rear Wiper and Washer/Wiring Diagram (Cont'd)

N14

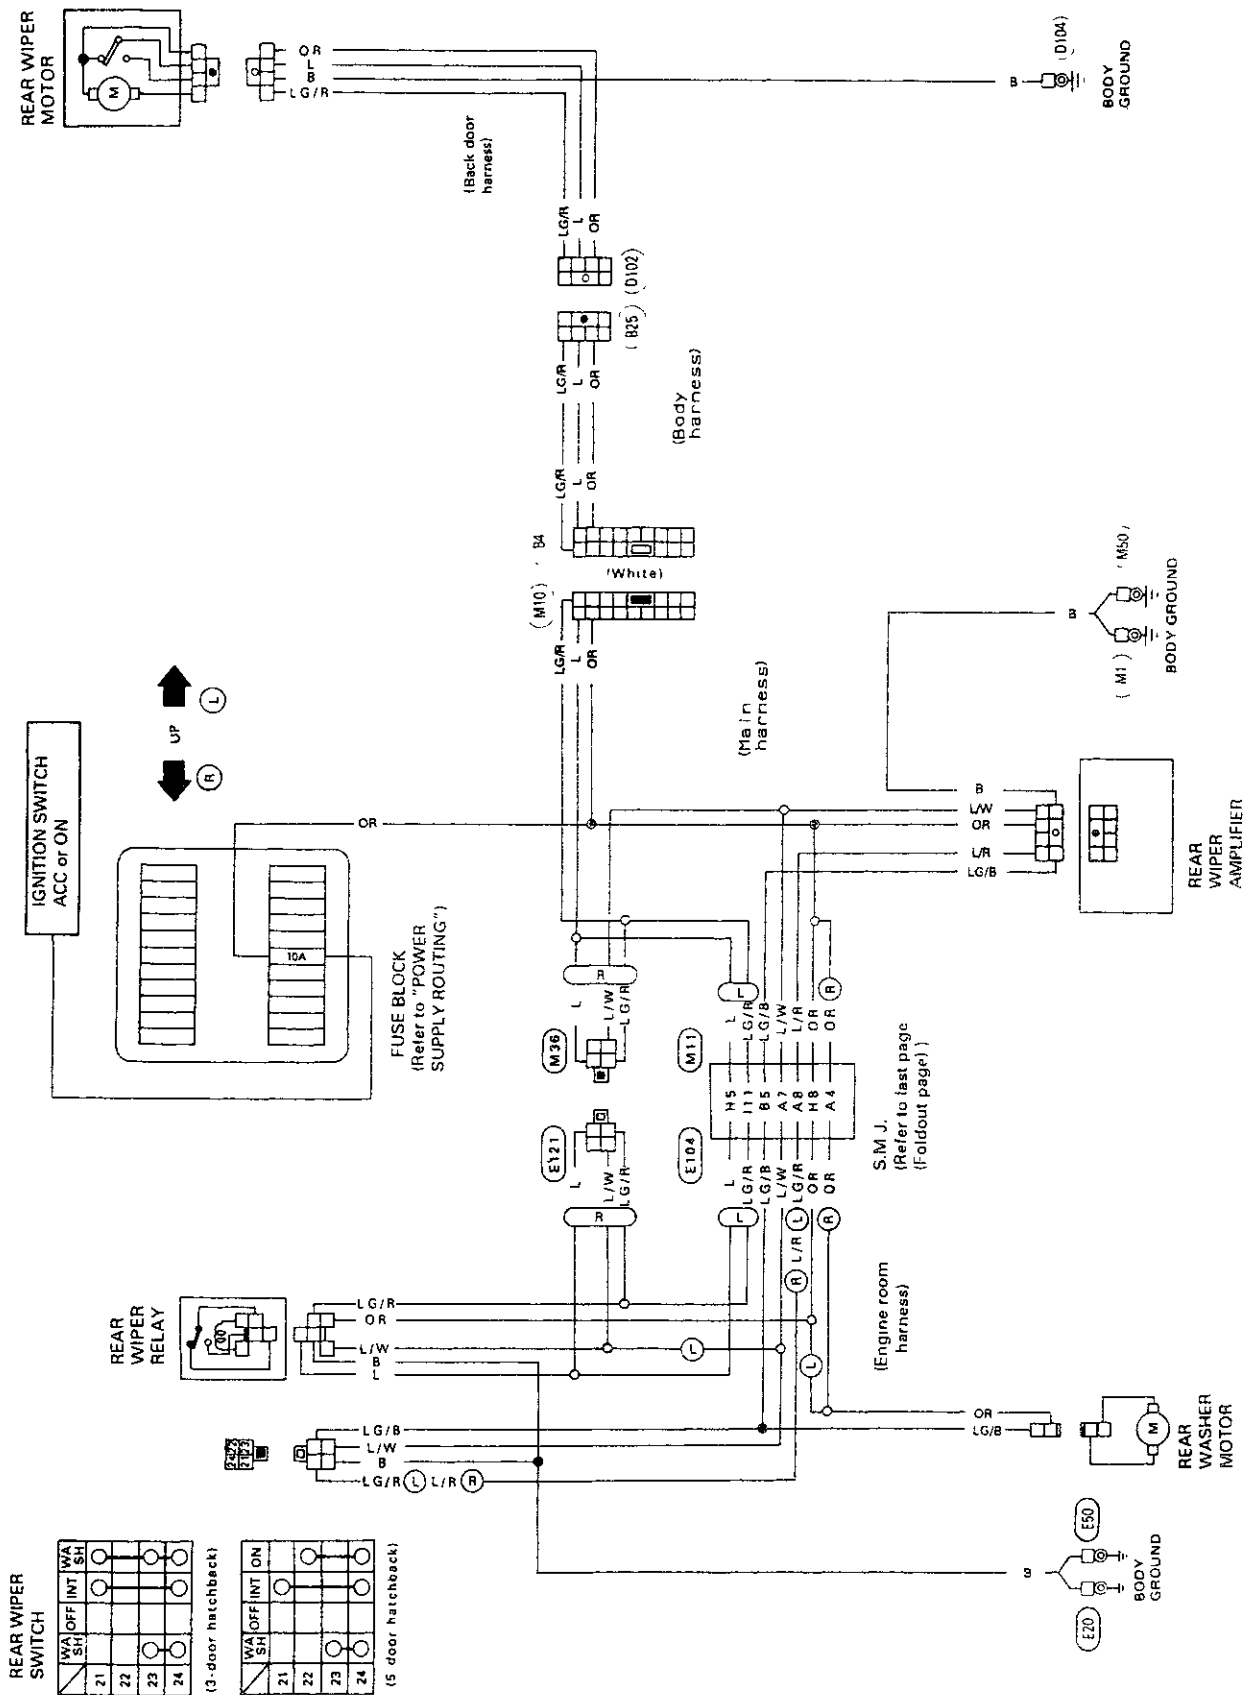

SEL330Q

Installation

1. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
2. Lift the blade up and then set it down onto glass surface to set the blade center to clearance "C", "D", "E", or "F" immediately before tightening nut.
3. Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
4. Ensure that wiper blades stop within clearance "C", "D", "E", or "F".

	C	D	E	F
B13 mm (in)	25 - 35 (0.98 - 1.38)	20 - 30 (0.79 - 1.18)	105 - 115 (4.13 - 4.53)	—
N14 mm (in)	22 - 37 (0.87 - 1.46)	18 - 33 (0.71 - 1.30)	—	20 (0.79)

- ⊙ Tighten windshield wiper arm nuts to specified torque.

Front wiper:

17 - 23 N·m (1.7 - 2.3 kg-m, 12 - 17 ft-lb)

Rear wiper:

Coupe 13 - 18 N·m (1.3 - 1.8 kg-m, 9 - 13 ft-lb)

Hatchback 10 - 14 N·m (1.0 - 1.4 kg-m, 7 - 10 ft-lb)

Front wiper and washer

L.H.D. models

R.H.D. models

N14 model only
***A ... The diameters of these circles are less than 140 (5.51).**
***B ...**

All the diameters of these circles are less than 80 (3.15)

B13 Sedan	
*1: 340 (13.39)	
*2: 155 (6.10)	
*3: 300 (11.81)	
*4: 115 (4.53)	
*5: 130 (5.12)	
*6: 160 (6.30)	
*7: 310 (12.20)	
*8: 400 (15.75)	


B13 Coupe	
*1: 270 (10.63)	
*2: 130 (5.12)	
*3: 260 (10.24)	
*4: 140 (5.51)	
*5: 200 (7.87)	
*6: 225 (8.86)	
*7: 370 (14.57)	
*8: 430 (16.93)	

N14	
*1: 492 (19.37)	
*2: 255 (8.86)	
*3: 280 (11.02)	
*4: 175 (6.89)	
*5: 98 (3.86)	
*6: 160 (6.30)	
*7: 241 (9.49)	
*8: 395 (15.55)	

Unit: mm (in)

SEL218Q



Rear wiper and washer — Coupe

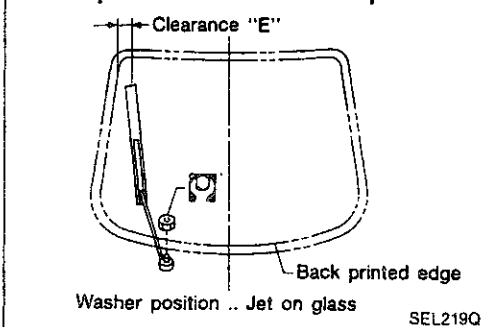

WIPER AND WASHER

Installation (Cont'd)

Rear wiper and washer — Hatchback

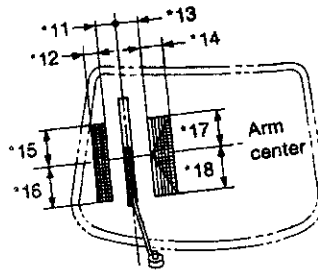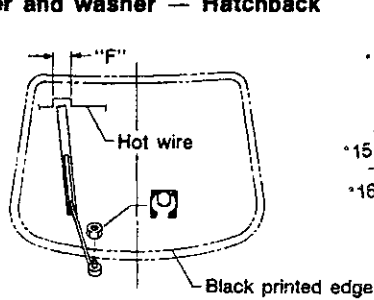

3-door

*11:	80 (3.15)
*12:	20 (0.79)
*13:	20 (0.79)
*14:	50 (1.97)
*15:	40 (1.57)
*16:	35 (1.38)
*17:	40 (1.57)
*18:	35 (1.38)

: 3-door


5-door

*11:	30 (1.18)
*12:	20 (0.79)
*13:	20 (0.79)
*14:	80 (3.15)
*15:	170 (6.69)
*16:	50 (1.97)
*17:	30 (1.18)
*18:	30 (1.18)

: 5-door

Unit mm (in)


SEL220Q

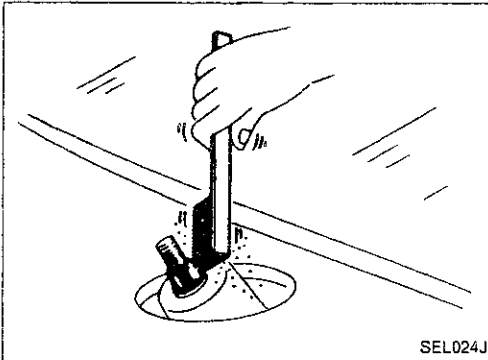

SEL024J

- Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

Front washer

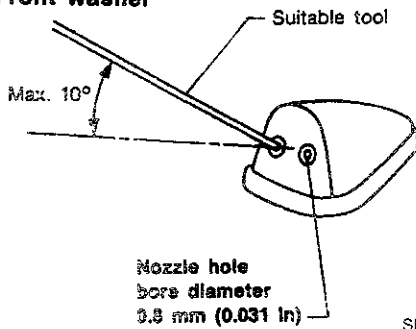




SEL568P

Washer Nozzle Adjustment

- Adjust washer nozzle with suitable tool as shown in the figure at left.

Adjustable range: $\pm 10^\circ$


Rear washer (Coupe)

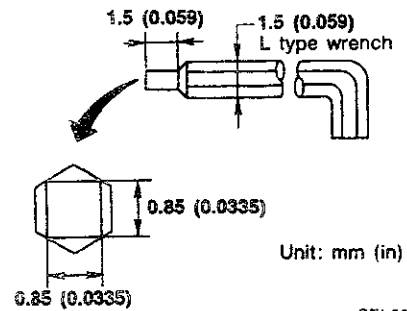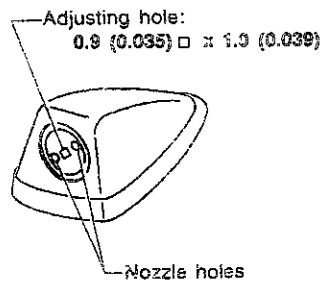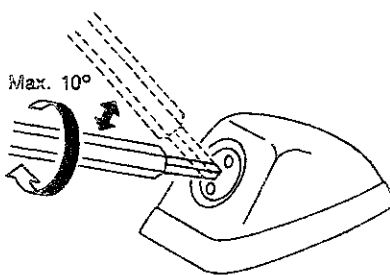

Unit: mm (in)


SEL569P

Rear washer (Hatchback)

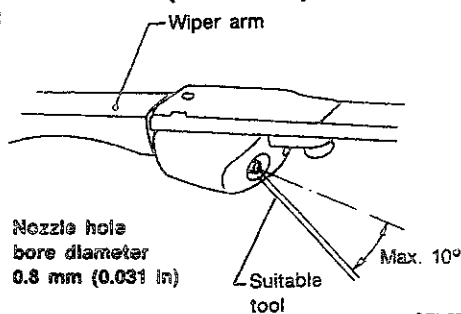


SEL570P

WIPER AND WASHER

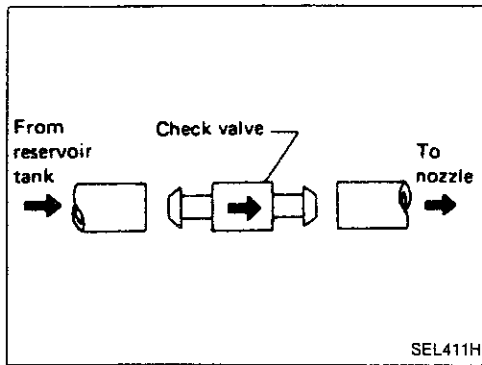

Check Valve (For rear washer)

- A check valve is provided in the rear washer fluid line. Be careful not to connect check valve to washer tube in the wrong direction.

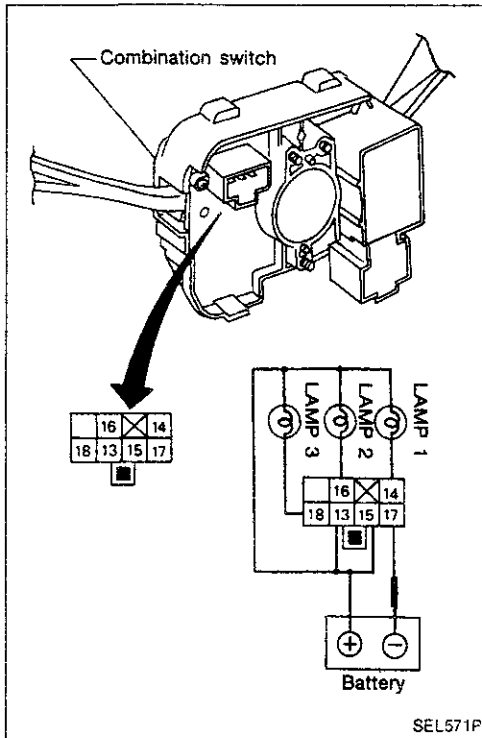


Wiper Amplifier Check

FRONT WIPER SWITCH AND AMPLIFIER

- Connect as shown in the figure at left.
- If test lamp comes on when connected to terminal ⑰ and battery ground, wiper switch and amplifier is normal.

Wiper switch position	Test lamp		
	1	2	3
OFF	—	—	—
INT or LO	○	—	—
HI	—	○	—
WASH	○	—	○

○: Lamp "ON". —: Lamp "OFF"

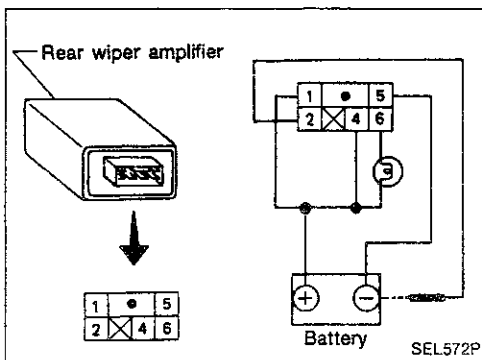


REAR WIPER AMPLIFIER

- Connect as shown in the figure at left.
- If test lamp comes on when connected to terminal ② and battery ground, wiper amplifier is normal.

WIPER AND WASHER


Washer Tube Layout

Front washer

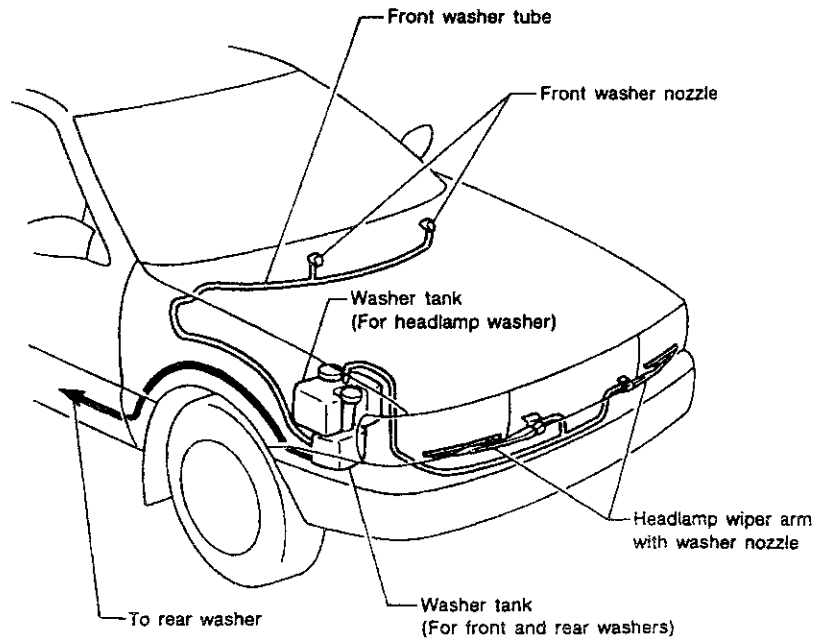

SEL221Q


Rear washer

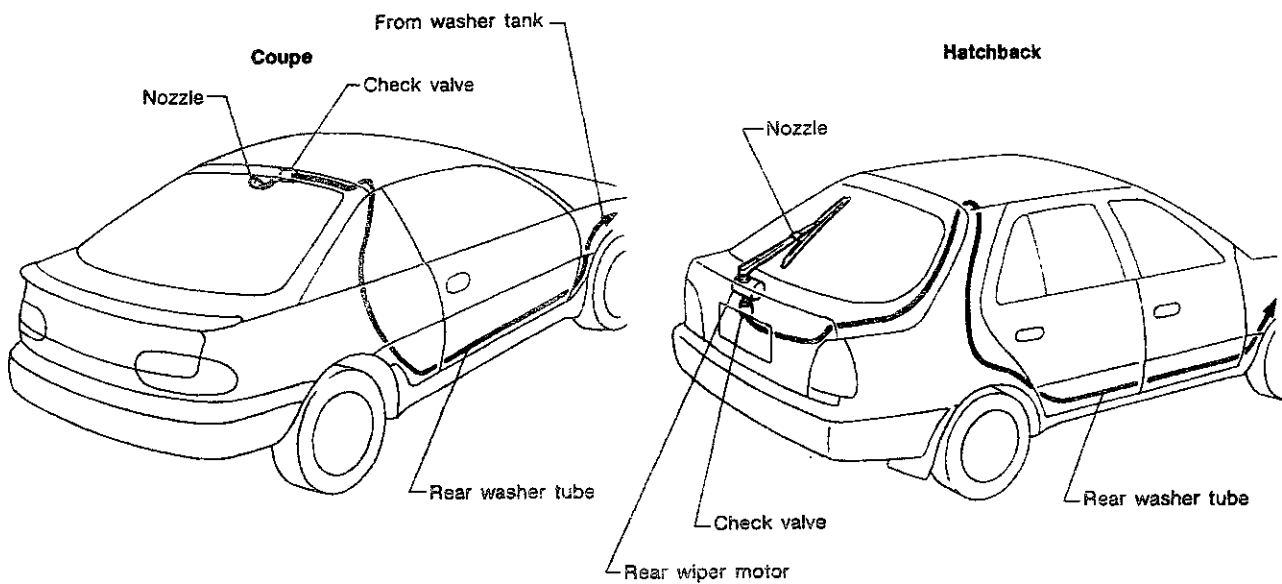

SEL574P

Headlamp Wiper and Washer/Wiring Diagram

B13

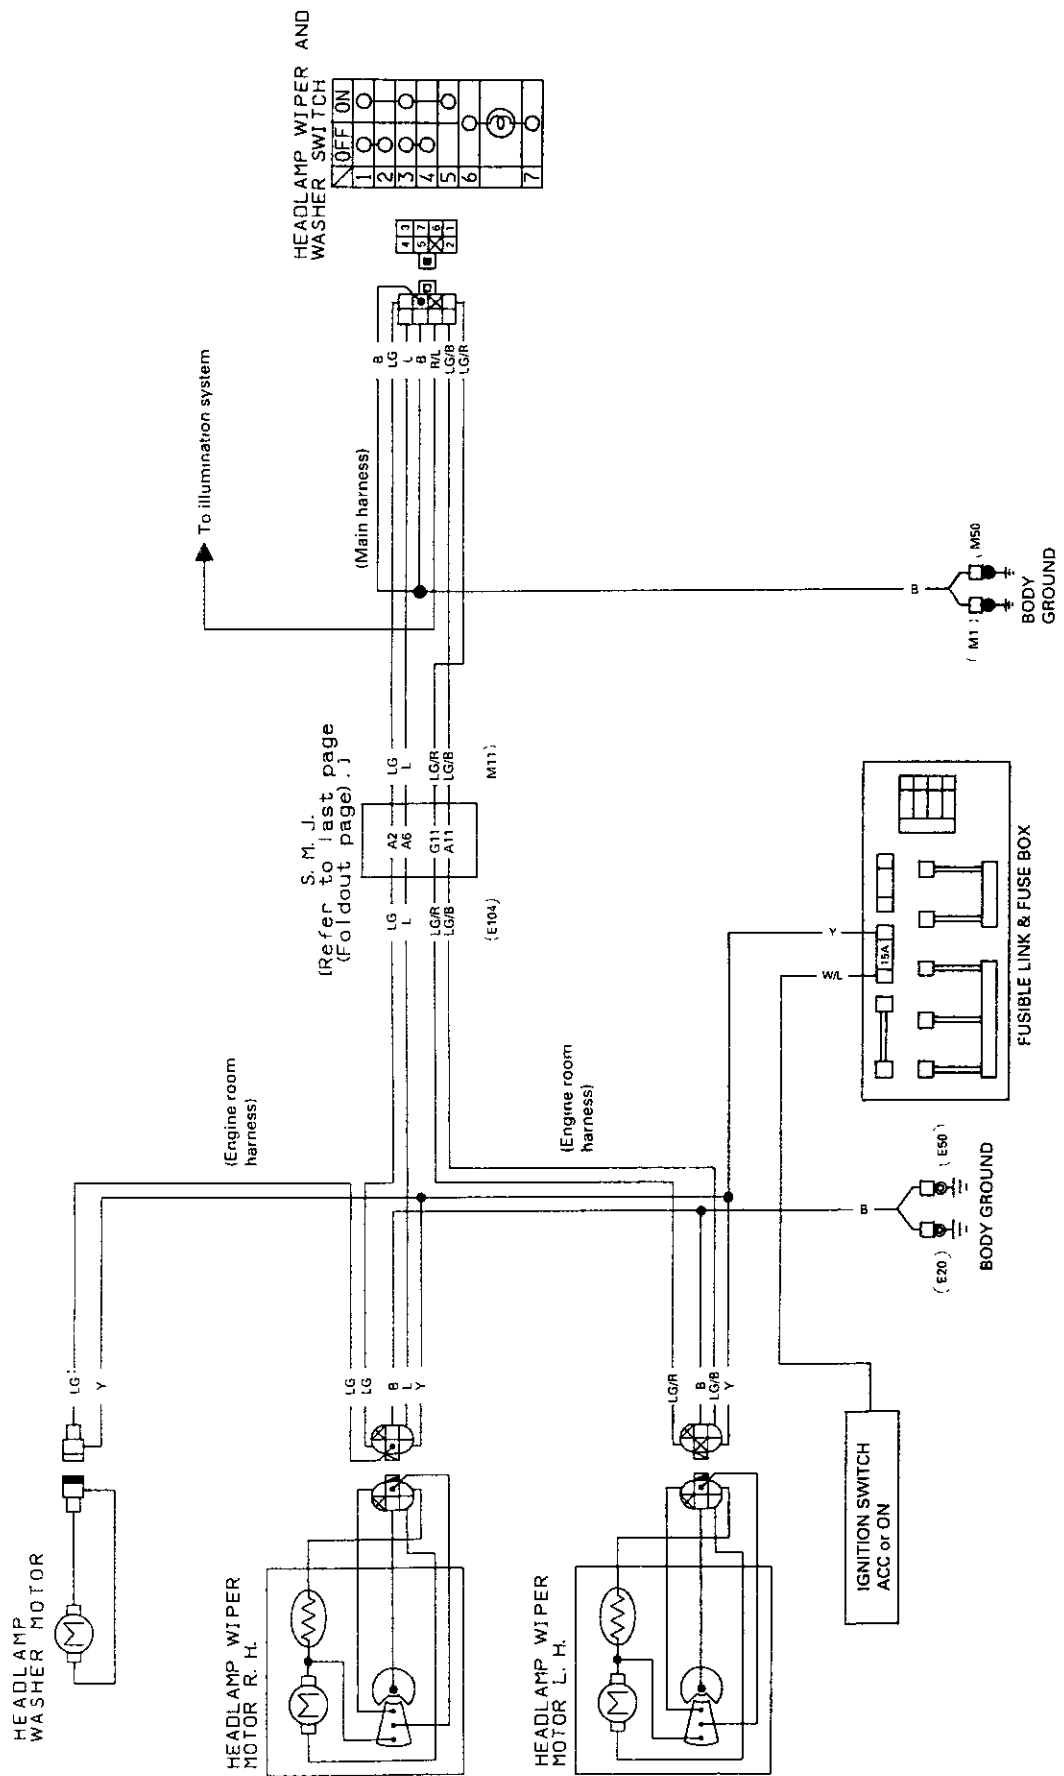


Headlamp Wiper and Washer/Wiring Diagram (Cont'd)

HEADLAMP
WASHER MOTOR



WIPER AND WASHER

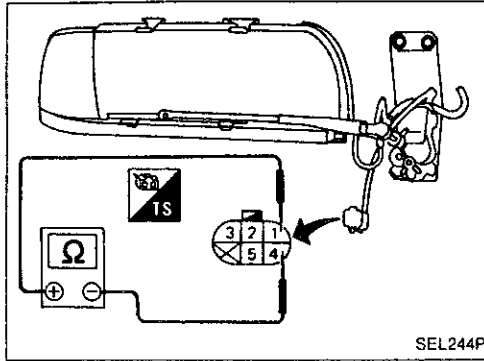


Headlamp Wiper Motor Check

When wiper motor is locked, a protective circuit built into wiper motor activates to stop wiper motor. If wiper motor will not restart even after cause of problems has been eliminated, turn ignition switch OFF and leave it off for approx. 1 to 3 minutes.

1. Turn headlamp wiper switch OFF.
2. Connect ohmmeter and check continuity.

Headlamp wiper motor	Ohmmeter probe		Continuity
	(+)	(-)	
Stop position	①	④	Yes
	①	②	Yes
	①	③	Yes
	③	⑤	No

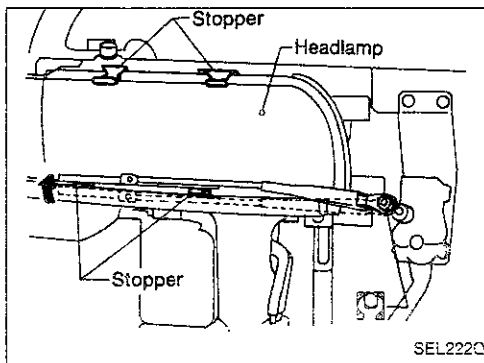

Headlamp Wiper Installation

Tighten nut to secure wiper arm with wiper blade held below lower stopper.

After installing wiper arm, position wiper blade on stopper upper surface.

- Tighten headlamp wiper arm nut to the specified torque.

: **813**

2.5 - 3.8 N·m

(0.25 - 0.39 kg-m, 1.8 - 2.8 ft-lb)


N14

2.3 - 3.0 N·m

(0.23 - 0.31 kg-m, 1.7 - 2.2 ft-lb)


HORN AND CIGARETTE LIGHTER

Wiring Diagram


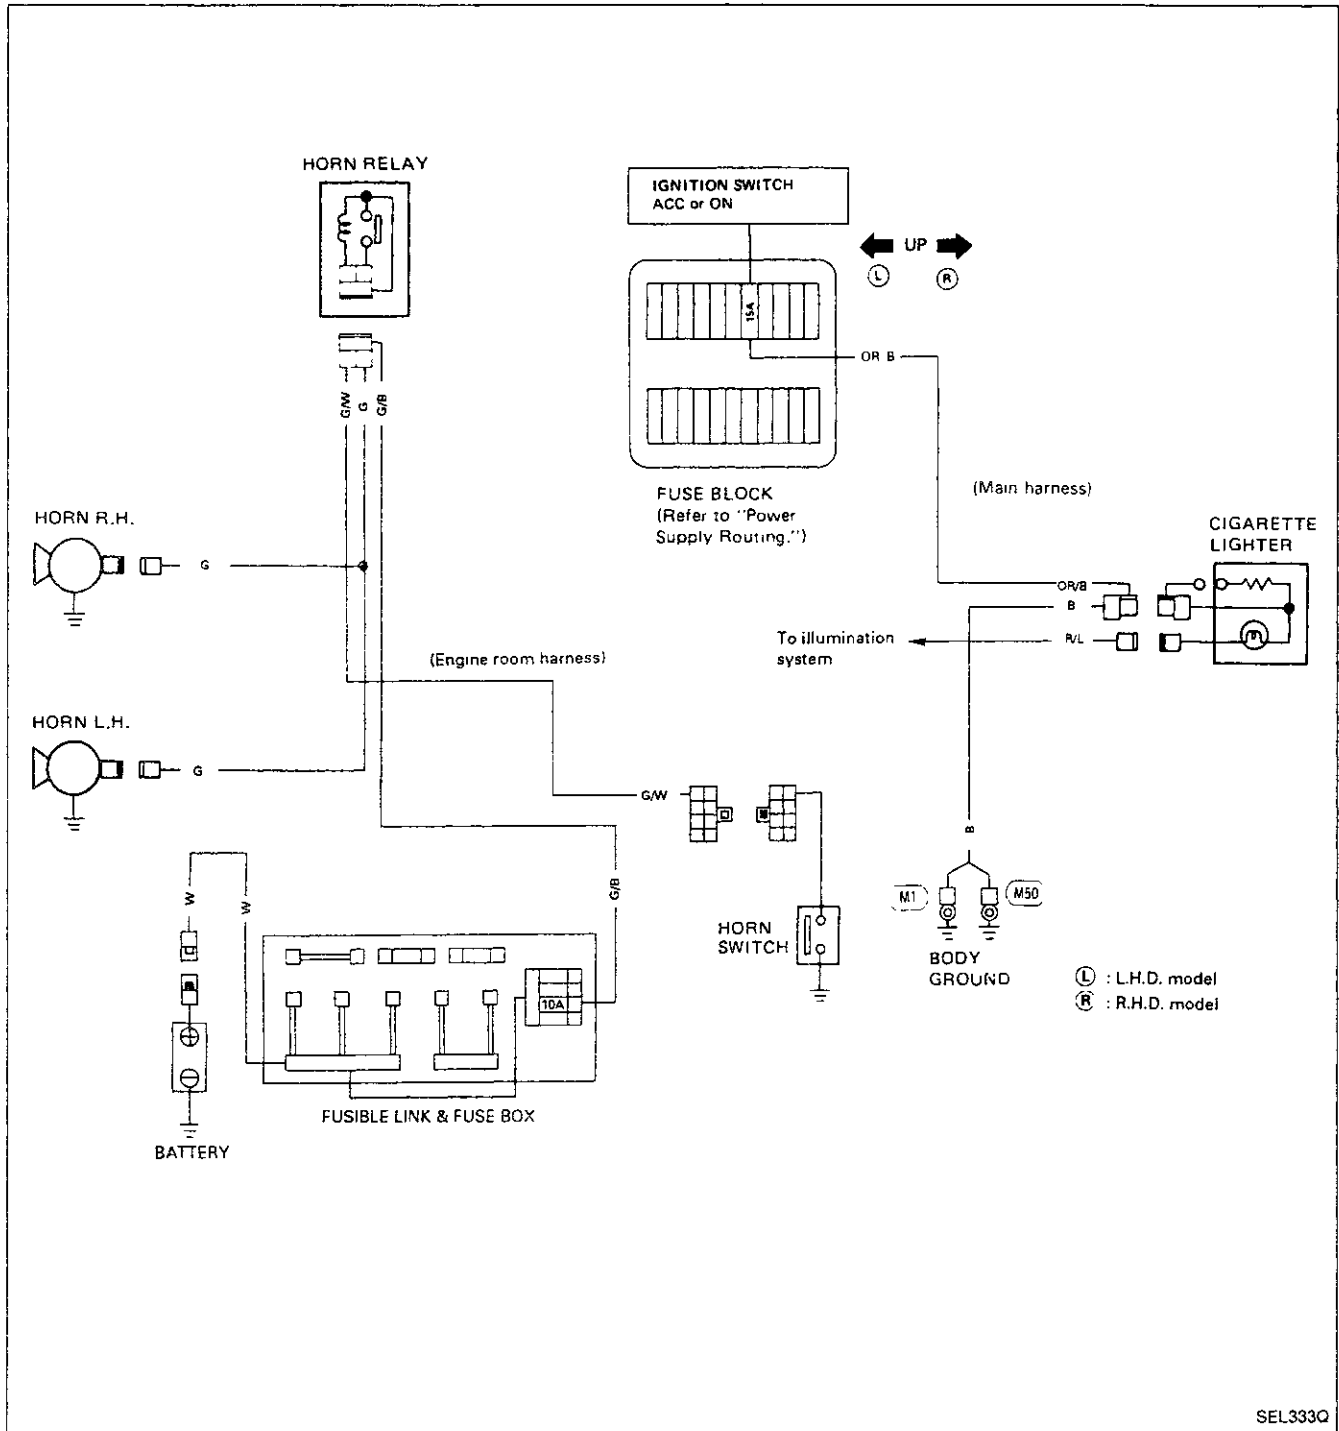


CLOCK


Wiring Diagram

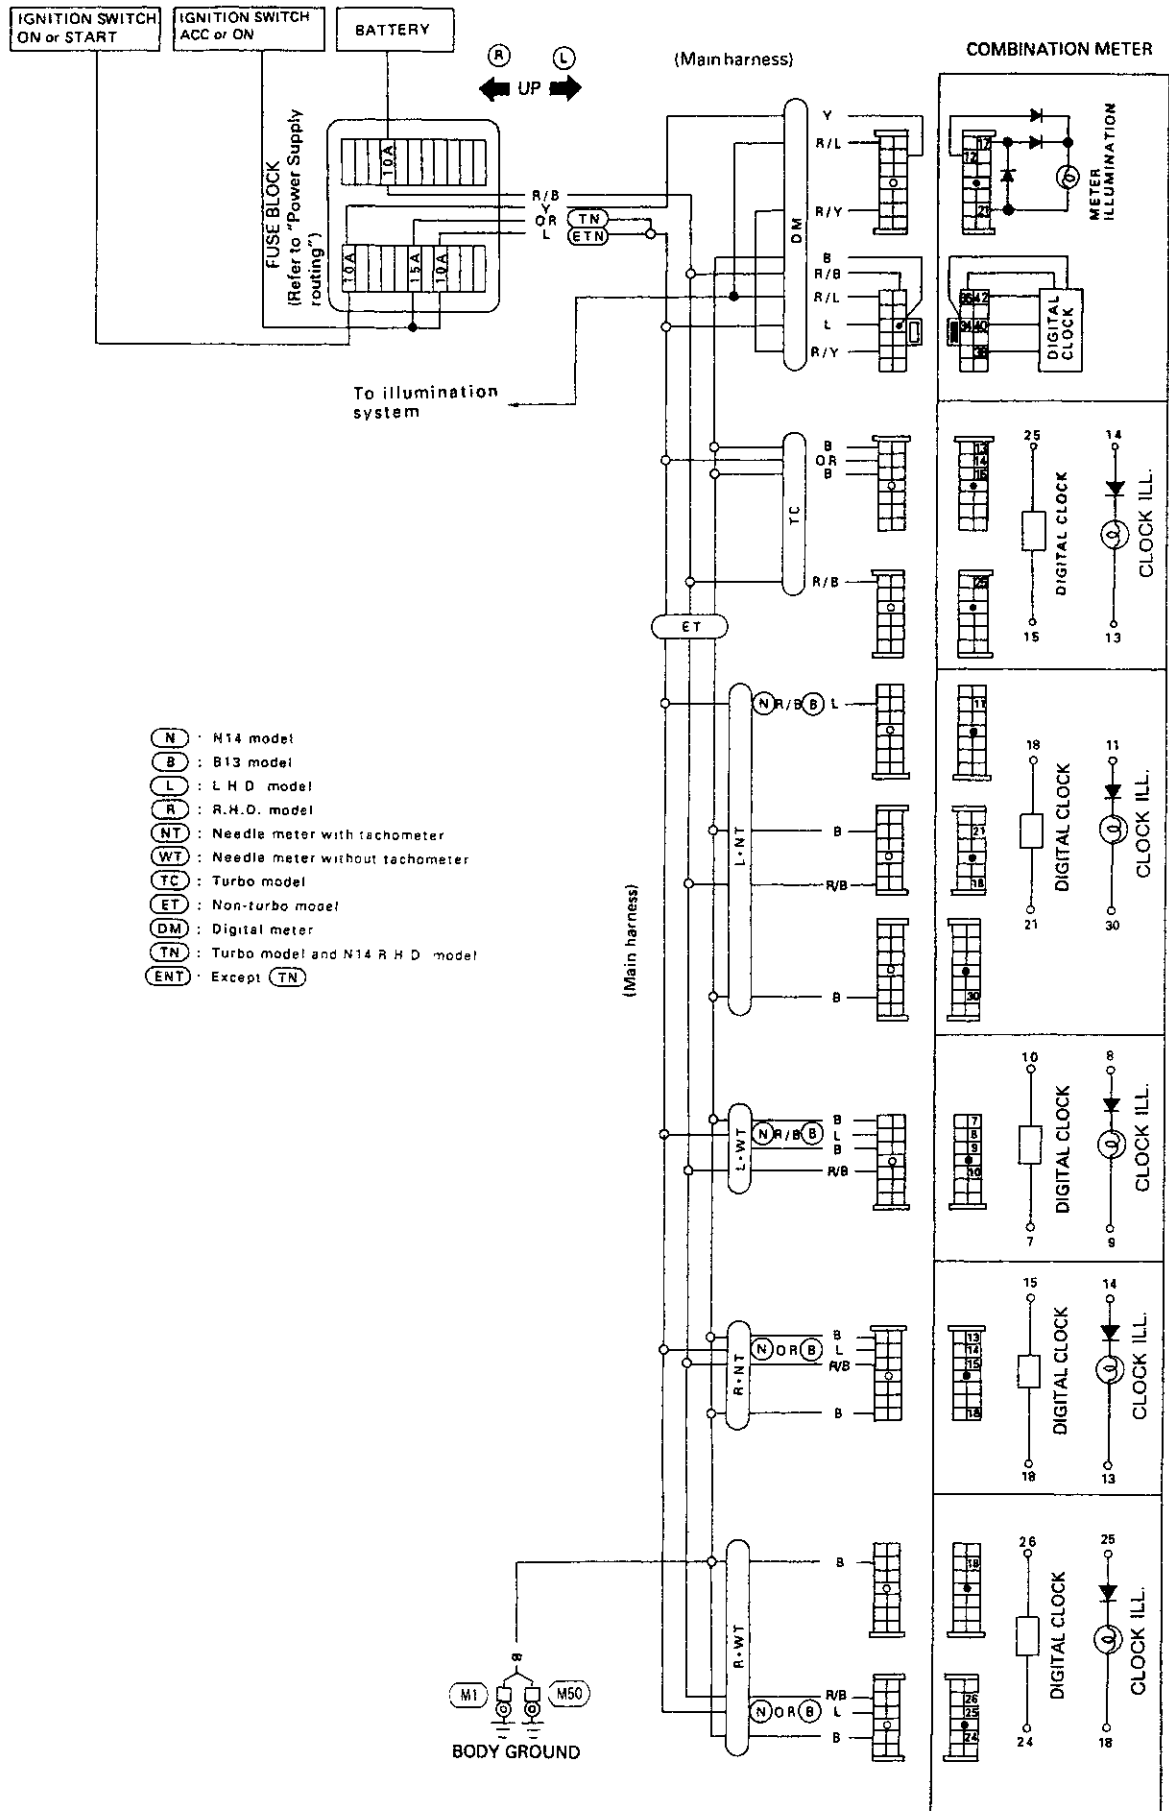

Wiring Diagram

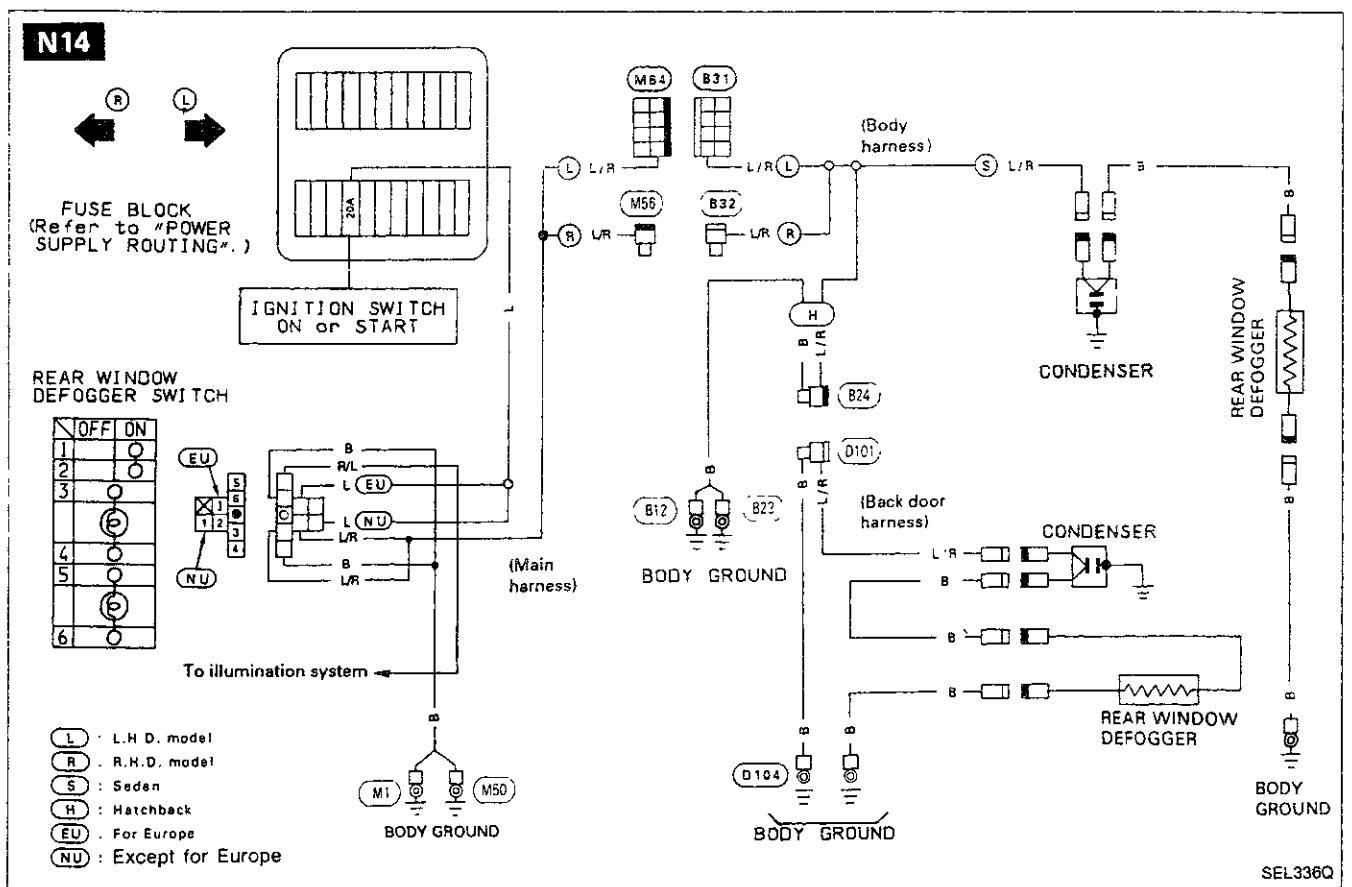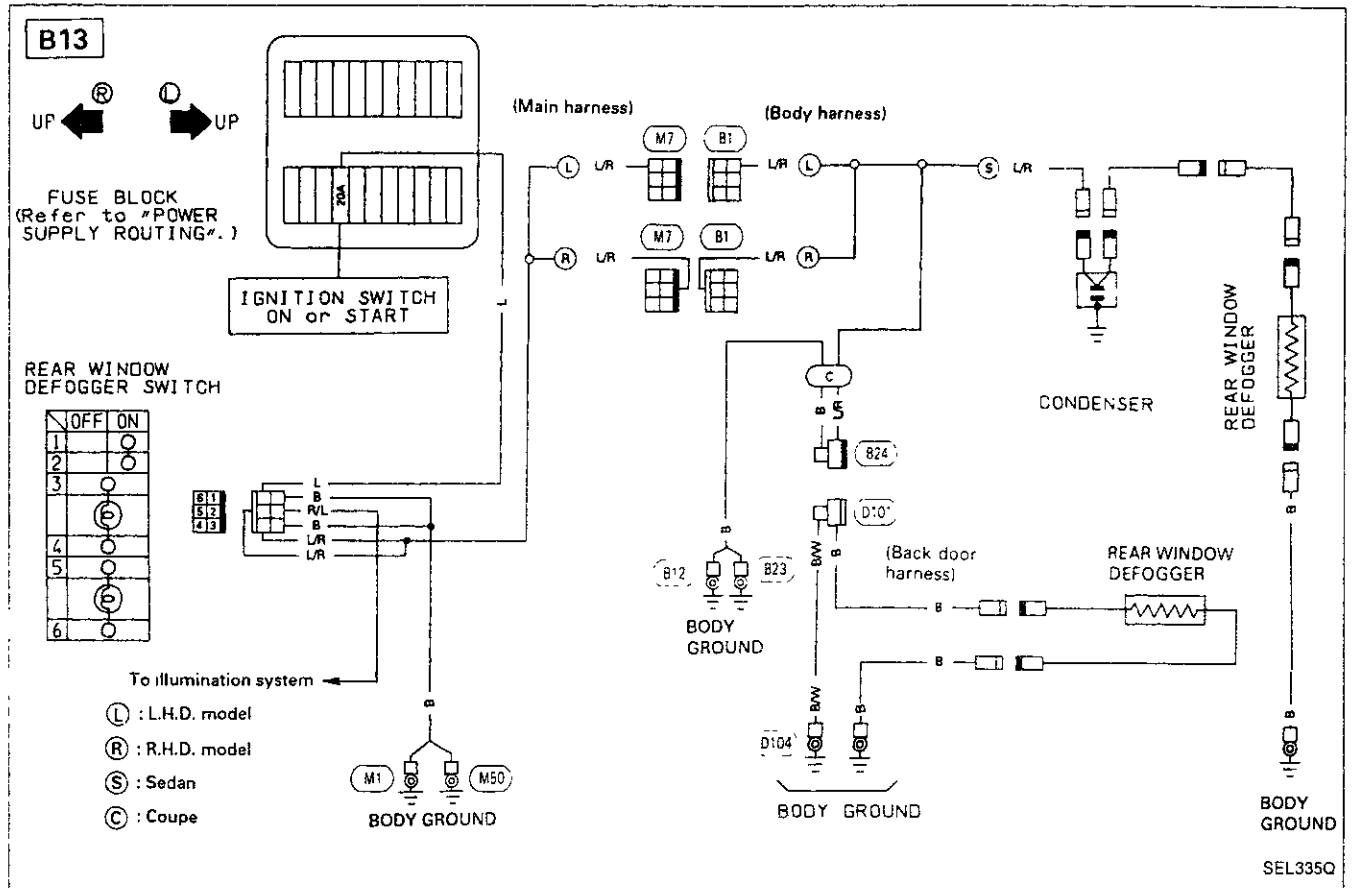


REAR WINDOW DEFOGGER

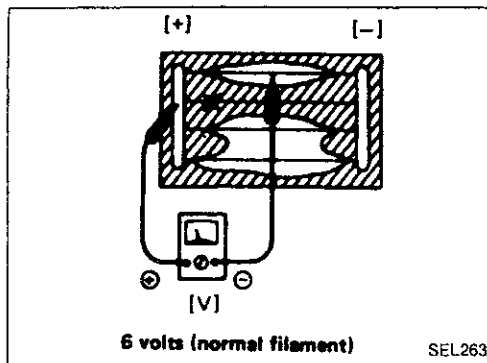


Filament Check

1. Attach probe circuit tester (in volt range) to middle portion of each filament.

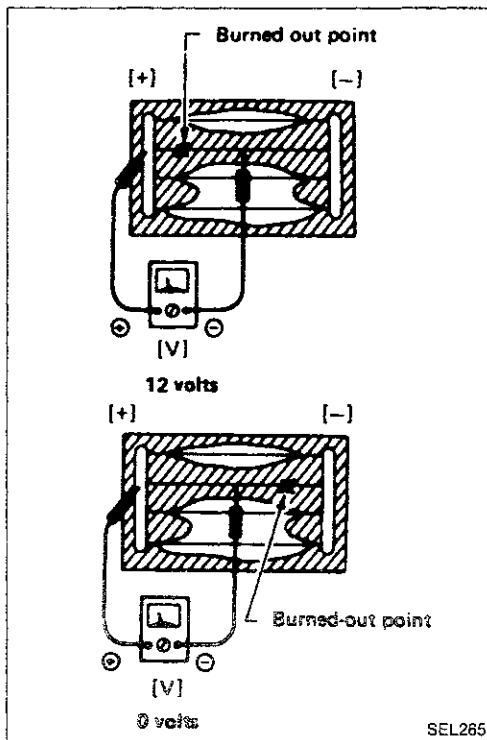

2. If a filament is burned out, circuit tester registers 0 or 12 volts.

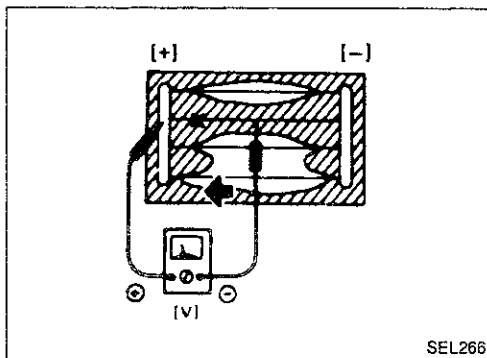

3. To locate burned out point, move probe to left and right along filament to determine point where tester needle swings abruptly.

REAR WINDOW DEFOGGER

Filament Repair

REPAIR EQUIPMENT

1. Conductive silver composition (Dupont No. 4817 or equivalent)
2. Ruler 30 cm (11.8 in) long
3. Drawing pen
4. Heat gun
5. Alcohol
6. Cloth




REPAIRING PROCEDURE

1. Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.
2. Apply a small amount of conductive silver composition to tip of drawing pen.

Shake silver composition container before use.

3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.
4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

Do not touch repaired area while test is being conducted.

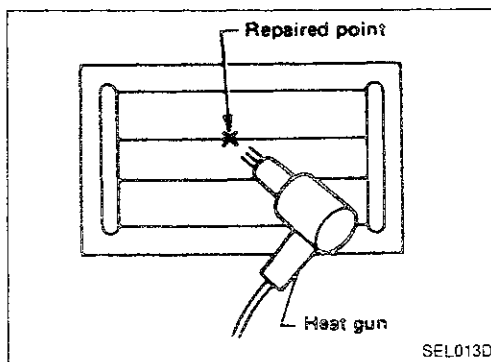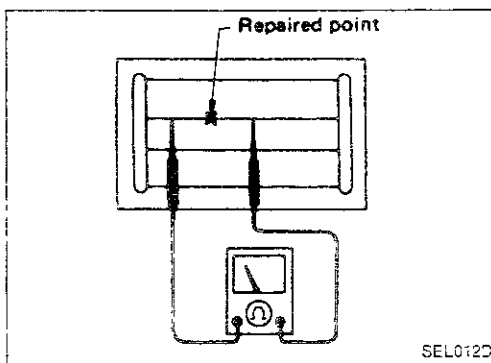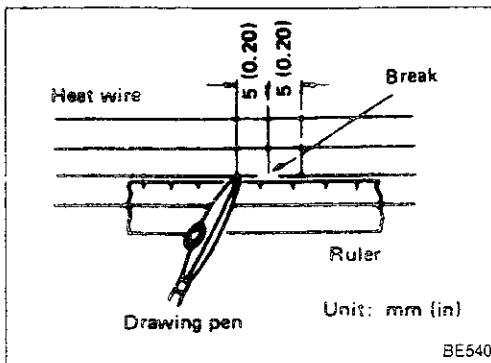

5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.

Audio/Wiring Diagram

BATTERY

FUSE BLOCK
(Refer to "Power Supply Routing")

IGNITION SWITCH
ACC or ON

CASSETTE PLAYER (Without radio)

RADIO

CASSETTE PLAYER (With radio)

WINDOW ANTENNA

ROD ANTENNA

DOOR SPEAKER R.H.

DOOR SPEAKER L.H.

FRONT door harness R.H.

FRONT door harness L.H.

MAIN HARNESS

SUB-HARNESS

REAR SPEAKER R.H.

REAR SPEAKER L.H.


Legend:

- (L) : L.H.D. model
- (R) : R.H.D. model
- (C1) : Cassette player type-1
- (C2) : Cassette player type-2
- (ASP) : 4-speaker type

AUDIO AND POWER ANTENNA

Audio/Wiring Diagram (Cont'd)


B13 RADIO AND CASSETTE DECK

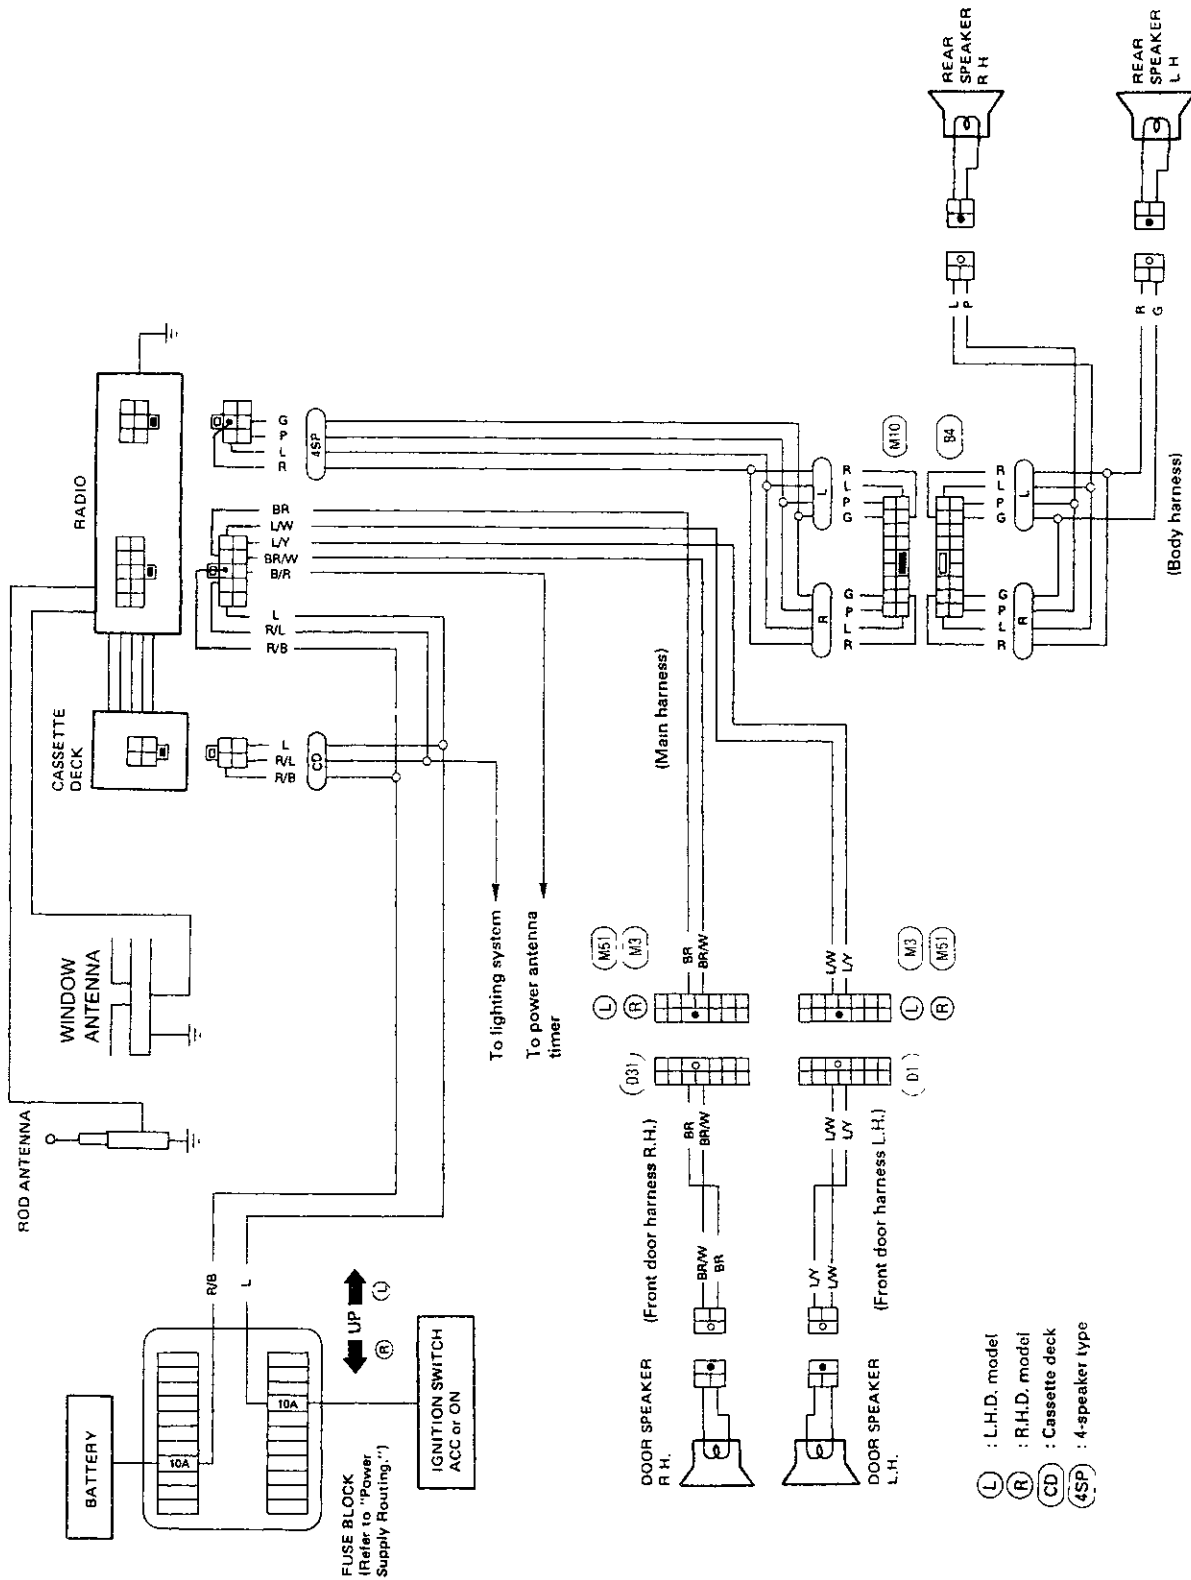

AUDIO AND POWER ANTENNA


Audio/Wiring Diagram (Cont'd)

N14

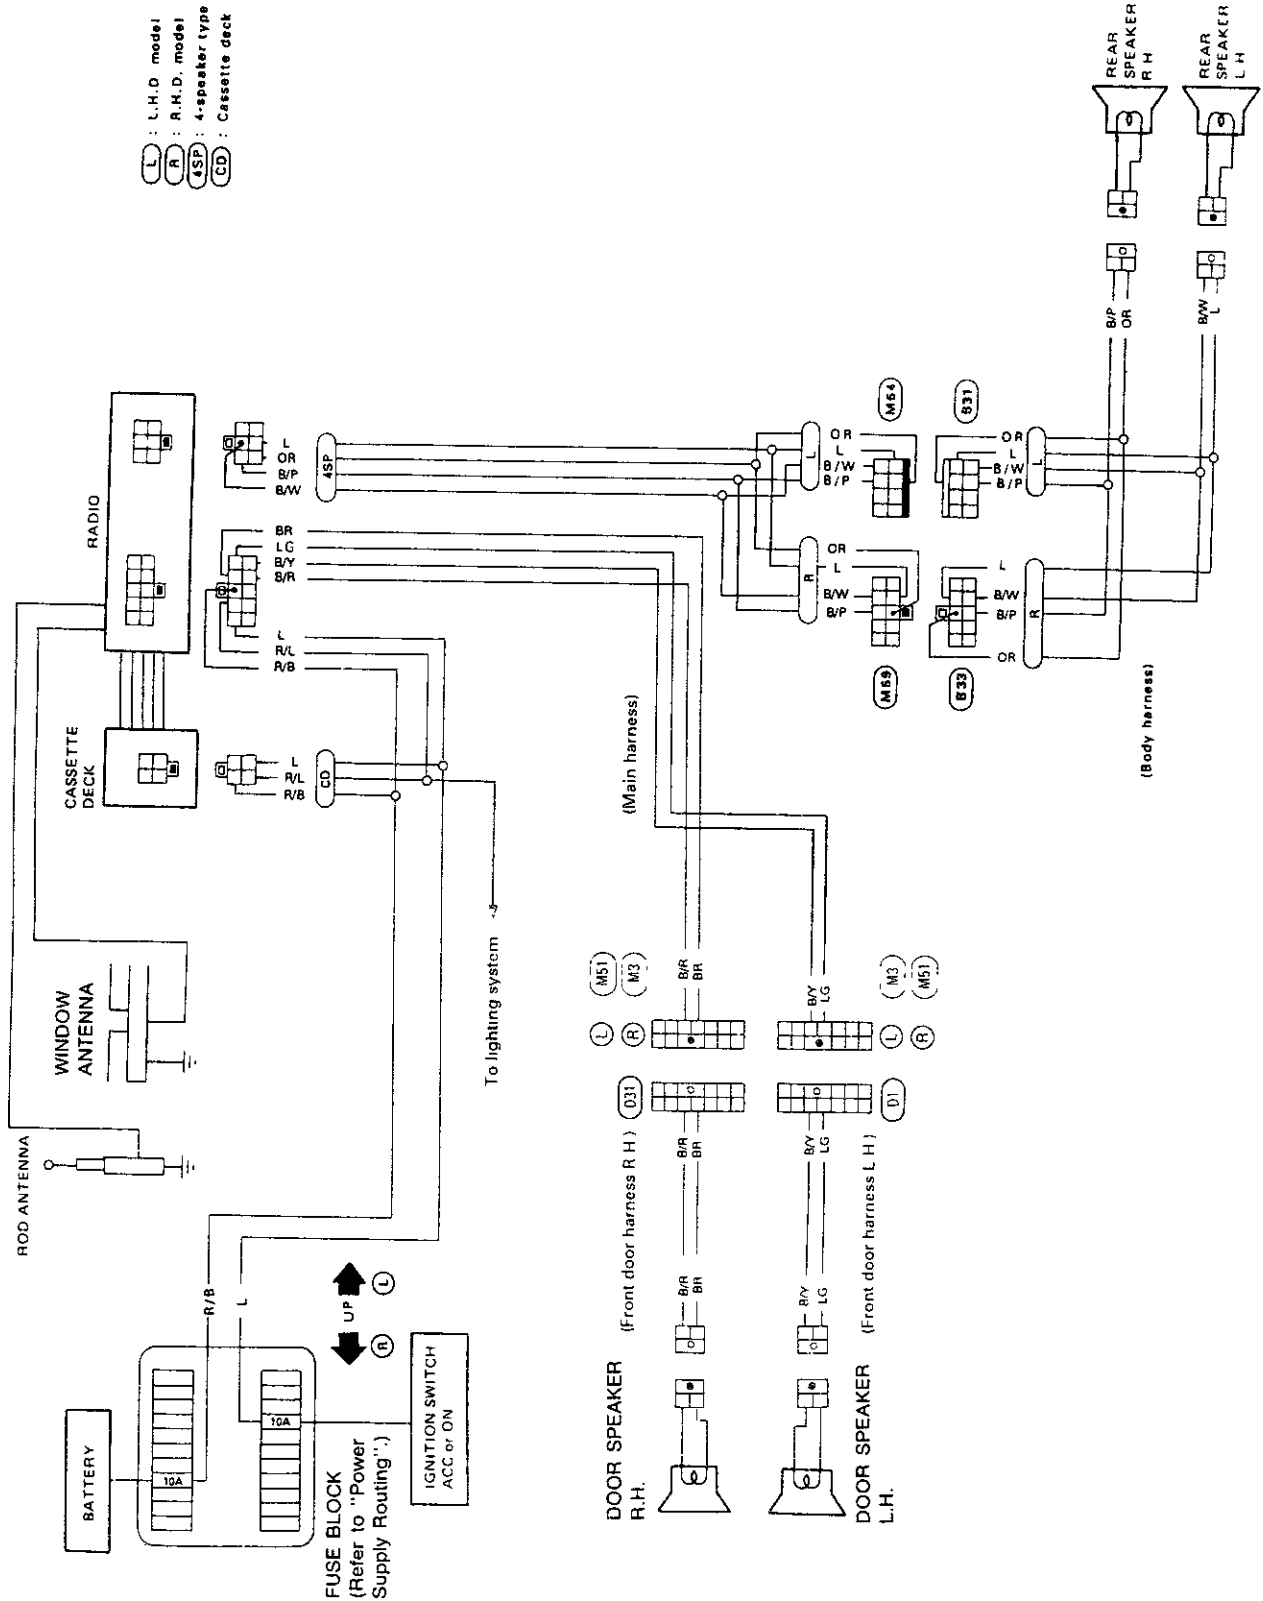


AUDIO AND POWER ANTENNA

Power Antenna/Wiring Diagram

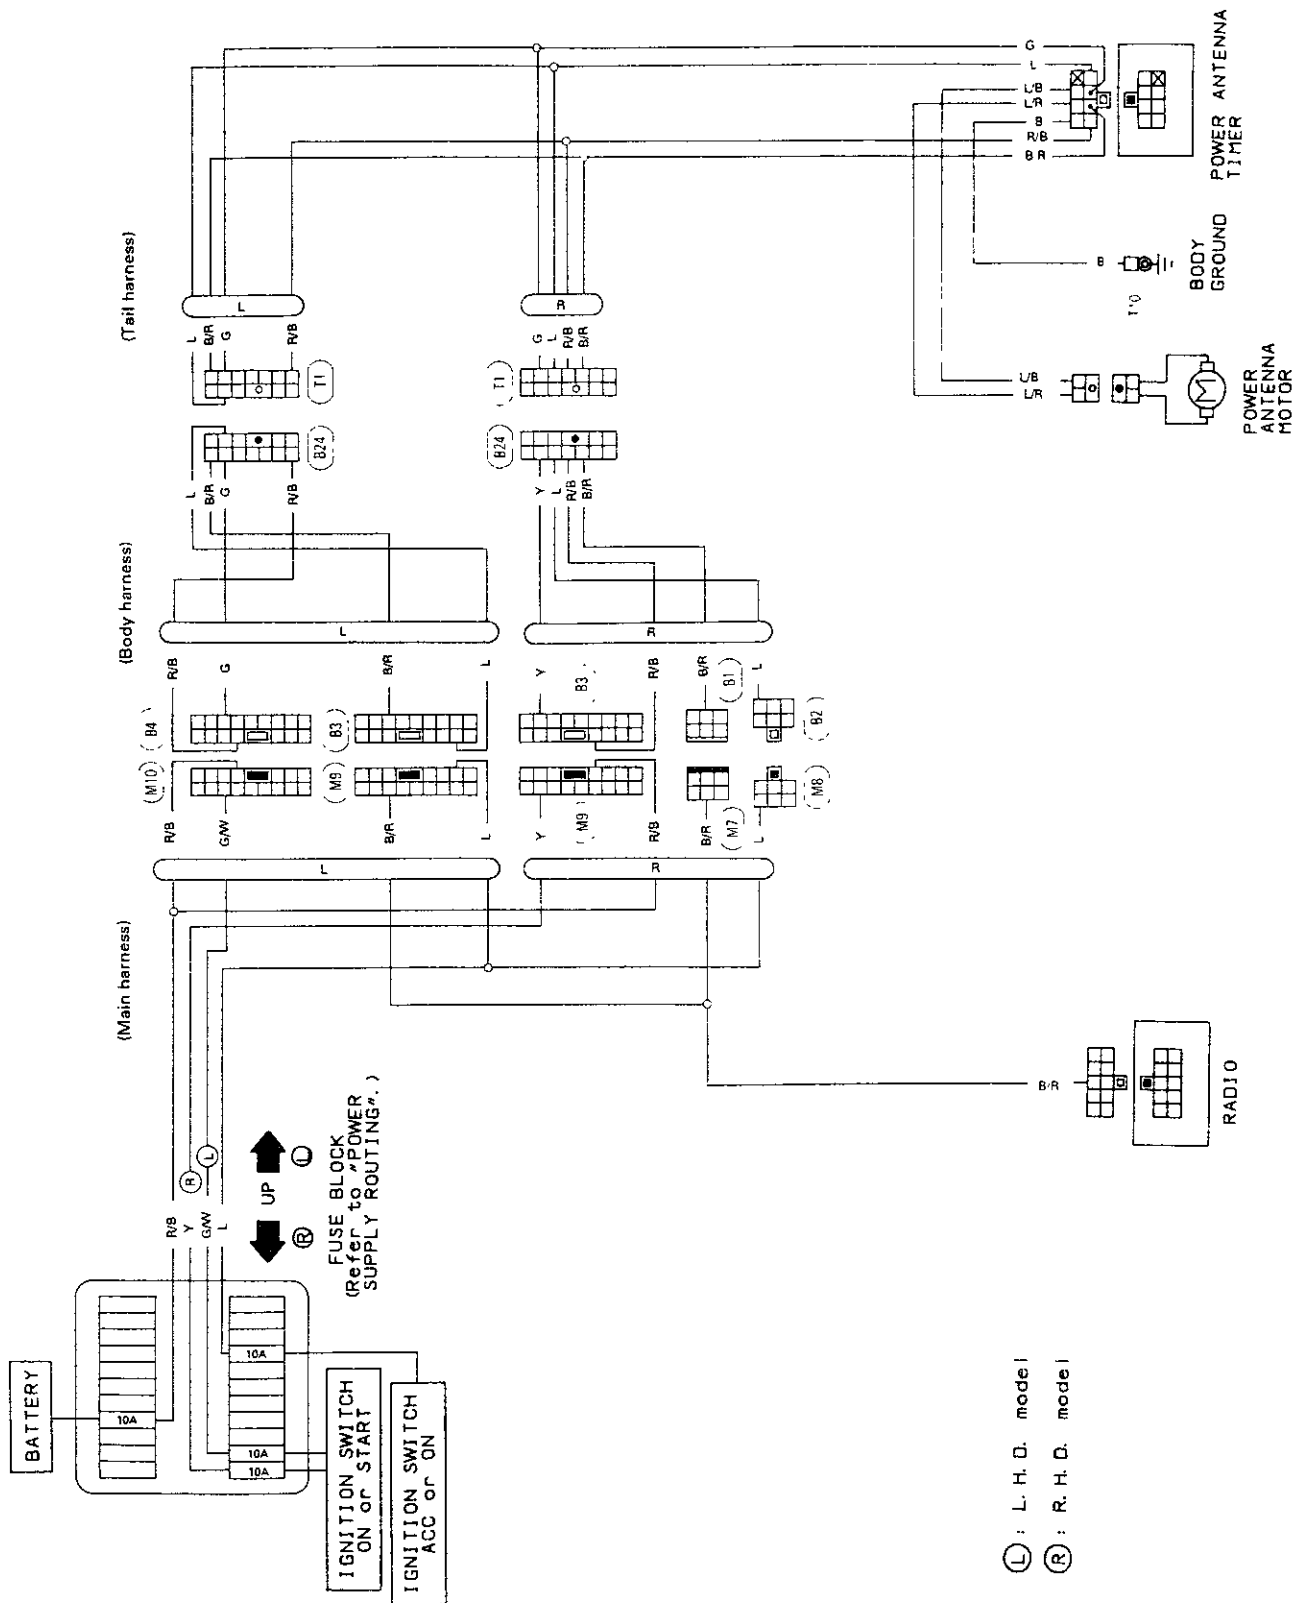

SEL608P


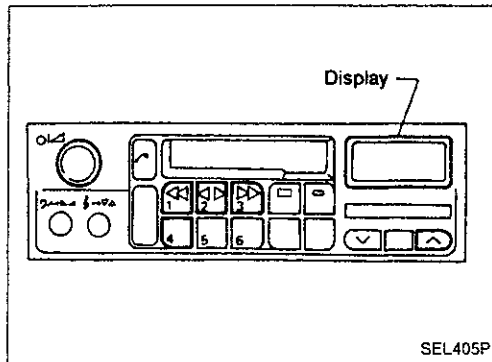


Radio

ANTI-THEFT SYSTEM

By using a personal 4-digit code known only to the vehicle owner, the possibility of the audio unit being stolen is effectively reduced, because without the code the unit can not be activated. When in normal use, the unit is unlocked and accessible in the usual way.

If however, someone attempts to remove the unit or the ground cable is disconnected from the battery, the Anti-theft system activates and the unit "locks". The only way it can be unlocked is by entering a personal code number known only by the owner.

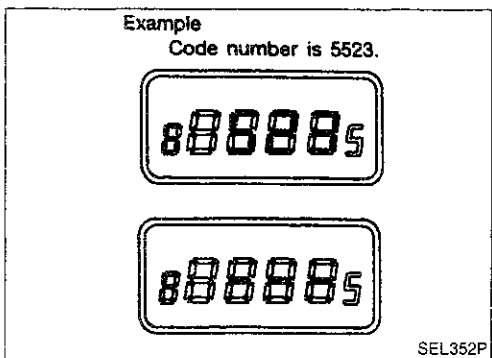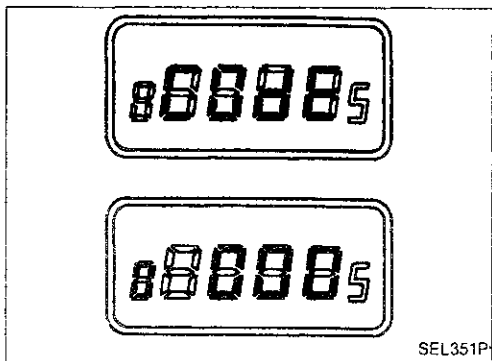


UNLOCKING THE UNIT (How to enter a personal code number)

Use the following procedures to enter a personal code number into the radio.


1. Turn ignition switch to "ACC" or "ON".
2. Turn SW. VOL knob to "ON" and "8888" will appear on the display.
3. Press any button (except "eject") and "0000" will appear on the display.
4. Enter a personal code number by pressing station select buttons 1, 2, 3, 4 the required number of times to display the code.
5. Press  to enter the code. Unit is unlocked and the radio/cassette will operate. If the wrong code number is entered, the display shows "----". Wait ten seconds then enter the correct code.

CAUTION:

There is a theft prevention mechanism restricting the number of times a wrong code number can be entered into the radio unit. If a wrong code number is entered 1 to 2 times, you will have to wait for 10 seconds before the radio will receive further input. If a wrong code number is entered 3 to 20 times, you will have to wait a duration of 15 minutes. The radio unit will lock permanently if any further attempts are made.

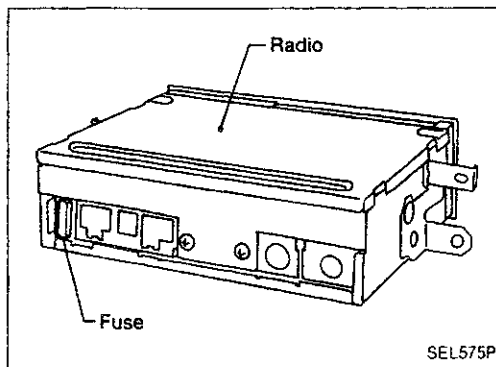

Radio Fuse Check

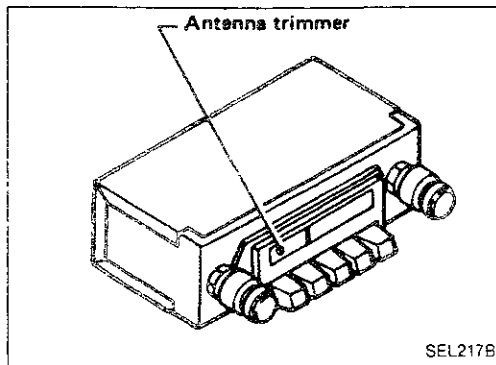

Antenna Trimmer Adjustment (Mechanical tuning type)

The antenna trimmer should be adjusted in the following cases.

- Fading and weak MW (AM) reception.
- After installation of new antenna, feeder cable or radio receiver.

Before adjusting, be sure to check harness and antenna feeder cable connectors for proper connection.


1. Extend antenna completely.
2. Turn radio on, and turn volume control to increase speaker volume.
3. Tune in the weakest station (barely audible) on dial at the range around 14 (1,400 kHz).
4. Turn antenna trimmer to left or right slowly, and set it in the position where reception is strongest.

CAUTION:


Do not turn antenna trimmer more than one-half turn.

AUDIO AND POWER ANTENNA

Location of Antenna

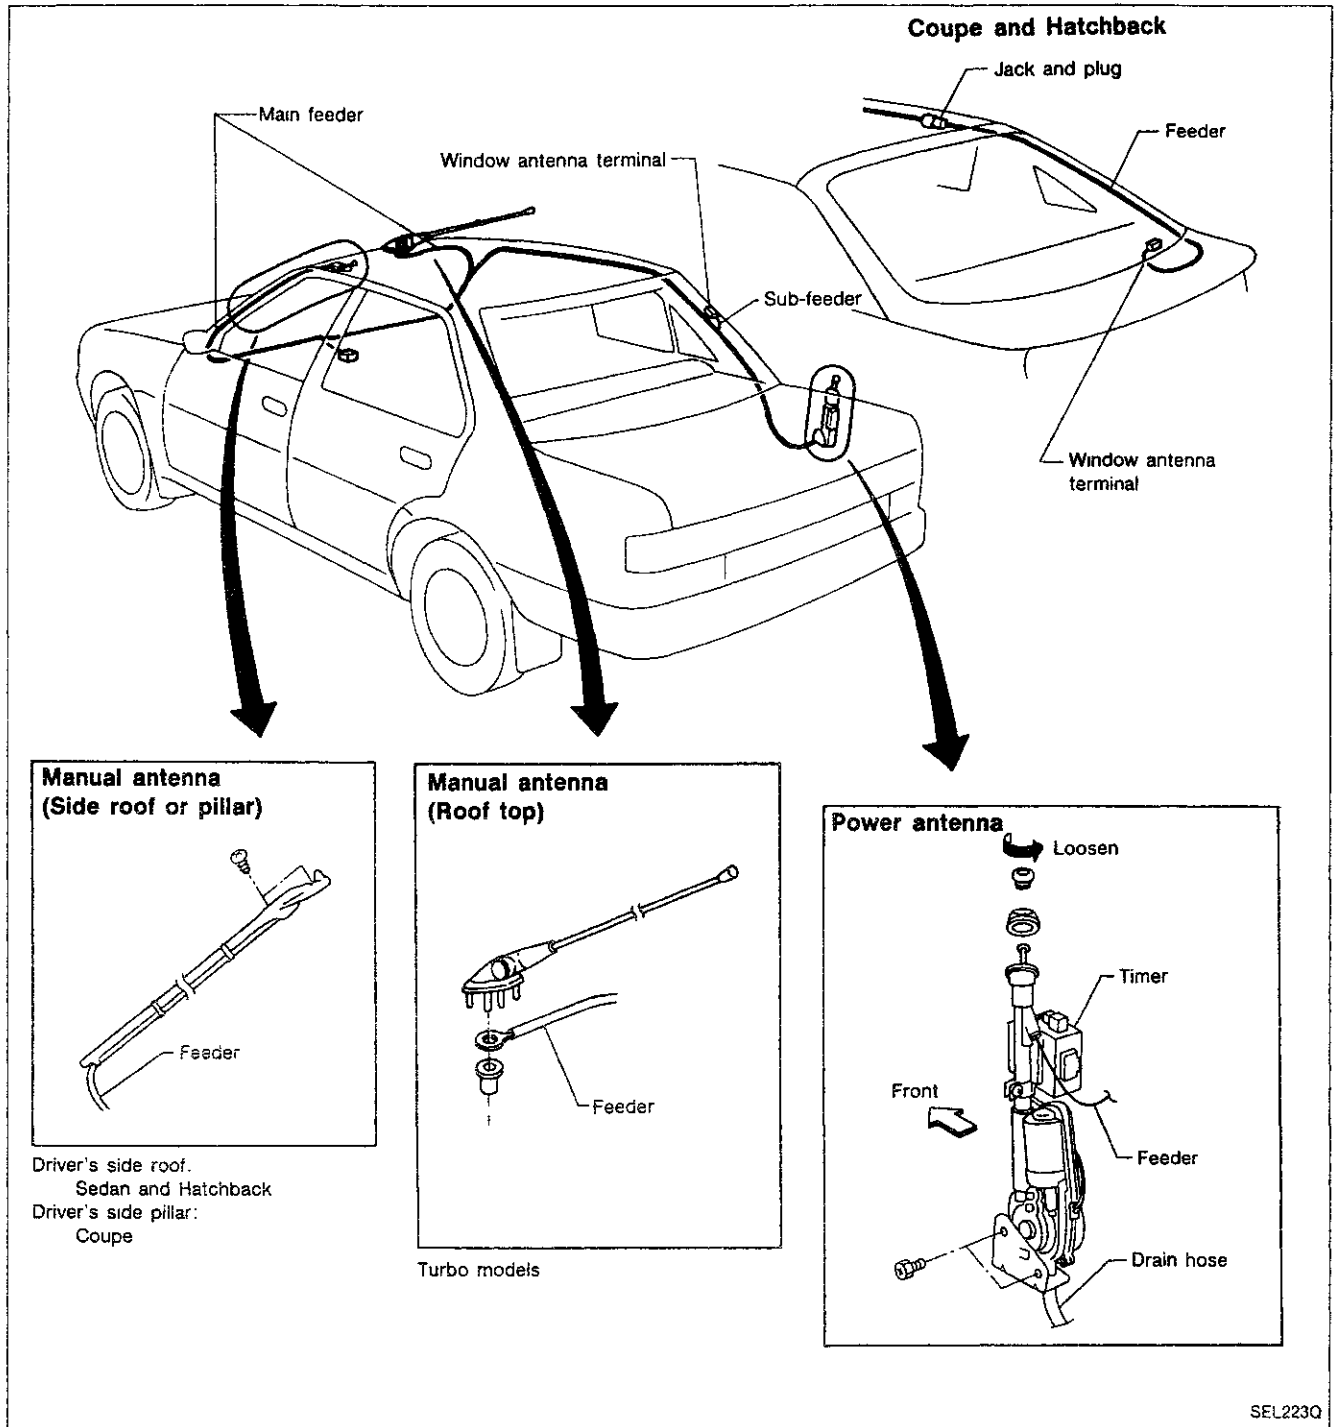


AUDIO AND POWER ANTENNA

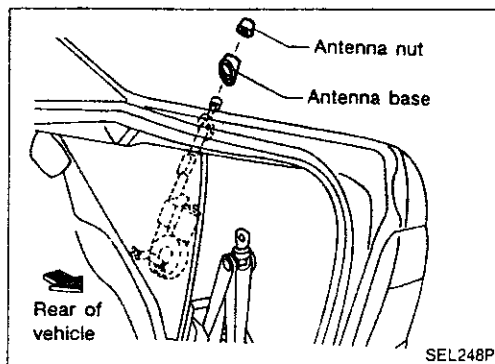

Antenna Rod Replacement


REMOVAL


1. Remove antenna nut and antenna base.
2. Withdraw antenna rod while raising it by operating antenna motor. (Radio switch: OFF → ON)

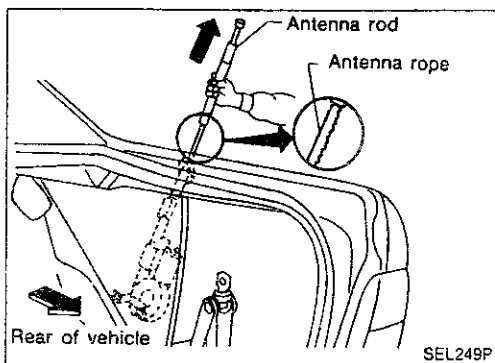

INSTALLATION

1. Lower antenna rod by operating antenna motor. (Radio switch: OFF → ON)
2. Insert gear section of antenna rope into place with it facing toward antenna motor.
3. As soon as antenna rope is wound on antenna motor, stop antenna motor. Insert antenna rod lower end into antenna motor pipe.
4. Retract antenna rod completely by operating antenna motor.
5. Install antenna nut and base.

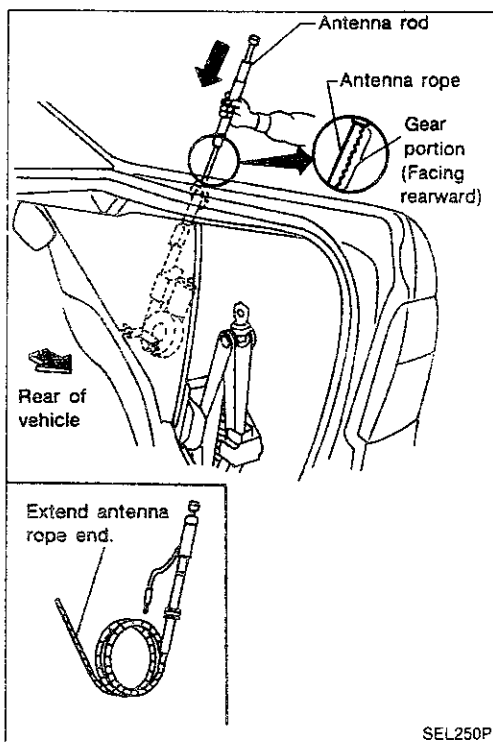


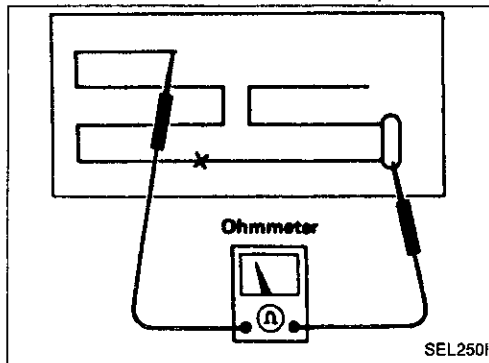


Window Antenna Repair

ELEMENT CHECK

1. Attach probe circuit tester (in ohm range) to antenna terminal on each side.

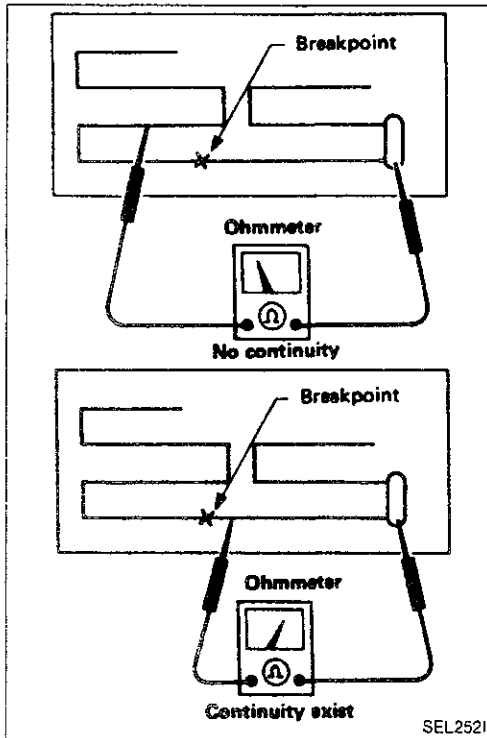

2. If an element is broken, no continuity will exist.

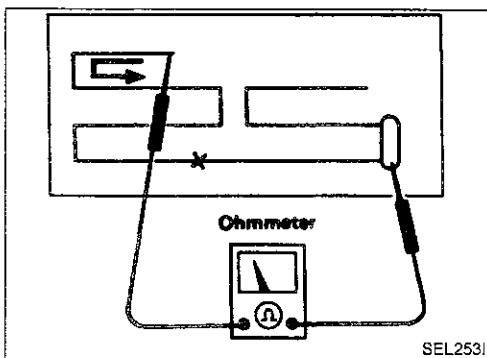


3. To locate broken point, move probe to left and right along element to determine point where tester needle swings abruptly.

ELEMENT REPAIR

Refer to REAR WINDOW DEFOGGER "Filament Repair".



LOCATION OF ELECTRICAL UNITS

Engine Compartment

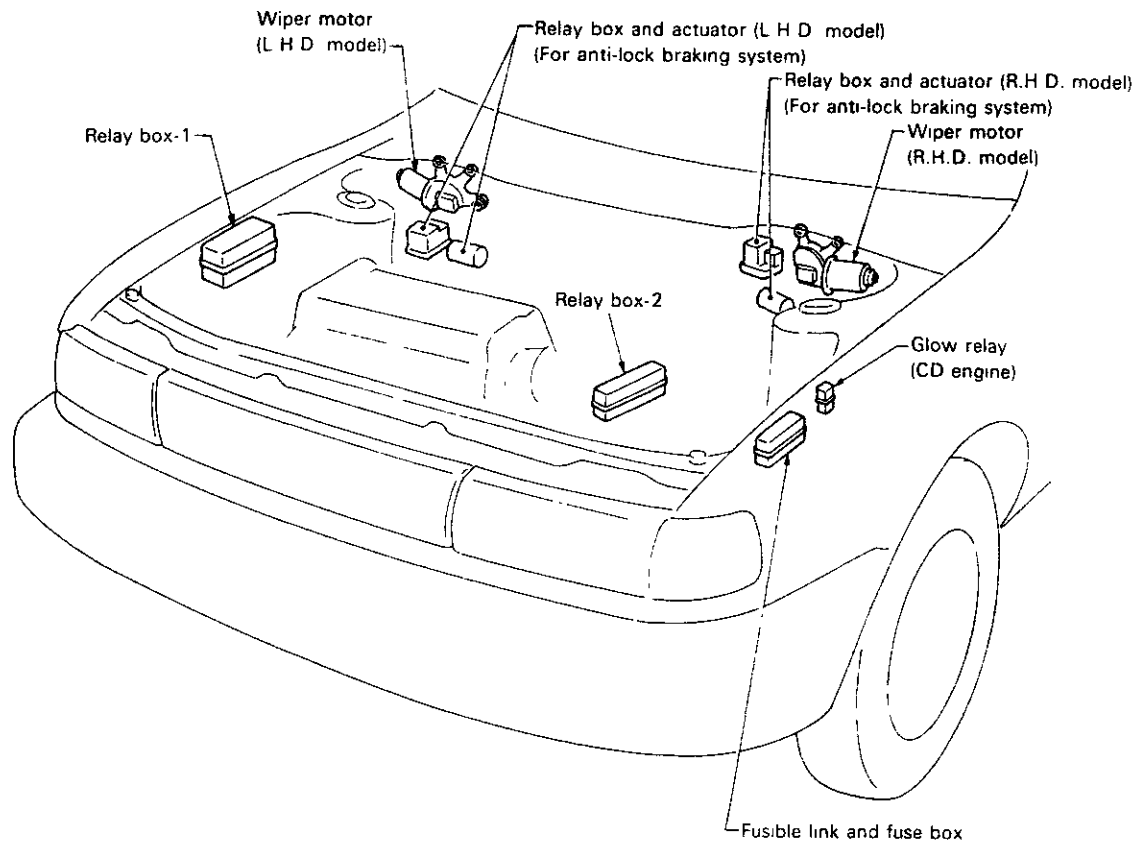


Relay box-1

For Europe: All models
 Except for Europe: L.H.D. model with CD engine and R.H.D. model

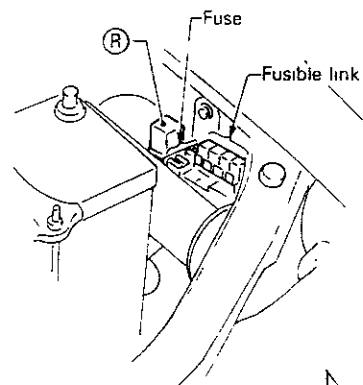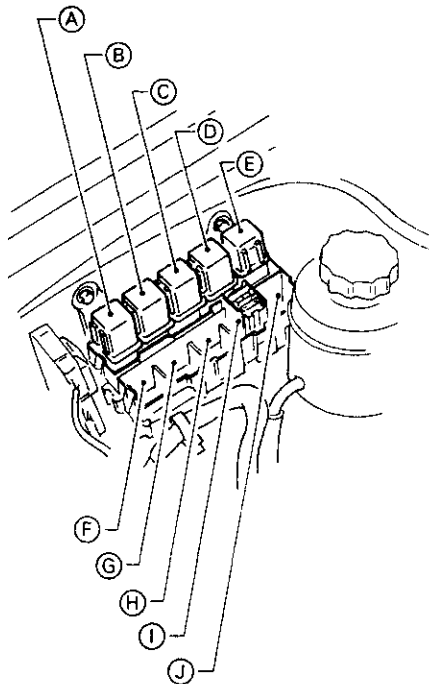

Relay box-2 (L.H.D. model with GA engine and SR engine)

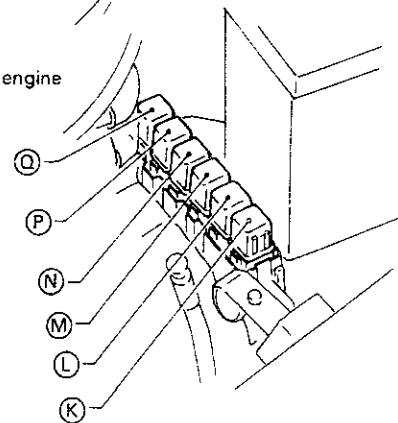

LOCATION OF ELECTRICAL UNITS

Engine Compartment (Cont'd)

L.H.D. MODELS

Relay	Model	B13 model						N14 model					
	Destination	Europe		Middle East	Except Europe and Middle East		CD	Europe					
	Engine	GA16DS		GA14DS GA16DS	GA16DE	GA13DS GA14DS GA16DS		GA14DS, GA16DS					
		(NC)	(CR)					(NC)	(CR)	(CN)	CD		
Air conditioner relay	K	K	K	K	K	K	A	B	B	B	B	B	
Resistor	M	—	—	—	M	—	—	Q	—	—	—	—	
Automatic choke relay	—	M	M	M	—	M	—	—	Q	Q	Q	—	
Bulb check relay	—	—	—	—	—	—	B	—	—	—	—	J	
Fuel pump relay	L	—	—	—	L	—	—	N	—	—	—	—	
Idle-up relay	—	L	—	L	—	L	—	—	M	—	—	—	
E.C.C. relay	—	—	L	—	—	—	—	—	—	N	N	—	
Mixture heater relay	—	—	N	—	—	—	—	—	—	M	—	—	
Radiator fan relay-1	P	P	P	P	P	P	D	P	P	P	P	I	
Radiator fan relay-2	—	—	—	N (A/T)	N (*1)	N (*1)	—	—	—	—	—	—	
Radiator fan relay-3	—	—	—	B (A/T)	—	—	—	—	—	—	—	—	
Inhibitor relay (A/T)	—	Q	Q	Q	Q	Q	—	—	C	C	C	—	
Horn relay	A	A	A	A(A/T) R(M/T)	R	R	R	L	L	L	L	G	
Rear wiper relay	—	—	—	—	—	—	—	A (H/B)	A (H/B)	A (H/B)	A (H/B)	A (H/B)	
Front fog lamp relay	C	C	C	—	—	—	—	K	K	K	K	F	
Rear fog lamp relay	B	B	B	—	—	—	—	E	E	E	E	E	
Driving lamp relay	—	—	—	—	—	—	—	C (20DE)	—	—	—	—	
Fuse	—	—	—	—	—	—	—	D	D	D	D	D	

R.H.D. MODELS

Relay	Model	B13 model						N14 model							
	Destination	Europe		Except Europe				Europe				Except Europe			
	Engine	SR	GA16DS		GA16DE	GA13DS GA14DS GA16DS	E	CD	SR	GA14DS, GA16DS			CD	GA16DE	GA14DS
			(NC)	(CR)						(NC)	(CR)	(CN)			
Air conditioner relay	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A
Resistor	B	—	—	B	—	—	—	B	—	—	—	—	B	—	—
Automatic choke relay	—	B	B	—	B	B	—	—	B	B	B	—	—	B	—
Bulb check relay	—	—	—	—	—	—	B	—	—	—	—	B	—	—	—
Fuel pump relay	C	—	—	—	—	—	—	C	—	—	—	—	C	—	—
Idle-up relay	—	C	—	—	—	—	—	—	C	—	—	—	—	C	—
E.C.C. relay	—	—	C	—	—	—	—	—	—	C	C	—	—	—	—
Mixture heater relay	—	—	H	—	—	—	—	—	—	H	—	—	—	—	—
Radiator fan relay-1	D	D	D	D	D	D	D	D	D	D	D	D	D	D	D
Radiator fan relay-2	—	—	—	C (*1)	C (*1)	—	—	—	—	—	—	—	—	—	—
Inhibitor relay (A/T)	—	E	E	E	E	—	—	—	E	E	E	—	E	E	—
Horn relay	R	R	I	R	R	R	R	R	R	I	R	R	R	R	R
Rear wiper relay	—	—	—	—	—	—	—	G (H/B)	G (H/B)	G (H/B)	G (H/B)	G (H/B)	G (H/B)	G (H/B)	G (H/B)
Front fog lamp relay	G	G	G	—	—	—	—	J	J	J	J	J	—	—	—
Rear fog lamp relay	F	F	F	—	—	—	—	F	F	F	F	F	—	—	—
Driving lamp relay	—	—	—	—	—	—	—	H (20DE)	—	—	—	—	—	—	—
Fuse	—	—	—	—	—	—	—	I	I	—	I	I	I	I	I


- (NC) Without catalyzer
 (CR) With catalyzer and E.G R
 (CN) With catalyzer without E.G R

*1 A/T model for hot areas

LOCATION OF ELECTRICAL UNITS

Passenger Compartment

L.H.D. MODELS

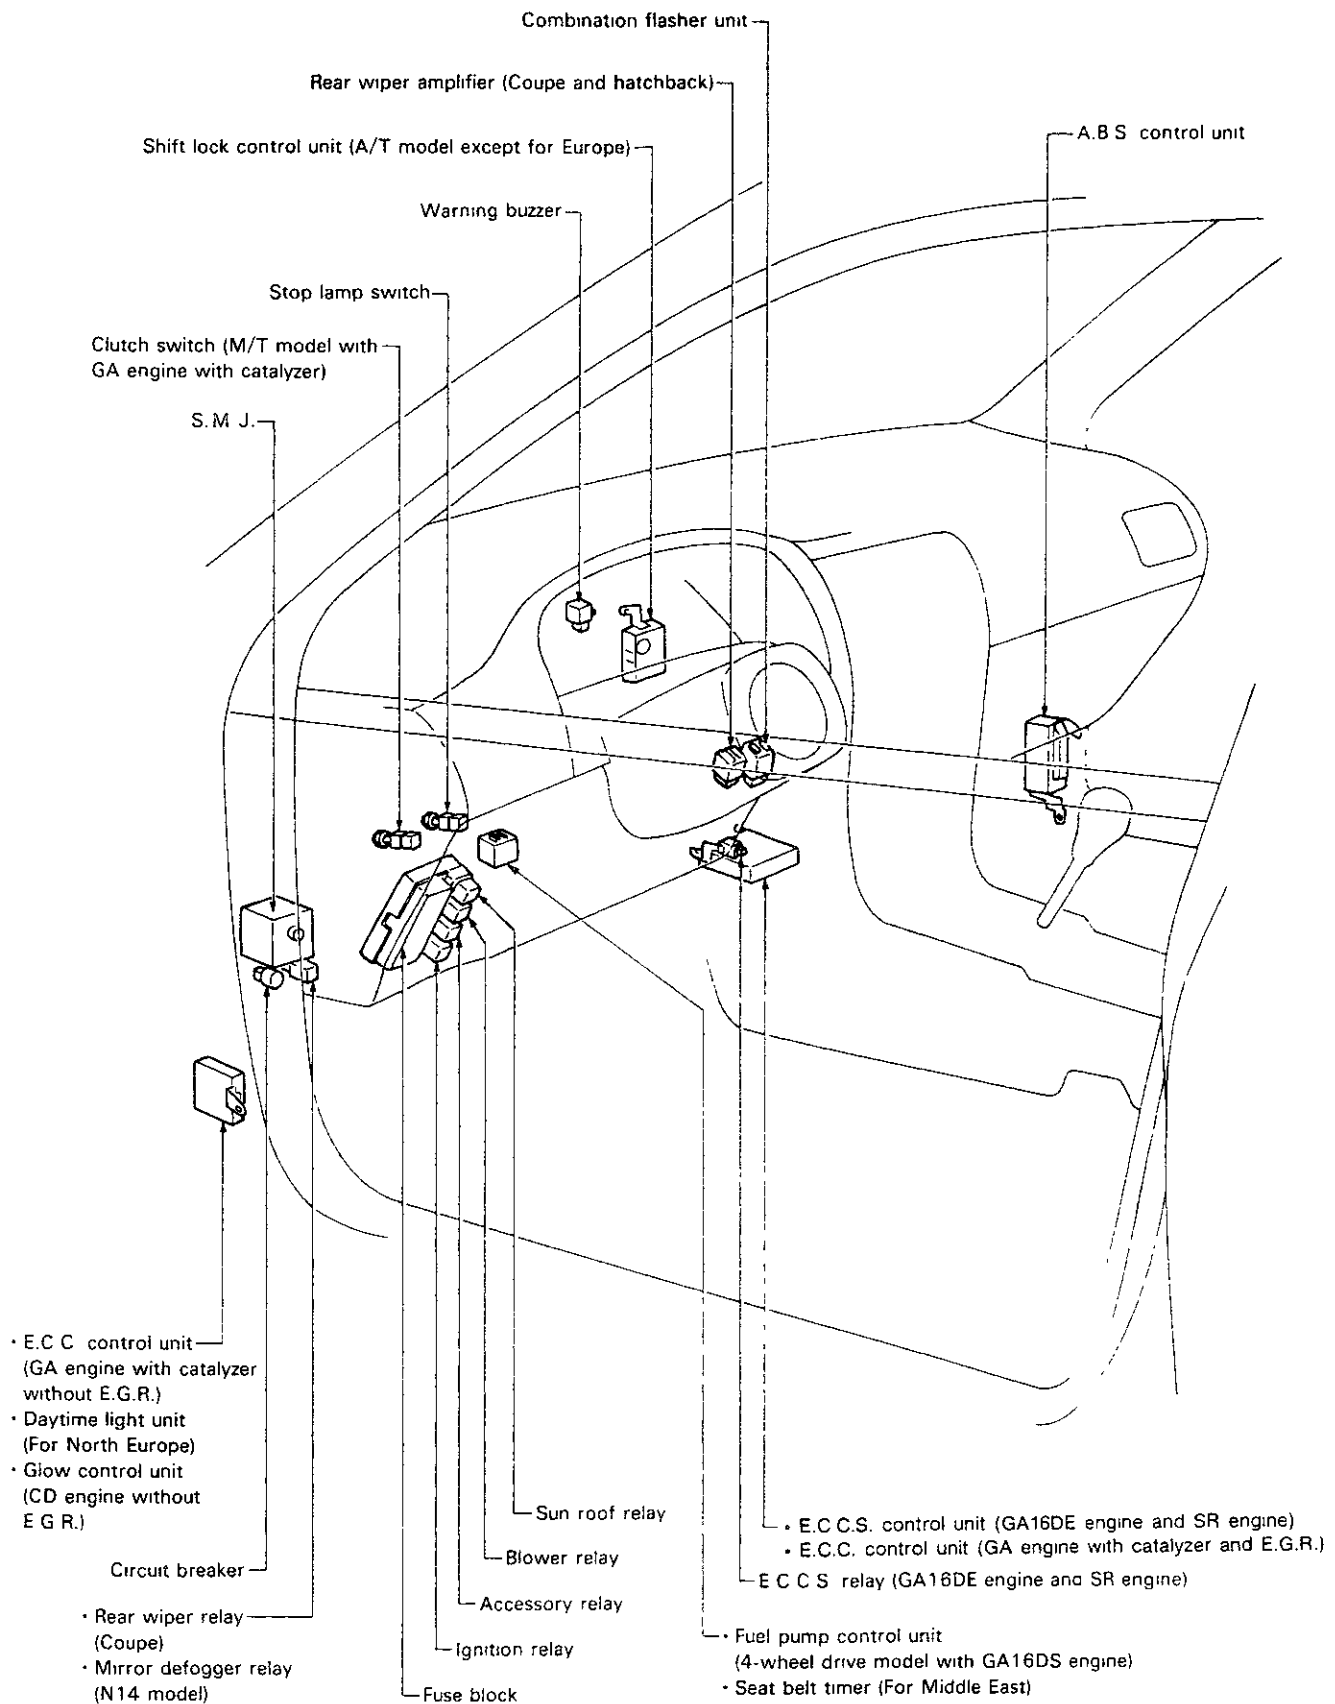


SEL232Q

LOCATION OF ELECTRICAL UNITS

Passenger Compartment (Cont'd)

R.H.D. MODELS

A/C cut timer (N14 model with GA14DS engine except for Europe)

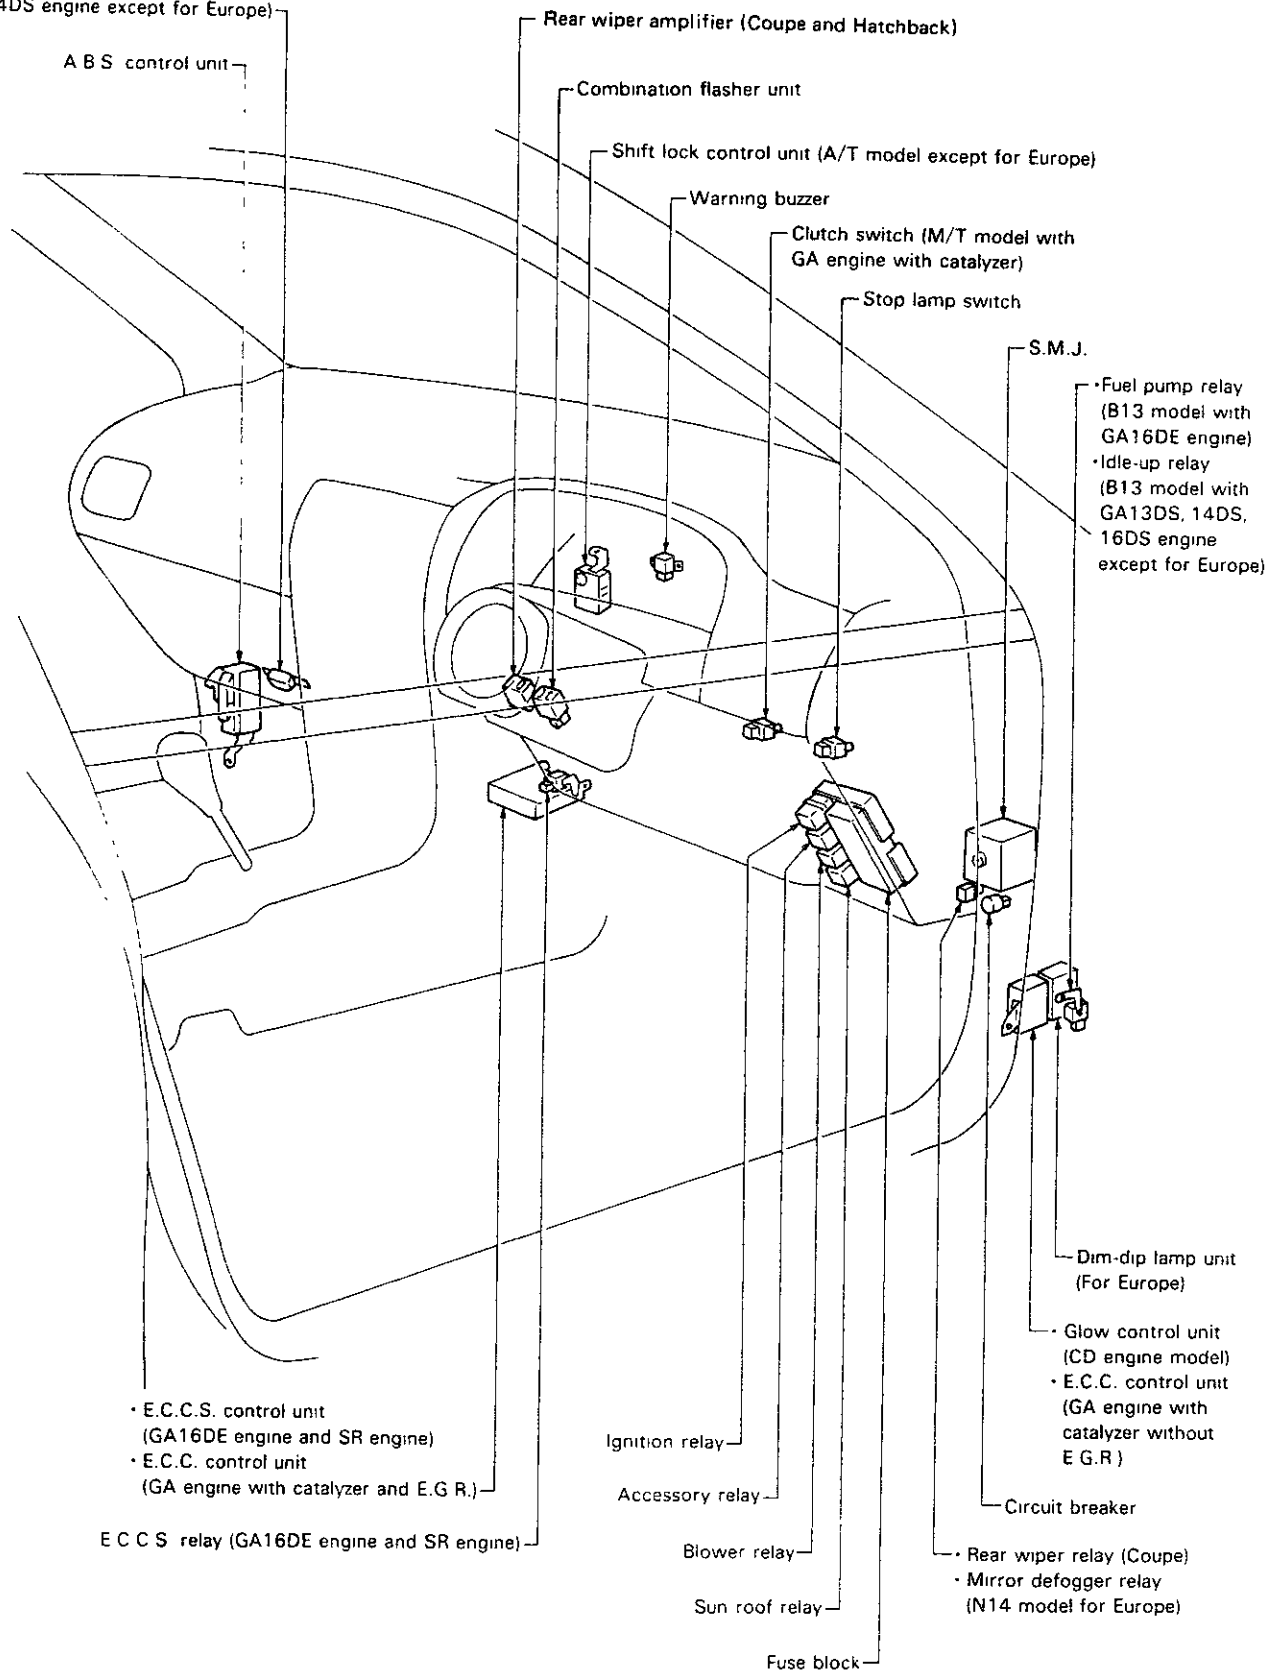


SEL403Q

HARNESS LAYOUT

Outline


B13

L.H.D. MODELS

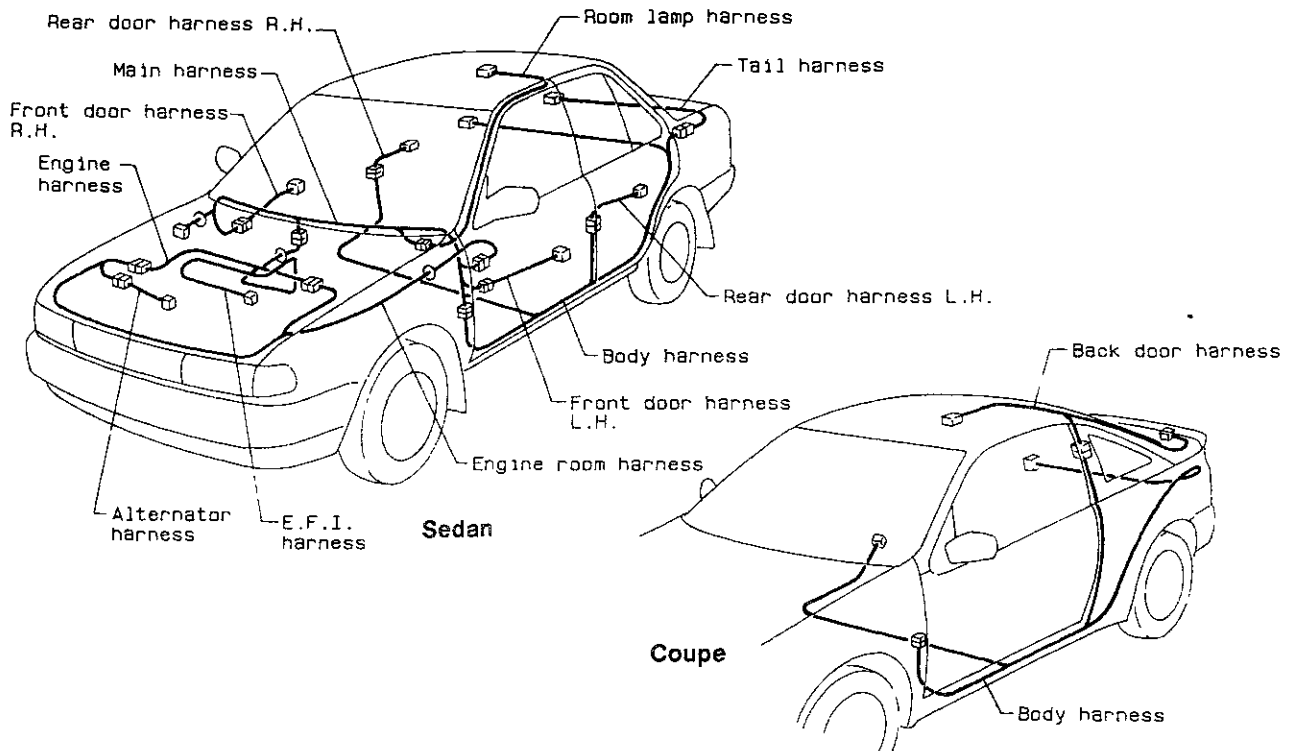

SEL612P

R.H.D. MODELS

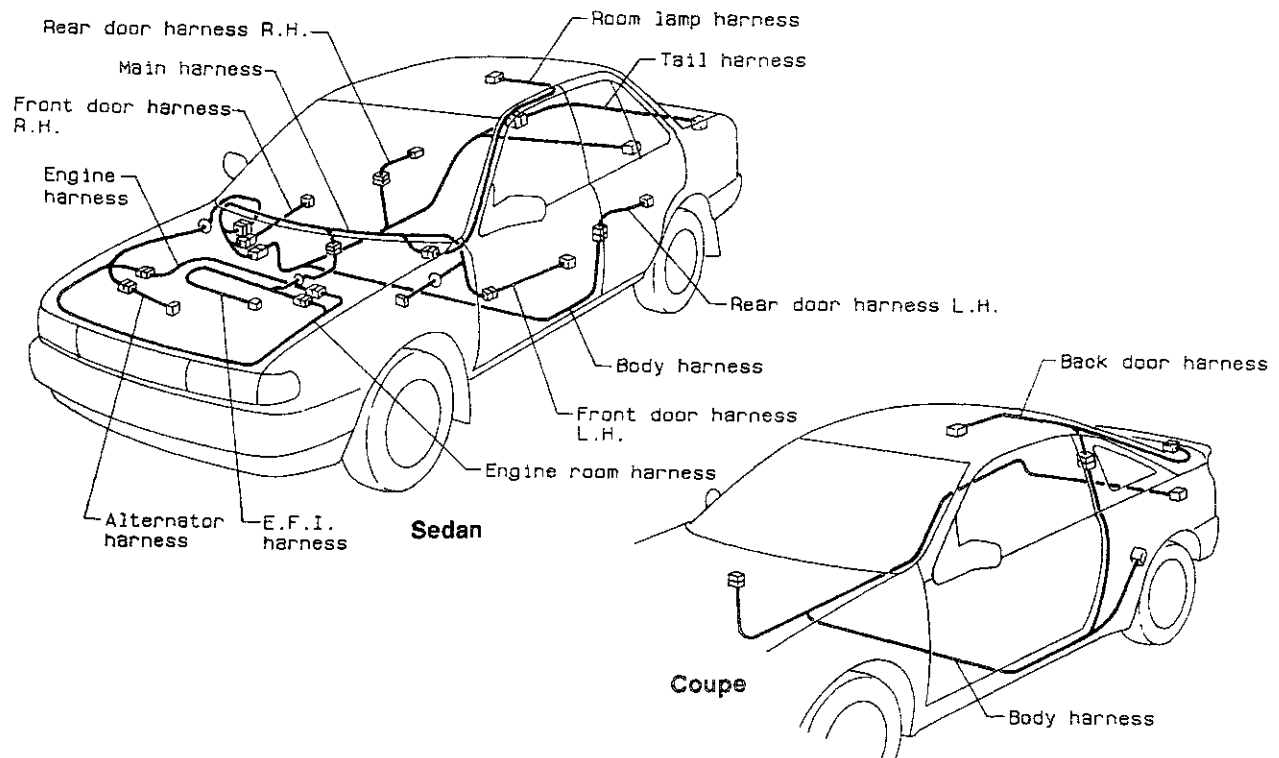

SEL613P


EL-180

HARNESS LAYOUT

Outline (Cont'd)


N14

L.H.D. MODELS

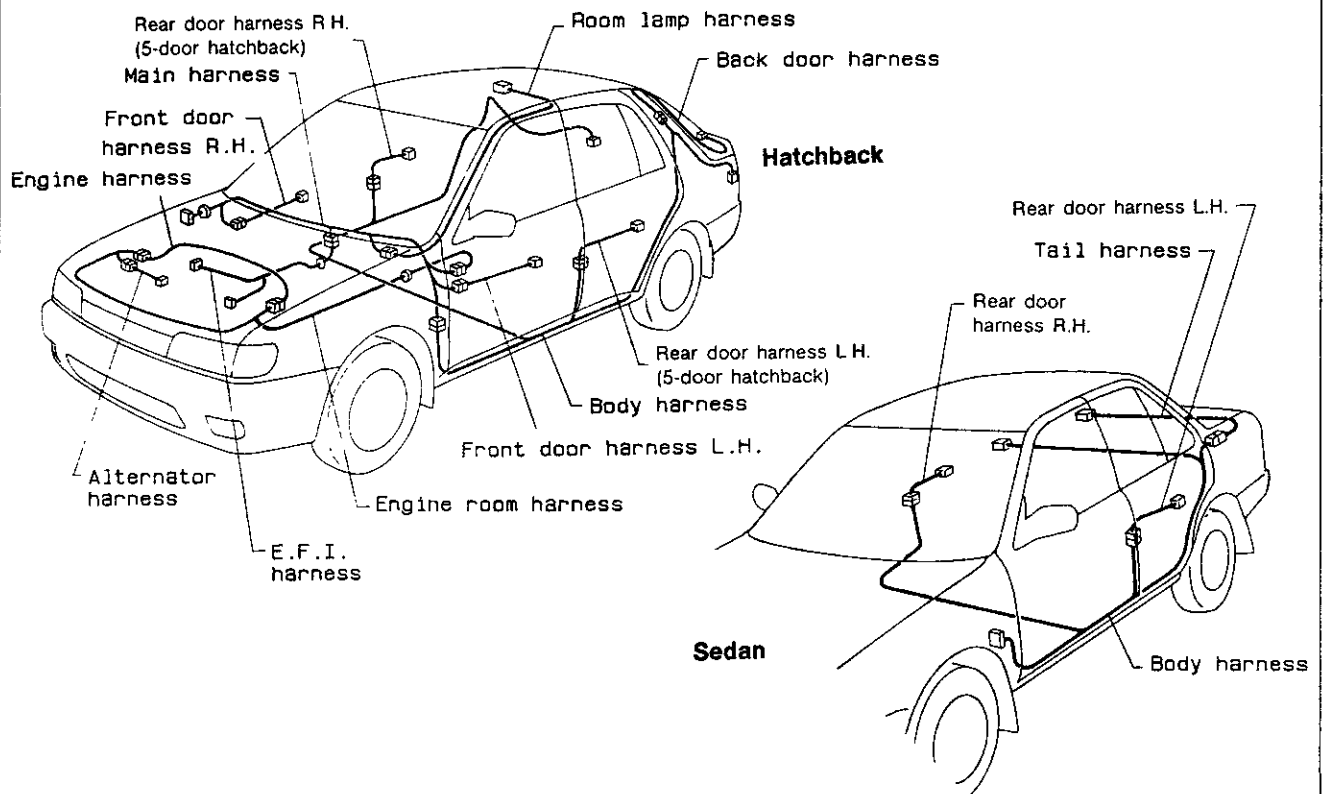

SEL236Q

R.H.D. MODELS

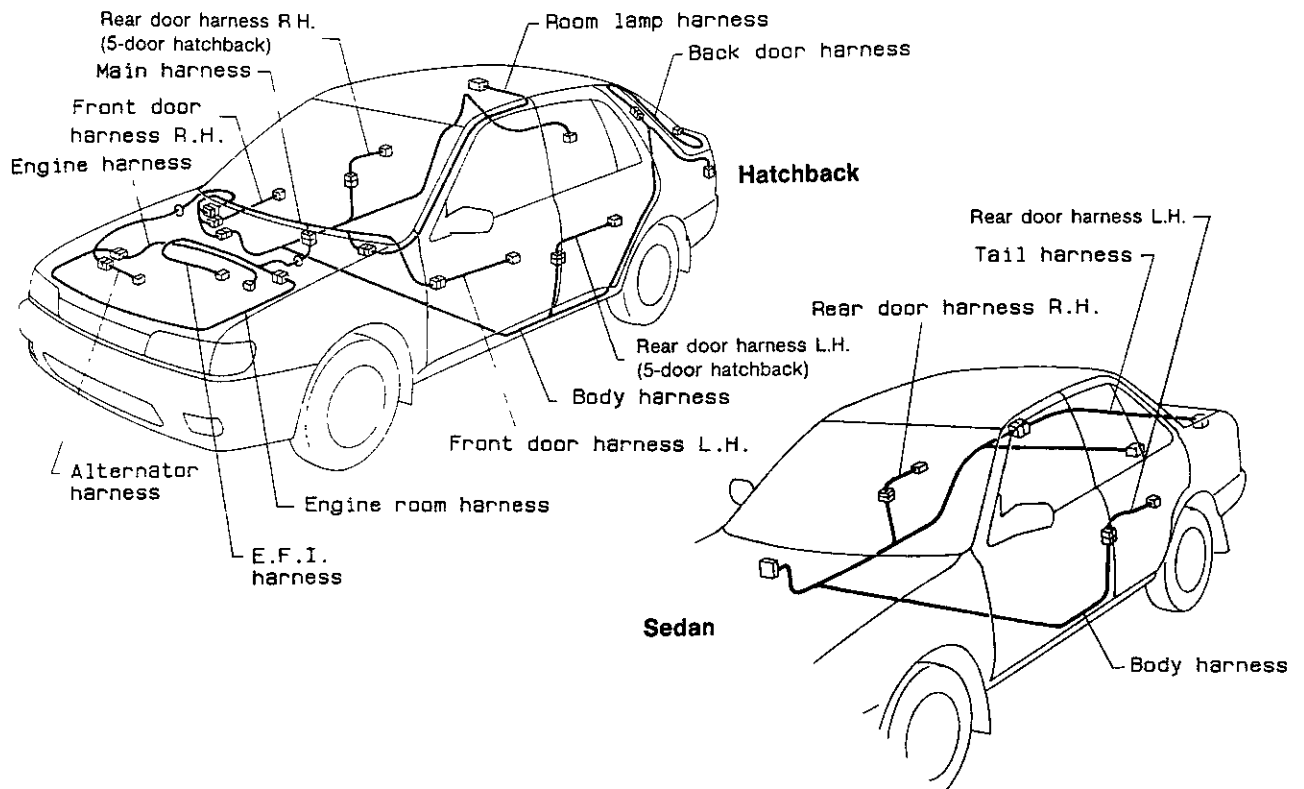


SEL237Q

HARNESS LAYOUT

Engine Room Harness

L.H.D. MODELS (Engine compartment)

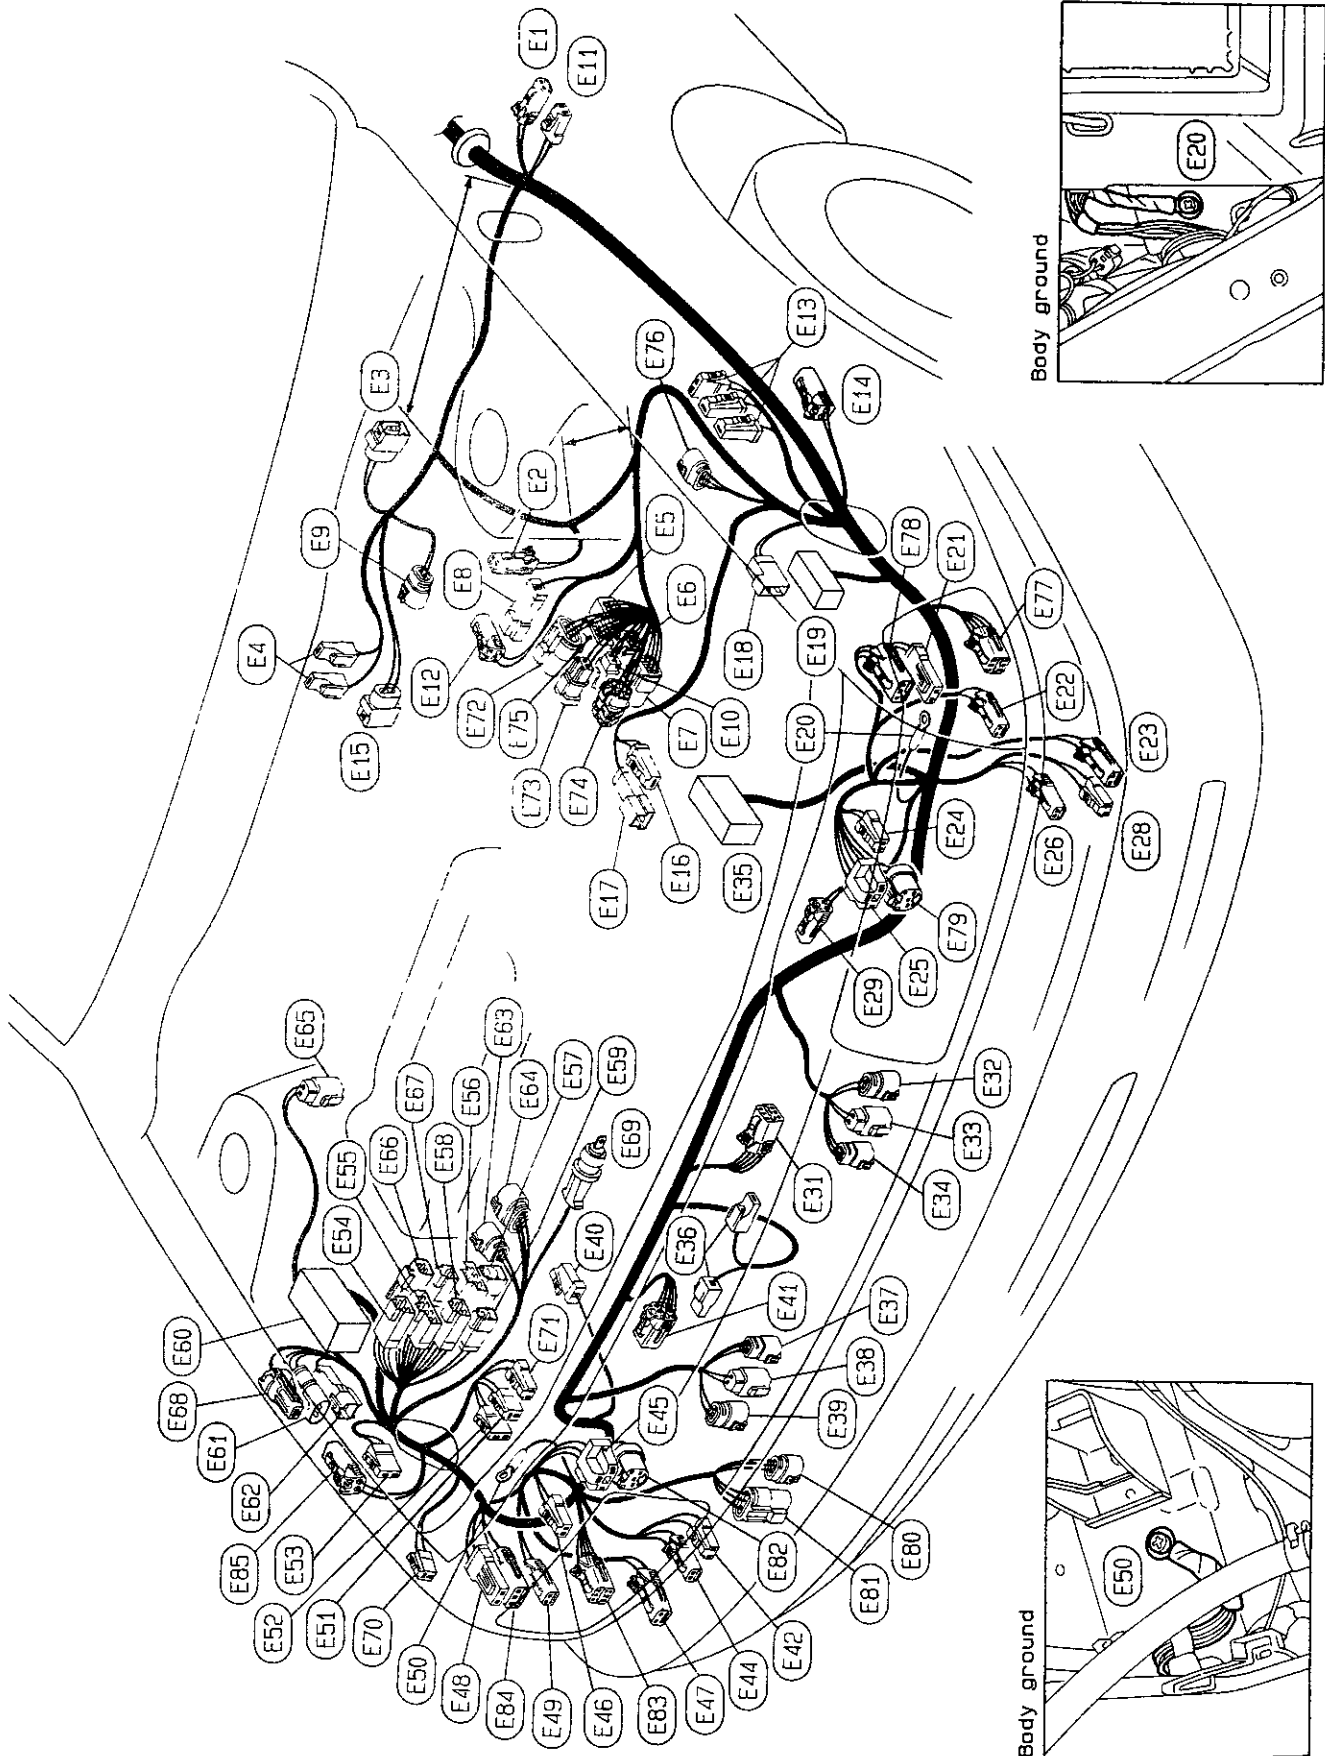

HARNESS LAYOUT

Engine Room Harness (Cont'd)


- (E1) : Side turn signal lamp L.H. (Coupe)
 (E2) : Front sensor L.H. (For anti-lock braking system)
 (E3) : Brake fluid level switch
 (E4) : F.I.C.D. solenoid valve (Without E.C.C.S. engine)
 (E5) : To (E224) (Non-turbo model except CD engine without E.G.R.)
 (E6) : To (E226) (GA16DE engine)
 (E7) : To (E225) (GA13DS, 14DS, 16DS engine without catalyzer, and SR20DE engine)
 (E8) : To (E218) (CD engine)
 (E9) : Fuel filter sensor (CD engine)
 (E10) : To (E222) (N14 model GA engine without catalyzer)
 (E11) : Side turn signal lamp L.H. (N14 model)
 (E12) : Vehicle speed sensor (Digital meter)
 (E13) : Glow relay (CD engine)
 (E14) : Front side marker lamp L.H. (Sedan for Middle East)
 (E15) : Vacuum switch (GA engine with catalyzer without E.G.R.)
 (E16) : Battery
 (E17) : Fusible link
 (E18) : Fender marker lamp L.H. (Sedan except for Europe and Middle East)
 (E19) : Fusible link and fuse box
 (E20) : Body ground
 (E21) : Front turn signal lamp L.H. (Sedan and hatchback except for Middle East)
 (E22) : Front turn signal lamp L.H. (Coupe)
 (E23) : Driving lamp L.H. (GTI model)
 (E24) : Clearance lamp L.H. (Except Sedan for Middle East)
 (E25) : Headlamp L.H. (Except Sedan for Middle East)
 (E26) : To front fog lamp harness L.H. (Coupe)
 (E28) : Front fog lamp L.H. (N14 model)
 (E29) : Dual-pressure switch
 (E31) : Headlamp wiper motor L.H. (For Europe)
 (E32) : Radiator fan motor-1 (Except for hot areas and CD20 engine)
 (E33) : Radiator fan motor-1 (CD17 engine model for hot areas and CD20 engine)
 (E34) : Radiator fan motor-1 (GA engine A/T model for hot areas)
 (E35) : Relay box (Refer to "LOCATION OF ELECTRICAL UNITS".)
 (E36) : Horn
 (E37) : Radiator fan motor-2 (GA engine A/T model for hot areas)
 (E38) : Radiator fan motor-2 (CD17 engine model for hot areas and CD20 engine)
 (E39) : Radiator fan motor-2 (Except for hot areas and CD20 engine)
 (E40) : Brake vacuum switch (CD engine)
 (E41) : Headlamp wiper motor R.H. (For Europe)
 (E42) : Front fog lamp R.H. (N14 model)
 (E44) : To front fog lamp harness R.H. (Coupe)
 (E45) : Headlamp R.H. (Except sedan for Middle East)
 (E46) : Clearance lamp R.H. (Except sedan for Middle East)
 (E47) : Driving lamp R.H. (GTI model)
 (E48) : Front turn signal lamp R.H. (Sedan and hatchback except for Middle East)
 (E49) : Front turn signal lamp R.H. (Coupe)
 (E50) : Body ground
 (E51) : Front washer motor
 (E52) : Rear washer motor (Coupe and hatchback)
 (E53) : Fender marker lamp R.H. (Sedan except for Europe and Middle East)
 (E54) : To (E202) (CD engine without E.G.R.)
 (E55) : To (E203) (CD engine and SR20DE engine)
 (E56) : To alternator harness (CD engine with E.G.R.)
 (E57) : To (E201) (Turbo model)
 (E58) : To (E205) (Turbo model)
 (E59) : To alternator harness (N14 model GA engine and SR engine for Europe)
 (E59) : To alternator harness (B13 model with CD engine and N14 non-turbo model)
 (E60) : Relay box (Refer to "LOCATION OF ELECTRICAL UNITS".)
 (E61) : To alternator harness (B13 model with GA engine)
 (E62) : To alternator harness (B13 model with GA engine and SR engine)
 (E63) : Thermoswitch (GA13DS, 14DS, 16DS engine except A/T model for hot areas)
 (E64) : Thermoswitch (GA13DS, 14DS, 16DS engine A/T model for hot areas)
 (E65) : Actuator (For anti-lock braking system)
 (E66) : To (E205) (Turbo model)
 (E67) : To alternator harness (CD engine without E.G.R.)
 (E68) : To alternator harness (B13 model with SR engine for Europe and GA engine coupe for Middle East)
 (E69) : Exhaust gas sensor (GA engine with catalyzer and E.G.R.)
 (E70) : Headlamp washer motor (With headlamp wiper)
 (E71) : Washer level switch (For Europe)
 (E72) : To (E228) (GA engine with catalyzer and E.G.R.)
 (E73) : To (E226) (SR20DE engine)
 (E74) : To (E229) (GA engine with catalyzer and E.G.R.)
 (E75) : To (E230) (GA engine with catalyzer without E.G.R.)
 (E76) : Boost pressure sensor (Turbo model)
 (E77) : Aiming motor unit L.H. (For Europe)
 (E78) : Front combination lamp L.H. (For Middle East)
 (E79) : Headlamp L.H. (For Middle East)
 (E80) : Exhaust gas sensor (SR20DE engine with catalyzer)
 (E81) : Exhaust gas sensor (Turbo model)
 (E82) : Headlamp R.H. (For Middle East)
 (E83) : Aiming motor unit R.H. (For Europe)
 (E84) : Front combination lamp R.H. (For Middle East)
 (E85) : Front side marker lamp R.H. (Sedan for Middle East)

HARNESS LAYOUT

Engine Room Harness (Cont'd)

L.H.D. MODELS (Passenger compartment)

- E101** : Glow control unit (CD engine without E.G.R.)
E104 : To **(M1)** (S.M.J.)
E105 : Diode (GA13DS, 14DS, 16DS engine except N14 model with catalyzer)
E106 : Fuse block
E108 : Ignition switch
E109 : Key switch (Except for Europe and CD engine)
E110 : Key lock solenoid (A/T model)
E111 : Front wiper switch
E112 : Rear wiper switch (Coupe and hatchback)
E113 : Lighting switch
E115 : Lighting switch (For Europe)
E116 : Daytime light control unit
E117 : E.C.C. control unit (GA engine with catalyzer without E.G.R.)
E118 : To **(B2)** (N14 model with headlamp aiming system)
E119 : To **(M3)** (N14 model with small lamps type-II)
E120 : Check connector (GA engine with catalyzer without E.G.R.)
E122 : To **(M2)** (CD engine with E.G.R.)
E123 : Diode (N14 model with GA engine with catalyzer and E.G.R.)

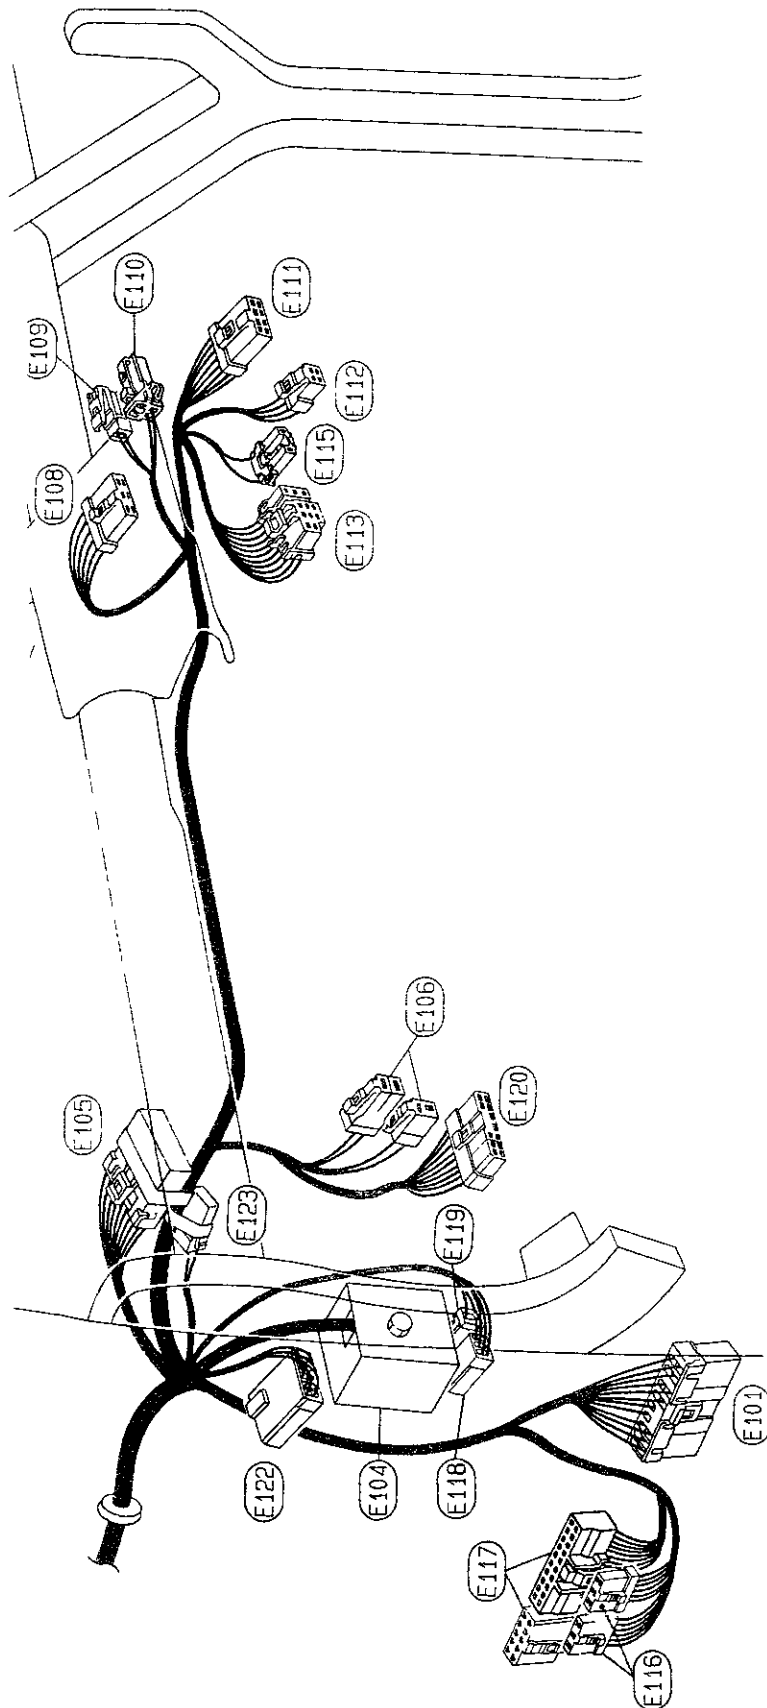


HARNESS LAYOUT

NOTE

HARNESS LAYOUT

Engine Room Harness (Cont'd)

R.H.D. MODELS (Engine compartment)

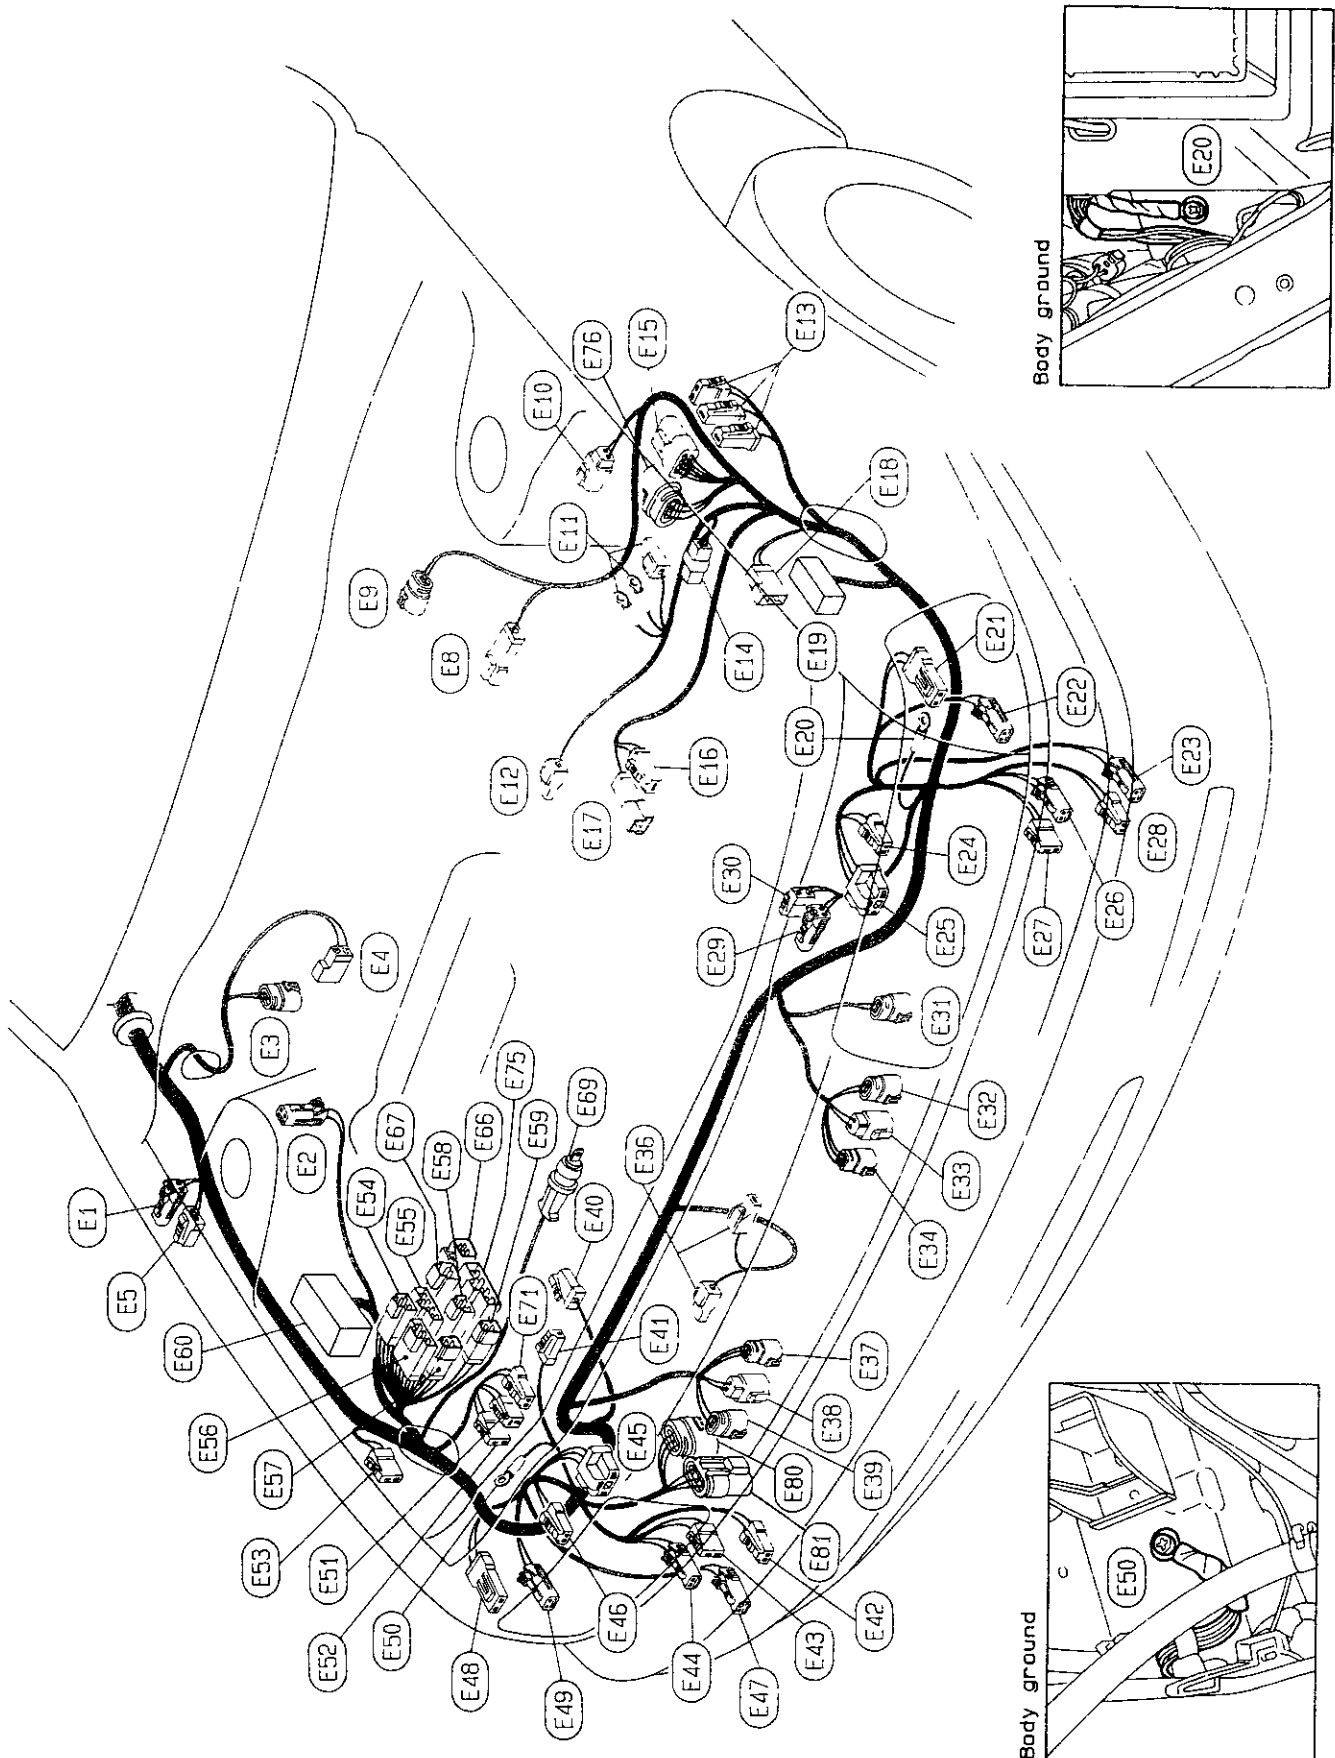

HARNESS LAYOUT

Engine Room Harness (Cont'd)


- (E1) : Side turn signal lamp R.H. (Coupe)
 (E2) : Front sensor R.H. (For anti-lock braking system)
 (E3) : Power steering oil pressure switch (GA engine and SR engine)
 (E4) : Brake fluid level switch
 (E5) : Side turn signal lamp R.H. (Hatchback)
 (E6) : To (E219) (CD engine)
 (E9) : Fuel filter sensor (CD engine)
 (E10) : To (M02) (For anti-lock braking system)
 (E11) : Ignition coil (E10S engine)
 (E12) : Distributor (E10S engine)
 (E13) : Glow relay (CD engine)
 (E14) : Resistor and condenser (E10S engine)
 (E15) : To (F6) (GA16DE engine)
 To (F10) (SR engine)
 To (F11) (GA engine with catalyzer and E.G.R.)
 (E16) : Battery
 (E17) : Fusible link
 (E18) : Fender marker lamp L.H. (Sedan except for Europe)
 (E19) : Fusible link and fuse box
 (E20) : Body ground
 (E21) : Front turn signal lamp L.H. (Sedan and Hatchback)
 (E22) : Front turn signal lamp L.H. (Coupe)
 (E23) : Driving lamp L.H. (GTI model)
 (E24) : Clearance lamp L.H.
 (E25) : Headlamp L.H.
 (E26) : To front fog lamp harness L.H. (Coupe)
 (E27) : To front fog lamp harness L.H. (Sedan with GA engine except for Europe)
 (E28) : Front fog lamp L.H. (N14 model)
 (E29) : Dual-pressure switch (B13 model for Europe and N14 model)
 (E30) : Dual-pressure switch (B13 model except for Europe)
 (E31) : Thermoswitch (E10S engine)
 (E32) : Radiator fan motor-1 (Except for hot areas and CD20 engine)
 (E33) : Radiator fan motor-1 (CD17 engine model for hot areas and CD20 engine)
 (E34) : Radiator fan motor-1 (GA engine A/T model for hot areas)
 (E36) : Horn
 (E37) : Radiator fan motor-2 (GA engine A/T model for hot areas)
 (E38) : Radiator fan motor-2 (CD17 engine model for hot areas and CD20 engine)
 (E39) : Radiator fan motor-2 (Except for hot areas and CD20 engine)
 (E40) : Brake vacuum switch (CD engine)
 (E41) : Compressor (E10S engine)
 (E42) : Front fog lamp R.H. (N14 model)
 (E43) : To front fog lamp harness R.H. (Sedan with GA engine except for Europe)
 (E44) : To front fog lamp harness R.H. (Coupe)
 (E45) : Headlamp R.H.
 (E46) : Clearance lamp R.H.
 (E47) : Driving lamp R.H. (GTI model)
 (E48) : Front turn signal lamp R.H. (Sedan and Hatchback)
 (E49) : Front turn signal lamp R.H. (Coupe)
 (E50) : Body ground
 (E51) : Front washer motor
 (E52) : Rear washer motor (Coupe and Hatchback)
 (E53) : Fender marker lamp R.H. (Sedan except for Europe)
 (E54) : To (E202) (N14 model with SR engine without catalyzer, GA16DE engine, GA engine with catalyzer without E.G.R., E10S engine and CD engine)
 (E55) : To (E203) (Except E10S engine)
 (E56) : To (E201) (Except GA16DE engine, GA engine with E.G.R. and CD engine)
 (E57) : To (E203) (E10S engine)
 To (E205) (SR engine)
 To (E235) (GA engine with catalyzer)
 (E58) : To alternator harness (GA engine without catalyzer and CD17 engine)
 (E59) : To alternator harness (GA engine without catalyzer and CD engine)
 (E60) : Relay box (Refer to "LOCATION OF ELECTRICAL UNITS".)
 (E66) : To (E206) (SR engine with catalyzer)
 (E67) : To alternator harness (CD20 engine without E.G.R.)
 (E69) : Exhaust gas sensor (GA engine with catalyzer)
 (E71) : Washer level switch (For Europe)
 (E75) : To (E236) (GA engine with catalyzer)
 (E76) : Boost pressure sensor (Turbo model)
 (E80) : Exhaust gas sensor (SR20DE engine with catalyzer)
 (E81) : Exhaust gas sensor (Turbo model)

HARNESS LAYOUT

Engine Room Harness (Cont'd)

R.H.D. MODELS (Passenger compartment)

- E101 : Glow control unit (CD engine)
 E102 : Fuel pump relay (B13 model with GA16DE engine)
 E103 : Idle-up relay
 E104 : (B13 Sedan with GA13DS, 14DS, 16DS engine)
 E105 : To (M1) (S.M.J.)
 E106 : Diode (GA13DS, 14DS, 16DS engine without catalyzer)
 E107 : Fuse block
 E108 : Diagnostic connector for CONSULT
 E109 : (B13 model with E.C.C.S. engine)
 E110 : Lighting switch (Except for Europe)
 E111 : Lighting switch (For Europe)
 E112 : Dim-dip lamp control unit
 E113 : E.C.C. control unit (GA engine with catalyzer without E.G.R.)
 E114 : Check connector (GA engine with catalyzer except N14 model with E.G.R.)
 E115 : To (K36) (N14 model)
 E116 : Diode (GA engine with catalyzer and E.G.R.)
 E117 : Diode (GA engine with catalyzer and E.G.R.)

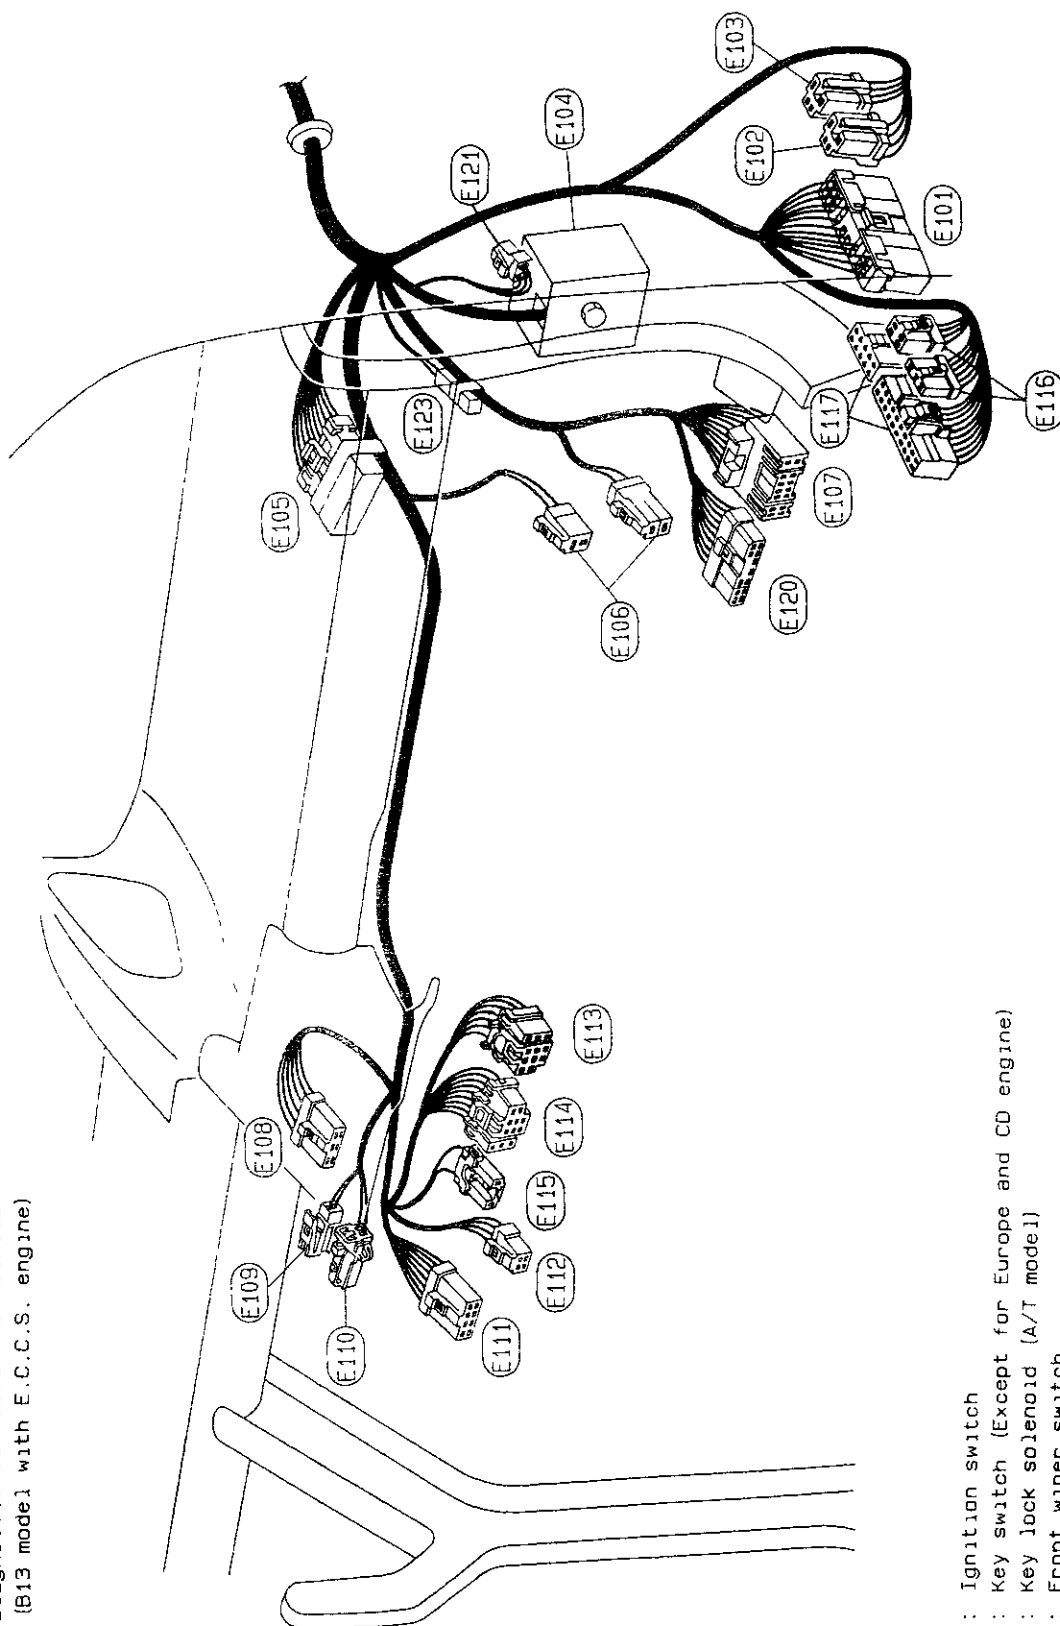

- E108 : Ignition switch
 E109 : Key switch (Except for Europe and CD engine)
 E110 : Key lock solenoid (A/T model)
 E111 : Front wiper switch
 E112 : Rear wiper switch (Coupe and Hatchback)
 E113 : Lighting switch (For Europe)


HARNESS LAYOUT

NOTE

HARNESS LAYOUT

Main Harness

L.H.D. MODELS

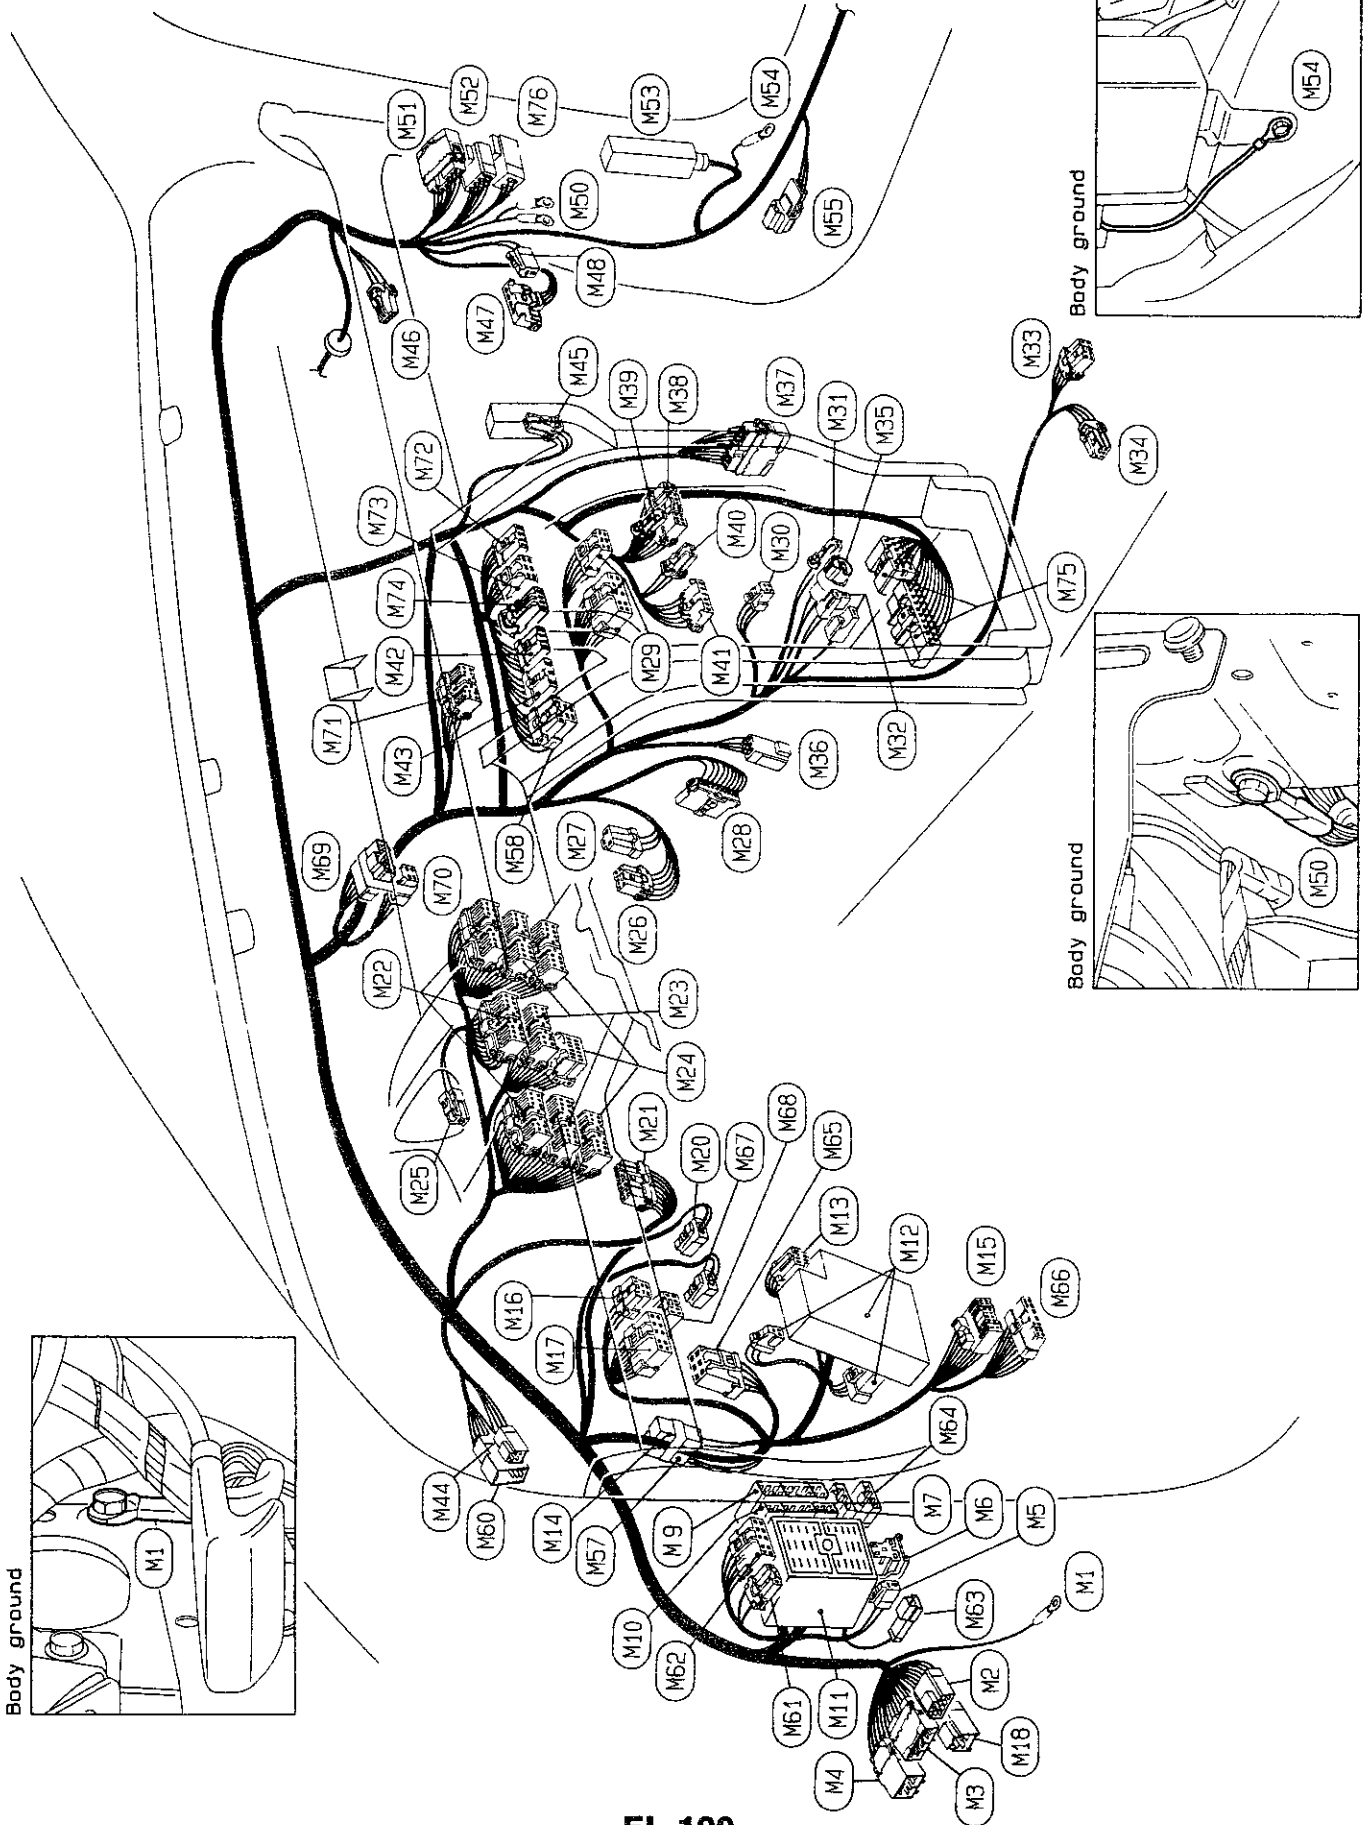

HARNESS LAYOUT


Main Harness (Cont'd)

M1 : Body ground	M33 : Shift lock solenoid - Detent switch (Except for Europe)	M66 : Check connector (GA14DS, 16DS engine with catalyzer and E.G.R.)
M2 : To D2 (B13 model)	M34 : O.D. cancel switch - A/T illumination	M67 : Clutch switch (GA14DS, 16DS engine M/T model with catalyzer)
M3 : To D1	M35 : G sensor (4-wheel drive model) (For anti-lock braking system)	M68 : Illumination control switch (For Europe)
M4 : To D3 (N14 model)	M36 : To J34	M69 : Diode (N14 model GA14DS, 16DS engine with catalyzer and small lamps type-II)
M5 : Circuit breaker	M37 : To F33	M70 : Diode (N14 model GA14DS, 16DS engine with catalyzer and small lamps type-I)
M6 : Rear wiper relay (Coupe)	M38 : Push control unit (Push control type)	M71 : Combination meter (sub) (N14 model with SR engine)
M7 : To B1 (B13 model)	M39 : Fan switch illumination (Lever control type)	M72 : Headlamp wiper and washer switch (For Europe)
M8 : To B3 (Blue)	M40 : Air conditioner switch	M73 : Rear fog lamp switch (B13 model)
M9 : To B4 (White)	M41 : Fan switch	M74 : Rear fog lamp switch (N14 model)
M10 : To E104 (S.M.J.)	M42 : Hazard switch	M75 : Glow control unit (CD engine model with E.G.R.)
M11 : Fuse block	M43 : Rear window defogger switch (B13 model)	M76 : To G34 (N14 model for Europe)
M12 : Sun roof relay	M44 : To room lamp harness (B13 model)	
M13 : Diode (B13 model)	M45 : Thermo control amplifier	
M14 : Diagnostic connector for CONSULT (With E.C.C.S. engine)	M46 : Intake door motor (Push control type)	
M15 : Front fog lamp switch	M47 : Fan resistor	
M16 : Door mirror switch	M48 : Blower motor	
M17 : To D4 (N14 model)	M49 : Body ground	
M18 : Stop lamp switch	M50 : To G31	
M19 : Shift lock control unit (Except for Europe)	M51 : To G35 (B13 model)	
M20 : Combination meter (Needle type without tachometer)	M52 : A.B.S. control unit (For anti-lock braking system)	
M21 : Combination meter (Needle type with tachometer)	M53 : Body ground (For anti-lock braking system)	
M22 : Combination meter (Digital type)	M54 : Joint connector (N14 model) (For anti-lock braking system)	
M23 : Buzzer	M55 : Diode (N14 model with power window)	
M24 : Rear wiper amplifier (Coupe and hatchback)	M56 : Rear window defogger switch (N14 model)	
M25 : Combination flasher unit	M57 : To room lamp harness (N14 model)	
M26 : Mode door motor (Push control type)	M58 : Door mirror defogger relay (N14 model for Europe)	
M27 : Radio	M59 : To E122 (CD engine model with E.G.R.)	
M28 : Cassette deck	M60 : To E119 (N14 model with small lamps type-II)	
M29 : Ashtray illumination	M61 : To G31 (N14 model)	
M30 : Cigarette lighter	M62 : Seat belt timer (For Middle East)	
	M63 : Fuel pump control unit (4-wheel drive model)	

HARNESS LAYOUT

Main Harness (Cont'd)

L.H.D. MODELS

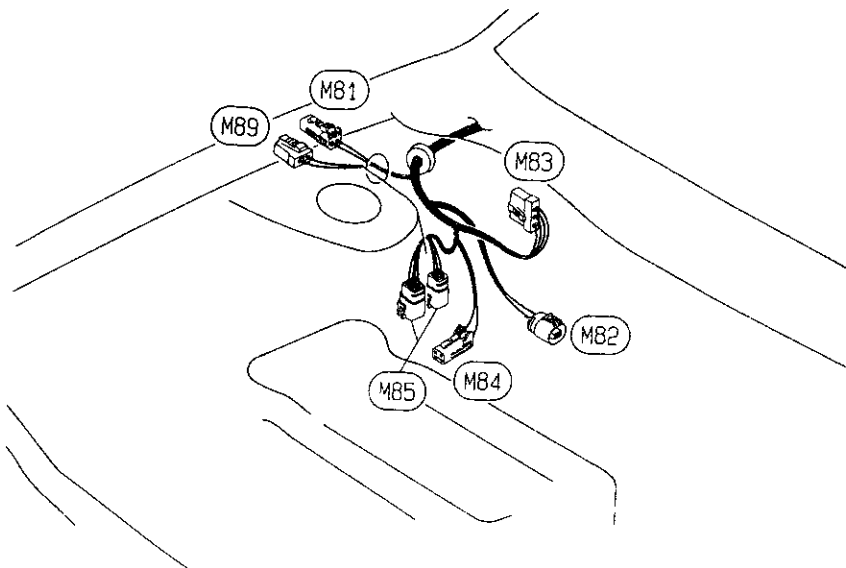


Engine compartment

- (M81) : Side turn signal lamp R.H. (Coupe)
- (M82) : Power steering oil pressure switch (GA13DS, 14DS, 16DS engine without catalyzer)
- (M83) : Wiper motor
- (M84) : Front sensor R.H. (For anti-lock braking system)
- (M85) : Actuator (For anti-lock braking system)
- (M89) : Side turn signal lamp R.H. (N14 model)

Rear body

(For anti-lock braking system)

- (M101) : Rear sensor L.H. (B13 model)
- (M102) : Rear sensor R.H. (B13 model)
- (M103) : To (M203) (N14 model)

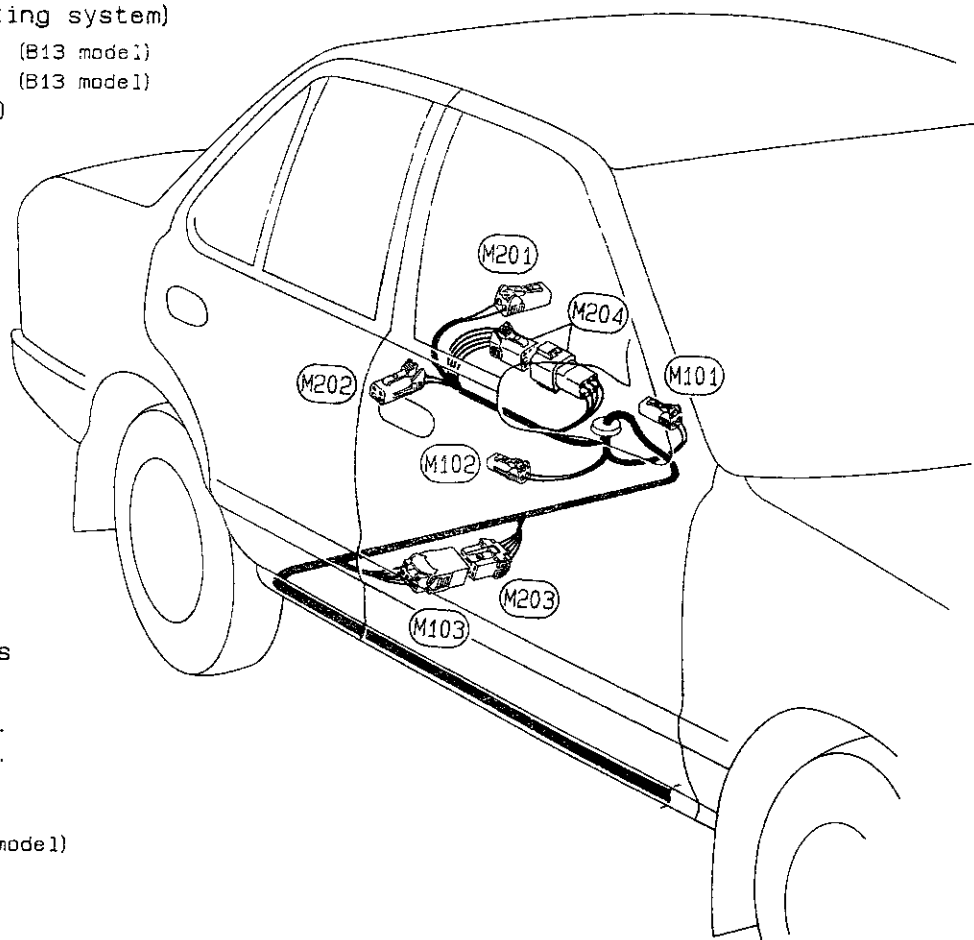

Rear sensor harness

(N14 model)

- (M201) : Rear sensor L.H.
- (M202) : Rear sensor R.H.
- (M203) : To (M103)
- (M204) : Joint connector (4-wheel drive model)

SEL243Q


HARNESS LAYOUT

NOTE

HARNESS LAYOUT

Main Harness (Cont'd)

R.H.D. MODELS

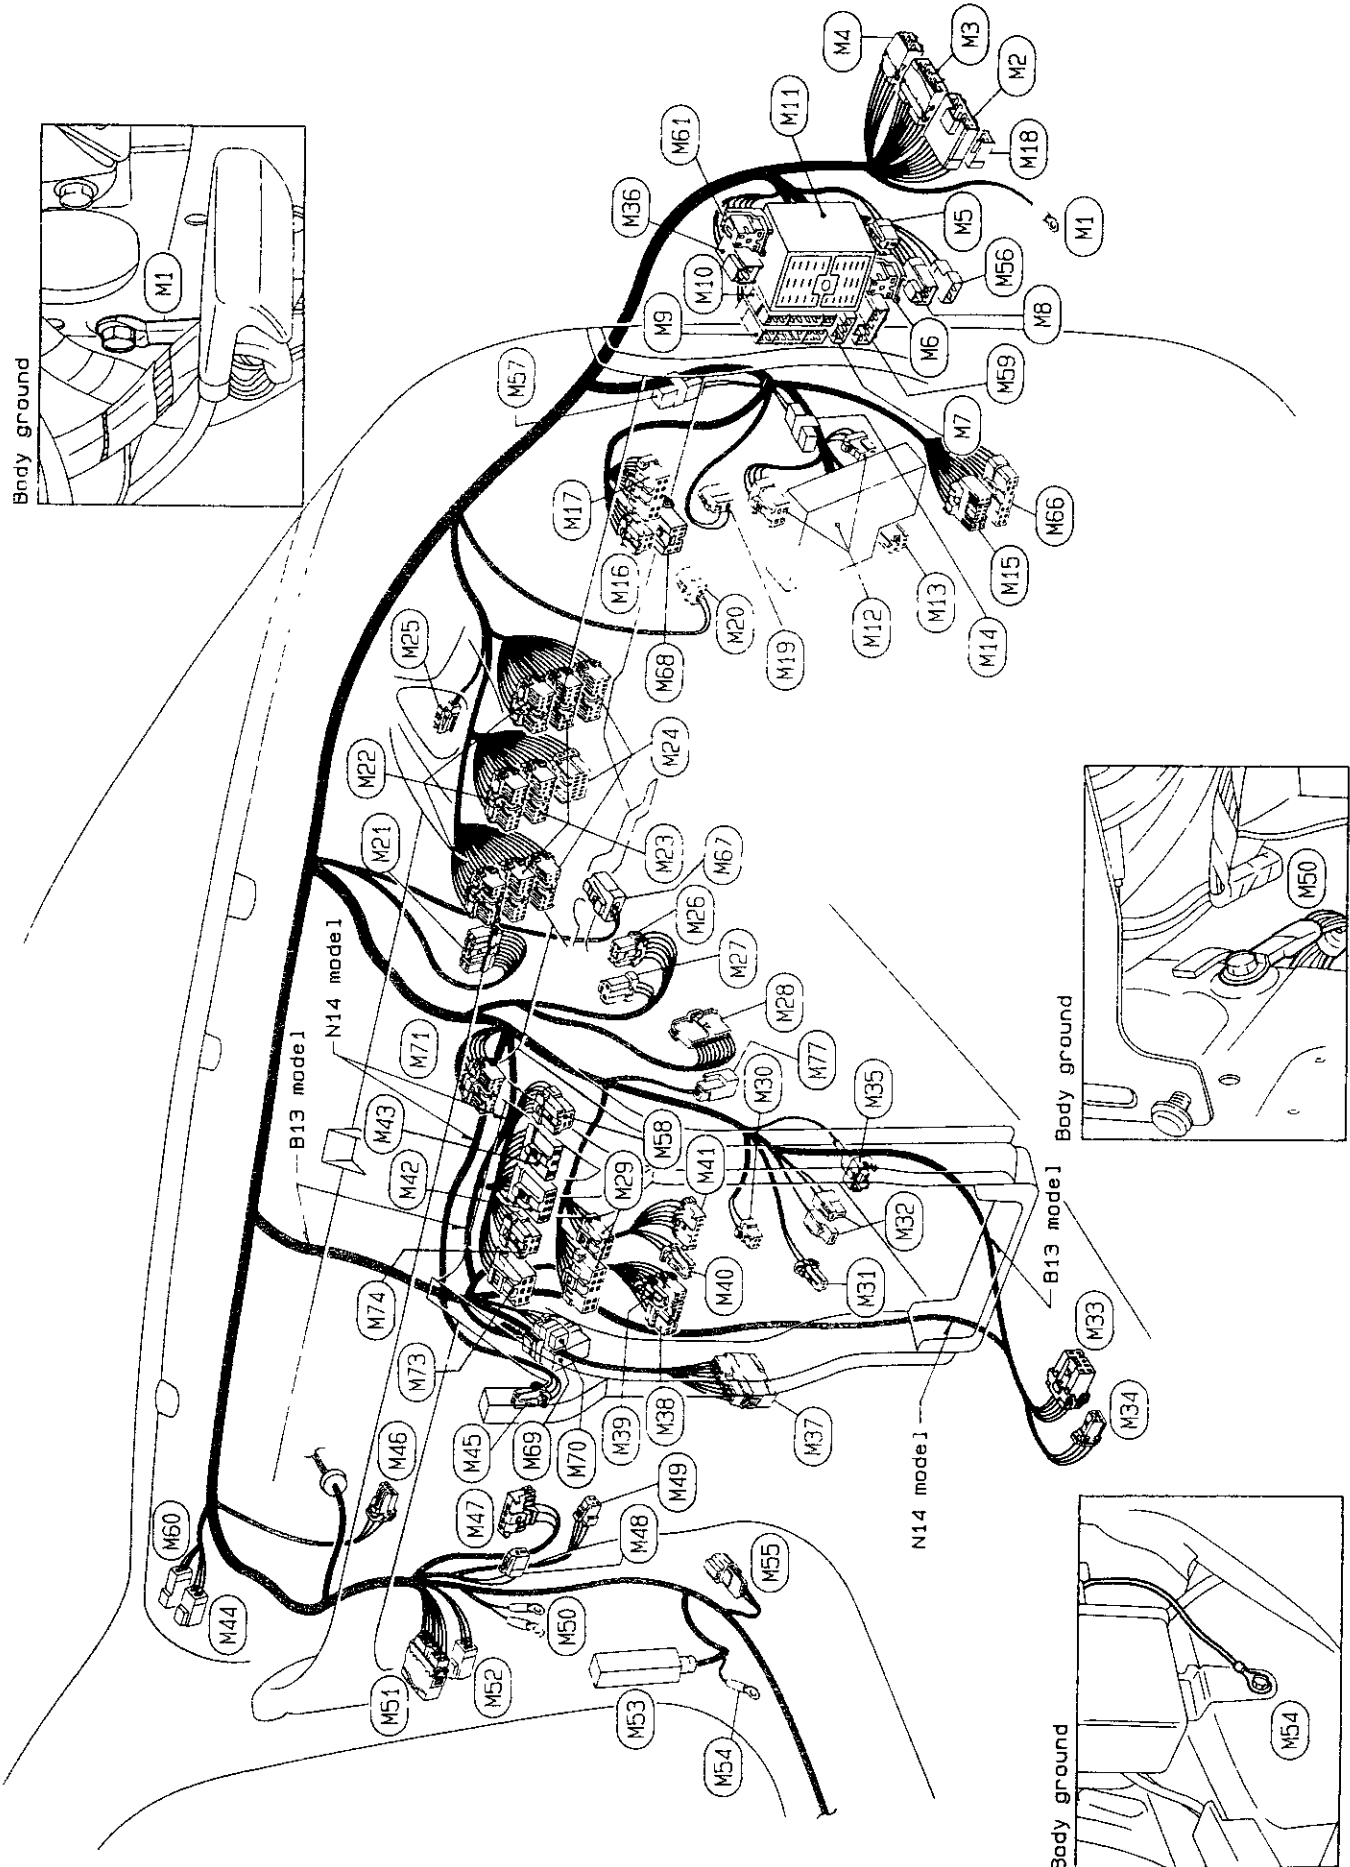

HARNESS LAYOUT

Main Harness (Cont'd)

(M1) : Body ground	(M36) : To (E123) (N14 model)
(M2) : To (D32) (B13 model)	(M37) : To (F33)
(M3) : To (D31)	(M38) : Push control unit (Push control type)
(M4) : To (D33) (N14 model)	(M39) : Fan switch illumination (Lever control type)
(M5) : Circuit breaker	(M40) : Air conditioner switch
(M6) : Rear wiper relay (Coupe)	(M41) : Fan switch
(M7) : To (B1) (B13 model)	(M42) : Hazard switch
(M8) : To (B2) (B13 Sedan model)	(M43) : Rear window defogger switch (B13 model)
(M9) : To (B3) (Blue)	(M44) : To room lamp harness (B13 model)
(M10) : To (B4) (White)	(M45) : Thermo control amplifier
(M11) : To (E104) (S.M.J.)	(M46) : Intake door motor (Push control type)
(M12) : Fuse block	(M47) : Fan resistor
(M13) : Sun roof relay	(M48) : Blower motor
(M14) : Diode (B13 model with power window for Sedan or with catalyzer and E.G.R.)	(M49) : A/C cut timer (N14 model with GA14DS engine except for Europe)
(M15) : Diagnostic connector for CONSULT (N14 model with E.C.C.S. engine)	(M50) : Body ground
(M16) : Front fog lamp switch	(M51) : To (D1)
(M17) : Door mirror switch	(M52) : To (D4)
(M18) : To (D34) (N14 model)	(M53) : A.B.S. control unit (For anti-lock braking system)
(M19) : Kickdown switch (N14 model with GA14DS engine except for Europe)	(M54) : Body ground (For anti-lock braking system)
(M20) : Stop lamp switch	(M55) : Joint connector (N14 model) (For anti-lock braking system)
(M21) : Shift lock control unit (Except for Europe)	(M56) : To (B2) (N14 model)
(M22) : Combination meter (Needle type without tachometer)	(M57) : Diode (N14 model with power window or with catalyzer and E.G.R.)
(M23) : Combination meter (Needle type with tachometer)	(M58) : Rear window defogger switch (N14 model)
(M24) : Combination meter (Digital type)	(M59) : To (B1) (N14 model)
(M25) : Buzzer	(M60) : To room lamp harness (N14 model)
(M26) : Rear wiper amplifier (Coupe and Hatchback)	(M61) : Door mirror defogger relay (N14 model for Europe)
(M27) : Combination flasher unit	(M62) : Check connector (N14 model with GA engine with catalyzer and E.G.R.)
(M28) : Mode door motor (Push control type)	(M67) : Clutch switch (GA14DS, 16DS engine M/T model with catalyzer)
(M29) : Radio	(M68) : Illumination control switch (For Europe)
(M30) : Cassette deck	(M69) : Diode (N14 model with GA engine with catalyzer and E.G.R.)
(M31) : Ashtray illumination	(M70) : Diode (B13 model with GA engine with catalyzer and E.G.R.)
(M32) : Cigarette lighter	(M71) : Combination meter (Sub) (N14 model with SR engine)
(M33) : Shift lock solenoid - Detent switch (Except for Europe)	(M73) : Rear fog lamp switch (B13 model for Europe)
(M34) : O.D. cancel switch - A/T illumination	(M74) : Rear fog lamp switch (N14 model for Europe)
(M35) : G sensor (4-wheel drive model) (For anti-lock braking system)	(M77) : To (F35) (N14 model with GA engine with catalyzer and E.G.R.)


HARNESS LAYOUT

Main Harness (Cont'd)

R.H.D. MODELS


Engine compartment

- (M81) : Side turn signal lamp L.H.
(Coupe)
- (M82) : To (E10)
- (M83) : Wiper motor
- (M84) : Front sensor L.H.
(For anti-lock braking system)
- (M85) : Actuator (For anti-lock braking system)
- (M86) : Actuator (For anti-lock braking system)
- (M87) : F.I.C.D. solenoid valve
(Without E.C.C.S. engine)
- (M88) : Vehicle speed sensor
(Digital meter)
- (M89) : Side turn signal lamp L.H.
(N14 model)
- (M90) : Vacuum switch (GA engine
with catalyzer without E.G.R.)

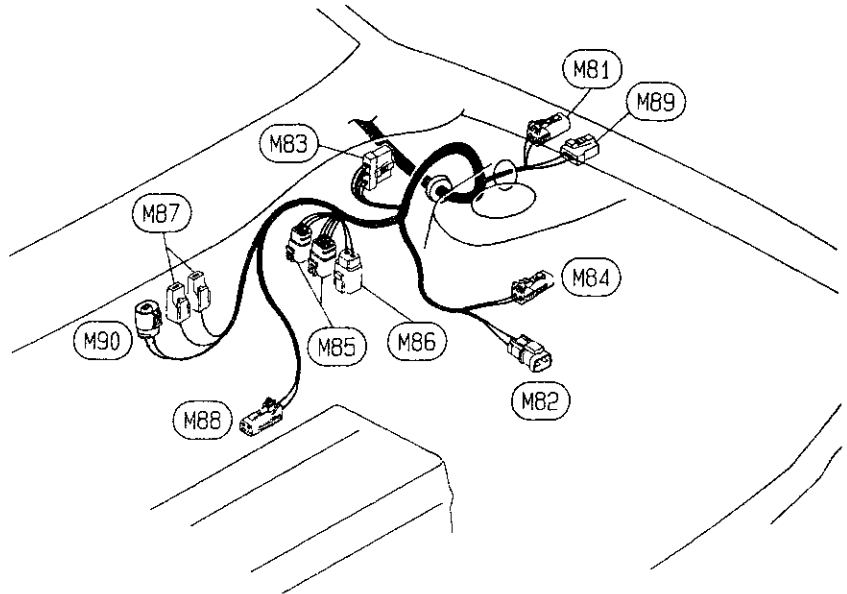

Rear sensor harness. (N14 model)

- (M201) : Rear sensor L.H.
- (M202) : Rear sensor R.H.
- (M203) : To (M103)
- (M204) : Joint connector
(4-wheel drive model)

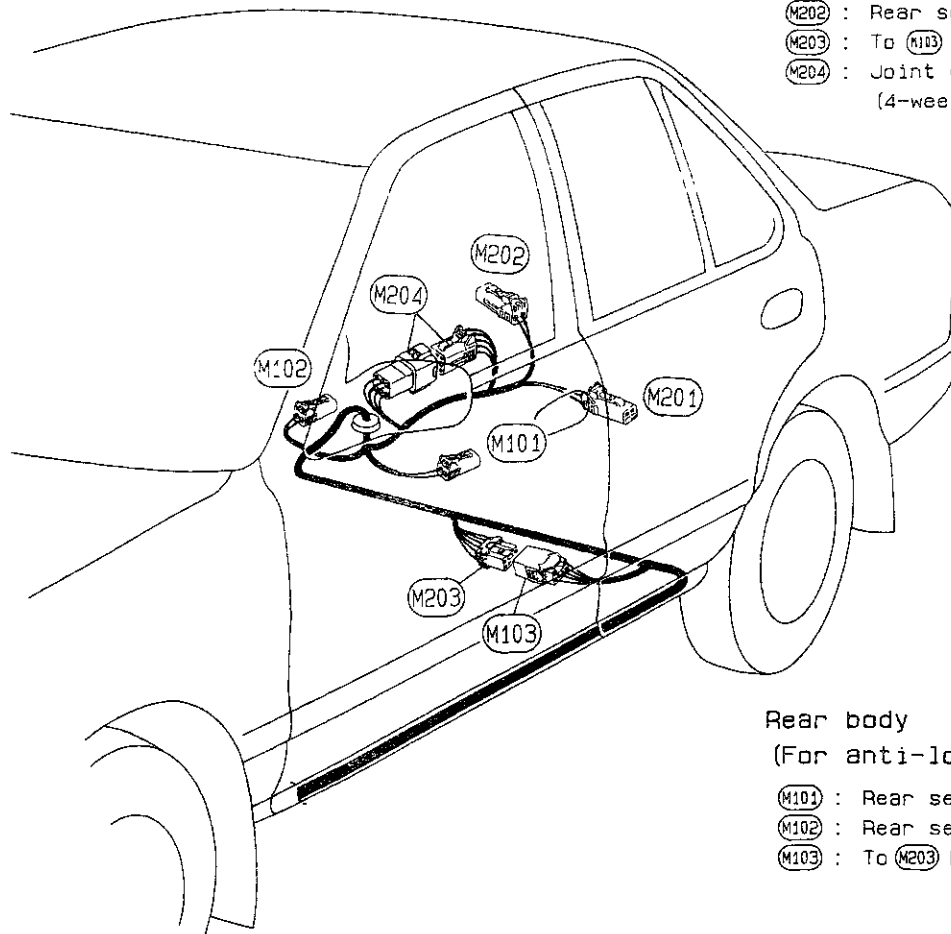

Rear body

(For anti-lock braking system)

- (M101) : Rear sensor L.H. (B13 model)
- (M102) : Rear sensor R.H. (B13 model)
- (M103) : To (M203) (N14 model)

SEL245Q


HARNESS LAYOUT

NOTE

HARNESS LAYOUT

Body Harness

SEDAN (L.H.D. models)

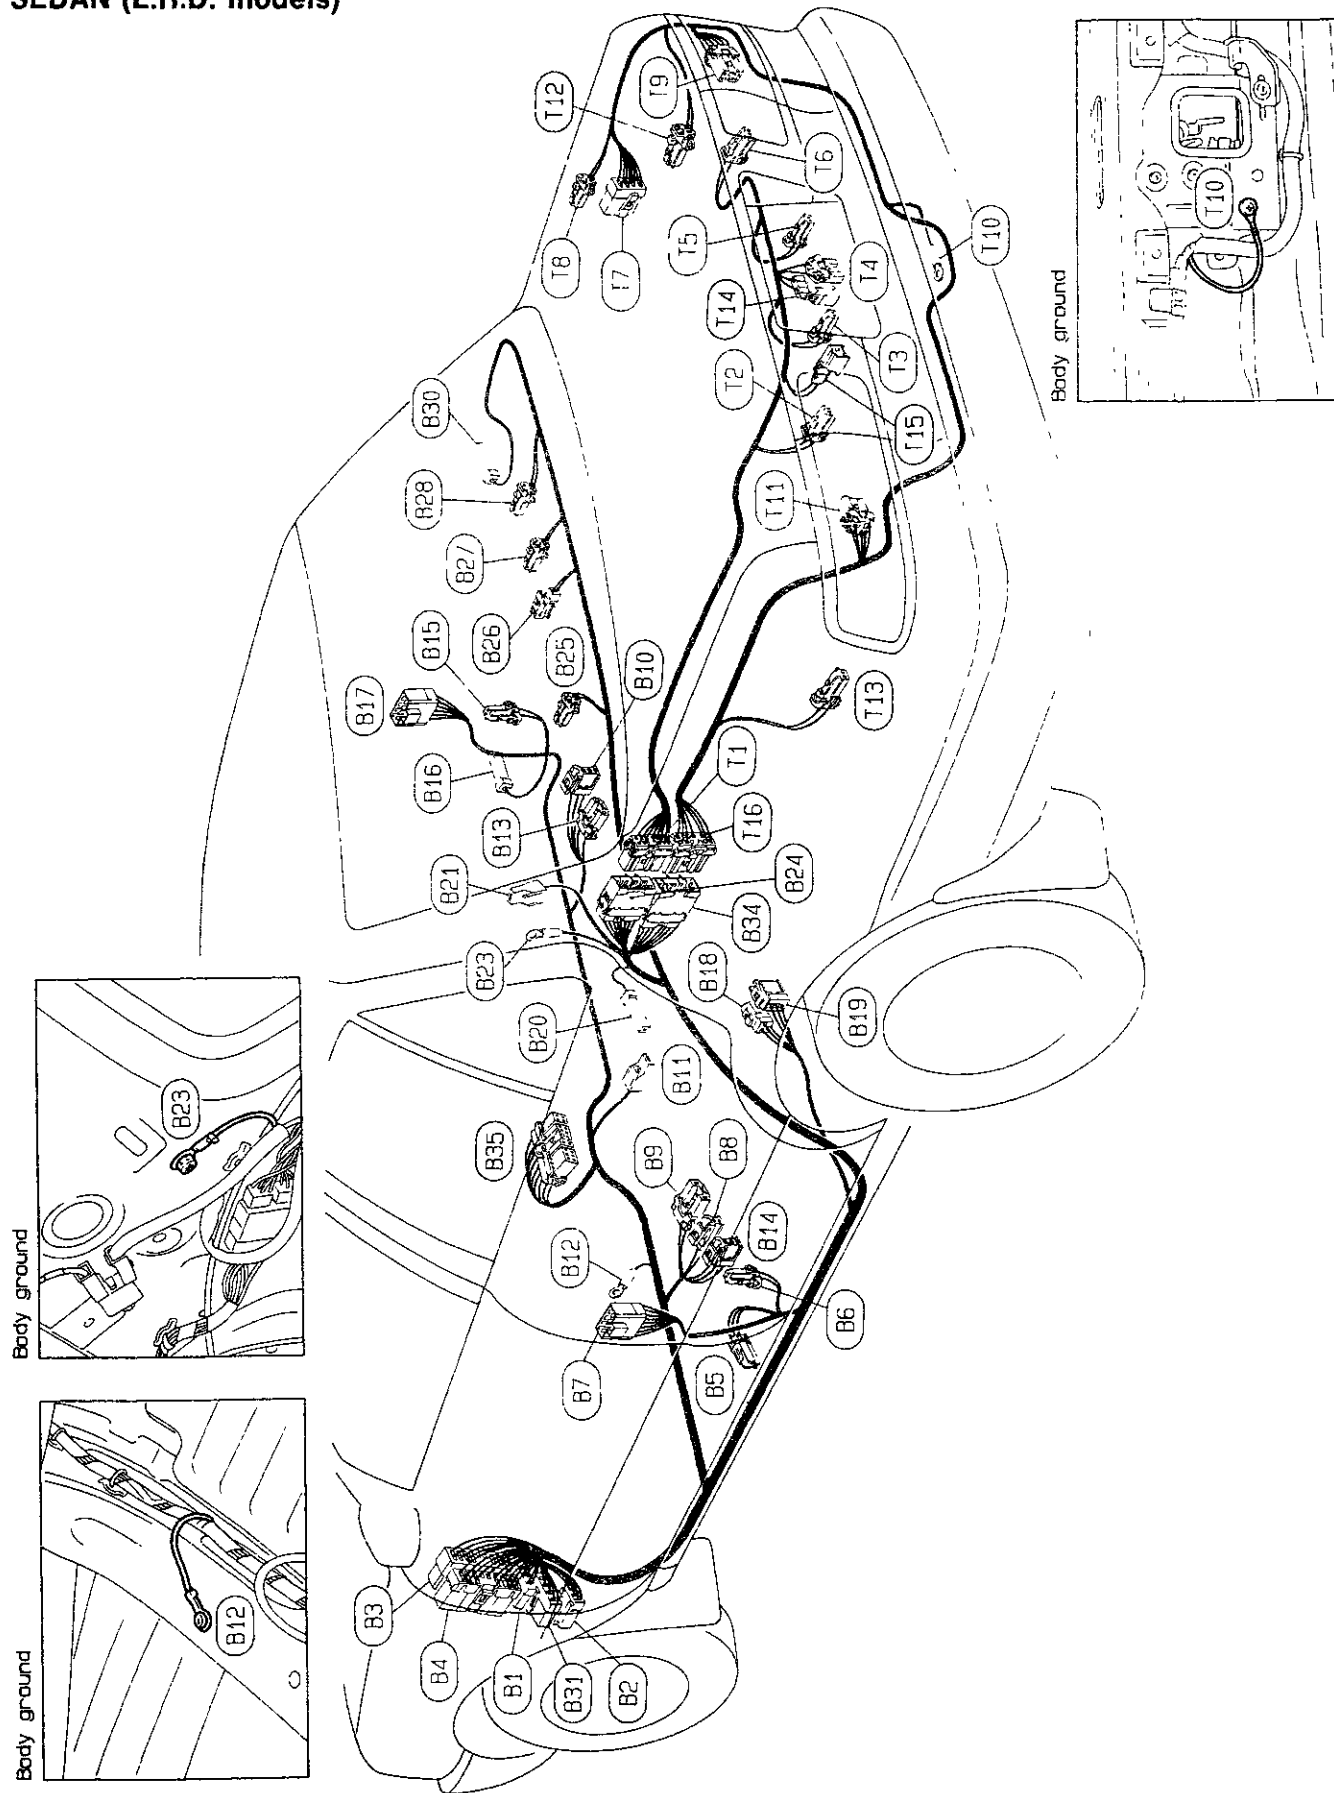

HARNESS LAYOUT

Body Harness (Cont'd)

Body harness

- (81) : To (87) (B13 model)
- (82) : To (819) (N14 model with headlamp aiming system)
- (83) : To (89) (Blue)
- (84) : To (810) (White)
- (85) : Front door switch driver's side
- (86) : Tension reducer L.H. (Except for Europe)
- (87) : To (851)
- (88) : Seat belt switch (For Middle East)
- (89) : Seat belt buckle switch L.H. (Except for Europe)
- (90) : Seat heater R.H. (For Europe)
- (91) : Parking brake switch
- (92) : Body ground
- (93) : Seat belt buckle switch R.H. (Except for Europe)
- (94) : Seat heater L.H. (For Europe)
- (95) : Tension reducer R.H. (Except for Europe)
- (96) : Front door switch passenger side

- (817) : To (871)
- (818) : To fuel pump sub-harness
- (819) : Fuel tank gauge unit
- (820) : Rear door switch L.H.
- (821) : Condenser
- (823) : Body ground
- (824) : To (811) (B13 model)
- (825) : Rear speaker L.H.
- (826) : Trunk room lamp
- (827) : High-mounted stop lamp (Except for Europe)
- (828) : Rear speaker R.H.
- (830) : Rear door switch R.H.
- (831) : To (854) (N14 model)
- (834) : To (816) (N14 model)
- (835) : To console harness (For Europe)
- (815) : License lamp R.H. (B13 model)
- (816) : Rear combination lamp R.H. (Trunk lid side)
- (817) : Power antenna timer
- (818) : Power antenna motor
- (819) : Rear combination lamp R.H.
- (810) : Body ground
- (811) : Rear combination lamp L.H.
- (812) : Rear side marker lamp L.H. (For Middle East)
- (813) : Rear side marker lamp R.H. (For Middle East)
- (814) : Trunk room lamp switch (N14 model)
- (815) : License lamp (N14 model)
- (816) : To (834) (N14 model)

Tail harness

- (811) : To (824) (B13 model)
- (812) : Rear combination lamp L.H. (Trunk lid side)
- (813) : License lamp L.H. (B13 model)
- (814) : Trunk room lamp switch (B13 model)

HARNESS LAYOUT

Body Harness (Cont'd)

SEDAN (R.H.D. models)



HARNESS LAYOUT

Body Harness (Cont'd)

Body harness

- (81) : To (W7) (B13 model)
- (82) : To (W8) (B13 model)
- (83) : To (W9) (Blue)
- (84) : To (W10) (White)
- (85) : Front door switch driver's side
- (86) : Tension reducer R.H. (Except for Europe)
- (87) : To (Q71)
- (88) : Not used
- (89) : Seat belt buckle switch R.H. (Except for Europe)
- (90) : Not used
- (91) : Parking brake switch
- (92) : Body ground
- (93) : Seat belt buckle switch L.H. (Except for Europe)
- (94) : Not used
- (95) : Tension reducer L.H. (Except for Europe)

- (816) : Front door switch passenger side

- (817) : To (Q61)
- (818) : To fuel pump sub-harness
- (819) : Fuel tank gauge unit
- (820) : Rear door switch R.H.
- (821) : Condenser
- (822) : Not used
- (823) : Body ground
- (824) : To (T1)
- (825) : Rear speaker R.H.
- (826) : Trunk room lamp
- (827) : High-mounted stop lamp (Except for Europe)
- (828) : Rear speaker L.H.
- (829) : Not used
- (830) : Rear door switch L.H.
- (832) : To (W56) (N14 model)
- (833) : To (W59) (N14 model)


Tail harness

- (T1) : To (Q24)
- (T2) : Rear combination lamp R.H. (Trunk lid side)
- (T3) : License lamp R.H. (B13 model)
- (T4) : Trunk room lamp switch (B13 model)
- (T5) : License lamp L.H. (B13 model)
- (T6) : Rear combination lamp L.H. (Trunk lid side)
- (T7) : Power antenna timer
- (T8) : Power antenna motor
- (T9) : Rear combination lamp R.H.
- (T10) : Body ground
- (T11) : Rear combination lamp L.H.
- (T14) : Trunk room lamp switch (N14 model)
- (T15) : License lamp (N14 model)

HARNESS LAYOUT

Body Harness (Cont'd)

COUPE (L.H.D. models)

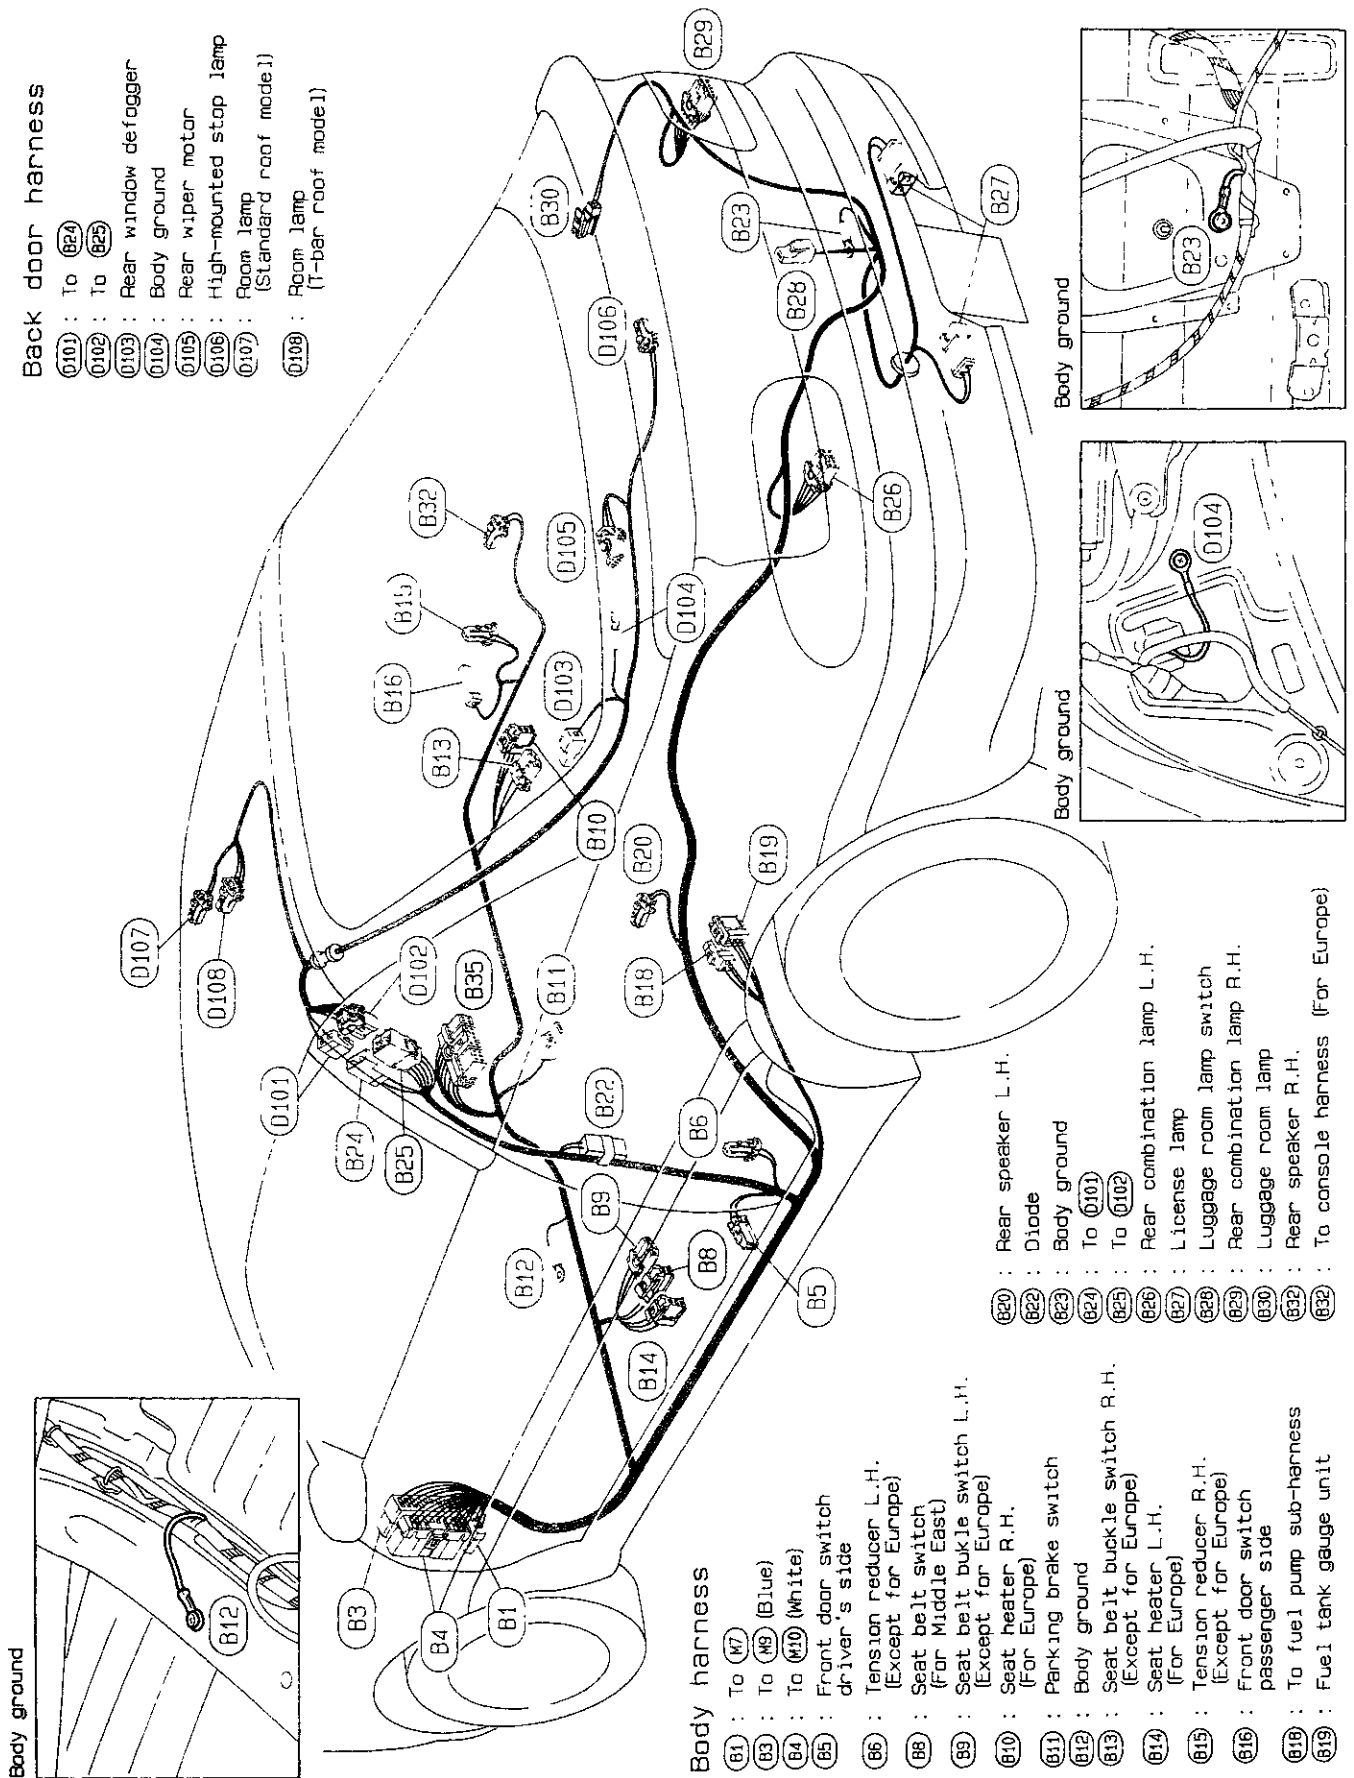

HARNESS LAYOUT



Body Harness (Cont'd)

COUPE (R.H.D. models)

Back door harness

- (B101) : To (B24)
- (B102) : To (B25)
- (B103) : Rear window defogger
- (B104) : Body ground
- (B105) : Rear wiper motor
- (B106) : High-mounted stop lamp
- (B107) : Room lamp (Standard roof mode)
- (B108) : Room lamp (T-bar roof mode)

Body ground

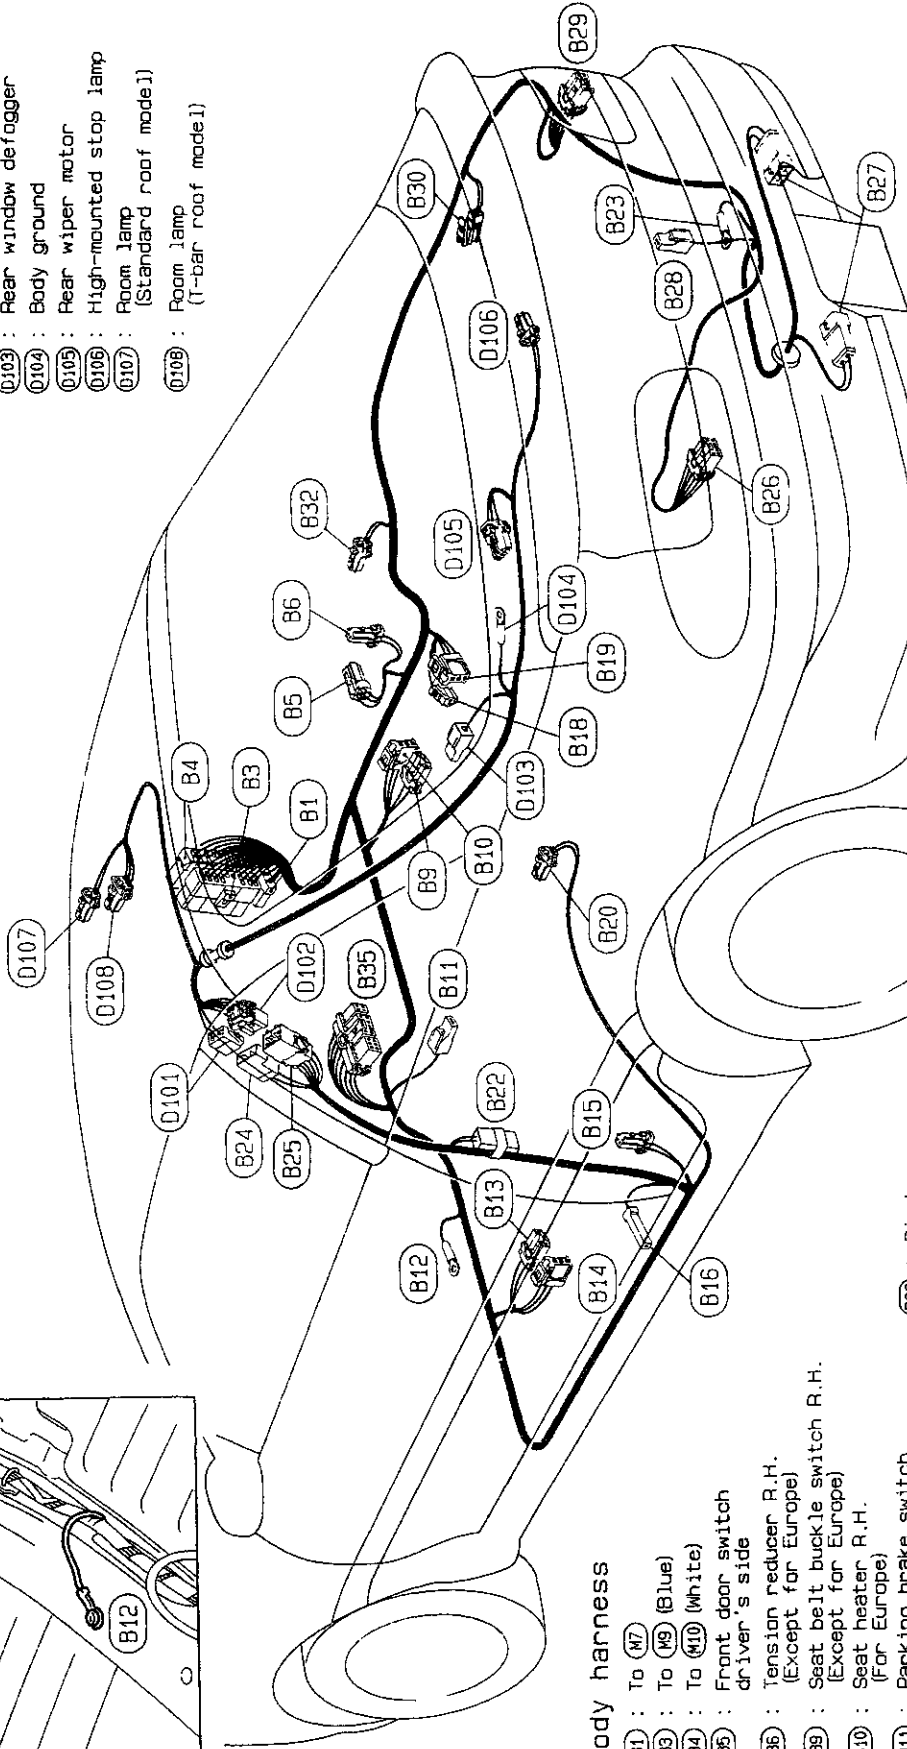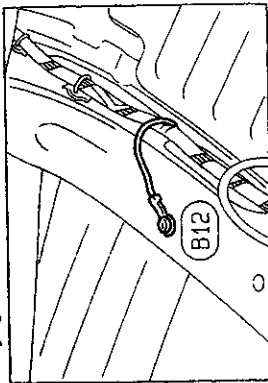


Body harness


- (B1) : To (M7)
- (B3) : To (M9) (Blue)
- (B4) : To (M10) (White)
- (B5) : Front door switch driver's side
- (B6) : Tension reducer R.H. (Except for Europe)
- (B9) : Seat belt buckle switch R.H.
- (B10) : Seat heater R.H. (Except for Europe)
- (B11) : Parking brake switch
- (B12) : Body ground
- (B13) : Seat belt buckle switch L.H. (Except for Europe)
- (B14) : Seat heater L.H. (For Europe)
- (B15) : Tension reducer L.H. (Except for Europe)
- (B16) : Front door switch passenger side
- (B18) : To fuel pump sub-harness
- (B19) : Fuel tank gauge unit
- (B20) : Rear speaker L.H.

- (B22) : Diode
- (B23) : Body ground
- (B24) : To (D101)
- (B25) : To (D102)
- (B26) : Rear combination lamp L.H.
- (B27) : License lamp
- (B28) : Luggage room lamp switch
- (B29) : Rear combination lamp R.H.
- (B30) : Luggage room lamp
- (B32) : Rear speaker L.H.
- (B35) : To console harness (For Europe)

Body ground

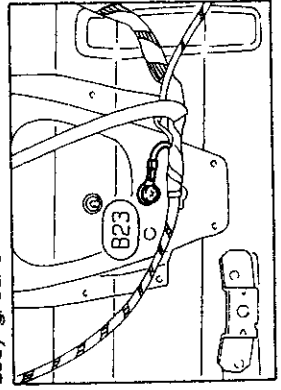


Body ground

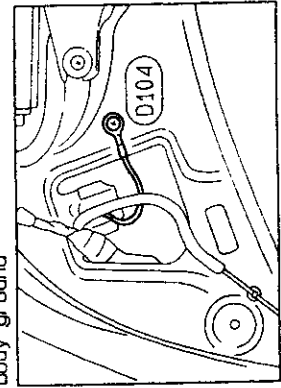

HARNESS LAYOUT

Body Harness (Cont'd)

3-DOOR HATCHBACK (L.H.D. models)

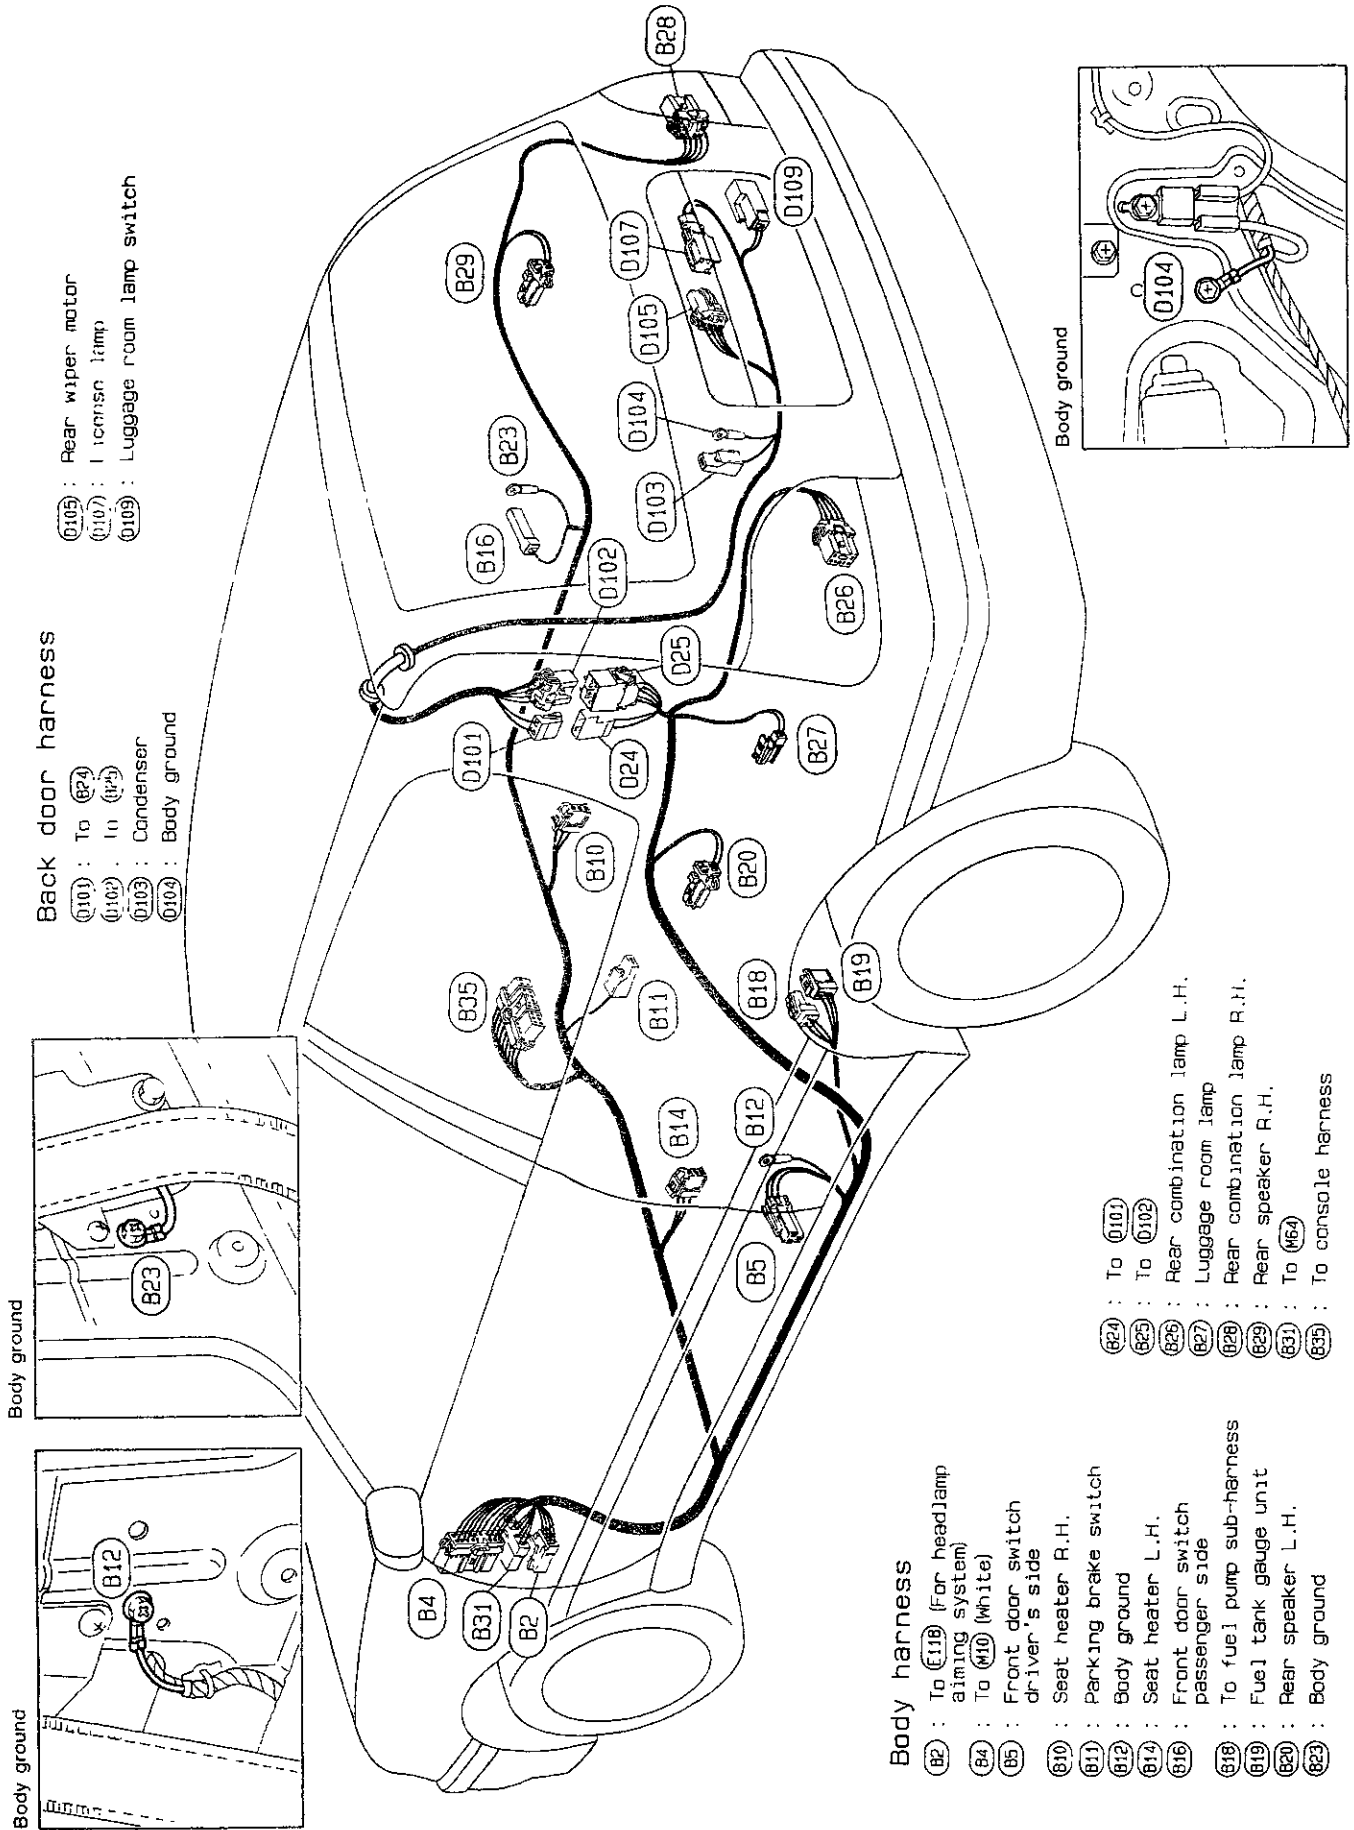

Body Harness (Cont'd)

Back door harness

- 0105 : Rear wiper motor
- 0107 : License lamp
- 0109 : Luggage room lamp switch
- 0101 : To 624
- 0102 : To 625
- 0103 : Condenser
- 0104 : Body ground


Body harness

- B4 : To W10 (White)
- B5 : Front door switch driver's side
- B11 : Parking brake switch
- B12 : Body ground
- B16 : Front door switch passenger side
- B18 : To fuel pump sub-harness
- B19 : Fuel tank gauge unit
- B20 : Rear speaker L.H.
- B23 : Body ground
- B24 : To 0101
- B25 : To 0102
- B26 : Rear combination lamp L.H.
- B27 : Luggage room lamp
- B29 : Rear combination lamp R.H.
- B32 : To W56
- B33 : To W59
- B34 : Body ground
- B35 : Front door switch driver's side
- B36 : Parking brake switch
- B37 : Body ground
- B38 : Front door switch passenger side
- B39 : To fuel pump sub-harness
- B40 : Fuel tank gauge unit
- B41 : Rear speaker L.H.
- B42 : Body ground
- B43 : Rear wiper motor
- B44 : License lamp
- B45 : Luggage room lamp switch
- B46 : To 0101
- B47 : To 0102
- B48 : Rear combination lamp L.H.
- B49 : Luggage room lamp
- B50 : Rear combination lamp R.H.
- B51 : To W56
- B52 : To W59
- B53 : Body ground
- B54 : Front door switch driver's side
- B55 : Parking brake switch
- B56 : Body ground
- B57 : Front door switch passenger side
- B58 : To fuel pump sub-harness
- B59 : Fuel tank gauge unit
- B60 : Rear speaker L.H.
- B61 : Body ground
- B62 : Rear wiper motor
- B63 : License lamp
- B64 : Luggage room lamp switch
- B65 : To 0101
- B66 : To 0102
- B67 : Rear combination lamp L.H.
- B68 : Luggage room lamp
- B69 : Rear combination lamp R.H.
- B70 : To W56
- B71 : To W59
- B72 : Body ground
- B73 : Front door switch driver's side
- B74 : Parking brake switch
- B75 : Body ground
- B76 : Front door switch passenger side
- B77 : To fuel pump sub-harness
- B78 : Fuel tank gauge unit
- B79 : Rear speaker L.H.
- B80 : Body ground
- B81 : Rear wiper motor
- B82 : License lamp
- B83 : Luggage room lamp switch
- B84 : To 0101
- B85 : To 0102
- B86 : Rear combination lamp L.H.
- B87 : Luggage room lamp
- B88 : Rear combination lamp R.H.
- B89 : To W56
- B90 : To W59
- B91 : Body ground
- B92 : Front door switch driver's side
- B93 : Parking brake switch
- B94 : Body ground
- B95 : Front door switch passenger side
- B96 : To fuel pump sub-harness
- B97 : Fuel tank gauge unit
- B98 : Rear speaker L.H.
- B99 : Body ground
- B100 : Rear wiper motor
- B101 : License lamp
- B102 : Luggage room lamp switch
- B103 : To 0101
- B104 : To 0102
- B105 : Rear combination lamp L.H.
- B106 : Luggage room lamp
- B107 : Rear combination lamp R.H.
- B108 : To W56
- B109 : To W59
- B110 : Body ground
- B111 : Front door switch driver's side
- B112 : Parking brake switch
- B113 : Body ground
- B114 : Front door switch passenger side
- B115 : To fuel pump sub-harness
- B116 : Fuel tank gauge unit
- B117 : Rear speaker L.H.
- B118 : Body ground
- B119 : Rear wiper motor
- B120 : License lamp
- B121 : Luggage room lamp switch
- B122 : To 0101
- B123 : To 0102
- B124 : Rear combination lamp L.H.
- B125 : Luggage room lamp
- B126 : Rear combination lamp R.H.
- B127 : To W56
- B128 : To W59
- B129 : Body ground
- B130 : Front door switch driver's side
- B131 : Parking brake switch
- B132 : Body ground
- B133 : Front door switch passenger side
- B134 : To fuel pump sub-harness
- B135 : Fuel tank gauge unit
- B136 : Rear speaker L.H.
- B137 : Body ground
- B138 : Rear wiper motor
- B139 : License lamp
- B140 : Luggage room lamp switch
- B141 : To 0101
- B142 : To 0102
- B143 : Rear combination lamp L.H.
- B144 : Luggage room lamp
- B145 : Rear combination lamp R.H.
- B146 : To W56
- B147 : To W59
- B148 : Body ground
- B149 : Front door switch driver's side
- B150 : Parking brake switch
- B151 : Body ground
- B152 : Front door switch passenger side
- B153 : To fuel pump sub-harness
- B154 : Fuel tank gauge unit
- B155 : Rear speaker L.H.
- B156 : Body ground
- B157 : Rear wiper motor
- B158 : License lamp
- B159 : Luggage room lamp switch
- B160 : To 0101
- B161 : To 0102
- B162 : Rear combination lamp L.H.
- B163 : Luggage room lamp
- B164 : Rear combination lamp R.H.
- B165 : To W56
- B166 : To W59
- B167 : Body ground
- B168 : Front door switch driver's side
- B169 : Parking brake switch
- B170 : Body ground
- B171 : Front door switch passenger side
- B172 : To fuel pump sub-harness
- B173 : Fuel tank gauge unit
- B174 : Rear speaker L.H.
- B175 : Body ground
- B176 : Rear wiper motor
- B177 : License lamp
- B178 : Luggage room lamp switch
- B179 : To 0101
- B180 : To 0102
- B181 : Rear combination lamp L.H.
- B182 : Luggage room lamp
- B183 : Rear combination lamp R.H.
- B184 : To W56
- B185 : To W59
- B186 : Body ground
- B187 : Front door switch driver's side
- B188 : Parking brake switch
- B189 : Body ground
- B190 : Front door switch passenger side
- B191 : To fuel pump sub-harness
- B192 : Fuel tank gauge unit
- B193 : Rear speaker L.H.
- B194 : Body ground
- B195 : Rear wiper motor
- B196 : License lamp
- B197 : Luggage room lamp switch
- B198 : To 0101
- B199 : To 0102
- B200 : Rear combination lamp L.H.

HARNESS LAYOUT

Body Harness (Cont'd)

5-DOOR HATCHBACK (L.H.D. models)

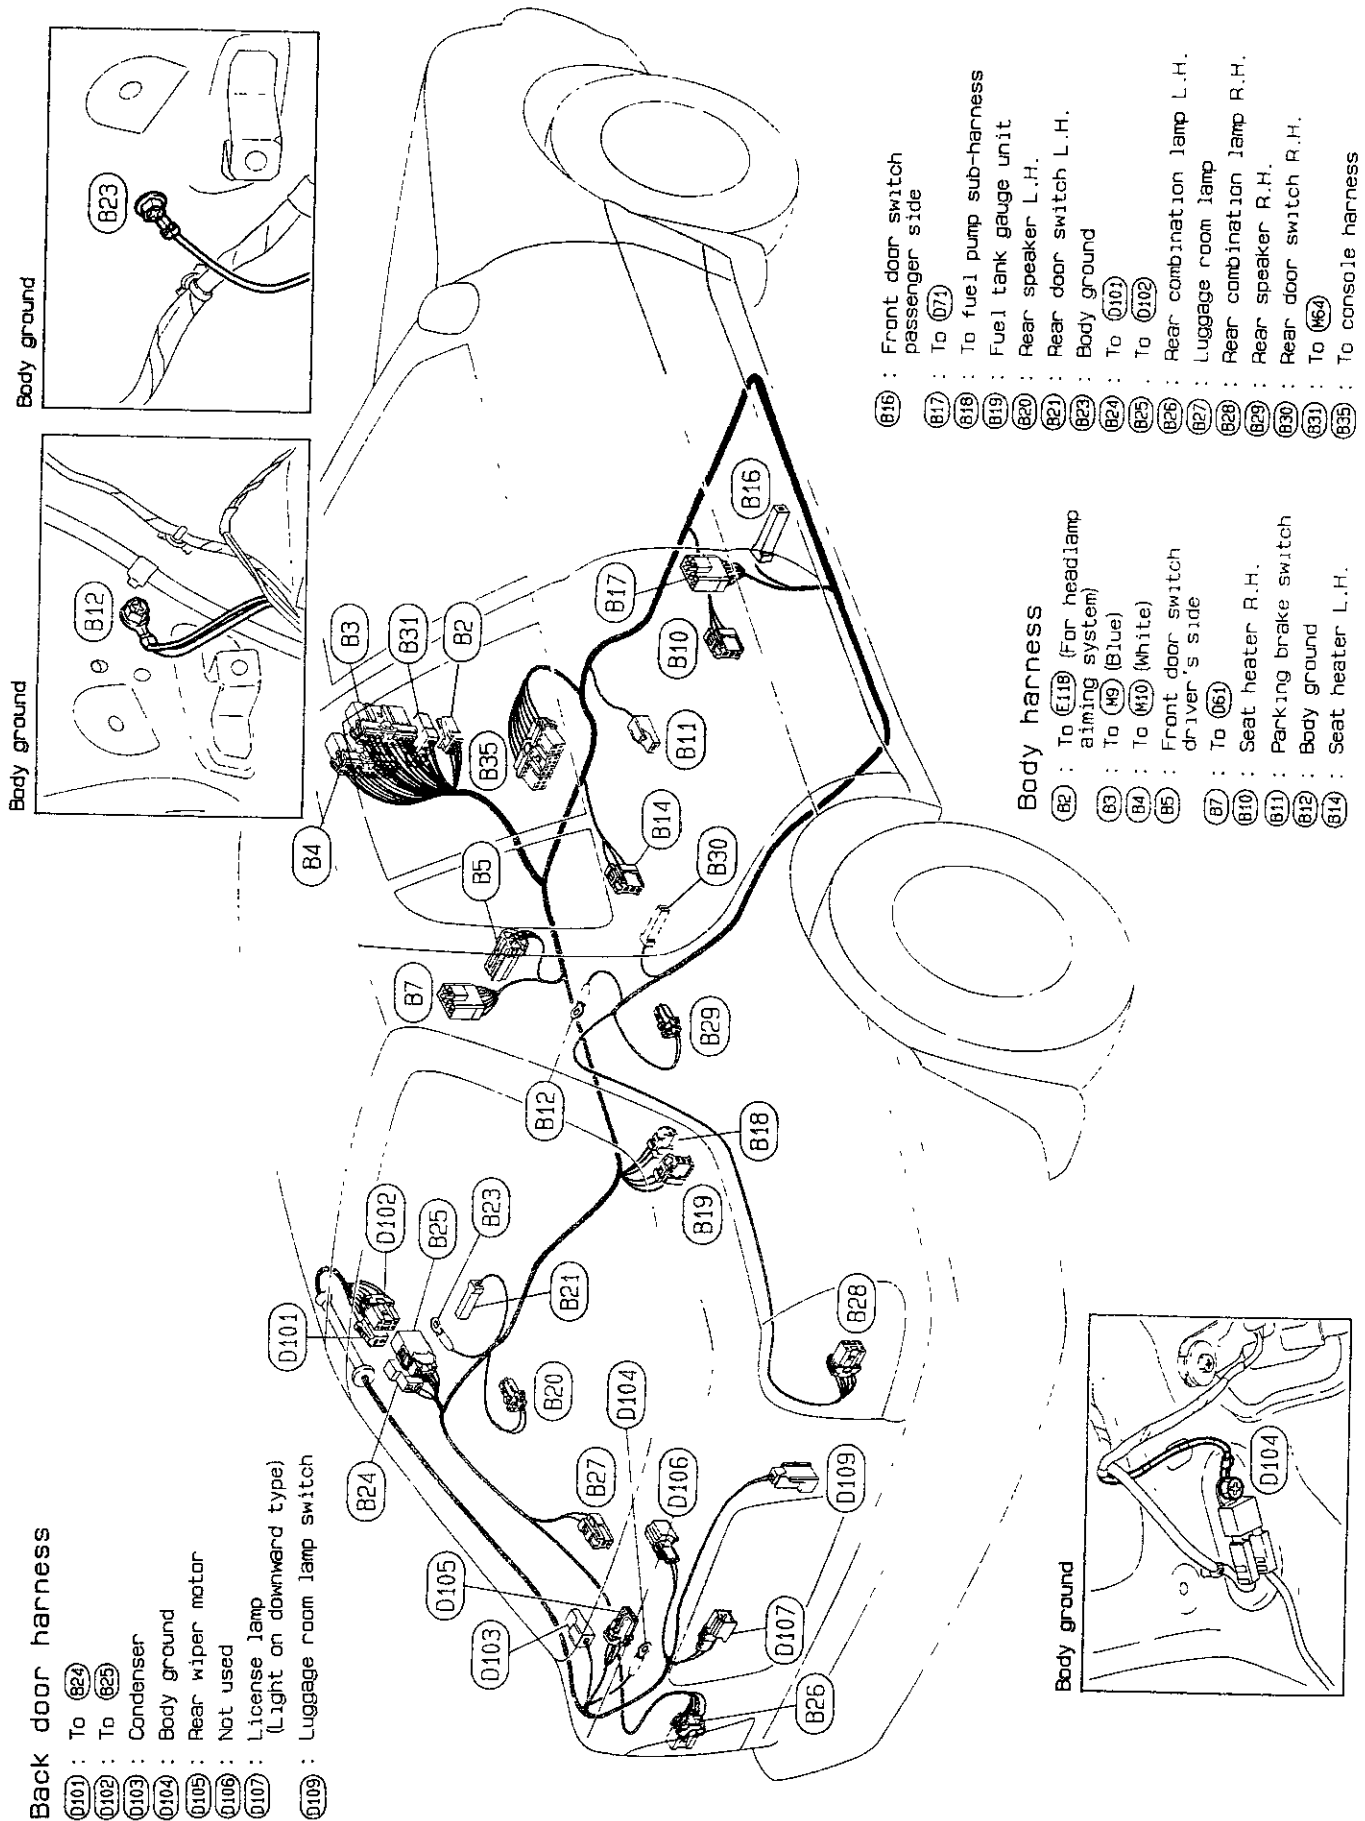

HARNESS LAYOUT

Body Harness (Cont'd)




5-DOOR HATCHBACK (R.H.D. models)

Back door harness

- 0101 : To 024
- 0102 : To 025
- 0103 : Condenser
- 0104 : Body ground
- 0105 : Rear wiper motor
- 0106 : Not used
- 0107 : License lamp (Light on downward type)
- 0108 : To license lamp harness (Light on sideward type)
- 0109 : Luggage room lamp switch

Body ground


Body ground

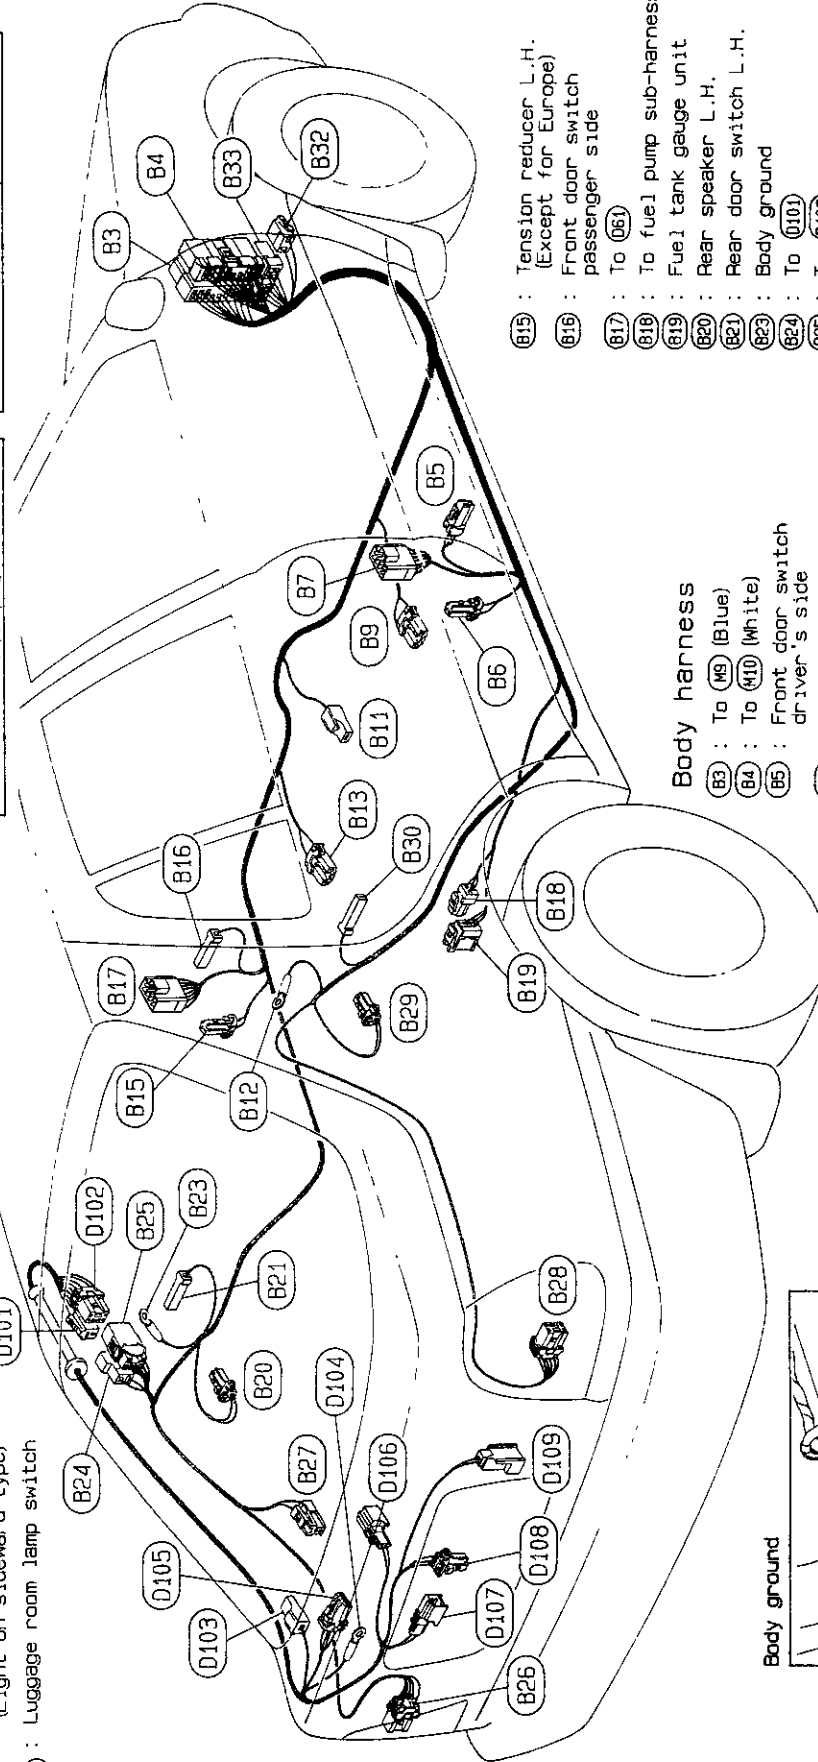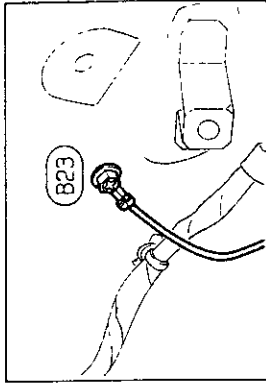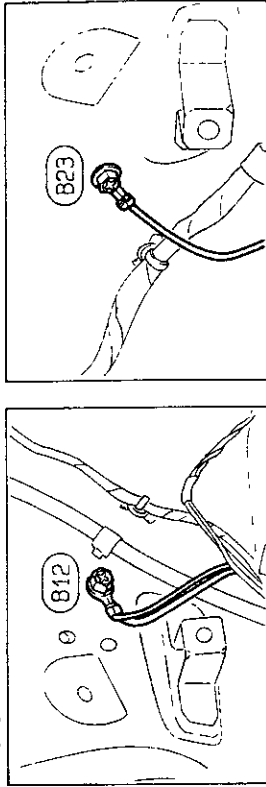

Body harness

- 03 : To 09 (Blue)
- 04 : To 010 (White)
- 05 : Front door switch driver's side
- 06 : Tension reducer R.H. (Except for Europe)
- 07 : To 071
- 08 : Seat belt buckle switch R.H. (Except for Europe)
- 09 : Parking brake switch
- 10 : Body ground
- 11 : Seat belt buckle switch L.H. (Except for Europe)

Body ground

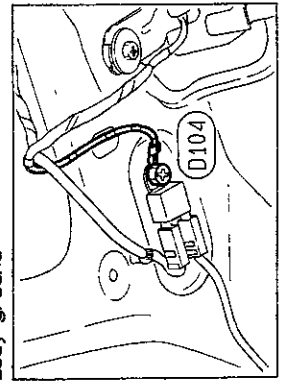

- 115 : Tension reducer L.H. (Except for Europe)
- 116 : Front door switch passenger side
- 117 : To 061
- 118 : To fuel pump sub-harness
- 119 : Fuel tank gauge unit
- 120 : Rear speaker L.H.
- 121 : Rear door switch L.H.
- 122 : Body ground
- 123 : To 0101
- 124 : To 0102
- 125 : To 0102
- 126 : Rear combination lamp L.H.
- 127 : Luggage room lamp
- 128 : Rear combination lamp R.H.
- 129 : Rear speaker R.H.
- 130 : Rear door switch R.H.
- 131 : To 056
- 132 : To 056

HARNESS LAYOUT


E.F.I. Harness

SR20DET

- (F1) : wastegate valve control solenoid valve
- (F2) : Crank angle sensor
- (F3) : Ignition coil
- (F4) : Resistor and condenser
- (F6) : Air flow meter
- (F7) : To (E222)
- (F8) : To throttle sensor sub-harness
- (F9) : Engine ground
- (F10) : To (E15) (R.H.D. model)
- (F12) : Power transistor
- (F13) : Power steering oil pressure switch (L.H.D. model)
- (F14) : Dropping resistor
- (F15) : Injector No.4
- (F16) : Injector No.3
- (F17) : Injector No.2
- (F18) : Injector No.1
- (F24) : Joint connector

Resistor (F4)

Ignition coil ——— E.C.C.S. control unit

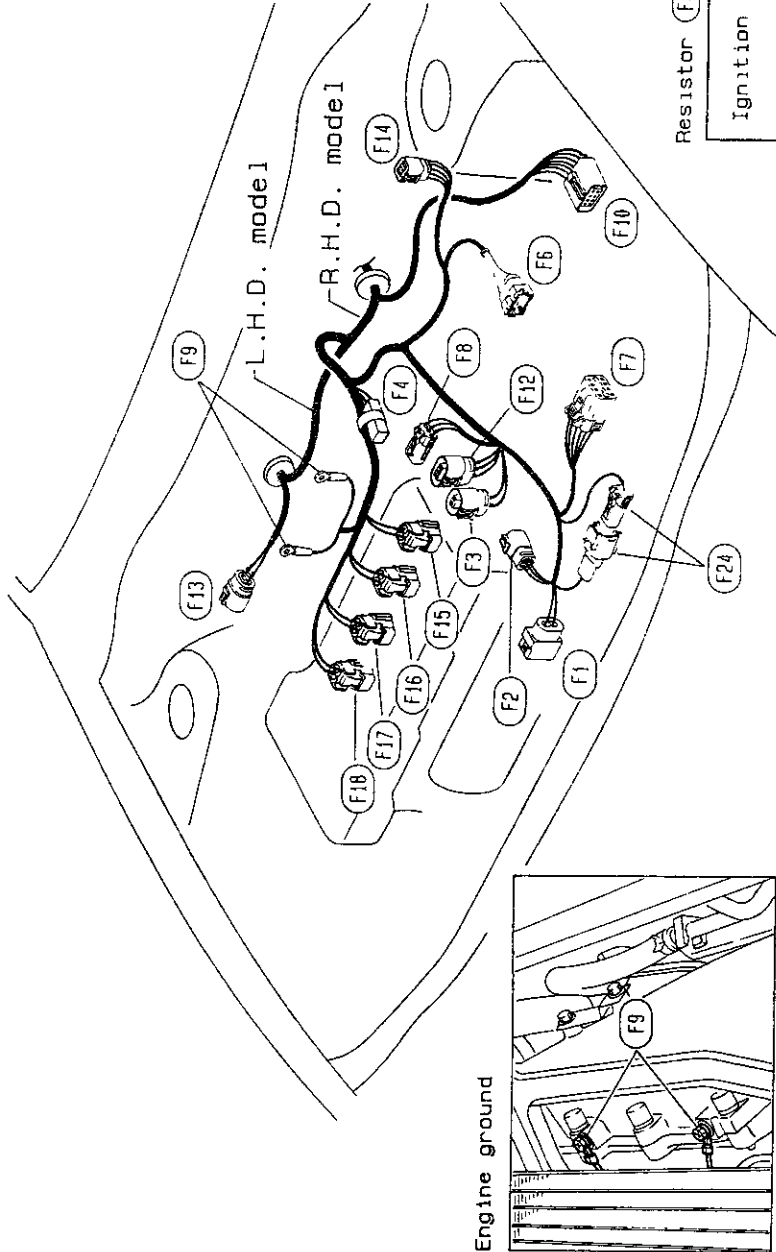

Engine ground


Passenger compartment

R.H.D. model

L.H.D. model

Passenger compartment

(F31) : E.C.C.S. control unit
 (F32) : E.C.C.S. relay
 (F33) : To (437)
 (F34) : To (436) (L.H.D. model)

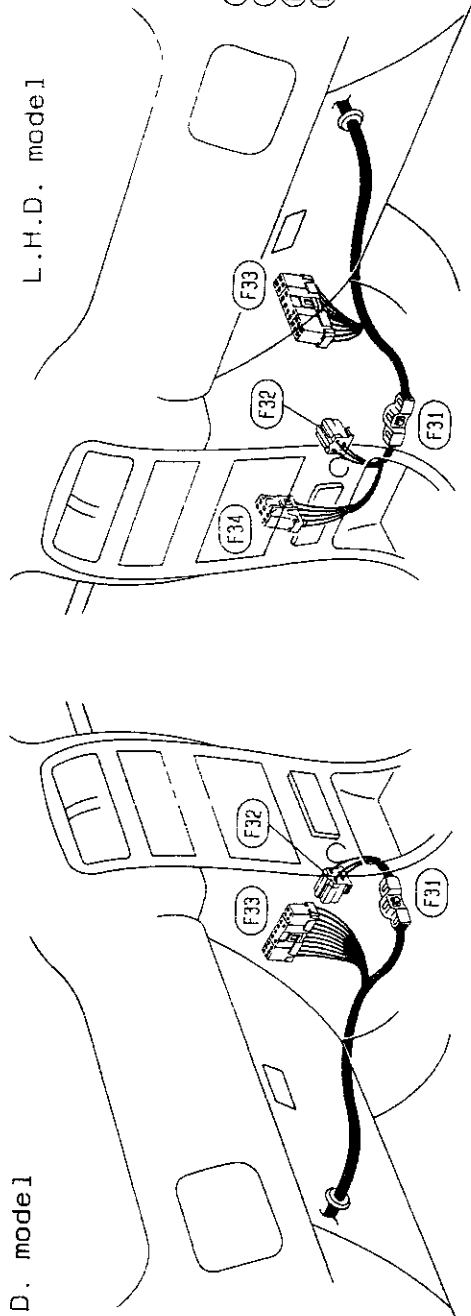


HARNESS LAYOUT


E.F.I. Harness (Cont'd)

SR20DE


- (F2) : Crank angle sensor
- (F3) : Ignition coil
- (F4) : Resistor and condenser
- (F5) : To (E23) (R.H.D. model with catalyzer and N14 L.H.D. model)
- (F6) : Air flow meter
- (F7) : To (E22) (L.H.D. model)
- (F8) : Throttle sensor
- (F9) : Engine ground
- (F10) : To (E15) (R.H.D. model)
- (F11) : To (E215) (R.H.D. model without catalyzer)
- (F12) : Power transistor
- (F13) : Power steering oil pressure switch (L.H.D. model)
- (F19) : Injector No.4
- (F20) : Injector No.3
- (F21) : Injector No.2
- (F22) : Injector No.1
- (F23) : To (E209) (B13 L.H.D. model)
- (F25) : To (E234) (R.H.D. model with catalyzer)

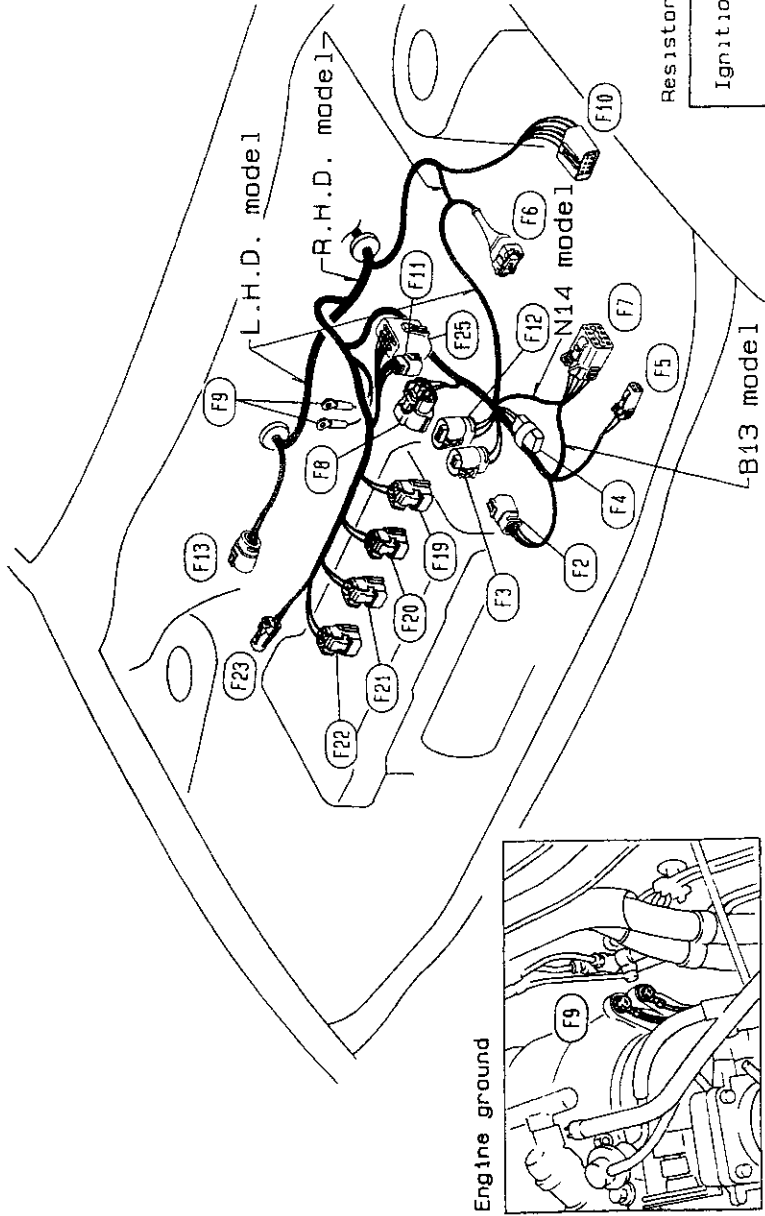

Passenger compartment
R.H.D. model

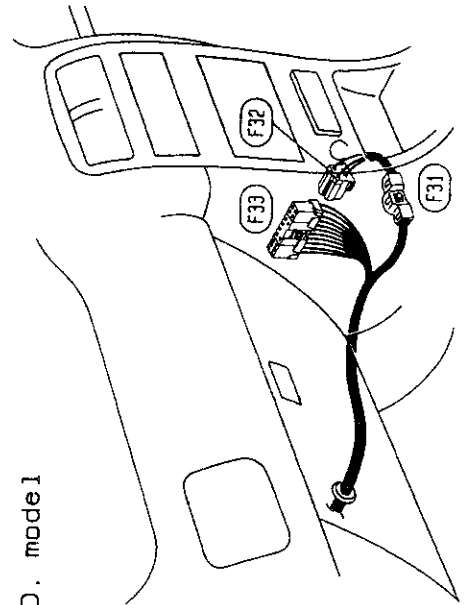

L.H.D. model

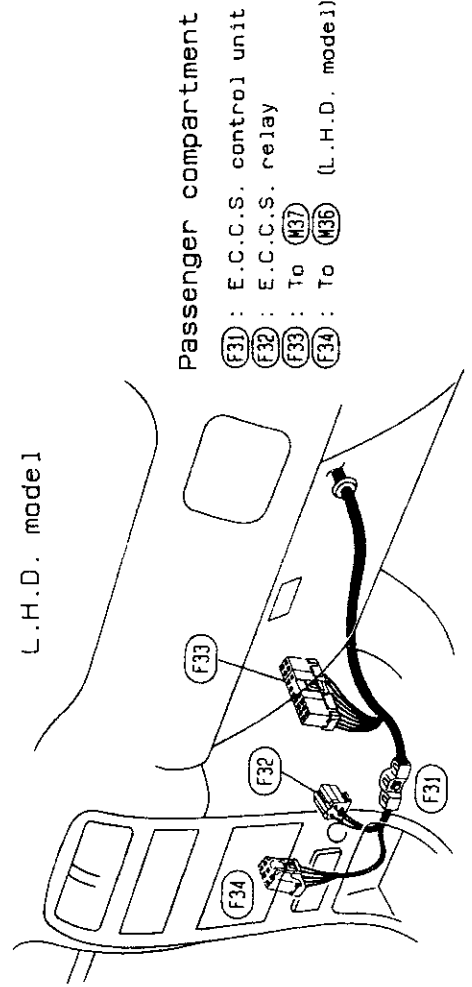


HARNESS LAYOUT

E.F.I. Harness (Cont'd)

GA16DE

- (F1) : Crank angle sensor
- (F2) : Ignition coil
- (F3) : Resistor and condenser
- (F4) : Air flow meter
- (F5) : Power transistor
- (F6) : To (E15) (R.H.D. model)
- (F7) : Throttle sensor
- (F8) : Power steering oil pressure switch (L.H.D. model)
- (F9) : Air regulator
- (F10) : Engine ground
- (F11) : A.A.C. valve
- (F12) : F.I.C.D. solenoid valve
- (F13) : Engine temperature sensor
- (F14) : Thermoswitch (L.H.D. model)
- (F15) : Injector No.1
- (F16) : Injector No.2
- (F17) : Injector No.3
- (F18) : Injector No.4

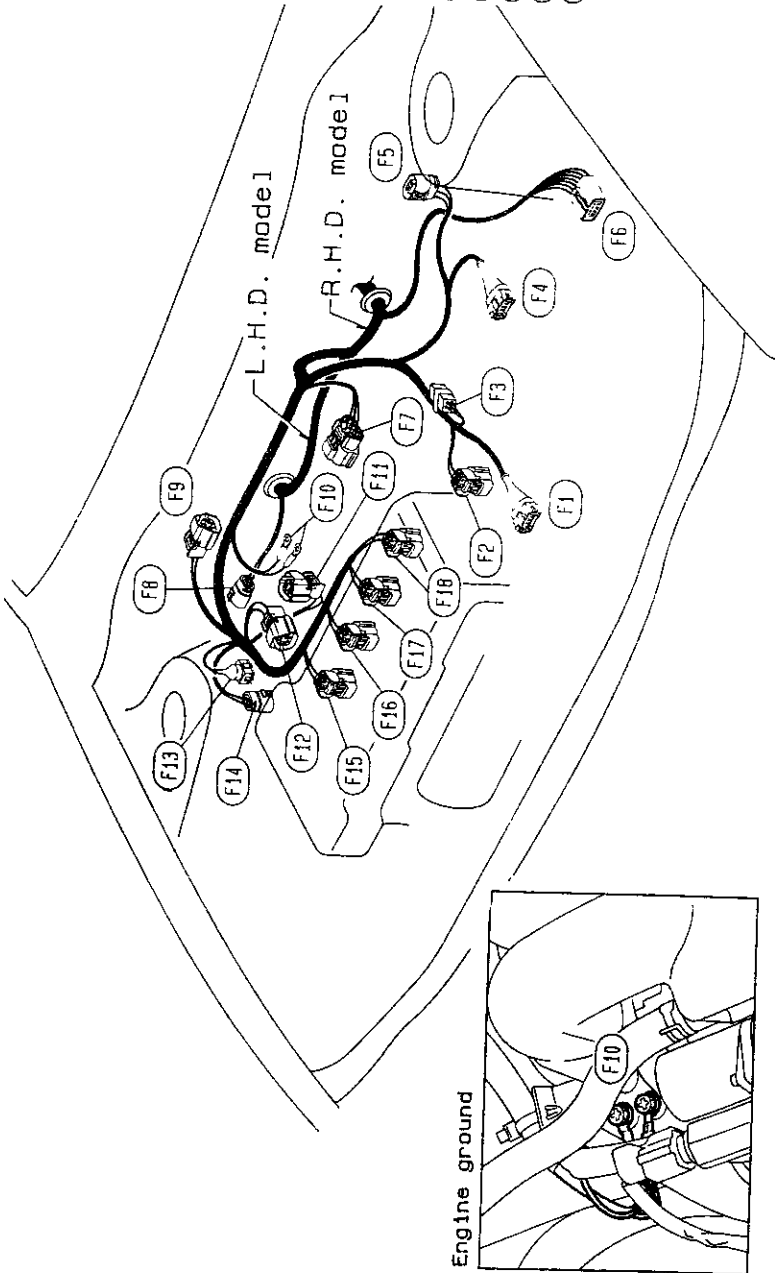

Passenger compartment

R.H.D. model




- Passenger compartment
- (F31) : E.C.C.S. control unit
- (F32) : E.C.C.S. relay
- (F33) : To (E37)
- (F34) : To (E36) (L.H.D. model)

HARNESS LAYOUT



E.F.I. Harness (Cont'd)

GA14 AND GA16DS WITH CATALYZER AND E.G.R.

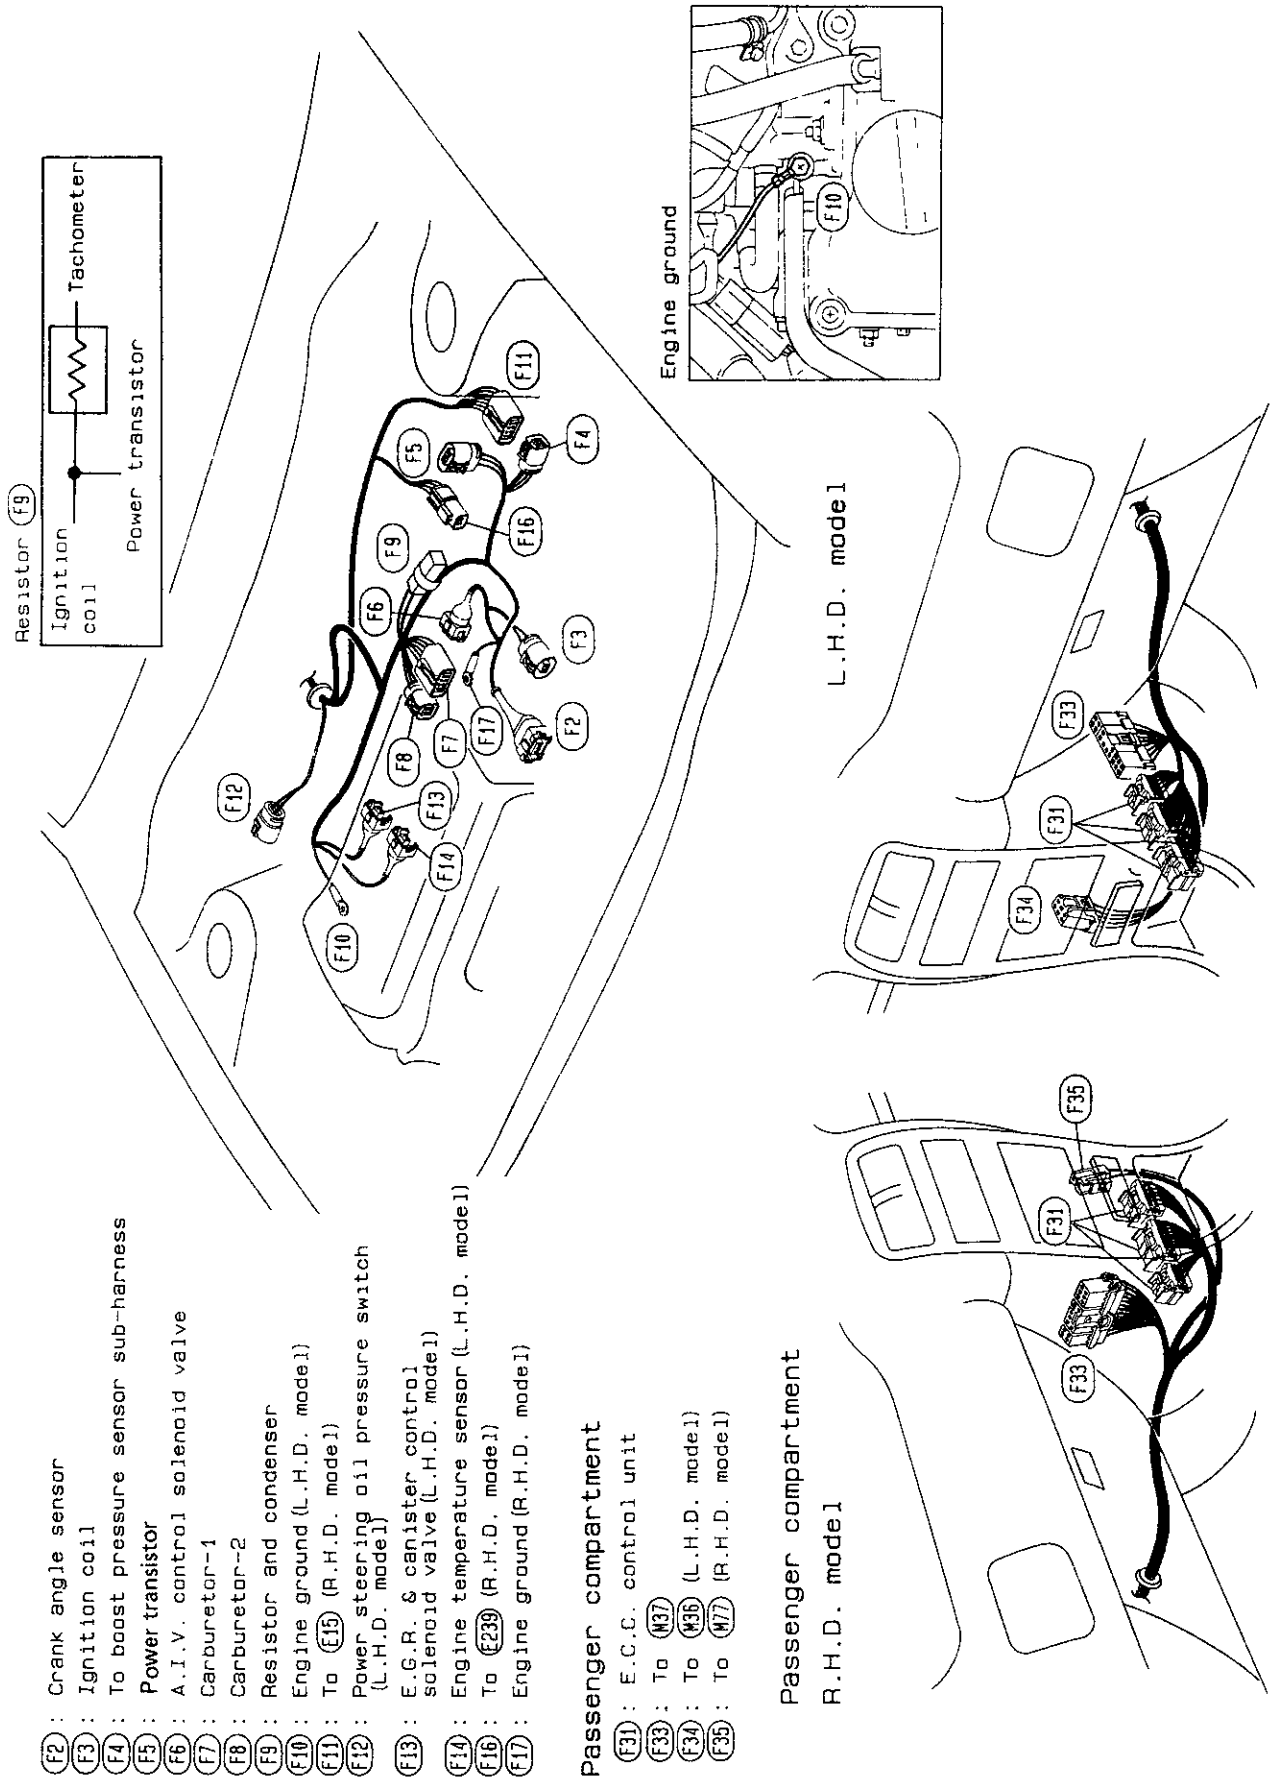

Engine Harness


SR ENGINE

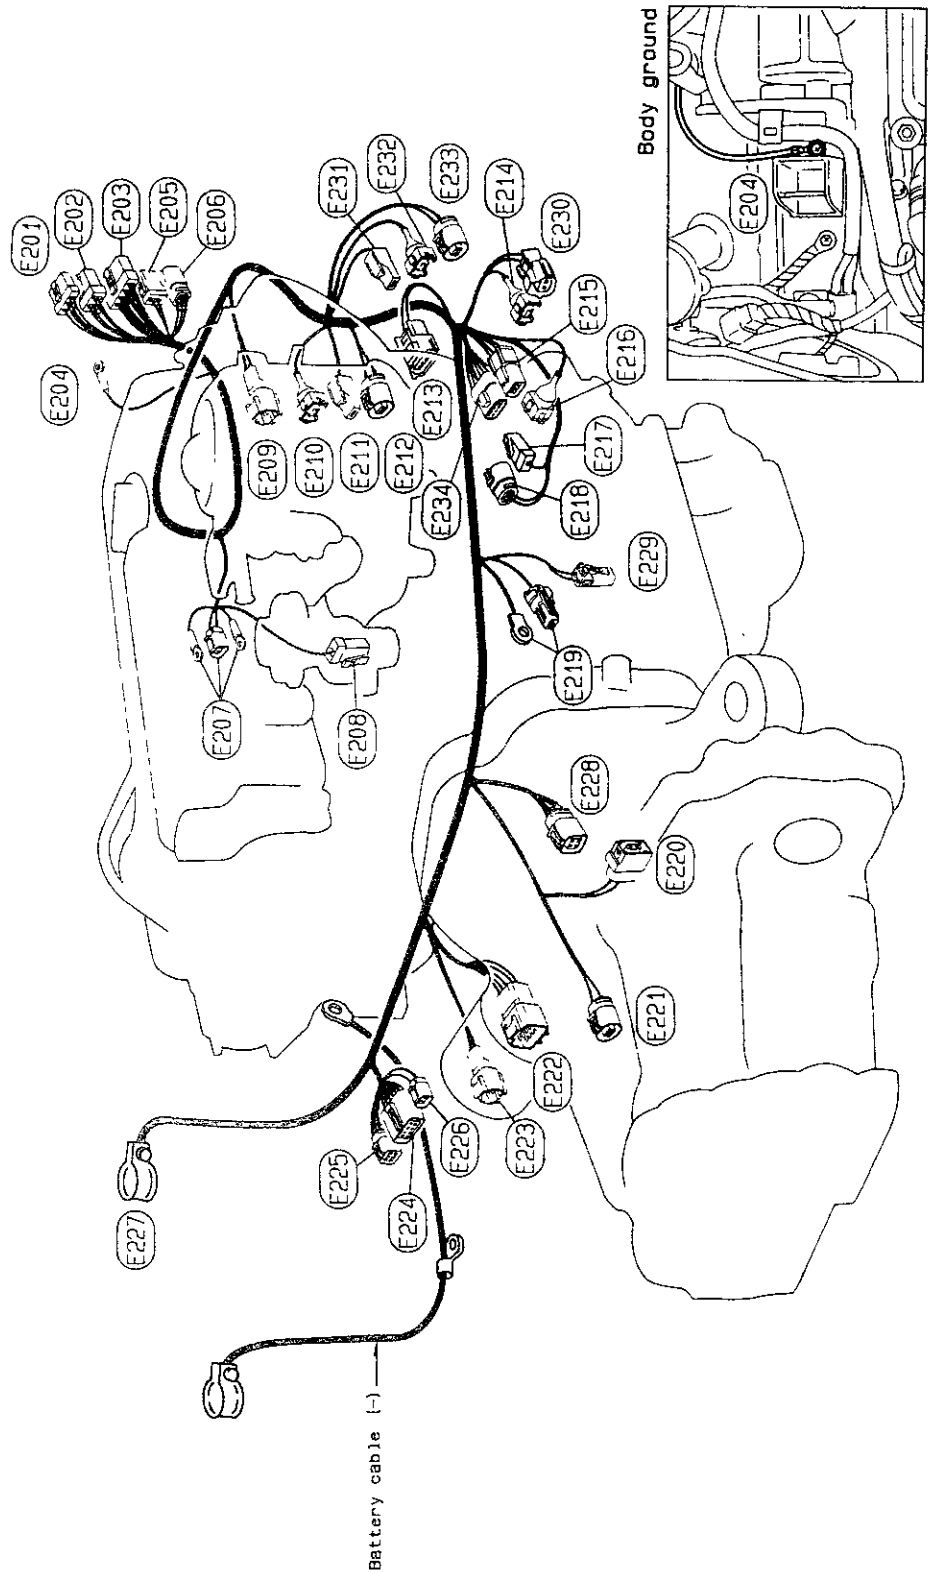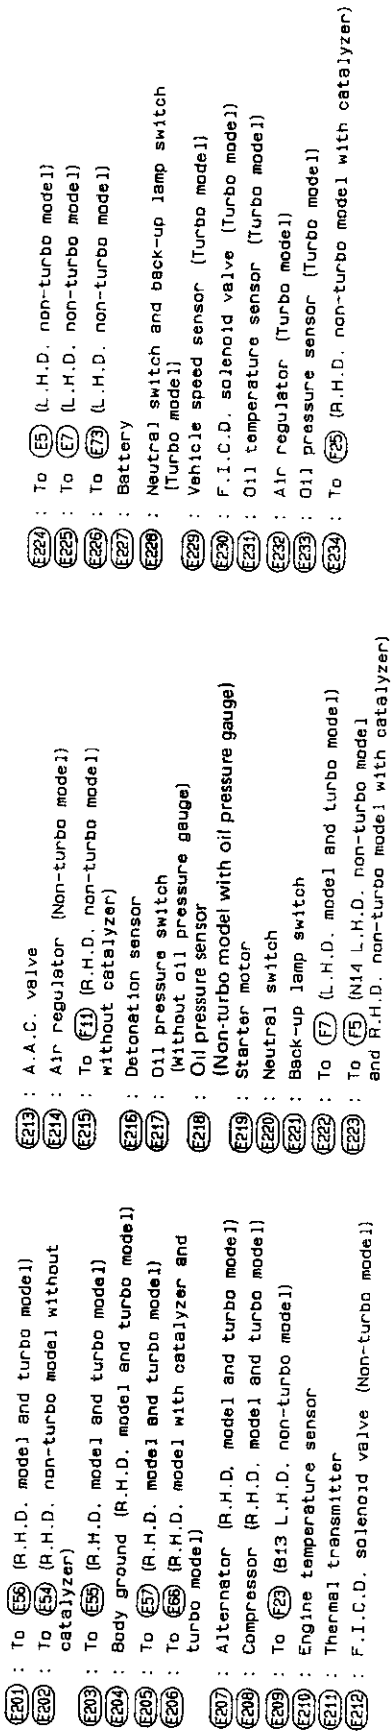

HARNESS LAYOUT

Engine Harness (Cont'd)


GA ENGINE

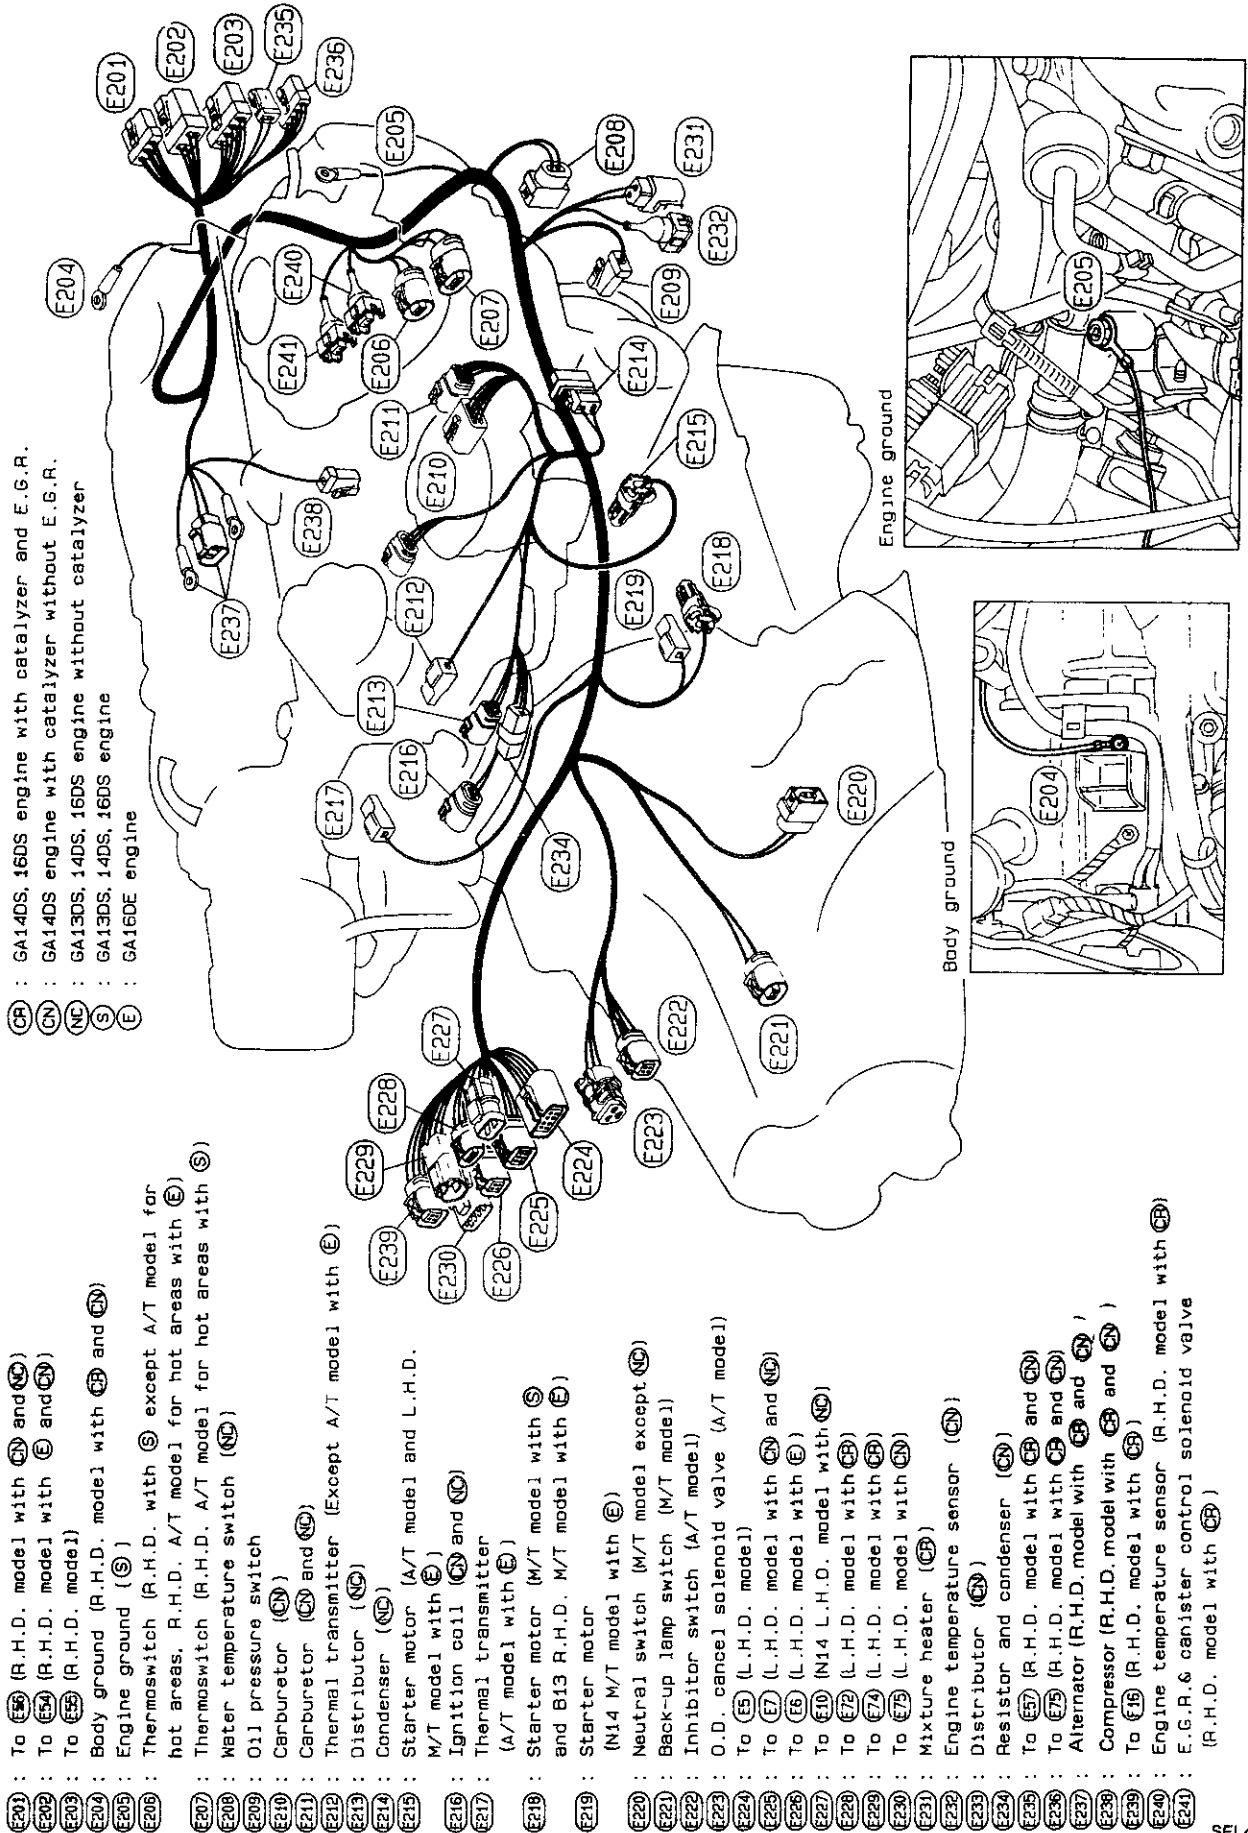


HARNESS LAYOUT

Engine Harness (Cont'd)

E10S ENGINE

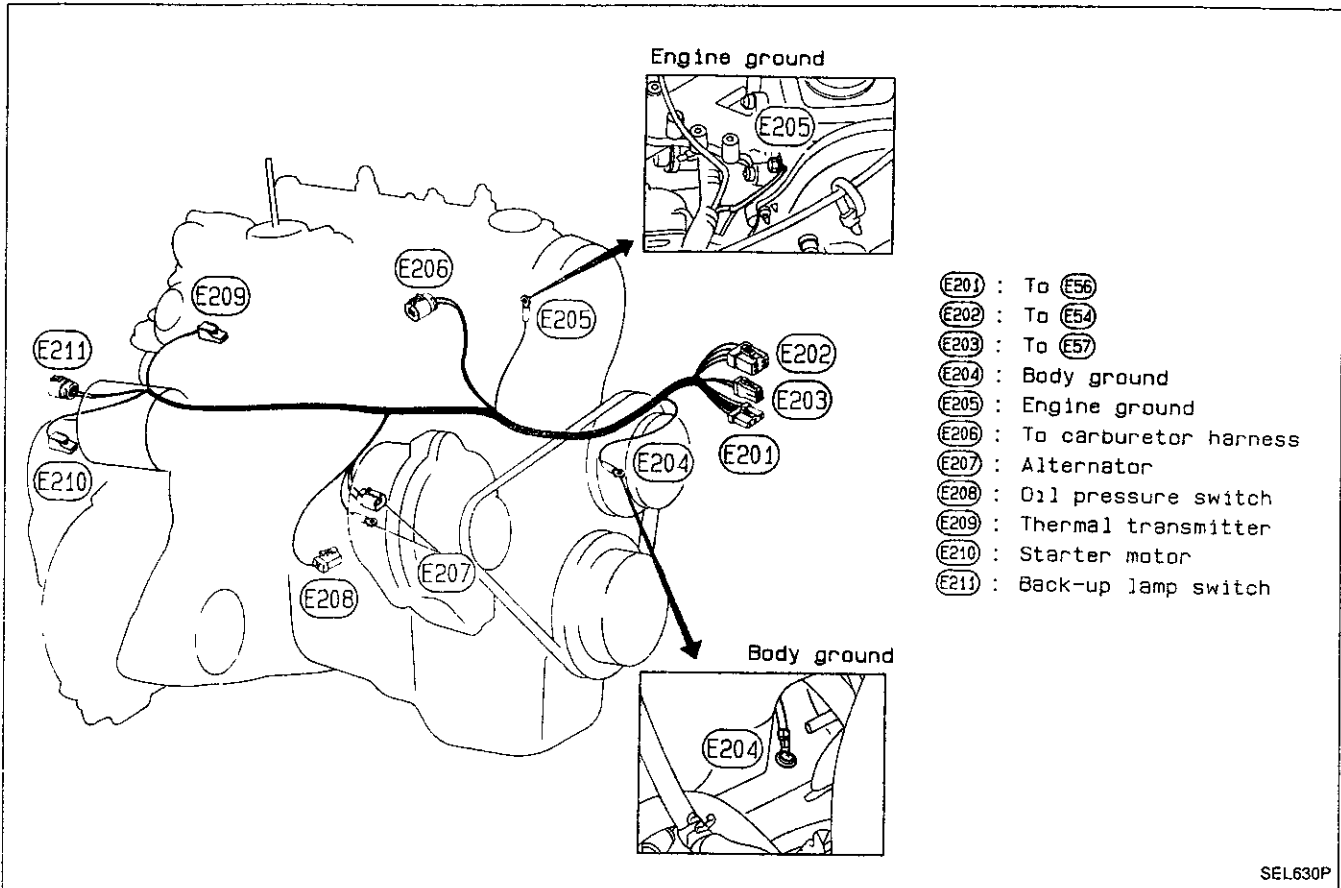


CD17 ENGINE

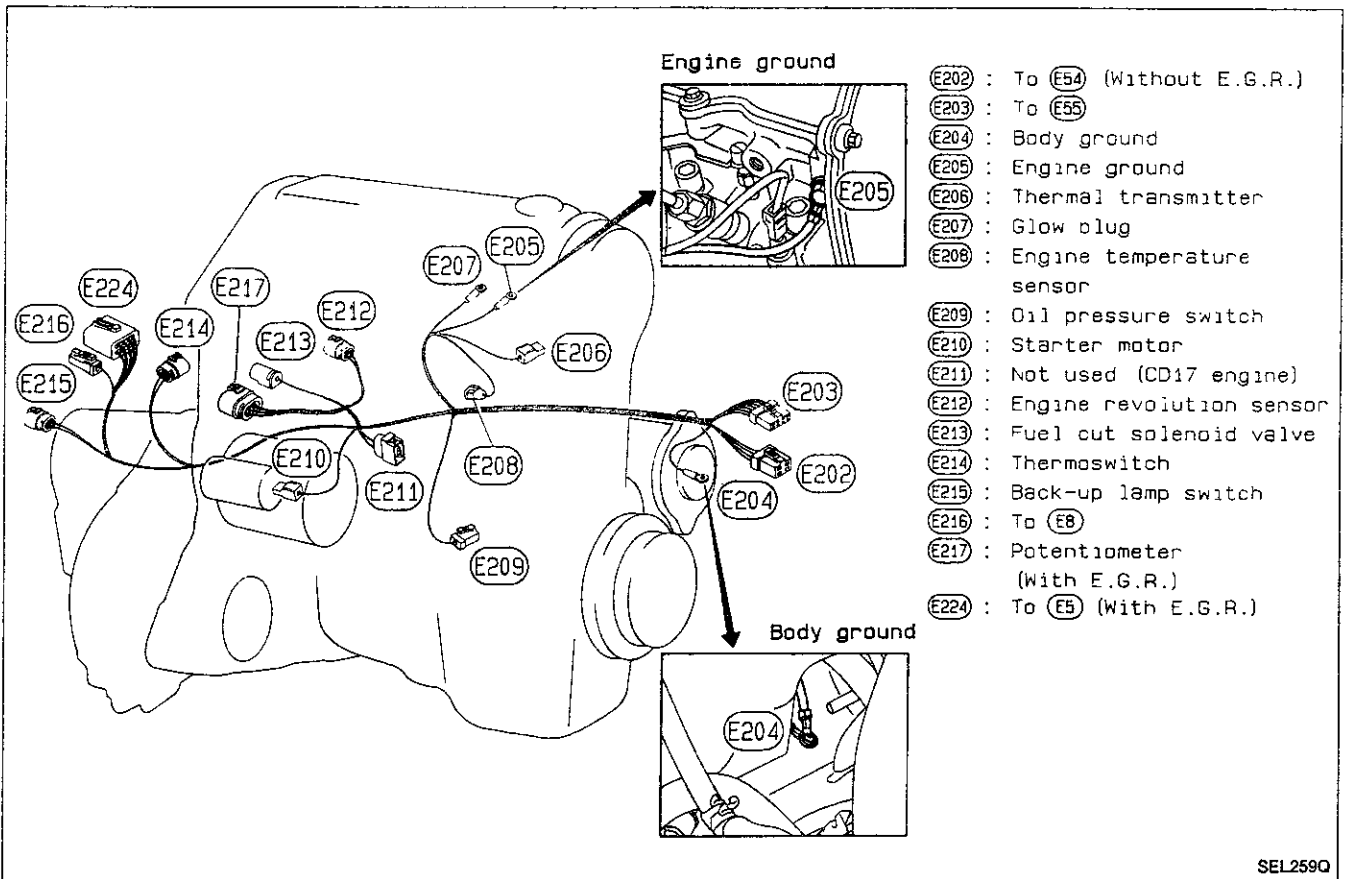

HARNESS LAYOUT


Door Harness (L.H. side)

FRONT DOOR HARNESS

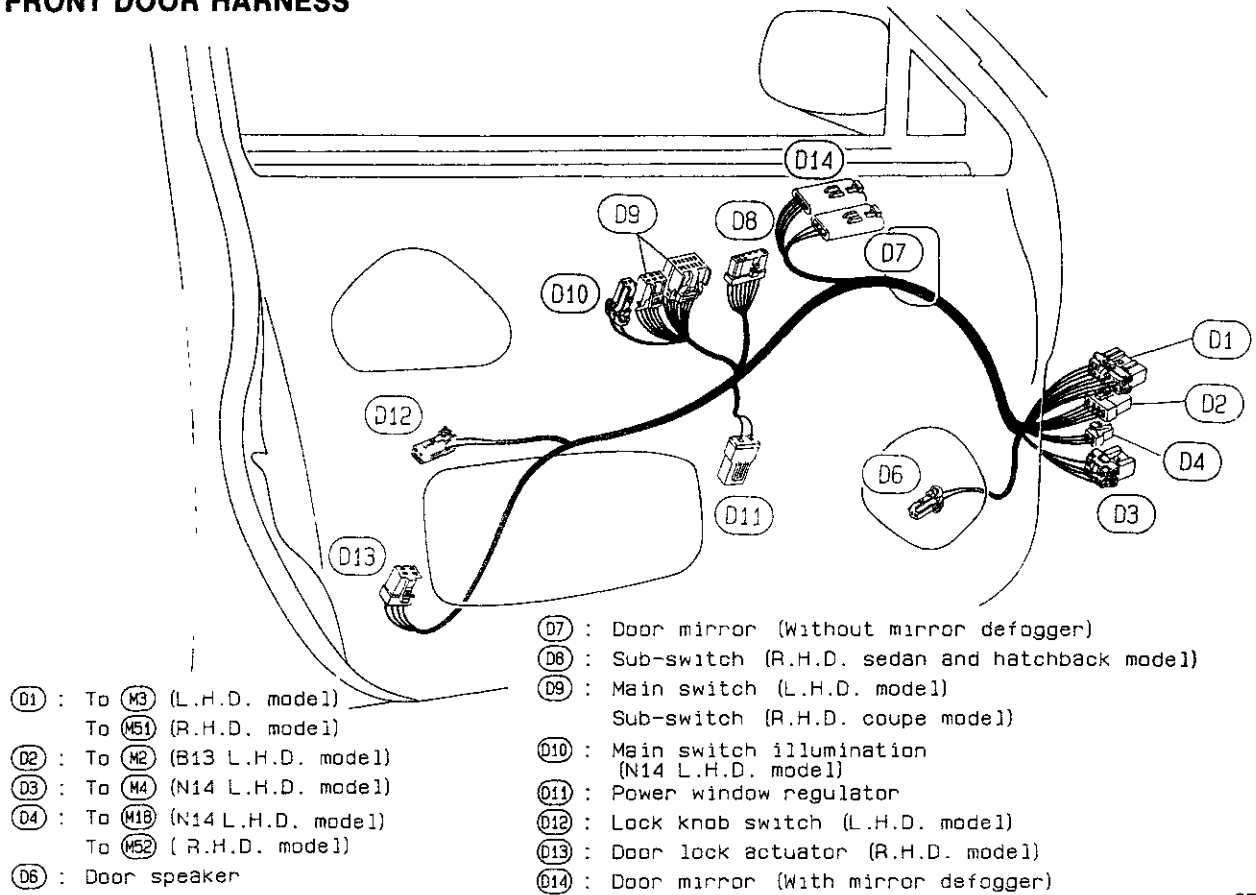

SEL260Q

REAR DOOR HARNESS

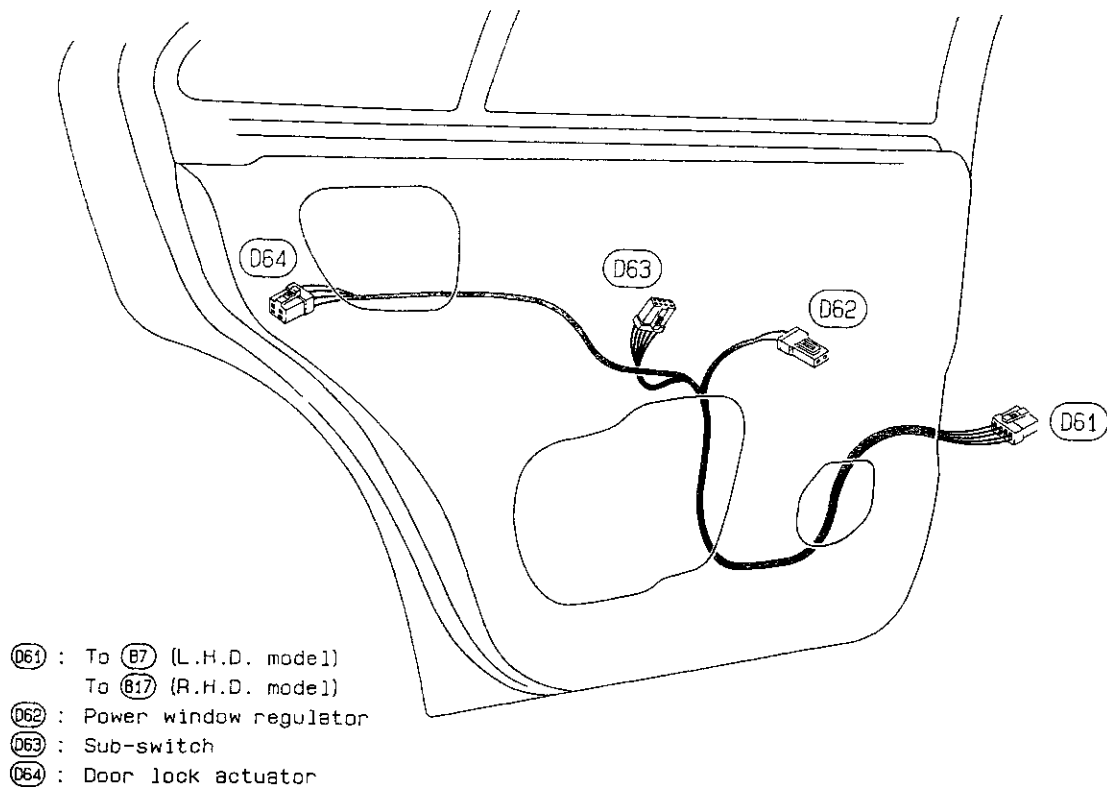


SEL632P

HARNESS LAYOUT

Door Harness (R.H. side)

FRONT DOOR HARNESS

- (D31) : To (M51) (L.H.D. model)
 To (M3) (R.H.D. model)
 (D32) : To (M2) (B13 R.H.D. model)
 (D33) : To (M4) (N14 R.H.D. model)

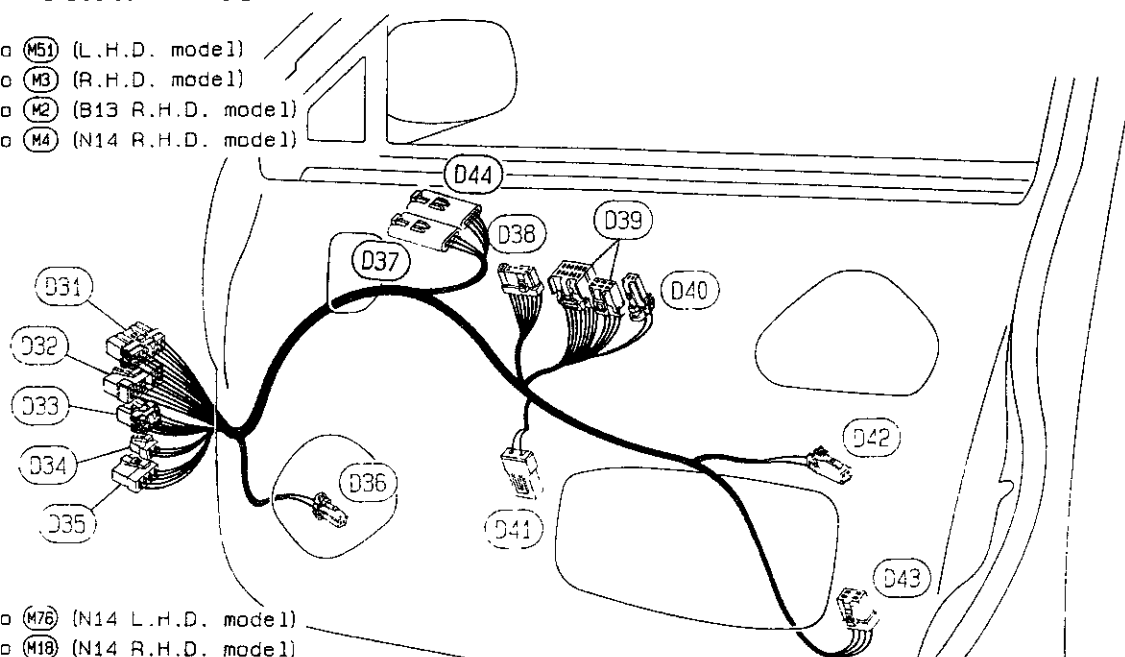


- (D34) : To (M76) (N14 L.H.D. model)
 To (M18) (N14 R.H.D. model)
 (D35) : To (M52) (B13 L.H.D. model)
 (D36) : Door speaker
 (D37) : Door mirror (without mirror defogger)
 (D38) : Sub-switch (L.H.D. sedan and hatchback model)
 (D39) : Main switch (R.H.D. model)
 Sub-switch (L.H.D. coupe model)

- (D40) : Main switch illumination
 (N14 R.H.D. model)
 (D41) : Power window regulator
 (D42) : Lock knob switch (R.H.D. model)
 (D43) : Door lock actuator (L.H.D. model)
 (D44) : Door mirror (With mirror defogger)

SEL261Q


REAR DOOR HARNESS

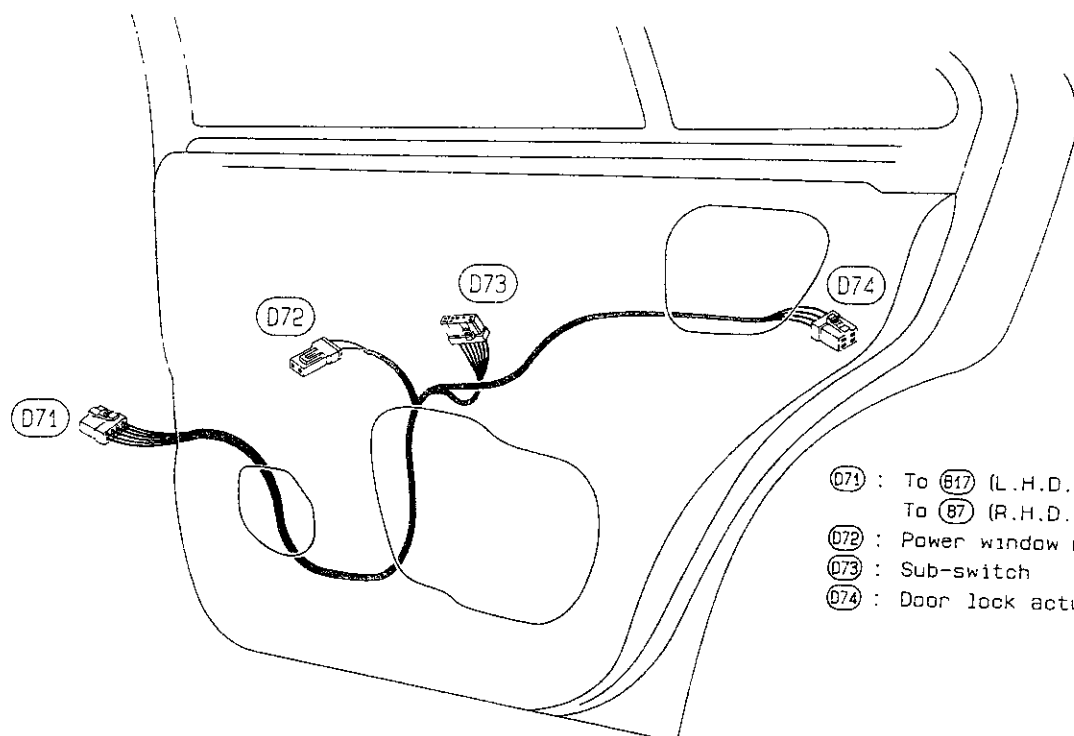

- (D71) : To (B17) (L.H.D. model)
 To (B7) (R.H.D. model)
 (D72) : Power window regulator
 (D73) : Sub-switch
 (D74) : Door lock actuator

SEL633P

Nissan B13/N14 Series CIRCUIT DIAGRAM

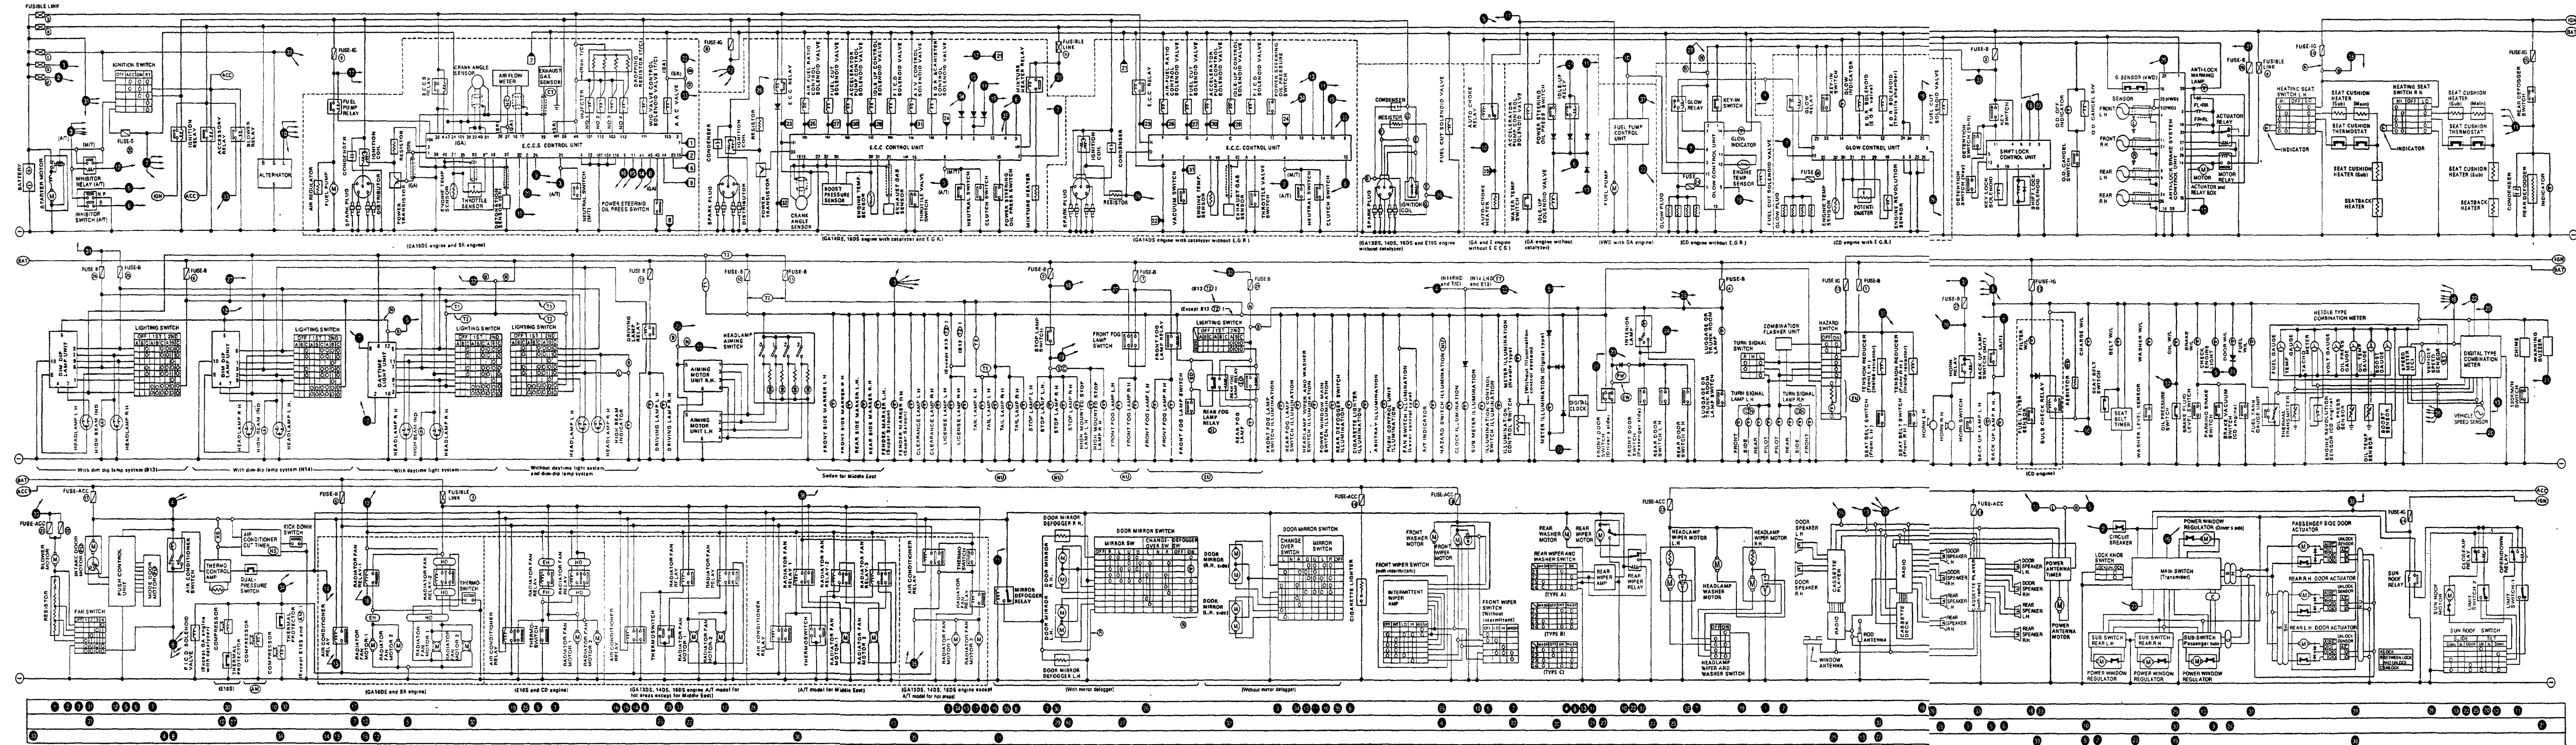

FUSE ARRANGEMENT

FUSE BLOCK

FUSIBLE LINK AND FUSE BOX

FUSE BOX (in relay box)

Diagnostic connector for CONSULT

CHECK TERMINAL

E.C.C.S. control unit

CHECK CONNECTOR (GA engine with catalytic)

CHECK TERMINAL

E.C.C. relay

Control unit

Auto-choke heater

Ignition signal

ECU control unit

ECU control unit

ECU control unit

Legend

- L.H.D. model
- R.H.D. model
- B13 model
- N14 model
- Coupe
- Hatchback
- Sedan
- 5-door hatchback
- GA130E, 140E, 160S engine
- E10S engine
- N14 model with GA140E engine except for Europe
- Except (KS)
- A/T model for hot areas
- Except (HO)
- A/T model for Middle East
- For Europe
- Except for Europe
- Lighting system type-1
- Lighting system type-2
- With daytime light system
- Without daytime light system
- With power window system
- Without power window system
- Turbo model
- Non-turbo model
- With E.C.C.S.
- Solenoid valve