

SECTION RSU

REAR SUSPENSION

A
B
C
D

CONTENTS

RSU

PRECAUTIONS	2	SHOCK ABSORBER	7
Cautions	2	Removal and Installation	7
Precautions for Brake System	2	REMOVAL	7
PREPARATION	3	INSPECTION AFTER REMOVAL	7
Special Service Tools	3	INSTALLATION	8
NOISE, VIBRATION AND HARSHNESS (NVH)		COIL SPRING	9
TROUBLESHOOTING	4	Removal and Installation	9
NVH Troubleshooting Chart	4	REMOVAL	9
REAR SUSPENSION ASSEMBLY	5	INSPECTION AFTER REMOVAL	9
Components	5	INSTALLATION	9
On-Vehicle Inspection and Service	5	REAR SUSPENSION BEAM	10
Wheel Alignment	6	Removal and Installation	10
DESCRIPTION	6	REMOVAL	10
PRELIMINARY INSPECTION	6	INSPECTION AFTER REMOVAL	10
CAMBER	6	INSTALLATION	10
TOE-IN	6	SERVICE DATA AND SPECIFICATIONS (SDS)	11
		Wheel Alignment	11
		Tightening Torque	11

F
G
H
I
J
K
L
M

PRECAUTIONS

PRECAUTIONS

PFP:00001

Cautions


BES0002U

- Final tightening of bushings must be carried out under unladen condition with tyres on the ground. Oil will shorten life of bushings. Be sure to wipe off any spilled oil.
- “Unladen condition” means that fuel, coolant and lubricant are full and ready for drive. However, spare tyre, jack, and hand tools should be unloaded.
- After installing the removed suspension parts, always check wheel alignment and adjust if necessary.
- Replace the caulking nut with a new one. Install a new nut without wiping the oil off before tightening.

Precautions for Brake System

BES0002V

- Use flare nut wrench when removing or installing brake tubes.
- Always tighten brake lines to specified torque when installing.

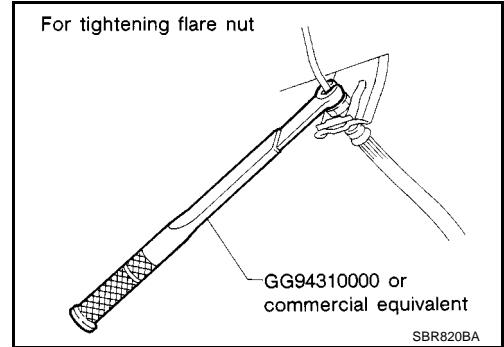

PREPARATION


PREPARATION

Special Service Tools

PFP:00002

BES0002W

Tool number Tool name	Description
GG94310000 Flare nut torque wrench a: 10 mm (0.39 in)	Removing and installing brake lines

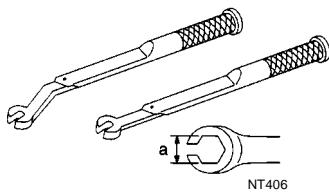

A

B

C

D

RSU

F

G

H

I

J

K

L

M

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

PFP:00003

NVH Troubleshooting Chart

BES0002X

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page

Possible cause and SUSPECTED PARTS

Symptom	REAR SUSPENSION	Noise	×	×	×	×	×	×	×	×	×	×	×	×
		Shake	×	×	×	×	×	×	×	×	×	×	×	×
		Vibration	×	×	×	×	×		×	×		×		
		Shimmy	×	×	×	×			×	×	×			
		Judder	×	×	×					×				
		Poor quality ride or handling	×	×	×	×	×							

x: Applicable

REAR SUSPENSION ASSEMBLY


REAR SUSPENSION ASSEMBLY

PFP:55020

Components

BES0002Y

SEC. 431

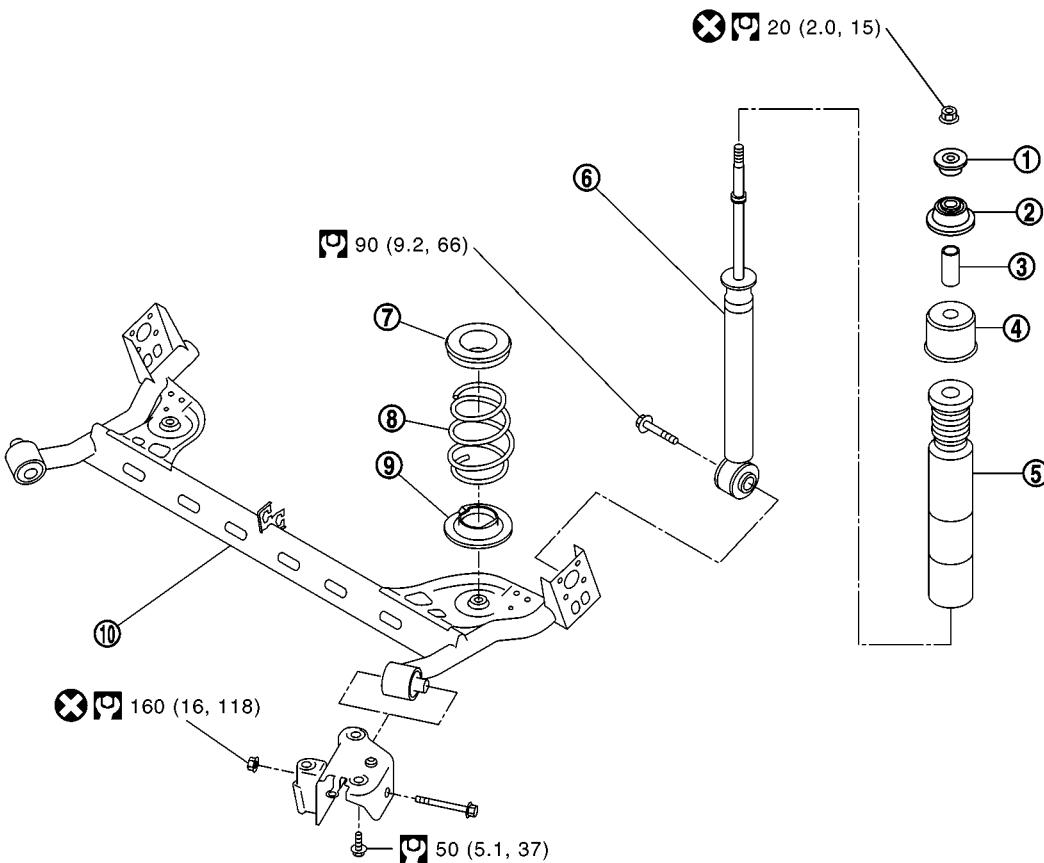

: N·m (kg·m, ft·lb)

MEIB9027E

1. Bushing	2. Bushing	3. Distance tube
4. Bound bumper cover	5. Bound bumper	6. Shock absorber
7. Rear spring rubber seat	8. Coil spring	9. Rear spring rubber seat
10. Rear suspension beam	11. Rear suspension arm bracket	

On-Vehicle Inspection and Service

BES0002Z

Check axle and suspension parts for excessive play, wear, and damage.

- Move rear wheels (RH/LH) to check for unusual free play.
- Retighten all nuts and bolts to the specified torque.
- Check shock absorber for oil leakage and damage.

A
B
C
D
RSU
F
G
H
I
J
K
L
M

Wheel Alignment

DESCRIPTION

BES00030

- Measure wheel alignment under unladen conditions. "Unladen conditions" means that fuel, coolant, and lubricant are full. However, spare tyre, jack, and hand tools should be unloaded.

PRELIMINARY INSPECTION

- Check the tyres for improper air pressure and wear.
- Check road wheels for runout.
- Check wheel bearing axial end play.
- Check shock absorber operation.
- Check each mounting point of axle and suspension for looseness and deformation.
- Check each link and arm for cracks, deformation, and other damage.
- Check the vehicle posture.

CAMBER

Camber is preset at factory and cannot be adjusted.

Camber : -1°55' - 0°25' (-1.92° - 0.42°)

- If the camber is not within specification, inspect and replace any damaged or worn rear suspension parts.


TOE-IN

Toe-in is preset at factory and cannot be adjusted. Measure toe-in using following procedure. If out of specification, inspect and replace any damaged or worn rear suspension parts.

WARNING:

- Always perform following procedure on a flat surface.**
- Make sure that no person is in front of the vehicle before pushing it.**

- Bounce rear of vehicle up and down to stabilize the posture.
- Push the vehicle straight ahead about 5 m (16 ft.).
- Put a mark on base line of tread (rear side) of both tyres at the same height as hub center. This mark is a measuring points.

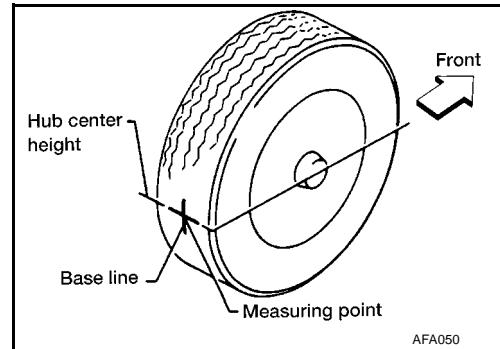


- Measure distance "A" (rear side).
- Push the vehicle slowly ahead to rotate the wheels 180 degrees (1/2 turn).

If the wheels have rotated more than 180 degrees (1/2 turn), try the above procedure again from the beginning. Never push vehicle backward.

- Measure distance "B" (front tyres).

Total toe-in: In 0-8 mm (0 - 0.31 in)

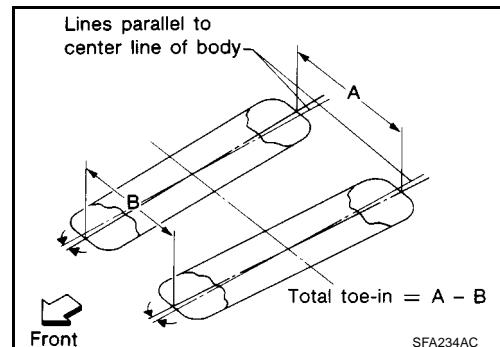

SHOCK ABSORBER

PFP:56210

Removal and Installation

BES00031


REMOVAL

1. Raise vehicle and remove tyre.
2. Using a flat screwdriver, remove luggage side lower finisher.

CAUTION:


Wrap the tip of a screwdriver with cloth to avoid damaging components.

3. Remove upper nuts of the shock absorber and remove washer, bushing on the upper side of shock absorber.

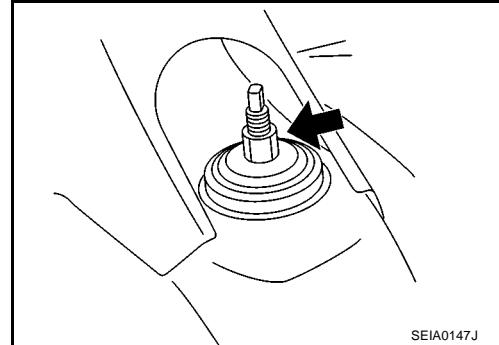

SEIA0147J

4. Set a jack under trailing arm of rear suspension beam and support it. Remove lower bolts of the shock absorber.
5. Remove shock absorber from the vehicle.

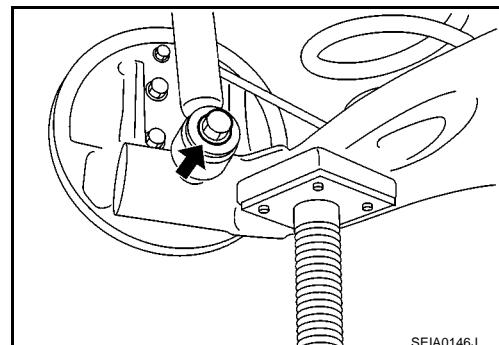

SEIA0146J

INSPECTION AFTER REMOVAL

Shock Absorber

- Check shock absorber for deformation, cracks, and other damage. Replace if any non-standard conditions are found.
- Check piston rod for damage, uneven wear, and distortion, and replace shock absorber if necessary.
- Check welded and sealed areas for oil leakage, and replace if necessary.


Bound Bumper and Bushing

- Check bound bumper and bushing for cracks and damage. Replace if necessary.

SHOCK ABSORBER

INSTALLATION

- Refer to [RSU-5, "Components"](#) for tightening torque. Install in the reverse order of removal.
- When installing body side bushing, install the projection to the vehicle side hole securely.

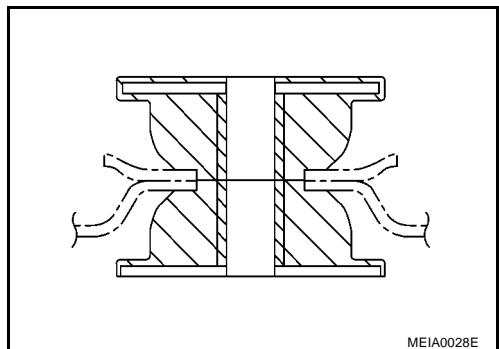


COIL SPRING

PFP:55020

Removal and Installation

REMOVAL

1. Raise vehicle and remove tyre.
2. Set a jack under trailing arm of rear suspension beam and support it. Remove lower side of the shock absorber. (left/right)
3. Remove jack. Remove coil spring and spring rubber seat.

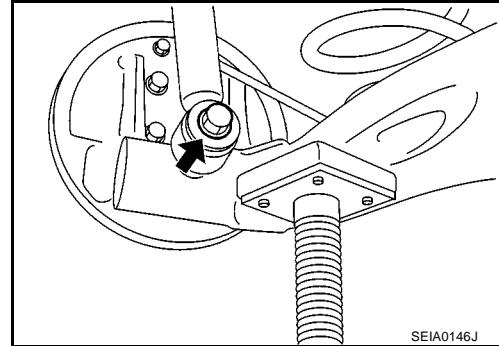

A

B

C

D

RSU

F

G

H


I

J

K

L

M

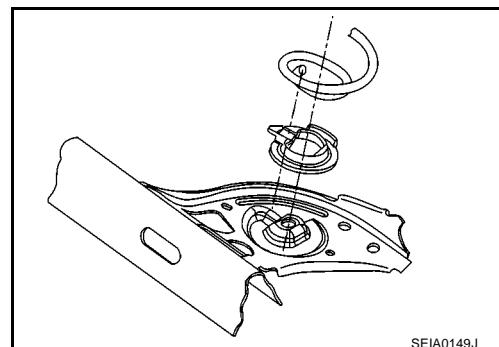

REAR SUSPENSION BEAM


REAR SUSPENSION BEAM

PFP:55501


Removal and Installation

REMOVAL

1. Raise vehicle, remove tyre and replace parking lever.
2. Install brake pedal press then open rear air bleeder. Refer to [BR-10, "Bleeding Brake System"](#).
3. Drain brake fluid. Refer to [BR-9, "Drain and Refill"](#).
4. Loosen self-locking nut, and separate parking brake rear cable from rear brake and rear suspension beam. Refer to [PB-3, "PARKING BRAKE SYSTEM"](#).
5. Remove ABS wheel sensor. Refer to [BRC-36, "WHEEL SENSORS"](#).
6. Separate rear brake hose from brake piping. Refer to [BR-11, "BRAKE PIPING AND HOSE"](#).
7. Remove shock absorber lower side (left/right), coil spring (left/right). Refer to [RSU-7, "SHOCK ABSORBER"](#), [RSU-9, "COIL SPRING"](#).
8. Set a jack under suspension beam, and remove mounting bolts of suspension arm bracket and rear suspension beam.
9. Remove suspension beam.
10. Remove brake piping from rear suspension member beam. Refer to [BR-11, "BRAKE PIPING AND HOSE"](#).

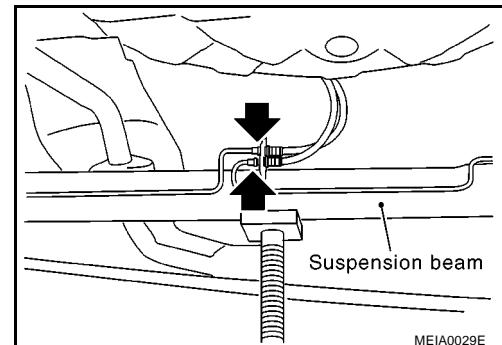

11. Remove spindle bolts and rear axle assembly.
12. Remove rear suspension arm bracket nuts and bolts. Remove rear suspension arm bracket from vehicle.

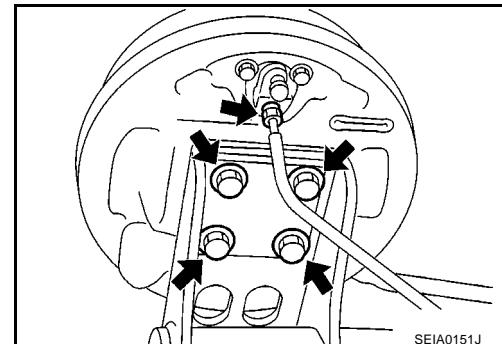


INSPECTION AFTER REMOVAL

- Check suspension beam and bushing for deformation, cracks, and damage. Replace if necessary.

INSTALLATION

- Refer to [RSU-5, "Components"](#) for tightening torque. Tighten in the reverse order of removal.
- Refer to [BR-11, "BRAKE PIPING AND HOSE"](#) for installation of brake piping and brake hose and for tightening torque.
- Refer to [PB-3, "PARKING BRAKE SYSTEM"](#) for installation of parking brake and for tightening torque.
- Tighten rear suspension arm bracket under unladen condition.
- Refer to [BRC-36, "WHEEL SENSORS"](#) for installation of ABS wheel sensor and for tightening torque.
- Refill with new brake fluid and bleed air. Refer to [BR-9, "BRAKE FLUID"](#).

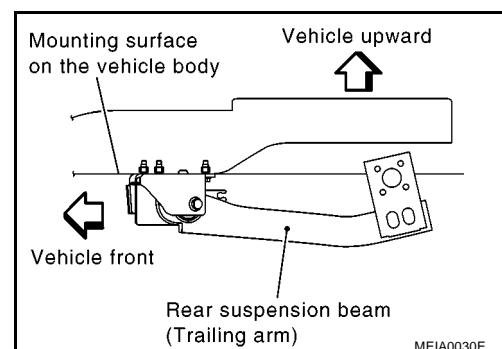

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PFP:00030

Wheel Alignment

BES00036

Camber	-1°55' - -0°25' (-1.92° - -0.42°)
Toe-in	In 0 - 8 mm (0 - 0.31 in)

Tightening Torque

BES00037

Unit: N·m (kg·m)

Shock absorber piston rod lock nut	20 (2.0, 15)
Rear suspension beam to rear suspension arm bracket	160 (16, 118)
Shock absorber to rear suspension beam	90 (9.2, 66)
Rear suspension arm bracket to body	50 (5.1, 37)

RSU

F

G

H

I

J

K

L

M

SERVICE DATA AND SPECIFICATIONS (SDS)
