

SRS

SECTION

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

CONTENTS

PRECAUTIONS	3	("SELF-DIAG [CURRENT]")	21	F
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	DIAGNOSTIC PROCEDURE 3	24	
Precautions for SRS "AIR BAG" and "SEAT BELT PRE-TENSIONER" Service	3	DIAGNOSTIC PROCEDURE 4 (CONTINUED)		
PREPARATION	4	FROM DIAGNOSTIC PROCEDURE 2	26	G
Special Service Tools	4	DIAGNOSTIC PROCEDURE 5	26	
Commercial Service Tools	4	Trouble Diagnosis without CONSULT-II	30	
SUPPLEMENTAL RESTRAINT SYSTEM (SRS)	5	DIAGNOSTIC PROCEDURE 6	30	
SRS Configuration	5	WARNING LAMP FLASH CODE CHART	30	
Front Seat Belt Pre-tensioner with Load Limiter	6	Trouble Diagnosis: "AIR BAG" Warning Lamp Does		
Front Side Air Bag	6	Not Turn OFF	34	I
Side Curtain Air Bag	6	DIAGNOSTIC PROCEDURE 7	34	
Front Passenger Air Bag Cut OFF Switch	6	Trouble Diagnosis: "AIR BAG" Warning Lamp Does		
Front Passenger Air Bag OFF Indicator	7	Not Turn ON	35	
TROUBLE DIAGNOSIS	8	DIAGNOSTIC PROCEDURE 8	35	J
Trouble Diagnosis Introduction	8	DRIVER AIR BAG MODULE	36	
DIAGNOSIS FUNCTION	8	Removal and Installation	36	
HOW TO PERFORM TROUBLE DIAGNOSES		REMOVAL	36	K
FOR QUICK AND ACCURATE REPAIR	8	INSTALLATION	37	
WORK FLOW	9	SPIRAL CABLE	38	
Component Parts Location	10	Removal and Installation	38	
Schematic	11	REMOVAL	38	L
Wiring Diagram — SRS —	12	INSTALLATION	39	
CONSULT-II Function	16	FRONT PASSENGER AIR BAG MODULE	40	
DIAGNOSIS MODE FOR CONSULT-II	16	Removal and Installation	40	M
HOW TO CHANGE SELF-DIAGNOSIS MODE		REMOVAL	40	
WITH CONSULT-II	16	INSTALLATION	41	
HOW TO ERASE SELF-DIAGNOSIS RESULTS.	17	FRONT SIDE AIR BAG MODULE	42	
Self-Diagnosis Function (Without CONSULT-II)	17	Removal and Installation	42	
HOW TO CHANGE SELF-DIAGNOSIS MODE		REMOVAL	42	
WITHOUT CONSULT-II	17	INSTALLATION	43	
HOW TO ERASE SELF-DIAGNOSIS RESULTS.	17	SIDE CURTAIN AIR BAG MODULE	44	
SRS Operation Check	18	Removal and Installation	44	
DIAGNOSTIC PROCEDURE 1	18	REMOVAL	44	
Trouble Diagnosis with CONSULT-II	20	INSTALLATION	44	
DIAGNOSTIC PROCEDURE 2	20	CRASH ZONE SENSOR	45	
CONSULT-II DIAGNOSTIC CODE CHART		Removal and Installation	45	
		REMOVAL	45	
		INSTALLATION	45	

SIDE AIR BAG (SATELLITE) SENSOR	46	CLE>	54
Removal and Installation	46	DEPLOYMENT PROCEDURES FOR FRONT	
REMOVAL	46	SEAT BELT PRE-TENSIONER 2 (OUTSIDE OF	
INSTALLATION	46	VEHICLE)	55
SEAT BELT PRE-TENSIONER	47	DEPLOYMENT OF AIR BAG MODULE AND	
Removal and Installation	47	SEAT BELT PRE-TENSIONER WHILE	
DIAGNOSIS SENSOR UNIT	48	MOUNTED IN VEHICLE	57
Removal and Installation	48	DISPOSING OF AIR BAG MODULE AND SEAT	
REMOVAL	48	BELT PRE-TENSIONER	57
INSTALLATION	48	COLLISION DIAGNOSIS	58
ECU DISCRIMINATED NO.	48	For Frontal Collision	58
DISPOSAL OF AIRBAG MODULE AND SEATBELT		SRS INSPECTION (FOR FRONTAL COLLI-	
PRE-TENSIONER	49	SION)	58
Caution for Air Bag Module and Seat Belt Pre-		For Side Collision	60
tensioner	49	WHEN THE SIDE AIR BAG IS ACTIVATED IN	
CHECKING DEPLOYMENT TOOL	49	THE SIDE COLLISION:	60
DEPLOYMENT PROCEDURES FOR AIR BAG		WHEN SRS IS NOT ACTIVATED IN THE SIDE	
MODULE <OUTSIDE OF VEHICLE>	50	COLLISION:	60
DEPLOYMENT PROCEDURES FOR SEAT		SRS INSPECTION (FOR SIDE COLLISION)	60
BELT PRE-TENSIONER <OUTSIDE OF VEH-			

PRECAUTIONS

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

BHS0002S

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for SRS "AIR BAG" and "SEAT BELT PRE-TENSIONER" Service

BHS0002T

- Do not use electrical test equipment to check SRS circuits unless instructed to in this Service Manual.
- Before servicing the SRS, turn ignition switch "OFF", disconnect battery ground cable and wait at least 3 minutes. For approximately 3 minutes after the cables are removed, it is still possible for the air bag and seat belt pre-tensioner to deploy. Therefore, do not work on any SRS connectors or wires until at least 3 minutes have passed.
- Diagnosis sensor unit must always be installed with their arrow marks "←" pointing towards the front of the vehicle for proper operation. Also check diagnosis sensor unit for cracks, deformities or rust before installation and replace as required.
- The spiral cable must be aligned with the neutral position since its rotations are limited. Do not attempt to turn steering wheel or column after removal of steering gear.
- Handle air bag module carefully. Always place driver and front passenger air bag modules with the pad side facing upward and place front side air bag module standing with stud bolt side setting bottom.
- Conduct self-diagnosis to check entire SRS for proper function after replacing any components.
- After air bag inflates, the front instrument panel assembly should be replaced if damaged.






PREPARATION

PREPARATION

PFP:00002


Special Service Tools

BHS0002U

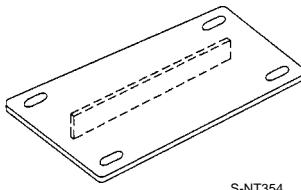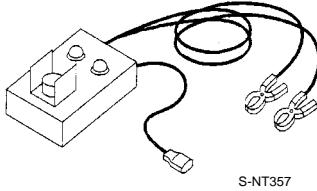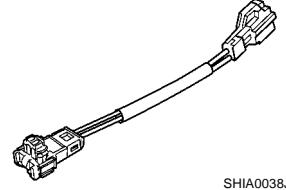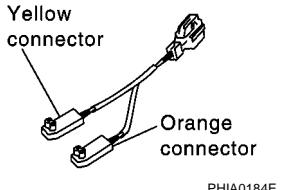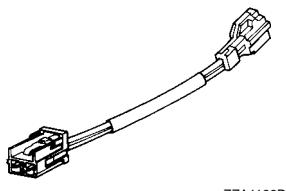Tool number Tool name	Application
KV99105300 Air bag module bracket	 <p>Anchoring air bag module</p>
KV99106400 Deployment tool	 <p>Disposing of air bag module</p>
KV99109700 Deployment tool adapter for front passenger air bag module	 <p>Connection between the deployment tool and front passenger air bag module</p>
KV99110500 <ul style="list-style-type: none"> Deployment tool adapter for pre-tensioner seat belt module Deployment tool adapter for driver air bag module Deployment tool adapter for side curtain air bag module 	 <ul style="list-style-type: none"> Connection between the deployment tool and pre-tensioner seat belt Connection between the deployment tool and driver air bag module Connection between the deployment tool and side curtain air bag module
KV99108300 Deployment tool adapter for front side air bag module	 <p>Connection between the deployment tool and front side air bag module</p>

Commercial Service Tools

BHS0002V

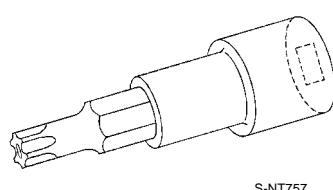Tool name	Application
Tamper resistant TORX bit	 <p>Size: T30</p>


SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

PFP:28556

SRS Configuration

BHS0002W

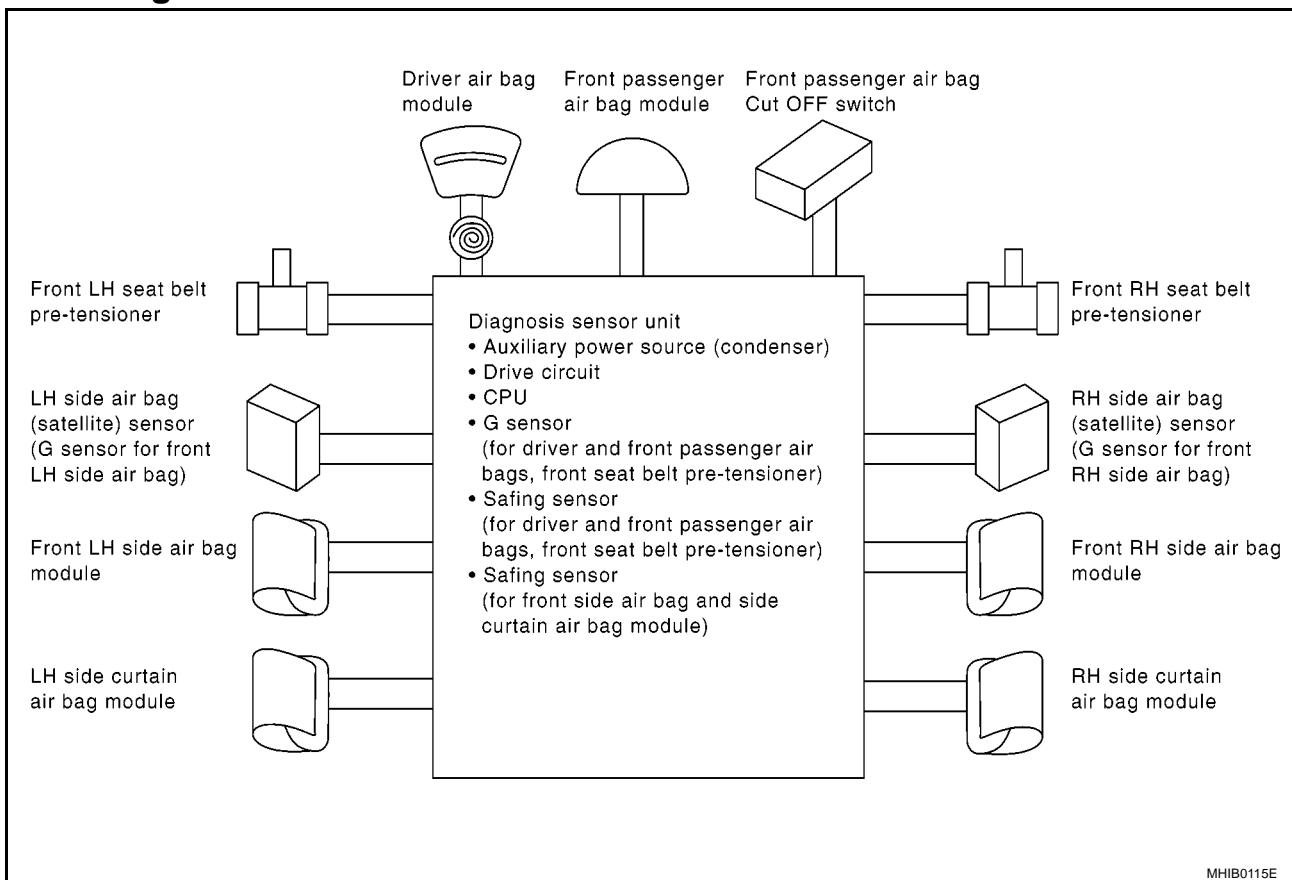

MHIB0115E

The air bag deploys if the diagnosis sensor unit activates while the ignition switch is in the ON or START position.

The collision modes for which supplemental restraint systems are activated are different among the SRS systems. For example, the driver air bag module and front passenger air bag module are activated in a frontal collision but not in a side collision.

SRS configurations which are activated for some collision modes are as follows:

SRS configuration	Frontal collision	Left side collision	Right side collision
Driver air bag module	×	—	—
Front passenger air bag module	×	—	—
Front LH seat belt pre-tensioner	×	—	—
Front RH seat belt pre-tensioner	×	—	—
Front LH side air bag module	—	×	—
Front RH side air bag module	—	—	×
LH side curtain air bag module	—	×	—
RH side curtain air bag module	—	—	×

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)


Front Seat Belt Pre-tensioner with Load Limiter

BHS0002X

The seat belt pre-tensioner system with load limiter is installed for both the driver's seat and the front passenger's seat. It operates simultaneously with the SRS air bag system in the event of a frontal collision with an impact exceeding a specified level.

When the frontal collision with an impact exceeding a specified level occurs, seat belt slack resulting from clothing or other factors is immediately taken up by the pre-tensioner. Vehicle passengers are securely restrained.

When passengers in a vehicle are thrown forward in a collision and the restraining force of the seat belt exceeds a specified level, the load limiter permits the specified extension of the seat belt by the twisting of the ELR shaft, and a relaxation of the chest-area seat belt web tension while maintaining force.

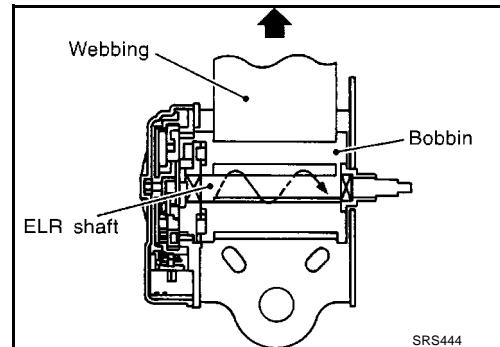


Front Side Air Bag

BHS0002Y

Front side air bag is built-in type.

The front seatbacks with built-in type side air bag have the labels as shown.

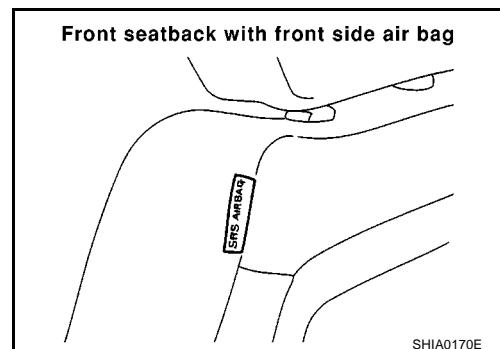

Side Curtain Air Bag

BHS0002Z

The side curtain air bags have the labels as shown.




Front Passenger Air Bag Cut OFF Switch

BHS00030

Operating the front passenger air bag cut OFF switch to ON or OFF position will switch the front air bag to armed or disarmed state.

The front passenger air bag cut OFF switch is located in right hand side of the instrument side mask for LHD model. (And oppositely for the RHD model)

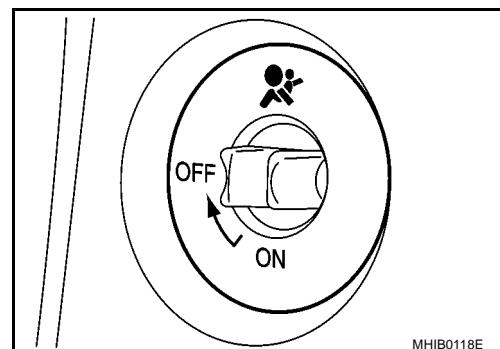


SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Front Passenger Air Bag OFF Indicator

BHS00031

The front passenger air bag OFF indicator is arranged in the A/C control panel.

Air bag OFF indicator - (1)

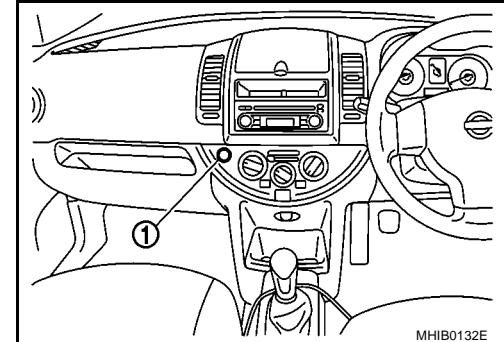

A

B

C

D

E

F

G

SRS

I

J

K

L

M

TROUBLE DIAGNOSIS

TROUBLE DIAGNOSIS

PFP:00004

Trouble Diagnosis Introduction

BHS00032

CAUTION:

- Do not use electrical test equipment on any circuit related to the SRS unless instructed in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.
- Do not attempt to repair, splice or modify the SRS wiring harness. If the harness is damaged, replace it with a new one.
- Keep ground portion clean.

DIAGNOSIS FUNCTION

The SRS self-diagnosis results can be read by using "AIR BAG" warning lamp and/or CONSULT-II.

The User mode is exclusively prepared for the customer (driver). This mode warns the driver of a system malfunction through the operation of the "AIR BAG" warning lamp.

The Diagnosis mode allows the technician to locate and inspect the malfunctioning part.

The mode applications for the "AIR BAG" warning lamp and CONSULT-II are as follows:

	User mode	Diagnosis mode	Display type
"AIR BAG" warning lamp	X	X	ON-OFF operation
CONSULT-II	—	X	Monitoring

HOW TO PERFORM TROUBLE DIAGNOSES FOR QUICK AND ACCURATE REPAIR

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Information from Customer

WHAT..... Vehicle model

WHEN..... Date, Frequencies

WHERE..... Road conditions

HOW..... Operating conditions, Symptoms


Preliminary Check

Check that the following parts are in good order.

- Battery (Refer to [SC-5, "How to Handle Battery"](#) .)
- Fuse (Refer to [SRS-12, "Wiring Diagram — SRS —"](#) .)
- System component-to-harness connections

TROUBLE DIAGNOSIS

WORK FLOW

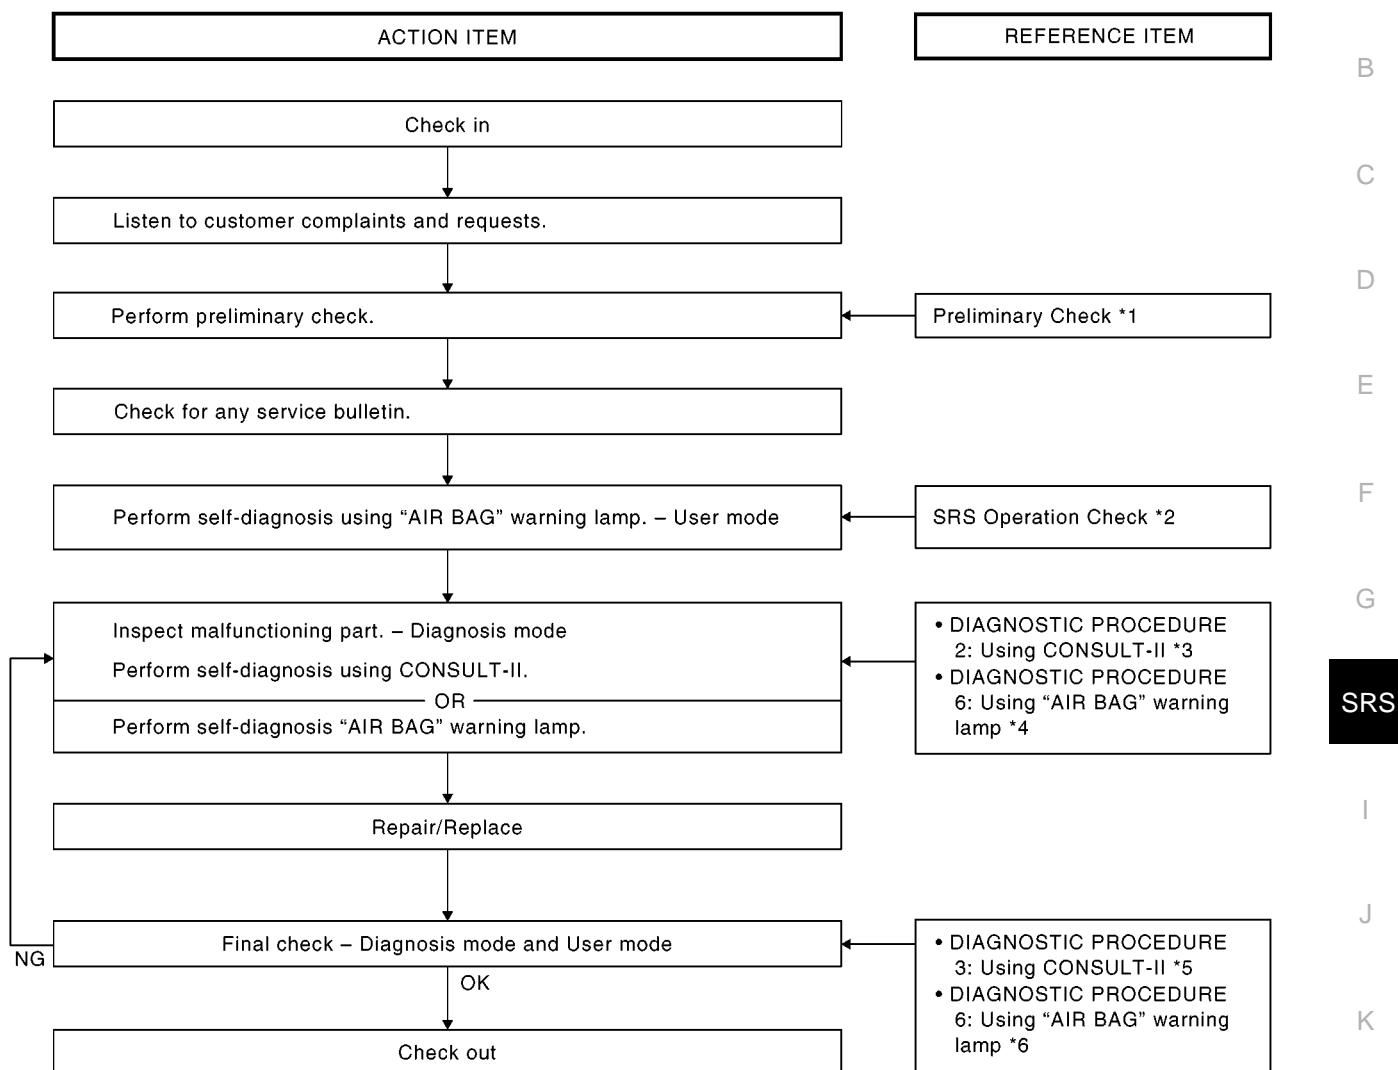

PHIA0710E

*1: [SRS-8, "Preliminary Check"](#)

*2: [SRS-18, "SRS Operation Check"](#)

*3: [SRS-20, "DIAGNOSTIC PROCEDURE 2"](#)

*4: [SRS-30, "DIAGNOSTIC PROCEDURE 6"](#)


*5 [SRS-24, "DIAGNOSTIC PROCEDURE 3"](#)

*6 [SRS-30, "DIAGNOSTIC PROCEDURE 6"](#)

TROUBLE DIAGNOSIS

Component Parts Location

BHS00033

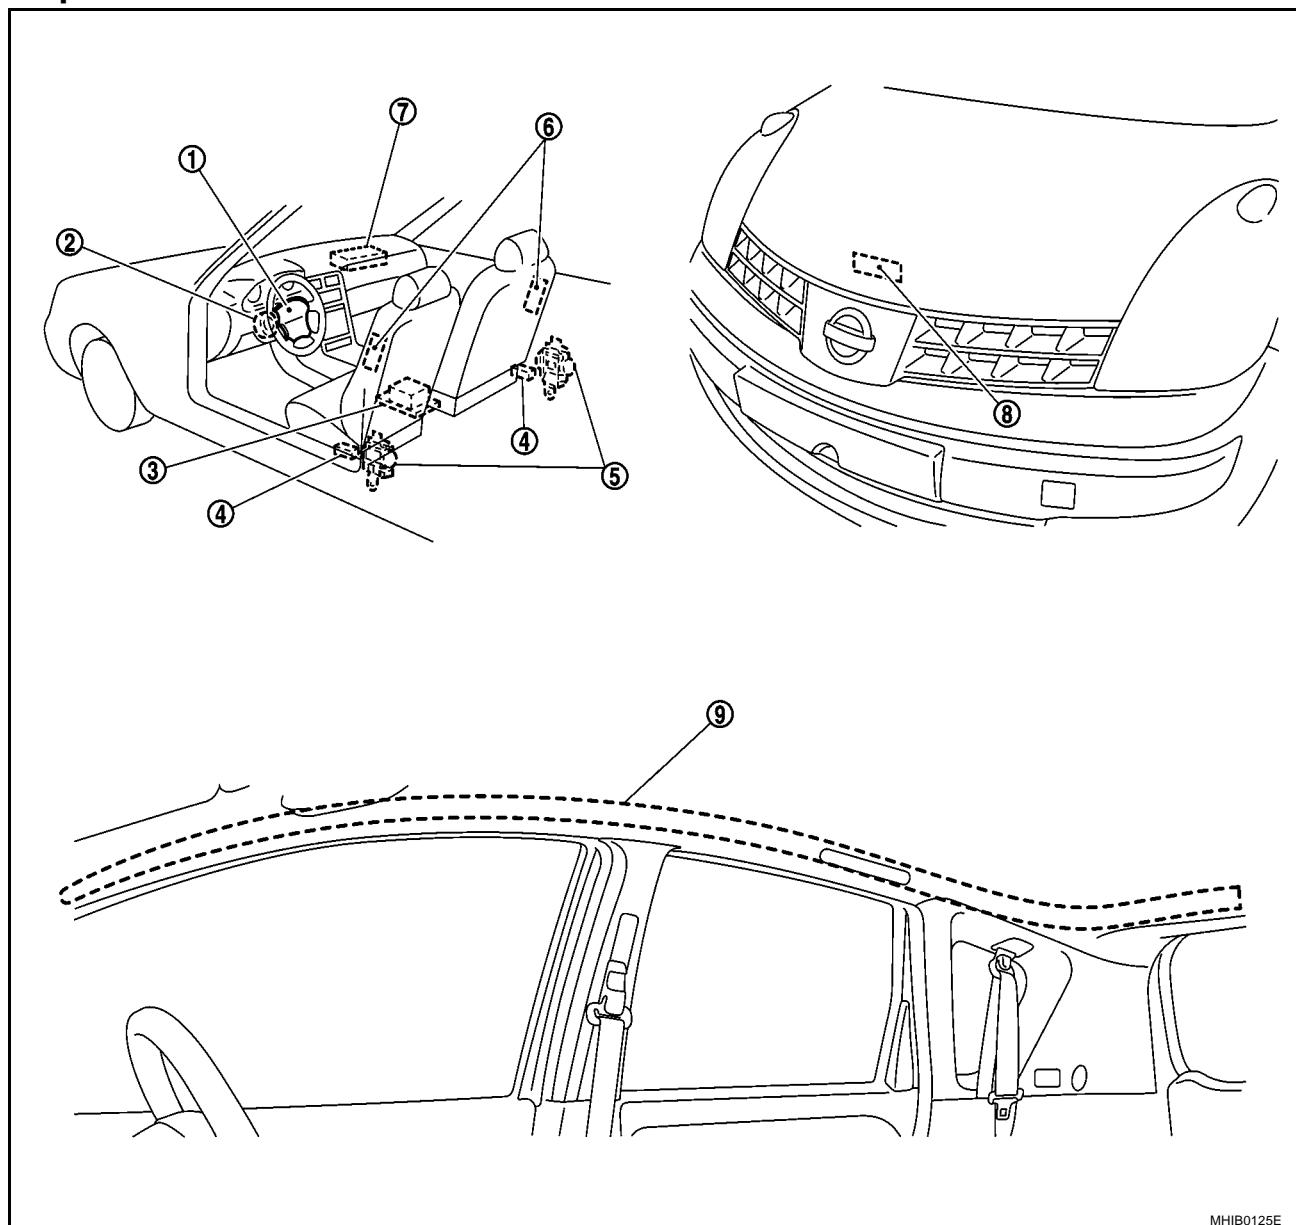


1. Driver air bag module	2. Spiral cable	3. Diagnosis sensor unit
4. Side air bag (satellite) sensors	5. Seat belt Pre-tensioners	6. Front side air bag modules
7. Front passenger air bag module	8. Crash zone sensor	9. Curtain air bag module

TROUBLE DIAGNOSIS

Schematic

BHS00034

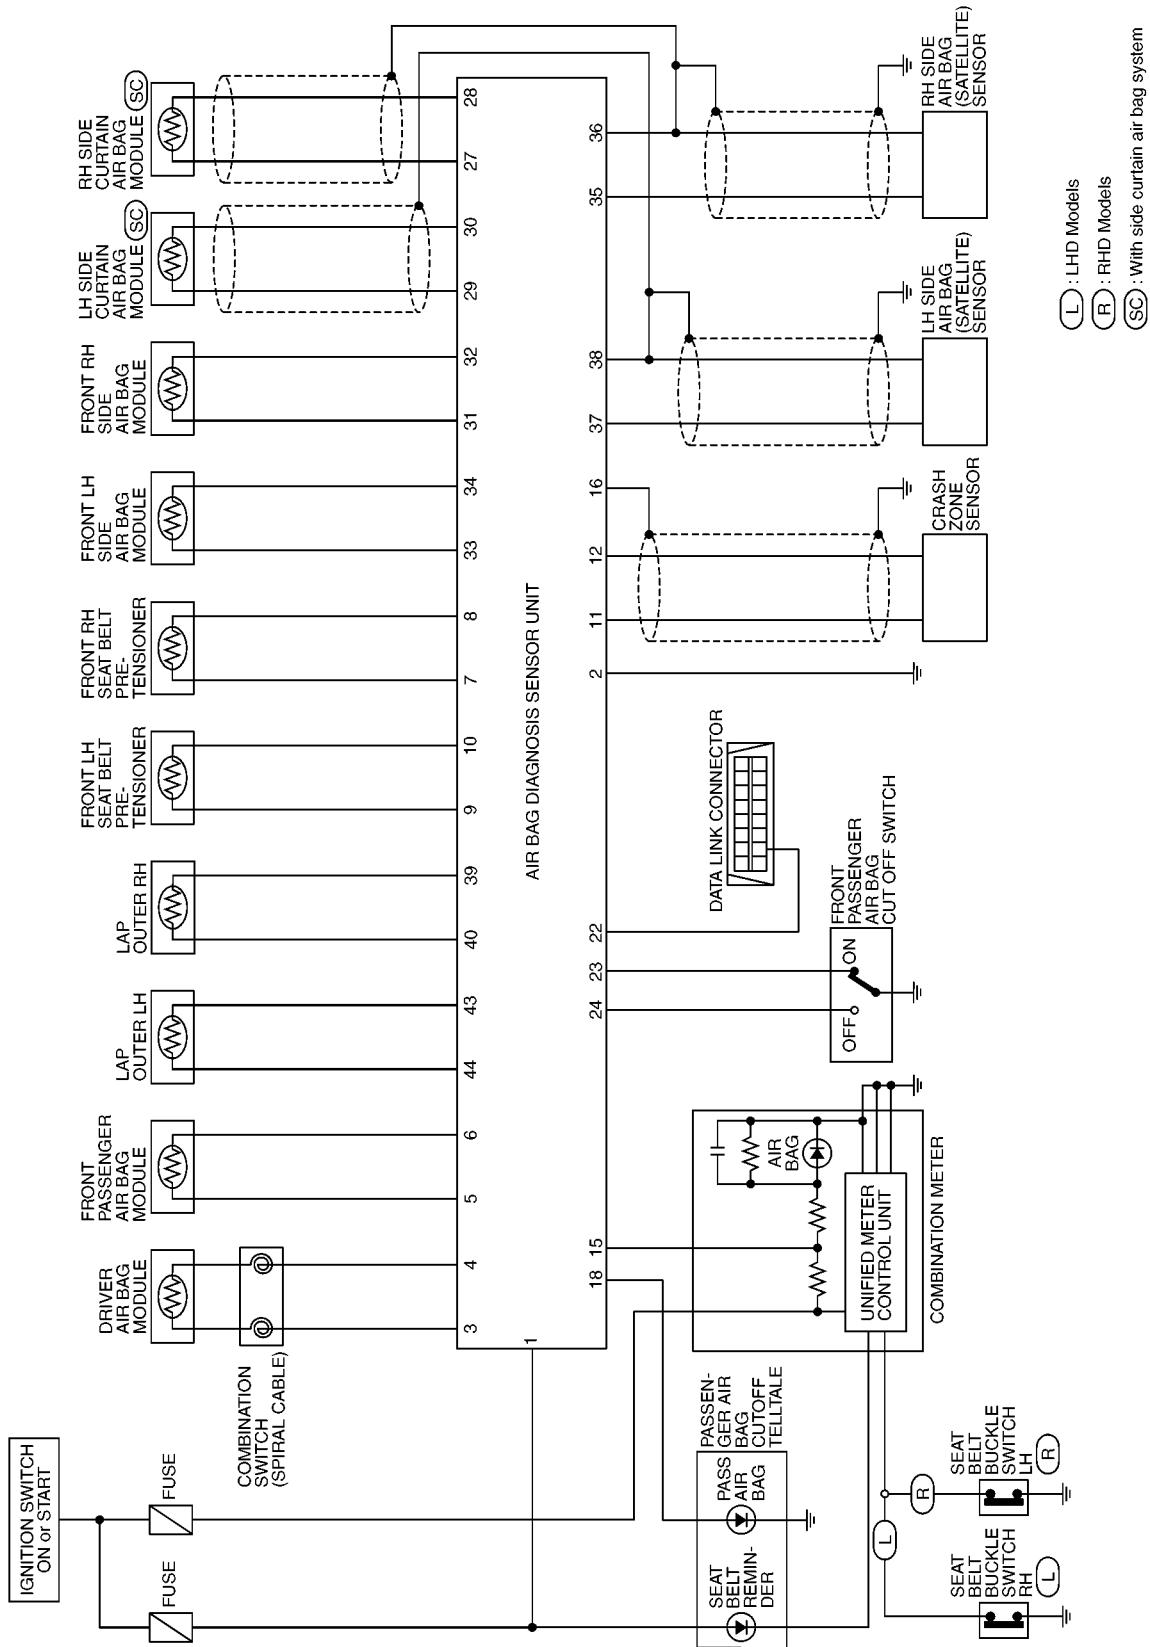


MHWA0060E

TROUBLE DIAGNOSIS

Wiring Diagram — SRS —

BHS00035

SRS-SRS-01

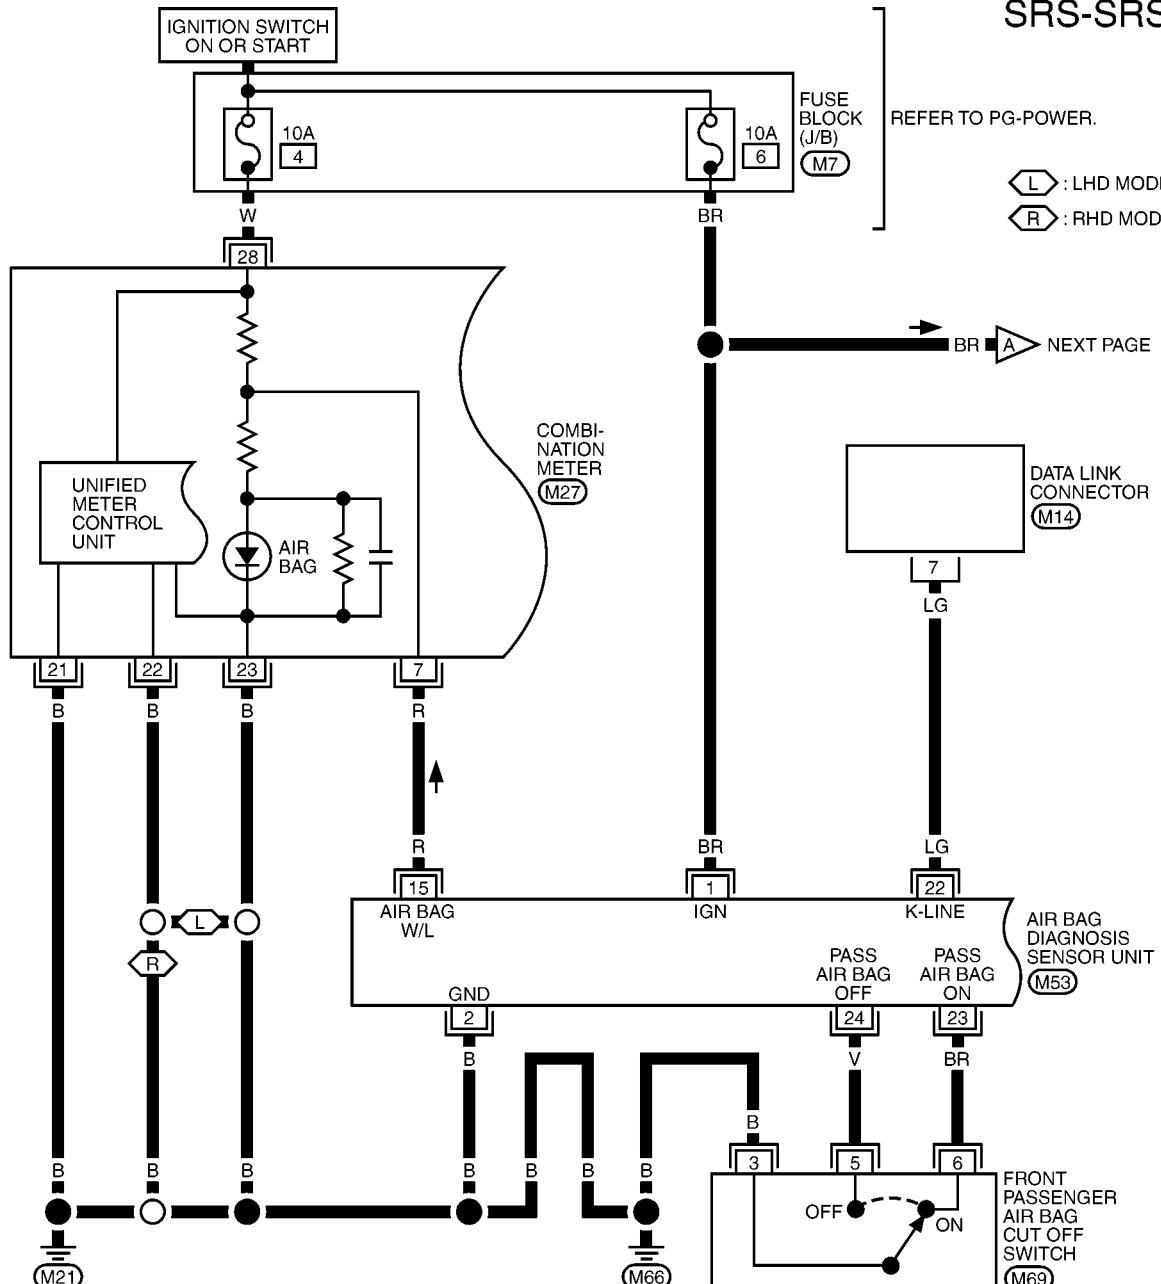


MHWA0061E

SRS-12

TROUBLE DIAGNOSIS




SRS-SRS-02

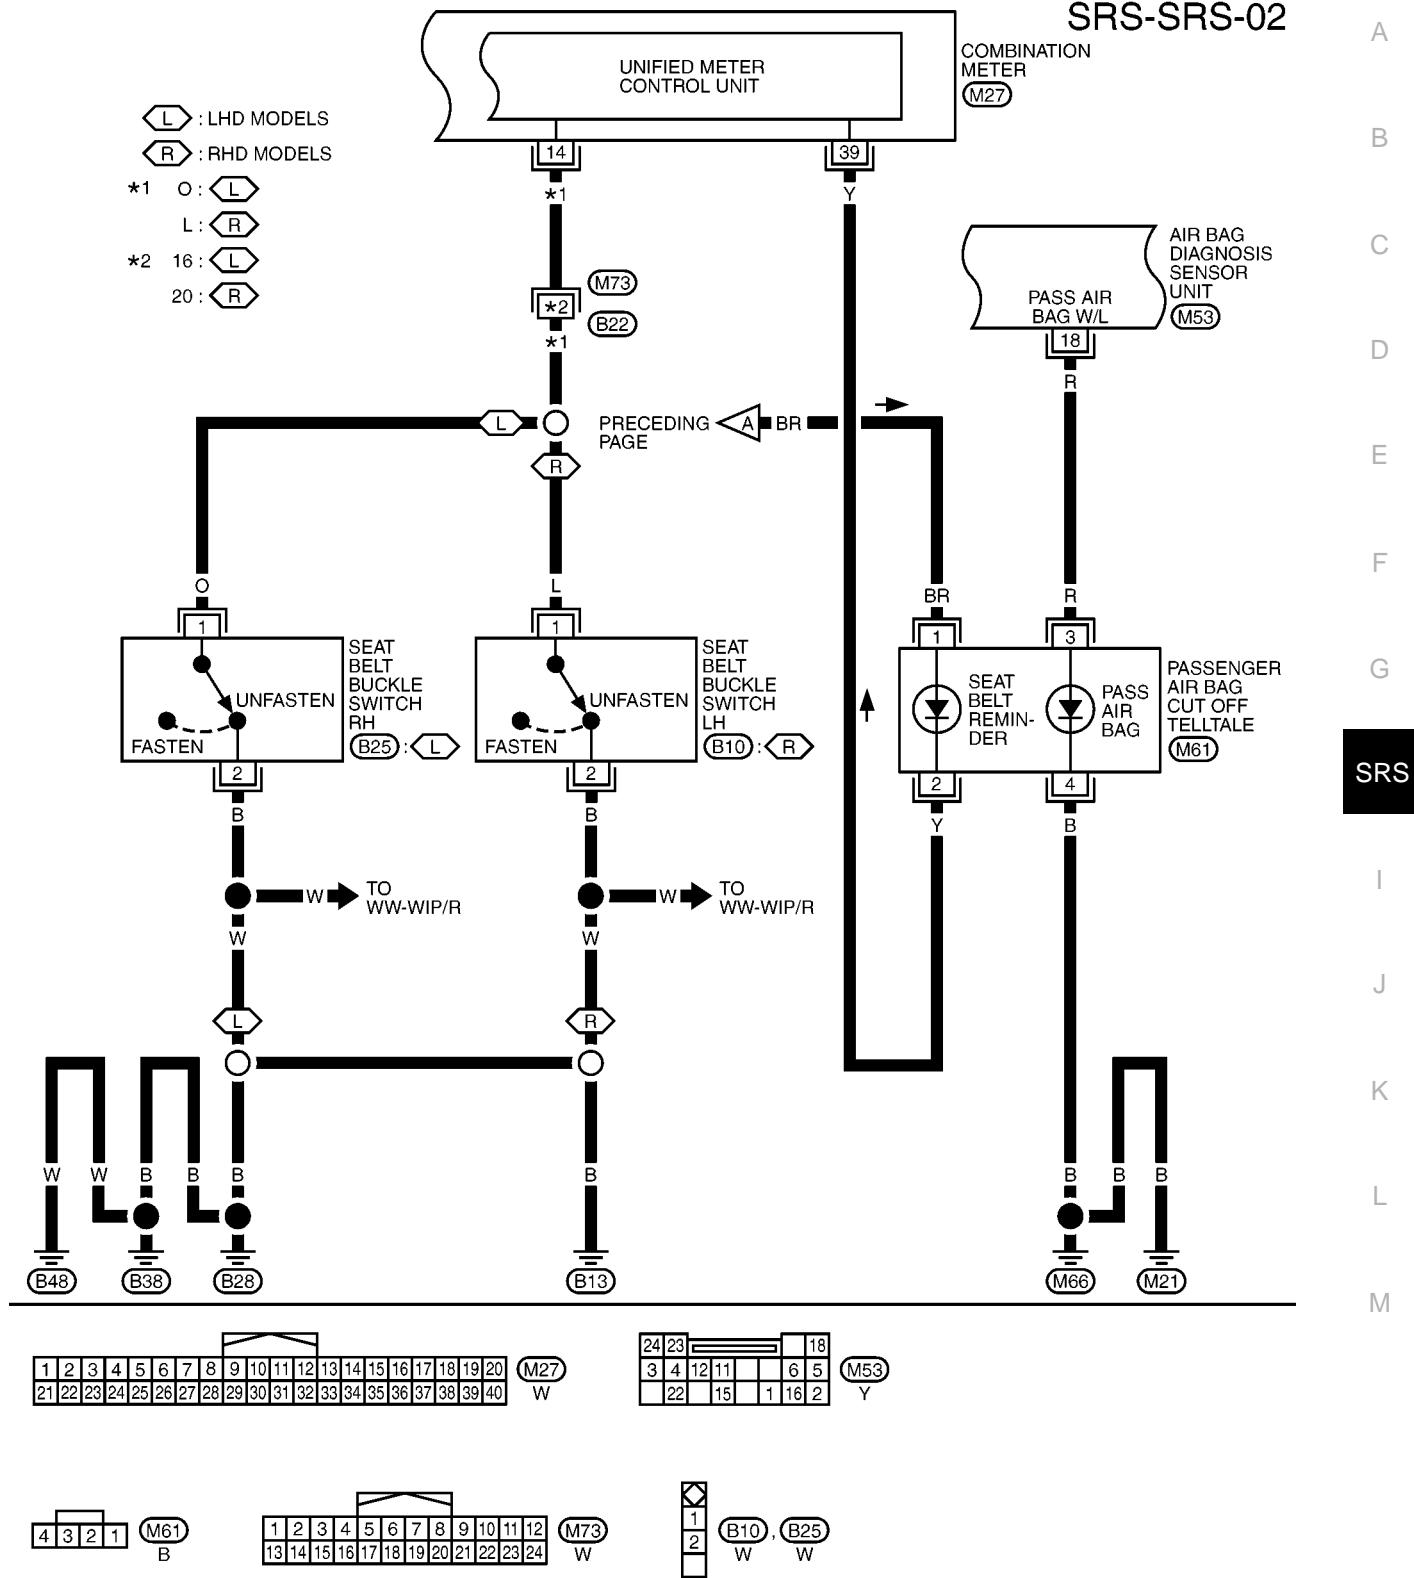

MHWA0062E

TROUBLE DIAGNOSIS

  SRS-SRS-03

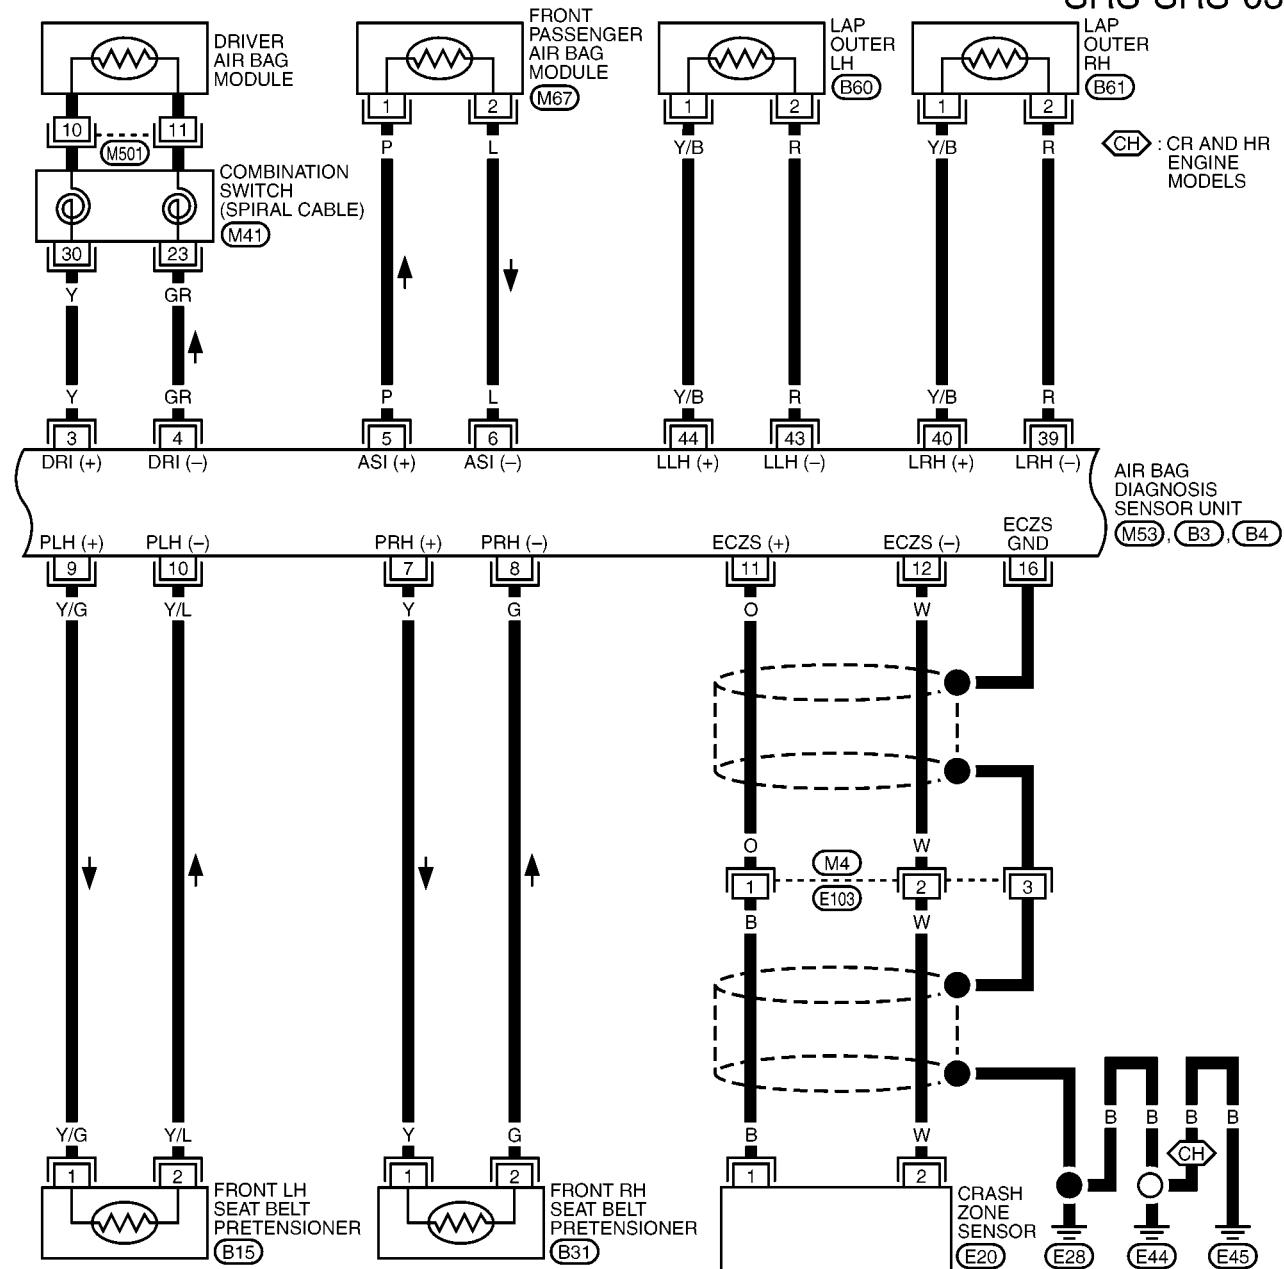


* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

MHWA0063E

SRS-14

TROUBLE DIAGNOSIS

SRS-SRS-04

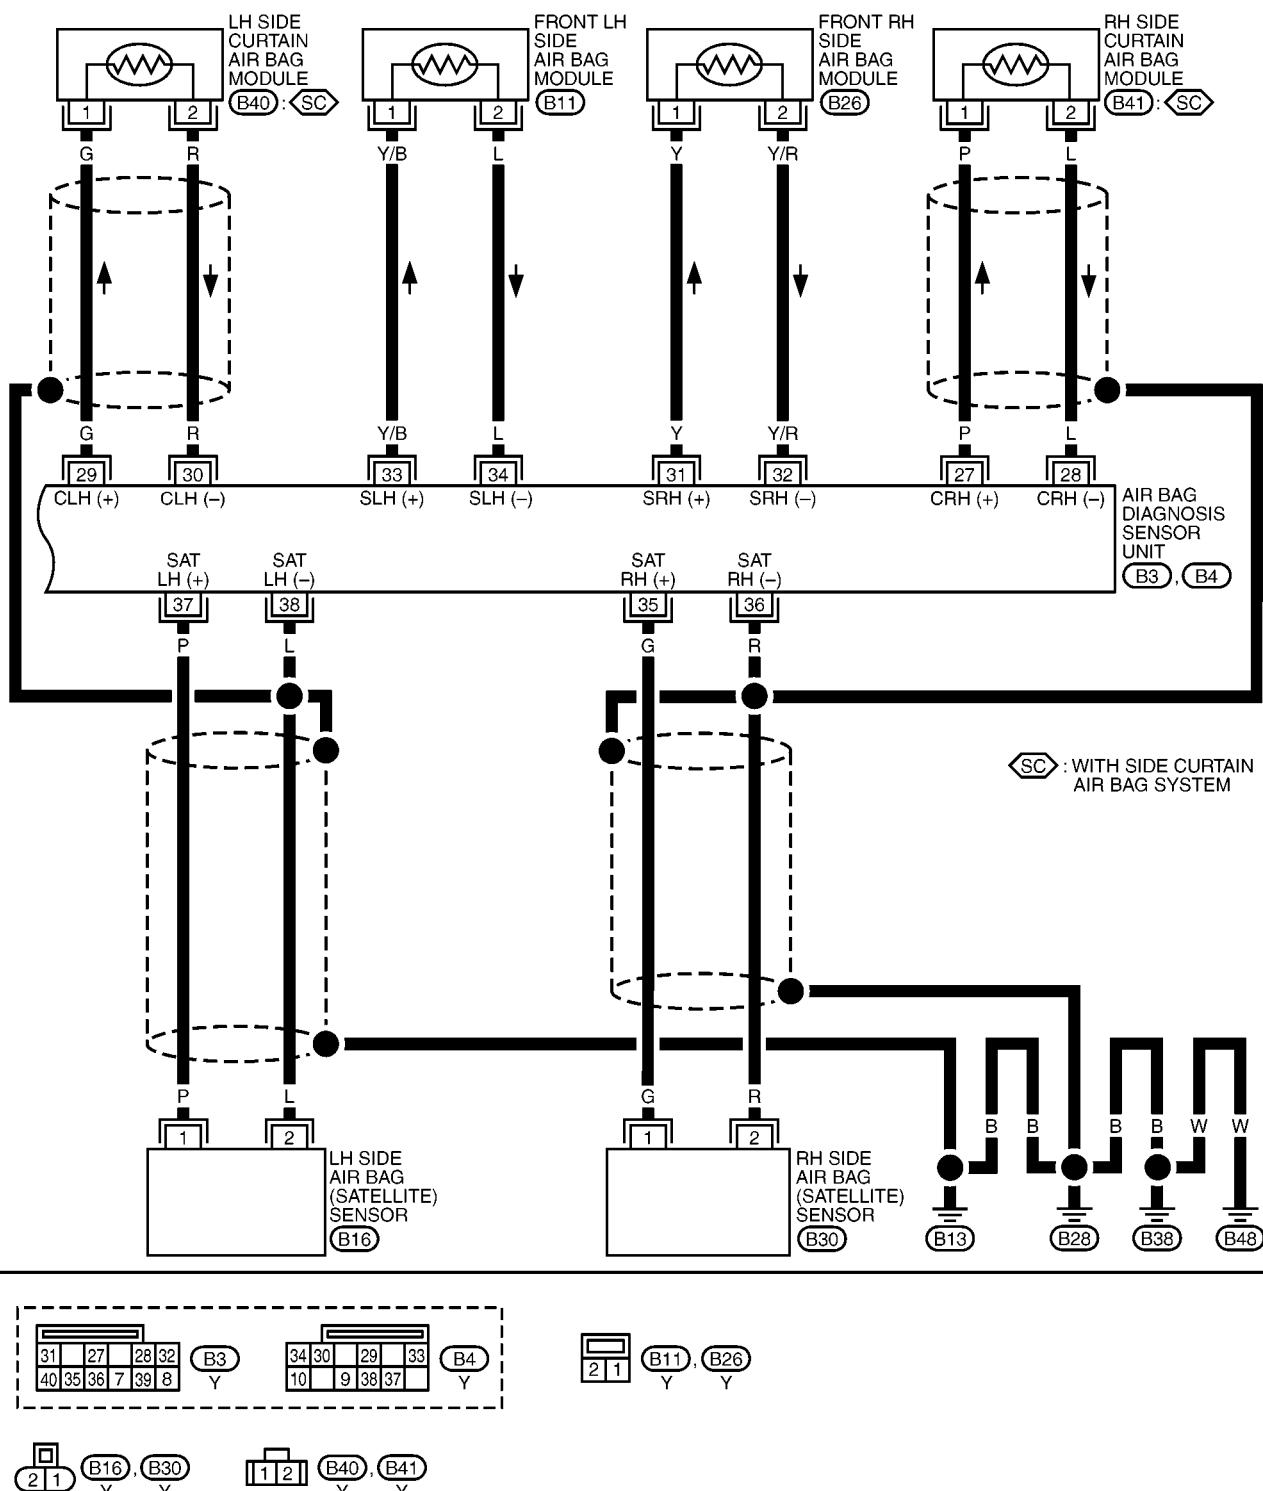

MHWA0064E

SRS-15

TROUBLE DIAGNOSIS

CONSULT-II Function

DIAGNOSIS MODE FOR CONSULT-II

BHS00036

- “SELF-DIAG [CURRENT]”
A current Self-diagnosis result (also indicated by the number of warning lamp flashes in the Diagnosis mode) is displayed on the CONSULT-II screen in real time. This refers to a malfunctioning part requiring repairs.
- “SELF-DIAG [PAST]”
Diagnosis results previously stored in the memory are displayed on the CONSULT-II screen. The stored results are not erased until memory erasing is executed.
- “TROUBLE DIAG RECORD”
With TROUBLE DIAG RECORD, diagnosis results previously erased by a reset operation can be displayed on the CONSULT-II screen.
- “ECU DISCRIMINATED NO.”
The diagnosis sensor unit for each vehicle model is assigned with its own, individual classification number. This number will be displayed on the CONSULT-II screen, as shown. When replacing the diagnosis sensor unit, refer to the part number for the compatibility. After installation, replacement with a correct unit can be checked by confirming this classification number on the CONSULT-II screen.
After repair, make sure the discriminated number of diagnosis sensor unit installed to vehicle are same. Refer to [SRS-48, "ECU DISCRIMINATED NO."](#).

Example


ECU DISCRIMINATED NO.
ECU No.
XXXXX

PHIA0218E

⑧ HOW TO CHANGE SELF-DIAGNOSIS MODE WITH CONSULT-II


From User Mode to Diagnosis Mode

After selecting “AIR BAG” on the “SELECT SYSTEM” screen, User mode automatically changes to Diagnosis mode.

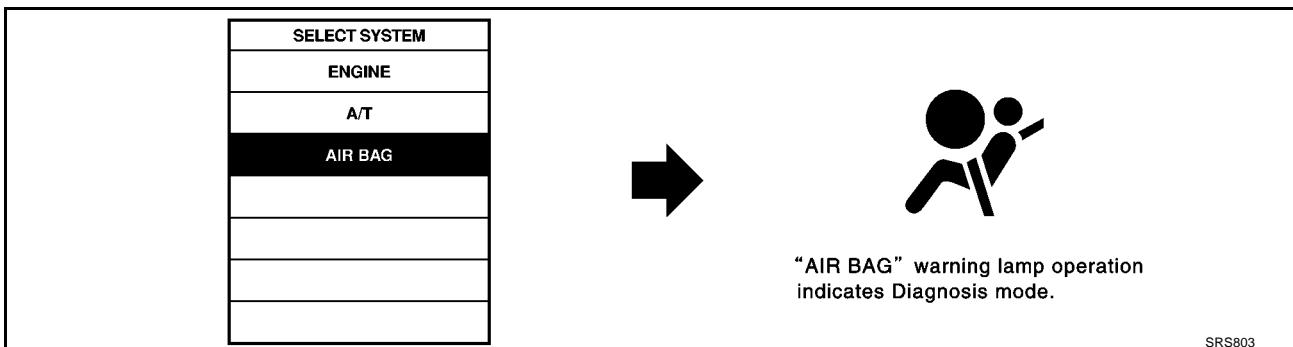

From Diagnosis Mode to User Mode

To return to User mode from Diagnosis mode, touch “BACK” key of CONSULT-II until “SELECT SYSTEM” appears, Diagnosis mode automatically changes to User mode.

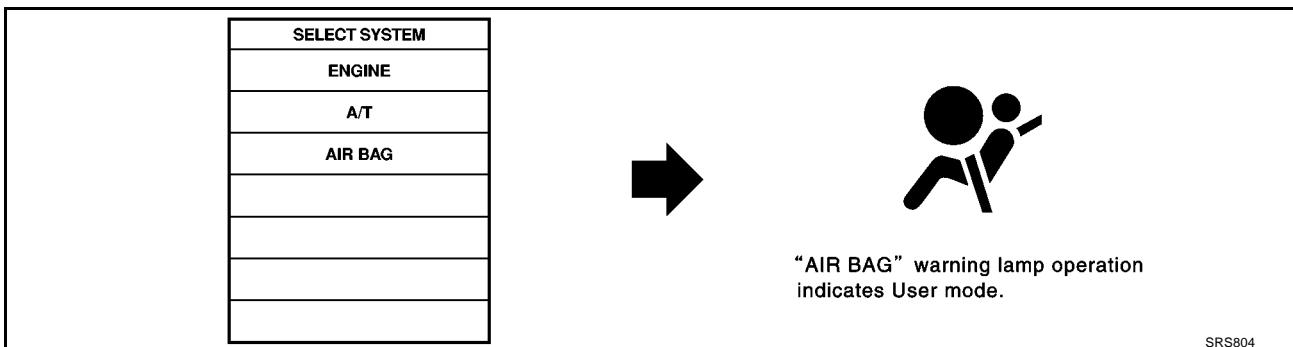


TROUBLE DIAGNOSIS

HOW TO ERASE SELF-DIAGNOSIS RESULTS

- **“SELF-DIAG [CURRENT]”**
A current Self-diagnosis result is displayed on the CONSULT-II screen in real time.
After the malfunction is repaired completely, no malfunction is detected on “SELF-DIAG [CURRENT]”.
- **“SELF-DIAG [PAST]”**
Return to the “SELF-DIAG [CURRENT]” CONSULT-II screen by touching “BACK” key of CONSULT-II and select “SELF-DIAG [CURRENT]” in SELECT DIAG MODE. Touch “ERASE” in “SELF-DIAG [CURRENT]” mode.

NOTE:
If the memory of the malfunction in “SELF-DIAG [PAST]” is not erased, the User mode shows the system malfunction by the operation of the warning lamp even if the malfunction is repaired completely.

- **“TROUBLE DIAG RECORD”**
The memory of “TROUBLE DIAG RECORD” cannot be erased.

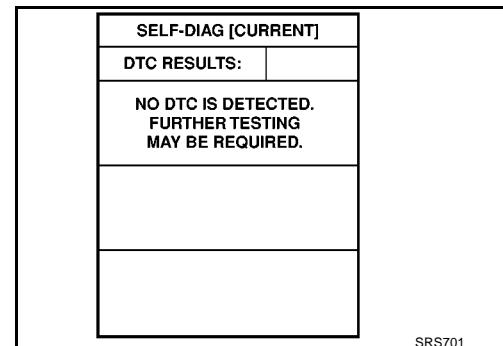


Self-Diagnosis Function (Without CONSULT-II)

BHS00037

SRS

- The reading of these results is accomplished “User mode” and “Diagnosis mode”.
- After a malfunction is repaired, turn ignition switch ON. Diagnosis mode returns to the User mode. At that time, the self-diagnostic result is cleared.

HOW TO CHANGE SELF-DIAGNOSIS MODE WITHOUT CONSULT-II

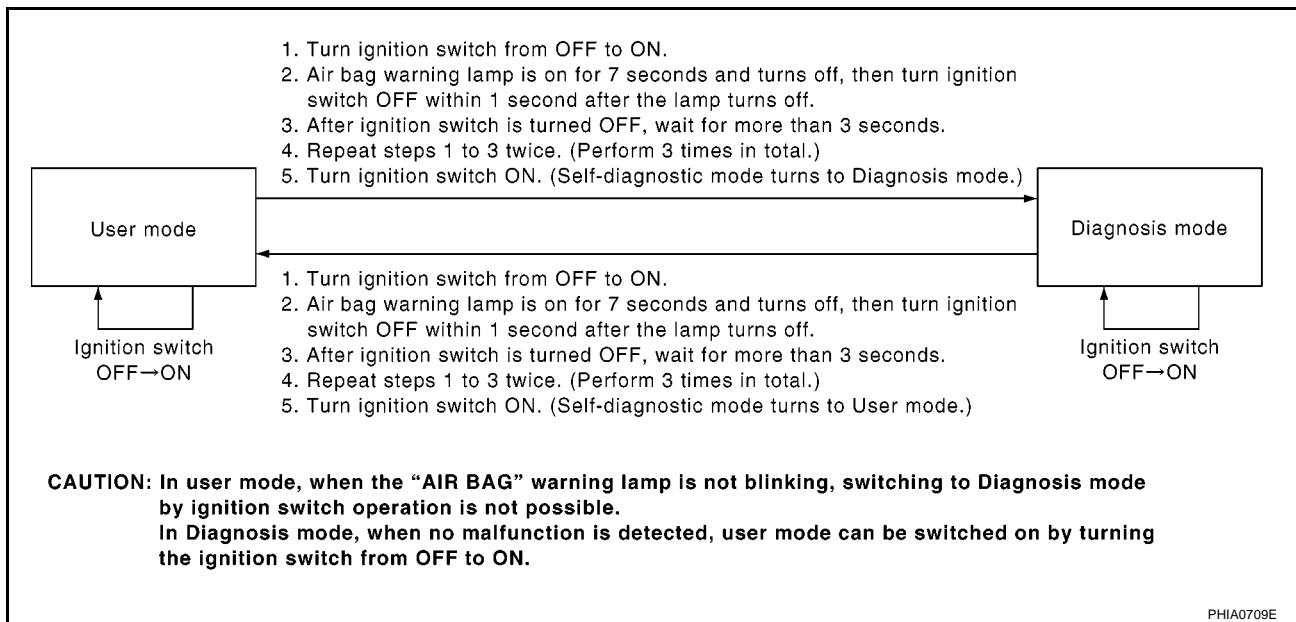

HOW TO ERASE SELF-DIAGNOSIS RESULTS

After a malfunction is repaired, turn the ignition switch OFF for at least one second, then back ON. Diagnosis mode returns to the User mode. At that time, the self-diagnostic result is cleared.

SRS Operation Check DIAGNOSTIC PROCEDURE 1

BHS00038

Checking Air Bag Operation by Using “AIR BAG” Warning Lamp — User Mode




1. Turn the ignition switch from OFF to ON, and check that the air bag warning lamp blinks.
2. Compare the SRS air bag warning lamp blinking pattern with the examples.



BF-1845D

TROUBLE DIAGNOSIS

Warning lamp examples

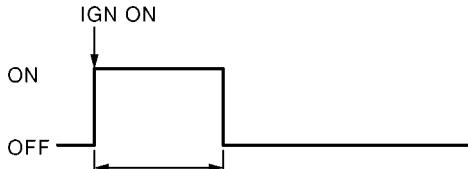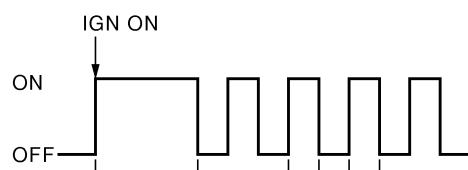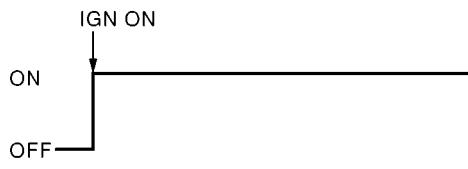“AIR BAG” warning lamp operation-User mode-	SRS condition	Reference item
 SHIA0011E	<ul style="list-style-type: none"> ● No malfunction is detected. ● No further action is necessary. 	—
 SHIA0012E	<ul style="list-style-type: none"> ● The system is malfunctioning and need to be repaired as indicated. 	Go to SRS-20, "DIAGNOSTIC PROCEDURE 2" or SRS-30, "DIAGNOSTIC PROCEDURE 6" .
 SHIA0013E	<ul style="list-style-type: none"> ● Air bag is deployed. ● Seat belt pre-tensioner is deployed. 	Go to SRS-58, "COLLISION DIAGNOSIS" .
 SHIA0013E	<ul style="list-style-type: none"> ● Diagnosis sensor unit is malfunctioning. ● Air bag power supply circuit is malfunctioning. ● SRS air bag warning lamp circuit is malfunctioning. 	Go to SRS-34, "Trouble Diagnosis: "AIR BAG" Warning Lamp Does Not Turn OFF" .
 SHIA0014E	<ul style="list-style-type: none"> ● Diagnosis sensor unit is malfunctioning. ● Air bag warning lamp circuit is malfunctioning. 	Go to SRS-35, "Trouble Diagnosis: "AIR BAG" Warning Lamp Does Not Turn ON" .

A
B
C
D
E
F
G
SRS
I
J
K
L
M

TROUBLE DIAGNOSIS

Trouble Diagnosis with CONSULT-II DIAGNOSTIC PROCEDURE 2

BHS00039

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

Refer to [GI-36, "CONSULT-II Start Procedure"](#).

1. Touch "SELF-DIAG [CURRENT]".

SELECT DIAG MODE
SELF-DIAG [CURRENT]
SELF-DIAG [PAST]
TROUBLE DIAG RECORD
ECU DISCRIMINATED NO.

SRS697

2. Diagnostic code is displayed on "SELF-DIAG [CURRENT]".

SELF-DIAG [CURRENT]
DTC RESULTS: []
DRIVER AIR BAG MODULE [OPEN]

SHIA0203E

- a. If no malfunction is detected on "SELF-DIAG [CURRENT]" even though malfunction is detected in "SRS Operation Check", check the battery voltage. If the battery voltage is less than 9 V, charge or replace the battery. [SRS-24, "DIAGNOSTIC PROCEDURE 3"](#). If the battery voltage is OK, go to [SRS-26, "DIAGNOSTIC PROCEDURE 4 \(CONTINUED FROM DIAGNOSTIC PROCEDURE 2\)"](#) diagnose the following cases:
 - Self-diagnostic result "SELF-DIAG [PAST]" (previously stored in the memory) might not be erased after repair.
 - The SRS system malfunctions intermittently.

SELF-DIAG [CURRENT]
DTC RESULTS: []
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.

SRS701

TROUBLE DIAGNOSIS

CONSULT-II DIAGNOSTIC CODE CHART (“SELF-DIAG [CURRENT]”)

Diagnostic item	Explanation	Repair order “Recheck SRS at each replacement”
NO DTC IS DETECTED.	<p>When malfunction is indicated by the “AIR BAG” warning lamp in User mode.</p> <ul style="list-style-type: none"> ● Low battery voltage (Less than 9V) ● Self-diagnostic result “SELF-DIAG [PAST]” (previously stored in the memory) might not be erased after repair. ● Intermittent malfunction has been detected in the past. <p>● No malfunction is detected.</p>	<ul style="list-style-type: none"> ● Go to SRS-24, “DIAGNOSTIC PROCEDURE 3” after charging the battery. ● Go to SRS-26, “DIAGNOSTIC PROCEDURE 4 (CONTINUED FROM DIAGNOSTIC PROCEDURE 2)”. ● Go to SRS-26, “DIAGNOSTIC PROCEDURE 5”. <p>—</p>
DRIVER AIRBAG MODULE [OPEN]	<ul style="list-style-type: none"> ● Driver air bag module circuit is open (including the spiral cable). 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace driver air bag module. (Before disposal, it must be deployed.) 4. Replace the spiral cable. 5. Replace the diagnosis sensor unit. 6. Replace the related harness.
DRIVER AIRBAG MODULE [VB-SHORT]	<ul style="list-style-type: none"> ● Driver air bag module circuit is shorted to a power supply circuit (including the spiral cable). 	
DRIVER AIRBAG MODULE [GND-SHORT]	<ul style="list-style-type: none"> ● Driver air bag module circuit is shorted to ground (including the spiral cable). 	
DRIVER AIRBAG MODULE [SHORT]	<ul style="list-style-type: none"> ● Driver air bag module circuit is shorted between lines. 	
ASSIST A/B MODULE [OPEN]	<ul style="list-style-type: none"> ● Front passenger air bag module circuit is open. 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front passenger air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
ASSIST A/B MODULE [VB-SHORT]	<ul style="list-style-type: none"> ● Front passenger air bag module circuit is shorted to a power supply circuit. 	
ASSIST A/B MODULE [GND-SHORT]	<ul style="list-style-type: none"> ● Front passenger air bag module circuit is shorted to ground. 	
ASSIST A/B MODULE [SHORT]	<ul style="list-style-type: none"> ● Front passenger air bag module circuit is shorted between lines. 	
CRASH ZONE SEN [UNIT FAIL] CRASH ZONE SEN [COMM FAIL] CRASH ZONE SEN [UNMATCH]	<ul style="list-style-type: none"> ● Crash zone sensor 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the crash zone sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SIDE MODULE LH [OPEN]	<ul style="list-style-type: none"> ● Front LH side air bag module circuit is open. 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front LH setback assembly (front LH side air bag module). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SIDE MODULE LH [VB-SHORT]	<ul style="list-style-type: none"> ● Front LH side air bag module circuit is shorted to a power supply circuit. 	
SIDE MODULE LH [GND-SHORT]	<ul style="list-style-type: none"> ● Front LH side air bag module circuit is shorted to ground. 	
SIDE MODULE LH [SHORT]	<ul style="list-style-type: none"> ● Front LH side air bag module circuit is shorted between lines. 	

A
B
C
D
E
F
G
SRS

I
J
K
L
M

TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
SIDE MODULE RH [OPEN]	● Front RH side air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front RH setback assembly (front RH side air bag module). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SIDE MODULE RH [VB-SHORT]	● Front RH side air bag module circuit is shorted to some power supply circuit.	
SIDE MODULE RH [GND-SHORT]	● Front RH side air bag module circuit is shorted to ground.	
SIDE MODULE RH [SHORT]	● Front RH side air bag module circuit is shorted between lines.	
SATELLITE SENS LH [UNIT FAIL] SATELLITE SENS LH [COMM FAIL]	● LH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the LH side air bag (Satellite) sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SATELLITE SENS RH [UNIT FAIL] SATELLITE SENS RH [COMM FAIL]	● RH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the RH side air bag (Satellite) sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
PRE-TEN FRONT LH [OPEN]	● Front LH pre-tensioner circuit is open.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace front LH seat belt. (Before disposal, it must be activated.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
PRE-TEN FRONT LH [VB-SHORT]	● Front LH pre-tensioner circuit is shorted to a power supply circuit.	
PRE-TEN FRONT LH [GND-SHORT]	● Front LH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT LH [SHORT]	● Front LH pre-tensioner circuit is shorted between lines.	
PRE-TEN FRONT RH [OPEN]	● Front RH pre-tensioner circuit is shorted to a power supply circuit.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace front RH seat belt. (Before disposal, it must be activated.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
PRE-TEN FRONT RH [VB-SHORT]	● Front RH pre-tensioner circuit is shorted to a power supply circuit.	
PRE-TEN FRONT RH [GND-SHORT]	● Front RH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT RH [SHORT]	● Front RH pre-tensioner circuit is shorted between lines.	
CURTAIN MODULE LH [OPEN]	● LH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace LH side curtain air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
CURTAIN MODULE LH [VB-SHORT]	● LH side curtain air bag module circuit is shorted to some power supply circuits.	
CURTAIN MODULE LH [GND-SHORT]	● LH side curtain air bag module circuit is shorted to ground.	
CURTAIN MODULE LH [SHORT]	● LH side curtain air bag module circuit is shorted between lines.	

TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
CURTAIN MODULE RH [OPEN]	● RH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace RH side curtain air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
CURTAIN MODULE RH [VB-SHORT]	● RH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN MODULE RH [GND-SHORT]	● RH side curtain air bag module circuit is shorted to ground.	
CURTAIN MODULE RH [SHORT]	● RH side curtain air bag module circuit is shorted between lines.	
CONTROL UNIT	● Diagnosis sensor unit is malfunctioning.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the diagnosis sensor unit.
PASS AIR BAG DEACT SW	● Front passenger air bag cut OFF switch unit is malfunctioning.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the cut OFF switch. 4. Replace the diagnosis sensor unit.
PASS AIR BAG INDICATOR CKT	● Front passenger air bag OFF indicator circuit is open, or shorted each other or to ground.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the cut OFF indicator. 4. Replace the diagnosis sensor unit.

NOTE:

Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using air bag warning lamp or CONSULT-II each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.

TROUBLE DIAGNOSIS


DIAGNOSTIC PROCEDURE 3

Final checking after repairing SRS by using CONSULT-II — Diagnosis mode

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. Touch "SELF-DIAG [CURRENT]".

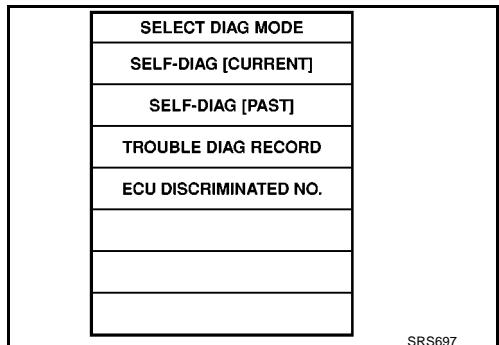


SRS697

a.

If no malfunction is detected on "SELF-DIAG [CURRENT]", repair of SRS is completed. Go to step 2.

If any malfunction is detected on "SELF-DIAG [CURRENT]", the malfunctioning part is not repaired completely or another malfunctioning part is detected. Go to [SRS-20, "DIAGNOSTIC PROCEDURE 2"](#), and repair malfunctioning part completely.

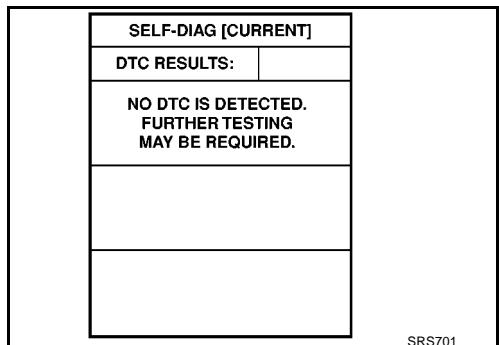


SRS701

2. Touch "ERASE".

NOTE:


Touch "ERASE" to clear the memory of the malfunction ("SELF-DIAG [PAST]").

If the memory of the malfunction in "SELF-DIAG [PAST]" is not erased, the User mode shows the system malfunction by the operation of the warning lamp even if the malfunction is repaired completely.

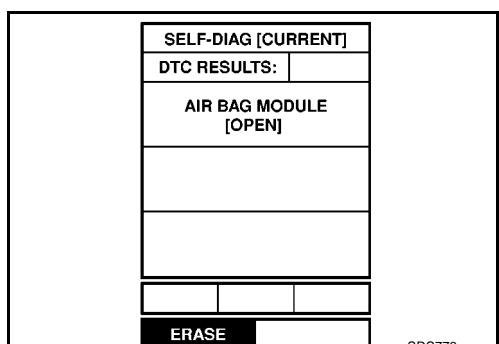

SRS773

3. Touch "BACK" key of CONSULT-II to "SELECT DIAG MODE" screen. Touch "SELF-DIAG [PAST]".

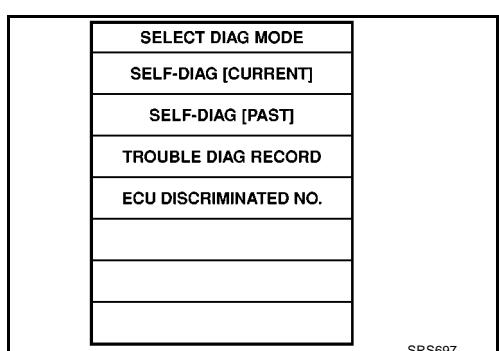

SRS697

TROUBLE DIAGNOSIS

4. Check that no malfunction is detected on "SELF-DIAG [PAST]".
5. Touch "BACK" key of CONSULT-II until "SELECT SYSTEM" appears in order to return to User mode from Diagnosis mode.
6. Turn ignition switch OFF then turn off and disconnect CONSULT-II. Go to [SRS-18, "Checking Air Bag Operation by Using "AIR BAG" Warning Lamp — User Mode"](#).

SELF-DIAG [PAST]
DTC RESULTS: <input type="text"/>
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.

SRS702

A
B
C
D

E

F

G

SRS

I

J

K

L

M

TROUBLE DIAGNOSIS

DIAGNOSTIC PROCEDURE 4 (CONTINUED FROM DIAGNOSTIC PROCEDURE 2)

Inspecting SRS malfunctioning record

1. CONSIDER POSSIBILITY OF NOT ERASING SELF-DIAGNOSTIC RESULT AFTER REPAIRING

Is it the first time for maintenance of SRS?

YES or NO

YES >> Go to [SRS-20, "DIAGNOSTIC PROCEDURE 2"](#) .

NO >> Self-diagnostic result "SELF-DIAG [PAST]" (previously stored in the memory) might not be erased after repair. Go to [SRS-24, "DIAGNOSTIC PROCEDURE 3"](#) .


DIAGNOSTIC PROCEDURE 5

Inspecting SRS intermittent malfunction by using CONSULT-II — Diagnosis mode


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunction might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. Touch "SELF-DIAG [PAST]".

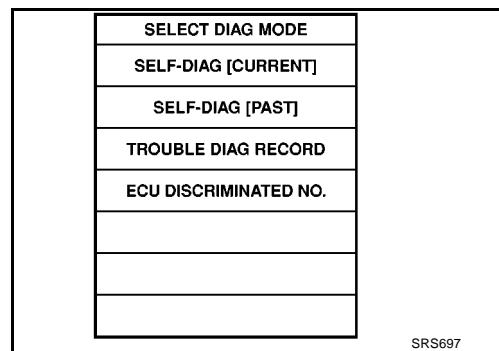

- a. If diagnostic codes are displayed on "SELF-DIAG [PAST]", go to step 5.

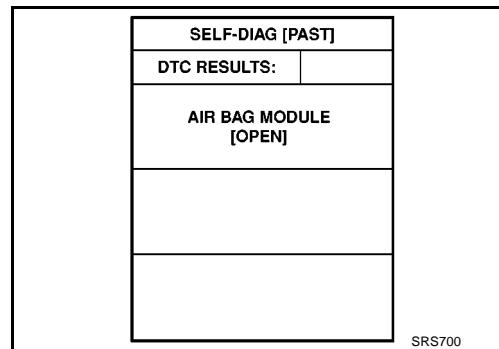

2. If no malfunction is detected on "SELF-DIAG [PAST]", touch "BACK" and go back to "SELECT DIAG MODE".

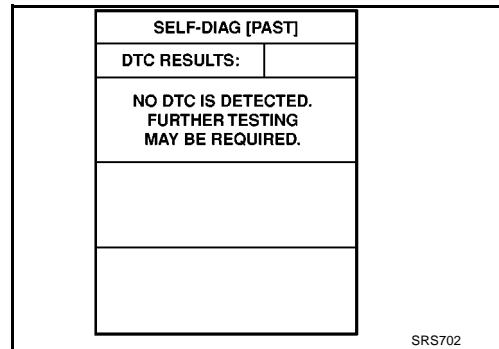

TROUBLE DIAGNOSIS

3. Touch "TROUBLE DIAG RECORD".

NOTE:

With "TROUBLE DIAG RECORD", diagnosis results previously erased by a reset operation can be displayed.

SELECT DIAG MODE
SELF-DIAG [CURRENT]
SELF-DIAG [PAST]
TROUBLE DIAG RECORD
ECU DISCRIMINATED NO.

SRS697

4. Diagnostic code is displayed on "TROUBLE DIAG RECORD".

5. Touch "PRINT".

6. Compare diagnostic codes to [SRS-27, "CONSULT-II Diagnostic Code Chart \("SELF-DIAG \[PAST\]" or "TROUBLE DIAG RECORD"\)](#).

7. Touch "BACK" key of CONSULT-II until "SELECT SYSTEM" appears.

8. Turn ignition switch OFF, then turn off and disconnect CONSULT-II, and both battery cables.

9. Repair the system as outlined by the "Repair order" in "Intermittent Malfunction Diagnostic Code Chart", that corresponds to the self-diagnostic result. For replacement procedure of component parts, refer to the Removal and Installation procedure for the appropriate component.

10. Go to [SRS-24, "DIAGNOSTIC PROCEDURE 3"](#), for final checking.

TROUBLE DIAG RECORD
DTC RESULTS: <input type="text"/>
DRIVER AIR BAG MODULE [OPEN]

SRIA0182E

CONSULT-II Diagnostic Code Chart ("SELF-DIAG [PAST]" or "TROUBLE DIAG RECORD")

Diagnostic item	Explanation		Repair order "Recheck SRS at each replacement"
NO DTC IS DETECTED.	When malfunction is indicated by the "AIR BAG" warning lamp in User mode.	● Low battery voltage (Less than 9V)	● Go to SRS-24, "DIAGNOSTIC PROCEDURE 3" .
	● No malfunction is detected.		● Go to SRS-24, "DIAGNOSTIC PROCEDURE 3" .
DRIVER AIRBAG MODULE [OPEN]	● Driver air bag module circuit is open (including the spiral cable).		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace driver air bag module (Before disposal, it must be deployed.), diagnosis sensor unit and spiral cable.
DRIVER AIRBAG MODULE [VB-SHORT]	● Driver air bag module circuit is shorted to a power supply circuit (including the spiral cable).		
DRIVER AIRBAG MODULE [GND-SHORT]	● Driver air bag module circuit is shorted to ground (including the spiral cable).		
DRIVER AIRBAG MODULE [SHORT]	● Driver air bag module circuit is shorted between lines.		
ASSIST A/B MODULE [OPEN]	● Front passenger air bag module circuit is open.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and front passenger air bag module (Before disposal, it must be deployed.).
ASSIST A/B MODULE [VB-SHORT]	● Front passenger air bag module circuit is shorted to a power supply circuit.		
ASSIST A/B MODULE [GND-SHORT]	● Front passenger air bag module circuit is shorted to ground.		
ASSIST A/B MODULE [SHORT]	● Front passenger air bag module circuit is shorted between lines.		

TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
CRASH ZONE SEN [UNIT FAIL] CRASH ZONE SEN [COMM FAIL]	● Crash zone sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace crash zone sensor and diagnosis sensor unit.
SIDE MODULE LH [OPEN]	● Front LH side air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage.
SIDE MODULE LH [VB-SHORT]	● Front LH side air bag module circuit is shorted to a power supply circuit.	3. If the harness check result is OK, replace the diagnosis sensor unit and LH side air bag module. (Before disposal, it must be deployed.).
SIDE MODULE LH [GND-SHORT]	● Front LH side air bag module circuit is shorted to ground.	
SIDE MODULE LH [SHORT]	● Front LH side air bag module circuit is shorted between lines.	
SIDE MODULE RH [OPEN]	● Front RH side air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage.
SIDE MODULE RH [VB-SHORT]	● Front RH side air bag module circuit is shorted to a power supply circuit.	3. If the harness check result is OK, replace the diagnosis sensor unit and RH side air bag module (Before disposal, it must be deployed.).
SIDE MODULE RH [GND-SHORT]	● Front RH side air bag module circuit is shorted to ground.	
SIDE MODULE RH [SHORT]	● Front RH side air bag module circuit is shorted between lines.	
SATELLITE SENS LH [UNIT FAIL] SATELLITE SENS LH [COMM FAIL]	● LH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and LH side air bag (Satellite) sensor.
SATELLITE SENS RH [UNIT FAIL] SATELLITE SENS RH [COMM FAIL]	● RH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and RH side air bag (Satellite) sensor.
PRE-TEN FRONT LH [OPEN]	● Front LH pre-tensioner circuit is open.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage.
PRE-TEN FRONT LH [VB-SHORT]	● Front LH pre-tensioner circuit is shorted to a power supply circuit.	3. If the harness check result is OK, replace the diagnosis sensor unit and front LH seat belt (Before disposal, it must be activated.).
PRE-TEN FRONT LH [GND-SHORT]	● Front LH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT LH [SHORT]	● Front LH pre-tensioner circuit is shorted between lines.	

TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
PRE-TEN FRONT RH [OPEN]	● Front RH pre-tensioner circuit is open.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and front RH seat belt. (Before disposal, it must be activated.)
PRE-TEN FRONT RH [VB-SHORT]	● Front RH pre-tensioner circuit is shorted to a power supply circuit.	
PRE-TEN FRONT RH [GND-SHORT]	● Front RH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT RH [SHORT]	● Front RH pre-tensioner circuit is shorted between lines.	
CURTAIN MODULE LH [OPEN]	● LH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and LH side curtain air bag module. (Before disposal, it must be deployed.)
CURTAIN MODULE LH [VB-SHORT]	● LH side curtain air bag module circuit is shorted to a power supply circuits.	
CURTAIN MODULE LH [GND-SHORT]	● LH side curtain air bag module circuit is shorted to ground.	
CURTAIN MODULE RH [OPEN]	● RH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and RH side curtain air bag module. (Before disposal, it must be deployed.)
CURTAIN MODULE RH [VB-SHORT]	● RH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN MODULE RH [GND-SHORT]	● RH side curtain air bag module circuit is shorted to ground.	
CURTAIN MODULE RH [SHORT]	● RH side curtain air bag module circuit is shorted between lines.	
CONTROL UNIT	● Diagnosis sensor unit is malfunctioning.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the diagnosis sensor unit.
PASS A/B DEACT SW	● Front passenger air bag cut OFF switch unit is malfunctioning.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the cut OFF switch. 4. Replace diagnosis sensor unit.
PASS A/B INDCTR CKT	● Front passenger air bag OFF indicator circuit is open, or shorted each other or to ground.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the cut OFF indicator. 4. Replace diagnosis sensor unit.

A
B
C
D
E
F
G
SRS
I
J
K
L
M

TROUBLE DIAGNOSIS

Trouble Diagnosis without CONSULT-II DIAGNOSTIC PROCEDURE 6

BHS0003A

Inspecting SRS Malfunctioning Parts by Using "AIR BAG" Warning Lamp—Diagnosis Mode

NOTE:

SRS will not enter Diagnosis mode if no malfunction is detected in User mode.


1. Turn ignition switch ON.
2. After "AIR BAG" warning lamp lights for 7 seconds, turn ignition switch OFF within 1 second.
3. Wait more than 3 seconds.
4. Repeat the steps 1 to 3 two times.
5. Turn ignition switch ON.

SRS is now in Diagnosis mode.

"AIR BAG" warning lamp operates in Diagnosis mode as follows:


WARNING LAMP FLASH CODE CHART

<Diagnosis results (previously stored in the memory) might not be erased after repair or intermittent malfunctions have been detected in the past.>

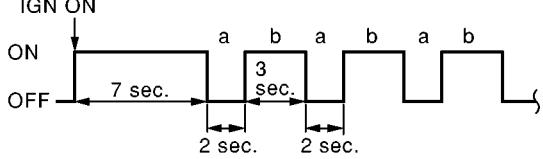Flash pattern	Repair order
a through b are repeated. 	1. Go to DIAGNOSTIC PROCEDURES 2 and 3.


SHIA0026E

<Driver air bag module>

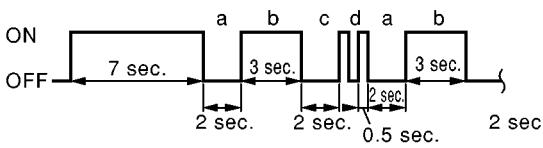Flash pattern	Repair order
a through d are repeated. d: Two flashes indicates malfunctioning driver air bag module circuit. 	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the spiral cable. 4. Replace driver air bag module. (Before disposal, it must be deployed.) 5. Replace the diagnosis sensor unit. 6. Replace the related harness.

PHIA0185E

<Diagnosis sensor unit>

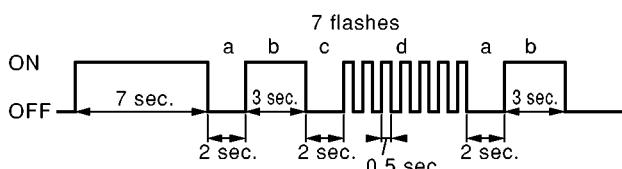Flash pattern	Repair order
a through d are repeated. d: Seven flashes indicate malfunctioning diagnosis sensor unit circuit. 	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace the diagnosis sensor unit. 4. Replace the related harness.

SHIA0028E

TROUBLE DIAGNOSIS

<Front passenger air bag module>

Flash pattern	Repair order
<p>a through d are repeated. d: Eight flashes indicate malfunctioning front passenger air bag module circuit.</p>	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front passenger air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0029E

<Crash zone sensor>

Flash pattern	Repair order
<p>a through d are repeated. d: Six flashes indicate malfunctioning crash zone sensor circuit.</p>	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the crash zone sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0083E

<Front RH seat belt pre-tensioner>

Flash pattern	Repair order
<p>a through d are repeated. d: One flash indicates malfunctioning front RH seat belt pre-tensioner circuit.</p>	<ol style="list-style-type: none"> 1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace front RH seat belt pre-tensioner. (Before disposal, it must be activated.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0030E


<Front LH seat belt pre-tensioner>

Flash pattern	Repair order
<p>a through d are repeated. d: Three flashes indicate malfunctioning front LH seat belt pre-tensioner circuit.</p>	<ol style="list-style-type: none"> 1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace front LH seat belt pre-tensioner. (Before disposal, it must be activated.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0031E


TROUBLE DIAGNOSIS

<RH side air bag (Satellite) sensor>

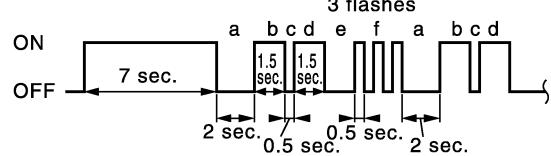Flash pattern	Repair order
<p>a through f are repeated.</p> <p>f: Three flashes indicate malfunctioning RH side air bag (Satellite) sensor circuit.</p> 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the RH side air bag (Satellite) sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.


SHIA0032E

<LH side air bag (Satellite) sensor>

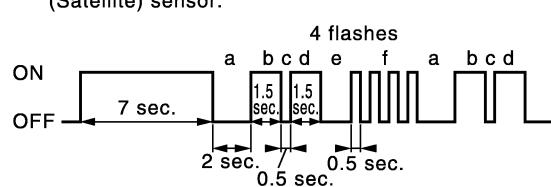Flash pattern	Repair order
<p>a through f are repeated.</p> <p>f: Four flashes indicate malfunctioning LH side air bag (Satellite) sensor circuit.</p> 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the LH side air bag (Satellite) sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.


SHIA0033E

<Front RH side air bag module>

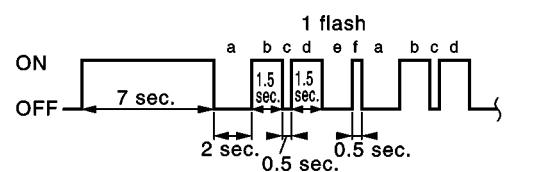Flash pattern	Repair order
<p>a through f are repeated.</p> <p>f: One flash indicate malfunctioning front RH side air bag module circuit.</p> 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front RH side air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0034E


<Front LH side air bag module>

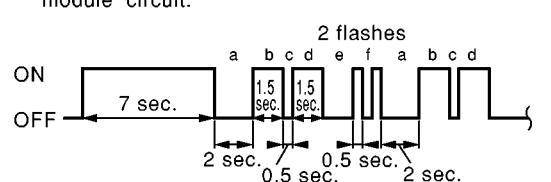Flash pattern	Repair order
<p>a through f are repeated.</p> <p>f: Two flashes indicate malfunctioning front LH side air bag module circuit.</p> 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front LH side air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0035E

TROUBLE DIAGNOSIS

<RH side curtain air bag module>

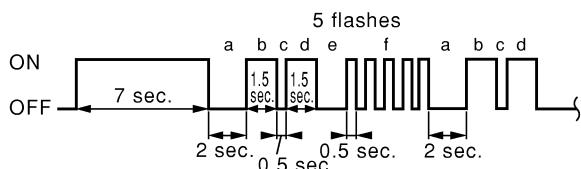Flash pattern	Repair order
<p>a through f are repeated. f: Five flashes indicate malfunctioning RH side curtain air bag module circuit.</p> 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace RH side curtain air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0084E

A

B

C

D


E

F

G

SRS

<LH side curtain air bag module>

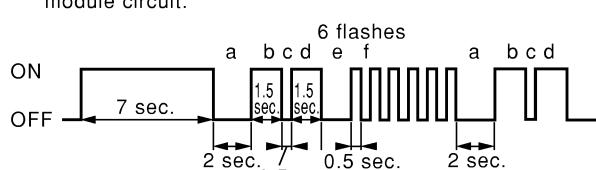Flash pattern	Repair order
<p>a through f are repeated. f: Six flashes indicate malfunctioning LH side curtain air bag module circuit.</p> 	<ol style="list-style-type: none"> 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace LH side curtain air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.

SHIA0086E

I

J

K

L

M

TROUBLE DIAGNOSIS

Trouble Diagnosis: "AIR BAG" Warning Lamp Does Not Turn OFF DIAGNOSTIC PROCEDURE 7

BHS0003B

1. CHECK THE DEPLOYMENT OF AIR BAG MODULE

Is air bag module deployed?

YES or NO

YES >> Refer to [SRS-58, "COLLISION DIAGNOSIS"](#) .

NO >> GO TO 2.

2. CHECK THE AIR BAG FUSE

Check 10A fuse [No.3, located in fuse block (J/B)].

Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

OK >> GO TO 4.

NG >> GO TO 3

3. CHECK AIR BAG FUSE AGAIN

Replace "AIR BAG" fuse and turn ignition switch ON.

Does the "AIR BAG" fuse blow again?

YES >> Repair or replace main harness.

NO >> **INSPECTION END**

4. CHECK DIAGNOSIS SENSOR UNIT




Connect CONSULT-II and touch "START".

Is "AIR BAG" displayed on CONSULT-II?

YES or NO

YES >> GO TO 5.

NO >> Visually check the wiring harness connection of diagnosis sensor unit. If the harness connection check result is OK, replace diagnosis sensor unit.

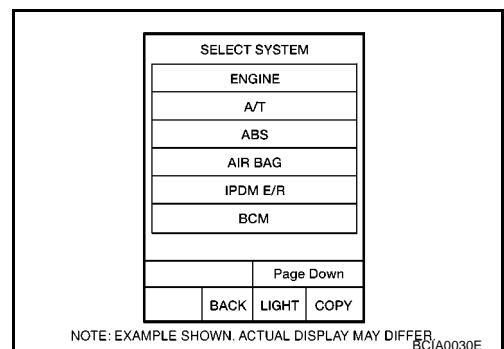

5. CHECK HARNESS CONNECTION

Is harness connection between warning lamp and diagnosis sensor unit OK?

OK or NG

OK >> Replace diagnosis sensor unit.

NG >> Connect "AIR BAG" warning lamp and diagnosis sensor unit connector properly. If "AIR BAG" warning lamp still does not go off, replace harness.

TROUBLE DIAGNOSIS

Trouble Diagnosis: "AIR BAG" Warning Lamp Does Not Turn ON

DIAGNOSTIC PROCEDURE 8

BHS0003C

1. CHECK "METER" FUSE

Check 10A fuse [No.2, located in fuse block (J/B)].

Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

OK or NG

OK >> GO TO 3.
NG >> GO TO 2.

2. CHECK "METER" FUSE AGAIN

Replace 10A fuse [No.2, located in fuse block (J/B)] and turn ignition switch ON.

Does the meter fuse blow again?

YES >> Repair or replace the related harness.
NO >> **INSPECTION END**

3. CHECK HARNESS CONNECTION BETWEEN DIAGNOSIS SENSOR UNIT AND COMBINATION METER

Disconnect diagnosis sensor unit connector and turn ignition switch ON.

Does "AIR BAG" warning lamp turn ON?

YES or NO

YES >> Replace diagnosis sensor unit.
NO >> Replace combination meter assembly.

A

B

C

D

E

F

G

SRS

I

J

K

L

M

DRIVER AIR BAG MODULE


DRIVER AIR BAG MODULE

PFP:K8510

Removal and Installation

BHS0003D

SEC. 484

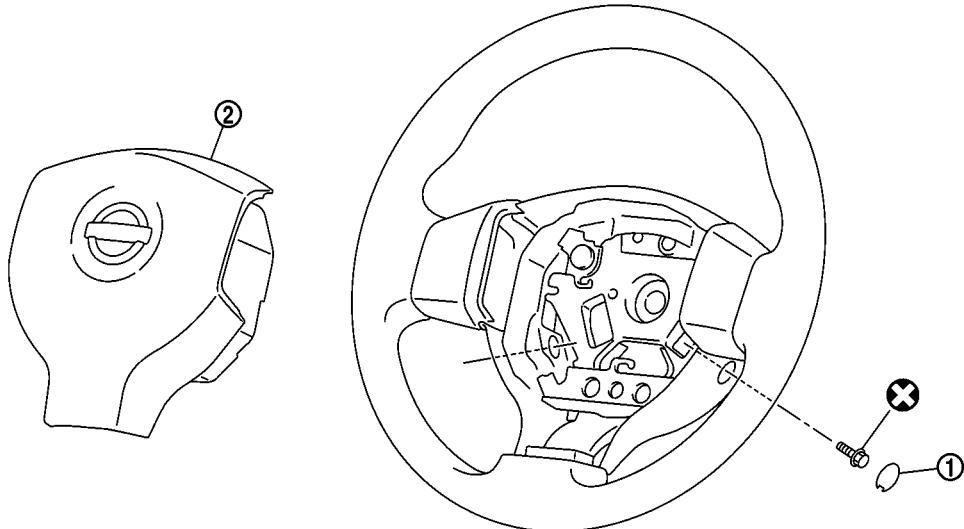

PHIA1081J

1. Side lid

2. Driver air bag module



REMOVAL

CAUTION:

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Always work from the side of driver air bag module.
- Do not use air tools or electric tools for servicing.

- Remove the side lids.
- Remove the right and left side special bolts.

Special bolt :  9.3 N·m (0.95 kg·m, 82.5 in·lb)
(TORX T30)

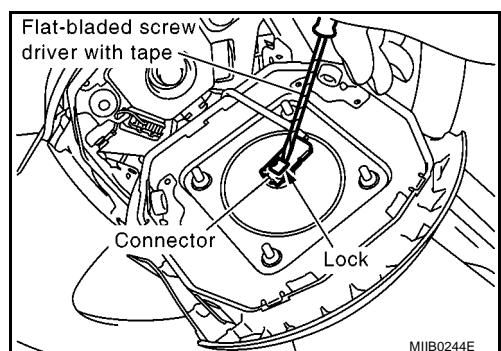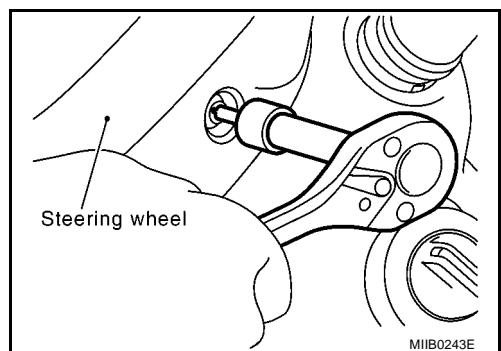

- Disconnect the steering wheel switch sub-harness connector.
- Disconnect the air bag harness connector, and remove the driver air bag module.


CAUTION:

- For removing and installing air bag harness connector, insert a flat-bladed screwdriver wrapped with a tape into lock, and raise lock to remove connector.
- Install connector with lock raised, and push lock into connector.
- Confirm the lock is fully pushed in after mounting connector.

DRIVER AIR BAG MODULE

CAUTION:

- Always place driver air bag module with pad side facing upward.
- Do not insert any foreign objects (screwdriver, etc.) into driver air bag module.
- Do not attempt to disassemble driver air bag module.
- Do not use old bolts after removal; replace with new ones.
- Do not expose the driver air bag module to temperatures exceeding 90°C (194°F).

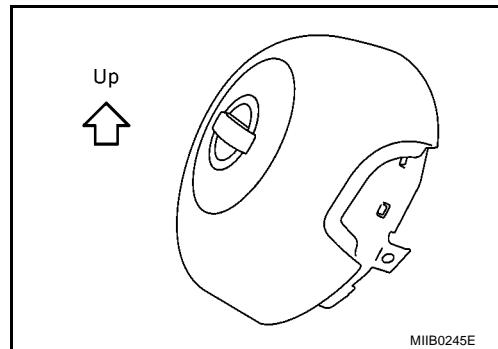

- Replace driver air bag module if it has been dropped or sustained an impact.
- Do not allow oil, grease or water to come in contact with the front passenger air bag module.



INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Always work from the side of driver air bag module.
- Do not use air tools or electric tools for servicing.
- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#).


A
B
C
D
E
F
G
SRS
I
J
K
L
M

SPIRAL CABLE

PFP:25554

Removal and Installation

BHS0003E

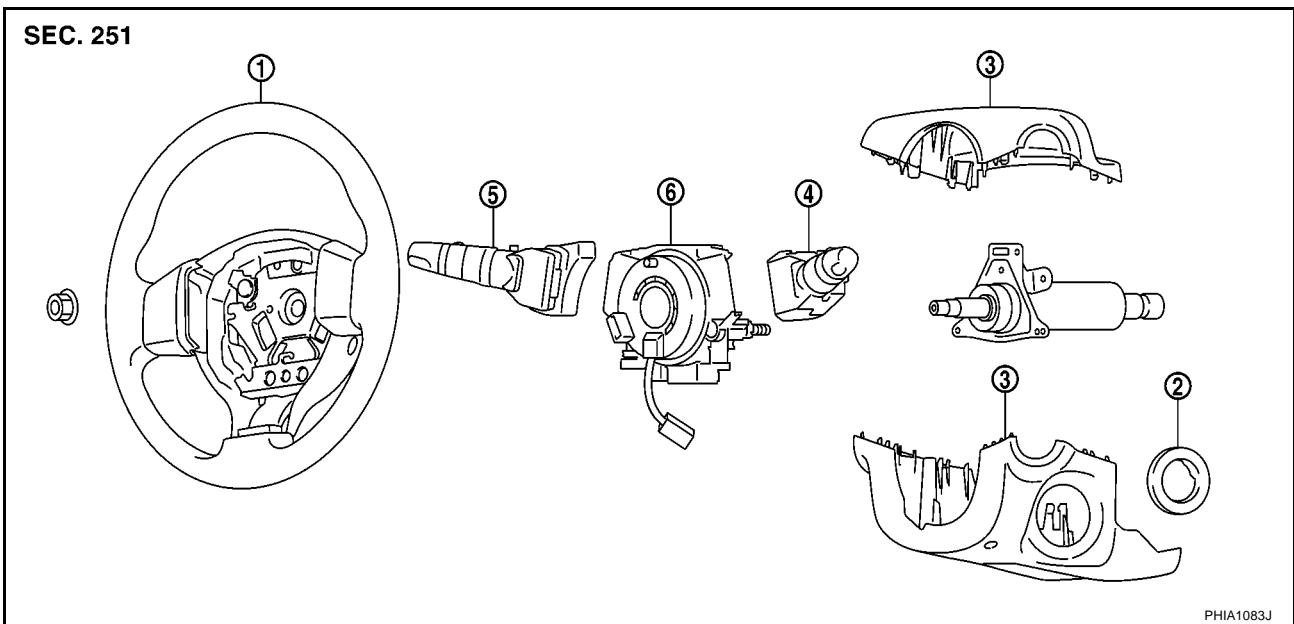

1. Steering wheel 2. Steering key cylinder escutcheon 3. Steering column cover (lower/upper)
 4. Wiper and Washer switch 5. Lighting and turn signal switch 6. Spiral cable


REMOVAL

CAUTION:

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.

- Do not use air tools or electric tools for servicing.

1. Remove driver air bag module. Refer to [SRS-36, "DRIVER AIR BAG MODULE"](#) .
2. Set the steering wheel in the neutral position.
3. Remove horn switch connector.

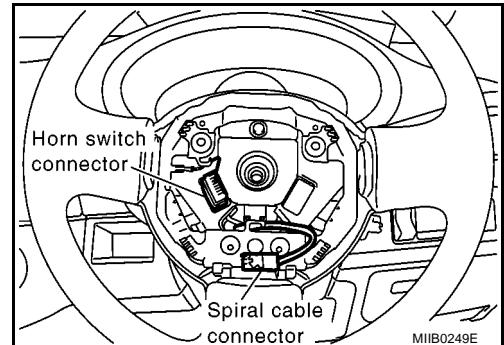


4. Remove steering wheel. Refer to [PS-5, "STEERING WHEEL"](#) .
5. Remove steering column cover. Refer to [IP-7, "F. Steering Column Cover Upper"](#) .
6. Remove wiper and washer switch, lighting and turn signal switch.
7. Loosen screws. While pushing upper plastic tab, remove spiral cable.

CAUTION:

- Do not attempt to disassemble spiral cable.
- Do not apply lubricant to the spiral cable.

SPIRAL CABLE

8. Remove horn switch connector, and then spiral cable connector.

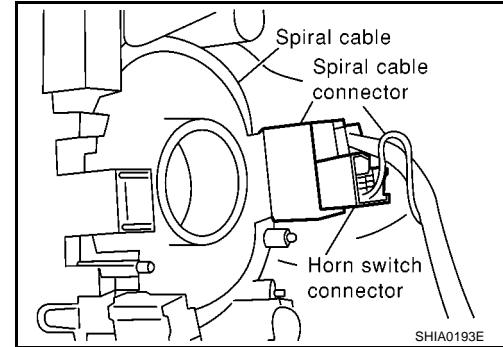


INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Do not use air tools or electric tools for servicing.
- The spiral cable may snap due to steering operation if the cable is installed in an improper position.
- Also, with the steering linkage disconnected the cable may snap by turning the steering wheel beyond the limited number of turns. The spiral cable can be turned counterclockwise about 2.5 turns from the right end position.
- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#).

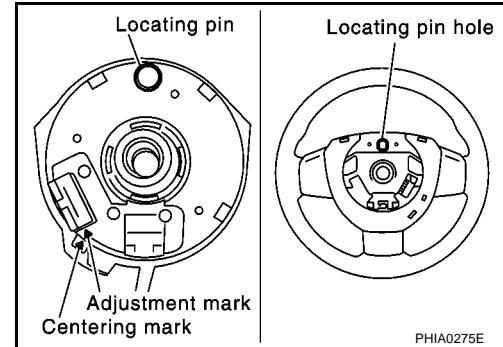

A
B
C
D
E
F
G
SRS

I
J
K
L
M

FRONT PASSENGER AIR BAG MODULE

FRONT PASSENGER AIR BAG MODULE

PFP:K8515

Removal and Installation


REMOVAL

CAUTION:

- Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Always work from the side of or under front passenger air bag module.
- Do not use air tools or electric tools for servicing.

1. Remove glove box assembly. Refer to [IP-5, "Removal and Installation"](#) .
2. Remove air bag module mounting bolt.

Mounting bolt - (1) :  24.5 N·m (2.5 kg·m, 18 ft·lb)

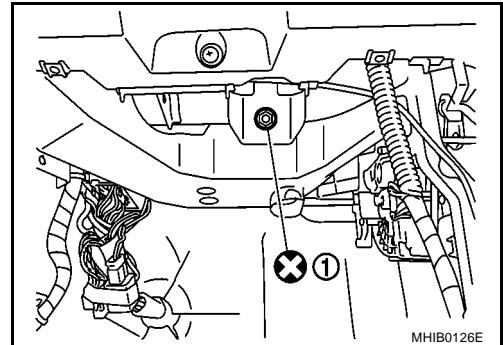


MHIB0126E

3. Disconnect harness connector from the passenger air bag module.
4. Remove instrument assist upper panel. Refer to [IP-4, "INSTRUMENT PANEL ASSEMBLY"](#) .
5. Remove air bag module mounting screws.

Mounting screw - (1)

Air bag module - (2)

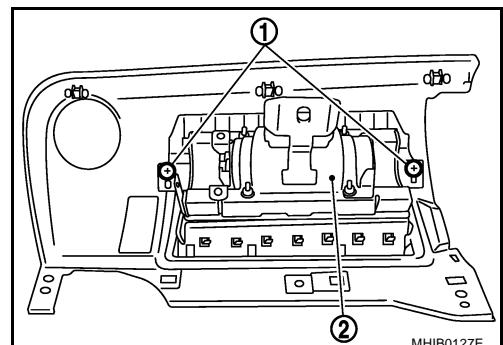

MHIB0127E


6. Remove air bag module from the instrument assist upper panel.

NOTE:

Pull out and remove air bag module front tab and rear tab.

Front tab - (1)

Rear tab - (2)

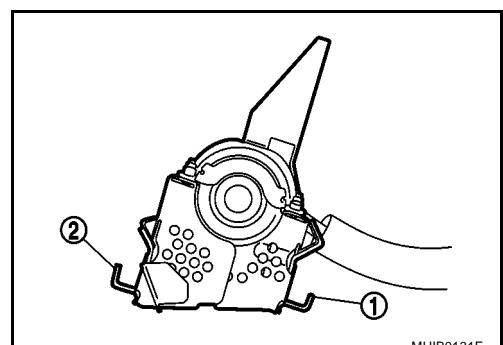


MHIB0131E


FRONT PASSENGER AIR BAG MODULE

CAUTION:

- Always place front passenger air bag module with warning label side facing upward.
- Do not insert any foreign objects (screwdriver, etc.) into front passenger air bag module.
- Do not attempt to disassemble front passenger air bag module.
- Do not use old bolts after removal; replace with new ones.

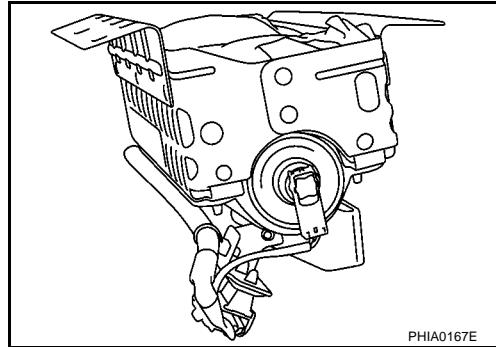

- Replace front passenger air bag module if it has been dropped or sustained an impact.
- Do not expose the front passenger air bag module to temperature exceeding 90°C (194°F).
- Do not allow oil, grease or water to come in contact with the front passenger air bag module.
- After front passenger air bag module inflates, the instrument panel assembly should be replaced.

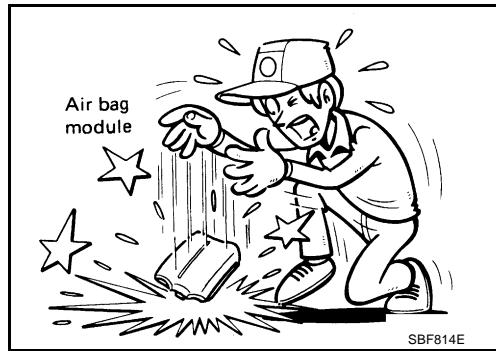

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Always work from the side of or under front passenger air bag module.
- Do not use air tools or electric tools for servicing.
- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#).

A
B
C
D
E
F
G

SRS

I
J

K
L
M


FRONT SIDE AIR BAG MODULE

FRONT SIDE AIR BAG MODULE

PFP:K8EH0

Removal and Installation

BHS0003G

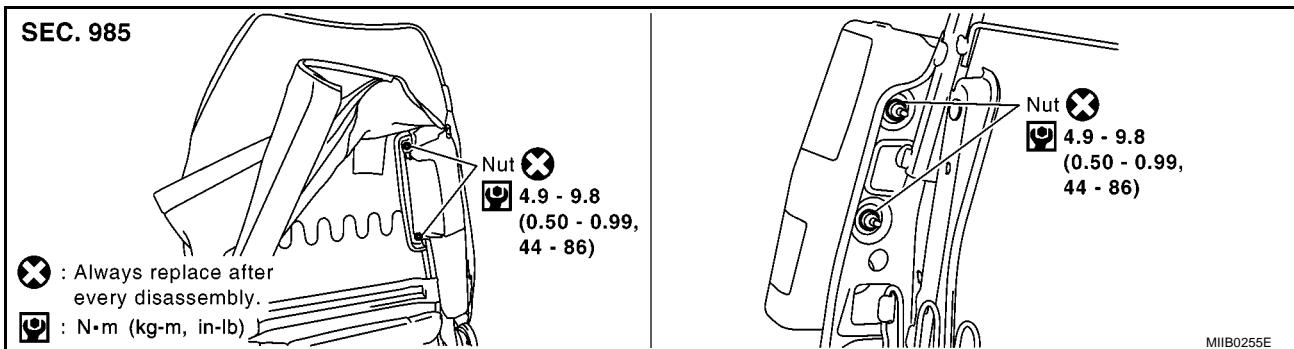

REMOVAL


CAUTION:

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Always work from the rear of the front side air bag module.
- Do not use air tools or electric tools for servicing.

- Remove the driver and/or passenger seat. Refer to [SE-10, "Disassembly and Assembly of Seat Cushion"](#).
- Remove the seatback trim and pad. Refer to [SE-8, "Disassembly and Assembly of Seatback"](#).
- Remove the air bag module harness clips.
- Remove the special nuts coated with bonding agent from the front side air bag module, and remove the front side air bag module.

CAUTION:

- Always place the front side air bag module standing with the stud bolts side facing down.
- Do not insert any foreign objects (screwdriver, etc.) into front side air bag module.
- Do not attempt to disassemble front side air bag module.
- Do not use old bolts after removal; replace with new ones.

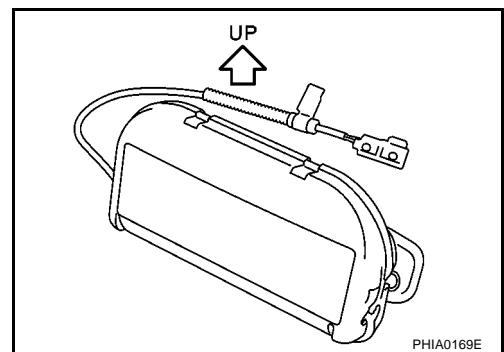

- Replace front seatback assembly (side air bag module) if it has been dropped or sustained an impact.
- Do not expose front seatback assembly (side air bag module) to temperature exceeding 90°C (194°F).
- Do not allow oil, grease or water to come in contact with the front side air bag module.
- After front side air bag module inflates, front seatback assembly must be replaced.



FRONT SIDE AIR BAG MODULE

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Always work from the side of or under front side air bag module.
- Do not use air tools or electric tools for servicing.
- After the work is completed, perform self-diagnosis to make sure that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#).

A

B

C

D

E

F

G

SRS

I

J

K

L

M


SIDE CURTAIN AIR BAG MODULE

SIDE CURTAIN AIR BAG MODULE

PFP:985P0

Removal and Installation

BHS0003H

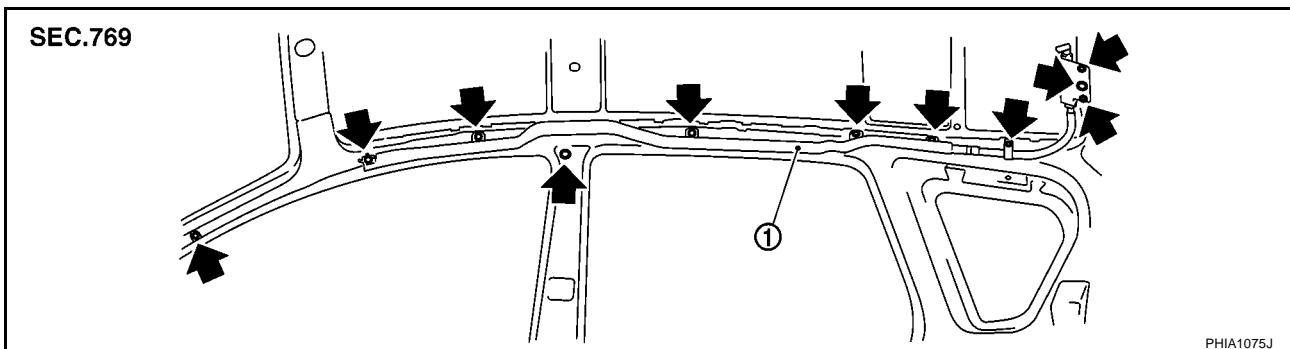

PHIA1075J

1. Curtain air bag module

REMOVAL

CAUTION:

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Always work from the side of the side curtain air bag module.
- Do not use air tools or electric tools for servicing.

1. Remove headliner. Refer to [EI-30, "HEADLINER"](#).
2. Disconnect curtain air bag module connector.
3. Remove the side curtain air bag module mounting bolts.

Mounting bolt : 10.8 N·m (1.1 kg·m, 8 ft-lb)

4. Remove the side curtain air bag module.

CAUTION:

- Always place the side curtain air bag module with the warning label facing upward.
- Do not attempt to disassemble side curtain air bag module.
- Do not insert any foreign objects (screw driver, etc.) into air bag module connector.
- Replace side curtain air bag module if it has been dropped or sustained an impact.
- Do not expose the air bag module to temperatures exceeding 90°C (194°F).
- Do not allow oil, grease or water to come in contact with the side curtain air bag module.



SBF814E

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Always work from the side of the side curtain air bag module.
- Do not use air tools or electric tools for servicing.
- After replacement of side curtain air bag module, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#).

CRASH ZONE SENSOR

PFP:98582

Removal and Installation

REMOVAL


CAUTION:

- Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Do not use air tools or electric tools for servicing.

1. Disconnect crash zone sensor connector.
2. Remove mounting nuts, and then crush zone sensor.

Mounting nut - (1) :  10.8 N·m (1.1 kg·m, 8 ft-lb)

Crash zone sensor - (2)

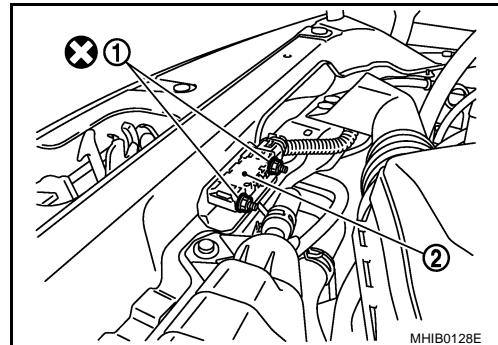

CAUTION:

- Replace crash zone sensor if it has been dropped or sustained an impact.
- Do not attempt to disassemble crash zone sensor.
- Do not use old bolts after removal; replace with new ones.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Check crash zone sensor for proper installation.
- Do not use air tools or electric tools for servicing.
- After the work is complete, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#).

SIDE AIR BAG (SATELLITE) SENSOR

SIDE AIR BAG (SATELLITE) SENSOR

PFP:98830

Removal and Installation

REMOVAL

BHS0003J

CAUTION:


- Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Do not use air tools or electric tools for servicing.

1. Remove front seat belt. Refer to [SB-3, "Removal and Installation of Front Seat Belt"](#) .
2. Remove side air bag (Satellite) sensor connector.
3. Remove mounting nuts, then remove side air bag (Satellite) sensor.

Mounting nut - (1) :  10.8 N·m (1.1 kg·m, 8 ft-lb)

Satellite sensor - (2)

Satellite sensor connector - (3)

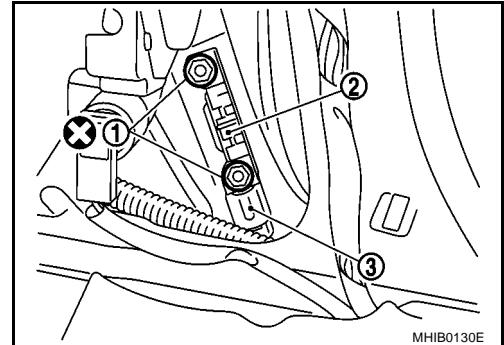

CAUTION:

- Check side air bag (Satellite) sensor to ensure it is free of deformities, dents, cracks or rust. If it shows any visible signs of damage, replace it with new one.
- Do not attempt to disassemble side air bag (Satellite) sensor if it has been dropped or sustained an impact.
- Do not use old nuts after removal; replace with new ones.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Check side air bag (Satellite) sensor for proper installation.
- Do not use air tools or electric tools for servicing.
- After replacement of side air bag (Satellite) sensor, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#) .

SEAT BELT PRE-TENSIONER

SEAT BELT PRE-TENSIONER

PFP:86884

Removal and Installation

For removal and installation procedures, refer to [SB-3, "Removal and Installation of Front Seat Belt"](#) .

BHS0003K

A

B

C

D

E

F

G

SRS

I

J

K

L

M

DIAGNOSIS SENSOR UNIT

DIAGNOSIS SENSOR UNIT

PFP:28556

Removal and Installation

REMOVAL

BHS0003L


CAUTION:

- Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
- Do not use air tools or electric tools for servicing.

- Disconnect each harness connector for air bag module and seat belt pre-tensioner.
- Remove console box. Refer to [IP-4, "INSTRUMENT PANEL ASSEMBLY"](#).
- Remove the diagnosis sensor unit connector.
- Remove mounting bolts and ground bolt, then remove diagnosis sensor unit.

Mounting bolt - (1) :  24.5 N·m (2.5 kg-m, 18 ft-lb)

Ground bolt - (2) :  6.9 N·m (0.7 kg-m, 61 in-lb)

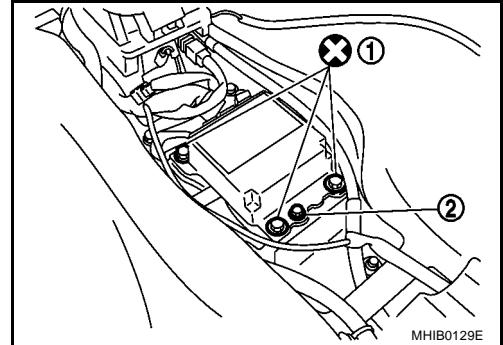

CAUTION:

- Do not use old bolts after removal; replace with new ones.
- Check diagnosis sensor unit brackets to ensure it is free of deformities, dents, cracks or rust. If it shows any visible signs of damage, replace it with new one.
- Replace diagnosis sensor unit if it has been dropped or sustained an impact.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Do not use air tools or electric tools for servicing.
- Check the diagnosis sensor unit for proper installation.
- After replacement of diagnosis sensor unit, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-18, "SRS Operation Check"](#).

ECU DISCRIMINATED NO.

After replacing the diagnosis sensor unit, make sure that the diagnosis unit identification is correct for the vehicle as equipped.

	Specification	Discriminated No.
2WD/LHD	Driver air bag module and Passenger air bag module, Seat belt pre-tensioner/pre-tensioner 2	A911
2WD/RHD	Driver air bag module and Passenger air bag module, Seat belt pre-tensioner/pre-tensioner 2	A912
2WD/LHD	Driver air bag module and Passenger air bag module, Seat belt pre-tensioner/pre-tensioner 2, and front side air bag module	A913
2WD/RHD	Driver air bag module and Passenger air bag module, Seat belt pre-tensioner/pre-tensioner 2, and front side air bag module	A914
2WD/LHD	Driver air bag module and Passenger air bag module, Seat belt pre-tensioner/pre-tensioner 2, front side air bag module and side curtain air bag module	A915
2WD/RHD	Driver air bag module and Passenger air bag module, Seat belt pre-tensioner/pre-tensioner 2, front side air bag module and side curtain air bag module	A916

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

PFP:00014

Caution for Air Bag Module and Seat Belt Pre-tensioner

BHS0003M

- Before disposing of air bag module and seat belt pre-tensioner, or vehicles equipped with such systems, deploy the systems. If such systems have already been deployed due to an accident, dispose of them as indicated in [SRS-49, "DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER"](#).
- When deploying the air bag module and seat belt pre-tensioner, always use the Special Service Tool; Deployment tool (KV99106400).
- When deploying the air bag module and seat belt pre-tensioner, stand at least 5 m (16 ft) away from the deployment component.
- When deploying air bag module and seat belt pre-tensioner, a fairly loud noise is made, followed by smoke being released. The smoke is not poisonous, however, be careful not to inhale smoke since it irritates the throat and can cause choking.
- Always activate one air bag module at a time.
- Due to heat, leave air bag module unattended for more than 30 minutes after deployment. Also leave seat belt pre-tensioner unattended for more than 10 minutes after deployment.
- Be sure to wear gloves when handling a deployed air bag module and seat belt pre-tensioner.
- Never apply water to the deployed air bag module and seat belt pre-tensioner.
- Wash your hands clean after finishing work.
- Place the vehicle outdoors with an open space of at least 6 m (20 ft) on all sides when deploying air bag module and seat belt pre-tensioner while mounted in vehicle.
- Use a voltmeter to make sure the vehicle battery is fully charged.
- Do not dispose of the air bag module and seat belt pre-tensioner un-deployed.

A
B
C
D
E
F
G
SRS
I
J
K
L
M

CHECKING DEPLOYMENT TOOL

Connecting to Battery


CAUTION:

The battery must show voltage of 9.6 V or more.

Remove the battery from the vehicle and place it on dry wood blocks approximately 5 m (16 ft) away from the vehicle.


- Wait 3 minutes after the vehicle battery is disconnected before proceeding.
- Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.

Make sure the polarity is correct. The right side lamp in the tool, marked "deployment tool power", should glow with a green light. If the right side lamp glows red, reverse the connections to the battery.

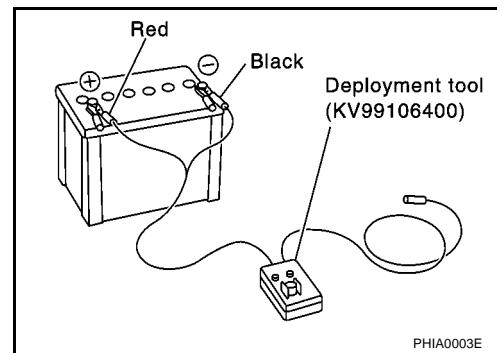

Deployment Tool Check

Press the deployment tool switch to the ON position. The left side lamp in the tool, marked "air bag connector voltage" should illuminate. If it does not illuminate, replace the tool.

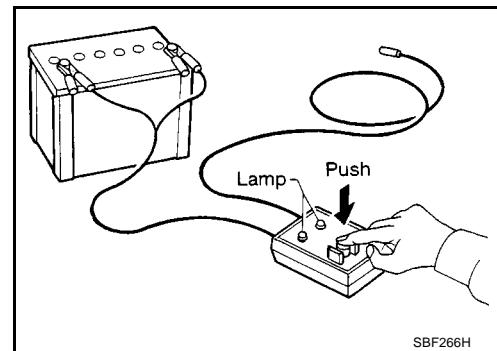

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

Air Bag Deployment Tool Lamp Illumination Chart (Battery Connected)


Switch operation	Left side lamp, green* "AIR BAG CONNECTOR VOLTAGE"	Right side lamp, green* "DEPLOYMENT TOOL POWER"
OFF	OFF	ON
ON	ON	ON

*: If this lamp glows red, the tool is connected to the battery incorrectly. Reverse the connections and make sure the lamp glows green.

DEPLOYMENT PROCEDURES FOR AIR BAG MODULE <OUTSIDE OF VEHICLE>

Unless the vehicle is being scrapped, deploying the air bag in the vehicle is not recommended. This may cause damage to the vehicle interior.


Anchor air bag module bracket (SST: KV99105300) in a vise secured to a firm foundation during deployment.

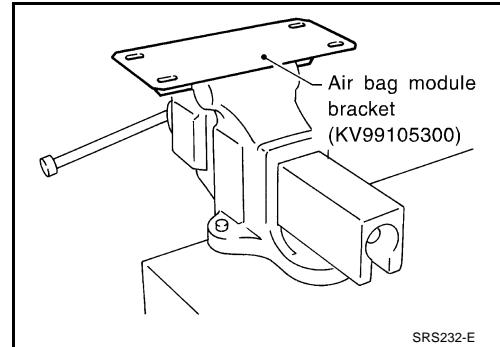

SRS232-E

Deployment of Driver Air Bag Module <Outside of Vehicle>

1. Make an 8.5 mm (0.335 in) diameter hole in air bag module bracket (SST: KV99105300) at the position shown in figure at right.

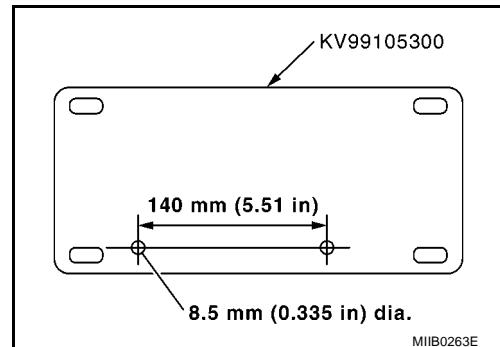


MIB0263E

2. Using wire, secure air bag module to air bag module bracket at two places.

CAUTION:


Use wire of at least 1 mm (0.041 in) diameter.

3. Firmly secure air bag module bracket with air bag module attached in a vise.

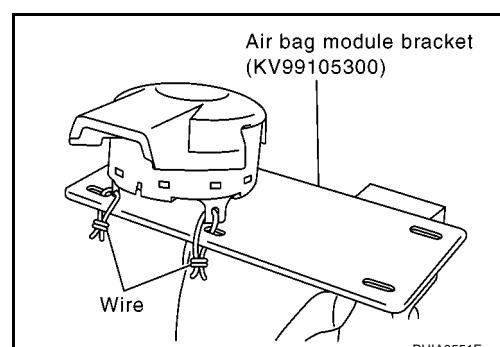

PHIA0551E

4. Connect deployment tool adapter (SST: KV99110500) to deployment tool (SST: KV99106400) to air bag module connector.

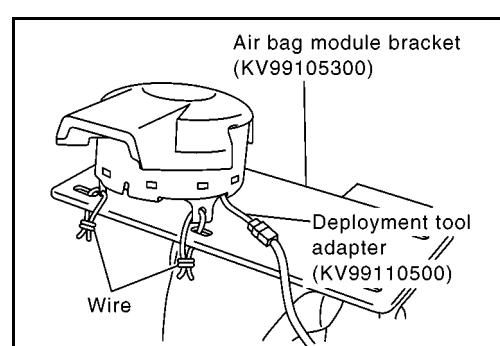


PHIA0552E

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.


CAUTION:

When deploying the driver air bag module, stand at least 5 m (16 ft) away from the air bag module.

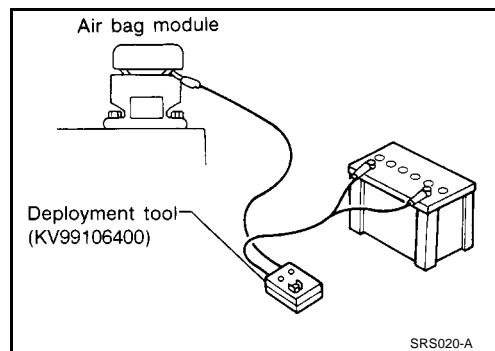


Deployment of Front Passenger Air Bag Module <Outside of Vehicle>

1. Make an 8.5 mm (0.335 in) diameter hole in air bag module bracket (SST: KV99105300) at the position shown in figure at right.

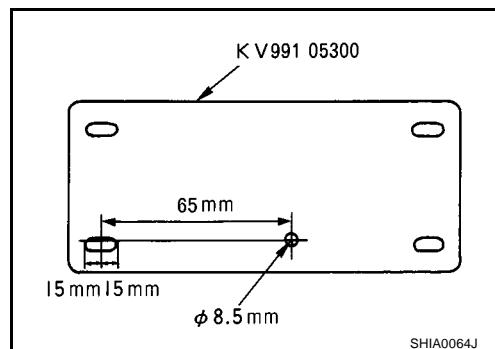


2. Firmly secure air bag module bracket (SST: KV99105300) in a vise.

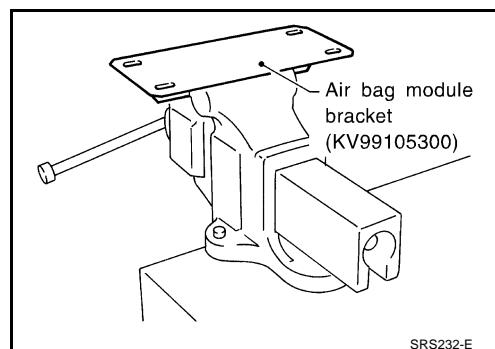

3. Match a hole in air bag module bracket (held in vise) and front passenger air bag module and fix them with a bolt [M8 × 25 - 30 mm (0.98 - 1.18 in)] and wire.


CAUTION:

If a gap exists between front passenger air bag module and air bag module bracket, use a piece of wood inserted in the gap to stabilize the air bag module.

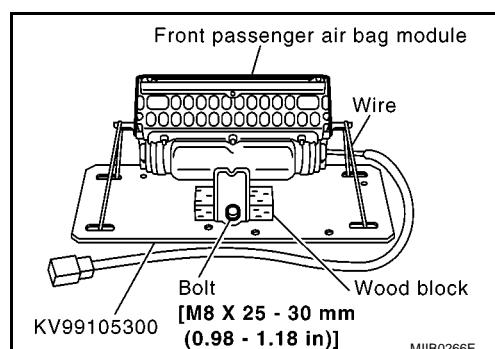

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER


4. Connect deployment tool adapter (SST: KV99109700) to deployment tool (SST: KV99106400) connector and front passenger air bag module connector.
5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.

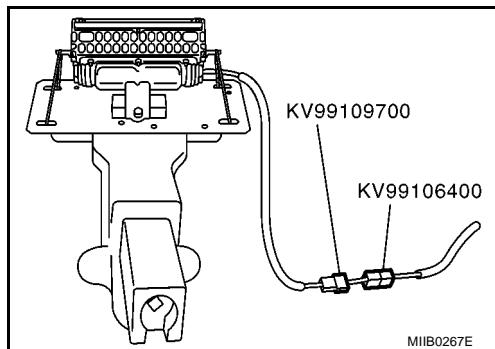

7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.


CAUTION:

- When deploying the front passenger air bag module, do not stand on the deploying side.
- Stand at least 5 m (16 ft) away from the air bag module.

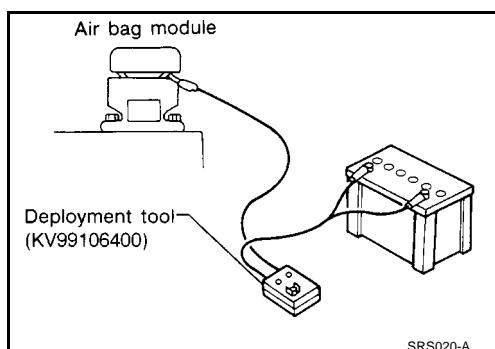

Deployment of Front Side Air Bag Module <Outside of Vehicle>


1. Make 6.5 mm (0.256 in) diameter holes in air bag module bracket (SST: KV99105300) at the position shown in figure at right.

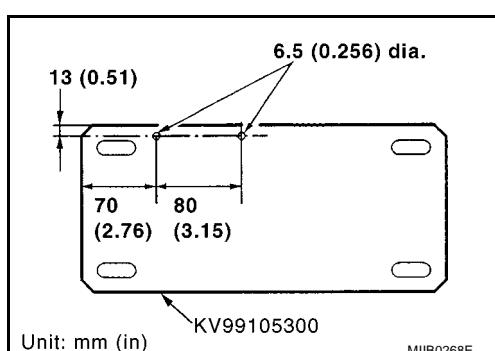

2. Firmly secure air bag module bracket (SST: KV99105300) in a vise.
3. Insert the stud bolts of side air bag module into the two holes in air bag module bracket (held in vise) and fix them with two M6 nuts.


CAUTION:

Side air bag module should be secured to air bag module bracket (SST: KV99105300) in a vise with stud bolt side setting bottom.

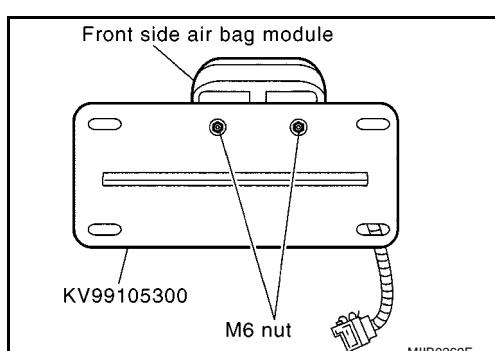

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER


4. Connect deployment tool adapter (SST: KV99108300) and deployment tool (SST: KV99106400) on side air bag module.

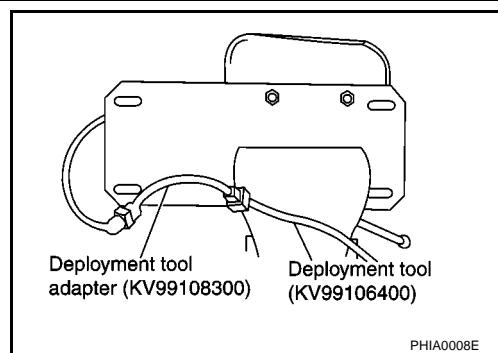

5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.


CAUTION:

When deploying the front side air bag module, stand at least 5 m (16 ft) away from the air bag module.

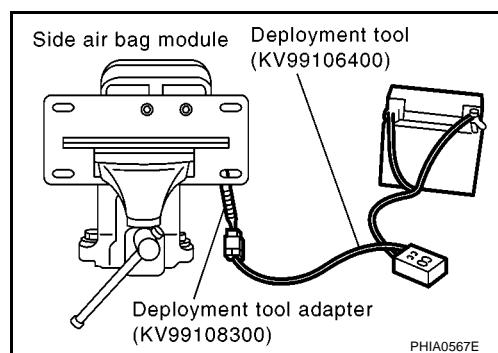


Deployment of Side Curtain Air Bag Module--<Outside of Vehicle>

1. Cut the inflator from side curtain air bag module.

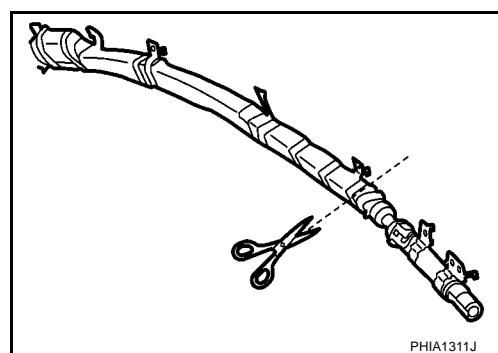

2. Connect deployment tool (SST: KV99106400) connector to deployment tool adapter (SST: KV99110500) the inflator.

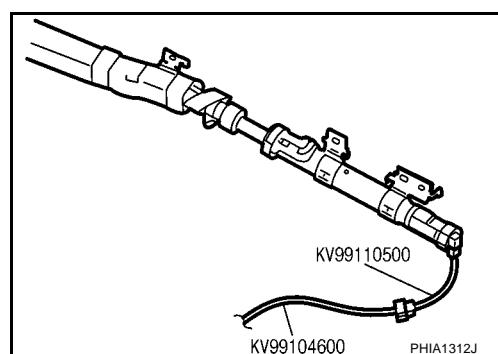


A
B
C
D
E
F
G

SRS
I
J
K
L
M

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

3. Put the inflator connected with the deployment tool adaptor (SST: KV99110500) into a tire without wheel.


Inflator - (1)

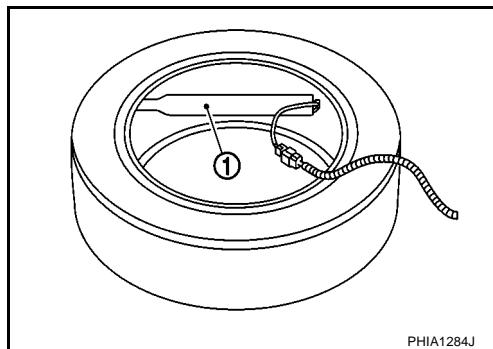

4. Put the tire with the inflator onto another tire without wheel. Add an additional tire without wheel and then a tire mounted on a wheel on top.

CAUTION:

Tie all tyres together with a strap in order keep them standing.

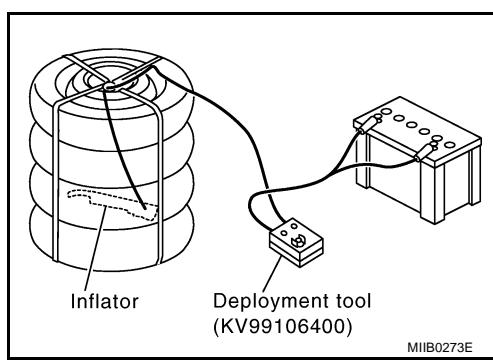


5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.

CAUTION:


When deploying the side curtain air bag module, stand at least 5 m (16 ft) away from the side curtain air bag module.

DEPLOYMENT PROCEDURES FOR SEAT BELT PRE-TENSIONER <OUTSIDE OF VEHICLE>

1. Firmly grip pre-tensioner in a vise.

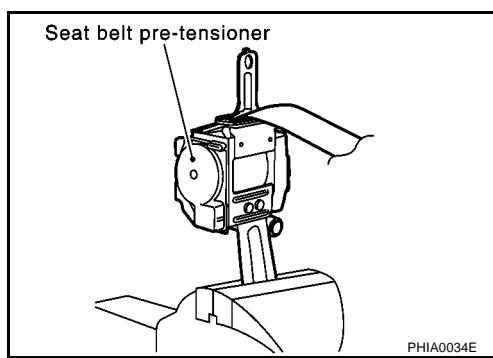


2. Cut the webbing off.

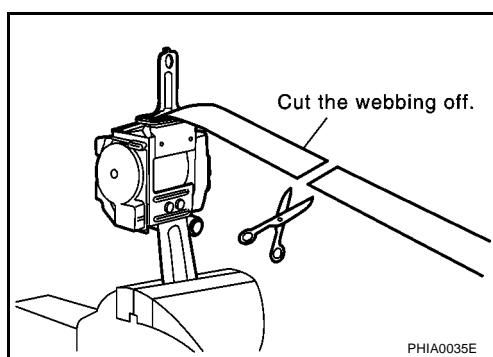

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER


3. Connect deployment tool adapter (SST: KV99110500) to deployment tool (SST: KV99106400) connector and front seat belt pre-tensioner connector.

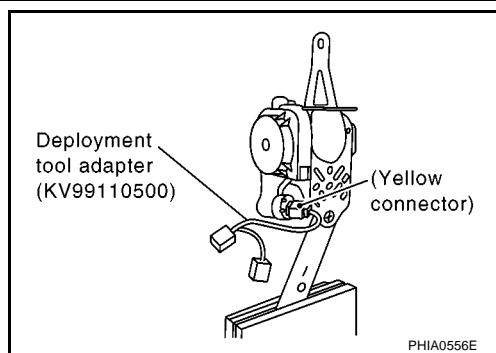

4. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
5. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
6. Press the button on the deployment tool. The left side lamp on the tool, marked "seat belt pre-tensioner connector voltage", will illuminate and the seat belt pre-tensioner will deploy.

CAUTION:

When deploying the front seat belt pre-tensioner, stand at least 5 m (16 ft) away from the seat belt pre-tensioner.

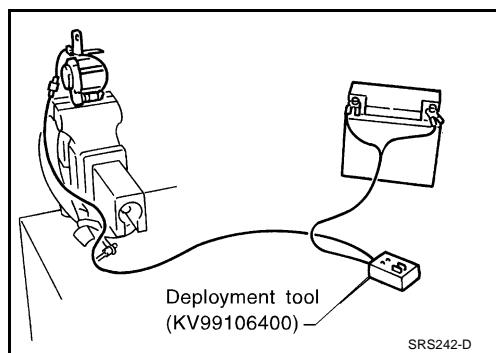


DEPLOYMENT PROCEDURES FOR FRONT SEAT BELT PRE-TENSIONER 2 (OUTSIDE OF VEHICLE)

1. Cut off the webbing.

Seat belt - (1)

Inflator - (2)

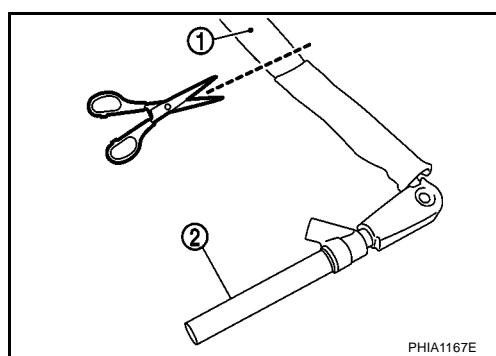


2. Connect deployment tool and deployment tool adapter yellow connector to front seat belt pre-tensioner.

Deployment tool - A : KV99106400

Deployment tool adapter - C : KV99110500

Yellow connector - (c)

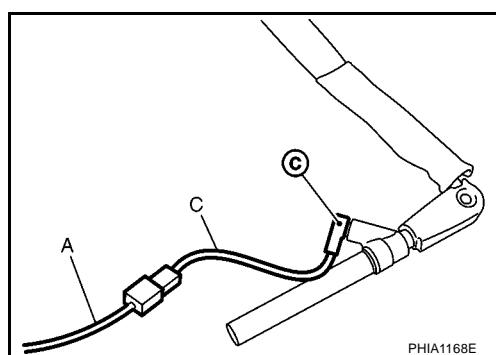

A
B
C
D
E
F
G


SRS

I
J
K
L
M

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

3. Put the pre-tensioner connected with the deployment tool into a tire without a wheel.

Inflator - (1)

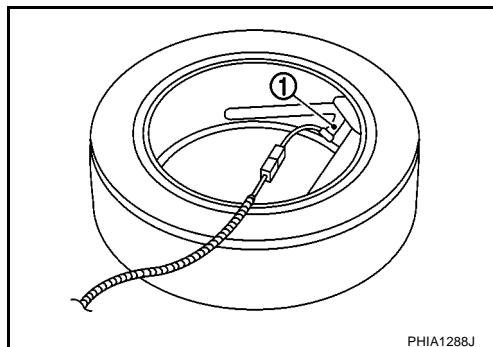


PHIA1288J

4. Connected red clip of deployment tool to battery positive terminal and back clip to negative terminal.
5. The lamp on the right side of the tool, marked "deployment tool power" , should glow green, not red.
6. Press the button on the deployment tool. The left side lamp on the tool, marked "seat belt pre-tensioner connector voltage" , will illuminate and the seat belt pre-tensioner will deploy.

Inflator - (1)

Deployment tool - A : KV99106400

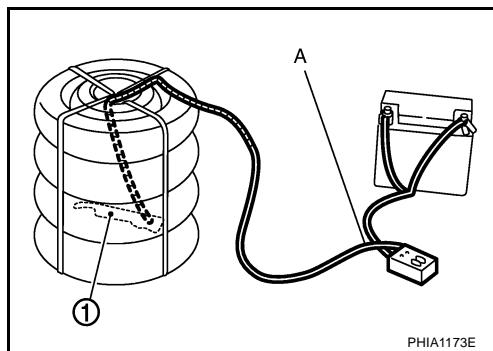

PHIA1173E

CAUTION:

When deploying the front seat belt pre-tensioner, stand at least 5 m (16 ft) away from the seat belt pre-tensioner.

DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

DEPLOYMENT OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER WHILE MOUNTED IN VEHICLE

When disposing of a vehicle, deploy air bag module and seat belt pre-tensioners while they are mounted in vehicle.


CAUTION:

When deploying air bag module or seat belt pre-tensioner, ensure vehicle is empty.

1. Disconnect both the vehicle battery cables and wait 3 minutes.
2. Disconnect air bag module and seat belt pre-tensioner connector.
3. Connect deployment tool (SST: KV99106400) to air bag module.
For driver air bag module, attach deployment tool adapter (SST: KV99110500) to the tool connector.
For front passenger air bag module, attach deployment tool adapter (SST: KV99109700) to the tool connector.
For front side air bag module, attach deployment tool adapter (SST: KV99108300) to the tool connector.
For seat belt pre-tensioner, attach deployment tool adapter (SST: KV99110500) to the tool connector.
For side curtain air bag module, attach deployment tool adapter (SST: KV99110500) to the tool connector.
4. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
5. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
6. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module or seat belt pre-tensioner will deploy.

CAUTION:

Activate only one air bag module or seat belt pre-tensioner at a time.

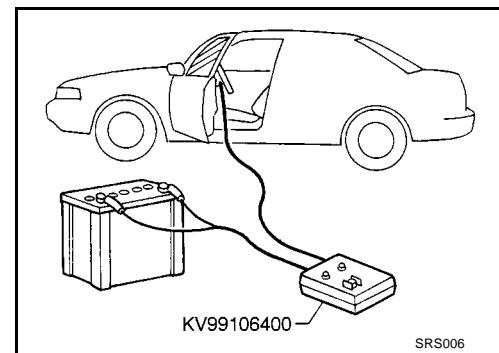


DISPOSING OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

Deployed air bag module and seat belt pre-tensioner are very hot. Before disposing of air bag module, and seat belt pre-tensioner wait at least 30 minutes, and 10 minutes, respectively. Seal them in a plastic bag before disposal.

CAUTION:

- Never apply water to a deployed air bag module and seat belt pre-tensioner.
- Be sure to wear gloves when handling a deployed air bag module and seat belt pre-tensioner.
- No poisonous gas is produced upon air bag module deployment. However, be careful not to inhale gas since it irritates throat and can cause choking.
- Do not attempt to disassemble air bag module and seat belt pre-tensioner.
- Air bag module and seat belt pre-tensioner cannot be reused.
- Wash your hands clean after finishing work.

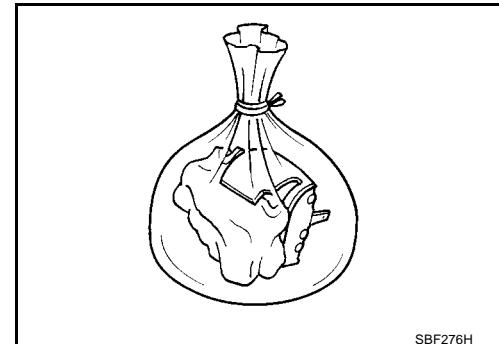

COLLISION DIAGNOSIS

COLLISION DIAGNOSIS

PFP:00015

For Frontal Collision

BHS0003N

To repair the SRS, perform the following steps.

When SRS (except the front side air bag and side curtain air bag modules) is activated in a collision:

1. Replace the diagnosis sensor unit.
2. Remove the air bag modules (except the front side air bag modules and side curtain air bag modules), crash zone sensor assembly, bracket and seat belt pre-tensioner assemblies.
3. Check the SRS components using the table below:
 - Replace any SRS components showing visible signs of damage (dents, cracks and deformation).
4. Install new air bag modules (except the front side air bag modules and side curtain air bag modules) crash zone sensor assembly, bracket and seat belt pre-tensioner assemblies.
5. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-18, "SRS Operation Check"](#) for details. Ensure entire SRS operates properly.

When SRS is not activated in a collision:

1. Check the SRS components using the table below:
 - Replace any SRS components showing visible signs of damage (dents, cracks and deformation).
2. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-18, "SRS Operation Check"](#) for details. Ensure entire SRS operates properly.

SRS INSPECTION (FOR FRONTAL COLLISION)

Part	SRS is activated	SRS is NOT activated
Air bag module (driver and front passenger air bag module)	REPLACE Install with new bolts.	<ol style="list-style-type: none">1. Remove air bag module. Check harness cover and connectors for damage, terminals for deformities, and harness for binding.2.<ul style="list-style-type: none">- Install driver air bag module into the steering wheel to check fit and alignment with the wheel.- Install passenger air bag module into the instrument panel to check fit with the instrument panel.3. No damage found, reinstall with new bolts.4. If damaged—REPLACE air bag modules with new special bolts. Air bag must be deployed before disposal.
Crash zone sensor	REPLACE the crash zone sensor and bracket with new nuts.	<ol style="list-style-type: none">1. Remove the crash zone sensor. Check harness connectors for damage, terminals for deformities, and harness for binding.2. Check for visible signs of damage (dents, cracks, deformation) of the crash zone sensor and bracket.3. Install the crash zone sensor to check fit.4. No damage found, reinstall with new bolts.5. If damaged—REPLACE the crash zone sensor and bracket with new nuts.
Seat belt pre-tensioner assemblies	REPLACE Install seat belt pre-tensioner with new bolts.	<ol style="list-style-type: none">1. Remove seat belt pre-tensioners. Check harness cover and connectors for damage, terminals for deformities, and harness for binding.2. Check belts for damage and anchors for loose mounting.3. Check retractor for smooth operation.4. Check seat belt adjuster for damage.5. If no damage is found, reinstall seat belt pre-tensioner assembly with new bolts.6. If damaged—REPLACE seat belt pre-tensioners with new bolts. Seat belt pre-tensioners must be deployed before disposal.
Diagnosis sensor unit	REPLACE Install with new bolts.	<ol style="list-style-type: none">1. Check case for dents, cracks or deformities.2. Check connectors for damage, and terminals for deformities.3. If no damage is found, reinstall with new bolts and ground bolt.4. If damaged—REPLACE diagnosis sensor unit with new bolts and ground bolt.

COLLISION DIAGNOSIS

Part	SRS is activated	SRS is NOT activated
Steering wheel	<ol style="list-style-type: none"> 1. Visually check steering wheel for deformities. 2. Check harness (built into steering wheel) and connectors for damage, and terminals for deformities. 3. Install air bag module to check fit or alignment with steering wheel. 4. Check steering wheel for excessive free play. 5. If no damage is found, reinstall with nut. 6. If damaged—REPLACE. 	A
Spiral cable	<ol style="list-style-type: none"> 1. Visually check spiral cable and combination switch for damage. 2. Check connectors and protective tape for damage. 3. Check steering wheel for noise, binding or heavy operation. 4. If no damage is found, reinstall with screws. 5. If damaged—REPLACE. 	B
Harness and connectors	<ol style="list-style-type: none"> 1. Check connectors for poor connection, damage, and terminals for deformities. 2. Check harness for binding, chafing, cuts, or deformities. 3. If no damage is found, reinstall the harness and connectors. 4. If damaged—REPLACE damaged section of harness. Do not attempt to repair, splice or modify any SRS harness. 	C
Instrument panel	<ol style="list-style-type: none"> 1. Visually check instrument panel for damage. 2. If no damage is found, reinstall the instrument panel. 3. If damaged—REPLACE the instrument panel with bolts. 	D

A

B

C

D

E

F

G

SRS

I

J

K

L

M

COLLISION DIAGNOSIS

For Side Collision

BHS00030

WHEN THE SIDE AIR BAG IS ACTIVATED IN THE SIDE COLLISION:

1. Replace the following components:
 - All parts of front seatback (including front seatback frame) with front side air bag module (on the side on which front side air bag is activated)
 - Curtain air bag module (on the side on which side curtain air bag is activated)
 - Diagnosis sensor unit
 - Satellite sensor (on the side on which side air bag and side curtain air bag is activated)
2. Check the SRS components and the related parts using the following table.
3. Replace any SRS components and the related parts showing visible signs of damage (dents, cracks, deformation).
3. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-18, "SRS Operation Check"](#) . Ensure entire SRS operates properly.

WHEN SRS IS NOT ACTIVATED IN THE SIDE COLLISION:

1. Check the SRS components and the related parts using the following table.
2. Replace any SRS components and the related parts showing visible signs of damage (dents, cracks, deformation).
2. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-18, "SRS Operation Check"](#) . Ensure entire SRS operates properly.

SRS INSPECTION (FOR SIDE COLLISION)

Part	Front side air bag and side curtain air bag is activated	Front side air bag and side curtain air bag is NOT activated
(LH or RH) side curtain air bag module	REPLACE the side curtain air bag module. (Repair the center pillar inner, etc. before installing new one if damaged.)	<ol style="list-style-type: none">1. Check for visible signs of damage (dents, tears, deformation) of the center pillar on the collision side.2. If damaged— Remove the side curtain air bag module.3. Check for visible signs of damaged (tears etc.) of the side curtain air bag module.4. Check harness and connectors for damage, and terminals for deformities.5. If no damage is found, reinstall the side curtain air bag module with new bolts.6. If damaged—REPLACE the side curtain air bag module with new bolts. Air bag must be deployed before disposal.
Front (LH or RH) side air bag module	REPLACE all parts of seatback with deployed front side air bag module.	<ol style="list-style-type: none">1. Check for visible signs of damage (dents, tears, deformation) of the seatback on the collision side.2. Check harness and connectors for damage, and terminals for deformities.3. If damaged—REPLACE the front seatback assembly. Air bag must be deployed before disposal.
(LH or RH) side air bag (Satellite) sensor	REPLACE the side air bag (Satellite) sensor on the collision side with new nuts. (Repair the center pillar inner, etc. before installing new one if damaged.)	<ol style="list-style-type: none">1. Remove the side air bag (Satellite) sensor on the collision side. Check harness connectors for damage, terminals for deformities, and harness for binding.2. Check for visible signs of damage (dents, cracks, deformation) of the side air bag (Satellite) sensor.3. Install the side air bag (Satellite) sensor to check fit.4. If no damage is found, reinstall the side air bag (Satellite) sensor with new nuts.5. If damaged—REPLACE the side air bag (Satellite) sensor with new nuts.
Diagnosis sensor unit	REPLACE the diagnosis sensor unit with the new bolts.	<ol style="list-style-type: none">1. Check case and bracket for dents, cracks or deformities.2. Check connectors for damage, and terminals for deformities.3. If no damage is found, reinstall the diagnosis sensor unit with new bolts and ground bolt.4. If damaged—REPLACE the diagnosis sensor unit with new bolts and ground bolt.

COLLISION DIAGNOSIS

Part	Front side air bag and side curtain air bag is activated	Front side air bag and side curtain air bag is NOT activated	A
Seat belt pre-tensioner assembly	1. Check if the seat belt can be extended smoothly. If the seat belt cannot be extended smoothly, – Check for deformities of the center pillar inner. – If the center pillar inner has no damage, Replace the seat belt pre-tensioner assembly. 2. Remove the seat belt pre-tensioner assembly on the collision side. Check harness cover and connectors for damage, terminals for deformities, and harness for binding. 3. Check for visible signs of damage (dents, cracks, deformation) of the seat belt pre-tensioner assembly. 4. Check seat belt adjuster for damage. 5. If no damage is found, reinstall the seat belt pre-tensioner assembly. 6. If damaged—REPLACE the seat belt pre-tensioner assembly with new bolts. The seat belt pre-tensioner assembly must be deployed before disposal.		B C D E
Seat with front side air bag	REPLACE all parts of front seatback (including front seatback frame)	1. Visually check the seat on the collision side. 2. Remove the seat on the collision side and check the following for damage and deformities. – Harness, connectors and terminals – Frame and recliner (for front and rear seat), and also adjuster and slides (for front seat) 3. If no damage is found, reinstall the seat. 4. If damaged—REPLACE the damaged seat parts using new bolts.	F G
Center inner pillar	1. Check the center inner pillar on the collision side for damage (dents, cracks, deformation). 2. If damaged—REPAIR the center inner pillar.		SRS
Trim/headlining	1. Check for visible signs of damage (dents, cracks, deformation) of the interior trim on the collision side. 2. If damaged—REPLACE the damaged trim parts.		I

COLLISION DIAGNOSIS
