

# SRS

## SECTION

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

### CONTENTS

<b>PRECAUTIONS .....</b>	<b>3</b>	<b>DIAGNOSTIC PROCEDURE 6 .....</b>	<b>26</b>
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	3	Trouble diagnoses without CONSULT-II .....	30
Precautions for SRS "AIR BAG" and "SEAT BELT PRE-TENSIONER" Service .....	3	<b>DIAGNOSTIC PROCEDURE 7 .....</b>	<b>30</b>
Trouble Diagnosis Precaution .....	3	WARNING LAMP FLASH CODE CHART .....	30
<b>PREPARATION .....</b>	<b>4</b>	TroubleDiagnoses: "AIRBAG"WarningLampDoes Not Turn Off .....	34
Special Service Tool .....	4	<b>DIAGNOSTIC PROCEDURE 8 .....</b>	<b>34</b>
Commercial Service Tool .....	5	TroubleDiagnoses: "AIRBAG"WarningLampDoes Not Turn On .....	35
<b>SUPPLEMENTAL RESTRAINT SYSTEM (SRS) .....</b>	<b>6</b>	<b>DIAGNOSTIC PROCEDURE 9 .....</b>	<b>35</b>
SRS Configuration .....	6	<b>DRIVER AIR BAG MODULE .....</b>	<b>36</b>
Front Seat Belt Pre-tensioner with Load Limiter .....	7	Removal and Installation .....	36
Front Side Air Bag .....	7	REMOVAL .....	36
Side Curtain Air Bag .....	7	INSTALLATION .....	37
<b>TROUBLE DIAGNOSIS .....</b>	<b>8</b>	<b>SPIRAL CABLE .....</b>	<b>38</b>
Trouble Diagnoses Introduction .....	8	Removal and Installation .....	38
DIAGNOSIS FUNCTION .....	8	REMOVAL .....	38
HOW TO PERFORM TROUBLE DIAGNOSES FOR QUICK AND ACCURATE REPAIR .....	8	INSTALLATION .....	39
WORK FLOW .....	9	<b>FRONT PASSENGER AIR BAG MODULE .....</b>	<b>40</b>
SRS Components Parts Location .....	10	Removal and Installation .....	40
Schematic .....	11	REMOVAL .....	40
Wiring Diagram-SRS- .....	12	INSTALLATION .....	40
CONSULT-II Function .....	15	<b>FRONT SIDE AIR BAG MODULE .....</b>	<b>42</b>
DIAGNOSIS MODE FOR CONSULT-II .....	15	Removal and Installation .....	42
HOW TO CHANGE SELF-DIAGNOSIS MODE WITH CONSULT-II .....	15	REMOVAL .....	42
HOW TO ERASE SELF-DIAGNOSIS RESULTS..	16	INSTALLATION .....	42
Self-diagnosis Function (Without CONSULT-II) .....	16	<b>SIDE CURTAIN AIR BAG MODULE .....</b>	<b>43</b>
HOW TO CHANGE SELF-DIAGNOSIS MODE...	17	Removal and Installation .....	43
HOW TO ERASE SELF-DIAGNOSIS RESULTS..	17	REMOVAL .....	43
SRS Operation Check .....	17	INSTALLATION .....	44
DIAGNOSTIC PROCEDURE 1 .....	17	<b>CRASH ZON SENSOR .....</b>	<b>45</b>
Trouble Diagnoses with CONSULT-II .....	19	Removal and Installation .....	45
DIAGNOSTIC PROCEDURE 2 .....	19	REMOVAL .....	45
DIAGNOSTIC PROCEDURE 3 .....	20	INSTALLATION .....	45
DIAGNOSTIC PROCEDURE 4 .....	23	<b>SIDE AIR BAG (SATELLITE) SENSOR .....</b>	<b>46</b>
DIAGNOSTIC PROCEDURE 5 (CONTINUED FROM DIAGNOSTIC PROCEDURE 2) .....	26	Removal and Installation .....	46

 A  
B  
C  
D  
E  
F  
G  
SRS  
I  
J  
K  
L  
M

---

<b>DIAGNOSIS SENSOR UNIT .....</b>	<b>48</b>	CLE) .....	54
Removal and Installation .....	48	DEPLOYMENT OF AIR BAG MODULE AND	
REMOVAL .....	48	SEAT BELT PRE-TENSIONER WHILE	
INSTALLATION .....	48	MOUNTED IN VEHICLE .....	54
AIR BAG DIAGNOSIS SENSOR UNIT DISCRIM- INATED NUMBER .....	48	DISPOSING OF AIR BAG MODULE AND SEAT	
BELT PRE-TENSIONER .....	49	BELT PRE-TENSIONER .....	55
Caution for Air Bag Module and Seat Belt Pre-ten- sioner .....	49	<b>COLLISION DIAGNOSIS .....</b>	<b>56</b>
CHECKING DEPLOYMENT TOOL .....	49	For Frontal Collision .....	56
DEPLOYMENT PROCEDURES FOR AIR BAG MODULE (OUTSIDE OF VEHICLE) .....	50	SRS INSPECTION (FOR FRONTAL COLLI- SION) .....	56
DEPLOYMENT PROCEDURES FOR SEAT BELT PRE-TENSIONER (OUTSIDE OF VEH- ICLE) .....		For Side Collision .....	57
		WHEN THE SIDE AIR BAG IS ACTIVATED IN THE SIDE COLLISION: .....	57
		WHEN SRS IS NOT ACTIVATED IN THE SIDE COLLISION: .....	58
		SRS INSPECTION (FOR SIDE COLLISION) .....	58

# PRECAUTIONS

## PRECAUTIONS

PFP:00001

### Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

EHS000RR

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harness connectors.

### Precautions for SRS "AIR BAG" and "SEAT BELT PRE-TENSIONER" Service

EHS000RS

- Do not use electrical test equipment to check SRS circuits unless instructed to in this Service Manual.
- Before servicing the SRS, turn ignition switch "OFF", disconnect battery ground cable and wait at least 3 minutes. For approximately 3 minutes after the cables are removed, it is still possible for the air bag and seat belt pre-tensioner to deploy. Therefore, do not work on any SRS connectors or wires until at least 3 minutes have passed.
- Diagnosis sensor unit must always be installed with their arrow marks "←" pointing towards the front of the vehicle for proper operation. Also check diagnosis sensor unit for cracks, deformities or rust before installation and replace as required.
- The spiral cable must be aligned with the neutral position since its rotations are limited. Do not attempt to turn steering wheel or column after removal of steering gear.
- Handle air bag module carefully. Always place driver and front passenger air bag modules with the pad side facing upward and place front side air bag module standing with stud bolt side setting bottom.
- Conduct self-diagnosis to check entire SRS for proper function after replacing any components.
- After air bag inflates, the front instrument panel assembly should be replaced if damaged.

### Trouble Diagnosis Precaution

EHS000RT

When you read wiring diagrams, refer to the following:

- [GI-14, "How to Read Wiring Diagrams"](#) in GI section
- [PG-4, "POWER SUPPLY ROUTING"](#) in PG section

When you perform trouble diagnosis, refer to the following:

- [GI-11, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"](#) in GI section
- [GI-24, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section

Check for any service bulletins before servicing the vehicle.







# PREPARATION

## PREPARATION

PFP:00002

### Special Service Tool


EHS000RU

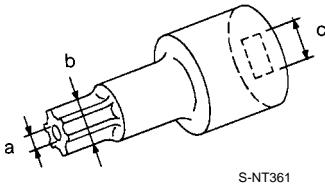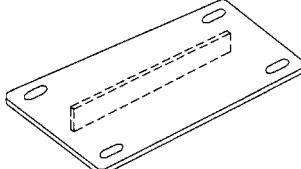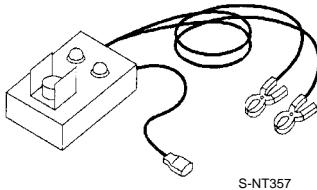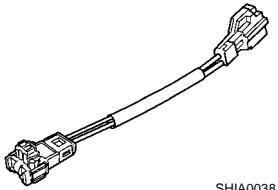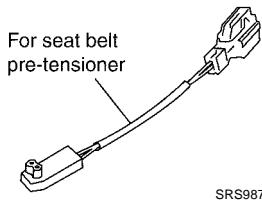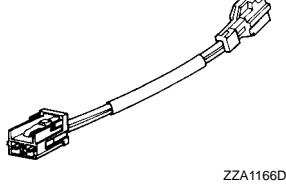Tool number Tool name	Application
HT61961000 and HT62152000 combined *Special torx bit	<p>Use for special bolts [TAMPER RESISTANT TORX (Size T50)]</p> <p><b>a: 3.5 (0.138) dia.</b>  <b>b: 8.5 - 8.6 (0.335 - 0.339) dia.</b>  <b>c: approx. 10 (0.39) sq.</b>  Unit: mm (in)</p>  <p>S-NT361</p>
KV99105300 Air bag module bracket	 <p>S-NT354</p> <p>Anchoring air bag module</p>
KV99106400 Deployment tool	 <p>S-NT357</p> <p>Disposing of air bag module</p>
KV99109700 <ul style="list-style-type: none"> <li>● Deployment tool adapter for driver air bag module</li> <li>● Deployment tool adapter for front passenger air bag module</li> <li>● Deployment tool adapter for pre-tensioner seat belt</li> </ul>	 <p>SHIA0038J</p> <ul style="list-style-type: none"> <li>● Connection between the deployment tool and driver air bag module</li> <li>● Connection between the deployment tool and front passenger air bag module</li> <li>● Connection between the deployment tool and pre-tensioner seat belt</li> </ul>
KV99109800 Deployment tool adapter for pre-tensioner seat belt	 <p>SRS987</p> <p>For seat belt pre-tensioner</p> <p>Connection between the deployment tool and pre-tensioner seat belt</p>
KV999R0080 Deployment tool adapter for side curtain air bag module	 <p>ZZA1166D</p> <p>Connection between the deployment tool and side curtain air bag module</p>

# PREPARATION

## Commercial Service Tool

EHS000RV

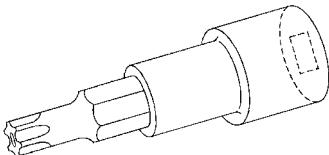Tool name	Application
Tamper resistant torx socket  S-NT757	Size: T30

A

B

C

D

E

F

G

SRS

I

J

K

L

M


# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

PFP:28556

### SRS Configuration

EHS000RW

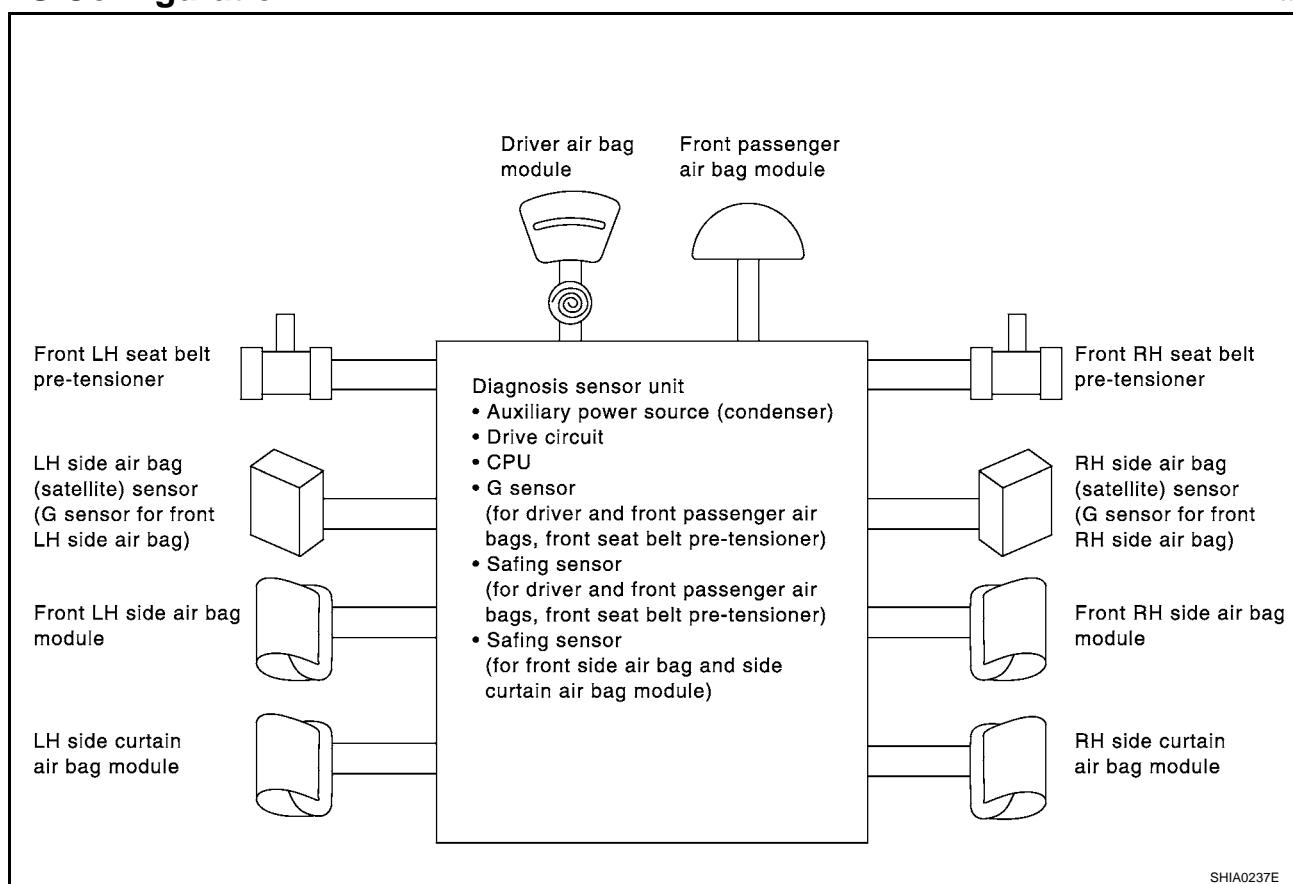

The air bag deploys if the diagnosis sensor unit activates while the ignition switch is in the ON or START position.

The collision modes for which supplemental restraint systems are activated are different among the SRS systems. For example, the driver air bag module and front passenger air bag module are activated in a frontal collision but not in a side collision.

SRS configurations which are activated for some collision modes are as follows;

SRS configuration	Frontal collision	Left side collision	Right side collision
Driver air bag module	×	—	—
Front passenger air bag module	×	—	—
Front LH seat belt pre-tensioner	×	—	—
Front RH seat belt pre-tensioner	×	—	—
Front LH side air bag module	—	×	—
Front RH side air bag module	—	—	×
LH side curtain air bag module	—	×	—
RH side curtain air bag module	—	—	×

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)


## Front Seat Belt Pre-tensioner with Load Limiter

EHS000RX

The seat belt pre-tensioner system with load limiter is installed for both the driver's seat and the front passenger's seat. It operates simultaneously with the SRS air bag system in the event of a frontal collision with an impact exceeding a specified level.

When the frontal collision with an impact exceeding a specified level occurs, seat belt slack resulting from clothing or other factors is immediately taken up by the pre-tensioner. Vehicle passengers are securely restrained.

When passengers in a vehicle are thrown forward in a collision and the restraining force of the seat belt exceeds a specified level, the load limiter permits the specified extension of the seat belt by the twisting of the ELR shaft, and a relaxation of the chest-area seat belt web tension while maintaining force.

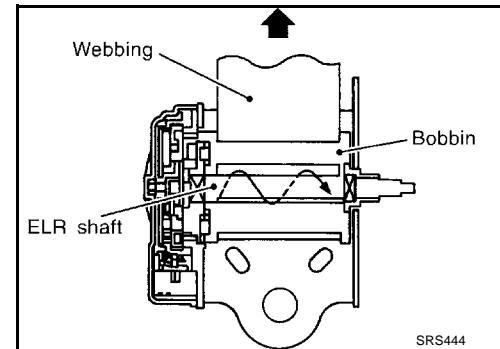


## Front Side Air Bag

EHS000RY

Front side air bag is built-in type.


The front seatbacks with built-in type side air bag have the labels as shown.

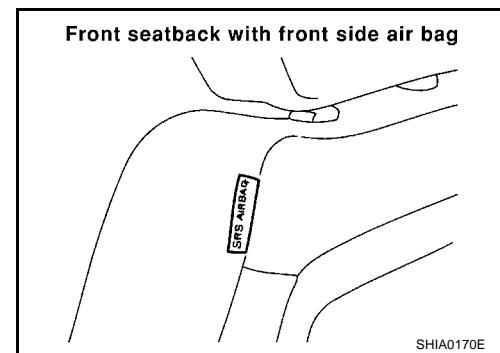

## Side Curtain Air Bag

EHS000RZ

The side curtain air bags have the labels as shown.

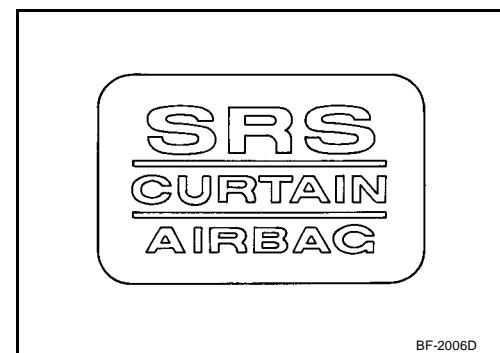

## TROUBLE DIAGNOSIS

PFP:00004

### Trouble Diagnoses Introduction

EHS000S0

#### CAUTION:

- Do not use electrical test equipment on any circuit related to the SRS unless instructed in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harness connectors.
- Do not attempt to repair, splice or modify the SRS wiring harness. If the harness is damaged, replace it with a new one.
- Keep ground portion clean.

### DIAGNOSIS FUNCTION

The SRS self-diagnosis results can be read by using "AIR BAG" warning lamp and/or CONSULT-II.

The User mode is exclusively prepared for the customer (driver). This mode warns the driver of a system malfunction through the operation of the "AIR BAG" warning lamp.

The Diagnosis mode allows the technician to locate and inspect the malfunctioning part.

The mode applications for the "AIR BAG" warning lamp and CONSULT-II are as follows:

	User mode	Diagnosis mode	Display type
"AIR BAG" warning lamp	X	X	ON-OFF operation
CONSULT-II	—	X	Monitoring

### HOW TO PERFORM TROUBLE DIAGNOSES FOR QUICK AND ACCURATE REPAIR

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

#### Information from Customer

WHAT..... Vehicle model

WHEN..... Date, Frequencies

WHERE..... Road conditions

HOW..... Operating conditions, Symptoms


#### Preliminary Check

Check that the following parts are in good order.

- Battery (Refer to [SC-4, "How to Handle Battery"](#) .)
- Fuse (Refer to [SRS-12, "Wiring Diagram-SRS-"](#) .)
- System component-to-harness connections

# TROUBLE DIAGNOSIS

## WORK FLOW

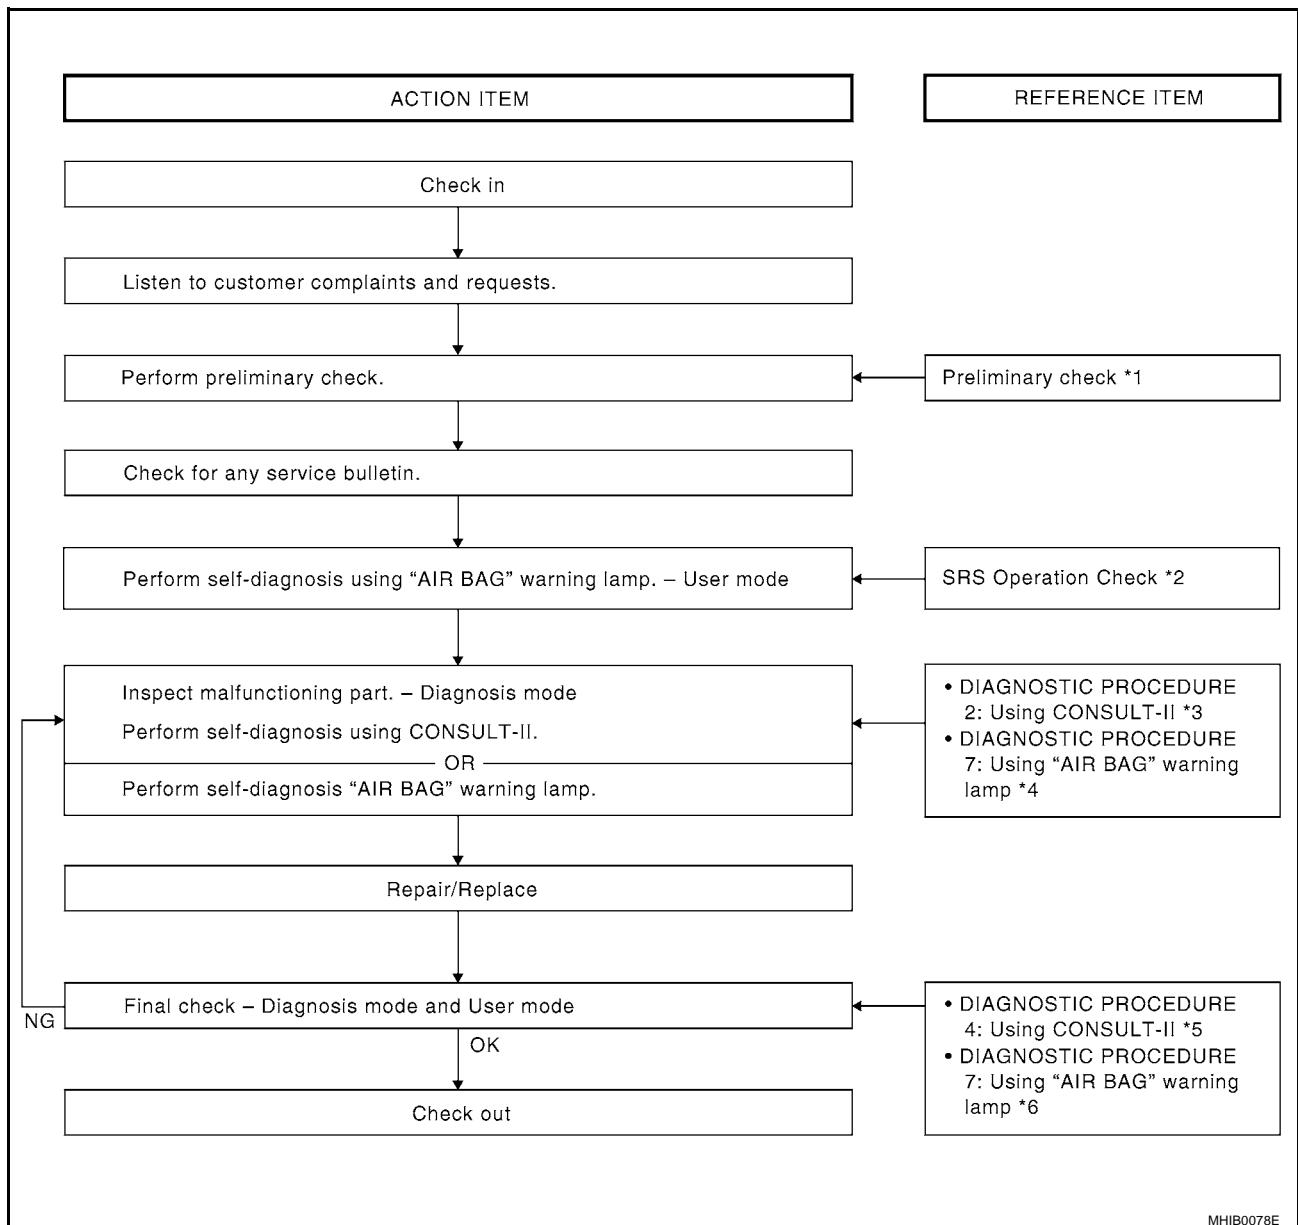

\*1: [SRS-8](#)

\*2: [SRS-17](#)

\*3: [SRS-19](#)

\*4: [SRS-30](#)

\*5: [SRS-23](#)




\*6: [SRS-30](#)

A  
B  
C  
D  
E  
F  
G  
**SRS**  
I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

## SRS Components Parts Location

EHS000S1

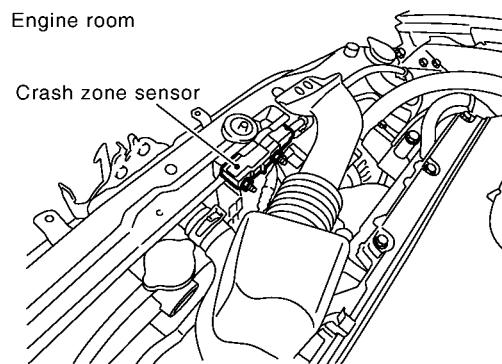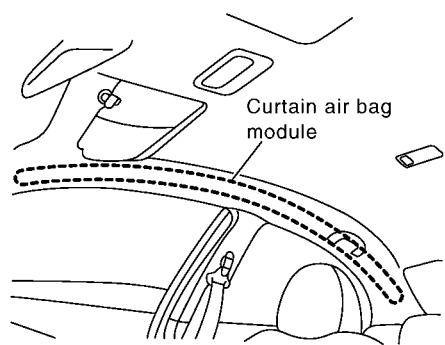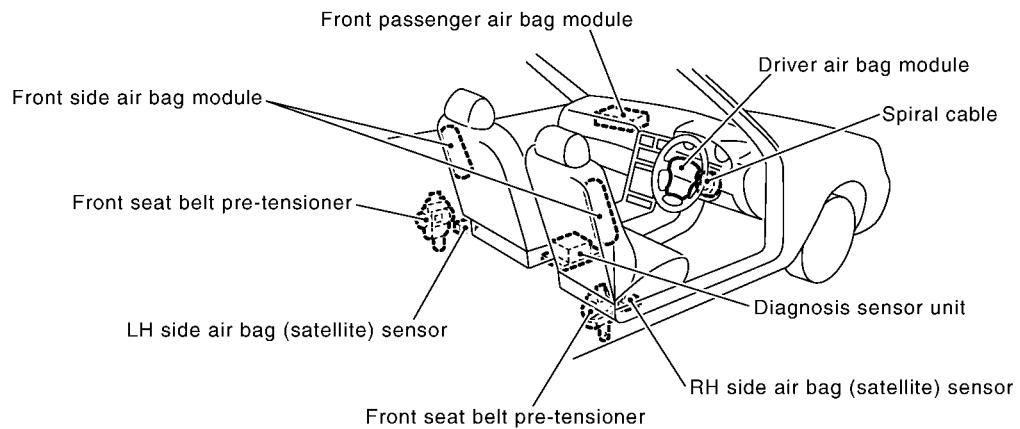


MIIB0241E

# TROUBLE DIAGNOSIS

## Schematic

EHS000SE

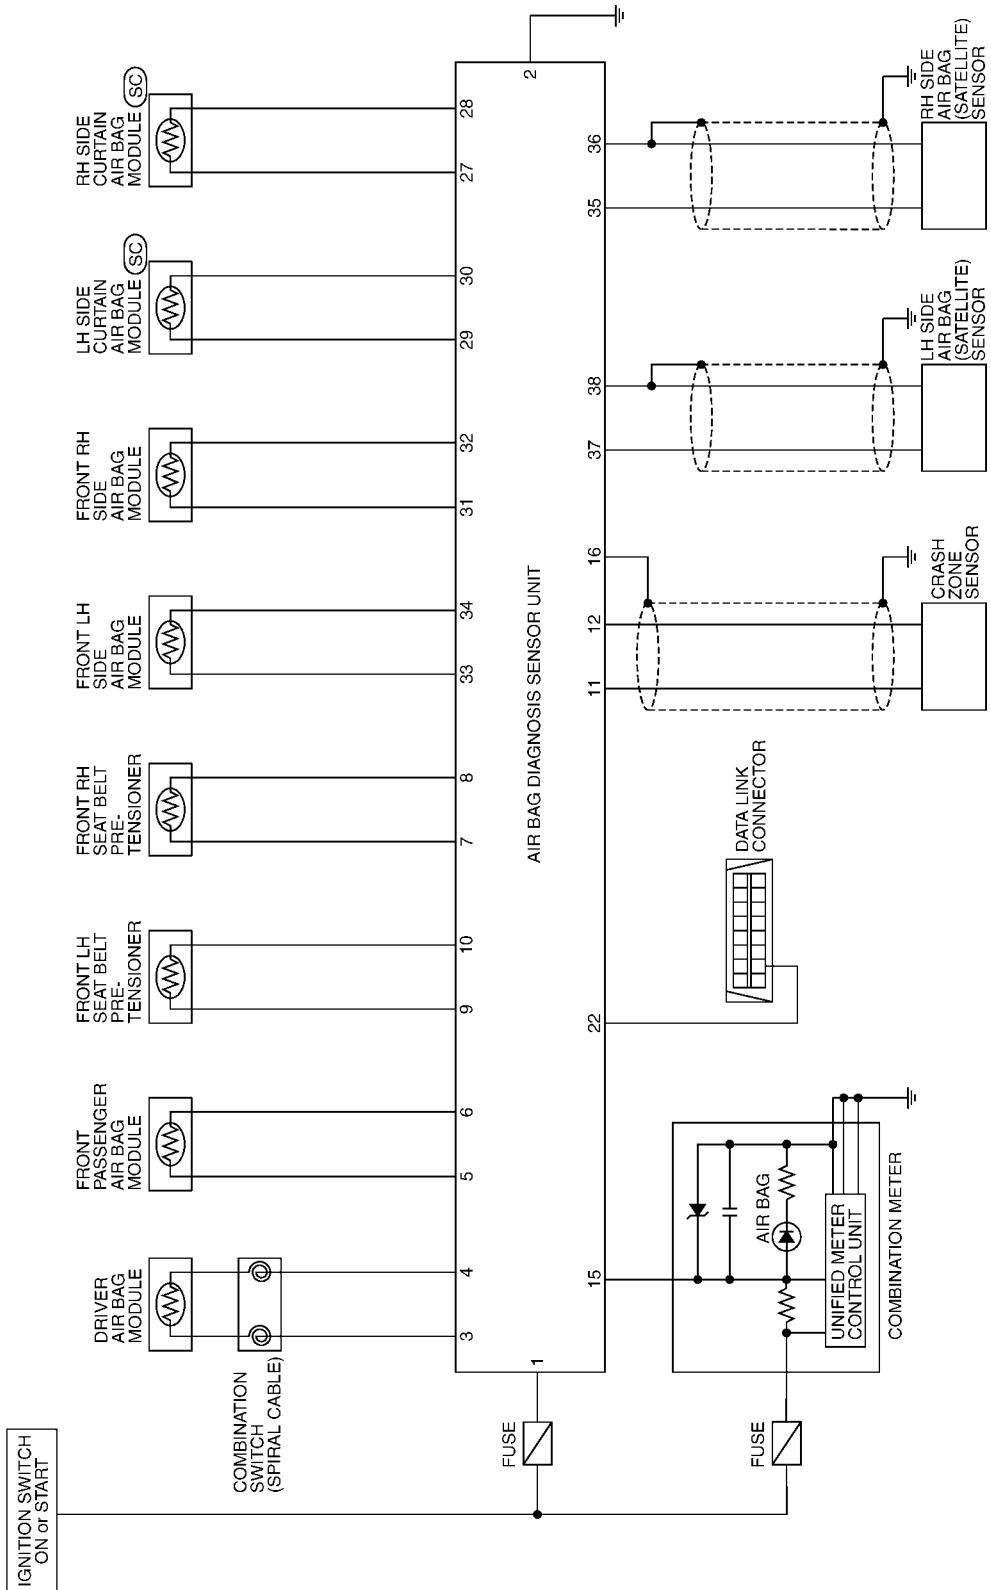

(SC) : With side curtain air bag system

A B C D E F G H I J K L M SRS


MHWA0010E

# TROUBLE DIAGNOSIS

## Wiring Diagram-SRS-




EHS000S3

SRS-SRS-01

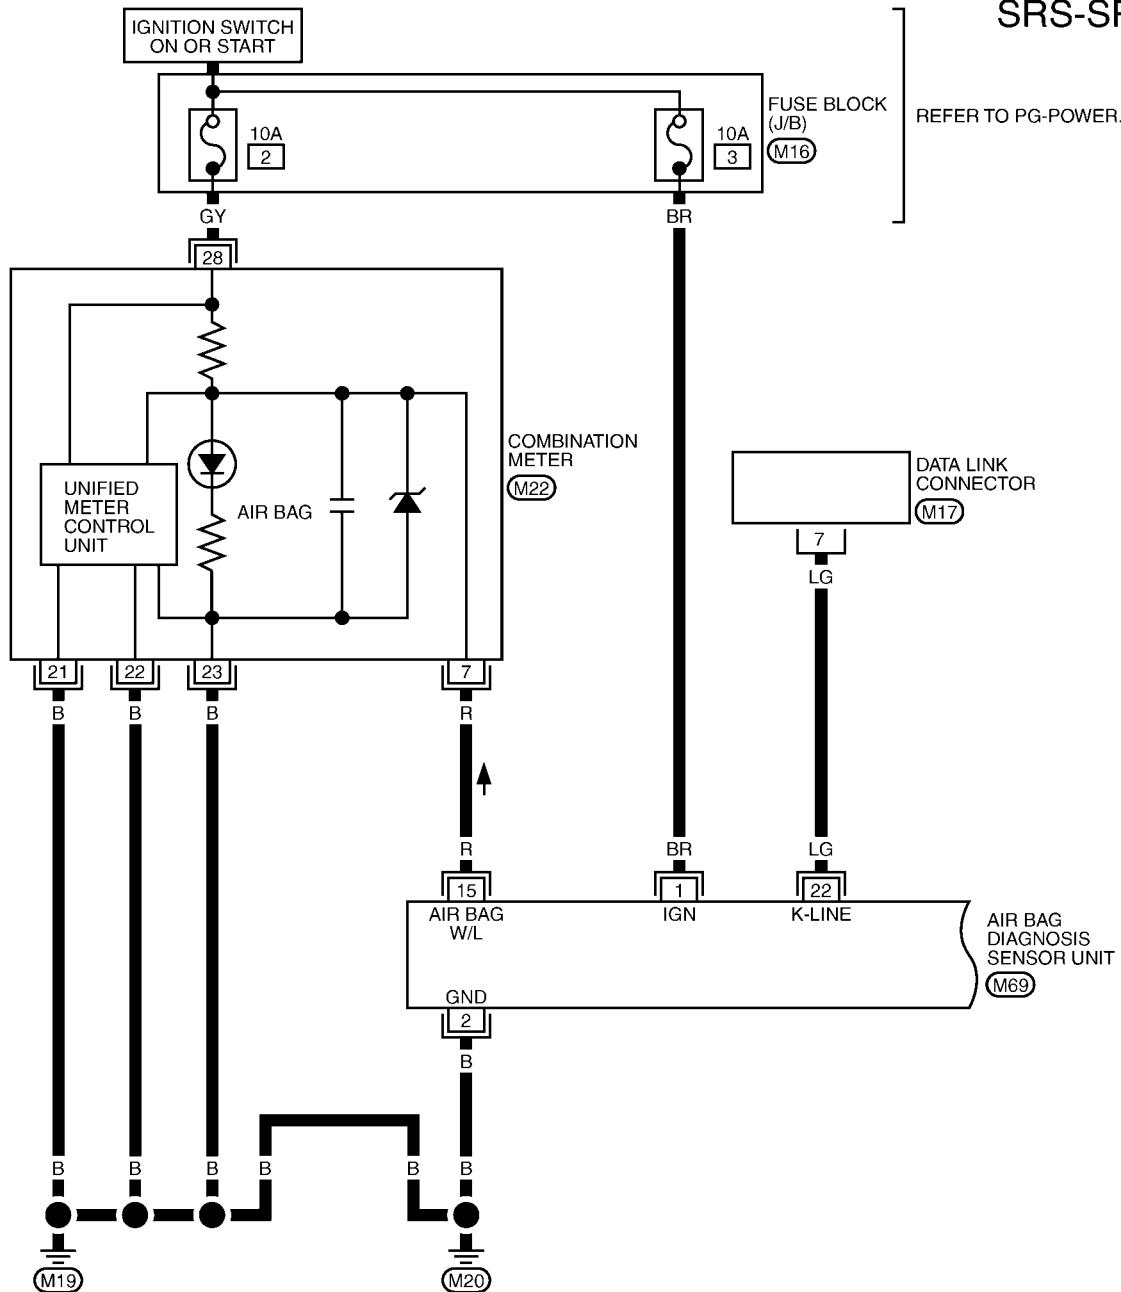

REFER TO THE FOLLOWING.

  
 
(M16) -FUSE BLOCK-  
JUNCTION BOX (J/B)



MHWA0011E

SRS-12

## TROUBLE DIAGNOSIS

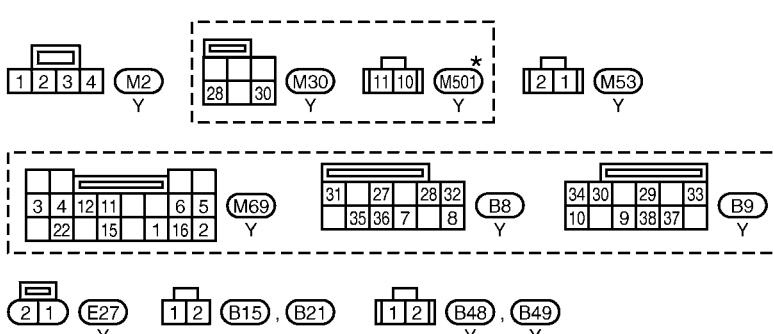
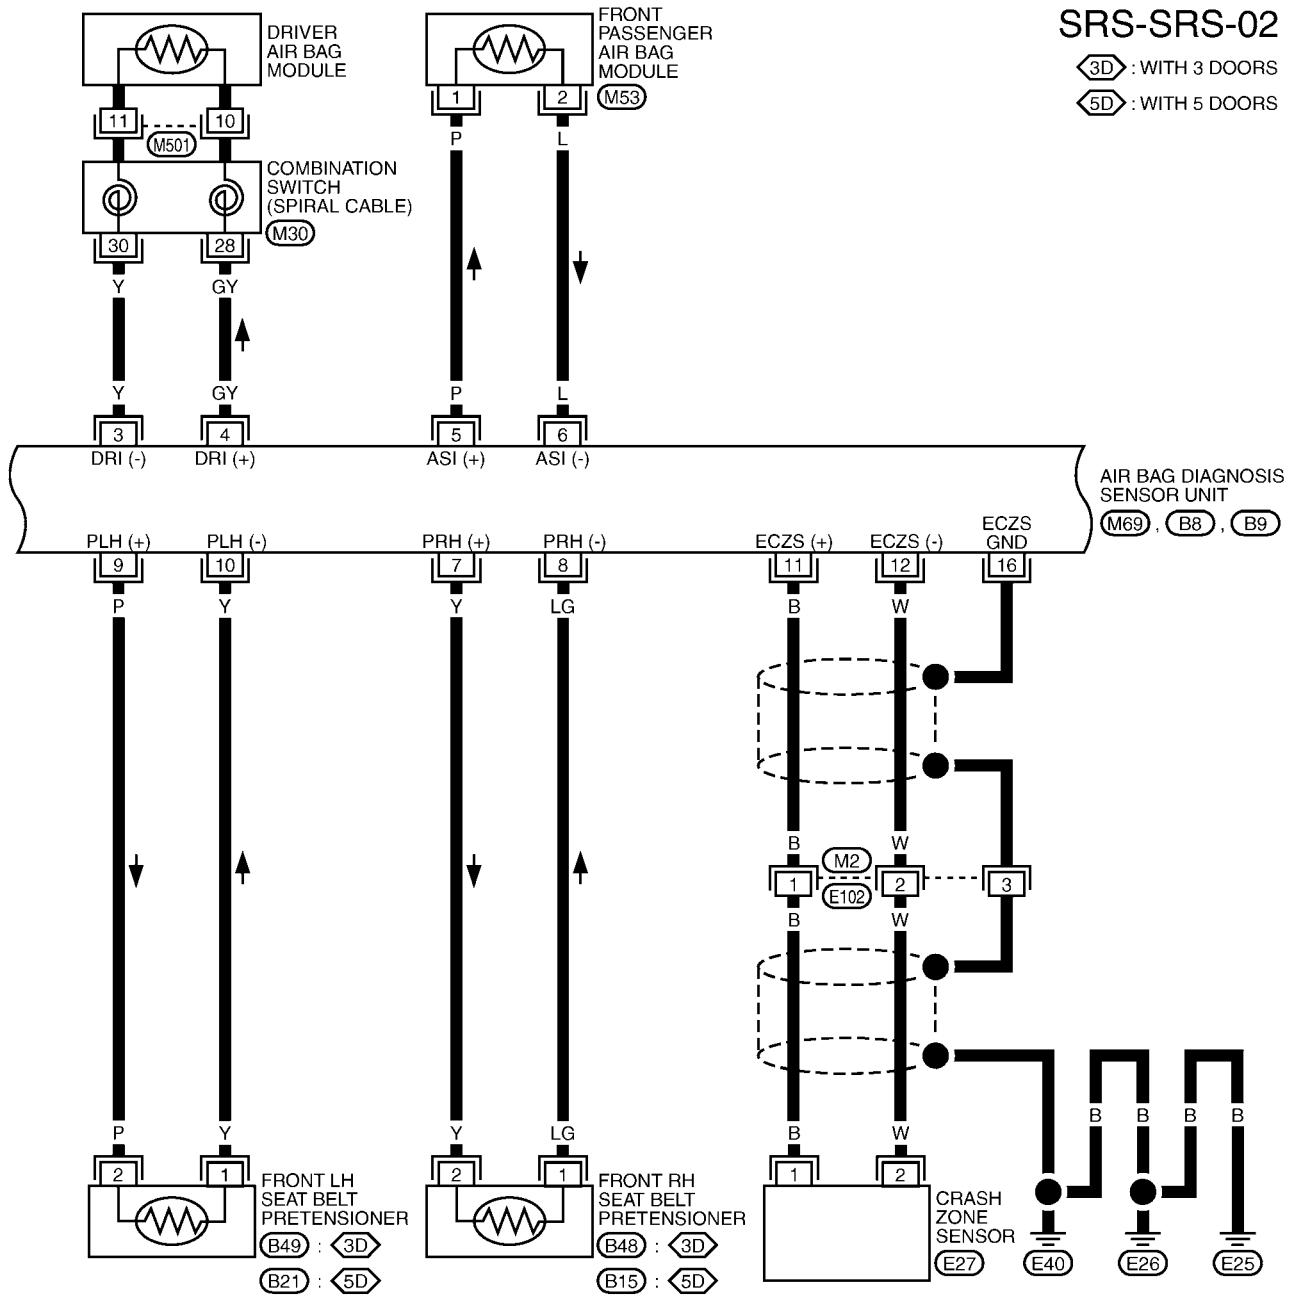


\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

MHWIA0012E

# TROUBLE DIAGNOSIS

SRS-SRS-03

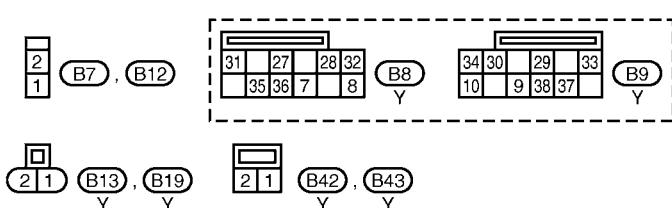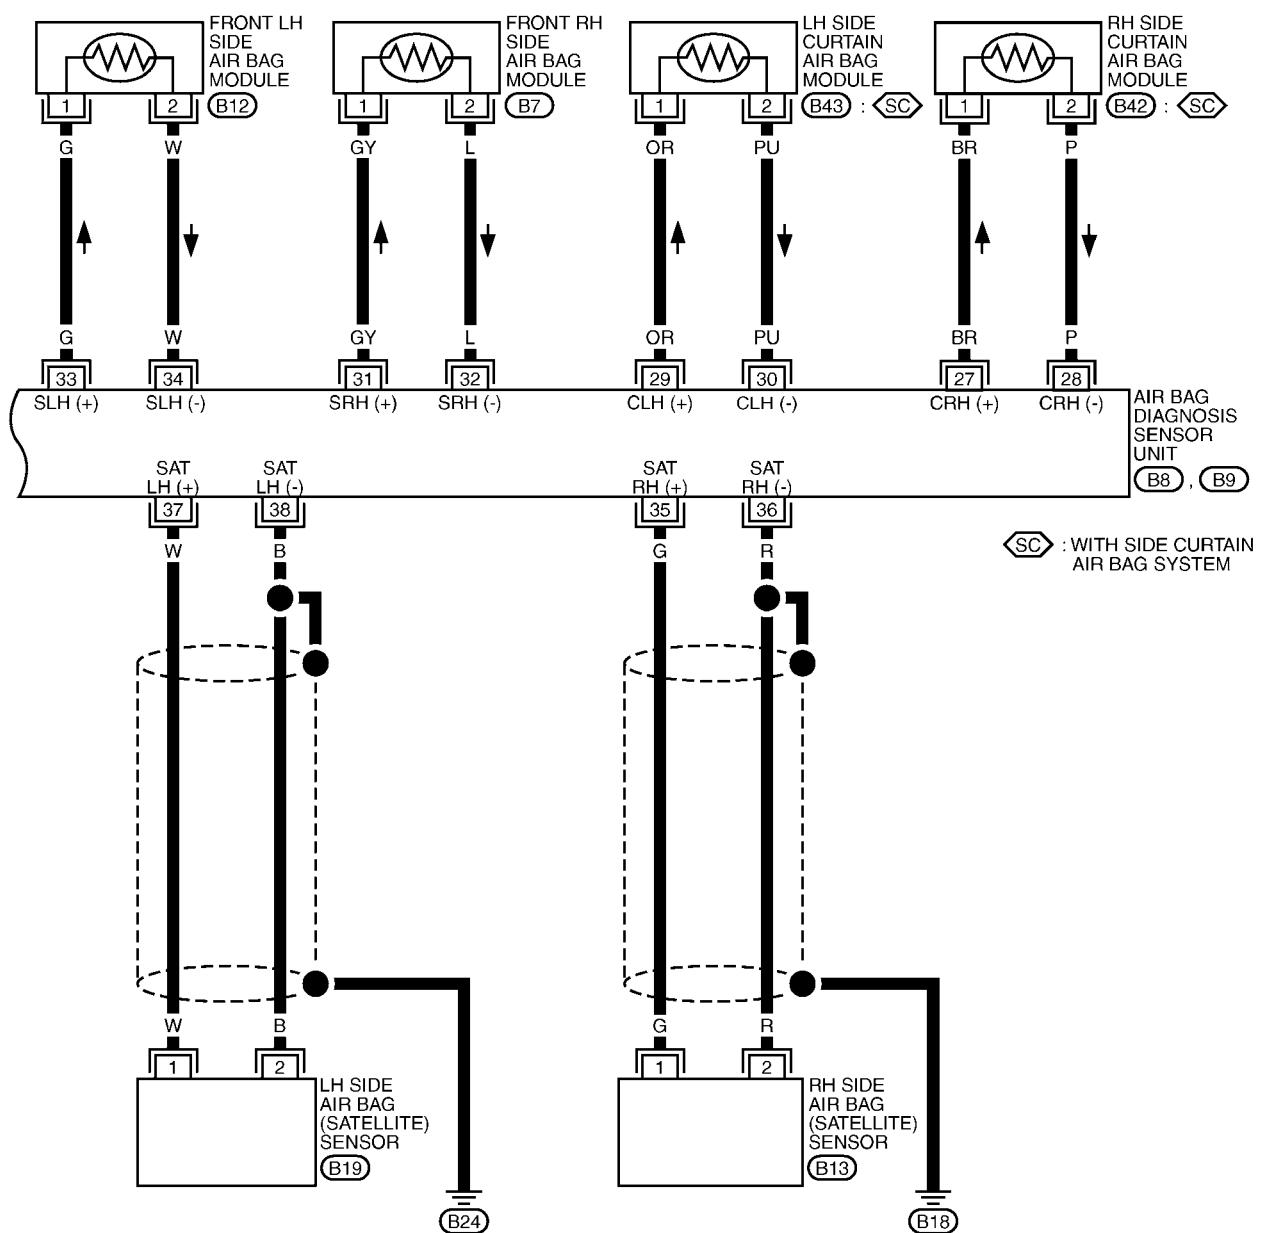

MHWA0013E

SRS-14

## CONSULT-II Function

### DIAGNOSIS MODE FOR CONSULT-II

EHS000S4

- “SELF-DIAG [CURRENT]”  
A current Self-diagnosis result (also indicated by the number of warning lamp flashes in the Diagnosis mode) is displayed on the CONSULT-II screen in real time. This refers to a malfunctioning part requiring repairs.
- “SELF-DIAG [PAST]”  
Diagnosis results previously stored in the memory are displayed on the CONSULT-II screen. The stored results are not erased until memory erasing is executed.
- “TROUBLE DIAG RECORD”  
With TROUBLE DIAG RECORD, diagnosis results previously erased by a reset operation can be displayed on the CONSULT-II screen.
- “ECU DISCRIMINATED NO.”  
The diagnosis sensor unit for each vehicle model is assigned with its own, individual classification number. This number will be displayed on the CONSULT-II screen, as shown. When replacing the diagnosis sensor unit, refer to the part number for the compatibility. After installation, replacement with a correct unit can be checked by confirming this classification number on the CONSULT-II screen.

After repair, make sure the discriminated number shown in figure at right and the discriminated number of diagnosis sensor unit installed to vehicle are same.

Example

ECU DISCRIMINATED NO.  
ECU No.  
xxxxx

PHIA0218E


ECU discriminated No.	With driver air bag module, passenger air bag module, side air bag module and front pre-tensioner seat belt	With driver air bag module, passenger air bag module, side air bag module, front pre-tensioner seat belt and side curtain air bag module
A925	×	—
A926	—	×

SRS

## ② HOW TO CHANGE SELF-DIAGNOSIS MODE WITH CONSULT-II

### From User Mode to Diagnosis Mode

After selecting “AIR BAG” on the “SELECT SYSTEM” screen, User mode automatically changes to Diagnosis mode.

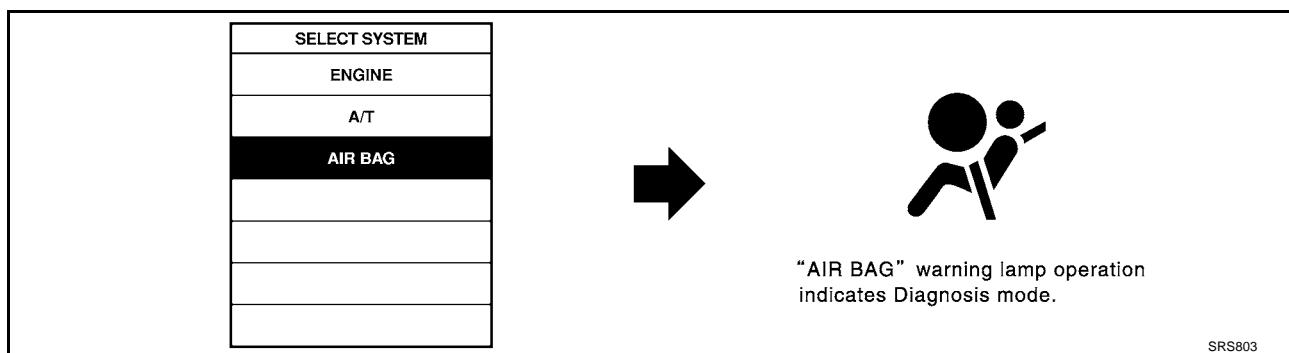


SRS803

# TROUBLE DIAGNOSIS


## From Diagnosis Mode to User Mode

To return to User mode from Diagnosis mode, touch “BACK” key of CONSULT-II until “SELECT SYSTEM” appears, Diagnosis mode automatically changes to User mode.

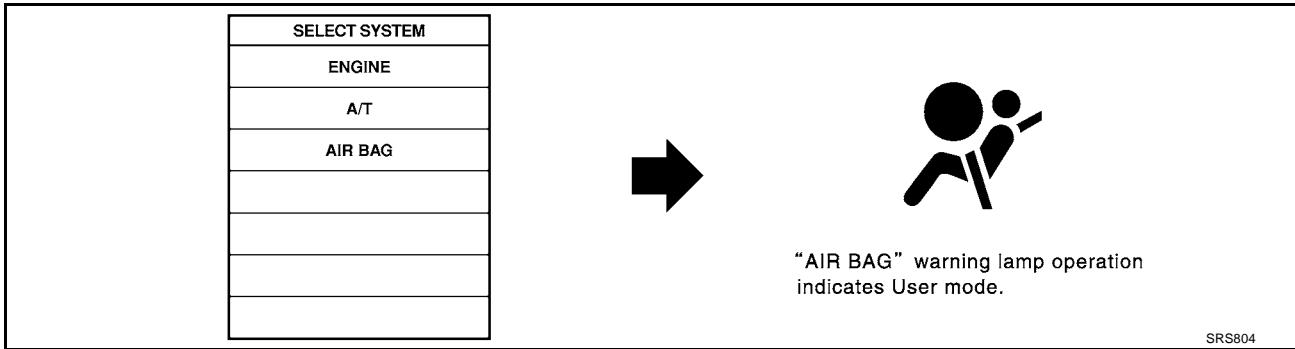

## HOW TO ERASE SELF-DIAGNOSIS RESULTS

- “SELF-DIAG [CURRENT]”  
A current Self-diagnosis result is displayed on the CONSULT-II screen in real time.  
After the malfunction is repaired completely, no malfunction is detected on “SELF-DIAG [CURRENT]”.
  - “SELF-DIAG [PAST]”  
Return to the “SELF-DIAG [CURRENT]” CONSULT-II screen by touching “BACK” key of CONSULT-II and select “SELF-DIAG [CURRENT]” in SELECT DIAG MODE. Touch “ERASE” in “SELF-DIAG [CURRENT]” mode.
- NOTE:**  
If the memory of the malfunction in “SELF-DIAG [PAST]” is not erased, the User mode shows the system malfunction by the operation of the warning lamp even if the malfunction is repaired completely.
- “TROUBLE DIAG RECORD”  
The memory of “TROUBLE DIAG RECORD” cannot be erased.

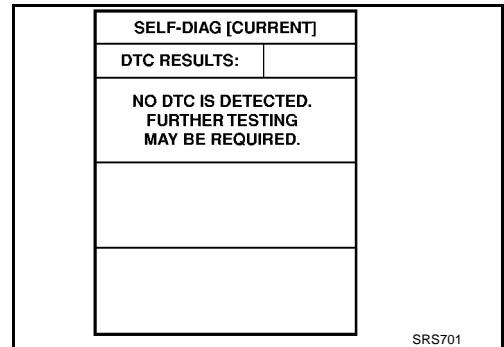


## Self-diagnosis Function (Without CONSULT-II)

EHS00055


- The reading of these results is accomplished using one of two modes — “User mode” and “Diagnosis mode”.
- After a malfunction is repaired, turn the ignition switch OFF for at least one second, then back ON. Diagnosis mode returns to the User mode. At that time, the self-diagnostic result is cleared.

# TROUBLE DIAGNOSIS

## HOW TO CHANGE SELF-DIAGNOSIS MODE

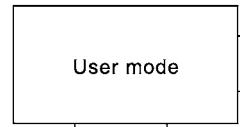

1. Turn ignition switch from OFF to ON.
2. Within 1 second after air bag warning lamp is on for 7 seconds and turns off, turn off ignition switch.
3. After ignition switch is turned off, wait for more than 3 seconds.
4. Repeat steps 1 to 3 twice. (Perform 3 times in total.)
5. Turn ignition switch ON again. (Turn to Diagnosis mode.)

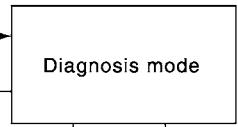

Ignition switch OFF→ON

1. Turn ignition switch from OFF to ON.
2. Within 1 second after air bag warning lamp is on for 7 seconds and turns off, turn off the ignition switch.
3. After ignition switch is turned OFF, wait for more than 3 seconds.
4. Repeat steps 1 to 3 twice. (Perform 3 times in total.)
5. Turn ignition switch ON again. (Turn to User mode.)

Ignition switch OFF→ON

**CAUTION: In user mode, when the "AIR BAG" warning lamp is not blinking, switching to Diagnosis mode by ignition switch operation is not possible.**

**In Diagnosis mode, when no malfunction is detected, user mode can be switched on by turning the ignition switch from OFF to ON.**

PHIA0117E

## HOW TO ERASE SELF-DIAGNOSIS RESULTS

After a malfunction is repaired, turn the ignition switch OFF for at least one second, then back ON. Diagnosis mode returns to the User mode. At that time, the self-diagnostic result is cleared.

A  
B  
C  
D  
E  
F  
G

SRS

### SRS Operation Check

EHS00056

#### DIAGNOSTIC PROCEDURE 1

##### Checking Air Bag Operation by Using "AIR BAG" Warning Lamp-User Mode

1. Turn the ignition switch from OFF to ON, and check that the air bag warning lamp blinks.
2. Compare the SRS air bag warning lamp blinking pattern with the examples.







BF-1845D

I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

## Warning lamp examples

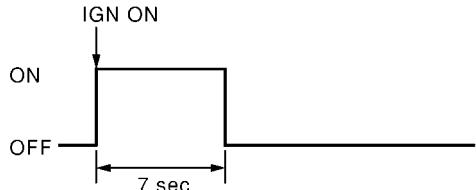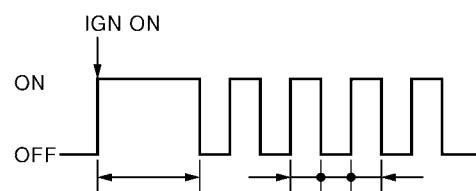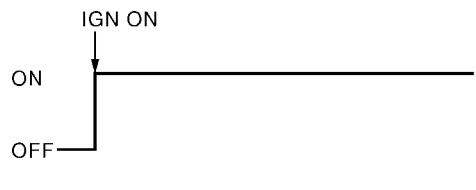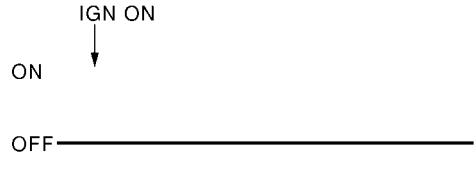“AIR BAG” warning lamp operation-User mode-	SRS condition	Reference item
 <p>SHIA0011E</p>	<ul style="list-style-type: none"> <li>● No malfunction is detected.</li> <li>● No further action is necessary.</li> </ul>	—
 <p>SHIA0012E</p>	<ul style="list-style-type: none"> <li>● The system is malfunctioning and need to be repaired as indicated.</li> </ul>	Go to <a href="#">SRS-19, "DIAGNOSTIC PROCEDURE 2"</a> or <a href="#">SRS-26, "DIAGNOSTIC PROCEDURE 6"</a> .
 <p>SHIA0013E</p>	<ul style="list-style-type: none"> <li>● Air bag is deployed.</li> <li>● Seat belt pre-tensioner is deployed.</li> </ul>	Go to <a href="#">SRS-56, "COLLISION DIAGNOSIS"</a> .
 <p>SHIA0014E</p>	<ul style="list-style-type: none"> <li>● Diagnosis sensor unit is malfunctioning.</li> <li>● Air bag power supply circuit is malfunctioning.</li> <li>● SRS air bag warning lamp circuit is malfunctioning.</li> </ul>	Go to <a href="#">SRS-34, "Trouble Diagnoses: "AIR BAG" Warning Lamp Does Not Turn Off"</a> .
 <p>SHIA0014E</p>	<ul style="list-style-type: none"> <li>● Diagnosis sensor unit is malfunctioning.</li> <li>● Air bag warning lamp circuit is malfunctioning.</li> </ul>	Go to <a href="#">SRS-35, "Trouble Diagnoses: "AIR BAG" Warning Lamp Does Not Turn On"</a> .

# TROUBLE DIAGNOSIS


## Trouble Diagnoses with CONSULT-II DIAGNOSTIC PROCEDURE 2

EHS000S7


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. Turn ignition switch OFF.
2. Connect CONSULT-II and CONSULT-II CONVERTER to the data link connector.

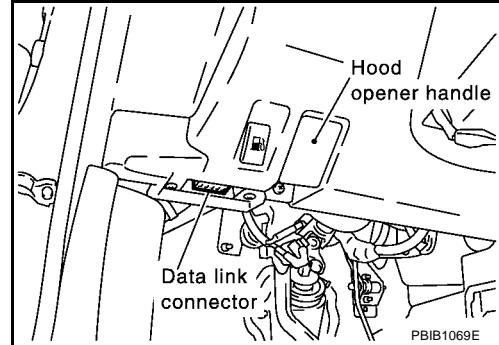


3. Turn ignition switch ON.
4. Touch "START(NISSAN BASED VHCL)".

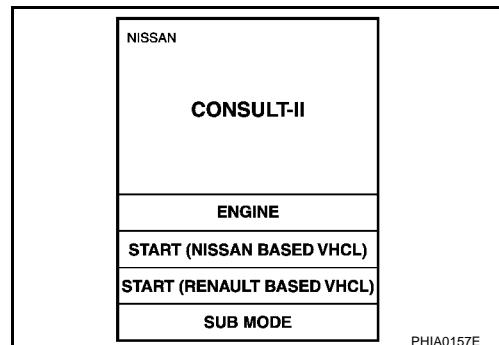

5. Touch "AIR BAG".  
If "AIR BAG" is not indicated, go to [GI-36, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#)

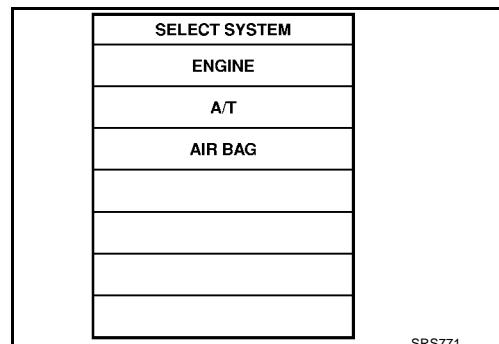

6. Touch "SELF-DIAG [CURRENT]".

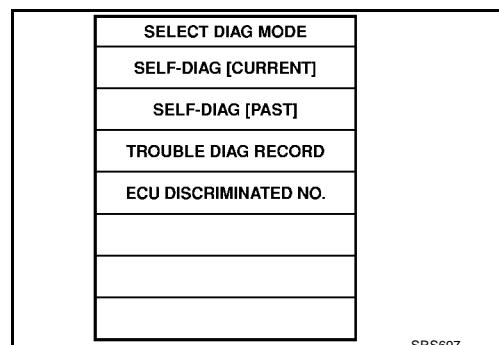

# TROUBLE DIAGNOSIS

7. Diagnostic code is displayed on "SELF-DIAG [CURRENT]".

SELF-DIAG [CURRENT]
DTC RESULTS:
DRIVER AIR BAG MODULE [OPEN]

SHIA0203E

If no malfunction is detected on "SELF-DIAG [CURRENT]" even though malfunction is detected in "SRS Operation Check", check the battery voltage. If the battery voltage is less than 9V, charge or replace the battery. [SRS-20, "DIAGNOSTIC PROCEDURE 3"](#) . If the battery voltage is OK, go to [SRS-26, "DIAGNOSTIC PROCEDURE 5 \(CONTINUED FROM DIAGNOSTIC PROCEDURE 2\)"](#) diagnose the following cases:

- Self-diagnostic result "SELF-DIAG [PAST]" (previously stored in the memory) might not be erased after repair.
- The SRS system malfunctions intermittently.

SELF-DIAG [CURRENT]
DTC RESULTS:
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.

SRS701

## DIAGNOSTIC PROCEDURE 3

### Inspecting SRS Malfunctioning Record

If any malfunction is detected in "SRS Operation check", but no malfunction is detected in "SELF-DIAG[CURRENT]" on CONSULT-II, carry out the following steps.

#### 1. CHECK BATTERY VOLTAGE

Disconnect both battery cables and check that the battery voltage is 9V or more.

OK or NG

- OK    >> Go to 2.  
NG    >> Charge the battery.

#### 2. CONSIDER POSSIBILITY OF NOT ERASING SELF-DIAGNOSTIC RESULT AFTER REPAIRING.

Is it the first time for maintenance of SRS?

YES or NO

- YES    >> GO TO 3.  
NO    >> Erase the self-diagnostic results, and Check the "SRS Operation Check". Refer to [SRS-17, "SRS Operation Check"](#) .

#### 3. CHECK "SELF-DIAG[PAST]" BY CONSULT-II

Store the memory in "SELF-DIAG[PAST]"

YES or NO

- YES    >> Repair the part of "SELF-DIAG [PAST]"  
NO    >> Check the "TROUBLE DIAG RECORD", and then repair it. Refer to [SRS-28, "CONSULT-II Diagnostic Code Chart \("SELF-DIAG \[PAST\]" or TROUBLE DIAG RECORD"\)"](#)

# TROUBLE DIAGNOSIS

## CONSULT-II Diagnostic Code Chart ("SELF-DIAG [CURRENT]")

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
NO DTC IS DETECTED.	<p>When malfunction is indicated by the "AIR BAG" warning lamp in User mode.</p> <ul style="list-style-type: none"> <li>● Low battery voltage (Less than 9V)</li> <li>● Self-diagnostic result "SELF-DIAG [PAST]" (previously stored in the memory) might not be erased after repair.</li> <li>● Intermittent malfunction has been detected in the past.</li> </ul> <p>● No malfunction is detected.</p>	<ul style="list-style-type: none"> <li>● Go to <a href="#">SRS-20, "DIAGNOSTIC PROCEDURE 3"</a> after charging the battery.</li> <li>● Go to <a href="#">SRS-26, "DIAGNOSTIC PROCEDURE 5 (CONTINUED FROM DIAGNOSTIC PROCEDURE 2)"</a>.</li> <li>● Go to <a href="#">SRS-26, "DIAGNOSTIC PROCEDURE 6"</a>.</li> </ul>
DRIVER AIRBAG MODULE [OPEN]	● Driver air bag module circuit is open (including the spiral cable).	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace driver air bag module. (Before disposal, it must be deployed.) 4. Replace the spiral cable. 5. Replace the diagnosis sensor unit. 6. Replace the related harness.
DRIVER AIRBAG MODULE [VB-SHORT]	● Driver air bag module circuit is shorted to a power supply circuit (including the spiral cable).	
DRIVER AIRBAG MODULE [GND-SHORT]	● Driver air bag module circuit is shorted to ground (including the spiral cable).	
DRIVER AIRBAG MODULE [SHORT]	● Driver air bag module circuit is shorted between lines.	
ASSIST A/B MODULE [OPEN]	● Front passenger air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front passenger air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
ASSIST A/B MODULE [VB-SHORT]	● Front passenger air bag module circuit is shorted to a power supply circuit.	
ASSIST A/B MODULE [GND-SHORT]	● Front passenger air bag module circuit is shorted to ground.	
ASSIST A/B MODULE [SHORT]	● Front passenger air bag module circuit is shorted between lines.	
CRASH ZONE SEN [UNIT FAIL] CRASH ZONE SEN [COMM FAIL] CRASH ZONE SEN [UNMATCH]	● Crash zone sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the crash zone sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SIDE MODULE LH [OPEN]	● Front LH side air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front LH setback assembly (front LH side air bag module). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SIDE MODULE LH [VB-SHORT]	● Front LH side air bag module circuit is shorted to a power supply circuit.	
SIDE MODULE LH [GND-SHORT]	● Front LH side air bag module circuit is shorted to ground.	
SIDE MODULE LH [SHORT]	● Front LH side air bag module circuit is shorted between lines.	

A  
B  
C  
D  
E  
F  
G  
SRS

I  
J  
K  
L  
M

## TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
SIDE MODULE RH [OPEN]	● Front RH side air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front RH setback assembly (front RH side air bag module). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SIDE MODULE RH [VB-SHORT]	● Front RH side air bag module circuit is shorted to some power supply circuit.	
SIDE MODULE RH [GND-SHORT]	● Front RH side air bag module circuit is shorted to ground.	
SIDE MODULE RH [SHORT]	● Front RH side air bag module circuit is shorted between lines.	
SATELLITE SENS LH [UNIT FAIL] SATELLITE SENS LH [COMM FAIL]	● LH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the LH side air bag (Satellite) sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
SATELLITE SENS RH [UNIT FAIL] SATELLITE SENS RH [COMM FAIL]	● RH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the RH side air bag (Satellite) sensor. 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
PRE-TEN FRONT LH [OPEN]	● Front LH pre-tensioner circuit is open.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace front LH seat belt. (Before disposal, it must be activated.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
PRE-TEN FRONT LH [VB-SHORT]	● Front LH pre-tensioner circuit is shorted to a power supply circuit.	
PRE-TEN FRONT LH [GND-SHORT]	● Front LH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT LH [SHORT]	● Front LH pre-tensioner circuit is shorted between lines.	
PRE-TEN FRONT RH [OPEN]	● Front RH pre-tensioner circuit is shorted to a power supply circuit.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace front RH seat belt. (Before disposal, it must be activated.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
PRE-TEN FRONT RH [VB-SHORT]	● Front RH pre-tensioner circuit is shorted to a power supply circuit.	
PRE-TEN FRONT RH [GND-SHORT]	● Front RH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT RH [SHORT]	● Front RH pre-tensioner circuit is shorted between lines.	

# TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
CURTAIN MODULE LH [OPEN]	● LH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the LH side curtain air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
CURTAIN MODULE LH [VB-SHORT]	● LH side curtain air bag module circuit is shorted to some power supply circuits.	
CURTAIN MODULE LH [GND-SHORT]	● LH side curtain air bag module circuit is shorted to ground.	
CURTAIN MODULE LH [SHORT]	● LH side curtain air bag module circuit is shorted between lines.	
CURTAIN MODULE RH [OPEN]	● RH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace RH side curtain air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the related harness.
CURTAIN MODULE RH [VB-SHORT]	● RH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN MODULE RH [GND-SHORT]	● RH side curtain air bag module circuit is shorted to ground.	
CURTAIN MODULE RH [SHORT]	● RH side curtain air bag module circuit is shorted between lines.	
CONTROL UNIT	● Diagnosis sensor unit is malfunctioning.	1. Visually check the wiring harness connection. 2. Replace the diagnosis sensor unit.

**NOTE:**

- Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using air bag warning lamp or CONSULT-II each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.


## DIAGNOSTIC PROCEDURE 4

Final checking after repairing SRS by using CONSULT-II — Diagnosis mode

**CAUTION:**


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

- After repairing SRS, connect both battery cables.
- Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.
- Turn ignition switch "ON".

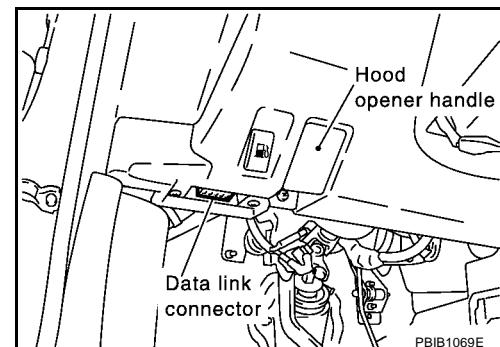


# TROUBLE DIAGNOSIS

4. Touch "START(NISSAN BASED VHCL)".

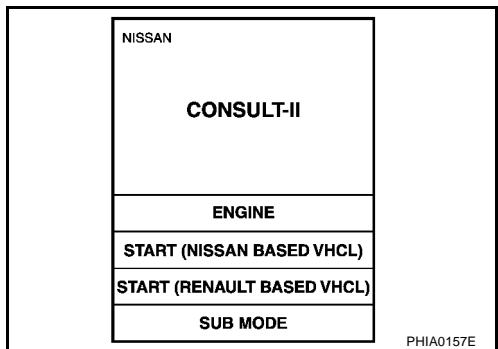


5. Touch "AIR BAG".

If "AIR BAG" is not indicated, go to [GI-36, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#)

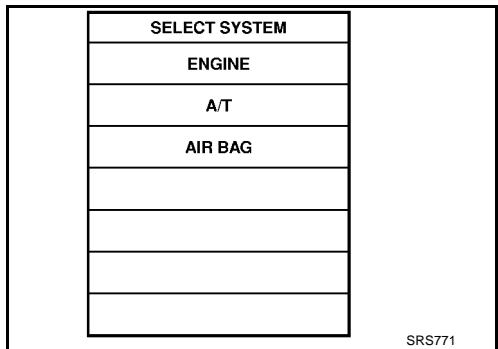


6. Touch "SELF-DIAG [CURRENT]".

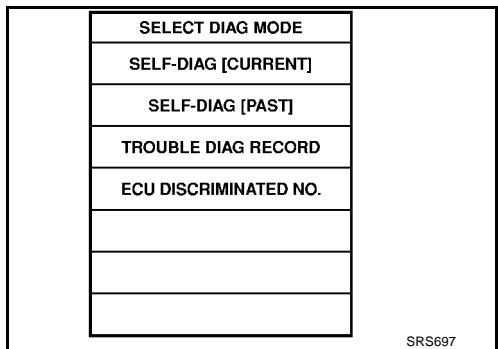

7. If no malfunction is detected on "SELF-DIAG [CURRENT]", repair of SRS is completed. Go to step 8.

If any malfunction is detected on "SELF-DIAG [CURRENT]", the malfunctioning part is not repaired completely or another malfunctioning part is detected. Go to [SRS-19, "DIAGNOSTIC PROCEDURE 2"](#), and repair malfunctioning part completely.

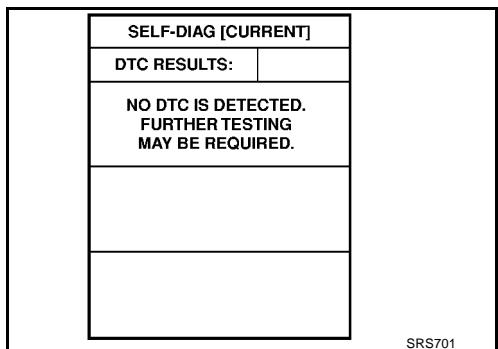


8. Touch "ERASE".

**NOTE:**

Touch "ERASE" to clear the memory of the malfunction ("SELF-DIAG [PAST]").

If the memory of the malfunction in "SELF-DIAG [PAST]" is not erased, the User mode shows the system malfunction by the operation of the warning lamp even if the malfunction is repaired completely.

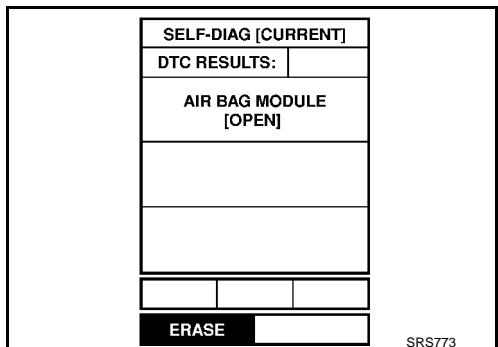

## TROUBLE DIAGNOSIS

9. Touch “BACK” key of CONSULT-II to “SELECT DIAG MODE” screen. Touch “SELF-DIAG [PAST]”.

SELECT DIAG MODE
SELF-DIAG [CURRENT]
SELF-DIAG [PAST]
TROUBLE DIAG RECORD
ECU DISCRIMINATED NO.

SRS697

10. Check that no malfunction is detected on “SELF-DIAG [PAST]”.  
11. Touch “BACK” key of CONSULT-II until “SELECT SYSTEM” appears in order to return to User mode from Diagnosis mode.  
12. Turn ignition switch OFF then turn off and disconnect CONSULT-II.  
13. Go to [SRS-17, "Checking Air Bag Operation by Using "AIR BAG" Warning Lamp-User Mode"](#).

SELF-DIAG [PAST]
DTC RESULTS:
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.

SRS702

A  
B  
C  
D

E  
F  
G

SRS

I  
J

K  
L

M

# TROUBLE DIAGNOSIS

## DIAGNOSTIC PROCEDURE 5 (CONTINUED FROM DIAGNOSTIC PROCEDURE 2)

### Inspecting SRS malfunctioning record

#### 1. CONSIDER POSSIBILITY OF NOT ERASING SELF-DIAGNOSTIC RESULT AFTER REPAIRING

Is it the first time for maintenance of SRS?

Yes or No

Yes >> Go to [SRS-19, "DIAGNOSTIC PROCEDURE 2"](#) .

No >> Self-diagnostic result "SELF-DIAG [PAST]" (previously stored in the memory) might not be erased after repair. Go to [SRS-20, "DIAGNOSTIC PROCEDURE 3"](#) .


## DIAGNOSTIC PROCEDURE 6

### Inspecting SRS intermittent malfunction by using CONSULT-II — Diagnosis mode


#### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunction might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. Turn ignition switch OFF.
2. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.

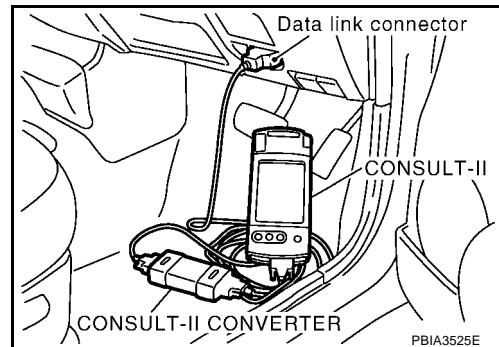


3. Turn ignition switch ON.
4. Touch "START(NISSAN BASED VHCL)".

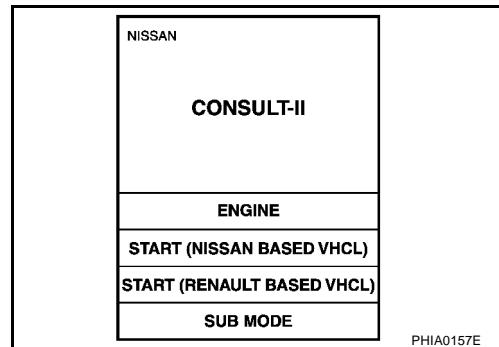

5. Touch "AIR BAG".

If "AIR BAG" is not indicated, go to [SRS-28, "CONSULT-II Diagnostic Code Chart \("SELF-DIAG \[PAST\]" or TROUBLE DIAG RECORD"\)"](#)

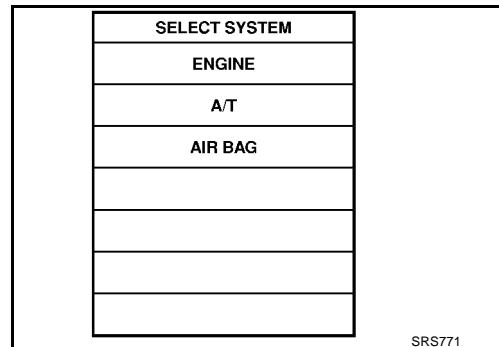

# TROUBLE DIAGNOSIS

6. Touch "SELF-DIAG [PAST]".

SELECT DIAG MODE
SELF-DIAG [CURRENT]
SELF-DIAG [PAST]
TROUBLE DIAG RECORD
ECU DISCRIMINATED NO.

SRS697

7. If diagnostic codes are displayed on "SELF-DIAG [PAST]", go to step 10.

SELF-DIAG [PAST]
DTC RESULTS: <input type="text"/>
AIR BAG MODULE [OPEN]

SRS700

If no malfunction is detected on "SELF-DIAG [PAST]", touch "BACK" and go back to "SELECT DIAG MODE".

SELF-DIAG [PAST]
DTC RESULTS: <input type="text"/>
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.

SRS702

8. Touch "TROUBLE DIAG RECORD".

**NOTE:**

With "TROUBLE DIAG RECORD", diagnosis results previously erased by a reset operation can be displayed.

SELECT DIAG MODE
SELF-DIAG [CURRENT]
SELF-DIAG [PAST]
TROUBLE DIAG RECORD
ECU DISCRIMINATED NO.

SRS697

9. Diagnostic code is displayed on "TROUBLE DIAG RECORD".

10. Touch "PRINT".

11. Compare diagnostic codes to [SRS-28, "CONSULT-II Diagnostic Code Chart \("SELF-DIAG \[PAST\]" or TROUBLE DIAG RECORD"\)](#).

12. Touch "BACK" key of CONSULT-II until "SELECT SYSTEM" appears.

13. Turn ignition switch OFF, then turn off and disconnect CONSULT-II, and both battery cables.

TROUBLE DIAG RECORD
DTC RESULTS: <input type="text"/>
DRIVER AIR BAG MODULE [OPEN]

SHIA0182E

## TROUBLE DIAGNOSIS

14. Repair the system as outlined by the "Repair order" in "Intermittent Malfunction Diagnostic Code Chart", that corresponds to the self-diagnostic result. For replacement procedure of component parts, refer to the Removal and Installation procedure for the appropriate component.
15. Go to [SRS-20, "DIAGNOSTIC PROCEDURE 3"](#), for final checking.

### CONSULT-II Diagnostic Code Chart ("SELF-DIAG [PAST]" or TROUBLE DIAG RECORD")

Diagnostic item	Explanation		Repair order "Recheck SRS at each replacement"
NO DTC IS DETECTED.	When malfunction is indicated by the "AIR BAG" warning lamp in User mode.	● Low battery voltage (Less than 9V)	● Go to <a href="#">SRS-20, "DIAGNOSTIC PROCEDURE 3"</a> .
	● No malfunction is detected.		● Go to <a href="#">SRS-20, "DIAGNOSTIC PROCEDURE 3"</a> .
DRIVER AIRBAG MODULE [OPEN]	● Driver air bag module circuit is open (including the spiral cable).		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage.
DRIVER AIRBAG MODULE [VB-SHORT]	● Driver air bag module circuit is shorted to a power supply circuit (including the spiral cable).		3. If the harness check result is OK, replace driver air bag module (Before disposal, it must be deployed.), diagnosis sensor unit and spiral cable.
DRIVER AIRBAG MODULE [GND-SHORT]	● Driver air bag module circuit is shorted to ground (including the spiral cable).		
DRIVER AIRBAG MODULE [SHORT]	● Driver air bag module circuit is shorted between lines.		
ASSIST A/B MODULE [OPEN]	● Front passenger air bag module circuit is open.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage.
ASSIST A/B MODULE [VB-SHORT]	● Front passenger air bag module circuit is shorted to a power supply circuit.		3. If the harness check result is OK, replace the diagnosis sensor unit and front passenger air bag module (Before disposal, it must be deployed.).
ASSIST A/B MODULE [GND-SHORT]	● Front passenger air bag module circuit is shorted to ground.		
ASSIST A/B MODULE [SHORT]	● Front passenger air bag module circuit is shorted between lines.		
CRASH ZONE SEN [UNIT FAIL] CRASH ZONE SEN [COMM FAIL]	● Crash zone sensor		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace crash zone sensor and diagnosis sensor unit.
SIDE MODULE LH [OPEN]	● Front LH side air bag module circuit is open.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage.
SIDE MODULE LH [VB-SHORT]	● Front LH side air bag module circuit is shorted to a power supply circuit.		3. If the harness check result is OK, replace the diagnosis sensor unit and LH side air bag module. (Before disposal, it must be deployed.).
SIDE MODULE LH [GND-SHORT]	● Front LH side air bag module circuit is shorted to ground.		
SIDE MODULE LH [SHORT]	● Front LH side air bag module circuit is shorted between lines.		

# TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
SIDE MODULE RH [OPEN]	● Front RH side air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and RH side air bag module (Before disposal, it must be deployed.)
SIDE MODULE RH [VB-SHORT]	● Front RH side air bag module circuit is shorted to a power supply circuit.	
SIDE MODULE RH [GND-SHORT]	● Front RH side air bag module circuit is shorted to ground.	
SIDE MODULE RH [SHORT]	● Front RH side air bag module circuit is shorted between lines.	
SATELLITE SENS LH [UNIT FAIL] SATELLITE SENS LH [COMM FAIL]	● LH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and LH side air bag (Satellite) sensor.
SATELLITE SENS RH [UNIT FAIL] SATELLITE SENS RH [COMM FAIL]	● RH side air bag (Satellite) sensor	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and RH side air bag (Satellite) sensor.
PRE-TEN FRONT LH [OPEN]	● Front LH pre-tensioner circuit is open.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and front LH seat belt (Before disposal, it must be activated.)
PRE-TEN FRONT LH [VB-SHORT]	● Front LH pre-tensioner circuit is shorted to a power supply circuit.	
PRE-TEN FRONT LH [GND-SHORT]	● Front LH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT LH [SHORT]	● Front LH pre-tensioner circuit is shorted between lines.	
PRE-TEN FRONT RH [OPEN]	● Front RH pre-tensioner circuit is open.	1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and front RH seat belt (Before disposal, it must be activated.)
PRE-TEN FRONT RH [VB-SHORT]	● Front RH pre-tensioner circuit is shorted to a power supply circuit.	
PRE-TEN FRONT RH [GND-SHORT]	● Front RH pre-tensioner circuit is shorted to ground.	
PRE-TEN FRONT RH [SHORT]	● Front RH pre-tensioner circuit is shorted between lines.	
CURTAIN MODULE LH [OPEN]	● LH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and LH side curtain air bag module (Before disposal, it must be deployed.)
CURTAIN MODULE LH [VB-SHORT]	● LH side curtain air bag module circuit is shorted to a power supply circuits.	
CURTAIN MODULE LH [GND-SHORT]	● LH side curtain air bag module circuit is shorted to ground.	

A  
B  
C  
D  
E  
F  
G

SRS

I  
J  
K  
L  
M

# TROUBLE DIAGNOSIS

Diagnostic item	Explanation	Repair order "Recheck SRS at each replacement"
CURTAIN MODULE RH [OPEN]	● RH side curtain air bag module circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check result is OK, replace the diagnosis sensor unit and RH side curtain air bag module. (Before disposal, it must be deployed.)
CURTAIN MODULE RH [VB-SHORT]	● RH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN MODULE RH [GND-SHORT]	● RH side curtain air bag module circuit is shorted to ground.	
CURTAIN MODULE RH [SHORT]	● RH side curtain air bag module circuit is shorted between lines.	
CONTROL UNIT	● Diagnosis sensor unit is malfunctioning.	1. Visually check the wiring harness connection. 2. Replace the diagnosis sensor unit.

## Trouble diagnoses without CONSULT-II.

EHS000S8

### DIAGNOSTIC PROCEDURE 7

#### Inspecting SRS malfunctioning parts by using "AIR BAG" warning lamp—Diagnosis mode

##### NOTE:

SRS will not enter Diagnosis mode if no malfunction is detected in User mode.

1. Turn ignition switch ON.
2. After "AIR BAG" warning lamp lights for 7 seconds, turn ignition switch OFF within 1 second.
3. Wait more than 3 seconds.
4. Repeat the steps 1 to 3 two times.
5. Turn ignition switch ON.

SRS is now in Diagnosis mode.

"AIR BAG" warning lamp operates in Diagnosis mode as follows:

### WARNING LAMP FLASH CODE CHART

<Diagnosis results (previously stored in the memory) might not be erased after repair or intermittent malfunctions have been detected in the past.>

Flash pattern	Repair order
a through b are repeated.  	1. Go to DIAGNOSTIC PROCEDURES 2 and 3.

SHIA0026E

<Driver air bag module>

Flash pattern	Repair order
a through d are repeated.  d: Two flashes indicates malfunctioning driver air bag module circuit.  	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the spiral cable. 4. Replace driver air bag module. (Before disposal, it must be deployed.) 5. Replace the diagnosis sensor unit. 6. Replace the related harness.

PHIA0185E

# TROUBLE DIAGNOSIS

## <Diagnosis sensor unit>

Flash pattern	Repair order
<p>a through d are repeated. d: Seven flashes indicate malfunctioning diagnosis sensor unit circuit.</p>	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace the diagnosis sensor unit.</li> <li>4. Replace the related harness.</li> </ol>

SHIA0028E

## <Front passenger air bag module>

Flash pattern	Repair order
<p>a through d are repeated. d: Eight flashes indicate malfunctioning front passenger air bag module circuit.</p>	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace front passenger air bag module. (Before disposal, it must be deployed.)</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0029E

## <Crash zone sensor>

Flash pattern	Repair order
<p>a through d are repeated. d: Six flashes indicate malfunctioning crash zone sensor circuit.</p>	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace the crash zone sensor.</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0083E


## <Front RH seat belt pre-tensioner>

Flash pattern	Repair order
<p>a through d are repeated. d: One flash indicates malfunctioning front RH seat belt pre-tensioner circuit.</p>	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace front RH seat belt pre-tensioner. (Before disposal, it must be activated.)</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0030E


# TROUBLE DIAGNOSIS

## <Front LH seat belt pre-tensioner>

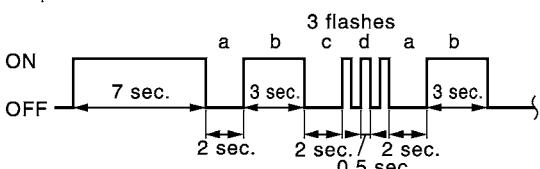Flash pattern	Repair order
<p>a through d are repeated. d: Three flashes indicate malfunctioning front LH seat belt pre-tensioner circuit.</p> 	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace front LH seat belt pre-tensioner. (Before disposal, it must be activated.)</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>


SHIA0031E

## <RH side air bag (Satellite) sensor>

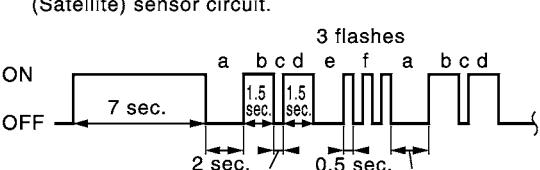Flash pattern	Repair order
<p>a through f are repeated. f: Three flashes indicate malfunctioning RH side air bag (Satellite) sensor circuit.</p> 	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace the RH side air bag (Satellite) sensor.</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>


SHIA0032E

## <LH side air bag (Satellite) sensor>

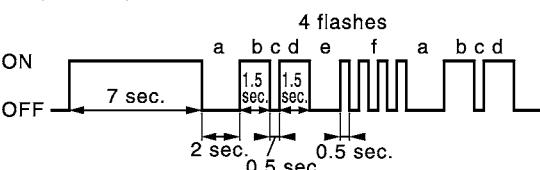Flash pattern	Repair order
<p>a through f are repeated. f: Four flashes indicate malfunctioning LH side air bag (Satellite) sensor.</p> 	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace the LH side air bag (Satellite) sensor.</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0033E


## <Front RH side air bag module>

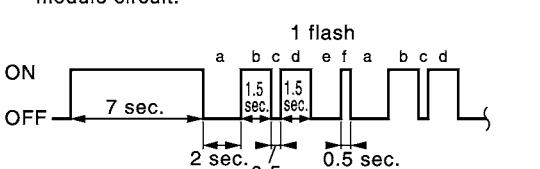Flash pattern	Repair order
<p>a through f are repeated. f: One flash indicate malfunctioning front RH side air bag module circuit.</p> 	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace front RH side air bag module. (Before disposal, it must be deployed.)</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0034E

# TROUBLE DIAGNOSIS

## <Front LH side air bag module>

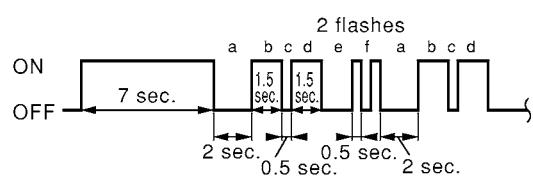Flash pattern	Repair order
<p>a through f are repeated. f: Two flashes indicate malfunctioning front LH side air bag module circuit.</p> 	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace front LH side air bag module. (Before disposal, it must be deployed.)</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0035E

A

B

C

D


E

F

G

SRS

## <RH side curtain air bag module>

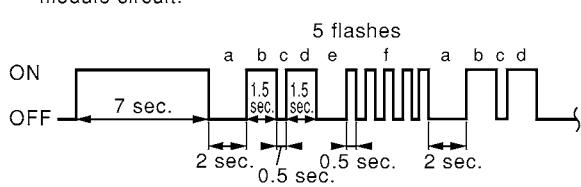Flash pattern	Repair order
<p>a through f are repeated. f: Five flashes indicate malfunctioning RH side curtain air bag module circuit.</p> 	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace RH side curtain air bag module. (Before disposal, it must be deployed.)</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0084E

I


J

K

L

M

## <LH side curtain air bag module>

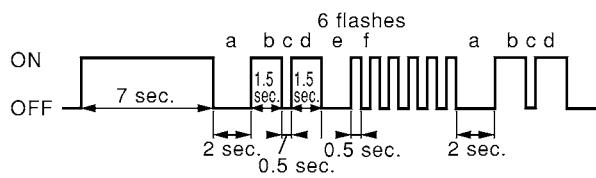Flash pattern	Repair order
<p>a through f are repeated. f: Six flashes indicate malfunctioning LH side curtain air bag module circuit.</p> 	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connection.</li> <li>2. Replace the harness if it has visible damage.</li> <li>3. Replace LH side curtain air bag module. (Before disposal, it must be deployed.)</li> <li>4. Replace the diagnosis sensor unit.</li> <li>5. Replace the related harness.</li> </ol>

SHIA0086E

# TROUBLE DIAGNOSIS

## Trouble Diagnoses: "AIR BAG" Warning Lamp Does Not Turn Off

### DIAGNOSTIC PROCEDURE 8

EHS000S9

#### 1. SEE THE DEPLOYMENT OF AIR BAG MODULE

Is air bag module deployed?

Yes or No

Yes >> Refer to [SRS-56, "COLLISION DIAGNOSIS"](#) .

No >> GO TO 2.

#### 2. CHECK THE AIR BAG FUSE

Check the fuse (No.3) [located in the fuse block (J/B)].

Refer to [PG-4, "POWER SUPPLY ROUTING"](#) .

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

#### 3. CHECK AIR BAG FUSE AGAIN

Replace "AIR BAG" fuse and turn ignition switch ON.

Does the "AIR BAG" fuse blow again?

Yes >> Repair main harness.

No >> **INSPECTION END**.

#### 4. CHECK DIAGNOSIS SENSOR UNIT




Connect CONSULT-II and touch "START".

- Is "AIR BAG" displayed on CONSULT-II?

Yes or No

Yes >> GO TO 5.

No >> Visually check the wiring harness connection of diagnosis sensor unit. If the harness connection check result is OK, replace diagnosis sensor unit.

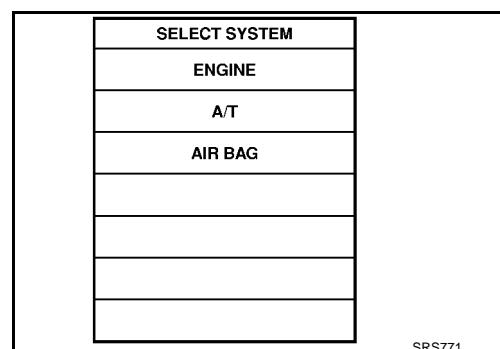

#### 5. CHECK HARNESS CONNECTION

Is harness connection between warning lamp and diagnosis sensor unit OK?

OK or NG

OK >> Replace diagnosis sensor unit.

NG >> Connect "AIR BAG" warning lamp and diagnosis sensor unit connector properly. If "AIR BAG" warning lamp still does not go off, replace harness.

# TROUBLE DIAGNOSIS

## Trouble Diagnoses: "AIR BAG" Warning Lamp Does Not Turn On

### DIAGNOSTIC PROCEDURE 9

EHS000SA

#### 1. CHECK "METER" FUSE

Check the 10A meter fuse 2 [located in the fuse block (J/B)].  
Refer to [PG-4, "POWER SUPPLY ROUTING"](#).

OK or NG

OK      >> GO TO 3.  
NG      >> GO TO 2.

#### 2. CHECK "METER" FUSE AGAIN

Replace 10A meter fuse (No.2) [located in the fuse block (J/B)] and turn ignition switch ON.

Does the meter fuse blow again?

Yes      >> Repair the related harness.  
No      >> **INSPECTION END**.

#### 3. CHECK HARNESS CONNECTION BETWEEN DIAGNOSIS SENSOR UNIT AND COMBINATION METER

Disconnect diagnosis sensor unit connector and turn ignition switch ON.

- Does "AIR BAG" warning lamp turn on?

Yes or No

Yes      >> Replace diagnosis sensor unit.  
No      >> Check the ground circuit of "AIR BAG" warning lamp.

A

B

C

D

E

F

G

SRS

I

J

K

L

M

# DRIVER AIR BAG MODULE


## DRIVER AIR BAG MODULE

PFP:K8510

### Removal and Installation

EHS000QZ

SEC. 484

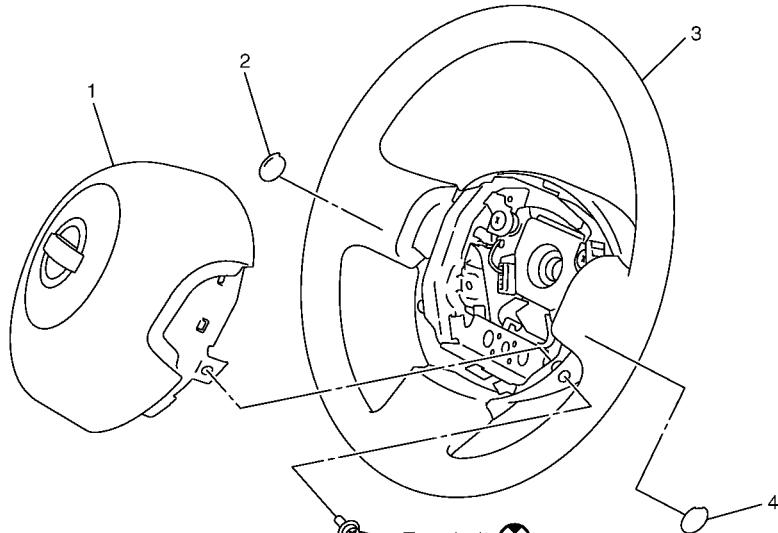

: Always replace after every disassembly.

4.9 - 13.7 N·m (0.5 - 1.3 kg·m, 44 - 121 in·lb)

MIB0242E

1. Driver air bag module

2. Side lid (LH)

3. Steering wheel

4. Side lid (RH)


### REMOVAL

#### CAUTION:

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.

- Always work from the side of driver air bag module.

- Remove the side lids.
- Remove the right and left side special bolts (Torx bolts).

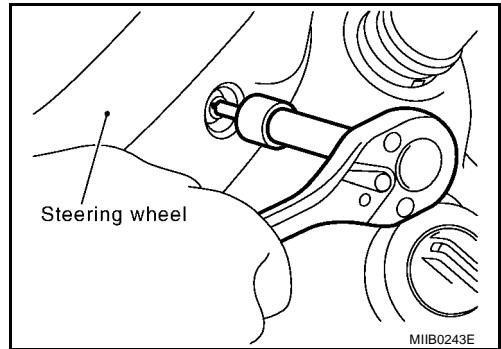


- Disconnect the steering wheel switch sub-harness connector.

- Disconnect the air bag harness connector, and remove the driver air bag module.

#### CAUTION:

- For removing and installing air bag harness connector, insert a flat-bladed screwdriver wrapped with a tape into lock, and raise lock to remove connector.
- Install connector with lock raised, and push lock into connector.
- Confirm the lock is fully pushed in after mounting connector.

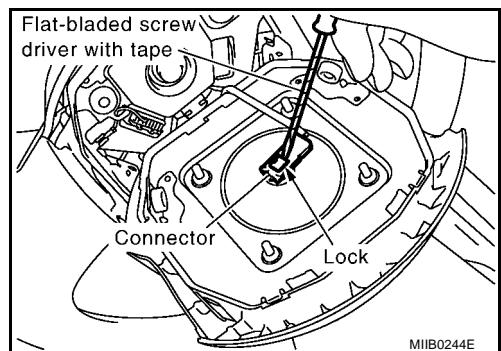


MIB0244E

# DRIVER AIR BAG MODULE


## CAUTION:

- Always work from the side of driver air bag module.
- Always place driver air bag module with pad side facing upward.
- Do not insert any foreign objects (screwdriver, etc.) into driver air bag module.
- Do not attempt to disassemble driver air bag module.
- Do not use old bolts after removal; replace with new bolts.

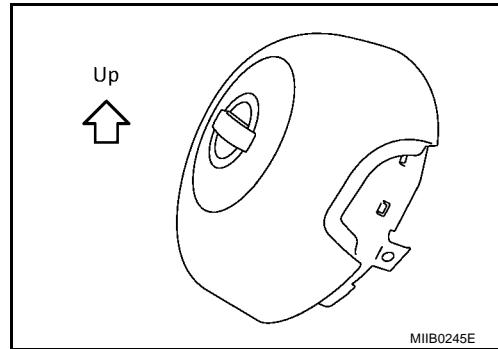

MIIB0245E

- Do not expose the driver air bag module to temperatures exceeding 90°C (194°F).
- Replace driver air bag module if it has been dropped or sustained an impact.
- Do not allow oil, grease or water to come in contact with the front passenger air bag module.

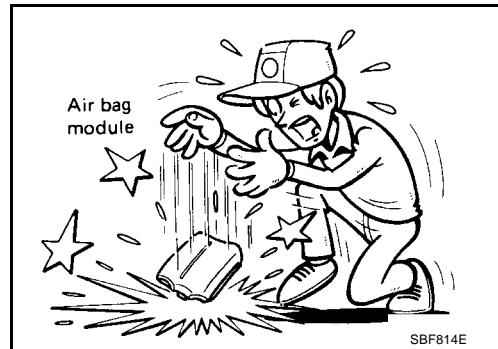

SBF814E

## INSTALLATION

Install in the reverse order of removal.

- For installing the air bag module, tighten the special bolts (TORX bolts).
- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-17, "SRS Operation Check"](#).


A  
B  
C  
D  
E  
F  
G  
SRS  
I  
J  
K  
L  
M

## SPIRAL CABLE

PFP:25554

## Removal and Installation

EHS000R0

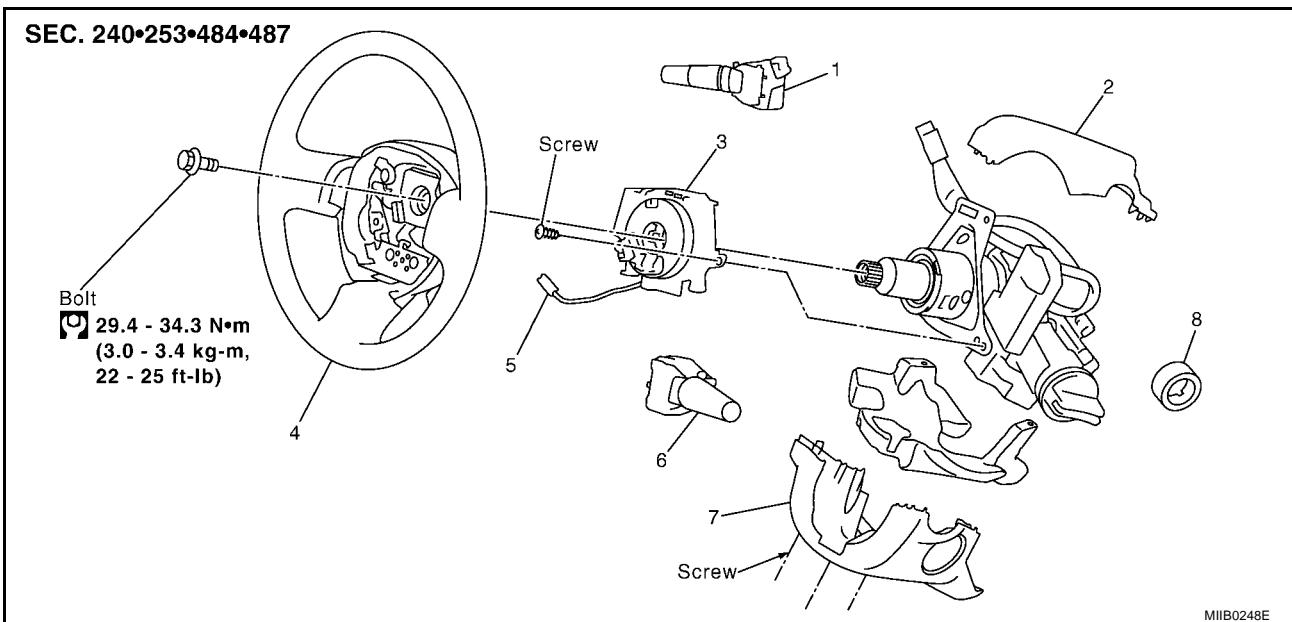


1. Wiper and washer switch
2. Column cover (upper)
3. Spiral cable
4. Steering wheel
5. Air bag module connector
6. Light and turn signal switch
7. Column cover (Lower)
8. Key cylinder escutcheon

## REMOVAL

## CAUTION:

Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.

1. Remove driver air bag module. Refer to [SRS-36, "DRIVER AIR BAG MODULE"](#) .
2. Set the steering wheel in the neutral position.
3. Remove horn switch connector.

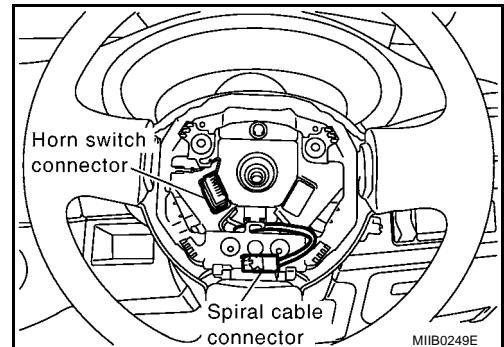


4. Remove steering wheel.

## CAUTION:

Do not tap or bump the steering wheel.

- Do not attempt to disassemble spiral cable.
- Do not apply lubricant to the spiral cable.

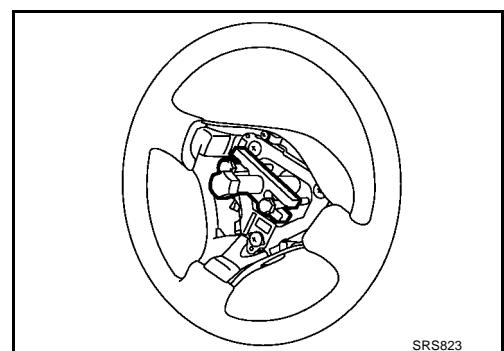


5. Remove steering column cover. Refer to [IP-6, "F. Steering Column Cover"](#) in IP section.

## SPIRAL CABLE

6. Remove wiper and washer switch, lighting and turn signal switch.
7. Loosen 2 screws. While pushing upper plastic tab, remove spiral cable.
8. Remove horn switch connector, and then spiral cable connector.

**CAUTION:**

Also, with the steering linkage disconnected the cable may snap by turning the steering wheel beyond the limited number of turns. The spiral cable can be turned counterclockwise about 2.5 turns from the right end position.

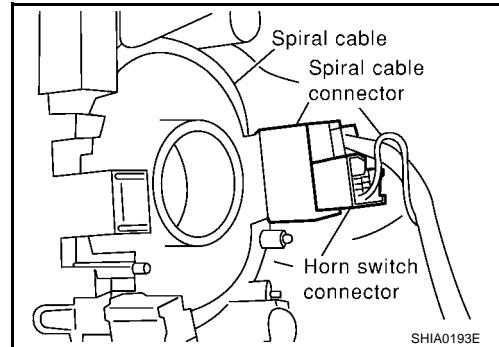


## INSTALLATION

Install in the reverse order of removal.

- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-17, "SRS Operation Check"](#)

**CAUTION:**

- The spiral cable may snap due to steering operation if the cable is installed in an improper position.
- Also, with the steering linkage disconnected the cable may snap by turning the steering wheel beyond the limited number of turns. The spiral cable can be turned counterclockwise about 2.5 turns from the right end position.

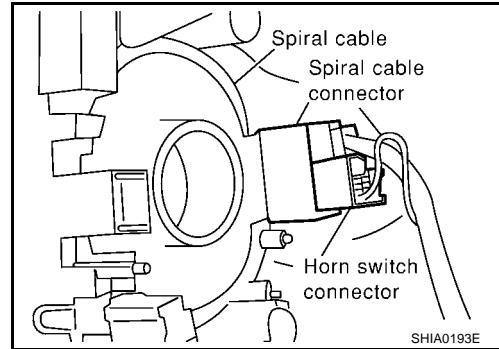

# FRONT PASSENGER AIR BAG MODULE

## FRONT PASSENGER AIR BAG MODULE

PFP:K8515

### Removal and Installation

#### REMOVAL

EHS000R2


##### CAUTION:

- Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
  - Always work from the side of or under front passenger air bag module.
1. Remove glove box lid and glove box cover assembly. Refer to [IP-4, "INSTRUMENT PANEL ASSEMBLY"](#) in IP section.
  2. Disconnect the air bag harness connector from the passenger air bag module.
  3. Remove mounting bolt and nut.

#### Mounting Bolt Tightening Torque

Mounting bolt (special bolt): 14.7 - 24.5 (1.50 - 2.50, 10.8 - 18.1)


Unit: N·m (Kg·m, ft-lb)

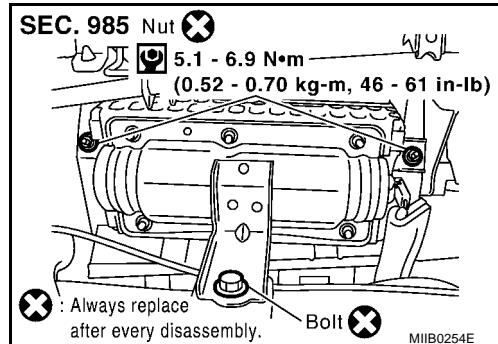

4. Pull out and remove passenger air bag module from the lower side of instrument panel to bottom so that no impact is given on passenger air bag module.

##### CAUTION:

- Always place front passenger air bag module with warning label side facing upward.
- Do not insert any foreign objects (screwdriver, etc.) into front passenger air bag module.
- Do not attempt to disassemble front passenger air bag module.
- Do not use old bolts after removal; replace with new bolts.

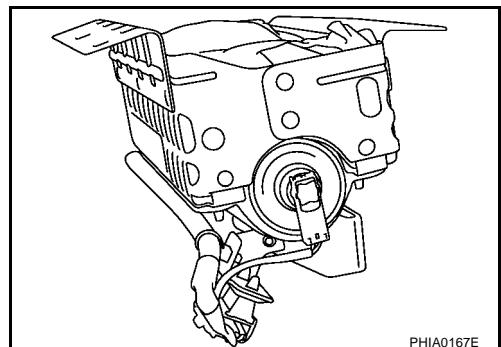

- Replace front passenger air bag module if it has been dropped or sustained an impact.
- Do not expose the front passenger air bag module to temperature exceeding 90°C (194°F).
- Do not allow oil, grease or water to come in contact with the front passenger air bag module.
- After front passenger air bag module inflates, the instrument panel assembly should be replaced.



### INSTALLATION

Install in the reverse order of removal.

##### CAUTION:

- Always work from the side of or under front passenger air bag module.

## FRONT PASSENGER AIR BAG MODULE

- 
- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-17, "SRS Operation Check"](#).

A

B

C

D

E

F

G

SRS

I

J

K

L

M


# FRONT SIDE AIR BAG MODULE

## FRONT SIDE AIR BAG MODULE

PFP:K8EH0

### Removal and Installation

EHS000R3

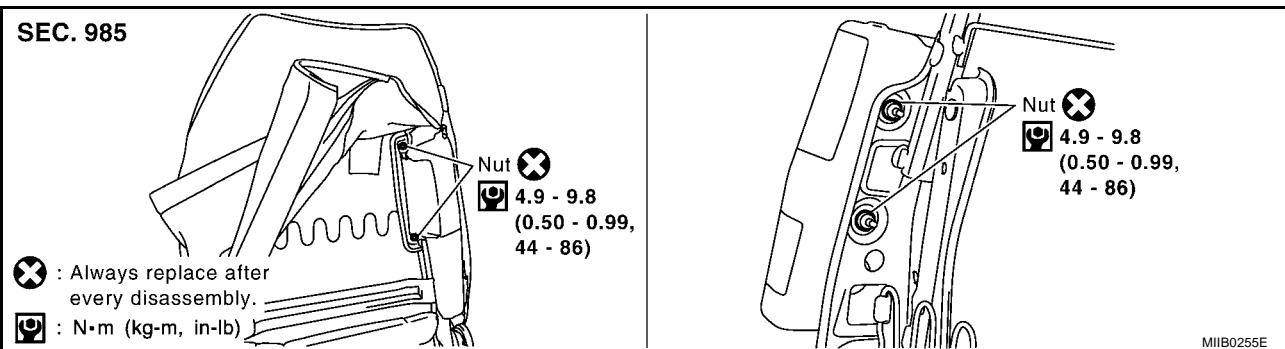

### REMOVAL

#### CAUTION:


Removal of front side air bag module should only be done to allow deployment of front side air bag module prior to disposal of seatback assembly.

Only complete seatback assemblies can be replaced. Refer to [SE-7, "FRONT SEAT"](#).

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
  - Always work from the rear of the front side air bag module.
- Remove the driver and/or passenger seat. Refer to [SE-9, "Disassembly and Assembly of Seat Cushion"](#).
  - Remove the seatback trim and pad. Refer to [SE-8, "Disassembly and Assembly of Seatback"](#).
  - Remove the air bag module harness clips.
  - Remove the special nuts coated with bonding agent from the front side air bag module, and remove the front side air bag module.

#### CAUTION:

- Always place the front side air bag module standing with the stud bolts side facing down.
- Do not insert any foreign objects (screwdriver, etc.) into front side air bag module.
- Do not attempt to disassemble front side air bag module.

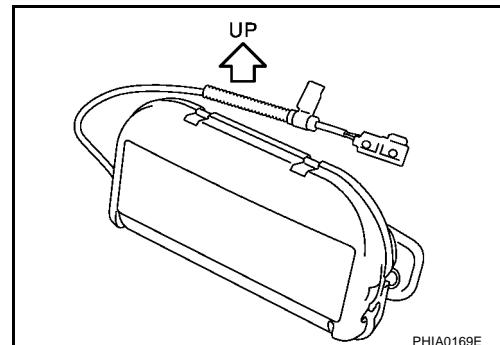

#### CAUTION:

- Replace front seatback assembly (side air bag module) if it has been dropped or sustained an impact.
- Do not expose front seatback assembly (side air bag module) to temperature exceeding 90°C (194°F).
- Do not allow oil, grease or water to come in contact with the front side air bag module.
- After front side air bag module inflates, front seatback assembly must be replaced.



### INSTALLATION

Install in the reverse order of removal.



# SIDE CURTAIN AIR BAG MODULE

## SIDE CURTAIN AIR BAG MODULE

PFP:985P0

### Removal and Installation

EHS000R4

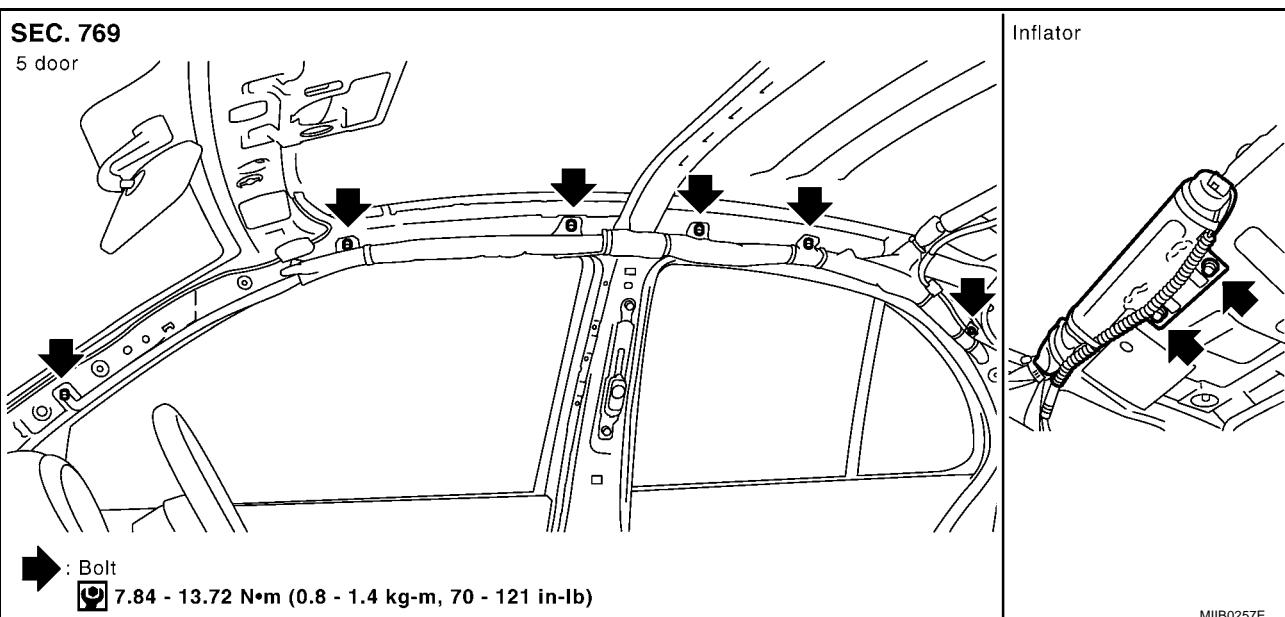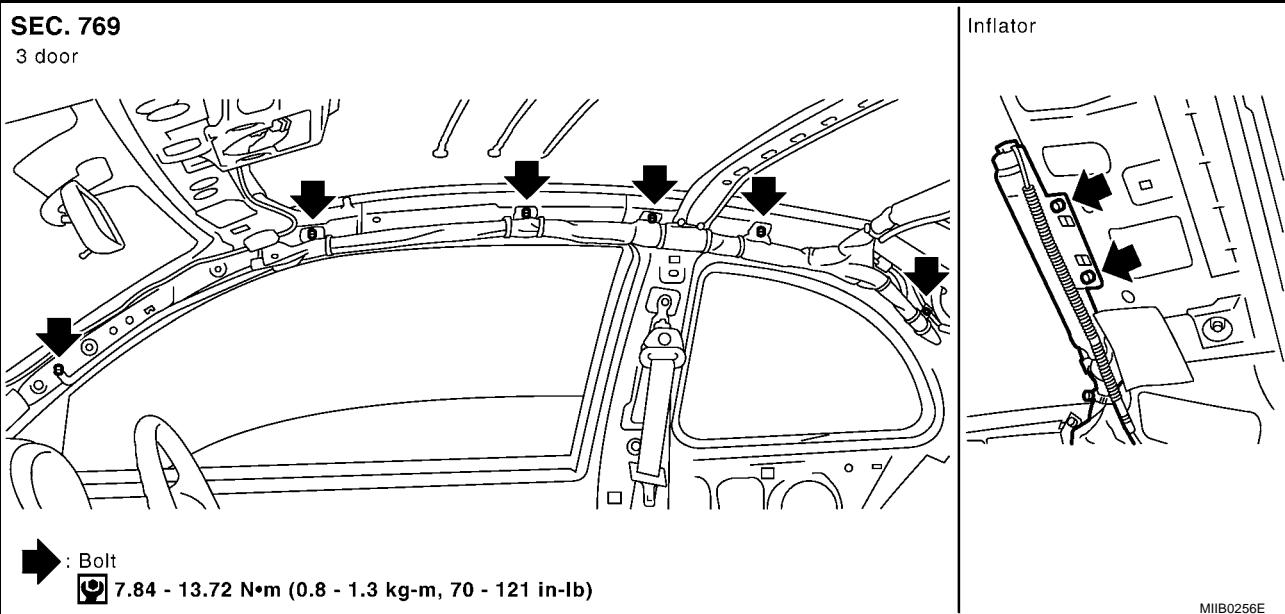

### REMOVAL

#### CAUTION:

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
  - Always work from the side of the side curtain air bag module.
- Remove headliner. Refer to [EI-25, "HEADLINER"](#).
  - Disconnect curtain air bag module connector.
  - Remove the side curtain air bag module fixing bolts and clips.
  - Remove the side curtain air bag module.

#### CAUTION:


- Always place the side curtain air bag module with the warning label facing upward.
- Do not attempt to disassemble side curtain air bag module.

A  
B  
C  
D  
E  
F  
G

SRS  
I  
J  
K  
L  
M

## SIDE CURTAIN AIR BAG MODULE

- Do not insert any foreign objects (screw driver, etc.) into air bag module connector.
- Replace side curtain air bag module if it has been dropped or sustained an impact.
- Do not expose the air bag module to temperatures exceeding 90°C (194°F).
- Do not allow oil, grease or water to come in contact with the side curtain air bag module.

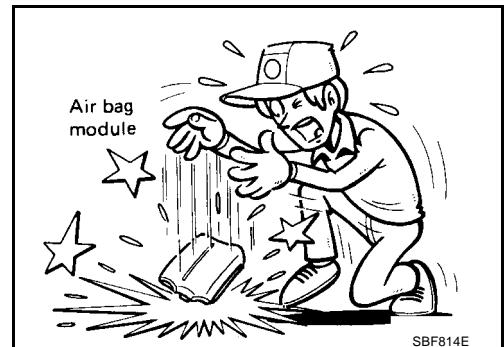

### INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

- Always work from the side of the side curtain air bag module.
- After replacement of side curtain air bag module perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-17, "SRS Operation Check"](#)

## CRASH ZONE SENSOR

PFP:98582

## Removal and Installation


## REMOVAL

EHS000R5

## CAUTION:

Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.

1. Remove front grill. (Only for the right side of vehicle) Refer to [EI-9, "Removal and Installation"](#) in EI section.
2. Disconnect crash zone sensor connector.
3. Remove mounting bolts, and then crush zone sensor.

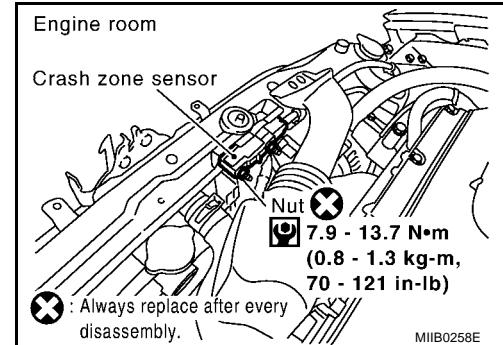

## CAUTION:

- Replace crash zone sensor if it has been dropped or sustained an impact.
- Do not attempt to disassemble crash zone sensor.

## INSTALLATION

Install in the reverse order of removal.

## CAUTION:

- Check crash zone sensor for proper installation.
- After the work is complete perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-17, "SRS Operation Check"](#) .

A

B

C

D

E

F

G

SRS

J

K

L

M

# SIDE AIR BAG (SATELLITE) SENSOR

## SIDE AIR BAG (SATELLITE) SENSOR

PFP:98830

### Removal and Installation



#### REMOVAL

EHS000R7

##### CAUTION:

- Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.

- Remove front seat belt. Refer to [SB-3, "Removal and Installation of Front Seat Belt"](#) in SB section.
- Remove side air bag (satellite) sensor connector.
- Remove mounting nut, and then remove side air bag (satellite) sensor.

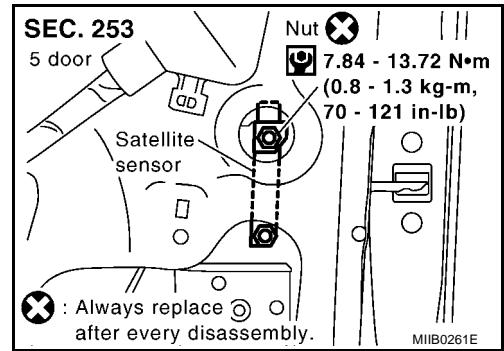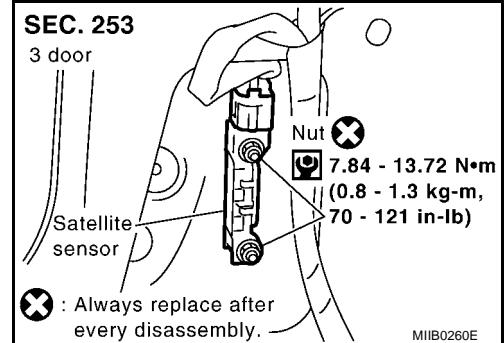

##### CAUTION:

- Do not use old nuts; replace with new ones.
- Check side air bag (satellite) sensor to ensure it is free of deformities, dents, cracks or rust. If it shows any visible signs of damage, replace it with new one.
- Do not attempt to disassemble side air bag (satellite) sensor if it has been dropped or sustained an impact.

### INSTALLATION

Install in the reverse order of removal.

##### CAUTION:

- Check side air bag (satellite) sensor for proper installation.
- After replacement of side air bag (satellite) sensor, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-17, "SRS Operation Check"](#).

# SEAT BELT PRE-TENSIONER

## SEAT BELT PRE-TENSIONER

PFP:86884

### Removal and Installation

EHS000R8

- Refer to [SB-3, "Removal and Installation of Front Seat Belt"](#) .

A

B

C

D

E

F

G

SRS

I

J

K

L

M

## DIAGNOSIS SENSOR UNIT

PFP:28556

## Removal and Installation


## REMOVAL

EHS000R9

## CAUTION:

- Before servicing SRS, turn ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.

- Disconnect each harness connector for air bag module and seat belt pre-tensioner.
- Remove console box. Refer to [IP-4, "INSTRUMENT PANEL ASSEMBLY"](#).
- Remove the diagnosis sensor unit connector.
- Remove mounting bolts and grounding bolt, and then remove diagnosis sensor unit.

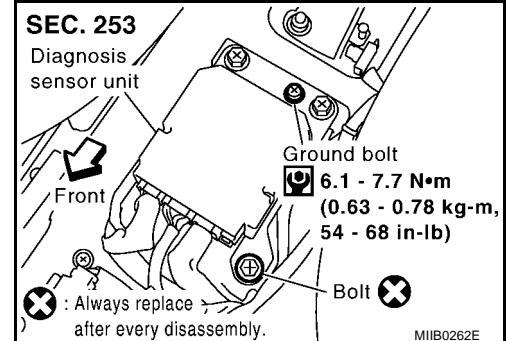

## Mounting Bolt Tightening Torque

Mounting bolts	N·m (kg·m, ft·lb)
Hexagon bolts:	19.6 - 30.0 (2.0 - 3.0, 15 - 22)
TORX bolts:	14.7 - 24.5 (1.5 - 2.4, 11 - 18)

## INSTALLATION

Install in the reverse order of removal.

## CAUTION:

- Check the diagnosis sensor unit for proper installation.
- After replacement of diagnosis sensor unit, perform self-diagnosis to check that no malfunction is detected. Refer to [SRS-17, "SRS Operation Check"](#) .

## AIR BAG DIAGNOSIS SENSOR UNIT DISCRIMINATED NUMBER

After replacing air bag diagnosis sensor unit, make sure the control unit discriminated number. Refer to [SRS-15, "CONSULT-II Function"](#) .

# DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

## DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

PFP:00014

### Caution for Air Bag Module and Seat Belt Pre-tensioner

EHS000SB

- Before disposing of air bag module and seat belt pre-tensioner, or vehicles equipped with such systems, deploy the systems. If such systems have already been deployed due to an accident, dispose of them as indicated in [SRS-49, "DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER"](#).
- When deploying the air bag module and seat belt pre-tensioner, always use the Special Service Tool; Deployment tool (KV99106400).
- When deploying the air bag module and seat belt pre-tensioner, stand at least 5 m (16 ft) away from the deployment component.
- When deploying air bag module and seat belt pre-tensioner, a fairly loud noise is made, followed by smoke being released. The smoke is not poisonous, however, be careful not to inhale smoke since it irritates the throat and can cause choking.
- Always activate one air bag module at a time.
- Due to heat, leave air bag module unattended for more than 30 minutes after deployment. Also leave seat belt pre-tensioner unattended for more than 10 minutes after deployment.
- Be sure to wear gloves when handling a deployed air bag module and seat belt pre-tensioner.
- Never apply water to the deployed air bag module and seat belt pre-tensioner.
- Wash your hands clean after finishing work.
- Place the vehicle outdoors with an open space of at least 6 m (20 ft) on all sides when deploying air bag module and seat belt pre-tensioner while mounted in vehicle.
- Use a voltmeter to make sure the vehicle battery is fully charged.
- Do not dispose of the air bag module and seat belt pre-tensioner un-deployed.

A  
B  
C  
D  
E  
F  
G  
SRS  
I  
J  
K  
L  
M

## CHECKING DEPLOYMENT TOOL

### Connecting to Battery


#### CAUTION:

The battery must show voltage of 9.6V or more.

Remove the battery from the vehicle and place it on dry wood blocks approximately 5 m (16 ft) away from the vehicle.


- Wait 3 minutes after the vehicle battery is disconnected before proceeding.
- Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.

Make sure the polarity is correct. The right side lamp in the tool, marked "deployment tool power", should glow with a green light. If the right side lamp glows red, reverse the connections to the battery.

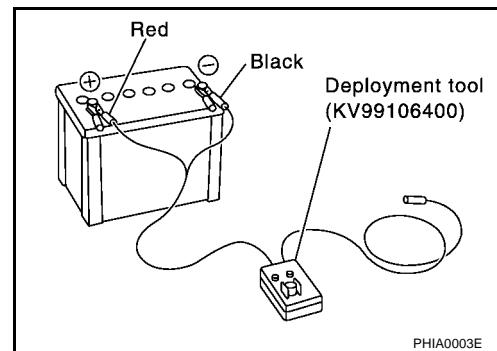

### Deployment Tool Check

Press the deployment tool switch to the "ON" position. The left side lamp in the tool, marked "air bag connector voltage" should illuminate. If it does not illuminate, replace the tool.

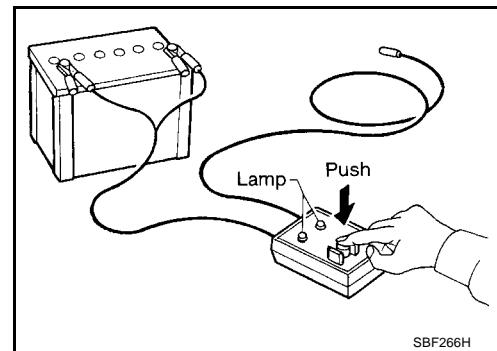

# DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

## Air Bag Deployment Tool Lamp Illumination Chart (Battery Connected)


Switch operation	Left side lamp, green* "AIR BAG CONNECTOR VOLTAGE"	Right side lamp, green* "DEPLOYMENT TOOL POWER"
OFF	OFF	ON
ON	ON	ON

\*: If this lamp glows red, the tool is connected to the battery incorrectly. Reverse the connections and make sure the lamp glows green.

## DEPLOYMENT PROCEDURES FOR AIR BAG MODULE (OUTSIDE OF VEHICLE)


Unless the vehicle is being scrapped, deploying the air bag in the vehicle is not recommended. This may cause damage to the vehicle interior.

Anchor air bag module bracket (SST: KV99105300) in a vise secured to a firm foundation during deployment.

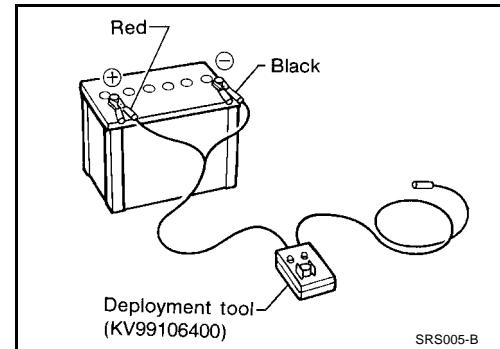

### Deployment of Driver Air Bag Module (Outside of Vehicle)


1. Make an 8.5 mm (0.335 in) diameter hole in air bag module bracket (SST: KV99105300) at the position shown in figure at right.

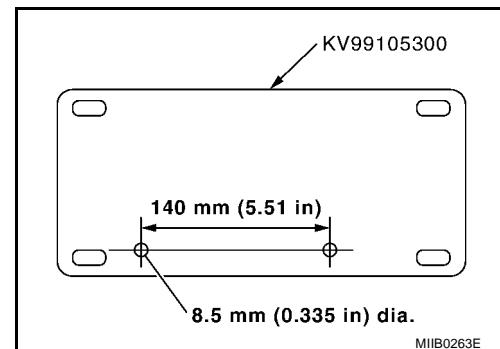


2. Using wire, secure air bag module to air bag module bracket at two places.

**CAUTION:**

Use wire of at least 1 mm (0.041 in) diameter.

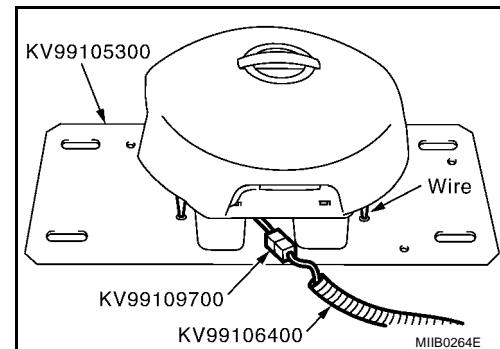

3. Firmly secure air bag module bracket with air bag module attached in a vise.
4. Connect deployment tool adapter (KV99109700) to deployment tool [SST: KV99106400] to air bag module connector.
5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.

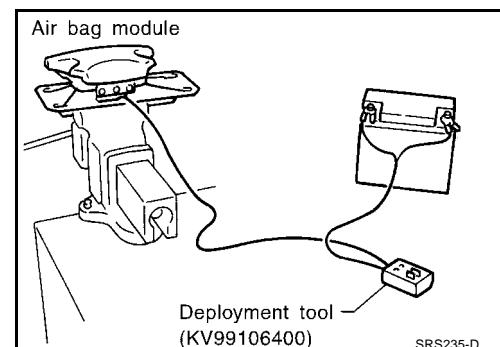


# DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

## CAUTION:

When deploying the driver air bag module, stand at least 5 m (16 ft) away from the air bag module.

### Deployment of Front Passenger Air Bag Module (Outside of Vehicle)


1. Make an 8.5 mm (0.335 in) diameter hole in air bag module bracket (SST: KV99105300) at the position shown in figure at right.
2. Firmly secure air bag module bracket (SST: KV99105300) in a vise.

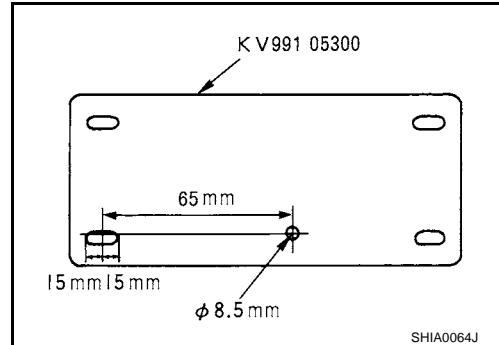


3. Match a hole in air bag module bracket (held in vise) and front passenger air bag module and fix them with a bolt [M8 x 25 - 30 mm (0.98 - 1.18 in)] and wire.

## CAUTION:

If a gap exists between front passenger air bag module and air bag module bracket, use a piece of wood inserted in the gap to stabilize the air bag module.

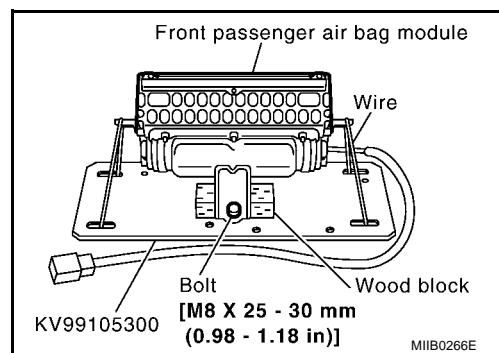


4. Connect deployment tool adapter (KV99109700) to deployment tool (SST: KV99106400) connector and front passenger air bag module connector.
5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.

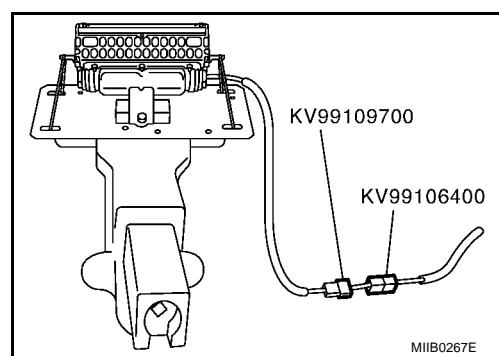

7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.

## CAUTION:


- When deploying the front passenger air bag module, do not stand on the deploying side.
- Stand at least 5 m (16 ft) away from the air bag module.

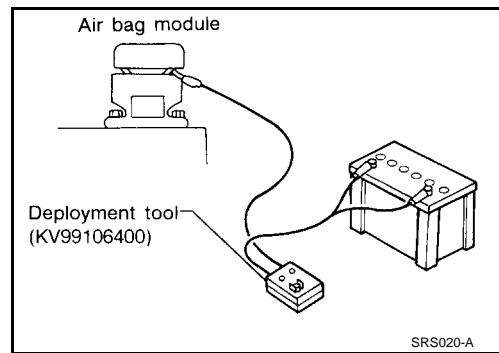

# DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

## Deployment of Front Side Air Bag Module (Outside of Vehicle)


1. Make 6.5 mm (0.256 in) diameter holes in air bag module bracket (SST: KV99105300) at the position shown in figure at right.

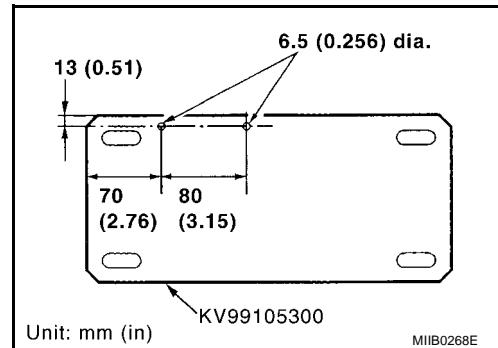


2. Firmly secure air bag module bracket (SST: KV99105300) in a vise.
3. Insert the stud bolts of side air bag module into the two holes in air bag module bracket (held in vise) and fix them with two M6 nuts.

**CAUTION:**

Side air bag module should be secured to air bag module bracket (SST: KV99105300) in a vise with stud bolt side setting bottom.

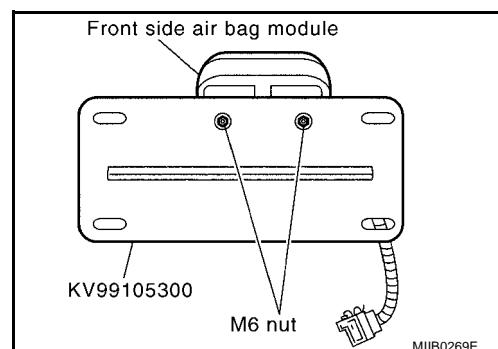


4. Connect deployment tool adapter (SST: KV999R0080) to deployment tool (SST: KV99106400) connector and connector on air bag module.

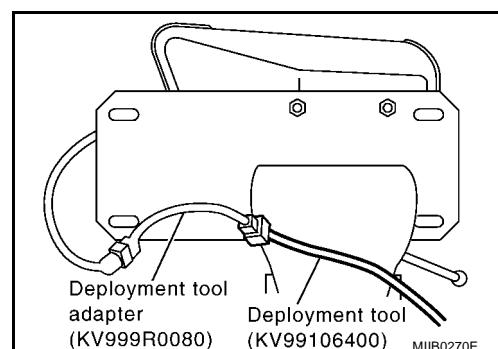

5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.

**CAUTION:**


When deploying the front side air bag module, stand at least 5 m (16 ft) away from the air bag module.

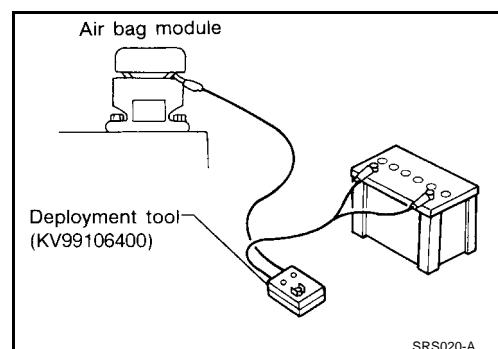


# DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

## Deployment of Side Curtain Air Bag Module (Outside of Vehicle)


1. Cut the inflator from side curtain air bag module.

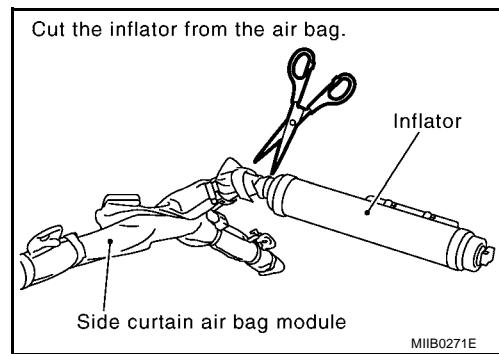

2. Connect deployment tool (KV99106400) connector to deployment tool adapter (SST: KV99109000) the inflator.

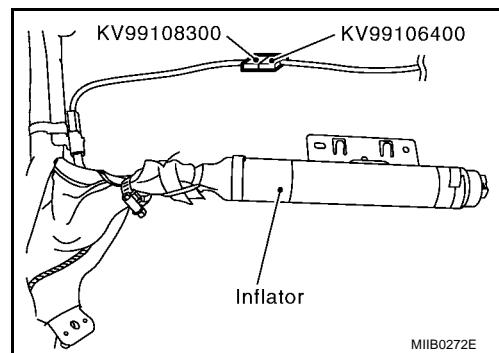

3. Put the inflator connected with the deployment tool adaptor (SST: KV99109000) into a tire without wheel.

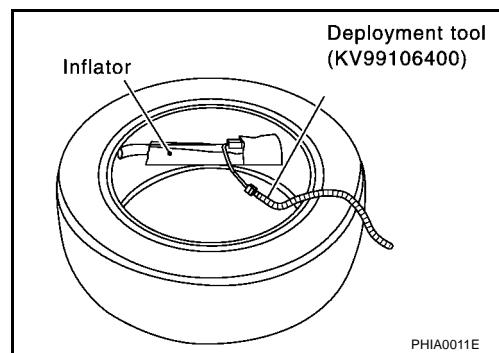


4. Put the tyre with the inflator onto another tyre without wheel. Add an additional tyre without wheel and then a tyre mounted on a wheel on top.

**CAUTION:**

**Tie all tyres together with a strap in order keep them standing.**

5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
7. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module will deploy.

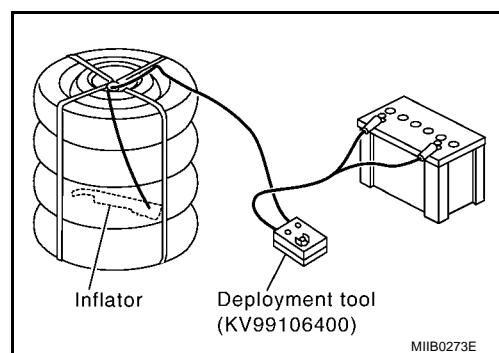

**CAUTION:**

**When deploying the side curtain air bag module, stand at least 5 m (16 ft) away from the side curtain air bag module.**

A  
B  
C  
D  
E  
F  
G


SRS

I  
J  
K  
L  
M


# DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

## DEPLOYMENT PROCEDURES FOR SEAT BELT PRE-TENSIONER (OUTSIDE OF VEHICLE)


1. Firmly grip pre-tensioner in a vise.

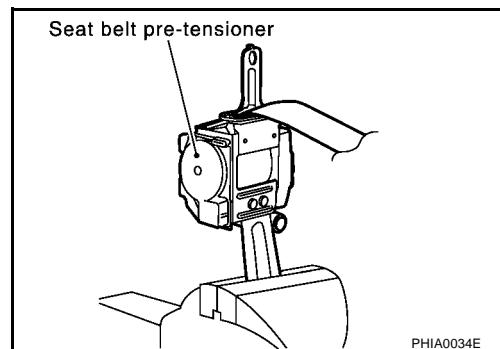

2. Cut the webbing off.

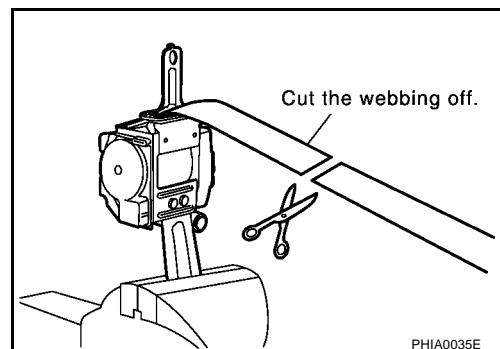

3. Connect deployment tool adapter (SST: KV99109700) to deployment tool (SST: KV99106400) connector and front seat belt pre-tensioner connector.
4. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
5. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
6. Press the button on the deployment tool. The left side lamp on the tool, marked "seat belt pre-tensioner connector voltage", will illuminate and the seat belt pre-tensioner will deploy.

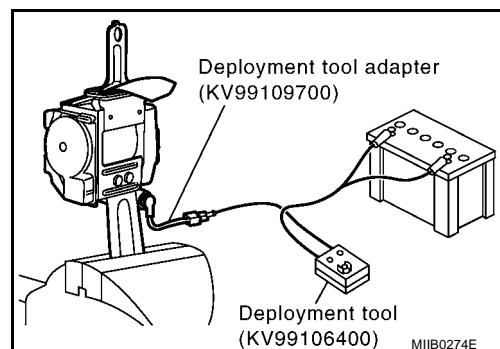

**CAUTION:**

**When deploying the front seat belt pre-tensioner, stand at least 5 m (16 ft) away from the seat belt pre-tensioner.**

## DEPLOYMENT OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER WHILE MOUNTED IN VEHICLE

When disposing of a vehicle, deploy air bag module and seat belt pre-tensioners while they are mounted in vehicle.

**CAUTION:**

**When deploying air bag module or seat belt pre-tensioner, ensure vehicle is empty.**


1. Disconnect both the vehicle battery cables and wait 3 minutes.
2. Disconnect air bag module and seat belt pre-tensioner connector.
3. Connect deployment tool (SST: KV99106400) to air bag module or seat belt pre-tensioner.  
For driver air bag module, attach deployment tool adapter (SST: KV99109700) to the tool connector.  
For front passenger air bag module, attach deployment tool adapter (SST: KV99109700) to the tool connector.  
For side air bag module, direct connect deployment tool (SST: KV99106400).  
For seat belt pre-tensioner, attach deployment tool adapter (SST: KV99109700) to the tool connector.

## DISPOSAL OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

4. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
5. The lamp on the right side of the tool, marked "deployment tool power", should glow green, not red.
6. Press the button on the deployment tool. The left side lamp on the tool, marked "air bag connector voltage", will illuminate and the air bag module or seat belt pre-tensioner will deploy.

**CAUTION:**

Activate only one air bag module or seat belt pre-tensioner at a time.

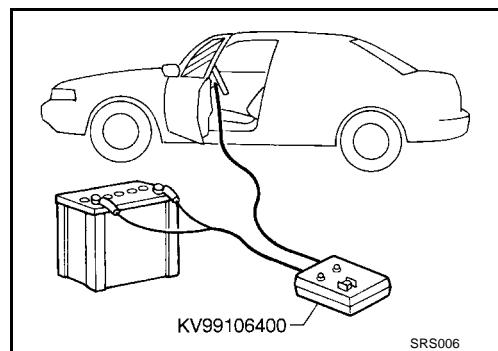


## DISPOSING OF AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

Deployed air bag module and seat belt pre-tensioner are very hot. Before disposing of air bag module, and seat belt pre-tensioner wait at least 30 minutes, and 10 minutes, respectively. Seal them in a plastic bag before disposal.

**CAUTION:**

- Never apply water to a deployed air bag module and seat belt pre-tensioner.
- Be sure to wear gloves when handling a deployed air bag module and seat belt pre-tensioner.
- No poisonous gas is produced upon air bag module deployment. However, be careful not to inhale gas since it irritates throat and can cause choking.
- Do not attempt to disassemble air bag module and seat belt pre-tensioner.
- Air bag module and seat belt pre-tensioner cannot be reused.
- Wash your hands clean after finishing work.

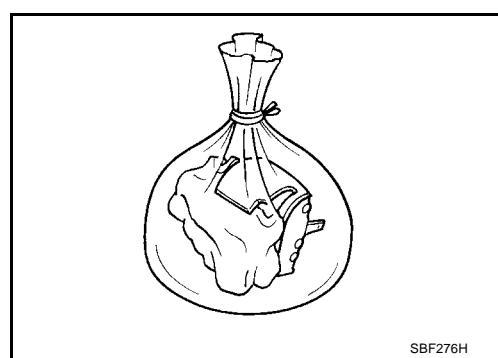

A  
B  
C  
D  
E

F  
G  
SRS

J  
K  
L  
M

# COLLISION DIAGNOSIS

## COLLISION DIAGNOSIS

PFP:00015

### For Frontal Collision

EHS000SC

To repair the SRS, perform the following steps.

**When SRS (except the front side air bag and side curtain air bag modules) is activated in a collision:**

1. Replace the diagnosis sensor unit.
2. Remove the air bag modules (except the front side air bag modules and side curtain air bag modules), crash zone sensor assembly, bracket and seat belt pre-tensioner assemblies.
3. Check the SRS components using the table below:
  - Replace any SRS components showing visible signs of damage (dents, cracks and deformation).
4. Install new air bag modules (except the front side air bag modules and side curtain air bag modules) crash zone sensor assembly, bracket and seat belt pre-tensioner assemblies.
5. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-17, "SRS Operation Check"](#) for details. Ensure entire SRS operates properly.

**When SRS is not activated in a collision:**

1. Check the SRS components using the table below:
  - Replace any SRS components showing visible signs of damage (dents, cracks and deformation).
2. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-17, "SRS Operation Check"](#) for details. Ensure entire SRS operates properly.

**When only one front air bag module is activated in a collision:**

1. Replace the following components:
  - Diagnosis sensor unit
  - Crash zone sensor
  - Activated front air bag and seat belt pre-tensioner.
2. Check the other SRS components using the table below. (Refer to "SRS is Not activated".)
  - Replace any SRS components showing visible signs of damage (dents, cracks and deformation).
3. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to for details. Ensure entire SRS operates properly.

Only one front air bag may inflate a crash, depending on the crash severity and whether the front occupants are belted or unbelted. This do not indicate improper performance of the system conduct self-diagnosis to make sure the entire SRS operates properly.

### SRS INSPECTION (FOR FRONTAL COLLISION)

Part	SRS is activated	SRS is NOT activated
Air bag module (driver and front passenger air bag module)	REPLACE Install with new bolts.	<ol style="list-style-type: none"><li>1. Remove air bag module. Check harness cover and connectors for damage, terminals for deformities, and harness for binding.</li><li>2.<ul style="list-style-type: none"><li>- Install driver air bag module into the steering wheel to check fit and alignment with the wheel.</li><li>- Install passenger air bag module into the instrument panel to check fit with the instrument panel.</li></ul></li><li>3. No damage found, reinstall with new bolts.</li><li>4. If damaged—REPLACE air bag modules with new special bolts. Air bag must be deployed before disposal.</li></ol>
Crash zone sensor	REPLACE the crash zone sensor and bracket with new nuts.	<ol style="list-style-type: none"><li>1. Remove the crash zone sensor. Check harness connectors for damage, terminals for deformities, and harness for binding.</li><li>2. Check for visible signs of damage (dents, cracks, deformation) of the crash zone sensor and bracket.</li><li>3. Install the crash zone sensor to check fit.</li><li>4. No damage found, reinstall with new bolts.</li><li>5. If damaged—REPLACE the crash zone sensor and bracket with new nuts.</li></ol>

# COLLISION DIAGNOSIS

Part	SRS is activated	SRS is NOT activated	
Seat belt pre-tensioner assemblies	REPLACE Install seat belt pre-tensioner with new bolts.	1. Remove seat belt pre-tensioners. Check harness cover and connectors for damage, terminals for deformities, and harness for binding. 2. Check belts for damage and anchors for loose mounting. 3. Check retractor for smooth operation. 4. Check seat belt adjuster for damage. 5. If no damage is found, reinstall seat belt pre-tensioner assembly with new bolts. 6. If damaged—REPLACE seat belt pre-tensioners with new bolts. Seat belt pre-tensioners must be deployed before disposal.	A B C D E
Diagnosis sensor unit	REPLACE Install with new bolts.	1. Check case for dents, cracks or deformities. 2. Check connectors for damage, and terminals for deformities. 3. If no damage is found, reinstall with new bolts and ground bolt. 4. If damaged—REPLACE diagnosis sensor unit with new bolts and ground bolt.	F G
Steering wheel		1. Visually check steering wheel for deformities. 2. Check harness (built into steering wheel) and connectors for damage, and terminals for deformities. 3. Install air bag module to check fit or alignment with steering wheel. 4. Check steering wheel for excessive free play. 5. If no damage is found, reinstall with nut. 6. If damaged—REPLACE.	H I
Spiral cable		1. Visually check spiral cable and combination switch for damage. 2. Check connectors and protective tape for damage. 3. Check steering wheel for noise, binding or heavy operation. 4. If no damage is found, reinstall with screws. 5. If damaged—REPLACE.	J K L M SRS
Harness and connectors		1. Check connectors for poor connection, damage, and terminals for deformities. 2. Check harness for binding, chafing, cuts, or deformities. 3. If no damage is found, reinstall the harness and connectors. 4. If damaged—REPLACE damaged section of harness. Do not attempt to repair, splice or modify any SRS harness.	N O P Q R
Instrument panel		1. Visually check instrument panel for damage. 2. If no damage is found, reinstall the instrument panel. 3. If damaged—REPLACE the instrument panel with bolts.	S T U V W

## For Side Collision

EHS000SD

### WHEN THE SIDE AIR BAG IS ACTIVATED IN THE SIDE COLLISION:

1. Replace the following components:
  - All parts of front seat back (including front seat back frame) with front side air bag module (on the side on which front side air bag is activated)
  - Curtain air bag module (on the side on which side curtain air bag is activated)
  - Diagnosis sensor unit
  - Satellite sensor (on the side on which side air bag and side curtain air bag is activated)
2. Check the SRS components and the related parts using the following table.
3. Replace any SRS components and the related parts showing visible signs of damage (dents, cracks, deformation).
3. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-17, "SRS Operation Check"](#). Ensure entire SRS operates properly.

# COLLISION DIAGNOSIS

## WHEN SRS IS NOT ACTIVATED IN THE SIDE COLLISION:

1. Check the SRS components and the related parts using the following table.
- Replace any SRS components and the related parts showing visible signs of damage (dents, cracks, deformation).
2. Conduct self-diagnosis using CONSULT-II or "AIR BAG" warning lamp. Refer to [SRS-17, "SRS Operation Check"](#) . Ensure entire SRS operates properly.

## SRS INSPECTION (FOR SIDE COLLISION)

Part	Front side air bag and side curtain air bag is activated	Front side air bag and side curtain air bag is NOT activated
(LH or RH) side curtain air bag module	Replace the side curtain air bag module. (Repair the center pillar inner, etc. before installing new one if damaged.)	<ol style="list-style-type: none"> <li>1. Check for visible signs of damage (dents, tears, deformation) of the center pillar on the collision side.</li> <li>2. If damaged— Remove the side curtain air bag module.</li> <li>3. Check for visible signs of damaged (tears etc.) of the side curtain air bag module.</li> <li>4. Check harness and connectors for damage, and terminals for deformities.</li> <li>5. If no damage is found, reinstall the side curtain air bag module with new bolts.</li> <li>6. If damaged—REPLACE the side curtain air bag module with new bolts. Air bag must be deployed before disposal.</li> </ol>
Front (LH or RH) side air bag module	REPLACE all parts of seat back with deployed front side air bag module.	<ol style="list-style-type: none"> <li>1. Check for visible signs of damage (dents, tears, deformation) of the seat back on the collision side.</li> <li>2. Check harness and connectors for damage, and terminals for deformities.</li> <li>3. If damaged—REPLACE the front seat back assembly. Air bag must be deployed before disposal.</li> </ol>
(LH or RH) side air bag (satellite) sensor	REPLACE the side air bag (satellite) sensor on the collision side with new nuts. (Repair the center pillar inner, etc. before installing new one if damaged.)	<ol style="list-style-type: none"> <li>1. Remove the side air bag (satellite) sensor on the collision side. Check harness connectors for damage, terminals for deformities, and harness for binding.</li> <li>2. Check for visible signs of damage (dents, cracks, deformation) of the side air bag (satellite) sensor.</li> <li>3. Install the side air bag (satellite) sensor to check fit.</li> <li>4. If no damage is found, reinstall the side air bag (satellite) sensor with new nuts.</li> <li>5. If damaged—REPLACE the side air bag (satellite) sensor with new nuts.</li> </ol>
Diagnosis sensor unit	REPLACE the diagnosis sensor unit with the new bolts.	<ol style="list-style-type: none"> <li>1. Check case and bracket for dents, cracks or deformities.</li> <li>2. Check connectors for damage, and terminals for deformities.</li> <li>3. If no damage is found, reinstall the diagnosis sensor unit with new bolts and ground bolt.</li> <li>4. If damaged—REPLACE the diagnosis sensor unit with new bolts and ground bolt.</li> </ol>
Seat belt pre-tensioner assembly	<ol style="list-style-type: none"> <li>1. Check if the seat belt can be extended smoothly. If the seat belt cannot be extended smoothly, <ul style="list-style-type: none"> <li>– Check for deformities of the center pillar inner.</li> <li>– If the center pillar inner has no damage, REPLACE the seat belt pre-tensioner assembly.</li> </ul> </li> <li>2. Remove the seat belt pre-tensioner assembly on the collision side. Check harness cover and connectors for damage, terminals for deformities, and harness for binding.</li> <li>3. Check for visible signs of damage (dents, cracks, deformation) of the seat belt pre-tensioner assembly.</li> <li>4. Check seat belt adjuster for damage.</li> <li>5. If no damage is found, reinstall the seat belt pre-tensioner assembly.</li> <li>6. If damaged—REPLACE the seat belt pre-tensioner assembly with new bolts. The seat belt pre-tensioner assembly must be deployed before disposal.</li> </ol>	

## COLLISION DIAGNOSIS

Part	Front side air bag and side curtain air bag is activated	Front side air bag and side curtain air bag is NOT activated	A
Seat with front side air bag	REPLACE all parts of front seat back (including front seat back frame)	<ol style="list-style-type: none"> <li>1. Visually check the seat on the collision side.</li> <li>2. Remove the seat on the collision side and check the following for damage and deformities.             <ul style="list-style-type: none"> <li>– Harness, connectors and terminals</li> <li>– Frame and recliner (for front and rear seat), and also adjuster and slides (for front seat)</li> </ul> </li> <li>3. If no damage is found, reinstall the seat.</li> <li>4. If damaged—REPLACE the damaged seat parts using new bolts.</li> </ol>	B
Center inner pillar		<ol style="list-style-type: none"> <li>1. Check the center inner pillar on the collision side for damage (dents, cracks, deformation).</li> <li>2. If damaged—REPAIR the center inner pillar.</li> </ol>	C
Trim/headliner		<ol style="list-style-type: none"> <li>1. Check for visible signs of damage (dents, cracks, deformation) of the interior trim on the collision side.</li> <li>2. If damaged—REPLACE the damaged trim parts.</li> </ol>	D

E

F

G

H

I

J

K

SRS

L

M

# **COLLISION DIAGNOSIS**

---