

# SECTION E

## EXTERIOR & INTERIOR

### CONTENTS

<b>PRECAUTIONS</b>	3	REMOVAL	18
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	INSTALLATION	18
Precautions for Procedures without Cowl Top Cover	3	Removal and Installation (C+C)	19
Precautions	3	REMOVAL	19
<b>CLIP AND FASTENER</b>	4	INSTALLATION	19
Clip and Fastener	4	<b>DOOR FINISHER</b>	20
<b>FRONT BUMPER</b>	5	Removal and Installation	20
Removal and Installation	5	REMOVAL	20
REMOVAL	7	INSTALLATION	21
INSTALLATION	7	<b>BACK DOOR TRIM</b>	22
<b>REAR BUMPER</b>	8	Removal and Installation	22
Removal and Installation	8	REMOVAL	22
REMOVAL	9	INSTALLATION	22
INSTALLATION	10	<b>TRUNK LID TRIM</b>	23
<b>FRONT GRILLE</b>	11	Removal and Installation	23
Removal and Installation	11	REMOVAL	23
REMOVAL	11	INSTALLATION	23
INSTALLATION	11	<b>TRUNK LID FINISHER</b>	24
<b>FRONT DEFLECTOR</b>	12	Removal and Installation	24
Removal and Installation	12	REMOVAL	24
REMOVAL	12	INSTALLATION	24
INSTALLATION	12	<b>BODY SIDE TRIM</b>	25
<b>COWL TOP</b>	13	Removal and Installation (5-Door)	25
Removal and Installation	13	REMOVAL	25
REMOVAL	13	INSTALLATION	26
INSTALLATION	13	Removal and Installation (3-Door)	26
<b>FENDER PROTECTOR</b>	14	REMOVAL	26
Removal and Installation	14	INSTALLATION	27
<b>ROOF SIDE MOLDING</b>	15	Removal and Installation (C+C)	28
Removal and Installation	15	REMOVAL	28
REMOVAL	15	INSTALLATION	29
INSTALLATION	15	<b>FLOOR TRIM</b>	30
<b>WINDSHIELD MOLDING</b>	16	Removal and Installation	30
Removal and Installation	16	REMOVAL	31
REMOVAL	16	INSTALLATION	32
INSTALLATION	17	<b>HEADLINER</b>	33
<b>DOOR OUTSIDE MOLDING</b>	18	Removal and Installation	33
Removal and Installation (3 Door and 5 Door)	18	REMOVAL	33
		INSTALLATION	34

<b>WINDSHIELD FINISHER .....</b>	<b>36</b>	<b>BACK SIDE TRIM .....</b>	<b>39</b>
Removal and Installation .....	36	Removal and Installation .....	39
REMOVAL .....	36	REMOVAL .....	39
INSTALLATION .....	36	INSTALLATION .....	39
<b>ROOF FINISHER .....</b>	<b>37</b>	<b>LUGGAGE FLOOR TRIM .....</b>	<b>40</b>
Removal and Installation .....	37	Removal and Installation .....	40
REMOVAL .....	37	REMOVAL .....	40
INSTALLATION .....	37	INSTALLATION .....	41
<b>REAR PARCEL SHELF .....</b>	<b>38</b>	<b>TRUNK ROOM TRIM .....</b>	<b>42</b>
Removal and Installation .....	38	Removal and Installation .....	42
REMOVAL .....	38	REMOVAL .....	42
INSTALLATION .....	38	INSTALLATION .....	42

# PRECAUTIONS

## PRECAUTIONS

PFP:00001

### Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

EIS004PB

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.


#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### Precautions for Procedures without Cowl Top Cover

EIS000DXT

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

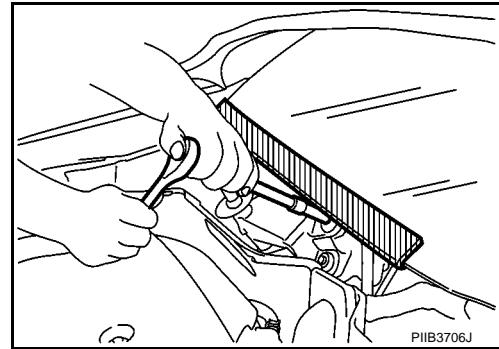

## Precautions

EIS004PC

- When removing or disassembling any part, be careful not to damage or deform it. Protect parts, which may get in the way with cloth.
- When removing parts with a screwdriver or other tool, protect parts by wrapping them with vinyl or tape.
- Keep removed parts protected with cloth.
- If a clip is deformed or damaged, replace it.
- If an unreusable part is removed, replace it with a new one.
- Tighten bolts and nuts firmly to the specified torque.
- After re-assembly has been completed, make sure each part functions correctly.
- Remove stains in the following way.

#### Water-soluble stains:

Dip a soft cloth in warm water, and then squeeze it tightly. After wiping the stain, wipe with a soft dry cloth.

#### Oil stain:

Dissolve a synthetic detergent in warm water (density of 2 to 3% or less), dip the cloth, then clean off the stain with the cloth. Next, dip the cloth in fresh water and squeeze it tightly. Then clean off the detergent completely. Then wipe the area with a soft dry cloth.

- Do not use any organic solvent, such as thinner or benzine.

# CLIP AND FASTENER

## CLIP AND FASTENER

PFP:76906

### Clip and Fastener

EIS004PD

Symbol No.	Shapes	Removal & Installation
C101 		<p><b>Removal:</b> Remove by bending up with flat-bladed screwdrivers or clip remover.</p>
C103 		<p><b>Removal:</b> Remove with a clip remover.</p>
C203 		<p><b>Removal:</b> Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p><b>Installation:</b></p>
C205 		<p><b>Removal:</b></p> <p>Flat-bladed screwdriver Clip Finisher</p>
C206 		<p><b>Removal:</b></p>

SIIA0315E

# FRONT BUMPER

## FRONT BUMPER

PFP:F2022

### Removal and Installation

*EIS004NZ*

- Bumper fascia is made of plastic. Do not use excessive force and be sure to protect it from exposure to oil.

A

B

C

D

E

F

G

H

EI

J

K

L


M

# FRONT BUMPER


## SEC. 620

Bolt  
 20.6 - 26.5  
 (2.1 - 2.7, 16 - 19)



Bolt  
 5.1 - 6.37  
 (0.52 - 0.66,  
 46 - 57)

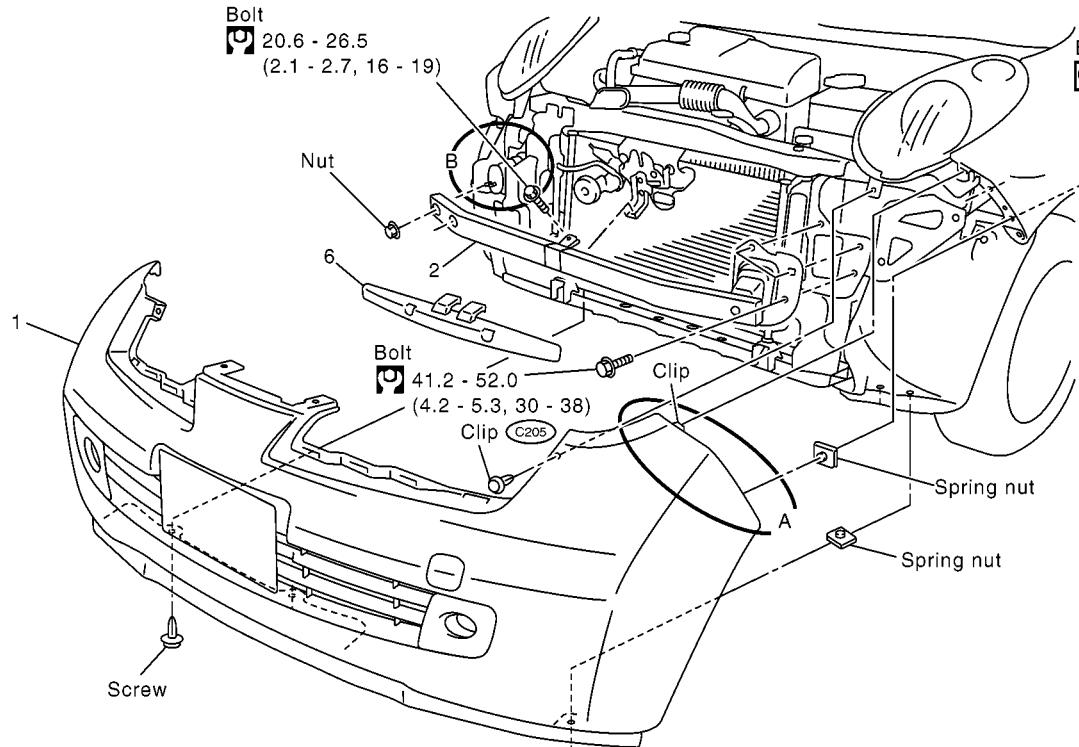

View A

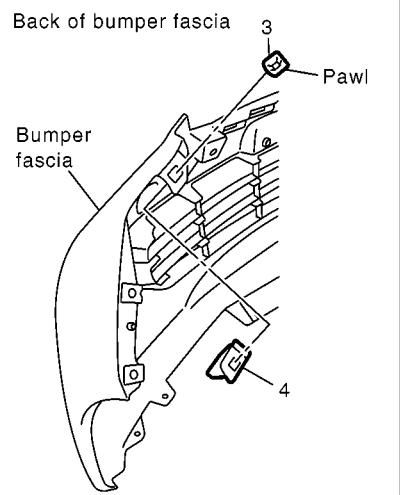

View B

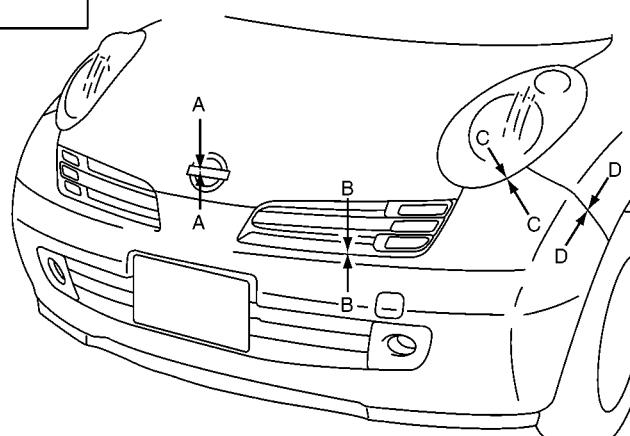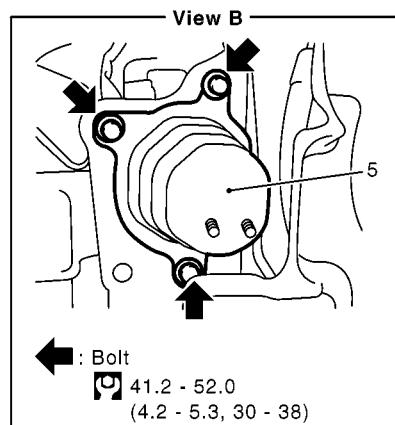

 : N·m (kg·m, in·lb)

 : N·m (kg·m, ft·lb)

MIB9228E

1. Bumper fascia
2. Bumper reinforcement
3. Bumper side bracket (upper)
4. Bumper side bracket (lower)
5. Bumper stay
6. Bumper energy absorber

# FRONT BUMPER

## REMOVAL

1. Remove front grille. Refer to [EI-11, "FRONT GRILLE"](#) .
2. Remove bumper fascia installation clip.
3. Remove fender protector lower fixing bolts. Remove fender protectors (right, left). Refer to [EI-14, "FENDER PROTECTOR"](#) .
4. Remove the bolts holding bumper fascia to front fender.
5. Disconnect front fog lamp harness connector (if equipped). Disconnect headlamp washer tube (if equipped).
6. Pull the bumper fascia horizontal from front fender mounting surface, disengage the clip, and remove.
7. Remove front bumper energy absorber. Remove front bumper protector.
8. Remove the bumper side brackets (upper and lower) from the bumper fascia.
9. Remove bolts and nuts and then remove bumper reinforcement.
10. Remove bolts and bumper stay.

## INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

EI

J

K

L

M

# REAR BUMPER


## REAR BUMPER

PFP:H5022

### Removal and Installation

EIS00400

Bumper fascia is made of plastic. Do not use excessive force and be sure to protect it from exposure to oil.

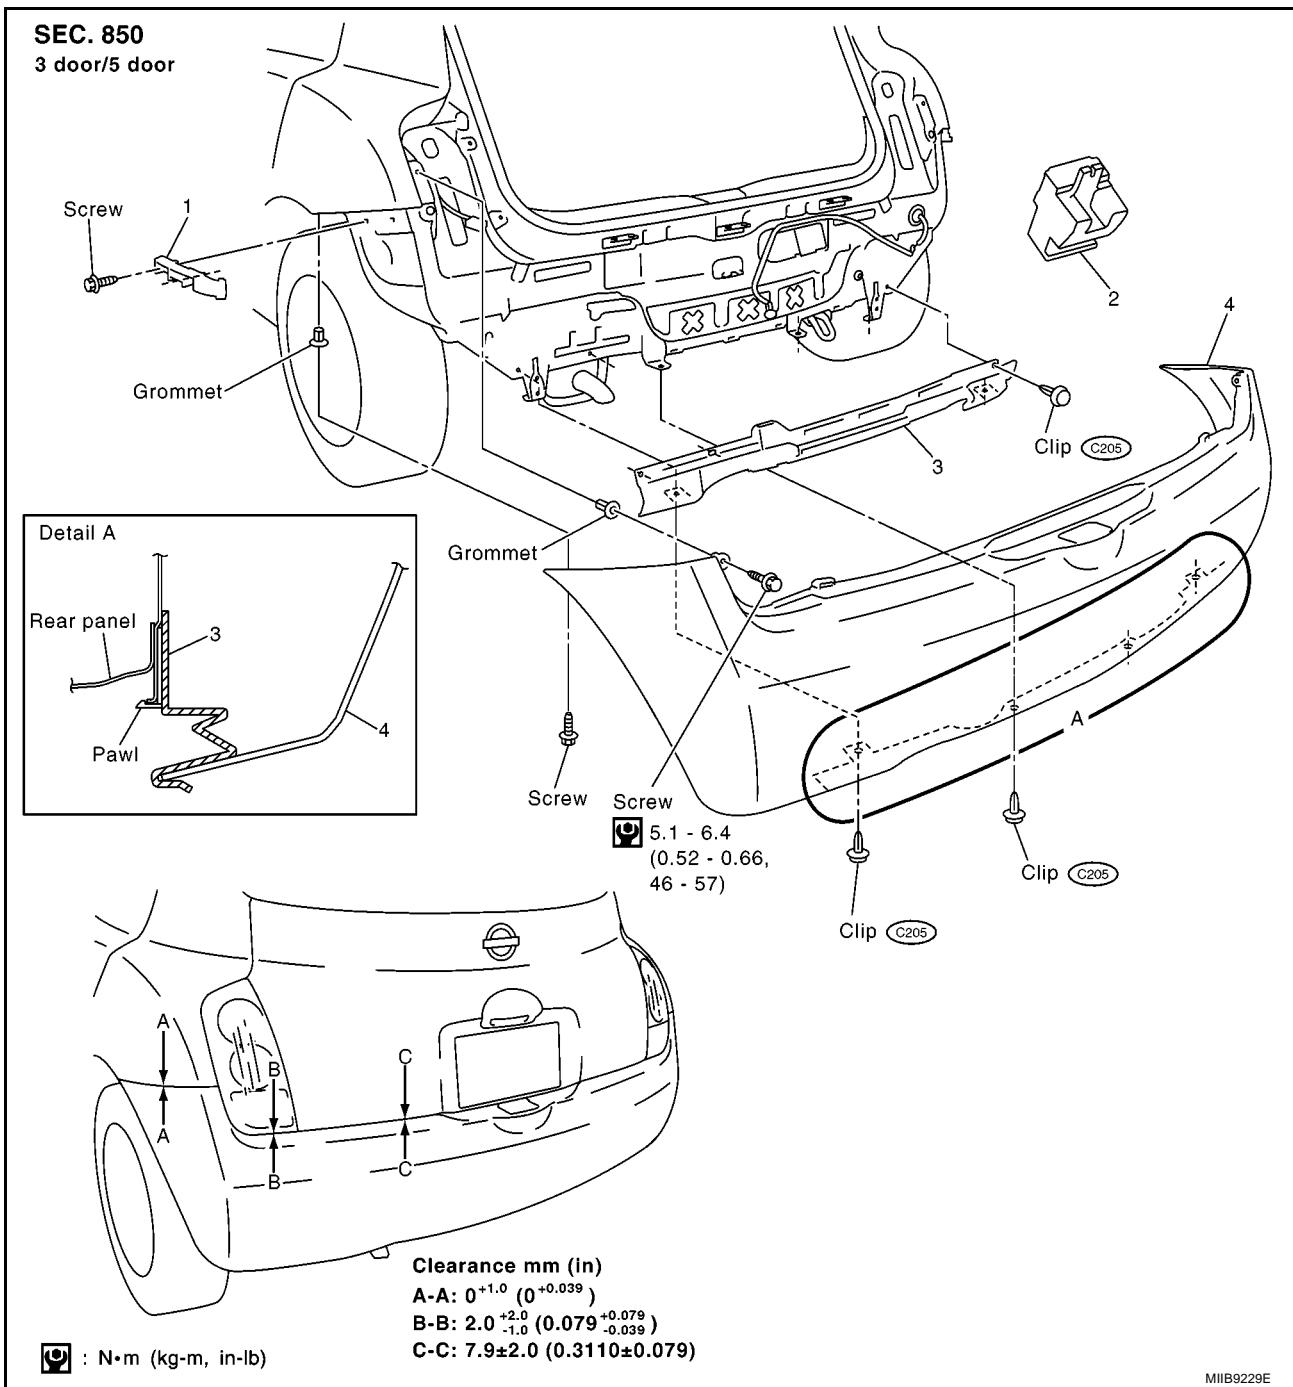


1. Bumper side bracket
2. Bumper energy shock absorber
3. Rear panel (lower)
4. Bumper fascia
5. Bumper stay

MIIIB9229E

# REAR BUMPER

SEC. 850  
C+C

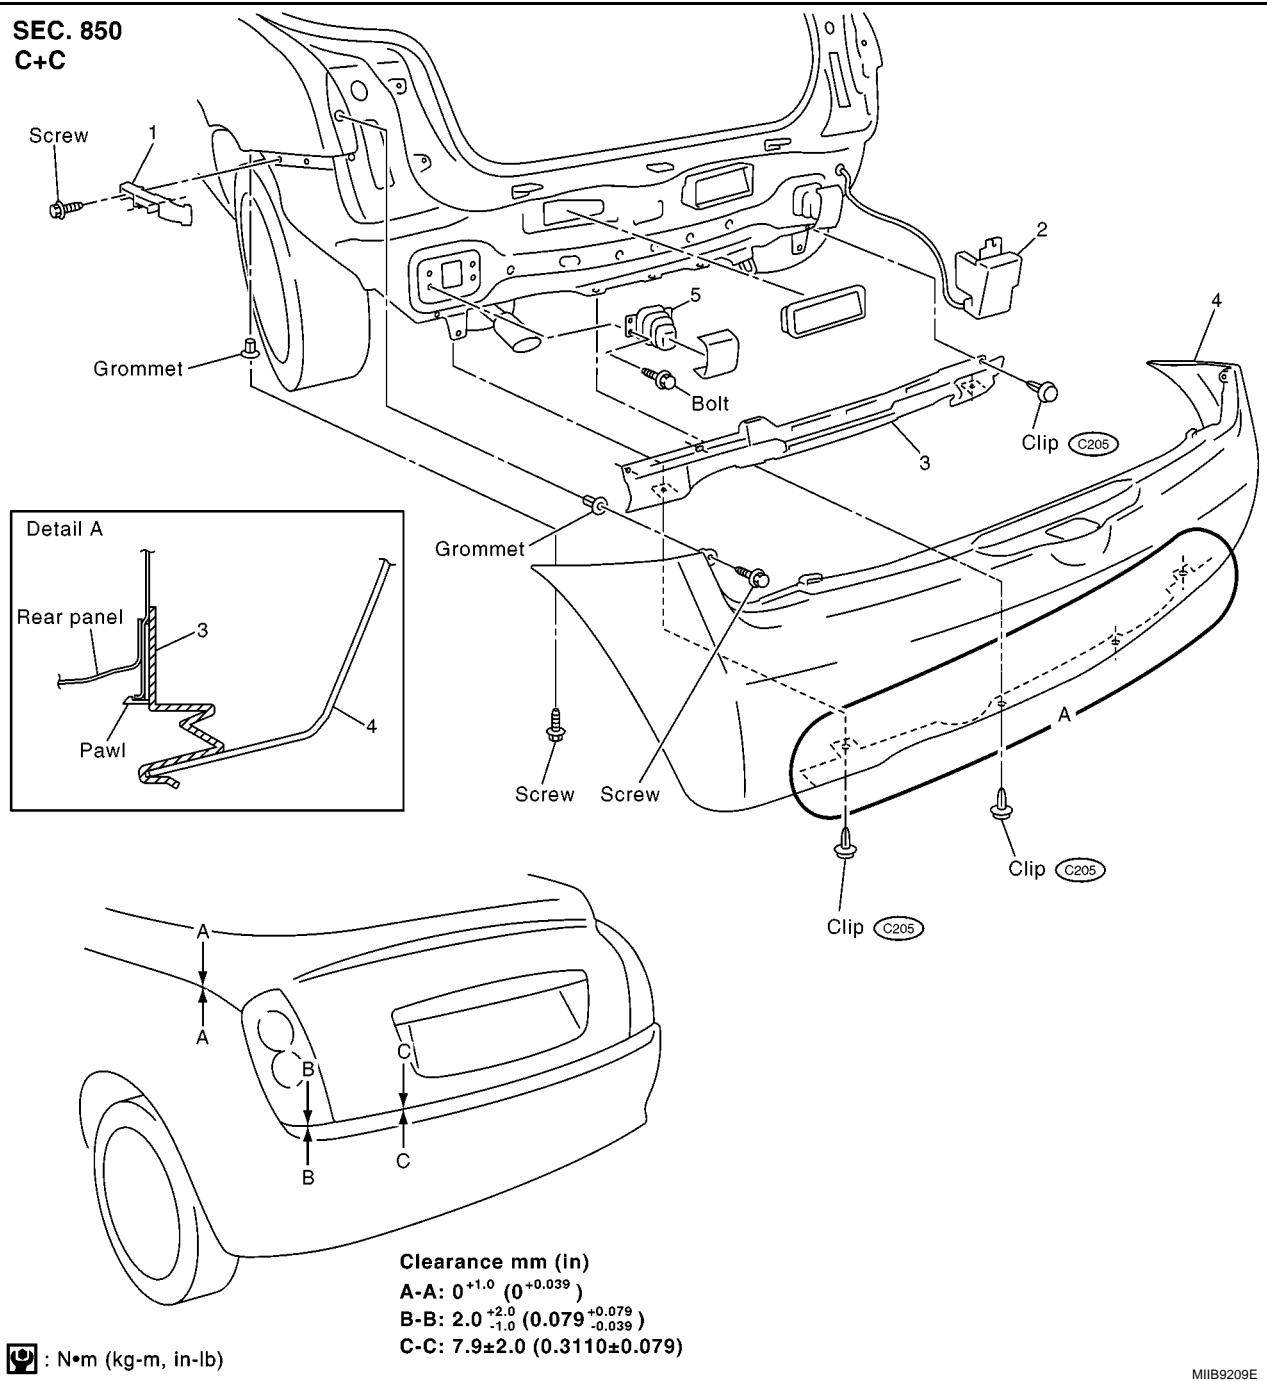


1. Bumper side bracket
2. Bumper energy shock absorber
3. Rear panel (lower)
4. Bumper fascia
5. Bumper stay

## REMOVAL


1. Remove rear combination lamps (LH/RH). Refer to [LT-208, "Removal and Installation \(Hatchback\)"](#).
2. Remove bumper fascia lower bottom installation clip
3. Remove bumper fascia screws.

## REAR BUMPER

4. Remove bumper fascia side engaged hooks in the direction shown by the arrows in the figure.

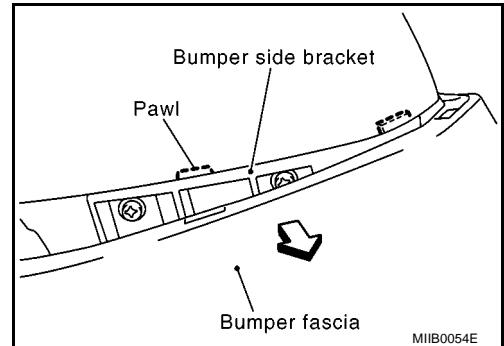

5. Remove license plate lamp, and then pull bumper fascia straight out toward back of vehicle to remove it. Refer to [LT-199, "Removal and Installation of Parking Lamp, Tail Lamp and License Plate Lamp"](#).
6. Remove bumper energy shock absorber.
7. Remove the engaged rear panel (lower) mounting clips and hooks, and remove rear panel.

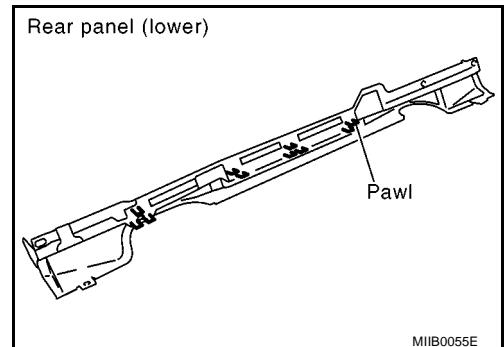


8. Remove bolts and bumper stay.

### INSTALLATION

Note the following, and install in the reverse order of removal.

#### CAUTION:

- Make sure the bumper fascia bottom edge is inserted in the rear panel (lower) insertion area.
- Rattle will be caused by fitting damaged parts. Following disassembly, the clipping area under back door should be checked for damage.

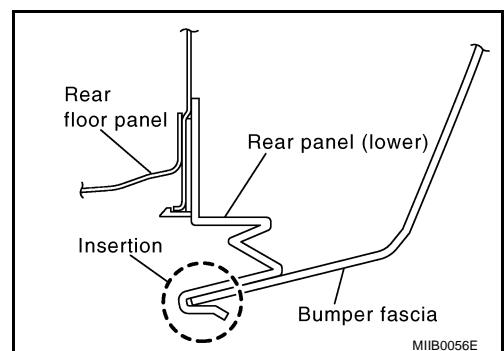

# FRONT GRILLE


## FRONT GRILLE

PFP:62310

### Removal and Installation

EIS00401

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

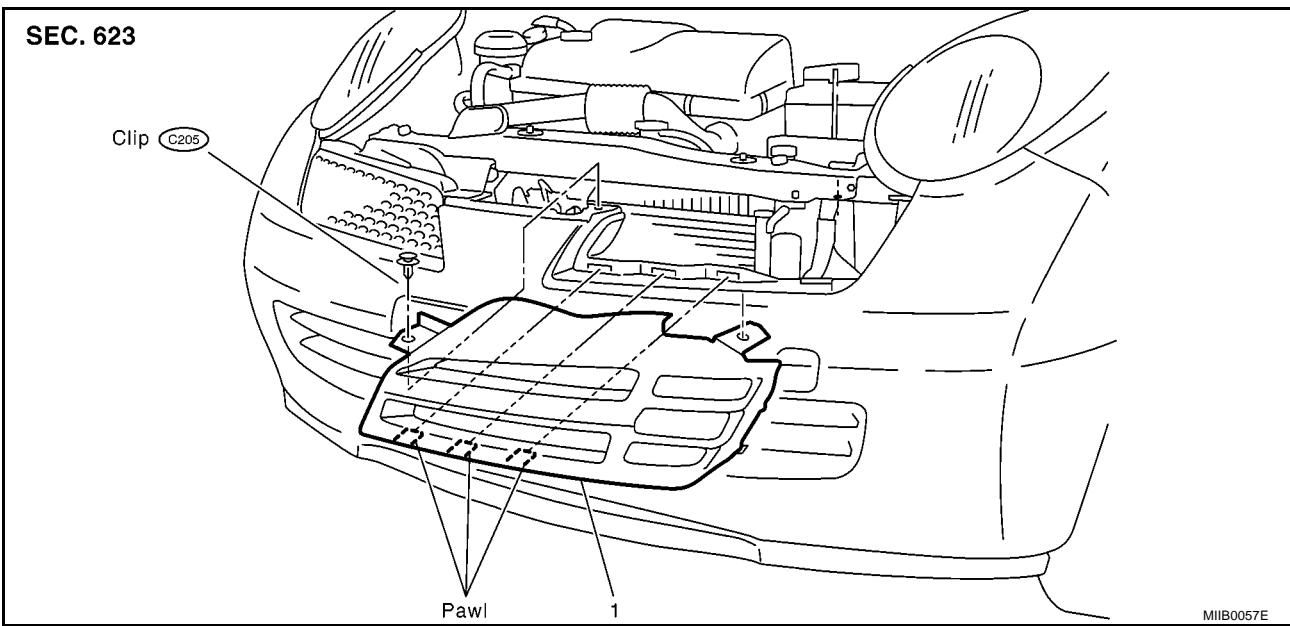

1. Front grille

#### REMOVAL

1. Remove mounting clips from top of front grille.
2. Insert your hand between the front grille and radiator core support (upper), and remove the front grille back hooks in order from the vehicle's center side to its outside.
3. After all hooks have been disengaged, pull front grille vehicle center side forward and remove the front turn signal lamp back insertion area and panel connector to remove the front grille vehicle center side.

EI

#### INSTALLATION

Note the following, and install in the reverse order of removal.

##### CAUTION:

Before engaging the front grille back hooks, make sure the front turn signal lamp back insertion area is correctly inserted in the inside of the bumper fascia.

J  
K  
L  
M

# FRONT DEFLECTOR


## FRONT DEFLECTOR

PFP:96015

### Removal and Installation

EIS00402

SEC. 960

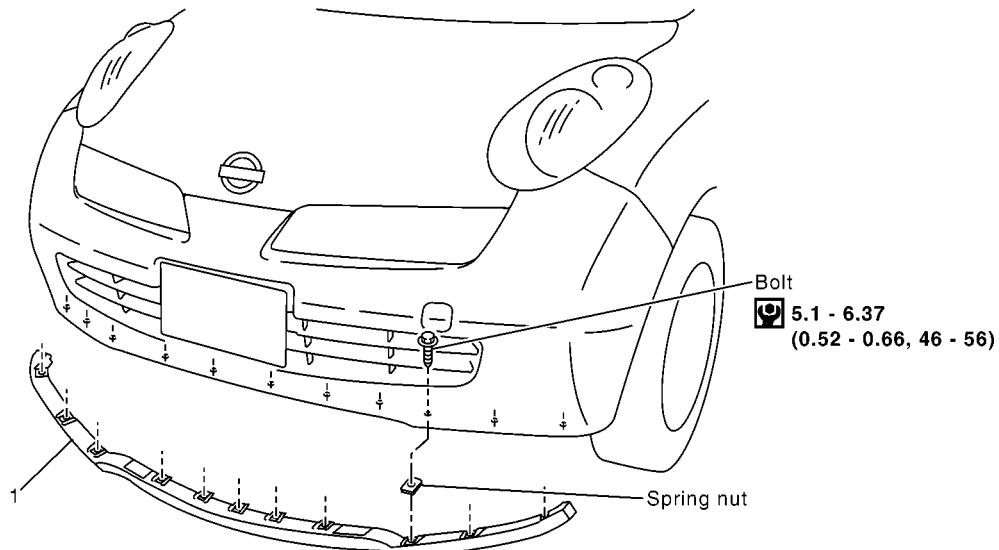

MIB0058E

1. Front deflector

### REMOVAL

1. Remove front bumper. Refer to [EI-5, "FRONT BUMPER"](#) in EI section.
2. Remove bolts from front bumper inner side, and then remove front deflector.

### INSTALLATION

Install in the reverse order of removal.


## COWL TOP

PFP:66100

### Removal and Installation

EIS00403

SEC. 660

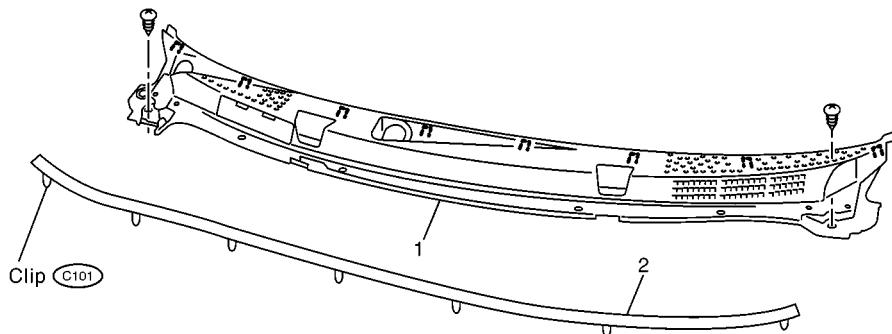

1. Cowl top cover
2. Cowl top seal rubber

#### REMOVAL

1. Remove front wiper arms (left and right). Refer to [WW-6, "FRONT WIPER AND WASHER SYSTEM"](#) , [WW-51, "FRONT WIPER AND WASHER SYSTEM \(WITH RAIN SENSOR\)"](#) in WW section.
2. Remove mounting screws, and the remove slat covers (LH/RH).
3. Remove cowl top seal rubber.
4. Pull cowl top over forward to remove it.

#### INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

EI

J

K

L

M

# FENDER PROTECTOR


## FENDER PROTECTOR

PFP:63840

### Removal and Installation

EIS00404

SEC. 630

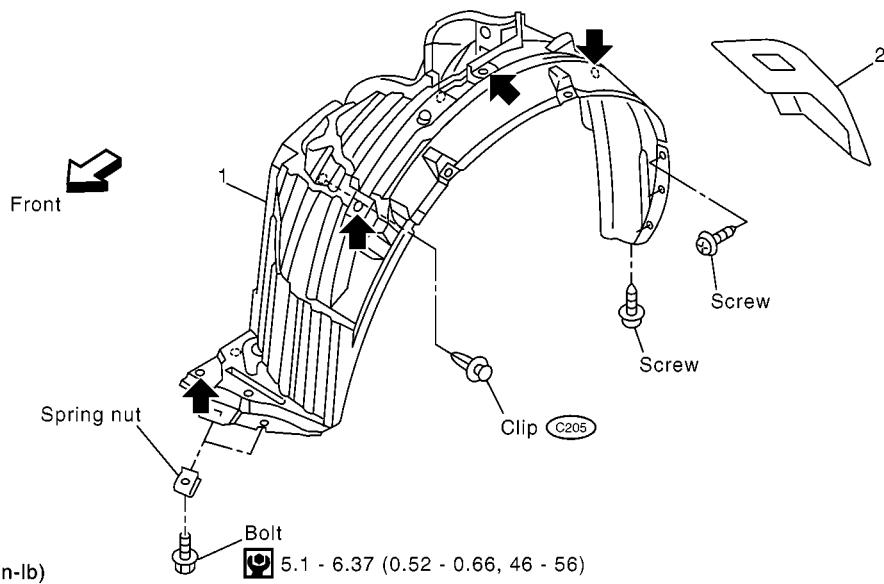

MIIIB9230E

1. Fender protector

2. Fender insulator (if equipped)

# ROOF SIDE MOLDING


## ROOF SIDE MOLDING

### Removal and Installation

PFP:73854

EIS00405

A  
B  
C  
D  
E  
F  
G  
H  
EI  
J  
K  
L  
M

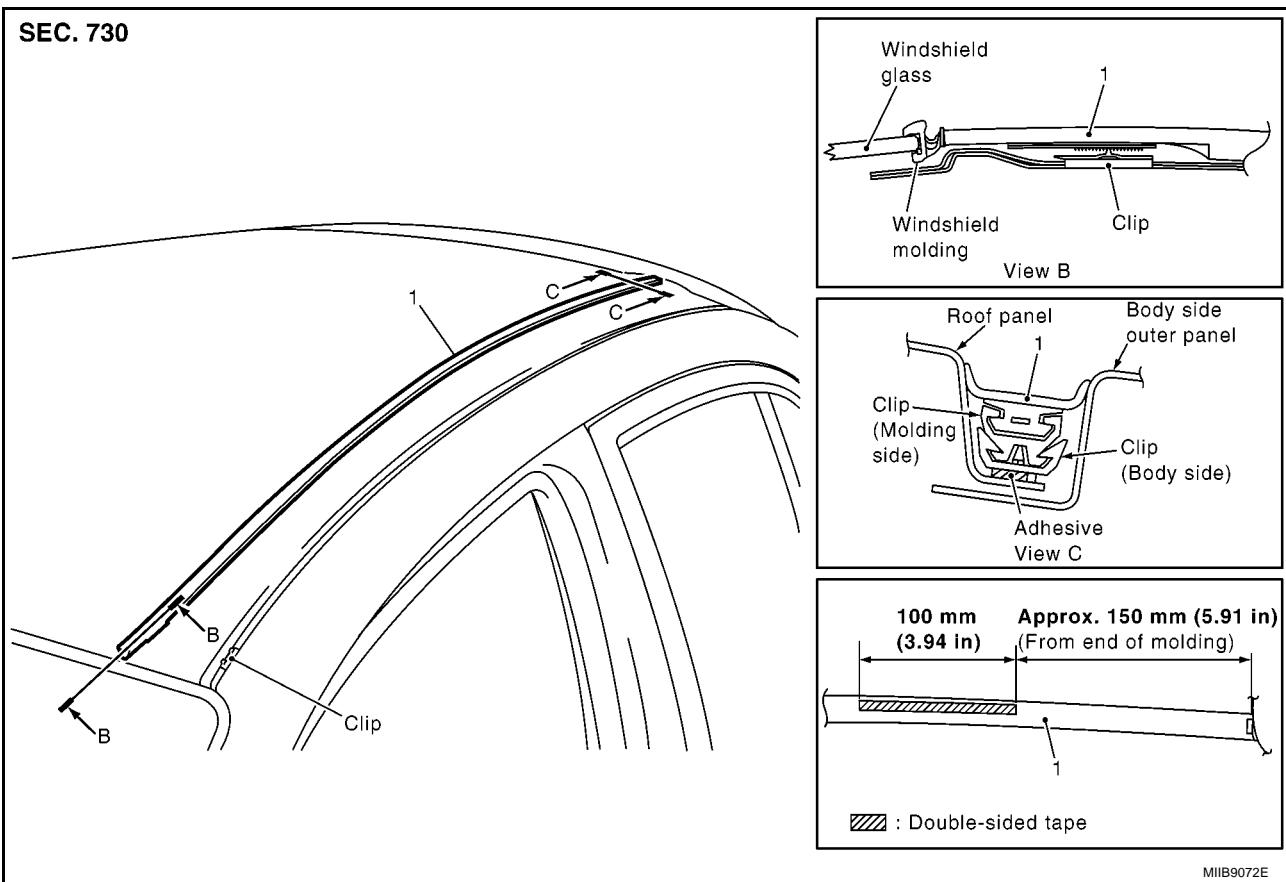

1. Roof side molding

### REMOVAL

1. Use a plastic knife, etc., and lift up the end of roof side molding (back end), remove clip, and peel off double-sided tape to remove it.
2. Remove the double-sided tape remaining on roof side molding back and vehicle body.

#### NOTE:

Double-sided tape can be easily removed using double-sided tape removal agent.

### INSTALLATION

#### NOTE:

When only installing roof side molding, conduct the following procedure from Step 3.

1. Clean the roof side molding clip attachment surface (body side).
2. Bond roof side molding clip (body side) to vehicle body and let sit for 40 min.
3. Apply primer (Sumitomo3M N200 or comparable product) to roof side molding back double-sided tape application area.
4. Apply double-sided tape to roof side molding back (position in figure).
5. After butting roof side molding front end against window seal molding, push in molding from front to back end, and then affix to body using clips and double-sided tape.


# WINDSHIELD MOLDING

## WINDSHIELD MOLDING

PFP:72750

### Removal and Installation

EIS00406

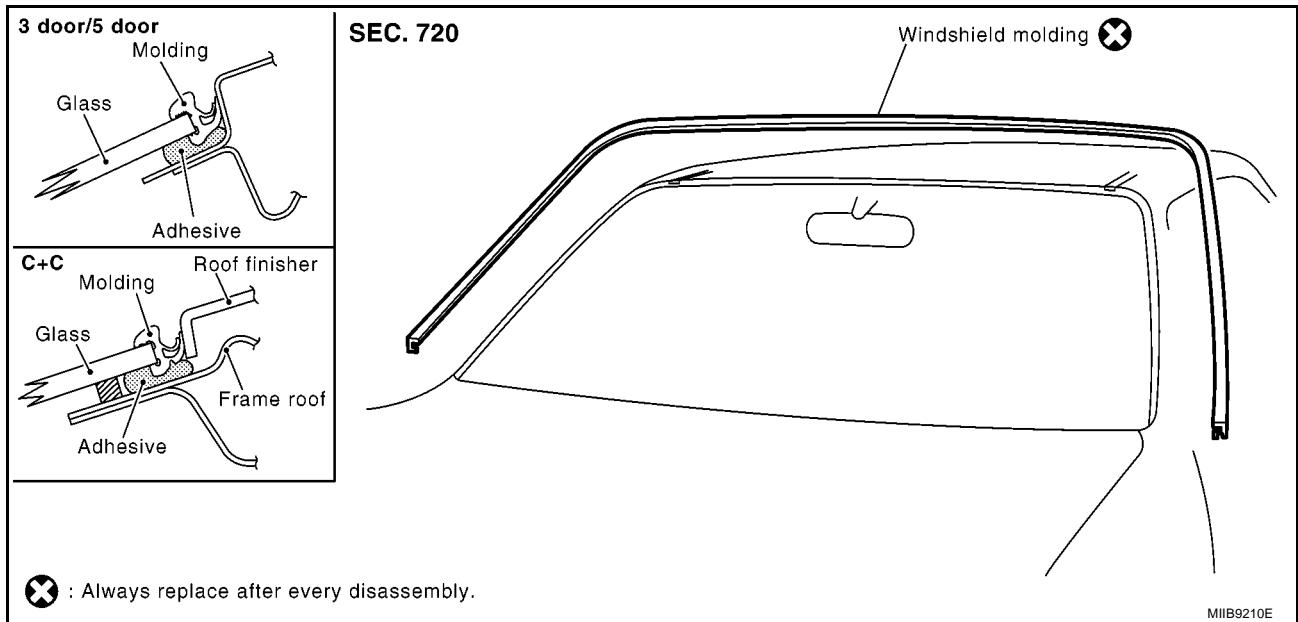


#### CAUTION:


Be careful when handling adhesive and primer.

#### REMOVAL

1. Remove roof finisher (C+C). Refer to [EI-37, "Removal and Installation"](#) .
2. Remove cowl top cover. Refer to [EI-13, "COWL TOP"](#) .
3. Peel off double-sided tape and remove front fender covers (LH/RH) from front fenders (LH/RH).

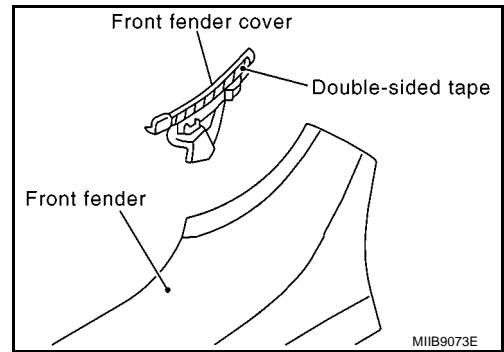

4. Apply protective tape along the contour of windshield molding and cut molding lip with cutter knife.
5. Tear off excess molding from end of molding to glass.
6. With pliers, draw out all the remaining molding left in flanged area of body to remove it completely from adhering surface on glass.

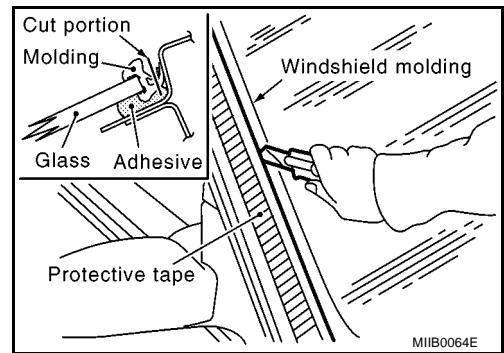


# WINDSHIELD MOLDING

## INSTALLATION

1. Apply primer between glass and panel then apply enough adhesive to allow molding adhesion.

### NOTE:


- The essential function of primers is to strengthen adhesion between glass and painted surface.
- There are 2 types of primer. Never confuse the application methods.  
Primer M ... for painted surfaces  
Primer G ... for glass
- If primer M overflows onto a painted surface other than bonding area, quickly remove it with white gasoline.

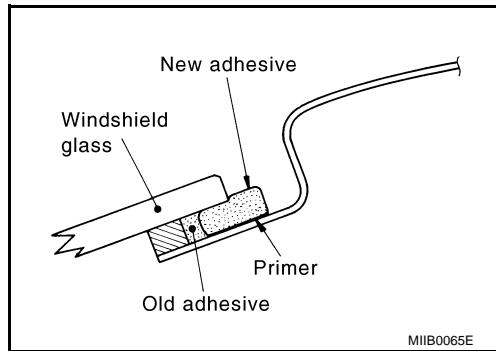


2. Apply primer to entire perimeter of molding area shown in the figure.
3. Align molding positioning mark (center of molding: white) with glass top edge center spacer positioning mark, push in so that molding's lower chin hooks onto glass, then continuing pushing toward the outside.

### CAUTION:

After installing molding, make sure there are no non-standard conditions, such as a lip sticking out or wave in molding.

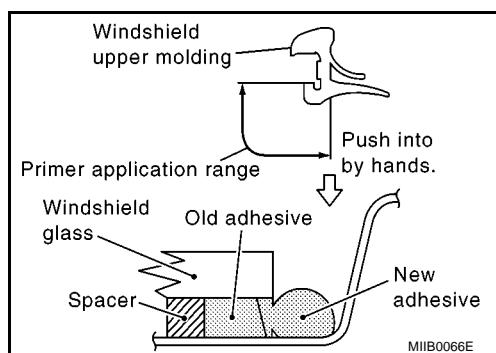

4. Remove protective tape.
5. Remove double-sided tape from front fender cover and apply primer (Sumitomo 3M K520) to double-sided tape application position shown in the figure. Then apply new double-sided tape and install front fender.

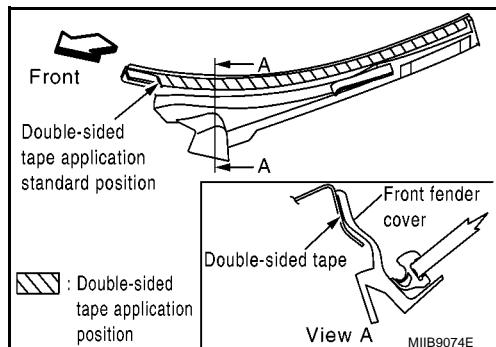

6. Install cowl top cover. Refer to [EI-13, "COWL TOP"](#) in EI section.


# DOOR OUTSIDE MOLDING

## DOOR OUTSIDE MOLDING

PFP:82820

### Removal and Installation (3 Door and 5 Door)

EIS00407

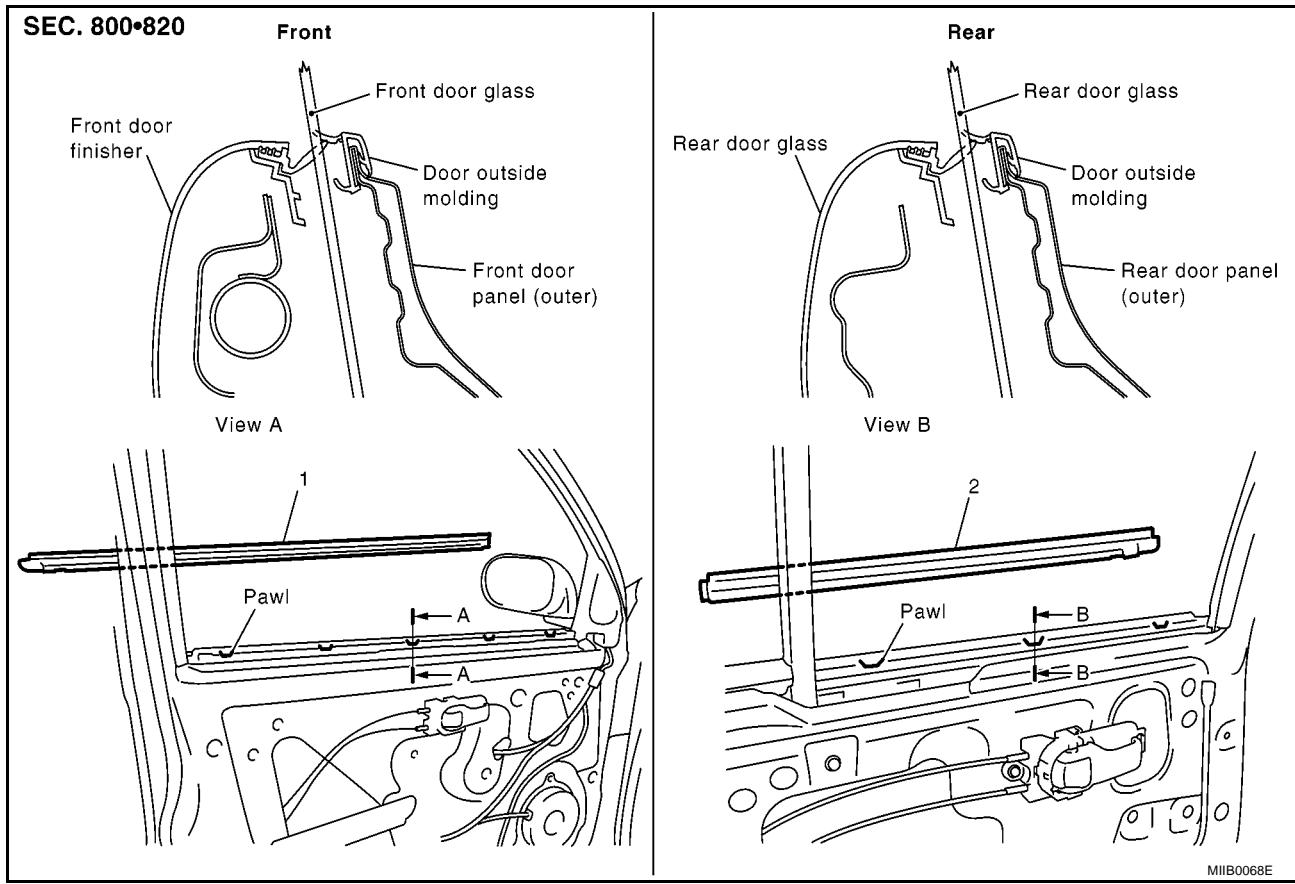

1. Front door outside molding

2. Rear door outside molding

MIB0068E

## REMOVAL

### Front

1. Fully open door glass.
2. Hold molding back end straight up and release engagement with flange hooks in order of back to front.
3. After disengaging the flange hooks, with the molding back end held up, pull molding slanted backwards to remove it.

### CAUTION:

After removal, visually inspect molding, and if it is deformed, replace it with new molding.

### Rear

1. Fully open door glass.
2. Hold molding straight up and remove it.

### CAUTION:

After removal, visually inspect molding, and if it is deformed, replace it with new molding.

## INSTALLATION



Install in the reverse order of removal.

# DOOR OUTSIDE MOLDING

## Removal and Installation (C+C)

EIS00E6T

SEC. 800-820

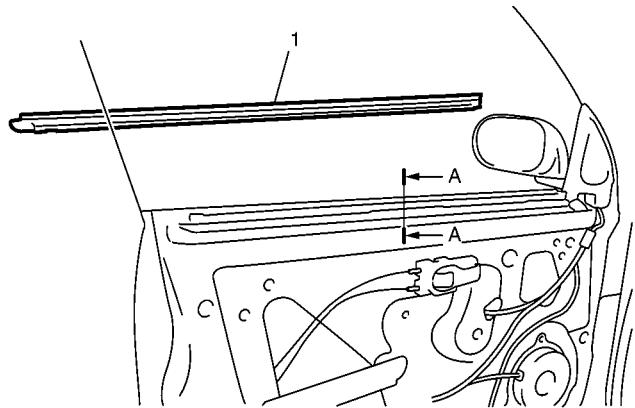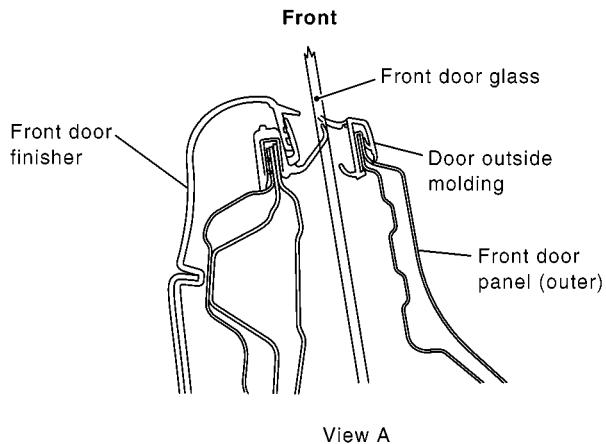

1. Front door outside molding

### REMOVAL

#### Front

1. Fully open door glass.
2. Hold molding back end and pull molding slanted backwards to remove it.

#### CAUTION:

After removal, visually inspect molding, and if it is deformed, replace it with new molding.

### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H

EI

J  
K  
L  
M

# DOOR FINISHER





## DOOR FINISHER

PFP:80900

### Removal and Installation

EIS00408

SEC. 805•809•825•829

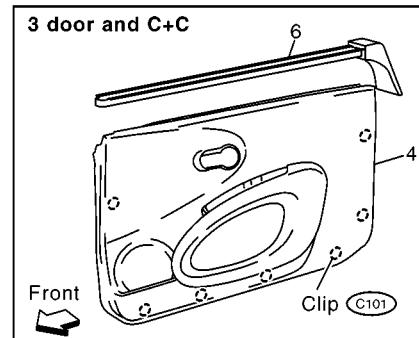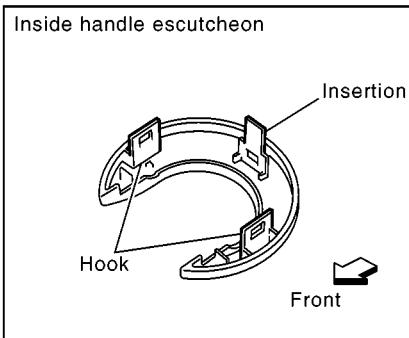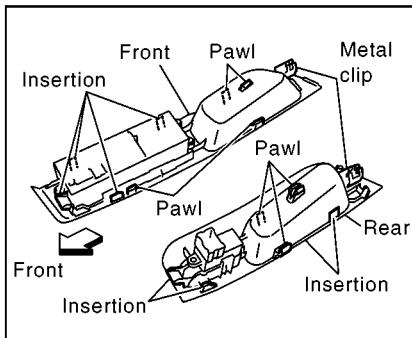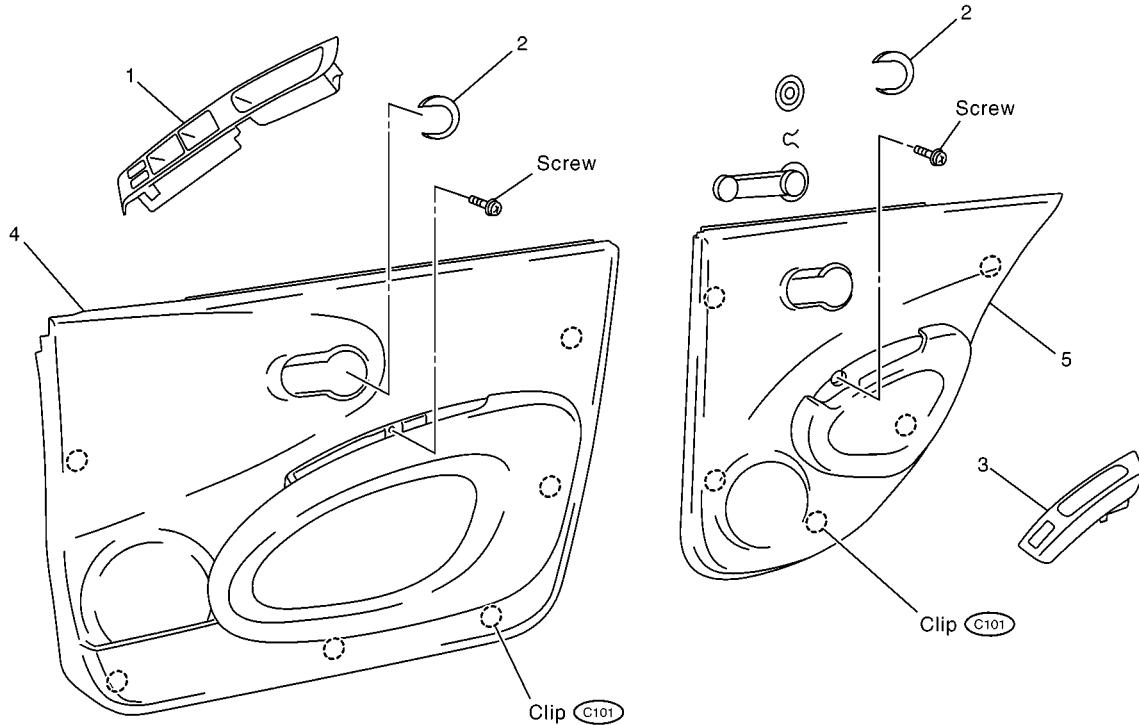


MIB9213E

1. Power window switch finisher (front door)
2. Inside handle escutcheon
3. Power window switch finisher (rear door)
4. Front door finisher
5. Rear door finisher
6. Front door inside seal

### REMOVAL


1. Fully open door glass.
2. Pull up inside handle lever, and then spread inside handle escutcheon top and bottom to release top and bottom hooks.
3. Slide inside handle escutcheon backwards, disengage bottom, and remove from door finisher.

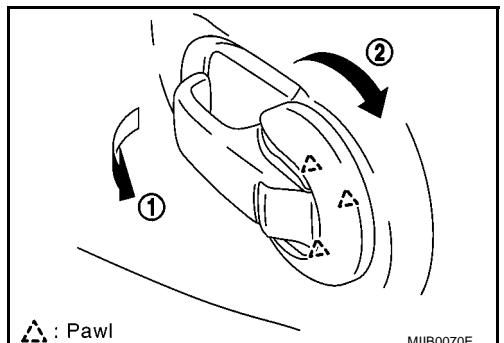

MIB0070E

# DOOR FINISHER


4. Insert a screwdriver wrapped with tape into back of power window switch finisher, hold up the back end, and disengage metal clips.
5. Hold up front side, remove inserted area, and remove. Pull back rear side, remove inserted area, and remove.
6. Separate the power window switch finisher back harness connector and remove it.

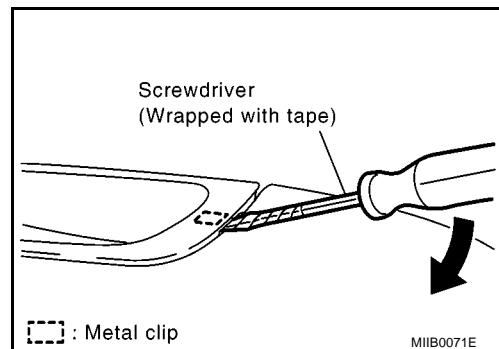

7. Remove door finisher screw.
8. Insert clip driver or clip clamp remover into door finisher back clip and remove clip.

**NOTE:**

Insert a clip driver or clip clamp remover into the part shown by the arrow (between the body side panel and the clips). Remove finisher.

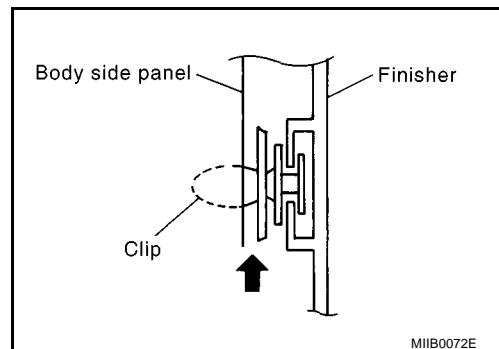

9. Pull door finisher upwards to remove it from door panel.

## INSTALLATION

Note the following, and install in the reverse order of removal.

**CAUTION:**

When installing finisher, confirm clips are accurately aligned with the holes on body side panel, then press in.

# BACK DOOR TRIM


## BACK DOOR TRIM

PFP:90900

### Removal and Installation REMOVAL


EIS00409

1. Insert clip driver or clip clamp remover into back door finisher back mounting clip area and remove clip.

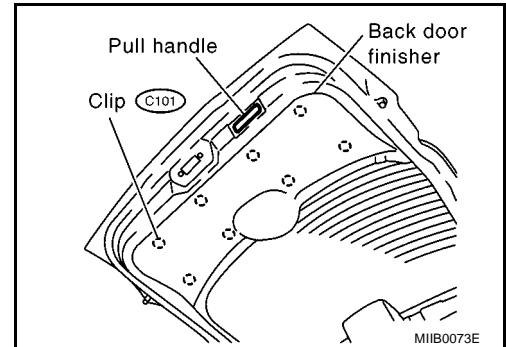

#### NOTE:

Insert a clip driver or clip clamp remover into the part shown by the arrow (between the clips and the body side panel). Remove clips.

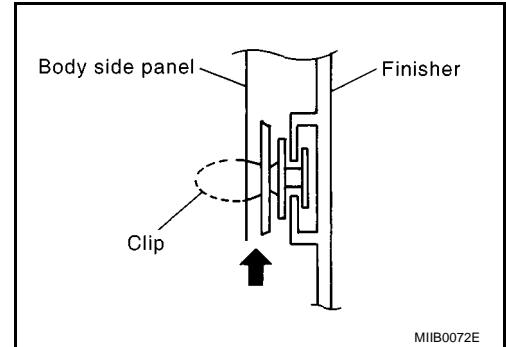

2. Pull back door finisher forward and remove it from back door.

### INSTALLATION

Note the following, and install in the reverse order of removal.

#### CAUTION:

When installing, confirm clips are accurately aligned with the holes on body side panel, then press in.


## TRUNK LID TRIM

PFP:84900

### Removal and Installation

EIS00E7M

A  
B  
C  
D  
E  
F  
G  
H  
EI  
J  
K  
L  
M

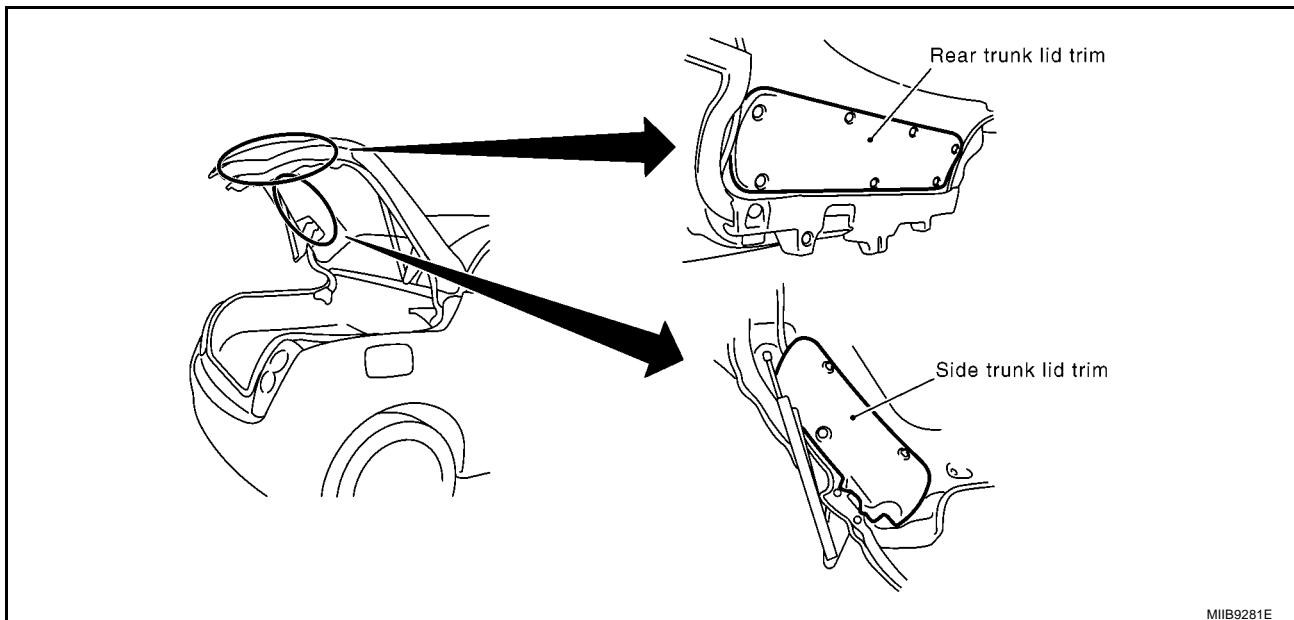

MIIB9281E

#### REMOVAL

1. Remove clips with a clip remover.
2. Remove trunk lid trim (rear/side).

#### INSTALLATION

Install in the reverse order of removal.

#### CAUTION:


When installing, confirm clips are accurately aligned with holes on trunk panel, then press in.

## TRUNK LID FINISHER

PFP:84810

### Removal and Installation

EIS00E6V

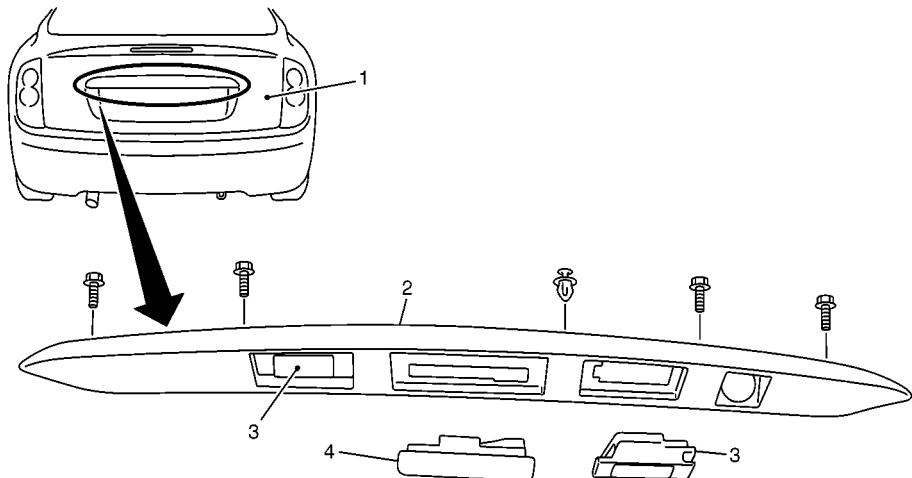

MIB9232E

1. Trunk lid
2. Trunk lid finisher
3. Rear licence plate lamp
4. Trunk lid lock switch actuator

### REMOVAL

1. Open trunk lid.
2. Remove fixing nuts, then pull backwards to release fixing clip from trunk lid panel.
3. Release harness from trunk lid finisher. Remove rear licence plate lamp assembly;  
Refer to [LT-199, "Removal and Installation of Parking Lamp, Tail Lamp and License Plate Lamp"](#) .  
Remove trunk lid lock actuator switch. Remove switch and harness. Refer to [BL-254, "Removal and Installation of Trunk Lid Side Latch \(LH/RH\)"](#) .
4. Remove trunk lid finisher.

### INSTALLATION

Install in the reverse order of removal.


## BODY SIDE TRIM

PFP:76913

### Removal and Installation (5-Door)

EIS0040A

SEC. 767

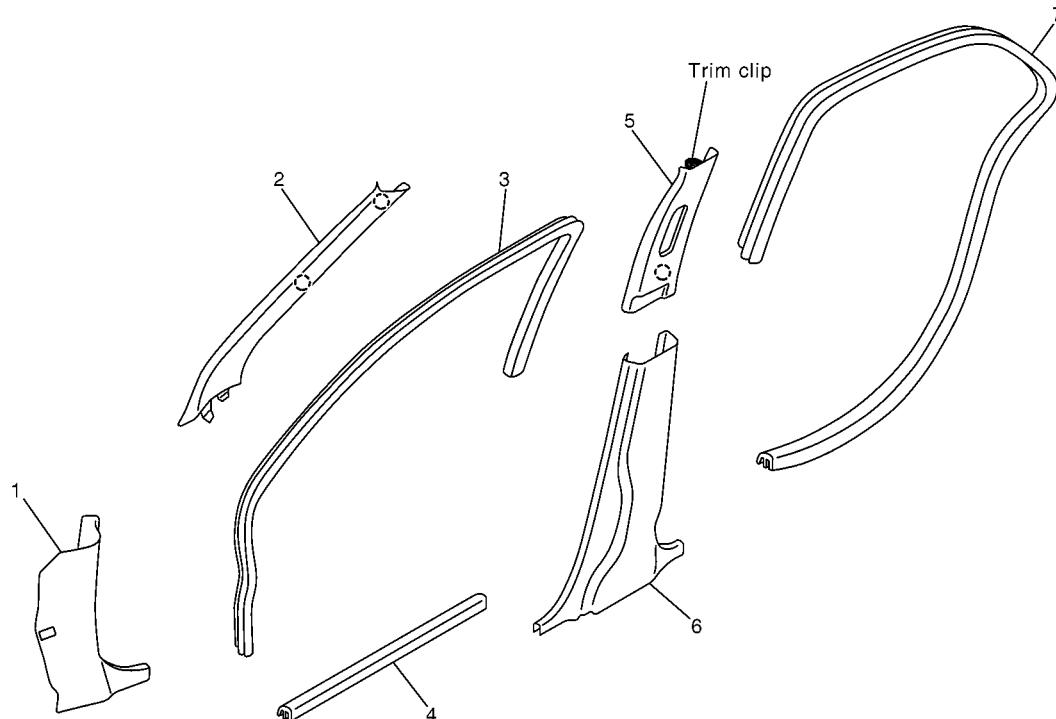

MIB0227E

1. Dashboard side finisher
2. Front pillar garnish
3. Front body side welt (upper)
4. Front body side welt (lower)
5. Center pillar upper garnish
6. Center pillar lower garnish
7. Rear body side welt

## REMOVAL

### Dashboard Side Finisher

Pull dash side finisher slanted backwards to remove it.

### Front Body Side Welt (Upper)

1. Remove the dashboard side finisher.
2. Remove front body side welt (upper) from vehicle.

### Front Pillar Garnish

1. Remove front body side welt (upper).
2. Remove the mounting clips, pull the front pillar garnish from inside the passenger room, and remove it.

### Center Pillar Lower Garnish

Spread the area engaged in the center pillar flange, remove front side first and then remove rear side in the same manner.

### Center Pillar Upper Garnish

1. Remove front body side welt (upper)
2. Remove center pillar lower garnish.
3. Remove front seat belt shoulder anchor. Refer to [SB-3, "Removal and Installation of Front Seat Belt \(3 Door and 5 Door\)"](#) in SB section.

A  
B  
C  
D  
E  
F  
G  
H  
  
EI

J


K

L

M

## BODY SIDE TRIM

4. Pull center pillar upper garnish from inside passenger room, disengage clips as instructed in the figure, and remove garnish from vehicle.

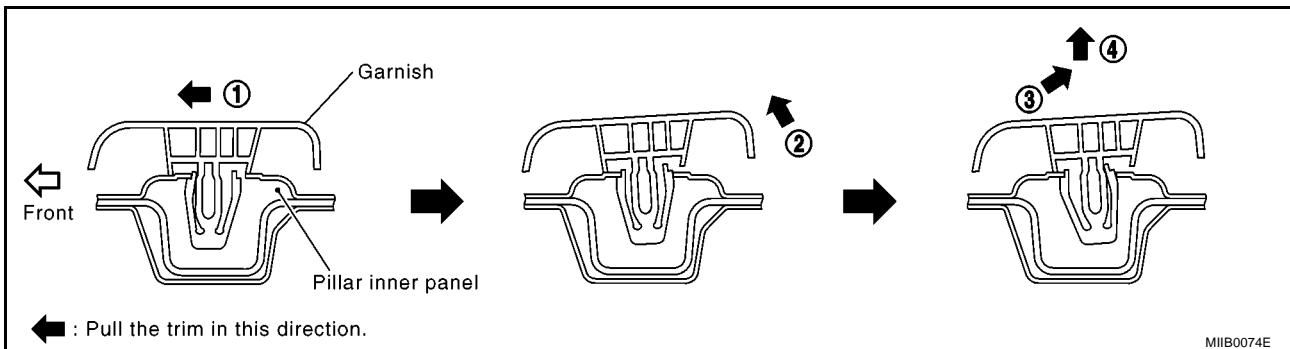


### INSTALLATION

Install in the reverse order of removal.

### Removal and Installation (3-Door)

EIS004OB

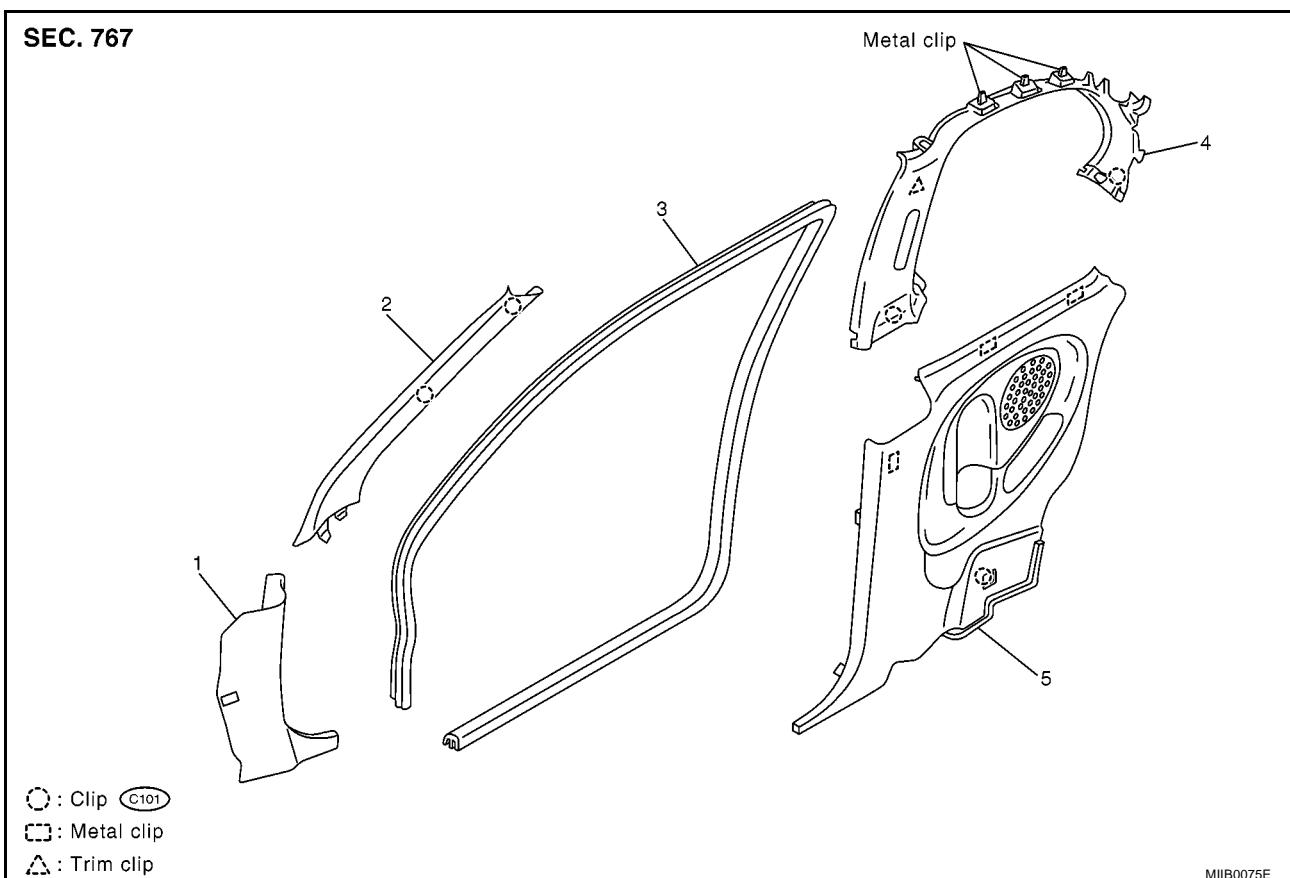

- 1. Dashboard side finisher
- 2. Front pillar garnish
- 3. Body side welt
- 4. Lock pillar upper garnish
- 5. Rear side finisher

### REMOVAL

#### Front Pillar Garnish

1. Remove body side welt.
2. Remove the mounting clips, pull the front pillar garnish from inside the passenger room, and remove it.

#### Dashboard Side Finisher

Pull dash side finisher slanted backwards to remove it.

#### Body Side Welt


1. Remove the dashboard side finisher.

## BODY SIDE TRIM

2. Remove body side welt from vehicle.


### Rear Side Finisher

1. Remove body side welt.
2. Remove rear seat cushion. Refer to [SE-15, "REAR SEAT"](#) in SE section.
3. Pull rear side finisher forward, remove mounting clips, disengage lock pillar upper garnish, and remove from vehicle.

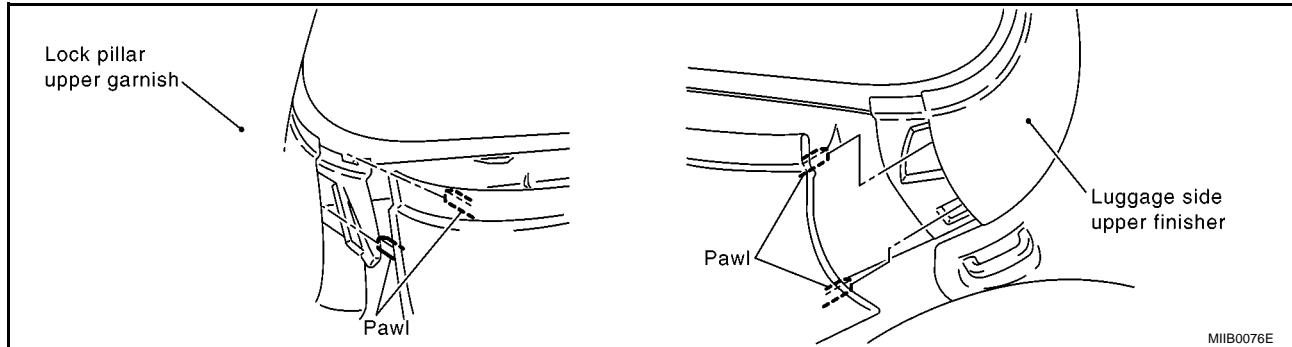

### Lock Pillar Upper Garnish

1. Remove luggage side upper finisher. Refer to [EI-40, "LUGGAGE FLOOR TRIM"](#) in EI section.
2. Remove rear seat cushion. Refer to [SE-15, "REAR SEAT"](#) in SE section.
3. Remove rear side finisher.
4. Remove front seat belt shoulder anchor. Refer to [SB-3, "Removal and Installation of Front Seat Belt \(3 Door and 5 Door\)"](#) in SB section.
5. Disengage lock pillar upper garnish bottom clips.
6. Lower lock pillar upper garnish to bottom and disengage metal clips.
7. Pull lock pillar garnish toward passenger room, disengage clips following instructions in the figure, and remove it from vehicle.

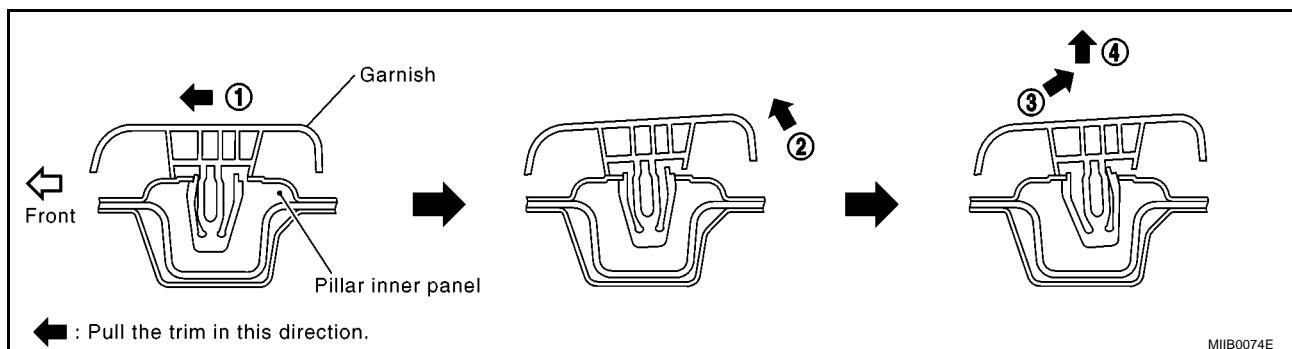


### INSTALLATION

Install in the reverse order of removal.

# BODY SIDE TRIM

## Removal and Installation (C+C)

EIS00E6W

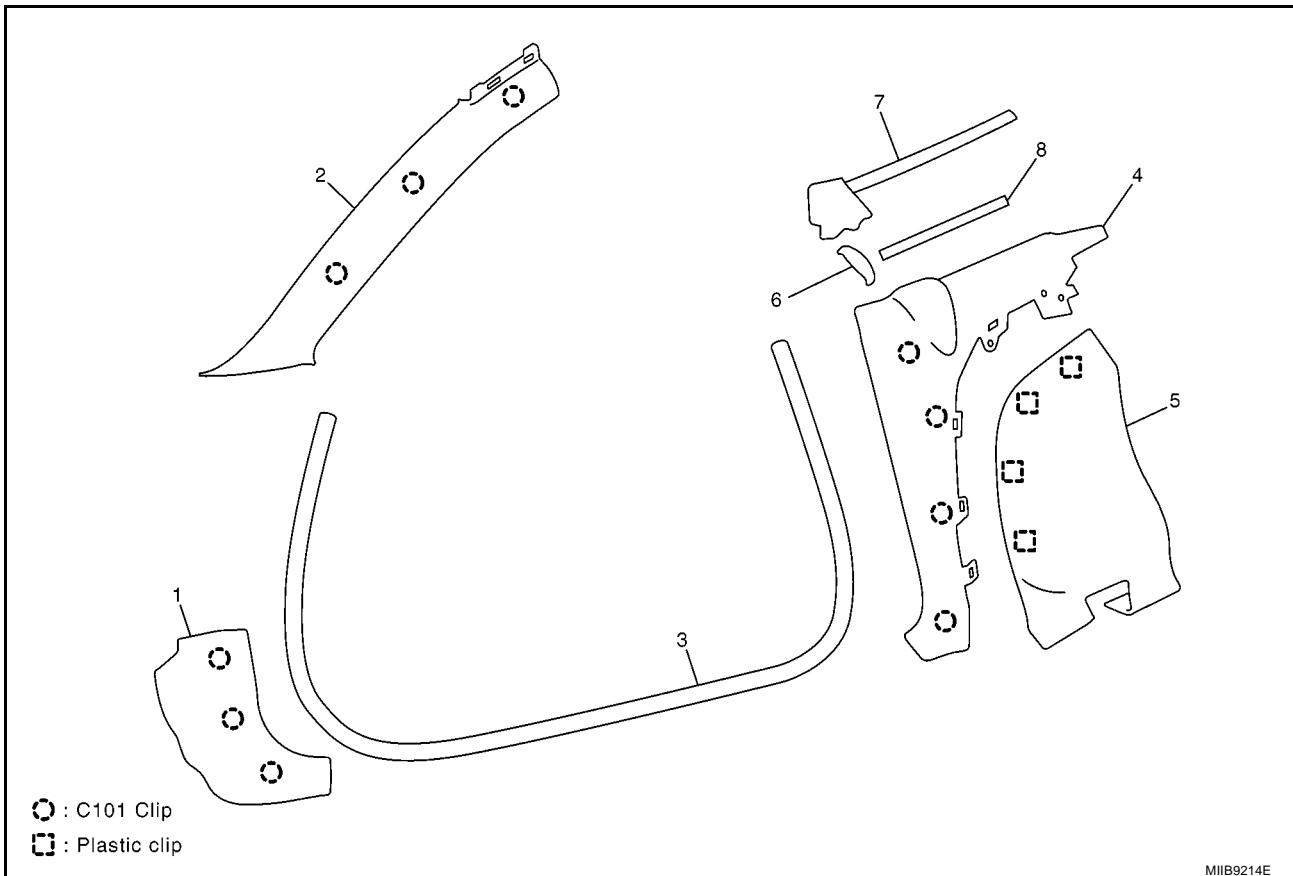

1. Dashboard side finisher
2. Front pillar garnish
3. Body side welt
4. Rear side finisher lower
5. Rear side finisher upper
6. Rear seat belt finisher
7. Side window molding
8. Side window inside seal

MIIIB9214E

## REMOVAL

### Front Pillar Garnish


1. Remove windshield finisher. Refer to [EI-36, "WINDSHIELD FINISHER"](#) .
2. Pull front pillar garnish upper end, to release fixing clip from front pillar, then release front pillar garnish lower end to release from upper instrument panel.
3. Remove anti theft sensor finisher (if equipped), then remove front pillar garnish. Remove anti theft sensor.

### Dashboard Side Finisher

1. Remove body side welt.
2. Pull dash side finisher slanted backward to remove it.

### Body Side Welt

1. Release rear side outside molding front end, then lift up to add paint mark or other mark which can not damage body paint, to perfect fitting for installation of side molding.
2. Pull forward body side welt, then remove it.

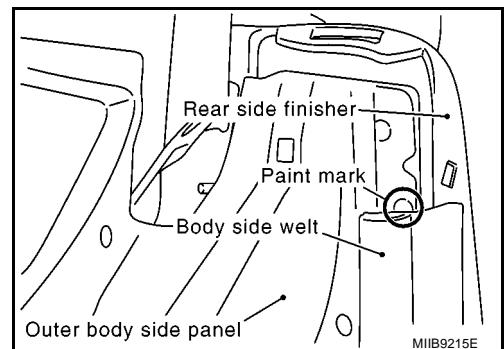


## Rear Side Finisher

1. Open fully rear window glass and retractable hard top.
2. Remove body side welt.
3. Remove rear seat cushion. Refer to [SE-15, "REAR SEAT"](#).
4. Release first fixing clip from lower end rear side lower finisher to the upper end of lower rear side finisher, then remove it.
5. Remove rear seat belt finisher, then remove lower anchor from front seat belt. Refer to [SB-4, "Removal and Installation of Front Seat Belt \(C+C\)"](#).
6. Hold up the molded finisher from rear end of upper rear side finisher, then release the molded clamp and the plastic retainer from holder.
7. Release fixing clip from inner rear body panel, and pull forward upper rear side finisher from lower end to upper end of rear side finisher, then remove upper rear side finisher.

**NOTE:**

It is important to respect the removal order, to avoid damaging the rear side upper finisher.

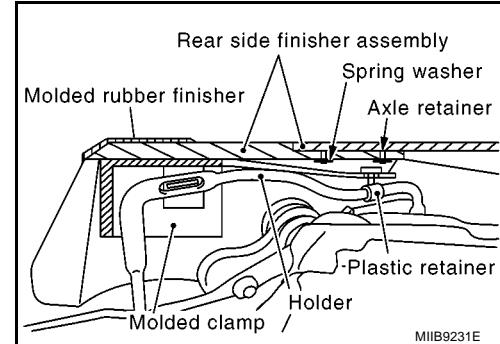

## INSTALLATION

Install in the reverse order of removal.

# FLOOR TRIM


## FLOOR TRIM

PFP:74902

### Removal and Installation

EIS004OC

**SEC. 749**  
**3 door/5 door**

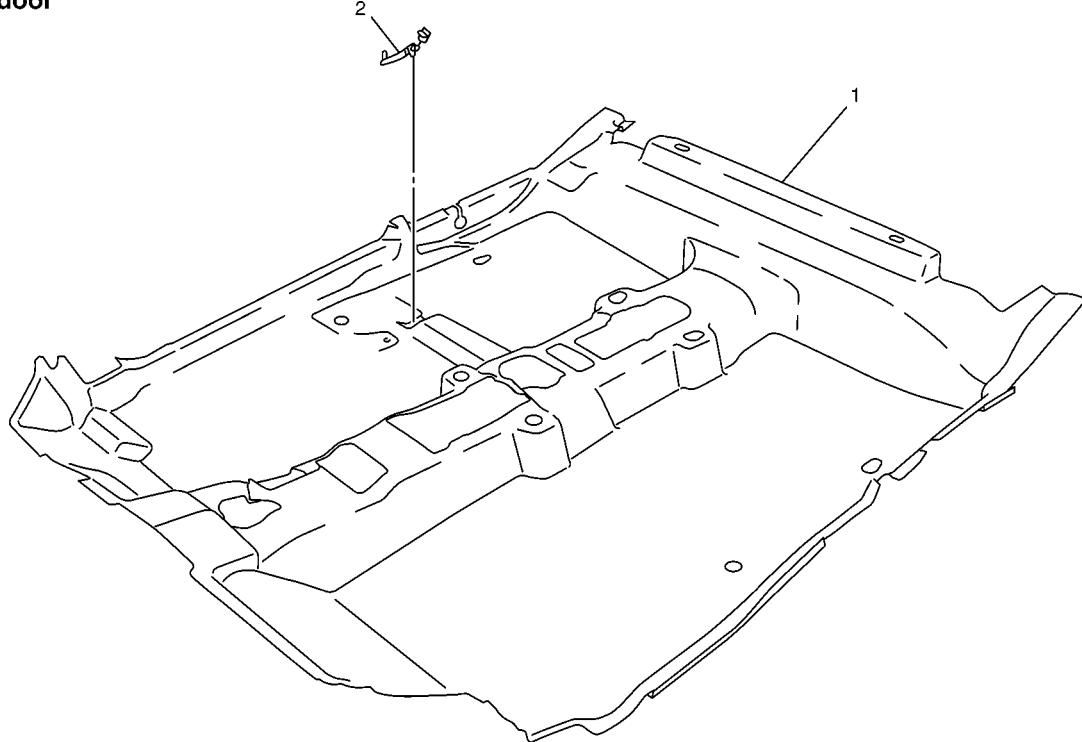


MIIB9280E

1. Floor carpet

2. Carpet hook

# FLOOR TRIM

C+C

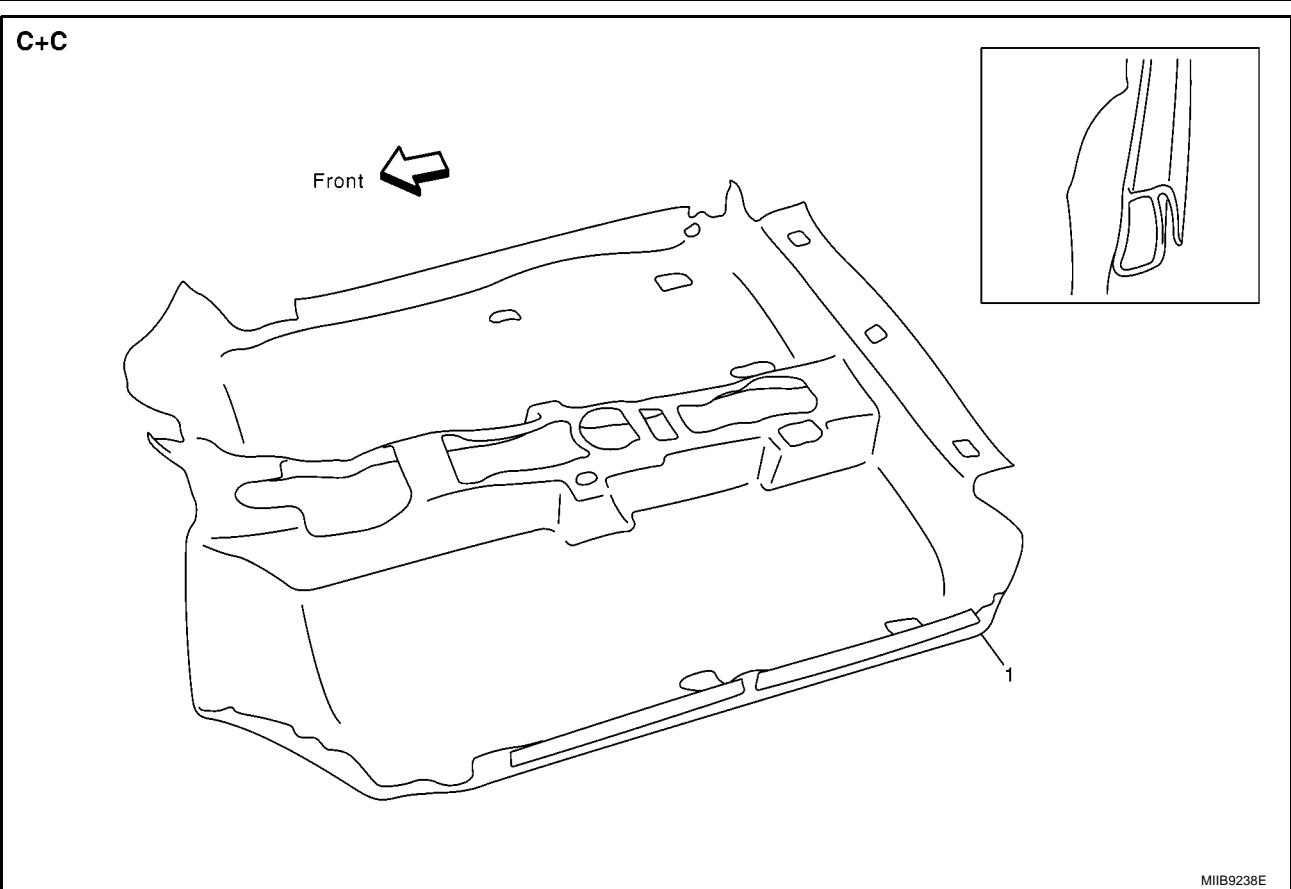


1. Floor carpet

EI

## REMOVAL

1. Remove front seats (LH/RH) and rear seat cushion. Refer to [SE-9, "FRONT SEAT"](#) and [SE-15, "REAR SEAT"](#) in SE section.
2. Remove console box. Refer to [IP-9, "REMOVAL AND INSTALLATION OF CONSOLE BOX."](#) in IP section.
3. Remove air bag sensor unit harness connector and harness clips. Refer to [SRS-49, "DIAGNOSIS SENSOR UNIT"](#) in SRS section.
4. Remove instrument panel stay cover. Refer to [IP-5, "Removal and Installation"](#) in IP section.
5. For 5-door vehicles, remove center pillar lower garnish (LH/RH). Refer to [EI-25, "Removal and Installation \(5-Door\)"](#) in EI section.
6. For 3-door vehicles, remove rear side finishers (LH/RH) and luggage side lower finishers (LH/RH). Refer to [EI-26, "Removal and Installation \(3-Door\)"](#) and [EI-40, "LUGGAGE FLOOR TRIM"](#) in EI section.
7. Remove rear seat cushion and pad (C+C). Refer to [SE-19, "Removal and Installation \(C+C\)"](#).
8. Remove dash side finishers (LH/RH). Refer to [EI-25, "BODY SIDE TRIM"](#) in EI section.
9. Remove body side welts (LH/RH).
10. Remove carpet hook.
11. Remove instrument panel stay (LH).
12. Use a cutter knife, etc., to cut out sections 1 and 2 shown in the figure.
13. Rotate floor carpet until the cut out section 3 is visible, then cut out the section 3.
14. Remove floor carpet from vehicle.

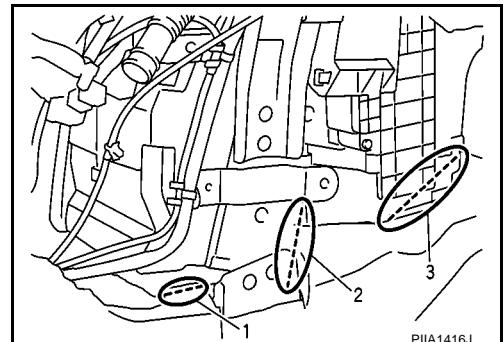

## FLOOR TRIM

---

### INSTALLATION


Install in the reverse order of removal.

## HEADLINER

## Removal and Installation

EIS004OD

SEC. 251-738-963-964

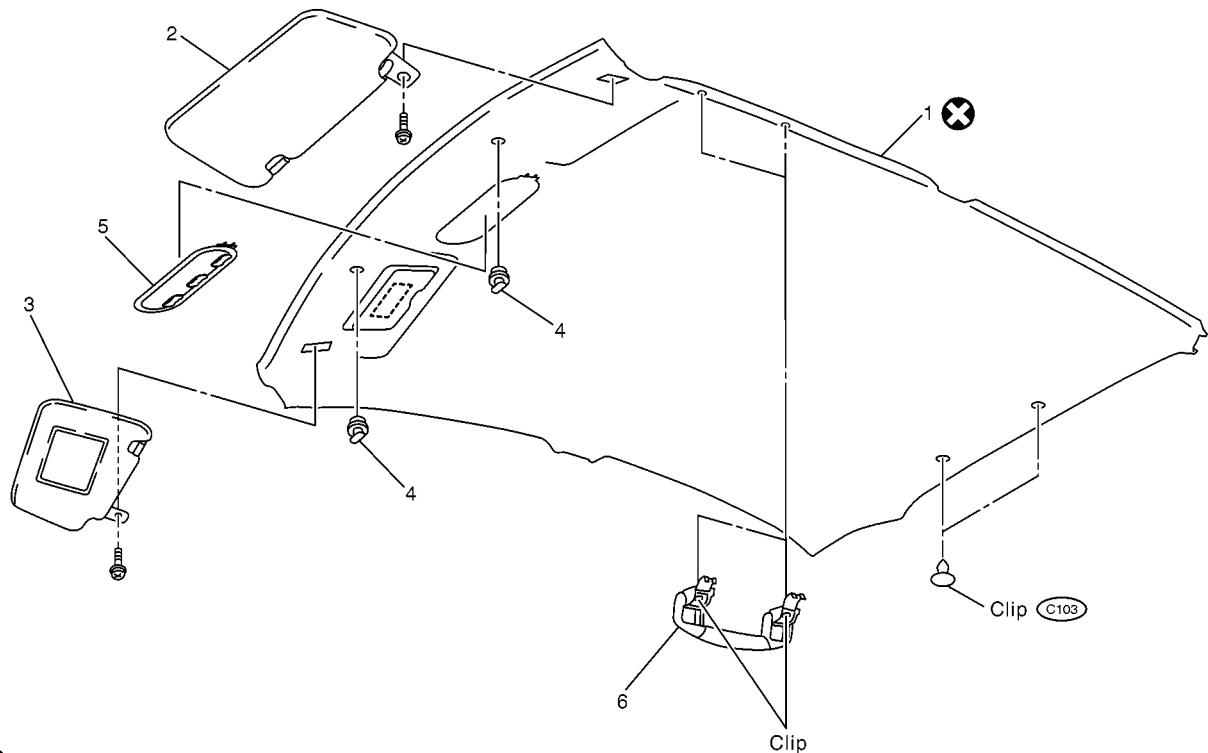

MIB9100E


1. Headliner	2. Sunvisor (LH)	3. Sunvisor (RH)
4. Sunvisor holder	5. Room lamp (with map lamp function)	6. Assist grip (passenger seat)

## REMOVAL

1. Remove front pillar garnish. Refer to [EI-25, "BODY SIDE TRIM"](#) in EI section.
2. Remove back door weatherstrip.
3. Remove luggage side upper finishers (LH/RH). Refer to [EI-40, "LUGGAGE FLOOR TRIM"](#) in EI section.
4. Remove center pillar upper garnish (5-door vehicles) and lock pillar upper garnish (3-door vehicles). Refer to [EI-25, "BODY SIDE TRIM"](#) in EI section.
5. Remove assist grip.

## NOTE:

When removing assist grip, insert a thin screwdriver, etc., into the clip and move the clip outside.

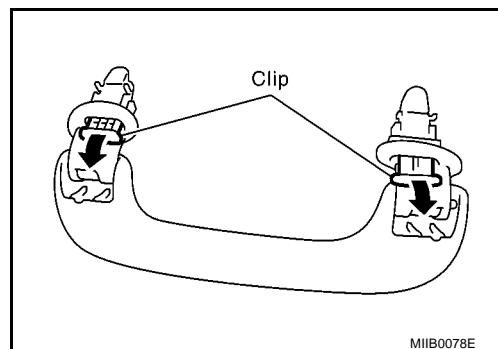

MIB0078E


6. Remove sunvisors (LH/RH).
7. Remove room lamp (with map lamp function). Refer to [LT-255, "Removal and Installation"](#).

# HEADLINER

8. Remove sunvisor holder.

**NOTE:**

Insert a screwdriver into the cutout and rotate 90° to remove.

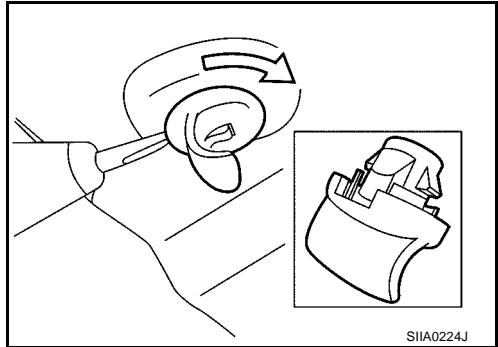


9. Remove vehicle rear clips.

10. Peel off headliner adhesive and remove headliner from back door opening.

**CAUTION:**

The roof panel could be deformed, so do not strongly pull the headliner.

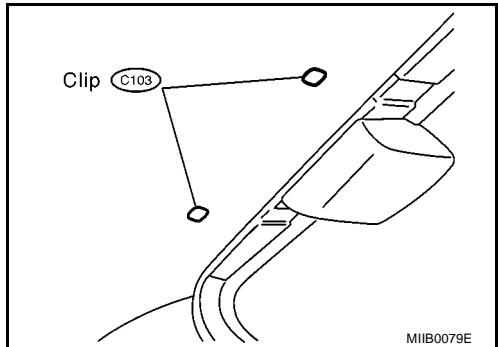


## INSTALLATION

1. Remove any adhesive left on the vehicle side.

2. Apply adhesive to headliner.


Adhesive:

Yokohama Rubber Hammer Tight  
YM-21

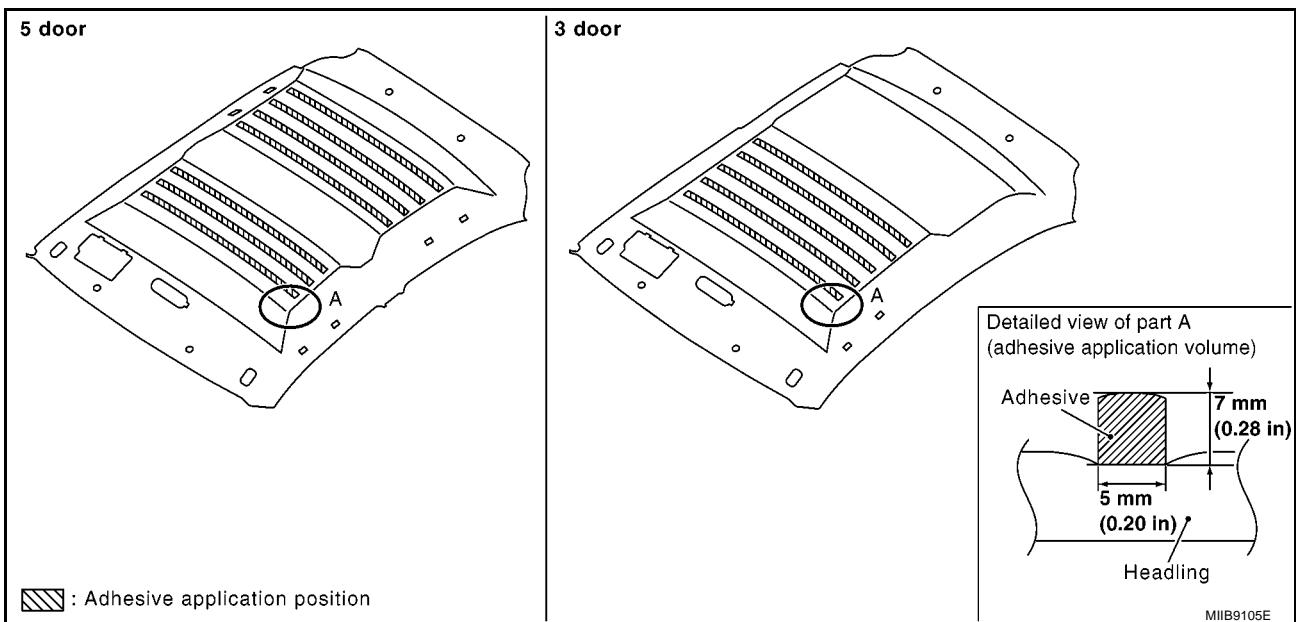

## HEADLINER

3. Move front seats (LH/RH) toward front of vehicle, and fix headrests (LH/RH) in top position.
4. Place the headliner front section on the headrest and fasten the headliner rear section with the clips.
5. After installing sunvisor holder, install in the reverse order of removal.

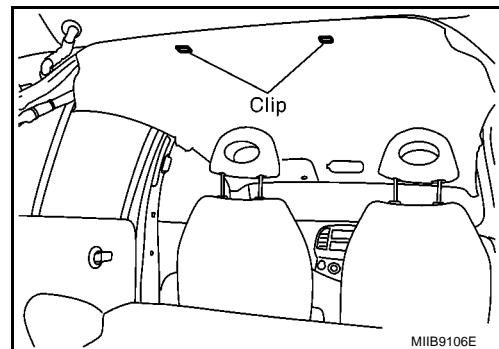

A  
B  
C  
D

E

F

G

H

EI

J

K

L

M


# WINDSHIELD FINISHER

## WINDSHIELD FINISHER

PFP:72000

### Removal and Installation

EIS00E70

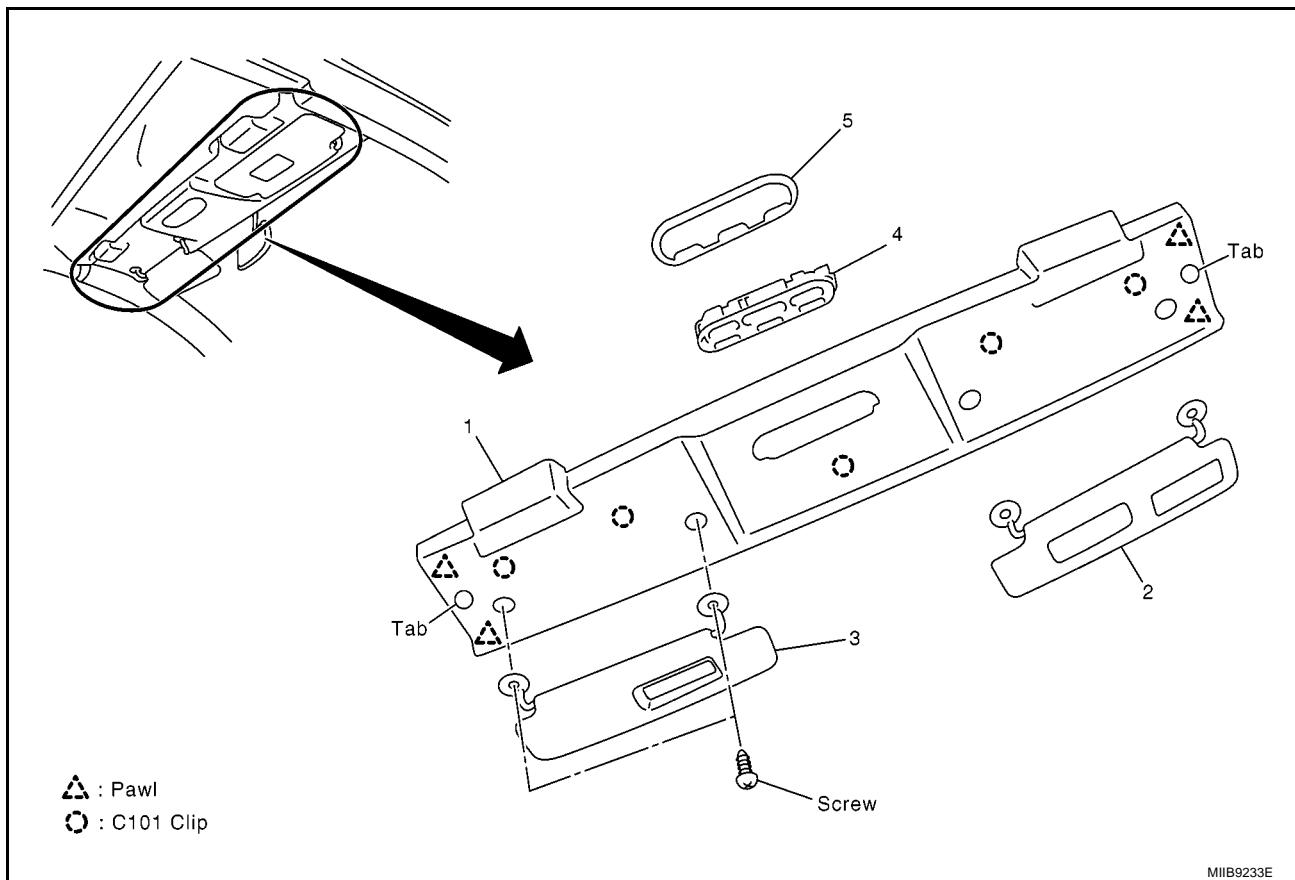

1. Windshield finisher      2. Sunvisor RH      3. Sunvisor LH  
4. Room lamp      5. Room lamp finisher

MIIIB9233E

### REMOVAL

1. Remove sunvisor fixing screws, then remove sunvisor RH/LH.
2. Remove room lamp finisher, then release plastic clip and slide downward to remove room lamp. Disconnect room lamp harness connector. Refer to [LT-255, "Removal and Installation"](#).
3. Pull the windshield finisher downward to release clips, pawls and tabs, then remove windshield finisher.

### INSTALLATION

Install in the reverse order of removal.


## ROOF FINISHER

PFP:97000

### Removal and Installation

EIS00E71

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

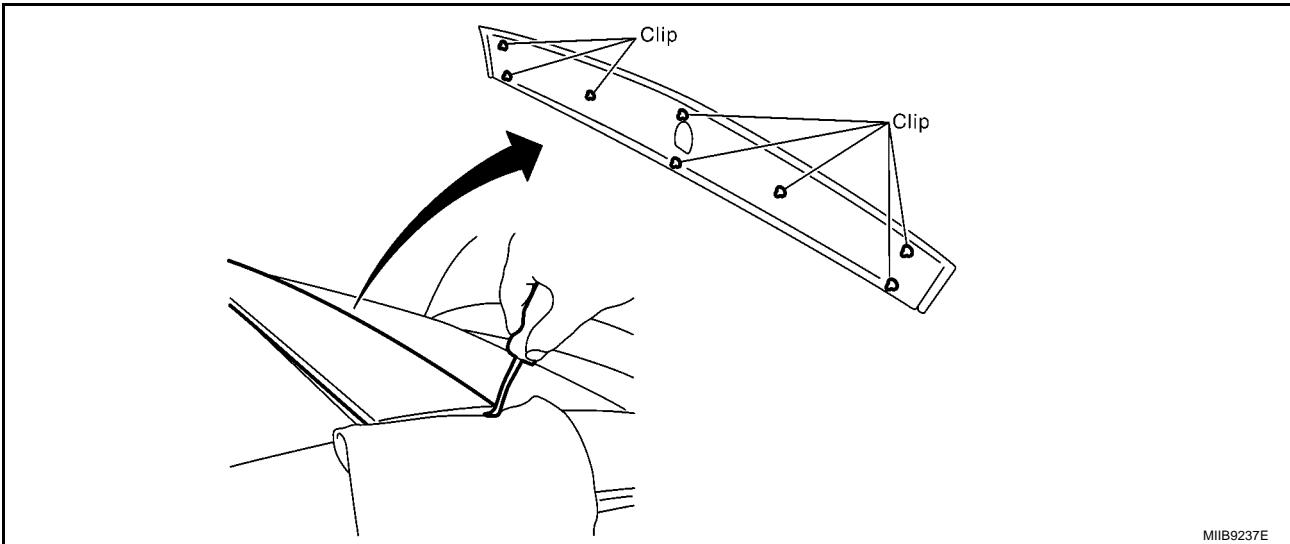

1. Roof finisher

#### REMOVAL

1. Remove roof antenna. Refer to [AV-19, "Removal and Installation of Roof Antenna"](#) .
2. Using a flat screwdriver and shop cloth, lift up roof finisher end side to release the first fixing clips from roof panel, then release all others clips by hand to avoid damaging roof finisher or body paint.

#### INSTALLATION

Install in the reverse order of removal.

EI

J  
K  
L  
M


# REAR PARCEL SHELF

## REAR PARCEL SHELF

PFP:97000

### Removal and Installation

EIS00E72

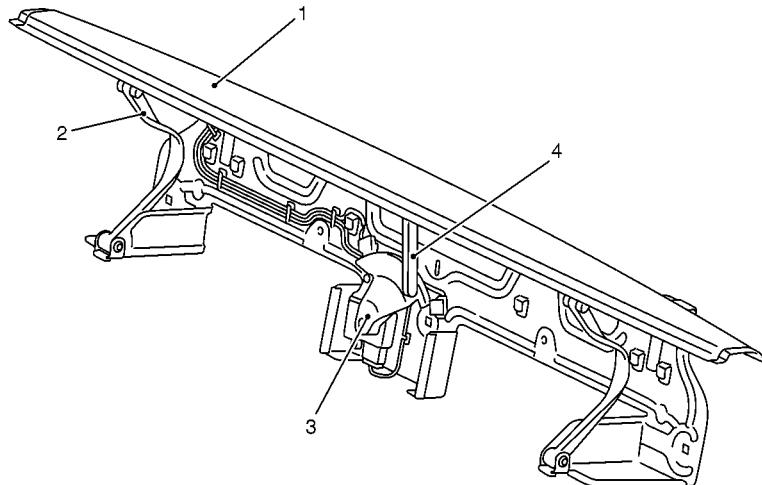

MIB9235E

1. Rear parcel shelf assembly
2. Rear parcel shelf main bracket
3. Rear parcel shelf motor
4. Motor linkage


### REMOVAL

#### Rear Parcel Shelf

1. Remove rear parcel shelf finisher. Refer to [RF-173, "Removal and Installation of Rear Parcel Shelf Finisher"](#).
2. Remove lower fixing bolt.
3. Retractable hard top closed, release metal circle clips (upper/lower) from axle, remove axle and grommet, and remove lower side parcel shelf bracket.
4. Remove metal clip from motor linkage lower end, then release linkage from motor mechanism. Then, move rear parcel shelf finisher manually to reveal upper fixing bolt.
5. Remove upper fixing bolt.
6. Disconnect harness connector.
7. Pull parcel shelf assembly lower end, and slide upward to remove it.

#### Rear Parcel Shelf Motor

1. Disconnect harness connector.
2. Remove clip fixing motor mechanism to center linkage.
3. Make paint mark before removing spring retainer.
4. Remove fixing screws.
5. Release motor harness from rear parcel shelf motor, then remove rear parcel shelf motor.

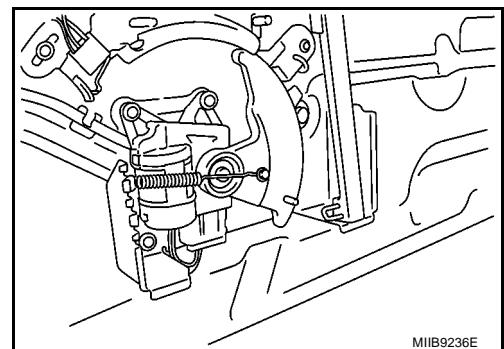

MIB9236E

### INSTALLATION

Install in the reverse order of removal.

#### NOTE:


When rear parcel shelf is fitted, push it upward before tightening fixing bolt.

## BACK SIDE TRIM

PFP:76020

### Removal and Installation

EIS00E73

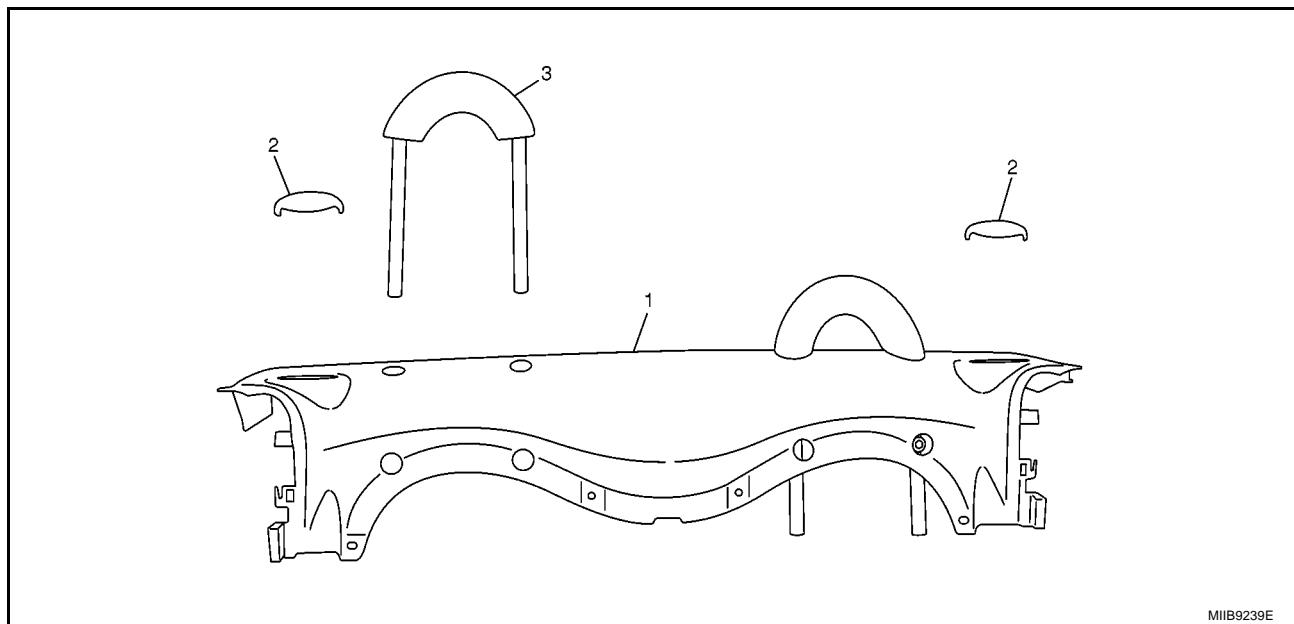

MIIB9239E

1. Back side trim finisher

2. Seat belt trim finisher

3. Cross bar

#### REMOVAL

1. Remove seat belt finisher. Refer to [SB-6, "Removal and Installation of Rear Seat Belt \(C+C\)"](#) .
2. Remove rear seat and rear seat back. Refer to [SE-19, "Removal and Installation \(C+C\)"](#) .
3. Remove rear side finisher, lower and upper. Refer to [EI-28, "Removal and Installation \(C+C\)"](#) .
4. Remove rear seat belt lower anchor. Refer to [SE-19, "Removal and Installation \(C+C\)"](#) .
5. Remove cross bar fixing bolt.

#### NOTE:

Fully open retractable hard top and glass windows to avoid damage or injury. Refer to [RF-32, "OPERATION DESCRIPTION"](#) .

6. Pull cross bar (RH/LH) upward to remove it.
7. Pull back side lower end forward to release clips, then pull upper side back end upward to release metal clip, and remove back side finisher.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
EI  
J  
K  
L  
M

# LUGGAGE FLOOR TRIM


## LUGGAGE FLOOR TRIM

PFP:84999

### Removal and Installation

EIS004OE

SEC. 849

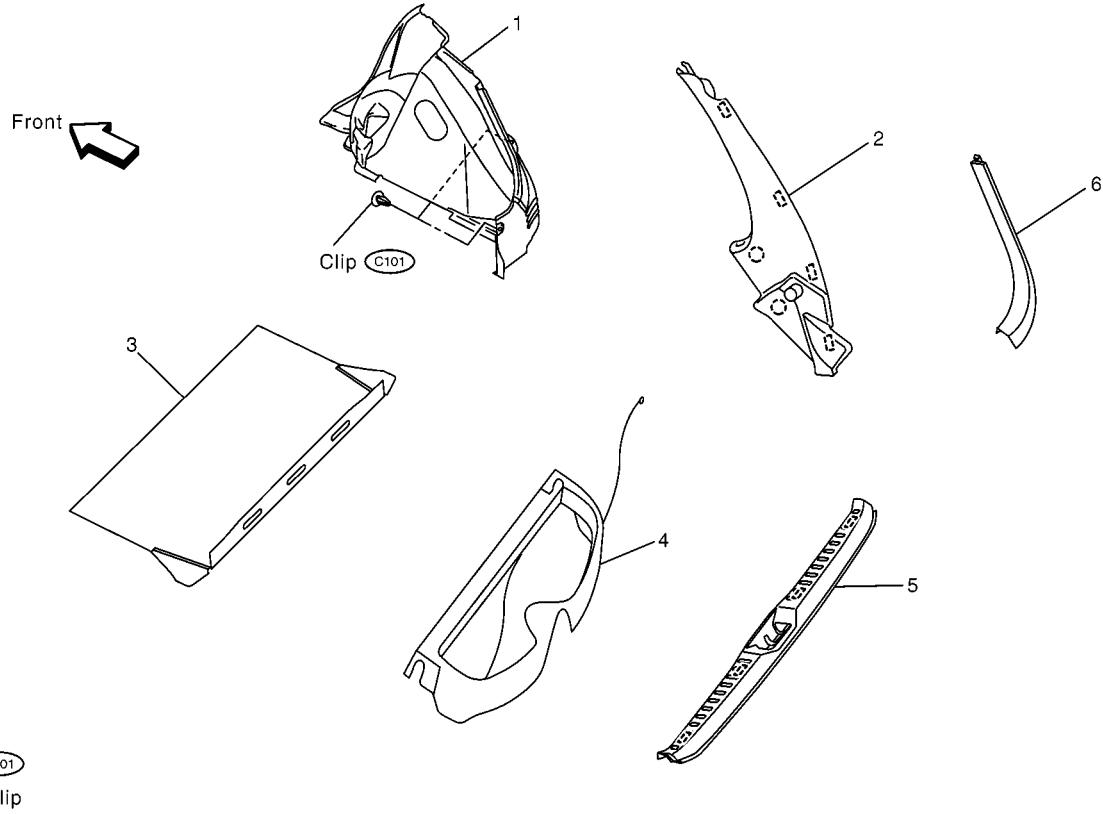


MIIB0082E

1. Luggage side lower finisher
2. Luggage side upper finisher
3. Luggage floor carpet
4. Rear parcel shelf finisher
5. Luggage rear kickplate
6. Luggage rear plate

### REMOVAL

#### Luggage Side Upper Finisher


1. Remove rear parcel shelf finisher.
2. Remove back door weather strip.
3. For 5-door vehicles, remove plastic clips and metal clips in order from luggage side upper finisher bottom.
4. For 3-door vehicles, remove the plastic clips and metal clips in order from luggage side upper finisher bottom, pull finisher straight forward, and disengage from lock pillar upper garnish.

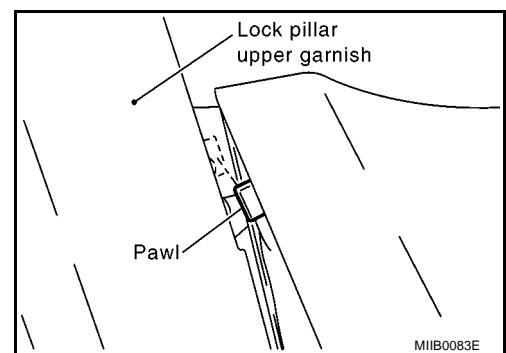

MIIB0083E

# LUGGAGE FLOOR TRIM

5. Remove headliner insert, and remove luggage side upper finisher.

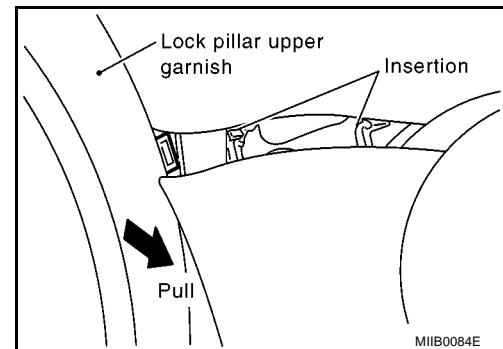

## Luggage Side Lower Finisher (5-Door Vehicles)

1. Remove rear body side welt.
2. Remove luggage side upper finisher and luggage rear kickplate. Refer to [EI-25, "BODY SIDE TRIM"](#) and [EI-40, "LUGGAGE FLOOR TRIM"](#) in EI section.
3. Remove rear seat cushion and rear seatback. Refer to [SE-15, "REAR SEAT"](#) in SE section.
4. Remove mounting clips and then remove luggage side lower finisher.

## Luggage Side Lower Finisher (3-Door Vehicles)

1. Remove body side welt.
2. Remove luggage side upper finisher and luggage rear kickplate. Refer to [EI-26, "Removal and Installation \(3-Door\)"](#) and [EI-40, "LUGGAGE FLOOR TRIM"](#) in EI section.
3. Remove rear seat cushion and rear seatback. Refer to [SE-15, "REAR SEAT"](#) in SE section.
4. Remove rear side finisher. Refer to [EI-26, "Removal and Installation \(3-Door\)"](#) in EI section.
5. Remove mounting clips and then remove luggage side lower finisher.

## Luggage Rear Plate

1. Remove back door weather strip.
2. Hold up luggage rear plate, disengage metal clips, and remove plate.

## Luggage Rear Kickplate

1. Remove rear parcel shelf finisher.
2. Remove back door weather strip.
3. Remove luggage rear plate.
4. Remove luggage side upper finisher.
5. Remove luggage rear kickplate.

## INSTALLATION


Install in the reverse order of removal.

## TRUNK ROOM TRIM

PFP:84900

## Removal and Installation

EIS00E74

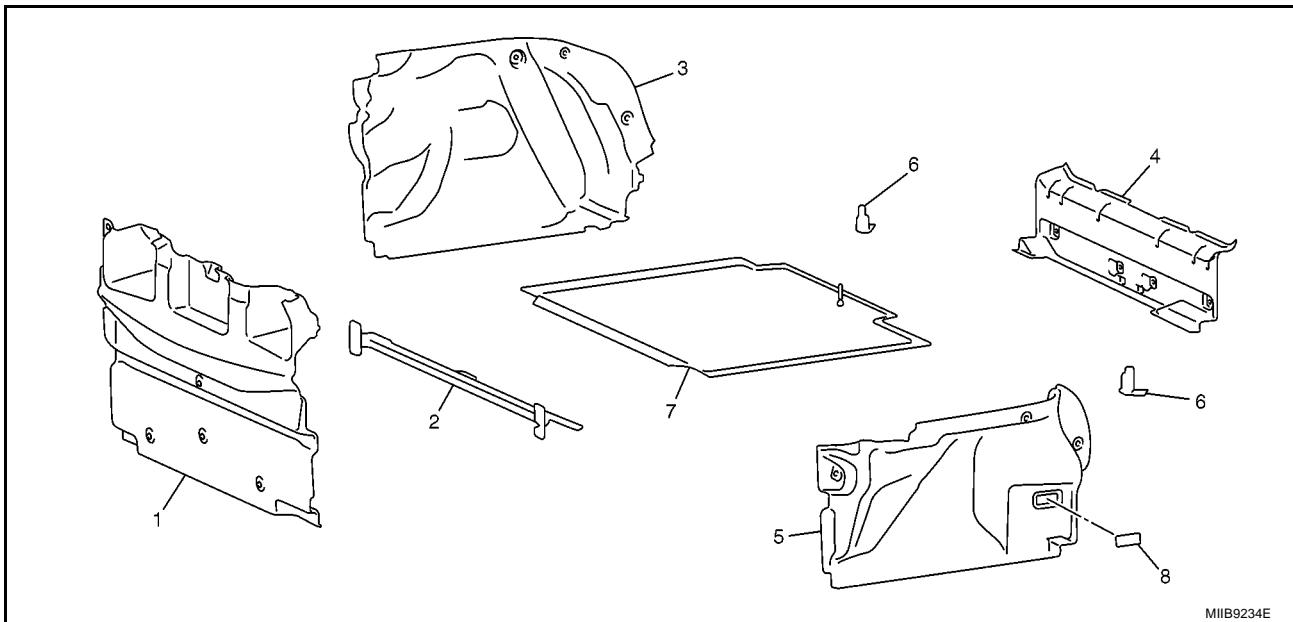

- 1. Luggage room front trim
- 2. Tonneau cover
- 3. Luggage side trim RH
- 4. Luggage rear kickplate
- 5. Luggage side trim LH
- 6. Retractable hard top stopper (RH/LH)
- 7. Luggage room floor carpet
- 8. Luggage room lamp

## REMOVAL

## Luggage Room Front Finisher

1. Remove luggage floor carpet.
2. Remove tonneau cover. Refer to [EI-42, "Tonneau Cover"](#).
3. Release fixing clips, then remove luggage room front finisher.

## Tonneau Cover

1. Release tonneau cover rear end from tonneau cover retainer (RH/LH), then remove bolt fixing tonneau cover to front trunk panel.
2. Pull tonneau cover upward to release tonneau cover hook from front trunk panel, and remove tonneau cover.

## Luggage Room Side Finisher

1. Remove luggage room floor carpet, tonneau cover, and luggage room front finisher.
2. Remove trunk lid weather strip fixing bolt, then release weather strip front end from front trunk rear side.
3. Remove trunk lid side positioner fixing bolt.
4. Remove trunk room lamp, LH side. Refer to [LT-255, "TRUNK ROOM LAMP"](#).
5. Release fixing clip, then remove luggage side finisher.

## Luggage Rear Kickplate

1. Remove rear kickplate lower fixing clips.
2. Pull rear kickplate upward to release metal clip, then disconnect antenna harness. Remove luggage rear kickplate.

## INSTALLATION

Install in the reverse order of removal.