
ALPHABETICAL INDEX

A

A-BAG BRANCH LINE CIRCUIT .[LAN-48](#), [LAN-64](#),
[LAN-79](#)
A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMIT [SRC-168](#)
A/C INDICATOR..... [HAC-33](#)
A/C ON SIGNAL..... [HAC-27](#)
ABBREVIATIONS [GI-14](#)
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT).....[BRC-37](#), [BRC-143](#)
ABS BRANCH LINE CIRCUIT[LAN-41](#), [LAN-57](#),
[LAN-72](#)
ABS FUNCTION DOES NOT OPERATE. [BRC-135](#)
ABS WARNING LAMP [BRC-127](#)
ACCELERATOR CONTROL SYSTEM [ACC-3](#)
ACCELERATOR PEDAL RELEASED POSITION
LEARNING.....[EC-122](#)
ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL.....[PWC-25](#)
ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) [BRC-55](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT[PWC-26](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE [TM-82](#)
ADDITIONAL SERVICE WHEN REPLACING ECM
[EC-119](#)
ADDITIONAL SERVICE WHEN REPLACING TCM
[TM-76](#)
ADDITIONAL SERVICE WHEN REPLACING TCM
AND TRANSAXLE ASSEMBLY[TM-80](#)
ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY.....[TM-78](#)
ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION [BRC-56](#)
AIR BREATHER HOSE.....[TM-196](#)
AIR CLEANER AND AIR DUCT.....[EM-24](#)
AIR CLEANER FILTER[EM-19](#)
AMBIENT SENSOR[MWI-61](#)
AMBIENT SENSOR SIGNAL CIRCUIT[MWI-50](#)
ANTENNA FEEDER[AV-51](#), [AV-133](#)
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (DRIVER SIDE)[PWC-53](#)
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (PASSENGER SIDE).....[PWC-54](#)
ASCD INDICATOR.....[EC-405](#)
AUDIO SYSTEM[AV-14](#), [AV-39](#)
AUDIO UNIT [AV-43](#)
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY (DRIVER
SIDE)[PWC-55](#)

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY
(PASSENGER SIDE) [PWC-56](#)
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
[CCS-3](#)
AUX JACK..... [AV-135](#)
AUXILIARY INPUT JACK.....[AV-113](#)
AV BRANCH LINE CIRCUIT[LAN-49](#), [LAN-80](#)
AV CONTROL UNIT[AV-64](#), [AV-126](#)

B

B TERMINAL CIRCUIT [CHG-23](#), [STR-17](#)
B1018, B1019 OCCUPANT SENS [SRC-42](#)
B1020 OCCUPANT SENS C/U [SRC-44](#)
B1021 OCCUPANT SENS C/U [SRC-46](#)
B1022 OCCUPANT SENS C/U [SRC-49](#)
B1023 PASSENGER AIR BAG OFF INDICATOR...
[SRC-51](#)
B1025, B1032, B1048 OCS SENSOR [SRC-53](#)
B1033, B1034 CRASH ZONE SENSOR.... [SRC-56](#)
B1035 CRASH ZONE SENSOR [SRC-58](#)
B1036 CRASH ZONE SENSOR [SRC-60](#)
B1037, B1038, B1039, B1040, B1041 CRASH
ZONE SENSOR [SRC-62](#)
B1049, B1054 DRIVER AIR BAG MODULE[SRC-64](#)
B1050, B1055 DRIVER AIR BAG MODULE[SRC-67](#)
B1051, B1056 DRIVER AIR BAG MODULE[SRC-69](#)
B1052, B1057 DRIVER AIR BAG MODULE[SRC-71](#)
B1065, B1070 PASSENGER AIR BAG MODULE ..
[SRC-74](#)
B1066, B1071 PASSENGER AIR BAG MODULE ..
[SRC-76](#)
B1067, B1072 PASSENGER AIR BAG MODULE ..
[SRC-78](#)
B1068, B1073 PASSENGER AIR BAG MODULE ..
[SRC-80](#)
B1080, B1096 DRIVER AIR BAG MODULE[SRC-82](#)
B1081 SEAT BELT PRE-TENSIONER RH [SRC-85](#)
B1082 SEAT BELT PRE-TENSIONER RH [SRC-87](#)
B1083 SEAT BELT PRE-TENSIONER RH [SRC-89](#)
B1084 SEAT BELT PRE-TENSIONER RH [SRC-91](#)
B1086 SEAT BELT PRE-TENSIONER LH. [SRC-93](#)
B1087 SEAT BELT PRE-TENSIONER LH. [SRC-95](#)
B1088 SEAT BELT PRE-TENSIONER LH. [SRC-97](#)
B1089 SEAT BELT PRE-TENSIONER LH. [SRC-99](#)
B1113, B1114 SATELLITE SENSOR RH.. [SRC-101](#)
B1115 SATELLITE SENSOR RH [SRC-103](#)
B1116 SATELLITE SENSOR RH [SRC-105](#)
B1118, B1119 SATELLITE SENSOR LH .. [SRC-107](#)
B1120 SATELLITE SENSOR LH..... [SRC-109](#)
B1121 SATELLITE SENSOR LH.....[SRC-111](#)
B1129 SIDE AIR BAG MODULE RH.....[SRC-113](#)
B1130 SIDE AIR BAG MODULE RH.....[SRC-115](#)
B1131 SIDE AIR BAG MODULE RH.....[SRC-117](#)

B1132 SIDE AIR BAG MODULE RH SRC-119
 B1134 SIDE AIR BAG MODULE LH SRC-121
 B1135 SIDE AIR BAG MODULE LH SRC-123
 B1136 SIDE AIR BAG MODULE LH SRC-125
 B1137 SIDE AIR BAG MODULE LH SRC-127
 B1145 CURTAIN AIR BAG MODULE RH. SRC-129
 B1146 CURTAIN AIR BAG MODULE RH. SRC-131
 B1147 CURTAIN AIR BAG MODULE RH. SRC-133
 B1148 CURTAIN AIR BAG MODULE RH. SRC-135
 B1150 CURTAIN AIR BAG MODULE LH . SRC-137
 B1151 CURTAIN AIR BAG MODULE LH . SRC-139
 B1152 CURTAIN AIR BAG MODULE LH . SRC-141
 B1153 CURTAIN AIR BAG MODULE LH . SRC-143
 B1209 – B1211 COLLISION DETECTION SRC-145
 B1212, B1213, B1214 SATELLITE SENSOR RH ...
 SRC-146
 B1215, B1216, B1217 SATELLITE SENSOR LH
 SRC-148
 B1336, B1337 SATELLITE SENSOR RH. SRC-150
 B1338, B1340, B1341, B1342 SATELLITE SENSOR
 RH SRC-152
 B1339 SATELLITE SENSOR RH SRC-154
 B1343, B1344 SATELLITE SENSOR LH . SRC-156
 B1345, B1347, B1348, B1349 SATELLITE SENSOR
 LH SRC-158
 B1346 SATELLITE SENSOR LH SRC-160
 B1350, B1351 SATELLITE SENSOR SRC-162
 B1XXX AIR BAG DIAGNOSIS SENSOR UNIT
 SRC-164
 B2098 IGNITION RELAY ON STUCK PCS-25
 B2099 IGNITION RELAY OFF STUCK PCS-26
 B2190, P1614 NATS ANTENNA AMP. SEC-28
 B2191, P1615 DIFFERENCE OF KEY SEC-31
 B2192, P1611 ID DISCORD, IMMU-ECM .. SEC-32
 B2193, P1612 CHAIN OF ECM-IMMU SEC-34
 B2195 ANTI-SCANNING SEC-35
 B2196 DONGLE UNIT SEC-36
 B2205 VEHICLE SPEED MWI-41
 B2267 ENGINE SPEED MWI-42
 B2268 WATER TEMP MWI-43
 BACK DOOR DLK-96
 BACK DOOR FINISHER INT-18
 BACK DOOR LOCK DLK-109
 BACK DOOR LOCK ACTUATOR DLK-56
 BACK DOOR OUTER FINISHER EXT-32
 BACK DOOR WINDOW GLASS GW-15
 BACK-UP LAMP EXL-60
 BASE AUDIO SYSTEM AV-18
 BASIC INSPECTION EC-115
 BATTERY PG-58, PG-67
 BATTERY CURRENT SENSOR PG-70
 BATTERY TERMINAL WITH FUSIBLE LINK PG-69
 BCM BCS-23, BCS-35, DLK-19, INL-15
 BCM (BODY CONTROL MODULE) BCS-50,
 MWI-24, PWC-13

BCM BRANCH LINE CIRCUIT LAN-51, LAN-66,
 LAN-82
 BCM, COMBINATION METER WCS-15
 BCM, ECM, IPDM E/R HAC-16
 BCM, IPDM E/R DEF-11, EXL-19, WW-16
 BLOWER FAN ON SIGNAL HAC-29
 BLOWER MOTOR RESISTOR HAC-48
 BLUETOOTH CONTROL UNIT AV-16
 BLUETOOTH® CONTROL SIGNAL CIRCUIT AV-34
 BLUETOOTH® CONTROL UNIT AV-47
 BLUETOOTH® VOICE SIGNAL CIRCUIT AV-32
 BODY ALIGNMENT BRM-61
 BODY COMPONENT PARTS BRM-11
 BODY CONSTRUCTION BRM-24
 BODY EXTERIOR PAINT COLOR BRM-2
 BODY SIDE TRIM INT-19
 BOTH DOORS MIRROR DEFOGGER DON'T
 OPERATE BUT REAR WINDOW DEFOGGER
 OPERATES DEF-33
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON EXL-88
 BOTH SIDE HEADLAMPS DO NOT SWITCH TO
 HIGH BEAM EXL-87
 BRAKE BOOSTER BR-15, BR-29
 BRAKE CONTROL SYSTEM BRC-45
 BRAKE FLUID BR-12
 BRAKE MASTER CYLINDER BR-14, BR-26
 BRAKE PEDAL BR-9, BR-19
 BRAKE PEDAL POSITION SWITCH EC-402
 BRAKE PIPING BR-21
 BRAKE WARNING LAMP BRC-128
 BUZZER (COMBINATION METER) DLK-62

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 BRC-58
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 BRC-63
 C1109 POWER AND GROUND SYSTEM . BRC-70
 C1110, C1153 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT) BRC-72
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
 BRC-74
 C1115 WHEEL SENSOR BRC-77
 C1116 STOP LAMP SWITCH BRC-84
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM BRC-89
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM BRC-91
 C1130 ENGINE SIGNAL BRC-93
 C1140 ACTUATOR RELAY SYSTEM BRC-95
 C1142 PRESS SENSOR BRC-97
 C1143 STEERING ANGLE SENSOR BRC-100
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT BRC-103

C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR
BRC-105

C1155 BRAKE FLUID LEVEL SWITCH... BRC-108

C1164, C1165 CV SYSTEM.....BRC-112

C1166, C1167 SV SYSTEM.....BRC-114

C1170 VARIANT CODINGBRC-116

C1601 BATTERY POWER SUPPLYSTC-19

C1604 TORQUE SENSORSTC-22

C1606 EPS MOTORSTC-24

C1607, C1608 EPS CONTROL UNITSTC-26

C1609 VEHICLE SPEED SIGNAL.....STC-27

C1610 ENGINE STATUS SIGNAL.....STC-28

C1704, C1705, C1706, C1707 LOW TIRE
PRESSURE WT-30

C1708, C1709, C1710, C1711 TRANSMITTER (NO
DATA)..... WT-32

C1716, C1717, C1718, C1719 TRANSMITTER
(PRESSURE DATA)..... WT-36

C1728 RECEIVER ID..... WT-38

C1729 VEHICLE SPEED SIGNAL..... WT-41

C1750, C1751, C1752, C1753 RECEIVER . WT-43

C1754 LOW TIRE PRESSURE WARNING
CONTROL UNIT WT-46

C1755, C1756, C1757, C1758 POOR RECEIVING
CONDITIONS WT-49

CAMSHAFTEM-55

CAMSHAFT VALVE CLEARANCEEM-10

CAN COMMUNICATION CIRCUIT LAN-52, LAN-67,
LAN-83

CAN SYSTEM..... LAN-31

CARGO ROOM LAMP INL-42

CENTER CONSOLE ASSEMBLY IP-19, IP-26

CHARGING SYSTEMCHG-7, CHG-9, CHG-28

CHARGING SYSTEM PRELIMINARY INSPECTION
CHG-20

CHASSIS MAINTENANCEMA-27

CHECK ANTI-PINCH FUNCTIONPWC-28

CLUSTER LID AIP-21

CLUSTER LID CIP-22

CLUTCH POINT LEARNING TM-83

COLLISION DIAGNOSIS SR-5

COMBINATION METER MWI-20, MWI-60, MWI-62

COMBINATION SWITCHBCS-51, EXL-94

COMBINATION SWITCH INPUT CIRCUIT.BCS-45

COMBINATION SWITCH OUTPUT CIRCUIT.....
BCS-47

COMBINATION SWITCH SYSTEM SYMPTOMS...
BCS-49

COMPRESSION PRESSUREEM-13

COMPRESSORHA-31

COMPRESSOR DOES NOT OPERATE ... HAC-44

CONDENSER HA-41

CONTROL CABLE TM-189

CONTROL VALVE..... TM-197

COOLER PIPE AND HOSEHA-36

COOLING FAN..... CO-16, EC-419

CORROSION PROTECTION..... BRM-16

COWL TOPEXT-23

CRASH ZONE SENSOR..... SR-23

CVT CONTROL SYSTEM..... TM-62, TM-179

CVT FLUID TM-183

CVT FLUID COOLER SYSTEM..... TM-84

CVT OIL WARMER TM-218

CVT POSITION TM-88

CVT SHIFT LOCK SYSTEM TM-71

CVT SHIFT SELECTOR TM-187

CYLINDER BLOCK EM-82

CYLINDER HEAD EM-66

D

DAYTIME LIGHT SYSTEM EXL-32

DIAGNOSIS AND REPAIR WORK FLOW BRC-52,
DEF-18, DLK-40, SRC-37, STR-11, TM-73,
WT-24

DIAGNOSIS SENSOR UNIT SR-27, SRC-19

DIAGNOSIS SYSTEM (AIR BAG)..... SRC-15

DIAGNOSIS SYSTEM (AUDIO UNIT) AV-10

DIAGNOSIS SYSTEM (AV CONTROL UNIT)AV-61

DIAGNOSIS SYSTEM (BCM) BCS-13, DEF-6,
DLK-15, EXL-11, HAC-14, INL-12, PWC-11,
SEC-8, WCS-13, WW-11

DIAGNOSIS SYSTEM (BLUETOOTH CONTROL
UNIT)..... AV-12

DIAGNOSIS SYSTEM (COMBINATION METER) ..
MWI-16, WCS-9

DIAGNOSIS SYSTEM (ECM) EC-45

DIAGNOSIS SYSTEM (EPS CONTROL UNIT).....
STC-9

DIAGNOSIS SYSTEM (IPDM E/R) DEF-8, EXL-16,
PCS-8, SEC-10, WW-13

DIAGNOSIS SYSTEM (LOW TIRE PRESSURE
WARNING CONTROL UNIT)..... WT-9

DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)
SN-6

DIAGNOSIS SYSTEM (TCM) TM-42

DIAGNOSIS SYSTEM [ABS ACTUATOR AND
ELECTRIC UNIT (CONTROL UNIT)]... BRC-32

DIFFERENTIAL SIDE OIL SEAL TM-208

DLC BRANCH LINE CIRCUIT LAN-44, LAN-60,
LAN-75

DOOR CABLE HAC-49

DOOR DOES NOT LOCK/UNLOCK WITH DOOR
LOCK AND UNLOCK SWITCH..... DLK-65

DOOR DOES NOT LOCK/UNLOCK WITH KEYFOB
DLK-68

DOOR LINKAGE HAC-53

DOOR LOCK ACTUATOR DLK-50

DOOR LOCK AND UNLOCK SWITCH DLK-46

DOOR MIRROR MIR-4, MIR-15

DOOR MIRROR ACTUATOR..... MIR-19

DOOR MIRROR GLASS MIR-18

DOOR MIRROR REMOTE CONTROL SWITCH	
MIR-20	
DOOR MIRROR REMOTE CONTROL SWITCH	
(MIRROR SWITCH/CHANGEOVER SWITCH).	
MIR-7	
DOOR OUTSIDE MOLDING	EXT-30
DOOR PARTING SEAL	EXT-31
DOOR SWITCH.....	DLK-43, DLK-114, PWC-43
DRIVE BELT	EM-16
DRIVE PLATE.....	EM-80
DRIVER AIR BAG MODULE	SR-12
DRIVER SIDE DOOR MIRROR DEFOGGER.....	
DEF-26	
DRIVER SIDE DOOR MIRROR DEFOGGER DOES	
NOT OPERATE.	DEF-34
DRIVER SIDE POWER WINDOW ALONE DOES	
NOT OPERATE	PWC-51
DUCT AND GRILLE	VTL-5

E

ECM BRANCH LINE CIRCUIT	LAN-40, LAN-56,
LAN-71	
ECM, IPDM E/R, BCM.....	SEC-13
ELECTRICAL LOAD SIGNAL	EC-417
ELECTRICAL UNITS LOCATION.....	PG-5
ELECTRONICALLY CONTROLLED POWER	
STEERING SYSTEM	STC-13
ENCODER.....	PWC-38
ENGINE ASSEMBLY.....	EM-76
ENGINE CONTROL SYSTEM	EC-90, EC-432
ENGINE COOLANT	CO-10
ENGINE MAINTENANCE (MR20DE).....	MA-14
ENGINE OIL	LU-7
EPS BRANCH LINE CIRCUIT.....	LAN-45, LAN-61,
LAN-76	
EPS CONTROL UNIT	STC-10, STC-36
EPS WARNING LAMP	STC-30
EPS WARNING LAMP DOES NOT TURN OFF	
STC-32	
EPS WARNING LAMP DOES NOT TURN ON	
STC-31	
EVAP CANISTER	FL-15, FL-22
EVAP CANISTER FILTER.....	FL-17
EVAP CANISTER VENT CONTROL VALVE .	FL-18
EVAP CONTROL SYSTEM PRESSURE SENSOR	
FL-19	
EVAP LEAK CHECK.....	EC-440
EVAPORATIVE EMISSION SYSTEM	EC-439
EXCESSIVE ABS FUNCTION OPERATION	
FREQUENCY	BRC-132
EXHAUST MANIFOLD	EM-29
EXHAUST SYSTEM.....	EX-4, EX-5
EXTERIOR LIGHTING SYSTEM SYMPTOMS.....	
EXL-85	

F

FENDER FINISHER	EXT-29
FENDER PROTECTOR	EXT-25
FILAMENT	DEF-37
FLOOR TRIM.....	INT-23
FLUID COOLER SYSTEM	TM-214
FRONT AIR CONTROL	HAC-45
FRONT BLOWER MOTOR	HAC-35, VTL-11
FRONT BUMPER.....	EXT-15
FRONT COIL SPRING AND STRUT	FSU-8, FSU-18
FRONT COMBINATION LAMP ...	EXL-92, EXL-102
FRONT DISC BRAKE.....	BR-8, BR-16, BR-33
FRONT DOOR.....	DLK-84
FRONT DOOR FINISHER.....	INT-15
FRONT DOOR GLASS.....	GW-17
FRONT DOOR LOCK.....	DLK-105
FRONT DOOR SPEAKER..	AV-30, AV-45, AV-104,
AV-128	
FRONT DRIVE SHAFT.....	FAX-7, FAX-17, FAX-22
FRONT DRIVE SHAFT BOOT	FAX-11
FRONT FENDER.....	DLK-83
FRONT GRILLE.....	EXT-21
FRONT PASSENGER AIR BAG MODULE ..	SR-18
FRONT PASSENGER SIDE POWER WINDOW	
ALONE DOES NOT OPERATE	PWC-52
FRONT POWER WINDOW SWITCH.....	PWC-16
FRONT REGULATOR	GW-19
FRONT SEAT	SE-14, SE-19
FRONT SEAT BELT.....	SB-7
FRONT SEAT BELT BUCKLE SWITCH.....	SR-37
FRONT STABILIZER.....	FSU-12
FRONT SUSPENSION ASSEMBLY.....	FSU-5
FRONT SUSPENSION MEMBER	FSU-16
FRONT WASHER MOTOR	WW-40
FRONT WHEEL HUB	FAX-8
FRONT WHEEL HUB AND KNUCKLE	FAX-6
FRONT WIPER AND WASHER SYSTEM.....	WW-6
FRONT WIPER ARM.....	WW-45
FRONT WIPER AUTO STOP SIGNAL CIRCUIT	
WW-29	
FRONT WIPER DOES NOT OPERATE	WW-36
FRONT WIPER DRIVE ASSEMBLY	WW-48
FRONT WIPER MOTOR GROUND CIRCUIT	
WW-30	
FRONT WIPER MOTOR HI CIRCUIT	WW-27
FRONT WIPER MOTOR LO CIRCUIT	WW-25
FUEL FILLER LID OPENER.....	DLK-111
FUEL INJECTOR.....	EC-406
FUEL INJECTOR AND FUEL TUBE	EM-37
FUEL LEVEL SENSOR SIGNAL CIRCUIT	MWI-46
FUEL LEVEL SENSOR UNIT	FL-20
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND	
FUEL PUMP ASSEMBLY	FL-6
FUEL PRESSURE	EC-127
FUEL PUMP	EC-409
FUEL SYSTEM.....	FL-5

FUEL TANK.....	FL-10
FUSE BLOCK - JUNCTION BOX (J/B).....	PG-55
FUSE INSPECTION.....	PG-62
FUSE, FUSIBLE LINK AND RELAY BOX.....	PG-56
FUSIBLE LINK INSPECTION.....	PG-66

G

GENERAL MAINTENANCE.....	MA-6
GENERATOR.....	CHG-29
GLOVE BOX ASSEMBLY.....	IP-25
GPS ANTENNA.....	AV-136
GROUND.....	PG-32

H

HANDLING PRECAUTIONS FOR PLASTICS.....	BRM-7
HARNESS.....	PG-40
HAZARD FUNCTION.....	DLK-63
HAZARD REMINDER OPERATION DOES NOT OPERATE.....	DLK-69
HAZARD SWITCH.....	EXL-95
HEADLAMP.....	EXL-20
HEADLAMP (HI) CIRCUIT.....	EXL-69
HEADLAMP (LO) CIRCUIT.....	EXL-74
HEADLAMP AIMING ADJUSTMENT.....	EXL-90
HEADLINING.....	INT-27
HEATER AND AIR CONDITIONING SYSTEM SYMPTOMS.....	HA-27
HEATING AND COOLING UNIT ASSEMBLY.....	HA-44
HIGH-MOUNTED STOP LAMP.....	EXL-99
HOOD.....	DLK-77
HOOD LOCK.....	DLK-102
HORN.....	HRN-3, HRN-6
HOW TO ERASE PERMANENT DTC.....	EC-135, TM-89
HOW TO FOLLOW TROUBLE DIAGNOSES..	GI-6
HOW TO READ WIRING DIAGRAMS.....	GI-9
HOW TO SELECT PISTON AND BEARING.....	EM-100
HOW TO SET SRT CODE.....	EC-129
HOW TO USE THIS MANUAL.....	GI-3
HOW TO USE THIS SECTION.....	LAN-4, LAN-20

I

ID REGISTRATION CANNOT BE COMPLETED....	WT-59
ID REGISTRATION PROCEDURE.....	WT-26
IDENTIFICATION INFORMATION.....	GI-23
IDLE AIR VOLUME LEARNING.....	EC-124
IDLE SPEED.....	EC-437
IGNITION COIL.....	EM-42
IGNITION SIGNAL.....	EC-412
IGNITION SWITCH.....	DLK-120
IGNITION TIMING.....	EC-438
ILLUMINATION.....	INL-25

INPUT SPEED SENSOR.....	TM-204
INSIDE MIRROR.....	MIR-14
INSTRUMENT PANEL ASSEMBLY.....	IP-14
INSUFFICIENT COOLING.....	HAC-42
INSUFFICIENT HEATING.....	HAC-43
INTAKE MANIFOLD.....	EM-26
INTERIOR LIGHTING SYSTEM SYMPTOMS.....	INL-39
INTERIOR ROOM LAMP CONTROL CIRCUIT.....	INL-37
INTERIOR ROOM LAMP CONTROL SYSTEM.....	INL-16
INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT.....	INL-35
INTERMITTENT INCIDENT.....	SRC-41
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)....	PCS-11, PCS-18, PCS-28, PG-57
IPDM-E BRANCH LINE CIRCUIT.....	LAN-42, LAN-58, LAN-73

K

KEY INTERLOCK CABLE.....	TM-192
KEY SWITCH (BCM INPUT).....	DLK-61
KEYFOB BATTERY.....	DLK-64, DLK-116

L

L TERMINAL CIRCUIT (OPEN).....	CHG-24
L TERMINAL CIRCUIT (SHORT).....	CHG-26
LEAF SPRING.....	RSU-10
LICENSE PLATE LAMP.....	EXL-100
LIFTING POINT.....	GI-32
LOW TIRE PRESSURE WARNING CONTROL UNIT.....	WT-14, WT-66
LOW TIRE PRESSURE WARNING LAMP BLINKS	WT-57
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN OFF.....	WT-56
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON.....	WT-55
LUGGAGE TRIM.....	INT-30

M

M&A BRANCH LINE CIRCUIT.....	LAN-46, LAN-62, LAN-77
MAGNET CLUTCH.....	HAC-39
MAIN LINE BETWEEN DLC AND TPMS CIRCUIT	LAN-39, LAN-55, LAN-70
MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	LAN-38, LAN-54, LAN-69
MAIN POWER SUPPLY AND GROUND CIRCUIT.	TM-170
MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH.....	PWC-60
MALFUNCTION AREA CHART.....	LAN-37

MALFUNCTION INDICATOR LAMP	EC-426
MANUAL AIR CONDITIONING SYSTEM .HAC-17,	
HAC-41	
MAP LAMP ASSEMBLY	INL-40
METER BUZZER CIRCUIT	WCS-26
METER SYSTEM	MWI-25
MICROPHONE	AV-49, AV-130
MICROPHONE SIGNAL CIRCUIT ..	AV-35, AV-108
MIXTURE RATIO SELF-LEARNING VALUE CLEAR	
EC-126	
MUDGUARD	EXT-28
MULTI AV SYSTEM	AV-114

N

NATS ANTENNA AMP.....	SEC-42
NAVIGATION SYSTEM	AV-68
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS	
SYMPTOMS	SEC-41
NOISE	HA-30
NOISE, VIBRATION AND HARSHNESS (NVH)	
TROUBLESHOOTING	BR-7, EM-14, FAX-5,
FSU-4, RAX-4, RSU-4, ST-9, WT-60	
NORMAL OPERATING CONDITIONAV-41, AV-117,	
BRC-138, EC-436, WW-38	
NVIS	SEC-14

O

OCCUPANT CLASSIFICATION SYSTEM	
CONTROL UNIT	SR-29
OD OFF INDICATOR LAMP	TM-174
OIL	HA-22
OIL COOLER.....	LU-11
OIL FILTER.....	LU-9
OIL PAN.....	EM-31
OIL SEAL.....	EM-63
ON BOARD DIAGNOSTIC (OBD) SYSTEM	EC-44,
TM-41	
ON BOARD REFUELING VAPOR RECOVERY	
(ORVR).....	EC-427
OPERA WINDOW	GW-13
OPERATION	EC-43, HAC-13
OPERATION INSPECTION.....	HAC-25
OUTPUT SPEED SENSOR	TM-207
OVERDRIVE CONTROL SWITCH.....	TM-172
OVERHEATING CAUSE ANALYSIS	CO-8

P

P0011 IVT CONTROL	EC-154
P0030, P0031, P0032 A/F SENSOR 1 HEATER	
EC-157	
P0037, P0038 HO2S2 HEATER.....	EC-159
P0075 IVT CONTROL SOLENOID VALVE	EC-161
P0101, P0102, P0103 MAF SENSOR.....	EC-164
P0111 IAT SENSOR	EC-170

P0112, P0113 IAT SENSOR	EC-172
P0116 ECT SENSOR	EC-174
P0117, P0118 ECT SENSOR	EC-176
P0122, P0123 TP SENSOR	EC-178
P0125 ECT SENSOR	EC-181
P0127 IAT SENSOR.....	EC-183
P0128 THERMOSTAT FUNCTION.....	EC-185
P0130 A/F SENSOR 1.....	EC-188
P0131 A/F SENSOR 1.....	EC-192
P0132 A/F SENSOR 1.....	EC-195
P0137 HO2S2.....	EC-198
P0138 HO2S2.....	EC-203
P0139 HO2S2.....	EC-210
P014C, P014D, P015A, P015B A/F SENSOR 1	
EC-216	
P0171 FUEL INJECTION SYSTEM FUNCTION.....	
EC-224	
P0172 FUEL INJECTION SYSTEM FUNCTION.....	
EC-228	
P0181 FTT SENSOR.....	EC-232
P0182, P0183 FTT SENSOR	EC-236
P0196 EOT SENSOR.....	EC-239
P0197, P0198 EOT SENSOR	EC-243
P0222, P0223 TP SENSOR	EC-245
P0300, P0301, P0302, P0303, P0304 MISFIRE	
EC-248	
P0327, P0328 KS	EC-254
P0335 CKP SENSOR (POS).....	EC-256
P0340 CMP SENSOR (PHASE).....	EC-259
P0420 THREE WAY CATALYST FUNCTIONEC-263	
P0441 EVAP CONTROL SYSTEM.....	EC-268
P0443 EVAP CANISTER PURGE VOLUME	
CONTROL SOLENOID VALVE	EC-273
P0444, P0445 EVAP CANISTER PURGE VOLUME	
CONTROL SOLENOID VALVE	EC-278
P0447 EVAP CANISTER VENT CONTROL VALVE	
EC-281	
P0448 EVAP CANISTER VENT CONTROL VALVE	
EC-285	
P0451 EVAP CONTROL SYSTEM PRESSURE	
SENSOR	EC-289
P0452 EVAP CONTROL SYSTEM PRESSURE	
SENSOR	EC-293
P0453 EVAP CONTROL SYSTEM PRESSURE	
SENSOR	EC-296
P0456 EVAP CONTROL SYSTEM.....	EC-300
P0460 FUEL LEVEL SENSOR.....	EC-306
P0461 FUEL LEVEL SENSOR.....	EC-307
P0462, P0463 FUEL LEVEL SENSOR	EC-309
P0500 VSS	EC-310
P0506 ISC SYSTEM.....	EC-312
P0507 ISC SYSTEM.....	EC-314
P050A, P050E COLD START CONTROL ..	EC-316
P0520 EOP SENSOR.....	EC-318
P0524 ENGINE OIL PRESSURE	EC-321
P0603 ECM	EC-324

P0604 ECM.....	EC-325	P1225 TP SENSOR.....	EC-341
P0605 ECM.....	EC-326	P1226 TP SENSOR.....	EC-342
P0606 ECM.....	EC-327	P1550 BATTERY CURRENT SENSOR.....	EC-343
P0607 ECM.....	EC-328	P1551, P1552 BATTERY CURRENT SENSOR.....	EC-346
P060A ECM.....	EC-329	P1553 BATTERY CURRENT SENSOR.....	EC-349
P060B ECM.....	EC-330	P1554 BATTERY CURRENT SENSOR.....	EC-352
P062F EEPROM.....	TM-98	P1564 ASCD STEERING SWITCH.....	EC-355
P0643 SENSOR POWER SUPPLY.....	EC-331	P1572 ASCD BRAKE SWITCH.....	EC-358
P0705 TRANSMISSION RANGE SENSOR A.....	TM-99	P1574 ASCD VEHICLE SPEED SENSOR.....	EC-363
P0706 TRANSMISSION RANGE SENSOR A.....	TM-105	P1610 LOCK MODE.....	SEC-27
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A.....	TM-108	P1715 INPUT SPEED SENSOR.....	EC-365
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A.....	TM-112	P17F0 CVT JUDDER (T/M INSPECTION).....	TM-157
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A.....	TM-114	P17F1 CVT JUDDER (C/V INSPECTION).....	TM-158
P0715 INPUT SPEED SENSOR A.....	TM-116	P17F2 CVT JUDDER (T/C INSPECTION).....	TM-159
P0717 INPUT SPEED SENSOR A.....	TM-119	P1805 BRAKE SWITCH.....	EC-367
P0740 TORQUE CONVERTER.....	TM-122	P2096, P2097 A/F SENSOR 1.....	EC-370
P0743 TORQUE CONVERTER.....	TM-124	P2100, P2103 THROTTLE CONTROL MOTOR RELAY.....	EC-374
P0744 TORQUE CONVERTER.....	TM-126	P2101 ELECTRIC THROTTLE CONTROL FUNCTION.....	EC-376
P0746 PRESSURE CONTROL SOLENOID A.....	TM-128	P2118 THROTTLE CONTROL MOTOR.....	EC-379
P0776 PRESSURE CONTROL SOLENOID B.....	TM-130	P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-381
P0778 PRESSURE CONTROL SOLENOID B.....	TM-132	P2122, P2123 APP SENSOR.....	EC-383
P0779 PRESSURE CONTROL SOLENOID B.....	TM-134	P2127, P2128 APP SENSOR.....	EC-386
P0841 TRANSMISSION FLUID PRESSURE SEN/ SW A.....	TM-136	P2135 TP SENSOR.....	EC-389
P0847 TRANSMISSION FLUID PRESSURE SEN/ SW B.....	TM-137	P2138 APP SENSOR.....	EC-392
P0848 TRANSMISSION FLUID PRESSURE SEN/ SW B.....	TM-139	P219A AIR FUEL RATIO.....	EC-395
P084C TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-141	P2765 INPUT SPEED SENSOR B.....	TM-160
P084D TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-143	P2813 SELECT SOLENOID.....	TM-164
P0850 PNP SWITCH.....	EC-333	P2814 SELECT SOLENOID.....	TM-166
P0863 TCM COMMUNICATION.....	TM-145	P2815 SELECT SOLENOID.....	TM-168
P0890 TCM.....	TM-146	PANIC ALARM FUNCTION DOES NOT OPERATE DLK-70	
P0962 PRESSURE CONTROL SOLENOID A.....	TM-147	PARKING BRAKE CABLE.....	PB-8
P0963 PRESSURE CONTROL SOLENOID A.....	TM-149	PARKING BRAKE CONTROL.....	PB-6
P0965 PRESSURE CONTROL SOLENOID B.....	TM-151	PARKING BRAKE REAR CABLE.....	PB-9
P0966 PRESSURE CONTROL SOLENOID B.....	TM-153	PARKING BRAKE SHOE.....	PB-5
P0967 PRESSURE CONTROL SOLENOID B.....	TM-155	PARKING BRAKE SWITCH.....	BRC-123, PB-10
P1148 CLOSED LOOP CONTROL.....	EC-336	PARKING BRAKE SWITCH SIGNAL CIRCUIT.....	MWI-48
P1212 TCS COMMUNICATION LINE.....	EC-337	PARKING BRAKE SYSTEM.....	PB-4
P1217 ENGINE OVER TEMPERATURE.....	EC-338	PARKING LAMP CIRCUIT.....	EXL-79
		PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON.....	EXL-89
		PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM.....	EXL-49
		PASSENGER AIR BAG INDICATOR.....	SR-38
		PASSENGER SIDE DOOR MIRROR DEFOGGER DEF-28	
		PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.....	DEF-35
		PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS.....	BRC-136
		PERFORMANCE TEST.....	HA-25

PERIODIC MAINTENANCE MA-8
 PLUG TM-219
 POSITIVE CRANKCASE VENTILATION EC-442
 POWER DOOR LOCK SYSTEM... DLK-11, DLK-20
 POWER GENERATION VOLTAGE VARIABLE
 CONTROL SYSTEM CHG-8
 POWER GENERATION VOLTAGE VARIABLE
 CONTROL SYSTEM OPERATION
 INSPECTION CHG-21
 POWER SOCKET PWO-4, PWO-6
 POWER SUPPLY ROUTING CIRCUIT PG-14
 POWER WINDOW AND DOOR LOCK/UNLOCK
 SWITCH RH PWC-61
 POWER WINDOW LOCK SWITCH PWC-46
 POWER WINDOW LOCK SWITCH DOES NOT
 FUNCTION PWC-58
 POWER WINDOW MAIN SWITCH PWC-14
 POWER WINDOW MOTOR PWC-34
 POWER WINDOW RETAINED POWER
 OPERATION DOES NOT OPERATE
 PROPERLY PWC-57
 POWER WINDOW SERIAL LINK PWC-47
 POWER WINDOW SWITCH DOES NOT
 ILLUMINATE PWC-59
 POWER WINDOW SYSTEM PWC-18
 POWER WINDOWS DO NOT OPERATE WITH
 POWER WINDOW MAIN SWITCH PWC-50
 PRECAUTION SN-2
 PRECAUTIONS ACC-2, AV-4, AV-52, BCS-3, BR-3,
 BRC-4, BRM-3, CCS-2, CHG-3, CO-2, DEF-3,
 DLK-5, EC-8, EM-3, EX-2, EXL-4, EXT-2,
 FAX-2, FL-2, FSU-2, GI-27, GW-2, HA-3,
 HAC-3, HRN-2, INL-3, INT-3, IP-2, LAN-5,
 LAN-21, LU-2, MA-3, MIR-2, MWI-3, PB-2,
 PCS-2, PG-3, PWC-4, PWO-2, RAX-2, RSU-2,
 SB-2, SE-2, SEC-3, SR-2, SRC-5, ST-2, STC-3,
 STR-2, TM-6, VTL-2, WCS-3, WT-3, WW-3
 PRIMARY SPEED SENSOR TM-206

R

RADIATOR CO-14
 RADIATOR CORE SUPPORT DLK-81
 REAR BUMPER EXT-18
 REAR COMBINATION LAMP EXL-96, EXL-103
 REAR DRUM BRAKE BR-18, BR-39
 REAR SHOCK ABSORBER RSU-8
 REAR SUSPENSION ASSEMBLY RSU-5
 REAR SUSPENSION BEAM RSU-13
 REAR VIEW CAMERA AV-137
 REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT..
 AV-106
 REAR WHEEL HUB RAX-5, RAX-6
 REAR WINDOW DEFOGGER AND DOOR
 MIRROR DEFOGGER DO NOT OPERATE.
 DEF-31

REAR WINDOW DEFOGGER DOES NOT
 OPERATE BUT BOTH OF DOOR MIRROR
 DEFOGGER OPERATE. DEF-32
 REAR WINDOW DEFOGGER FEEDBACK SIGNAL
 DEF-30
 REAR WINDOW DEFOGGER POWER SUPPLY
 AND GROUND CIRCUIT DEF-24
 REAR WINDOW DEFOGGER RELAY DEF-23
 REAR WINDOW DEFOGGER SWITCH DEF-21
 REAR WINDOW DEFOGGER SWITCH DOES NOT
 LIGHT, BUT REAR WINDOW DEFOGGER
 OPERATES DEF-36
 REAR WINDOW DEFOGGER SYSTEM... DEF-12
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTS GI-22
 RECOMMENDED FLUIDS AND LUBRICANTS.....
 MA-12
 REFRIGERANT HA-18
 REFRIGERANT PRESSURE SENSOR EC-424,
 HAC-46
 REFRIGERATION SYSTEM SYMPTOMS ... HA-28
 REMOTE KEYLESS ENTRY RECEIVER . DLK-58,
 DLK-115, SEC-43
 REMOTE KEYLESS ENTRY SYSTEM DLK-13,
 DLK-31
 REPAIRING HIGH STRENGTH STEEL BRM-4
 REPAIRING MATERIAL BRM-10
 REPLACEMENT OPERATIONS BRM-26
 ROAD WHEEL TIRE ASSEMBLY WT-65
 ROCKER COVER EM-43
 ROOF ANTENNA AV-50

S

S CONNECTOR CIRCUIT STR-19
 S TERMINAL CIRCUIT CHG-27
 SATELLITE RADIO ANTENNA AV-131
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT..
 WCS-27
 SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG
 INDCTR IS ON OR OFF SRC-169
 SEAT BELT PRE-TENSIONER SR-36
 SENSOR POWER SUPPLY 2 CIRCUIT EC-400
 SENSOR ROTOR BRC-142
 SERVICE DATA AND SPECIFICATIONS (SDS).....
 ACC-5, BR-43, CHG-31, CO-24, EC-444,
 EM-105, EXL-104, FAX-35, FL-24, FSU-22,
 HA-49, INL-43, LU-12, PB-11, PG-71, RAX-7,
 RSU-15, ST-19, STR-22, TM-226, WT-71,
 WW-50
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT GI-37
 SHIFT LOCK SYSTEM TM-176
 SHIFT POSITION INDICATOR CIRCUIT ... TM-175
 SIDE AIR BAG (SATELLITE) SENSOR SR-25
 SIDE AIR BAG MODULE SR-22
 SIDE CURTAIN AIR BAG MODULE SR-20

SILENCER [RSU-12](#)
 SLIDE DOOR [DLK-89](#)
 SLIDE DOOR FINISHER [INT-17](#)
 SLIDE DOOR GLASS [GW-21](#)
 SLIDE DOOR LOCK [DLK-107](#)
 SLIDE DOOR LOCK ACTUATOR [DLK-53](#)
 SLIP INDICATOR LAMP [BRC-130](#)
 SONAR BUZZER [SN-27](#)
 SONAR BUZZER CIRCUIT INSPECTION ... [SN-20](#)
 SONAR CONTROL UNIT [SN-8](#), [SN-26](#)
 SONAR SENSOR [SN-25](#)
 SONAR SENSOR CIRCUIT INSPECTION... [SN-19](#)
 SONAR SYSTEM [SN-10](#)
 SONAR SYSTEM OFF SWITCH [SN-28](#)
 SONAR SYSTEM OFF SWITCH CIRCUIT
 INSPECTION [SN-21](#)
 SONAR SYSTEM SYMPTOMS [SN-23](#)
 SPARK PLUG [EM-21](#)
 SPIRAL CABLE [SR-15](#)
 SQUEAK AND RATTLE TROUBLE DIAGNOSES..
[DLK-71](#), [EXT-9](#), [GW-5](#), [INT-9](#), [IP-8](#), [MIR-8](#), [SE-8](#)
 SRS AIR BAG SYSTEM [SRC-26](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 OFF [SRC-166](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 ON [SRC-167](#)
 STALL TEST [TM-87](#)
 STARTER MOTOR [STR-21](#)
 STARTING SYSTEM [STR-6](#), [STR-20](#)
 STEERING ANGLE SENSOR [BRC-146](#)
 STEERING COLUMN [ST-7](#), [ST-11](#)
 STEERING COLUMN COVERS [IP-18](#)
 STEERING GEAR AND LINKAGE [ST-8](#), [ST-14](#),
[ST-16](#)
 STEERING KNUCKLE [FSU-14](#)
 STEERING LOCK UNIT [DLK-117](#)
 STEERING SWITCH [AV-37](#), [AV-46](#), [AV-110](#), [AV-129](#),
[CCS-4](#)
 STEERING WHEEL [ST-5](#), [ST-10](#)
 STEERING WHEEL TURNING FORCE IS HEAVY
 OR LIGHT [STC-33](#)
 STOP LAMP [EXL-56](#)
 STRG BRANCH LINE CIRCUIT .. [LAN-47](#), [LAN-63](#),
[LAN-78](#)
 STRUCTURE AND OPERATION [EC-27](#), [TM-22](#)
 SYSTEM INITIALIZATION [PWC-27](#)

T

TCM [TM-49](#), [TM-195](#)
 TCM BRANCH LINE CIRCUIT [LAN-43](#), [LAN-59](#),
[LAN-74](#)
 THE AMBIENT TEMPERATURE DISPLAY IS
 INCORRECT [MWI-59](#)
 THE BRAKING DISTANCE IS LONG [BRC-134](#)
 THE DOOR OPEN WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAY [MWI-57](#)

THE FUEL GAUGE INDICATOR DOES NOT
 OPERATE [MWI-53](#)
 THE KEY WARNING DOES NOT SOUND [WCS-33](#)
 THE LIGHT REMINDER WARNING DOES NOT
 SOUND [WCS-32](#)
 THE LOW WASHER FLUID WARNING
 CONTINUES DISPLAYING, or DOES NOT
 DISPLAY [MWI-58](#)
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN OFF [MWI-55](#)
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN ON [MWI-54](#)
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES DISPLAYING, OR DOES NOT
 DISPLAY [MWI-56](#)
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES SOUNDING, OR DOES NOT
 SOUND [WCS-30](#)
 THE SEAT BELT REMINDER WARNING
 CONTINUES SOUNDING, OR DOES NOT
 SOUND [WCS-31](#)
 THERMO CONTROL AMPLIFIER [HAC-31](#), [HAC-47](#)
 THERMOSTAT AND THERMOSTAT HOUSING ...
[CO-19](#)
 THROTTLE VALVE CLOSED POSITION
 LEARNING [EC-123](#)
 TIGHTENING TORQUE OF STANDARD BOLTS...
[GI-19](#)
 TIMING CHAIN [EM-45](#)
 TIRE PRESSURE MONITORING SYSTEM [WT-19](#)
 TIRE PRESSURE RECEIVER [WT-69](#)
 TOP TETHER STRAP CHILD RESTRAINT . [SB-11](#)
 TORQUE CONVERTER AND CONVERTER
 HOUSING OIL SEAL [TM-223](#)
 TOW TRUCK TOWING [GI-34](#)
 TPMS BRANCH LINE CIRCUIT... [LAN-50](#), [LAN-65](#),
[LAN-81](#)
 TPMS SYMPTOMS [WT-54](#)
 TRANSAXLE ASSEMBLY [TM-220](#)
 TRANSMITTER [WT-67](#)
 TRANSVERSE LINK [FSU-10](#)
 TROUBLE DIAGNOSIS [LAN-8](#)
 TROUBLE DIAGNOSIS - SPECIFICATION VALUE
[EC-141](#)
 TURN SIGNAL AND HAZARD WARNING LAMP
 SYSTEM [EXL-44](#)
 TURN SIGNAL LAMP CIRCUIT [EXL-82](#)

U

U0073 COMMUNICATION BUS A OFF [TM-90](#)
 U0100 LOST COMMUNICATION (ECM A)... [TM-91](#)
 U0101 CAN COMM CIRCUIT [EC-152](#)
 U0140 LOST COMMUNICATION (BCM) [TM-92](#)
 U0141 LOST COMMUNICATION (BCM A)... [TM-93](#)
 U0155 LOST COMMUNICATION (IPC) [TM-94](#)
 U0300 CAN COMMUNICATION DATA [TM-95](#)

U1000 CAN COMM	BCS-42, SEC-25
U1000 CAN COMM CIRCUIT	AV-86, BRC-117, MWI-39, PCS-24, STC-29, TM-96, WT-51
U1001 CAN COMM CIRCUIT	EC-153
U1002 SYSTEM COMM (CAN)	BRC-118
U1010 CONTROL UNIT (CAN)	AV-87, BCS-43, MWI-40, SEC-26, WT-52
U1117 LOST COMMUNICATION (ABS)	TM-97
U1217 AV CONTROL UNIT	AV-88
U1229 AV CONTROL UNIT	AV-89
U122F AV CONTROL UNIT	AV-90
U1244 GPS ANTENNA	AV-91
U1258 SATELLITE RADIO ANTENNA	AV-92
U1263 USB	AV-93
U1264 ANTENNA AMP.	AV-94
U12AA CONFIGURATION ERROR	AV-95
U12AC AV CONTROL UNIT	AV-96
U12AD AV CONTROL UNIT	AV-97
U12AE AV CONTROL UNIT	AV-98
U12AF AV CONTROL UNIT	AV-99
U12B0 POWER SUPPLY VOLTAGE	AV-100
U12B1 POWER SUPPLY VOLTAGE	AV-101
U1310 AV CONTROL UNIT	AV-102
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)	STC-35
UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT	STC-34
UNDER COVER	EXT-26
UNEXPECTED PEDAL REACTION	BRC-133
USB CONNECTOR	AV-112, AV-134

V

VACUUM LINES	BR-31
VDC OFF INDICATOR LAMP	BRC-129
VDC OFF SWITCH	BRC-125, BRC-147
VDC/TCS/ABS	BRC-131
VEHICLE JERKS DURING VDC/TCS/ABS CONTROL	BRC-137
VEHICLE SECURITY INDICATOR	SEC-39
VENTILATION SYSTEM	VTL-4
VIN REGISTRATION	EC-121

W

WARNING CHIME SYSTEM	WCS-16
WARNING CHIME SYSTEM SYMPTOMS	WCS-29
WASHER FLUID LEVEL SWITCH	WW-41
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-52
WASHER MOTOR CIRCUIT	WW-31
WASHER NOZZLE & TUBE	WW-42
WASHER SWITCH	WW-33
WASHER TANK	WW-39
WATER HOSE	TM-211
WATER OUTLET	CO-22
WATER PUMP	CO-17

WHEEL	WT-61
WHEEL ALIGNMENT	FSU-6, RSU-6
WHEEL AND TIRE ASSEMBLY	WT-62
WHEEL SENSOR	BRC-139
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-24
WIPER AND WASHER SWITCH	WW-49
WIPER AND WASHER SYSTEM	WW-17
WIPER AND WASHER SYSTEM SYMPTOMS	WW-34
WIPER BLADE	WW-47

Y

YAW RATE/SIDE/DECEL G SENSOR	BRC-145
------------------------------------	---------

