

STEERING SYSTEM

SECTION **ST**

CONTENTS

PRECAUTIONS AND PREPARATION	2	Removal and Installation	14
Precautions	2	Disassembly	15
Special Service Tools	3	Inspection	15
Commercial Service Tools	4	Assembly and Adjustment	16
ON-VEHICLE SERVICE	5	POWER STEERING GEAR AND LINKAGE (Model	
Checking Steering Wheel Play	5	PR24AC)	19
Checking Neutral Position on Steering Wheel	5	Removal and Installation	19
Front Wheel Turning Angle	5	Disassembly	22
Checking Gear Housing Movement	5	Inspection	22
Checking and Adjusting Drive Belts (For		Assembly	23
power steering)	6	Adjustment	27
Checking Fluid Level	6	POWER STEERING OIL PUMP	29
Checking Fluid Leakage	6	Pre-disassembly Inspection	30
Bleeding Hydraulic System	7	Disassembly	30
Checking Steering Wheel Turning Force (For		Inspection	31
power steering)	7	Assembly	31
Checking Hydraulic System	8	POWER STEERING OIL COOLER	33
STEERING WHEEL AND STEERING COLUMN	9	Oil Cooler (Heavy duty kit for CD20 engine	
Removal and Installation	9	model)	33
Disassembly and Assembly	12	Removal and Installation	33
Inspection	13	SERVICE DATA AND SPECIFICATIONS (SDS)	34
MANUAL STEERING GEAR AND LINKAGE		General Specifications	34
(Model R24N)	14	Inspection and Adjustment	34

PRECAUTIONS AND PREPARATION

Precautions

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) "AIR BAG" (Dual Air Bag System)

The Supplemental Restraint System "Air Bag" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) "AIR BAG" (Single Air Bag System)

The Supplemental Restraint System "Air Bag" and used along with a seat belt, helps to reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag module (located in the center of the steering wheel), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual.








STEERING SYSTEM

- Before disassembly, thoroughly clean the outside of the unit.
- Disassembly should be done in a clean work area. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Place disassembled parts in order, on a parts rack, for easier and proper assembly.
- Use nylon cloths or paper towels to clean the parts; common shop rags can leave lint that might interfere with their operation.
- Before inspection or reassembly, carefully clean all parts with a general purpose, non-flammable solvent.
- Before assembly, apply a coat of recommended ATF* to hydraulic parts. Vaseline may be applied to O-rings and seals. Do not use any grease.
- Replace all gaskets, seals and O-rings. Avoid damaging O-rings, seals and gaskets during installation. Perform functional tests whenever designated.

*: Automatic transmission fluid

PRECAUTIONS AND PREPARATION




Special Service Tools

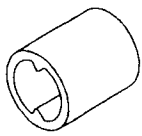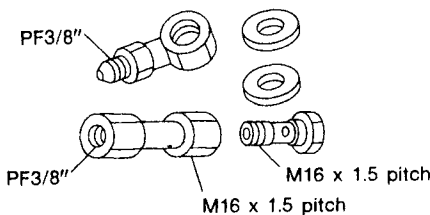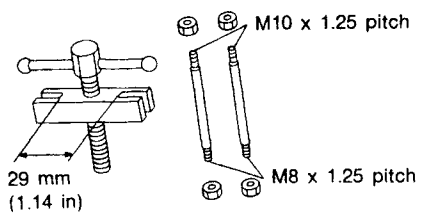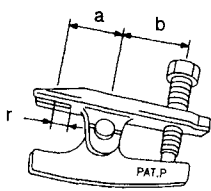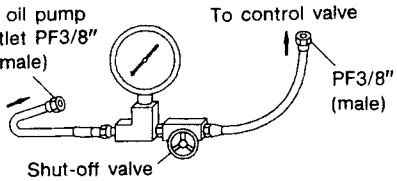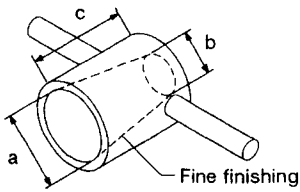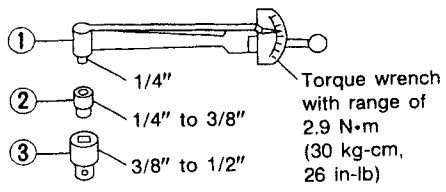
Tool number Tool name	Description
KV48100700 Torque adapter	Measuring pinion rotating torque  NT169
KV48102500 Pressure gauge adapter	Measuring oil pressure  NT542
ST27180001 Steering wheel puller	Removing and installing steering wheel  NT544
HT72520000 Ball joint remover	Removing ball joint  NT546 a: 33 mm (1.30 in) b: 50 mm (1.97 in) r: R11.5 mm (0.453 in)
ST27091000 Pressure gauge	Measuring oil pressure  NT547
KV48104400 Rack seal ring reformer	Reforming teflon ring  NT550 a: 50 mm (1.97 in) dia. b: 36 mm (1.42 in) dia. c: 100 mm (3.94 in)
ST3127S000 ① GG91030000 Torque wrench ② HT62940000 Socket adapter ③ HT62900000 Socket adapter	Measuring turning torque  NT541 Torque wrench with range of 2.9 N·m (30 kg-cm, 26 in-lb)

ST

PRECAUTIONS AND PREPARATION

 Commercial Service Tools

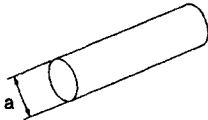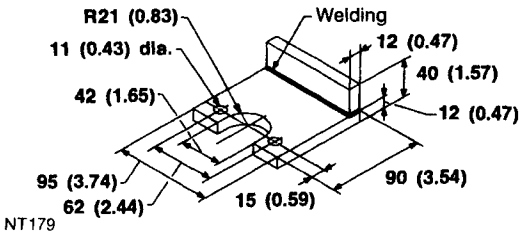Tool name	Description
Rear oil seal drift	 Installing rear oil seal NT063 a : 28 mm (1.10 in) dia.
Pinion oil seal drift	 Installing pinion oil seal NT063 a : 35 mm (1.38 in) dia.
Oil pump attachment	 Disassembling and assembling oil pump NT179 Unit: mm (in)

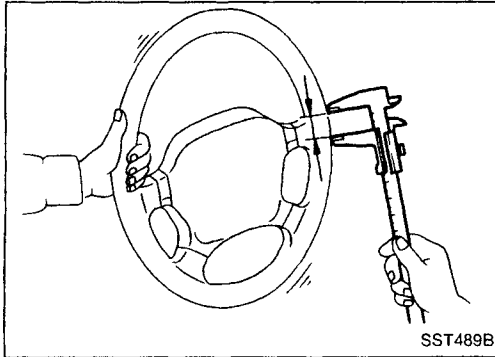

Checking Steering Wheel Play

- With wheels in a straight-ahead position, check steering wheel play.

Steering wheel play:


35 mm (1.38 in) or less

- If it is not within specification, check the following for loose or worn components.

Steering gear assembly

Steering column

Front suspension and axle

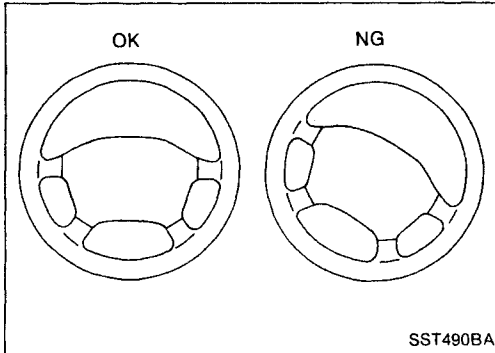

Checking Neutral Position on Steering Wheel

Pre-checking

- Make sure that wheel alignment is correct.


Wheel alignment:

Refer to SDS in FA section.

- Verify that the steering gear is centered before removing the steering wheel.

Checking

- Check that the steering wheel is in the neutral position when driving straight ahead.
- If it is not in the neutral position, remove the steering wheel and reinstall it correctly.
- If the neutral position is between two teeth, loosen tie-rod lock nuts. Turn the tie-rods by the same amount in opposite directions on both left and right sides.

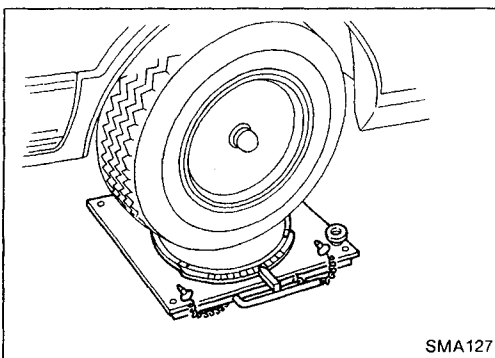

Front Wheel Turning Angle

- Rotate steering wheel all the way right and left; measure turning angle.


Turning angle of full turns:

Refer to SDS in FA section.

- If it is not within specification, check rack stroke.

Rack stroke "S":

Refer to SDS (ST-35).

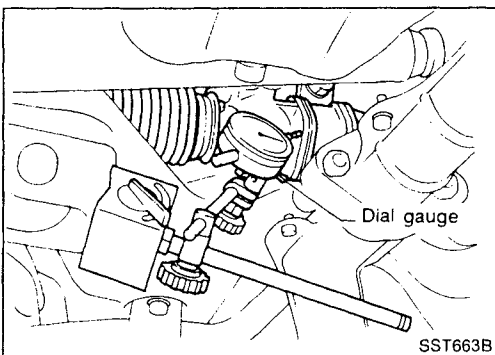

Checking Gear Housing Movement

- Check the movement of steering gear housing during stationary steering on a dry paved surface.

- Apply a force of 49 N (5 kg, 11 lb) to steering wheel to check the gear housing movement.

Turn off ignition key while checking.


Movement of gear housing:

± 2 mm (± 0.08 in) or less

- If movement exceeds the limit, replace mount insulator after confirming proper installation of gear housing clamps.

Checking and Adjusting Drive Belts (For power steering)

Refer to "Checking Drive Belts" for "ENGINE MAINTENANCE" in MA section.

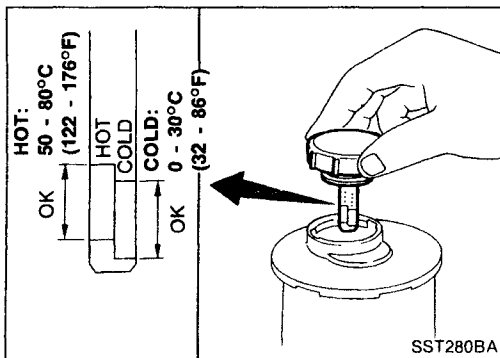

Checking Fluid Level



Check fluid level using dipstick on reservoir cap, or referring to the scale on reservoir tank.

Use "HOT" range for fluid temperatures of 50 to 80°C (122 to 176°F).

Use "COLD" range for fluid temperatures of 0 to 30°C (32 to 86°F).

CAUTION:

- Do not overfill.
- Recommended fluid is Automatic Transmission Fluid "DEXRON™" type or equivalent.

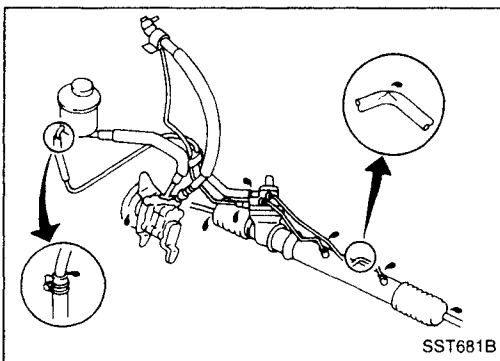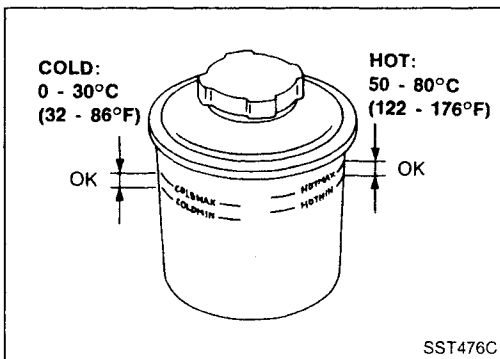

Checking Fluid Leakage

Check the lines for improper attachment and for leaks, cracks, damage, loose connections, chafing or deterioration.

1. Run engine between idle speed and 1,000 rpm.

Make sure temperature of fluid in oil tank rises to 60 to 80°C (140 to 176°F).

2. Turn steering wheel right-to-left several times.

3. Hold steering wheel at each "lock" position for five seconds and carefully check for fluid leakage.

CAUTION:

Do not hold the steering wheel in a locked position for more than 15 seconds.

4. If fluid leakage at connectors is noticed, loosen flare nut and then retighten.

Do not overtighten connector as this can damage O-ring, washer and connector.

5. Check rack boots for accumulation of power steering fluid.



Bleeding Hydraulic System

1. Raise front end of vehicle until wheels are clear of the ground.
2. Add fluid into oil tank to specified level. Then quickly turn steering wheel fully to right and left and lightly touch steering stoppers.
Repeat steering wheel operation until fluid level no longer decreases.
3. Start engine.
Repeat step 2. above.

- Incomplete air bleeding will cause the following to occur. When this happens, bleed air again.

- a. Air bubbles in reservoir tank
- b. Clicking noise in oil pump
- c. Excessive buzzing in oil pump

Fluid noise may occur in the valve or oil pump. This is common when the vehicle is stationary or while turning the steering wheel slowly. This does not affect the performance or durability of the system.

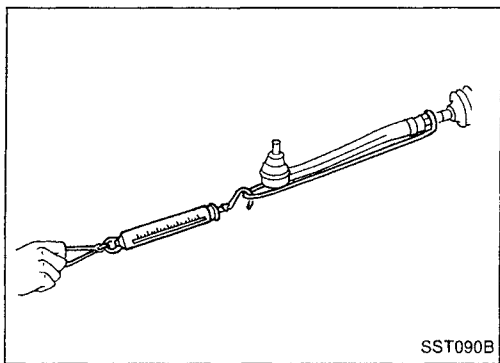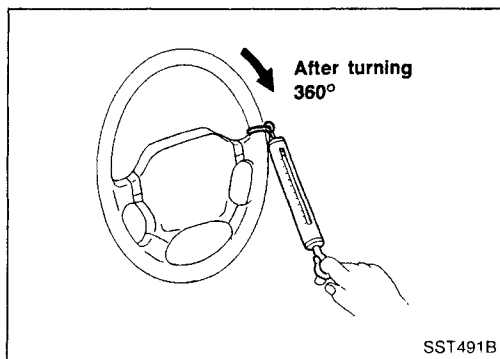

Checking Steering Wheel Turning Force (For power steering)

1. Park vehicle on a level, dry surface and set parking brake.
2. Start engine.
3. Bring power steering fluid up to adequate operating temperature. [Make sure temperature of fluid is approximately 60 to 80°C (140 to 176°F).]

Tires need to be inflated to normal pressure.

4. Check steering wheel turning force when steering wheel has been turned 360° from the neutral position.

Steering wheel turning force:

39 N (4 kg, 9 lb) or less

5. If steering wheel turning force is out of specification, check rack sliding force.
 - a. Disconnect steering column lower joint and knuckle arms from the gear.
 - b. Start and run engine at idle to make sure steering fluid has reached normal operating temperature.
 - c. Pull tie-rod slowly to move it from neutral position to ± 11.5 mm (± 0.453 in) at speed of 3.5 mm (0.138 in)/s. Check that rack sliding force is within specification.


Average rack sliding force:

152.0 - 240.3 N (15.5 - 24.5 kg, 34.2 - 54.0 lb)

Maximum force deviation:

98 N (10 kg, 22 lb)

6. If rack sliding force is not within specification, overhaul steering gear assembly.
7. If rack sliding force is OK, inspect steering column. Refer to ST-13.

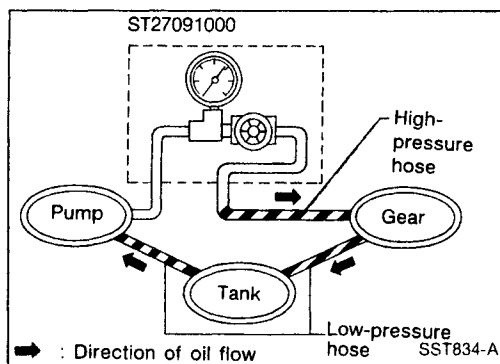

Checking Hydraulic System

Before starting, check belt tension, driving pulley and tire pressure.

1. Set Tool. Open shut-off valve. Then bleed air. (See "Bleeding Hydraulic System" ST-7.)
2. Run engine.

Make sure temperature of fluid in tank rises to 60 to 80°C (140 to 176°F).

WARNING:

Warm up engine with shut-off valve fully opened. If engine is started with shut-off valve closed, fluid pressure in oil pump increases to maximum. This will raise oil temperature abnormally.

3. Check pressure with steering wheel fully turned to left and right positions with engine idling at 1,000 rpm.

CAUTION:

Do not hold the steering wheel in a locked position for more than 15 seconds.

Oil pump maximum standard pressure:

7,649 - 8,238 kPa (76.5 - 82.4 bar,

78 - 84 kg/cm², 1,109 - 1,194 psi)

4. If oil pressure is below the standard pressure, slowly close shut-off valve and check pressure.
 - When pressure reaches standard pressure, gear is damaged.
 - When pressure remains below standard pressure, pump is damaged.


CAUTION:

Do not close shut-off valve for more than 15 seconds.

5. If oil pressure is higher than standard pressure, check oil pump flow control valve.
6. After checking hydraulic system, remove Tool and add fluid as necessary. Then completely bleed air out of system.

STEERING WHEEL AND STEERING COLUMN

Removal and Installation

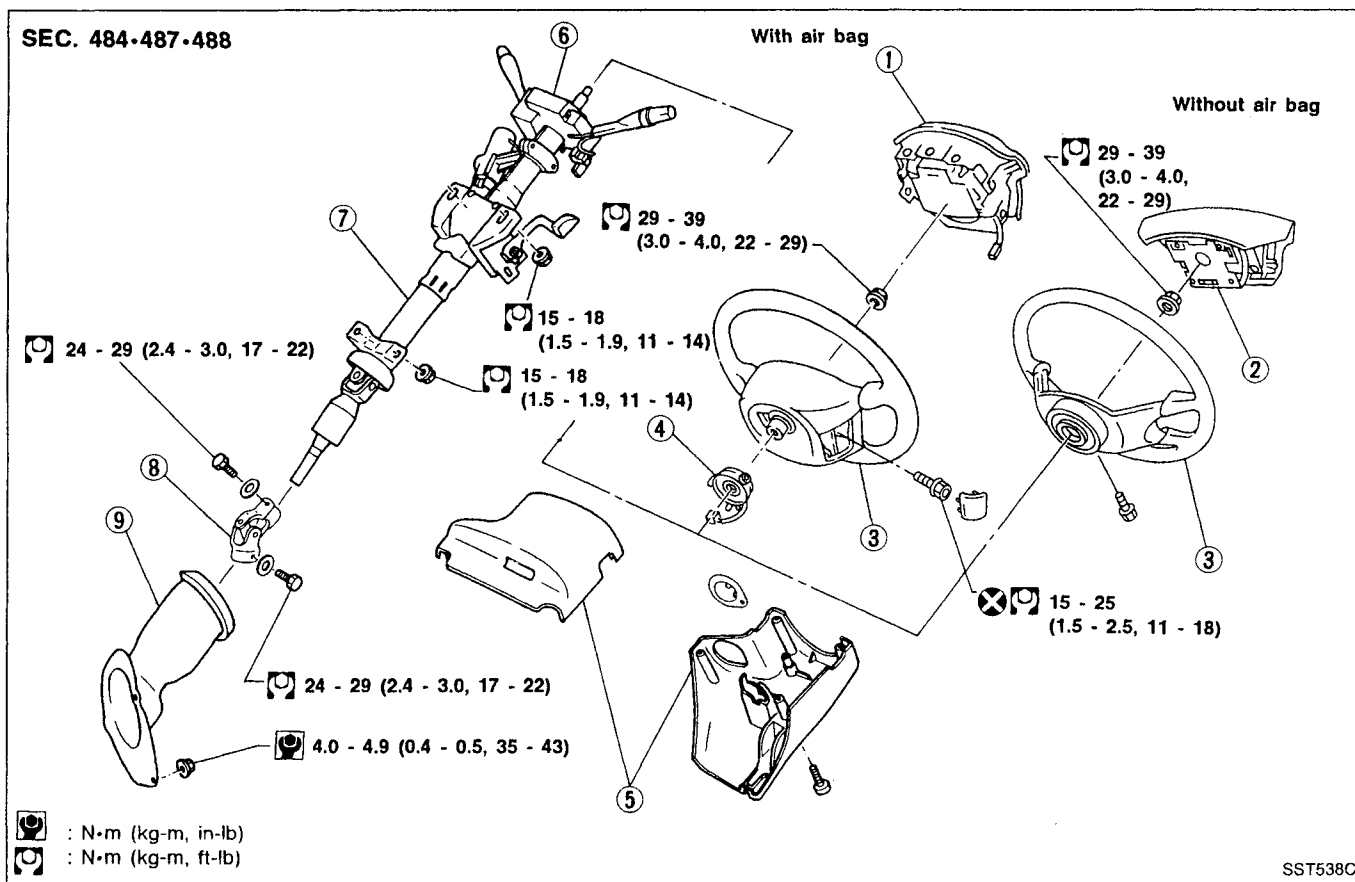

- | | | |
|------------------|----------------------|----------------------------|
| ① Air bag module | ④ Spiral cable | ⑦ Steering column assembly |
| ② Horn pad | ⑤ Column cover | ⑧ Lower joint |
| ③ Steering wheel | ⑥ Combination switch | ⑨ Boot |


CAUTION (SRS models only):

- The rotation of the spiral cable (SRS "Air bag" component part) is limited. If the steering gear must be removed, set the front wheels in the straight-ahead direction. Do not rotate the steering column while the steering gear is removed.
- Remove the steering wheel before removing the steering lower joint to avoid damaging the SRS spiral cable.

STEERING WHEEL

With Air Bag

- Remove air bag module and spiral cable. Refer to "Removal — Air Bag Module and Spiral Cable", "SUPPLEMENTAL RESTRAINT SYSTEM" in RS section.

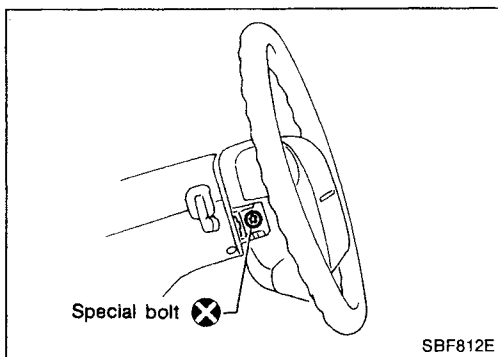

STEERING WHEEL AND STEERING COLUMN



Removal and Installation (Cont'd)

- Align spiral cable correctly when installing steering wheel.
 - a. Set the front wheels in the straight-ahead position.
 - b. Make sure that the spiral cable is in the neutral position.
The neutral position is detected by turning left 2.5 revolutions from the right end position. Align the two marks (X).


CAUTION:

The spiral cable may snap due to steering operation if the cable is installed in an improper position.

Also, with the steering linkage disconnected, the cable may snap by turning the steering wheel beyond the limited number of turns. (The spiral cable can be turned up to 2.5 turns from the neutral position to both the right and left.)

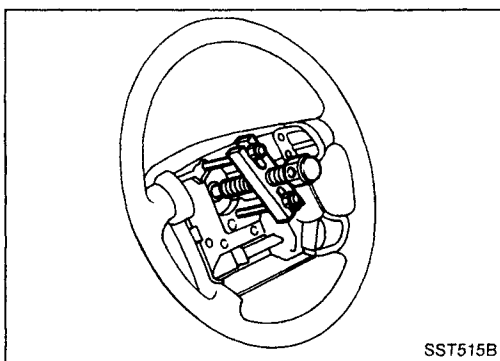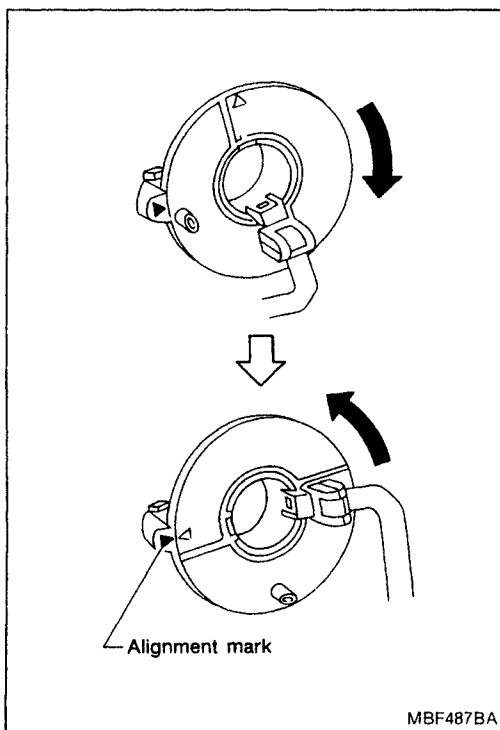


- Remove steering wheel with Tool.

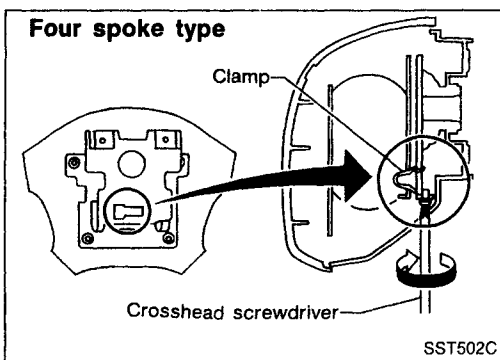






Without Air Bag

1. Remove horn pad.
Insert a crosshead screwdriver into hole on lower side of spoke and remove clamp.
Lift horn pad off by hand.

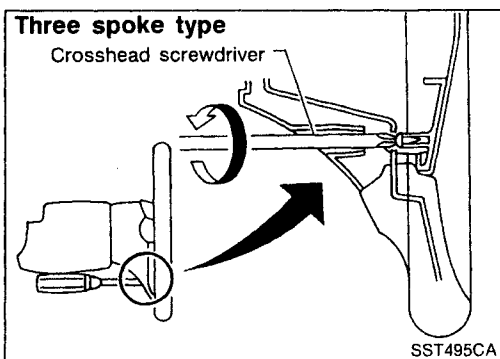

STEERING WHEEL AND STEERING COLUMN

Removal and Installation (Cont'd)

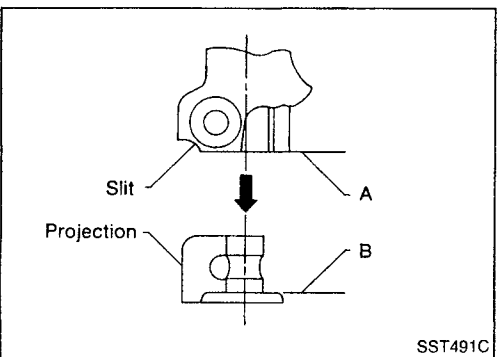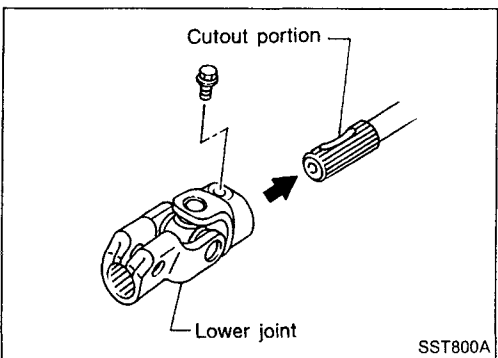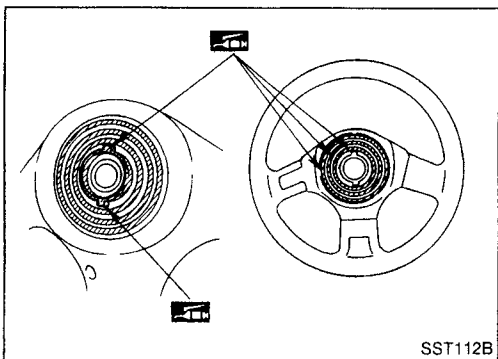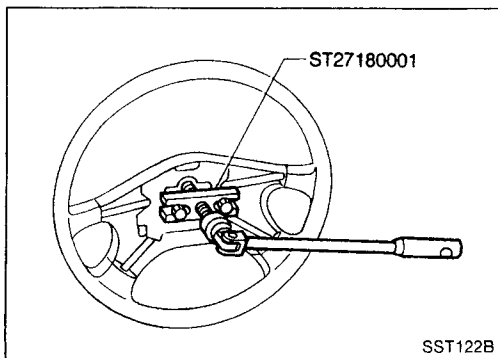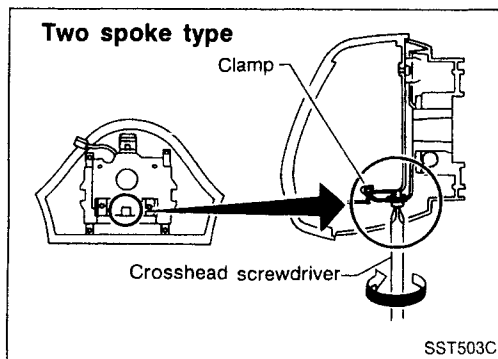

2. Remove steering wheel with Tool.

- When installing steering wheel, lubricate with multi-purpose grease. Apply grease to entire surface of turn signal cancel pins and horn contact slip rings.

STEERING COLUMN

- When installing steering column, fingertighten all lower bracket and clamp retaining bolts; then tighten them securely. Do not apply undue stress to steering column.
- When attaching coupling joint, be sure tightening bolt faces cutout portion.

- Align slit of lower joint with projection on dust cover. Insert joint until surface A contacts surface B.

CAUTION:


After installation, turn steering wheel to make sure it moves smoothly. Ensure the number of turns are the same from the straight forward position to left and right locks. Be sure that the steering wheel is in a neutral position when driving straight ahead.

ST


STEERING WHEEL AND STEERING COLUMN

Disassembly and Assembly

SEC. 488

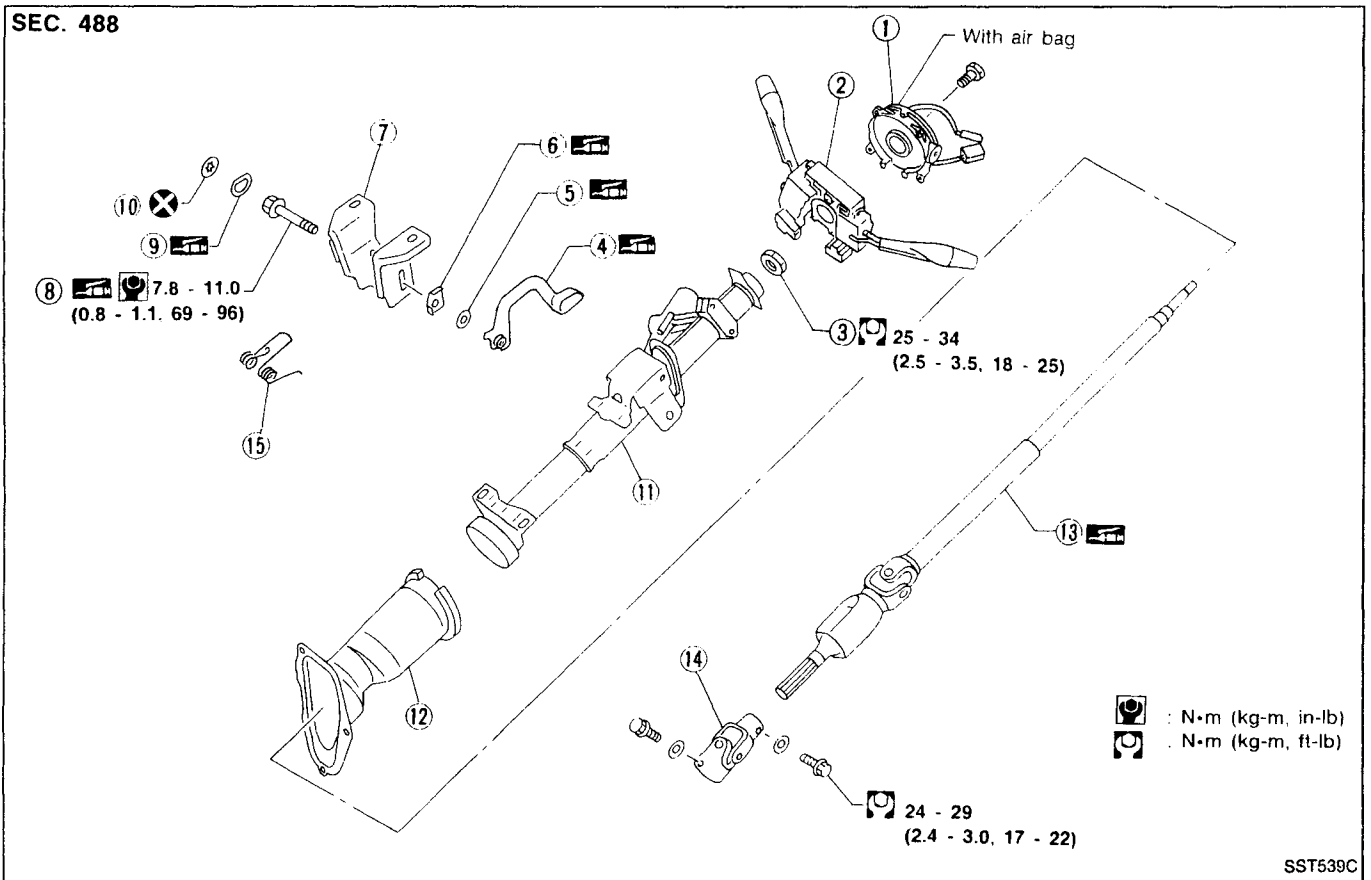

- | | | |
|----------------------|------------------------------------|-------------------------|
| ① Spiral cable | ⑦ Steering column mounting bracket | ⑫ Boot |
| ② Combination switch | ⑧ Adjust bolt | ⑬ Steering column shaft |
| ③ Lock nut | ⑨ Adjust bolt stopper | ⑭ Lower joint |
| ④ Tilt lever | ⑩ Push nut | ⑮ Return spring |
| ⑤ Washer | ⑪ Jacket tube assembly | |
| ⑥ Tilt lever stopper | | |

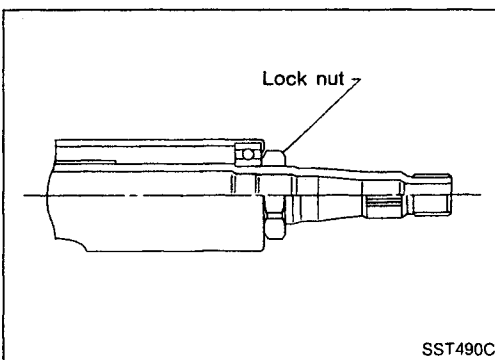


- When disassembling and assembling, unlock steering lock with key.
- Install lock nut on steering column shaft and tighten the nut to specification.


: 25 - 34 N·m (2.5 - 3.5 kg-m, 18 - 25 ft-lb)

STEERING WHEEL AND STEERING COLUMN


Disassembly and Assembly (Cont'd)

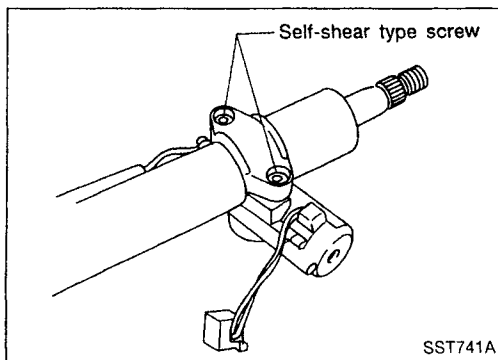

- Steering lock
- a. Break self-shear type screws with a drill or other appropriate tool.

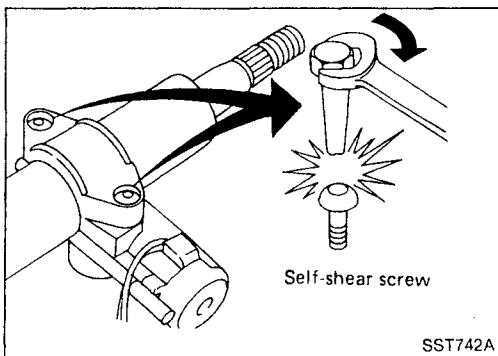

- b. Install new self-shear type screws and then cut off self-shear type screw heads.

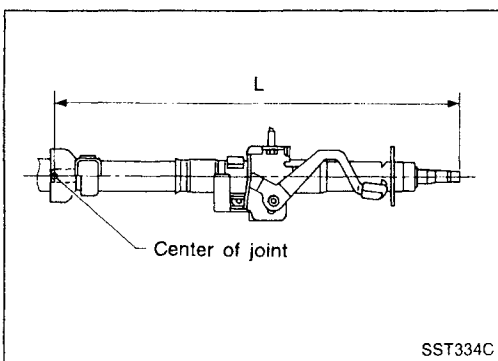

Inspection


- When steering wheel does not turn smoothly, check the steering column as follows and replace damaged parts.
- a. Check column bearings for damage or unevenness. Lubricate with recommended multi-purpose grease or replace steering column as an assembly, if necessary.
- b. Check jacket tube for deformation or breakage. Replace if necessary.
- When the vehicle comes into a light collision, check length "L".

Column length "L":

533.0 - 535.0 mm (20.98 - 21.06 in)

If out of the specifications, replace steering column as an assembly.

ST

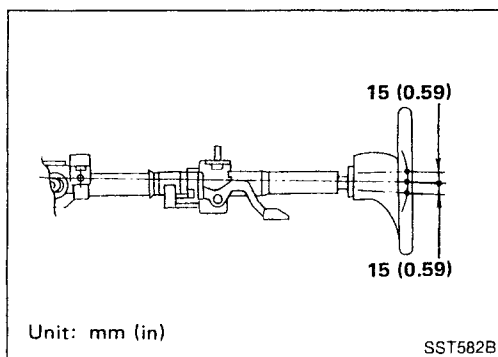


Tilt mechanism


- After installing steering column, check tilt mechanism operation.

MANUAL STEERING GEAR AND LINKAGE (Model R24N)

Removal and Installation

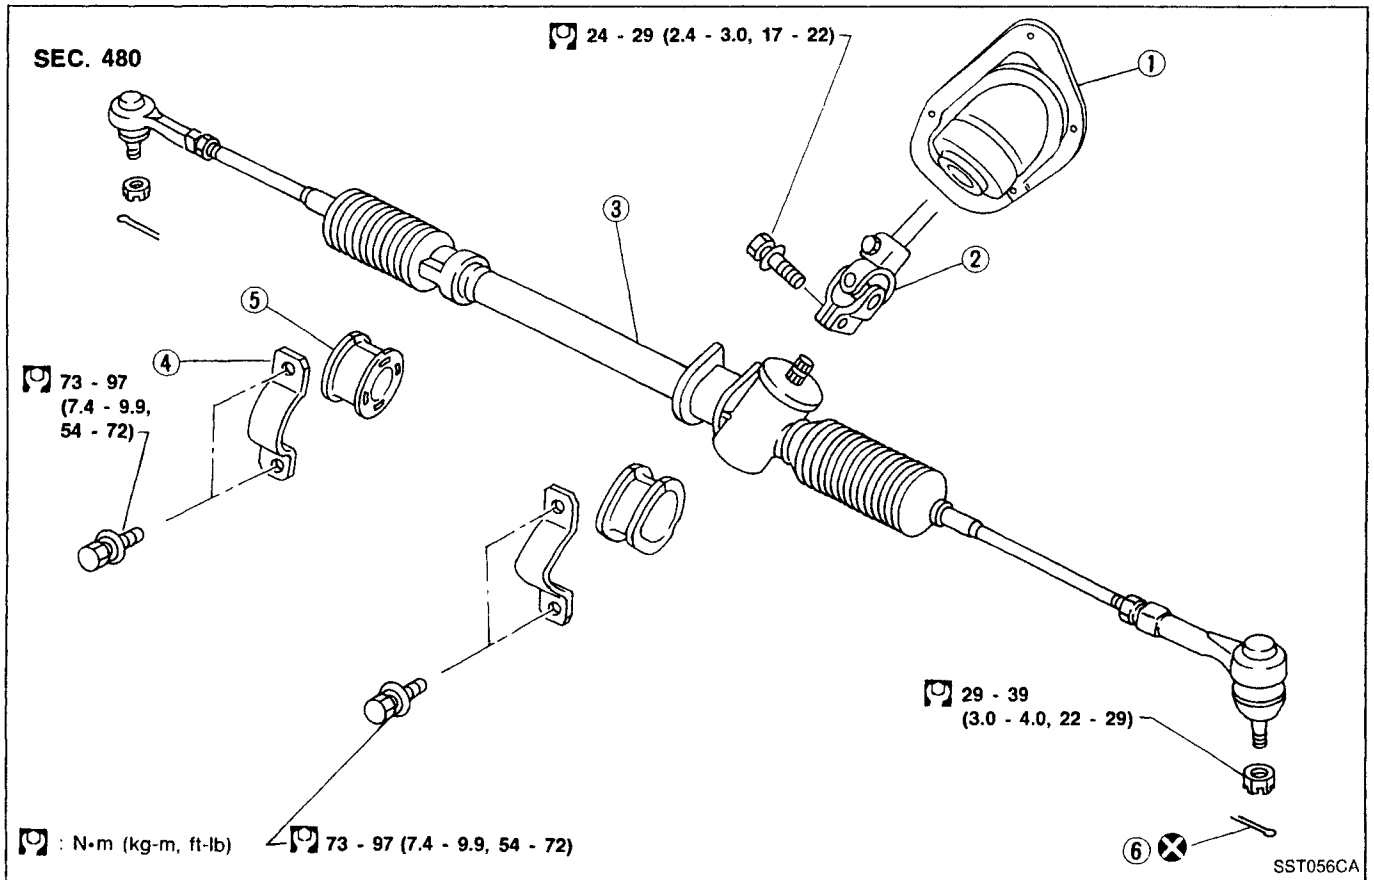


- | | | |
|---------------|---------------------------------|---------------------------|
| ① Hole cover | ③ Manual steering gear assembly | ⑤ Rack mounting insulator |
| ② Lower joint | ④ Steering gear mounting clamp | ⑥ Cotter pin |

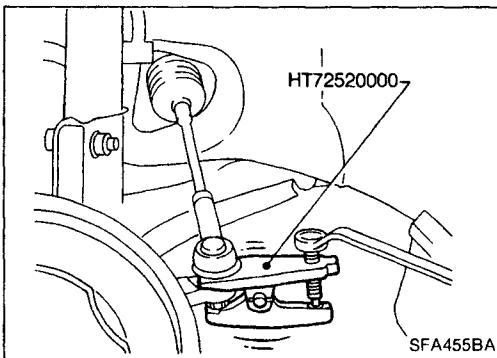

CAUTION:

The rotation of the spiral cable (SRS "Airbag" component part) is limited. If the steering gear must be removed, set the front wheels in the straight-ahead direction. Do not rotate the steering column while the steering gear is removed.

- Detach tie-rod outer sockets from knuckle arms with Tool.

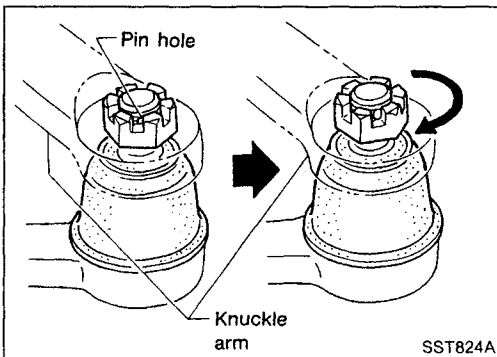


- Initially, tighten nut on tie-rod outer socket and knuckle arm to 29 to 39 N·m (3 to 4 kg-m, 22 to 29 ft-lb).
- Tighten nut further to align nut groove with the first pin hole so cotter pin can be installed.

CAUTION:

Tightening torque must not exceed 49 N·m (5 kg-m, 36 ft-lb).

MANUAL STEERING GEAR AND LINKAGE (Model R24N)

Disassembly

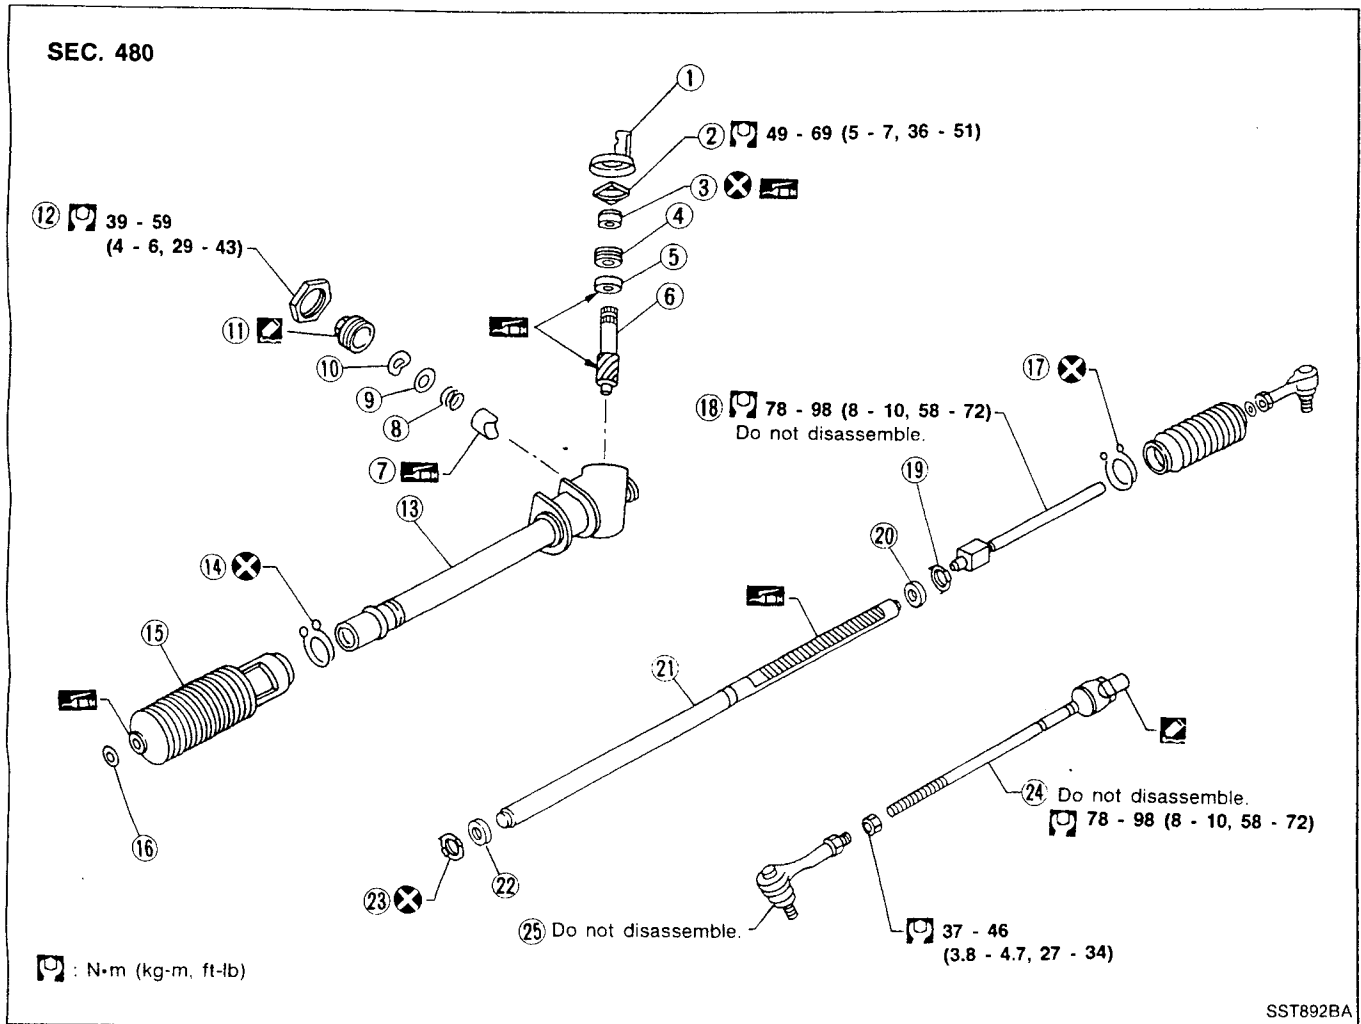

- | | | |
|-----------------------|-------------------------|------------------------|
| ① Guide chip | ⑩ Wave washer | ⑱ Tie-rod inner socket |
| ② Rear cover lock nut | ⑪ Adjusting screw | ⑲ Lock plate |
| ③ Dust seal | ⑫ Adjusting lock nut | ⑳ Spacer |
| ④ Rear cover | ⑬ Gear housing assembly | ㉑ Rack |
| ⑤ Pinion bearing | ⑭ Boot clamp | ㉒ Spacer |
| ⑥ Pinion assembly | ⑮ Boot | ㉓ Lock plate |
| ⑦ Retainer | ⑯ Boot band | ㉔ Tie-rod inner socket |
| ⑧ Retaining spring | ⑰ Boot clamp | ㉕ Tie-rod outer socket |
| ⑨ Plain washer | | |

Inspection

BOOT

Check condition of boot. If it is cracked excessively, replace it.

RACK

Thoroughly examine rack gear. If rack gear is damaged, cracked or worn, replace.

PINION ASSEMBLY


- Thoroughly examine pinion gear. If pinion gear is damaged, cracked or worn, replace.
- Check that all bearings roll freely. Ensure that balls, rollers and races in the bearing assemblies are not cracked, pitted or worn. Replace if necessary.

MANUAL STEERING GEAR AND LINKAGE (Model R24N)

Inspection (Cont'd)

TIE-ROD OUTER AND INNER SOCKETS





- Check outer and inner ball joints for swinging force "A" and axial end play "C".
Refer to SDS (ST-35).
- Check outer ball joint for rotating torque "B".
Refer to SDS (ST-35).
- Check condition of dust cover. If excessively cracked, replace it.

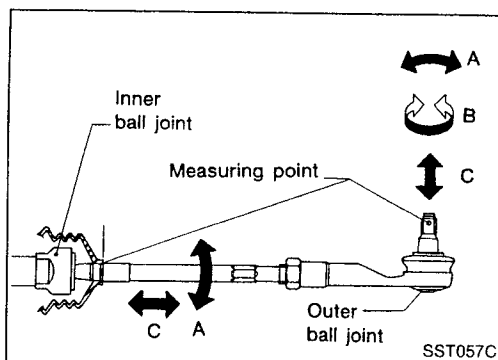



Assembly and Adjustment

STEERING GEAR

1. Insert rack gear from gear housing side.
2. Set rack gear in neutral position.
3. Insert pinion assembly, then set guide chip at neutral position as shown in figure. Pinion rack gear should be held in place.
4. Install rear cover with Tool and secure with lock nut.
Tool number: KV48102000
 - Before installing rear cover, apply locking sealant to threaded areas. Do not allow sealant to get into pinion bearing.
 - Apply a coat of multi-purpose grease to sealing lips of dust seal.
5. Insert retainer, spring, plain washer and wave washer. Then, install adjusting screw.
 - Apply a coat of locking sealant to threaded areas of retainer cover.

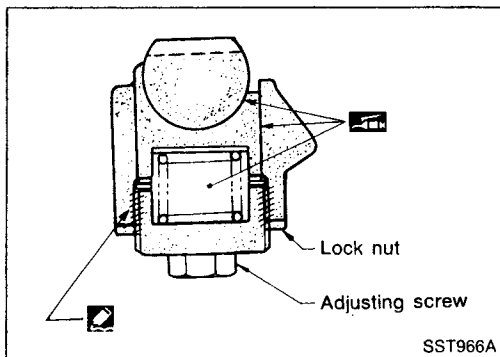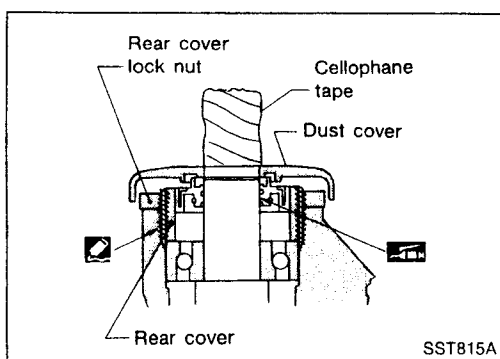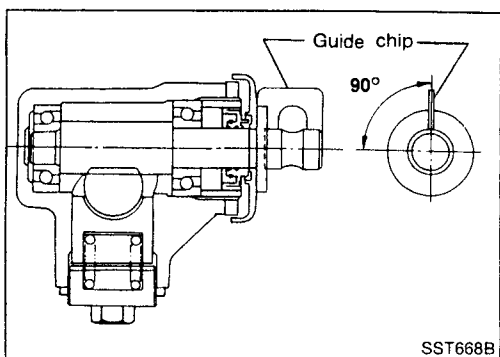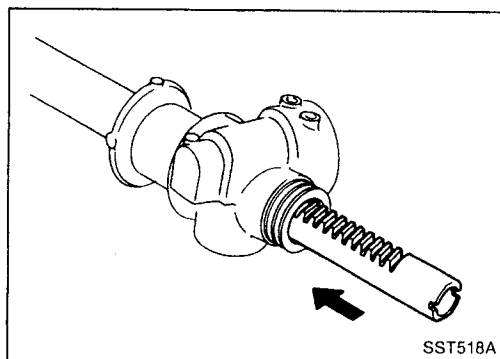

MANUAL STEERING GEAR AND LINKAGE (Model R24N)

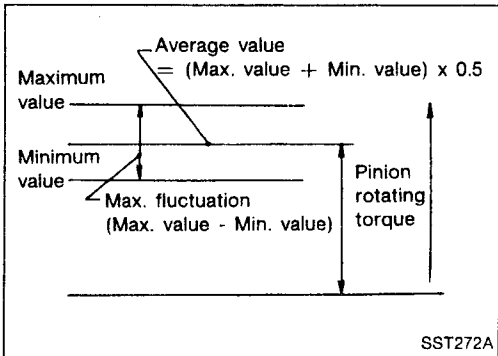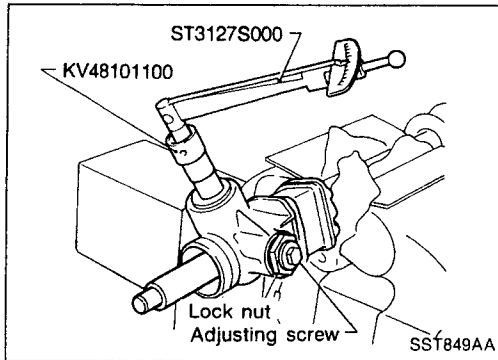

Assembly and Adjustment (Cont'd)

6. Adjust pinion rotating torque as follows:
 - a. Set gears to neutral position.
 - b. Loosen lock nut.
 - c. Tighten adjusting screw to a torque of 9.8 N·m (100 kg-cm, 87 in-lb).
 - d. Loosen adjusting screw and retighten it to a torque of 9.8 N·m (100 kg-cm, 87 in-lb).
 - e. Loosen adjusting screw within 60° until specified pinion torque is obtained. Ensure that pinion-to-rack play is less than 0.1 mm (0.004 in) when 15 N·m (1.5 kg-m, 11 ft-lb) torque is applied to pinion.
 - f. Prevent adjusting nut from rotating and tighten lock nut to specified torque 39 to 59 N·m (4 to 6 kg-m, 29 to 43 ft-lb) holding adjusting screw in place.
 - g. While slowly rotating pinion in the ±100° range from neutral position, make sure its rotating torque is within the specifications.

Within ±100° from the neutral position:

Average rotating torque

0.7 - 1.2 N·m (7 - 12 kg-cm, 6.1 - 10.4 in-lb)

Maximum torque deviation

0.3 N·m (3 kg-cm, 2.6 in-lb)

Except for above measuring range:

Maximum rotating torque

1.5 N·m (15 kg-cm, 13 in-lb)



Maximum force deviation

0.5 N·m (5 kg-cm, 4.3 in-lb)

- h. If pinion rotating torque is not within the specifications, readjust.

If pinion rotating torque is outside the specifications after adjustment has been made, replace retainer spring.

If pinion rotating torque is still out of specifications after replacing retainer spring, replace gear assembly.

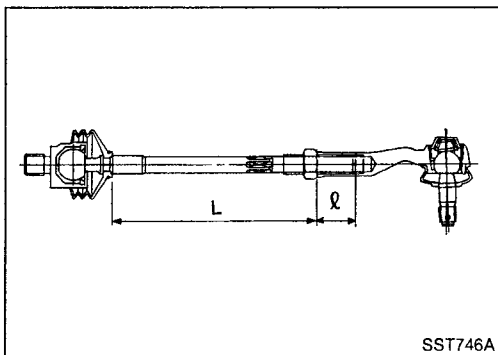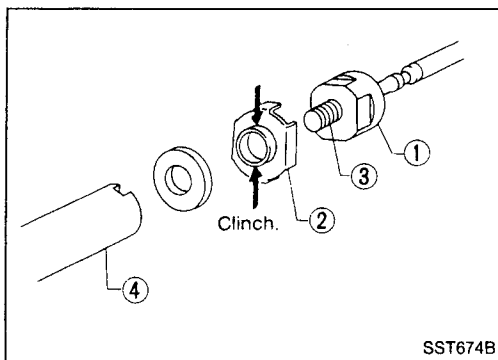

7. Install new lock plate.

- Attach lock plate ② to side rod inner socket ①.
- Apply locking sealant to inner socket threads ③.
- Screw inner socket into rack ④ and tighten to specified torque.
- Clinch two places of lock plate at rack's groove.

CAUTION:

To prevent scratching the boot, remove burrs from lock plate.

TIE-ROD AND BOOT


1. Install boot on tie-rod inner socket.
2. Apply locking sealant to threaded portion of inner socket. Install tie-rod inner socket to rack end together with new lock plate.
3. Install lock nut and outer socket to inner socket. Adjust tie-rod length "L" and tighten lock nut.

Tie-rod length "L": Refer to SDS (ST-35).


Screwed length "l": 32 mm (1.26 in) or more

MANUAL STEERING GEAR AND LINKAGE (Model R24N)


Assembly and Adjustment (Cont'd)

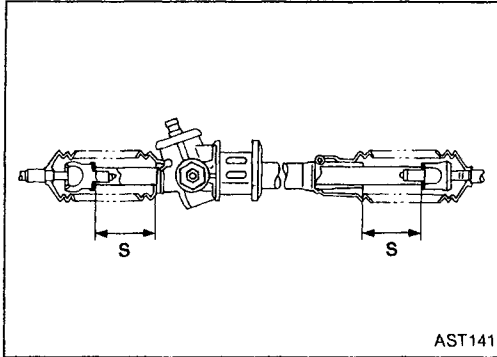


4. Measure rack stroke.
Measure stroke "S":
Refer to SDS (ST-35).

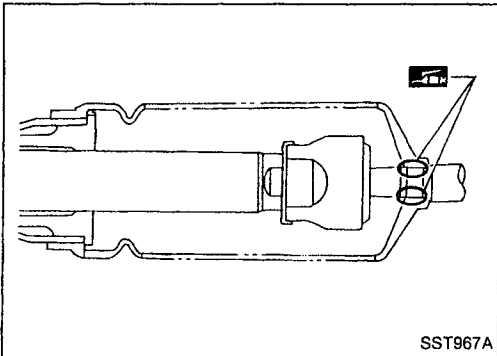

5. Before installing boot, coat the contact surfaces between boot and tie-rod with grease.

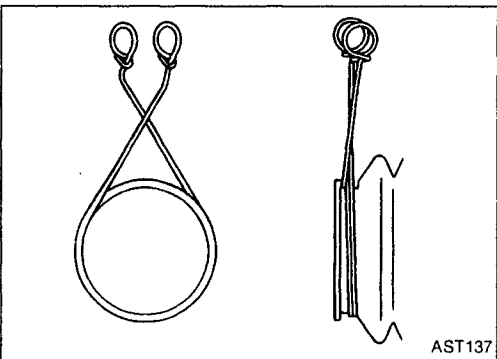


6. Install boot clamps.
- To install, wrap boot clamp around boot groove twice. Use a screwdriver to tighten clamps. Twist rings at both ends 4 to 4-1/2 turns while pulling them with a force of approx. 98 N (10 kg, 22 lb).
 - Do not cross wire on boot.

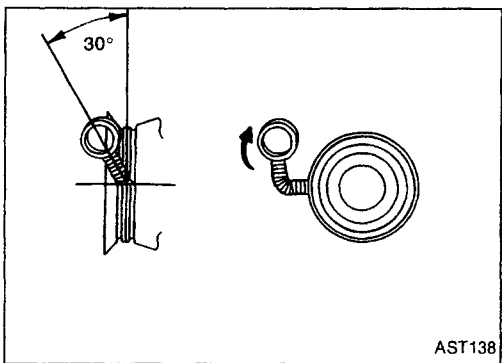


- Bend twisted end of boot clamp as shown at left. (This will prevent interference with other parts.)

POWER STEERING GEAR AND LINKAGE (Model PR24AC)

Removal and Installation

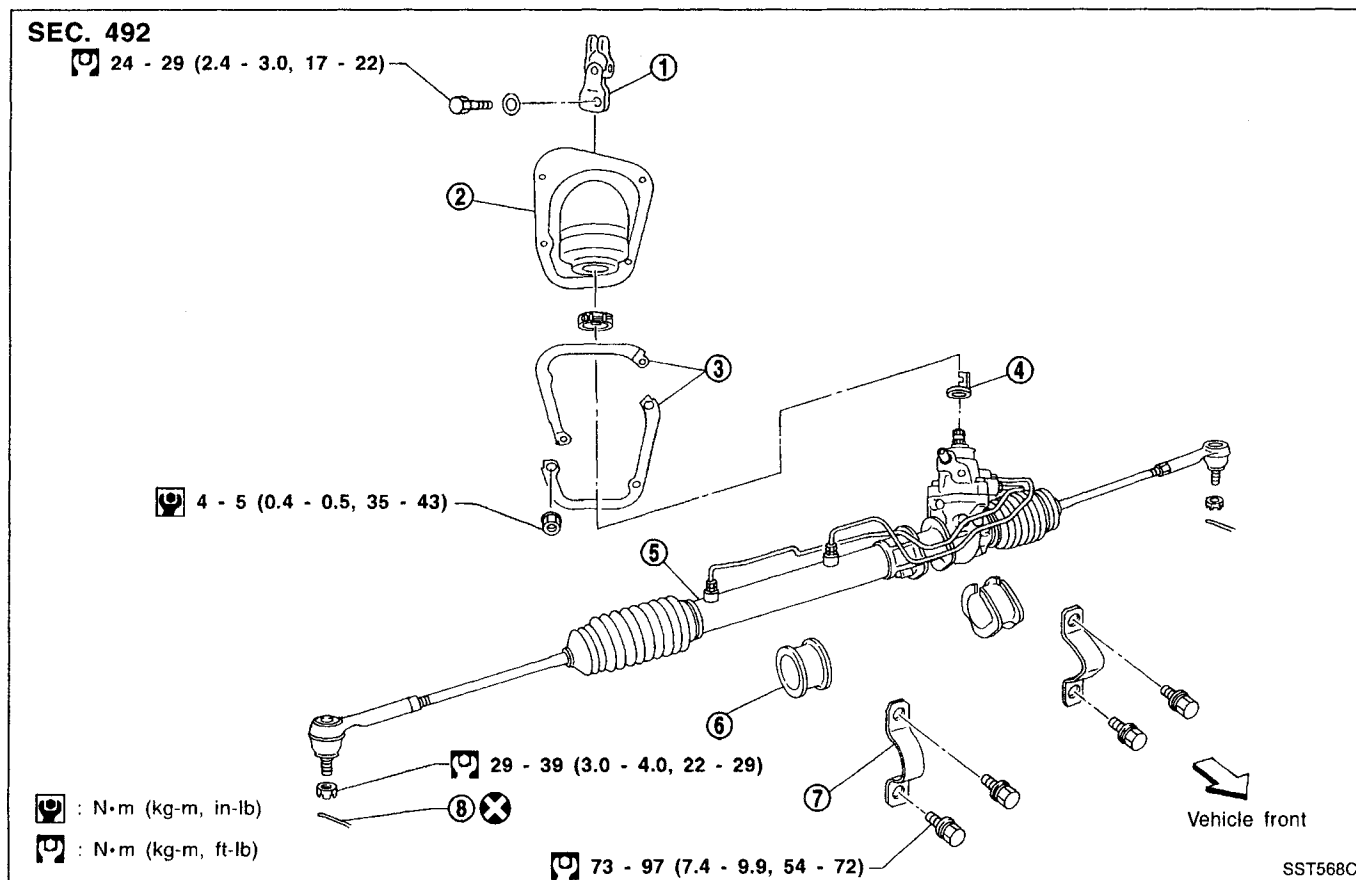

- | | | |
|---------------------|-----------------------------|---------------------------------|
| ① Lower joint | ④ Rear cover cap | ⑦ Gear housing mounting bracket |
| ② Hole cover | ⑤ Gear and linkage assembly | ⑧ Cotter pin |
| ③ Insulator bracket | ⑥ Rack mounting insulator | |

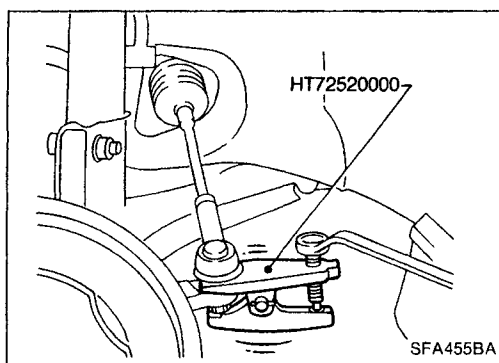


CAUTION:

- The rotation of the spiral cable (SRS "Air bag" component part) is limited. If the steering gear must be removed, set the front wheels in the straight-ahead direction. Do not rotate the steering column while the steering gear is removed.
- Remove the steering wheel before removing the steering lower joint to avoid damaging the SRS spiral cable.
- Detach tie-rod outer sockets from knuckle arms with Tool.
- When disconnecting steering shaft lower joint, follow the procedure shown below.
 1. Remove nuts for fitting the hole cover.
 2. Disconnect the lower joint while shifting the hole cover.

ST

POWER STEERING GEAR AND LINKAGE (Model PR24AC)


Removal and Installation (Cont'd)

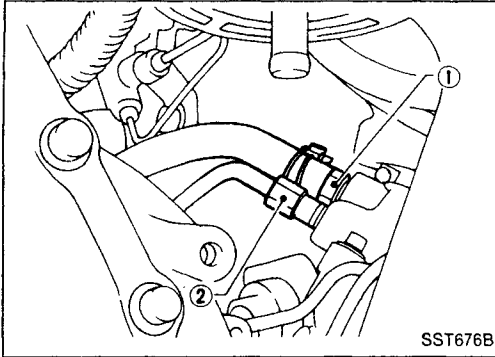

- Install pipe connector.
- Observe specified tightening torque when tightening high-pressure and low-pressure pipe connectors. Excessive tightening will damage threads of connector or O-ring.

Connector tightening torque:


- ① **Low-pressure side**
27 - 39 N·m (2.8 - 4.0 kg-m, 20 - 29 ft-lb)
- ② **High-pressure side**
15 - 25 N·m (1.5 - 2.5 kg-m, 11 - 18 ft-lb)
- The O-ring in low-pressure pipe connector is larger than that in high-pressure connector. Take care to install the proper O-ring.

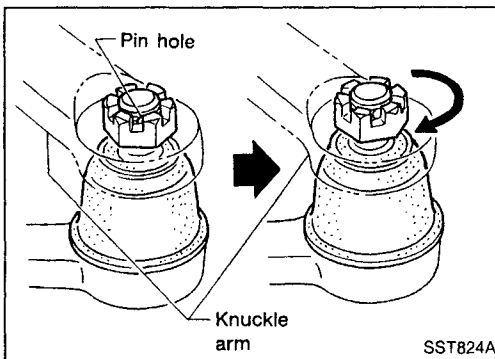


- Initially, tighten nut on tie-rod outer socket and knuckle arm to 29 to 39 N·m (3 to 4 kg-m, 22 to 29 ft-lb). Then tighten further to align nut groove with first pin hole so that cotter pin can be installed.

CAUTION:

Tightening torque must not exceed 49 N·m (5 kg-m, 36 ft-lb).

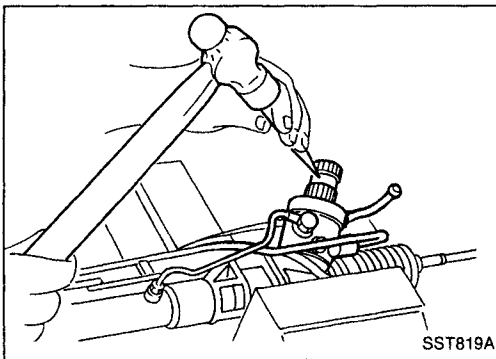


- Before removing lower joint from gear, set gear in neutral (wheels in straight-ahead position). After removing lower joint, put matching mark on pinion shaft and pinion housing to record neutral position.
- To install, set left and right dust boots to equal deflection. Attach lower joint by aligning matching marks of pinion shaft and pinion housing.

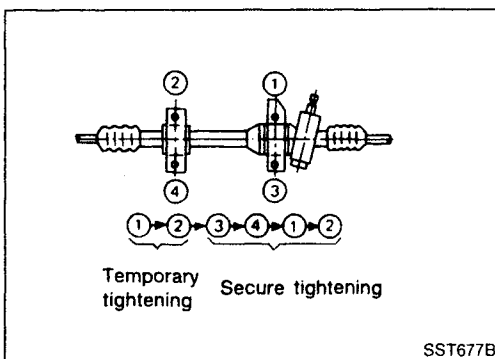

- Tighten gear housing mounting bracket bolts in the order shown.

POWER STEERING GEAR AND LINKAGE (Model PR24AC)


SEC. 492

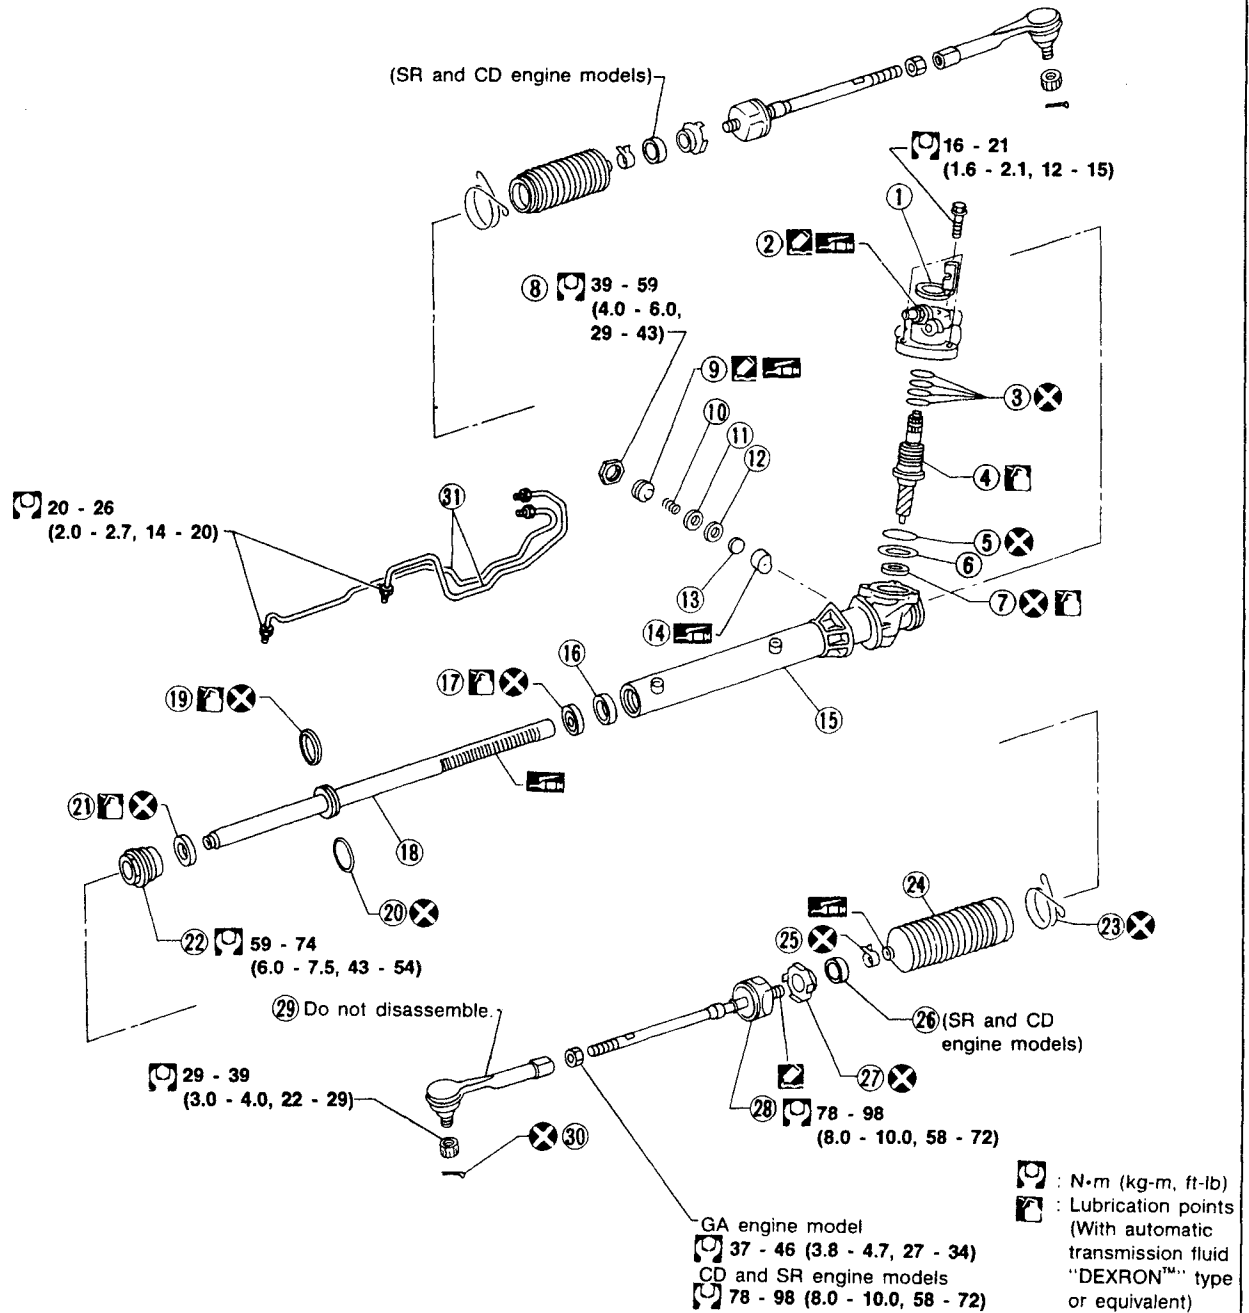

SST506CA

- | | | |
|-------------------------|------------------|------------------------|
| ① Rear cover cap | ⑫ Washer | ⑫ End cover assembly |
| ② Rear housing assembly | ⑬ Spring seat | ⑬ Boot clamp |
| ③ Pinion seal ring | ⑭ Retainer | ⑭ Dust boot |
| ④ Pinion assembly | ⑮ Gear housing | ⑮ Boot band |
| ⑤ O-ring | ⑯ Center bushing | ⑯ Steering gear spacer |
| ⑥ Shim | ⑰ Rack oil seal | ⑰ Lock plate |
| ⑦ Pinion oil seal | ⑱ Rack assembly | ⑱ Tie-rod inner socket |
| ⑧ Lock nut | ⑲ Rack seal ring | ⑲ Tie-rod outer socket |
| ⑨ Adjusting screw | ⑳ O-ring | ⑳ Cotter pin |
| ⑩ Spring | ㉑ Rack oil seal | ㉑ Gear housing tube |
| ⑪ Spring disc | | |

POWER STEERING GEAR AND LINKAGE (Model PR24AC)

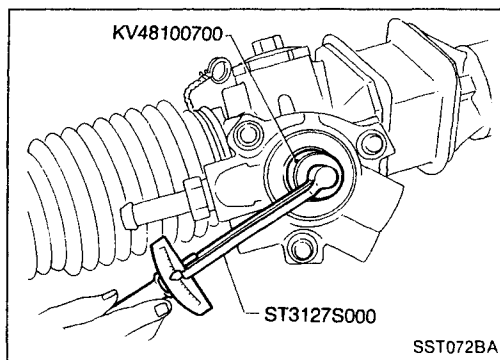

Disassembly



1. Prior to disassembling, measure pinion rotating torque. Record the pinion rotating torque as a reference.
 - Before measuring, disconnect gear housing tube and drain fluid.

- Use soft jaws when holding steering gear housing. Handle gear housing carefully, as it is made of aluminum. Do not grip cylinder in a vise.

2. Remove pinion gear.

Be careful not to damage pinion gear when removing pinion seal ring.

3. Remove tie-rod outer sockets and boots.
4. Loosen tie-rod inner socket by prying up staked portion, and remove socket.
5. Remove retainer.
6. Remove pinion assembly.
7. Use a 2 to 2.5 mm (0.079 to 0.098 in) diameter drill to completely remove staked portion of gear housing end.

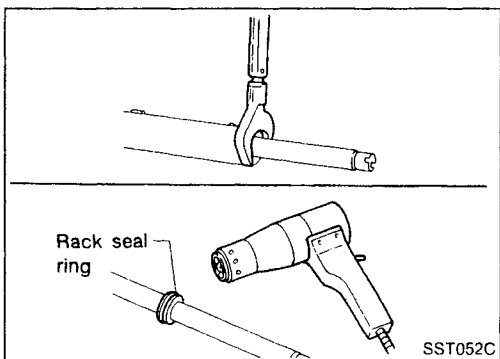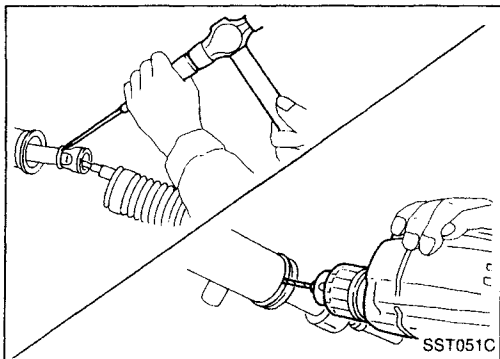

8. Remove end cover assembly with a suitable tool.


9. Draw out rack assembly.

10. Remove rack seal ring.

- Using a heat gun, heat rack seal to approximately 40°C (104°F).

- Remove rack seal ring.

Be careful not to damage rack.

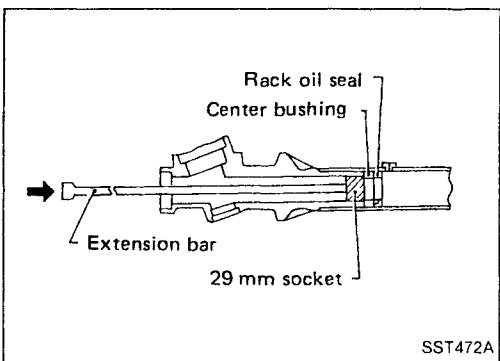

11. Remove center bushing and rack oil seal using tape wrapped socket and extension bar.

Do not scratch inner surfaces of pinion housing.

Inspection

Thoroughly clean all parts in cleaning solvent or automatic transmission fluid "DEXRON™" type or equivalent. Blow dry with compressed air, if available.

BOOT

- Check condition of boot. If cracked excessively, replace it.
- Check boots for accumulation of power steering fluid.

RACK

Thoroughly examine rack gear. If damaged, cracked or worn, replace it.

POWER STEERING GEAR AND LINKAGE (Model PR24AC)

Inspection (Cont'd)

PINION ASSEMBLY

- Thoroughly examine pinion gear. If pinion gear is damaged, cracked or worn, replace it.
- Check that all bearings roll freely. Ensure that balls, rollers and races are not cracked, pitted or worn. Replace if necessary.

GEAR HOUSING CYLINDER





Check gear housing cylinder bore for scratches or other damage. Replace if necessary.

TIE-ROD OUTER AND INNER SOCKETS

- Check ball joints for swinging force.
Tie-rod outer and inner ball joints swinging force "A":
Refer to SDS (ST-35).
- Check ball joint for rotating torque.
Tie-rod outer ball joint rotating torque "B":
Refer to SDS (ST-35).
- Check ball joints for axial end play.
Tie-rod outer and inner ball joints axial end play "C":
Refer to SDS (ST-35).
- Check condition of dust cover. If cracked excessively, replace outer tie-rod.

Assembly

1. Using a heat gun, heat new teflon rack seal ring to approximately 40°C (104°F). Then place it onto rack.

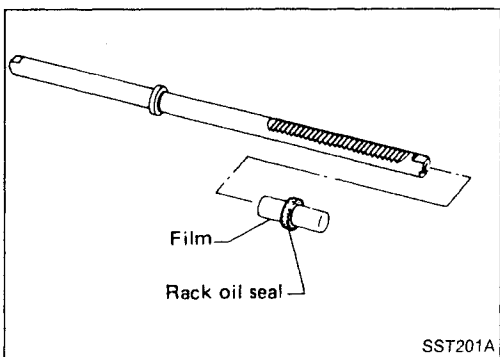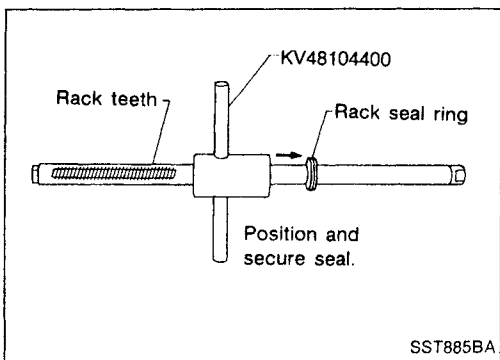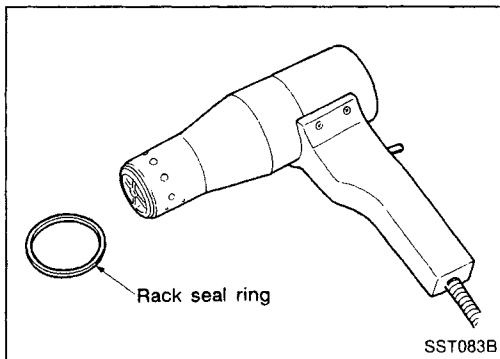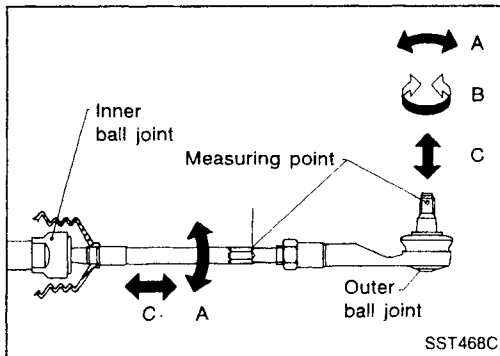

2. Using Tool, compress rack seal ring securely onto rack.
Always insert Tool from the rack gear side.


3. Insert new rack oil seal.
 - Place plastic film into rack oil seal to prevent damage by rack teeth.
 - Do not forget to remove plastic film after rack oil seal is positioned properly.
 - Make sure lips of rack oil seal face each other.

ST


POWER STEERING GEAR AND LINKAGE (Model PR24AC)

Assembly (Cont'd)


4. Install center bushing and rack oil seal with rack assembly.

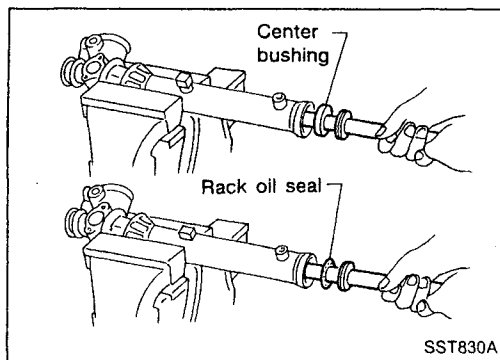

5. Insert rack oil seal and end cover assembly to rack. Then tighten end cover assembly.

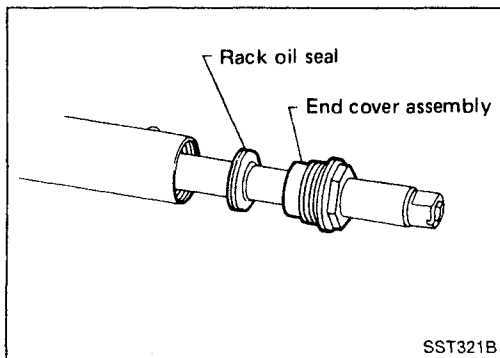


6. Fasten end cover assembly to gear housing by staking.

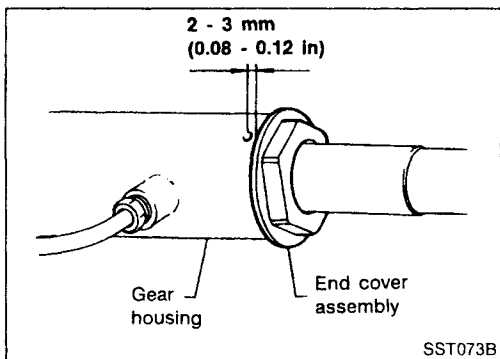

7. Set rack gear in neutral position.


Rack stroke "S":

Refer to SDS (ST-35).

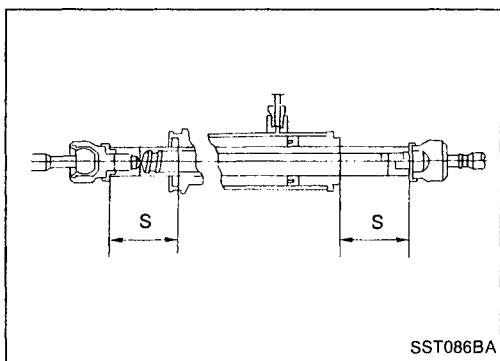


8. Coat seal lip of new pinion oil seal with multi-purpose grease. Install it into pinion housing of gear with a suitable tool.

Make sure lip of oil seal faces up when installed.

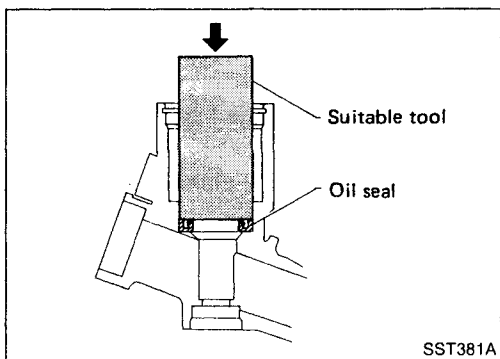


POWER STEERING GEAR AND LINKAGE (Model PR24AC)

Assembly (Cont'd)

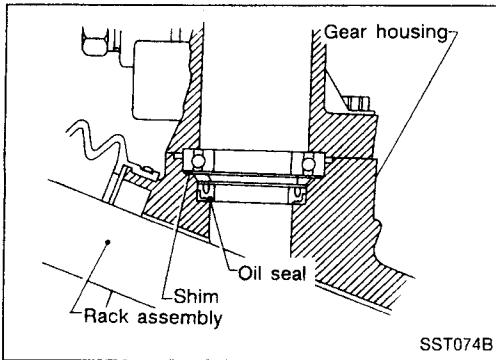


9. Install pinion bearing adjusting shim(s).

- Whenever pinion assembly, gear housing and rear housing are disassembled, replace shim(s) with new ones. Always use the same number of shim(s) when replacing.

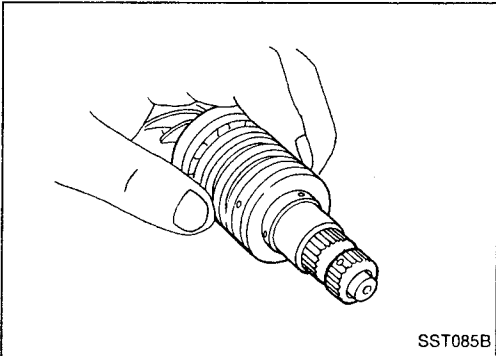


10. Install new pinion seal ring (made of Teflon) on pinion gear assembly.

- Using a heat gun, heat pinion seal ring to approximately 40°C (104°F) before installing it onto pinion gear assembly.
- Make sure pinion seal ring is properly settled in valve groove.

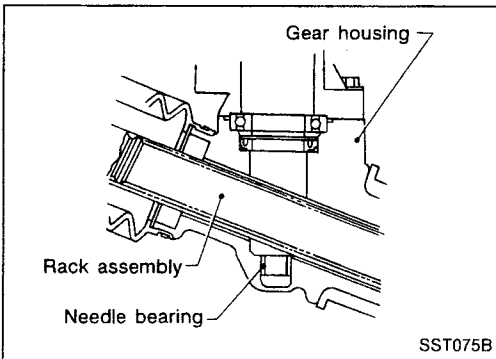


11. Apply a coat of multi-purpose grease to needle bearing roller and oil seal lip.

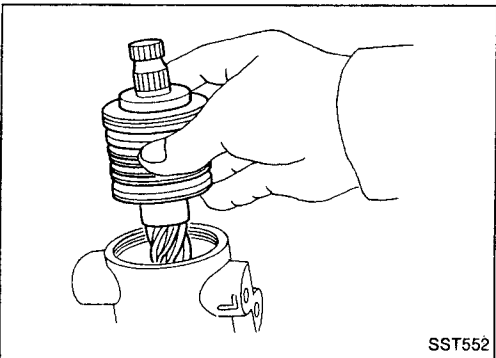

12. Install pinion assembly to rear housing.

Be careful not to damage pinion oil seal.

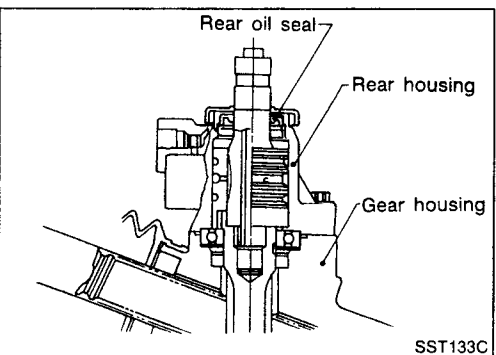


13. Apply a coat of multi-purpose grease to new rear oil seal lip before installing rear housing.


ST

POWER STEERING GEAR AND LINKAGE (Model PR24AC)


Assembly (Cont'd)

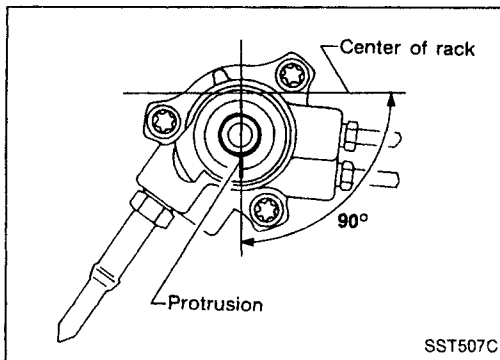

14. Ensure that the rack is centered. Install rear cover cap so that its protrusion is positioned as shown in figure.
Be careful not to damage worm ring and oil seal.

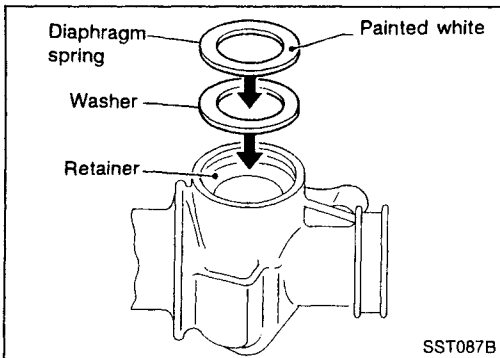


15. Install diaphragm spring into gear housing.
- Always install retainer, spring washer and diaphragm spring in that order.
 - Make sure convex end (painted white) of diaphragm spring faces outward when installing.
16. Install retainer spring and adjusting screw temporarily.

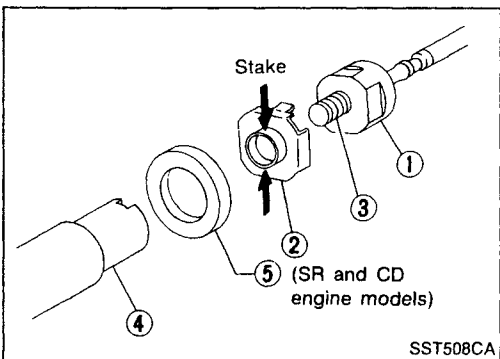


17. Install new lock plate.
- Attach lock plate ② to side rod inner socket ①.
 - Insert steering gear spacer ⑤ to rack ④.
 - Apply locking sealant to inner socket threads ③. Screw inner socket into rack ④ and tighten to specified torque.
 - Stake lock plate at two places.

CAUTION:

To prevent scratching the boot, remove burrs from lock plate.

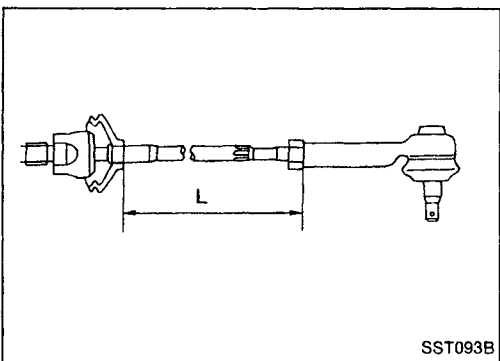


18. Tighten outer socket lock nut.
Tie-rod length "L":
Refer to SDS (ST-35).

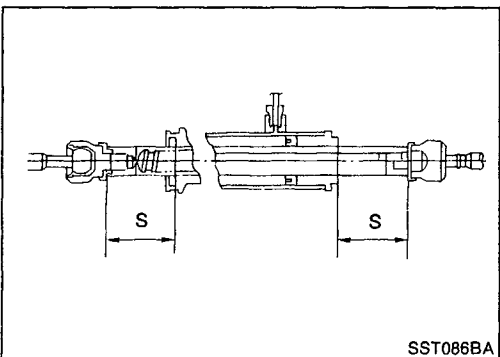


19. Measure rack stroke.
Rack stroke "S":
Refer to SDS (ST-35).

POWER STEERING GEAR AND LINKAGE (Model PR24AC)

Assembly (Cont'd)

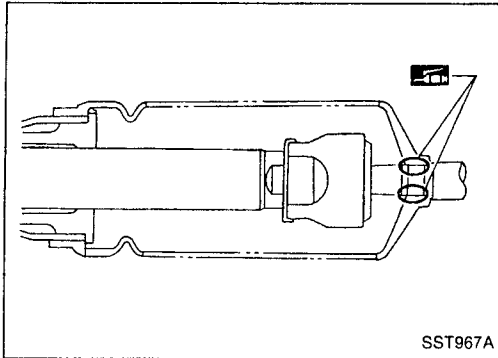


20. Before installing boot, coat the contact surfaces between boot and tie-rod with grease.

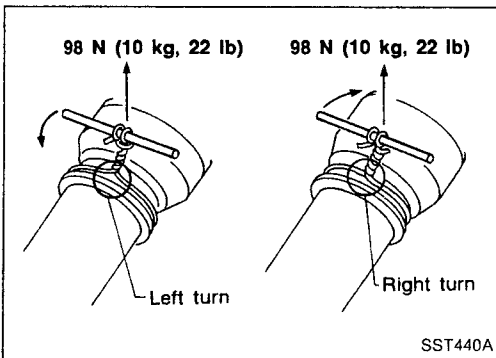


21. Install boot clamps.


- To install, wrap boot clamp around boot groove twice. To tighten clamp, place a screwdriver through both rings. Twist rings 4 to 4-1/2 turns while pulling with a force of approx. 98 N (10 kg, 22 lb).
- Twist boot clamp in the direction shown in figure at left.

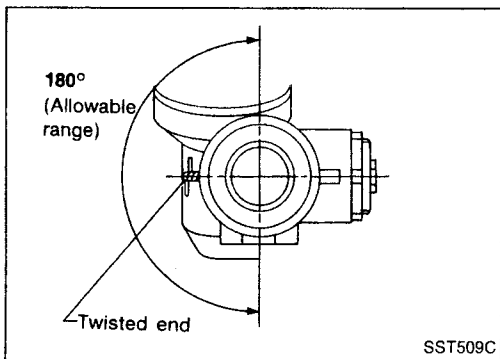

- Locate twisted end of boot clamp in the range shown. (This will prevent interference with other parts.)

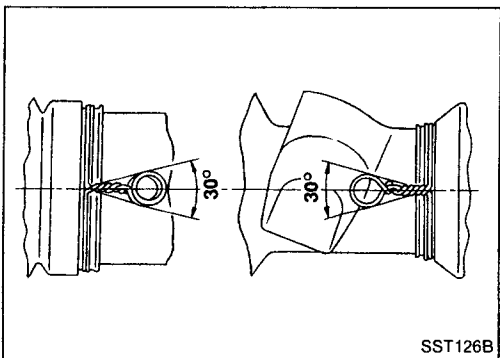

- After twisting boot clamp, bend twisted end diagonally so it does not contact boot.

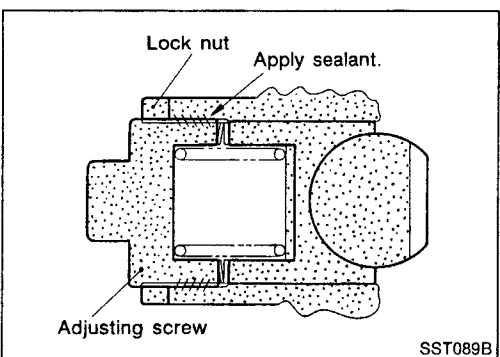




Adjustment

Adjust pinion rotating torque as follows:

1. Set rack to the neutral position without fluid in the gear.
2. Coat the adjusting screw with locking sealant and screw it in.
3. Lightly tighten lock nut.
4. Tighten adjusting screw to a torque of 4.9 to 5.9 N·m (50 to 60 kg-cm, 43 to 52 in-lb).
5. Loosen adjusting screw, then retighten it to 0.2 N·m (2 kg-cm, 1.7 in-lb).

POWER STEERING GEAR AND LINKAGE (Model PR24AC)

Adjustment (Cont'd)

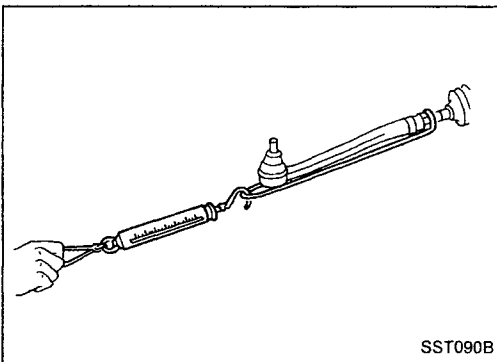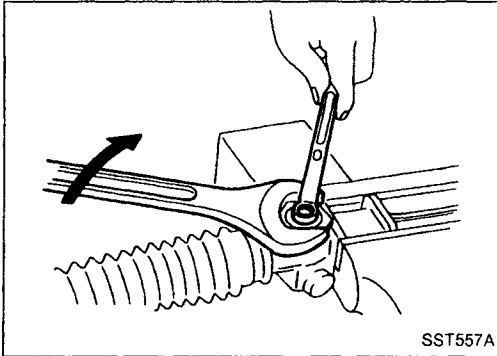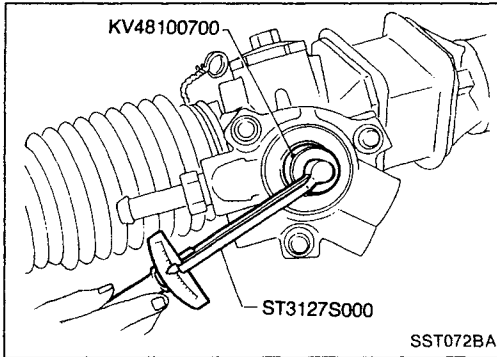

6. Move rack over its entire stroke several times.
7. Measure pinion rotating torque within the range of 180° from neutral position.
Stop the gear at the point of maximum torque.
8. Loosen adjusting screw, then retighten it to 4.9 N·m (50 kg-cm, 43 in-lb).
9. Loosen adjusting screw by 70° to 110°.

10. Prevent adjusting screw from turning, and tighten lock nut to specified torque.

11. Check rack sliding force on vehicle as follows:
 - a. Install steering gear onto vehicle, but do not connect tie-rod to knuckle arm.
 - b. Connect all piping and fill with steering fluid.
 - c. Start engine and bleed air completely.
 - d. Disconnect steering column lower joint from the gear.
 - e. Keep engine at idle and make sure steering fluid has reached normal operating temperature.
 - f. Pull tie-rod slowly to move it from neutral position to ± 11.5 mm (± 0.453 in) at speed of 3.5 mm (0.138 in)/s. Check that rack sliding force is within specification.

Average rack sliding force:

152.0 - 240.3 N (15.5 - 24.5 kg, 34.2 - 54.0 lb)

Maximum force deviation:

98 N (10 kg, 22 lb)

- g. Check sliding force outside above range at rack speed of 40 mm (1.57 in)/s.

Maximum rack sliding force:


294 N (30 kg, 66 lb)

Maximum force deviation:

147 N (15 kg, 33 lb)


- If rack sliding force is not within specification, readjust by repeating adjustment procedure from the beginning.
- If rack sliding force is still out of specification after readjustment, gear assembly needs to be replaced.

POWER STEERING OIL PUMP

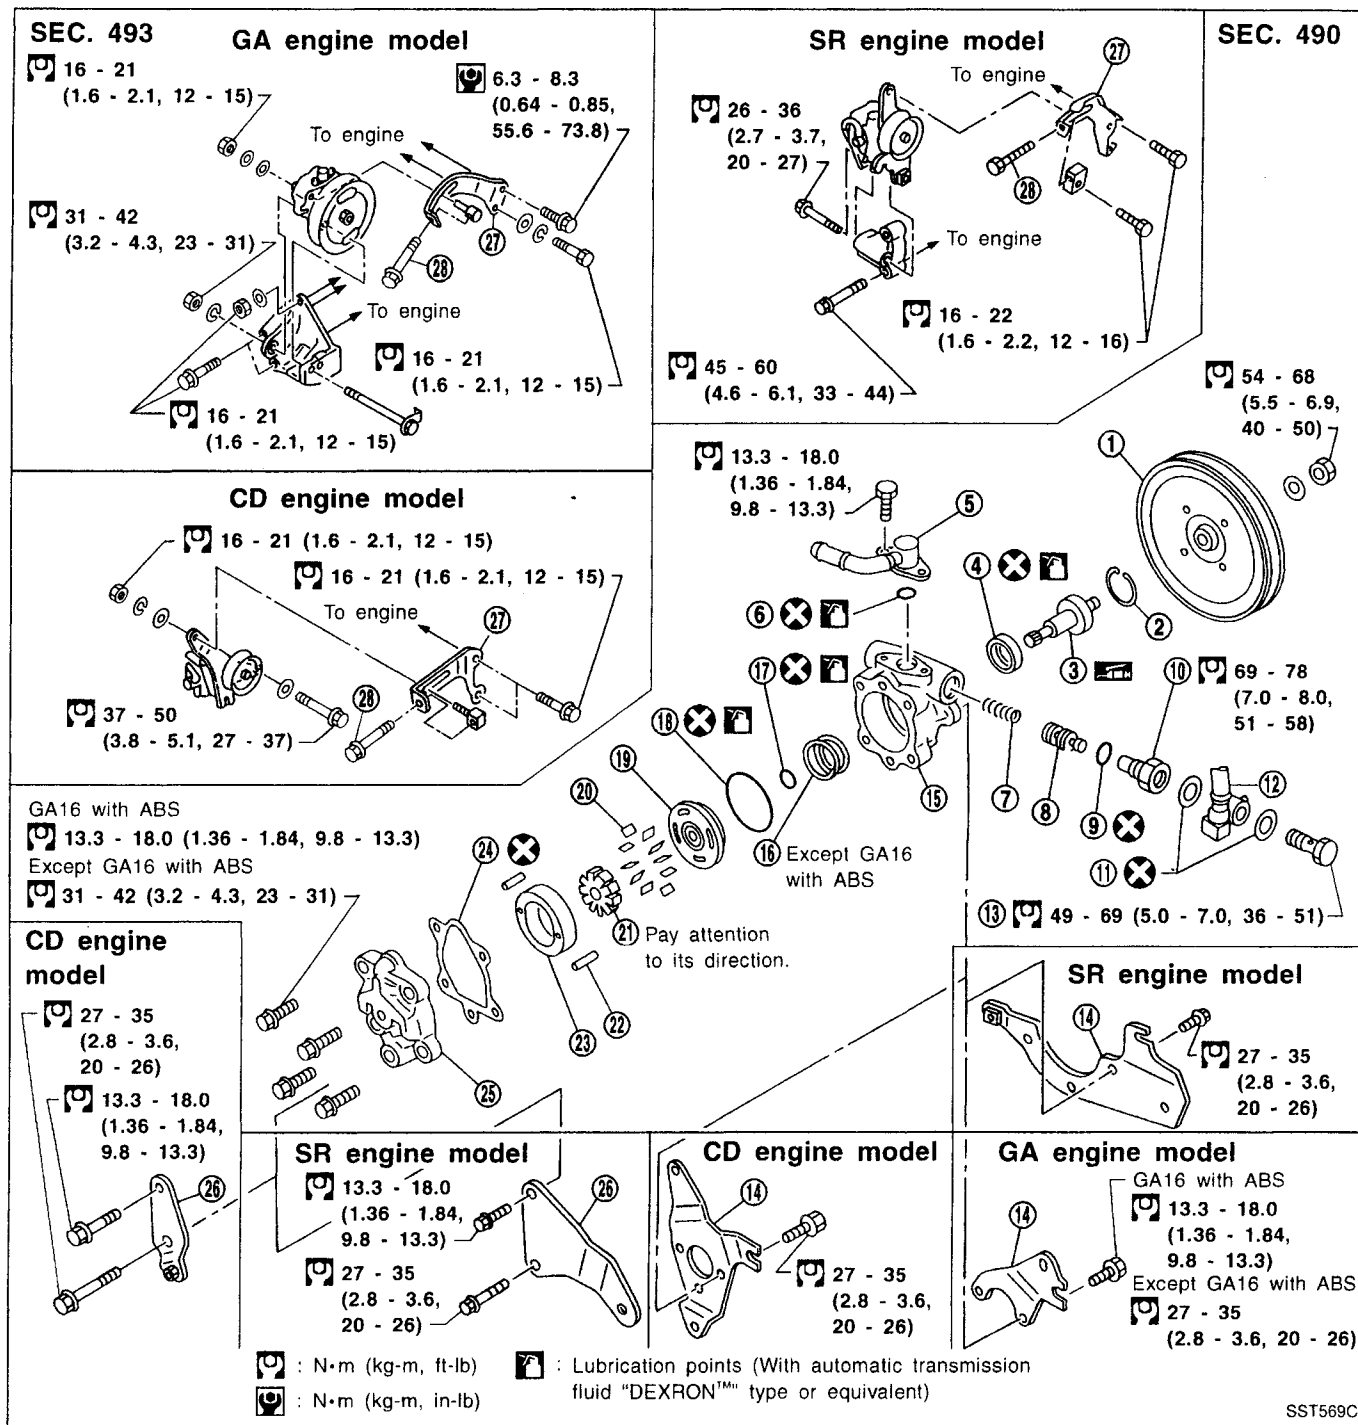

- | | | |
|------------------------|--------------------|---------------------|
| ① Pulley | ⑪ Copper washer | ⑳ Vane |
| ② Snap ring | ⑫ Hose | ㉑ Rotor |
| ③ Drive shaft assembly | ⑬ Connector bolt | ㉒ Pin |
| ④ Oil seal | ⑭ Mounting bracket | ㉓ Cam ring |
| ⑤ Suction pipe | ⑮ Front housing | ㉔ Gasket |
| ⑥ O-ring | ⑯ Spring | ㉕ Rear housing |
| ⑦ Spring | ⑰ O-ring | ㉖ Mounting bracket |
| ⑧ Control valve | ⑱ O-ring | ㉗ Adjusting bracket |
| ⑨ O-ring | ㉑ Front side plate | ㉘ Adjusting bolt |
| ⑩ Connector | | |

POWER STEERING OIL PUMP

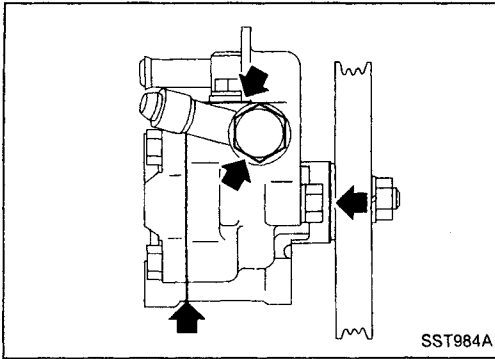

Pre-disassembly Inspection


Disassemble the power steering oil pump only if the following items are found.

- Oil leak from any point shown in the figure
- Deformed or damaged pulley
- Poor performance


Disassembly

CAUTION:


- Parts which can be disassembled are strictly limited. Never disassemble parts other than those specified.
- Disassemble in as clean a place as possible.
- Clean your hands before disassembly.
- Do not use rags; use nylon cloths or paper towels.
- Follow the procedures and cautions in the Service Manual.
- When disassembling and reassembling, do not let foreign matter enter or contact the parts.

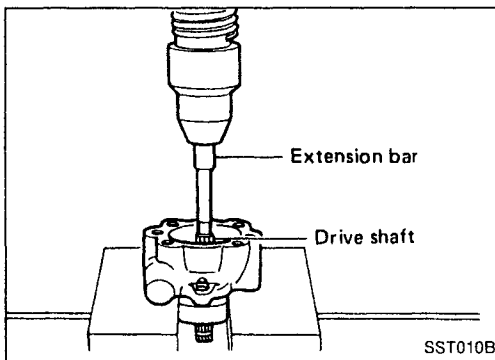

- Remove snap ring, then draw drive shaft out.
Be careful not to drop drive shaft.

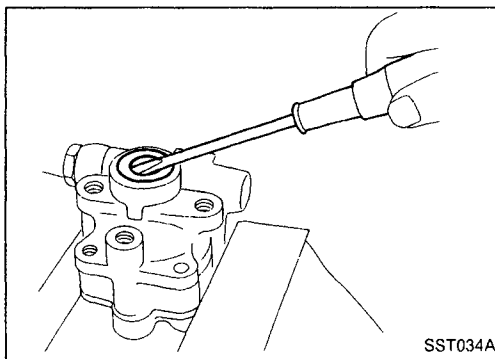

- Remove oil seal.
Be careful not to damage front housing.

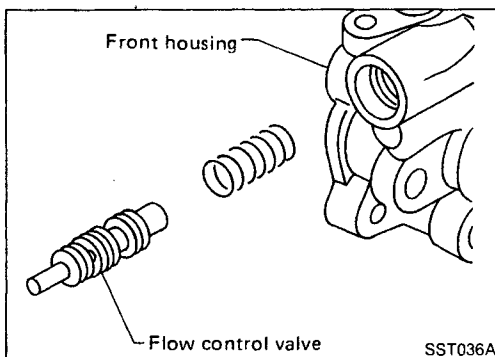


- Remove connector and flow control valve with spring.
Be careful not to drop flow control valve.

POWER STEERING OIL PUMP

Inspection


- If pulley is cracked or deformed, replace it.
- If an oil leak is found around pulley shaft oil seal, replace the seal.
- If serration on pulley or pulley shaft is deformed or worn, replace it.

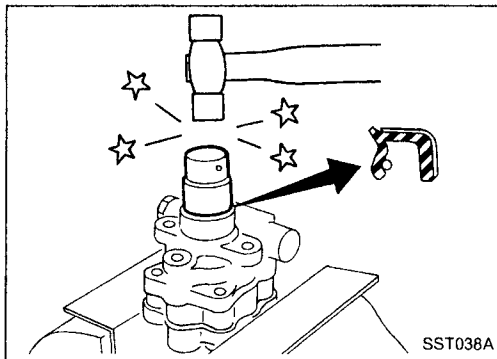


Assembly

Assemble oil pump, noting the following instructions.

- Make sure O-rings and oil seal are properly installed.
- Always install new O-rings and oil seal.
- Be careful of oil seal direction.
- Cam ring, rotor and vanes must be replaced as a set if necessary.
- Coat each part with ATF when assembling.

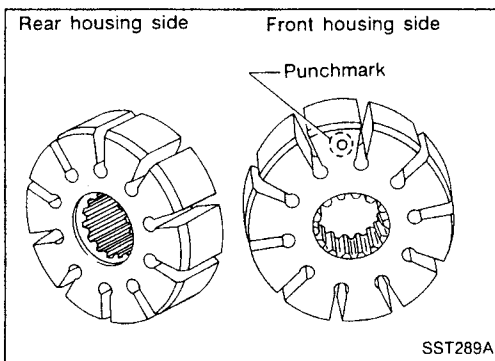

- Pay attention to the direction of rotor.

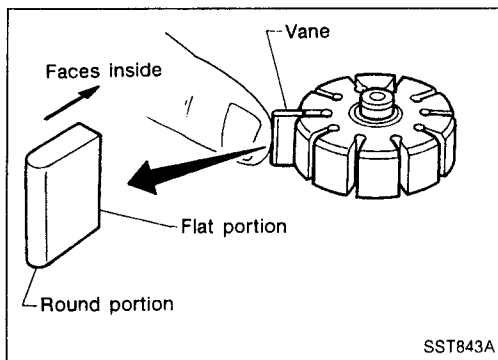

- When assembling vanes to rotor, rounded surfaces of vanes must face cam ring side.

ST


POWER STEERING OIL PUMP

Assembly (Cont'd)

- Insert pin ② into pin groove ① of front housing and rotor. Then install cam ring ③ as shown at left.


Cam ring:

D_1 is less than D_2

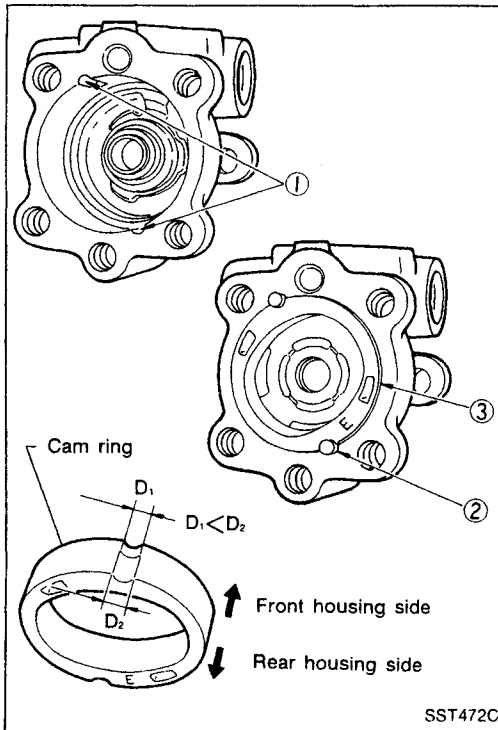

POWER STEERING OIL COOLER

Oil Cooler (Heavy duty kit for CD20 engine model)

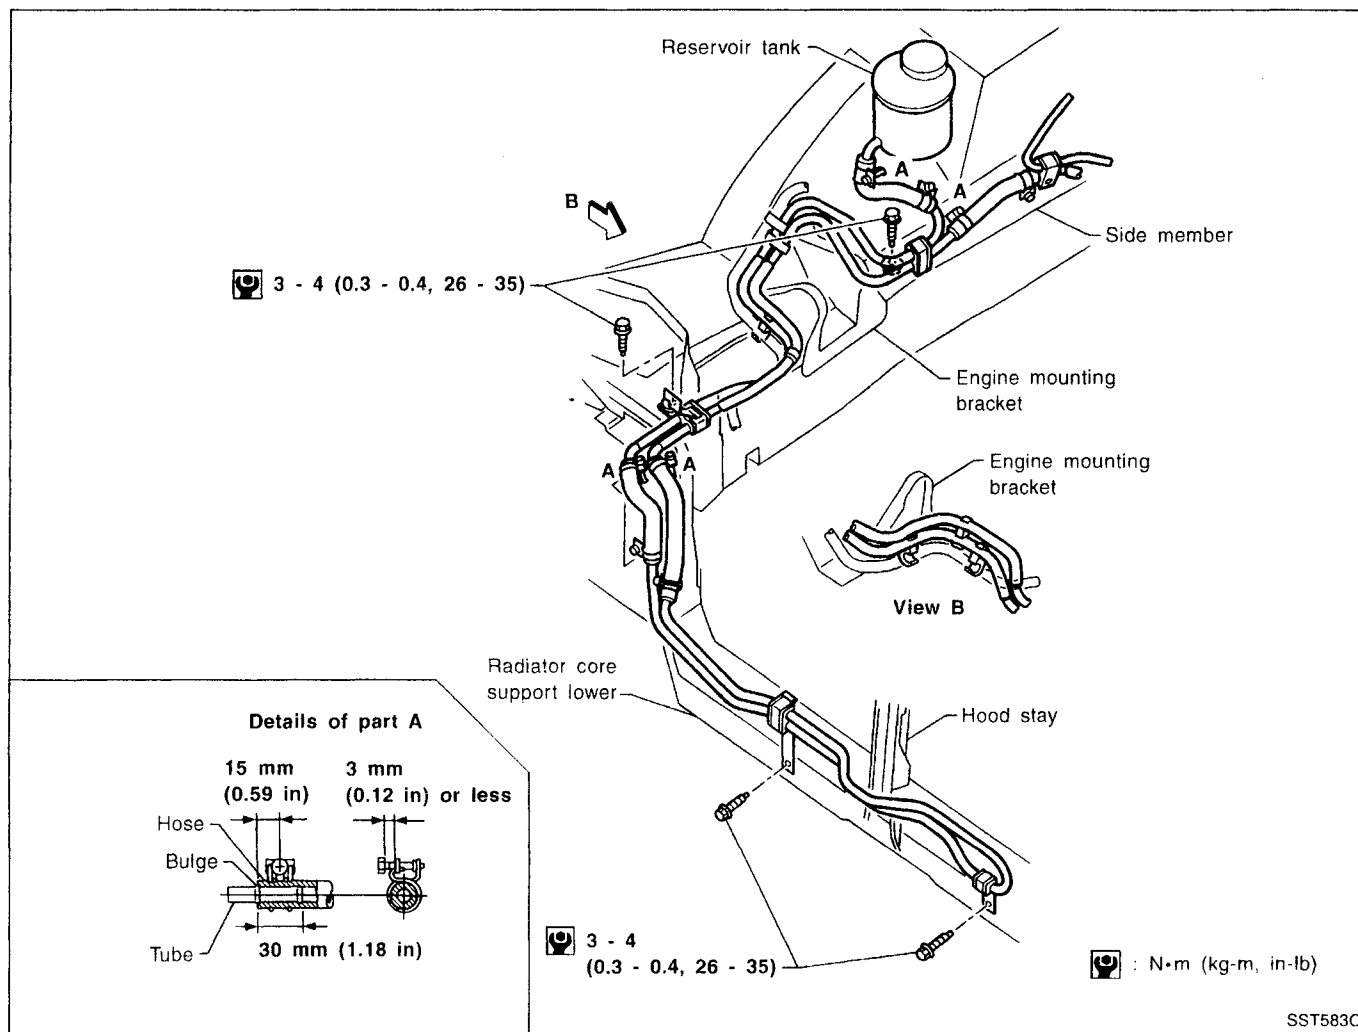

Removal and Installation

- Install heavy duty kit for power steering oil cooler as shown in figure.
- Fill fluid and bleed hydraulic system. Refer to ST-7.
- Check fluid leakage and fluid level. Refer to ST-6.

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

Applied model	GA engine model		CD and SR engine models
Steering model	Manual steering	Power steering	
Steering gear type	R24N	PR24AC	
Steering overall gear ratio	23.2	17.1	
Turns of steering wheel (Lock to lock)	4.21	3.17	2.95
Steering column type	Collapsible, tilt		


Inspection and Adjustment

GENERAL

Steering wheel axial play mm (in)	0 (0)
Steering wheel play mm (in)	35 (1.38) or less
Movement of gear housing mm (in)	± 2 (± 0.08) or less

STEERING COLUMN

Applied model	All
Steering column length "L" mm (in)	533.0 - 535.0 (20.98 - 21.06)

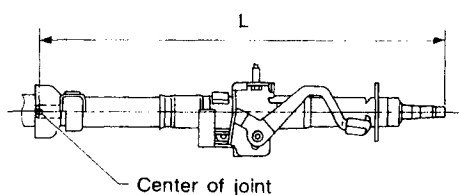

SST334C


SERVICE DATA AND SPECIFICATIONS (SDS)

Inspection and Adjustment (Cont'd)

STEERING GEAR AND LINKAGE

Applied model	GA engine model		CD and SR engine models
Steering gear type	R24N	PR24AC	
Tie-rod outer ball joint			
Swinging force at cotter pin hole: "A" N (kg, lb)	6.9 - 64.7 (0.7 - 6.6, 1.5 - 14.6)		
Rotating torque: "B" N·m (kg-cm, in-lb)	0.29 - 2.94 (3.0 - 30.0, 2.6 - 26.0)		
Axial end play: "C" mm (in)	0.5 (0.020) or less		
Tie-rod inner ball joint			
Swinging force*: "A" N (kg, lb)	3.9 - 53.0 (0.4 - 5.4, 0.9 - 11.9)	6.9 - 56.9 (0.7 - 5.8, 1.5 - 12.8)	
Axial end play: "C" mm (in)	0.4 (0.016)	0 (0)	
Tie-rod standard length "L" mm (in)	187 (7.36)		


*: Measuring point [f: 137 mm (5.39 in)]

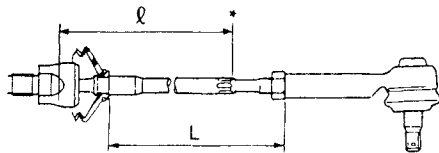

SST488C

Retainer adjustment		
Adjusting screw		
Initial tightening torque N·m (kg-cm, in-lb)	9.8 (100, 87)	4.9 - 5.9 (50 - 60, 43 - 52)
Retightening torque after loosening N·m (kg-cm, in-lb)	—	0.2 (2, 1.7)
Tightening torque after gear has settled N·m (kg-cm, in-lb)	—	4.9 (50, 43)
Returning angle degree	Less than 60° [Within play of 0.1 mm (0.004 in)/15 N·m (1.5 kg-m, 11 ft-lb)]	70° - 110°

Applied model	GA engine model		CD and SR engine models
Steering gear type	R24N	PR24AC	
Rack stroke "S" mm (in)	70 (2.76)	65 (2.56)	

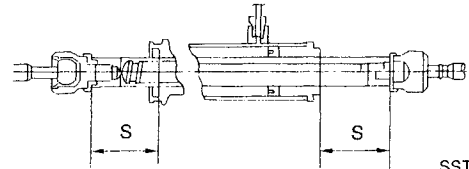

SST086BA

POWER STEERING

Applied model	All
Steering gear type	PR24AC
Rack sliding force N (kg, lb)	
Under normal operating oil pressure	
Range within ± 11.5 mm (± 0.453 in) from the neutral position at rack speed of 3.5 mm (0.138 in)/s	
Average force	152.0 - 240.3 (15.5 - 24.5, 34.2 - 54.0)
Maximum force deviation	98 (10, 22)
Except for the above range	
Maximum sliding force	294 (30, 66)
Maximum force deviation	147 (15, 33)
Steering wheel turning force (Measured at one full turn from the neutral position) N (kg, lb)	39 (4, 9) or less
Fluid capacity (Approximate) ℓ (Imp qt)	0.9 (3/4)
Oil pump maximum pressure kPa (bar, kg/cm², psi)	7,649 - 8,238 (76.5 - 82.4, 78 - 84, 1,109 - 1,194)

ST