

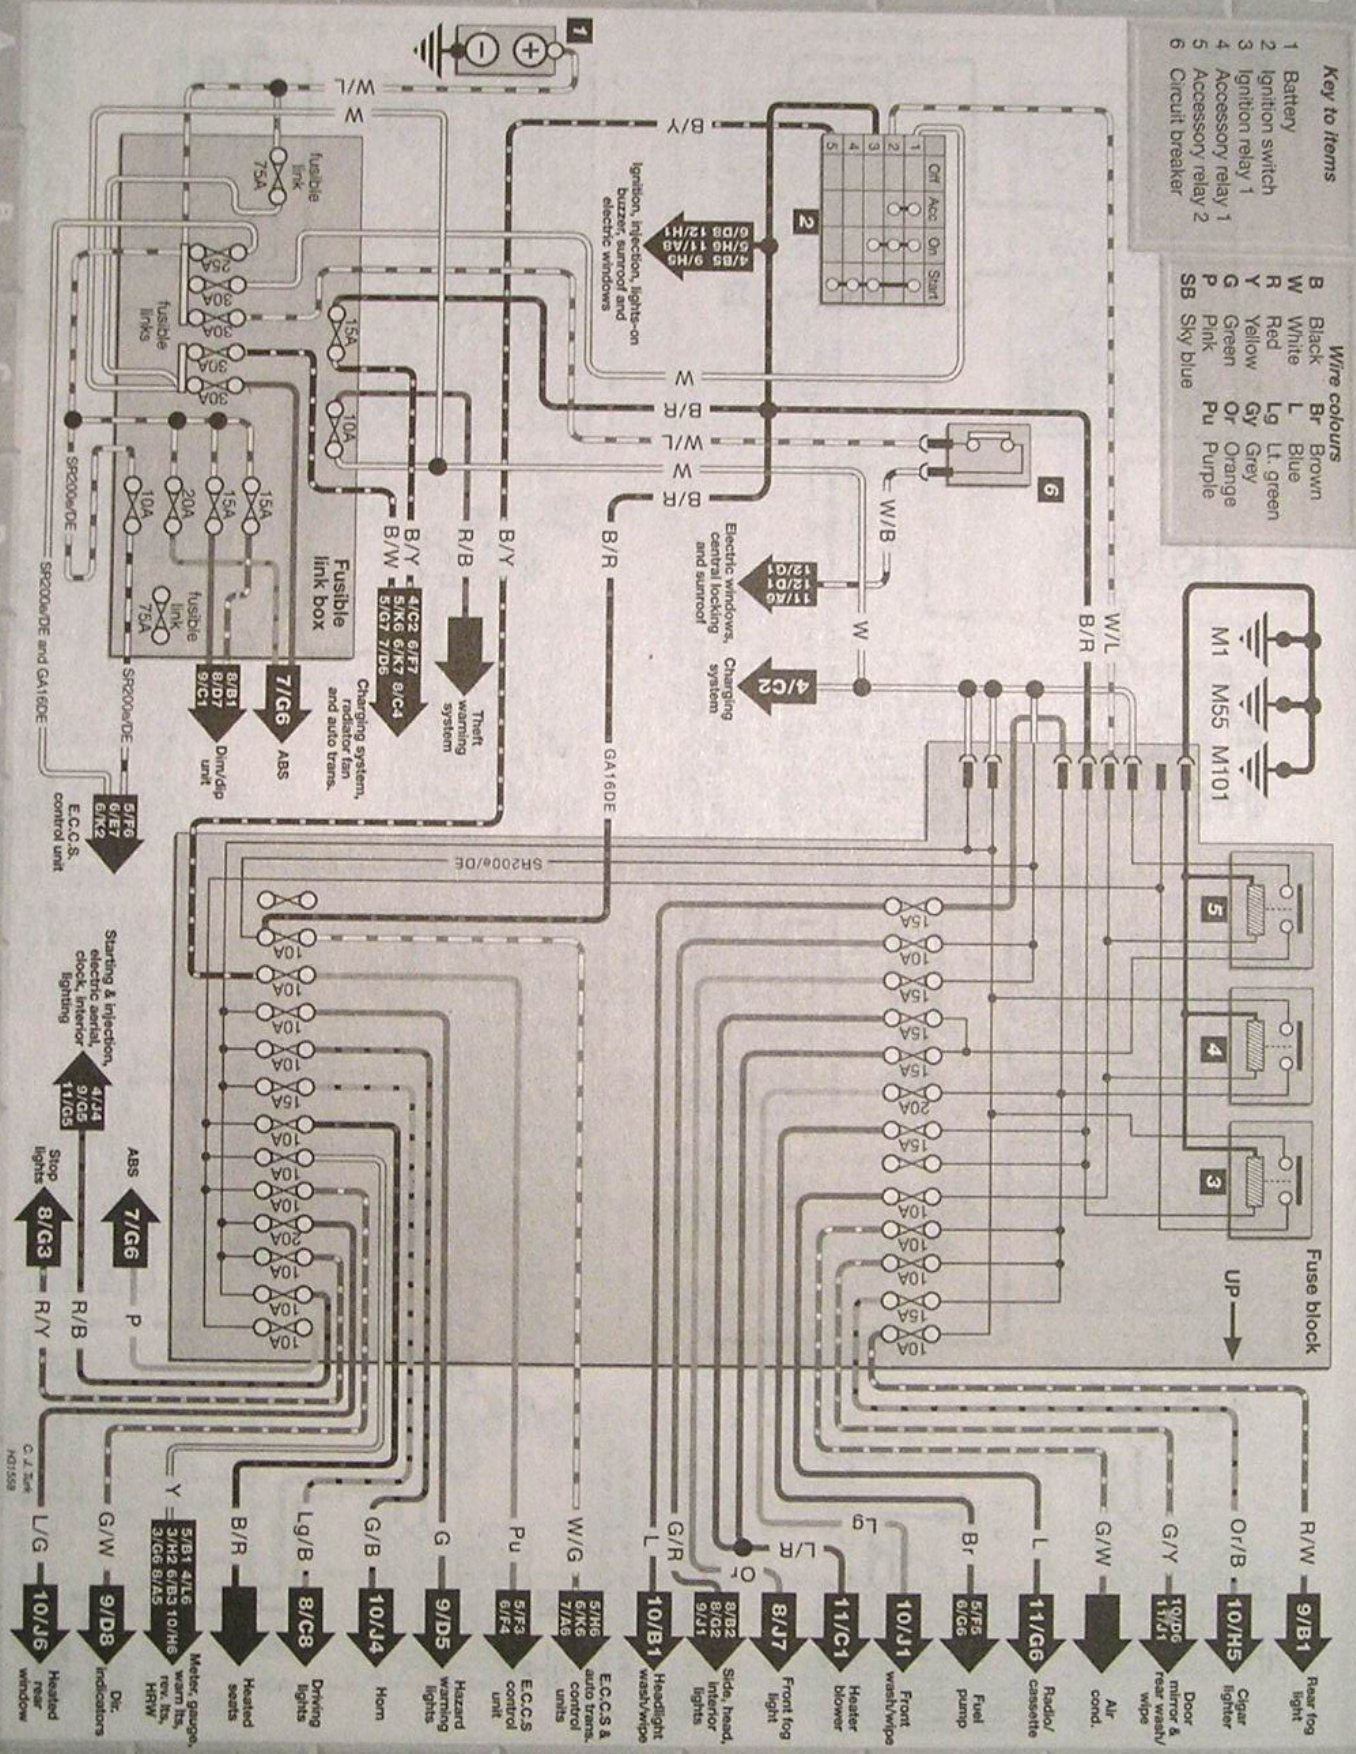


Diagram 2 : Typical power supply routing - models up to 1996

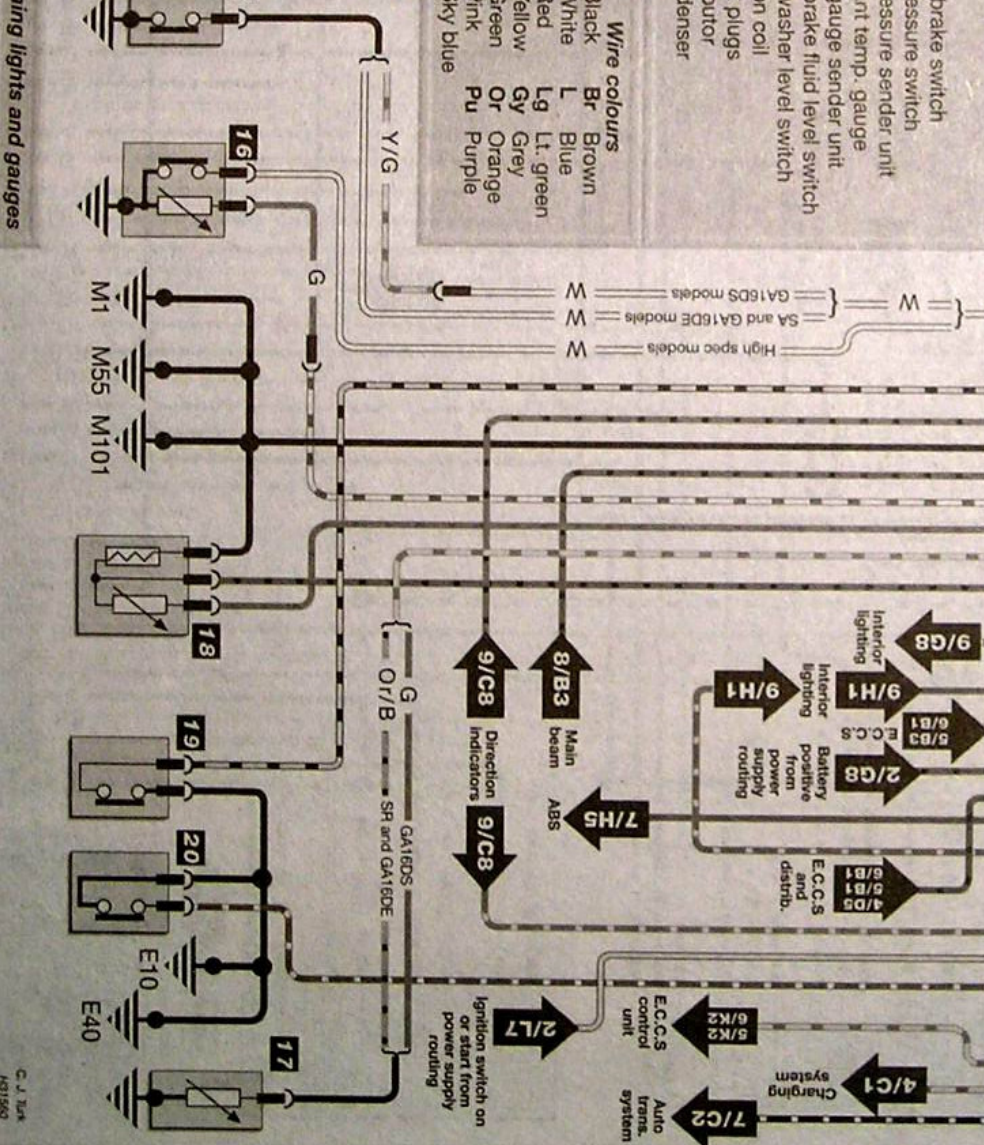
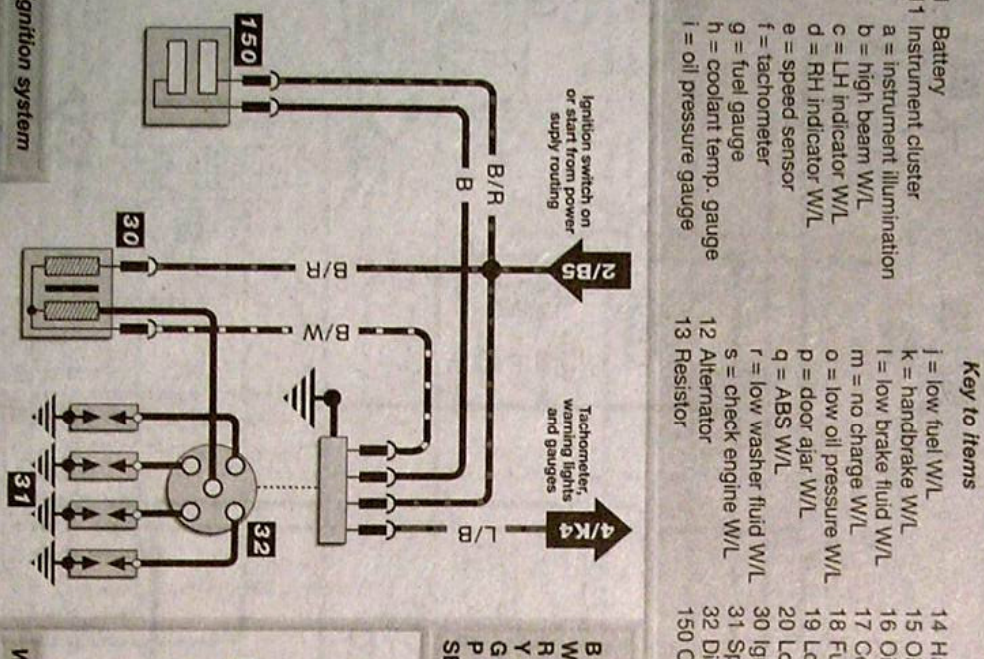
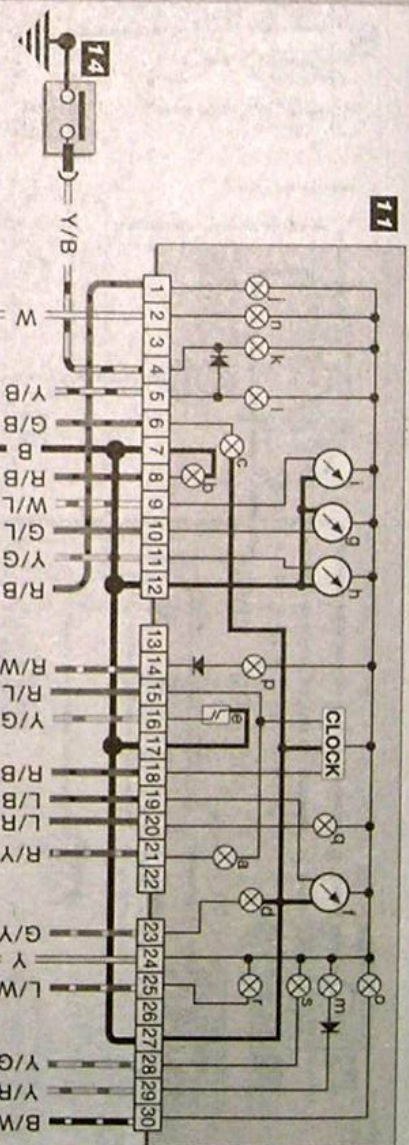
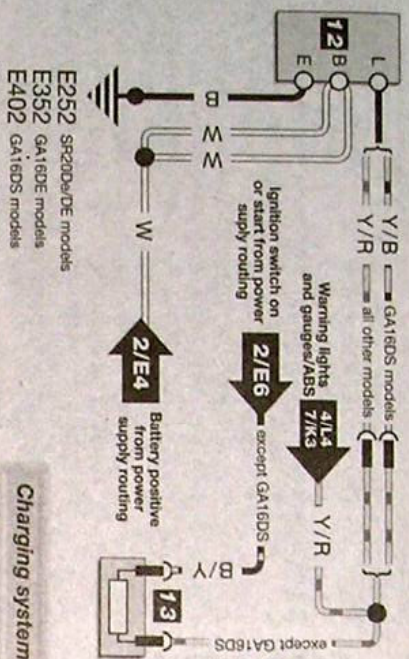
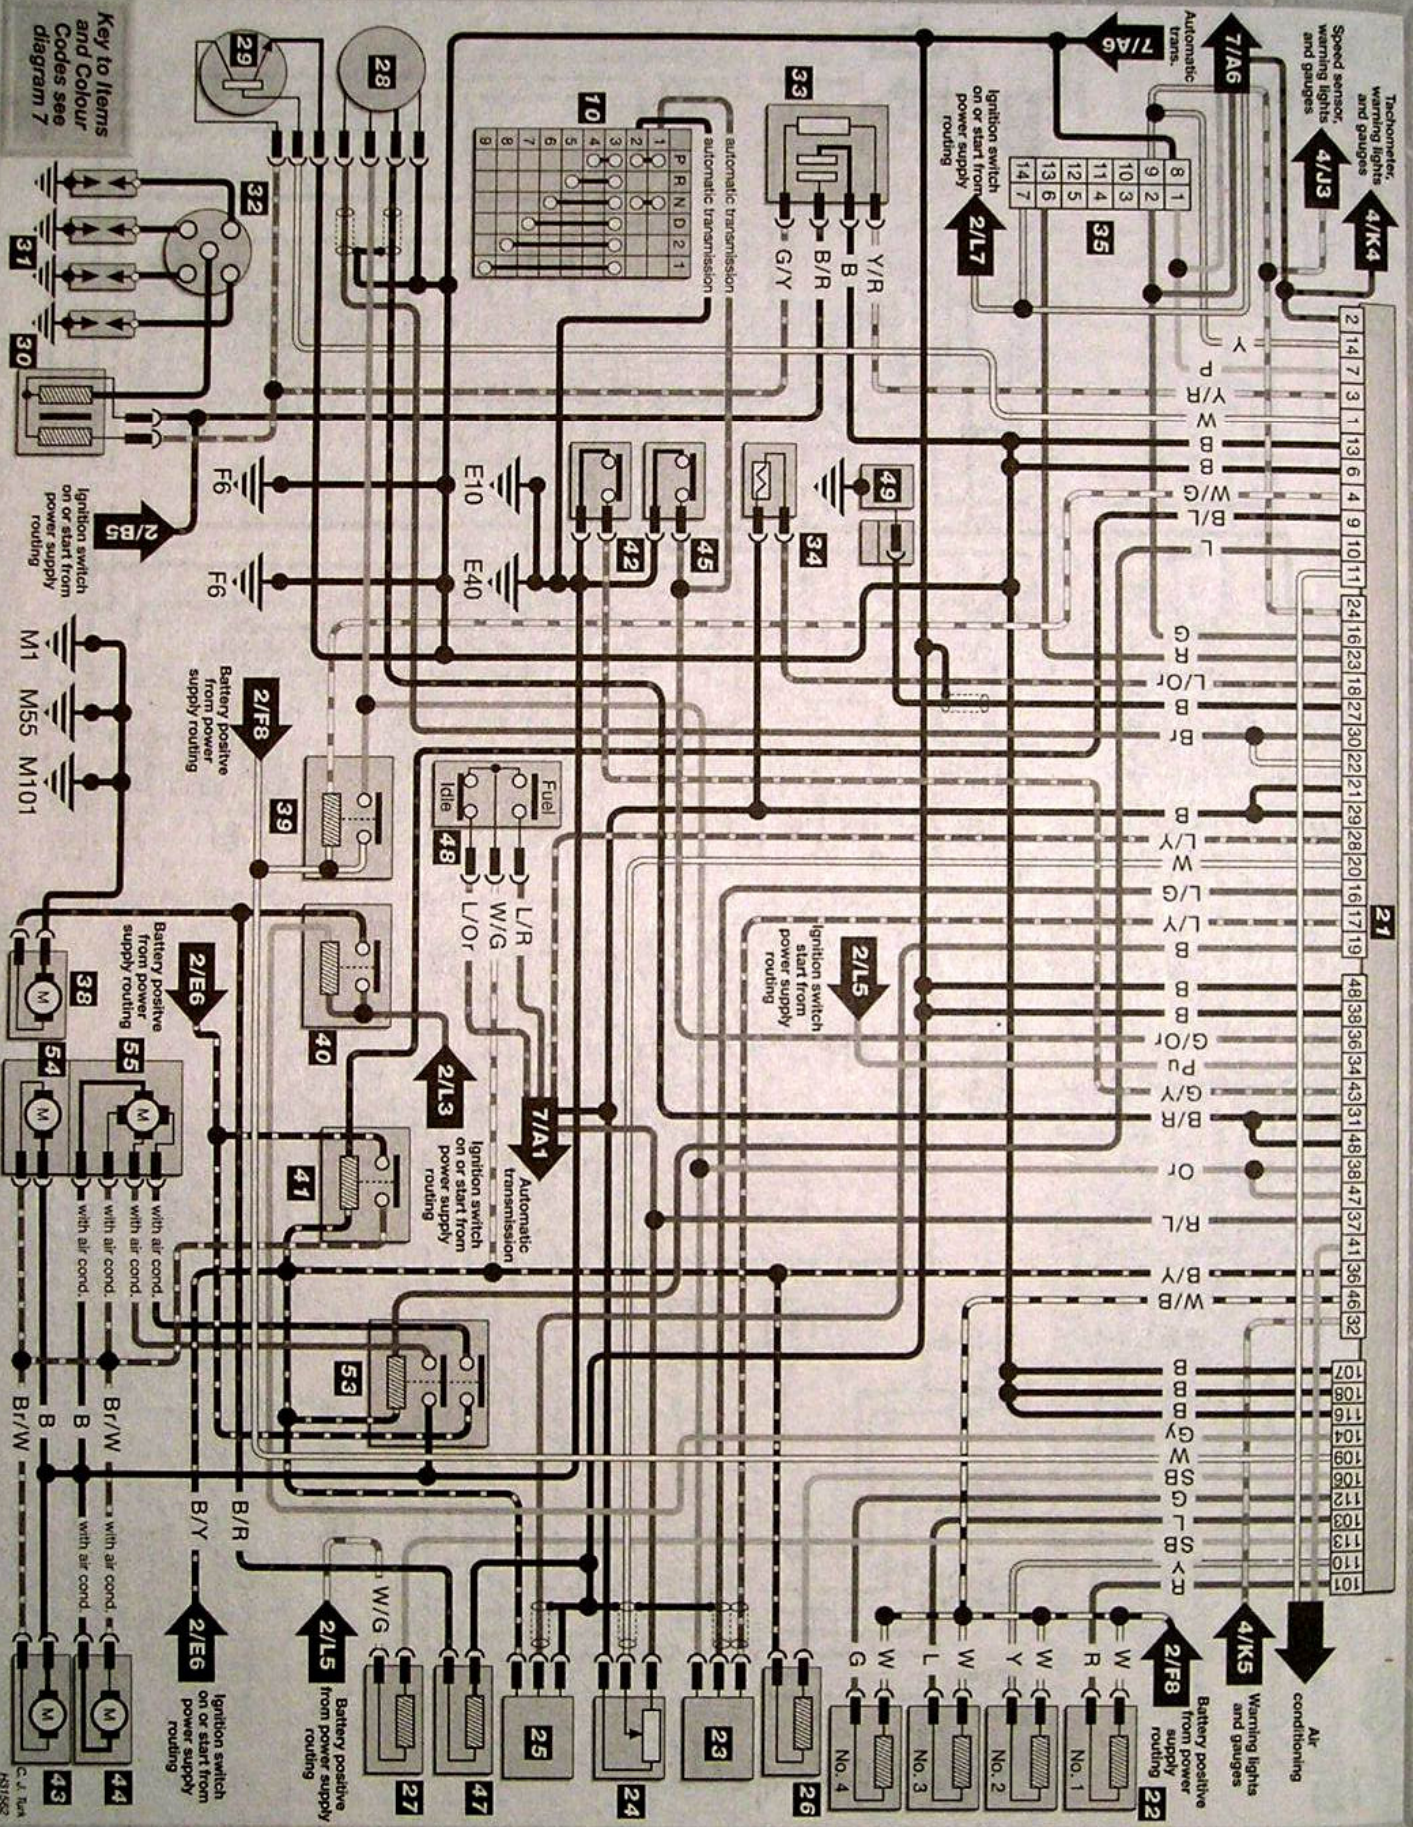


Diagram 4 : Typical charging system, ignition system, warning lights and gauges - models up to 1996

Diagram 6 : Typical multi-point fuel injection system 2.0 litre engine - models up to 1996





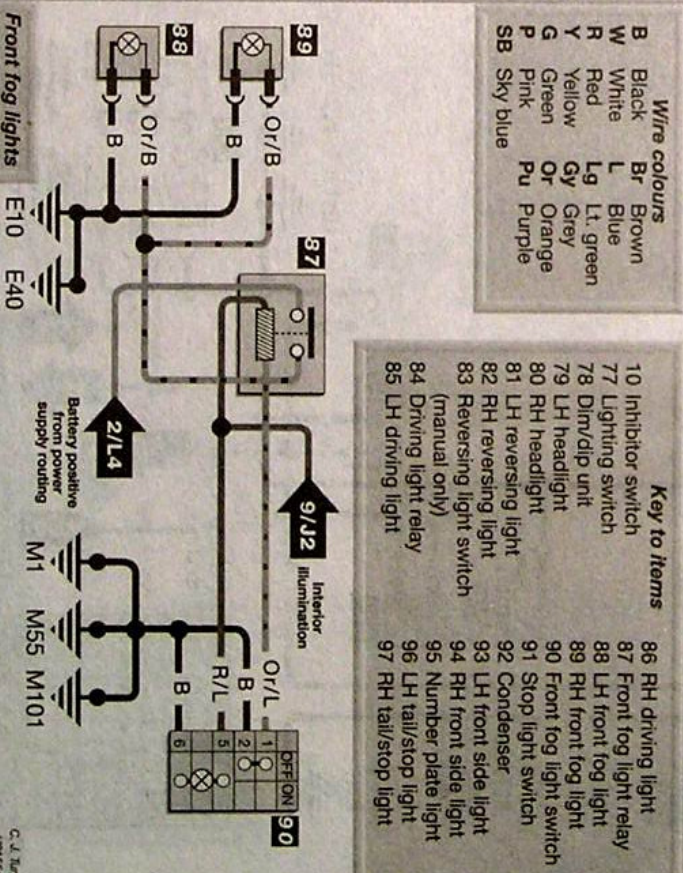


Diagram 8 : Typical exterior lighting - models up to 1996

Diagram 10 : Typical wash/wipe system, horn, cigar lighter and heated rear window - models up to 1996

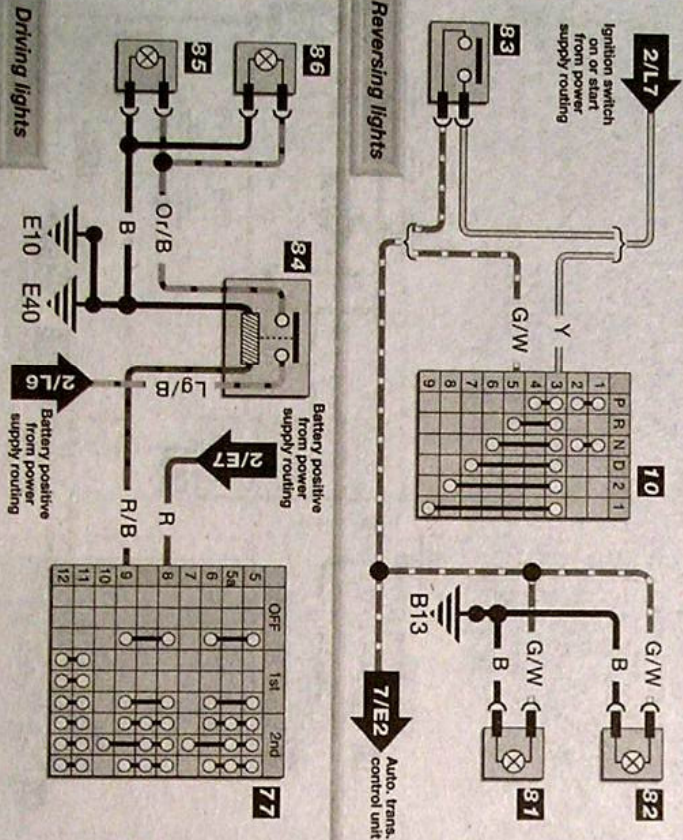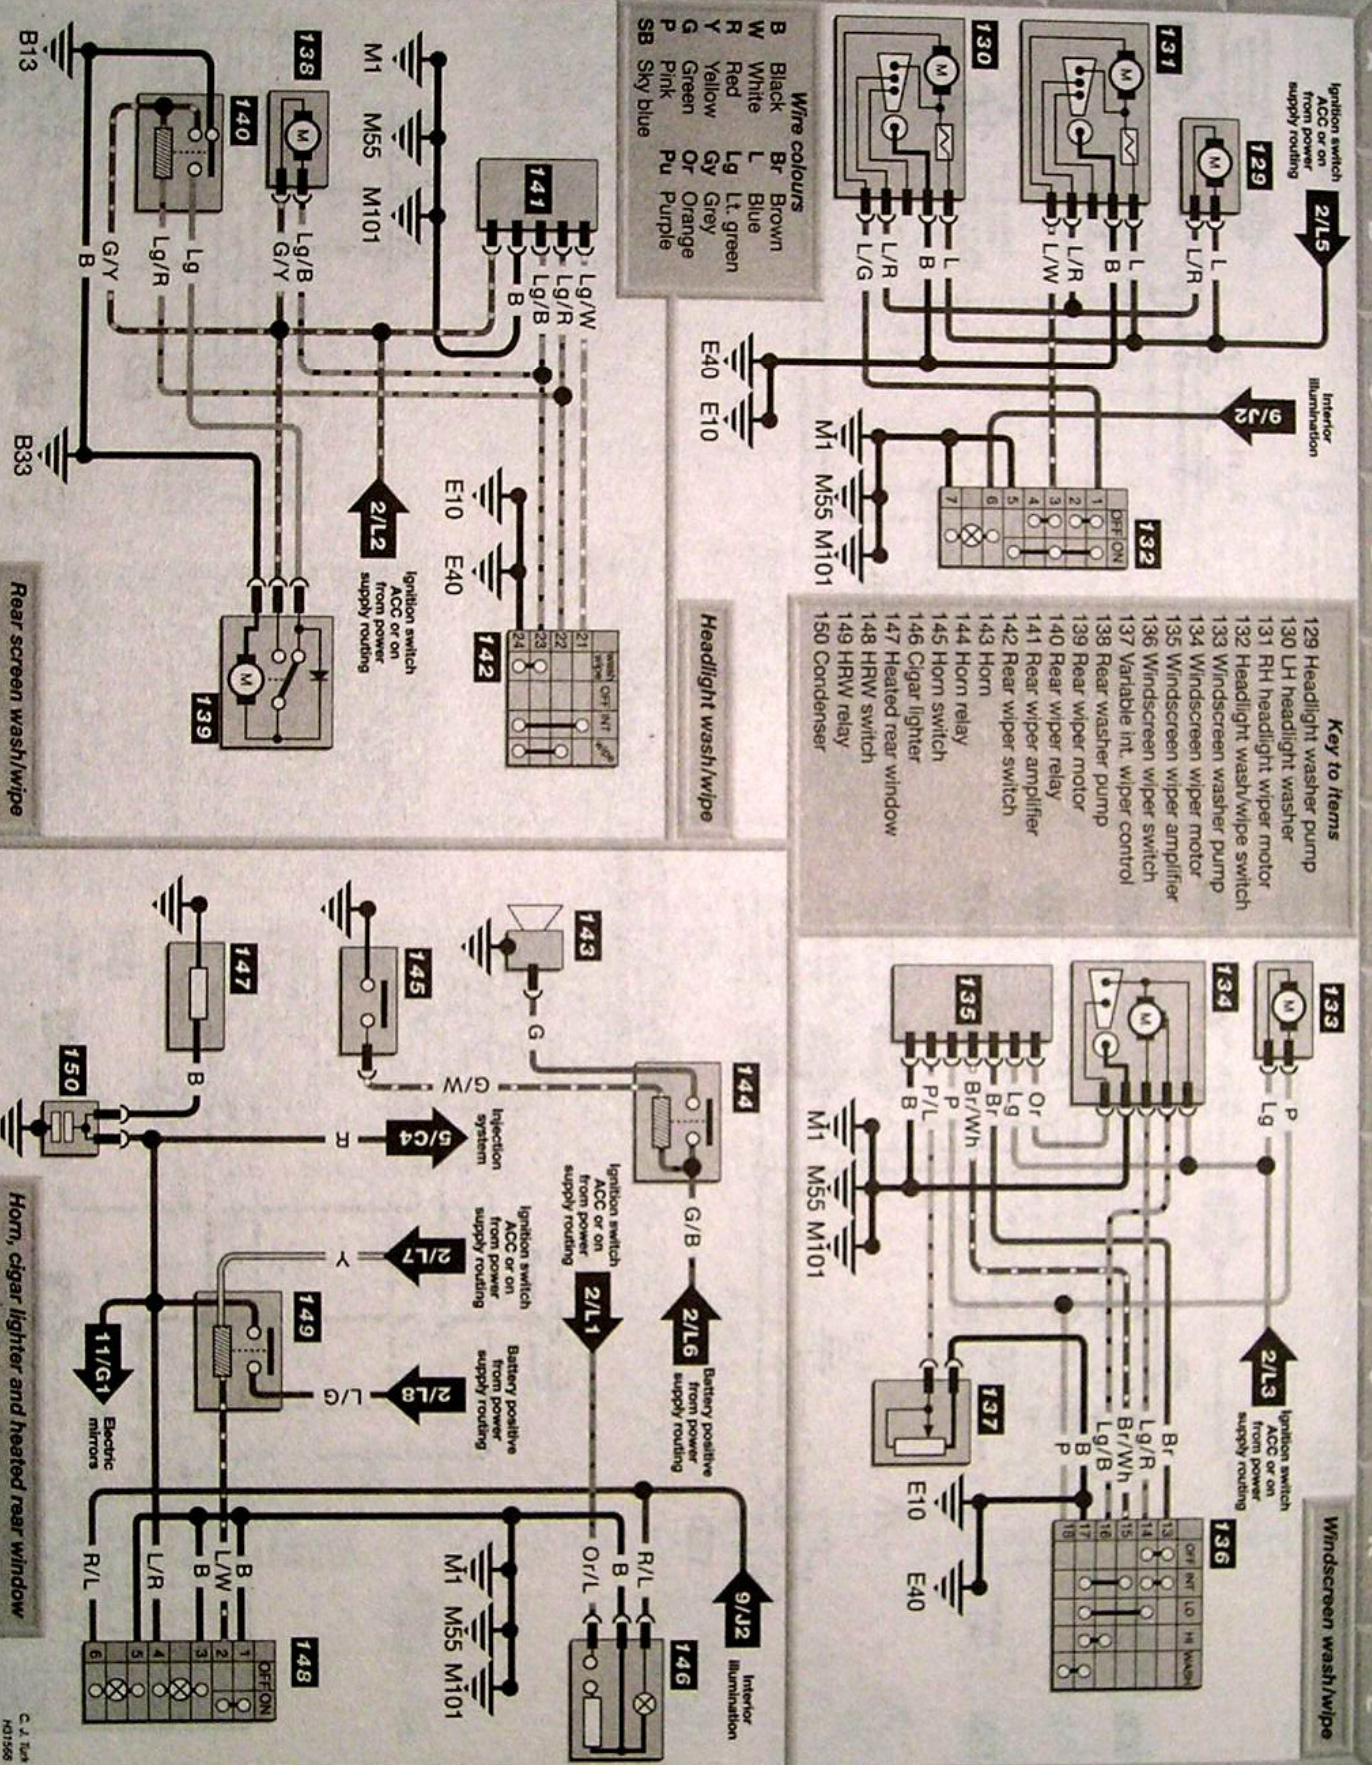

C. J. T. 104
H01566





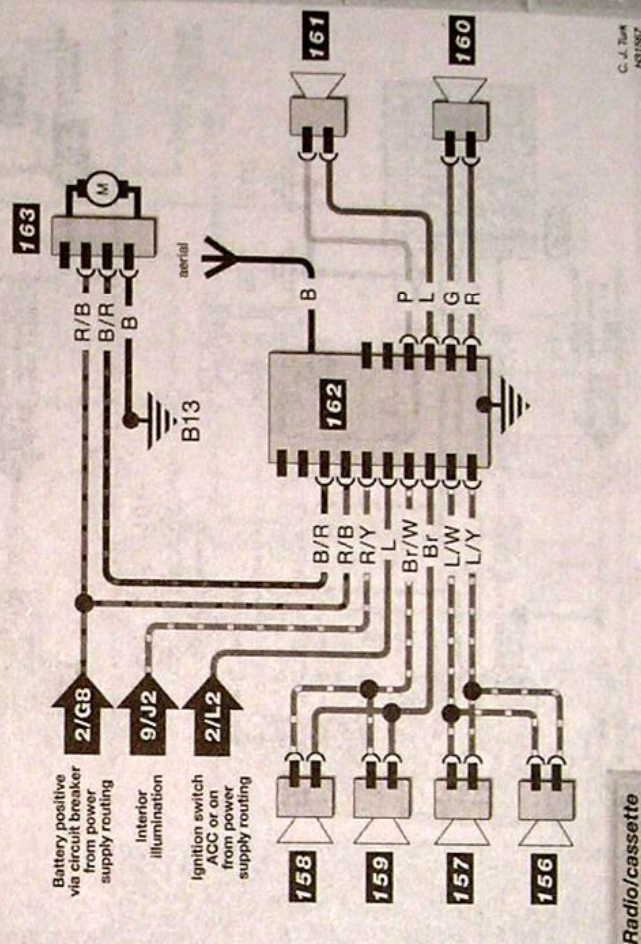


Diagram 11 : Typical heater blower, electric mirrors, sunroof and radio/cassette - models up to 1996


Rear fog lights

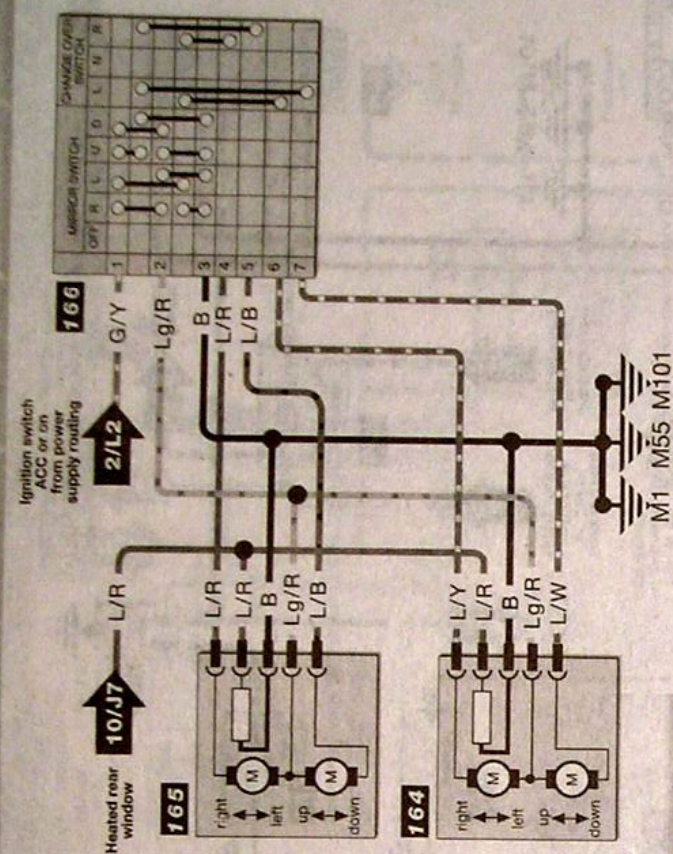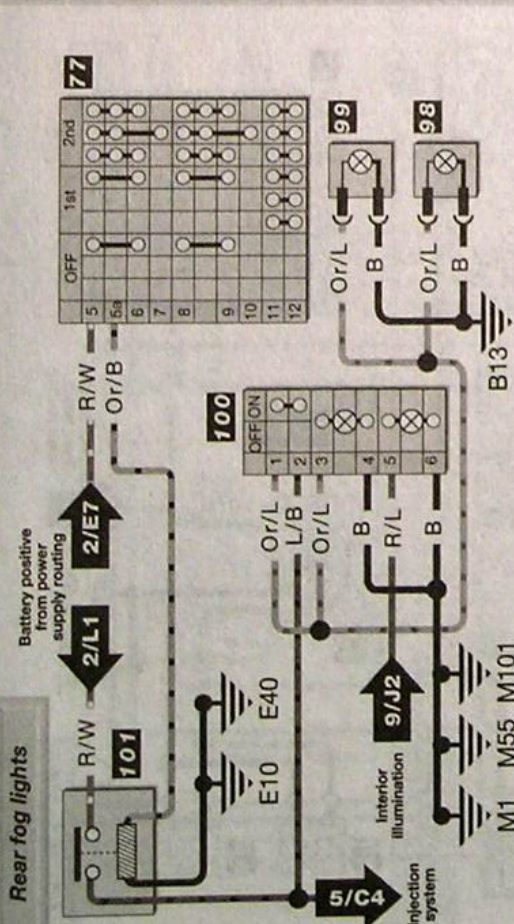


Key to items

- 77 Lighting switch
- 98 LH rear foglight
- 99 RH rear foglight
- 100 Rear foglight switch
- 101 Rear foglight relay
- 102 Indicator switch
- 103 Indicator flasher relay
- 104 Hazard flasher switch
- 105 LH front indicator
- 106 LH side indicator
- 107 LH rear indicator
- 118 LH vanity mirror light
- 119 RH vanity mirror light
- 120 Diode
- 121 Luggage comp. light
- 122 Luggage comp. light switch
- 123 Driver's door switch
- 124 Driver's rear door switch
- 125 Passenger's door switch
- 126 Passenger's rear door switch
- 127 Ignition relay 2
- 128 Lights on buzzer

Turn signal/hazard warning lights

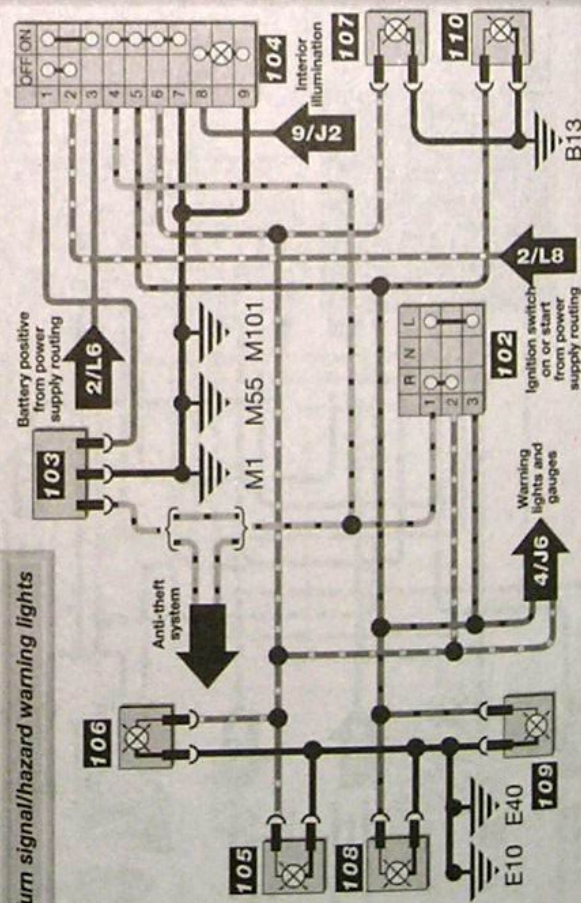


Interior lighting

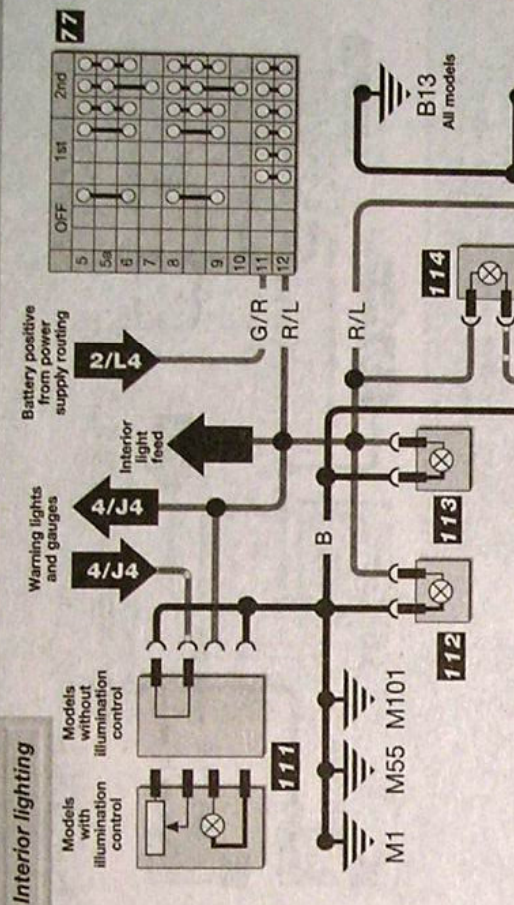

Wire colours


- Black Br Brown
- White L Blue
- Red Lg Lt. green
- Yellow Gy Grey
- Green Or Orange
- Pink Pu Purple
- Sky blue SB

Battery positive from power supply routing

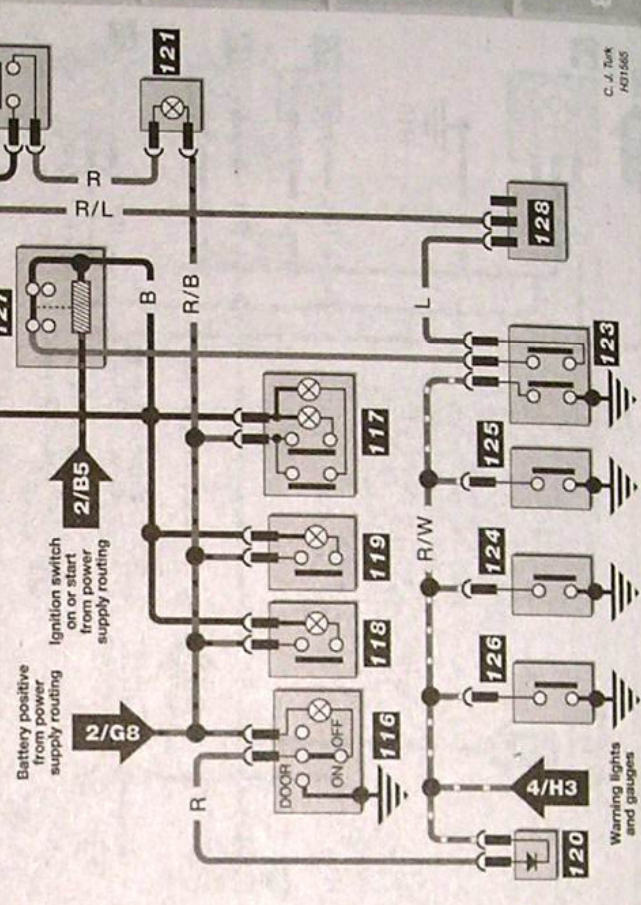

Fuel Injection

Automatic transmission control system

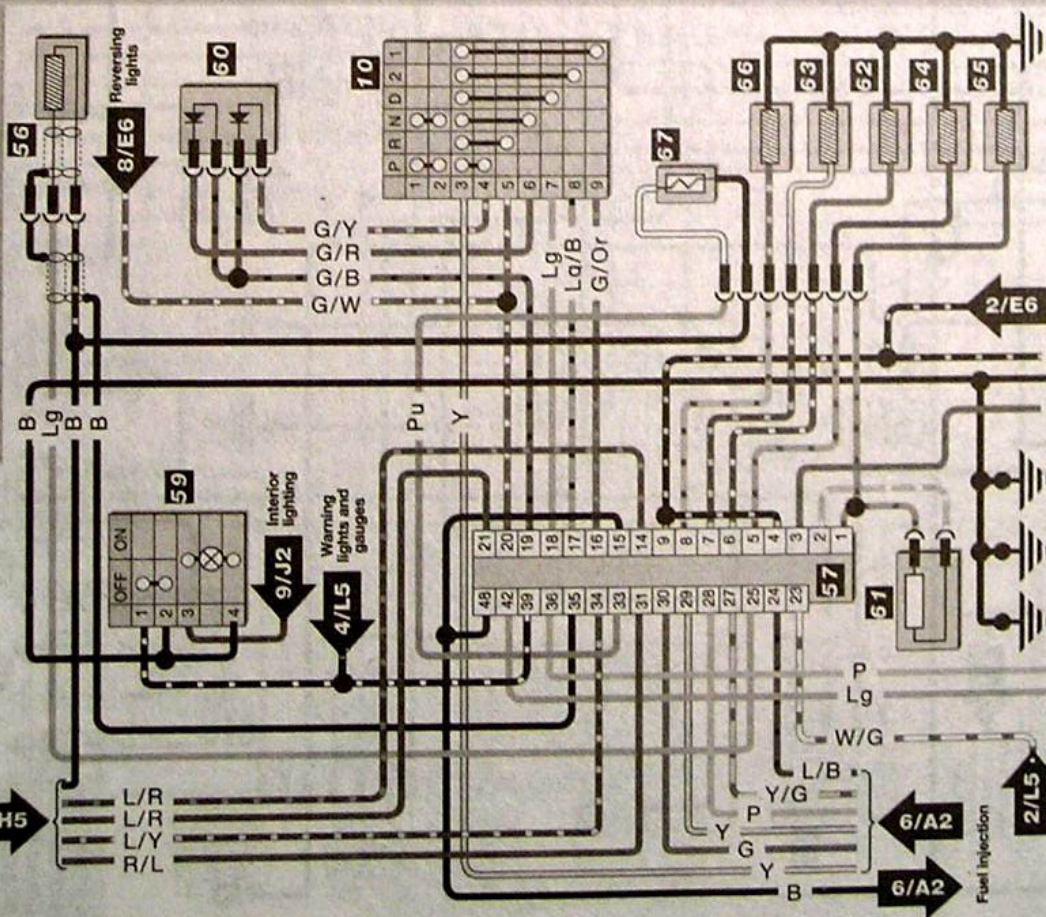


Wire colours
 B Black
 W White
 R Red
 Y Yellow
 G Green
 P Pink
 SB Sky blue
 Br Brown
 L Blue
 Lg Lt. green
 Gy Grey
 Or Orange
 Pu Purple

Anti-lock braking system

Key to items - WD 07

- 10 Inhibitor switch
- 56 Revolution sensor
- 57 Auto. trans control unit
- 58 Auto. trans mode switch
- 59 Overdrive control unit
- 60 Diode
- 61 Dropping resistor
- 62 Shift solenoid valve A
- 63 Shift solenoid valve B
- 64 Torque converter clutch solenoid
- 65 Line pressure solenoid valve
- 66 Overrun clutch solenoid valve
- 67 Fluid temp. sensor
- 68 ABS control unit
- 69 ABS motor
- 70 ABS motor relay
- 71 Solenoid valve relay
- 72 Solenoid valves
- 73 Wheel sensor LH front
- 74 Wheel sensor LH rear
- 75 Wheel sensor RH front
- 76 Wheel sensor RH rear

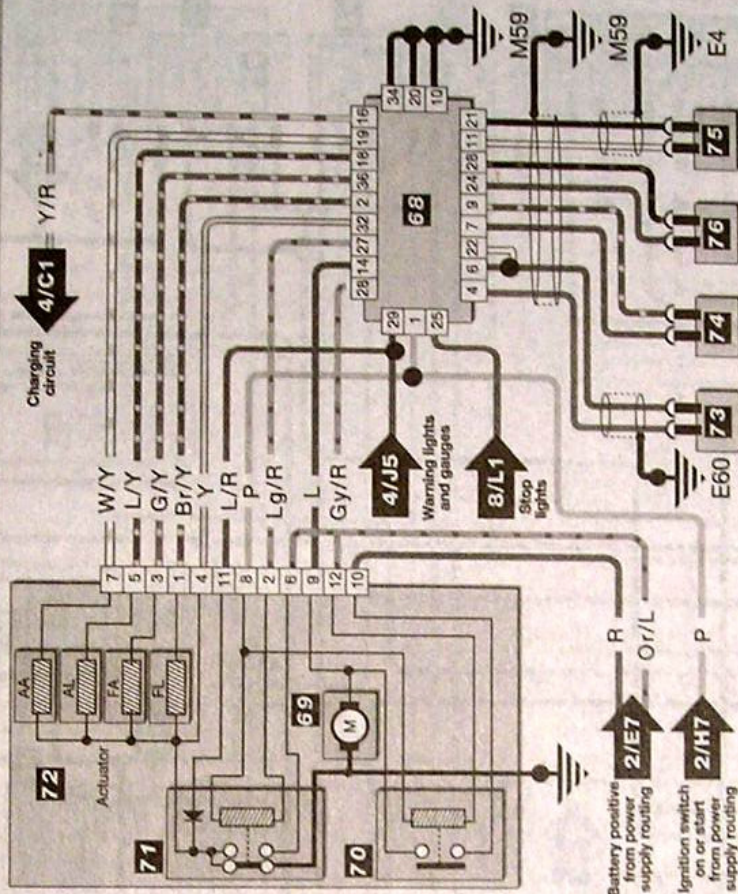

Key to items - WD 06

- 10 Inhibitor switch
- 21 E.C.C.S. control unit
- 22 Fuel injectors
- 23 Air flow meter
- 24 Throttle sensor
- 25 Exhaust gas sensor
- 26 E.G.A. & canister control solenoid valve
- 27 A.A.C valve
- 28 Crank angle sensor
- 29 Power transistor
- 30 Ignition coil
- 31 Spark plugs
- 32 Distributor
- 33 Resistor & condenser
- 34 Engine temp. sensor
- 35 Diagnostic connector
- 38 Fuel pump
- 39 E.C.C.S. relay
- 40 Fuel pump relay
- 41 Radiator fan relay 1
- 42 Power steering pressure switch
- 43 Radiator fan motor 1 (manual)
- 44 Radiator fan motor 2 (manual)
- 45 Neutral switch (manual)
- 47 Air regulator
- 48 Throttle valve switch (auto.)
- 49 Detonation sensor
- 53 Radiator fan relay 2 (auto.)
- 54 Radiator fan motor 1 (auto.)
- 55 Radiator fan motor 2 (auto.)

Diagram 7 : Typical automatic transmission control system and Anti-lock Braking System (ABS) - models up to 1996

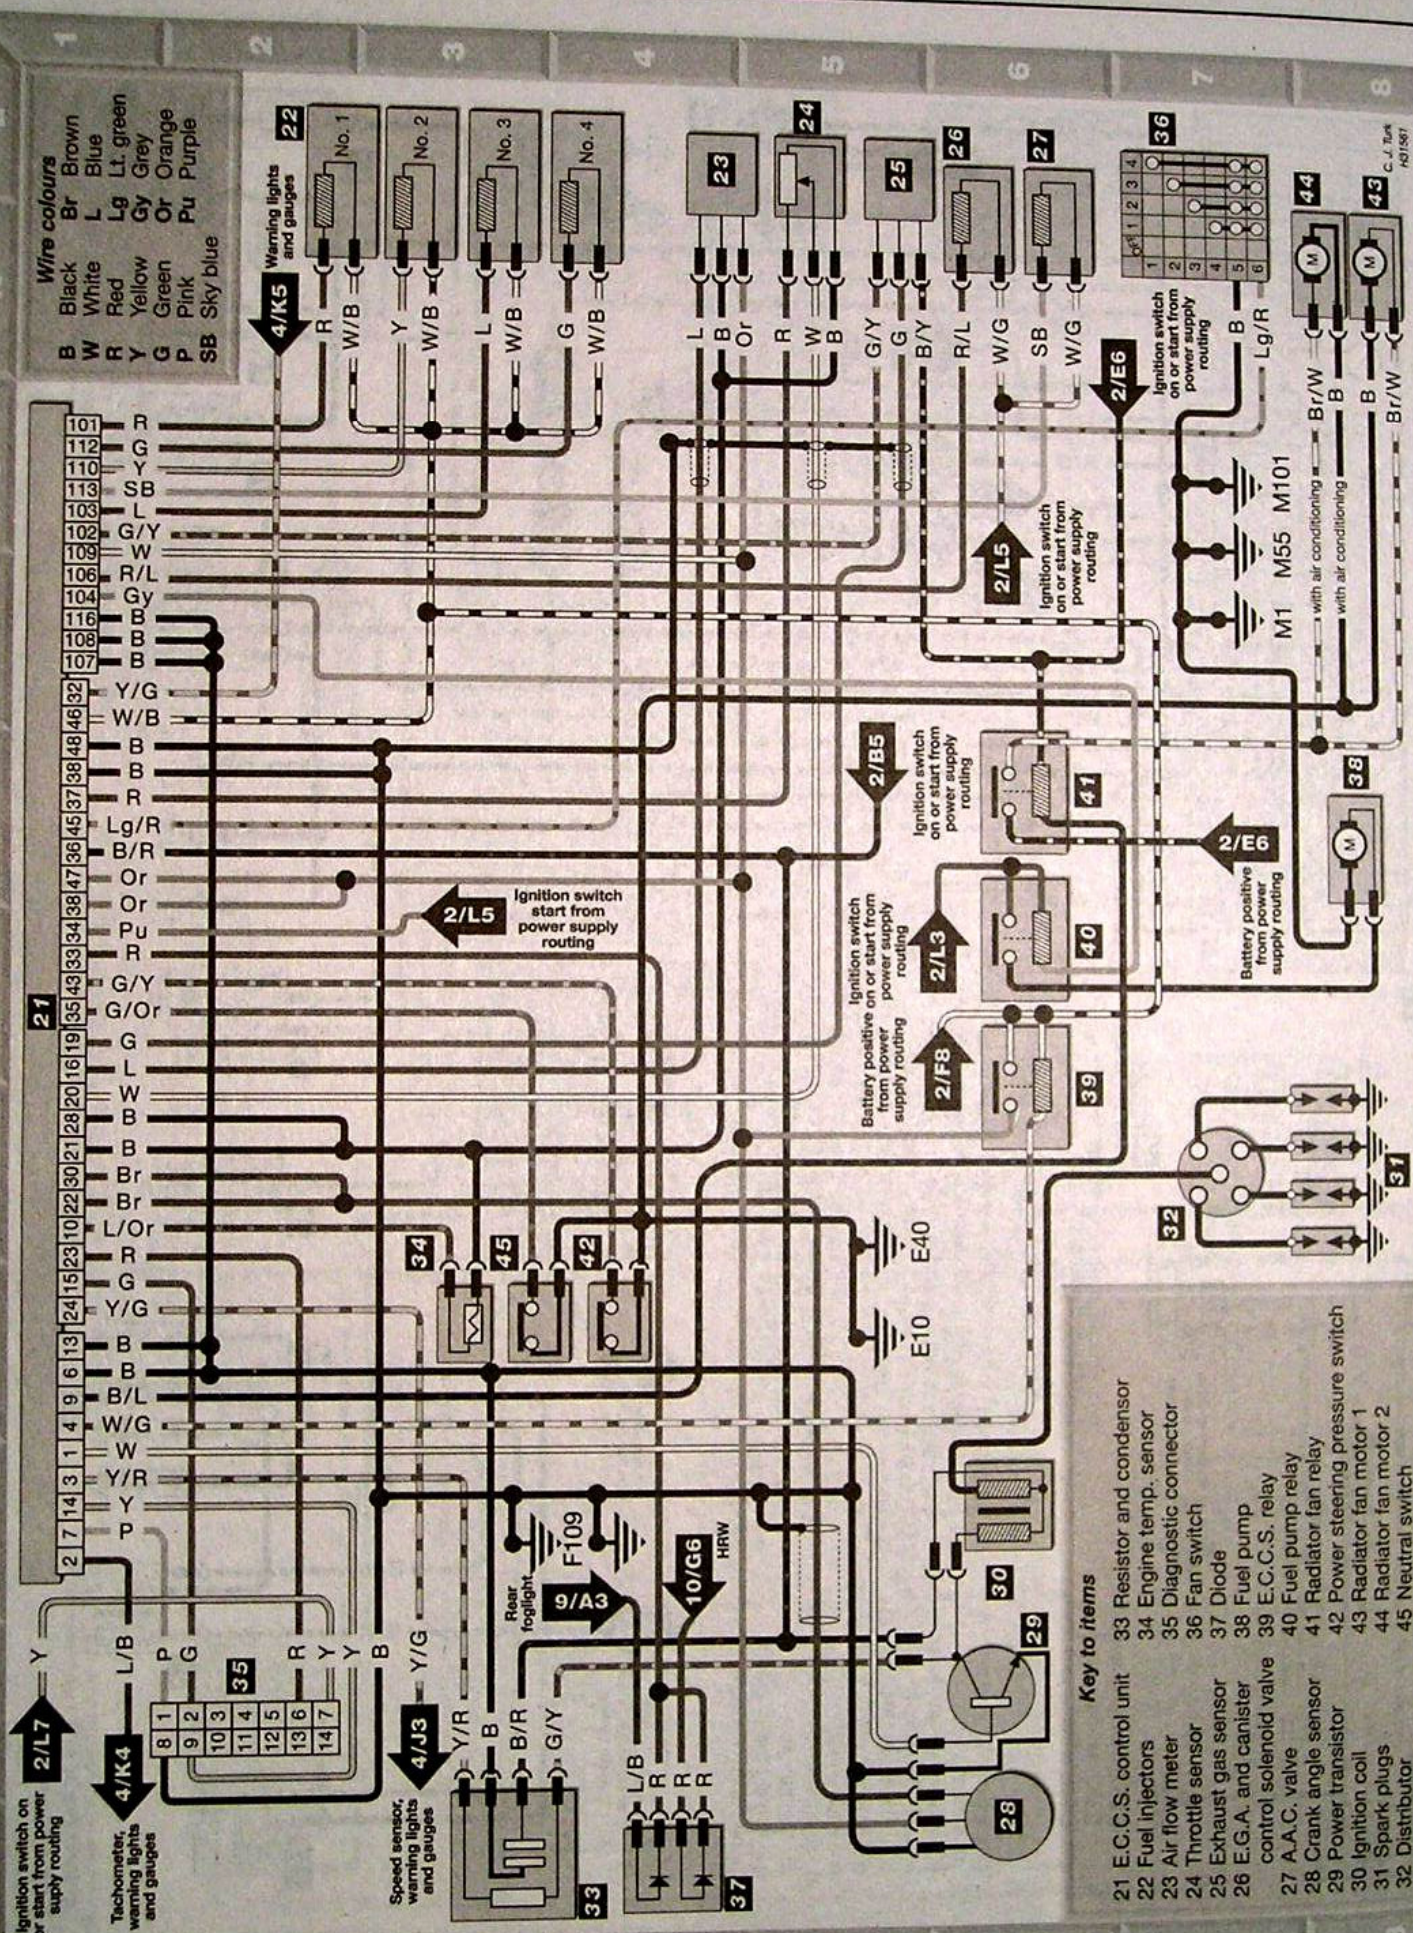


Diagram 5 : Typical multi-point fuel injection system - 1.6 litre engine


Manual transmission models without theft warning system

Key to items


- 1 Battery
- 2 Ignition switch
- 7 Starter motor
- 8 Theft warning relay
- 9 Inhibitor relay
- 10 Inhibitor switch

Wire colours


- | | | | |
|----|----------|----|-----------|
| B | Black | Br | Brown |
| W | White | L | Blue |
| R | Red | Lg | Lt. green |
| Y | Yellow | Gy | Grey |
| G | Green | Or | Orange |
| P | Pink | Pu | Purple |
| SB | Sky blue | | |

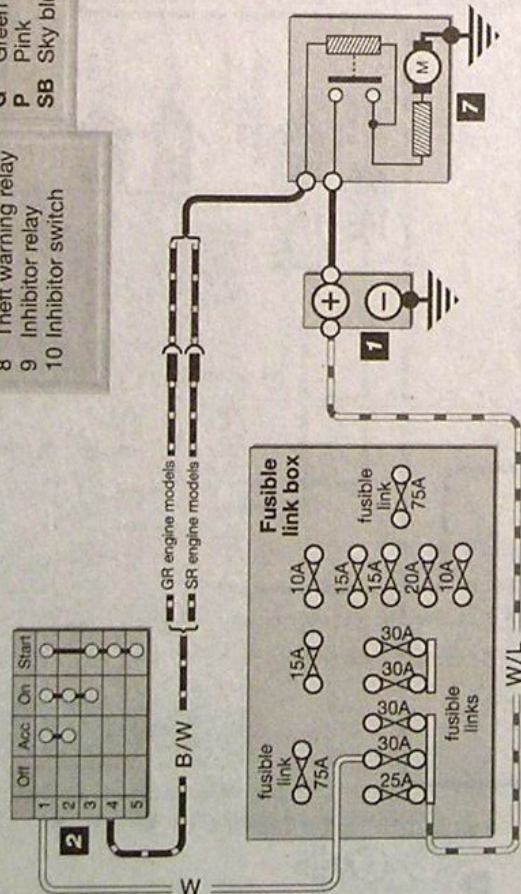


Automatic transmission models without theft warning device

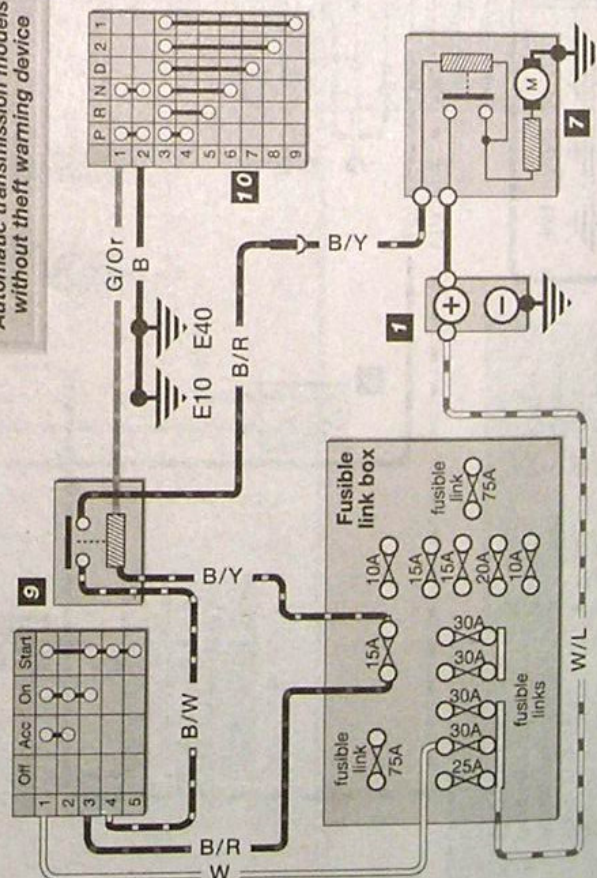

Automatic transmission models with theft warning system

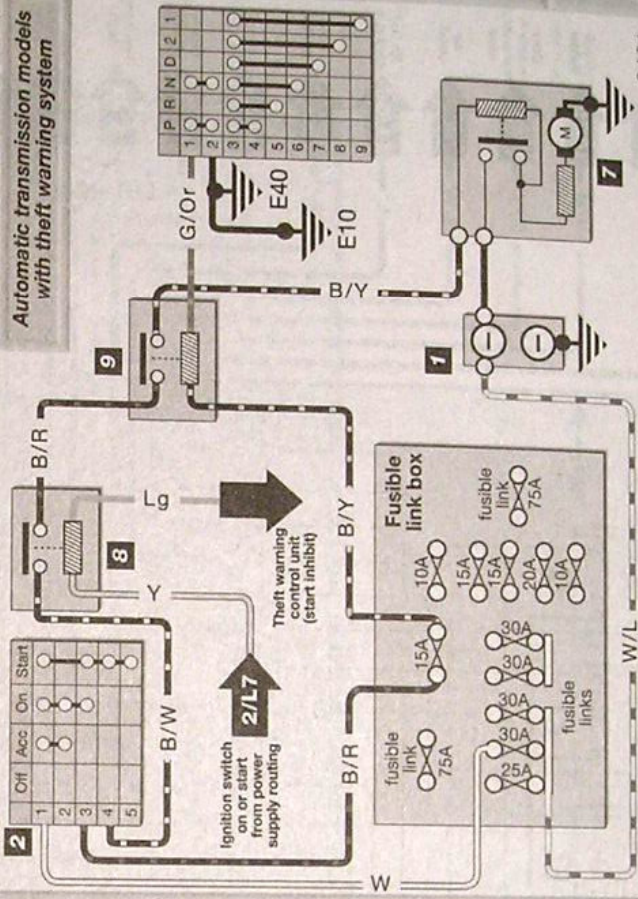

Manual transmission models with theft warning system

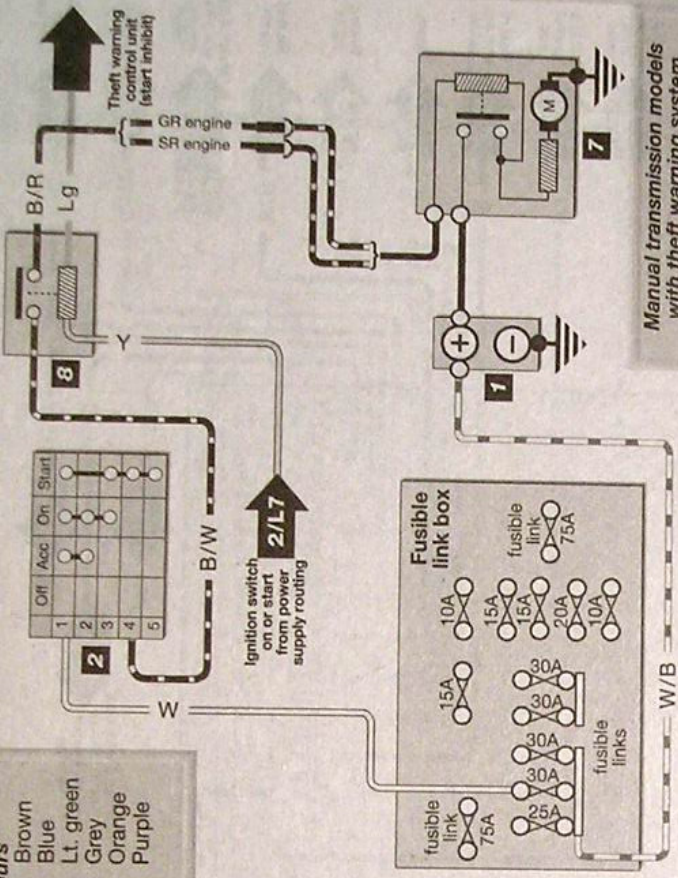

Key to symbols

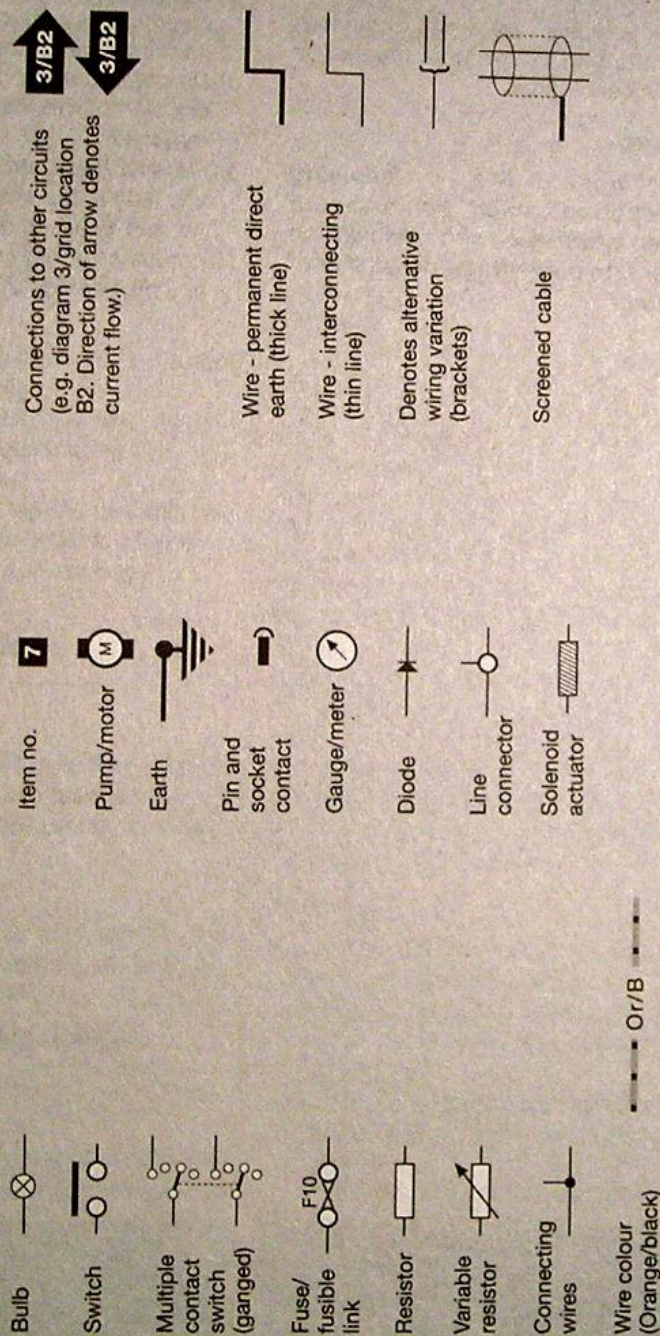


Diagram 1 : Information for wiring diagrams - models up to 1996