


## SUPER MULTIPLE JUNCTION (SMJ)

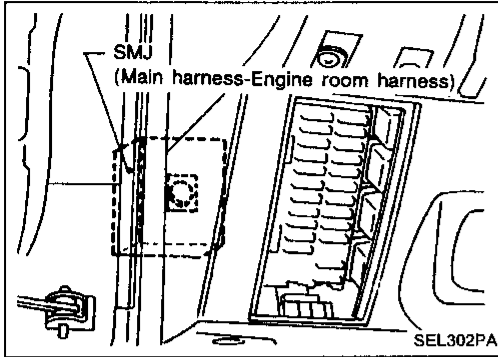


### INSTALLATION

To install SMJ, tighten to specified torque as required.

 : 3 - 5 N·m  
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

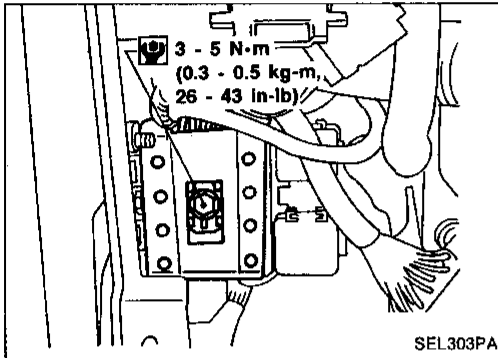



# JOINT CONNECTOR

## Terminal Arrangement

