

ALPHABETICAL INDEX

SECTION

IDX

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-318	A/C system description (auto A/C).....	HA-18
ABS (anti-lock brake system)	BR-33	A/C trouble diagnoses (auto A/C).....	HA-22
ABS - Wiring diagram	BR-38	A/C, A - Wiring diagram (auto A/C).....	HA-25
Absolute pressure sensor	EC-125	A/C, M - Wiring diagram (manual A/C).....	HA-125
A/C air flow (auto A/C)	HA-20	Accelerator control system	FE-2
A/C air flow (manual A/C)	HA-120	Accelerator wire adjustment	FE-2
A/C component location (auto A/C)	HA-14	Air bag.....	RS-10
A/C component location (manual A/C).....	HA-118	Air bag disposal	RS-23
A/C compressor clutch removal and installation (auto A/C)	HA-97	Air bag precautions	GI-2
A/C compressor clutch removal and installation (manual A/C)	HA-171	Air bleeding (hydraulic clutch)	CL-7
A/C compressor precaution (auto A/C).....	HA-6	Air bleeding for brake system	BR-7
A/C compressor precaution (manual A/C).....	HA-110	Air cleaner filter replacement.....	MA-17
A/C compressor special service tool (auto A/C)	HA-9	Air conditioner cut control	EC-26
A/C compressor special service tool (manual A/C).....	HA-113	Air flow meter - See Mass air flow sensor	EC-116
A/C control linkage adjustment (manual A/C)	HA-137, 141	Air mix door control linkage adjustment (auto A/C)	HA-49
A/C control operation (auto A/C).....	HA-18	Air mix door control linkage adjustment (manual A/C).....	HA-146
A/C control operation (manual A/C)	HA-119	Air mix. door motor (auto A/C).....	HA-47, 91
A/C diagnostic work flow (auto A/C).....	HA-36	Air mix. door motor (manual A/C)	HA-143
A/C diagnostic work flow (manual A/C)	HA-129	Air spoiler, rear	BT-24
A/C HFC134a (R134a) system precau- tion (auto A/C)	HA-2	AIRREG - Wiring diagram.....	EC-466
A/C HFC134a (R134a) system precau- tion (manual A/C).....	HA-106	Alternator	SC-14
A/C HFC134a (R134a) system service procedure (auto A/C)	HA-92	Ambient sensor (auto A/C).....	HA-81
A/C HFC134a (R134a) system service procedure (manual A/C)	HA-167	Angular tightening application	EM-2
A/C HFC134a (R134a) system service tools (auto A/C).....	HA-10	Antenna - See Power antenna	EL-107
A/C HFC134a (R134a) system service tools (manual A/C)	HA-114	Anti-lock brake system - See ABS.....	BR-33
A/C HFC134a system service equip- ment precaution (auto A/C)	HA-6	Anti-lock brake system - Wiring diagram.....	BR-38
A/C HFC134a system service equip- ment precaution (manual A/C).....	HA-110	AP/SEN - Wiring diagram	EC-128
A/C lubricant (R134a) (auto A/C).....	HA-94	ASCD (automatic speed control device).....	EL-115
A/C lubricant (R134a) (manual A/C)	HA-169	ASCD - Wiring diagram	EL-119
A/C operational check (auto A/C)	HA-37	A/T - Wiring diagram - AT - FTS	AT-99
A/C operational check (manual A/C)	HA-130	A/T - Wiring diagram - AT - MAIN.....	AT-90
A/C performance chart (auto A/C)	HA-72	A/T - Wiring diagram - AT - PNP/SW.....	AT-94
A/C performance chart (manual A/C)	HA-161	A/T - Wiring diagram - AT - VSS A/T	AT-105
A/C performance test diagnoses (auto A/C).....	HA-70	A/T control	EC-325
A/C performance test diagnoses (manual A/C).....	HA-159	A/T diagnosis communication line	EC-428
A/C push control (manual A/C)	HA-119	A/T fluid temperature sensor.....	AT-102
A/C relay (auto A/C)	HA-67	A/T shift lock system.....	AT-227
A/C relay (manual A/C)	HA-157	A/T shift lock system - Wiring diagram	AT-228
A/C self-diagnoses (auto A/C)	HA-30	A/T trouble diagnoses	AT-52
A/C service data specification (manual A/C).....	HA-181	A/T Wiring diagram - AT - ENG SS.....	AT-110
		A/T Wiring diagram AT - 1ST	AT-115
		A/T Wiring diagram AT - 2ND	AT-121
		A/T Wiring diagram AT - 3RD	AT-127
		A/T Wiring diagram AT - 4TH	AT-134
		A/T Wiring diagram AT - BA/FTS	AT-183
		A/T Wiring diagram AT - LPSV	AT-154
		A/T Wiring diagram AT - NONDTC	AT-193
		A/T Wiring diagram AT - OVRCSV	AT-178
		A/T Wiring diagram AT - SSV/A	AT-160
		A/T Wiring diagram AT - SSV/B	AT-165
		A/T Wiring diagram AT - TCCSIG	AT-147
		A/T Wiring diagram AT - TCV	AT-141
		A/T Wiring diagram AT - TPS.....	AT-171
		A/T Wiring diagram AT - VSSMTR	AT-189
		AT/C - Wiring diagram.....	EC-327
		ATDIAG - Wiring diagram	EC-429
		Audio.....	EL-102

ALPHABETICAL INDEX

AUDIO - Wiring diagram..... EL-103
 Audio and A/C control removal and
 installation - See Instrument panel..... BT-13
 Auto air conditioner - Wiring diagram
 (auto A/C)..... HA-25
 Automatic amplifier (auto A/C)..... HA-28, 40
 Automatic speed control system - See
 ASCD..... EL-115
 Automatic transaxle number..... GI-39
 Automatic transmission fluid
 replacement..... MA-23
 Auxiliary air control (AAC) valve..... EC-315

B

Back door..... BT-8
 Back door opener - See Back door..... BT-8
 Back door trim..... BT-23
 Back-up lamp..... EL-42
 Back-up lamp switch (M/T)..... MT-9
 BACK/L - Wiring diagram..... EL-42
 Ball joint (front)..... SU-14
 Basic inspection..... EC-83
 Battery..... SC-3
 Baulk ring (M/T)..... MT-16
 Blower motor (auto A/C)..... HA-57
 Blower motor (manual A/C)..... HA-151
 Blower resistor (manual A/C)..... HA-151
 Board-on lift..... GI-41
 Body alignment..... BT-45
 Boring/horning cylinder block..... EM-57
 BPT valve..... EC-274, 278, 371
 Brake booster..... BR-16
 Brake fluid change..... BR-6
 Brake fluid level..... MA-24
 Brake fluid level and line check..... BR-6
 Brake hydraulic line..... BR-8
 Brake inspection..... MA-24
 Brake lines and cables inspection..... MA-24
 Brake master cylinder..... BR-13
 Brake pedal..... BR-11
 Bulb specifications..... EL-216
 Bumper, front..... BT-5
 Bumper, rear..... BT-8
 BYPS/V - Wiring diagram..... EC-404

C

Camshaft inspection..... EM-39
 Camshaft position sensor (CMPS)..... EC-260
 CANI/V - Wiring diagram..... EC-417
 Canister - See EVAP canister..... EC-27
 CHARGE - Wiring diagram..... SC-12
 Charging system..... SC-11
 Chassis and body maintenance..... MA-22
 CHIME - Wiring diagram..... EL-84
 CIGAR - Wiring diagram..... EL-94
 Cigarette lighter..... EL-94

Circuit breaker..... EL-15
 CKPS - Wiring diagram..... EC-257, 352
 Closed loop control..... EC-341 GI
 Closed throttle position switch..... EC-320
 Clutch cover..... CL-19
 Clutch damper..... CL-11 MA
 Clutch disc..... CL-19
 Clutch fluid level..... MA-22
 Clutch master cylinder..... CL-8 EM
 Clutch operating cylinder..... CL-13
 Clutch pedal..... CL-6
 Clutch release bearing..... CL-16 LC
 Clutch release mechanism..... CL-16
 Clutch withdrawal lever..... CL-16 EC
 CMPS - Wiring diagram..... EC-263
 Coil spring (front)..... SU-9
 Coil spring (rear)..... SU-20 FE
 Collision diagnosis..... RS-59
 Combination lamp, front, removal and
 installation..... BT-5 AT
 Combination lamp, rear, removal and
 installation..... BT-24
 Combination meter..... EL-62 TF
 Combination meter removal and instal-
 lation - See Instrument panel..... BT-13
 Combination switch..... EL-25 PD
 Component Location (auto A/C)..... HA-22
 Component Location (manual A/C)..... HA-122
 Compressor clutch removal and instal-
 lation (auto A/C)..... HA-97 AX
 Compressor clutch removal and instal-
 lation (manual A/C)..... HA-171 SU
 Compressor precaution (auto A/C)..... HA-6
 Compressor precaution (manual A/C)..... HA-110
 Compressor special service tool (auto
 A/C)..... HA-9 BR
 Compressor special service tool
 (manual A/C)..... HA-113 ST
 Connecting rod..... EM-55
 Connecting rod bearing clearance..... EM-59
 Connecting rod bushing clearance..... EM-60 RS
 Connector inspection..... GI-18
 Console box - See Instrument panel..... BT-13
 CONSULT for engine..... EC-64 BT
 CONSULT general information..... GI-35
 Control lever (M/T)..... MT-14
 Control valve (A/T)..... AT-266 HA
 Converter housing installation..... AT-238
 COOL/F - Wiring diagram..... EC-439
 Coolant mixture ratio..... MA-12 SC
 Coolant replacement..... MA-14
 Cooling circuit (engine)..... LC-9
 Cooling fan control..... EC-436 EL
 Cooling fan motor..... EC-449
 Cooling fan relay..... EC-449
 Coupling sleeve (M/T)..... MT-16
 Crank angle sensor built into distributor
 - See Camshaft position sensor..... EC-260
 Crankcase emission control system -
 See positive crankcase ventilation..... EC-33

ALPHABETICAL INDEX

Crankcase ventilation system - See
 Positive crankcase ventilation EC-33
 Crankshaft EM-57
 Crankshaft position sensor (OBD) EC-255, 350
 Crankshaft position sensor (OBD) cog
 chipping EC-350
 Cruise control - See ASCD EL-115
 Cylinder block EM-53
 Cylinder block boring EM-57
 Cylinder head EM-35
 Cylinder head bolt tightening EM-26

D

Data link connector for Consult EC-34
 Daytime light system EL-33
 Daytime running light - See Daytime
 light system EL-33
 DEF - Wiring diagram EL-97
 Detonation sensor - See Knock sensor EC-250
 Diagnosis sensor unit RS-15
 Diagnostic trouble code (DTC) for OBD
 system EC-2
 Diagnostic trouble code (DTC) inspec-
 tion priority chart EC-90
 Differential gear (FF A/T) AT-315
 Differential gear (FF M/T) MT-16
 Dimensions GI-40
 Distributor EC-25
 Distributor ignition (DI) system EC-25
 D/LOCK - Wiring diagram EL-144
 Dome light - See Interior lamp EL-56
 Door glass BT-11
 Door lock BT-11
 Door mirror BT-44
 Door trim BT-19
 Door, front BT-11
 Door, rear BT-12
 Drive belt inspection MA-13
 Drive plate runout EM-61
 Drive shaft (front) AX-10
 Dropping resistor (A/T) AT-157
 DTC WORK SUPPORT EC-73
 DTRL - Wiring diagram EL-35

E

ECM input/output signal EC-101
 ECTS - Wiring diagram EC-142, 158
 EGR control (EGRC) - BPT valve EC-275
 EGR control (EGRC) - solenoid valve EC-355
 EGR control valve EC-274, 371
 EGR temperature sensor EC-360
 EGR/TS - Wiring diagram EC-363
 EGRC/V - Wiring diagram EC-357
 EGRC1 - Wiring diagram EC-271, 369
 Electric sun roof EL-111
 Electrical diagnoses GI-21

Electrical ignition system EC-25
 Electrical unit Foldout
 Electrical units location EL-197
 Electronic ignition (EI) system EC-25
 Engine compartment BT-46
 Engine control circuit diagram EC-18
 Engine control component parts
 location EC-13
 Engine control module (ECM) EC-329
 Engine control system diagram and
 chart EC-20
 Engine coolant temperature sensor
 (ECTS) EC-140, 156
 Engine fail-safe system EC-91
 Engine oil filter replacement MA-18
 Engine oil precautions GI-5
 Engine oil replacement MA-17
 Engine outer component parts EM-9
 Engine removal EM-50
 Engine room - See Engine
 compartment BT-46
 Engine serial number GI-39
 EVAP canister EC-28
 EVAP canister purge control solenoid
 valve EC-414, 420
 EVAP canister purge control valve EC-414, 420
 EVAP canister purge volume control
 valve EC-291, 380
 EVAP canister vent control
 valve EC-296, 386, 397
 EVAP control system (small leak)
 diagnosis EC-30, 283, 372
 EVAP control system pressure sensor EC-302
 EVAP control system purge flow moni-
 toring diagnosis EC-390
 EVAP system close mode EC-30
 EVAP vapor lines inspection MA-21
 Evaporative emission (EVAP) system EC-27
 Exhaust gas recirculation (EGR)
 valve EC-267, 366
 Exhaust system FE-6
 Exhaust system inspection MA-22
 Exterior BT-24

F

Fan control amp. (auto A/C) HA-59
 Fan switch (manual A/C) HA-151
 F/FOG - Wiring diagram EL-44
 FICD - Wiring diagram EC-470
 Final drive (FF A/T) AT-315
 Final drive (FF M/T) MT-30
 Finisher, interior - See Trim BT-17
 Fluid temperature sensor (A/T) AT-102
 Fluids MA-11
 Flywheel (clutch) CL-19
 Flywheel runout EM-61
 Fog lamp, front EL-43
 Fog lamp, front, removal and
 installation BT-5

ALPHABETICAL INDEX

Forward clutch..... AT-290
 F/PUMP - Wiring diagram..... EC-458
 Freeze frame data..... EC-46
 FRO2 - Wiring diagram..... EC-164, 180, 187
 FRO2/H - Wiring diagram..... EC-192
 Front axle..... AX-2
 Front bumper..... BT-5
 Front combination lamp removal and
 installation..... BT-5
 Front disc brake..... BR-19
 Front door..... BT-11
 Front fog lamp..... EL-43
 Front fog lamp removal and installation..... BT-5
 Front heated oxygen sensor
 (HO2S)..... EC-161, 167, 172, 177, 184
 Front heated oxygen sensor (HO2S)
 heater..... EC-190
 Front seat..... BT-29
 Front seat belt..... RS-3
 Front suspension..... SU-2
 Front washer..... EL-88
 Front wiper..... EL-88
 FUEL - Wiring diagram..... EC-231, 237
 Fuel cut control (at no load & high
 engine speed)..... EC-27
 Fuel filler lid..... BT-8
 Fuel filter..... EC-34
 Fuel filter replacement..... MA-16
 Fuel gauge..... EL-62
 Fuel injection system..... EC-229, 235
 Fuel injector..... EC-450
 Fuel line inspection..... MA-16
 Fuel precautions..... GI-5
 Fuel pressure check..... EC-34
 Fuel pressure regulator..... EC-35
 Fuel pressure release..... EC-34
 Fuel pump..... EC-457
 Fuel pump relay..... EC-457
 Fuel system..... FE-3
 Fuel tank vacuum relief valve..... EC-28
 Fuse..... EL-15
 Fuse block..... Foldout
 Fusible link..... EL-15

G

Garage jack and safety stand..... GI-42
 Gauges..... EL-62
 Gear components (M/T)..... MT-16
 Generator - See Alternator..... SC-14
 Generic scan tool (GST)..... EC-77
 Glass..... BT-11
 Grease..... MA-11
 Ground distribution..... EL-16

H

Harness connector..... EL-3

Harness connector inspection..... GI-18
 Harness layout..... EL-200
 Hazard warning lamp..... EL-46 GI
 Headlamp..... EL-28
 Headlining - See Roof trim..... BT-21
 Heated oxygen sensor (HO2S)
 (front)..... EC-161, 167, 172, 177, 184 MA
 Heated oxygen sensor (HO2S) heater
 (front)..... EC-190 EM
 Heated oxygen sensor (HO2S) heater
 (rear)..... EC-224 LC
 Heated oxygen sensor
 (rear)..... EC-195, 203, 210, 218
 Heated seat..... BT-31, EL-114
 Height (Dimensions)..... GI-40 EC
 HFC134a (R134a) system precaution
 (auto A/C)..... HA-2
 HFC134a (R134a) system precaution
 (manual A/C)..... HA-106 FE
 HFC134a (R134a) system service pro-
 cedure (auto A/C)..... HA-92 AT
 HFC134a (R134a) system service pro-
 cedure (manual A/C)..... HA-167 TF
 HFC134a (R134a) system service tools
 (auto A/C)..... HA-10
 HFC134a (R134a) system service tools
 (manual A/C)..... HA-114 PD
 HFC134a system service equipment
 precaution (auto A/C)..... HA-6 AX
 HFC134a system service equipment
 precaution (manual A/C)..... HA-110
 High clutch..... AT-285 SU
 H/LAMP - Wiring diagram..... EL-29
 Hood..... BT-5
 Horn..... EL-93 BR
 HORN - Wiring diagram..... EL-93
 How to erase DTC for OBD system..... EC-54
 HSEAT - Wiring diagram..... EL-114 ST
 Hydraulic lash adjuster inspection..... EM-44

I

IACV - air regulator..... EC-465 BT
 IACV-AAC valve..... EC-315
 IACV-FICD solenoid valve..... EC-469 HA
 IATS - Wiring diagram..... EC-137
 Identification plate..... GI-39
 Idle air control (IAC) system..... EC-315
 Idle air control valve (IACV)..... EC-315 SC
 Idle mixture ratio..... EC-36
 Idle speed..... EC-36 EL
 IGN/SG - Wiring diagram..... EC-346
 Ignition coil..... EC-348
 Ignition control system..... EC-343
 Ignition timing..... EC-36
 Ignition wire inspection..... EC-249
 ILL - Wiring diagram..... EL-53
 Illumination..... EL-51
 In vehicle sensor (auto A/C)..... HA-84
 Inhibitor switch..... EC-431

IDX

ALPHABETICAL INDEX

INJECT - Wiring diagram EC-451
 Injector removal and installation EC-35
 Input shaft (FF M/T) MT-16
 Instrument panel BT-13
 INT/L - Wiring diagram EL-61
 Intake air temperature sensor EC-134
 Intake door control linkage adjustment
 (auto A/C) HA-56
 Intake door control linkage adjustment
 (manual A/C) HA-137
 Intake door motor (auto A/C) HA-51
 Intake door motor (manual A/C) HA-134
 Integrated homelink transmitter EL-195
 Interior BT-17
 Interior lamp EL-56, 60
 Interior lamp on-off control EL-57

J

Jacking points GI-42
 Joint connector (J/C) Foldout
 Junction box (J/B) Foldout

K

Keyless entry system - See Multi-re-
 mote control system EL-154
 Knock sensor (KS) EC-250, 252
 Knuckle spindle AX-5

L

Length (Dimensions) GI-40
 License lamp EL-39
 Line pressure solenoid valve AT-138
 Line pressure test (A/T) AT-62
 Liquid gasket application EM-2
 Location of electrical units EL-197
 Lock, door BT-11
 Low and reverse brake AT-297
 Lubricant (R134a) A/C (auto A/C) HA-94
 Lubricant (R134a) A/C (manual A/C) HA-169
 Lubricants MA-11
 Lubrication circuit (engine) LC-3
 Lubrication-locks, hinges and hood
 latches MA-26
 Luggage room lamp EL-60

M

MAFS - Wiring diagram EC-121
 Magnet clutch (auto A/C) HA-63, 97
 Magnet clutch (manual A/C) HA-171
 MAIN - Wiring diagram EC-111
 Mainshaft (M/T) MT-16

Maintenance (engine) MA-13
 MAJOR OVERHAUL AT-240
 Malfunction indicator lamp (MIL) EC-55
 Manual air conditioner - Wiring diagram
 (manual A/C) HA-125
 Manual transaxle number GI-39
 Manual transmission oil replacement MA-22
 MAP/BARO switch solenoid valve EC-331
 Mass air flow sensor (MAFS) EC-116
 Master cylinder (brake) BR-13
 Master cylinder (clutch) CL-8
 Meter EL-62
 METER - Wiring diagram EL-65
 MIL & Data link connectors circuit EC-475
 MIL/DL - Wiring diagram EC-475
 MIRROR - Wiring diagram EL-112
 Mirror defogger EL-95
 Mirror, door BT-44
 Mirror, out side BT-44
 Misfire EC-245
 Mode door control linkage adjustment
 (auto A/C) HA-46
 Mode door control linkage adjustment
 (manual A/C) HA-141
 Mode door motor (auto A/C) HA-42
 Model variation GI-37
 Molding - See Exterior BT-24
 M/T major overhaul MT-14
 M/T removal and installation MT-11
 MULTI - Wiring diagram EL-156
 Multi-remote control system EL-154
 Multiport fuel injection (MFI) system EC-23
 Multiport fuel injection precautions GI-4

N

Neutral position switch EC-431
 NVH troubleshooting (AX) AX-3
 NVH troubleshooting (BR) BR-5
 NVH troubleshooting (CL) CL-4
 NVH troubleshooting (M/T) MT-5
 NVH troubleshooting (ST) ST-5
 NVH troubleshooting (SU) SU-15

O

Oil change (capacity) MA-11
 Oil pan (engine) EM-13
 Oil pressure (engine) LC-4
 Oil pump (A/T) AT-262
 Oil pump (engine) LC-4
 Oil pump regulator valve (engine) LC-6
 Oil seal replacement (engine) EM-33
 On board diagnostic system EC-44
 Operating cylinder (clutch) CL-13
 Out side mirror BT-44
 Overdrive control switch AT-225
 Overrun clutch AT-290

ALPHABETICAL INDEX

Overrun clutch solenoid valve..... AT-138
Oversize piston EM-57

P

P/ANT - Wiring diagram..... EL-108
Park/Neutral position switch..... EC-431
Park/neutral position switch (M/T) MT-9
Parking brake control BR-31
Parking lamp EL-39
PCV (positive crankcase ventilation) EC-33
PGC/V - Wiring diagram EC-293
Pilot bushing replacement EM-61
Piston assembly..... EM-62
Piston pin inspection..... EM-54
Piston ring inspection EM-55
Piston to bore clearance..... EM-56
PNP switch..... AT-92
PNP/SW - Wiring diagram EC-433
POWER - Wiring diagram EL-8
Power antenna..... EL-107
Power door lock..... EL-142
Power door mirror EL-112
Power seat EL-113
Power steering fluid level..... MA-25, ST-7
Power steering gear ST-15
Power steering hydraulic pressure ST-8
Power steering oil pressure switch EC-461
Power steering oil pump..... ST-26
Power steering system bleeding ST-7
Power supply routing EL-7
Power transistor EC-349
Power transistor & ignition coil EC-343
Power window..... EL-135
PRE/SE - Wiring diagram EC-305
Precautions (General) GI-3
Pressure plate - See Clutch cover CL-19
Pressure test (A/T) AT-62
PST/SW - Wiring diagram..... EC-462

R

Radiator LC-14
Radiator fan - See Cooling fan LC-14
Radio - See Audio EL-102
Rear air spoiler BT-24
Rear axle AX-20
Rear bumper..... BT-8
Rear combination lamp removal and
installation BT-24
Rear disc brake..... BR-23
Rear door BT-12
Rear heated oxygen sensor
(HO2S) EC-195, 203, 210, 218
Rear heated oxygen sensor (HO2S)
heater EC-224
Rear seat BT-32
Rear seat belt..... RS-5

Rear suspension SU-15
Rear window defogger..... EL-95
Refrigerant connection precaution (auto
A/C)..... HA-3
Refrigerant connection precaution
(manual A/C)..... HA-107
Refrigerant discharging evacuating
charging (auto A/C) HA-92
Refrigerant general precaution (auto
A/C)..... HA-3
Refrigerant general precaution (manual
A/C)..... HA-107
Refrigerant lines (auto A/C) HA-101
Refrigerant lines (manual A/C)..... HA-176
Refrigeration cycle (auto A/C) HA-13
Refrigeration cycle (manual A/C) HA-117
Release bearing (clutch) CL-16
Removal and installation (A/T)..... AT-237
Resistor EC-349
Reverse clutch..... AT-281
Reverse idler shaft (M/T) MT-15
Reverse lamp switch (M/T) - See
Back-up lamp switch (M/T)..... MT-9
Reverse main gear (M/T)..... MT-16
Revolution sensor (A/T) AT-107
Road wheel size GI-40
Roof trim BT-21
Room lamp - See Interior lamp EL-56
ROOM/L - Wiring diagram EL-58
RRO2 - Wiring diagram..... EC-198, 206, 213, 220
RRO2/H - Wiring diagram..... EC-226

S

SAE J1930 terminology list GI-47
Seal - See Exterior BT-24
SEAT - Wiring diagram EL-113
Seat belt inspection..... MA-26, RS-7
Seat belt pre-tensioner..... RS-2
Seat belt pre-tensioner disposal RS-23
Seat belt, front..... RS-3
Seat belt, rear RS-5
Seat, front BT-29
Seat, rear BT-32
Self-diagnostic results EC-56
SFT, RE - Wiring diagram AT-228
SHIFT - Wiring diagram AT-228
Shift control components (M/T)..... MT-17
Shift fork (M/T) MT-17
Shift lever MT-14
Shift lock system AT-227
Shift schedule..... AT-343
Shift solenoid valve A (A/T)..... AT-112, 117, 129
Shift solenoid valve B (A/T)..... AT-112, 117
Shock absorber (front) SU-10
Shock absorber (rear) SU-20
Side air bag RS-21
Side trim..... BT-17
Smart entrance control unit EL-190
SMJ (super multiple junction)..... Foldout

ALPHABETICAL INDEX

Spare tire size GI-40
 Spark plug replacement..... MA-19
 Speedometer EL-62
 Spot lamp..... EL-60
 Spring (Wheelarch) height SU-5
 SROOF - Wiring diagram..... EL-111
 SRS - See Supplemental Restraint
 System..... RS-10
 SRS - Wiring diagram RS-35
 S/SIG - Wiring diagram..... EC-455
 Stabilizer bar (front) SU-13
 Stall test (A/T) AT-58
 Standardized relay EL-5
 START - Wiring diagram SC-8
 Start signal EC-454
 Starter..... SC-10
 Starting system SC-6
 Steering gear, linkage and transfer
 gear inspection..... MA-25
 Steering linkage ST-15
 Steering switch EL-27
 Steering wheel and column ST-10
 Steering wheel play ST-6
 Steering wheel turning force..... ST-8
 Stop lamp..... EL-41
 STOP/L - Wiring diagram EL-41
 Striking rod (M/T) MT-17
 Strut (front) SU-9
 Sun roof, electric EL-111
 Sunload sensor (auto A/C)..... HA-86
 Sunroof BT-33
 Supplemental Restraint System..... RS-10
 Supplemental restraint system - Wiring
 diagram..... RS-35
 SW/V - Wiring diagram EC-335
 Symbols and abbreviations GI-8
 Symptom matrix chart..... EC-92
 Synchronizer (M/T)..... MT-16
 System readiness test (SRT) code..... EC-46

T

Tachometer EL-62
 Tail lamp..... EL-39
 TAIL/L - Wiring diagram..... EL-39
 Tank fuel temperature sensor EC-241
 TCM circuit diagram AT-13
 TCM inspection table AT-86
 TFTS - Wiring diagram EC-243
 THEFT - Wiring diagram..... EL-173
 Theft warning system EL-168
 Thermostat..... LC-12
 Three way catalyst..... EC-279
 Three way catalyst precautions GI-4
 Throttle bodies EM-10
 Throttle position sensor (TPS) EC-145
 Throttle position sensor adjustment..... EC-83
 Throttle position switch..... EC-320, AT-175, 225
 Throwout bearing - See Clutch release
 bearing CL-16

Tie-rod ball joints ST-19
 Tightening torque of standard bolts GI-46
 Timing belt EM-18
 Tire rotation MA-24
 Tire size GI-40
 Torque converter installation AT-238
 Torque convertor clutch solenoid valve..... AT-138
 Tow truck towing..... GI-43
 TP/SW - Wiring diagram EC-322
 TPS - Wiring diagram EC-152
 Transmission case (M/T)..... MT-15
 TRANSMT - Wiring diagram..... EL-195
 Tread-FR&RR (Dimensions) GI-40
 Trim BT-17
 Triple pressure switch (auto A/C)..... HA-68
 Trouble diagnoses GI-31
 TURN - Wiring diagram EL-48
 Turn signal lamp EL-46
 Two trip detection logic EC-44
 Two-pole lift GI-43

U

Under body BT-48

V

Vacuum cut valve EC-413
 Vacuum cut valve bypass valve..... EC-402, 407
 Vacuum hose drawing (Engine control) EC-21
 Valve guide EM-40
 Valve seat EM-42
 Valve spring EM-44
 Vehicle identification number GI-38
 Vehicle recovery (freeing a stuck
 vehicle)..... GI-45
 Vehicle speed sensor (VSS) EC-310
 Vent mode switch (manual A/C)..... HA-119
 VENT/V - Wiring diagram EC-298
 Viscosity number (SAE) MA-11
 Viscous coupling (FF A/T)..... AT-315
 Viscous coupling (FF M/T) MT-10
 VSS - Wiring diagram EC-313

W

WARN - Wiring diagram EL-76
 Warning chime EL-82
 Warning lamps EL-75
 Washer, front..... EL-88
 Water cock control rod adjustment
 (manual A/C)..... HA-146
 Water pump LC-10
 Water temperature gauge..... EL-62
 Weatherstrip - See Exterior BT-24
 Wheel alignment (front)..... SU-6
 Wheel alignment (rear) SU-17

ALPHABETICAL INDEX

Wheel balance MA-24
 Wheel bearing (front)..... AX-4
 Wheel bearing (rear) AX-21
 Wheel hub (front)..... AX-5
 Wheel hub (rear) AX-21
 Wheel size GI-40
 Wheelarch height SU-5
 Wheelbase (Dimensions) GI-40
 Wide open & closed throttle position
 switch..... EC-145
 Width (Dimensions) GI-40

WINDOW - Wiring diagram EL-138
 Window, door BT-11
 Windshield BT-42
 WIPER - Wiring diagram EL-90
 Wiper, front EL-88
 Wiring Diagram (Cell code) list..... EL-217
 Wiring diagrams GI-9
 Withdrawal lever (clutch) CL-16
 Wrist pin - See Piston pin inspection EM-54

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX