

A  
SECTION **ACC** ACC  
ACCELERATOR CONTROL SYSTEM C

D  
E  
CONTENTS

<b>ACCELERATOR CONTROL SYSTEM .....</b>	<b>2</b>	F
Removal and Installation .....	2	
REMOVAL .....	2	
INSTALLATION .....	2	G
INSPECTION AFTER INSTALLATION .....	2	

H  
I  
J  
K  
L  
M


# ACCELERATOR CONTROL SYSTEM

## ACCELERATOR CONTROL SYSTEM

PFP:18005

### Removal and Installation

ABS005ZA

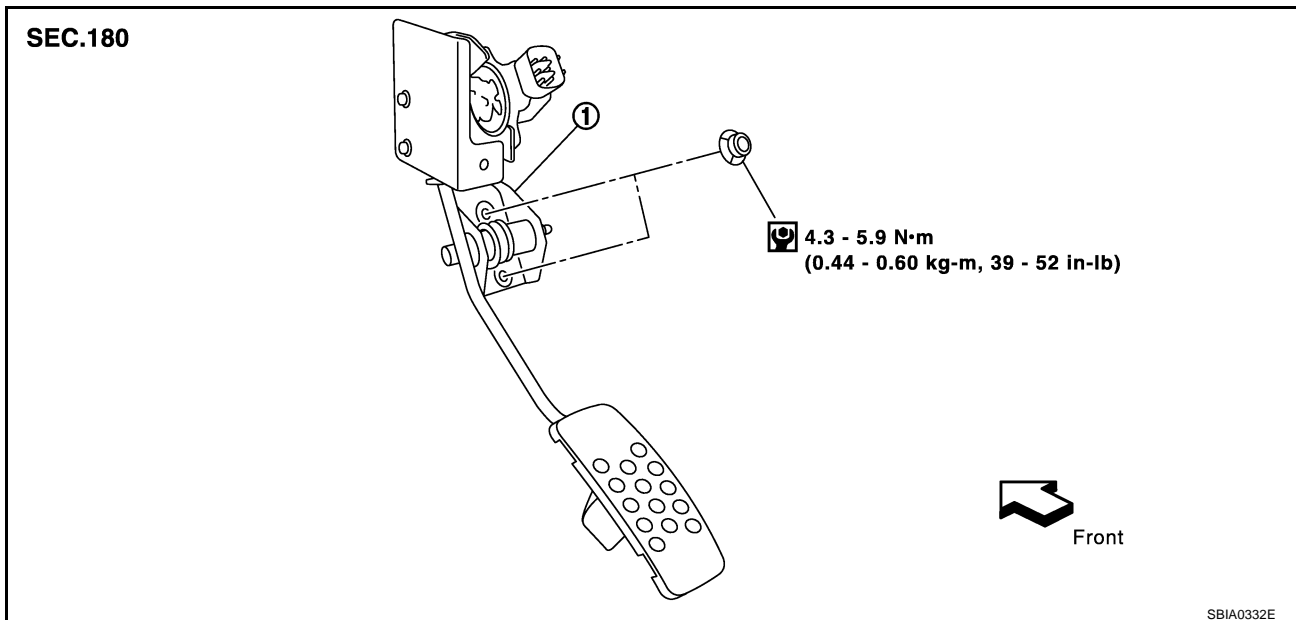

1. Accelerator pedal assembly

### REMOVAL

1. Disconnect accelerator pedal position sensor harness connector.
2. Loosen nuts, and remove accelerator pedal assembly.

#### CAUTION:

- Do not disassemble the accelerator pedal assembly. Do not remove the accelerator pedal position sensor from the accelerator pedal assembly.
- Avoid impact from dropping etc. during handling.
- Be careful to keep the accelerator pedal assembly away from water.

### INSTALLATION

Install in the reverse order of removal.

### INSPECTION AFTER INSTALLATION

- Check that the accelerator pedal moves smoothly within the whole operation range.
- Check that the accelerator pedal securely returns to the original position.
- For the electrical inspection of the accelerator pedal position sensor, refer to [EC-1247, "DTC P2138 APP SENSOR"](#).

#### CAUTION:

When the harness connector of the accelerator pedal position sensor is disconnected, perform "Accelerator Pedal Released Position Learning". Refer to [EC-703, "Accelerator Pedal Released Position Learning"](#).