

SECTION SE

SEAT

CONTENTS

PRECAUTIONS	2	(EXCEPT GENUINE LEATHER SEAT)]	9
Service Notice	2	Disassembly and Assembly of Seat Cushion Trim..	10
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	2	REAR SEAT	11
Precautions	2	Component Parts Drawing	11
HEATED SEAT	3	STANDARD SEAT	11
Wiring Diagram-H/SEAT (LHD MODELS)	3	SEAT WITH ARMREST	12
Wiring Diagram-H/SEAT (RHD MODELS)	5	Removal and Installation	13
FRONT SEAT	7	SEAT CUSHION	13
Component Parts Drawing	7	IN THE SEAT BACK	13
Removal and Installation	8	REAR SEAT STRIKER (SIDE)	14
Disassembly and Assembly of Seat Back	8	REAR SEAT CENTER BRACKET	14
SEAT BACK TRIM (SIDE AIR BAG EQUIPPED AND GENUINE LEATHER SEAT)	8	REAR SEAT STRIKER (FLOOR)	14
SEAT BACK TRIM [WITHOUT SIDE AIR BAG		Disassembly and Assembly	14
		REAR SEAT BACK LOCK KNOB	14
		ARMREST	14

PRECAUTIONS

PRECAUTIONS

PFP:00001

Service Notice

EIS003UV

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding instruments, grille, etc. carefully during removing or installing. Be careful not to oil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, member, etc.), be sure to take rust prevention measures.

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

EIS003UN

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harness connectors.

Precautions

EIS00108

- When removing or disassembling any part, be careful not to damage or deform it. Protect parts, which may get in the way with cloth.
- When removing parts with a screwdriver or other tool, protect parts by wrapping them with vinyl or tape.
- Keep removed parts protected with cloth.
- If a clip is deformed or damaged, replace it.
- If an unreusable part is removed, replace it with a new one.
- Tighten bolts and nuts firmly to the specified torque.
- After re-assembly has been completed, make sure each part functions correctly.
- Remove stains in the following way.

Water-soluble stains:

Dip a soft cloth in warm water, and then squeeze it tightly. After wiping the stain, wipe with a soft dry cloth.

Oil stain:

Dissolve a synthetic detergent in warm water (density of 2 to 3% or less), dip the cloth, then clean off the stain with the cloth. Next, dip the cloth in fresh water and squeeze it tightly. Then clean off the detergent completely. Then wipe the area with a soft dry cloth.

- Do not use any organic solvent, such as thinner or benzine.

HEATED SEAT

 
 
 

HEATED SEAT

PFP:87335

Wiring Diagram-H/SEAT (LHD MODELS)

EIS001P1

SE-H/SEAT-01


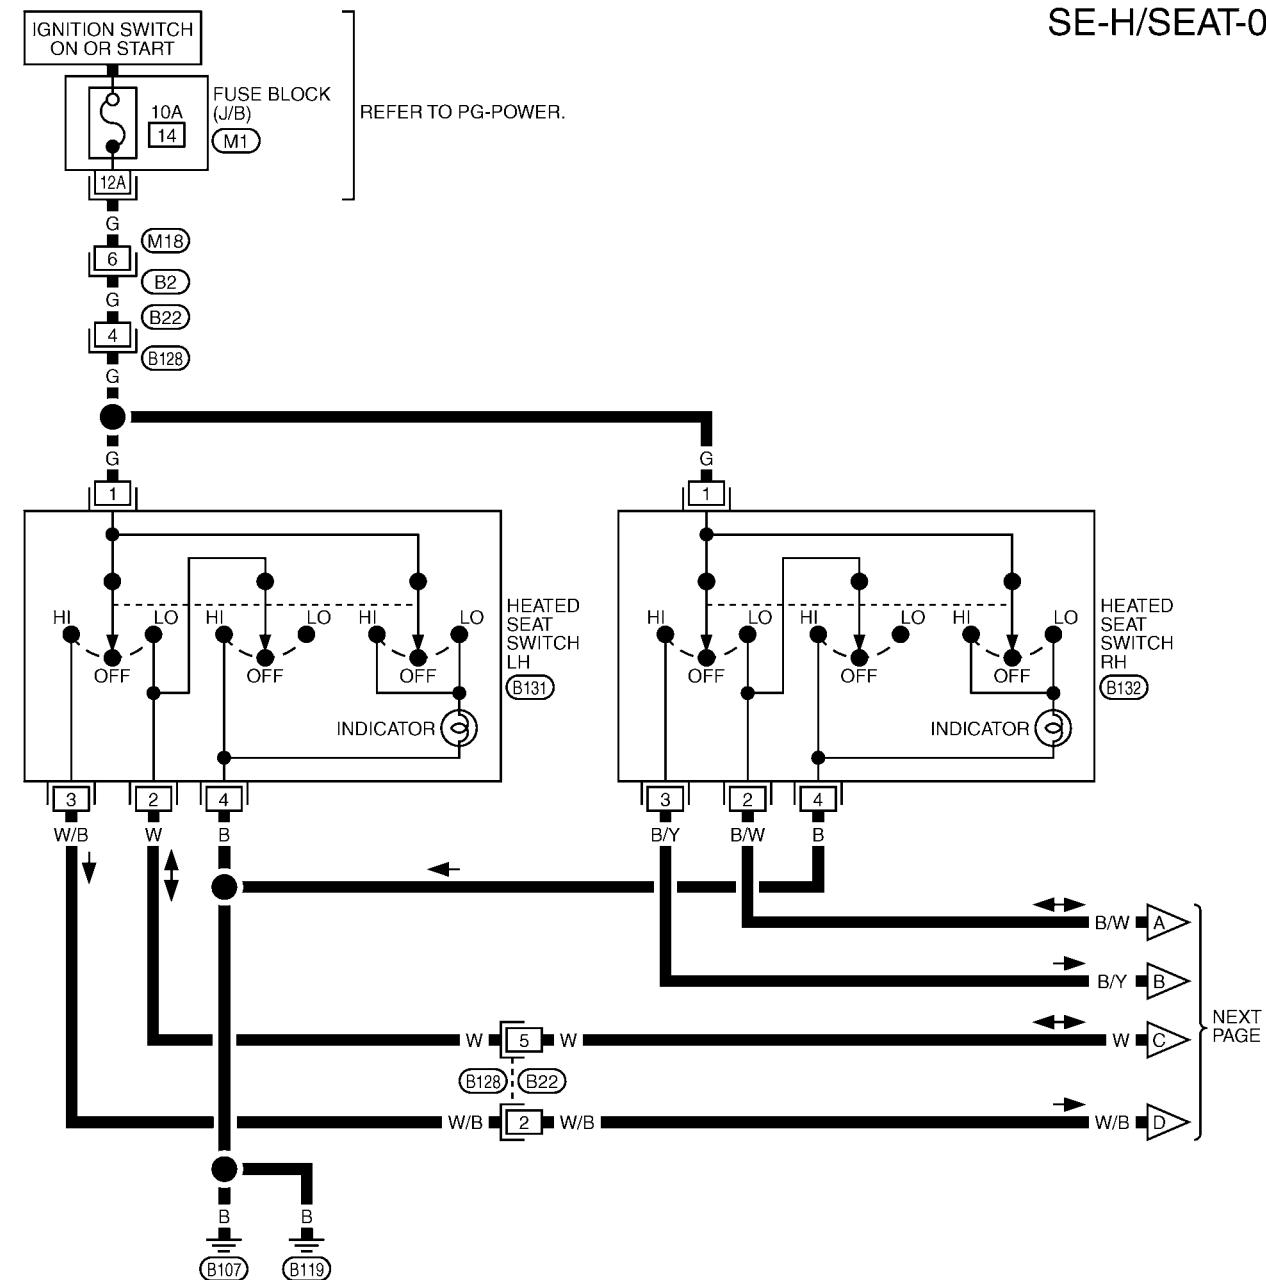


REFER TO THE FOLLOWING.
M1 -FUSE BLOCK-JUNCTION
BOX (J/B)

TIWA0046E

HEATED SEAT

 SE-H/SEAT-02

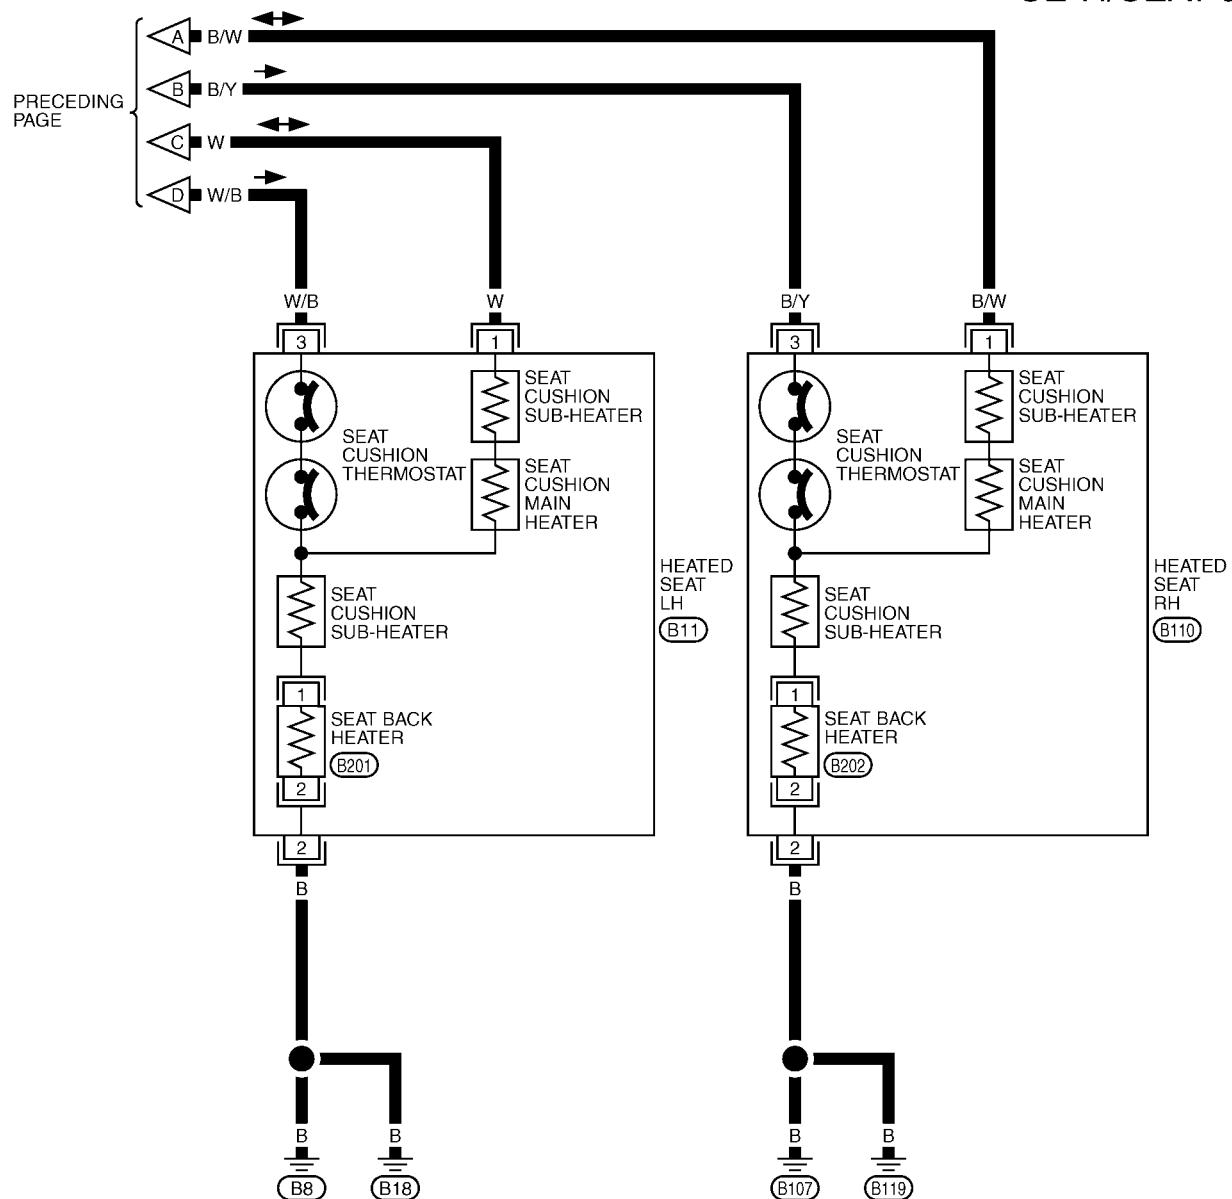

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.



TIWA0047E

HEATED SEAT

Wiring Diagram–H/SEAT (RHD MODELS)

EIS001P2

 SE-H/SEAT-03


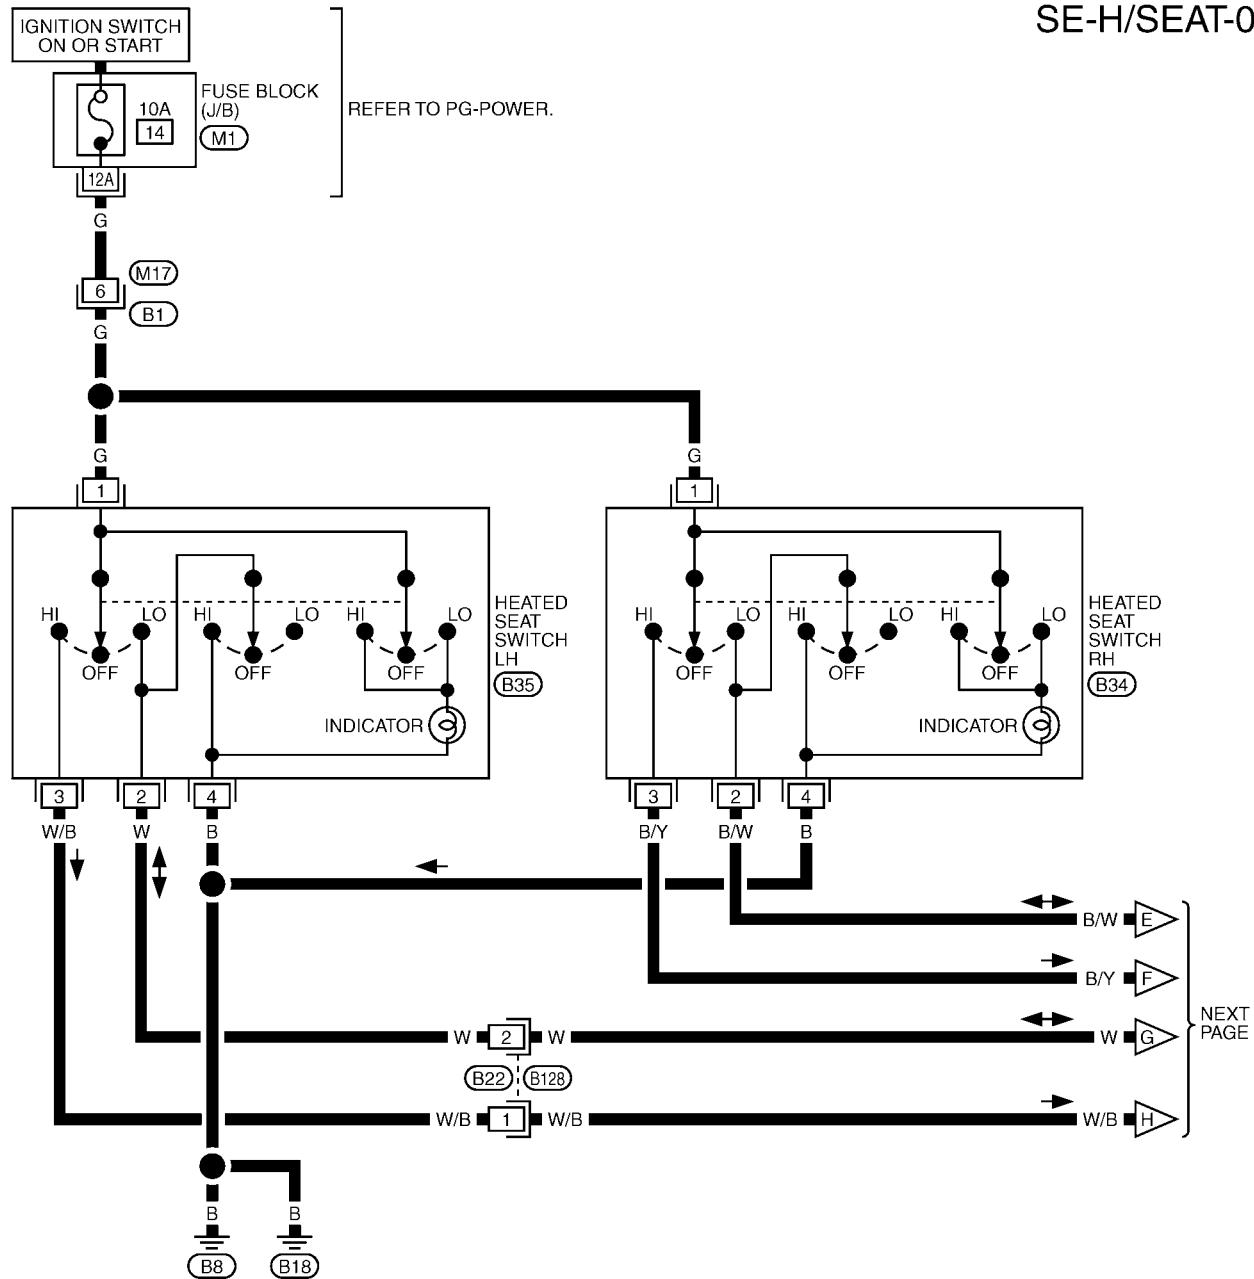


REFER TO THE FOLLOWING.

M1 -FUSE BLOCK-JUNCTION
BOX (J/B)

HEATED SEAT

 SE-H/SEAT-04

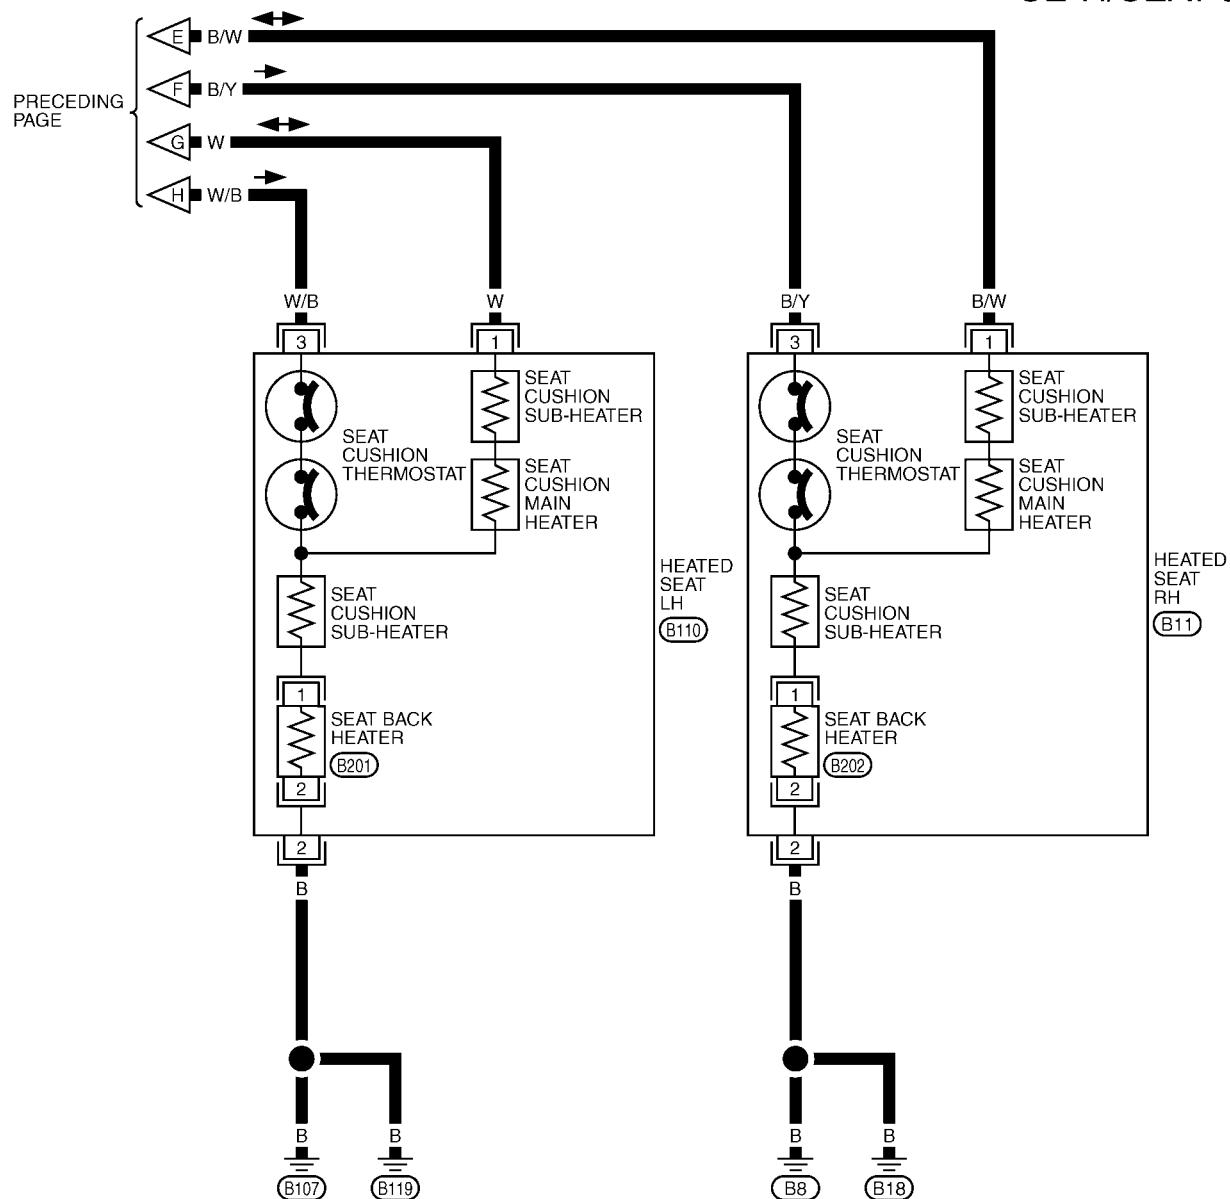

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TIWA0049E

FRONT SEAT

FRONT SEAT


PFP:87000

Component Parts Drawing

EIS000NN

A
B
C
D
E
F
G
H

SE
J
K
L
M

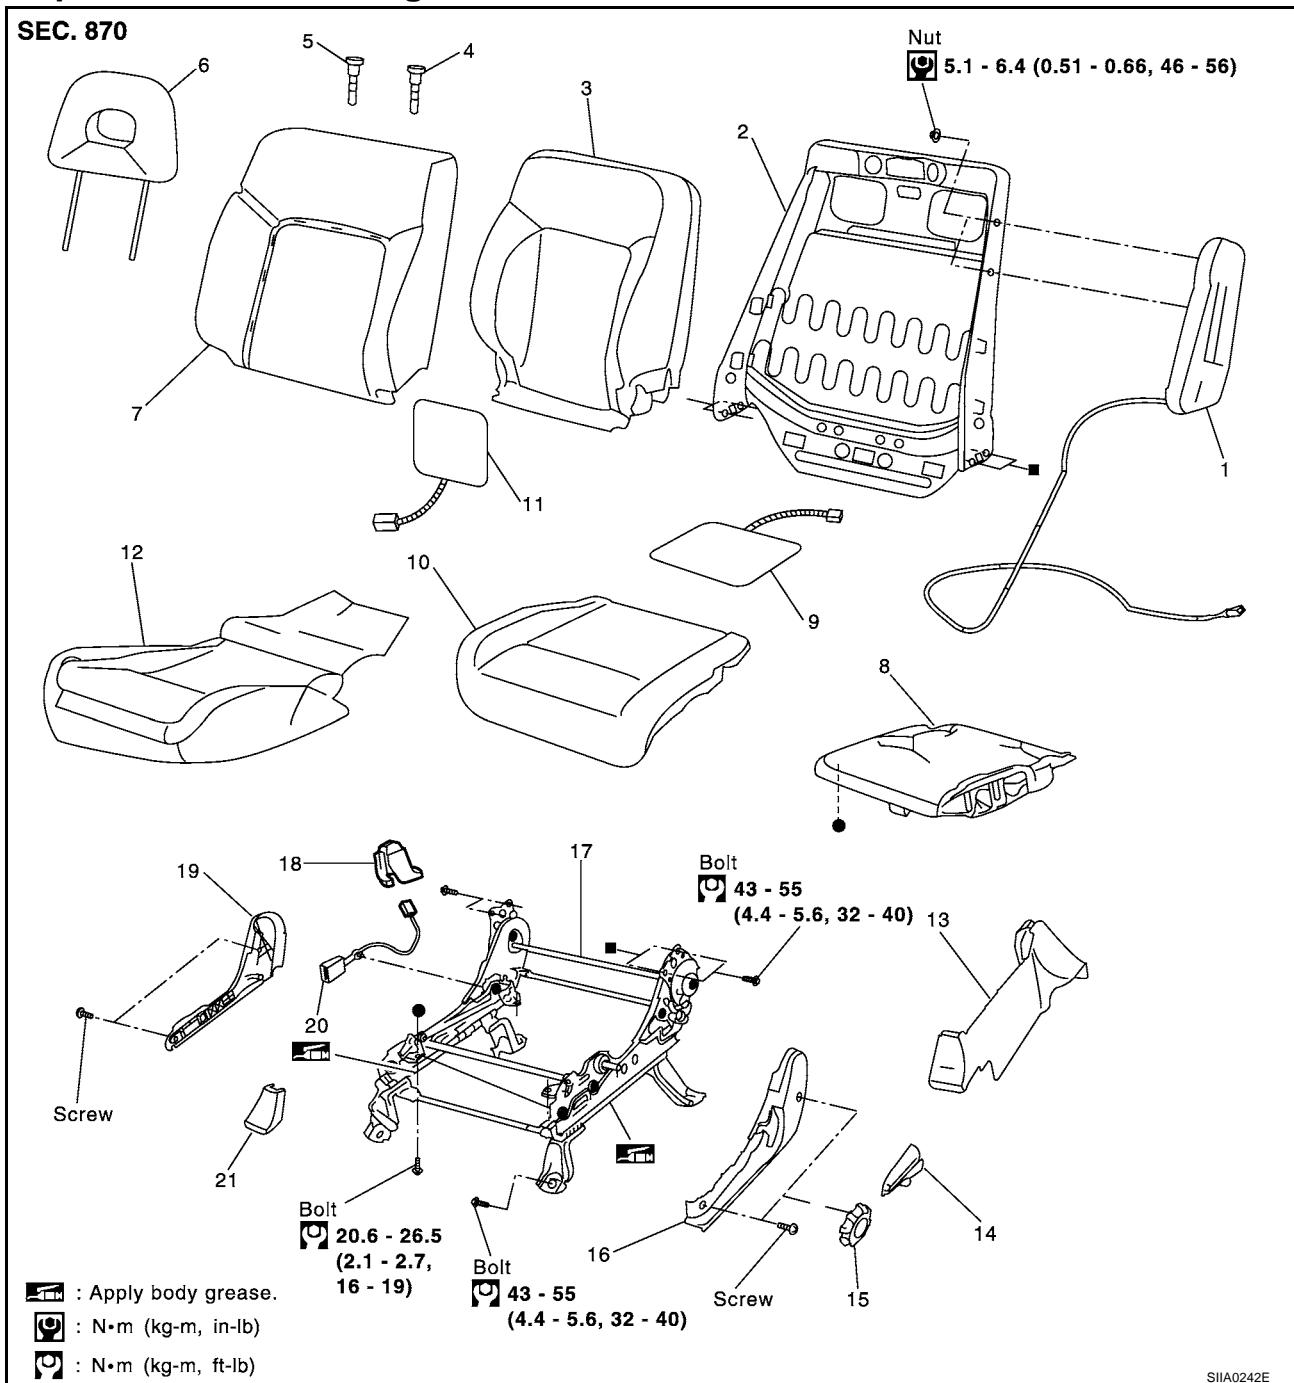

SIIA0242E


1. Side air bag module
2. Seat back frame
3. Seat back trim
4. Headrest holder (free)
5. Headrest holder (locked)
6. Headrest
7. Seat back pad
8. Seat cushion frame
9. Seat cushion heater unit
10. Seat cushion pad
11. Seat back heater unit
12. Seat cushion trim
13. Outer slide cover (LH)
14. Reclining lever knob
15. Lifter dial
16. Outer seat cushion finisher (LH)
17. Front seat adjuster
18. Rear inner slide cover (LH)
19. Inner seat cushion finisher (LH)
20. Seat belt buckle
21. Front inner slide cover (LH)

FRONT SEAT

Removal and Installation


EIS000NO

1. Remove slide cover.

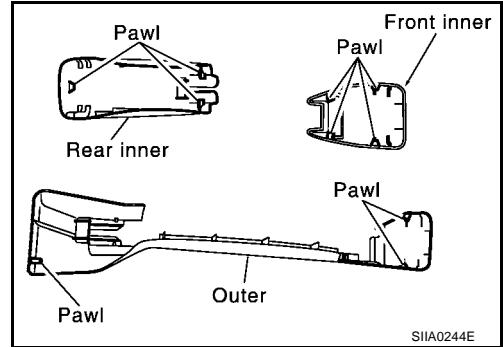

NOTE:

1. Slide the seat forward.
2. Undo the outer slide cover front fitting and then undo the rear fitting.
3. Pull cover up rearward.

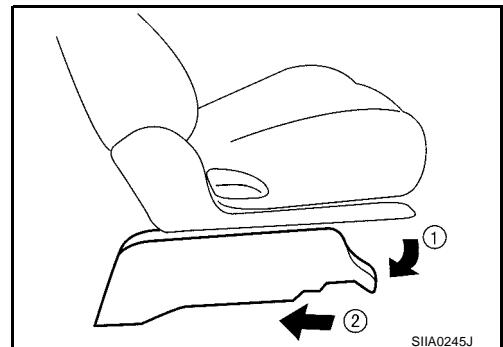

2. Remove vehicle mounting bolts.
3. Disconnect the connector and remove seat.

NOTE:


When removing and installing, using clothes, protect the parts from damage where it may interfere with others.

Disassembly and Assembly of Seat Back


EIS000NP

SEAT BACK TRIM (SIDE AIR BAG EQUIPPED AND GENUINE LEATHER SEAT)

1. Unfasten fastener on the back of seat back.
2. Remove lower retainer.

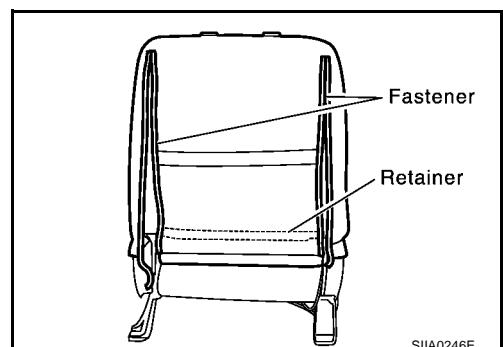

3. Remove nuts, and remove inner cross-fixed stay.

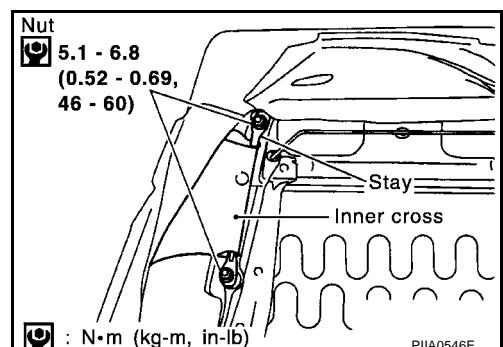


FRONT SEAT

4. Pick up and push up the headrest holder tab to remove.

NOTE:

Before installing the headrest holder, check its front, rear, right and left orientation for correct installation.

5. After removing seat back trim & pad, remove hog rings to separate pad and trim.

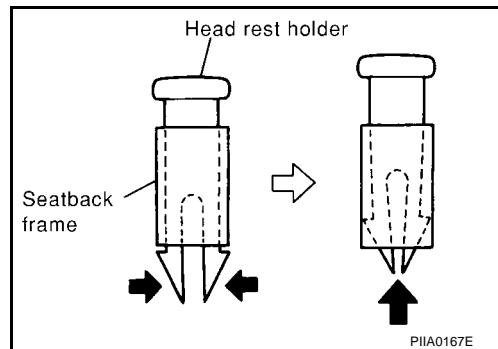

Removal of Seat Back Assembly


- To remove seat back assembly, follow steps 1 - 2. After that, remove side air bag connector and bolts.

NOTE:


When assembling the seat back frame, make sure that the reclining device are locked on both sides, and be sure to temporarily tighten the bolts, then tighten them finally.

SEAT BACK TRIM [WITHOUT SIDE AIR BAG (EXCEPT GENUINE LEATHER SEAT)]

1. Disengage retainers in the lower part at the back of seat back.

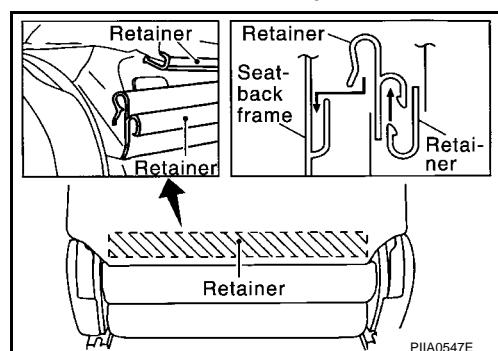

2. Pull off seat back trim.

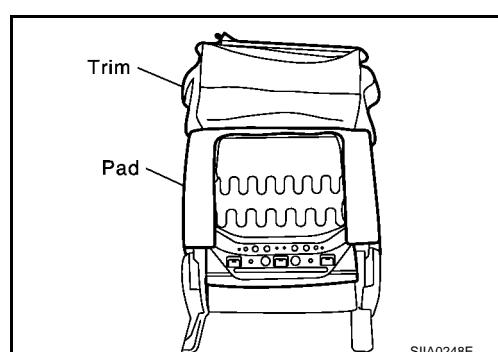


3. Pick up and push up the headrest holder tab to remove.

NOTE:

Before installing the headrest holder, check its front, rear, right and left orientation for correct installation.

4. Remove seat back trim.

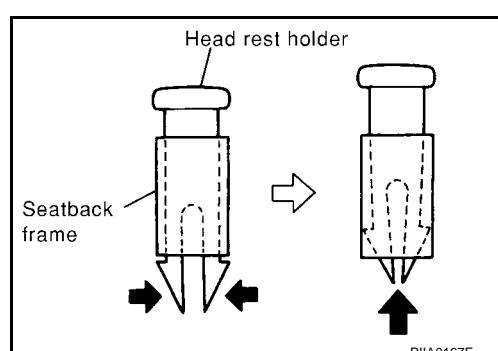

FRONT SEAT

Removal of Seat Back Assembly


- To remove seat back assembly, follow steps 1 - 2. After that, remove bolts.

NOTE:


When assembling the seat back frame, make sure that the reclining device are locked on both sides, and be sure to temporarily tighten the bolts, then tighten them finally.

Disassembly and Assembly of Seat Cushion Trim

- Pull up tabs of reclining lever from inside. Slide the knob forward for removal.

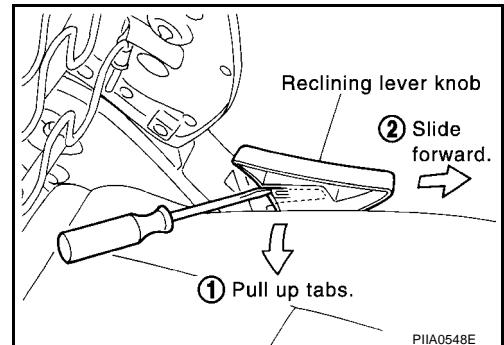


- Hang a wire on the snap ring, and pull upward to remove. Remove lifter dial.

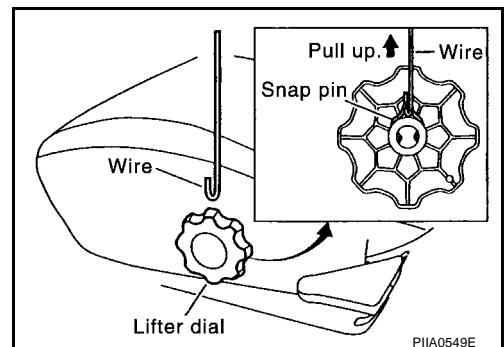


- Remove seat harness and bolts from back of seat cushion.

NOTE:

When installing bolts, make sure both sides of the slide are locked. Be sure to temporarily tighten the bolts before final tightening.

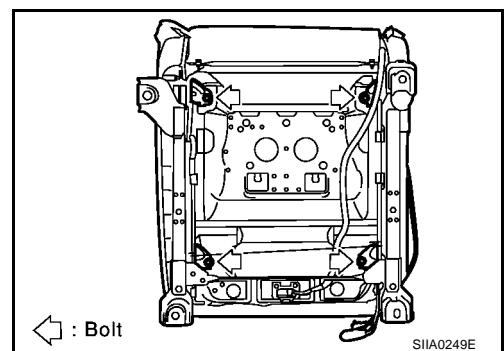

- Remove retainer from back side of the cushion.

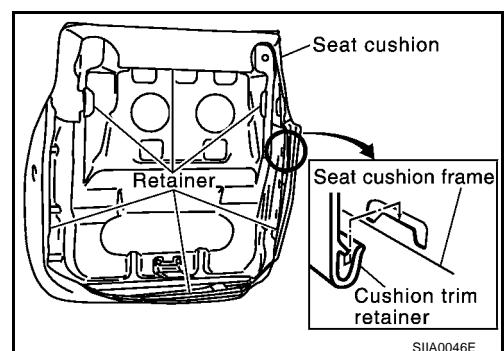

- Pull off trim and remove hog rings.

REAR SEAT

REAR SEAT


PFP:88300

Component Parts Drawing

STANDARD SEAT

EIS000NR

SEC. 880

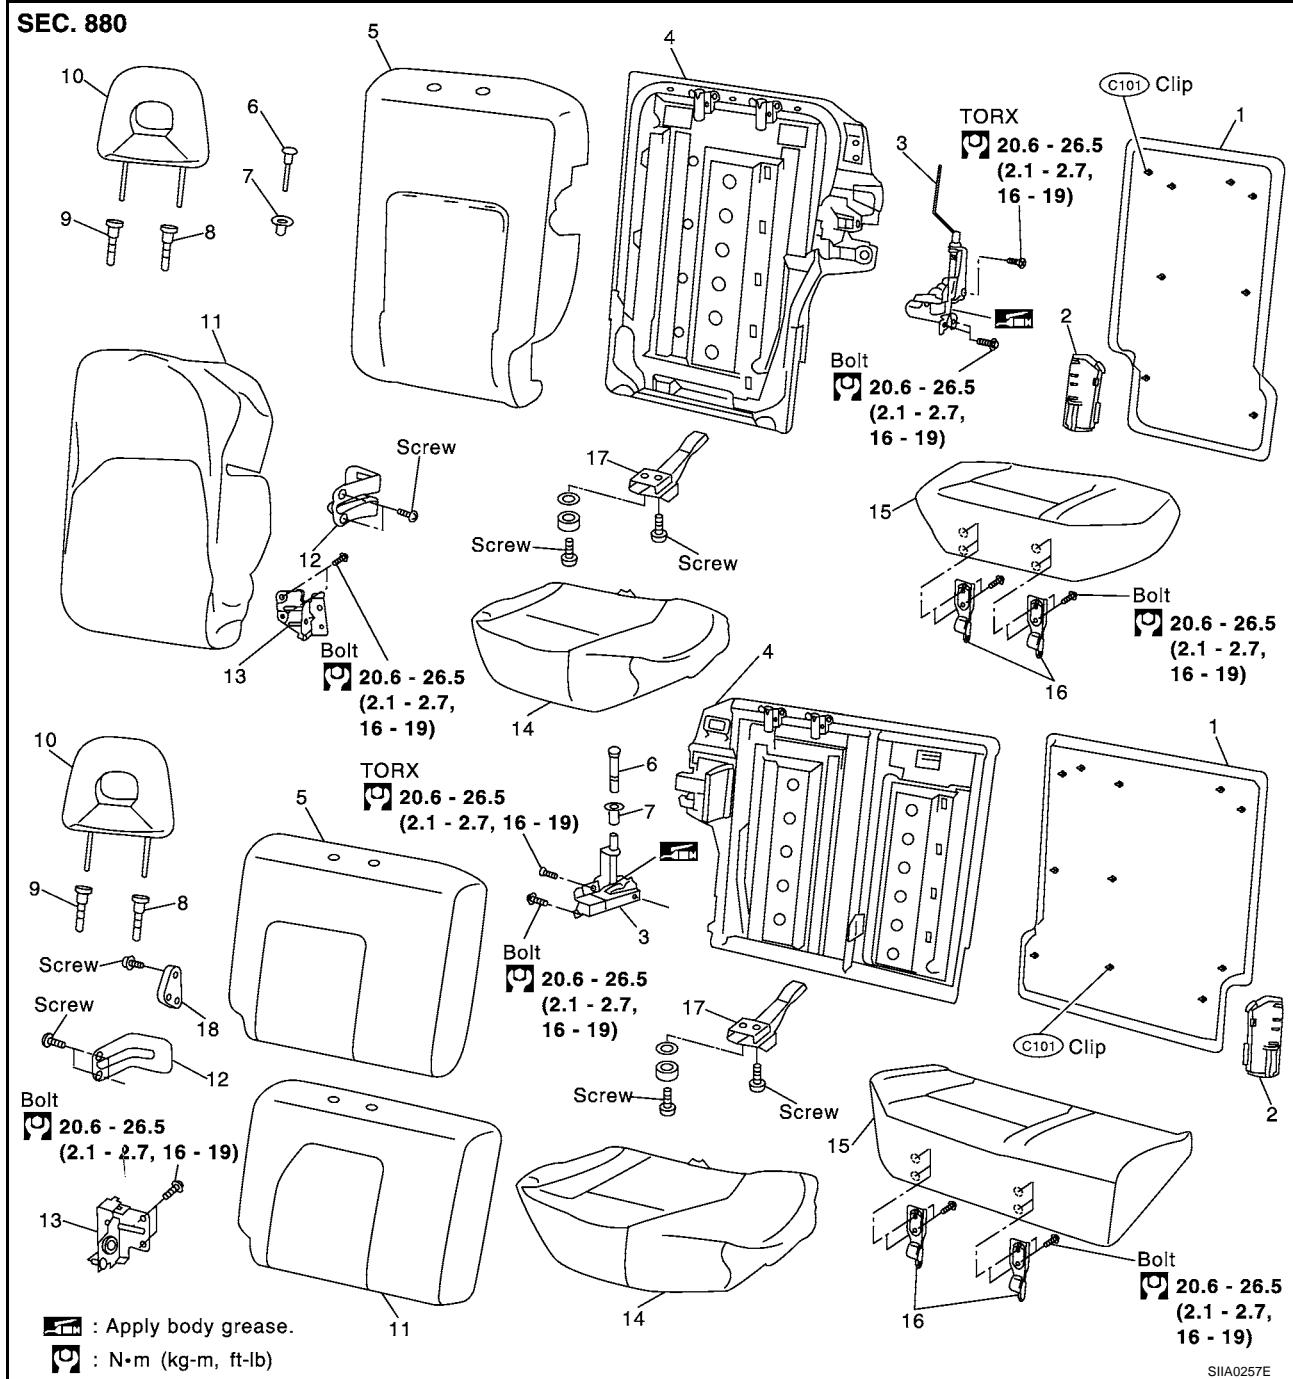


SIIA0257E

1. Rear seat back board	2. Inner hinge cover	3. Rear seat lock
4. Rear seat back frame	5. Seat back pad	6. Rear seat back lock knob
7. Rear seat lock knob finisher	8. Headrest holder (free)	9. Headrest holder (locked)
10. Headrest	11. Seat back trim	12. Rear seat lock protector
13. Rear backside bracket	14. Rear seat cushion trim	15. Rear seat cushion pad
16. Rear seat cushion stay	17. Cushion lock	18. Side hinge cover

REAR SEAT

SEAT WITH ARMREST

SEC. 869-880

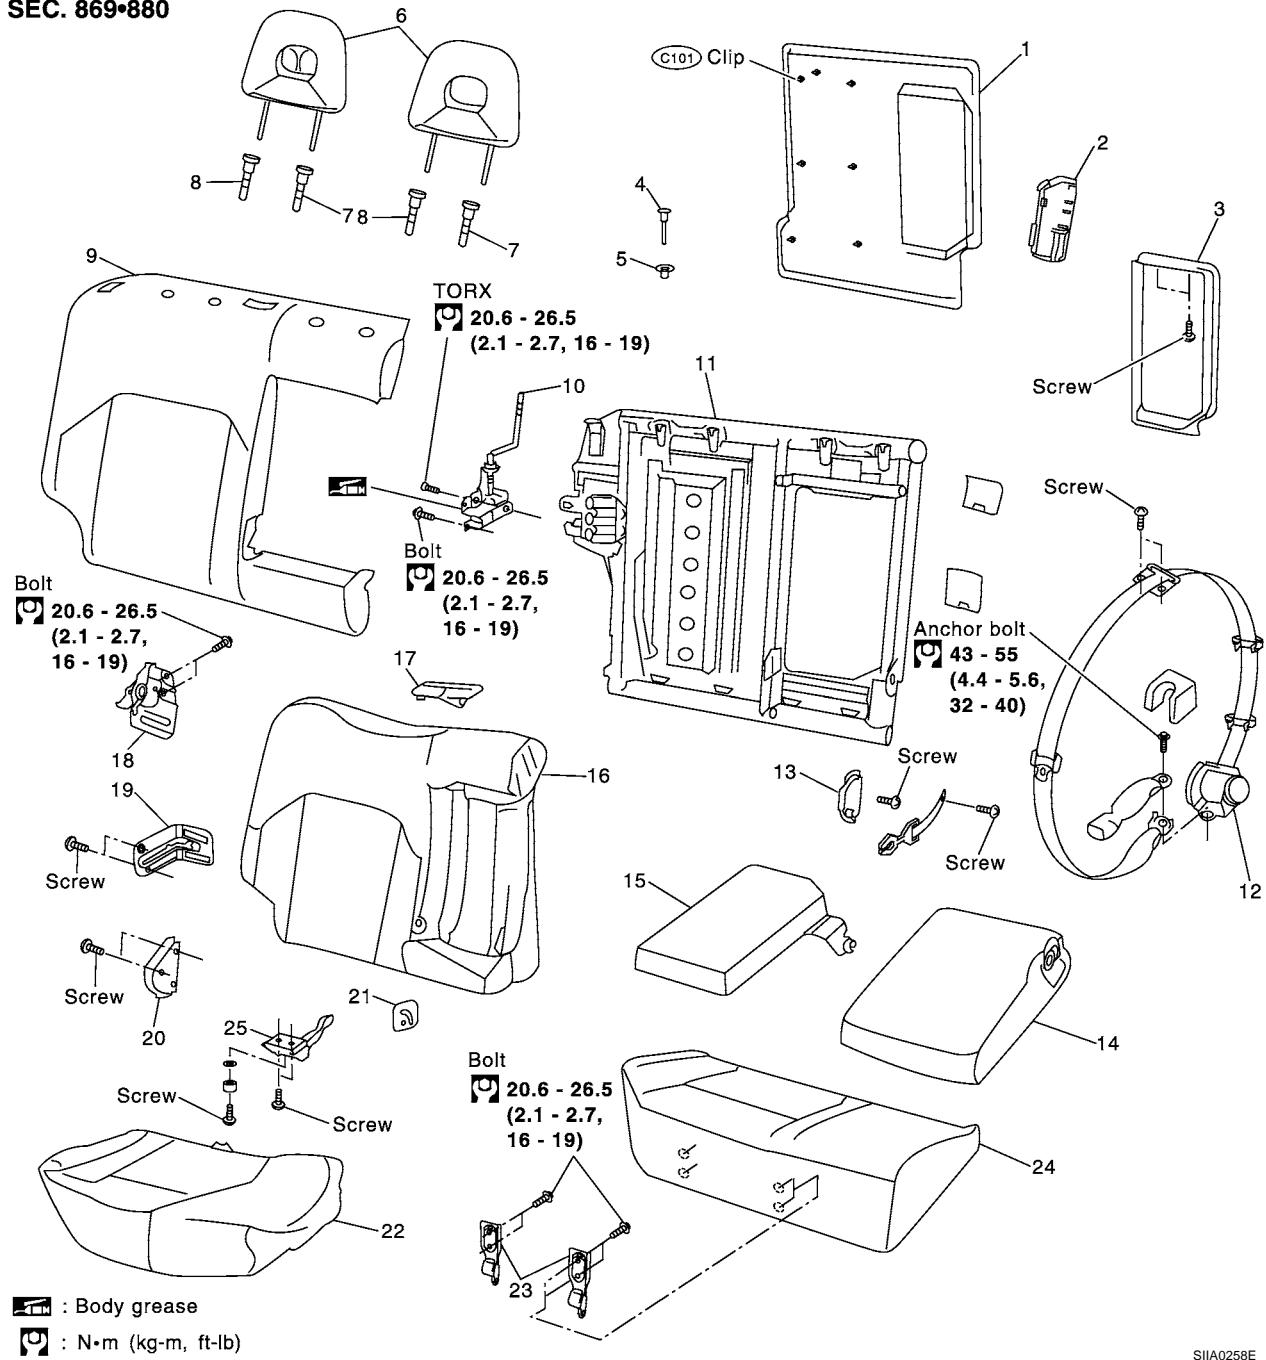


1. Rear seat back board
2. Inner hinge cover
3. Rear seat backboard finisher
4. Rear seat back knob
5. Rear seat back knob finisher
6. Headrest
7. Headrest holder (free)
8. Headrest holder (locked)
9. Seat back pad
10. Rear seat lock
11. Rear seat back frame
12. Rear seat belt (center)
13. Armrest bracket cover
14. Armrest
15. Armrest lid board
16. Rear seat back trim
17. Seat belt escutcheon
18. Rear back side bracket
19. Rear seat lock protector
20. Side hinge cover
21. Armrest bracket cover
22. Rear seat cushion trim
23. Rear seat cushion stay
24. Rear seat cushion pad
25. Cushion lock

Removal and Installation SEAT CUSHION


EIS000NS

1. Lift to fold seat cushion up.
2. Pivot pin on rear seat striker downward. Slide it to left of vehicle.
3. Slide the cushion to the left side of the vehicle. Remove it from the striker.

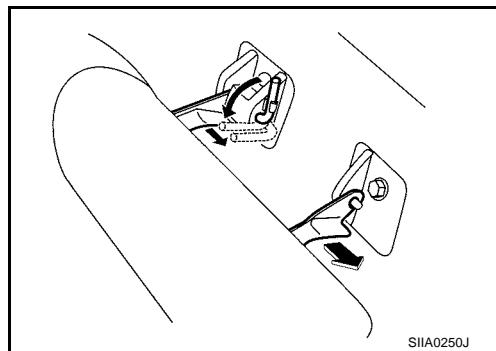


IN THE SEAT BACK


1. Remove inner hinge cover.

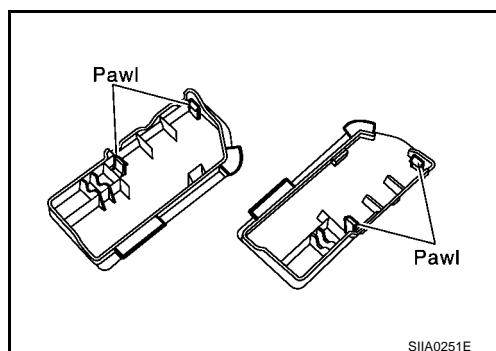

2. Remove bolts on center bracket.

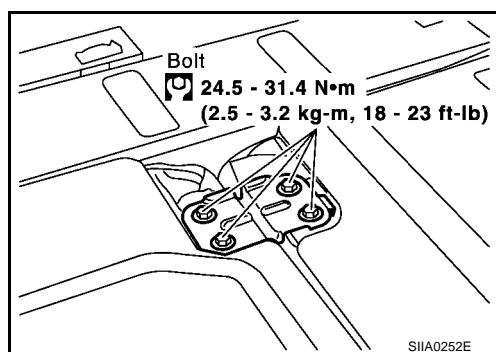

3. Remove finisher and side bracket nuts and bolts. Remove seat back.

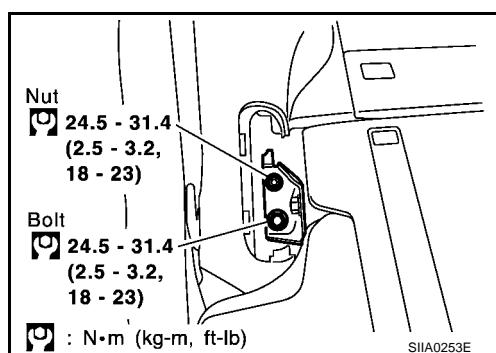


A
B
C
D
E
F
G
H

SE
J
K
L
M

REAR SEAT


REAR SEAT STRIKER (SIDE)

1. Remove luggage-side lower finisher.
2. Remove bolts.

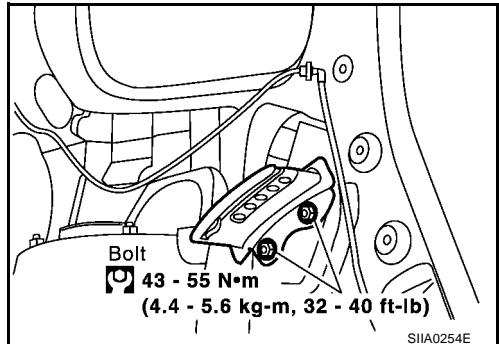


REAR SEAT CENTER BRACKET

1. Remove rear seat back.
2. Remove nuts and bolt.

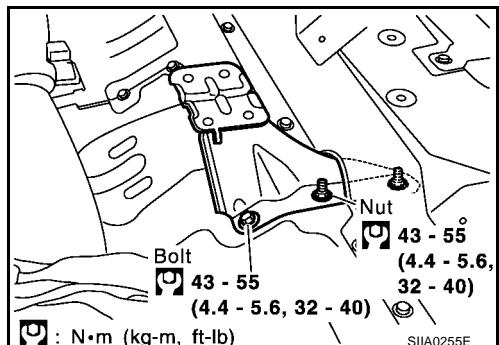


REAR SEAT STRIKER (FLOOR)

1. Remove rear seat cushion.
2. Remove bolt.

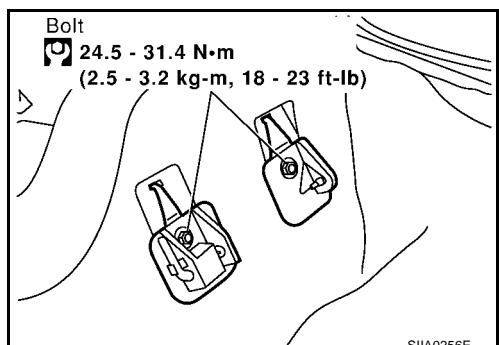

Disassembly and Assembly REAR SEAT BACK LOCK KNOB

- Turn knob counterclockwise to remove.

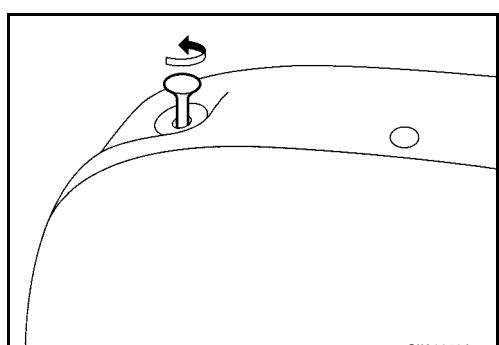


ARMREST

1. Push armrest and lid forward. Remove clip.
2. Slide armrest and lid to the left, and pull out the pin from the hole on the seat back.

REAR SEAT

3. Slide armrest and lid to the right and remove from the seat back pin.

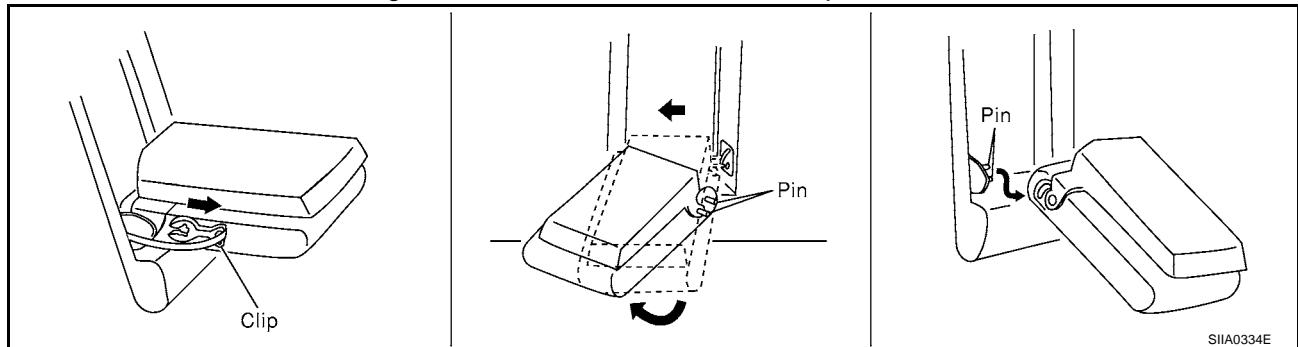

REAR SEAT
