



SECTION

WIPER, WASHER & HORN

A
B
C
D
E
F
G
H
I
J
K
L
M

CONTENTS

PRECAUTIONS	3	REMOVAL	16
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	INSTALLATION	16
Wiring Diagrams and Trouble Diagnosis	3	Washer Nozzle Adjustment	17
FRONT WIPER AND WASHER SYSTEM	4	Removal and Installation for Rear Washer Nozzle..	17
System Description	4	REMOVAL	17
WIPER OPERATION	4	INSTALLATION	17
WASHER OPERATION	4	Inspection for Washer Nozzle	17
Wiring Diagram — WIPER —	6	CHECK VALVE	17
Terminal and Reference Values for Combination Switch	7	Removal and Installation for Wiper and Washer Switch	18
Removal and Installation for Front Wiper Arms, Adjustment for Wiper Arms Stop Location	7	Removal and Installation for Washer Tank	18
Removal and Installation for Wiper Motor and Linkage	8	Removal and Installation for Washer Pump	18
REMOVAL	9	Washer Tube Layout	18
INSTALLATION	9	HEADLAMP WASHER	19
Washer Nozzle Adjustment	10	System Description	19
Washer Tube Layout	10	Wiring Diagram —HLC—	20
Removal and Installation for Washer Nozzle	11	Removal and Installation for Washer Nozzle	21
REMOVAL	11	REMOVAL	21
INSTALLATION	11	INSTALLATION	21
Inspection for Washer Nozzle	11	Inspection for Washer Nozzle	21
CHECK VALVE	11	CHECK VALVE	21
Removal and Installation for Wiper and Washer Switch	11	Removal and Installation for Washer Tank	21
REMOVAL	11	Removal and Installation for Washer Pump	21
INSTALLATION	11	Washer Tube Layout	22
Removal and Installation for Washer Tank	12	HORN	23
Removal and Installation for Washer Pump	12	Wiring Diagram — HORN —	23
REAR WIPER AND WASHER SYSTEM	13	Removal and Installation	24
Wiring Diagram — WIP/R —	13	REMOVAL	24
Terminal and Reference Values for Combination Switch	15	INSTALLATION	24
Removal and Installation for Rear Wiper Arms	15	CIGARETTE LIGHTER	25
WIPER ARMS	15	Wiring Diagram — CIGAR —	25
Removal and Installation for Wiper Motor and Linkage	16	Removal and Installation	26

INSTALLATION	28
Removal and Installation for Rear Power Socket ...	28
REMOVAL	28
INSTALLATION	28

PRECAUTIONS

PRECAUTIONS

PFP:00011

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

EKS0079K

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harness connectors.

Wiring Diagrams and Trouble Diagnosis

EKS0079L

When you read wiring diagrams, refer to the followings:

- Refer to [GI-13, "How to Read Wiring Diagrams"](#) in GI section
- Refer to [PG-2, "POWER SUPPLY ROUTING"](#) for power distribution circuit in PG section

When you perform trouble diagnosis, refer to the followings:

- Refer to [GI-10, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"](#) in GI section
- Refer to [GI-23, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section

A

B

C

D

E

F

G

H

I

J

WW

L

M

FRONT WIPER AND WASHER SYSTEM

FRONT WIPER AND WASHER SYSTEM

PFP:28810

System Description

WIPER OPERATION

EKS0032N

The wiper switch is controlled by a lever built into the combination switch. There are three wiper switch positions:

- LO speed
- HI speed
- INT (Intermittent)

With the ignition switch in the ON or START position, power is supplied

- through 20A fuse [No. 6, located in the fuse block (J/B)]
- to front wiper motor terminal 4.

LOW AND HIGH SPEED WIPER OPERATION

Ground is supplied to front wiper and washer switch terminal 17 through body grounds E24 and E50.

When the wiper switch is placed in the LO position, ground is supplied

- through terminal 14 of the front wiper and washer switch
- to front wiper motor terminal 3.

With power and ground supplied, the wiper motor operates at low speed.

When the wiper switch is placed in the HI position, ground is supplied

- through terminal 16 of the front wiper and washer switch
- to front wiper motor terminal 1.

With power and ground supplied, the wiper motor operates at high speed.

AUTO STOP OPERATION

With wiper switch turned OFF, wiper motor will continue to operate until wiper arms reach windshield base.

When wiper arms are not located at base of windshield with wiper switch OFF, ground is provided

- from terminal 14 of the front wiper and washer switch
- to front wiper motor terminal 3, in order to continue wiper motor operation at low speed.

Ground is also supplied

- through terminal 13 of the front wiper and washer switch
- to front wiper motor terminal 2
- through terminal 6 of the front wiper motor, and
- through body grounds E24 and E50.

When wiper arms reach base of windshield, front wiper motor terminals 4 and 2 are connected instead of terminals 6 and 2. Wiper motor will then stop wiper arms at the STOP position.

INTERMITTENT OPERATION

The front wiper motor operates the wiper arms one time at low speed at a set interval of approximately 1 to 13 seconds. This feature is controlled by the wiper amplifier (INT SW) combined with front wiper and washer switch.

When the wiper switch is placed in the INT position, ground is supplied to wiper amplifier.

The desired interval time is input to wiper amplifier (INT VR) from wiper volume switch combined with front wiper and washer switch.

Then intermittent ground is supplied

- through wiper amplifier (OUTPUT) and
- through terminal 14 of front wiper and washer switch
- to front wiper motor terminal 3

The wiper motor operates at low speed at the desired interval.

WASHER OPERATION

With the ignition switch in the ON or START position, power is supplied

- through 20A fuse [No. 6, located in the fuse block (J/B)]
- to front washer motor terminal 1.

When the lever is pulled to the WASH position, ground is supplied

FRONT WIPER AND WASHER SYSTEM

- from body grounds E24 and E50
- through terminal 17 of the front wiper and washer switch, and
- through terminal 18 of the front wiper and washer switch
- to front washer motor terminal 2.

With power and ground supplied, the washer motor operates.

When the lever is pulled to the WASH position for one second or more, the wiper motor operates at low speed for approximately 3 seconds to clean windshield. This feature is controlled by the wiper amplifier in the same manner as the intermittent operation.

A

B

C

D

E

F

G

H

I

J

WW

L




M

FRONT WIPER AND WASHER SYSTEM

Wiring Diagram — WIPER —

EKS00320

  WW-WIPER-01

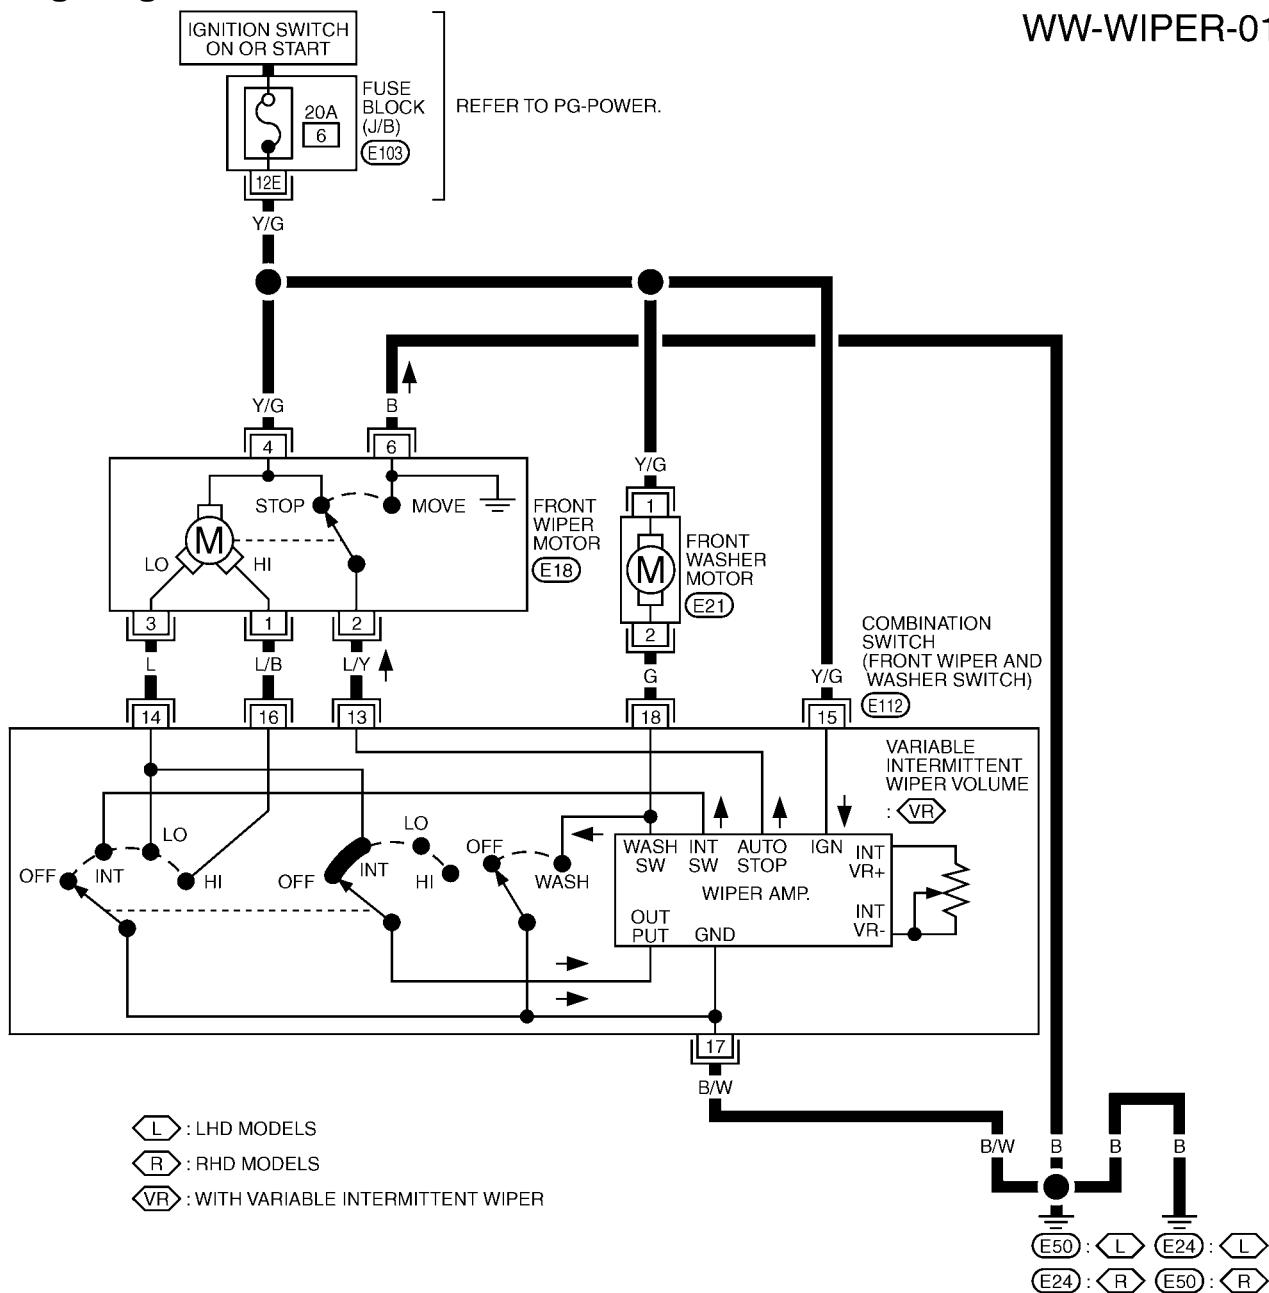

TKWA0104E

FRONT WIPER AND WASHER SYSTEM

Terminal and Reference Values for Combination Switch


EKS0032P

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION		DATA (DC Voltage)	
			IGNI-TION SWITCH	CONDITION OR OPERATION		
13	L/Y	Wiper auto Stop signal	ON	Wiper is moving		Approx. 0
				Wiper while the vehicle is stopped		Approx. 12
14	L	Wiper motor Operation signal (LO)	ON	Wiper switch	OFF	Approx. 12
					LO	Approx. 0
15	Y/G	Ignition ON signal	ON	—		Approx. 12
16	L/B	Wiper motor Operation signal (HI)	ON	Wiper switch	OFF	Approx. 12
					HI	Approx. 0
17	B/W	Ground	OFF	—		—
18	G	Washer switch signal	ON	Wiper switch	WASH	Approx. 0
					OFF	Approx. 12

Removal and Installation for Front Wiper Arms, Adjustment for Wiper Arms Stop Location

EKS0032Q

- Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
- Lift the blade up and then set it down onto glass surface to set the blade center to clearance "L1" & "L2" immediately before tightening nut.
- Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".

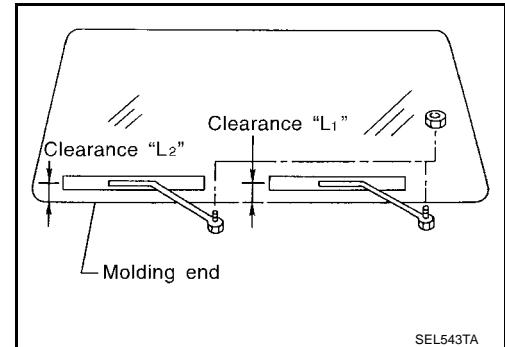


- Ensure that wiper blades stop within clearance "L1" & "L2".

Clearance "L1": 49.2 - 64.2 mm (1.937 - 2.528 in)


Clearance "L2": 39.3 - 54.3 mm (1.547 - 2.138 in)

- Tighten wiper arm nuts to specified torque.

**Front wiper: 20.6 - 26.5 N·m
(2.1 - 2.7 kg·m, 16 - 19 ft-lb)**

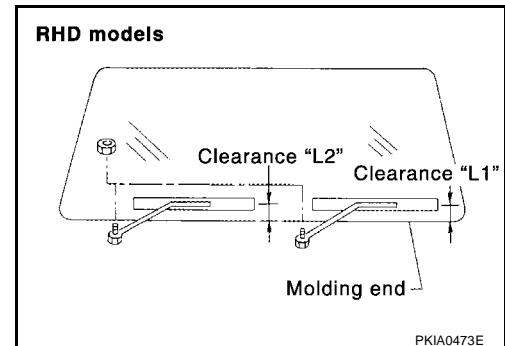

- Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

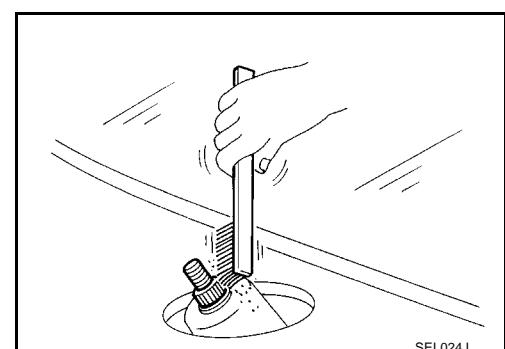


FRONT WIPER AND WASHER SYSTEM

Removal and Installation for Wiper Motor and Linkage

EKS0032R


RHD models

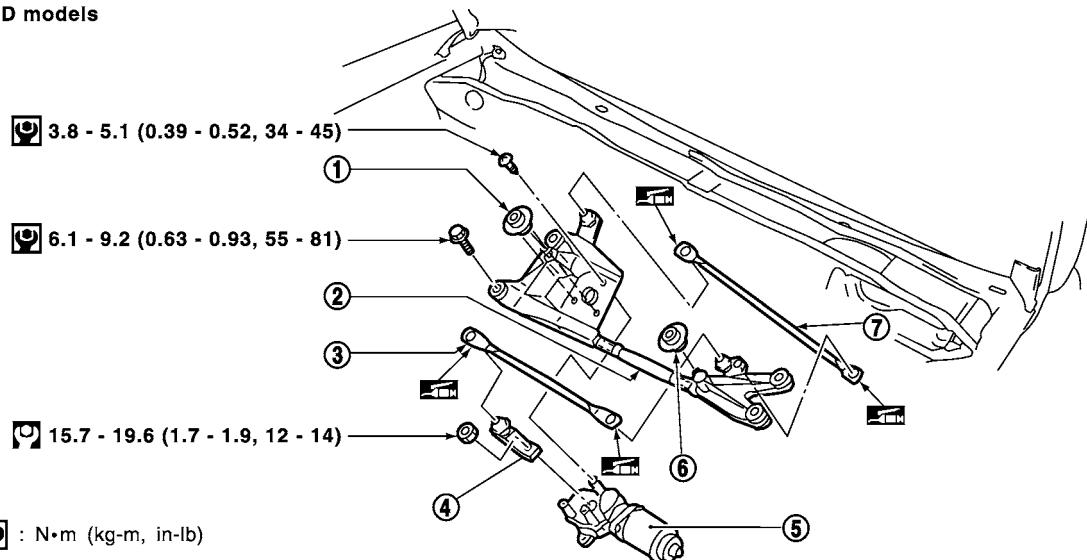

SKIA0015E

1. Rubber
2. Wiper frame
3. Wiper link
4. Motor arm
5. Wiper Motor
6. Rubber
7. Wiper link

LHD models

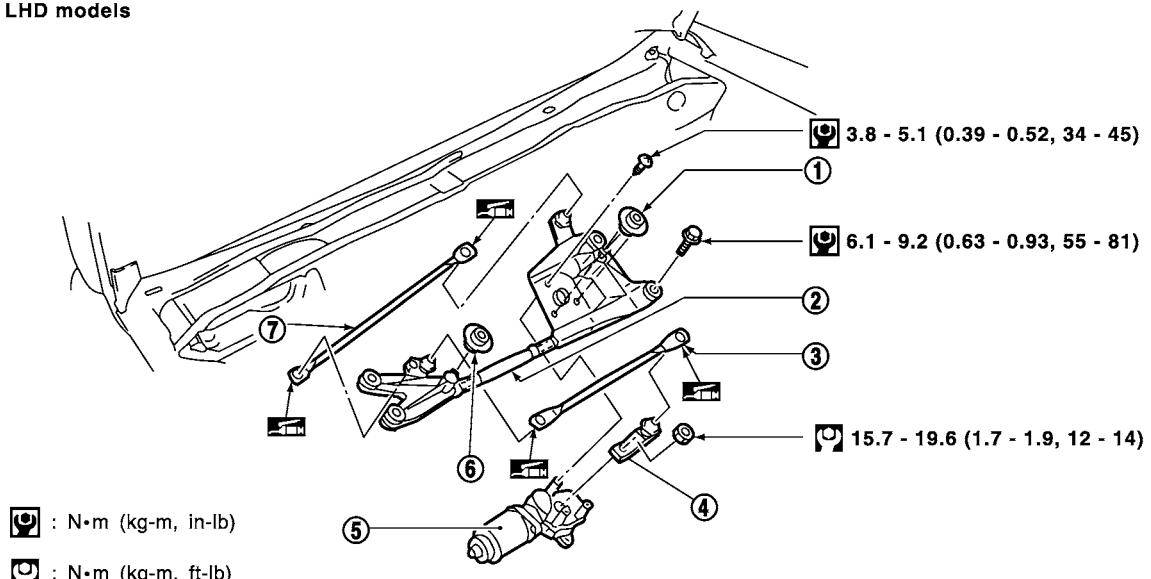


PKIA0474E

1. Rubber
2. Wiper frame
3. Wiper link
4. Motor arm
5. Wiper Motor
6. Rubber
7. Wiper link


FRONT WIPER AND WASHER SYSTEM

REMOVAL

1. Operate the wiper motor, and stop it at the auto stop position.
2. Remove wiper arm from the vehicle.
3. Remove the cowl top cover. Refer to [EI-12, "COWL TOP"](#).
4. Remove 4 screws and remove wiper motor assembly from the vehicle.
5. Disconnect wiper motor connector.
6. Remove wiper link from wiper frame.

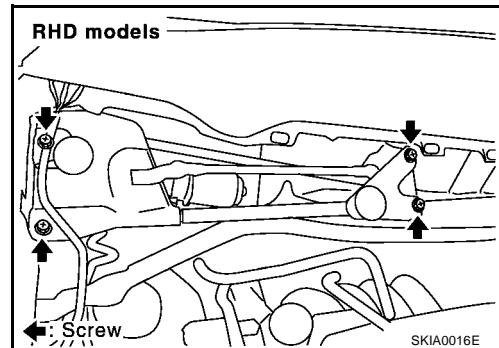


7. Remove wiper motor from wiper frame.

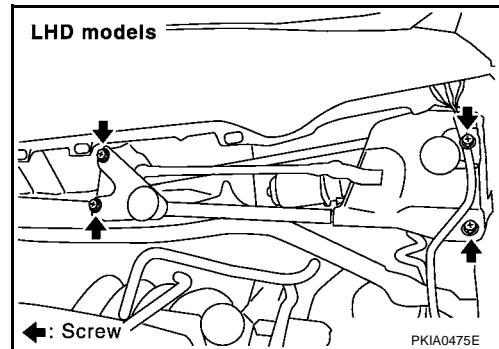

INSTALLATION


1. Connect wiper motor to connector. Turn the wiper switch ON to operate wiper motor, then turn the wiper switch OFF (auto stop).
2. Disconnect wiper motor connector.
3. Install wiper motor to the wiper frame.
4. Install wiper motor assembly to the vehicle.
5. Install wiper link to the wiper motor arm.
6. Connect wiper motor connector. Turn the wiper switch ON to operate the wiper motor, then turn wiper switch OFF (auto stop)
7. Rotate motor arm to the upper limit position.

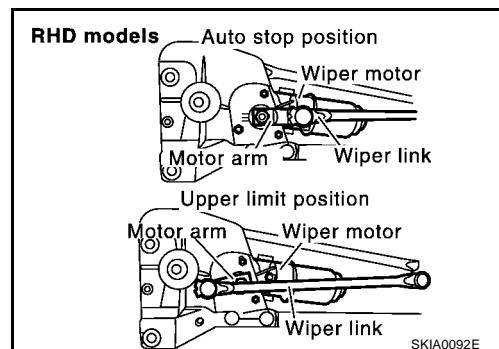

8. Install wiper motor assembly to the vehicle.
9. Turn the wiper switch ON to operate the Wiper motor, then turn wiper switch OFF (auto stop)
10. Install cowl top cover. Refer to [EI-12, "COWL TOP"](#).
11. Install wiper arm to the vehicle.

CAUTION:

- Do not drop the wiper motor or cause it to contact other parts.
- Check the grease conditions of the motor arm and wiper link joint (at retainer). Apply grease if necessary.

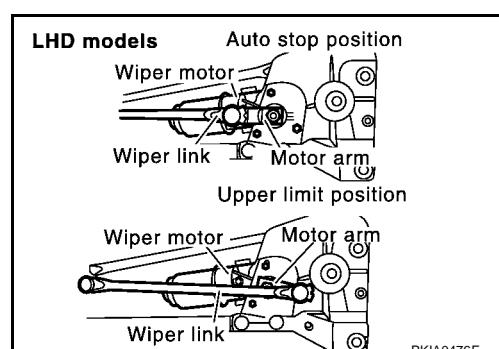


FRONT WIPER AND WASHER SYSTEM

Washer Nozzle Adjustment

EKS0032S

Adjust washer nozzle with suitable tool as shown in the figure.

Adjustable range : $\pm 10^\circ$ (In any direction)

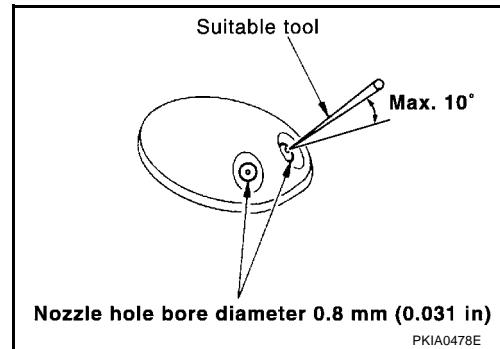


Unit: mm (in)			
*1	342 (13.46)	*5	138 (5.43)
*2	324 (12.76)	*6	155 (6.10)
*3	433 (17.05)	*7	386 (15.20)
*4	237 (9.33)	*8	378 (14.88)


NOTE:

- *: The diameters of these circles are less than 80 mm (3.15 in).

LHD models

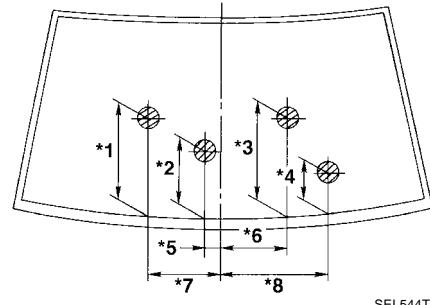


RHD models

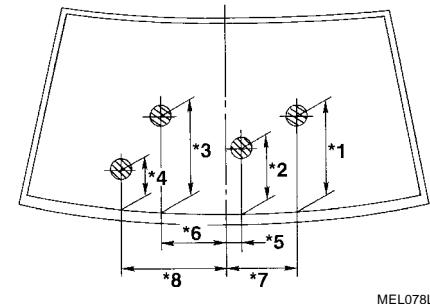

Washer Tube Layout

EKS0032T

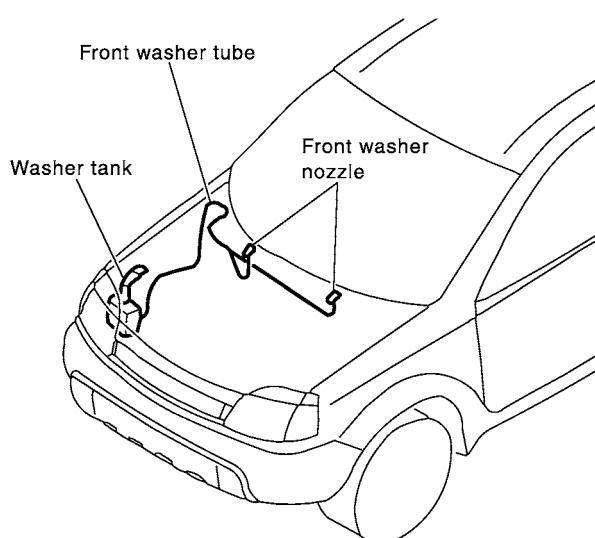


PKIA0539E

FRONT WIPER AND WASHER SYSTEM

Removal and Installation for Washer Nozzle REMOVAL

EKS0032U

1. Push washer nozzle pawl toward engine hood to pull out.

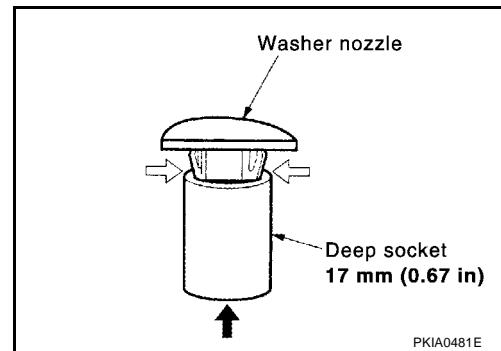

PKIA0481E

INSTALLATION


1. After connecting washer hose, press nozzle from cowl top cover surface.
2. Assemble nozzle and socket.
3. Adjust nozzle injection position.

Inspection for Washer Nozzle

EKS0032V

CHECK VALVE

- Blow air in the injection direction, and check that air flows only one way. Make sure that the reverse direction (inhale) is not possible.

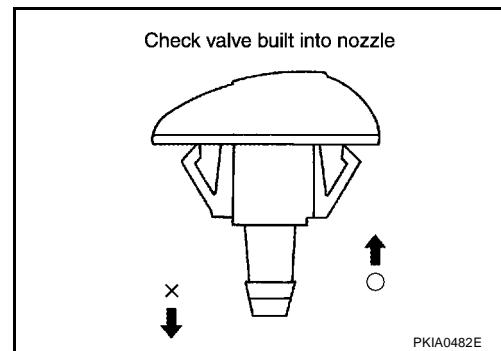


PKIA0482E

Removal and Installation for Wiper and Washer Switch

EKS0032W

REMOVAL

1. Remove steering column cover.
2. Remove wiper washer switch connector.
3. Remove two screws then remove wiper washer switch from the base.

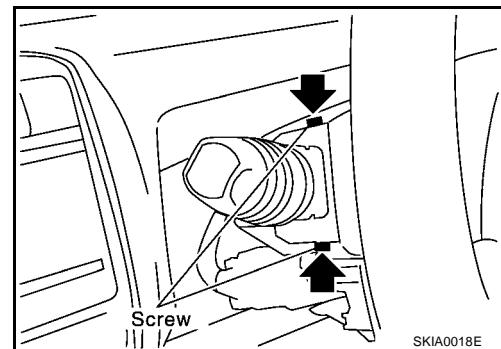

SKIA0018E

INSTALLATION

Installation is in the reverse order of removal.

WW

L


M

FRONT WIPER AND WASHER SYSTEM

Removal and Installation for Washer Tank

EKS0032X

1. Remove washer tank inlet installation screw and pull out washer tank inlet.
2. Remove fender protector, refer to [EI-13, "FENDER PROTECTOR"](#)
3. Remove washer pump connector.
4. Remove washer tank installation screw and pawl.

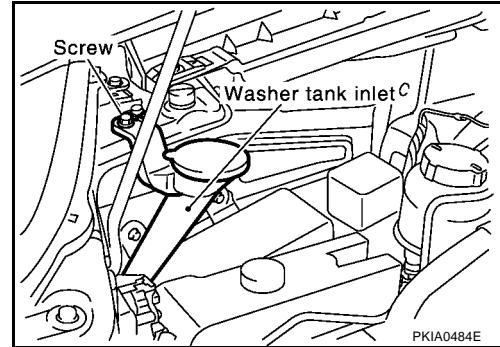


5. Remove washer hose, and remove the washer tank from the vehicle.

CAUTION:

After installation, add water up to the upper level of the washer tank inlet, and check for water leaks.

Washer tank installation screw

 : 3.8 - 5.1 N·m (0.39 - 0.52 kg·m, 34-45 ft-lb)

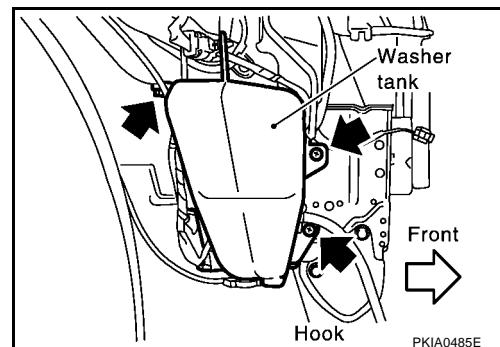


Removal and Installation for Washer Pump

EKS0032Y

1. Remove fender protector, refer to [EI-13, "FENDER PROTECTOR"](#)
2. Remove washer pump connector and hose.
3. Pull out washer pump in the direction of the arrow in the figure, and remove the washer pump from the washer tank.

CAUTION:

When installing washer pump, there should be no packing twists, etc.

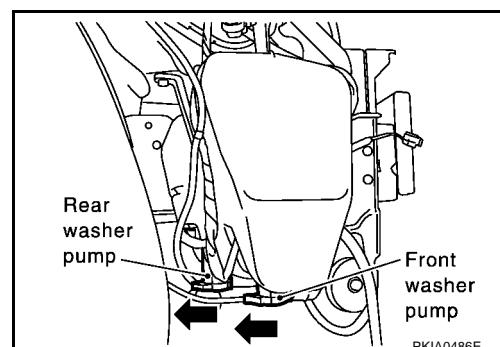





REAR WIPER AND WASHER SYSTEM

REAR WIPER AND WASHER SYSTEM




PFP:28710

Wiring Diagram — WIP/R —

   EKS0032Z


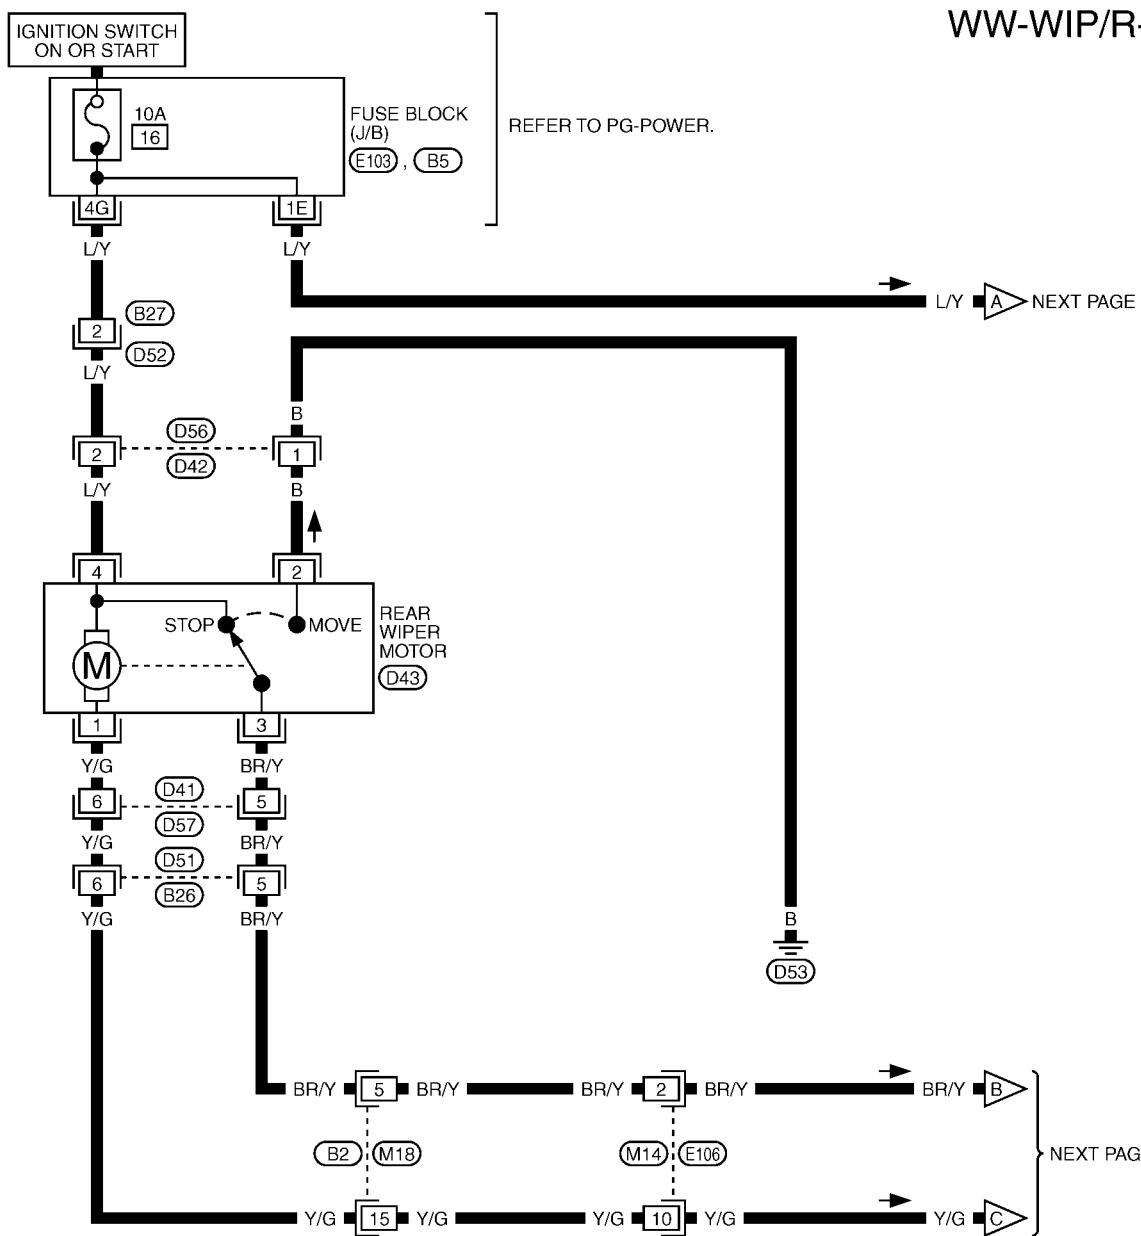


   REFER TO THE FOLLOWING.
E103 , B5 -FUSE BLOCK-
JUNCTION BOX (J/B)



REAR WIPER AND WASHER SYSTEM

 WW-WIP/R-02

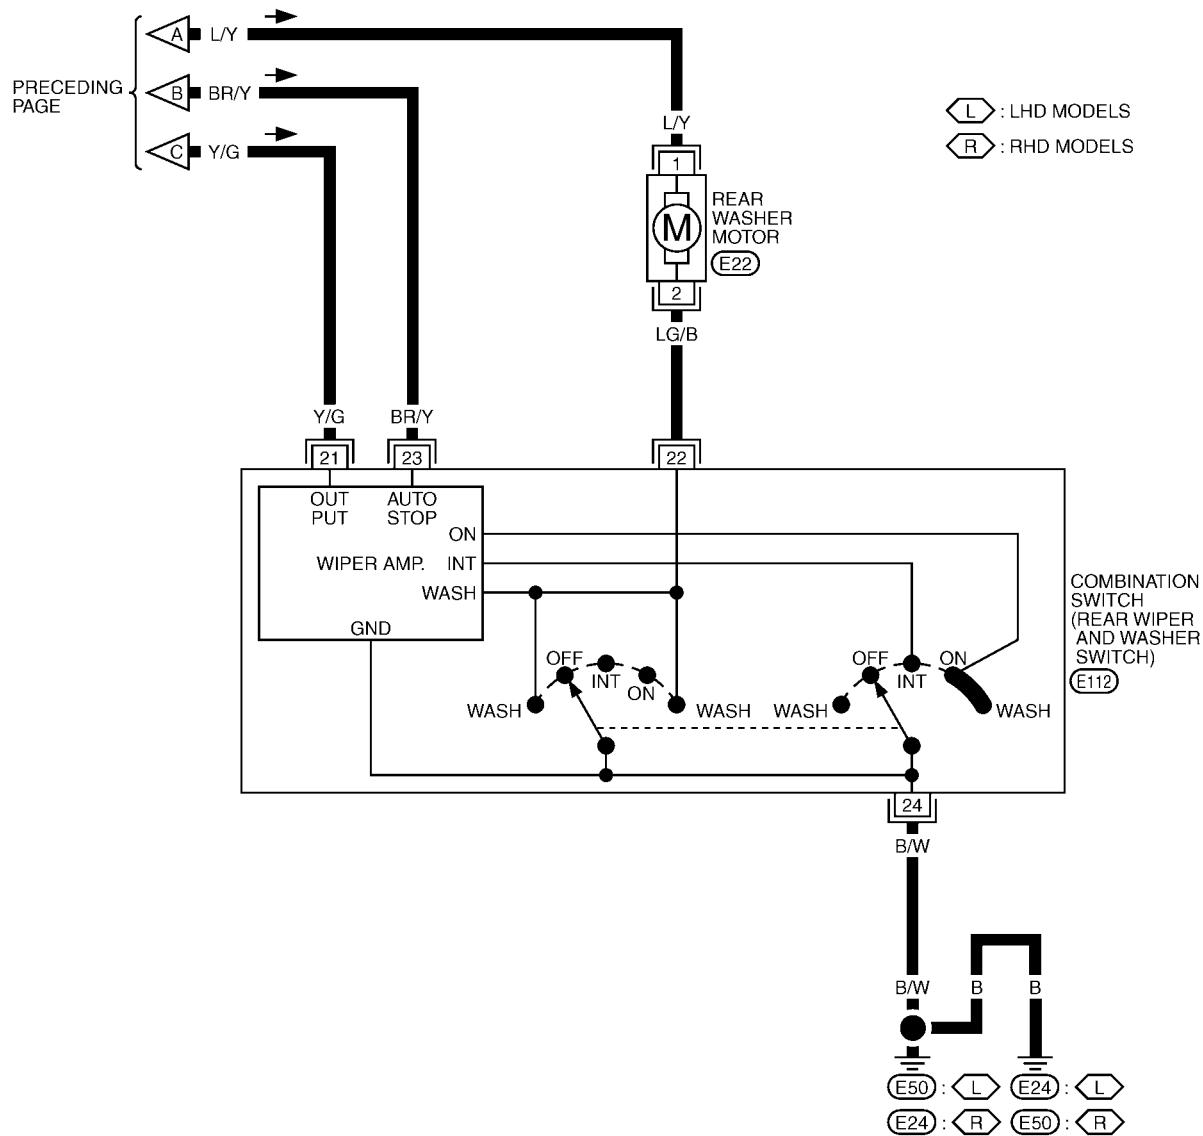


TKWA0106E

REAR WIPER AND WASHER SYSTEM

Terminal and Reference Values for Combination Switch

EKS00330

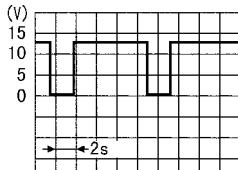TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION		DATA(DC Voltage)	
			IGNI-TION SWITCH	CONDITION OR OPERATION		
21	Y/G	Wiper motor Operation signal (ON)	ON	Wiper switch	OFF	Approx. 12
					ON	Approx. 0
22	LG/B	Washer switch signal	ON	Wiper switch	WASH	Approx. 0
					OFF	Approx. 12
23	BR/Y	Wiper motor Operation signal	ON	Wiper switch: INT		 SKIA0083J
24	B/W	Ground	OFF	—		—

Removal and Installation for Rear Wiper Arms WIPER ARMS

EKS00331

1. Turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
2. Lift the blade up and then set it down onto glass surface. Set the black center to clearance "L" immediately before tightening the nut.
3. Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
4. Ensure that wiper blades stop on the lowest heat wire.



- Center to clearance "L".

"L" : $63.1 \pm 7.5 \text{ mm (2.484} \pm 0.295 \text{ in)}$

- Tighten windshield wiper arm nuts to specified torque.

 : $12.7 - 17.6 \text{ N}\cdot\text{m (1.4 - 1.7 kg}\cdot\text{m, 10 - 12 ft}\cdot\text{lb)}$


- Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

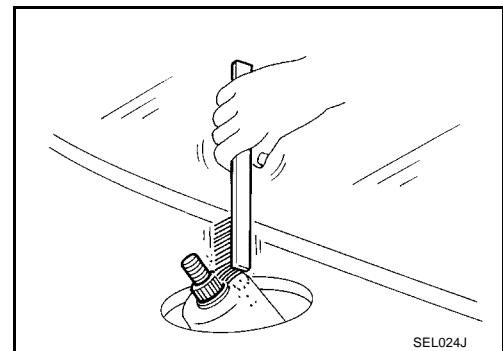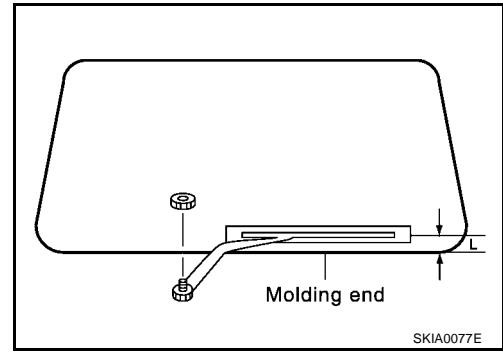

REAR WIPER AND WASHER SYSTEM

Removal and Installation for Wiper Motor and Linkage


EKS0032

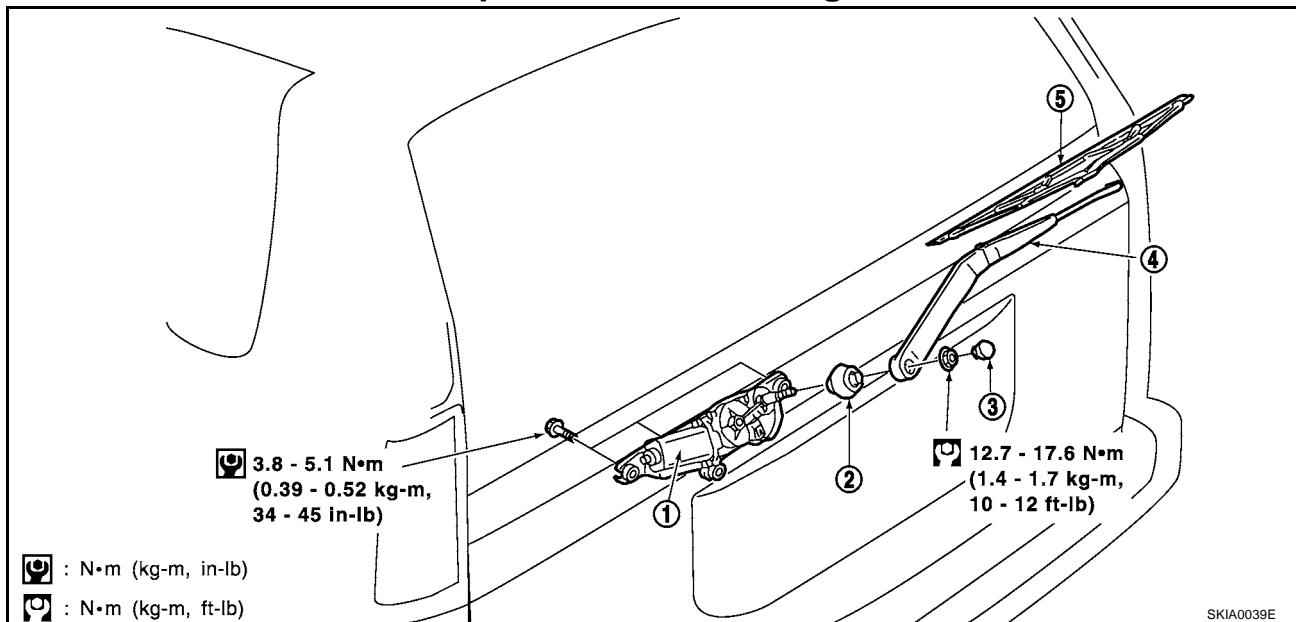

1. Wiper motor
2. Rubber
3. Nut cover
4. Wiper arm
5. Wiper blade

REMOVAL

1. Remove the back door finisher. Refer to [EI-25, "BACK DOOR TRIM"](#) .
2. Operate the wiper motor, and stop it at the auto stop position.
3. Disconnect wiper motor connector.
4. Remove wiper arm from the vehicle.
5. Remove wiper motor from the vehicle.
6. Remove rubber from the vehicle.

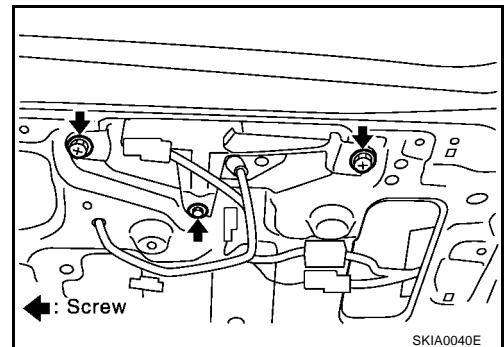

INSTALLATION

1. Install rubber to the vehicle.
2. Install wiper motor to the vehicle.
3. Connect wiper motor to connector. Turn the wiper switch ON to operate wiper motor, then turn the wiper switch OFF (auto stop).
4. Install wiper arm to the vehicle.
5. Install back door finisher. Refer to [EI-25, "BACK DOOR TRIM"](#) .

- **Tighten windshield wiper arm nuts to specified torque.**

: 12.7 - 17.6 N·m (1.3 - 1.8 kg·m, 10 - 13 ft-lb)

- **Tighten windshield wiper motor nuts to specified torque.**

: 3.8 - 5.1 N·m (0.39 - 0.52 kg·m, 34 - 45 in-lb)

CAUTION:

- Do not drop the wiper motor or cause it to contact other parts.
- Check the grease conditions of the motor arm and wiper link joint (at retainer). Apply grease if necessary.


REAR WIPER AND WASHER SYSTEM

Washer Nozzle Adjustment

EKS00333


- Adjust washer nozzle with suitable tool as shown in the figure at left.

Adjustable range : $\pm 10^\circ$ (In any direction)

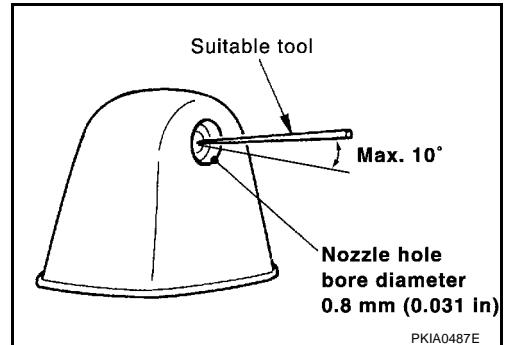

Unit: mm (in)	
*H	90 (3.54)
*L	150 (5.91)


*: The diameter of this circle is less than 40 mm (1.57in).

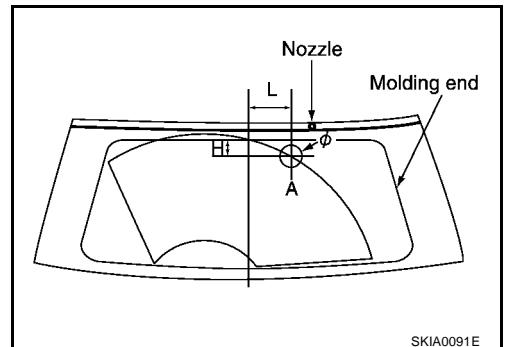

Removal and Installation for Rear Washer Nozzle REMOVAL

EKS00334

- Remove washer hose from washer nozzle.
- Remove washer nozzle installation screw and remove washer nozzle.

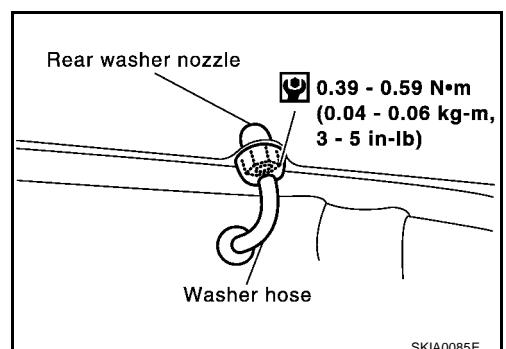

INSTALLATION


M

- After connecting washer hose, press nozzle from cowl top cover surface.
- Assemble nozzle and socket.
- Adjust nozzle injection position.

Inspection for Washer Nozzle CHECK VALVE

EKS00335

- Blow air in the injection direction, and check that air flows only one way. Make sure that the reverse direction (inhale) is not possible.

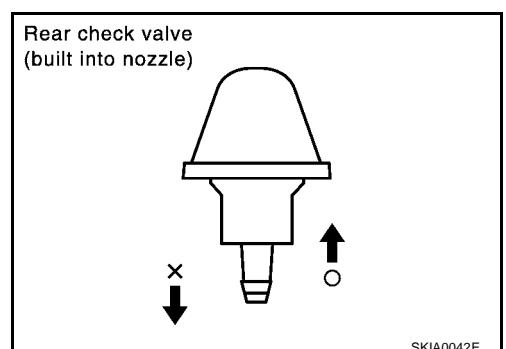

REAR WIPER AND WASHER SYSTEM

Removal and Installation for Wiper and Washer Switch

EKS00336

Refer to [WW-11, "Removal and Installation for Wiper and Washer Switch"](#) .

Removal and Installation for Washer Tank

EKS00337

Refer to [WW-12, "Removal and Installation for Washer Tank"](#) .


Removal and Installation for Washer Pump

EKS00338

Refer to [WW-12, "Removal and Installation for Washer Pump"](#) .

Washer Tube Layout

EKS00339

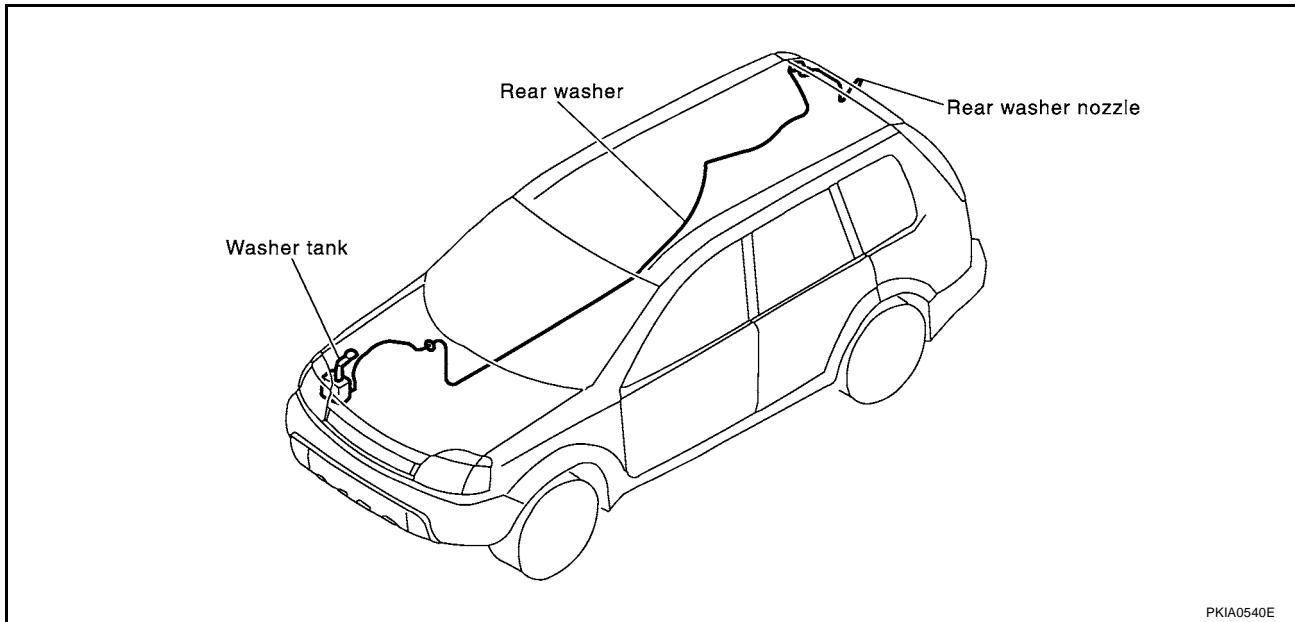

PKIA0540E

HEADLAMP WASHER

PFP:28620

System Description

EKS0036H

The headlamp washer is controlled by the headlamp washer timer. With power and ground supplied, the headlamp washer motor operates.

Power is supplied at all times

- through 30A fusible link (letter E, located in fuse and fusible link box)
- to headlamp washer motor terminal 1, and
- through 10A fuse (No. 31, located in fuse and fusible link box)
- to lighting switch terminal 11.

With ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 11, located in fuse block (J/B)]
- to headlamp washer timer terminal 4.

Ground is supplied to headlamp washer timer terminal 5 through body grounds E24 and E50. When headlamp washer switch is pushed during lighting switch is in 1st or 2ND position, ground is supplied

- to headlamp washer timer terminal 6
- through headlamp washer switch and body grounds M27 and M70, and
- to headlamp washer motor terminal 2
- through headlamp washer timer terminal 2.

A

B

C

D

E

F

G

H

I

J

WW




L

M

HEADLAMP WASHER

Wiring Diagram –HLC–

  EKS00361

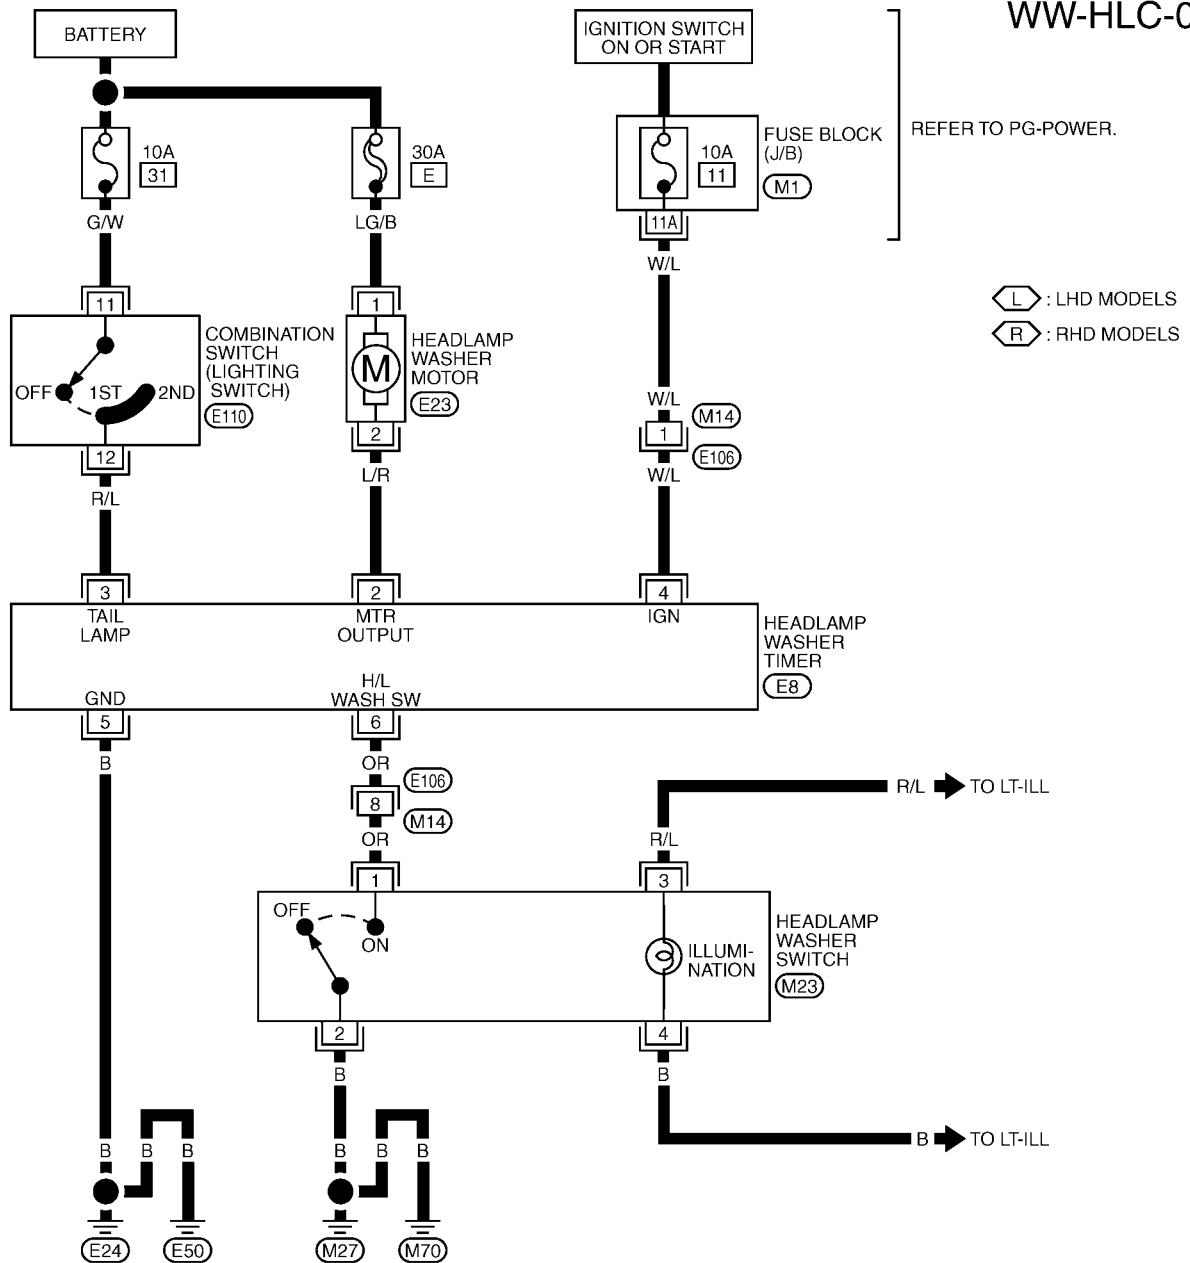

I REFER TO THE FOLLOWING


**M1 -FUSE BLOCK-JUNCTION
BOX (J/B)**

HEADLAMP WASHER

Removal and Installation for Washer Nozzle REMOVAL

EKS0036J

1. Remove front bumper, refer to [EI-6, "FRONT BUMPER"](#)
2. Remove hose clip and washer nozzle metal clip.
3. Remove washer nozzle from front bumper.

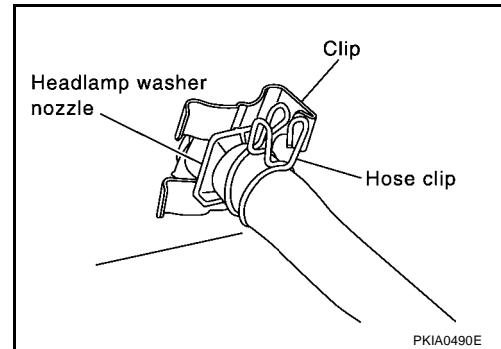


INSTALLATION

Installation is in the reverse order of removal.

Inspection for Washer Nozzle CHECK VALVE

EKS0036K

- Blow air in the injection direction, and check that air flows only one way. Make sure that the reverse direction is not possible.

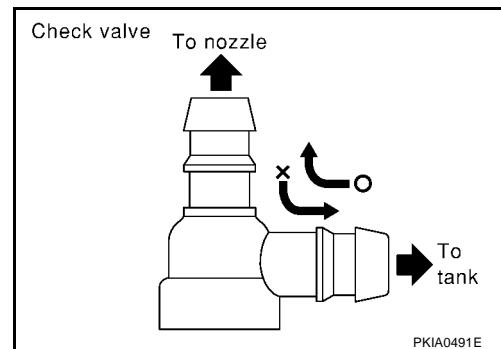

Removal and Installation for Washer Tank

EKS0036L

Refer to [WW-12, "Removal and Installation for Washer Tank"](#)


Removal and Installation for Washer Pump

EKS0036M

1. Remove front bumper, refer to [EI-6, "FRONT BUMPER"](#)
2. Remove washer pump connector and hose.
3. Pull out washer pump in the direction of the arrow in the figure, and remove the washer pump from the washer tank.

CAUTION:


When installing washer pump, there should be no packing twist, etc.

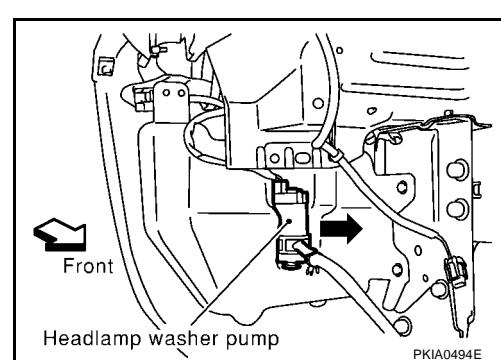

HEADLAMP WASHER

Washer Tube Layout

EKS0036N

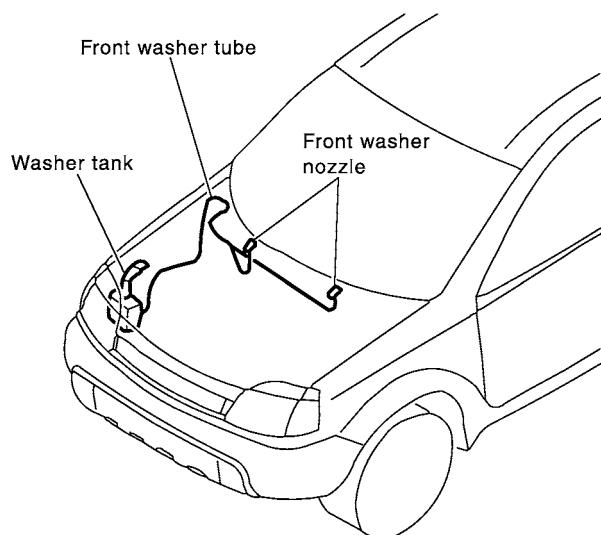

PKIA0539E

HORN



HORN

PFP:25610

Wiring Diagram — HORN —

EKS0033A

 WW-HORN-01

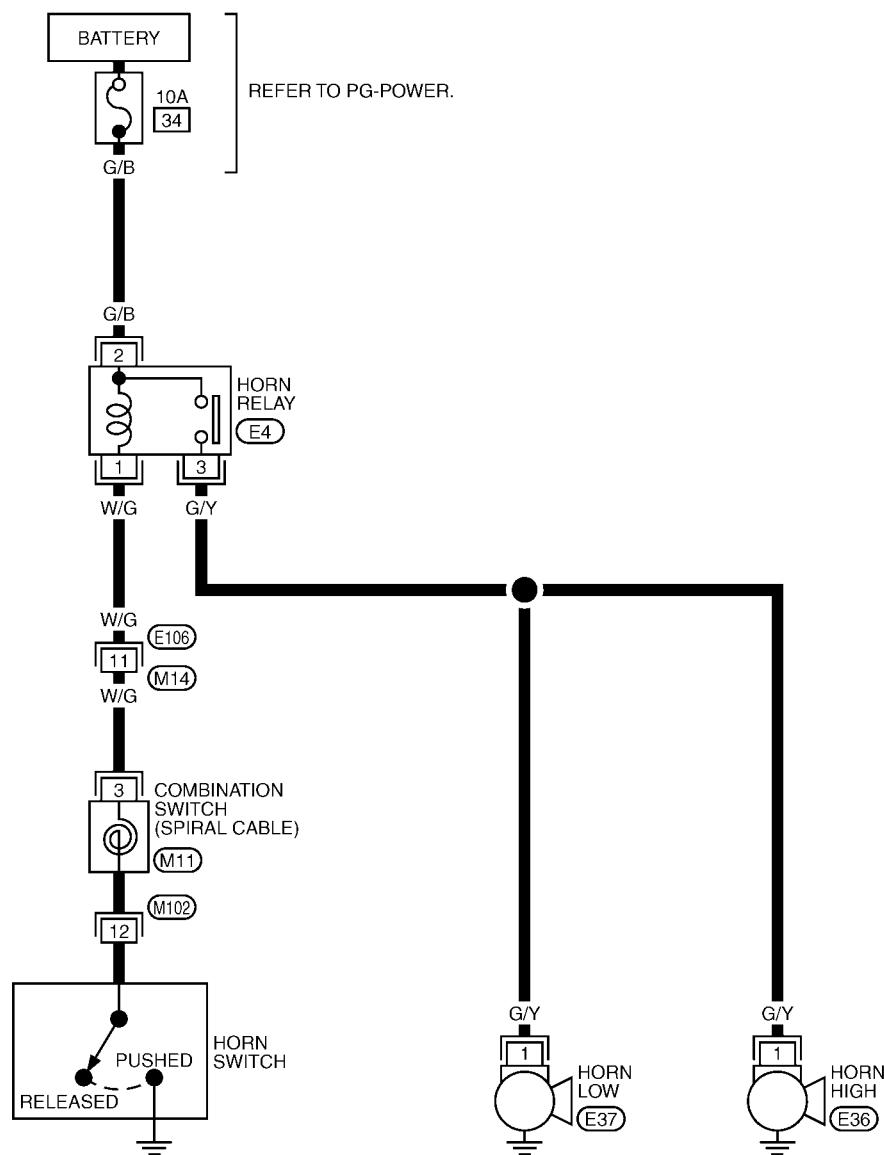

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.


HORN

Removal and Installation

REMOVAL

1. Remove the front grille.refer to [EI-11, "FRONT GRILLE"](#)
2. Disconnect horn connector.
3. Remove horn.

EKS0033B

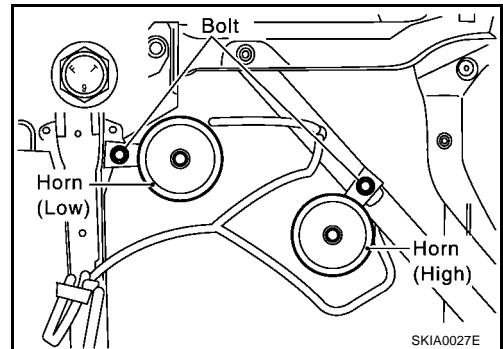

INSTALLATION

Tighten horn bolt to specified torque.

Horn bolt : 16 – 18 N·m(1.6 – 1.8 kg·m, 12 – 13 ft·lb)



CIGARETTE LIGHTER

CIGARETTE LIGHTER Wiring Diagram — CIGAR —

PFP:35330

EKS0033C

 WW-CIGAR-01

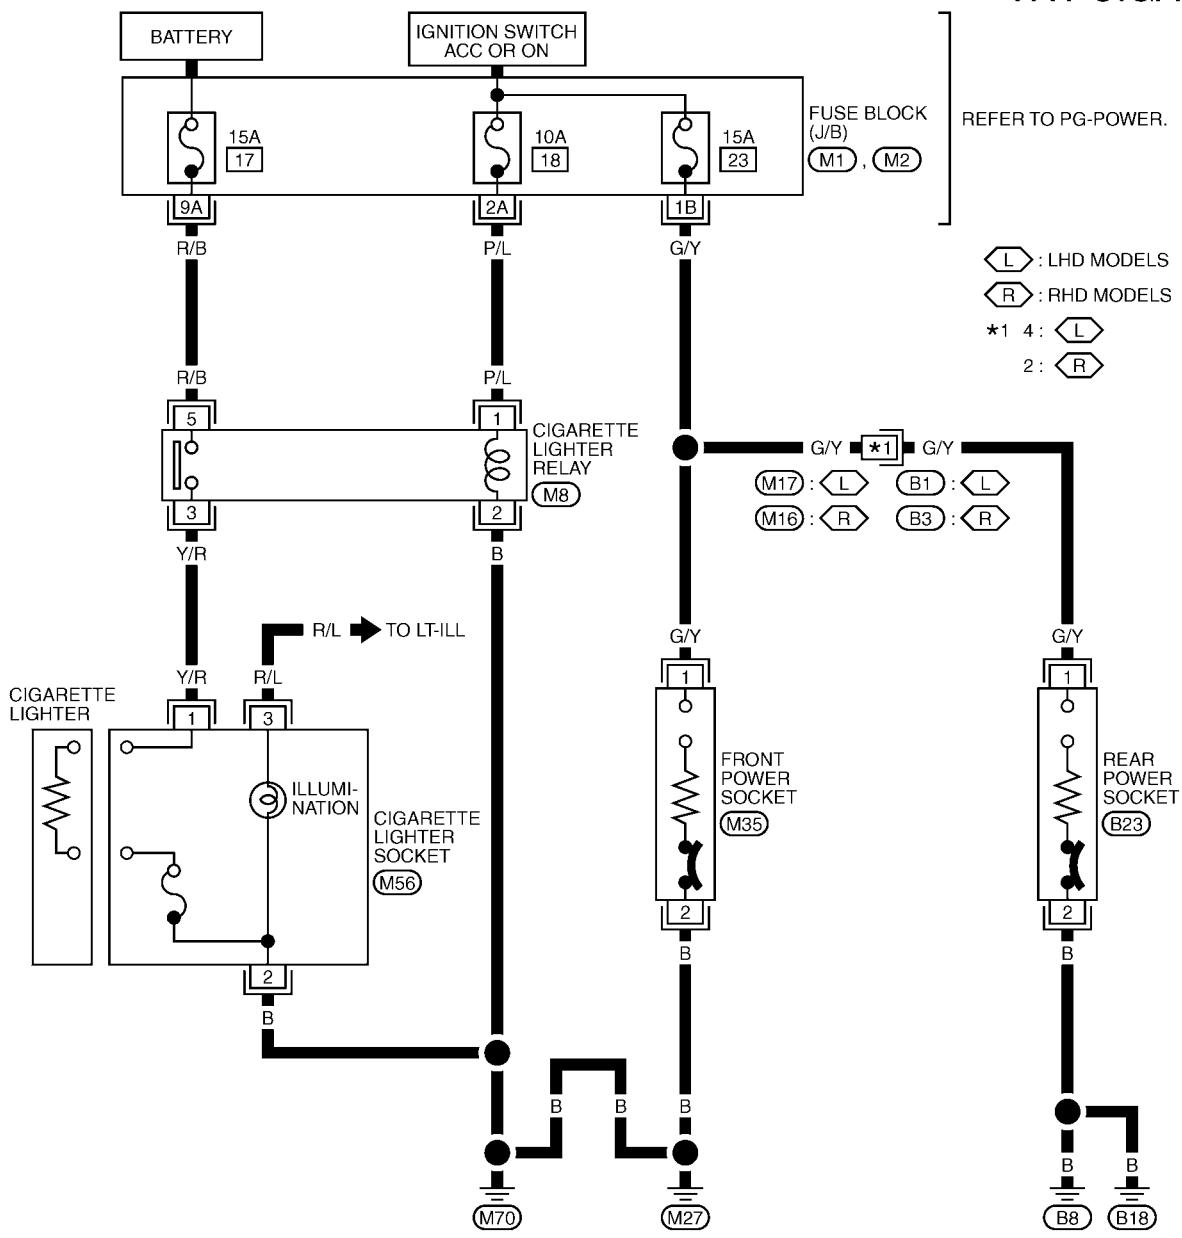


REFER TO THE FOLLOWING.
M1 , M2 -FUSE BLOCK-
JUNCTION BOX (J/B)

CIGARETTE LIGHTER


Removal and Installation REMOVAL

EKS0033D

1. Remove ashtray from instrument lower center panel, refer to [IP-7, "AUDIO UNIT AND POCKET"](#)
2. Remove the cigarette lighter assembly.

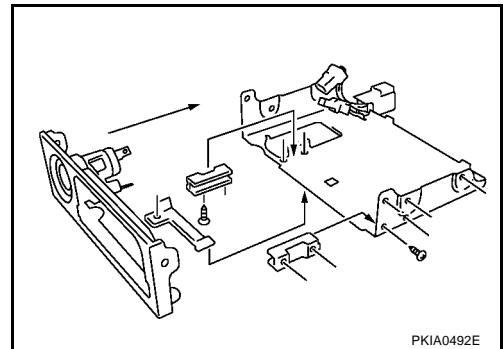

3. Disconnect cigarette lighter connector, and remove cigarette lighter ring and socket.

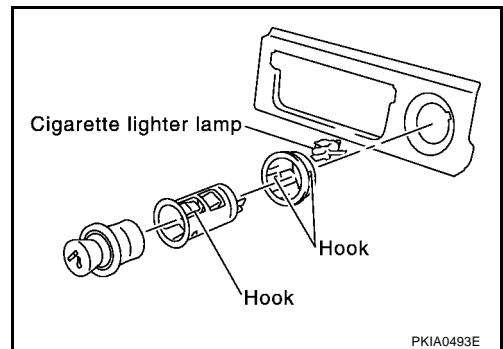

INSTALLATION

Install in the reverse order of removal aligning notches of cigarette lighter ring and instrument lower center panel.

POWER SOCKET



POWER SOCKET

PFP:253A2

Wiring Diagram –POWER SOCKET–

EKS0036E

 WW-CIGAR-01

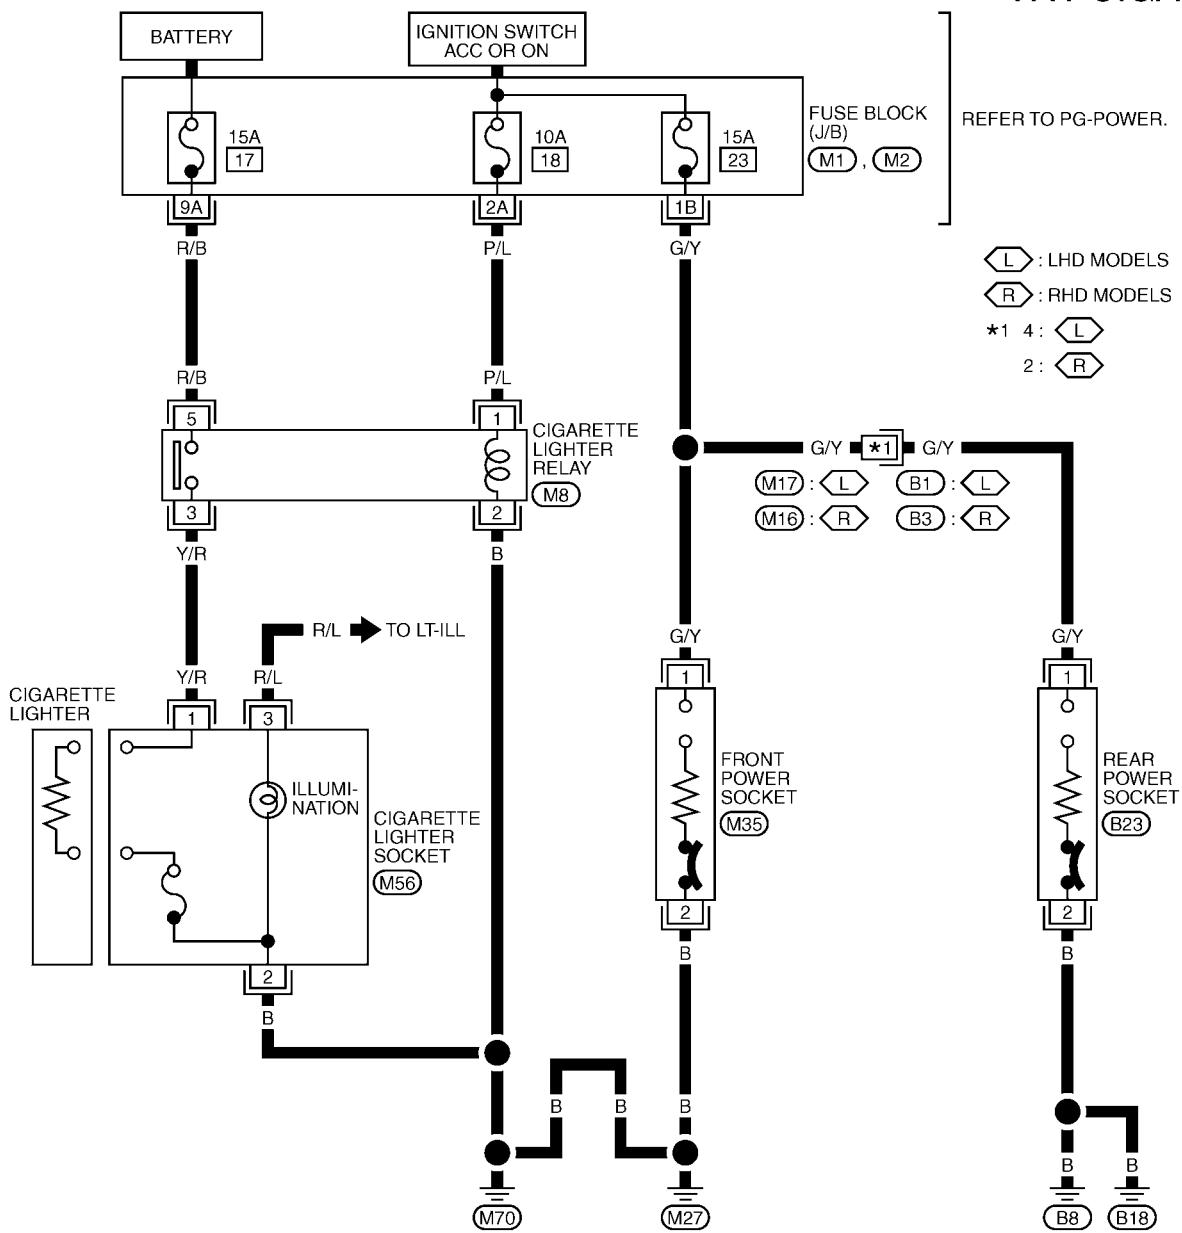


REFER TO THE FOLLOWING.
M1 , M2 -FUSE BLOCK-
JUNCTION BOX (J/B)

POWER SOCKET

Removal and Installation for Front Power Socket REMOVAL

EKS0036F

1. Remove the socket, refer to [IP-3, "INSTRUMENT PANEL ASSEMBLY"](#)
2. Disconnect power socket connector.
3. Pull out inner socket from inner case.

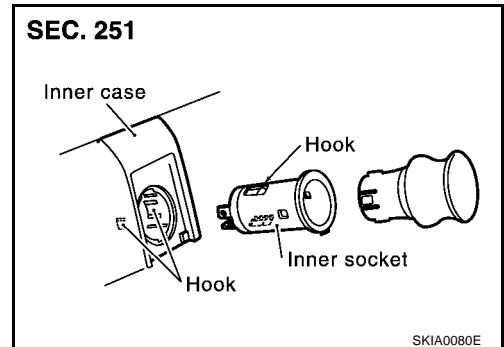


INSTALLATION

Install in the reverse order of removal aligning notches of power socket and inner case.

Removal and Installation for Rear Power Socket REMOVAL

EKS0036G

1. Remove luggage side lower finisher, refer to [EI-27, "LUGGAGE SIDE LOWER FINISHER"](#)
2. Disconnect power socket connector.
3. Pull out inner socket from luggage side lower finisher.

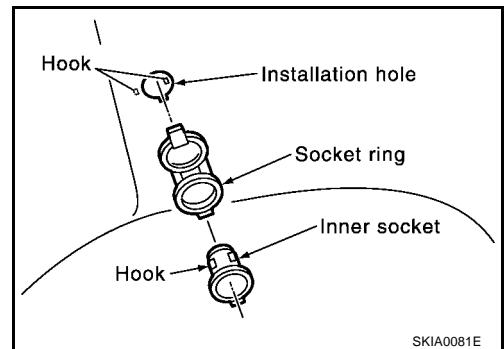

INSTALLATION

Install in the reverse order of removal aligning notches of power socket and installation hole.