 
 
 
 
 
 



POWER DOOR LOCK SYSTEM

Wiring Diagram — D/LOCK —

EIS004DE

BL-D/LOCK-01

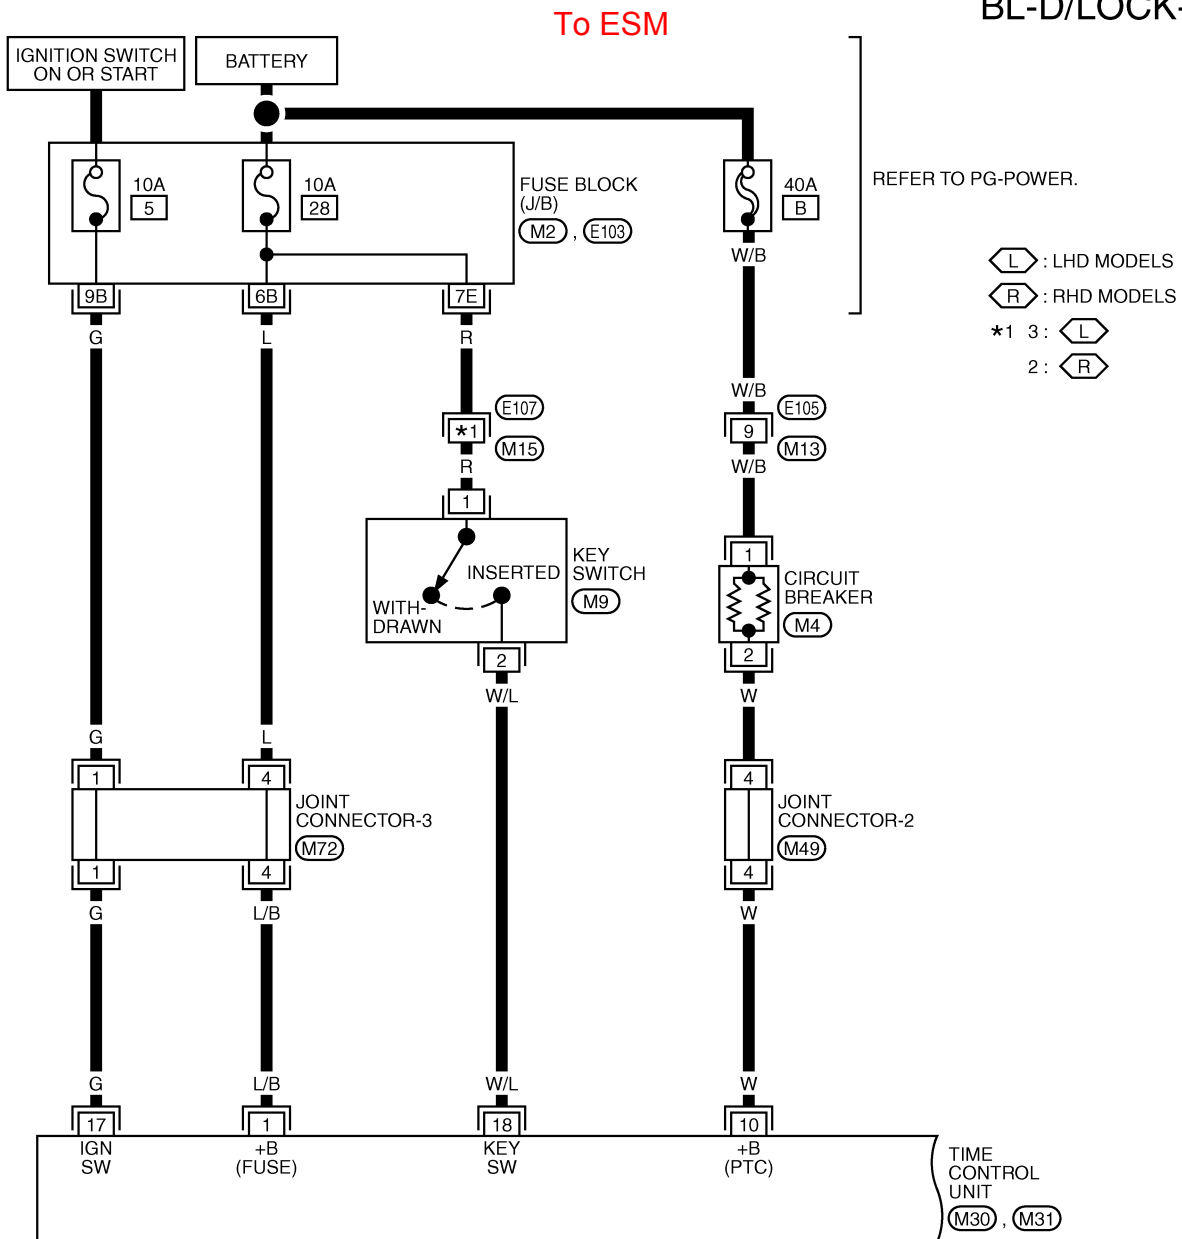

 
 

REFER TO THE FOLLOWING.
(M2), (E103) -FUSE BLOCK-
JUNCTION BOX (J/B)

POWER DOOR LOCK — SUPER LOCK —

Wiring Diagram — S/LOCK —

EIS001R8

BL-S/LOCK-01

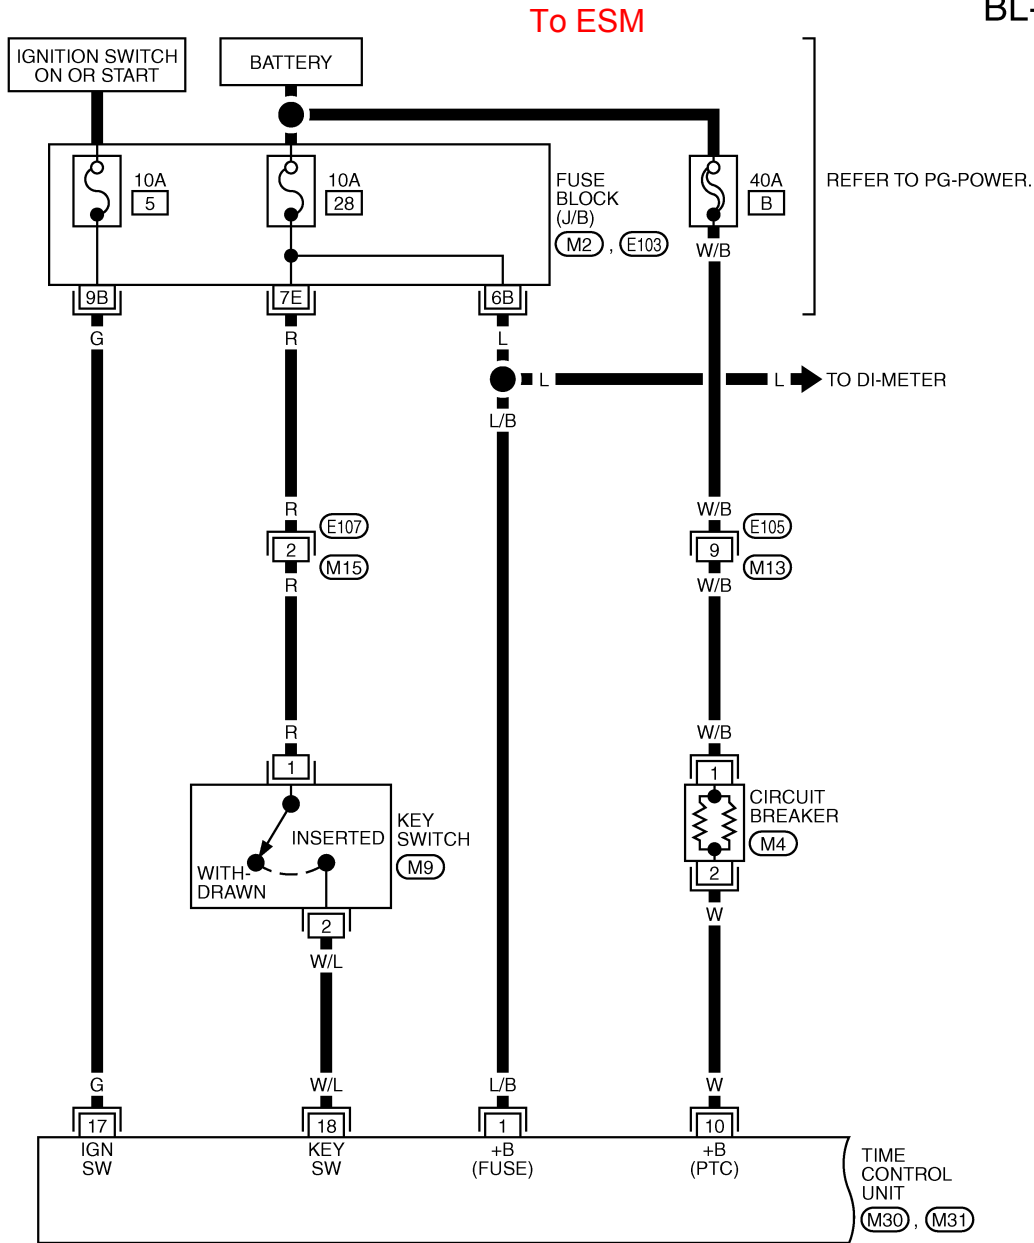

REFER TO THE FOLLOWING.
 (M2), (E103) -FUSE BLOCK-
 JUNCTION BOX (J/B)

TIWA0355E

THEFT WARNING SYSTEM

THEFT WARNING SYSTEM



PFP:25362

Wiring Diagram — THEFT —/PRI-WIRE LHD MODELS

To ESM

EIS001RM

BL-PRWIRE-01

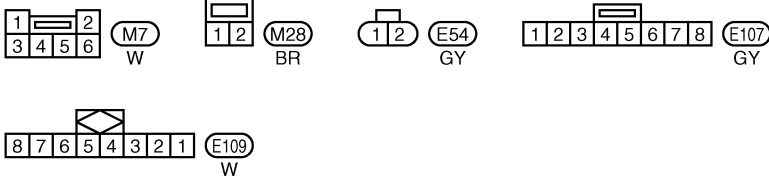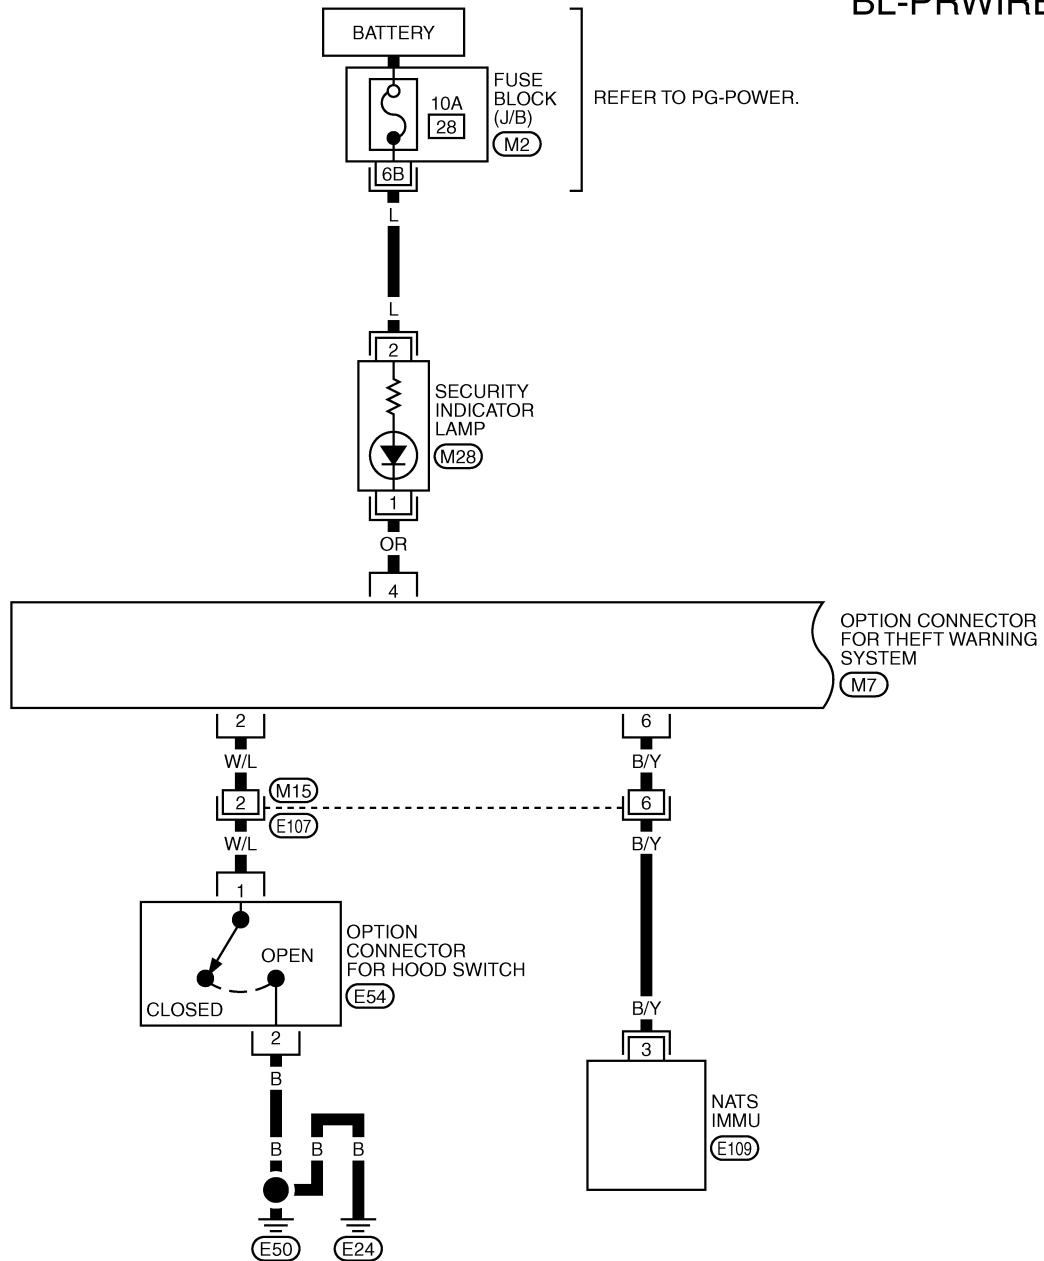

REFER TO THE FOLLOWING.

(M2) -FUSE BLOCK-JUNCTION BOX (J/B)

NATS (NISSAN ANTI-THEFT SYSTEM)



Wiring Diagram — NATS — GASOLINE ENGINE MODELS

EIS001RT

To ESM

BL-NATS-01

- (L) : LHD MODELS
 (R) : RHD MODELS
 (AU) : WITH AUDIO
 *1 4: (L)
 3: (R)
 *2 5: (L)
 4: (R)
 *3 7: (L)
 6: (R)
 *4 6: (L)
 5: (R)

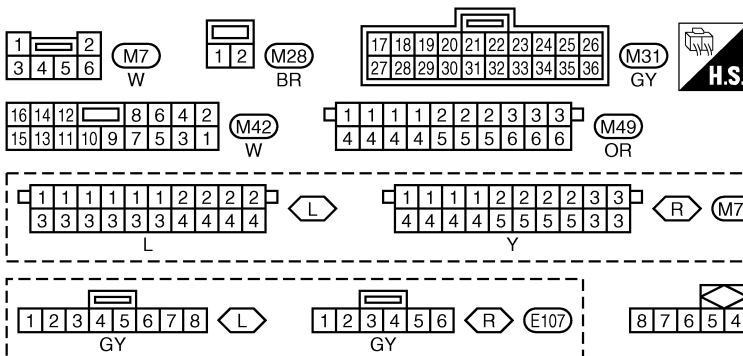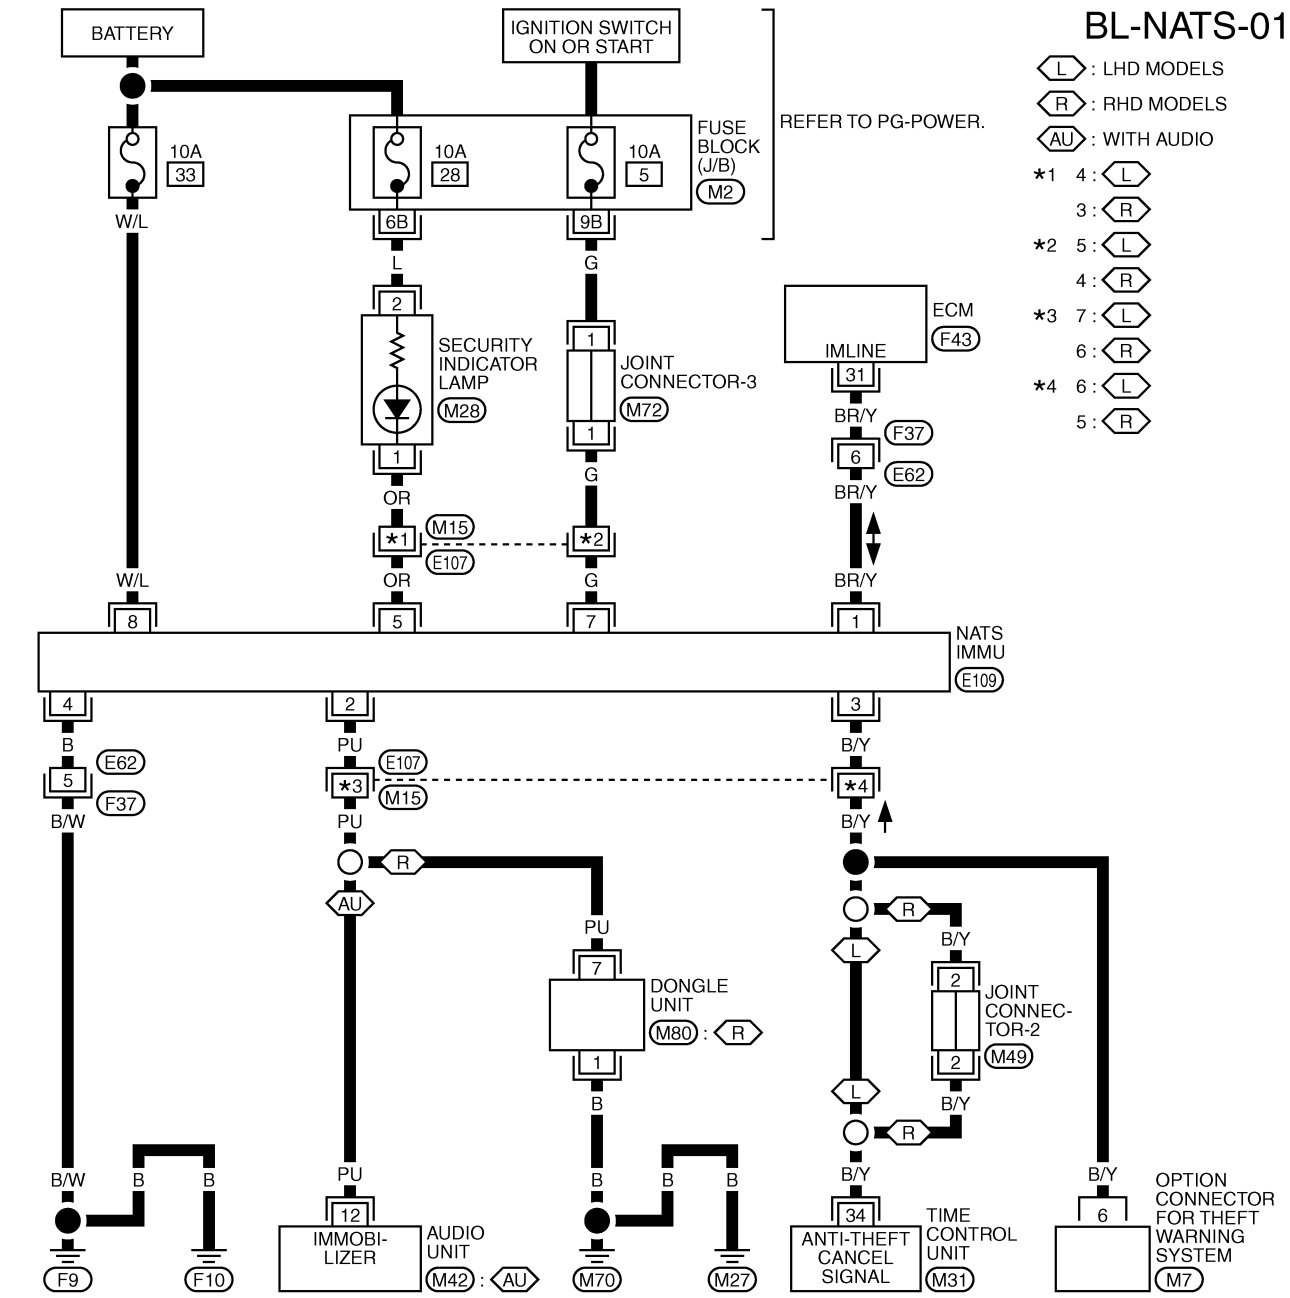

REFER TO THE FOLLOWING.
 (M2) - FUSE BLOCK-JUNCTION BOX (J/B)
 (F43) - ELECTRICAL UNITS

NATS (NISSAN ANTI-THEFT SYSTEM)



DIESEL ENGINE MODELS

To ESM

BL-NATS-02

- (L) : LHD MODELS
 (R) : RHD MODELS
 (AU) : WITH AUDIO

- *1 4: (L)
 3: (R)
 *2 5: (L)
 4: (R)
 *3 7: (L)
 6: (R)
 *4 6: (L)
 5: (R)

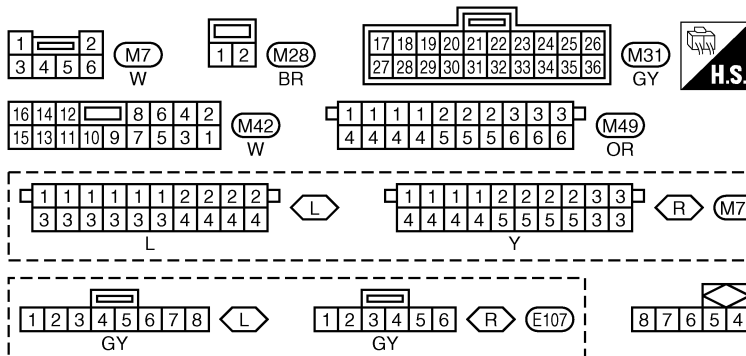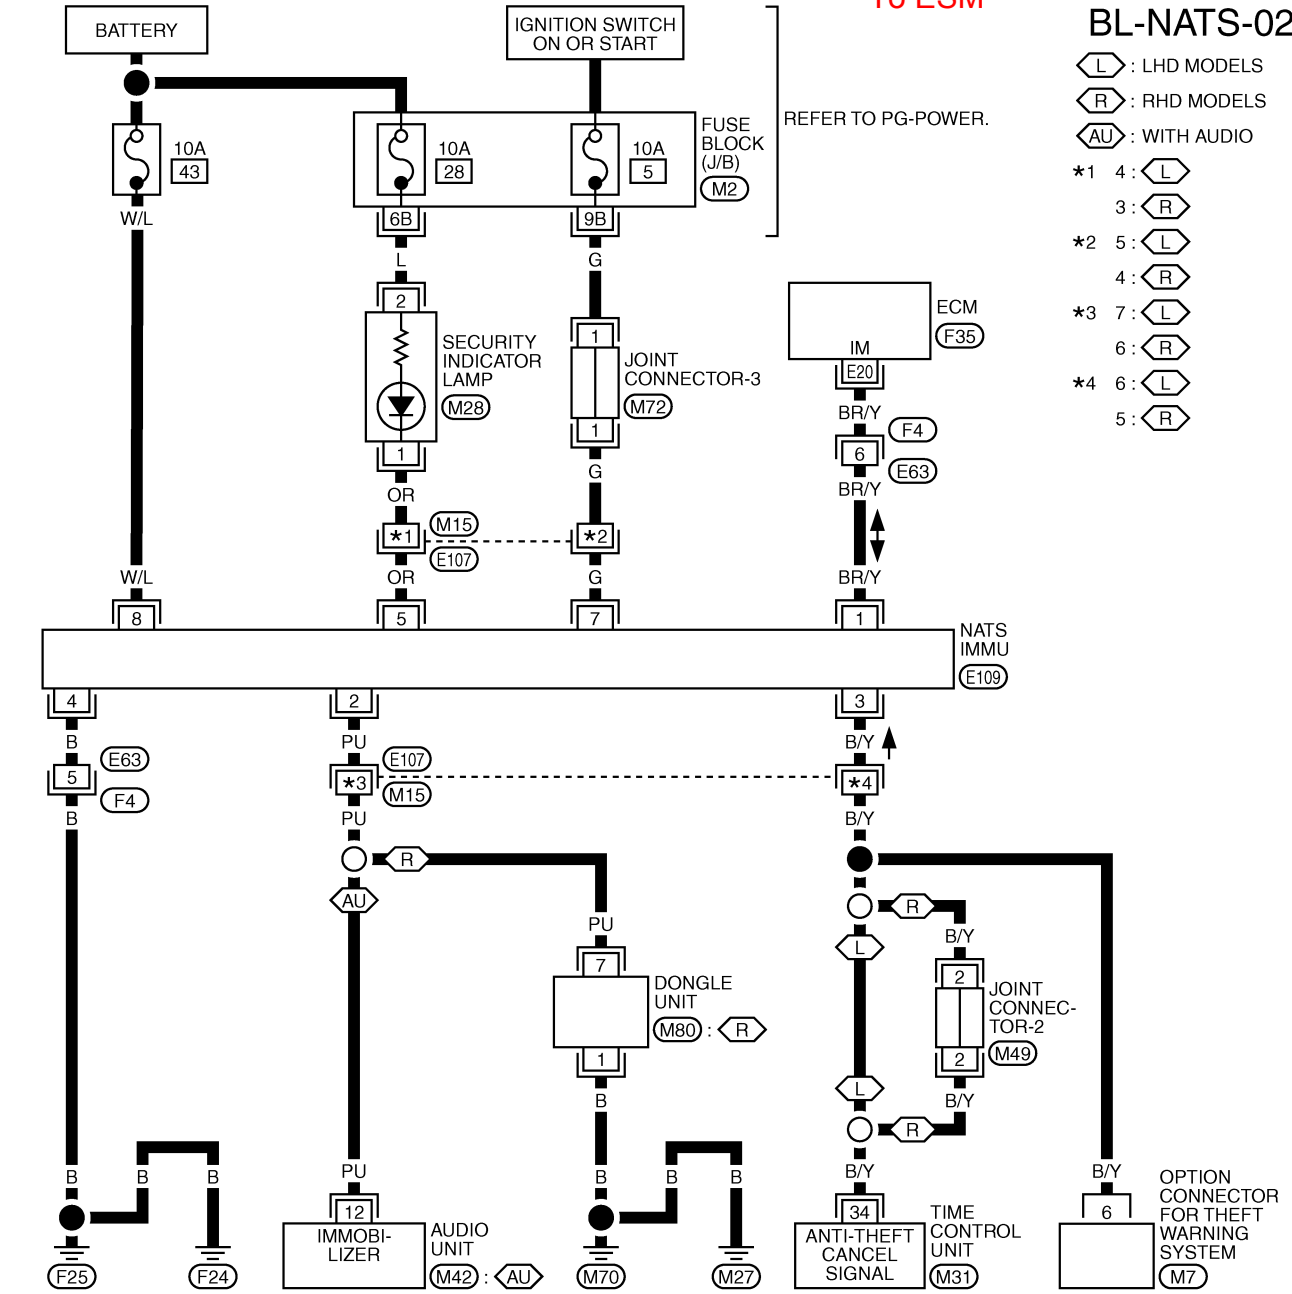

REFER TO THE FOLLOWING.

- (M2) - FUSE BLOCK-JUNCTION BOX (J/B)
 (F35) - ELECTRICAL UNITS