


# ROOF RAIL

## ROOF RAIL

PFP:73820

### Removal and Installation


EIS000N6

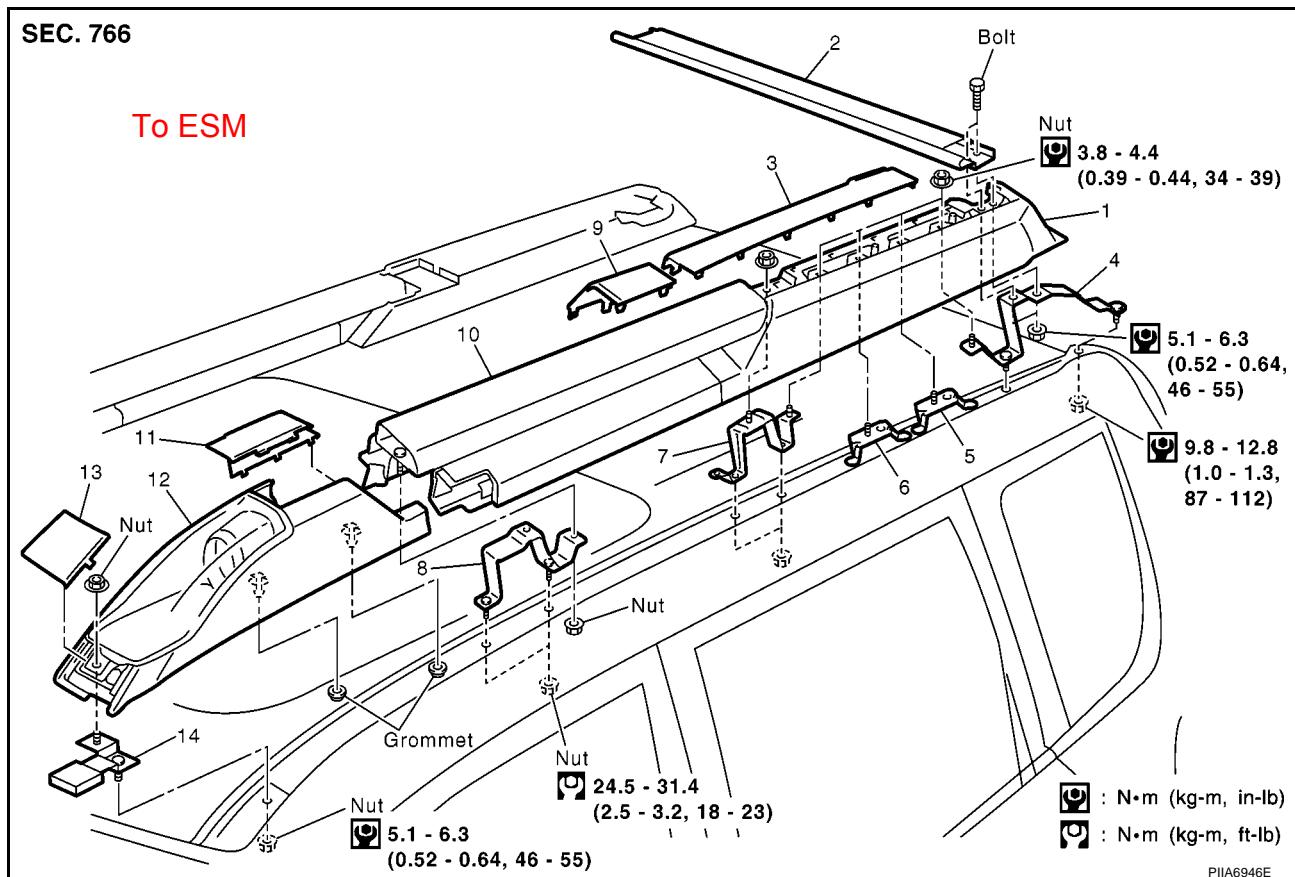

1. Roof rail	2. Rear spoiler	3. Roof rail rear cap
4. Rear spoiler bracket	5. Roof rail center bracket (rear)	6. Roof rail center bracket (front)
7. Roof rail bracket (rear)	8. Roof rail bracket (front)	9. Roof rail front cap
10. Side rail	11. Driving lamp cap (rear)	12. Driving lamp
13. Driving lamp cap (front)	14. Driving lamp bracket	

### REMOVAL


1. Remove headlining. Refer to [EI-29, "Removal and Installation"](#) .
2. Disconnect driving lamp harness connector.
3. Remove driving lamp bracket nuts and driving lamp brackets.

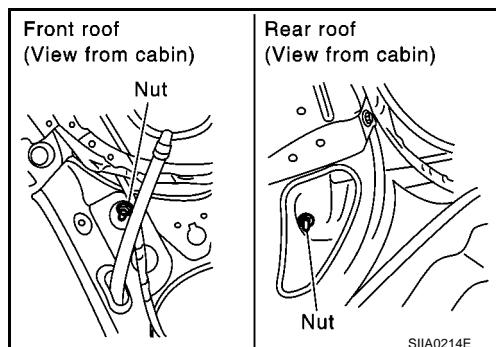

4. Remove driving lamps.
5. Remove roof rail caps (front and rear).
6. Remove roof rail fixing nuts.
7. Remove rear spoiler bolts, then remove rear spoiler.

## ROOF RAIL

8. Remove roof rail bracket mounting nuts (front and rear).
9. Remove rear spoiler bracket nuts.
10. Remove roof rails.

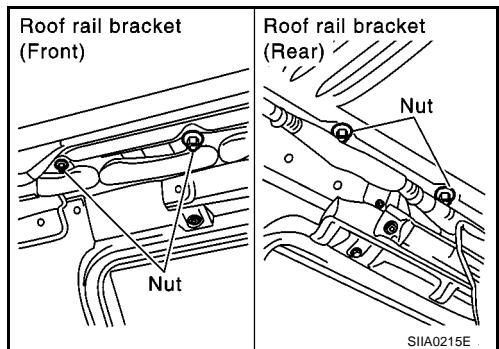

## INSTALLATION

Installation is in the reverse order of removal.