

SECTION

PWO

POWER OUTLET

CONTENTS

PRECAUTION	2	Wiring Diagram	6
PRECAUTIONS	2	REMOVAL AND INSTALLATION	9
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	POWER SOCKET	9
Precautions for Removing Battery Terminal	2	FRONT POWER SOCKET	9
SYSTEM DESCRIPTION	4	FRONT POWER SOCKET : Removal and Installation	9
COMPONENT PARTS	4	CONSOLE POWER SOCKET	9
Component Parts Location	4	CONSOLE POWER SOCKET : Removal and Installation	9
Power Socket	4	LUGGAGE ROOM POWER SOCKET	10
WIRING DIAGRAM	6	LUGGAGE ROOM POWER SOCKET : Removal and Installation	10
POWER SOCKET	6		

PWO

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010709174

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:0000000010709244

- With the adoption of Auto ACC function, ACC power is automatically supplied by operating the intelligent key or remote keyless entry or by opening/closing the driver side door. In addition, ACC power is supplied even after the ignition switch is turned to the OFF position, i.e. ACC power is supplied for a certain fixed time.
- When disconnecting the 12V battery terminal, turn off the ACC power before disconnecting the 12V battery terminal, observing "How to disconnect 12V battery terminal" described below.

NOTE:

Some ECUs operate for a certain fixed time even after ignition switch is turned OFF and ignition power supply is stopped. If the battery terminal is disconnected before ECU stops, accidental DTC detection or ECU data damage may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

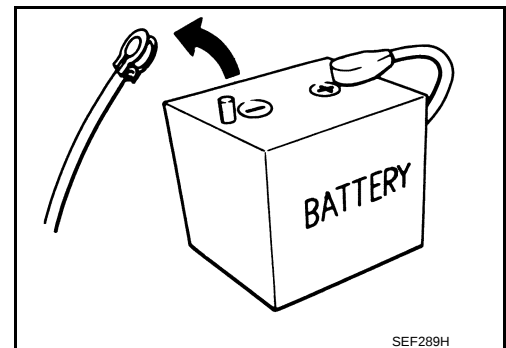

SEF289H

HOW TO DISCONNECT 12V BATTERY TERMINAL

Disconnect 12V battery terminal according to Instruction 1 or Instruction 2 described below.
For vehicles parked by ignition switch OFF, refer to Instruction 2.

INSTRUCTION 1

1. Open the hood.

PRECAUTIONS

< PRECAUTION >

2. Turn key switch to the OFF position with the driver side door opened.
3. Get out of the vehicle and close the driver side door.
4. Wait at least 3 minutes. For vehicle with the engine listed below, remove the battery terminal after a lapse of the specified time.

D4D engine	: 20 minutes
HRA2DDT	: 12 minutes
K9K engine	: 4 minutes
M9R engine	: 4 minutes
R9M engine	: 4 minutes
V9X engine	: 4 minutes

CAUTION:

While waiting, never operate the vehicle such as locking, opening, and closing doors. Violation of this caution results in the activation of ACC power supply according to the Auto ACC function.

5. Remove 12V battery terminal.

CAUTION:

After installing 12V battery, always check self-diagnosis results of all ECUs and erase DTC.

INSTRUCTION 2 (FOR VEHICLES PARKED BY IGNITION SWITCH OFF)

1. Unlock the door with intelligent key or remote keyless entry.

NOTE:

At this moment, ACC power is supplied.

2. Open the driver side door.
3. Open the hood.
4. Close the driver side door.
5. Wait at least 3 minutes.

CAUTION:

While waiting, never operate the vehicle such as locking, opening, and closing doors. Violation of this caution results in the activation of ACC power supply according to the Auto ACC function.

6. Remove 12V battery terminal.

CAUTION:

After installing 12V battery, always check self-diagnosis results of all ECUs and erase DTC.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000010709176

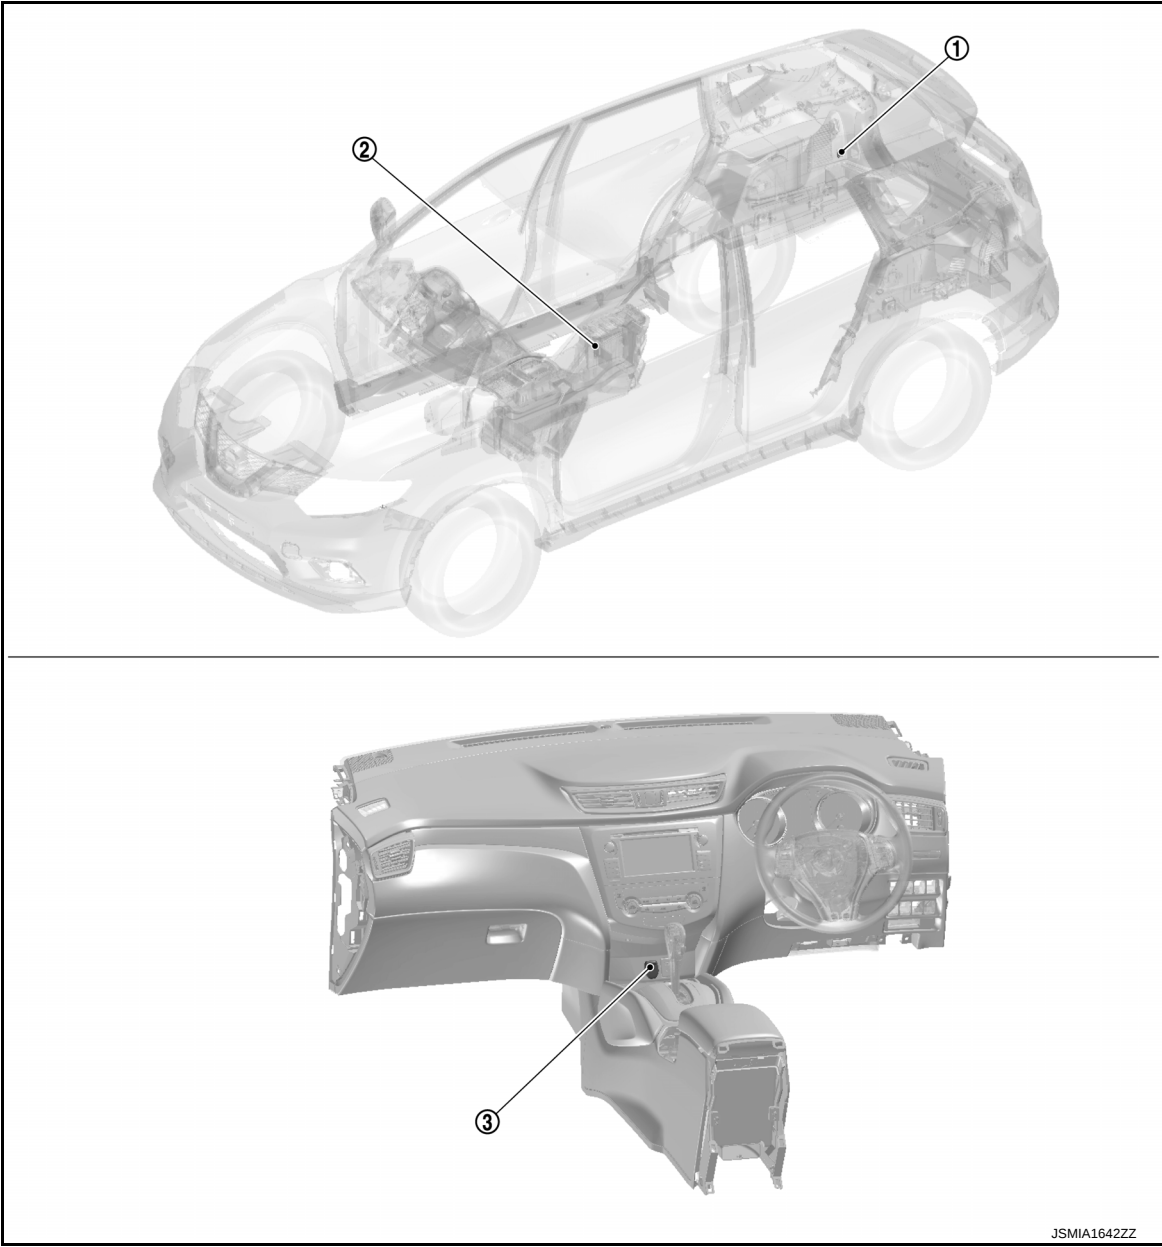

JSMIA1642ZZ

No.	Component	Function
①	Luggage room power socket	Refer to PWO-4, "Power Socket"
②	Console power socket	
③	Front power socket	

Power Socket

INFOID:0000000010709177

Rated voltage	DC 12 V
---------------	---------

COMPONENT PARTS

< SYSTEM DESCRIPTION >

Maximum electric capacity	120 W or less (Total)
Maximum current	10 A or less (Total)

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO

POWER SOCKET

< WIRING DIAGRAM >


WIRING DIAGRAM

POWER SOCKET

Wiring Diagram

INFOID:0000000010709178

POWER SOCKET

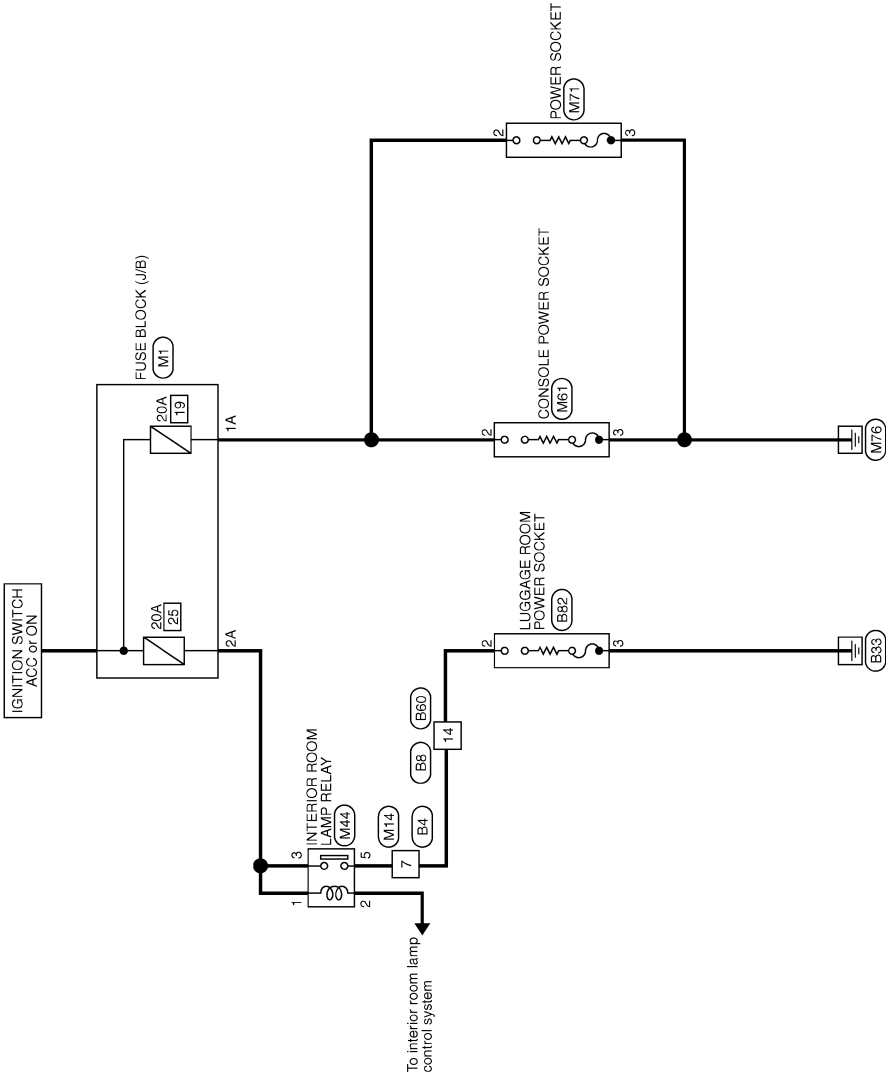

2014/03/17

JRMWF4027GB

POWER SOCKET

< WIRING DIAGRAM >

POWER SOCKET

Connector No.	B4
Connector Name	WIREF TO WIRE
Connector Type	NS16MW-CS



7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8

Terminal No.	Color Of Wire	Signal Name [Specification]
4	LAG	-
5	W	-
6	G	-
7	R	-
8	LAG	-
9	P	-
10	R	-
11	LAV	-
12	LAL	-
13	LAR	-
14	LABG	-
15	LABR	-
16	R	-

Connector No.	B8
Connector Name	WIREF TO WIRE
Connector Type	NS16MW-CS



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-
3	P	-
6	L	-
7	L	-
8	SB	-

9	R	-
10	LAV	-
11	LABR	-
12	W	-
13	P	-
14	R	-
15	P	-
16	P	-

Connector No.	B60
Connector Name	WIREF TO WIRE
Connector Type	NS16FW-CS



7	6	5	4		3	2	1	
16	15	14	13	12	11	10	9	8

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LALG	-
2	LAGR	-
3	P	-
6	L	-
7	L	-
8	GR	- [For LHD models]
9	SB	- [For RHD models]
10	LAV	-
11	LABR	-
12	W	-
13	LAV	-
14	R	-
15	P	-
16	P	-

Connector No.	B92
Connector Name	LUGGAGE ROOM POWER SOCKET
Connector Type	CEA01FB-CHA2



2	3
---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
2	R	-
3	B	GND

Connector No.	M1
Connector Name	FUSE BLOCK (JIB)
Connector Type	NS06FW-A2



3A		2A	1A		
8A		7A	6A	5A	4A

Terminal No.	Color Of Wire	Signal Name [Specification]
1A	L	-
2A	LG	-
3A	Y	-
4A	LG	-
5A	R	-
6A	BG	-
7A	BR	-
8A	SB	-

Connector No.	M14
Connector Name	WIREF TO WIRE
Connector Type	NS16FW-CS



7	6	5	4		3	2	1	
16	15	14	13	12	11	10	9	8

Terminal No.	Color Of Wire	Signal Name [Specification]
4	Y	-
5	W	-
6	LAG	-
7	R	-
8	BR	-
9	G	-
10	R	-
11	LG	-
12	GR	-
13	BR	-
14	LAL	-
15	LABR	-
16	GR	-

Connector No.	M44
Connector Name	INTERIOR ROOM LAMP RELAY
Connector Type	MS02FL-M2-LC



3	5
2	1

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	P	-
3	LG	-
6	V	-

JRMWF4028GB

POWER SOCKET

< WIRING DIAGRAM >

POWER SOCKET

Connector No.	M61
Connector Name	CONSOLE POWER SOCKET
Connector Type	CEA01FB-CH42





Terminal No.	Color Of Wire	Signal Name [Specification]
2	Y	-
3	B	-

Connector No.	M71
Connector Name	POWER SOCKET
Connector Type	CEA01FB-CH42





Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	B	GND

JRMWF4029GB

POWER SOCKET

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

POWER SOCKET

FRONT POWER SOCKET


FRONT POWER SOCKET : Removal and Installation

INFOID:0000000010709179

REMOVAL

1. Remove instrument lower panel center. Refer to [IP-14, "Removal and Installation"](#) (LHD MODELS) or [IP-41, "Removal and Installation"](#) (RHD MODELS).
2. Press the power socket fixing pawls from the back of the instrument panel lower center to remove the power socket.


 : Pawl

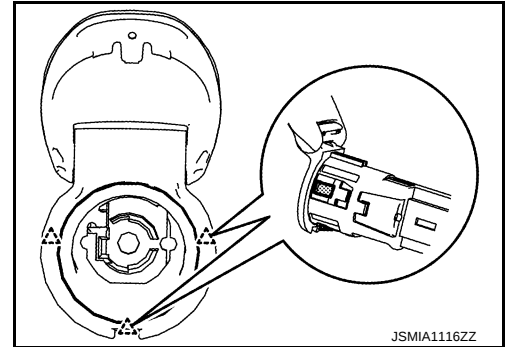

INSTALLATION

Note the following, and install in the reverse order of removal.
Align the cut outs of power socket and power socket finisher assembly.

 : Cut out

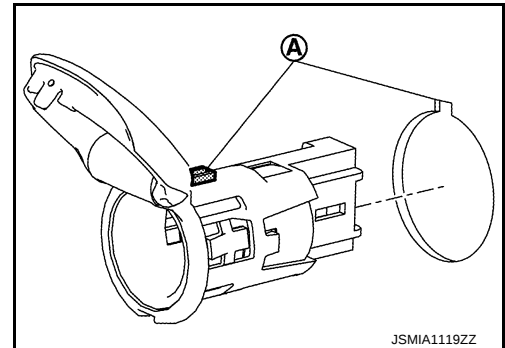

CONSOLE POWER SOCKET


CONSOLE POWER SOCKET : Removal and Installation

INFOID:0000000010709180

REMOVAL

1. Remove center console assembly. Refer to [IP-25, "Removal and Installation"](#) (LHD MODELS) or [IP-52, "Removal and Installation"](#) (RHD MODELS).
2. Press the power socket fixing pawl from the back of the center console assembly to remove the power socket.

 : Pawl

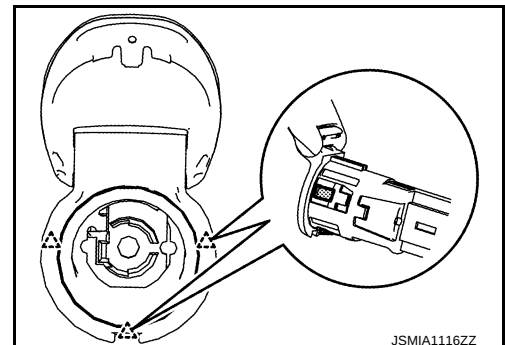

INSTALLATION

Note the following, and install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O


P

POWER SOCKET

< REMOVAL AND INSTALLATION >

Align the cut outs of power socket and center console assembly.

Ⓐ : Cut out

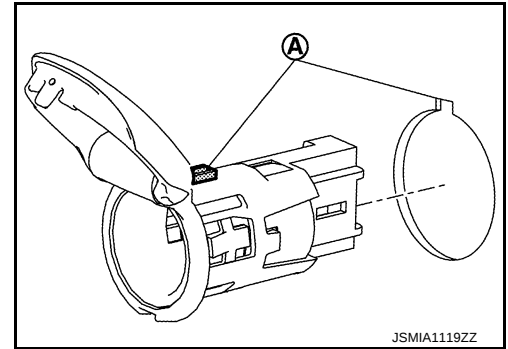

LUGGAGE ROOM POWER SOCKET


LUGGAGE ROOM POWER SOCKET : Removal and Installation

INFOID:0000000010709181

REMOVAL

1. Remove luggage side lower finisher RH. Refer to [INT-43. "LUGGAGE SIDE LOWER FINISHER : Removal and Installation"](#).
2. Press the power socket fixing pawls from the back of the luggage side lower finisher RH to remove the power socket.

△ : Pawl

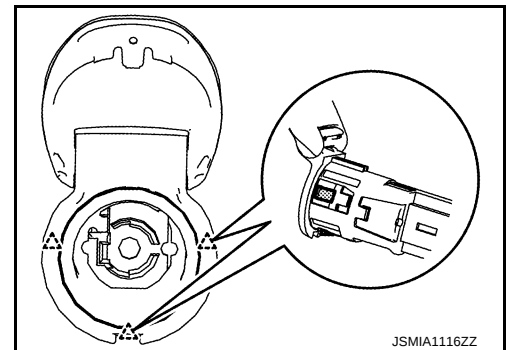

INSTALLATION

Note the following, and install in the reverse order of removal.
Align the cut outs of power socket and luggage side lower finisher RH.

Ⓐ : Cut out

