 


EXTERNAL TEMPERATURE INDICATOR

DG/RETROE/NINAV3/RAD08

X83


02



NO
A2

BCP4-RG
EPBCP4A

BCP4-RG

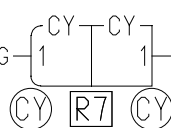

BCP4-RG

EPBCP4A

BCP4-RG

NO

46BL-VE
7
8

46BM-VE
16
17

46BB-MA
9
46BC-GR
18
46AD-BJ
6

10

M-NO



662



NO


2 46BG-VI
3 46L-OR
4 46K-VE
5 46G-BA
6 46H-VI
7 46BH-BJ
9 46BK-GR
10 46Y-BA
12 58D-OR
15 46M-MA
16 46N-SA

NO


2
3
4
5
6
7
9
10
12
15
16



1127

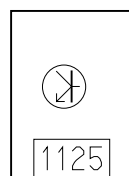


NO
3
4
7

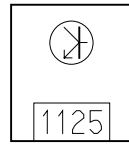


CY
16
17

47C-VE
47D-VI

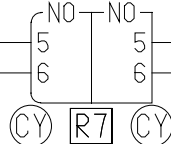


47C-MA
47D-OR

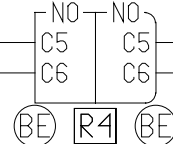

47C-OR
47D-VI


NO

4
5

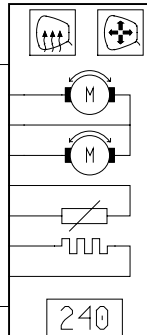

240

 3-77





EXTERNAL TEMPERATURE INDICATOR

DG/RETROE/SSNAV/RAD08

X83

 02

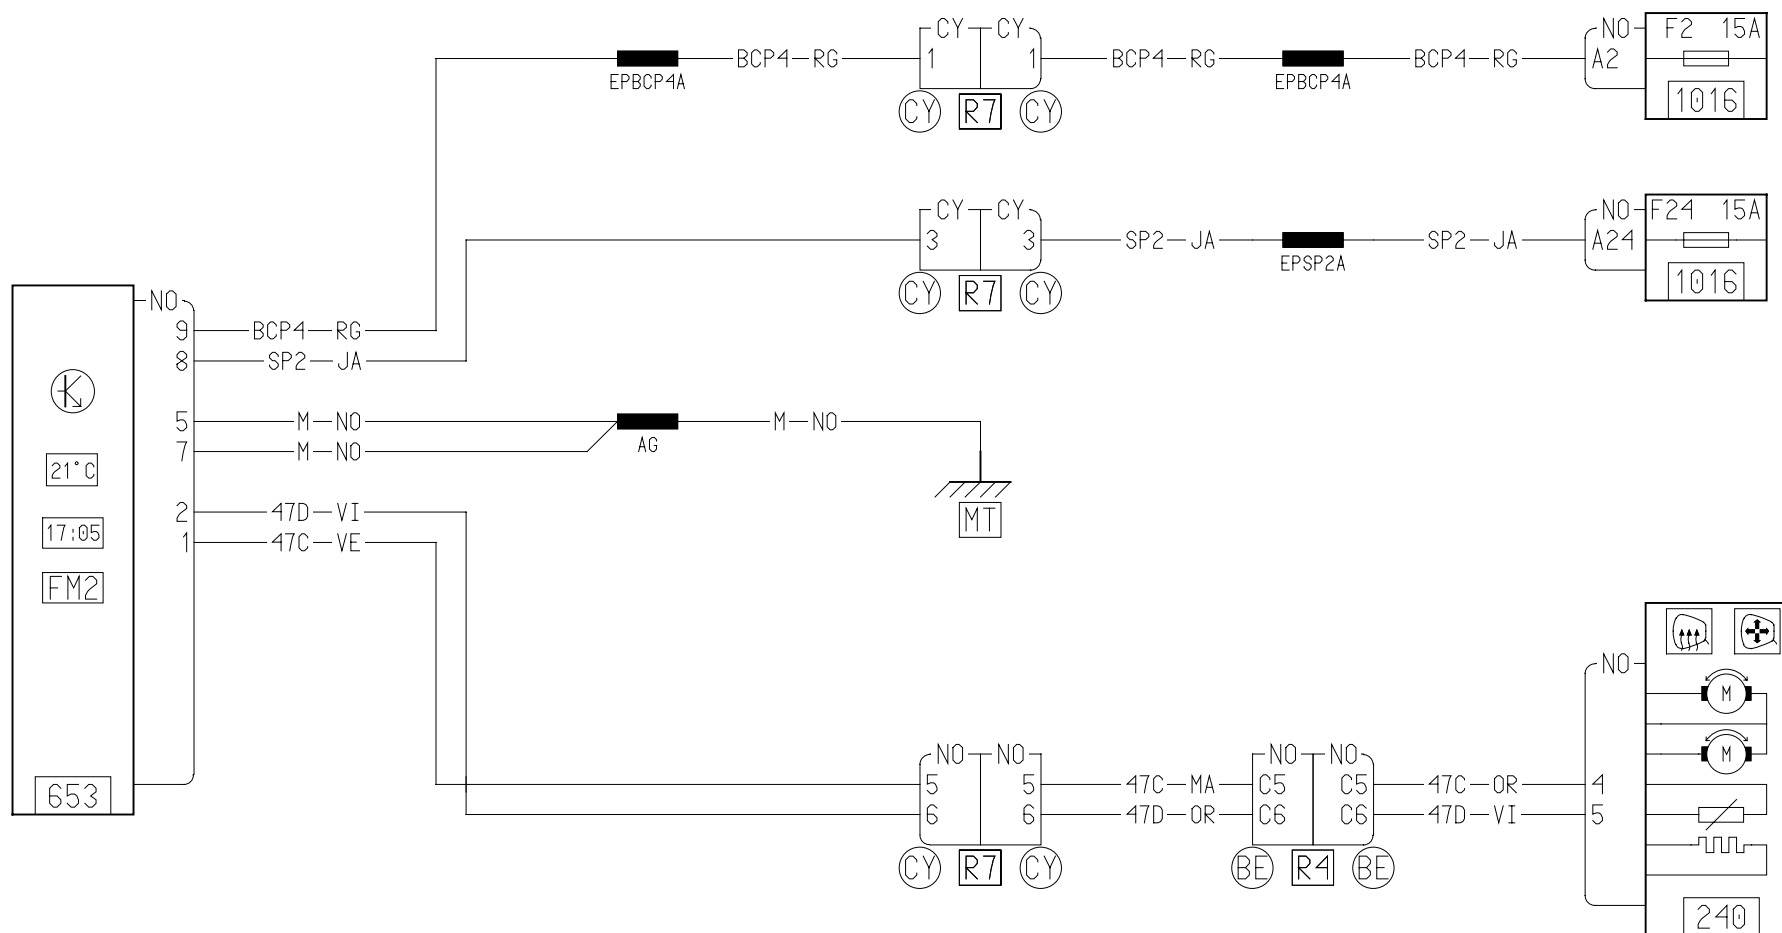




EXTERNAL TEMPERATURE INDICATOR

DD/RETROE/SSNAV/RAD08

X83

02

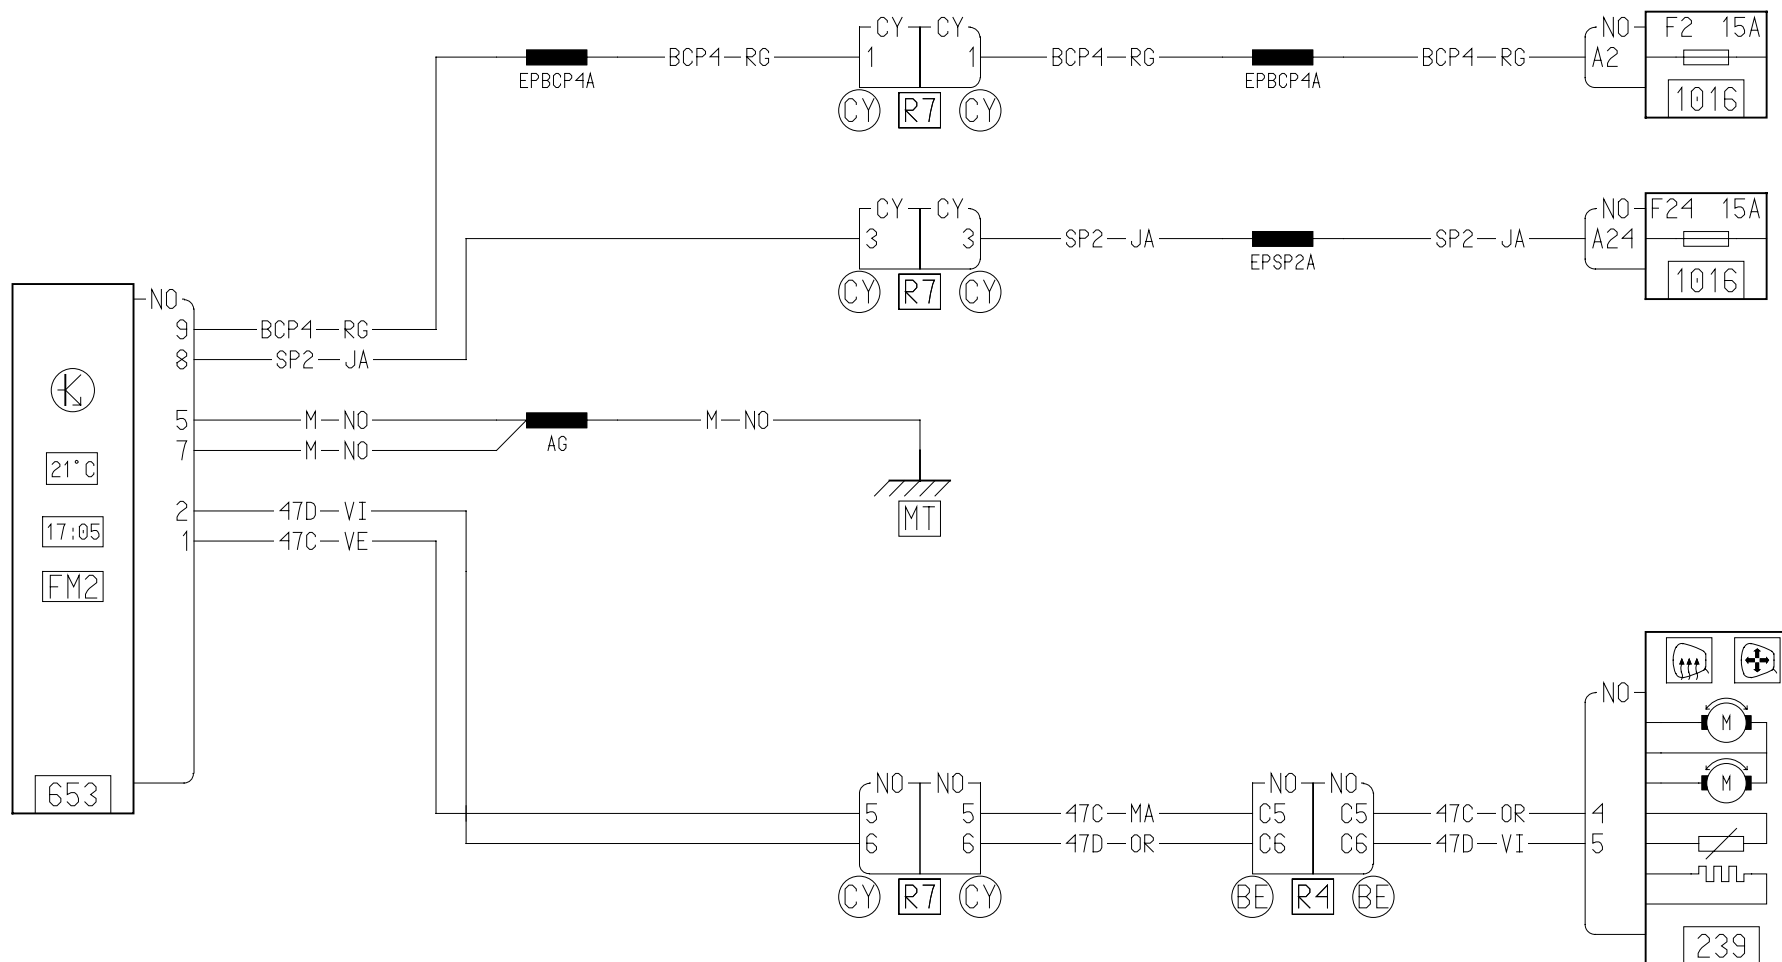

3-79

