

INDEX OF FUNCTIONS

FUNCTIONS	PLATE NUMBERS
ACCESSORIES SOCKET	0091 - 0092
ADDITIONAL HEATING	0023
AIR BAG	0013 - 0014
AIR CONDITIONING	0034 - 0035
ALARM	0015
ANTI-LOCK BRAKING SYSTEM	0018
BASIC HEATING	0024 - 0025
BRAKE FLUID AND HAND BRAKE WARNING LIGHTS	0112
BRAKE LIGHTS	0068 - 0069 - 0074
CHARGE AND STARTER CIRCUIT	0026 - 0027
CIGARETTE LIGHTER	0016
COURTESY LIGHTING	0042 - 0043 - 0044 - 0045 - 0046 - 0047
DIAGNOSTICS SOCKET	0093
DIESEL FILTER HEATER	0097
DIESEL PRE AND POSTHEATING	0089
DIPPED, MAIN BEAM AND POSITION LIGHTS	0064 - 0065 - 0066 - 0067
DIRECTION INDICATORS AND HAZARD WARNING LIGHTS	0070 - 0071 - 0072 - 0073
DOOR LOCKING	0028 - 0029 - 0030 - 0031 - 0032 - 0033
EARTH	0001 - 0002 - 0003 - 0004 - 0005 - 0006 - 0007 - 0008 - 0009 - 0010
ELECTRIC REAR-VIEW MIRRORS	0102
ELECTRONIC INJECTION	0081 - 0082 - 0083 - 0084
ENGINE COOLING SYSTEM	0098 - 0099 - 0100 - 0101
ENGINE FUSE BOARD	0087 - 0088
EXTERNAL TEMPERATURE INDICATOR	0077 - 0078 - 0079 - 0080
FRONT AND REAR FOG LIGHTS	0053 - 0054 - 0055 - 0056 - 0057
FRONT AND REAR SCREEN WASHER/WIPERS	0050 - 0051 - 0052
FRONT ELECTRIC WINDOWS	0085
FRONT WINDSCREEN WASHER AND WIPER	0049
FUEL LEVEL INDICATOR	0075
HEADLIGHT HEIGHT ADJUSTMENT	0036
HEATED SEATS	0103
HORN	0021
IMMOBILISER	0017
INSTRUMENT PANEL	0108 - 0109
NAVIGATION	0011 - 0012
OIL LEVEL INDICATOR	0076
OIL PRESSURE WARNING LIGHT	0110 - 0111
PASSENGER COMPARTMENT FUSE BOARD	0086
PASSENGER COMPARTMENT INTER-CONNECTION UNIT	0022
PRE-EQUIPMENT ALARM	0090
RADIO AND PERIPHERALS COMMUNICATION	0094 - 0095
RADIO AND TELEPHONE PRE-EQUIPMENT	0096
REAR WINDOW DE-ICING	0037 - 0038 - 0039
REAR-VIEW MIRROR DEMISTING	0041
REVERSING LIGHTS	0059 - 0060 - 0061 - 0062 - 0063
SIDE LIGHTS	0058
STORAGE COMPARTMENT LIGHTING	0048
THERMOPLUNGERS	0113

INDEX OF FUNCTIONS

FUNCTIONS	PLATE NUMBERS
TOWBAR ATTACHMENT	0019 - 0020
VEHICLE SPEED SIGNAL	0104 - 0105 - 0106 - 0107
WINDSCREEN DE-ICING	0040