
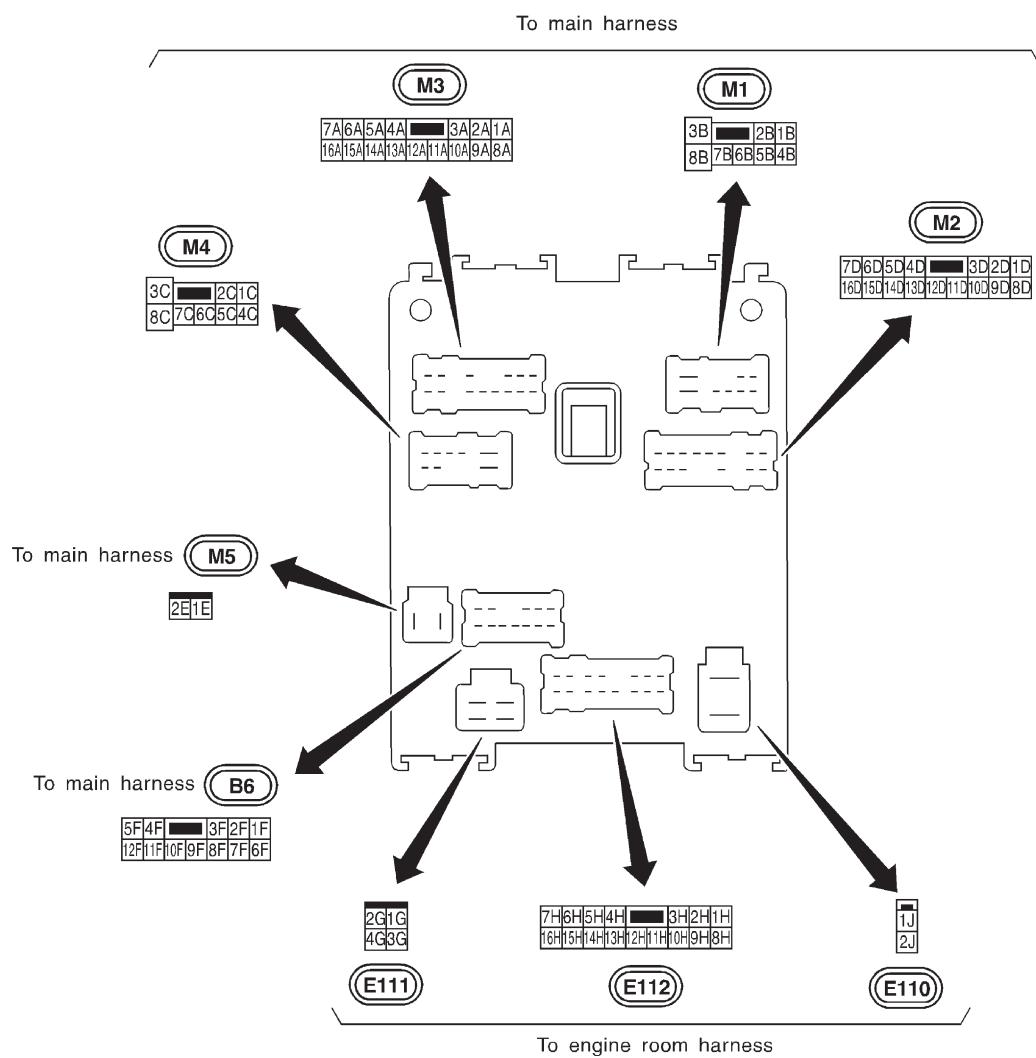



## FUSE BLOCK — Junction Box (J/B)

### Terminal Arrangement

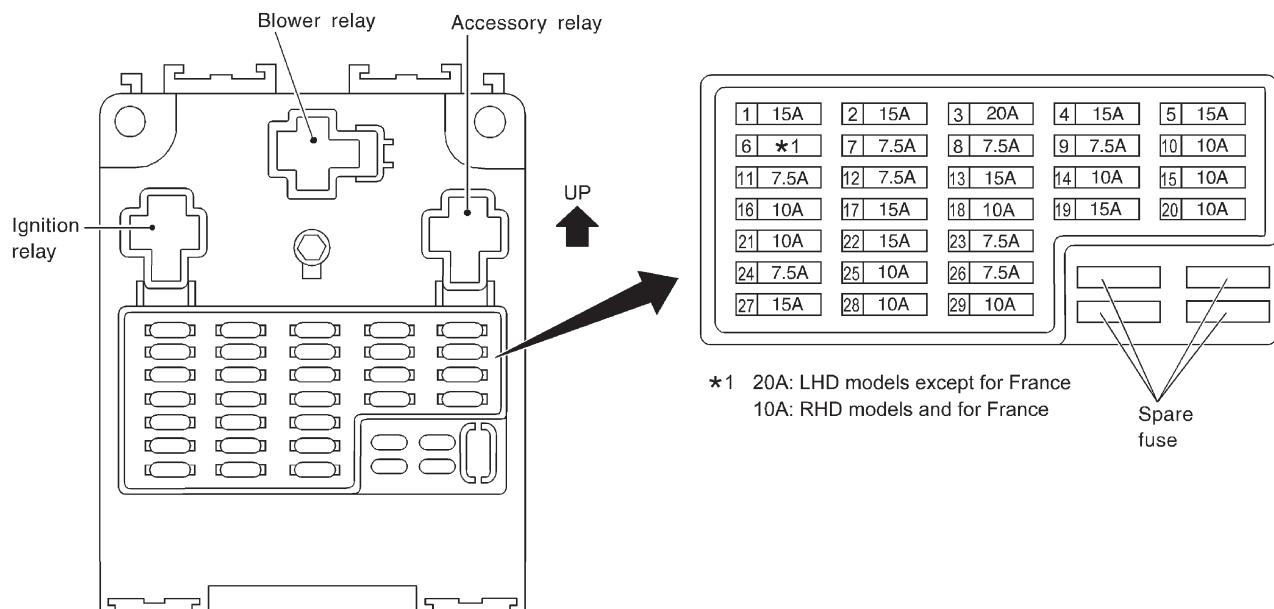

# FUSE AND FUSIBLE LINK BOX

## Terminal Arrangement

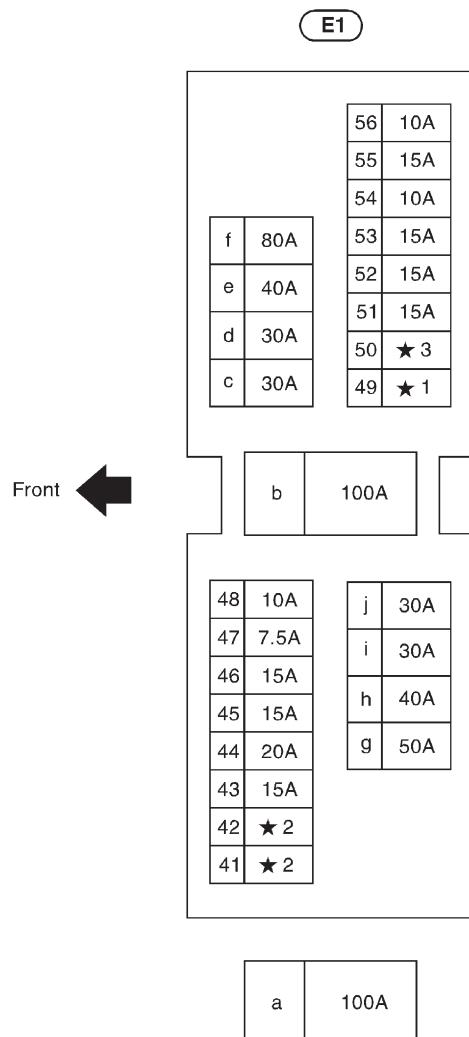

No. 41 - 56: FUSE  
a - j: FUSIBLE LINK

★ 1 7.5A: TB45E engine models  
15A: TB45S engine models  
10A: ZD engine models


★ 2 20A: With xenon headlamp system  
7.5A: LHD models for Europe

★ 3 7.5A: TB45E engine models  
20A: ZD engine models


## ELECTRICAL UNITS
 
## Terminal Arrangement


ECM F8 (TB45E engine)




ECM F8 (ZD30ETi engine)

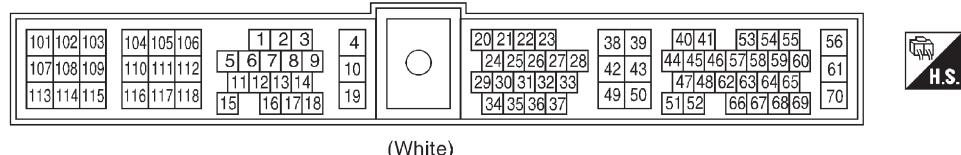

## TCM (TRANSMISSION CONTROL MODULE)

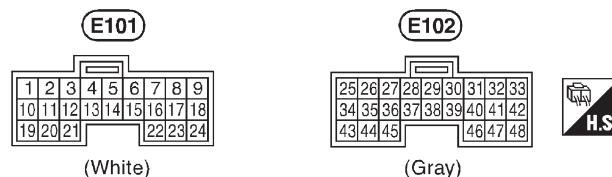


ABS ACTUATOR AND ELECTRIC UNIT E18

 


(Black)

A/C AUTO AMP-

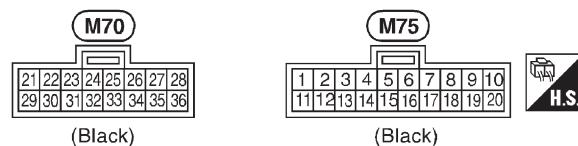


 SMART ENTRANCE CONTROL UNIT (Except for China) M41



(White)

## SMART ENTRANCE CONTROL UNIT (For China)

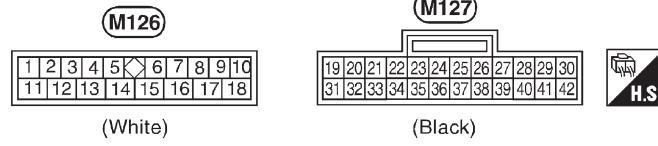

## **SUPER LOCK CONTROL UNIT**

